


Fuel Pump Power Control Module Replacement (Chassis Cab)

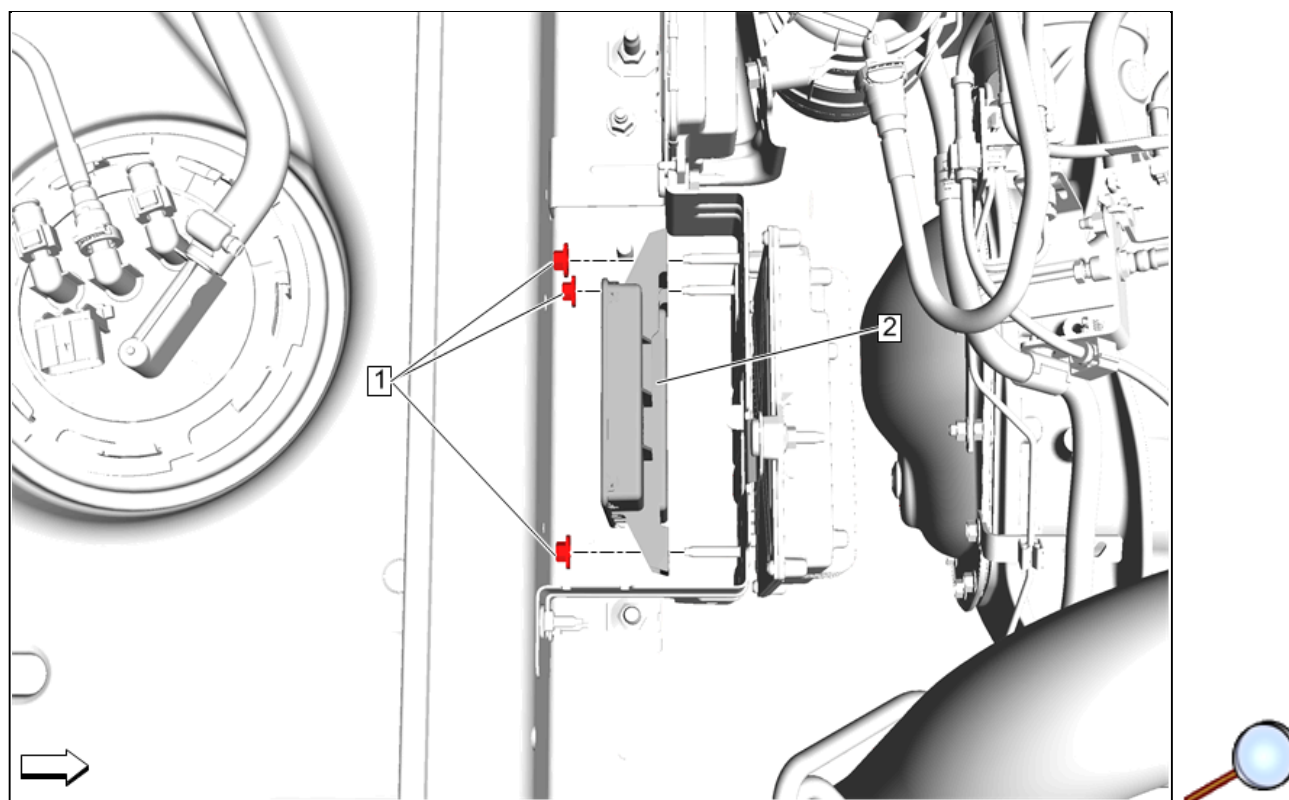

Fuel Pump Power Control Module Replacement

Callout	Component Name
Preliminary Procedure Raise and support the vehicle. Lifting and Jacking the Vehicle	
1	Fuel Pump Power Control Module Nut [3x] Caution: Refer to Fastener Caution . Tighten 9 N•m (80 lb in)
2	Fuel Pump Power Control Module Procedure 1. Disconnect the electrical connector. 2. If replacing, perform the fuel pump driver control module configuration. Fuel Pump Driver Control Module Configuration