



2024

BLAZER EV PPV



Preproduction model shown throughout. Actual production model may vary.
2024 Chevrolet Blazer EV PPV available starting spring 2024. Shown with equipment
from independent suppliers not covered by the GM New Vehicle Limited Warranty
GM is not responsible for the safety or quality of independent supplier alterations.





About This Publication

This catalog is not updated during the model year and should not be used for ordering purposes. It is intended as a source of basic information. All illustrations and specifications in this literature are based on the latest product information available at the time of publication. General Motors reserves the right to make changes at any time without notice. For further details, consult your local dealer.

Care must be taken during customer installation of equipment and wiring to ensure that all holes drilled in the body are corrosion protected, properly sealed and that vehicle wiring harnesses, piping or other components have not been displaced or damaged. Aftermarket equipment installers must be mindful of applicable Federal Motor Vehicle Safety Standards. This information can be obtained directly from the National Highway Traffic Safety Administration. Adding non-dealer accessories or making modifications to the vehicle can affect vehicle performance, aerodynamics, and overall top speed. Please return all police vehicles to factory condition and settings upon decommissioning to prevent civilians from using these new 2024 calibrations, lighting and other features intended only for police and emergency customers. Wiring connection or splice changes are to be removed before the vehicle is returned to civilian use.

These vehicles are equipped with an airbag system. The airbag system in your police vehicle includes frontal driver and front outboard passenger airbags, front seat back side impact airbags and roof rail mounted head-curtain airbags. Customer installed equipment such as security barriers behind the front seats should not be mounted so that the barrier ends are within the side airbag deployment zones. The sensors and other components for the airbag system must not be relocated to accommodate the installation of customer furnished equipment; please refer to the service manual for sensor and other component locations. For information concerning instrument panel top pad mounted equipment and airbag system deployment zones, see the airbag information section in this catalog and the vehicle owners manual.

A note about vehicle alterations by independent suppliers: This catalog shows pictures of vehicles that have been altered or upfitted with equipment or components supplied to Chevrolet or its dealers by independent suppliers. GM is not responsible for the safety or quality of design features, materials or workmanship of any alterations by third parties.

INDEX

2024 BLAZER EV PPV

- **STANDARD FEATURES**
- **OPTIONAL FEATURES**
- **EMISSIONS & TIRES**
- **SPECIFICATIONS**
- **COLORS, EXTERIOR AND INTERIOR**
- **APPROACH AND DEPARTURE ANGLES**
- **SPEEDOMETER/CLUSTER DISPLAY**
- **VEHICLE PERSONALIZATION MENU**
- **STANDARD FEATURES HIGHLIGHTS**
- **OPTIONAL FEATUES HIGHLIGHTS**
- **WIRING DIAGRAMS**
- **AIRBAG DIMENSIONS**
- **AIRBAGS FAQ**
- **OnStar® OPTIONS**
- **MAINTENANCE AND LIMITED WARRANTY**



BLAZER EV 9C1 INTERIOR

Shown with equipment from independent suppliers not covered by the GM New Vehicle Limited Warranty GM is not responsible for the safety or quality of independent supplier alterations.



BLAZER EV 9C3 INTERIOR

GM restricts the sale of police vehicles, and they are not to be sold to retail customers

The all-wheel drive Blazer EV Police Pursuit Package has been designed for police work up to, and including, high-Speed emergency vehicle operations. GM restricts the sale of police vehicles, and they are not to be sold to retail customers. Developed for the needs of Law Enforcement, the purpose-built electrical architecture is explicitly prepared for the demands of emergency equipment. A standard 400-volt to 12-volt DC power module is dedicated to emergency equipment demands and is engineered for 100-amps of continuous load. This architecture provides two 20-amp relays in front row with a 30-circuit harness and 50-amp battery feed. One 40-amp, and one 30-amp relay are located in left cargo corner with a 56-circuit harness that shares 25-redundant front signals. 100-amps of battery service and a ground are also standard. Wiring circuits are also included in the front doors to accommodate aftermarket exterior sideview mirror emergency lighting in addition to rear quarter glass wiring provisions. All circuits include a factory connector. A universal vehicle module is provided for CAN readability of selected signals. Model 1MF26 is required when ordering 9C1 or 9C3 Police Package. Content, options and specifications shown are for the police version only which differ from retail civilian models. Speed/Torque Limiter is not available for PPV.

The 9C1 and 9C3 PPV Package includes:

Certified speedometer, heavy duty suspension, under body skid plates, Firestone Firehawk Pursuit tires mounted on 20-inch steel wheels, 6-piston Brembo front calipers on 15.3-inch rotors for increased braking durability and performance during the rigors of a high-speed pursuit.

The 9C1 Marked Police Package includes:

Front console delete, black rubberized vinyl floor covering and black cloth front and vinyl rear seating.

The 9C3 Detective Police Package includes:

Retail floor console with armrest, color-keyed carpeting in occupant area and black cloth front and rear seating with cup-holders.

STANDARD 9C1/9C3 INTERIOR FEATURES

| | |
|---|---|
| AIR CONDITIONING | Dual-zone automatic digital climate control. Rear passenger duct located on floor tunnel terminates at back of center console. |
| AIR FILTER | Pollutant, odor and fine dust. |
| ARMREST | (9C3 only) Front and rear center console armrest with cupholders. |
| ASSIST HANDLES | Front passenger and rear outboard. |
| AUDIO SYSTEM² | 17.7" diagonal advanced color LCD display with Google built-in compatibility (select service plan required, terms and limitations apply), including navigation capability, connected apps, personalized profiles for each driver's settings, Natural Voice Recognition and Phone Integration. |
| BLUETOOTH^{®3} | Personal cell phone connectivity to vehicle infotainment system. |
| CARGO TIE-DOWNS | 2 cargo tie-downs in cargo area. |
| COMPASS | Shown in display. |
| CONSOLE, FLOOR | Deleted for 9C1 package (reference RPO code DLE), console with armrest for 9C3 package (reference RPO code D06). |
| CRUISE CONTROL | Electronic with set and resume speed |
| DEFOGGER | Rear-window electric |
| DOOR LOCKS | Power locks for front and rear doors. Rear child security locks. |
| DRIVER INFORMATION CENTER | 11 inch diagonal display |
| FLOOR COVERING | Black rubberized vinyl floor covering for 9C1 (reference RPO code BG9). Color-keyed carpeting in occupant area with black cloth front and rear seating for 9C3 (reference RPO code B30). |
| KEY FOB | Two KEYS/FOBS and mechanical keys for ignition and doors. Four additional fobs are available. While unlimited number of learned KEYS/FOBS can operate Keyless start and Keyless open, for a particular vehicle, only the last 8 KEYS/FOBS learned will allow the key fob buttons to work. See Available Options page for ordering codes. See Optional Equipment page for programming procedure. |
| KEYLESS OPEN | Includes extended range Remote Keyless Entry. If the Key Fob battery is depleted or due to wireless interference, vehicle may be unlocked using the mechanical key. |
| KEYLESS START | Includes extended range Remote Keyless Entry. |
| GLASS | Acoustic, laminated front windshield. Side rear tempered, solar glazing. |
| GLOVEBOX | Passenger side. |
| LIGHTING | Front courtesy and dual reading lights. Rear roof, courtesy and dual reading lights. |
| MICROPHONE, WIRING | Provision located above headliner over driver position for customer supplied microphone and department radio |
| OnStar[®] | Fleet orders with properly equipped vehicles receive a 3-month trial of Fleet Connected Services and 3 months of Fleet Safety & Security plan coverage. Connected Services includes Connected Navigation, Remote Access Plan and 1 month or 3GB of data (whichever comes first). OnStar services require vehicle electrical system (including battery), wireless service and GPS satellite signals to be available and operating for features to function properly. OnStar acts as a link to existing emergency service providers. Subscription Service Agreement required. Call 18884ONSTAR (1-888-466-7827) or visit onstar.com for OnStar Terms and Conditions, Privacy Policy, details and system limitations or to have OnStar disabled (must submit vehicle VIN when requesting OnStar to be turned-off). |
| OnStar[®] REMOTE ACCESS | 8 Years of OnStar Remote Access. The OnStar Remote Access Plan gives you simplified remote control of your properly equipped vehicle and unlocks a variety of great features in your myChevrolet mobile app. See dealer for details. OnStar Remote Access Plan does not include emergency or security services. Fleet customers will get Fleet Remote Access through OnStar Vehicle Insights. See onstar.com for details and limitations. Available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device, and the plan you are enrolled in. Terms apply. Device data connection required. |
| POWER OUTLET | 12-volt. Located in the center console compartment for 9C3. Shipped loose in bag for 9C1. |
| POWER OUTLET | 120-volt. Not available. |

1. Always use seat belts and child restraints. Children are safer when properly secured in a rear seat in the appropriate child restraint. See the Owner's Manual for more information. **2.** Functionality varies by model. Full functionality requires compatible Bluetooth and smartphone, and USB connectivity for some devices. Select service plan required, terms and limitations apply. Go to myChevrolet.com/learn/About/bluetooth to find out which phones are compatible with the vehicle. **3.** Go to myChevrolet.com/learn/About/bluetooth to find out which phones are compatible with the vehicle.

STANDARD 9C1/9C3 INTERIOR FEATURES (CONTINUED)

| | |
|---------------------------------------|--|
| PROTECTED IDLE | Standard Protected Idle permits the vehicle to be unlocked and fully powered, but unable to be driven without a remote key fob detected. |
| REAR VIEW MIRROR¹ | HD Rear Vision Camera. Includes Rear Camera Mirror Washer. Rear Camera Mirror allows user to choose between a traditional rear view mirror or a camera view unobstructed by the vehicle's pillars, trunk, roof, head restraints, rear-seat occupants and other interior aftermarket police equipment. |
| REAR VISION CAMERA¹ | HD Rear Vision Camera shows you a high-resolution digital image of the area directly behind your vehicle when in Reverse to help you park and avoid vehicles and objects. You can also display an overlay of where your vehicle is heading. |
| SEATS, FRONT | Police specific black cloth bucket seats, driver 8-way power, passenger 6-way power, driver and passenger 2-way power lumbar |
| SEATS, REAR | 60/40-split, fold-flat. 9C1 in vinyl, 9C3 in cloth with center armrest & cup holders. |
| STEERING COLUMN | Tilt and telescopic. |
| STEERING WHEEL CONTROLS | Audio, Driver Information Center and phone interface controls |
| TEEN DRIVER¹ | A configurable feature that lets you activate customizable vehicle settings associated with a key FOB, to help encourage safe driving behavior. It can limit certain available vehicle features, and it prevents certain safety systems from being turned off. An in-vehicle report card gives you information on driving habits and helps you to continue to coach your new driver. Can be turned off in in your vehicle's Settings menu. |
| TEMPERATURE DISPLAY | Outside temperature. Cabin humidity and windshield temperature sensor. |
| THEFT DETERRENT SYSTEM | Unauthorized entry alert and immobilizer. |
| TPMS | Tire Pressure Monitoring System with auto learn and Tire Fill Alert. |
| UNIVERSAL VEHICLE MODULE | Universal Vehicle Module for CAN readability of selected messages utilizing SAE J1939 formatting. This gateway module offers 10-switchable inputs & outputs, and includes a graphical user interface available to customize specific needs with more than 150 operating parameters available to read. |
| USB CHARGING PORTS | 2 type-C located forward of cupholders (9C3) or shipped loose in bag (9C1), 2 Type-C located within the center console armrest bin (9C3 only) and 2 charge only type-C located on back of center console (9C3 only). |
| VENT | Rear Console, air. 9C3 only. |
| VISORS | Driver and front passenger illuminated sliding vanity mirrors, covered. |
| WINDOWS, POWER | Power driver and passenger with Express-Up/Down. Power rear with Express-Down. |

STANDARD 9C1/9C3 EXTERIOR FEATURES

| | |
|-----------------------------|---|
| ANTENNA | Roof-mounted shark fin (black). |
| CALIBRATION TAILLAMP | SLO Calibration for taillamp flasher, Red/Red. For detailed technical information on activation of this feature, refer to the vehicle technical guide under the Body Builder Manuals section on www.gmupfitter.com . |
| CALIBRATION TAILLAMP | SJ9 Calibration for taillamp flasher Red/White. For detailed technical information on activation of this feature, refer to the vehicle technical guide under the Body Builder Manuals section on www.gmupfitter.com . |
| CHARGE PORT | Manual |
| DEFOGGER | Electric, rear window |
| DRL | Day Time Running Lights. See option code 9G8 for permanent delete. |
| DOOR HANDLES | Body color |
| FRONT GRILLE | Gloss black |
| FLASHER SYSTEM | Headlamp and taillamp, DRL compatible with individual control wires. |
| FOG LAMPS | Not available |
| GLASS | Acoustic, laminated front windshield. Side rear tempered, solar glazing. |
| HEADLAMPS | LED with automatic on and off. |
| LICENSE PLATE | Front mounting package (included on orders with ship-to states that require front license plate) |
| LUGGAGE RACK | Not available. Roof rails deleted. |
| MIRROR CAPS | High gloss black |
| MIRRORS, OUTSIDE | Outside heated, power-adjustable, power-folding, driver-side auto-dimming with turn signal indicators. |
| MOLDING | Door upper. Low gloss black. |
| REAR CAMERA WASHER | Included with Rear Camera Mirror. |
| REAR LIFTGATE | Manual |
| RECOVERY HOOK | One Threaded eye-bolt shipped loose for use on front or rear of vehicle. |
| TIRES | Firestone Firehawk Pursuit 265/50R20 all-season, V-rated, blackwall, (see standard features illustrations section) |
| TIRE, SPARE | Standard Inflator Kit, Spare Tire And Jack Assembly Not Available. |
| WHEELS | 20" (50.8 cm) steel with bolted-on black center cap |
| WHEEL CENTER CAP | Bolt-on aluminum with black finish |
| WINDSHIELD | Solar absorbing shaded upper with acoustic laminated glass |
| WIPERS, WINDSHIELD | Front intermittent with Rainsense. |
| WIPER, REAR | Rear intermittent |

1. Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Visibility, weather, and road conditions may affect feature performance. Read the vehicle's owner's manual for more important feature limitations and information.

2. Always use seat belts and child restraints. Children are safer when properly secured in a rear seat in the appropriate child restraint. See the Owner's Manual for more information.

STANDARD 9C1/9C3 ELECTRICAL FEATURES

| | |
|--------------------------------------|--|
| AC CHARGING | At-home, 19-kW Level 2 (AC) charging capability. Requires professionally installed dedicated charge station, sold separately. |
| AUXILIARY POWER, FRONT | 12-volt. Located in the center console compartment for 9C3. Shipped loose in bag for 9C1. (Note: This is for KH8 whereas USB Charging Ports are UBJ, UBK & UBI) |
| BATTERY, DRIVE | Ultium Propulsion, 102 kWh Battery Rated Energy, 190 kW DC fast charging capable. |
| BATTERY, SERVICE | 12V/60AH, 680 ENCCA |
| DUAL LEVEL CHARGE CORD | Includes dual-mode, portable, 120-volt (1.4 kW) and 240-volt (7.7 kW) capability, swappable nema 5-15 and NEMA 14-50 plugs with SAE J1772 vehicle connection. |
| ELECTRONIC PRECISION SHIFT | The electronic precision shift includes an electric parking brake. In the event of a loss of 12-volt battery power, the electric parking brake cannot be released, and the vehicle cannot be shifted to N (Neutral). Tire skates or dollies must be used under the non-rolling tires to prevent damage while loading/unloading the vehicle. Dragging the vehicle will cause damage not covered by the vehicle warranty. |
| FLEET CONNECTED ACCESS | OnStar and Chevrolet connected services capable, includes (U5G) 5G Wi-Fi Hotspot capable, (U2K) SiriusXM with 360L, (NAM) Google Automotive Services capable, (IMP) smartphone app remote start. Service varies with conditions and location. Requires active service plan and paid AT&T data plan. See OnStar.com/BusinessSolutions for details and limitations. Availability subject to change. Vehicle must be on or in the accessory position for Wi-Fi to function. |
| REMOTE PANIC ALARM | Keyless remote panic button activates horn and flashing exterior lights. Can be disabled with optional 5J1 calibration. |
| REMOTE START | Key Fob activated. Included and only available with (UE1) OnStar. |
| SURVEILLANCE MODE | Calibration to shut-down non-federally mandated exterior and interior lighting. Exterior lighting will shut off only if in auto mode and not equipped with optional LIGHTING DELETE (9G8). Cluster and PRND indicator dimmed to the minimum setting. Brake, reverse and turn signal lighting will override calibration and function if operated. For detailed technical information on activation of this feature, refer to the vehicle technical guide under the Body Builder Manuals section on www.gmupfitter.com . |
| UPFITTER WIRING PROVISIONS | See WIRING Section for Circuit Diagrams and connector information. |
| ONE PEDAL DRIVING¹ | Helps convert the vehicle's kinetic energy into energy stored in the battery for later use to help get the most range. |
| HANDS-FREE START | Push the brake pedal after closing the door to start vehicle. The key fob authorizes the hands-free start system. |
| REGEN ON DEMAND^{TM1} | Helps convert the vehicle's kinetic energy into energy stored in the battery for later use to help get the most range. |
| ULTIFI² | Separates the vehicle's software from the hardware to enable the frequent and seamless delivery of software-defined features, apps and services to customers over the air. Ultifi allows customers to continue to upgrade and personalize their vehicle as improvements and new features become available over time. |

STANDARD 9C1/9C3 MECHANICAL FEATURES

| | |
|-------------------------|---|
| BRAKES | Front Brembo performance disc brakes with non-FNC rotors. |
| COOLING | Heavy-duty |
| SKID PLATES | Steel front and rear |
| STEERING | Power, non-variable ratio, electric. |
| SUSPENSION | Performance |
| TRANSMISSION | Ultium Performance 2 -motor All Wheel Drive System. |
| TRACTION CONTROL | Electronic |

STANDARD 9C1/9C3 SAFETY FEATURES

| | |
|---|---|
| AIRBAGS⁴ | Frontal, knee and seat-mounted side-impact for driver and front passenger, and roof-rail mounted head-curtain for outboard seating positions. Includes Passenger Sensing System for front passenger. |
| BUCKLE TO DRIVE | Prevents vehicle from being shifted out of Park until driver seat belt is fastened; times out after 20 seconds and encourages seat belt use, can be turned on and off in Settings or Teen Driver menu This feature is defaulted off for 9C1 and 9C3, but can be turned on in the Infotainment menu. |
| LATCH SYSTEM⁴ | (Lower Anchors and Tethers for CHildren), for child child restraint seats. |
| REAR SEAT REMINDER⁴ | Rear Seat Reminder does not detect people, animals or objects in the back seat. It only registers when a rear door has been opened. Can be turned off in in your vehicle's Settings menu. |
| SAFETY ALERT SEAT³ | Safety Alert Seat uses left-, right- or both-side driver seat vibration pulses to help you detect and identify the direction of potential crashes. You can also switch to beeping crash avoidance alerts. |
| SEAT BELTS⁴ | 3-point, all positions, includes front and rear seat belt pretensioners |
| SEAT BELT INDICATORS⁴ | Driver, front passenger and rear passengers. |
| STABILITRAK | Stability Control System with Proactive Roll Avoidance and traction control, includes electronic trailer sway control and hill start assist. |
| REAR PARK ASSIST³ | Rear Park Assist provides alerts of nearby detected vehicle and objects behind your vehicle to help you park and avoid collisions. |

1. Feature may be limited when the battery temperatures are extremely cold or hot or when battery is near full charge. See Owner's Manual for details. **2.** Ultifi is pre-production and is subject to change. Actual features, functionality, and product limitations may vary. **3.** Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Visibility, weather, and road conditions may affect feature performance. Read the vehicle's owner's manual for more important feature limitations and information. **4.** Always use seat belts and child restraints. Children are safer when properly secured in a rear seat in the appropriate child restraint. See the Owner's Manual for more information.

OPTIONAL 9C1/9C3 INTERIOR FEATURES

| | |
|------------|---|
| U5G | 5G WI-FI HOTSPOT - Included and only available with (UE1) OnStar. Terms and limitations apply. See onstar.com or dealer for details. Service varies with conditions and location. Requires active service plan and paid AT&T data plan. See OnStar.com/BusinessSolutions for details and limitations. Availability subject to change. Vehicle must be on or in the accessory position for Wi-Fi to function. |
| NAM | GOOGLE AUTOMOTIVE SERVICES - included and only available with (UE1) OnStar. |
| 6E2 | KEYS/FOBS - Fleet Calibration, provides a single key and calibration with a specific code that is common to the driver door lock of the entire Blazer EV fleet with the same code. Key code is an alternate to SEO (6E8) Fleet Calibration. Includes (AU7) common fleet key. Requires (AMF) Remote Keyless Entry Package. Not available with SEO (6E8) complete vehicle fleet common key. |
| 6E8 | KEYS/FOBS - Fleet Calibration, provides a single key and calibration with a specific code that is common to the driver door lock of the entire Blazer EV fleet with same code. Key code is an alternate to SEO (6E2) Fleet Calibration. Includes (AU7) common fleet key. Requires (AMF) Remote Keyless Entry Package. Not available with SEO (6E2) complete vehicle fleet common key. |
| AMF | REMOTE KEYLESS ENTRY PACKAGE - Includes 4 additional transmitters, NOTE: programming of remotes is at customer's expense. Programming remotes is not a warranty expense. |
| T53 | LAMPS - Alternate flashing Red & Blue rear compartment lid warning (visible when liftgate is open) and controlled by momentary liftgate mounted switch or ground wire. |
| 6C7 | LIGHTING - Red and white LED auxiliary dome lamp is located on headliner between front row seats. The auxiliary lamp is wired independently from standard dome lamp. |
| 6N6 | REAR DOOR LOCKS AND HANDLES INOPERATIVE - Rear power locks are inoperable at rear door but operate from drivers position, rear doors can be opened only from outside the vehicle. Includes (VBO) Kerr Industries Ship-thru to mechanically remove hardware linkage. |
| 6N5 | REAR DOOR WINDOW SWITCHES INOPERATIVE - Calibration for rear windows to operate from drivers position only. Window lockout switch remains illuminated in all positions when equipped with this feature. |
| U2K | SiriusXM WITH 360L - Includes a trial subscription to the Platinum Plan. Included and only available with (UE1) OnStar. Trial subscription subject to the SiriusXM Customer Agreement and privacy policy, visit www.siriusxm.com which includes full terms and how to cancel. All fees, content, features, and availability are subject to change. Some features require GM connected vehicle services. |

OPTIONAL 9C1/9C3 EXTERIOR FEATURES

| | |
|------------|---|
| 9G8 | LIGHTING DELETE - Daytime Running Lamps and automatic headlamp control delete. Deletes standard Daytime Running Lamps and automatic headlamp control features, also disables automatic interior courtesy lighting. |
| 5T4 | SPECIAL PAINT³ - Victory Red WA 9260. Requires SEO (TGK) special paint solid. |
| 9W5 | SPECIAL PAINT³ - Silver Ice Metallic WA 636R. Requires SEO (TGK) special paint solid. |
| 9V7 | SPECIAL PAINT³ - Dark Blue Metallic WA 722J. Requires SEO (TGK) special paint solid. |
| 9V2 | SPECIAL PAINT³ - MSP Blue Goose. |
| 6JE | BLUE LEFT / BLUE RIGHT WHELEN LED ION LIGHT PACKAGE - Two ION light heads mounted on each exterior corner. Not available with 6JG, 6J9 or 6J8 Package. |
| ARU | REAR GLASS - Deep tint. Replaces Solar Glazing (ARS). |
| 6JG | RED LEFT / BLUE RIGHT WHELEN LED ION LIGHT PACKAGE - Two ION light heads mounted on each exterior corner. Not available with 6JE, 6J9 or 6J8 Package. |
| 6J9 | RED LEFT / RED RIGHT WHELEN LED ION LIGHT PACKAGE - Two ION light heads mounted on each exterior corner. Not available with 6JG, 6JG or 6J8 Package. |
| 6J8 | WHITE LEFT / WHITE RIGHT WHELEN LED ION LIGHT PACKAGE - Two ION light heads mounted on each exterior corner. Not available with 6JG, 6J9 or 6J9 Package. |
| TGK | SPECIAL PAINT SOLID - Special paint, one color. Required with any special paint selection. Refer to individual special paint SEO codes for details on body colored non-sheet metal parts. May require extended lead time. |
| 7X3 | SPOTLAMP - Left hand, pillar-mounted unity, 6-inch with LED lamps; independently fused NOTE: Factory installation of spotlamps are recommended. Special tooling is used to locate and drill the spotlamp shaft hole in the pillars. (Interior trim covers provided with factory installed lamps are not available as service parts). Field installation of spotlamps must not interfere with proper deployment of the roof rail mounted head-curtain airbags in the event of a crash. |

OPTIONAL 9C1/9C3 ELECTRICAL FEATURES

| | |
|------------|---|
| 5J1 | CALIBRATION - Keyless remote panic button and exterior lights/horn disable |
| 1MP | SMARTPHONE APP REMOTE START - Only available with OnStar. |
| UTQ | THEFT DETERRENT SYSTEM DISABLE - The alarm and horn become non-functional in an attempt of theft to the vehicle (recommended for vehicles utilizing 6E2 or 6E8 key codes). |
| WX7 | WIRING - Auxiliary speaker. For upfitter connection to front door and windshield speakers. |
| 6J3 | WIRING - For grille lamps and siren speaker |
| 6J4 | WIRING - For horn and siren. |

OPTIONAL 9C1/9C3 MECHANICAL FEATURES

| | |
|------------|---|
| V92 | TRAILERING PROVISIONS - Includes; Wiring, (CTT) Hitch Guidance and (PZ8) Hitch View |
| SDE | TRAILER HITCH - Removable 2" (Class 2.) receiver. Requires (V92) trailering provisions and (VLG) trailer hitch closeout panel. |
| VLG | TRAILER HITCH CLOSEOUT PANEL - Requires (SDE) removable trailer hitch. |

OPTIONAL SHIP THRU

| | |
|------------|---|
| VBO | SHIP THRU - Produced in GM Ramos and shipped to Kerr Industries Ramos, Returned to GM Ramos for shipping to final destination. |
|------------|---|

1. Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Visibility, weather, and road conditions may affect feature performance. Read the vehicle's owner's manual for more important feature limitations and information. 2. To avoid the risk of injury, never use Recovery Hooks to tow a vehicle. For more information, see the Recovery Hooks section of your Owner's Manual. 3. Not available at this time

EMISSIONS - ZERO EMISSIONS VEHICLE (ZEV)

| | |
|------------|--|
| FE9 | Emissions , Federal requirements |
| NE1 | Emissions , Connecticut, Delaware, Maine, Maryland, Massachusetts, New Jersey, New York, Oregon, Pennsylvania, Rhode Island, Vermont and Washington state requirements |
| YF5 | Emissions , California state requirements |
| NB8 | Emissions override , California (allows a dealer in states that require California emissions - California, Connecticut, Delaware, Maryland, Massachusetts, New Jersey, New York, Oregon, Pennsylvania, Rhode Island or Washington - to order Federal emissions for a vehicle that will be registered in a state that has Federal emission requirements). Do not use for vehicles that will be registered in California, Connecticut, Delaware, Maryland, Massachusetts, New Jersey, New York, Oregon, Pennsylvania, Rhode Island or Washington. Requires (FE9) Federal emissions requirements. Not available in Maine or Vermont. |
| NB9 | Emissions override , state-specific (for dealers ordering vehicles in (YF5) or (NE1) emission states - California, Connecticut, Delaware, Maine, Maryland, Massachusetts, New Jersey, New York, Oregon, Pennsylvania, Rhode Island, Vermont and Washington) Allows a California dealer (YF5 emissions) to order (NE1) emissions with (NB9) emissions override code for registration in (NE1) states; or, a Connecticut, Delaware, Maine, Massachusetts, New Jersey, New York, Oregon, Pennsylvania, Rhode Island, Vermont and Washington dealer (NE1 emissions) to order (YF5) emissions with (NB9) emissions override code for registration in California. |
| NC7 | Emissions override , Federal (for vehicles ordered by dealers in Federal emission states with (YF5) or (NE1) emissions - Not required for vehicles being shipped to California, Connecticut, Delaware, Maine, Maryland, Massachusetts, New Jersey, New York, Oregon, Pennsylvania, Rhode Island, Vermont or Washington) Requires (YF5) California state emissions requirements or (NE1) Connecticut, Delaware, Maine, Massachusetts, New York, Pennsylvania, Rhode Island or Vermont state emission requirements. |

FE9 NAME CERTIFICATION EMISSION, FEDERAL
 NE1 NAME CERTIFICATION EMISSION, GEOGRAPHICALLY RESTRICTED
 YF5 NAME CERTIFICATION EMISSION, CALIFORNIA is certified to EPA Tier 3 BIN 70 standards and qualifies as ULEV 70 (Ultra Low Emission Vehicle) under California Air Resources Board (CARB) requirements, meaning it is 50-state certified.
 EPA engine family or test group: MGMXT05.3388

TIRES

| MANUFACTURER | QUANTITY | SIZE | SPEED RATING | TYPE |
|--------------|----------|-----------|--------------|---------------|
| Firestone | 4 | 265/55R20 | V | All season BW |

NOTE:

Due to specific requirements for performance durability and safety, GM recommends only the original equipment tires for replacement.

Tire Plies = Tread 6 ply; 2 Polyester, 2 Steel, 2 Nylon, Sidewall, 2 Polyester

Tire Chains - If the vehicle is equipped with tire size 265/50R20, use tire winter traction devices only where legal and only when necessary. Only use textile traction devices, such as tire snow socks, that are the proper size for the tires. Traction devices must be installed only on the tires of the drive axle. Drive slowly and follow the traction device manufacturer's instructions. Driving too fast or spinning the wheels can damage the traction device.



DC FAST CHARGING CAPABLE



STANDARD HEAVY-DUTY STEEL WHEEL WITH FIRESTONE FIREHAWK PURSUIT TIRE

SPECIFICATIONS

ALL WHEEL DRIVE (MPH/KPH)

| | |
|---|---------|
| Model | 1MF26 |
| Projected top speed ¹ | 130/209 |
| Projected top speed in reverse ¹ | 25/40 |
| Acceleration ¹ 0-20 mph (sec.) | 1.77 |
| Acceleration ¹ 0-30 mph (sec.) | 2.60 |
| Acceleration ¹ 0-40 mph (sec.) | 3.41 |
| Acceleration ¹ 0-50 mph (sec.) | 4.24 |
| Acceleration ¹ 0-60 mph (sec.) | 5.17 |
| Acceleration ¹ 0-70 mph (sec.) | 6.27 |
| Acceleration ¹ 0-80 mph (sec.) | 7.62 |
| Acceleration ¹ 0-90 mph (sec.) | 9.20 |
| Acceleration ¹ 0-100 mph (sec.) | 11.08 |

ESTIMATED RANGE WITH EMERGENCY EQUIPMENT⁷

| | |
|--|---------|
| All Wheel Drive ⁷ (miles/km) | 250/402 |
|--|---------|

VEHICLE WEIGHT (LBS./KG.)

| | |
|---|-----------|
| Seating Capacity | 2/3 |
| GVWR ³ (Gross Vehicle Weight Rating) | 6945/3150 |
| FGAWR (Front Gross Axle Weight Rating) | 1550/703 |
| RGAWR (Rear Gross Axle Weight Rating) | 1700/771 |
| Payload ⁴ | 904/410 |
| Base curb weight | 5870/2663 |
| Maximum Trailering Capacity ⁵ | 1,000/454 |

PASSENGER COMPARTMENT VOLUME (cu.ft./liters)

| | |
|--------------------------------|----------|
| Passenger Volume Front Row | 58/1642 |
| Passenger Volume Second Row | 25.7/728 |
| Cargo Volume With Rear Seat Up | 26.2/742 |

FRONT COMPARTMENT (in./mm)

| | |
|------------------------|------------|
| Head room | 40.88/1038 |
| Shoulder room, 1st row | 58.70/1491 |
| Hip room, 1st row | 57.40/1458 |
| Leg room, 1st row, max | 44.20/1123 |

REAR COMPARTMENT (in./mm)

| | |
|---------------|------------|
| Head room | 38.10/968 |
| Shoulder room | 58.33/1482 |
| Hip room | 53.79/1366 |
| Leg room | 38.92/989 |

CARGO (in./mm)

| | |
|---|-----------|
| Load floor length to center of front seat at floor | 71/1804 |
| Load floor length to center of 2nd seat at floor at seat | 25/889 |
| Inside width between wheelhouse | 42/1067 |
| Cargo area width | 47.2/1200 |
| Cargo area length | 36.9/937 |
| Cargo area height (headliner limited) | 26.8/681 |
| Cargo volume ² maximum behind front seat (cu. ft./liters) | 58.0/1643 |
| Cargo volume ² maximum behind second seat (cu. ft./liters) | 25.7/727 |

EXTERIOR (in./mm)

| | |
|---|-----------------------------|
| Wheelbase | 121.80/3094 |
| Overall length | 192.62/4893 |
| Overall width, without mirrors | 78.02/1982 |
| Overall width, including mirrors | 86.50/2197 |
| Overall height ⁶ | 64.78/1645 |
| Lift in height ⁶ (Top of load floor to ground) | 29.40/747 |
| Step-in height | |
| Front track width | 65.90/1674 |
| Rear track width | 65.90/1674 |
| Turning diameter curb to curb (ft./m) | 39.7/12.1 |
| Approach angle | 19 degrees |
| Departure angle | 22 degrees |
| Breakover angle | 15 degrees |
| Ground Clearance | 6.5/166 |
| Overhang, front | 35.09/891 |
| Overhang, rear | 35.37/898 |
| Fording depth | 12in/304.8mm @ 6.2mph/10kph |

1. Based on 2024MY Michigan State Police Vehicle Test Results. All vehicles tested with clean roof and no additional equipment or added ballast. Adding non dealer accessories or making modifications to the vehicle can affect vehicle performance, aerodynamics, overall top speed and acceleration. **2.** Cargo and load capacity limited by weight and distribution. **3.** Gross Vehicle Weight Rating (GVWR). When properly equipped, includes vehicle, passengers, cargo and equipment. **4.** These maximum payload ratings are intended for comparison purposes only. Before you buy a vehicle or use it to haul people or cargo, carefully review the vehicle loading section of the Owner's Manual and check the carrying capacity of your specific vehicle on the label on the inside of the driver's door jamb. **5.** Maximum trailering ratings are intended for comparison purposes only. Before you buy a vehicle or use it for trailering, carefully review the trailering section of the Owner's Manual. The trailering capacity of your specific vehicle may vary. The weight of passengers, cargo and options or accessories may reduce the amount you can trailer. **6.** Published dimension indicated is from ground and without optional equipment or accessories. Additional accessories or equipment ordered at the customer's request can result in a minor change in this dimension. **7.** On a full charge based on development testing and/or analytical projection consistent with SAE J1634 revision 2017 - MCT. Range subject to change prior to production. Actual range may vary based on several factors, including ambient temperature, terrain, battery age and condition, loading, and how you use and maintain your vehicle. EPA estimates not yet available.

SPECIFICATIONS

PROPULSION SYSTEMS

| | STANDARD |
|-------------------------------------|------------------------------------|
| Type | Ultium Performance All Wheel Drive |
| Motor | 2-Motor Permanent Magnetic Drive |
| Power on a full charge (hp/kW) | 498/372 |
| Torque on a full charge (lb.ft./Nm) | 531/720 |

DRIVE BATTERY

| | |
|--------------------------------------|---|
| Type | Rechargeable energy storage system with 12-module pack |
| Mass (lb / kg) | 947 / 430 |
| Battery chemistry | Lithium-ion |
| Cells | 288 |
| Energy | 102 kWh |
| Projected Range ¹ (mi/km) | 250/402 |
| Warranty ² | 8 years / 100,000 miles of battery and electric components coverage |

BRAKES

| | |
|--|-----------|
| eBoost ABS | Disc/Disc |
| Front rotor diameter (in./mm) | 15/381 |
| Rear rotor diameter (in./mm) | 13.5/343 |
| Front rotor thickness (in./mm) | 1.26/32 |
| Rear rotor thickness (in./mm) | 0.79/20 |
| Projected Stopping Distance from 60.0 mph (ft.) ⁴ | 135.20 |

TIRES

| | |
|------|---|
| Type | Firestone Firehawk Pursuit, V-rated, All-season |
| Size | 265/55R20 |

WHEELS

| | |
|------|--|
| Type | Black Steel with bolt on aluminum center cap |
| Size | 20"x 9" |

CHASSIS

| | |
|----------------|---|
| Suspension | Heavy-duty police-rated suspension with unique StabiliTrak performance calibration. |
| Steering type | Power, non-variable ratio, electric |
| Steering ratio | 15.98:1 |

SERVICE BATTERIES

| | |
|--------------------|------------------|
| Type | Maintenance free |
| BCI group size | LN1 |
| Volts | 12 V |
| Amp hour rating | 50 ah |
| Reserve capacity | 80 min |
| Cold cranking-amps | 520 a |

LEVEL 2 RESIDENTIAL CHARGING³

 
| | |
|------------------------|---|
| 240-Volt (48-amp) | Provides up to 37 miles of range per hour |
| 19.2 Kilowatt (80-amp) | Provides up to 52 miles of range per hour |

LEVEL 3 DC FAST CHARGING³

| | |
|-----------------------|--|
| 400-Volt 190 Kilowatt | Provides up to 71-miles of range in 10-minutes or 141-miles of range in approximately 30-minutes |
|-----------------------|--|

1. GM estimated range based on current capability of analytical projection consistent with SAE J1634 revision 2017-MCT. GM estimated range is based on a vehicle with a full charge. Actual range will vary based on several factors, including temperature, terrain, battery age, loading, use and how you use and maintain your vehicle. Performance targets. Estimates and capability specifications based on computer-aided analysis and simulation using virtual engineering tools. EPA estimates not yet available. **2.** Limited warranty. Whichever comes first. See dealer for details. See owner's manual for additional limitations. **3.** Actual charge times will vary based on battery starting state of charge, battery condition, output of charger, vehicle settings and outside temperature. See owner's manual for additional limitations. **4.** Based on 2024MY Michigan State Police Vehicle Test Results. All vehicles tested with clean roof and no additional equipment or added ballast."

AVAILABLE EXTERIOR COLORS ACTUAL COLORS MAY VARY



Summit White
WA-8624



 
Red Hot
WA-130X




Black
WA-8555




Riptide Blue Metallic
WA-121J



Galaxy Gray Metallic
WA-127J

 


Radiant Red Tintcoat*
WA-170H

 


Sterling Gray Metallic
WA-130H

*Available at extra cost

 
SEO PAINT AVAILABLE¹ ACTUAL COLORS MAY VARY




Victory Red
WA-9260

 

Silver Ice Metallic
WA-636R

 


Dark Blue Metallic
WA-722J

 



MSP Blue Goose
WA-5665

NOTE:
• Actual color may vary

AVAILABLE INTERIOR COLOR ACTUAL COLORS MAY VARY

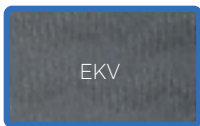

Black cloth Front
Black vinyl Rear
9C1 only

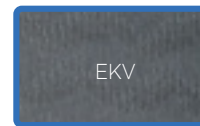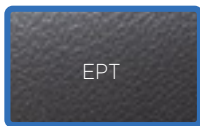

Black cloth Front and Rear
9C3 only



Blazer EV 9C1 Interior



Blazer EV 9C3 Interior


1. Not available at this time.



REAR ACCOMODATIONS




Shown with equipment from independent suppliers not covered by the GM New Vehicle Limited Warranty GM is not responsible for the safety or quality of independent supplier alterations.

APPROACH AND DEPARTURE ANGLES

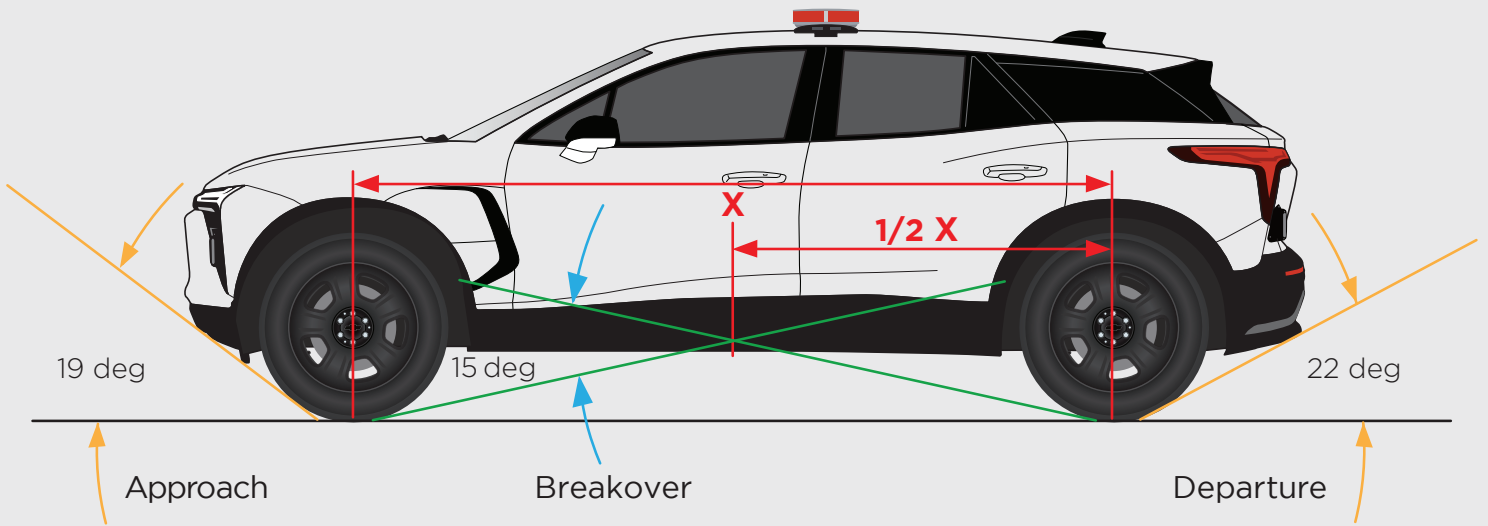

| | PPV Blazer EV AWD |
|------------------|----------------------|
| Approach Angle | 19 degrees |
| Departure Angle | 22 degrees |
| Breakover Angle | 15 degrees |
| Ground Clearance | 7.49 in. / 190 mm |
| Wheelbase (X) | 121.80 in. / 3094 mm |
| Overhang, front | 35.09 in. / 891 mm |
| Overhang, rear | 5.37 in. / 898 mm |


DIMENSIONS

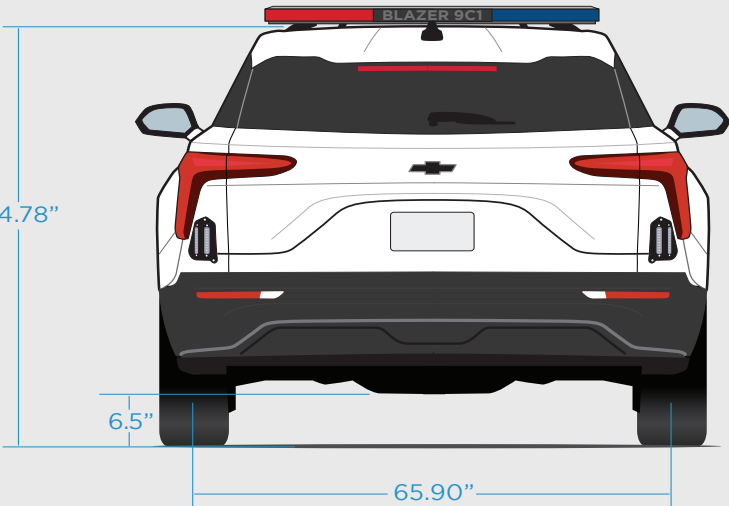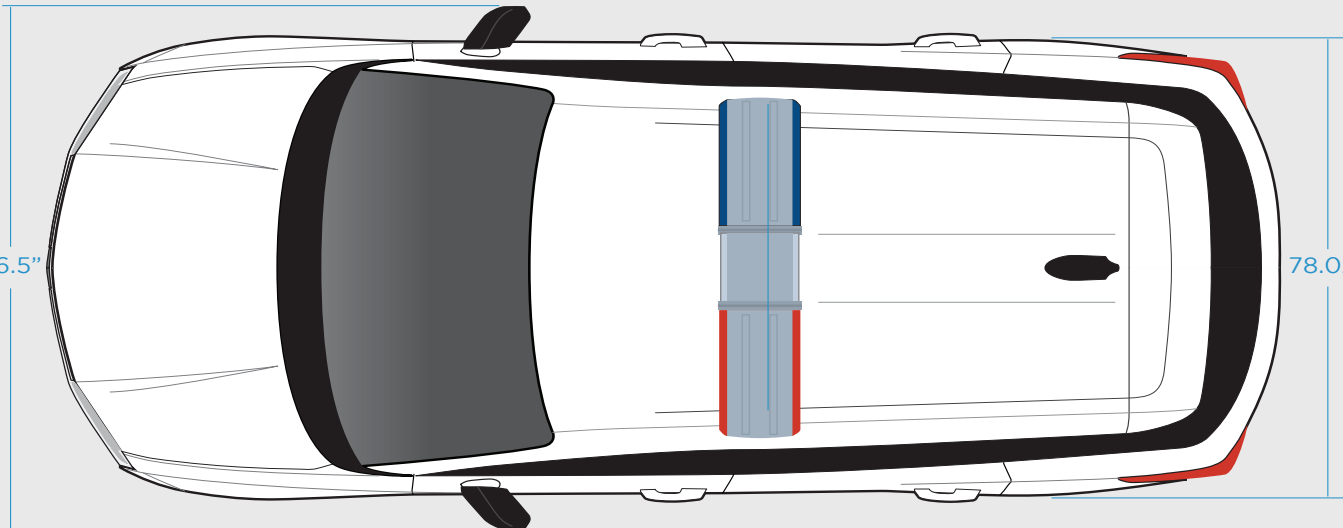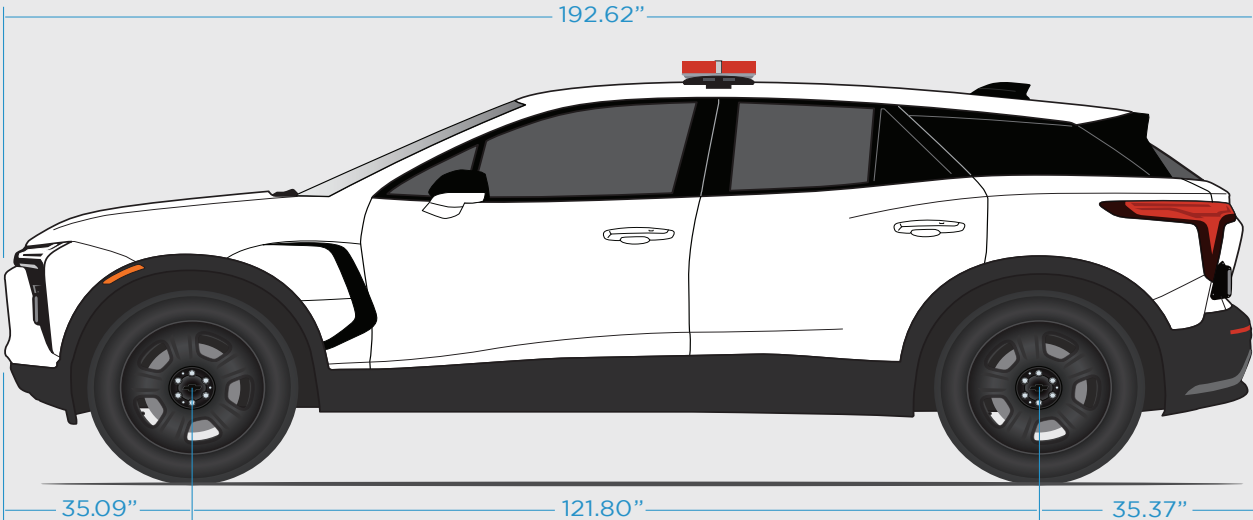

Estimated material sizes to wrap:

- Hood - 50" x 72"
- Front Doors - 57" x 34"
- Rear Doors - 52" x 35"
- Roof - 112" x 60"
- Front Clip - 40" x 115"
- Rear Clip - 38" x 70"
- Front Quarter - 56" x 32"
- Rear Quarter - 42" x 32"

UNITED STATES CERTIFIED SPEEDOMETER/CLUSTER (CANADIAN SIMILAR)

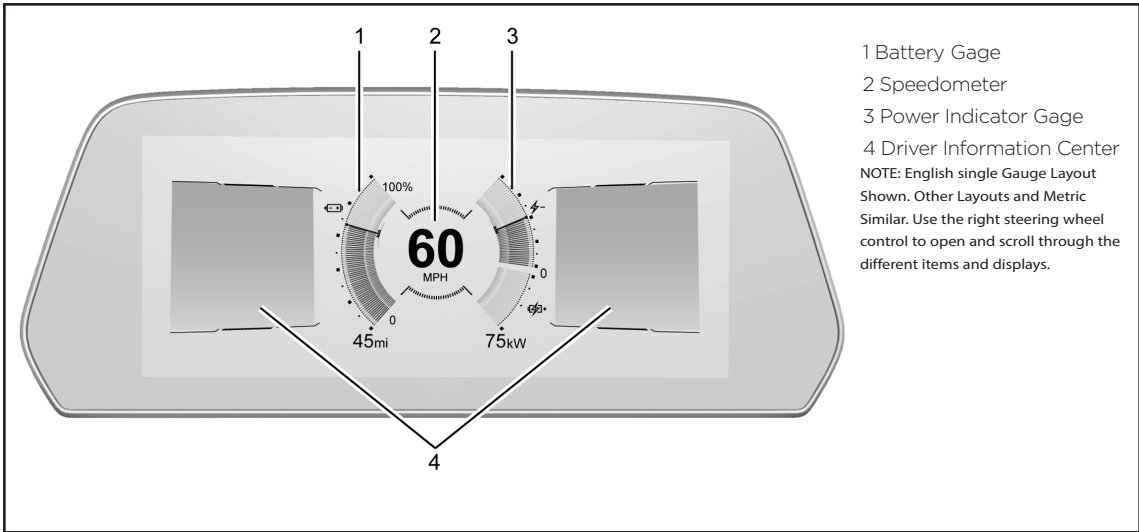

- 1 Battery Gage
 - 2 Speedometer
 - 3 Power Indicator Gage
 - 4 Driver Information Center
- NOTE: English single Gauge Layout Shown. Other Layouts and Metric Similar. Use the right steering wheel control to open and scroll through the different items and displays.

RADIO, SIREN/FLASHERS CONTROLS



1. The steering wheel controls on left rear side control momentary output for two-way radio microphone and latching for siren/flashers.
2. Volume: Press to increase or decrease the volume.

2024 BLAZER EV PPV SPEEDOMETER CERTIFICATION CALIBRATION


"To Whom it May Concern;

The speedometer system in the 2024MY Police Blazer EV is equipped with an electronically controlled speedometer which is designed to be accurate ± 3 km/h (± 2 mph) through its range of function. The Police Package speedometer is calibrated with (XOE), performance all wheel drive electrified propulsion system, and 265/50R20 SL 107V rated tires (QH9). Specifications are at temperatures of -23 to 49 °C (-10 to 120 °F). Inaccuracies due to vehicle speed sensing are included.

GM specified vehicle maintenance is required to maintain the stated accuracy of the speedometer system. The accuracy of the speedometer system is dependent on and affected by the required vehicle maintenance including; following placard tire inflation pressure of 39 psi, monitoring tire wear as directed by the owner's manual, tire replacement with all-season Firestone Firehawk Pursuit 265/50 R20 tires, maintaining original OEM driveline ratios, maintaining original OEM electronic module calibration files and following vehicle loading limitations.

Sean O'Shea
Regards,

Sean O'Shea
Police Vehicle Program Manager

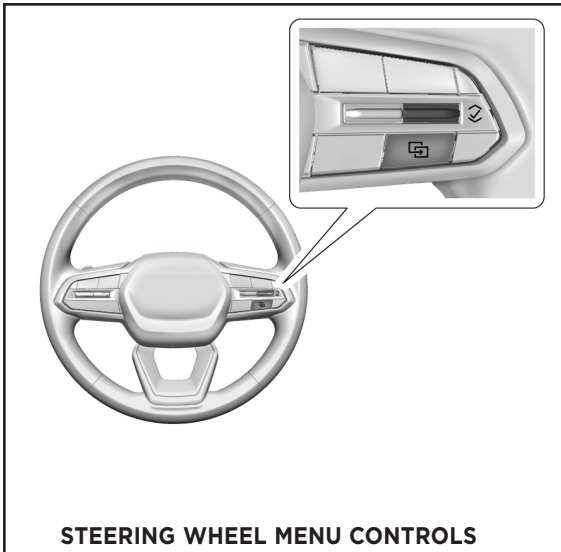

STEERING WHEEL MENU CONTROLS

VEHICLE TOUCH SCREEN SETTINGS



VEHICLE PERSONALIZATION MENU

The Personalization Menu is accessed by:

Item setting

Important features in the VEHICLE SETTINGS sub-menu that can be changed are:

Rear Seat Reminder¹

Buckle to Drive

Collision Detection²

Comfort and Convenience

Lighting

Power Locks

Safety Alert Seat²

See the Owner's Manual for a complete Vehicle Personalization Menu listing of items that may be available for your vehicle.

¹ Does not detect people or items. Always check rear seat before exiting. ² Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Visibility, weather, and road conditions may affect feature performance. Read the vehicle's owner's manual for more important feature limitations and information.

STANDARD INTERIOR FEATURES

REAR CAMERA MIRROR



Inside rearview auto-dimming with full camera display. Includes (CWA) Rear Camera Mirror Washer.

This automatic dimming mirror provides a wide angle camera view of the area behind the vehicle. Pull the tab to turn on the display. Push the tab to turn it off. When off the mirror is automatic dimming. Adjust the mirror for a clear view of the area behind the vehicle while the display is off.

WARNING: The Rear Camera Mirror (RCM) has a limited view. Portions of the road,

Vehicles, and other objects may not be seen. Do not drive or park the vehicle using only this camera. Objects may appear closer than they are. Check the outside mirrors or glance over your shoulder when making lane changes or merging. Failure to use proper care may result in injury, death, or vehicle damage.

The Rear Camera Mirror may not work properly or display a clear image if:

- There is glare from the sun or headlamps.

- This may obstruct objects from view. If needed, push the tab to turn off the display.

- Dirt, snow, or other debris blocks the camera lens. Clean the lens with Rear Camera Washer or a soft damp cloth.

- The camera's mounting on the vehicle has been damaged, and/or the position or the mounting angle of the camera has changed.

Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Visibility, weather, and road conditions may affect feature performance. Read the vehicle's owner's manual for more important feature limitations and information.

REAR SEAT REMINDER

The message REAR SEAT REMINDER LOOK IN REAR SEAT displays under certain conditions indicating there may be an item or passenger in the rear seat. Check before exiting the vehicle. This feature will activate when a second row door is opened while the vehicle is on or up to 10 minutes before the vehicle is turned on. There will be an alert when the vehicle is turned off. The alert does not directly detect objects in the rear seat; instead, under certain conditions, it detects when a rear door is opened and closed, indicating that there may be something in the rear seat.


The feature is active only once each time the vehicle is turned on and off, and will require reactivation by opening and closing the second row doors. There may be an alert even when there is nothing in the rear seat; for example, if a child entered the vehicle through the rear door and left the vehicle without the vehicle being shut off.

The feature can be turned on or off. Select Settings > Vehicle > Rear Seat Reminder > ON or OFF.

Note: Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. Read the vehicle's Owner's Manual for important safety and driver assistance feature limitations and information

STANDARD SAFETY FEATURES


SAFETY ALERT SEAT¹

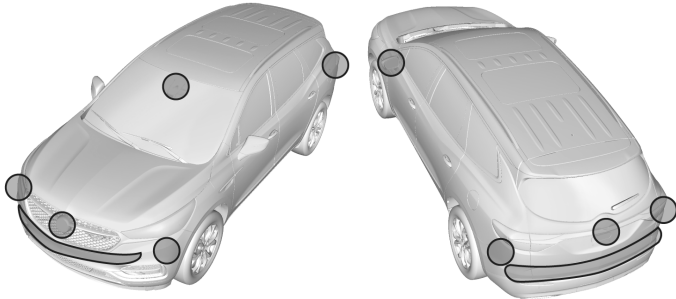

The driver seat cushion may provide a vibrating pulse alert or audible beeping. To change settings from the infotainment screen, touch Settings > Vehicle > Collision/Detection Systems. Keep these areas of the vehicle clean and clear of obstacles to ensure the best driver assistance feature performance. Driver Information Center (DIC) messages may display when the systems are unavailable or blocked.

- Front and rear bumpers and the area below the bumpers - Not available on 9C1 or 9C3.
- Front grille and headlamps - Not available on 9C1 or 9C3.
- Front camera lens in the front grille or near the front emblem - Not available on 9C1 or 9C3.
- Front side and rear side panels - Not available on 9C1 or 9C3.
- Outside of the windshield in front of the rearview mirror - Not available on 9C1 or 9C3.
- Side camera lens on the bottom of the outside mirrors - Not available on 9C1 or 9C3.
- Rear side corner bumpers
- Rear Vision Camera above the license plate

REAR PARK ASSIST¹

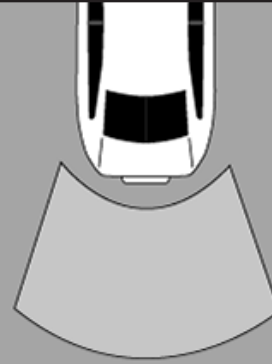


The cluster may display a Park Assist amphitheater-like display with bars that represent the estimated location of a detected object and the vehicle's distance from the object. As a detected object becomes closer, more bars light up and change color from yellow to amber to red. When an object is first detected in the rear, one beep will be heard from the rear, or the SAFETY SEAT will pulse two times. When an object is very close, five beeps will sound from the rear or the SAFETY SEAT will pulse five times.

The Park Assist System is no substitute for careful and attentive driving. The Park Assist system does not detect children, pedestrians, bicyclists, animals, or objects located below the bumper or that are too close or too far from the vehicle. It is not available at speeds greater than 9 km/h (6 mph). To prevent injury, death, or vehicle damage, even with Park Assist, always check the area around the vehicle and check all mirrors before moving forward or backing.

The REAR Park Assist System can be turned on or off using the infotainment system. To view available settings from the infotainment home screen, touch Settings > Vehicle > Collision/Detection Systems.


HD REAR VISION CAMERA¹

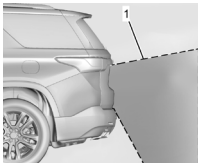

1. View Displayed by the Camera in Radio Screen
2. Corners of the Rear Bumper

Displayed images may be farther or closer than they appear. The area displayed is limited and objects that are close to either corner of the bumper or under the bumper do not display.


The camera(s) do not display children, pedestrians, bicyclists, crossing traffic, animals, or any other object outside of the cameras' field of view, below the bumper, or under the vehicle. Shown distances may be different from actual distances. Do not drive or park the vehicle using only these camera(s). Always check behind and around the vehicle before driving. Failure to use proper care may result in injury, death, or vehicle damage.

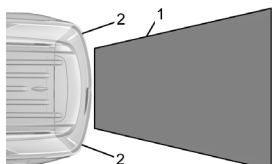




¹ Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Visibility, weather, and road conditions may affect feature performance. Read the vehicle's owner's manual for more important feature limitations and information.


STANDARD INTERIOR FEATURES


OnStar®




-  Voice Command Button
-  Blue OnStar® Button
-  Emergency Button

This vehicle is equipped with a comprehensive, in-vehicle system that can connect to a live OnStar® Advisor for Emergency, Security, Navigation, Connection, and Diagnostic Services. OnStar® services may require a paid subscription. OnStar® requires the vehicle battery and electrical system, cellular service, and GPS satellite signals to be available and operating. OnStar® acts as a link to existing public emergency service providers. OnStar® may collect information about you and your vehicle, including location information. See OnStar®'s Terms and Conditions and Privacy Statement for more details including system limitations at www.OnStar.com (U.S.) or www.OnStar.ca (Canada). The OnStar® system status light is next to the OnStar® buttons. If the status light is:

- Solid Green: System is on.
- Flashing Green: On a call.
- Red: Indicates a problem.
- Off:  System is off. Press the blue OnStar® button twice to speak with an OnStar® Advisor.

Press  or call 1-888-4-ONSTAR (1-888-466-7827) to speak to an Advisor.

Press  to:

- Make a call, end a call, or answer an incoming call.
- Give OnStar® Hands-Free Calling voice commands.

NOTE: Do not activate OnStar® if you have no plans on using this feature

STANDARD MECHANICAL FEATURES

SERVICE PARTS IDENTIFICATION LABEL

SPID Label Content Now Included with Certification Label. The Service Parts Identification (SPID) label, often located in the trunk or glovebox of a vehicle, lists a vehicle's VIN, RPO codes and other information that identify the content of the vehicle. Beginning with the 2018 model year, much of this information will be available through a QR code on the Certification label.



Software to read the QR code is commonly available for any Android, iPhone or Windows smartphone. Many basic applications can be downloaded for free. Tested QR code readers that are easy to use include NeoReader by NM LLC, inigma by 3Gvision, QR Scanner by Honestly App, QR Droid by DroidLa and Bar-Code by PW2. GM does not recommend any particular software. Once the QR code is scanned, the vehicle information will appear in the following order: VIN, Model Year, Model, Build Month, Year, MOTORring Book, Vehicle Order Number, 3 Digit RPO Codes sorted alphanumerically, and the Paint Code (same code appears in the lower left of the QR code).

STABILITRAK CONTROL

The vehicle has a Traction Control System (TCS) and StabiliTrak/Electronic Stability Control (ESC), an electronic stability control system. These systems help limit wheel slip and assist the driver in maintaining control, especially on slippery road conditions.

TCS activates if it senses that any of the drive wheels are spinning or beginning to lose traction. When this happens, TCS applies the brakes to the spinning wheels and reduces propulsion system power to limit wheel spin.

StabiliTrak/ESC activates when the vehicle senses a difference between the intended path and the direction the vehicle is actually traveling. StabiliTrak/ESC selectively applies braking pressure to any one of the vehicle wheel brakes to assist the driver in keeping the vehicle on the intended path.

If TCS is limiting wheel spin when *g* is pressed, the system will not turn off until the wheels stop spinning.

If cruise control is being used and TCS or StabiliTrak/ESC begins to limit wheel spin, cruise control will disengage. Cruise control may be turned back on when road conditions allow.

Both systems come on automatically when the vehicle is started and begins to move. The systems may be heard or felt while they are operating or while performing diagnostic checks. This is normal and does not mean there is a problem with the vehicle.

It is recommended to leave both systems on for normal driving conditions, but it may be necessary to turn TCS off if the vehicle gets stuck in sand, mud, ice, or snow. See "Turning the Systems Off and On" later in this section.

Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Visibility, weather, and road conditions may affect feature performance. Read the vehicle's owner's manual for more important feature limitations and information.

STANDARD ELECTRICAL FEATURES

UNIVERSAL VEHICLE MODULE (UVM)


Provides CAN Readability of selected messages utilizing SAE J1939 formatting. This gateway module offers 10-switchable inputs and outputs, and includes a GUI (Graphical User Interface) SW available to customize the UVM to specific customer needs

UVM Application Examples:

- Police upfits that require underhood electrical center momentary start up feature to control the HVAC climate system for K9 vehicles.
- Large Fleet customers that use telematic equipment (Geotab) to monitor mileage and idle CAN bus messages for vehicle maintenance/service schedules.

4 Preprogrammed Commanded Features (Specified Input Voltage Range)

- Automatic Vehicle Start
 - Input request commands underhood electrical center start up for up to 8 hours or low fuel condition
- Shut Down Inhibit
 - Input request prevents underhood electrical center shutdown
- Increased Engine Idle
 - Input request commands engine idle to fixed RPM value
- Snow-Plow Support
 - Input request commands deactivation of conflicting active safety features
 - Input request headlamps to full dim status

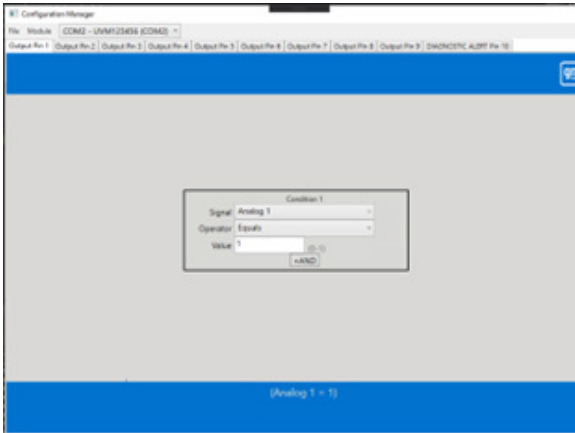

10 input/outputs configurable through GUI. Allows extensive customization of output activation criteria. Outputs are high side drive by default. Configurations can be read/write and stored for multiple vehicles. Various operating parameters available to read only. Downloadable software to configure the UVM from GM Upfitter.com

UVM Application Examples:

- Police upfits that require underhood electrical center momentary start up feature to control the HVAC climate system for K9 vehicles.
- Large Fleet customers that use telematic equipment (Geotab) to monitor mileage and idle CAN bus messages for vehicle maintenance/service schedules.



Module and user harness located right rear interior quarter panel.

STANDARD ELECTRICAL FEATURES

SURVEILLANCE MODE – SEO 5J3

The Blazer EV Police and Special Service Package has a Body Control Module (BCM) calibration which disables all automatic exterior and interior lighting.

When activated, with the exterior lamp control in the auto position, the exterior and interior lighting will be disabled or dimmed to a minimum federally regulated level.

For detailed technical information on activation of this feature, refer to the vehicle technical guide under the Body Builder Manuals section on www.gmupfitter.com.

RADIO MUTE FEATURE

A Radio Mute circuit (#10137) is provided to permit muting of the vehicle radio when an emergency vehicle radio is transmitting. It is the Gray/White blunt cut wire located between the front seats near the upfitter branch harness.

The following customer device electrical specifications must be met to avoid damage to the vehicle Exterior Lighting Module (ELM) input circuitry:

- No inductance allowed
- Maximum Load Capacitance: 600 nano-farads.
- Maximum Closed switch contact resistance: 20 ohms
- Minimum Open switch contact resistance: 100,000 ohms

EXTERIOR LAMPS EMERGENCY FLASHING SYSTEM

Standard 6J7 provides headlamp high beam flashing and rear lamps flashing via the Exterior Lighting Module (ELM). The exterior lamps flashing is activated by customer switching of ground circuits in the upfitter harness located between the front seats (CONSOL) in the rear cargo area (CARGO).

Headlamp high beam flashing is activated via connection of upfitter circuit 8863 to ground via customer switching. The headlamps and high beam indicator will flash alternately at 3 flashes per second. Rear lamps flashing is chosen by the customer to flash either Red-White alternately (Brake lamps and Reverse Lamps, grounding upfitter circuit 8865) or Red-Red alternately (Left and Right Brake Lamps, grounding upfitter circuit 8864). The rear lamps flash rate is 3 per second. Depressing the Brake pedal will override the brake lamp flashing and placing the transmission in Reverse will override the reverse lamps flashing.

During daylight conditions, the Daytime Running Lamps (DRL) are automatically turned off whenever the Lamp Flashing System is activated. During night time conditions the low beam headlamps and tail lamps automatically turn on while the high beams flash. Turning on the high beam headlamps will override high beam flashing. If Option 9G8 is present the low beam head lamps and tail lamps must be manually activated. The Center Mounted Stop Lamp will operate only when the service brakes are applied.

NOTES:

- Wiring connection or splice changes are to be removed before the vehicle is returned to civilian use.
- For wiring diagram see Wiring Section

PROTECTED IDLE

The Protected Idle Feature allows the vehicle to remain idling but will not allow the gear selector to be shifted from Park without a valid key fob.

ACTIVATING PROTECTED IDLE

Preconditions (All preconditions must be met.)

- Vehicle is in PROPULSION state
- Vehicle is in Parked State
- Vehicle speed is less than 4 kilometers per hour
- Valid key fob is present.

Activation

- Exit vehicle with key fob

Vehicle Feedback.

- Upon activation of Protected Idle, the Digital Information

Center (DIC) will display the following:

“Protected Idle ON”

“Park in Open Area”

“Take Your Key”

If any of the above preconditions are not met while activating Protected Idle, DIC will display the message: *“Protected Idle Unavailable”*

DEACTIVATING PROTECTED IDLE

Valid key fob is present

- Press brake pedal and shift out of Park OR
- Press the Ignition Switch with the Brake Pedal pressed.

DIC messages will turn off, indicating Protected Idle is no longer activated.

CONDITIONS UNDER WHICH THE PROTECTED IDLE WILL TURN OFF AND VEHICLE WILL TRANSITION TO OFF POWER MODE

- Brake pedal pressed without a valid key fob present **OR**
- Cruise Cancel Switch depressed without a valid key fob present **OR**
- Ignition Switch pressed without a valid key fob present **OR**
- With a valid key fob present, ignition switch is pressed and brake pedal is not pressed (the system treats this action as a customer request to turn OFF the vehicle.) **OR**
- Horn chirps occur. **OR**
- Low fuel condition. Horn chirps occur.

CONDITIONS UNDER WHICH THE PROTECTED IDLE WILL TURN OFF AND VEHICLE WILL TRANSITION TO RUN POWER MODE.

If the Shift Lock mechanism is defeated and shifted Out of Park while the Protected Idle is active, the vehicle will transition to the RUN power mode and Protected Idle will be deactivated and Horn chirps occur. DIC messages will turn off indicating Protected Idle is inactive.

ALWAYS PROPERLY SUPERVISE A VEHICLE WHEN PEOPLE OR ANIMALS ARE INSIDE.

OPTIONAL FEATURES



OPTIONAL FRONT AND REAR WHELEN CORNER LIGHTING

Shown with equipment from independent suppliers not covered by the GM New Vehicle Limited Warranty GM is not responsible for the safety or quality of independent supplier alterations.

OPTIONAL FEATURES



T53 REAR LIFTGATE WARNING LIGHTS




REAR CARGO AREA (SHOWN WITH FALSE CARGO FLOOR) REMOVED.

Shown with equipment from independent suppliers not covered by the GM New Vehicle Limited Warranty GM is not responsible for the safety or quality of independent supplier alterations.

OPTIONAL FEATURES

7X3 LED SPOTLAMP

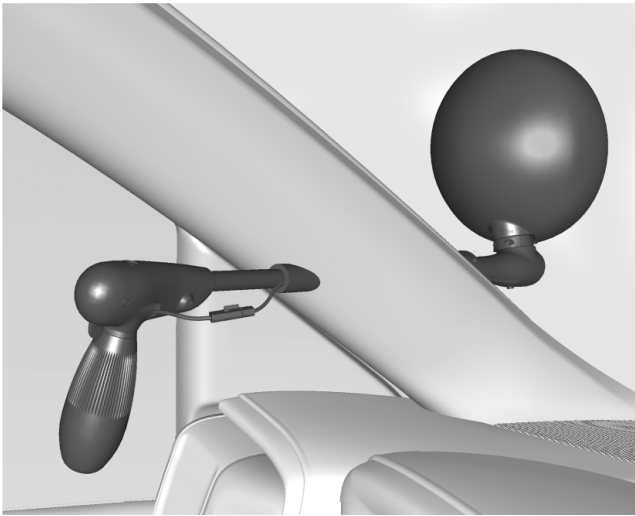

A Unity Series X335, high intensity, LED 15 cm (6 in) spotlamp is mounted in the left windshield A pillar (SEO 7X3). The lamps are each protected by a 15 amp fuse in the underhood Battery Disconnect Unit (BDU). See your dealer or www.gmupfitter.com for lamp replacement procedures.

SDE TRAILER HITCH PANEL



Class 2, 2" receiver.

6C7


AUXILIARY DOME LAMP



Auxiliary dome lamp is located on the headliner to the rear of the overhead console and is switched at the rear lamp base. Lamp is wired separately standard dome lamps with red and white LED bulbs.


OPTIONAL FEATURES

6N5 SWITCHES - REAR WINDOW INOPERATIVE

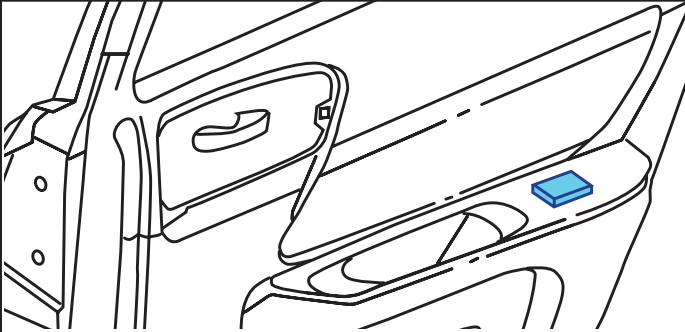

Calibration for rear windows to operate from drivers position only. Rear door window switches are inoperable. Rear door power regulators are operable only from driver position switches. Rear door window lockout switch remains illuminated in all positions when equipped with this feature.

6N6 REAR DOOR LOCKS AND HANDLES INOPERATIVE

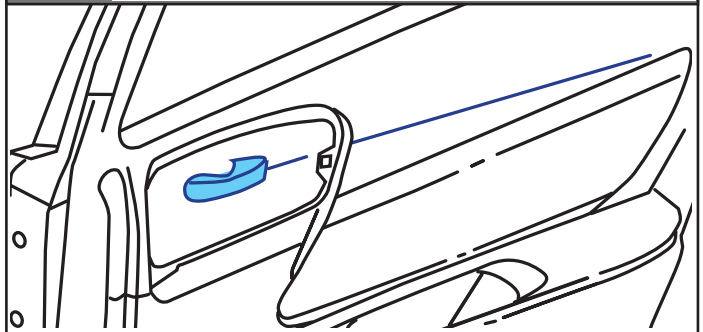

Rear door locking rods are disabled. Rear door locks are inoperable at rear doors, but operate from driver position. Inside rear door handles are disconnected. Rear doors can only be opened from the outside.

6E2

FLEET KEY & REMOTE FOB

6E8

The fleet key fob feature allows the user to program a fob to be recognized by a particular vehicle for full remote functionality (Lock/Unlock and Remote Start if equipped). Use of this remote on other fleet keyed-a-like vehicles will be limited to unlocking the driver's door by pressing the exterior door handle button and starting the vehicle once inside. The remote lock/unlock and remote start (if equipped) buttons will not function unless the operator uses the Driver Information Center (DIC) to program the newly introduced fob. Note that a vehicle is only capable of recognizing the last 8 key fobs programmed for full remote capability. Adding a 9th remote fob will bump fob #1 remote functionality until it is reprogrammed through the DIC, adding remote #1 back into the DIC will bump fob #2 remote button functionality, etc. There are no limitations to the amount of fleet keys that will be recognized to access and start the vehicle. Programming a newly introduced fleet fob through the DIC is required to use the Protected Idle feature. Requires AMF. Includes Fleet Common Key (AU7) and UTQ.

AMF

PACKAGE OF FOUR UNPROGRAMMED KEYS/FOBS

An unlimited number of KEYS/FOBS can be learned for Keyless start and Keyless open, only the last 8 KEYS/FOBS learned will have the key fob buttons work for that vehicle. The programming procedure for SEO AMF KEYS/FOBS requires that one previously learned key fob be present in the vehicle. One learned key fob is required for this procedure.

NOTE: If a previously learned key fob is not available, the programming of the new KEYS/FOBS must be performed by a dealer using the Service Programming System (SPS). Key fob programming is not a warranty item and programming is conducted by the customer or at a dealer at customer expense.

PROGRAMMING PROCEDURE:

1. Using the learned key fob, turn the ignition ON. The transmission selector must be in PARK.
2. Using the SELECT and other buttons on the right side of the steering wheel, open the Driver Information Center (DIC) Main Menu. Scroll down to Main Menu item OPTIONS with the lower steering wheel button and then SELECT. Scroll to REMOTE KEY RELEARN and Select START. The DIC will display LEARNING ACTIVE.
3. For vehicles equipped with AZ3 front row seating place the FOBs in the pocket inside the center seat console. For vehicle equipped with 5Y1 front row center 20% seat/console delete place the FOBs on top of the the SDM cover.
4. Press the start button to learn the key fob. The DIC will display "ready for Key #" where # is the next key fob to be learned.
5. Verify that key fob is learned by operating the door locks remotely.
6. Repeat Step 3 through 5 to learn the next key fob.
7. To exit key fob learning mode, press and hold the start button for approximately 15 seconds.

9G8

DRL & AHC DISABLED

Daytime Running Lamps (DRL) and Automatic Headlamp Control (AHC) are deleted. Also disables automatic interior courtesy lighting. See your dealer to restore the DRL and AHC to normal operation. With 9G8, the instrument cluster displays are dimmable only when the exterior lamp control is in the parking lamp or headlamp position.

UTQ THEFT DETERRENT DISABLE

Theft-deterrent system content is disabled. The alarm and horn become non-functional in an attempt of theft to the vehicle (recommended for vehicles utilizing 6E2 or 6E8 key codes).

WIRING

Original Equipment Alterations: Limited warranty does not cover any damage or failure resulting from modification or alteration to the vehicle's original equipment as manufactured or assembled by General Motors. Examples of the types of alterations that would not be covered include: installation or use of any non-GM part, accessory, materials, or the cutting, welding or disconnecting of the vehicle's original equipment parts and components. Any upfit device¹ connected to the open ended blunt cut circuits should be fuse protected per the "Wire Gage Table" on page 45

K219 - Lighting Control Module
 DRZ - A10 - Inside Rearview Mirror
 A11 - Radio
 E7L - Rear License Plate Lamp –Left
 E7R - Rear License Plate Lamp –Right
 E73L - Rear Fascia Signal Lamp –Left A90 Logic
 E73R - Rear Fascia Signal Lamp –Right A90 Logic
 E6 - High Mount Stop Lamp
 R44 - Radio AM Antenna Signal Filter Module – Center High Mounted Stop Lamp

KEY FOR ACRONYMS AND TERMS

CONSOL = SPACE BETWEEN FRONT SEATS
 CARGO = CARGO AREA LEFT SIDE
 IP RY CTR = IP RELAY CENTER ABOVE AND TO RIGHT OF BRAKE PEDAL
 EBCM = ELECTRIC BRAKE CONTROL MODULE
 4K PPM = 4000 PULSES PER MILE SPEED SIGNAL
 ACCY = ACCESSORY
 SURVEILLANCE = ALL AUTOMATIC LIGHTING DISABLED WHEN ACTIVATED
 PARK ENABLE = PARK RELAY ACTIVATED
 CHML = CENTER HIGH MOUNTED STOP LAMP; ON WHEN BRAKES APPLIED
 BCM = BODY CONTROL MODULE
 ELM = EXTERIOR LIGHT MODULE
 WDO = WINDOW
 SYNC = SYNCHRONIZED

WIRING


| GM Option Code | Wire Gage [mm^2] | Console Connector Terminal | Cargo Connector Terminal | Wire Color | Circuit Name /Circuit # |
|--------------------------------|------------------|------------------------------------|-----------------------------|--------------------------|---|
| 6J3 | 0.8 | 13533797 Terminal 2 | 13533797 Terminal 2 | Brown | 8855-Police Front Grille Light 1 Power |
| 6J3 | 0.8 | 13533797 Terminal 3 | 13533797 x 1 Terminal 3 | Brown/Blue | 8856-Police Front Grille Light 2 Power |
| 6J3 | 0.8 | 13533797 Terminal 4 | 13533797 x 1 Terminal 4 | Black/Brown | 8857-Police Front Grille Light Return |
| 6J3 | 0.8 | 13533797 x 1 Terminal 5 | 13533797 x 1 Terminal 5 | White | 8858-Police Front Grille Light Synchronization |
| 6J3 | 0.8 | 13533797 x 1 Terminal 6 | 13533797 x 1 Terminal 6 | Brown/Yellow | 8859-Police Front Grille Light Steady Burn Activation |
| 6J3 | 0.8 | 13533797 x 1 Terminal 7 | 13533797 x 1 Terminal 7 | White/Black | 8860-Police Front Grille Spare 1 |
| 6J3 | 1.5 | 13533797 x 1 Terminal 36 | 13533797 x 1 Terminal 36 | Green/White | 8861-Police Front Grille Speaker + |
| 6J3 | 1.5 | 13533797 x 1 Terminal 37 | 13533797 x 1 Terminal 37 | Blue/White | 8862-Police Front Grille Speaker - |
| 6J7 | 0.35 | 13533797 x 1 Terminal 8 | 13533797 x 1 Terminal 8 | Green | 8863-Police High Beam Alternate Flash Enable. |
| 5L0 | 0.35 | 13533797 x 1 Terminal 9 | 13533797 x 1 Terminal 9 | Blue/Green | 8864-Police Tail Lamp Red/Red Alternate Flash Enable. |
| 5J9 | 0.35 | 13533797 x 1 Terminal 10 | 13533797 x 1 Terminal 10 | Gray/Green | 8865-Police Tail Lamp Red/White Alternate Flash Enable. |
| T53 | 0.8 | X1 - 13533797 Terminal 11 | X1 - 13533797 Terminal 11 | White | 8867-Police Liftgate Strobe Synch |
| T53 | 0.35 | X1 - 13533797 Terminal 12 | X1 - 13533797 Terminal 12 | Violet/Yellow | 8868-Police Liftgate Strobe Enable 1 |
| T66 left front | 0.75 | None | X1 - 13544146 - Terminal 1 | Violet | 8870-Police Left Mirror Light Power |
| T66 left front | 0.75 | None | X1 - 13544146 - Terminal 2 | Black/Violet | 8871-Police Left Mirror Light Return |
| T66 left front | 0.75 | None | X1 - 13544146 - Terminal 3 | White/Violet | 8872-Police Left Mirror Light Synchronization |
| T66 left front | 0.75 | None | X1 - 13544146 - Terminal 4 | Blue/Violet | 8873-Police Left Mirror Light Steady Burn |
| T66 left front | 0.75 | None | X1 - 13544146 - Terminal 5 | Yellow/Violet | 8874-Police Left Mirror Light Flash Enable |
| T66 left rear | 0.75 | None | X1 - 13544146 - Terminal 6 | Green | 8875-Police Left Rear Window Light Power |
| T66 left rear | 0.75 | None | X1 - 13544146 - Terminal 7 | Black/Green | 8876-Police Left Rear Window Light Return |
| T66 left rear | 0.75 | None | X1 - 13544146 - Terminal 8 | White/Green | 8877-Police Left Rear Window Light Synchronization |
| T66 left rear | 0.75 | None | X1 - 13544146 - Terminal 9 | Blue/Green | 8878-Police Right Rear Window Light Steady Burn |
| T66 left rear | 0.75 | None | X1 - 13544146 - Terminal 10 | Yellow/Green | 8879-Police Right Rear Window Light Flash Enable |
| T66 right front | 0.75 | None | X1 - 13544146 - Terminal 11 | Gray | 8880-Police Right Mirror Light Power |
| T66 right front | 0.75 | None | X1 - 13544146 - Terminal 12 | Black/Gray | 8881-Police Right Mirror Light Return |
| T66 right front | 0.75 | None | X1 - 13544146 - Terminal 13 | White/Gray | 8882-Police Right Mirror Light Synchronization |
| T66 right front | 0.75 | None | X1 - 13544146 - Terminal 14 | Blue/Gray | 8883-Police Right Mirror Light Steady Burn |
| T66 right front | 0.75 | None | X1 - 13544146 - Terminal 15 | Yellow/Gray | 8884-Police Right Mirror Light Flash Enable |
| T66 right rear | 0.75 | None | X1 - 13544146 - Terminal 16 | Brown | 8885-Police Right Rear Window Light Power |
| T66 right rear | 0.75 | None | X1 - 13544146 - Terminal 17 | Black/Brown | 8886-Police Right Rear Window Light Return |
| T66 right rear | 0.75 | None | X1 - 13544146 - Terminal 18 | White/Brown | 8887-Police Right Rear Window Light Synchronization |
| T66 right rear | 0.75 | None | X1 - 13544146 - Terminal 19 | Blue/Brown | 8888-Police Right Rear Window Light Steady Burn |
| T66 right rear | 0.75 | None | X1 - 13544146 - Terminal 20 | Yellow/Brown | 8889-Police Right Rear Window Light Flash Enable |
| UT7 / 6J1 | 5 | 13533168 x1 for pwr and grd term 2 | NA | Black | 7150-Ground (71) Police |
| 6J1, Police Provisions (Rear) | 5 | 13533168 | | RD/GN | 742-Primary Fused Battery Positive Voltage (7) |
| 6J8/9/G/E | 1 | None | X1 - 13533797 Terminal 29 | Blue | 8890-Police Front Corner Light Power |
| 6J8/9/G/E | 1 | None | X1 - 13533797 Terminal 31 | Blue/White | 8891-Police Corner Strobe Synchronization |
| 6J8/9/G/E | 1 | None | X1 - 13533797 Terminal 38 | Green | 8892-Police Rear Corner Light Power |
| 6J8/9/G/E | 1 | None | X1 - 13533797 Terminal 34 | Violet | 8893-Police Front Corner Strobe Power |
| 6J8/9/G/E | 1 | None | X1 - 13533797 Terminal 30 | BN/WH | 8915 |
| 6J8/9/G/E | 1 | None | X1 - 13533797 Terminal 35 | Yellow | 8894-Police Rear Corner Strobe Power |
| WX7 | 0.5 | NA | NA | See K2 Tahoe wire colors | 201 |
| WX7 | 0.5 | NA | NA | See K2 Tahoe wire colors | 118 |
| WX7 | 0.5 | NA | NA | See K2 Tahoe wire colors | 200 |
| WX7 | 0.5 | NA | NA | See K2 Tahoe wire colors | 117 |
| WX7 | 0.5 | NA | NA | See K2 Tahoe wire colors | 199 |
| WX7 | 0.5 | NA | NA | See K2 Tahoe wire colors | 116 |
| WX7 | 0.5 | NA | NA | See K2 Tahoe wire colors | 46 |
| WX7 | 0.5 | NA | NA | See K2 Tahoe wire colors | 115 |
| T53 | 0.8 | NA | NA | Violet | 8866-Police Liftgate Strobe Power |
| T53 | 0.8 | NA | NA | Black | 7650-Ground (76) Police |
| T53 | 0.35 | NA | NA | Violet/Green | 8869-Police Liftgate Strobe Rear On OFF |
| 7X3 | 0.75 | | | RD/GN | 10240-Secondary Fused Battery Positive Voltage (102) Police |
| 7X3 | 0.75 | | | Black | 7750-Ground (77) Police |
| 7X3 | 0.75 | | | RD/GY | 10340-Secondary Fused Battery Positive Voltage (103) Police |
| 7X3 | 0.75 | | | Black | 7850-Ground (78) Police |
| 6C7 Aux. dome lamp | 0.75 | | | D/BU | 10140-Secondary Fused Battery Positive Voltage (101) Police |
| 6C7 Aux. dome lamp | 0.75 | | | Black | 7550-Ground (75) Police |
| 6J4 | 0.35 | | | BN/WH | Circuit 28 |

WIRING

| GM Option Code | Wire Gage [mm ²] | Console Connector Terminal | Cargo Connector Terminal | Wire Color | Circuit Name /Circuit # |
|--|------------------------------|----------------------------|-----------------------------|---------------|--|
| 9C1/ 9C3 , Police Provisions, console area | 0.5 | X1 - 13533797 Terminal 28 | Na | Blue/Yellow | 8895-Police Relay 1 Control |
| 9C1/ 9C3 , Police Provisions, console area | 1 | X1 13533797 Terminal 32 | NA | RD/GN | 8911-Police Select Supply Voltage 1 |
| 9C1/ 9C3 , Police Provisions, console area | 0.5 | X1 - 13533797 Terminal 29 | NA | Green/Yellow | 8896-Police Relay 2 Control |
| 9C1/ 9C3 , Police Provisions, console area | 1 | 13533797 Terminal 33 | NA | RD/GY | 8912-Police Select Supply Voltage 2 |
| 9C1/ 9C3 , Police Provisions, console area | 10 | NA | 13533168 x1 for pwr and grd | RD/VT | 842-Primary Fused Battery Positive Voltage (8) |
| 6J1 , Police Provisions, console area | 10 | NA | 13533168 x1 for pwr and grd | Black | 7350-Ground (73) Police |
| 6J1 , Police Provisions, console area | 0.5 | X1 - 13533797 Terminal 13 | X1 - 13533797 Terminal 13 | | Circuit 817 |
| 6J1 , Police Provisions, console area | 0.5 | X1 - 13533797 Terminal 14 | X1 - 13533797 Terminal 14 | | Circuit 2801 |
| 6J1 , Police Provisions, console area | 0.5 | X1 - 13533797 Terminal 15 | X1 - 13533797 Terminal 15 | | 4939-Run/Crank Ignition 1 Voltage (49) |
| 6J1 , Police Provisions, console area | 0.35 | X1 - 13533797 Terminal 16 | X1 - 13533797 Terminal 16 | | Circuit 8917 |
| 6J1 , Police Provisions, console area | 0.35 | X1 - 13533797 Terminal 18 | X1 - 13533797 Terminal 18 | | Circuit 6821 |
| 6J1 , Police Provisions, console area | 0.5 | X1 - 13533797 Terminal 19 | X1 - 13533797 Terminal 19 | | Circuit 820 |
| 6J1 , Police Provisions, console area | 0.5 | X1 - 13533797 Terminal 20 | X1 - 13533797 Terminal 20 | | Circuit 5813 |
| 6J1 , Police Provisions (Rear) I | 0.5 | NA | X1 - 13533797 Terminal 21 | Gray/Yellow | 8897-Police Relay 3 Contro |
| 8907-Police Select Fuse Supply Voltage 3 | 2.5 | NA | X1 13533797 Terminal 1 | RD/WH | 8913- Select fuse supply voltage |
| 8898 6J1 , Police Provisions (Rear) | 0.5 | NA | X1 - 13533797 Terminal 32, | Violet/Yellow | 8898-Police Relay 4 Control |
| 8914-Police Select Fuse Supply Voltage 4 | 2.5 | NA | X1 13533797 Terminal 17 | RD/YE | 8914- Select fuse supply voltage |
| (9C1/9C1) Steering wheel switches | 0.35 | X1 - 13533797 Terminal 22 | X1 - 13533797 Terminal 22 | BN/GY | 8021-Police Microphone Enable |
| (9C1/9C1) Steering wheel switches | 0.35 | X1 - 13533797 Terminal 23 | X1 - 13533797 Terminal 23 | Grey/Violet | 8022-Police Roof Lamp Control |
| Radio mic. | 0.5 | X1 - 13533797 Terminal 24 | X1 - 13533797 Terminal 24 | Black | 7450-Ground (74) Police |
| Radio mic. | 0.5 | X1 - 13533797 Terminal 25 | X1 - 13533797 Terminal 25 | Blue/White | 8899-Police Microphone Data |
| Radio mic. | 0.5 | X1 - 13533797 Terminal 26 | X1 - 13533797 Terminal 26 | Blue/Violet | 8900-Police Microphone Input |
| Dimmer function for Instrument Panel | 0.8 | X1 - 13533797 Terminal 27 | X1 - 13533797 Terminal 27 | YE | Circuit 6817 |

WIRING

XP2 UPFITTER WIRING HARNESS

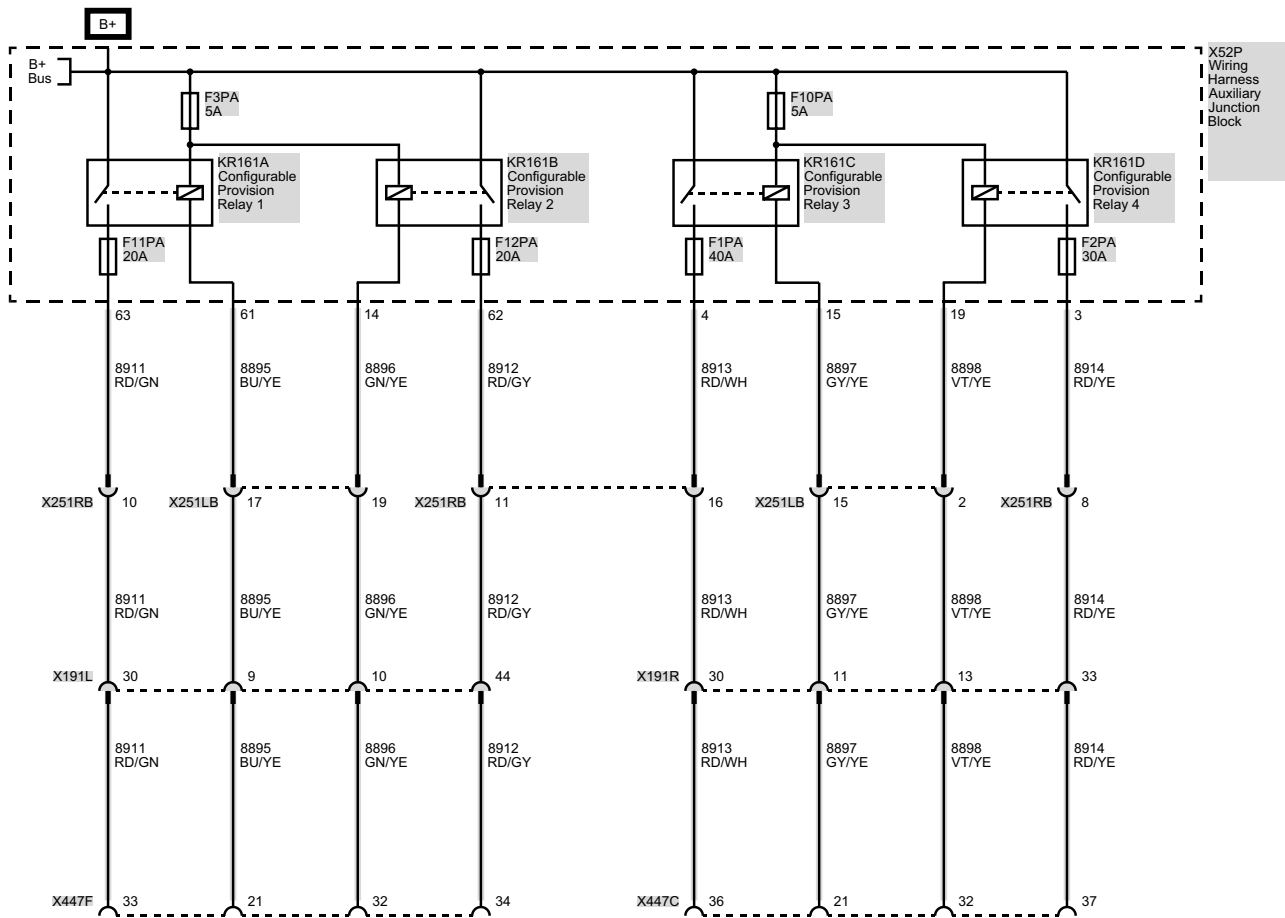


CONNECTOR BETWEEN FRONT SEATS

CONNECTOR IN REAR CARGO AREA




Located under console

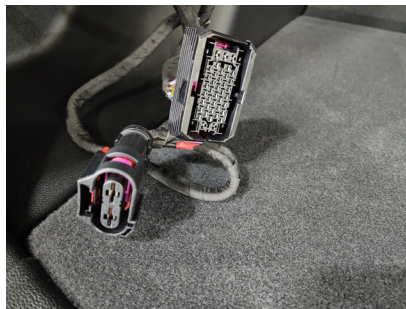

Located behind left rear cargo trim


WIRING

MAIN FUSE POWER, ACCESSORY RUN, VEHICLE SPEED

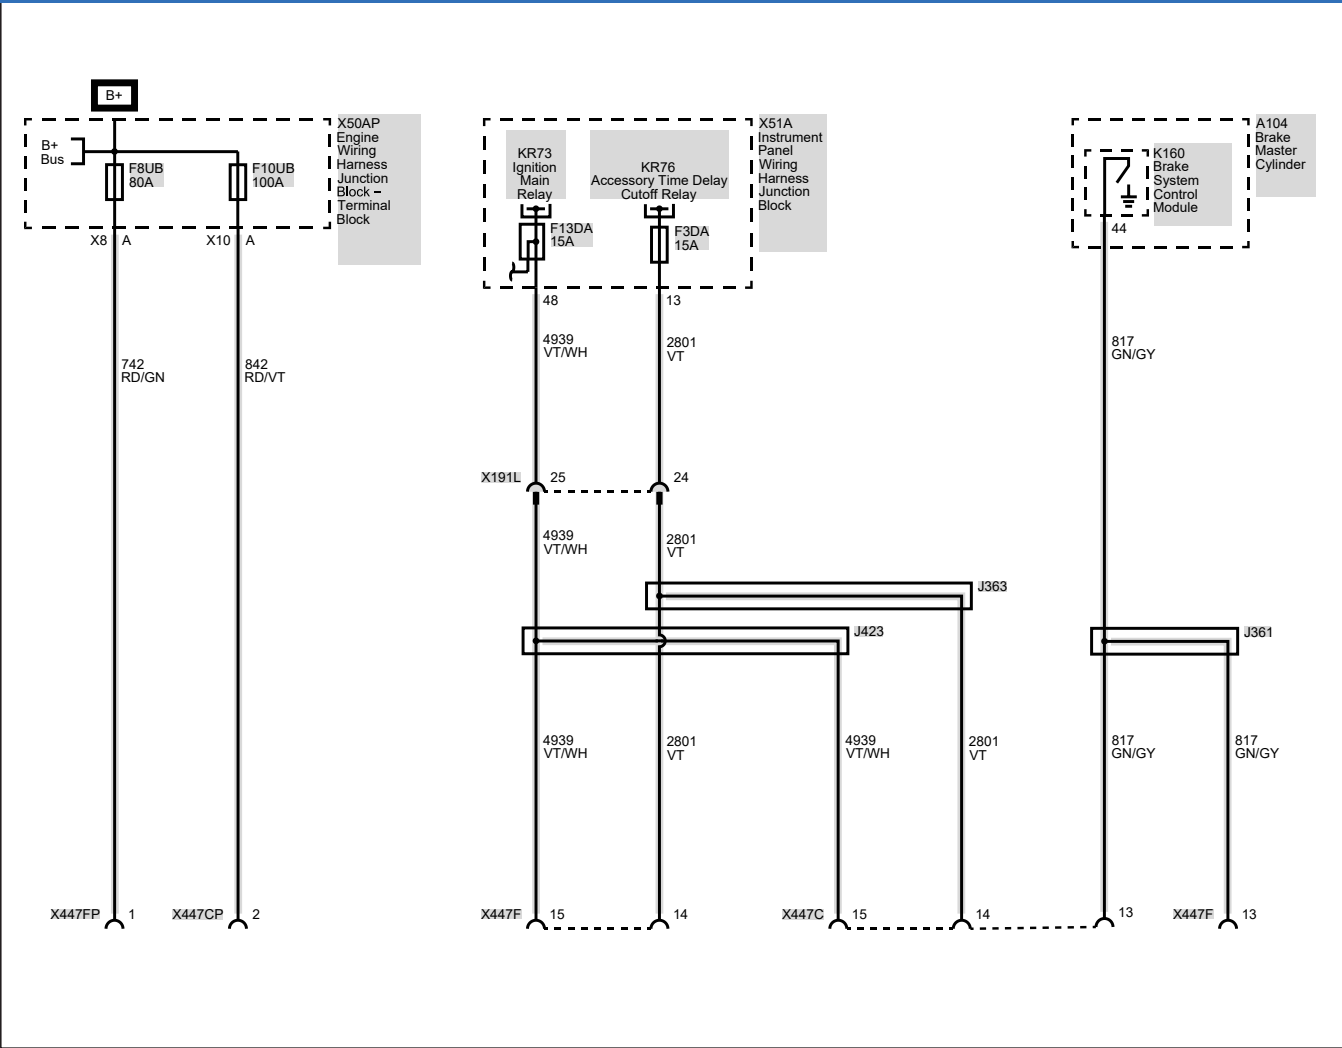


WIRING

KGU UNIVERSAL VEHICLE MODULE

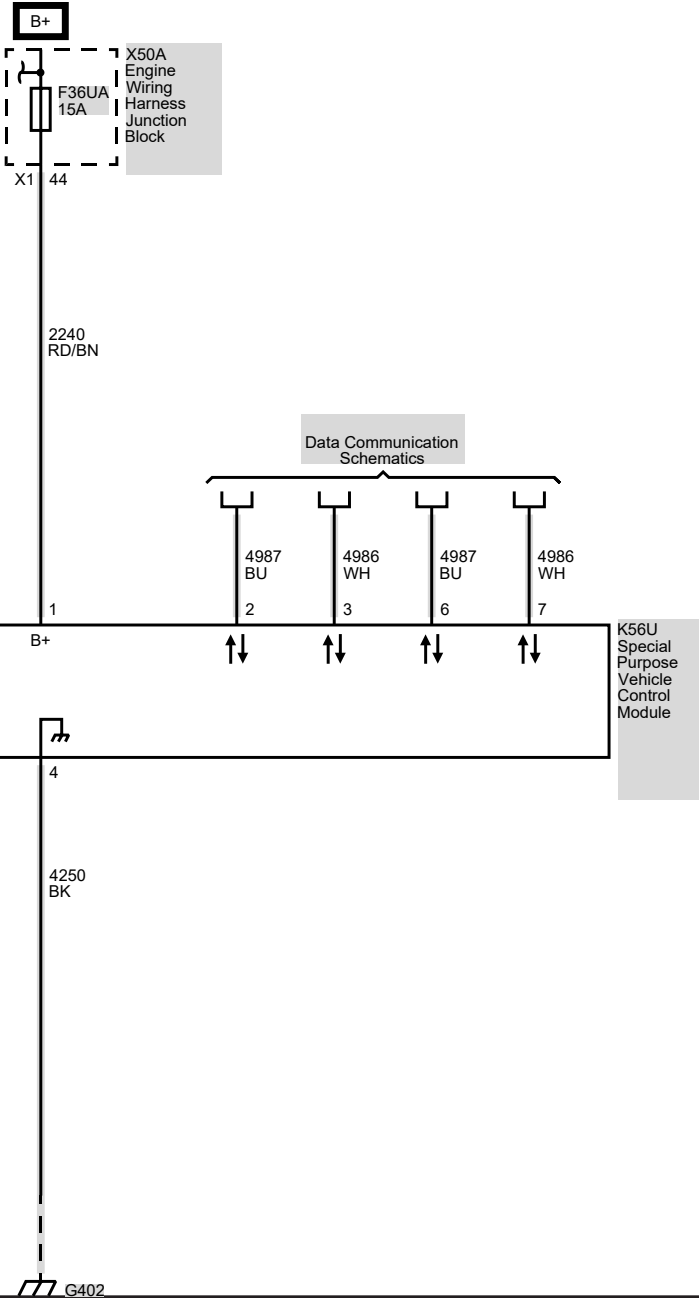


WIRING

REPURPOSED STEERING WHEEL SWITCHES

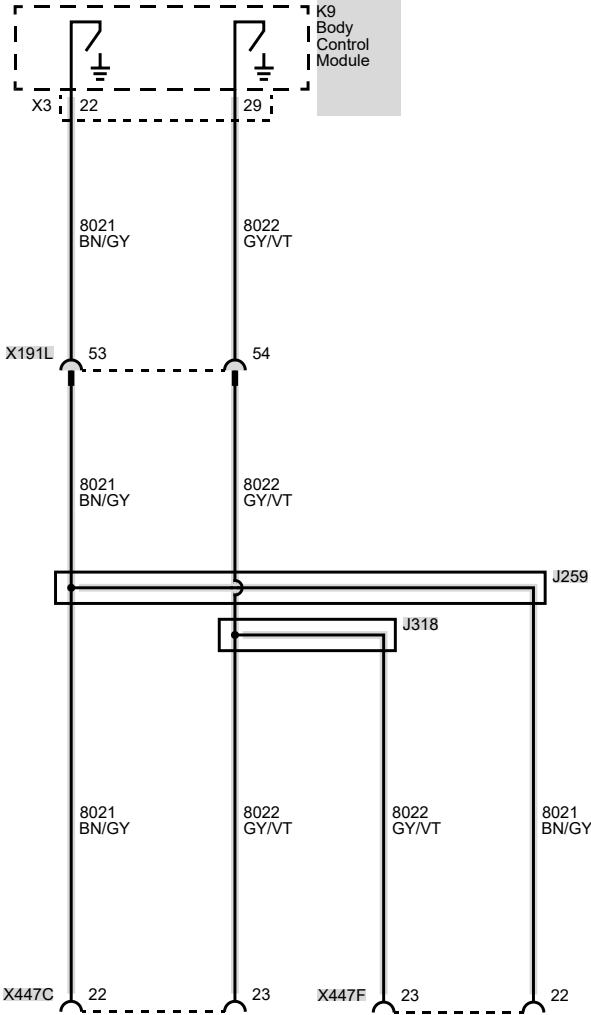


WIRING

BCM SIGNAL PROVISIONS

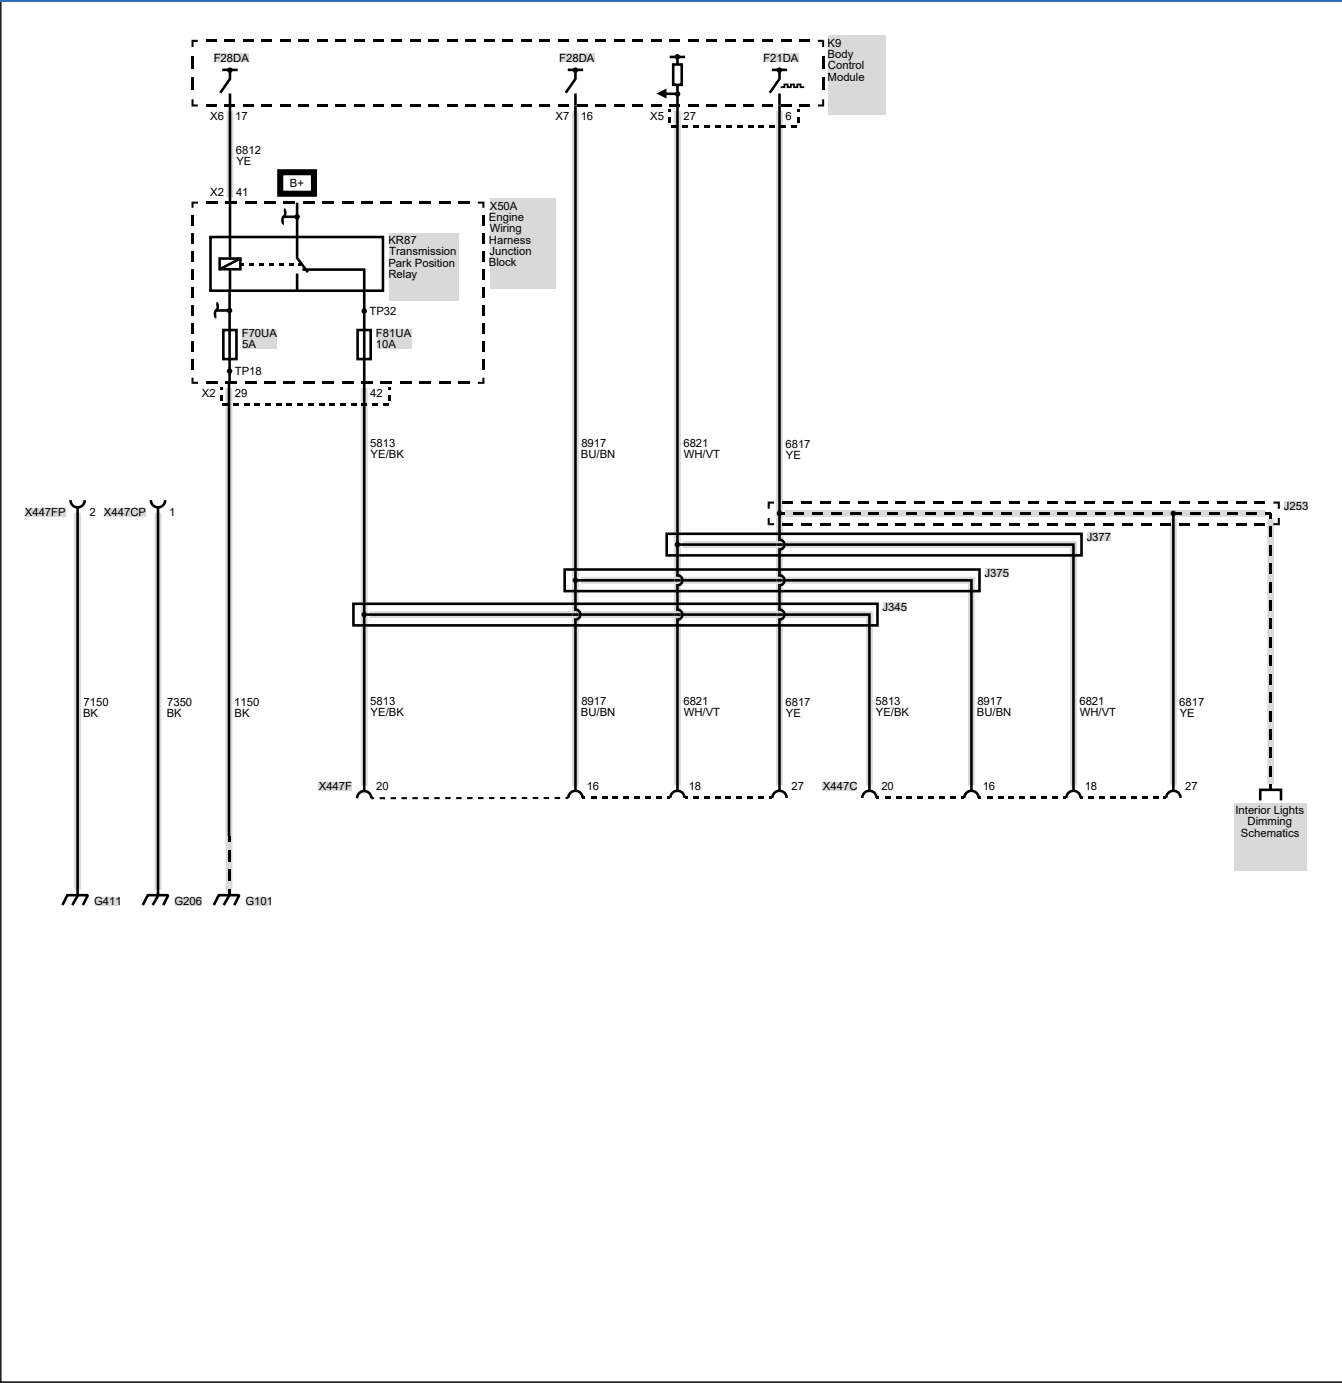


WIRING

RADIO MICROPHONE PROVISIONS

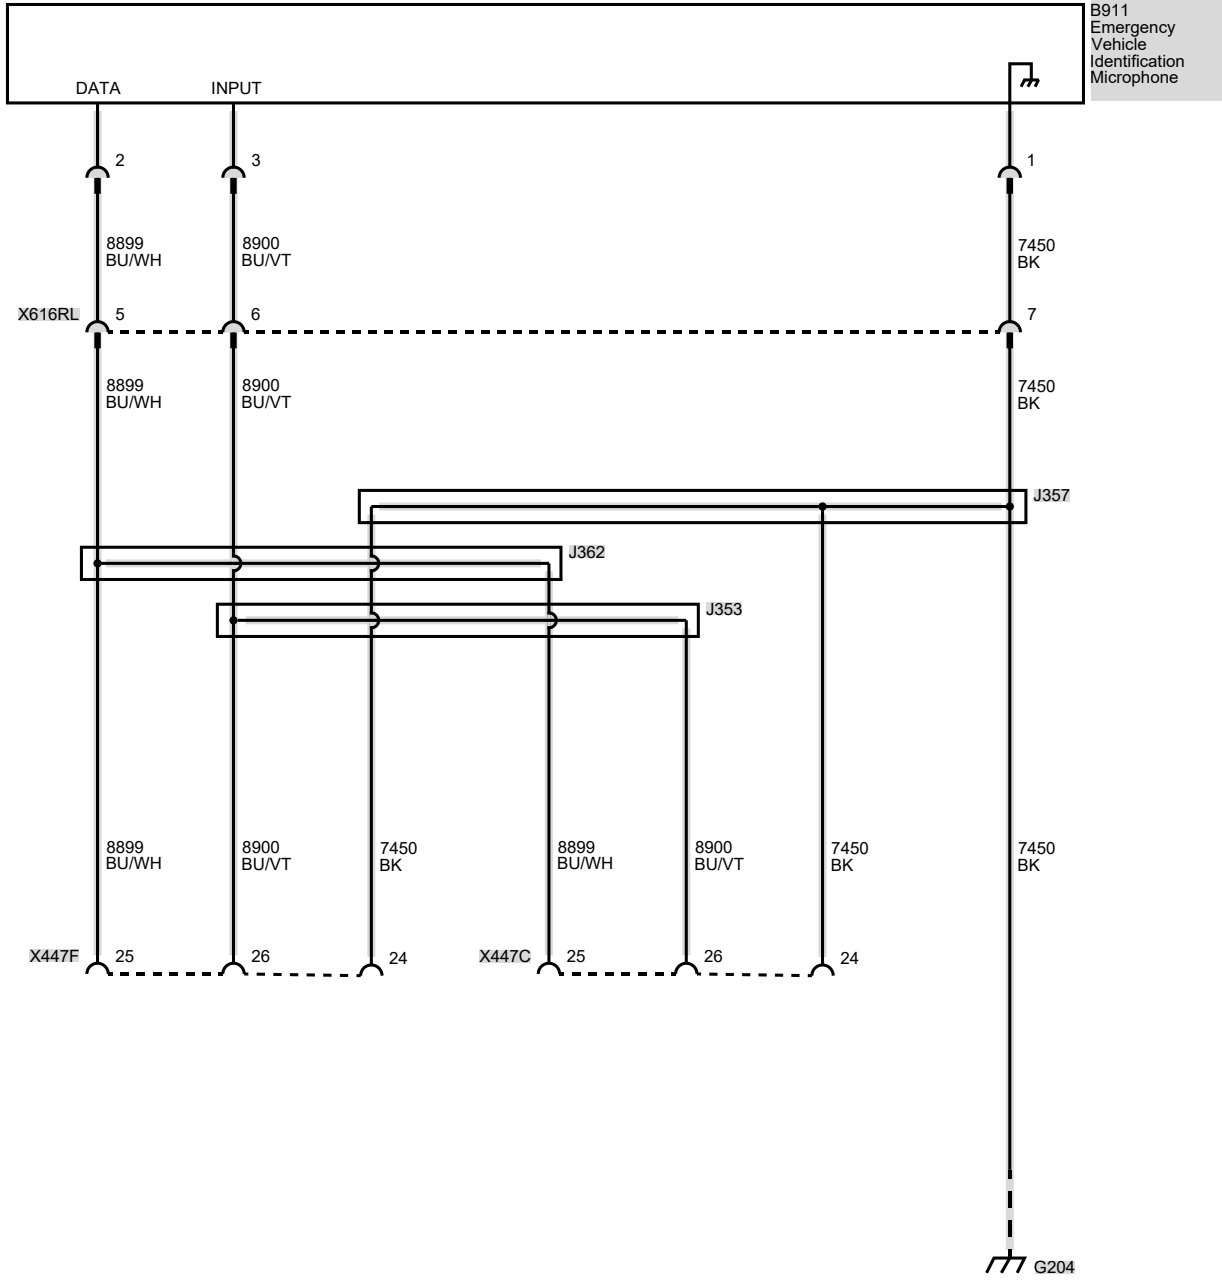


WIRING

6JE / 6JG / 6J8 / 6J9 EMERGENCY VEHICLE CORNER STROBE LIGHTS FRONT

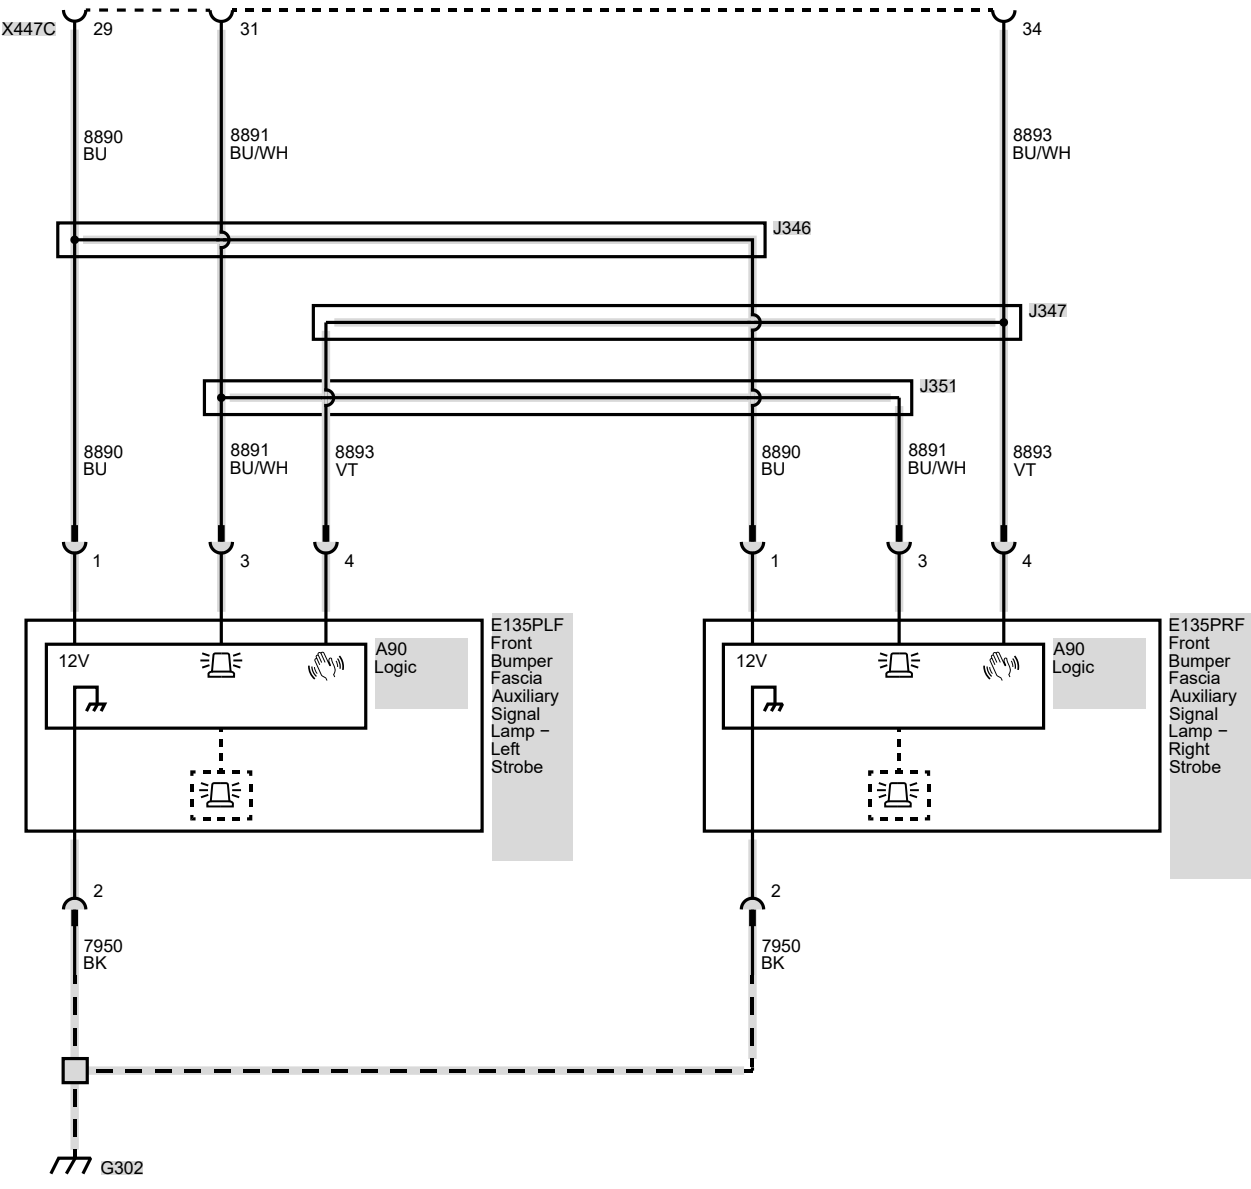


WIRING

6JE / 6JG / 6J8 / 6J9
EMERGENCY VEHICLE CORNER STROBE LIGHTS REAR

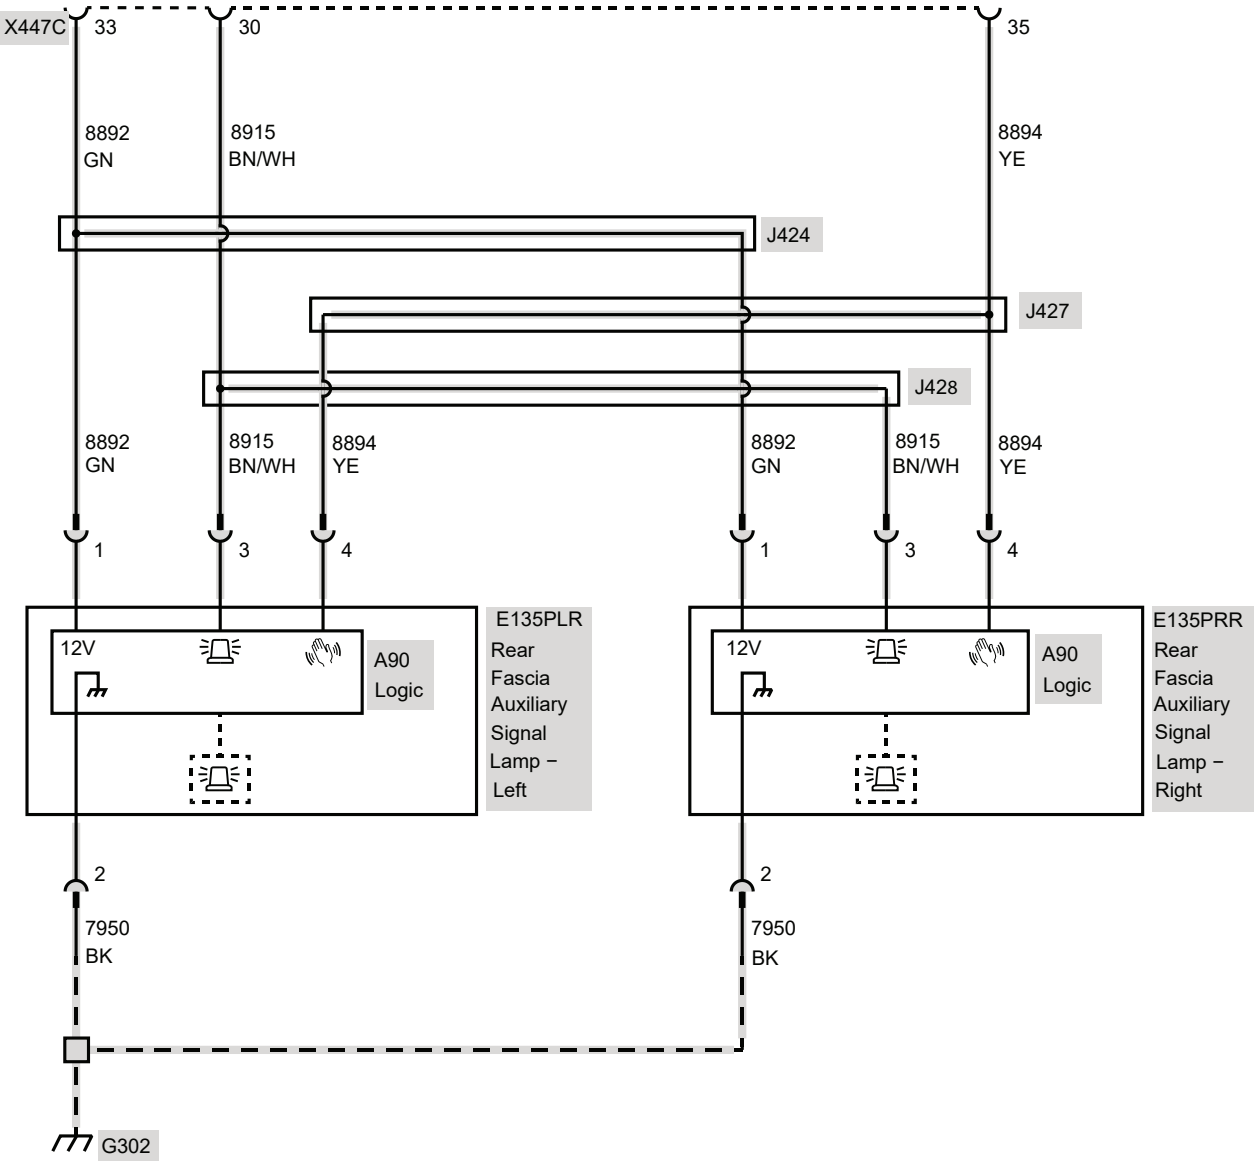


OPTIONAL WIRING

6J3 - GRILLE LAMPS AND SIREN SPEAKER PROVISIONS

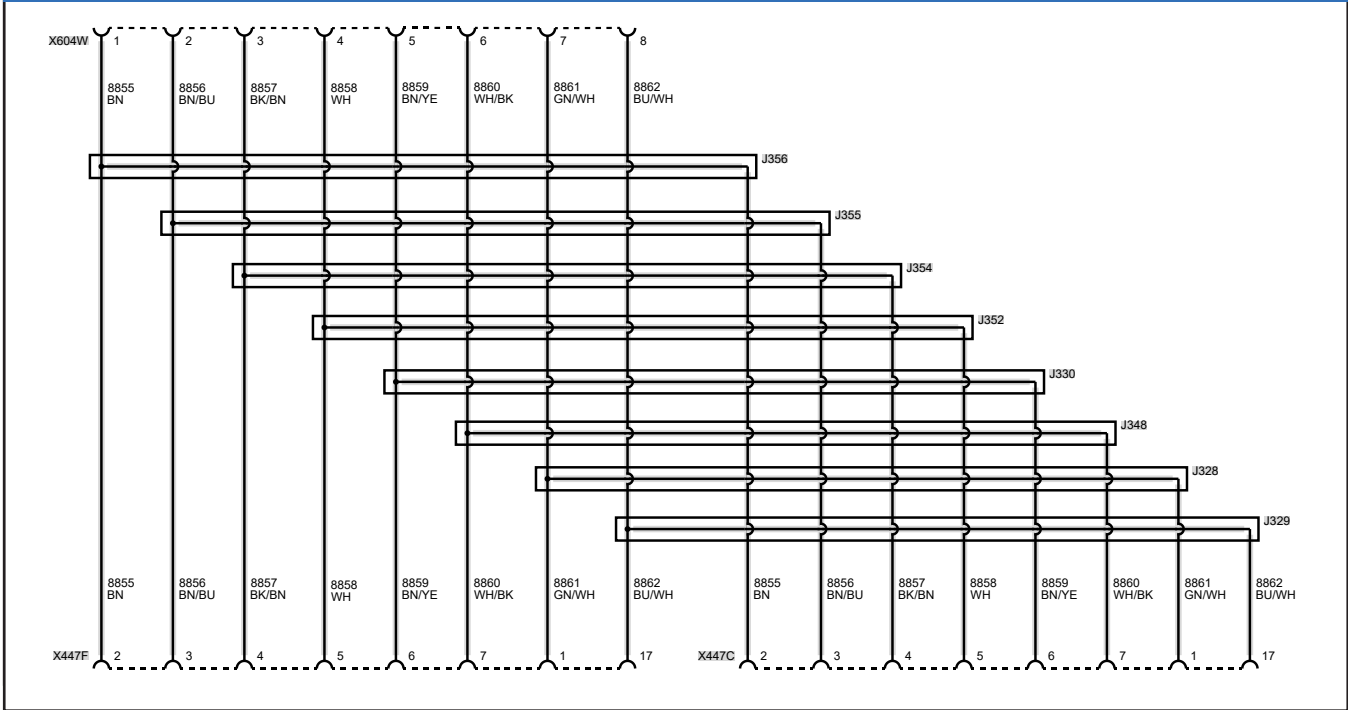


FRONT MIRROR AND REAR WINDOW FLASHER PROVISIONS

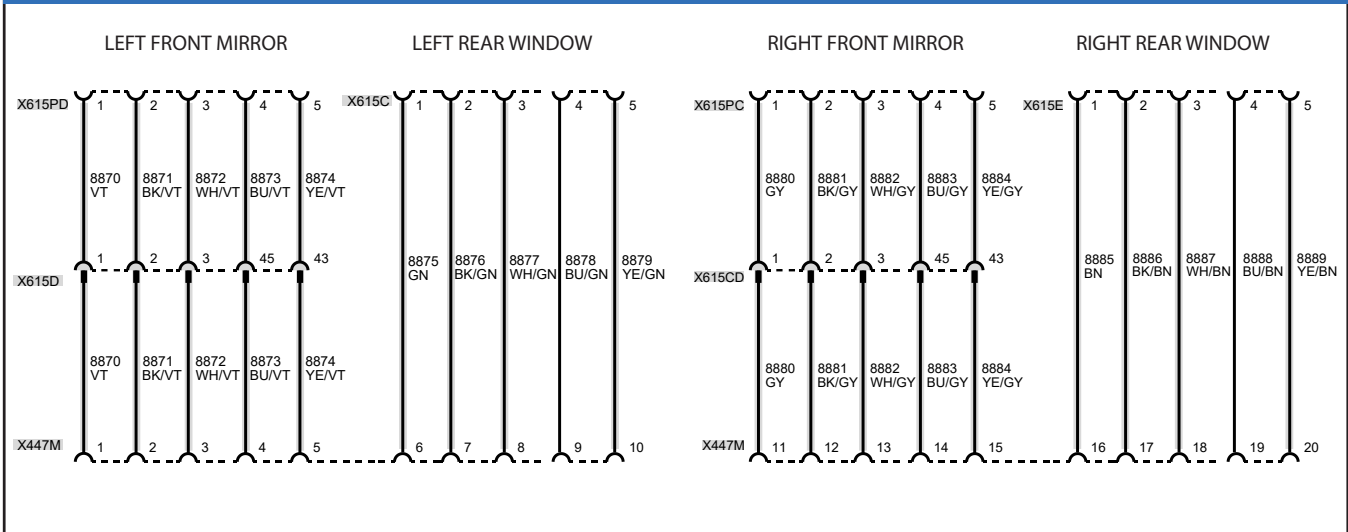


WIRING

6J7, 5LO & 5J9 - HEADLAMPS AND REAR LAMPS FLASHING SYSTEM PROVISIONS

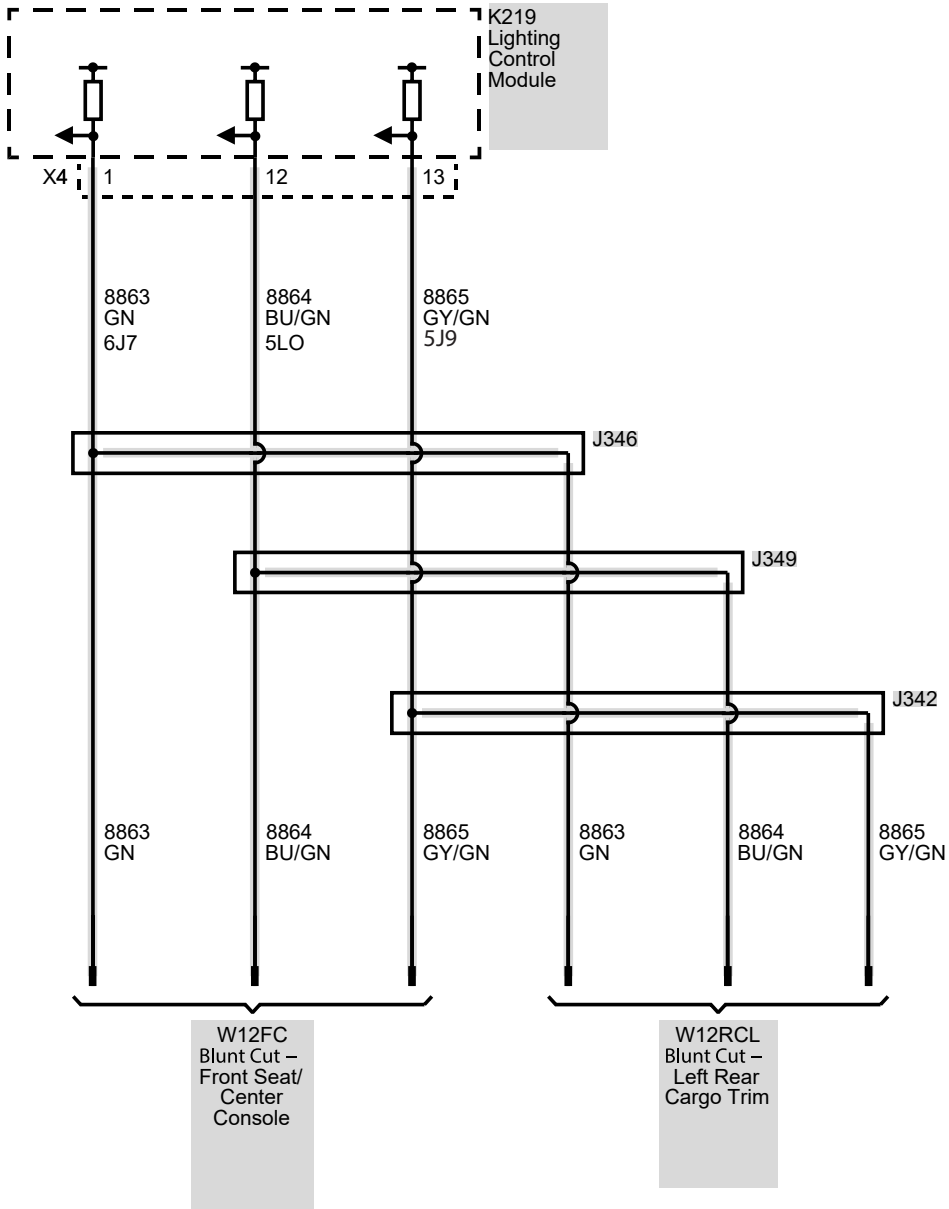


OPTIONAL WIRING

WX7 FRONT DOOR SPEAKERS PROVISIONS

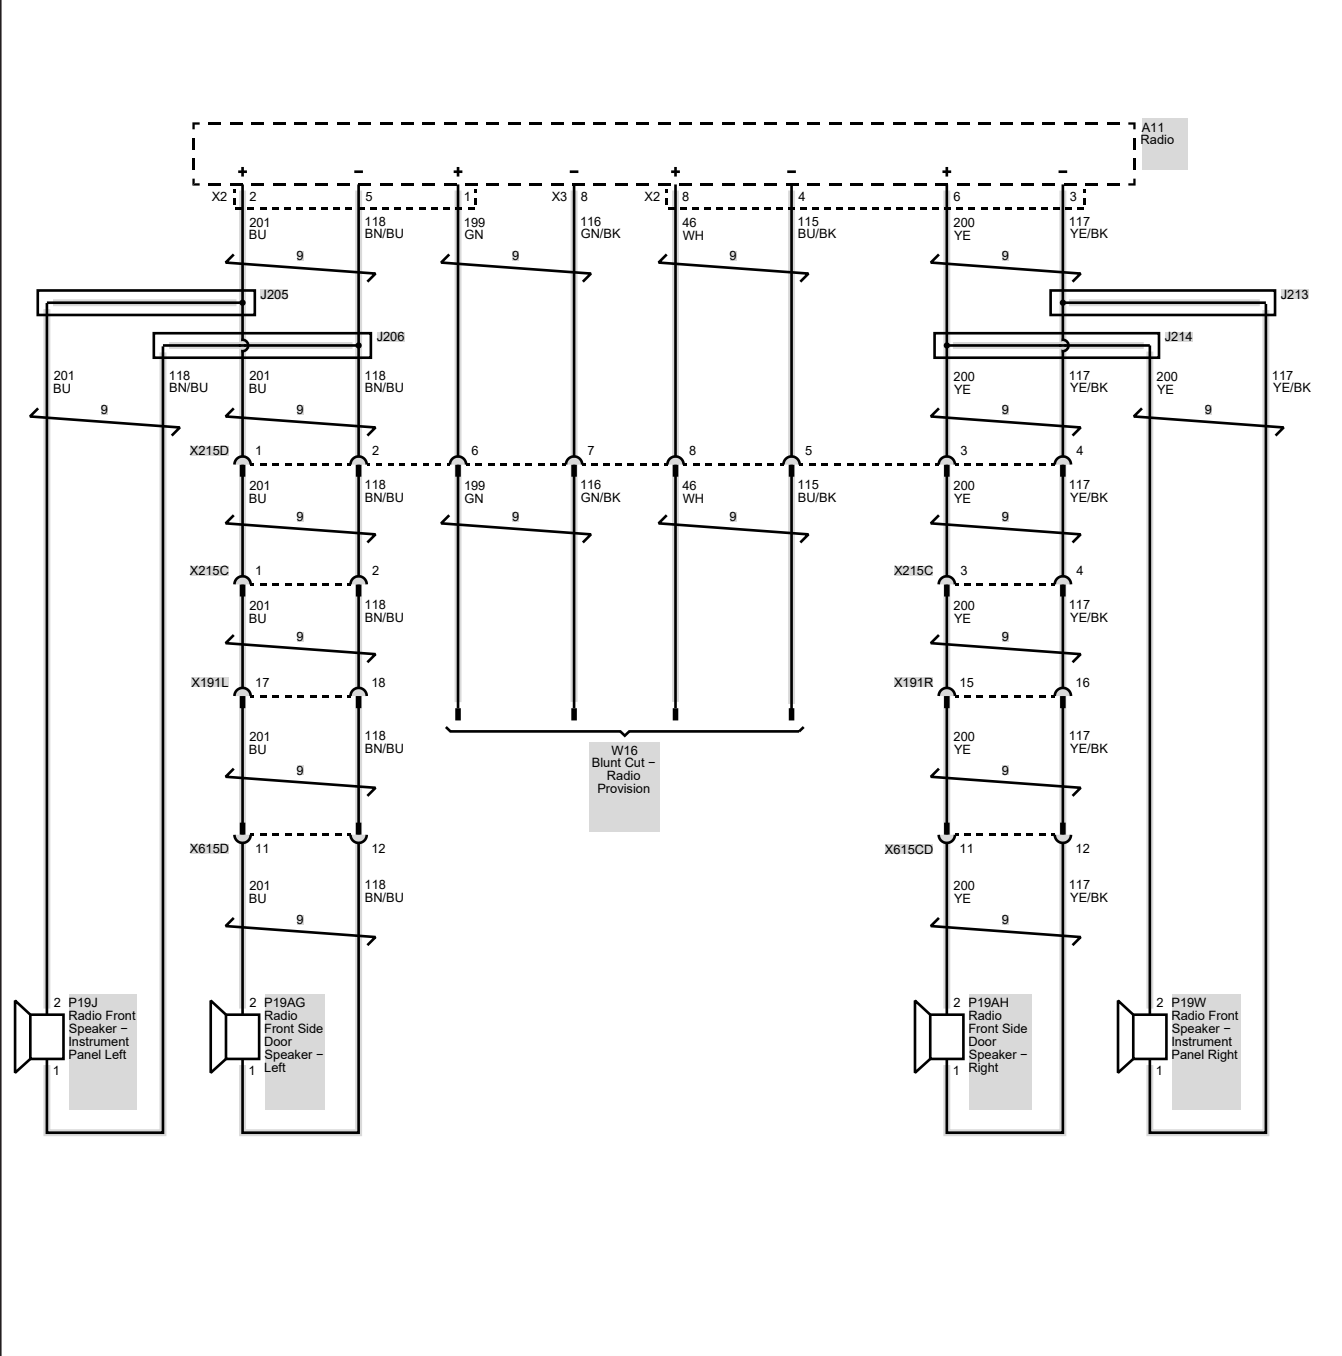


OPTIONAL WIRING

6J4 - HORN AND SIREN CONTROL PROVISION

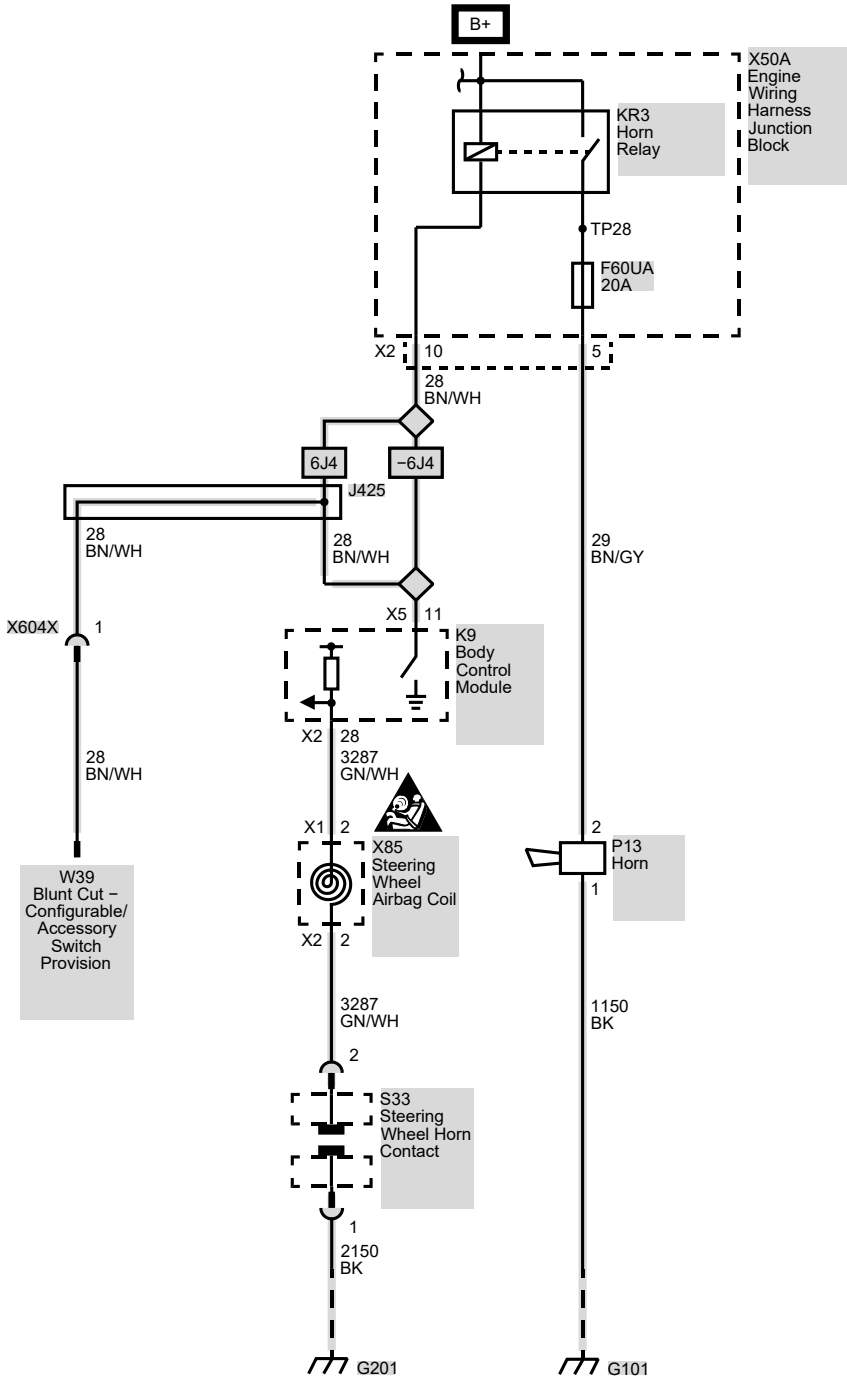


OPTIONAL WIRING

T53 - LIFTGATE WARNING LAMPS & 6C7 AUXILIARY DOME LAMP

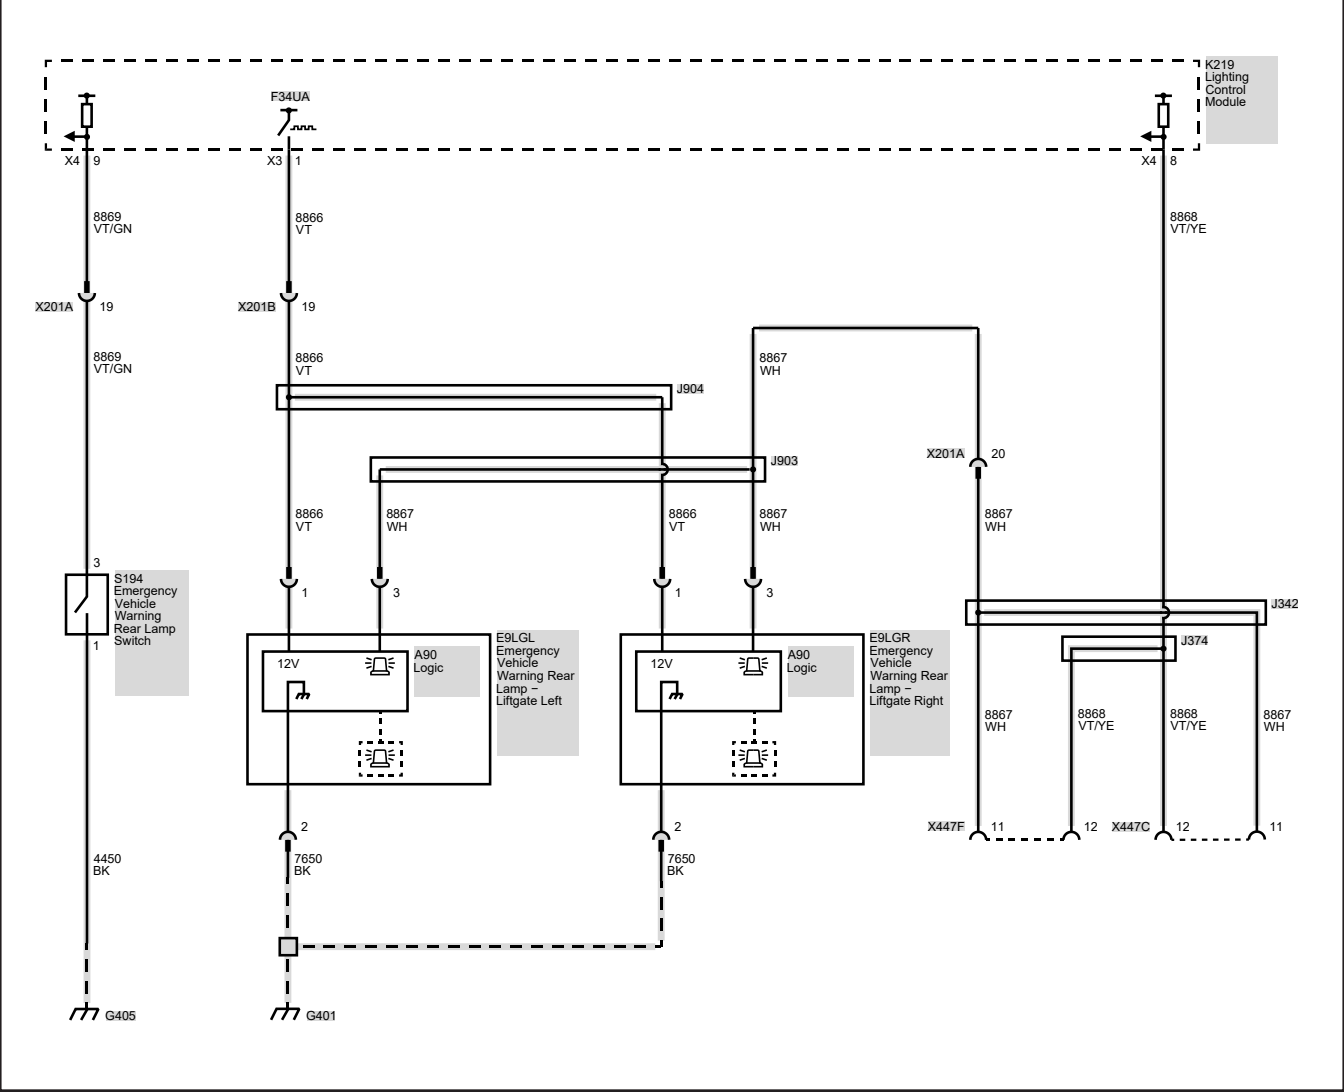


OPTIONAL WIRING

7X3 LED SPOT LAMPS & 6C7 AUXILIARY DOME LAMP

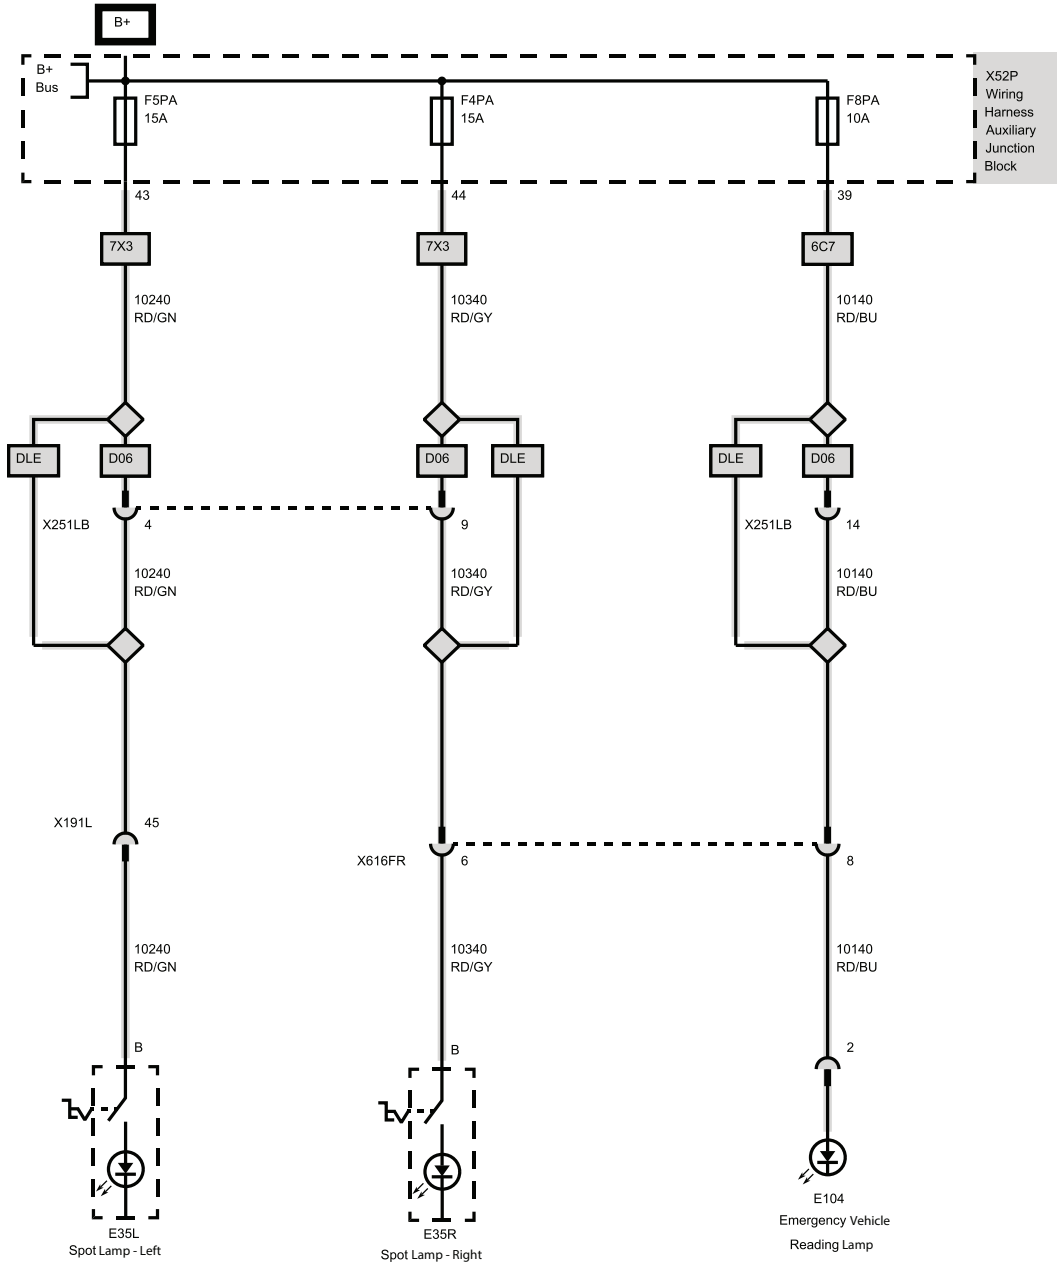


AIRBAGS


FRONTAL AIRBAGS

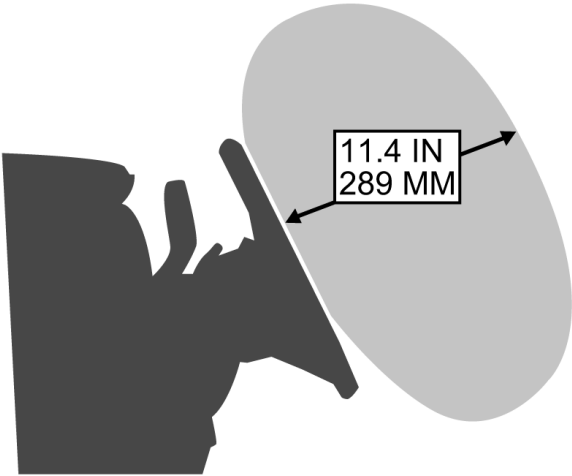


STEERING DRIVER AIRBAG
VIEW FROM DRIVER SIDE

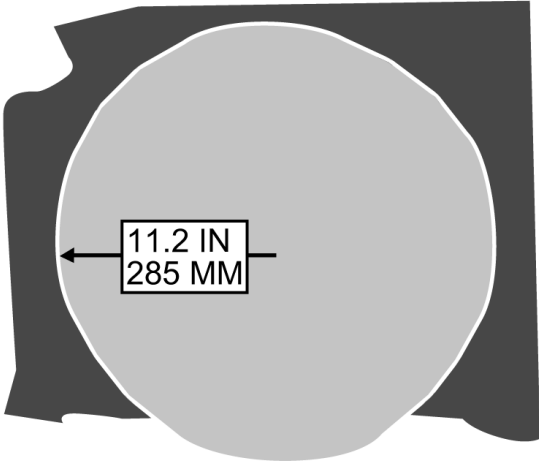

STEERING WHEEL DRIVER AIRBAG
VIEW FROM DRIVER SIDE

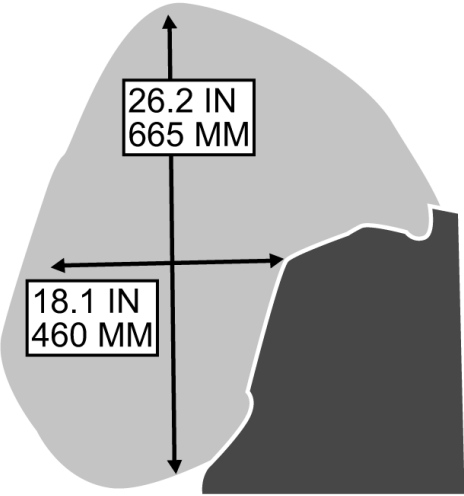

STEERING WHEEL DRIVER AIRBAG
VIEW FROM DRIVER SEAT

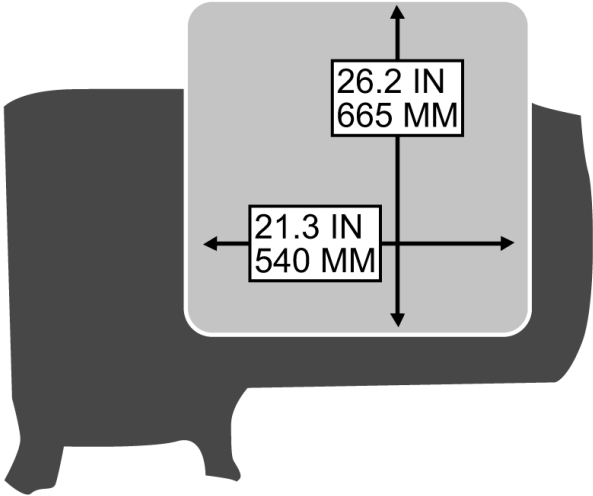


FRONT OUTBOARD PASSENGER AIRBAG
VIEW FROM PASSENGER SIDE

Sitting too close to an airbag when it deploys can increase the risk of serious injury or death. Always properly wear your seat belt. See Owner's Manual for more information.


AIRBAGS

HEAD-CURTAIN AND FRONT SIDE IMPACT AIRBAGS

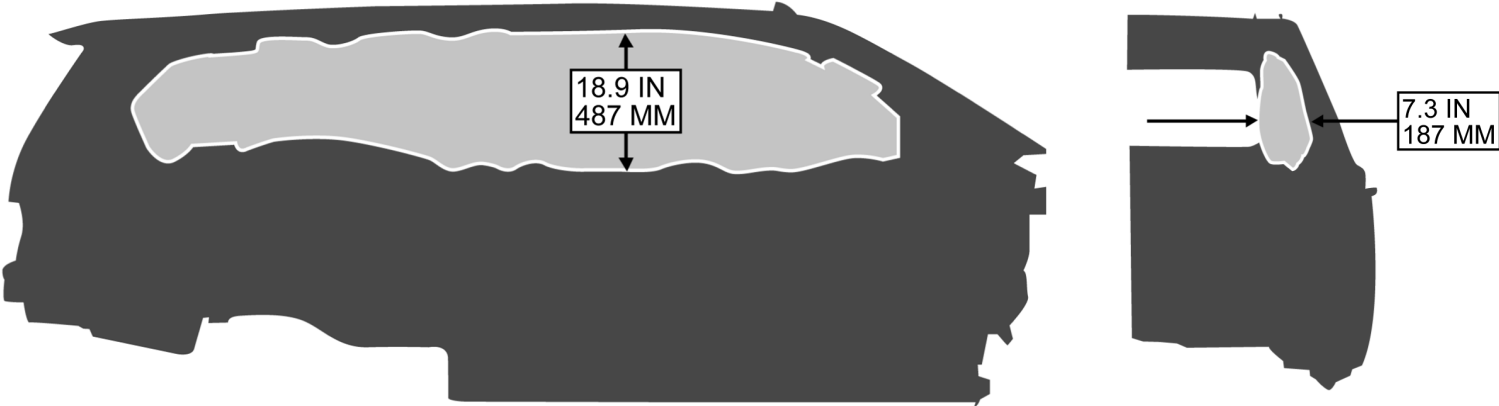

HEAD CURTAIN AIRBAG

DRIVER SIDE SHOWN - PASSENGER SIDE SIMILAR

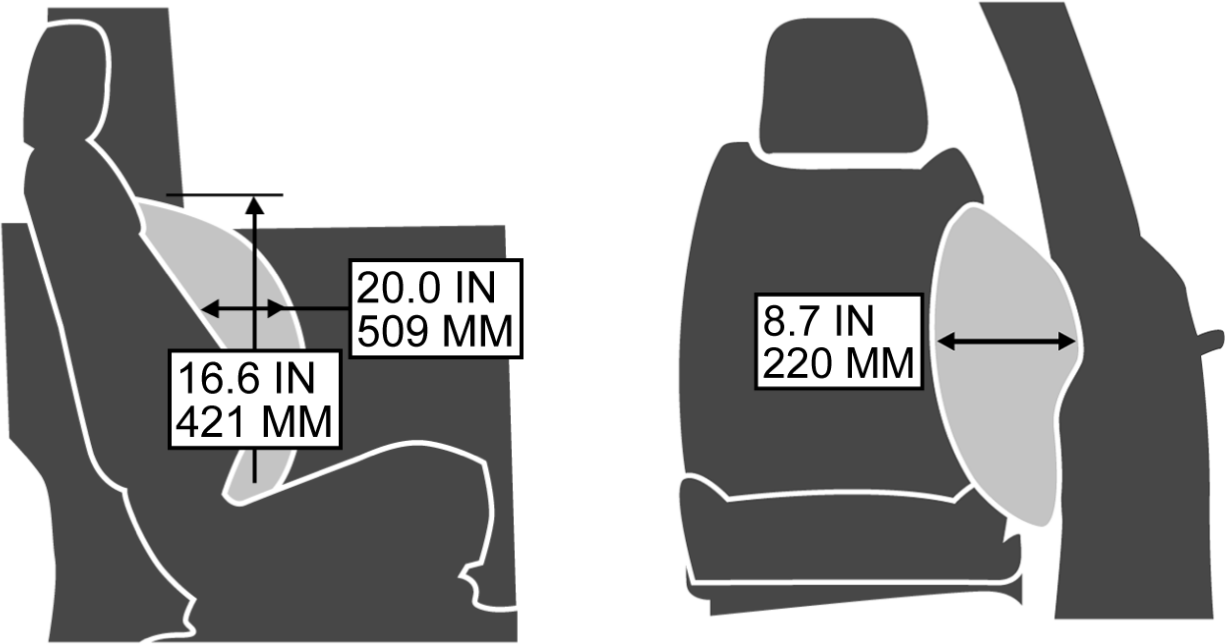


FRONT SEAT SIDE IMPACT AIRBAG

DRIVER SEAT SHOWN - FRONT OUTBOARD PASSENGER SIMILAR


Sitting too close to an airbag when it deploys can increase the risk of serious injury or death. Always properly wear your seat belt. See Owner's Manual for more information.

AIRBAGS


HEAD-CURTAIN AND FRONT SIDE IMPACT AIRBAGS

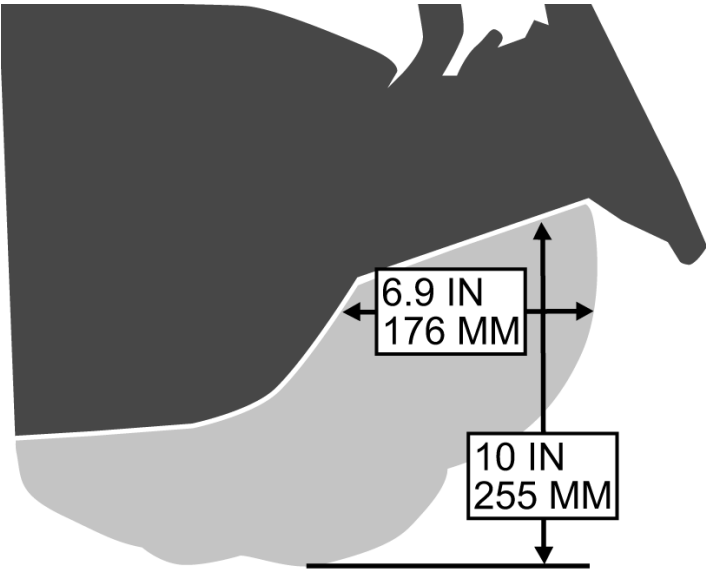


KNEE AIRBAG
SIDE VIEW FROM DRIVER SIDE

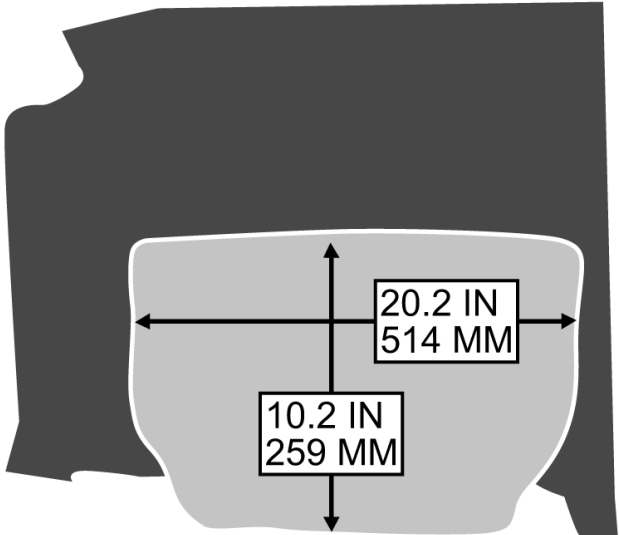

KNEE AIRBAG
FRONT VIEW FROM DRIVER SIDE

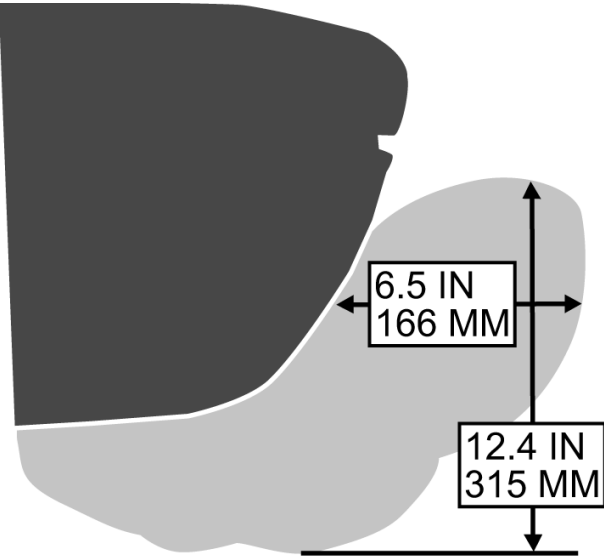

KNEE AIRBAG
SIDE VIEW FROM PASSENGER SIDE

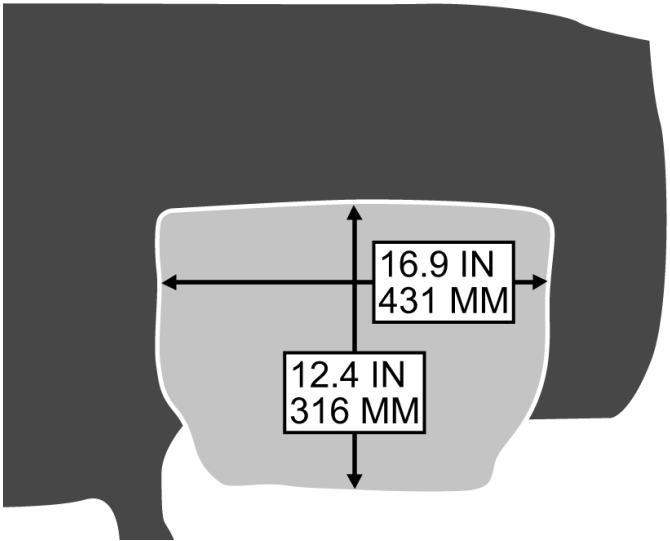

KNEE AIRBAG
FRONT VIEW FROM PASSENGER SIDE

Sitting too close to an airbag when it deploys can increase the risk of serious injury or death. Always properly wear your seat belt. See Owner's Manual for more information.

AIRBAGS FAQ

Q: Can equipment such as radar devices, video cameras, and radio trees be mounted in a specialty vehicle equipped with a right front passenger frontal airbag?

A: Yes, but care must be taken to properly mount the equipment outside of the airbag "deployment zone."

Q: What is the airbag "deployment zone"?

A: The term "deployment zone" describes the space an airbag takes up when fully inflated. Airbags need room to work properly, and anything in the "deployment zone" – such as improperly mounted equipment – can greatly affect the performance of the airbag.

Q: How can I identify the airbag "deployment zone" in my vehicle?

A: See Airbag Deployment Diagrams for more information. The diagrams provide the approximate dimensions of the "deployment zones" for your specialty vehicle. Before doing any service work, including the installation of any equipment, consult the appropriate service manual.

Q: Is it possible to shield equipment so it does not interfere with airbag deployment?

A: While shielding may protect certain equipment from being damaged or dislodged, it may also negatively affect how an airbag inflates. Therefore, we do not recommend the placement of any equipment in the deployment zone, even if shielded.

Q: Can the installation of push bumpers on the front end of the vehicle affect the deployment of the airbag?

A: It is not likely that installing push bumpers will affect deployment for the airbag as long as the vehicle structure itself is not modified. GM is not aware of any adverse defects effect on the deployment of the front airbags due to use of many aftermarket push bumpers installed on current GM police vehicles

See "Adding Equipment to the Airbag-Equipped Vehicle" in the owner manual for more information.

Customer-Installed Equipment

Before installing equipment, read the following.

Airbags inflate with great force, faster than the blink of an eye. No objects, such as shotguns, should be placed over or near the airbag covers. Equipment mounted too close to an inflating airbag could prevent the airbag from operating properly to protect the occupants or could be forced into an occupant or break and become a dangerous projectile, causing severe injury or even death. To help prevent injury and to allow the airbag to perform as it was designed, do not mount equipment inside the airbag deployment zones.

Do not attach anything to the steering wheel hub or mount any equipment within the deployment zone for the driver airbag.

Do not mount equipment on the passenger side of the instrument panel top pad deployment zone. Equipment should not be mounted on or around the passenger airbag opening because of a deploying airbag. To allow the airbag to perform as it was designed, do not mount equipment inside the airbag deployment zone.

Do not mount a security barrier such that the ends of the barrier or brackets are within the roof-rail airbag deployment zones.

Avoid installing wiring for roof-rail emergency lighting or radio antennas that may restrict the proper deployment of the roof-rail airbags.

GM approved service procedures must be followed to remove and reinstall the instrument panel to the pad to ensure proper airbag deployment.

The police vehicle has a rollover sensor mounted on the centerline of the vehicle between the driver and front outboard passenger positions. If the vehicle has individual front seats, the rollover sensor will be exposed. Do not mount equipment within 25 mm (1 in) of the rollover sensor. This may affect the performance of multiple restraint systems.

ONSTAR

POU¹ ONSTAR ADDITIONAL 9 MONTHS OF ONSTAR FLEET SAFETY AND SECURITY. Provides up to 9 months of Fleet Safety and Security service in addition to the 3 months of complimentary coverage that is included in the price of the eligible vehicle. Total OnStar Fleet Safety and Security service duration is up to 12 months. Active subscription required. Service availability, features and functionality vary by vehicle, device and the plan you are enrolled in. Terms apply. See onstar.com for details and limitations. Not available with POJ, POK, POL, POQ, PIR, PIS, PIT, PIU or R7Z

POJ¹ ONSTAR ADDITIONAL 21 MONTHS OF ONSTAR FLEET SAFETY AND SECURITY. Provides up to 21 months of Fleet Safety and Security service in addition to the 3 months of complimentary coverage that is included in the price of the eligible vehicle. Total OnStar Fleet Safety and Security service duration is up to 24 months. Active subscription required. Service availability, features and functionality vary by vehicle, device and the plan you are enrolled in. Terms apply. See onstar.com for details and limitations.

POK¹ ONSTAR ADDITIONAL 33 MONTHS OF ONSTAR FLEET SAFETY AND SECURITY. Provides up to 33 months of Fleet Safety and Security service in addition to the 3 months of complimentary coverage that is included in the price of the eligible vehicle. Total OnStar Fleet Safety and Security service duration is up to 36 months. Active subscription required. Service availability, features and functionality vary by vehicle, device and the plan you are enrolled in. Terms apply. See onstar.com for details and limitations.

POL¹ ONSTAR ADDITIONAL 45 MONTHS OF ONSTAR FLEET SAFETY AND SECURITY. Provides up to 45 months of Fleet Safety and Security service in addition to the 3 months of complimentary coverage that is included in the price of the eligible vehicle. Total OnStar Fleet Safety and Security service duration is up to 48 months. Active subscription required. Service availability, features and functionality vary by vehicle, device and the plan you are enrolled in. Terms apply. See onstar.com for details and limitations.

POQ¹ ONSTAR ADDITIONAL 57 MONTHS OF ONSTAR FLEET SAFETY AND SECURITY. Provides up to 57 months of Fleet Safety and Security service in addition to the 3 months of complimentary coverage that is included in the price of the eligible vehicle. Total OnStar Fleet Safety and Security service duration is up to 60 months. Active subscription required. Service availability, features and functionality vary by vehicle, device and the plan you are enrolled in. Terms apply. See onstar.com for details and limitations.

POR¹ ONSTAR ADDITIONAL 9 MONTHS OF ONSTAR FLEET DRIVER REMOTE ACCESS. Provides up to 9 months of Fleet Driver Remote Access service in addition to the 3 months of complimentary coverage that is included in the price of the eligible vehicle. Total OnStar Fleet Driver Remote Access service duration is up to 12 months. Active subscription required. Service availability, features and functionality vary by vehicle, device and the plan you are enrolled in. Terms apply. Remote Access does not include emergency or security services. See onstar.com for details and limitations.

POM¹ ONSTAR ADDITIONAL 21 MONTHS OF ONSTAR FLEET DRIVER REMOTE ACCESS. Provides up to 21 months of Fleet Driver Remote Access service in addition to the 3 months of complimentary coverage that is included in the price of the eligible vehicle. Total OnStar Fleet Driver Remote Access service duration is up to 24 months. Active subscription required. Service availability, features and functionality vary by vehicle, device and the plan you are enrolled in. Terms apply. Remote Access does not include emergency or security services. See onstar.com for details and limitations.

PON¹ ONSTAR ADDITIONAL 33 MONTHS OF ONSTAR FLEET DRIVER REMOTE ACCESS. Provides up to 33 months of Fleet Driver Remote Access service in addition to the 3 months of complimentary coverage that is included in the price of the eligible vehicle. Total OnStar Fleet Driver Remote Access service duration is up to 36 months. Active subscription required. Service availability, features and functionality vary by vehicle, device and the plan you are enrolled in. Terms apply. Remote Access does not include emergency or security services. See onstar.com for details and limitations.

POO¹ ONSTAR ADDITIONAL 45 MONTHS OF ONSTAR FLEET DRIVER REMOTE ACCESS. Provides up to 45 months of Fleet Driver Remote Access service in addition to the 3 months of complimentary coverage that is included in the price of the eligible vehicle. Total OnStar Fleet Driver Remote Access service duration is up to 48 months. Active subscription required. Service availability, features and functionality vary by vehicle, device and the plan you are enrolled in. Terms apply. Remote Access does not include emergency or security services. See onstar.com for details and limitations.

POP¹ ONSTAR ADDITIONAL 57 MONTHS OF ONSTAR FLEET DRIVER REMOTE ACCESS. Provides up to 57 months of Fleet Driver Remote Access service in addition to the 3 months of complimentary coverage that is included in the price of the eligible vehicle. Total OnStar Fleet Driver Remote Access service duration is up to 60 months. Active subscription required. Service availability, features and functionality vary by vehicle, device and the plan you are enrolled in. Terms apply. Remote Access does not include emergency or security services. See onstar.com for details and limitations.

PIR¹ ONSTAR ADDITIONAL 9 MONTHS OF ONSTAR FLEET ASSURANCE. Provides up to 9 months of Fleet Assurance service in addition to the 3 months of complimentary Safety & Security coverage that is included in the price of the eligible vehicle. Total OnStar Safety & Security service duration is up to 3 months and up to 9 months of OnStar Fleet Assurance. OnStar plan, working electrical system, cell reception and GPS signal required. OnStar links to emergency services. See OnStar.com/BusinessSolutions for details and limitations.

PIS¹ ONSTAR ADDITIONAL 21 MONTHS OF ONSTAR FLEET ASSURANCE. Provides up to 21 months of Fleet Assurance service in addition to the 3 months of complimentary Safety & Security coverage that is included in the price of the eligible vehicle. Total OnStar Safety & Security service duration is up to 3 months and up to 21 months of OnStar Fleet Assurance. OnStar plan, working electrical system, cell reception and GPS signal required. OnStar links to emergency services. See OnStar.com/BusinessSolutions for details and limitations.

PIT¹ ONSTAR ADDITIONAL 33 MONTHS OF ONSTAR FLEET ASSURANCE. Provides up to 33 months of Fleet Assurance service in addition to the 3 months of complimentary Safety & Security coverage that is included in the price of the eligible vehicle. Total OnStar Safety & Security service duration is up to 3 months and up to 33 months of OnStar Fleet Assurance. OnStar plan, working electrical system, cell reception and GPS signal required. OnStar links to emergency services. See OnStar.com/BusinessSolutions for details and limitations.

PIU¹ ONSTAR ADDITIONAL 45 MONTHS OF ONSTAR FLEET ASSURANCE. Provides up to 45 months of Fleet Assurance service in addition to the 3 months of complimentary Safety & Security coverage that is included in the price of the eligible vehicle. Total OnStar Safety & Security service duration is up to 3 months and up to 45 months of OnStar Fleet Assurance. OnStar plan, working electrical system, cell reception and GPS signal required. OnStar links to emergency services. See OnStar.com/BusinessSolutions for details and limitations.

R7Z¹ ONSTAR ADDITIONAL 57 MONTHS OF ONSTAR FLEET ASSURANCE. Provides up to 57 months of Fleet Assurance service in addition to the 3 months of complimentary Safety & Security coverage that is included in the price of the eligible vehicle. Total OnStar Safety & Security service duration is up to 3 months and up to 57 months of OnStar Fleet Assurance. OnStar plan, working electrical system, cell reception and GPS signal required. OnStar links to emergency services. See OnStar.com/BusinessSolutions for details and limitations.

POV¹ ONSTAR VEHICLE INSIGHTS - 1 YEAR OF SERVICE. Includes 12 months of OnStar Vehicle Insights service. OnStar Vehicle Insights provides fleet managers and drivers the tools and data they need to help maximize fleet productivity and help maximize fleet's operational efficiencies. OnStar Vehicle Insights relays real-time vehicle data like vehicle location, driver performance information and more. Eligible customers must sign up for an account at www.onstarvehicleinsights.com in order to take advantage of this 12 months offer. Requires an active connected vehicle services plan. The OnStar Vehicle Insights service is included in the price of the vehicle. Total service duration is 12 months. Non-Transferable. Non-Refundable.

POW¹ ONSTAR VEHICLE INSIGHTS - 2 YEARS OF SERVICE. Includes 24 months of OnStar Vehicle Insights service. OnStar Vehicle Insights provides fleet managers and drivers the tools and data they need to help maximize fleet productivity and help maximize fleet's operational efficiencies. OnStar Vehicle Insights relays real-time vehicle data like vehicle location, driver performance information and more. Eligible customers must sign up for an account at www.onstarvehicleinsights.com in order to take advantage of this 24 months offer. Requires an active connected vehicle services plan. The OnStar Vehicle Insights service is included in the price of the vehicle. Total service duration is 24 months. Non-Transferable. Non-Refundable.

ONSTAR

POX¹ ONSTAR VEHICLE INSIGHTS - 3 YEARS OF SERVICE. Includes 36 months of OnStar Vehicle Insights service. OnStar Vehicle Insights provides fleet managers and drivers the tools and data they need to help maximize fleet productivity and help maximize fleet's operational efficiencies. OnStar Vehicle Insights relays real-time vehicle data like vehicle location, driver performance information and more. Eligible customers must sign up for an account at www.onstarvehicleinsights.com in order to take advantage of this 36 months offer. Requires an active connected vehicle services plan. The OnStar Vehicle Insights service is included in the price of the vehicle. Total service duration is 36 months. Non-Transferrable. Non-Refundable.

POY¹ ONSTAR VEHICLE INSIGHTS - 4 YEARS OF SERVICE. Includes 48 months of OnStar Vehicle Insights service. OnStar Vehicle Insights provides fleet managers and drivers the tools and data they need to help maximize fleet productivity and help maximize fleet's operational efficiencies. OnStar Vehicle Insights relays real-time vehicle data like vehicle location, driver performance information and more. Eligible customers must sign up for an account at www.onstarvehicleinsights.com in order to take advantage of this 48 months offer. Requires an active connected vehicle services plan. The OnStar Vehicle Insights service is included in the price of the vehicle. Total service duration is 48 months. Non-Transferrable. Non-Refundable.

POZ¹ ONSTAR VEHICLE INSIGHTS - 5 YEARS OF SERVICE. Includes 60 months of OnStar

Vehicle Insights service. OnStar Vehicle Insights provides fleet managers and drivers the tools and data they need to help maximize fleet productivity and help maximize fleet's operational efficiencies. OnStar Vehicle Insights relays real-time vehicle data like vehicle location, driver performance information and more. Eligible customers must sign up for an account at www.onstarvehicleinsights.com in order to take advantage of this 60 months offer. Requires an active connected vehicle services plan. The OnStar Vehicle Insights service is included in the price of the vehicle. Total service duration is 60 months. Non-Transferrable. Non-Refundable.

RBS² ONSTAR IN-VEHICLE COACHING - 1 YEAR OF SERVICE. In-Vehicle Coaching verbally coaches drivers in real time through the vehicle's audio system to help drivers quickly modify their driving behavior and develop better behind-the-wheel habits Terms Apply. Fees, services, and availability subject to change without notice. Applicable taxes not included. Does not include emergency or security services. Diagnostics capabilities vary by vehicle model. Not all issues will deliver alerts. In-Vehicle Coaching features vary by vehicle model and year. See onstarvehicleinsights.com for details and limitations. Non-Transferrable. Non-Refundable.

RFS² ONSTAR IN-VEHICLE COACHING - 2 YEARS OF SERVICE. In-Vehicle Coaching verbally coaches drivers in real time through the vehicle's audio system to help drivers quickly modify their driving behavior and develop better behind-the-wheel habits Terms Apply. Fees, services, and availability subject to change without notice. Applicable taxes not included. Does not include emergency or security services. Diagnostics capabilities vary by vehicle model. Not all issues will deliver alerts. In-Vehicle Coaching features vary by vehicle model and year. See onstarvehicleinsights.com for details and limitations. Non-Transferrable. Non-Refundable.

RFT² ONSTAR IN-VEHICLE COACHING - 3 YEARS OF SERVICE. In-Vehicle Coaching verbally coaches drivers in real time through the vehicle's audio system to help drivers quickly modify their driving behavior and develop better behind-the-wheel habits Terms Apply. Fees, services, and availability subject to change without notice. Applicable taxes not included. Does not include emergency or security services. Diagnostics capabilities vary by vehicle model. Not all issues will deliver alerts. In-Vehicle Coaching features vary by vehicle model and year. See onstarvehicleinsights.com for details and limitations. Non-Transferrable. Non-Refundable.

RFU² ONSTAR IN-VEHICLE COACHING - 4 YEARS OF SERVICE. In-Vehicle Coaching verbally coaches drivers in real time through the vehicle's audio system to help drivers quickly modify their driving behavior and develop better behind-the-wheel habits Terms Apply. Fees, services, and availability subject to change without notice. Applicable taxes not included. Does not include emergency or security services. Diagnostics capabilities vary by vehicle model. Not all issues will deliver alerts. In-Vehicle Coaching features vary by vehicle model and year. See onstarvehicleinsights.com for details and limitations. Non-Transferrable. Non-Refundable.

RFY² ONSTAR IN-VEHICLE COACHING - 5 YEARS OF SERVICE. In-Vehicle Coaching verbally coaches drivers in real time through the vehicle's audio system to help drivers quickly modify their driving behavior and develop better behind-the-wheel habits Terms Apply. Fees, services, and availability subject to change without notice. Applicable taxes not included. Does not include emergency or security services. Diagnostics capabilities vary by vehicle model. Not all issues will deliver alerts. In-Vehicle Coaching features vary by vehicle model and year. See onstarvehicleinsights.com for details and limitations. Non-Transferrable. Non-Refundable.

PR6³ SIRIUSXM, ADDITIONAL 9 MONTHS OF THE SXM PLATINUM PLAN. Listen inside and

outside the car on the app in addition to the trial period included with the vehicle.

PR7³ SIRIUSXM, ADDITIONAL 21 MONTHS OF THE SXM PLATINUM PLAN. Listen inside and outside the car on the app in addition to the trial period included with the vehicle

PR8³ SIRIUSXM, ADDITIONAL 33 MONTHS OF THE SXM PLATINUM PLAN. Listen inside and outside the car on the app in addition to the trial period included with the vehicle.

1. Requires (UE1) OnStar. Requires one of the following Fleet or Government order types: FLS, FNR, FRC, FBC, FGO or FEF. Not available with a ship-to of Guam, Puerto Rico or the Virgin Islands 2. Requires (UE1) OnStar and POV. Requires one of the following Fleet or Government order types: FLS, FNR, FRC, FBC, FGO or FEF. Not available with a ship-to of Guam, Puerto Rico or the Virgin Islands. 3. Requires (U2K) SiriusXM. Requires one of the following Fleet or Government order types: FLS, FNR, FRC, FBC, FGO or FEF. Not available in AK, HI, PR and VI

MAINTENANCE / LIMITED WARRANTY

| | |
|--|--|
| SCHEDULED MAINTENANCE | One visit within first year of vehicle delivery ¹ |
| BUMPER-TO-BUMPER LIMITED WARRANTY | 3 years/36,000 miles ² . Bumper-to-Bumper Limited Warranty with no deductible |
| ELECTRIC VEHICLE PROPULSION LIMITED WARRANTY | 8 Years / 100,000 Miles ² |
| TIRES⁴ | 3 years/36,000 miles ² ; coverage prorated after first 12,000 miles |
| ROADSIDE ASSISTANCE AND COURTESY TRANSPORTATION | Qualified Fleet Customers: 5 years/100,000 miles ³ |
| RUST-THROUGH | 6 years/100,000 miles ² |
| CORROSION | 3 years/36,000 miles ² |
| WHEEL ALIGNMENT AND BALANCE | Up to 7,500 miles ⁵ |

1. Includes first required maintenance visit as stated in vehicle maintenance schedule. Maintenance visit consists of oil change, tire rotation and Multi-Point Vehicle Inspection. Does not include air filters. See participating dealer for other restrictions and complete details. Excludes vehicles ordered with fleet delete option RY9. **2.** Whichever comes first. See dealer for limited warranty details. **3.** Tires also covered under the Bumper-to-Bumper Warranty but are prorated based upon mileage. See dealer for warranty details. **4.** If the vehicle has a warrantable failure, see your Owner's Manual for full details on the Courtesy Transportation program. **5.** Customer maintenance item after 7,500 miles.



GM reserves the right to make changes at any time, without notice, in prices, colors, materials, equipment, specifications, models, and availability. Specifications, dimensions, measurements, ratings, and other numbers in this catalog and other printed materials provided at the dealership or affixed to vehicles are approximates based upon design and engineering drawings and prototypes and laboratory tests. Your vehicle may differ due to variations in manufacture and equipment. Since some information may have been updated since the time of printing, please check with your GM dealer for complete details. Some of the equipment shown or described throughout this publication may be available at extra cost, and/or is supplied by an independent supplier.

Copyright 2023 General Motors. All rights reserved. All text, images, graphics, and other materials in this publication are subject to the copyright and other intellectual property rights of General Motors. These materials may not be reproduced, distributed, or modified without the express written permission of General Motors. The marks appearing in this publication including, but not limited to: GM and the GM logo; Chevrolet and their respective logos, emblems, slogans, and vehicle model names and body designs; and other marks such as GM ENVOLVE and Commercial are trademarks and/or service marks of General Motors, its subsidiaries, affiliates, or licensors.

For more detailed information, contact your District Sales Manager or see the online order guide at gmevolve.com/police.

