



2024

# BLAZER EV PPV



Preproduction model shown throughout. Actual production model may vary.  
2024 Chevrolet Blazer EV PPV available starting spring 2024. Shown with equipment  
from independent suppliers not covered by the GM New Vehicle Limited Warranty.  
GM is not responsible for the safety or quality of independent supplier alterations.



## About This Publication

This catalog is not updated during the model year and should not be used for ordering purposes. It is intended as a source of basic information. All illustrations and specifications in this literature are based on the latest product information available at the time of publication. General Motors reserves the right to make changes at any time without notice. For further details, consult your local dealer.

Care must be taken during customer installation of equipment and wiring to ensure that all holes drilled in the body are corrosion protected, properly sealed and that vehicle wiring harnesses, piping or other components have not been displaced or damaged. Aftermarket equipment installers must be mindful of applicable Federal Motor Vehicle Safety Standards. This information can be obtained directly from the National Highway Traffic Safety Administration. Adding non-dealer accessories or making modifications to the vehicle can affect vehicle performance, aerodynamics, and overall top speed. Please return all police vehicles to factory condition and settings upon decommissioning to prevent civilians from using these new 2024 calibrations, lighting and other features intended only for police and emergency customers. Wiring connection or splice changes are to be removed before the vehicle is returned to civilian use.

These vehicles are equipped with an airbag system. The airbag system in your police vehicle includes frontal driver and front outboard passenger airbags, front seat back side impact airbags and roof rail mounted head-curtain airbags. Customer installed equipment such as security barriers behind the front seats should not be mounted so that the barrier ends are within the side airbag deployment zones. The sensors and other components for the airbag system must not be relocated to accommodate the installation of customer furnished equipment; please refer to the service manual for sensor and other component locations. For information concerning instrument panel top pad mounted equipment and airbag system deployment zones, see the airbag information section in this catalog and the vehicle owners manual.

A note about vehicle alterations by independent suppliers: This catalog shows pictures of vehicles that have been altered or upfitted with equipment or components supplied to Chevrolet or its dealers by independent suppliers. GM is not responsible for the safety or quality of design features, materials or workmanship of any alterations by third parties.

# INDEX

## 2024 BLAZER EV PPV

- **STANDARD FEATURES**
- **OPTIONAL FEATURES**
- **EMISSIONS & TIRES**
- **SPECIFICATIONS**
- **COLORS, EXTERIOR AND INTERIOR**
- **APPROACH AND DEPARTURE ANGLES**
- **SPEEDOMETER/CLUSTER DISPLAY**
- **VEHICLE PERSONALIZATION MENU**
- **STANDARD FEATURES HIGHLIGHTS**
- **OPTIONAL FEATURES HIGHLIGHTS**
- **WIRING DIAGRAMS**
- **AIRBAG DIMENSIONS**
- **NO DRILL / NO CUT ZONES**
- **AIRBAGS FAQ**
- **OnStar® OPTIONS**
- **MAINTENANCE AND LIMITED WARRANTY**





## BLAZER EV 9C1 INTERIOR

Shown with equipment from independent suppliers not covered by the GM New Vehicle Limited Warranty GM is not responsible for the safety or quality of independent supplier alterations.



## BLAZER EV 9C3 INTERIOR



**GM restricts the sale of police vehicles, and they are not to be sold to retail customers**

The all-wheel drive Blazer EV Police Pursuit Package has been designed for police work up to, and including, high-Speed emergency vehicle operations. GM restricts the sale of police vehicles, and they are not to be sold to retail customers. Developed for the needs of Law Enforcement, the purpose-built electrical architecture is explicitly prepared for the demands of emergency equipment. A standard 400-volt to 12-volt DC power module is dedicated to emergency equipment demands and is engineered for 100-amps of continuous load. This architecture provides two 20-amp relays in front row with a 30-circuit harness and 50-amp battery feed. One 40-amp, and one 30-amp relay are located in left cargo corner with a 56-circuit harness that shares 25-redundant front signals. 100-amps of battery service and a ground are also standard. Wiring circuits are also included in the front doors to accommodate aftermarket exterior sideview mirror emergency lighting in addition to rear quarter glass wiring provisions. All circuits include a factory connector. Model IMF26 is required when ordering 9C1 or 9C3 Police Package. Content, options and specifications shown are for the police version only which differ from retail civilian models. Speed/Torque Limiter is not available for PPV.

The 9C1 and 9C3 PPV Package includes:

Certified speedometer, heavy duty suspension, under body skid plates, Firestone Firehawk Pursuit tires mounted on 20-inch steel wheels, 6-piston Brembo front calipers on 15.3-inch rotors for increased braking durability and performance during the rigors of a high-speed pursuit.

**The 9C1 Marked Police Package includes:**

Front console delete, black rubberized vinyl floor covering and black cloth front and vinyl rear seating.

**The 9C3 Detective Police Package includes:**

Retail floor console with armrest, color-keyed carpeting in occupant area and black cloth front and rear seating with cup-holders.

## STANDARD 9C1/9C3 INTERIOR FEATURES

<b>AIR CONDITIONING</b>	Dual-zone automatic digital climate control. Rear passenger duct located on floor tunnel terminates at back of center console.
<b>AIR FILTER</b>	Pollutant, odor and fine dust.
<b>ARMREST</b>	(9C3 only) Front and rear center console armrest with cupholders.
<b>ASSIST HANDLES</b>	Front passenger and rear outboard.
<b>AUDIO SYSTEM<sup>2</sup></b>	17.7" diagonal advanced color LCD display with Google built-in compatibility (select service plan required, terms and limitations apply), including navigation capability, connected apps, personalized profiles for each driver's settings, Natural Voice Recognition and Phone Integration.
<b>BLUETOOTH®<sup>3</sup></b>	Personal cell phone connectivity to vehicle infotainment system.
<b>CARGO TIE-DOWNS</b>	2 cargo tie-downs in cargo area.
<b>COMPASS</b>	Shown in display.
<b>CONSOLE, FLOOR</b>	Deleted for 9C1 package (reference RPO code DLE), console with armrest for 9C3 package (reference RPO code D06).
<b>CRUISE CONTROL</b>	Electronic with set and resume speed
<b>DEFOGGER</b>	Rear-window electric
<b>DOOR LOCKS</b>	Power locks for front and rear doors. Rear child security locks.
<b>DRIVER INFORMATION CENTER</b>	11 inch diagonal display
<b>FLOOR COVERING</b>	Black rubberized vinyl floor covering for 9C1 (reference RPO code BG9). Color-keyed carpeting in occupant area with black cloth front and rear seating for 9C3 (reference RPO code B30).
<b>REMOTE KEY</b>	Two KEYS/FOBS and mechanical keys for ignition and doors. Four additional fobs are available. While unlimited number of learned KEYS/FOBS can operate Keyless start and Keyless open, for a particular vehicle, only the last 8 KEYS/FOBS learned will allow the remote key buttons to work. See Available Options page for ordering codes. See Optional Equipment page for programming procedure.
<b>KEYLESS OPEN</b>	Includes extended range Remote Keyless Entry. If the Remote Key battery is depleted or due to wireless interference, vehicle may be unlocked using the mechanical key.
<b>KEYLESS START</b>	Includes extended range Remote Keyless Entry.
<b>GLASS</b>	Acoustic, laminated front windshield. Side rear tempered, solar glazing.
<b>GLOVEBOX</b>	Passenger side.
<b>LIGHTING</b>	Front courtesy and dual reading lights. Rear roof, courtesy and dual reading lights.
<b>MICROPHONE, WIRING</b>	Provision located above headliner over driver position for customer supplied microphone and department radio
<b>OnStar®</b>	Fleet orders with properly equipped vehicles receive a 3-month trial of Fleet Connected Services and 3 months of Fleet Safety & Security plan coverage. Connected Services includes Connected Navigation, Remote Access Plan and 1 month or 3GB of data (whichever comes first). OnStar services require vehicle electrical system (including battery), wireless service and GPS satellite signals to be available and operating for features to function properly. OnStar acts as a link to existing emergency service providers. Subscription Service Agreement required. Call 18884ONSTAR (1-888-466-7827) or visit onstar.com for OnStar Terms and Conditions, Privacy Policy, details and system limitations or to have OnStar disabled (must submit vehicle VIN when requesting OnStar to be turned-off).
<b>OnStar® REMOTE ACCESS</b>	8 Years of OnStar Remote Access. The OnStar Remote Access Plan gives you simplified remote control of your properly equipped vehicle and unlocks a variety of great features in your myChevrolet mobile app. See dealer for details. OnStar Remote Access Plan does not include emergency or security services. Fleet customers will get Fleet Remote Access through OnStar Vehicle Insights. See onstar.com for details and limitations. Available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device, and the plan you are enrolled in. Terms apply. Device data connection required.
<b>POWER OUTLET</b>	12-volt. Located in the center console compartment for 9C3. Shipped loose in bag for 9C1.
<b>POWER OUTLET</b>	120-volt. Not available.

**1.** Always use seat belts and child restraints. Children are safer when properly secured in a rear seat in the appropriate child restraint. See the Owner's Manual for more information. **2.** Functionality varies by model. Full functionality requires compatible Bluetooth and smartphone, and USB connectivity for some devices. Select service plan required, terms and limitations apply. Go to myChevrolet.com/learn About/bluetooth to find out which phones are compatible with the vehicle. **3.** Go to myChevrolet.com/learn About/bluetooth to find out which phones are compatible with the vehicle.

## STANDARD 9C1/9C3 INTERIOR FEATURES (CONTINUED)

<b>PROTECTED IDLE</b>	Standard Protected Idle permits the vehicle to be unlocked and fully powered, but unable to be driven without a Remote Key detected.
<b>REAR VIEW MIRROR<sup>1</sup></b>	HD Rear Vision Camera. Includes Rear Camera Mirror Washer. Rear Camera Mirror allows user to choose between a traditional rear view mirror or a camera view unobstructed by the vehicle's pillars, trunk, roof, head restraints, rear-seat occupants and other interior aftermarket police equipment.
<b>REAR VISION CAMERA<sup>1</sup></b>	HD Rear Vision Camera shows you a high-resolution digital image of the area directly behind your vehicle when in Reverse to help you park and avoid vehicles and objects. You can also display an overlay of where your vehicle is heading.
<b>SEATS, FRONT</b>	Police specific black cloth bucket seats, driver 8-way power, passenger 6-way power, driver and passenger 2-way power lumbar
<b>SEATS, REAR</b>	60/40-split, fold-flat. 9C1 in vinyl, 9C3 in cloth with center armrest & cup holders.
<b>STEERING COLUMN</b>	Tilt and telescopic.
<b>STEERING WHEEL CONTROLS</b>	Audio, Driver Information Center and phone interface controls
<b>TEEN DRIVER<sup>1</sup></b>	A configurable feature that lets you activate customizable vehicle settings associated with a Remote Key, to help encourage safe driving behavior. It can limit certain available vehicle features, and it prevents certain safety systems from being turned off. An in-vehicle report card gives you information on driving habits and helps you to continue to coach your new driver. Can be turned off in in your vehicle's Settings menu.
<b>TEMPERATURE DISPLAY</b>	Outside temperature. Cabin humidity and windshield temperature sensor.
<b>THEFT DETERRENT SYSTEM</b>	Unauthorized entry alert and immobilizer.
<b>TPMS</b>	Tire Pressure Monitoring System with auto learn and Tire Fill Alert.
<b>UNIVERSAL VEHICLE MODULE</b>	Provides CAN Readability of selected messages utilizing SAE J1939 formatting. This gateway module offers 10-switchable inputs and outputs, and includes a graphical user interface available to customize specific needs with more than 150 operating parameters available to read.
<b>USB CHARGING PORTS</b>	2 type-C located forward of cupholders (9C3) or shipped loose in bag (9C1), 2 Type-C located within the center console armrest bin (9C3 only) and 2 charge only type-C located on back of center console (9C3 only).
<b>VENT</b>	Rear Console, air. 9C3 only.
<b>VISORS</b>	Driver and front passenger illuminated sliding vanity mirrors, covered.
<b>WINDOWS, POWER</b>	Power driver and passenger with Express-Up/Down. Power rear with Express-Down.

## STANDARD 9C1/9C3 EXTERIOR FEATURES

<b>ANTENNA</b>	Roof-mounted shark fin (black).
<b>CALIBRATION TAILLAMP</b>	SLO Calibration for taillamp flasher, Red/Red. For detailed technical information on activation of this feature, refer to the vehicle technical guide under the Body Builder Manuals section on <a href="http://www.gmupfitter.com">www.gmupfitter.com</a> .
<b>CALIBRATION TAILLAMP</b>	SJ9 Calibration for taillamp flasher Red/White. For detailed technical information on activation of this feature, refer to the vehicle technical guide under the Body Builder Manuals section on <a href="http://www.gmupfitter.com">www.gmupfitter.com</a> .
<b>CHARGE PORT</b>	Manual
<b>DEFOGGER</b>	Electric, rear window
<b>DRL</b>	Day Time Running Lights. See option code 9G8 for permanent delete.
<b>DOOR HANDLES</b>	Body color
<b>FRONT GRILLE</b>	Gloss black
<b>FLASHER SYSTEM</b>	Headlamp and taillamp, DRL compatible with individual control wires.
<b>FOG LAMPS</b>	Not available
<b>GLASS</b>	Acoustic, laminated front windshield. Side rear tempered, solar glazing.
<b>HEADLAMPS</b>	LED with automatic on and off.
<b>LICENSE PLATE</b>	Front mounting package (included on orders with ship-to states that require front license plate)
<b>LUGGAGE RACK</b>	Not available. Roof rails deleted.
<b>MIRROR CAPS</b>	High gloss black
<b>MIRRORS, OUTSIDE</b>	Outside heated, power-adjustable, power-folding, driver-side auto-dimming with turn signal indicators.
<b>MOLDING</b>	Door upper. Low gloss black.
<b>REAR CAMERA WASHER</b>	Included with Rear Camera Mirror.
<b>REAR LIFTGATE</b>	Manual
<b>RECOVERY HOOK</b>	One Threaded eye-bolt shipped loose for use on front or rear of vehicle.
<b>TIRES</b>	Firestone Firehawk Pursuit 265/50R20 all-season, V-rated, blackwall, (see standard features illustrations section)
<b>TIRE, SPARE</b>	Standard Inflator Kit, Spare Tire And Jack Assembly Not Available.
<b>WHEELS</b>	20" (50.8 cm) steel with bolted-on black center cap
<b>WHEEL CENTER CAP</b>	Bolt-on aluminum with black finish
<b>WINDSHIELD</b>	Solar absorbing shaded upper with acoustic laminated glass
<b>WIPERS, WINDSHIELD</b>	Front intermittent with Rainsense.
<b>WIPER, REAR</b>	Rear intermittent

1. Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Visibility, weather, and road conditions may affect feature performance. Read the vehicle's owner's manual for more important feature limitations and information.

2. Always use seat belts and child restraints. Children are safer when properly secured in a rear seat in the appropriate child restraint. See the Owner's Manual for more information.



## STANDARD 9C1/9C3 ELECTRICAL FEATURES

<b>AC CHARGING</b>	At-home, 19-kW Level 2 (AC) charging capability. Requires professionally installed dedicated charge station, sold separately.
<b>AUXILIARY POWER, FRONT</b>	12-volt. Located in the center console compartment for 9C3. Shipped loose in bag for 9C1. (Note: This is for KH8 whereas USB Charging Ports are UBJ, UBK & UBI)
<b>BATTERY, DRIVE</b>	Ultium Propulsion, 102 kWh Battery Rated Energy, 190 kW DC fast charging capable.
<b>BATTERY, SERVICE</b>	12V/60AH, 680 ENCCA
<b>DUAL LEVEL CHARGE CORD</b>	Includes dual-mode, portable, 120-volt (1.4 kW) and 240-volt (7.7 kW) capability, swappable nema 5-15 and NEMA 14-50 plugs with SAE J1772 vehicle connection.
<b>ELECTRONIC PRECISION SHIFT</b>	The electronic precision shift includes an electric parking brake. In the event of a loss of 12-volt battery power, the electric parking brake cannot be released, and the vehicle cannot be shifted to N (Neutral). Tire skates or dollies must be used under the non-rolling tires to prevent damage while loading/unloading the vehicle. Dragging the vehicle will cause damage not covered by the vehicle warranty.
<b>FLEET CONNECTED ACCESS</b>	OnStar and Chevrolet connected services capable, includes (U5G) 5G Wi-Fi Hotspot capable, (U2K) SiriusXM with 360L, (NAM) Google Automotive Services capable, (IMP) smartphone app remote start. Service varies with conditions and location. Requires active service plan and paid AT&T data plan. See OnStar.com/BusinessSolutions for details and limitations. Availability subject to change. Vehicle must be on or in the accessory position for Wi-Fi to function.
<b>RADIO SUPPRESSION</b>	The Blazer EV PPV systems are designed to prevent unwanted emissions and to minimize susceptibility and maximize immunity to external emissions (Electromagnetic (EMI) or Radio Frequency (RFI) Interference). Most emergency vehicle communications equipment operating at frequencies in the VHF Band (30-300 MHz) and up to frequencies in the UHF Band (300 MHz-3GHz) will function as intended without enhanced noise suppression.
<b>REMOTE PANIC ALARM</b>	Keyless remote panic button activates horn and flashing exterior lights. Can be disabled with optional 5J1 calibration.
<b>REMOTE START</b>	Remote Key activated. Included and only available with (UE1) OnStar.
<b>SURVEILLANCE MODE</b>	Calibration to shut-down non-federally mandated exterior and interior lighting. Exterior lighting will shut off only if in auto mode and not equipped with optional LIGHTING DELETE (9G8). Cluster and PRND indicator dimmed to the minimum setting. Brake, reverse and turn signal lighting will override calibration and function if operated. For detailed technical information on activation of this feature, refer to the vehicle technical guide under the Body Builder Manuals section on <a href="http://www.gmupfitter.com">www.gmupfitter.com</a> .
<b>UPFITTER WIRING PROVISIONS</b>	See WIRING Section for Circuit Diagrams and connector information.
<b>ONE PEDAL DRIVING<sup>1</sup></b>	Helps convert the vehicle's kinetic energy into energy stored in the battery for later use to help get the most range.
<b>HANDS-FREE START</b>	Push the brake pedal after closing the door to start vehicle. The Remote Key authorizes the hands-free start system.
<b>REGEN ON DEMAND<sup>TM1</sup></b>	Helps convert the vehicle's kinetic energy into energy stored in the battery for later use to help get the most range.
<b>ULTIFI<sup>2</sup></b>	Separates the vehicle's software from the hardware to enable the frequent and seamless delivery of software-defined features, apps and services to customers over the air. Ultifi allows customers to continue to upgrade and personalize their vehicle as improvements and new features become available over time.

## STANDARD 9C1/9C3 MECHANICAL FEATURES

<b>BRAKES</b>	Front Brembo performance disc brakes with non-FNC rotors.
<b>COOLING</b>	Heavy-duty
<b>SKID PLATES</b>	Steel front and rear
<b>STEERING</b>	Power, non-variable ratio, electric.
<b>SUSPENSION</b>	Performance
<b>TRANSMISSION</b>	Ultium Performance 2 -motor All Wheel Drive System.
<b>TRACTION CONTROL</b>	Electronic

## STANDARD 9C1/9C3 SAFETY FEATURES

<b>AIRBAGS<sup>4</sup></b>	Frontal, knee and seat-mounted side-impact for driver and front passenger, and roof-rail mounted head-curtain for outboard seating positions. Includes Passenger Sensing System for front passenger.
<b>BUCKLE TO DRIVE</b>	Prevents vehicle from being shifted out of Park until driver seat belt is fastened; times out after 20 seconds and encourages seat belt use, can be turned on and off in Settings or Teen Driver menu. This feature is defaulted off for 9C1 and 9C3, but can be turned on in the Infotainment menu.
<b>LATCH SYSTEM<sup>4</sup></b>	(Lower Anchors and Tethers for CHildren), for child child restraint seats.
<b>REAR SEAT REMINDER<sup>4</sup></b>	Rear Seat Reminder does not detect people, animals or objects in the back seat. It only registers when a rear door has been opened. Can be turned off in in your vehicle's Settings menu.
<b>SAFETY ALERT SEAT<sup>3</sup></b>	Safety Alert Seat uses left-, right- or both-side driver seat vibration pulses to help you detect and identify the direction of potential crashes. You can also switch to beeping crash avoidance alerts.
<b>SEAT BELTS<sup>4</sup></b>	3-point, all positions, includes front and rear seat belt pretensioners
<b>SEAT BELT INDICATORS<sup>4</sup></b>	Driver, front passenger and rear passengers.
<b>STABILITRAK</b>	Stability Control System with Proactive Roll Avoidance and traction control, includes electronic trailer sway control and hill start assist.
<b>REAR PARK ASSIST<sup>3</sup></b>	Rear Park Assist provides alerts of nearby detected vehicle and objects behind your vehicle to help you park and avoid collisions.

1. Feature may be limited when the battery temperatures are extremely cold or hot or when battery is near full charge. See Owner's Manual for details. 2. Ultifi is pre-production and is subject to change. Actual features, functionality, and product limitations may vary. 3. Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Visibility, weather, and road conditions may affect feature performance. Read the vehicle's owner's manual for more important feature limitations and information. 4. Always use seat belts and child restraints. Children are safer when properly secured in a rear seat in the appropriate child restraint. See the Owner's Manual for more information.

## OPTIONAL 9C1/9C3 INTERIOR FEATURES

<b>U5G</b>	<b>5G WI-FI HOTSPOT</b> - Included and only available with (UE1) OnStar. Terms and limitations apply. See onstar.com or dealer for details. Service varies with conditions and location. Requires active service plan and paid AT&T data plan. See OnStar. com/BusinessSolutions for details and limitations. Availability subject to change. Vehicle must be on or in the accessory position for Wi-Fi to function.
<b>NAM</b>	<b>GOOGLE AUTOMOTIVE SERVICES</b> - included and only available with (UE1) OnStar.
<b>6E2</b>	<b>KEYS/FOBS</b> - Fleet Calibration, provides a single key and calibration with a specific code that is common to the driver door lock of the entire Blazer EV fleet with the same code. Key code is an alternate to SEO (6E8) Fleet Calibration. Includes (AU7) common fleet key. Requires (AMF) Remote Keyless Entry Package. Not available with SEO (6E8) complete vehicle fleet common key.
<b>6E8</b>	<b>KEYS/FOBS</b> - Fleet Calibration, provides a single key and calibration with a specific code that is common to the driver door lock of the entire Blazer EV fleet with same code. Key code is an alternate to SEO (6E2) Fleet Calibration. Includes (AU7) common fleet key. Requires (AMF) Remote Keyless Entry Package. Not available with SEO (6E2) complete vehicle fleet common key.
<b>AMF</b>	<b>REMOTE KEYLESS ENTRY PACKAGE</b> - Includes 4 additional transmitters, NOTE: programming of remotes is at customer's expense. Programming remotes is not a warranty expense.
<b>T53</b>	<b>LAMPS</b> - Alternate flashing Red & Blue rear compartment lid warning (visible when liftgate is open) and controlled by momentary liftgate mounted switch or ground wire.
<b>6C7</b>	<b>LIGHTING</b> - Red and white LED auxiliary dome lamp is located on headliner between front row seats. The auxiliary lamp is wired independently from standard dome lamp.
<b>6N6</b>	<b>REAR DOOR LOCKS AND HANDLES INOPERATIVE</b> - Rear power locks are inoperable at rear door but operate from drivers position, rear doors can be opened only from outside the vehicle. Includes (VBO) Kerr Industries Ship-thru to mechanically remove hardware linkage.
<b>6N5</b>	<b>REAR DOOR WINDOW SWITCHES INOPERATIVE</b> - Calibration for rear windows to operate from drivers position only. Window lockout switch remains illuminated in all positions when equipped with this feature.
<b>U2K</b>	<b>SiriusXM WITH 360L</b> - Not available on 9C1. Includes a trial subscription to the Platinum Plan. Included and only available with (UE1) OnStar. Trial subscription subject to the SiriusXM Customer Agreement and privacy policy, visit <a href="http://www.siriusxm.com">www.siriusxm.com</a> which includes full terms and how to cancel. All fees, content, features, and availability are subject to change. Some features require GM connected vehicle services.

## OPTIONAL 9C1/9C3 EXTERIOR FEATURES

<b>9G8</b>	<b>LIGHTING DELETE</b> - Daytime Running Lamps and automatic headlamp control delete. Deletes standard Daytime Running Lamps and automatic headlamp control features, also disables automatic interior courtesy lighting.
<b>5T4</b>	<b>SPECIAL PAINT<sup>3</sup></b> - Victory Red WA 9260. Requires SEO (TGK) special paint solid.
<b>9W5</b>	<b>SPECIAL PAINT<sup>3</sup></b> - Silver Ice Metallic WA 636R. Requires SEO (TGK) special paint solid.
<b>9V7</b>	<b>SPECIAL PAINT<sup>3</sup></b> - Dark Blue Metallic WA 722J. Requires SEO (TGK) special paint solid.
<b>9V2</b>	<b>SPECIAL PAINT<sup>3</sup></b> - MSP Blue Goose.
<b>6JE</b>	<b>BLUE LEFT / BLUE RIGHT WHELEN LED ION LIGHT PACKAGE</b> - Two ION light heads mounted on each exterior corner. Not available with 6JG, 6J9 or 6J8 Package.
<b>ARU</b>	<b>REAR SIDE GLASS</b> - Deep tint.
<b>6JG</b>	<b>RED LEFT / BLUE RIGHT WHELEN LED ION LIGHT PACKAGE</b> - Two ION light heads mounted on each exterior corner. Not available with 6JE, 6J9 or 6J8 Package.
<b>6J9</b>	<b>RED LEFT / RED RIGHT WHELEN LED ION LIGHT PACKAGE</b> - Two ION light heads mounted on each exterior corner. Not available with 6JG, 6JG or 6J8 Package.
<b>6J8</b>	<b>WHITE LEFT / WHITE RIGHT WHELEN LED ION LIGHT PACKAGE</b> - Two ION light heads mounted on each exterior corner. Not available with 6JG, 6J9 or 6J9 Package.
<b>TGK</b>	<b>SPECIAL PAINT SOLID</b> - Special paint, one color. Required with any special paint selection. Refer to individual special paint SEO codes for details on body colored non-sheet metal parts. May require extended lead time.
<b>7X3</b>	<b>SPOTLAMP</b> - Left hand, pillar-mounted unity, 6-inch with LED lamps; independently fused NOTE: Factory installation of spotlamps are recommended. Special tooling is used to locate and drill the spotlamp shaft hole in the pillars. (Interior trim covers provided with factory installed lamps are not available as service parts). Field installation of spotlamps must not interfere with proper deployment of the roof rail mounted head-curtain airbags in the event of a crash.

1. Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Visibility, weather, and road conditions may affect feature performance. Read the vehicle's owner's manual for more important feature limitations and information. 2. To avoid the risk of injury, never use Recovery Hooks to tow a vehicle. For more information, see the Recovery Hooks section of your Owner's Manual. 3. Not available at this time



## OPTIONAL 9C1/9C3 ELECTRICAL FEATURES

<b>5J1</b>	<b>CALIBRATION</b> - Keyless remote panic button and exterior lights/horn disable
<b>1MP</b>	<b>SMARTPHONE APP REMOTE START</b> - Only available with OnStar.
<b>UTQ</b>	<b>THEFT DETERRENT SYSTEM DISABLE</b> - The alarm and horn become non-functional in an attempt of theft to the vehicle (recommended for vehicles utilizing 6E2 or 6E8 key codes).
<b>WX7</b>	<b>WIRING</b> - Auxiliary speaker. For upfitter connection to front door and windshield speakers.
<b>6J3</b>	<b>WIRING</b> - For grille lamps and siren speaker
<b>6J4</b>	<b>WIRING</b> - For horn and siren.

## OPTIONAL 9C1/9C3 MECHANICAL FEATURES

<b>V92</b>	<b>TRAILERING PROVISIONS</b> - Includes; Wiring, (CTT) Hitch Guidance and (PZ8) Hitch View
<b>SDE</b>	<b>TRAILER HITCH</b> - Removable 2" (Class 2.) receiver. Requires (V92) trailering provisions and (VLG) trailer hitch closeout panel.
<b>VLG</b>	<b>TRAILER HITCH CLOSEOUT PANEL</b> - Dealer installation trim. Requires (SDE) trailer hitch.

## OPTIONAL SHIP THRU

<b>VBO</b>	<b>SHIP THRU</b> - Produced in GM Ramos and shipped to Kerr Industries Ramos, Returned to GM Ramos for shipping to final destination.
------------	---

## EMISSIONS - ZERO EMISSIONS VEHICLE (ZEV)

<b>FE9</b>	<b>Emissions</b> , Federal requirements
<b>NE1</b>	<b>Emissions</b> , Connecticut, Delaware, Maine, Maryland, Massachusetts, New Jersey, New York, Oregon, Pennsylvania, Rhode Island, Vermont and Washington state requirements
<b>YF5</b>	<b>Emissions</b> , California state requirements
<b>NB8</b>	<b>Emissions override</b> , California (allows a dealer in states that require California emissions - California, Connecticut, Delaware, Maryland, Massachusetts, New Jersey, New York, Oregon, Pennsylvania, Rhode Island or Washington - to order Federal emissions for a vehicle that will be registered in a state that has Federal emission requirements). Do not use for vehicles that will be registered in California, Connecticut, Delaware, Maryland, Massachusetts, New Jersey, New York, Oregon, Pennsylvania, Rhode Island or Washington. Requires (FE9) Federal emissions requirements. Not available in Maine or Vermont.
<b>NB9</b>	<b>Emissions override</b> , state-specific (for dealers ordering vehicles in (YF5) or (NE1) emission states - California, Connecticut, Delaware, Maine, Maryland, Massachusetts, New Jersey, New York, Oregon, Pennsylvania, Rhode Island, Vermont and Washington) Allows a California dealer (YF5 emissions) to order (NE1) emissions with (NB9) emissions override code for registration in (NE1) states; or, a Connecticut, Delaware, Maine, Massachusetts, New Jersey, New York, Oregon, Pennsylvania, Rhode Island, Vermont and Washington dealer (NE1 emissions) to order (YF5) emissions with (NB9) emissions override code for registration in California.
<b>NC7</b>	<b>Emissions override</b> , Federal (for vehicles ordered by dealers in Federal emission states with (YF5) or (NE1) emissions - Not required for vehicles being shipped to California, Connecticut, Delaware, Maine, Maryland, Massachusetts, New Jersey, New York, Oregon, Pennsylvania, Rhode Island, Vermont or Washington) Requires (YF5) California state emissions requirements or (NE1) Connecticut, Delaware, Maine, Massachusetts, New York, Pennsylvania, Rhode Island or Vermont state emission requirements.

FE9 NAME CERTIFICATION EMISSION, FEDERAL

NE1 NAME CERTIFICATION EMISSION, GEOGRAPHICALLY RESTRICTED

YF5 NAME CERTIFICATION EMISSION, CALIFORNIA is certified to EPA Tier 3 BIN 70 standards and qualifies as ULEV 70 (Ultra Low Emission Vehicle) under California Air Resources Board (CARB) requirements, meaning it is 50-state certified.

EPA engine family or test group: MGMXT05.3388

## TIRES

MANUFACTURER	QUANTITY	SIZE	SPEED RATING	TYPE
Firestone	4	265/50R20	V	All season BW

### NOTE:

**Due to specific requirements for performance durability and safety, GM recommends only the original equipment tires for replacement.**

**Tire Plies = Tread 6 ply; 2 Polyester, 2 Steel, 2 Nylon, Sidewall, 2 Polyester**

**Tire Chains** - If the vehicle is equipped with tire size 265/50R20, use tire winter traction devices only where legal and only when necessary. Only use textile traction devices, such as tire snow socks, that are the proper size for the tires. Traction devices must be installed only on the tires of the drive axle. Drive slowly and follow the traction device manufacturer's instructions. Driving too fast or spinning the wheels can damage the traction device.



DC FAST CHARGING CAPABLE



STANDARD HEAVY-DUTY STEEL WHEEL  
WITH FIRESTONE FIREHAWK PURSUIT TIRE



## SPECIFICATIONS

**ALL WHEEL DRIVE (MPH/KPH)**

Model	1MF26
Projected top speed <sup>1</sup>	130/209
Projected top speed in reverse <sup>1</sup>	25/40
Acceleration <sup>1</sup> 0-20 mph (sec.)	1.77
Acceleration <sup>1</sup> 0-30 mph (sec.)	2.60
Acceleration <sup>1</sup> 0-40 mph (sec.)	3.41
Acceleration <sup>1</sup> 0-50 mph (sec.)	4.24
Acceleration <sup>1</sup> 0-60 mph (sec.)	5.17
Acceleration <sup>1</sup> 0-70 mph (sec.)	6.27
Acceleration <sup>1</sup> 0-80 mph (sec.)	7.62
Acceleration <sup>1</sup> 0-90 mph (sec.)	9.20
Acceleration <sup>1</sup> 0-100 mph (sec.)	11.08

**RANGE ON A FULL CHARGE**

EPA Estimated range <sup>7</sup> (miles/km)	273/439
GM Estimated range with Emergency Equipment <sup>7</sup> (miles/km)	250/402

Note: EPA-ESTIMATED ratings are official, not estimate based on GM testing

**VEHICLE WEIGHT (LBS./KG.)**

Seating Capacity	2/3
GVWR <sup>3</sup> (Gross Vehicle Weight Rating)	6945/3150
FGAWR (Front Gross Axle Weight Rating)	1550/703
RGAWR (Rear Gross Axle Weight Rating)	1700/771
Payload without Trailer Hitch <sup>4</sup>	1192/540
Payload with Trailer Hitch <sup>4</sup>	1159/526
Base curb weight	5870/2663
Maximum Trailering Capacity <sup>5</sup>	1,000/454

**PASSENGER COMPARTMENT VOLUME (cu.ft./liters)**

Passenger Volume Front Row	58/1642
Passenger Volume Second Row	25.7/728
Cargo Volume With Rear Seat Up	26.2/742

**FRONT COMPARTMENT (in./mm)**

Head room	40.88/1038
Shoulder room, 1st row	58.70/1491
Hip room, 1st row	57.40/1458
Leg room, 1st row, max	44.20/1123

**REAR COMPARTMENT (in./mm)**

Head room	38.10/968
Shoulder room	58.33/1482
Hip room	53.79/1366
Leg room	38.92/989

**CARGO (in./mm)**

Load floor length to center of front seat at floor	71/1804
Load floor length to center of 2nd seat at floor at seat	25/889
Inside width between wheelhouse	42/1067
Cargo area width	47.2/1200
Cargo area length	36.9/937
Cargo area height (headliner limited)	26.8/681
Cargo volume <sup>2</sup> maximum behind front seat (cu. ft./liters)	59.1/1673.7
Cargo volume <sup>2</sup> maximum behind second seat (cu. ft./liters)	25.5/722.2

**EXTERIOR (in./mm)**

Wheelbase	121.80/3094
Overall length	192.62/4893
Overall width, without mirrors	78.02/1982
Overall width, including mirrors	86.50/2197
Overall height <sup>6</sup>	64.78/1645
Lift in height <sup>6</sup> (Top of load floor to ground)	29.40/747
Step-in height	
Front track width	65.90/1674
Rear track width	65.90/1674
Turning diameter curb to curb (ft./m)	39.7/12.1
Approach angle	19 degrees
Departure angle	22 degrees
Breakover angle	15 degrees
Ground Clearance	6.5/166
Overhang, front	35.09/891
Overhang, rear	35.37/898
Fording depth	12in/304.8mm @ 6.2mph/10kph

**1.** Based on 2024MY Michigan State Police Vehicle Test Results. All vehicles tested with clean roof and no additional equipment or added ballast. Adding non dealer accessories or making modifications to the vehicle can affect vehicle performance, aerodynamics, overall top speed and acceleration. **2.** Cargo and load capacity limited by weight and distribution. **3.** Gross Vehicle Weight Rating (GVWR). When properly equipped, includes vehicle, passengers, cargo and equipment. **4.** These maximum payload ratings are intended for comparison purposes only. Before you buy a vehicle or use it to haul people or cargo, carefully review the vehicle loading section of the Owner's Manual and check the carrying capacity of your specific vehicle on the label on the inside of the driver's door jamb. **5.** Maximum trailering ratings are intended for comparison purposes only. Before you buy a vehicle or use it for trailering, carefully review the trailering section of the Owner's Manual. The trailering capacity of your specific vehicle may vary. The weight of passengers, cargo and options or accessories may reduce the amount you can trailer. **6.** Published dimension indicated is from ground and without optional equipment or accessories. Additional accessories or equipment ordered at the customer's request can result in a minor change in this dimension. **7.** On a full charge based on development testing and/or analytical projection consistent with SAE J1634 revision 2017 - MCT. Range subject to change prior to production. Actual range may vary based on several factors, including ambient temperature, terrain, battery age and condition, loading, and how you use and maintain your vehicle. EPA estimates not yet available.

## SPECIFICATIONS

**PROPULSION SYSTEMS**

	<b>STANDARD</b>
Type	Ultium Performance All Wheel Drive
Motor	2-Motor Permanent Magnetic Drive
Power on a full charge (hp/kW)	498/372
Torque on a full charge (lb.ft./Nm)	531/720

**DRIVE BATTERY**

Type	Rechargeable energy storage system with 12-module pack
Mass (lb / kg)	947 / 430
Battery chemistry	Lithium-ion
Cells	288
Energy	102 kWh
Projected Range <sup>1</sup> (mi/km)	250/402
Warranty <sup>2</sup>	8 years / 100,000 miles of battery and electric components coverage

**BRAKES**

eBoost ABS	Disc/Disc
Front rotor diameter (in./mm)	15/381
Rear rotor diameter (in./mm)	13.5/343
Front rotor thickness (in./mm)	1.26/32
Rear rotor thickness (in./mm)	0.79/20
Projected Stopping Distance from 60.0 mph (ft.) <sup>4</sup>	135.20

**TIRES**

Type	Firestone Firehawk Pursuit, V-rated, All-season
Size	265/50R20

**WHEELS**

Type	Black Steel with bolt on aluminum center cap
Size	20"x 9"

**CHASSIS**

Suspension	Heavy-duty police-rated suspension with unique StabiliTrak performance calibration.
Steering type	Power, non-variable ratio, electric
Steering ratio	15.98:1

**SERVICE BATTERIES**

Type	Maintenance free
BCI group size	LN1
Volts	12 V
Amp hour rating	50 ah
Reserve capacity	80 min
Cold cranking-amps	520 a

**LEVEL 2 RESIDENTIAL CHARGING<sup>3</sup>**

240-Volt (48-amp)	Provides up to 37 miles of range per hour
19.2 Kilowatt (80-amp)	Provides up to 52 miles of range per hour

 
**LEVEL 3 DC FAST CHARGING<sup>3</sup>**

400-Volt 190 Kilowatt	Provides up to 71-miles of range in 10-minutes or 141-miles of range in approximately 30-minutes
-----------------------	--


**1.** GM estimated range based on current capability of analytical projection consistent with SAE J1634 revision 2017-MCT. GM estimated range is based on a vehicle with a full charge. Actual range will vary based on several factors, including temperature, terrain, battery age, loading, use and how you use and maintain your vehicle. Performance targets. Estimates and capability specifications based on computer-aided analysis and simulation using virtual engineering tools. EPA estimates not yet available. **2.** Limited warranty. Whichever comes first. See dealer for details. See owner's manual for additional limitations. **3.** Actual charge times will vary based on battery starting state of charge, battery condition, output of charger, vehicle settings and outside temperature. See owner's manual for additional limitations. **4.** Based on 2024MY Michigan State Police Vehicle Test Results. All vehicles tested with clean roof and no additional equipment or added ballast."




AVAILABLE EXTERIOR COLORS ACTUAL COLORS MAY VARY



Summit White  
WA-8624

 

Red Hot  
WA-130X

 

Black  
WA-8555



Riptide Blue Metallic  
WA-121J



Galaxy Gray Metallic  
WA-127J



 
Radiant Red Tintcoat\*  
WA-170H




Sterling Gray Metallic  
WA-130H

\* Available at extra cost


SEO PAINT AVAILABLE<sup>1</sup> ACTUAL COLORS MAY VARY



Victory Red<sup>1</sup>  
WA-9260

 

 Silver Ice Metallic<sup>1</sup>  
WA-636R





Dark Blue Metallic<sup>1</sup>  
WA-722J




MSP Blue Goose<sup>1</sup>  
WA-5665

NOTE:  
• Actual color may vary

AVAILABLE INTERIOR COLOR ACTUAL COLORS MAY VARY

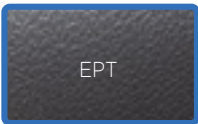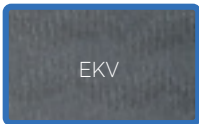

Black cloth Front  
Black vinyl Rear  
9C1 only

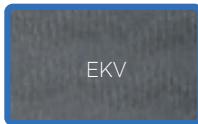

Black cloth Front and Rear  
9C3 only



Blazer EV 9C1 Interior




Blazer EV 9C3 Interior

1. Not available at this time.



## REAR ACCOMODATIONS


Shown with equipment from independent suppliers not covered by the GM New Vehicle Limited Warranty GM is not responsible for the safety or quality of independent supplier alterations.

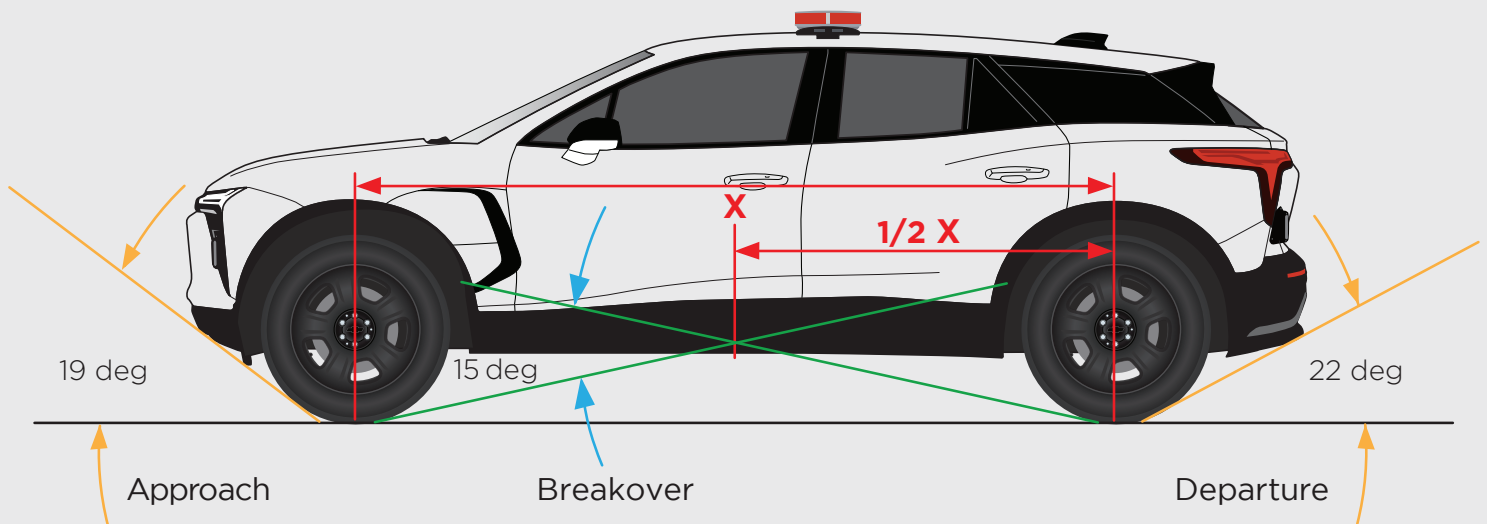**APPROACH AND DEPARTURE ANGLES**


	PPV Blazer EV AWD
Approach Angle	19 degrees
Departure Angle	22 degrees
Breakover Angle	15 degrees
Ground Clearance	7.49 in. / 190 mm
Wheelbase (X)	121.80 in. / 3094 mm
Overhang, front	35.09 in. / 891 mm
Overhang, rear	5.37 in. / 898 mm




## DIMENSIONS

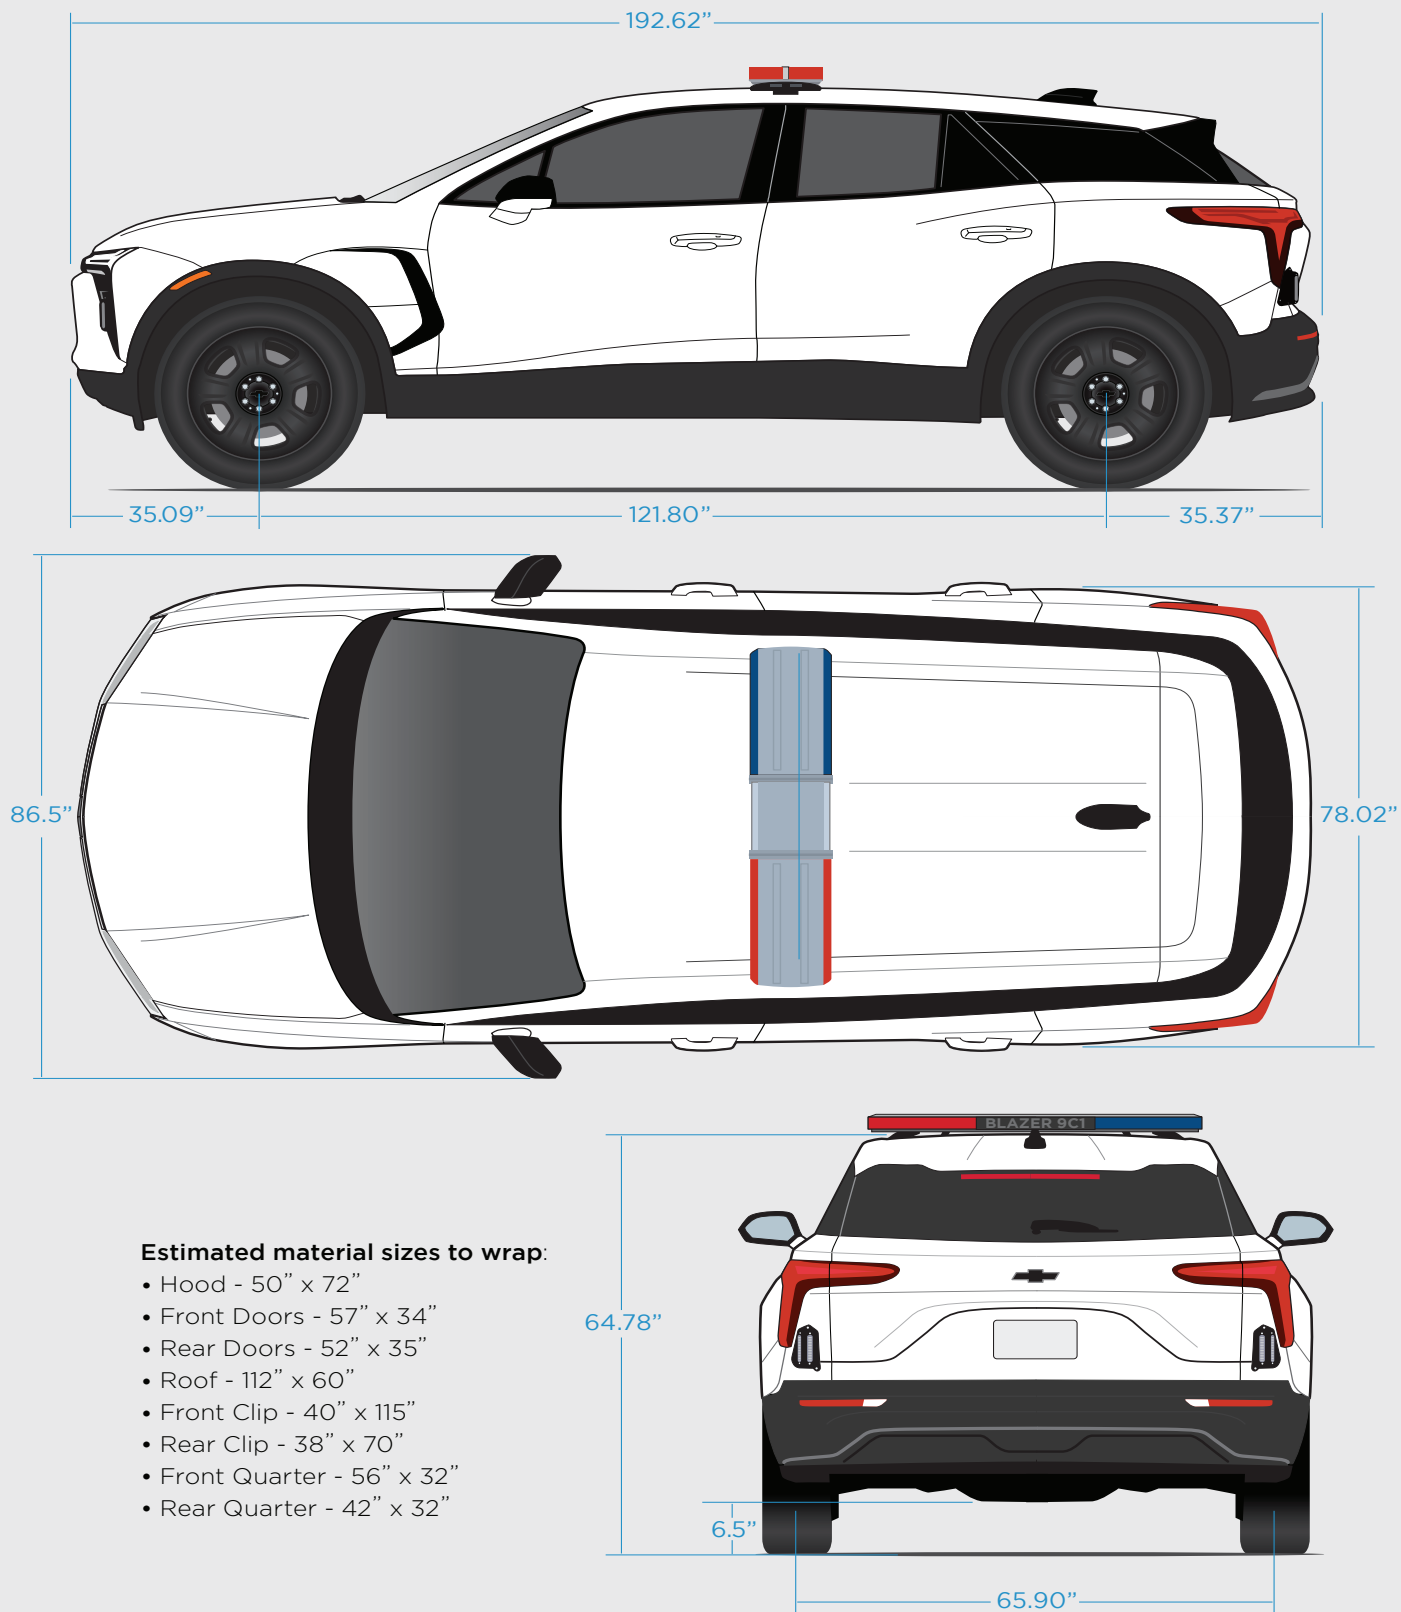


## UNITED STATES CERTIFIED SPEEDOMETER/CLUSTER (CANADIAN SIMILAR)

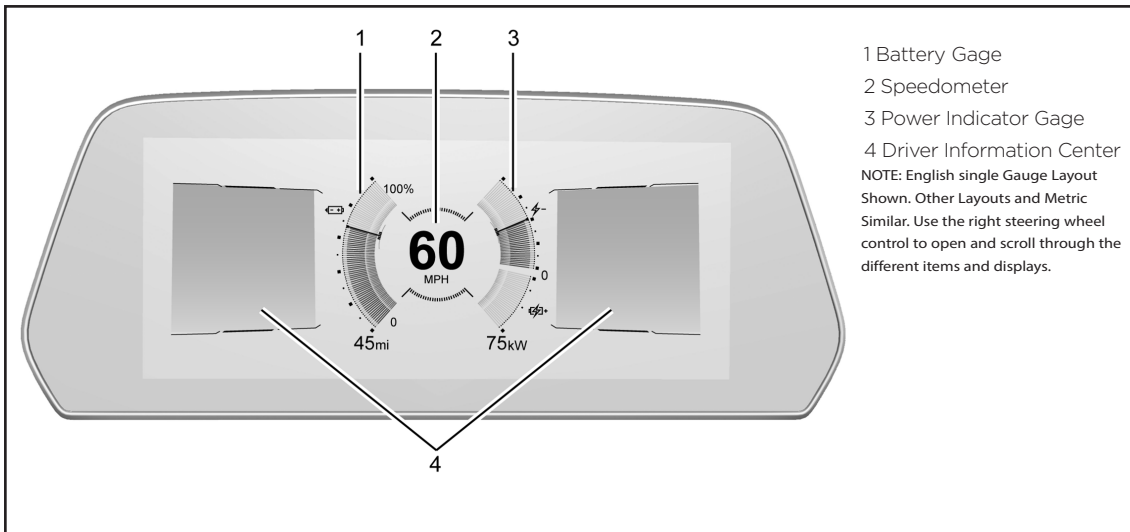

### RADIO, SIREN/FLASHERS CONTROLS

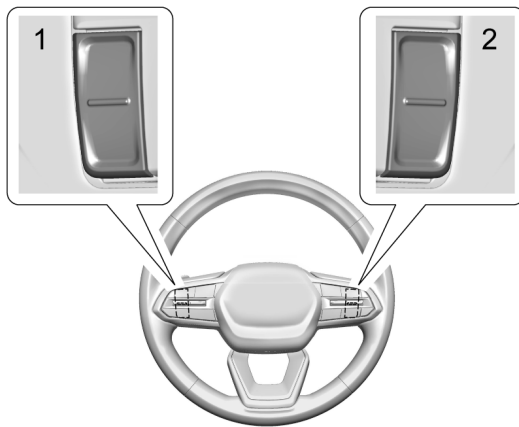

1. The steering wheel controls on left rear side control momentary output for two-way radio microphone and latching for siren/flashers.
2. Volume: Press to increase or decrease the volume.

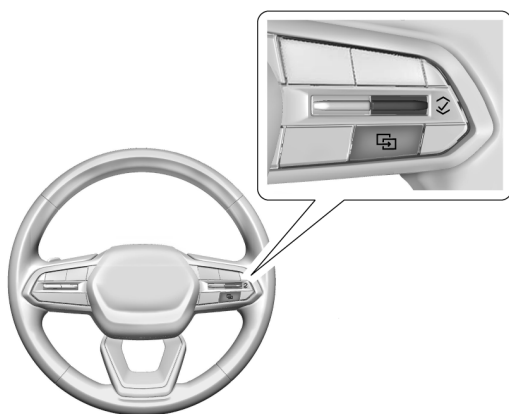

### STEERING WHEEL MENU CONTROLS

### 2024 BLAZER EV PPV SPEEDOMETER CERTIFICATION CALIBRATION

"To Whom it May Concern;

The speedometer system in the 2024MY Police Blazer EV is equipped with an electronically controlled speedometer which is designed to be accurate  $\pm 3$  km/h ( $\pm 2$  mph) through its range of function. The Police Package speedometer is calibrated with (XOE), performance all wheel drive electrified propulsion system, and 265/50R20 SL 107V rated tires (QH9). Specifications are at temperatures of  $-23$  to  $49$  °C ( $-10$  to  $120$  °F). Inaccuracies due to vehicle speed sensing are included.

GM specified vehicle maintenance is required to maintain the stated accuracy of the speedometer system. The accuracy of the speedometer system is dependent on and affected by the required vehicle maintenance including; following placard tire inflation pressure of 39 psi, monitoring tire wear as directed by the owner's manual, tire replacement with all-season Firestone Firehawk Pursuit 265/50 R20 tires, maintaining original OEM driveline ratios, maintaining original OEM electronic module calibration files and following vehicle loading limitations.

*Sean O'Shea*  
Regards,

Sean O'Shea  
Police Vehicle Program Manager

VEHICLE TOUCH SCREEN SETTINGS



VEHICLE PERSONALIZATION MENU

The Personalization Menu is accessed by:

Item setting

Important features in the VEHICLE SETTINGS sub-menu that can be changed are:

Rear Seat Reminder<sup>1</sup>

Buckle to Drive

Collision Detection<sup>2</sup>

Comfort and Convenience

Lighting

Power Locks

Safety Alert Seat<sup>2</sup>

See the Owner’s Manual for a complete Vehicle Personalization Menu listing of items that may be available for your vehicle.

1. Does not detect people or items. Always check rear seat before exiting. 2. Safety or driver assistance features are no substitute for the driver’s responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Visibility, weather, and road conditions may affect feature performance. Read the vehicle’s owner’s manual for more important feature limitations and information.



## STANDARD INTERIOR FEATURES

## REAR CAMERA MIRROR



Inside rearview auto-dimming with full camera display. Includes (CWA) Rear Camera Mirror Washer.

This automatic dimming mirror provides a wide angle camera view of the area behind the vehicle. Pull the tab to turn on the display. Push the tab to turn it off. When off the mirror is automatic dimming. Adjust the mirror for a clear view of the area behind the vehicle while the display is off.

**WARNING:** The Rear Camera Mirror (RCM) has a limited view. Portions of the road,

Vehicles, and other objects may not be seen. Do not drive or park the vehicle using only this camera. Objects may appear closer than they are. Check the outside mirrors or glance over your shoulder when making lane changes or merging. Failure to use proper care may result in injury, death, or vehicle damage.

The Rear Camera Mirror may not work properly or display a clear image if:

- There is glare from the sun or headlamps.

- This may obstruct objects from view. If needed, push the tab to turn off the display.

- Dirt, snow, or other debris blocks the camera lens. Clean the lens with Rear Camera Washer or a soft damp cloth.

- The camera's mounting on the vehicle has been damaged, and/or the position or the mounting angle of the camera has changed.

Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Visibility, weather, and road conditions may affect feature performance. Read the vehicle's owner's manual for more important feature limitations and information.

## REAR SEAT REMINDER

The message REAR SEAT REMINDER LOOK IN REAR SEAT displays under certain conditions indicating there may be an item or passenger in the rear seat. Check before exiting the vehicle. This feature will activate when a second row door is opened while the vehicle is on or up to 10 minutes before the vehicle is turned on. There will be an alert when the vehicle is turned off. The alert does not directly detect objects in the rear seat; instead, under certain conditions, it detects when a rear door is opened and closed, indicating that there may be something in the rear seat.

The feature is active only once each time the vehicle is turned on and off, and will require reactivation by opening and closing the second row doors. There may be an alert even when there is nothing in the rear seat; for example, if a child entered the vehicle through the rear door and left the vehicle without the vehicle being shut off.


The feature can be turned on or off. Select Settings > Vehicle > Rear Seat Reminder > ON or OFF.

Note: Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. Read the vehicle's Owner's Manual for important safety and driver assistance feature limitations and information

## STANDARD SAFETY FEATURES

SAFETY ALERT SEAT<sup>1</sup>



The driver seat cushion may provide a vibrating pulse alert or audible beeping. To change settings from the infotainment screen, touch Settings > Vehicle > Collision/Detection Systems. Keep these areas of the vehicle clean and clear of obstacles to ensure the best driver assistance feature performance. Driver Information Center (DIC) messages may display when the systems are unavailable or blocked.

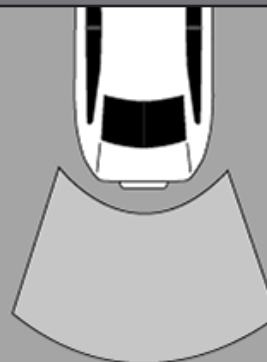REAR PARK ASSIST<sup>1</sup>

The cluster may display a Park Assist amphitheater-like display with bars that represent the estimated location of a detected object and the vehicle's distance from the object. As a detected object becomes closer, more bars light up and change color from yellow to amber to red. When an object is first detected in the rear, one beep will be heard from the rear, or the SAFETY SEAT will pulse two times. When an object is very close, five beeps will sound from the rear or the SAFETY SEAT will pulse five times.

The Park Assist System is no substitute for careful and attentive driving. The Park Assist system does not detect children, pedestrians, bicyclists, animals, or objects located below the bumper or that are too close or too far from the vehicle. It is not available at speeds greater than 9 km/h (6 mph). To prevent injury, death, or vehicle damage, even with Park Assist, always check the area around the vehicle and check all mirrors before moving forward or backing.

The REAR Park Assist System can be turned on or off using the infotainment system. To view available settings from the infotainment home screen, touch Settings > Vehicle > Collision/Detection Systems.

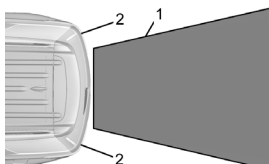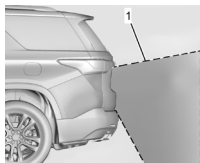HD REAR VISION CAMERA<sup>1</sup>


Displayed images may be farther or closer than they appear. The area displayed is limited and objects that are close to either corner of the bumper or under the bumper do not display.


The camera(s) do not display children, pedestrians, bicyclists, crossing traffic, animals, or any other object outside of the cameras' field of view, below the bumper, or under the vehicle. Shown distances may be different from actual distances. Do not drive or park the vehicle using only these camera(s). Always check behind and around the vehicle before driving. Failure to use proper care may result in injury, death, or vehicle damage.


<sup>1</sup> Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Visibility, weather, and road conditions may affect feature performance. Read the vehicle's owner's manual for more important feature limitations and information.


## STANDARD INTERIOR FEATURES

OnStar®






Voice Command Button



Blue OnStar® Button


Emergency Button

This vehicle is equipped with a comprehensive, in-vehicle system that can connect to a live OnStar® Advisor for Emergency, Security, Navigation, Connection, and Diagnostic Services. OnStar® services may require a paid subscription. OnStar® requires the vehicle battery and electrical system, cellular service, and GPS satellite signals to be available and operating. OnStar® acts as a link to existing public emergency service providers. OnStar® may collect information about you and your vehicle, including location information. See OnStar®'s Terms and Conditions and Privacy Statement for more details including system limitations at [www.OnStar.com](http://www.OnStar.com) (U.S.) or [www.OnStar.ca](http://www.OnStar.ca) (Canada). The OnStar® system status light is next to the OnStar® buttons. If the status light is:

- Solid Green: System is on.
- Flashing Green: On a call.
- Red: Indicates a problem.
- Off:  System is off. Press the blue OnStar® button twice to speak with an OnStar® Advisor.

Press  or call 1-888-4-ONSTAR (1-888-466-7827) to speak to an Advisor.

Press  to:

- Make a call, end a call, or answer an incoming call.
- Give OnStar® Hands-Free Calling voice commands.


**NOTE: Do not activate OnStar® if you have no plans on using this feature**



## STANDARD MECHANICAL FEATURES

### SERVICE PARTS IDENTIFICATION LABEL

SPID Label Content Now Included with Certification Label. The Service Parts Identification (SPID) label, often located in the trunk or glovebox of a vehicle, lists a vehicle's VIN, RPO codes and other information that identify the content of the vehicle. Beginning with the 2018 model year, much of this information will be available through a QR code on the Certification label.

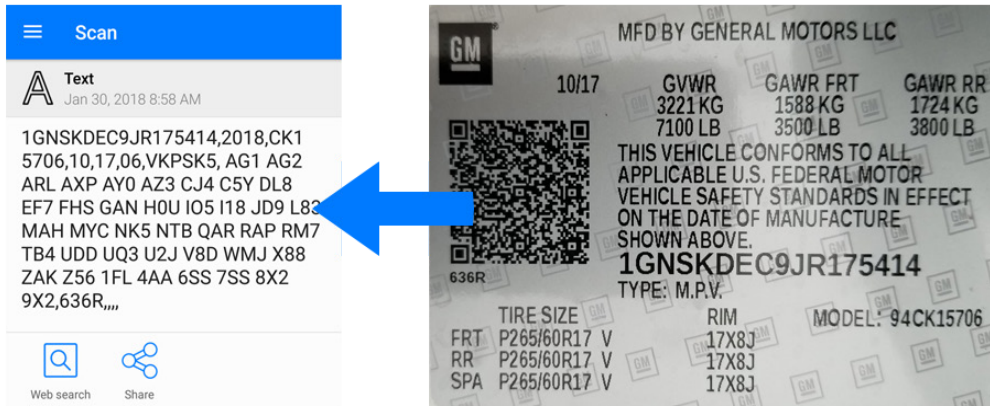

Software to read the QR code is commonly available for any Android, iPhone or Windows smartphone. Many basic applications can be downloaded for free. Tested QR code readers that are easy to use include NeoReader by NM LLC, inigma by 3GVision, QR Scanner by Honestly App, QR Droid by DroidLa and Bar-Code by PW2. GM does not recommended any particular software. Once the QR code is scanned, the vehicle information will appear in the following order: VIN, Model Year, Model, Build Month, Year, MOTORring Book, Vehicle Order Number, 3 Digit RPO Codes sorted alphanumerically, and the Paint Code (same code appears in the lower left of the QR code).

### STABILITRAK CONTROL

The vehicle has a Traction Control System (TCS) and StabiliTrak/Electronic Stability Control (ESC), an electronic stability control system. These systems help limit wheel slip and assist the driver in maintaining control, especially on slippery road conditions.

TCS activates if it senses that any of the drive wheels are spinning or beginning to lose traction. When this happens, TCS applies the brakes to the spinning wheels and reduces propulsion system power to limit wheel spin.

StabiliTrak/ESC activates when the vehicle senses a difference between the intended path and the direction the vehicle is actually traveling. StabiliTrak/ESC selectively applies braking pressure to any one of the vehicle wheel brakes to assist the driver in keeping the vehicle on the intended path.

If TCS is limiting wheel spin when g is pressed, the system will not turn off until the wheels stop spinning.

If cruise control is being used and TCS or StabiliTrak/ESC begins to limit wheel spin, cruise control will disengage. Cruise control may be turned back on when road conditions allow.

Both systems come on automatically when the vehicle is started and begins to move. The systems may be heard or felt while they are operating or while performing diagnostic checks. This is normal and does not mean there is a problem with the vehicle.

It is recommended to leave both systems on for normal driving conditions, but it may be necessary to turn TCS off if the vehicle gets stuck in sand, mud, ice, or snow. See "Turning the Systems Off and On" later in this section.

Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Visibility, weather, and road conditions may affect feature performance. Read the vehicle's owner's manual for more important feature limitations and information.

## STANDARD ELECTRICAL FEATURES

### SURVEILLANCE MODE – SEO 5J3

The Blazer EV Police and Special Service Package has a Body Control Module (BCM) calibration which disables all automatic exterior and interior lighting.

When activated, with the exterior lamp control in the auto position, the exterior and interior lighting will be disabled or dimmed to a minimum federally regulated level.

For detailed technical information on activation of this feature, refer to the vehicle technical guide under the Body Builder Manuals section on [www.gmupfitter.com](http://www.gmupfitter.com).

### RADIO MUTE FEATURE

A Radio Mute circuit (#10137) is provided to permit muting of the vehicle radio when an emergency vehicle radio is transmitting. It is the Gray/White blunt cut wire located between the front seats near the upfitter branch harness.

The following customer device electrical specifications must be met to avoid damage to the vehicle Exterior Lighting Module (ELM) input circuitry:

- No inductance allowed
- Maximum Load Capacitance: 600 nano-farads.
- Maximum Closed switch contact resistance: 20 ohms
- Minimum Open switch contact resistance: 100,000 ohms

### EXTERIOR LAMPS EMERGENCY FLASHING SYSTEM

Standard 6J7 provides headlamp high beam flashing and rear lamps flashing via the Exterior Lighting Module (ELM). The exterior lamps flashing is activated by customer switching of ground circuits in the upfitter harness located between the front seats (CONSOL) in the rear cargo area (CARGO).

Headlamp high beam flashing is activated via connection of upfitter circuit 8863 to ground via customer switching. The headlamps and high beam indicator will flash alternately at 3 flashes per second. Rear lamps flashing is chosen by the customer to flash either Red-White alternately (Brake lamps and Reverse Lamps, grounding upfitter circuit 8865) or Red-Red alternately (Left and Right Brake Lamps, grounding upfitter circuit 8864). The rear lamps flash rate is 3 per second. Depressing the Brake pedal will override the brake lamp flashing and placing the transmission in Reverse will override the reverse lamps flashing.

During daylight conditions, the Daytime Running Lamps (DRL) are automatically turned off whenever the Lamp Flashing System is activated. During night time conditions the low beam headlamps and tail lamps automatically turn on while the high beams flash. Turning on the high beam headlamps will override high beam flashing. If Option 9G8 is present the low beam head lamps and tail lamps must be manually activated. The Center Mounted Stop Lamp will operate only when the service brakes are applied.

#### NOTES:

- Wiring connection or splice changes are to be removed before the vehicle is returned to civilian use.
- For wiring diagram see Wiring Section

### PROTECTED IDLE

The Protected Idle Feature allows the vehicle to remain idling but will not allow the gear selector to be shifted from Park without a valid REMOTE KEYS.

#### ACTIVATING PROTECTED IDLE

##### Preconditions (All preconditions must be met.)

- Vehicle is NOT in a low charge condition (Charge vehicle soon indicator is not on with yellow battery showing.)
- Vehicle is in PROPULSION state
- Vehicle is in Parked State
- Vehicle speed is less than 4 kilometers per hour
- Valid REMOTE KEYS is present.

##### Activation

Exit vehicle with REMOTE KEYS

##### Vehicle Feedback.

Upon activation of Protected Idle the Digital Information Center (DIC) will display the following:

- "Protected idle ON"
- "Park in Open Area"
- "Take Your Key"
- "Protected idle on, take keys to secure vehicle"

If any of the above preconditions are not met while activating Protected Idle, DIC will display the message: *"Protected Idle Unavailable"*

#### DEACTIVATING PROTECTED IDLE

- Valid key fob is present
- Press and hold Cruise Cancel **OR**
- Press brake pedal and shift out of Park **OR**
- Press the Ignition Switch with the Brake Pedal pressed.
- DIC messages will turn off, indicating Protected Idle is no longer activated.

#### CONDITIONS UNDER WHICH THE PROTECTED IDLE WILL TURN OFF AND VEHICLE WILL TRANSITION TO OFF POWER MODE

- Brake pedal pressed without a valid REMOTE KEYS present **OR**
- Cruise Cancel Switch depressed without a valid REMOTE KEYS present **OR**
- Ignition Switch pressed without a valid REMOTE KEYS present **OR**
- With a valid REMOTE KEYS present, ignition switch is pressed and brake pedal is not pressed (the system treats this action as a customer request to turn OFF the vehicle.) **OR**
- Horn chirps occur. **OR**
- Low power condition. Horn chirps occur.

#### CONDITIONS UNDER WHICH THE PROTECTED IDLE WILL TURN OFF AND VEHICLE WILL TRANSITION TO RUN POWER MODE.

- If the Shift Lock mechanism is defeated and shifted Out of Park while the Protected Idle is active, the vehicle will transition to the RUN power mode and Protected Idle will be deactivated and Horn chirps occur. DIC messages will turn off indicating Protected Idle is inactive.

#### ALWAYS PROPERLY SUPERVISE A VEHICLE WHEN PEOPLE OR ANIMALS ARE INSIDE.

## OPTIONAL FEATURES



## OPTIONAL FRONT AND REAR WHELEN CORNER LIGHTING

Shown with equipment from independent suppliers not covered by the GM New Vehicle Limited Warranty GM is not responsible for the safety or quality of independent supplier alterations.



## OPTIONAL FEATURES




T53 REAR LIFTGATE WARNING LIGHTS



REAR CARGO AREA (SHOWN WITH FALSE CARGO FLOOR) REMOVED.

Shown with equipment from independent suppliers not covered by the GM New Vehicle Limited Warranty GM is not responsible for the safety or quality of independent supplier alterations.

## OPTIONAL FEATURES

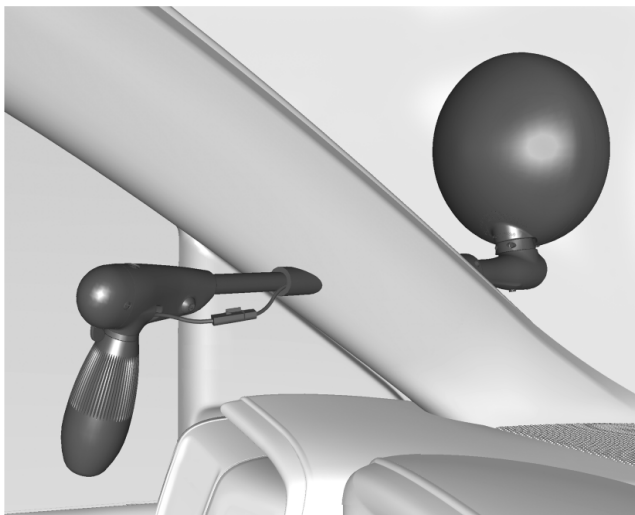**7X3****LED SPOTLAMP**

15 cm High Intensity LED spotlamp mounted to left A pillar. The lamp is protected by a 15 amp fuse in the underhood Battery Disconnect Unit (BDU). See your dealer or [www.gmupfitter.com](http://www.gmupfitter.com) for lamp replacement procedures

**6C7****AUXILIARY DOME LAMP**

Auxiliary dome lamp is located on the headliner to the rear of the overhead console and is switched at the rear lamp base. Lamp is wired separately standard dome lamps with red and white LED bulbs.

**SDE****TRAILER HITCH**


Removable 2" (Class 2.) receiver. Requires (V92) trailering provisions and (VLG) trailer hitch closeout panel.

**VLG****TRAILER HITCH TRIM BEZEL**


Requires (SDE) removable trailer hitch." at bottom.



## OPTIONAL FEATURES

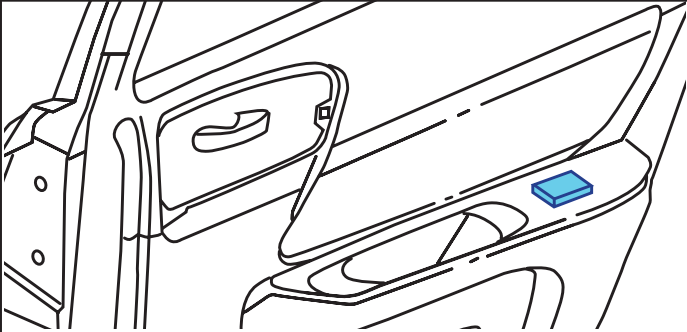**6N5****SWITCHES - REAR WINDOW INOPERATIVE**

Calibration for rear windows to operate from drivers position only. Rear door window switches are inoperable. Rear door power regulators are operable only from driver position switches. Rear door window lockout switch remains illuminated in all positions when equipped with this feature.

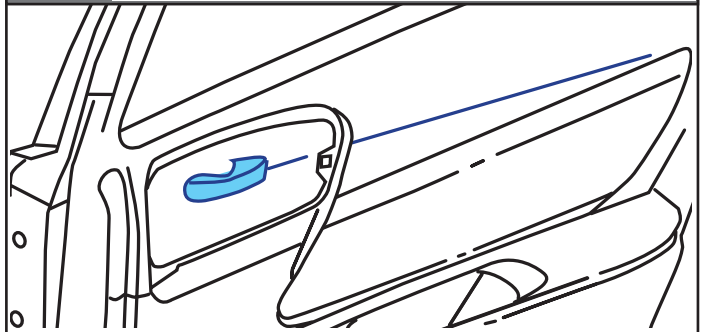**6N6****REAR DOOR LOCKS AND HANDLES INOPERATIVE**

Rear door locking rods are disabled. Rear door locks are inoperable at rear doors, but operate from driver position. Inside rear door handles are disconnected. Rear doors can only be opened from the outside.

**6E2****FLEET KEY & REMOTE FOB****6E8**

The fleet Remote Key feature allows the user to program a fob to be recognized by a particular vehicle for full remote functionality (Lock/Unlock and Remote Start if equipped). Use of this remote on other fleet keyed-a-like vehicles will be limited to unlocking the driver's door by pressing the exterior door handle button and starting the vehicle once inside. The remote lock/unlock and remote start (if equipped) buttons will not function unless the operator uses the Driver Information Center (DIC) to program the newly introduced fob. Note that a vehicle is only capable of recognizing the last 8 Remote Key programmed for full remote capability. Adding a 9th remote fob will bump fob #1 remote functionality until it is reprogrammed through the DIC, adding remote #1 back into the DIC will bump fob #2 remote button functionality, etc. There are no limitations to the amount of fleet keys that will be recognized to access and start the vehicle. Programming a newly introduced fleet fob through the DIC is required to use the Protected Idle feature. Requires AMF. Includes Fleet Common Key (AU7) and UTQ.

**AMF****PACKAGE OF FOUR UNPROGRAMMED KEYS/FOBS**

An unlimited number of KEYS/FOBS can be learned for Keyless start and Keyless open, only the last 8 KEYS/FOBS learned will have the Remote Key buttons work for that vehicle. The programming procedure for SEO AMF Remote Key requires that one previously learned Remote Key be present in the vehicle. One learned Remote Key is required for this procedure.

**NOTE:** If a previously learned Remote Key is not available, the programming of the new Remote Key must be performed by a dealer using the Service Programming System (SPS). Remote Key programming is not a warranty item and programming is conducted by the customer or at a dealer at customer expense.

**PROGRAMMING PROCEDURE:**

1. Using the learned Remote Key, turn the ignition ON. The transmission selector must be in PARK.
2. Using the SELECT and other buttons on the right side of the steering wheel, open the Driver Information Center (DIC) Main Menu. Scroll down to Main Menu item OPTIONS with the lower steering wheel button and then SELECT. Scroll to REMOTE KEY RELEARN and Select START. The DIC will display LEARNING ACTIVE.
3. For vehicles equipped with AZ3 front row seating place the Remote Key in the pocket inside the center seat console. For vehicle equipped with 5Y1 front row center 20% seat/console delete place the Remote Key on top of the the SDM cover.
4. Press the start button to learn the Remote Key. The DIC will display "ready for Key #" where # is the next Remote Key to be learned.
5. Verify that Remote Key is learned by operating the door locks remotely.
6. Repeat Step 3 through 5 to learn the next Remote Key.
7. To exit Remote Key learning mode, press and hold the start button for approximately 15 seconds.

**9G8****DRL & AHC DISABLED**

Daytime Running Lamps (DRL) and Automatic Headlamp Control (AHC) are deleted. Also disables automatic interior courtesy lighting. See your dealer to restore the DRL and AHC to normal operation. With 9G8, the instrument cluster displays are dimmable only when the exterior lamp control is in the parking lamp or headlamp position.

**UTQ****THEFT DETERRENT DISABLE**

Theft-deterrent system content is disabled. The alarm and horn become non-functional in an attempt of theft to the vehicle (recommended for vehicles utilizing 6E2 or 6E8 key codes).

## WIRING

Original Equipment Alterations: Limited warranty does not cover any damage or failure resulting from modification or alteration to the vehicle's original equipment as manufactured or assembled by General Motors. Examples of the types of alterations that would not be covered include: installation or use of any non-GM part, accessory, materials, or the cutting, welding or disconnecting of the vehicle's original equipment parts and components. Any upfit device<sup>1</sup> connected to the open ended blunt cut circuits should be fuse protected per the "Wire Gage Table" on page 45

K219 - Lighting Control Module  
 DRZ - A10 - Inside Rearview Mirror  
 A11 - Radio  
 E7L - Rear License Plate Lamp –Left  
 E7R - Rear License Plate Lamp –Right  
 E73L - Rear Fascia Signal Lamp –Left A90 Logic  
 E73R - Rear Fascia Signal Lamp –Right A90 Logic  
 E6 - High Mount Stop Lamp  
 R44 - Radio AM Antenna Signal Filter Module – Center High Mounted Stop Lamp

### KEY FOR ACRONYMS AND TERMS

---

CONSOL = SPACE BETWEEN FRONT SEATS  
 CARGO = CARGO AREA LEFT SIDE  
 IP RY CTR = IP RELAY CENTER ABOVE AND TO RIGHT OF BRAKE PEDAL  
 EBCM = ELECTRIC BRAKE CONTROL MODULE  
 4K PPM = 4000 PULSES PER MILE SPEED SIGNAL  
 ACCY = ACCESSORY  
 SURVEILLANCE = ALL AUTOMATIC LIGHTING DISABLED WHEN ACTIVATED  
 PARK ENABLE = PARK RELAY ACTIVATED  
 CHML = CENTER HIGH MOUNTED STOP LAMP; ON WHEN BRAKES APPLIED  
 BCM = BODY CONTROL MODULE  
 ELM = EXTERIOR LIGHT MODULE  
 WDO = WINDOW  
 SYNC = SYNCHRONIZED

**40-Way Connector (13533797)** - Located in the left rear cargo section of the vehicle. The circuits will require ground input or will provide power depending on the connection desired. Relays will require ground to activate and provide power to the output circuit. All others are either a blunt cut connection or ground input.

**20-Way Connector (1344146)** - Located in the right rear, and is only circuits routing to each 6-way in the mirrors and left/right rear quarters. Connect each wire to each circuit in the respective 6-way to provide power, ground, sync/control.



## WIRING


GM Option Code	Wire Gage [mm^2]	Console Connector Terminal	Cargo Connector Terminal	Wire Color	Circuit Name /Circuit #
6J3	0.8	13533797 Terminal 2	13533797 Terminal 2	Brown	8855-Police Front Grille Light 1 Power
6J3	0.8	13533797 Terminal 3	13533797 x 1 Terminal 3	Brown/Blue	8856-Police Front Grille Light 2 Power
6J3	0.8	13533797 Terminal 4	13533797 x 1 Terminal 4	Black/Brown	8857-Police Front Grille Light Return
6J3	0.8	13533797 x 1 Terminal 5	13533797 x 1 Terminal 5	White	8858-Police Front Grille Light Synchronization
6J3	0.8	13533797 x 1 Terminal 6	13533797 x 1 Terminal 6	Brown/Yellow	8859-Police Front Grille Light Steady Burn Activation
6J3	0.8	13533797 x 1 Terminal 7	13533797 x 1 Terminal 7	White/Black	8860-Police Front Grille Spare 1
6J3	1.5	13533797 x 1 Terminal 36	13533797 x 1 Terminal 36	Green/White	8861-Police Front Grille Speaker +
6J3	1.5	13533797 x 1 Terminal 37	13533797 x 1 Terminal 37	Blue/White	8862-Police Front Grille Speaker -
6J7	0.35	13533797 x 1 Terminal 8	13533797 x 1 Terminal 8	Green	8863-Police High Beam Alternate Flash Enable.
5L0	0.35	13533797 x 1 Terminal 9	13533797 x 1 Terminal 9	Blue/Green	8864-Police Tail Lamp Red/Red Alternate Flash Enable.
5J9	0.35	13533797 x 1 Terminal 10	13533797 x 1 Terminal 10	Gray/Green	8865-Police Tail Lamp Red/White Alternate Flash Enable.
T53	0.8	X1 - 13533797 Terminal 11	X1 - 13533797 Terminal 11	White	8867-Police Liftgate Strobe Synch
T53	0.35	X1 - 13533797 Terminal 12	X1 - 13533797 Terminal 12	Violet/Yellow	8868-Police Liftgate Strobe Enable 1
T66 left front	0.75	None	X1 - 13544146 - Terminal 1	Violet	8870-Police Left Mirror Light Power
T66 left front	0.75	None	X1 - 13544146 - Terminal 2	Black/Violet	8871-Police Left Mirror Light Return
T66 left front	0.75	None	X1 - 13544146 - Terminal 3	White/Violet	8872-Police Left Mirror Light Synchronization
T66 left front	0.75	None	X1 - 13544146 - Terminal 4	Blue/Violet	8873-Police Left Mirror Light Steady Burn
T66 left front	0.75	None	X1 - 13544146 - Terminal 5	Yellow/Violet	8874-Police Left Mirror Light Flash Enable
T66 left rear	0.75	None	X1 - 13544146 - Terminal 6	Green	8875-Police Left Rear Window Light Power
T66 left rear	0.75	None	X1 - 13544146 - Terminal 7	Black/Green	8876-Police Left Rear Window Light Return
T66 left rear	0.75	None	X1 - 13544146 - Terminal 8	White/Green	8877-Police Left Rear Window Light Synchronization
T66 left rear	0.75	None	X1 - 13544146 - Terminal 9	Blue/Green	8878-Police Right Rear Window Light Steady Burn
T66 left rear	0.75	None	X1 - 13544146 - Terminal 10	Yellow/Green	8879-Police Right Rear Window Light Flash Enable
T66 right front	0.75	None	X1 - 13544146 - Terminal 11	Gray	8880-Police Right Mirror Light Power
T66 right front	0.75	None	X1 - 13544146 - Terminal 12	Black/Gray	8881-Police Right Mirror Light Return
T66 right front	0.75	None	X1 - 13544146 - Terminal 13	White/Gray	8882-Police Right Mirror Light Synchronization
T66 right front	0.75	None	X1 - 13544146 - Terminal 14	Blue/Gray	8883-Police Right Mirror Light Steady Burn
T66 right front	0.75	None	X1 - 13544146 - Terminal 15	Yellow/Gray	8884-Police Right Mirror Light Flash Enable
T66 right rear	0.75	None	X1 - 13544146 - Terminal 16	Brown	8885-Police Right Rear Window Light Power
T66 right rear	0.75	None	X1 - 13544146 - Terminal 17	Black/Brown	8886-Police Right Rear Window Light Return
T66 right rear	0.75	None	X1 - 13544146 - Terminal 18	White/Brown	8887-Police Right Rear Window Light Synchronization
T66 right rear	0.75	None	X1 - 13544146 - Terminal 19	Blue/Brown	8888-Police Right Rear Window Light Steady Burn
T66 right rear	0.75	None	X1 - 13544146 - Terminal 20	Yellow/Brown	8889-Police Right Rear Window Light Flash Enable
UT7 / 6J1	5	13533168 x1 for pwr and grd term 2	NA	Black	7150-Ground (71) Police
6J1, Police Provisions ( Rear)	5	13533168		RD/GN	742-Primary Fused Battery Positive Voltage (7)
6J8/9/G/E	1	None	X1 - 13533797 Terminal 29	Blue	8890-Police Front Corner Light Power
6J8/9/G/E	1	None	X1 - 13533797 Terminal 31	Blue/White	8891-Police Corner Strobe Synchronization
6J8/9/G/E	1	None	X1 - 13533797 Terminal 38	Green	8892-Police Rear Corner Light Power
6J8/9/G/E	1	None	X1 - 13533797 Terminal 34	Violet	8893-Police Front Corner Strobe Power
6J8/9/G/E	1	None	X1 - 13533797 Terminal 30	BN/WH	8915
6J8/9/G/E	1	None	X1 - 13533797 Terminal 35	Yellow	8894-Police Rear Corner Strobe Power
WX7	0.5	NA	NA	See K2 Tahoe wire colors	201
WX7	0.5	NA	NA	See K2 Tahoe wire colors	118
WX7	0.5	NA	NA	See K2 Tahoe wire colors	200
WX7	0.5	NA	NA	See K2 Tahoe wire colors	117
WX7	0.5	NA	NA	See K2 Tahoe wire colors	199
WX7	0.5	NA	NA	See K2 Tahoe wire colors	116
WX7	0.5	NA	NA	See K2 Tahoe wire colors	46
WX7	0.5	NA	NA	See K2 Tahoe wire colors	115
T53	0.8	NA	NA	Violet	8866-Police Liftgate Strobe Power
T53	0.8	NA	NA	Black	7650-Ground (76) Police
T53	0.35	NA	NA	Violet/Green	8869-Police Liftgate Strobe Rear On OFF
7X3	0.75			RD/GN	10240-Secondary Fused Battery Positive Voltage (102) Police
7X3	0.75			Black	7750-Ground (77) Police
7X3	0.75			RD/GY	10340-Secondary Fused Battery Positive Voltage (103) Police
7X3	0.75			Black	7850-Ground (78) Police
6C7 Aux. dome lamp	0.75			D/BU	10140-Secondary Fused Battery Positive Voltage (101) Police
6C7 Aux. dome lamp	0.75			Black	7550-Ground (75) Police
6J4	0.35			BN/WH	Circuit 28

## WIRING

GM Option Code	Wire Gage [mm²]	Console Connector Terminal	Cargo Connector Terminal	Wire Color	Circuit Name /Circuit #
9C1/ 9C3 , Police Provisions, console area	0.5	X1 - 13533797 Terminal 28	Na	Blue/Yellow	8895-Police Relay 1 Control
9C1/ 9C3 , Police Provisions, console area	1	X1 13533797 Terminal 32	NA	RD/GN	8911-Police Select Supply Voltage 1
9C1/ 9C3 , Police Provisions, console area	0.5	X1 - 13533797 Terminal 29	NA	Green/Yellow	8896-Police Relay 2 Control
9C1/ 9C3 , Police Provisions, console area	1	13533797 Terminal 33	NA	RD/GY	8912-Police Select Supply Voltage 2
9C1/ 9C3 , Police Provisions, console area	10	NA	13533168 x1 for pwr and grd	RD/VT	842-Primary Fused Battery Positive Voltage (8)
6J1 , Police Provisions, console area	10	NA	13533168 x1 for pwr and grd	Black	7350-Ground (73) Police
6J1 , Police Provisions, console area	0.5	X1 - 13533797 Terminal 13	X1 - 13533797 Terminal 13		Circuit 817
6J1 , Police Provisions, console area	0.5	X1 - 13533797 Terminal 14	X1 - 13533797 Terminal 14		Circuit 2801
6J1 , Police Provisions, console area	0.5	X1 - 13533797 Terminal 15	X1 - 13533797 Terminal 15		4939-Run/Crank Ignition 1 Voltage (49)
6J1 , Police Provisions, console area	0.35	X1 - 13533797 Terminal 16	X1 - 13533797 Terminal 16		Circuit 8917
6J1 , Police Provisions, console area	0.35	X1 - 13533797 Terminal 18	X1 - 13533797 Terminal 18		Circuit 6821
6J1 , Police Provisions, console area	0.5	X1 - 13533797 Terminal 19	X1 - 13533797 Terminal 19		Circuit 820
6J1 , Police Provisions, console area	0.5	X1 - 13533797 Terminal 20	X1 - 13533797 Terminal 20		Circuit 5813
6J1 , Police Provisions ( Rear) I	0.5	NA	X1 - 13533797 Terminal 21	Gray/Yellow	8897-Police Relay 3 Contro
8907-Police Select Fuse Supply Voltage 3	2.5	NA	X1 13533797 Terminal 1	RD/WH	8913- Select fuse supply voltage
8898 6J1 , Police Provisions ( Rear)	0.5	NA	X1 - 13533797 Terminal 32,	Violet/Yellow	8898-Police Relay 4 Control
8914-Police Select Fuse Supply Voltage 4	2.5	NA	X1 13533797 Terminal 17	RD/YE	8914- Select fuse supply voltage
(9C1/9C1) Steering wheel switches	0.35	X1 - 13533797 Terminal 22	X1 - 13533797 Terminal 22	BN/GY	8021-Police Microphone Enable
(9C1/9C1) Steering wheel switches	0.35	X1 - 13533797 Terminal 23	X1 - 13533797 Terminal 23	Grey/Violet	8022-Police Roof Lamp Control
Radio mic.	0.5	X1 - 13533797 Terminal 24	X1 - 13533797 Terminal 24	Black	7450-Ground (74) Police
Radio mic.	0.5	X1 - 13533797 Terminal 25	X1 - 13533797 Terminal 25	Blue/White	8899-Police Microphone Data
Radio mic.	0.5	X1 - 13533797 Terminal 26	X1 - 13533797 Terminal 26	Blue/Violet	8900-Police Microphone Input
Dimmer function for Instrument Panel	0.8	X1 - 13533797 Terminal 27	X1 - 13533797 Terminal 27	YE	Circuit 6817

## WIRING

## XP2 UPFITTER WIRING HARNESS

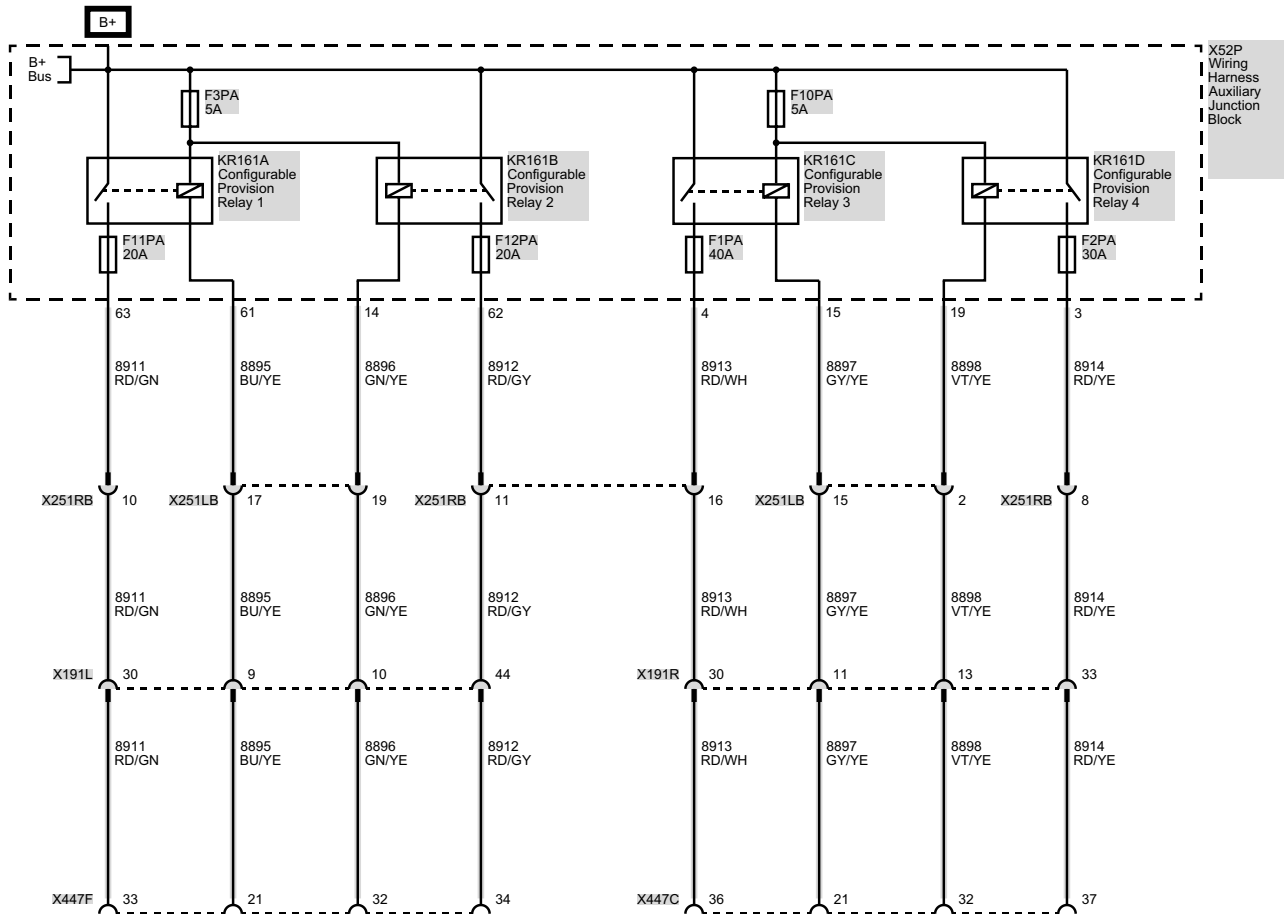


CONNECTOR BETWEEN FRONT SEATS

CONNECTOR IN REAR CARGO AREA




Located under console

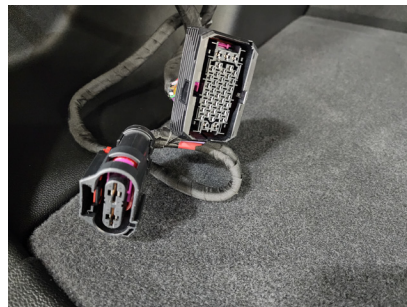

Located behind left rear cargo trim

# WIRING

## MAIN FUSE POWER, ACCESSORY RUN, VEHICLE SPEED\*

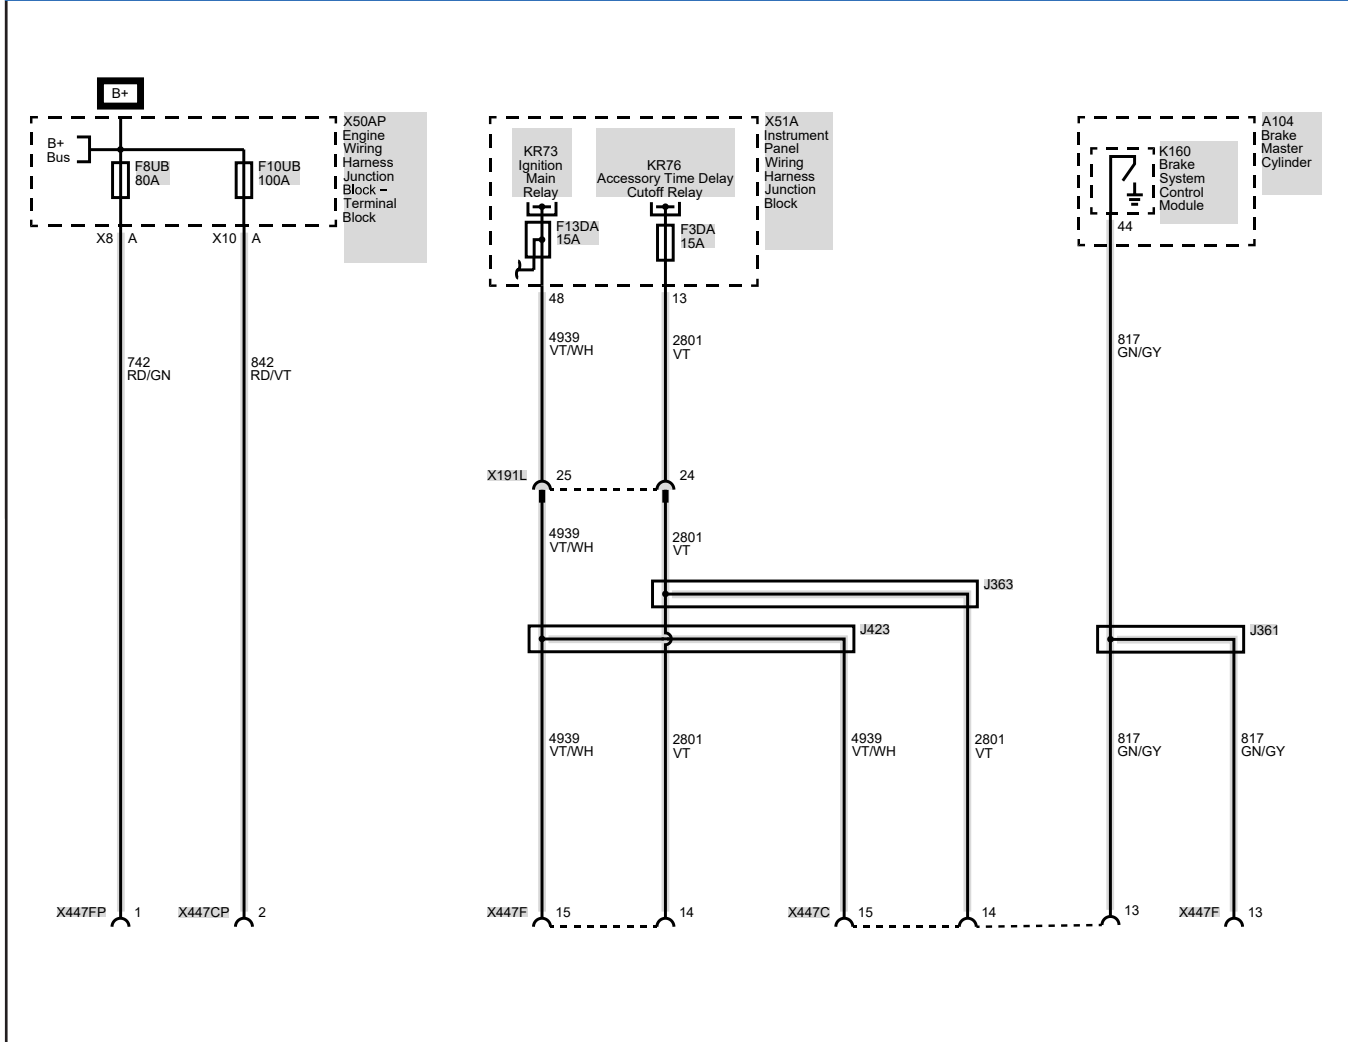


\*Speed Signal located in front row 40-way connector harness, cavity 13, GN/GY wire. Also available in rear cargo harness




## WIRING

## REPURPOSED STEERING WHEEL SWITCHES

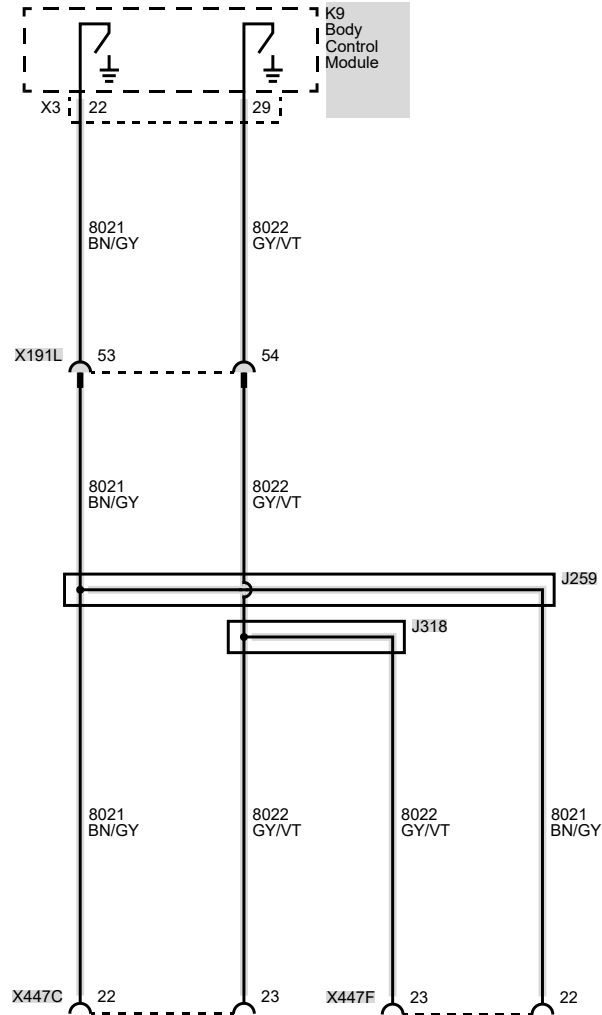


# WIRING

## BCM SIGNAL PROVISIONS

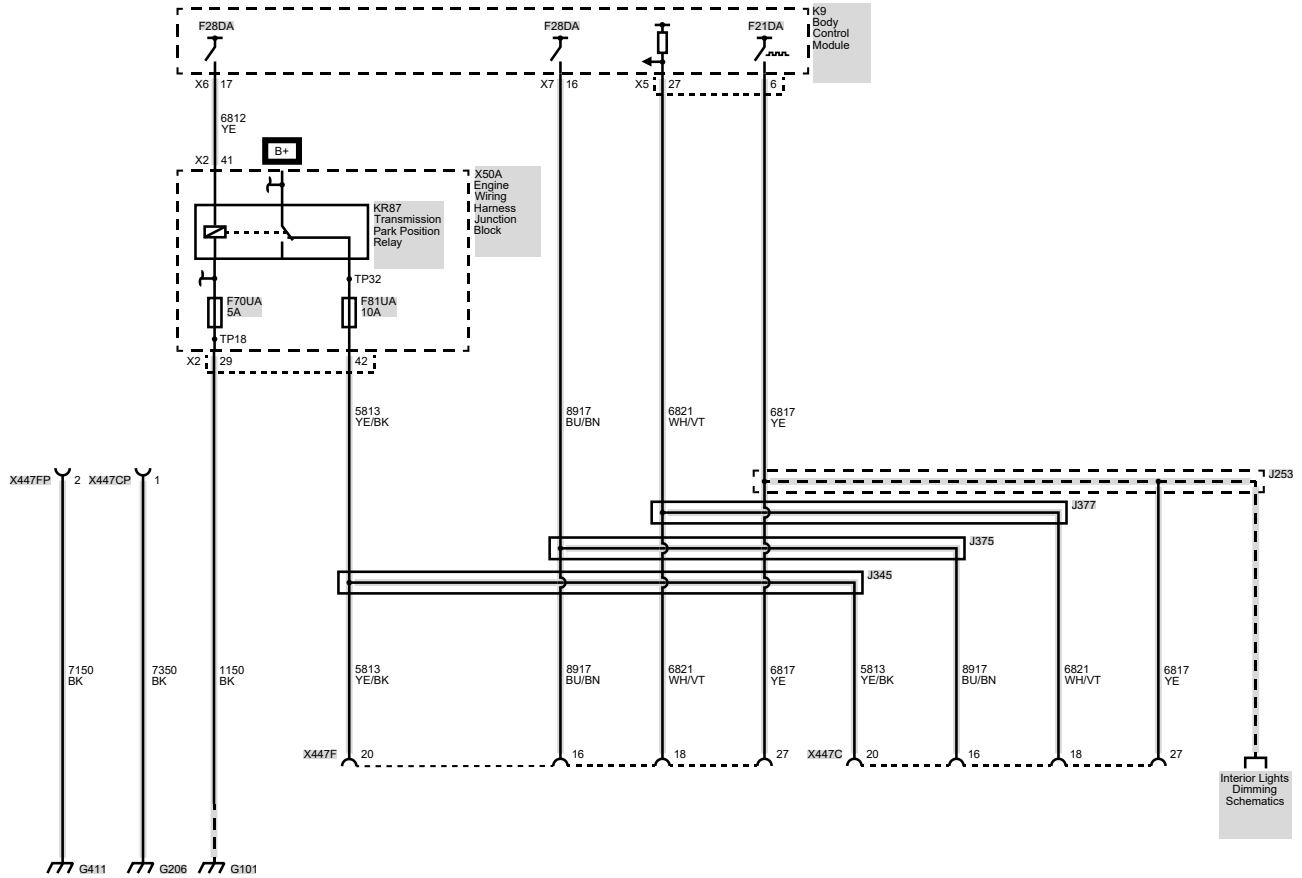


## WIRING

### RADIO MICROPHONE PROVISIONS

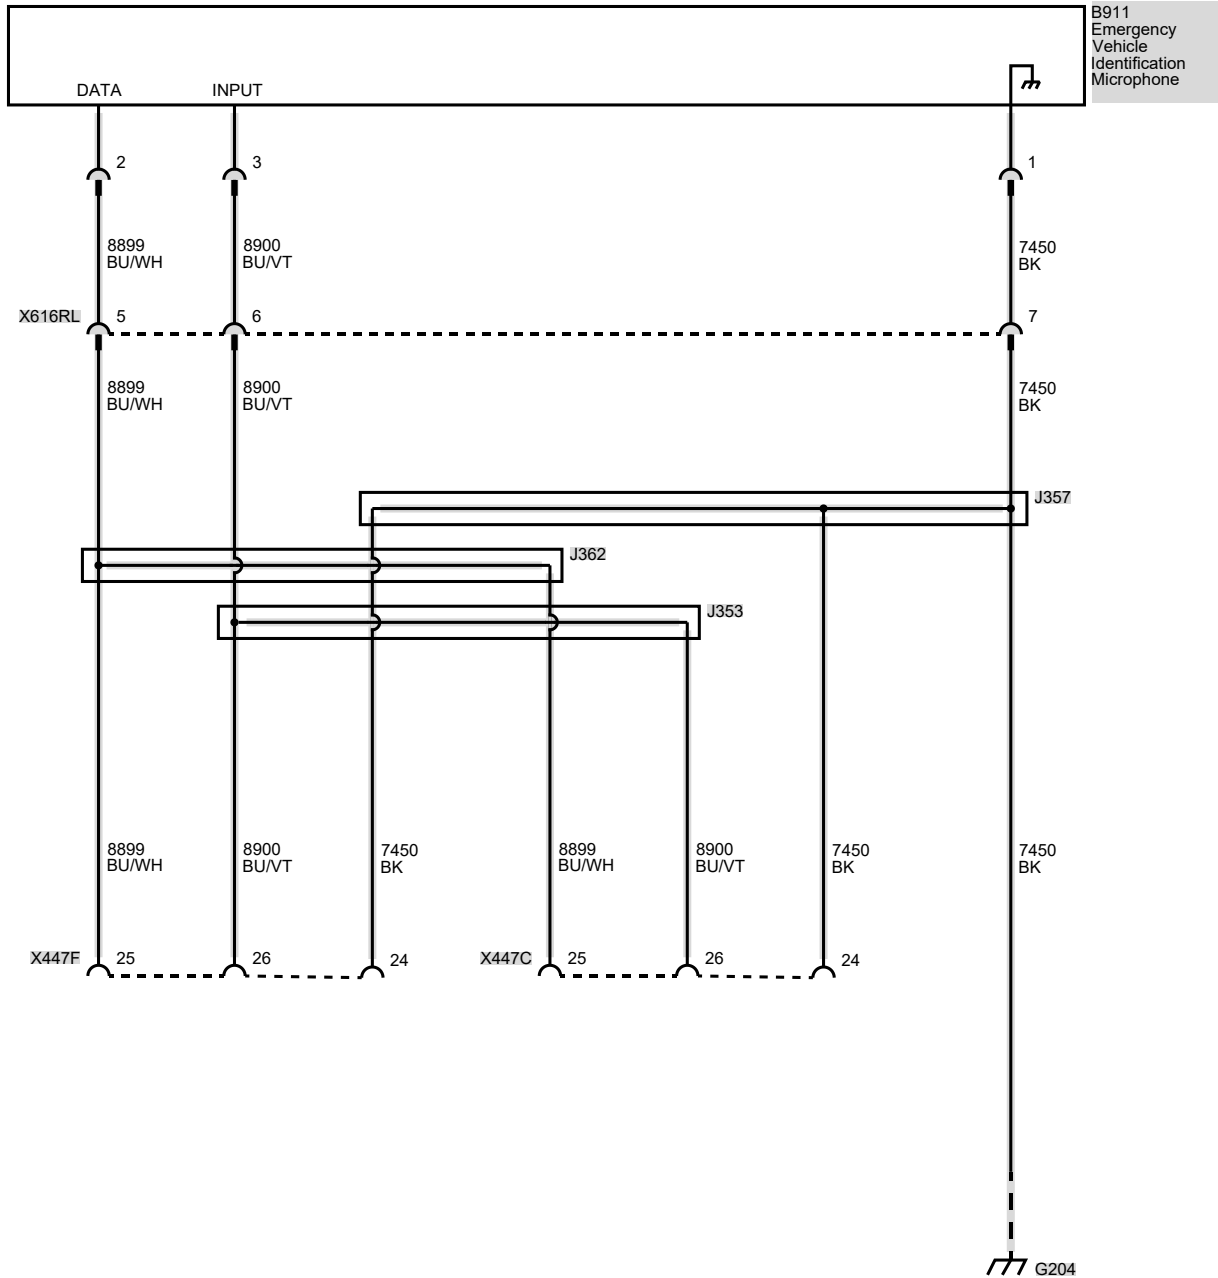


## WIRING

6JE / 6JG / 6J8 / 6J9  
EMERGENCY VEHICLE CORNER STROBE LIGHTS FRONT

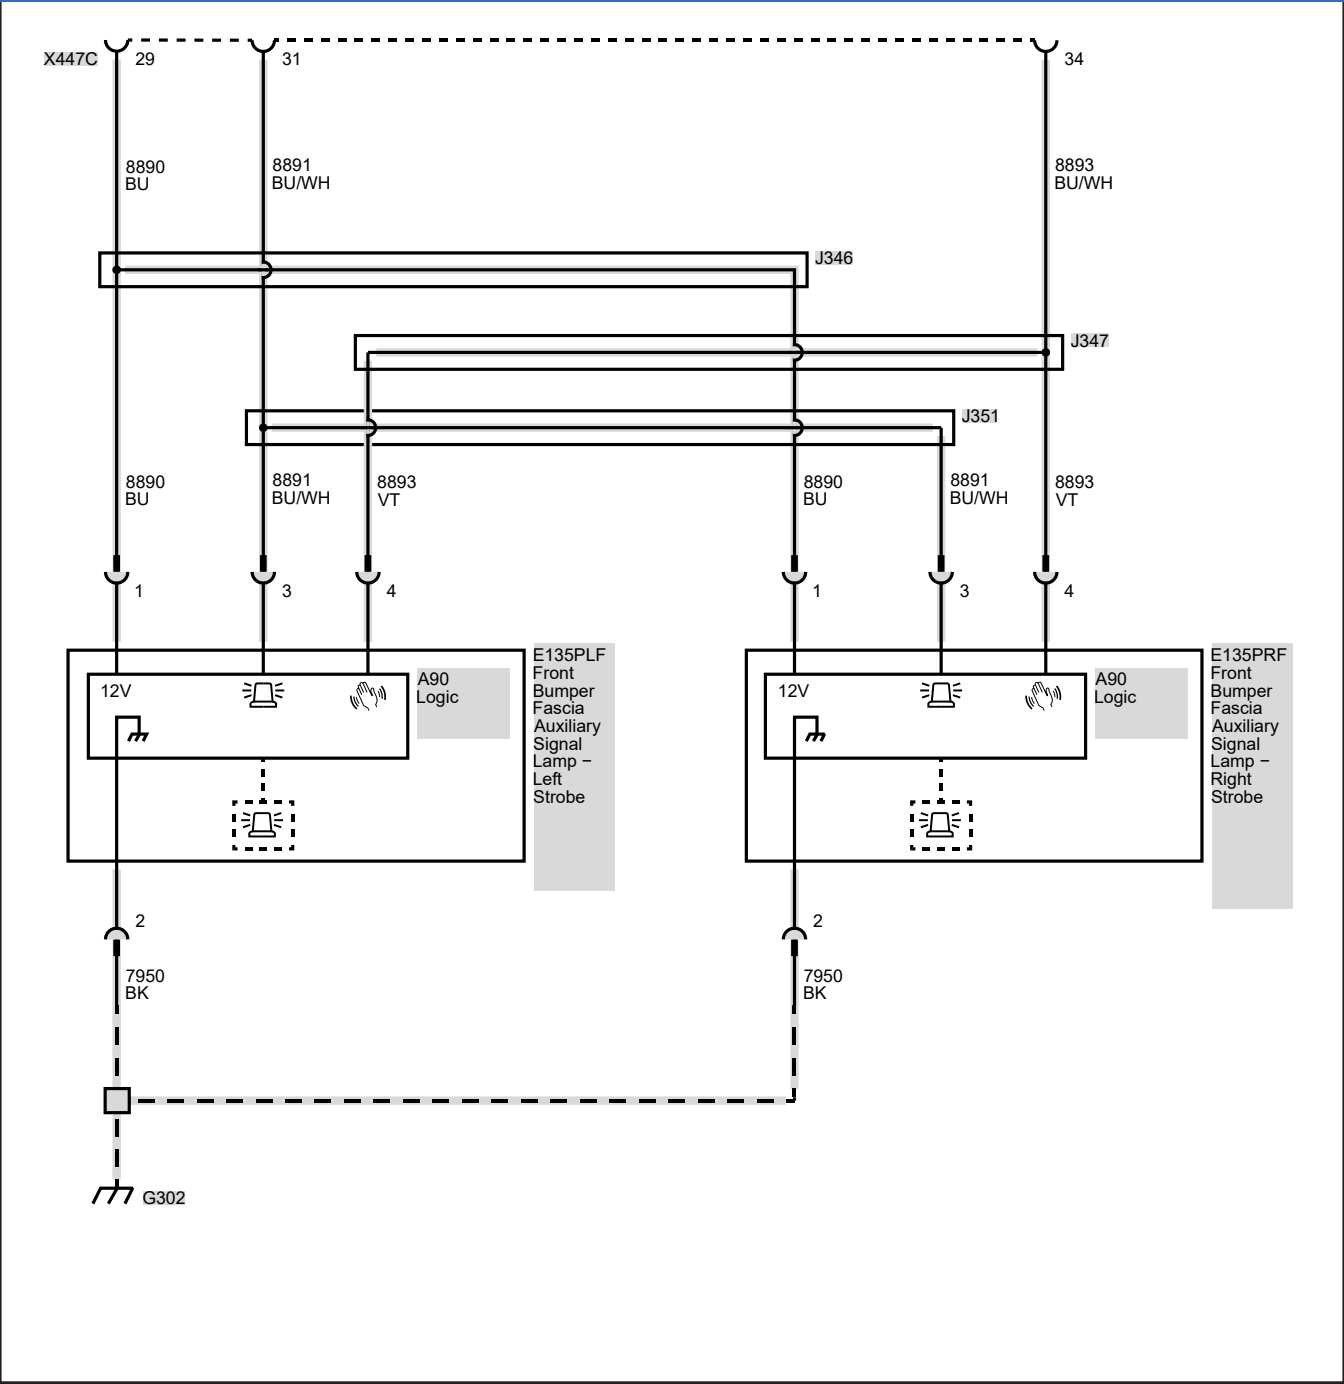




## WIRING

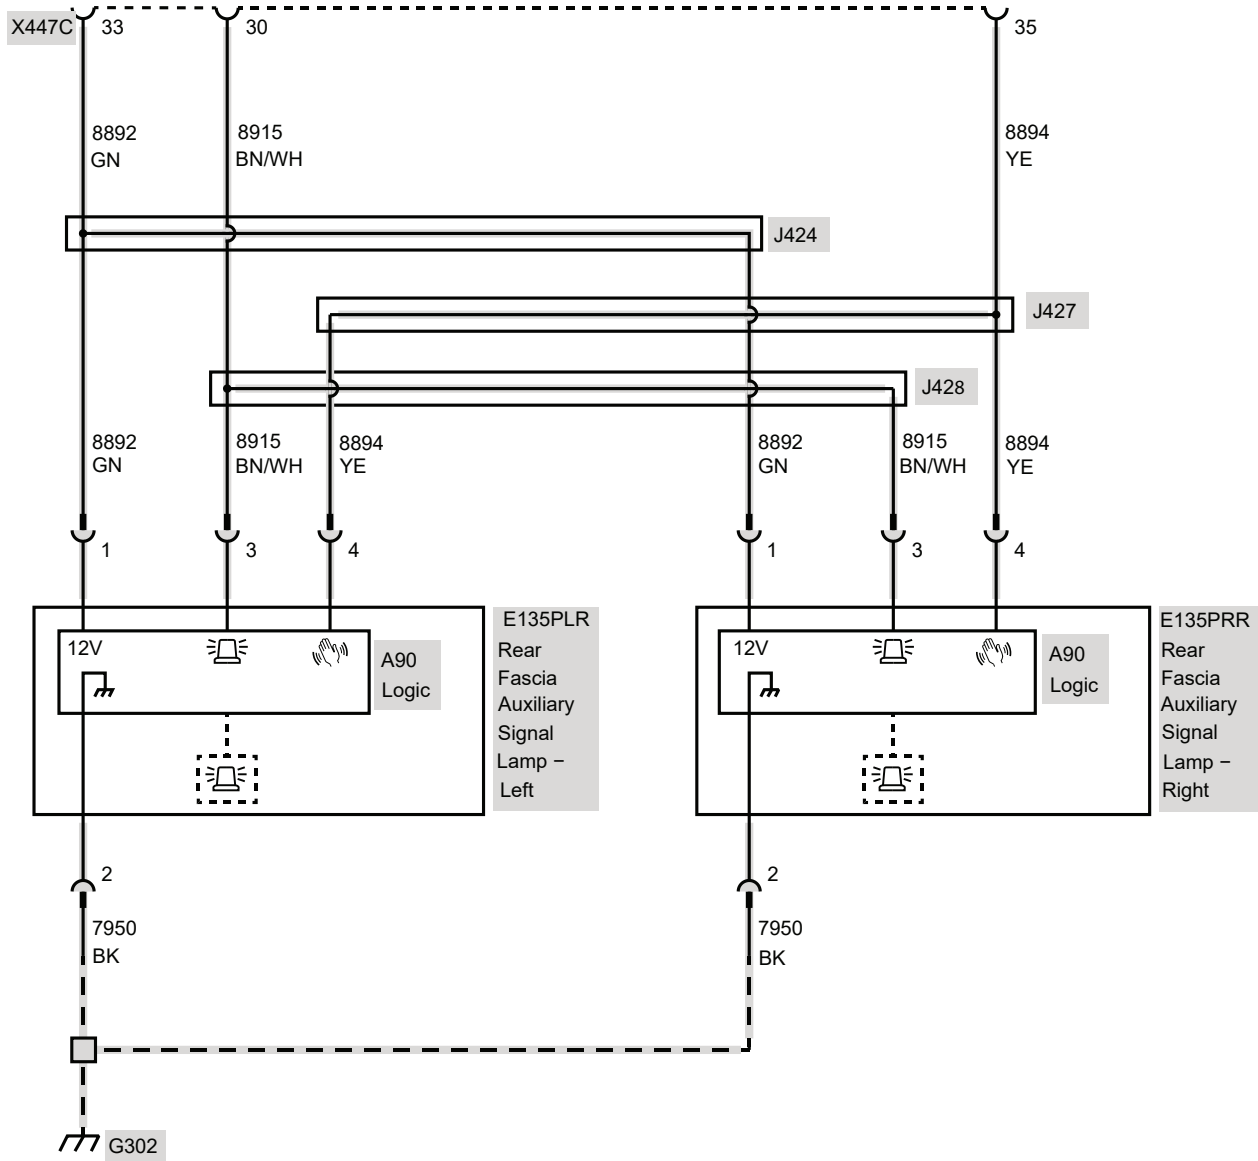
6JE / 6JG / 6J8 / 6J9  
EMERGENCY VEHICLE CORNER STROBE LIGHTS REAR

## OPTIONAL WIRING

### 6J3 - GRILLE LAMPS AND SIREN SPEAKER PROVISIONS

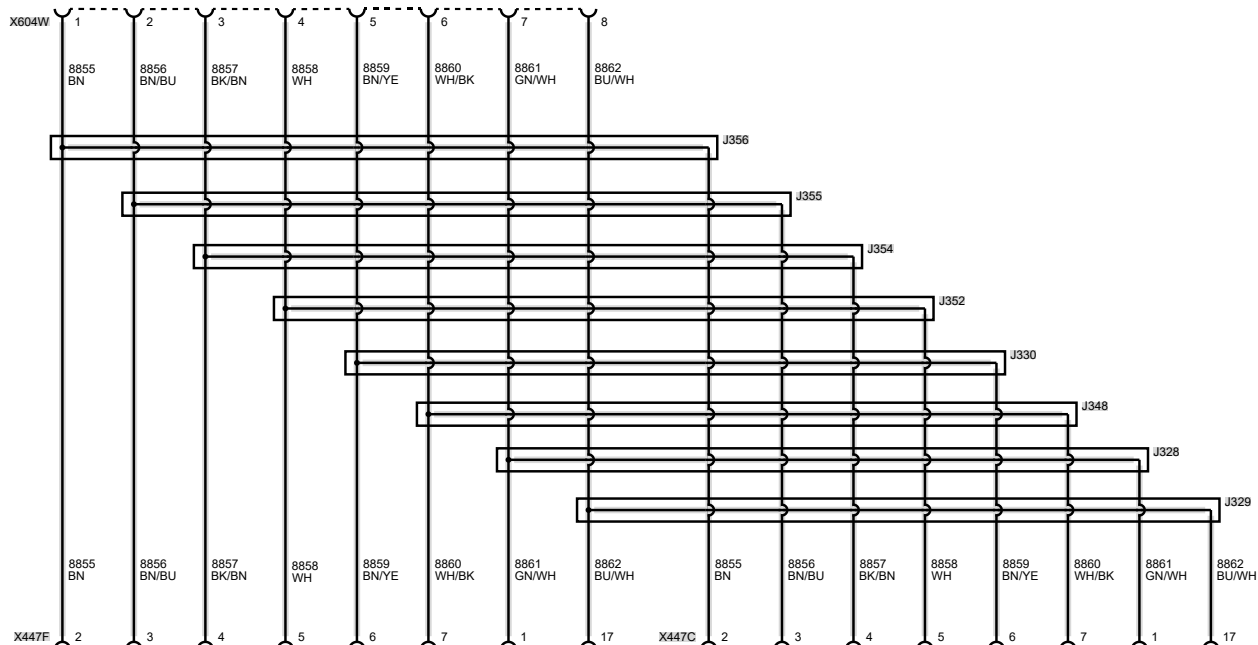


### FRONT MIRROR AND REAR WINDOW FLASHER PROVISIONS

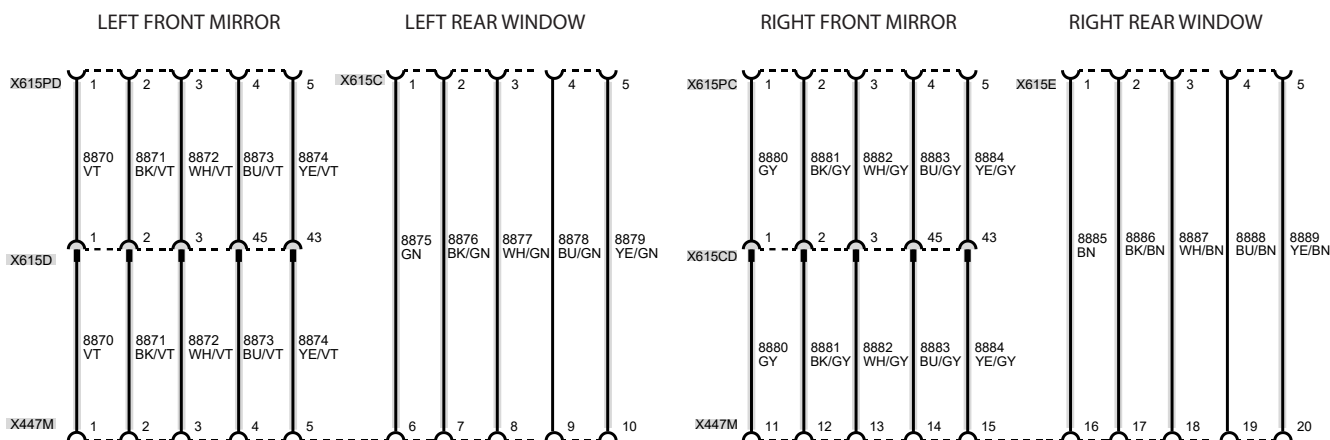


## WIRING

### 6J7, 5LO & 5J9 - HEADLAMPS AND REAR LAMPS FLASHING SYSTEM PROVISIONS

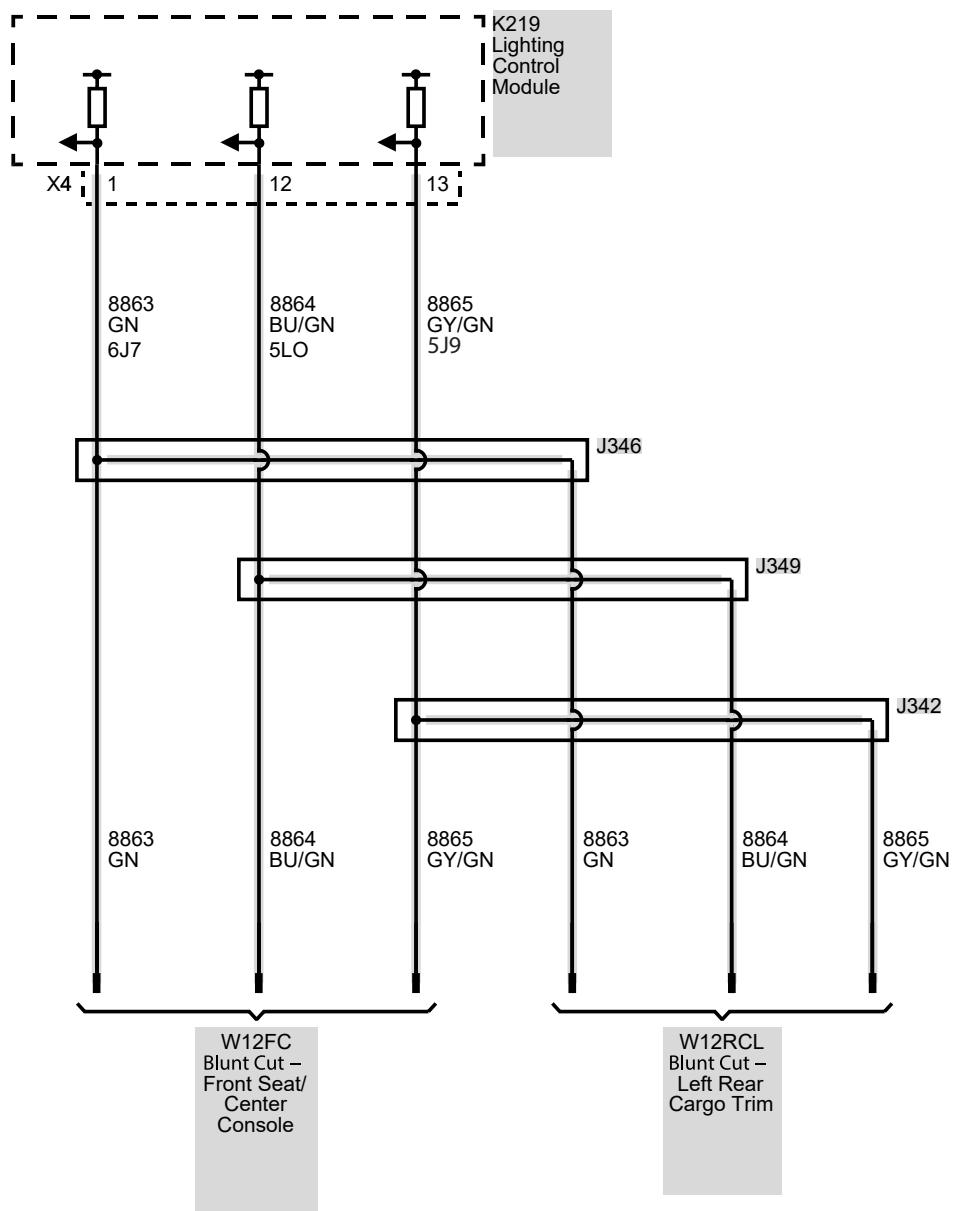

## OPTIONAL WIRING


### WX7 FRONT DOOR SPEAKERS PROVISIONS

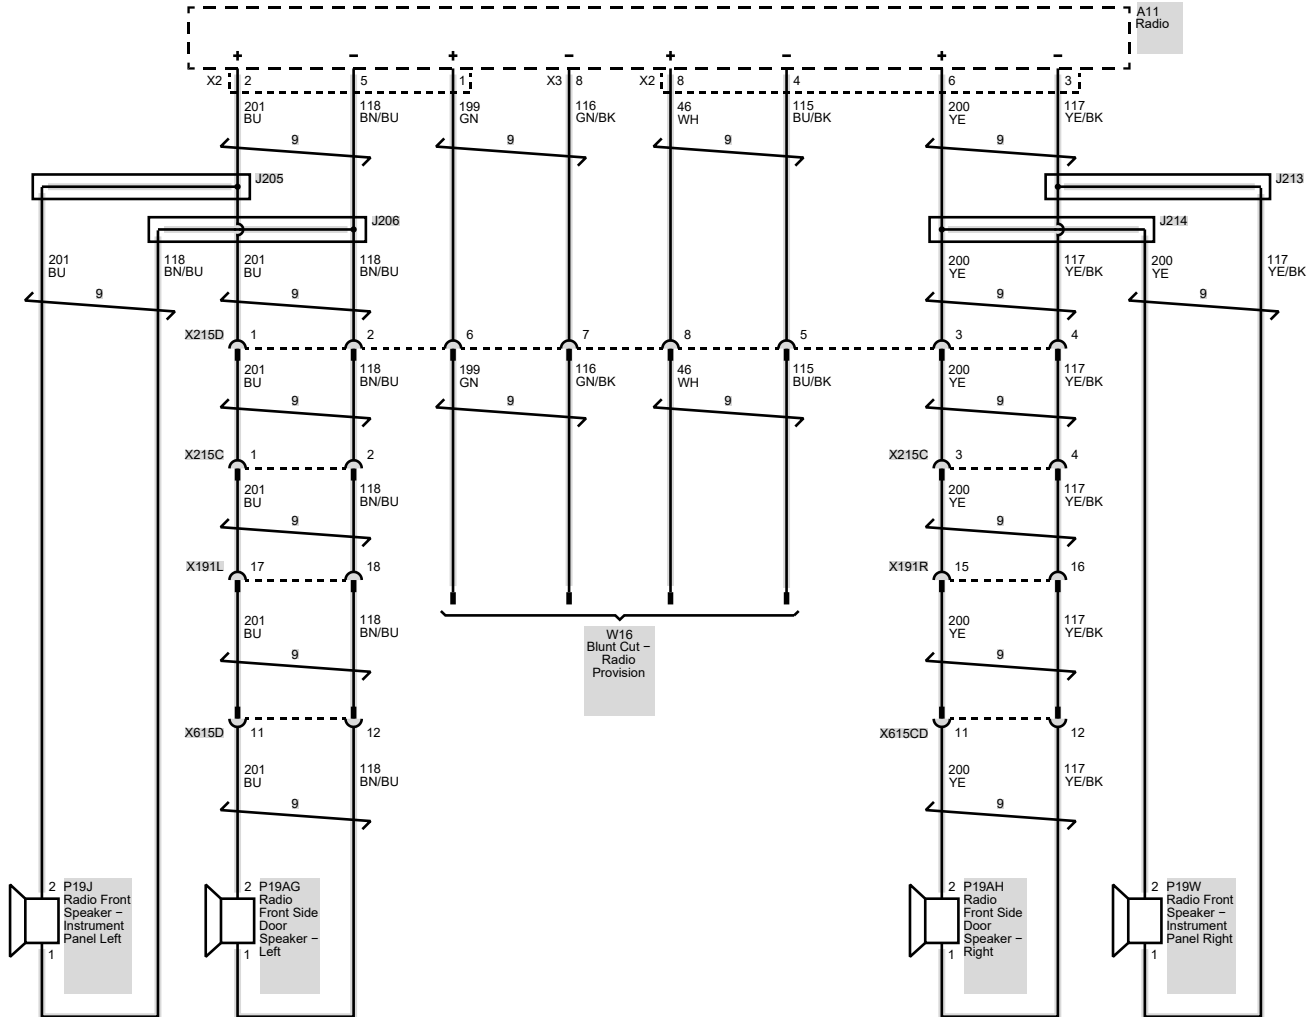




## OPTIONAL WIRING

## 6J4 - HORN AND SIREN CONTROL PROVISION

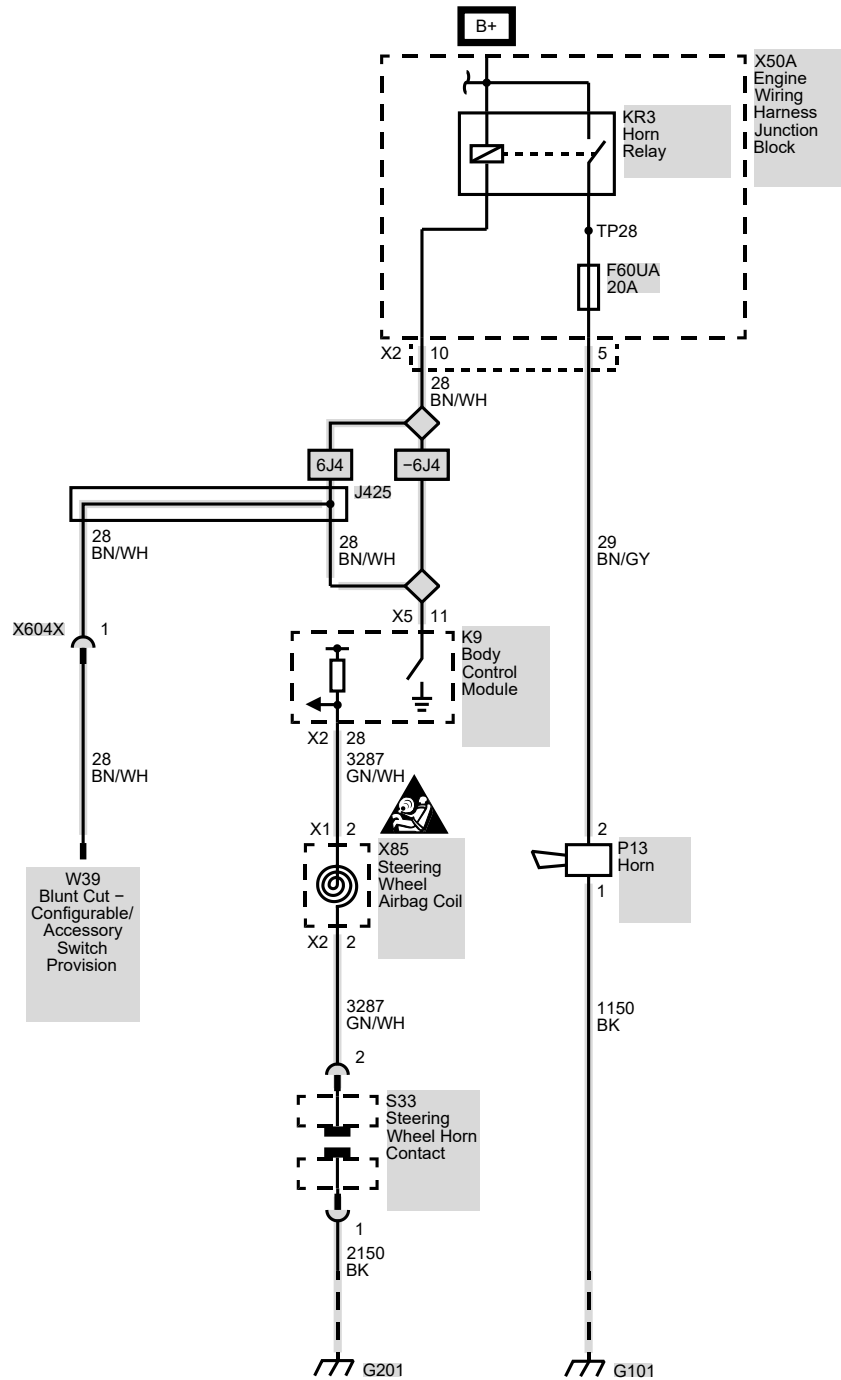


## OPTIONAL WIRING

## T53 – LIFTGATE WARNING LAMPS &amp; 6C7 AUXILIARY DOME LAMP

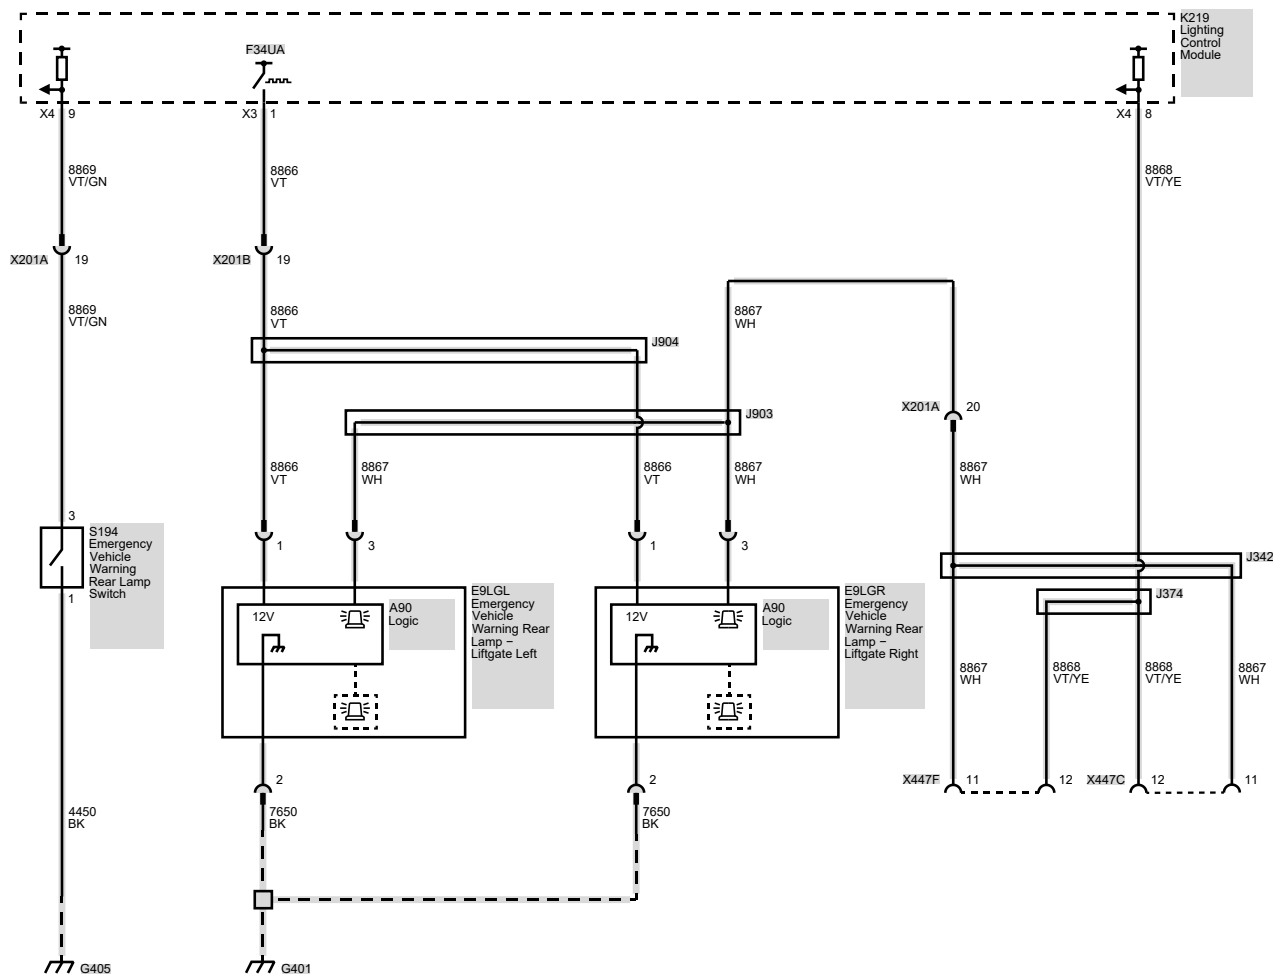


## OPTIONAL WIRING

## 7X3 LED SPOT LAMPS &amp; 6C7 AUXILIARY DOME LAMP

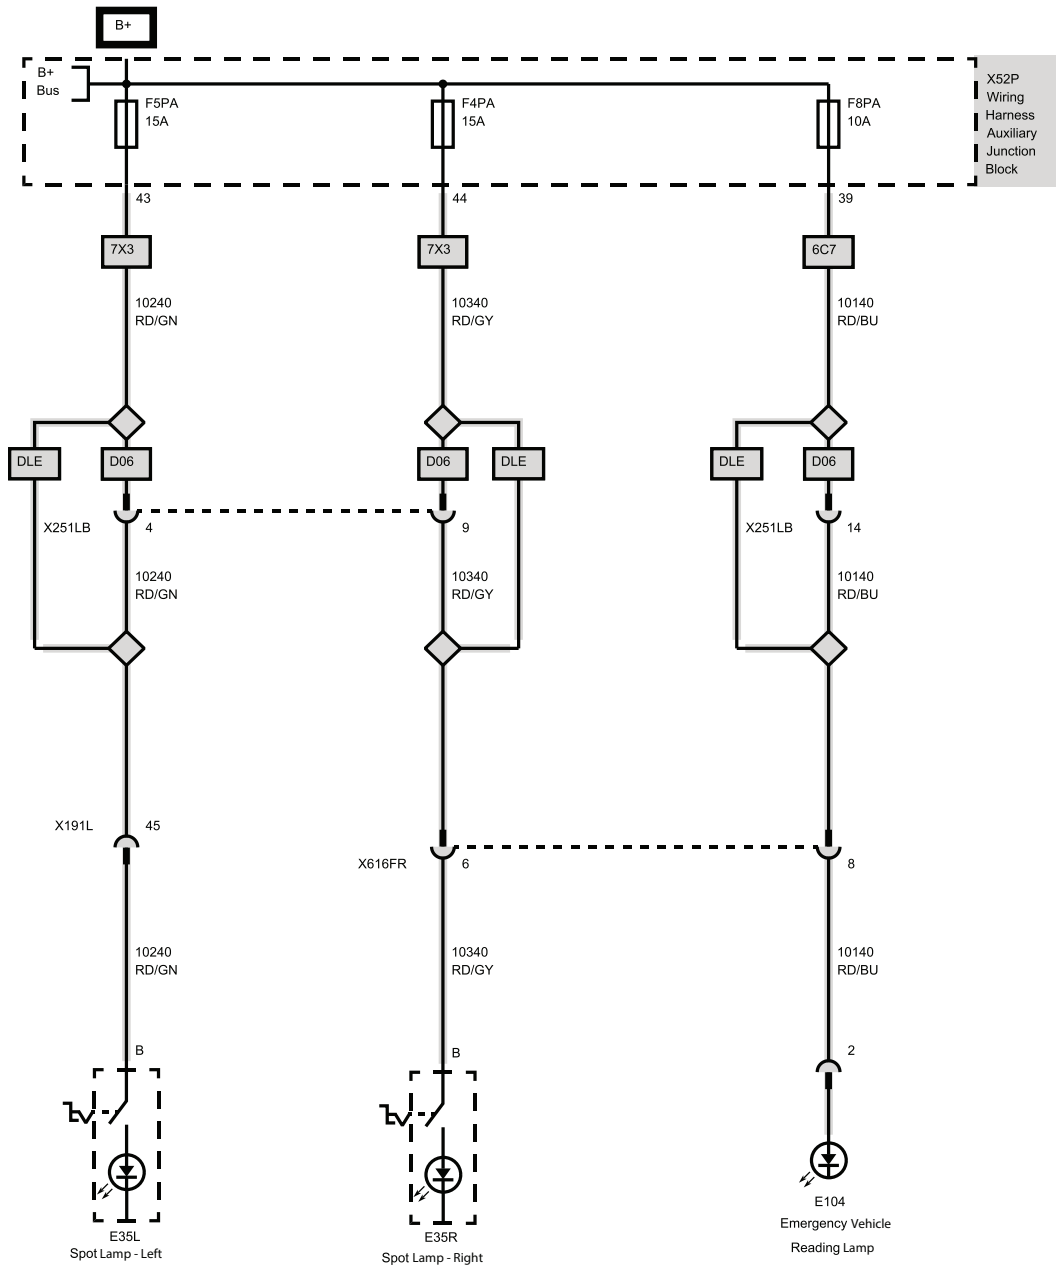

# NO DRILL / NO CUT ZONES

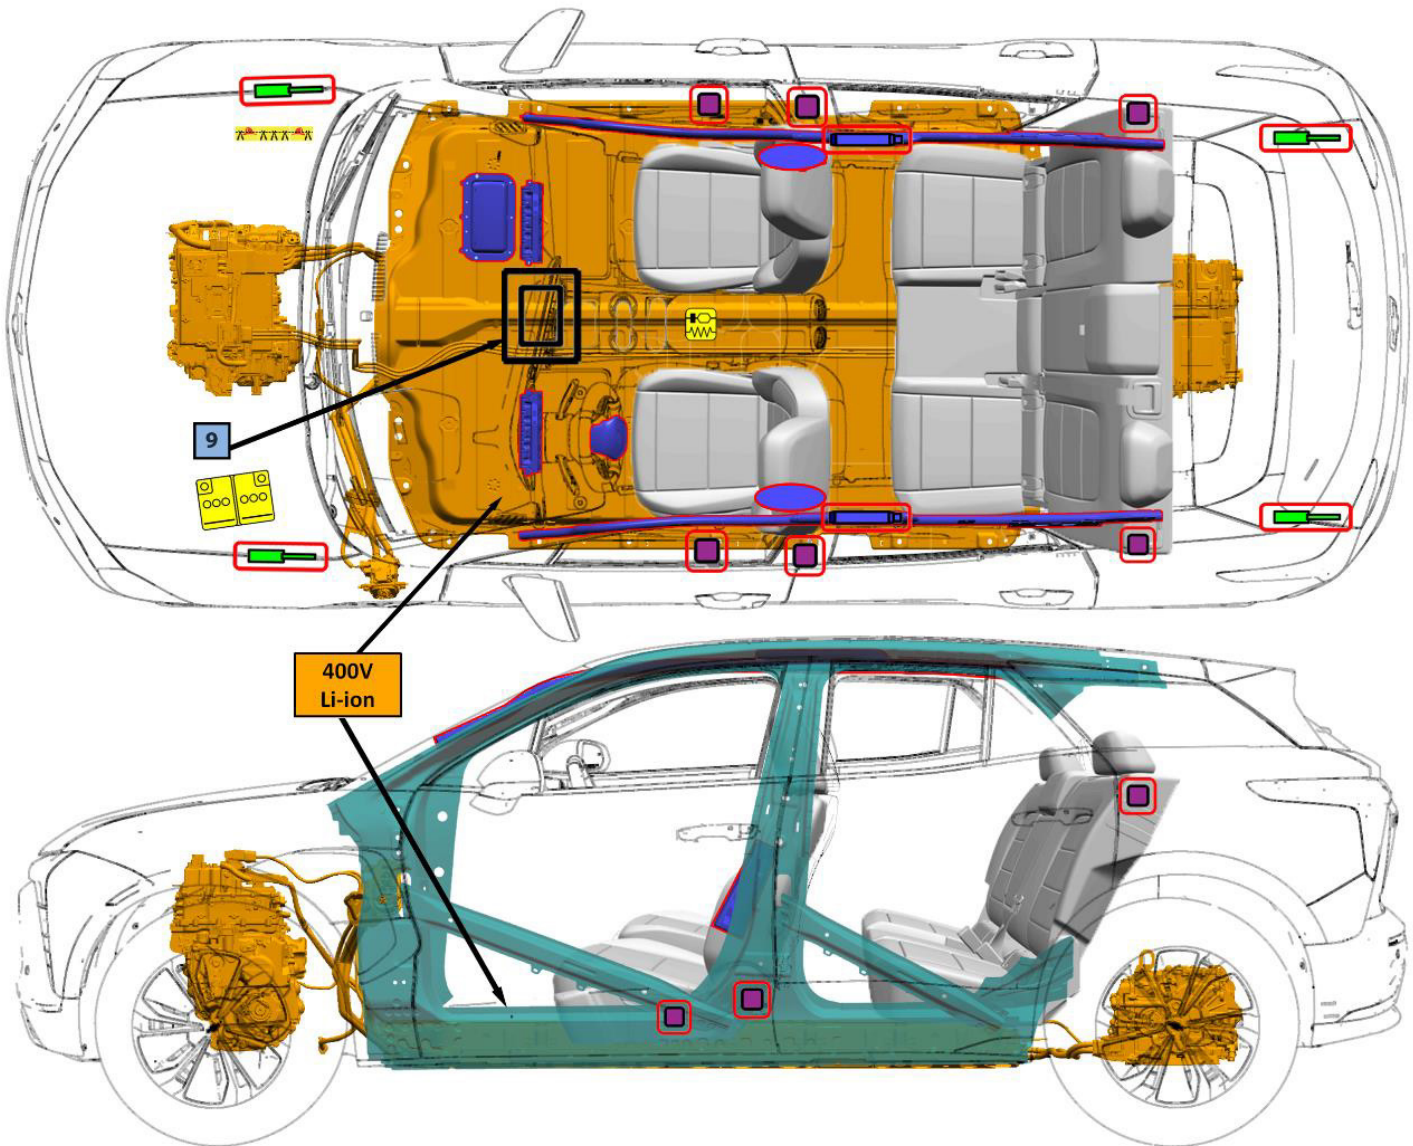


**WARNING - DO NOT CUT ANY ORANGE COLORED HIGH VOLTAGE CABLES**

LEDGEND					
	Airbag		Stored gas inflator		Seat belt pretensioner
	SRS control unit		Gas strut/ Preloaded spring		High voltage battery pack
	High strength zone		Zone requiring special attention		High voltage power cable component
	Cable Cut Location				




## AIRBAGS

### FRONTAL AIRBAGS

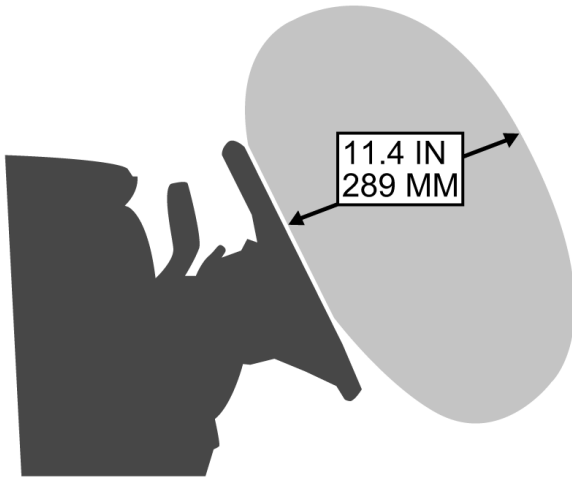


**STEERING DRIVER AIRBAG**

VIEW FROM DRIVER SIDE

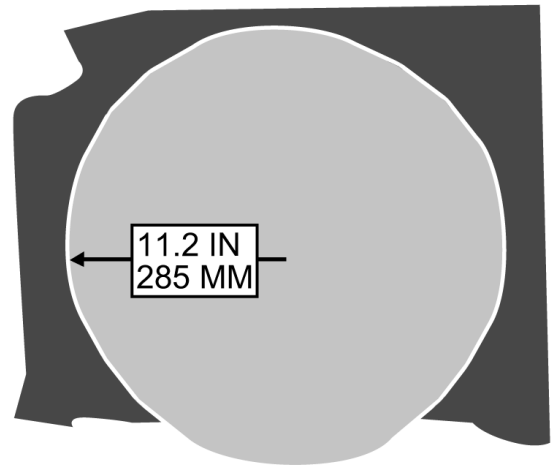


**STEERING WHEEL DRIVER AIRBAG**

VIEW FROM DRIVER SIDE

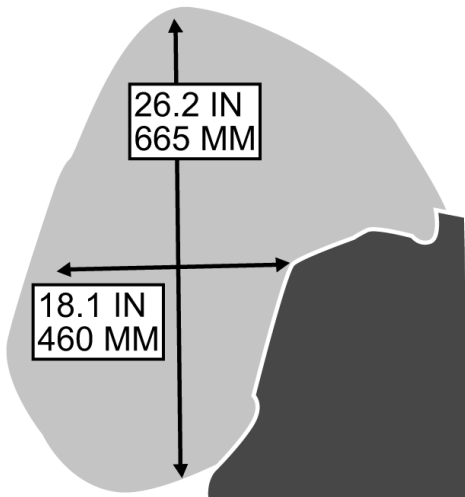

**STEERING WHEEL DRIVER AIRBAG**

VIEW FROM PASSENGER SIDE

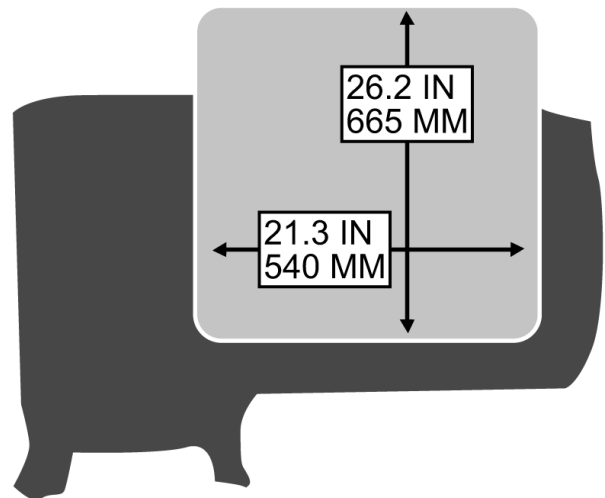


**FRONT OUTBOARD PASSENGER AIRBAG**

VIEW FROM PASSENGER SIDE

Sitting too close to an airbag when it deploys can increase the risk of serious injury or death. Always properly wear your seat belt. See Owner's Manual for more information.


AIRBAGS

HEAD-CURTAIN AND FRONT SIDE IMPACT AIRBAGS

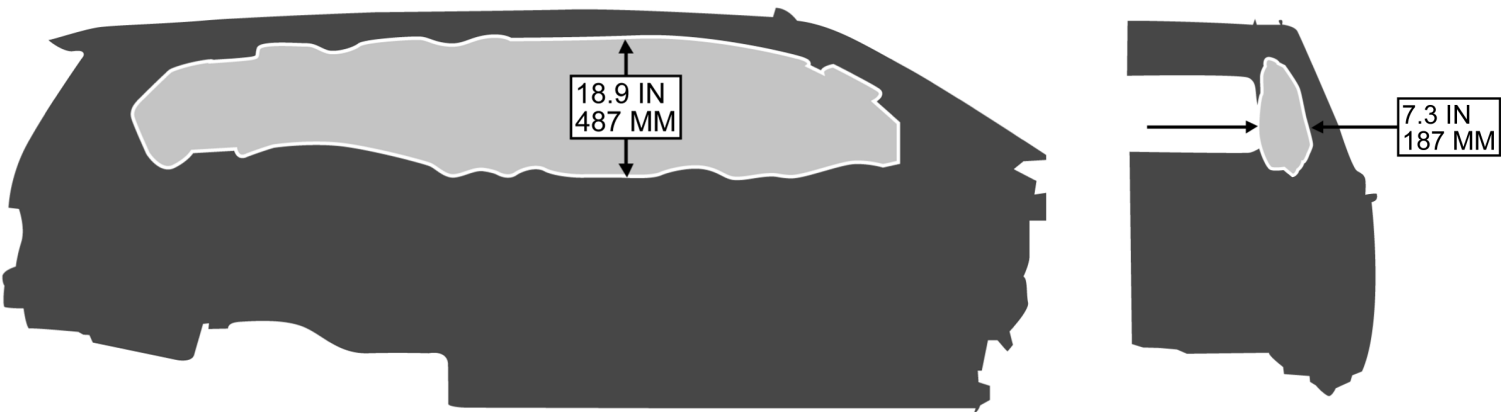

**HEAD CURTAIN AIRBAG**

DRIVER SIDE SHOWN - PASSENGER SIDE SIMILAR

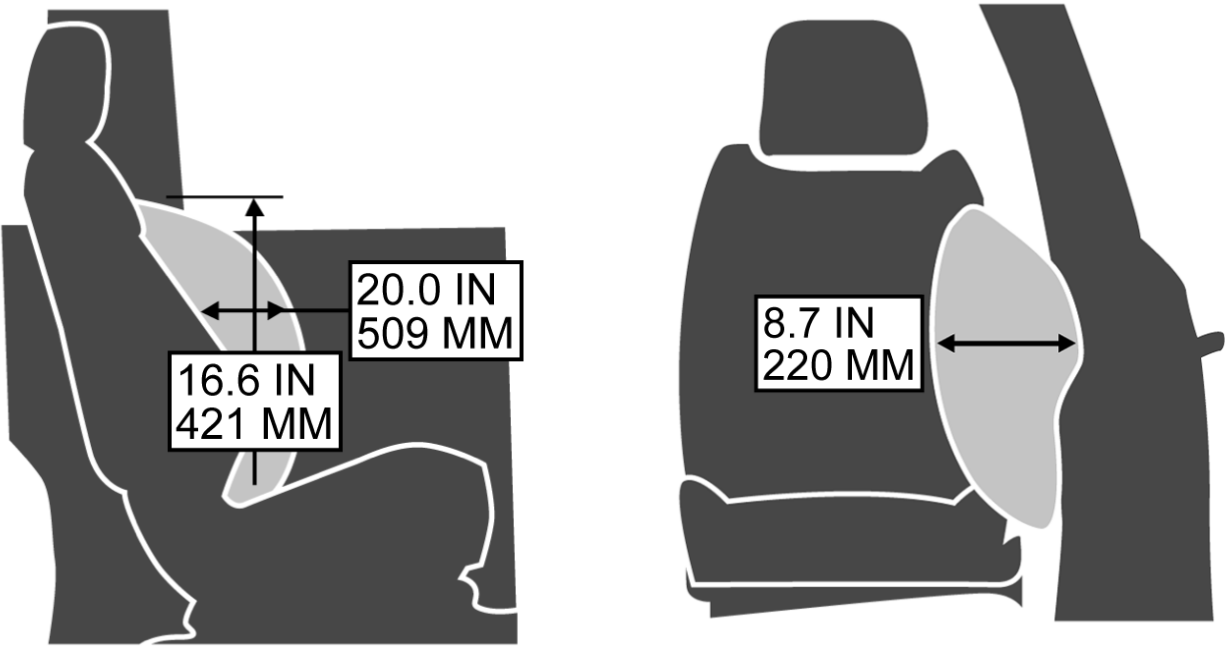


**FRONT SEAT SIDE IMPACT AIRBAG**

DRIVER SEAT SHOWN - FRONT OUTBOARD PASSENGER SIMILAR


Sitting too close to an airbag when it deploys can increase the risk of serious injury or death. Always properly wear your seat belt. See Owner's Manual for more information.

AIRBAGS


HEAD-CURTAIN AND FRONT SIDE IMPACT AIRBAGS

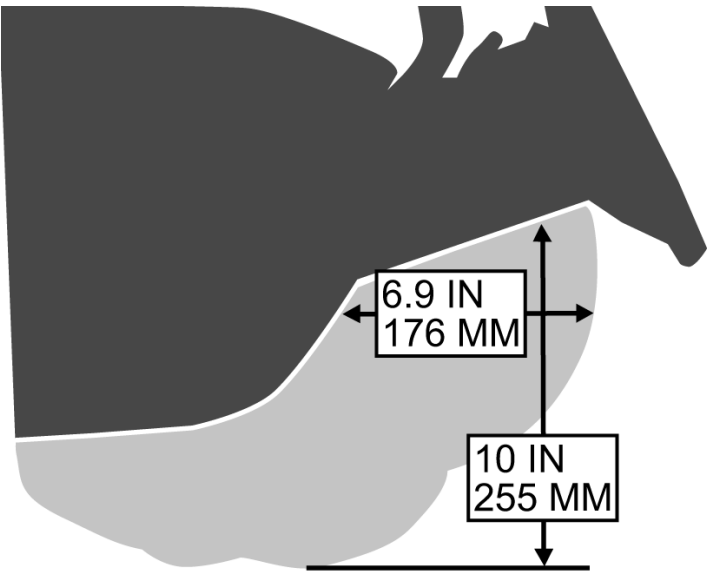


**KNEE AIRBAG**  
SIDE VIEW FROM DRIVER SIDE

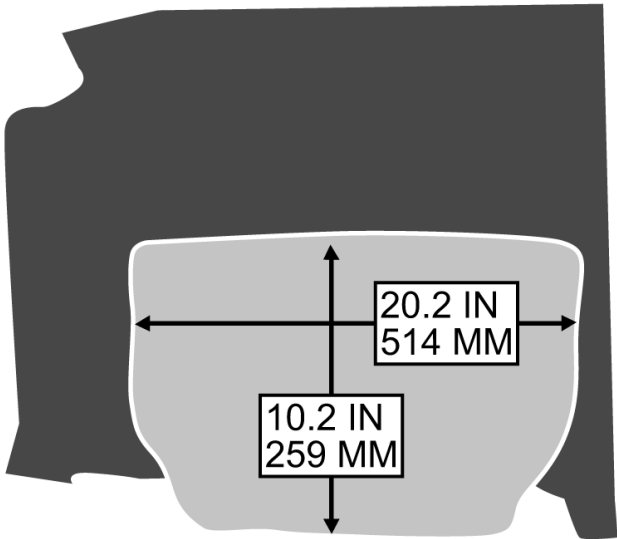

**KNEE AIRBAG**  
FRONT VIEW FROM DRIVER SIDE

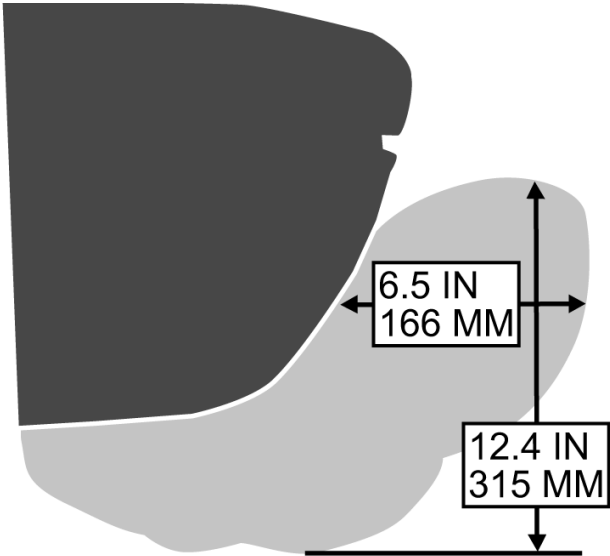

**KNEE AIRBAG**  
SIDE VIEW FROM PASSENGER SIDE

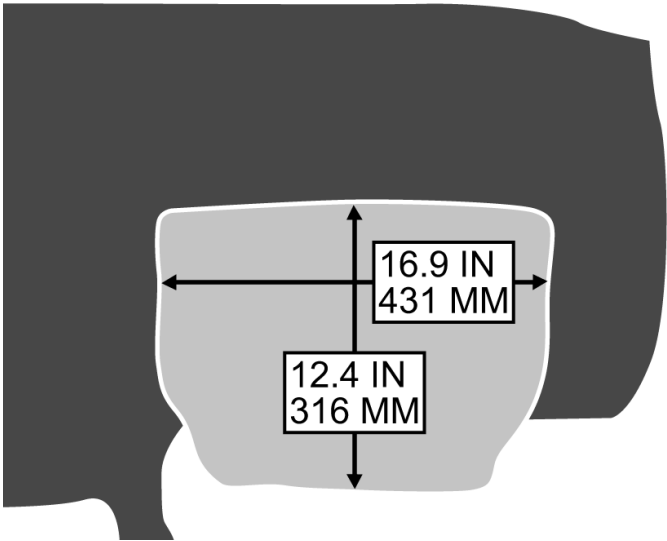

**KNEE AIRBAG**  
FRONT VIEW FROM PASSENGER SIDE

Sitting too close to an airbag when it deploys can increase the risk of serious injury or death. Always properly wear your seat belt. See Owner's Manual for more information.

## AIRBAGS FAQ

**Q: Can equipment such as radar devices, video cameras, and radio trees be mounted in a specialty vehicle equipped with a right front passenger frontal airbag?**

A: Yes, but care must be taken to properly mount the equipment outside of the airbag "deployment zone."

**Q: What is the airbag "deployment zone"?**

A: The term "deployment zone" describes the space an airbag takes up when fully inflated. Airbags need room to work properly, and anything in the "deployment zone" – such as improperly mounted equipment – can greatly affect the performance of the airbag.

**Q: How can I identify the airbag "deployment zone" in my vehicle?**

A: See Airbag Deployment Diagrams for more information. The diagrams provide the approximate dimensions of the "deployment zones" for your specialty vehicle. Before doing any service work, including the installation of any equipment, consult the appropriate service manual.

**Q: Is it possible to shield equipment so it does not interfere with airbag deployment?**

A: While shielding may protect certain equipment from being damaged or dislodged, it may also negatively affect how an airbag inflates. Therefore, we do not recommend the placement of any equipment in the deployment zone, even if shielded.

**Q: Can the installation of push bumpers on the front end of the vehicle affect the deployment of the airbag?**

A: It is not likely that installing push bumpers will affect deployment for the airbag as long as the vehicle structure itself is not modified. GM is not aware of any adverse defects effect on the deployment of the front airbags due to use of many aftermarket push bumpers installed on current GM police vehicles

See "Adding Equipment to the Airbag-Equipped Vehicle" in the owner manual for more information.

### Customer-Installed Equipment

Before installing equipment, read the following.

Airbags inflate with great force, faster than the blink of an eye. No objects, such as shotguns, should be placed over or near the airbag covers. Equipment mounted too close to an inflating airbag could prevent the airbag from operating properly to protect the occupants or could be forced into an occupant or break and become a dangerous projectile, causing severe injury or even death. To help prevent injury and to allow the airbag to perform as it was designed, do not mount equipment inside the airbag deployment zones.

Do not attach anything to the steering wheel hub or mount any equipment within the deployment zone for the driver airbag.

Do not mount equipment on the passenger side of the instrument panel top pad deployment zone. Equipment should not be mounted on or around the passenger airbag opening because of a deploying airbag. To allow the airbag to perform as it was designed, do not mount equipment inside the airbag deployment zone.

Do not mount a security barrier such that the ends of the barrier or brackets are within the roof-rail airbag deployment zones.

Avoid installing wiring for roof-rail emergency lighting or radio antennas that may restrict the proper deployment of the roof-rail airbags.

GM approved service procedures must be followed to remove and reinstall the instrument panel to the pad to ensure proper airbag deployment.

The police vehicle has a rollover sensor mounted on the centerline of the vehicle between the driver and front outboard passenger positions. If the vehicle has individual front seats, the rollover sensor will be exposed. Do not mount equipment within 25 mm (1 in) of the rollover sensor. This may affect the performance of multiple restraint systems.

## ONSTAR

**POU<sup>1</sup> ONSTAR ADDITIONAL 9 MONTHS OF ONSTAR FLEET SAFETY AND SECURITY.** Provides up to 9 months of Fleet Safety and Security service in addition to the 3 months of complimentary coverage that is included in the price of the eligible vehicle. Total OnStar Fleet Safety and Security service duration is up to 12 months. Active subscription required. Service availability, features and functionality vary by vehicle, device and the plan you are enrolled in. Terms apply. See [onstar.com](https://onstar.com) for details and limitations. Not available with POJ, POK, POL, POQ, PIR, PIS, PIT, PIU or R7Z

**POJ<sup>1</sup> ONSTAR ADDITIONAL 21 MONTHS OF ONSTAR FLEET SAFETY AND SECURITY.** Provides up to 21 months of Fleet Safety and Security service in addition to the 3 months of complimentary coverage that is included in the price of the eligible vehicle. Total OnStar Fleet Safety and Security service duration is up to 24 months. Active subscription required. Service availability, features and functionality vary by vehicle, device and the plan you are enrolled in. Terms apply. See [onstar.com](https://onstar.com) for details and limitations.

**POK<sup>1</sup> ONSTAR ADDITIONAL 33 MONTHS OF ONSTAR FLEET SAFETY AND SECURITY.** Provides up to 33 months of Fleet Safety and Security service in addition to the 3 months of complimentary coverage that is included in the price of the eligible vehicle. Total OnStar Fleet Safety and Security service duration is up to 36 months. Active subscription required. Service availability, features and functionality vary by vehicle, device and the plan you are enrolled in. Terms apply. See [onstar.com](https://onstar.com) for details and limitations.

**POL<sup>1</sup> ONSTAR ADDITIONAL 45 MONTHS OF ONSTAR FLEET SAFETY AND SECURITY.** Provides up to 45 months of Fleet Safety and Security service in addition to the 3 months of complimentary coverage that is included in the price of the eligible vehicle. Total OnStar Fleet Safety and Security service duration is up to 48 months. Active subscription required. Service availability, features and functionality vary by vehicle, device and the plan you are enrolled in. Terms apply. See [onstar.com](https://onstar.com) for details and limitations.

**POQ<sup>1</sup> ONSTAR ADDITIONAL 57 MONTHS OF ONSTAR FLEET SAFETY AND SECURITY.** Provides up to 57 months of Fleet Safety and Security service in addition to the 3 months of complimentary coverage that is included in the price of the eligible vehicle. Total OnStar Fleet Safety and Security service duration is up to 60 months. Active subscription required. Service availability, features and functionality vary by vehicle, device and the plan you are enrolled in. Terms apply. See [onstar.com](https://onstar.com) for details and limitations.

**POR<sup>1</sup> ONSTAR ADDITIONAL 9 MONTHS OF ONSTAR FLEET DRIVER REMOTE ACCESS.** Provides up to 9 months of Fleet Driver Remote Access service in addition to the 3 months of complimentary coverage that is included in the price of the eligible vehicle. Total OnStar Fleet Driver Remote Access service duration is up to 12 months. Active subscription required. Service availability, features and functionality vary by vehicle, device and the plan you are enrolled in. Terms apply. Remote Access does not include emergency or security services. See [onstar.com](https://onstar.com) for details and limitations.

**POM<sup>1</sup> ONSTAR ADDITIONAL 21 MONTHS OF ONSTAR FLEET DRIVER REMOTE ACCESS.** Provides up to 21 months of Fleet Driver Remote Access service in addition to the 3 months of complimentary coverage that is included in the price of the eligible vehicle. Total OnStar Fleet Driver Remote Access service duration is up to 24 months. Active subscription required. Service availability, features and functionality vary by vehicle, device and the plan you are enrolled in. Terms apply. Remote Access does not include emergency or security services. See [onstar.com](https://onstar.com) for details and limitations.

**PON<sup>1</sup> ONSTAR ADDITIONAL 33 MONTHS OF ONSTAR FLEET DRIVER REMOTE ACCESS.** Provides up to 33 months of Fleet Driver Remote Access service in addition to the 3 months of complimentary coverage that is included in the price of the eligible vehicle. Total OnStar Fleet Driver Remote Access service duration is up to 36 months. Active subscription required. Service availability, features and functionality vary by vehicle, device and the plan you are enrolled in. Terms apply. Remote Access does not include emergency or security services. See [onstar.com](https://onstar.com) for details and limitations.

**POO<sup>1</sup> ONSTAR ADDITIONAL 45 MONTHS OF ONSTAR FLEET DRIVER REMOTE ACCESS.** Provides up to 45 months of Fleet Driver Remote Access service in addition to the 3 months of complimentary coverage that is included in the price of the eligible vehicle. Total OnStar Fleet Driver Remote Access service duration is up to 48 months. Active subscription required. Service availability, features and functionality vary by vehicle, device and the plan you are enrolled in. Terms apply. Remote Access does not include emergency or security services. See [onstar.com](https://onstar.com) for details and limitations.

**POP<sup>1</sup> ONSTAR ADDITIONAL 57 MONTHS OF ONSTAR FLEET DRIVER REMOTE ACCESS.** Provides up to 57 months of Fleet Driver Remote Access service in addition to the 3 months of complimentary coverage that is included in the price of the eligible vehicle. Total OnStar Fleet Driver Remote Access service duration is up to 60 months. Active subscription required. Service availability, features and functionality vary by vehicle, device and the plan you are enrolled in. Terms apply. Remote Access does not include emergency or security services. See [onstar.com](https://onstar.com) for details and limitations.

**PIR<sup>1</sup> ONSTAR ADDITIONAL 9 MONTHS OF ONSTAR FLEET ASSURANCE.** Provides up to 9 months of Fleet Assurance service in addition to the 3 months of complimentary Safety & Security coverage that is included in the price of the eligible vehicle. Total OnStar Safety & Security service duration is up to 3 months and up to 9 months of OnStar Fleet Assurance. OnStar plan, working electrical system, cell reception and GPS signal required. OnStar links to emergency services. See [OnStar.com/BusinessSolutions](https://OnStar.com/BusinessSolutions) for details and limitations.

**PIS<sup>1</sup> ONSTAR ADDITIONAL 21 MONTHS OF ONSTAR FLEET ASSURANCE.** Provides up to 21 months of Fleet Assurance service in addition to the 3 months of complimentary Safety & Security coverage that is included in the price of the eligible vehicle. Total OnStar Safety & Security service duration is up to 3 months and up to 21 months of OnStar Fleet Assurance. OnStar plan, working electrical system, cell reception and GPS signal required. OnStar links to emergency services. See [OnStar.com/BusinessSolutions](https://OnStar.com/BusinessSolutions) for details and limitations.

**PIT<sup>1</sup> ONSTAR ADDITIONAL 33 MONTHS OF ONSTAR FLEET ASSURANCE.** Provides up to 33 months of Fleet Assurance service in addition to the 3 months of complimentary Safety & Security coverage that is included in the price of the eligible vehicle. Total OnStar Safety & Security service duration is up to 3 months and up to 33 months of OnStar Fleet Assurance. OnStar plan, working electrical system, cell reception and GPS signal required. OnStar links to emergency services. See [OnStar.com/BusinessSolutions](https://OnStar.com/BusinessSolutions) for details and limitations.

**PIU<sup>1</sup> ONSTAR ADDITIONAL 45 MONTHS OF ONSTAR FLEET ASSURANCE.** Provides up to 45 months of Fleet Assurance service in addition to the 3 months of complimentary Safety & Security coverage that is included in the price of the eligible vehicle. Total OnStar Safety & Security service duration is up to 3 months and up to 45 months of OnStar Fleet Assurance. OnStar plan, working electrical system, cell reception and GPS signal required. OnStar links to emergency services. See [OnStar.com/BusinessSolutions](https://OnStar.com/BusinessSolutions) for details and limitations.

**R7Z<sup>1</sup> ONSTAR ADDITIONAL 57 MONTHS OF ONSTAR FLEET ASSURANCE.** Provides up to 57 months of Fleet Assurance service in addition to the 3 months of complimentary Safety & Security coverage that is included in the price of the eligible vehicle. Total OnStar Safety & Security service duration is up to 3 months and up to 57 months of OnStar Fleet Assurance. OnStar plan, working electrical system, cell reception and GPS signal required. OnStar links to emergency services. See [OnStar.com/BusinessSolutions](https://OnStar.com/BusinessSolutions) for details and limitations.

**POV<sup>1</sup> ONSTAR VEHICLE INSIGHTS - 1 YEAR OF SERVICE.** Includes 12 months of OnStar Vehicle Insights service. OnStar Vehicle Insights provides fleet managers and drivers the tools and data they need to help maximize fleet productivity and help maximize fleet's operational efficiencies. OnStar Vehicle Insights relays real-time vehicle data like vehicle location, driver performance information and more. Eligible customers must sign up for an account at [www.onstarvehicleinsights.com](https://www.onstarvehicleinsights.com) in order to take advantage of this 12 months offer. Requires an active connected vehicle services plan. The OnStar Vehicle Insights service is included in the price of the vehicle. Total service duration is 12 months. Non-Transferable. Non-Refundable.

**POW<sup>1</sup> ONSTAR VEHICLE INSIGHTS - 2 YEARS OF SERVICE.** Includes 24 months of OnStar Vehicle Insights service. OnStar Vehicle Insights provides fleet managers and drivers the tools and data they need to help maximize fleet productivity and help maximize fleet's operational efficiencies. OnStar Vehicle Insights relays real-time vehicle data like vehicle location, driver performance information and more. Eligible customers must sign up for an account at [www.onstarvehicleinsights.com](https://www.onstarvehicleinsights.com) in order to take advantage of this 24 months offer. Requires an active connected vehicle services plan. The OnStar Vehicle Insights service is included in the price of the vehicle. Total service duration is 24 months. Non-Transferable. Non-Refundable.

<sup>1</sup> Requires (UEI) OnStar. Requires one of the following Fleet or Government order types: FLS, FNR, FRC, FBC, FGO or FEF.  
Not available with a ship-to of Guam, Puerto Rico or the Virgin Islands.



## ONSTAR

**POX<sup>1</sup> ONSTAR VEHICLE INSIGHTS - 3 YEARS OF SERVICE.** Includes 36 months of OnStar Vehicle Insights service. OnStar Vehicle Insights provides fleet managers and drivers the tools and data they need to help maximize fleet productivity and help maximize fleet's operational efficiencies. OnStar Vehicle Insights relays real-time vehicle data like vehicle location, driver performance information and more. Eligible customers must sign up for an account at [www.onstarvehicleinsights.com](http://www.onstarvehicleinsights.com) in order to take advantage of this 36 months offer. Requires an active connected vehicle services plan. The OnStar Vehicle Insights service is included in the price of the vehicle. Total service duration is 36 months. Non-Transferrable. Non-Refundable.

**POY<sup>1</sup> ONSTAR VEHICLE INSIGHTS - 4 YEARS OF SERVICE.** Includes 48 months of OnStar Vehicle Insights service. OnStar Vehicle Insights provides fleet managers and drivers the tools and data they need to help maximize fleet productivity and help maximize fleet's operational efficiencies. OnStar Vehicle Insights relays real-time vehicle data like vehicle location, driver performance information and more. Eligible customers must sign up for an account at [www.onstarvehicleinsights.com](http://www.onstarvehicleinsights.com) in order to take advantage of this 48 months offer. Requires an active connected vehicle services plan. The OnStar Vehicle Insights service is included in the price of the vehicle. Total service duration is 48 months. Non-Transferrable. Non-Refundable.

**POZ<sup>1</sup> ONSTAR VEHICLE INSIGHTS - 5 YEARS OF SERVICE.** Includes 60 months of OnStar

Vehicle Insights service. OnStar Vehicle Insights provides fleet managers and drivers the tools and data they need to help maximize fleet productivity and help maximize fleet's operational efficiencies. OnStar Vehicle Insights relays real-time vehicle data like vehicle location, driver performance information and more. Eligible customers must sign up for an account at [www.onstarvehicleinsights.com](http://www.onstarvehicleinsights.com) in order to take advantage of this 60 months offer. Requires an active connected vehicle services plan. The OnStar Vehicle Insights service is included in the price of the vehicle. Total service duration is 60 months. Non-Transferrable. Non-Refundable.

**R8S<sup>2</sup> ONSTAR IN-VEHICLE COACHING - 1 YEAR OF SERVICE.** In-Vehicle Coaching verbally coaches drivers in real time through the vehicle's audio system to help drivers quickly modify their driving behavior and develop better behind-the-wheel habits Terms Apply. Fees, services, and availability subject to change without notice. Applicable taxes not included. Does not include emergency or security services. Diagnostics capabilities vary by vehicle model. Not all issues will deliver alerts. In-Vehicle Coaching features vary by vehicle model and year. See [onstarvehicleinsights.com](http://onstarvehicleinsights.com) for details and limitations. Non-Transferrable. Non-Refundable.

**RFS<sup>2</sup> ONSTAR IN-VEHICLE COACHING - 2 YEARS OF SERVICE.** In-Vehicle Coaching verbally coaches drivers in real time through the vehicle's audio system to help drivers quickly modify their driving behavior and develop better behind-the-wheel habits Terms Apply. Fees, services, and availability subject to change without notice. Applicable taxes not included. Does not include emergency or security services. Diagnostics capabilities vary by vehicle model. Not all issues will deliver alerts. In-Vehicle Coaching features vary by vehicle model and year. See [onstarvehicleinsights.com](http://onstarvehicleinsights.com) for details and limitations. Non-Transferrable. Non-Refundable.

**RFT<sup>2</sup> ONSTAR IN-VEHICLE COACHING - 3 YEARS OF SERVICE.** In-Vehicle Coaching verbally coaches drivers in real time through the vehicle's audio system to help drivers quickly modify their driving behavior and develop better behind-the-wheel habits Terms Apply. Fees, services, and availability subject to change without notice. Applicable taxes not included. Does not include emergency or security services. Diagnostics capabilities vary by vehicle model. Not all issues will deliver alerts. In-Vehicle Coaching features vary by vehicle model and year. See [onstarvehicleinsights.com](http://onstarvehicleinsights.com) for details and limitations. Non-Transferrable. Non-Refundable.

**RFU<sup>2</sup> ONSTAR IN-VEHICLE COACHING - 4 YEARS OF SERVICE.** In-Vehicle Coaching verbally coaches drivers in real time through the vehicle's audio system to help drivers quickly modify their driving behavior and develop better behind-the-wheel habits Terms Apply. Fees, services, and availability subject to change without notice. Applicable taxes not included. Does not include emergency or security services. Diagnostics capabilities vary by vehicle model. Not all issues will deliver alerts. In-Vehicle Coaching features vary by vehicle model and year. See [onstarvehicleinsights.com](http://onstarvehicleinsights.com) for details and limitations. Non-Transferrable. Non-Refundable.

**RFY<sup>2</sup> ONSTAR IN-VEHICLE COACHING - 5 YEARS OF SERVICE.** In-Vehicle Coaching verbally coaches drivers in real time through the vehicle's audio system to help drivers quickly modify their driving behavior and develop better behind-the-wheel habits Terms Apply. Fees, services, and availability subject to change without notice. Applicable taxes not included. Does not include emergency or security services. Diagnostics capabilities vary by vehicle model. Not all issues will deliver alerts. In-Vehicle Coaching features vary by vehicle model and year. See [onstarvehicleinsights.com](http://onstarvehicleinsights.com) for details and limitations. Non-Transferrable. Non-Refundable.

**PR6<sup>3</sup> SIRIUSXM, ADDITIONAL 9 MONTHS OF THE SXM PLATINUM PLAN.** Listen inside and outside the car on the app in addition to the trial period included with the vehicle. Not available on 9C1.

**PR7<sup>3</sup> SIRIUSXM, ADDITIONAL 21 MONTHS OF THE SXM PLATINUM PLAN.** Listen inside and outside the car on the app in addition to the trial period included with the vehicle. Not available on 9C1.

**PR8<sup>3</sup> SIRIUSXM, ADDITIONAL 33 MONTHS OF THE SXM PLATINUM PLAN.** Listen inside and outside the car on the app in addition to the trial period included with the vehicle. Not available on 9C1.

1. Requires (UEI) OnStar. Requires one of the following Fleet or Government order types: FLS, FNR, FRC, FBC, FGO or FEF. Not available with a ship-to of Guam, Puerto Rico or the Virgin Islands 2. Requires (UEI) OnStar and POV. Requires one of the following Fleet or Government order types: FLS, FNR, FRC, FBC, FGO or FEF. Not available with a ship-to of Guam, Puerto Rico or the Virgin Islands. 3. Requires 9C3, (UEI) and (U2K) SiriusXM. Requires one of the following Fleet or Government order types: FLS, FNR, FRC, FBC, FGO or FEF. Not available in AK, HI, PR and VI.

## MAINTENANCE / LIMITED WARRANTY

<b>SCHEDULED MAINTENANCE</b>	One visit within first year of vehicle delivery <sup>1</sup>
<b>BUMPER-TO-BUMPER LIMITED WARRANTY</b>	3 years/36,000 miles <sup>2</sup> . Bumper-to-Bumper Limited Warranty with no deductible
<b>ELECTRIC VEHICLE PROPULSION LIMITED WARRANTY</b>	8 Years / 100,000 Miles <sup>2</sup>
<b>TIRES<sup>4</sup></b>	3 years/36,000 miles <sup>2</sup> ; coverage prorated after first 12,000 miles
<b>ROADSIDE ASSISTANCE AND COURTESY TRANSPORTATION</b>	Qualified Fleet Customers: 5 years/100,000 miles <sup>3</sup>
<b>RUST-THROUGH</b>	6 years/100,000 miles <sup>2</sup>
<b>CORROSION</b>	3 years/36,000 miles <sup>2</sup>
<b>WHEEL ALIGNMENT AND BALANCE</b>	Up to 7,500 miles <sup>5</sup>

**1.** Includes first required maintenance visit as stated in vehicle maintenance schedule. Maintenance visit consists of oil change, tire rotation and Multi-Point Vehicle Inspection. Does not include air filters. See participating dealer for other restrictions and complete details. Excludes vehicles ordered with fleet delete option RY9. **2.** Whichever comes first. See dealer for limited warranty details. **3.** Tires also covered under the Bumper-to-Bumper Warranty but are prorated based upon mileage. See dealer for warranty details. **4.** If the vehicle has a warrantable failure, see your Owner's Manual for full details on the Courtesy Transportation program. **5.** Customer maintenance item after 7,500 miles.



GM reserves the right to make changes at any time, without notice, in prices, colors, materials, equipment, specifications, models, and availability. Specifications, dimensions, measurements, ratings, and other numbers in this catalog and other printed materials provided at the dealership or affixed to vehicles are approximates based upon design and engineering drawings and prototypes and laboratory tests. Your vehicle may differ due to variations in manufacture and equipment. Since some information may have been updated since the time of printing, please check with your GM dealer for complete details. Some of the equipment shown or described throughout this publication may be available at extra cost, and/or is supplied by an independent supplier.

Copyright 2024 General Motors. All rights reserved. All text, images, graphics, and other materials in this publication are subject to the copyright and other intellectual property rights of General Motors. These materials may not be reproduced, distributed, or modified without the express written permission of General Motors. The marks appearing in this publication including, but not limited to: GM and the GM logo; Chevrolet and their respective logos, emblems, slogans, and vehicle model names and body designs; and other marks such as GM ENVOLVE and Commercial are trademarks and/or service marks of General Motors, its subsidiaries, affiliates, or licensors.

For more detailed information, contact your District Sales Manager or see the online order guide at [gmevolve.com/police](https://gmevolve.com/police).

