



UI Bulletin 120g

Subject: Power Take Off (PTO) Subsystem Operating Description and Application Guide

Models Years Affected: 2015 and beyond

Models Affected: 2015-2019 C/K 3500HD Chassis Cab (36xxx) Chevrolet Silverado / GMC Sierra.
2019 and beyond Silverado 4500HD 5500HD 6500HD

Origination Date: August 26, 2014

Revision Date: April 13, 2021

ADVISORY:

This bulletin provides a complete description of the PTO option on the 2015 and beyond Heavy Duty Chassis Cab Chevrolet Silverado and GMC Sierra 3500HD Cab Chassis Models and 2019 and beyond Chevrolet Silverado 4500HD, 5500HD and 6500HD conventional cab models with the Duramax diesel engine and Allison transmission.

The PTO subsystem is factory ready for engine idle up control and is ready for transmission mounted gear and external electrical components to be attached.

This Bulletin is the complete Operating Description and Application Guide

General Motors Upfitter Integration

<http://www.gmupfitter.com>



Table of Contents

1. Quick Start Reference - Power Take-Off (PTO)	4
2. Factory PTO Settings	9
Schematic for:.....	10
1. Basic 'inside' PTO operation using control relay and oil solenoid	10
2. Optional outside 'remote' operation [start/stop, tap up/down].....	10
3. Primary PTO Operating Modes	12
4. Preset.....	13
Preset PTO - <i>In-cab Operation</i> : Enable Conditions [factory default programming].....	13
Preset PTO - <i>Remote Operation</i> : Enable Conditions [requires programming with GM service tool and installation of an appropriate remote switch panel].....	14
[New feature for 2017]	15
Preset PTO - <i>Remote Operation with In-Cab Engage</i> : Enable Conditions [requires programming with GM service tool and installation of an appropriate remote switch panel].....	15
5. Variable PTO.....	17
Variable PTO - <i>In-cab operation</i> : Enable Conditions - [requires programming with GM Service tool].....	17
[New feature for 2017]	19
6. Mobile PTO	21
Mobile PTO - <i>in-cab operation only</i> : Enable Conditions - [requires programming with GM Service tool].....	21
7. OSIM PTO (Operator Selectable In-Cab Mode) [New feature for 2017].....	22
Requires programming with GM service tool to configure Stationary & Mobile ' <i>Paring</i> .' Available ' <i>pairs</i> ' are <i>preset and mobile</i> or else <i>variable and mobile</i> . Used for vehicles that require 2 PTO modes. Remote operation is not available.....	22
OSIM PTO - <i>Preset [Stationary] Operation</i> : Enable Conditions.....	22
OSIM Preset operation can be initiated as follows:	22
OSIM PTO - <i>Variable [Stationary] Operation</i> : Enable Conditions	22
OSIM PTO - <i>Mobile Operation</i> : Enable Conditions.....	22
8. PTO System Disengage Conditions	23
Stationary Modes [preset or variable] - in-cab control.....	23
Stationary Modes [preset or variable] - remote control [with or without in-cab engage].....	24



UI Bulletin 120g

Stationary Modes will also disengage if:	24
9. Prolonged or Extended PTO Operation.....	26
10. PTO Operational Speed Control	28
[Variable] PTO operational speed control provides the following functions:	28
11. Factory Preset Parameters	29
12. Driver Information Center (DIC) Warnings Messages	32
13. Appendix: Safety Recommendations	33



1. Quick Start Reference - Power Take-Off (PTO)

The PTO is an Upfitter integrated system that allows the user to create an auxiliary power source for running add-on equipment, such as salt spreaders, dump beds, lifts, winches, and lift buckets etc. The PTO system controls engine speed to values higher than normal base idle, PTO load relay engagement, and remote starting and shutdown of the engine.

PTO Components

The OEM PTO components consist of:

- The transmission [internal] PTO gear – rotates with the torque converter
- The in-cab PTO switch and cruise control SET and RES switches
- The PTO telltale indicator
- The Driver Information Center (DIC)
- The Radio and Navigation Screen (HMI)
- The power take off module (PTOM)
- The remote PTO Upfitter connector [X191]

Note: The interface connector [X191] is located at the rear of the cab near the RH frame rail and comes with a cap which is the mating half to the truck harness connector. This is the connector the Upfitter will use to wire in external electrical components such as a control relay, oil solenoid [these two are basic to all systems] and possibly external switches to control the PTO from outside the cab.

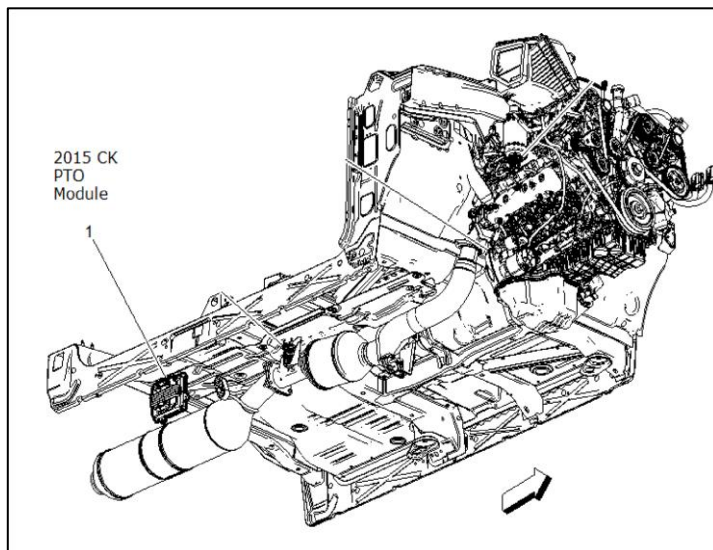


Figure 1

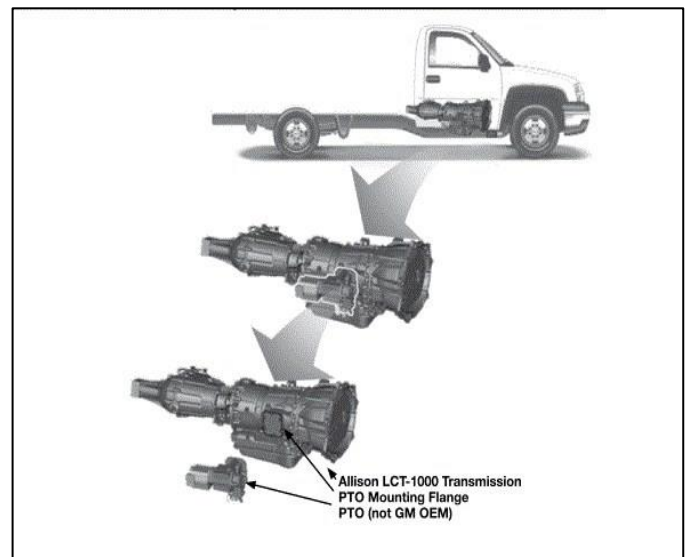


Figure 2

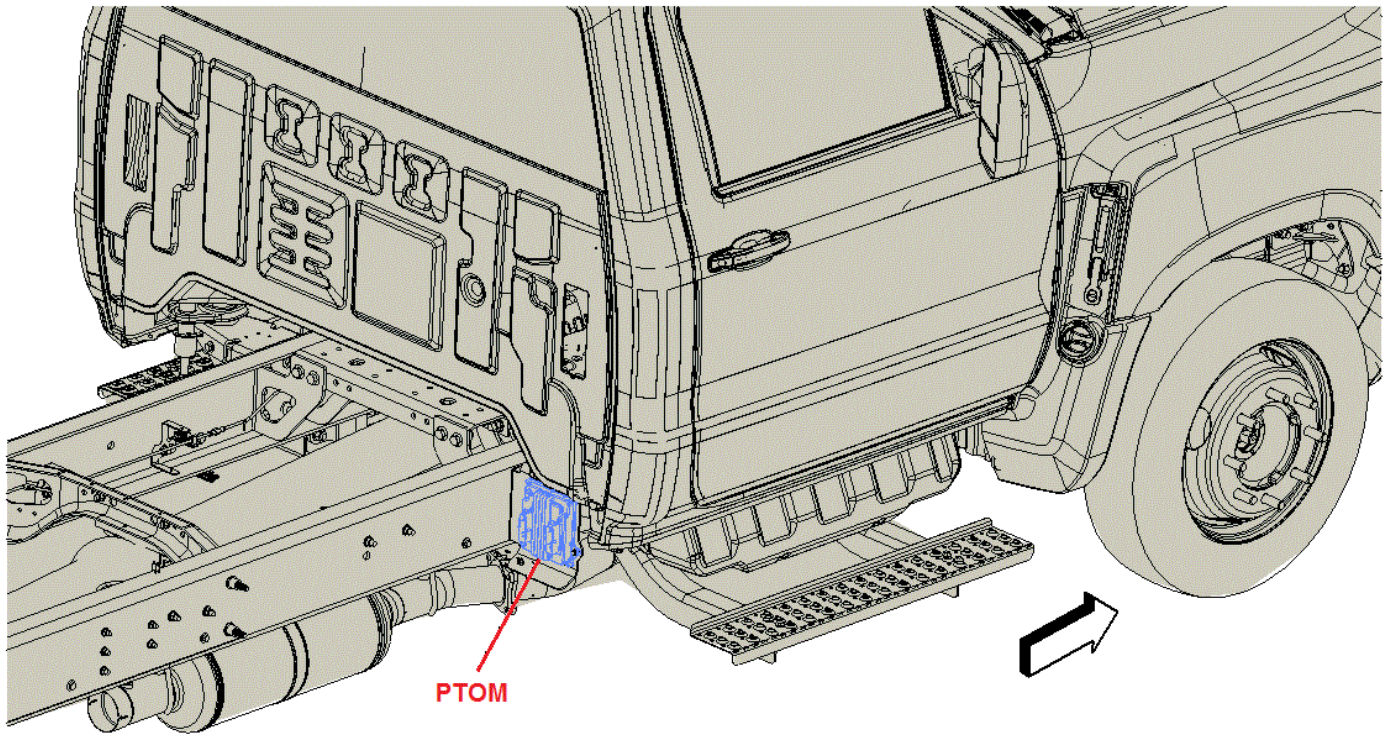


Figure 3 MD

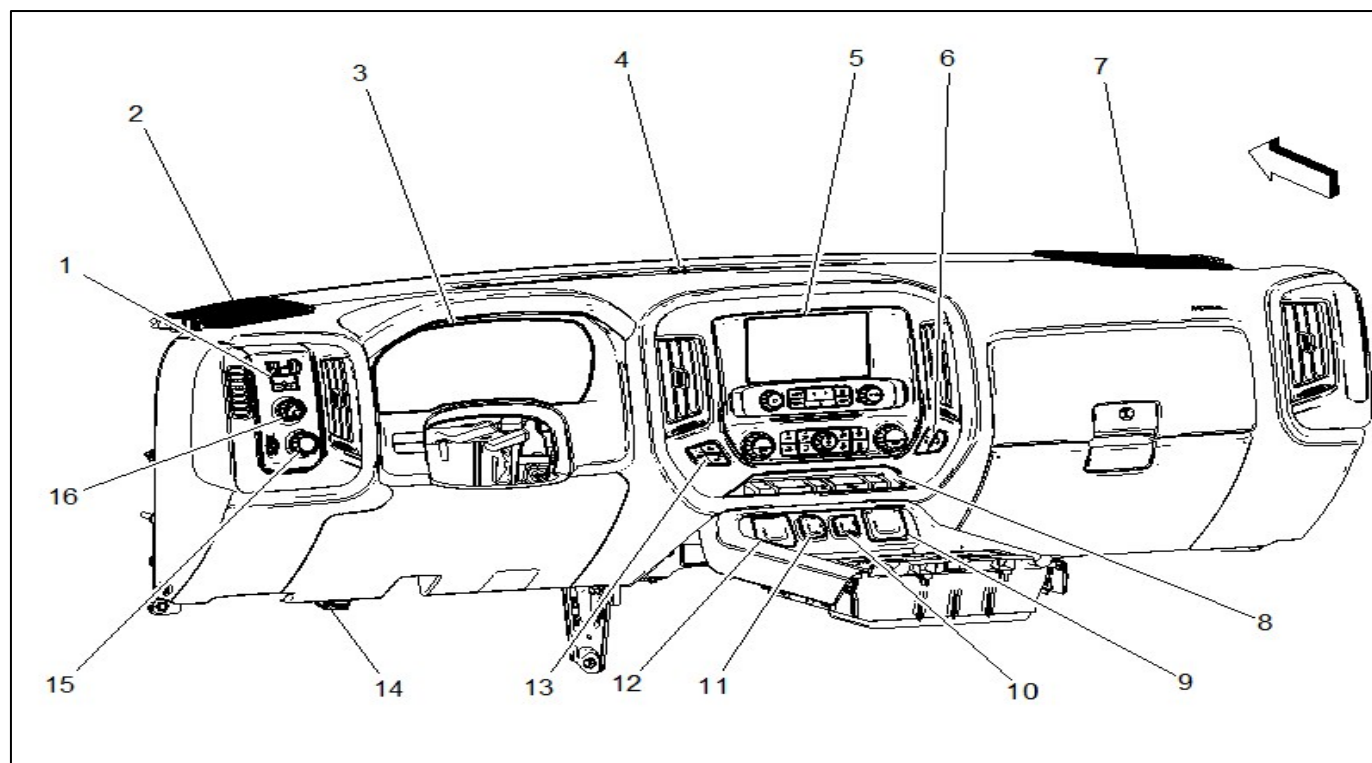
**Front of Instrument Panel Components**

Figure 3

(1)	Trailer Brake Control Switch	(9)	Accessory Power Receptacle – 110V AC (KI4)
(2)	Speaker – Left Instrument Panel (UQ3)	(10)	Accessory Power Receptacle – Instrument Panel 2
(3)	Instrument Cluster	(11)	Accessory Power Receptacle – Instrument Panel 1
(4)	Ambient Light/Sun load Sensor	(12)	USB Receptacle
(5)	Info Display Module	(13)	Seat Heating and Cooling Switch – Driver
(6)	Seat Heating and Cooling Switch – Passenger	(14)	Data Link Connector
(7)	Speaker – Right Instrument Panel (UQ3)	(15)	Headlamp Switch
(8)	Switches –PTO switch location	(16)	Transfer Case Shift Control Switch



UI Bulletin 120g

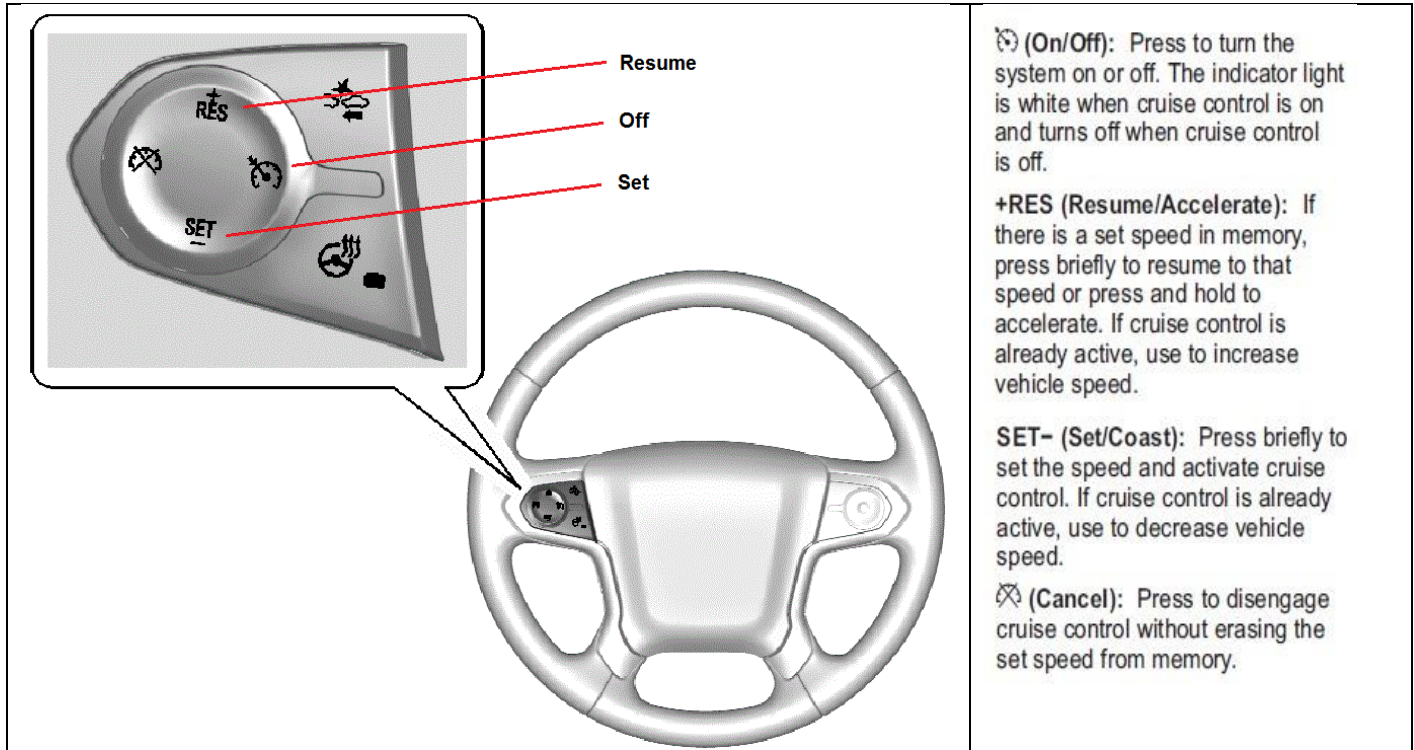


Figure 4

X191 Engine Harness to Power Take-Off Jumper Harness

<p>Connector Part Information [truck side]</p> <p>Harness Type: Engine OEM Connector: 15326863 Service Connector: 19180282 Description: 16-Way F 150 GT Series, Sealed (BK)</p>	<p>Connector Part Information [Upfitter Cap]</p> <ul style="list-style-type: none"> • Harness Type: Power Take-Off Jumper • OEM Connector: 15326868 • Service Connector: 15306364 • Description: 16-Way M 150 Series, Sealed (BK)
--	---

General Motors Upfitter Integration

<http://www.gmupfitter.com>



UI Bulletin 120g

Terminal Information				
Terminated Lead	Service Terminal	Tray	Core Crimp	Insulation Crimp
13575412	12191819	8	2	1
13575298	12191819	8	E	1
13576363	15326269	19	E	4

Pin	Color	Circuit	Terminal Type ID	Function
A	BN/WH	6085	I	Power Take Off Remote Engine Start Switch Signal
B	BN	6381	I	Power Take Off Relay Engage Signal Relay Coil High Side pin [86]
C	-	-	-	Not Occupied
D	BK	550	I	Ground solenoid coil ground [high side to relay NO contact pin 87]
E-F	-	-	-	Not Occupied
G	YE	2522	I	Power Take Off Status Signal
H	VT/D-BU	2562	II	Power Take Off Relay Coil Control Relay Coil low side pin [85]
J	WH/L-GN	6142	II	Power Take Off Engine Shutdown Signal
K	RD/VT	2640	I	Battery Positive Voltage
L-M	-	-	-	Not Occupied
N	D-BU/GY	6089	II	Power Take Off Remote Switch Set Signal (1)
R	VT/WH	239	II	Run/Crank Ignition 1 Voltage Power for Relay common contact pin [30]

General Motors Upfitter Integration

<http://www.gmupfitter.com>



2. Factory PTO Settings

The PTO system is *programmed in the plant for a basic 3 speed idle up [Stationary Preset] mode* with the relay control circuit enabled and ready to close a control relay. [The relay is not included and must be added by the Upfitter.] For most customers the only electrical connections that are required are a control relay and an oil solenoid. The system is ready to go. [Older systems did not have the relay driver turned on so they would not engage the PTO until reprogrammed at a dealer. That has been corrected.]

The 3 factory speeds are:

1. 900 RPM – occurs with press and release of the PTO switch
2. 1200 RPM – occurs with press and release of the Cruise SET switch [if PTO is ON]
3. 1900 RPM – occurs with press and release of the Cruise Resume Switch [if PTO is ON]

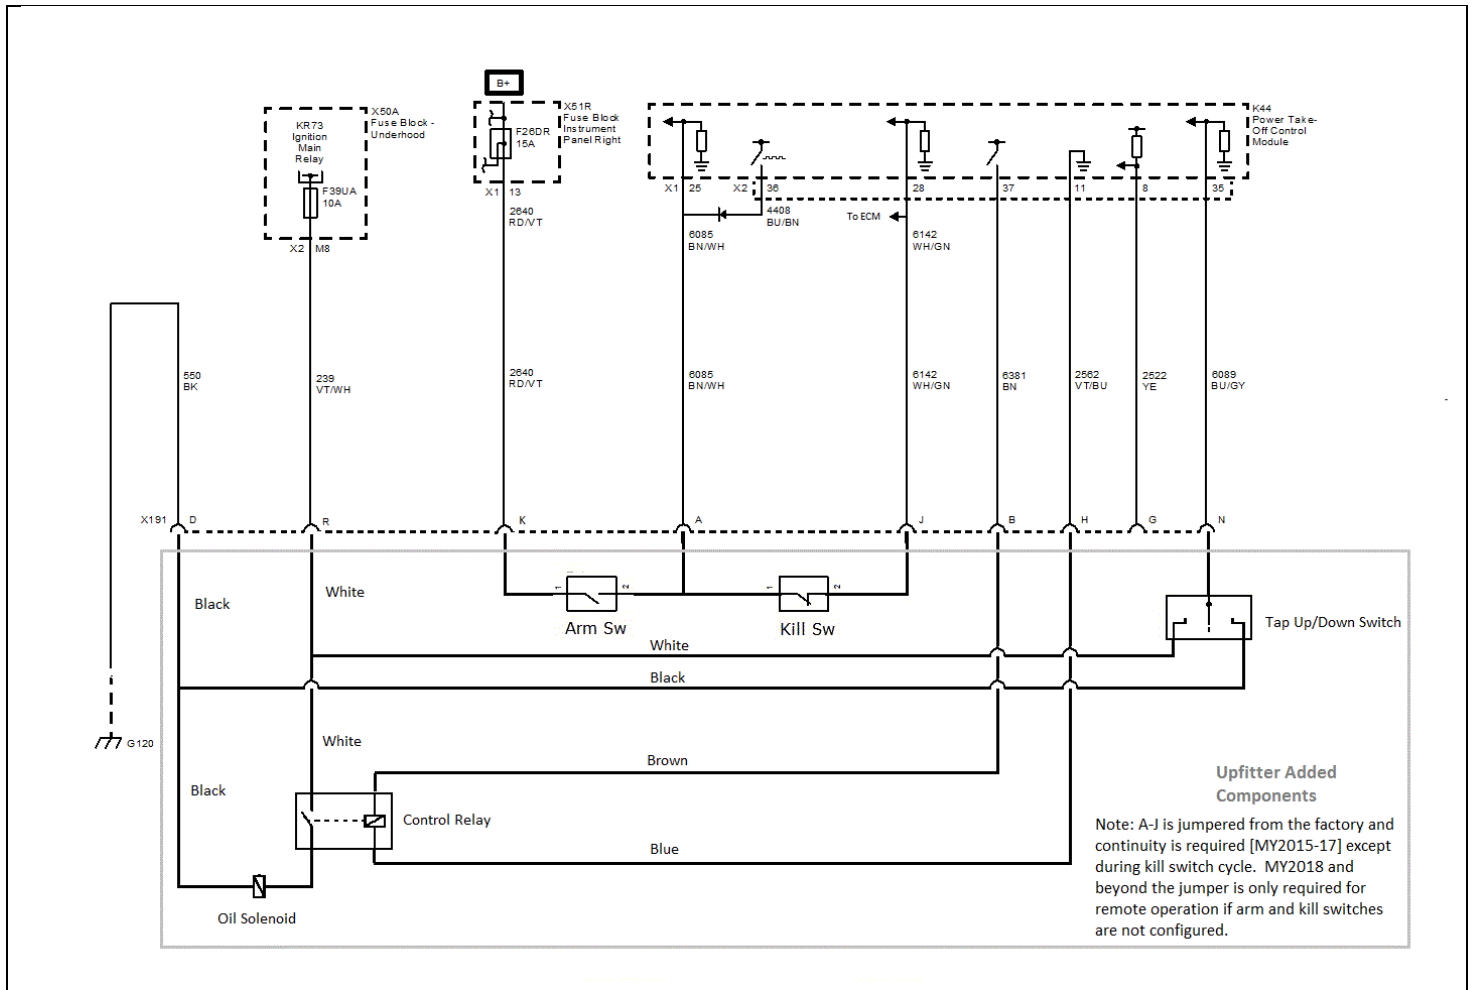
See schematic below. The components in the grey shaded box are what must be connected to X191 for basic in cab operation [Stationary Preset].

IMPORTANT: On a new unit before *anything* is connected, start the truck in park with the park brake set and the Cruise Control Switch is OFF. Press and release the PTO in-cab Switch. You should be able to achieve the 3-speed operation described above. If not, have the dealer fix it before you proceed! When proper idle up operation is confirmed THEN connect your components.



Schematic for:

1. Basic 'inside' PTO operation using control relay and oil solenoid
2. Optional outside 'remote' operation [start/stop, tap up/down]

**NOTE:**

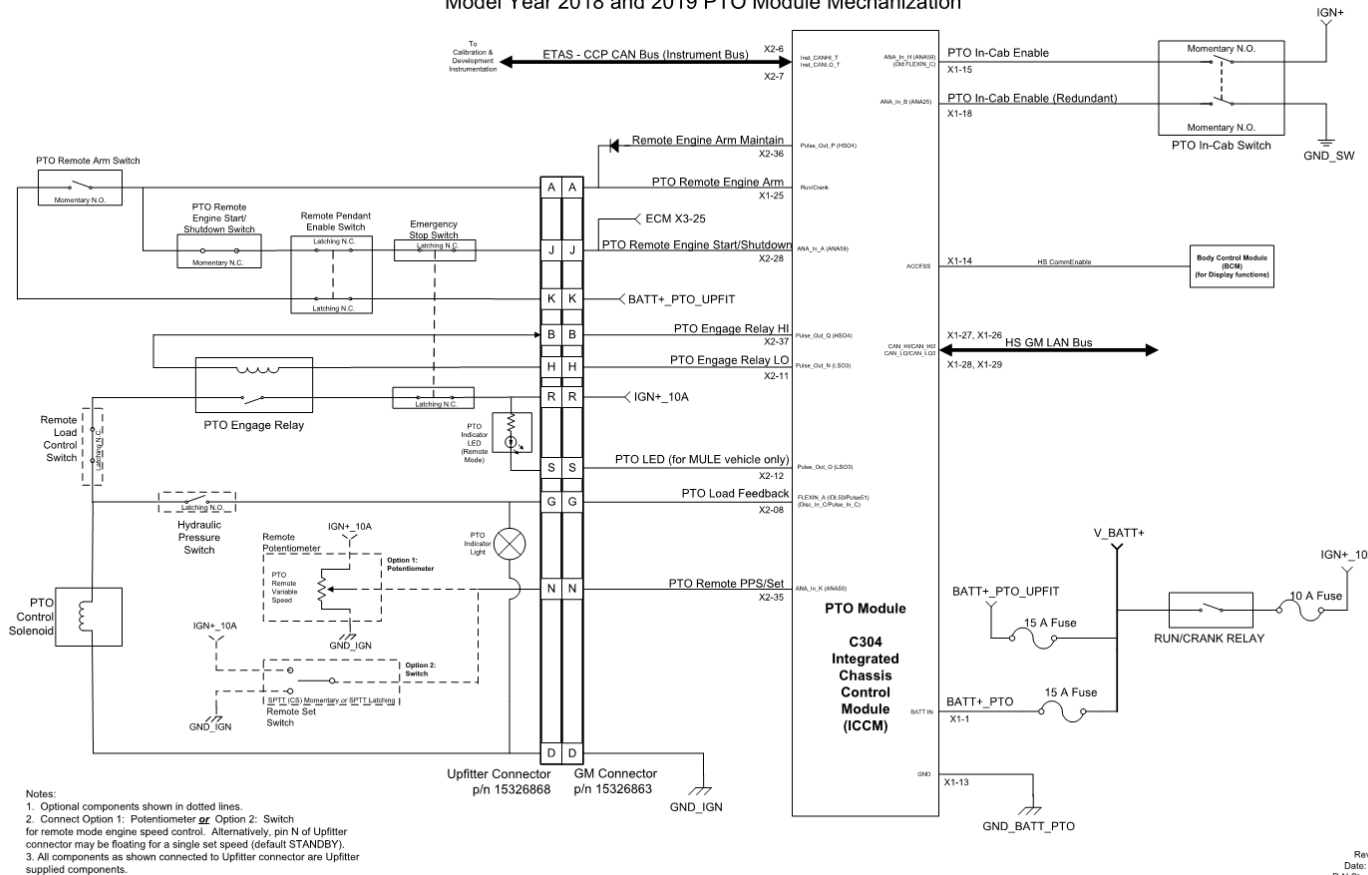
The PTO connector X191 has a cap installed at the assembly plant with a jumper between pins A and J. The cap is a useable mating connector and it could be rewired as shown above. To avoid setting internal trouble codes the continuity between connector cavities A and J must be constantly maintained except during kill switch actuation for MY2015-17. MY2018 and beyond the jumper is only required for remote operation if arm and kill switches are not configured.



UI Bulletin 120g

Full System Schematic [shows all possible external connections]

Model Year 2018 and 2019 PTO Module Mechanization



NOTES:

1. Cavity N control signal must be implemented with a switch OR a potentiometer, not both.
2. For MY2015-17 continuity between pins A & J is monitored, must be maintained. It can be interrupted only during the actuation of the kill switch. Continuous loss of continuity between pins A and J will result in setting system trouble codes.
3. For MY2018 and beyond the A to J jumper is not required except for remote modes where the 'arm' and 'kill' switches are not configured.



3. Primary PTO Operating Modes

PTO modes of operation include the following:

- **Preset** [*Stationary*]
In-cab control standard. Remote control available.
New for 2017 – in cab engage with remote control
- **Variable** [*Stationary*]
In-cab control standard. Remote control available.
New for 2017 – in cab engage with remote control
- **Mobile**
In-cab control only
- **OSIM** (Operator Selectable In-Cab Mode) [*Stationary or Mobile*] is new for 2017, requires 'pairing' and then one of the two 'paired' modes can be selected each key cycle.

Notes:

- Factory default programming enables in-cab controls.
- A GM Service Tool can reprogram the system to allow for remote control. In-cab controls can be left active [in-cab engage with remote control] or disabled. OSIM can be enabled for dual stationary/mobile mode pairing.
- All PTO modes provide for engine rpm control and PTO load relay control [engage/disengage].
- All PTO modes provide for safety interlocks for PTO load disengagement.
- Remote PTO modes provide for both in-cab and remote engine starting, and shutdown. **Emergency vehicle provisions for PTO are not compatible with remote mode.**

All Stationary PTO modes provide for engine shutdown due to critical engine conditions, including a timed engine shutdown feature. However, vehicles containing a special calibration will have provisions allowing for PTO to be disabled from the following Automatic Engine Shutdown conditions...

- Low Fuel
- Engine Coolant Hot
- Transmission Fluid Hot
- Low Engine Oil
- Low Engine Oil Pressure
- Diesel Particulate Filter Regeneration Warning

NOTICE: Continuing to operate the vehicle in one or more of the above conditions may result in damage to vehicle's engine, transmission and/or emissions control system. Damage resulting from operating within any of the above conditions is not covered under the vehicle's warranty.

General Motors Upfitter Integration

<http://www.gmupfitter.com>



- For remote pendant applications the 'Remote Pendant Enable Switch' must be in the open position when connecting or disconnecting the pendant cable.

4. Preset

Preset PTO - *In-cab Operation*: Enable Conditions [factory default programming]

To Enable PTO the following conditions must be satisfied:

- Engine must be running.
- The vehicle cannot be moving.
- The parking brake must be set.
- The shift lever must be in PARK [P].
- The brake pedal must not be depressed.
- Cruise Control must be OFF.
- Press and release the PTO In-cab switch, located below the center console. The PTO telltale will blink rapidly until the PTO load relay becomes engaged (Ref. Note 3 below). The telltale will then be steady. The engine will advance to the PTO Standby speed.
- After PTO Standby speed is achieved the Cruise Control SET- and RES+ switches can be used to accomplish the Set 1 or Set 2 PTO engine speeds. *Note: The accelerator pedal is disabled and cannot be used to override the PTO present speeds below.*

Factory default PTO engine speeds	
Standby	900 rpm
Set 1 (SET-)	1200 rpm
Set 2 (RES+)	1900 rpm

Note:

On a new vehicle the PTO function [3 speed idle up] should be confirmed before any wiring modifications are done. See your GM dealer if the default presets are not functioning properly.

- The PTO Control setting is default programmed to Interior PTO Mode. Remote switch inputs are disabled.



UI Bulletin 120g

2. Since a PTO load relay is not yet wired in the system, the PTO Telltale does not initially truly reflect the status of the PTO load. The PTO load relay output is enabled as a factory default.
3. When the PTO Telltale is either blinking or on solid, the PTO Relay output will be activated.

Preset PTO - Remote Operation: Enable Conditions [requires programming with GM service tool and installation of an appropriate remote switch panel].

The panel must be provided by the Upfitter. Please refer to the schematics above which show how Upfitter supplied equipment is to be wired.

1. Cruise Control must be OFF (confirm this is OFF before powering down the vehicle with the Ignition key).
2. The shift lever must be in PARK [P].
3. The park brake must be set, and the hood must be closed.
4. The engine must be stopped, and the Ignition key removed. Vehicle can be locked if desired.
5. From the Remote Switch Panel Press/Close and hold PTO Remote Arm Switch** for 1- 2 seconds to allow for vehicle systems to be awake and ready for the Start/Stop request
6. Within 5 seconds of releasing/opening of the Arming switch, Press (open and close) the PTO Remote Engine Start/Stop* Switch**.
7. The vehicle horn will chirp 3 times, and then engine starting will automatically be initiated. The PTO system will then elevate engine rpm to PTO standby speed and engage the PTO load relay.
8. The PTO Remote Set switch can now be used to accomplish the PTO Set 1 and Set 2 Engine speeds. *Note: The accelerator pedal is disabled when remote PTO operation is selected.*

* It is necessary to wait 20-30 seconds after an Engine Stop to attempt an Engine Start to allow the module to be ready to perform the engine start routine.

** Use of push button momentary switches is highly recommended

Notes:

1. The PTO load relay engages immediately when the PTO operation is initiated by the switch input. This produces a soft engagement because the transmission torque converter is unlocked. The torque converter will lock upon reaching stable PTO Standby Speed [default = 900 rpm] so maximum power is available.
2. The first elevated engine speed – PTO Standby Speed is not intended as a working speed but as a verification that the system is active and ready to go to a working speed. PTO Standby Speed can be modified to a 'working speed' with a GM Service Tool. The upper limit for PTO Standby Speed is 1500 rpm.

General Motors Upfitter Integration

<http://www.gmupfitter.com>



UI Bulletin 120g

3. The remote switches and relay connections are made at the PTO Upfitter Connector located on the chassis frame behind the cab.
4. The PTO Control setting on the Service Tool must be programmed to "Remote PTO Mode Switch" before the remote switches can be used.
5. The PTO relay is programmed to be enabled in the factory default settings.

Warning:

Engine exhaust contains Carbon Monoxide (CO) which cannot be seen or smelled. Exposure to CO can cause unconsciousness or even death. Never operate PTO in an enclosed area such as a garage or building that has no fresh air ventilation. See "Engine Exhaust" in the Vehicle Owner Manual.

Warning:

If the key is in the ignition during Remote PTO operation, the vehicle can be shifted out of Park by an operator. Even though PTO will be disengaged, depending on PTO Upfitter application, personal injury or property damage may result from vehicle movement. Always remove key from the ignition before operating Remote PTO.

[New feature for 2017]

Preset PTO - Remote Operation with In-Cab Engage: Enable Conditions [requires programming with GM service tool and installation of an appropriate remote switch panel].

Starting Remote Operation from cab.

1. With the engine running shift the transmission into P (Park).
2. Release the brake pedal and set the parking brake.
3. Assure the cruise control is OFF and the hood is closed.
4. Press and release the In-Cab PTO Switch.
5. The horn will chirp, the PTO load relay will engage, and the engine speed will advance to PTO Standby Speed.
6. The operator may now exit the vehicle. Doors can be locked with key fob [if desired/available].
7. The PTO Remote Set switch can now be used to accomplish the PTO Set 1 and Set 2 Engine speeds. The accelerator pedal is disabled when Remote PTO operation is selected.

PTO Remote operation can be ended by pressing In-Cab PTO Switch, releasing the parking

General Motors Upfitter Integration

<http://www.gmupfitter.com>



UI Bulletin 120g

brake, depressing the brake pedal or shifting the transmission out of P (Park). The PTO load relay will disengage, and Engine speed will decline to idle speed.

Warning:

While operating your vehicle in stationary PTO mode, the Diesel Particulate Filter (DPF) will continue to filter the exhaust and accumulate soot. The engine control system, depending on the speed and load being applied by the PTO, may not be able to generate enough energy or adequate heat needed to clean or regenerate the DPF. Continued operation under conditions that do not allow effective regeneration or cleaning will eventually plug the DPF and result in reduced power. The ENGINE POWER IS REDUCED Driver Information Center (DIC) message and Malfunction Indicator Lamp will be displayed, and dealer/retailer service will be required to return your vehicle to normal, full power operation. To prevent this from occurring, frequently monitor your vehicle during PTO operation, paying particular attention to the CLEAN EXHAUST FILTER SEE OWNER MANUAL NOW DIC warning message or any horn chirps if operating PTO remotely. If the DIC message [or horn chirp] is presented during PTO operation, see OWNER MANUAL Diesel Particulate Filter for information on how to clean or regenerate the DPF.

Diesel Particulate Filter [DPF] Cleaning during Stationary PTO Operation

If the DPF becomes sufficiently loaded with soot during a PTO session the system will issue a DIC warning message and **horn chirps** as notification to the operator. If the operator is outside the vehicle [remote operation] he must return to the cab and, if running in 'key out' mode, insert and rotate the key to the 'run' position to respond to the system messages. [Messages are not displayed unless the key is in the 'run' position.]

Notes:

- Manual DPF [cleaning] regeneration can be initiated during a PTO idle up session.
- It is strongly recommended that the exhaust filter be cleaned before continuous PTO usage if possible.
- If a manual regen is initiated during the PTO session the PTOM will retain control of the engine speed and the selected speed will not change as the regen event initiates.
- Low PTO engine speeds and light loading will cause regeneration to take longer. To initiate a manual DPF regeneration, see "Manual Regeneration of Diesel Particulate Filter" under Diesel Particulate Filter in the Duramax Diesel Supplement pamphlet in the glove box. See UI Bulletin xxx DPF Regen for more detail.

Warning:

General Motors Upfitter Integration

<http://www.gmupfitter.com>



UI Bulletin 120g

The exhaust system and exhaust gases get very hot during a manual regeneration. Things that burn could touch hot exhaust parts under the vehicle and may catch fire. You or others could be burned. Do not leave the vehicle unattended during a manual regeneration. If operating from outside the vehicle maintain a safe personal distance away from the hot exhaust or you could be burned.

5. Variable PTO

Variable PTO - In-cab operation: Enable Conditions - [requires programming with GM Service tool]

1. With the engine running shift the transmission to P [PARK].
2. Release the brake pedal and set the parking brake.
3. Assure the cruise control is OFF and the hood is closed.
4. Press and release the PTO In-cab switch. The PTO telltale will blink rapidly until the PTO load becomes engaged. The telltale will then be steady. The engine will advance to the PTO Standby speed.
5. After PTO Standby speed is achieved, the Cruise Control Set - and Res + switches can be used to tap up and tap down the engine speed.

Notes:

1. Factory setting for the tap step is 100 rpm and the setting for the ramp rate is 150 rpm/sec. The GM Service Tool can enable the capability to change the default value for tap step via the Radio Customization menu. The default values for both tap step and for ramp rate can be changed with a GM Service Tool.]
2. The accelerator pedal is disabled and cannot be used to control PTO engine speed.
3. [Stationary] Variable PTO operation can be ended by pressing In-Cab PTO Switch, releasing the parking brake, depressing the brake pedal or shifting the transmission out of P (Park). The PTO load relay will disengage, and Engine speed will decline to idle speed.

Variable PTO - Remote Operation: Enable Conditions - [requires programming with GM Service tool and appropriate remote switch panel provided by Upfitter]

1. Shift the transmission to P [Park] and set the parking brake.
2. Assure the Cruise Control is OFF, turn the key off and remove it.
3. The operator may now exit and lock vehicle.
4. From the Remote Switch Panel close and open the PTO Remote Arm Switch.
5. Within 5 seconds open and close the PTO Remote Engine Start/Shutdown switch
6. The vehicle horn will chirp 3 times, and then engine starting will automatically be initiated. The PTO system will then elevate engine rpm to PTO Standby speed and engage the PTO load relay.

General Motors Upfitter Integration

<http://www.gmupfitter.com>



UI Bulletin 120g

7. The desired engine operating speed can now be accomplished. Two versions of engine rpm control are available, switches or potentiometer [according to which one was installed].
 - A. Switches – the PTO Remote Tap Up and Tap Down switches can be used to achieve the desired engine speed.
 - B. Potentiometer – a PTO Remote Throttle Potentiometer can be used as a continuous variable throttle control to dial in the desired engine speed.

Notes:

1. PTO Remote operation can be ended by:
 - A. Opening the remote kill switch
 - B. Pressing In-Cab PTO Switch
 - C. Releasing the parking brake
 - D. Depressing the brake pedal
 - E. Shifting the transmission out of P (Park). The PTO load relay will disengage and Engine speed will decline to idle speed.
2. The PTO load relay engages immediately when the PTO operation is initiated by the switch input. This produces a soft engagement because the transmission torque converter is unlocked. The torque converter will lock upon reaching stable PTO Standby Speed [default = 900 rpm] so maximum power is available.
3. The first elevated engine speed – PTO Standby Speed is not intended as a working speed but as a verification that the system is active and ready to go to a working speed.
4. The remote switches, the remote throttle [if used] and relay connections are made at the PTO Upfitter Connector located on the chassis frame behind the cab.
5. The engine speeds can be adjusted between the low of PTO Standby Speed and the high of PTO Max Engine speed limits. Both values can be modified from the factory default settings with a GM Service Tool.
6. Factory setting for the tap step is 100 rpm and the setting for ramp rate is 150 rpm/sec. The default value for tap step can be modified via the Radio Customization menu. The default values for both tap step and for ramp rate can be changed with a GM Service Tool.
7. The PTO Control setting must be programmed to “PTO Remote Mode Switch Status = Enabled” with Service Tool.
8. The potentiometer option for controlling PTO engine speed is selected with the Service Tool by setting “PTO Remote Mode Switch Configuration = Variable.”
9. The PTO Load Relay is “enabled” as the factory default programmed setting.

Warning:

General Motors Upfitter Integration

<http://www.gmupfitter.com>



UI Bulletin 120g

Engine exhaust contains Carbon Monoxide (CO) which cannot be seen or smelled. Exposure to CO can cause unconsciousness or even death. Never operate PTO in an enclosed area such as a garage or building that has no fresh air ventilation. See "Engine Exhaust" in the Vehicle Owner Manual.

Warning:

If the key is in the ignition during Remote PTO operation, the vehicle can be shifted out of Park by an operator. Even though PTO will be disengaged, depending on PTO Upfitter application, personal injury or property damage may result from vehicle movement. Always remove key from the ignition before operating Remote PTO.

[New feature for 2017]

Variable PTO - Remote Operation with In-Cab Engage: Enable conditions [requires programming with GM Service tool and appropriate remote switch panel provided by Upfitter]

Starting Remote Operation from cab.

1. With the engine running shift the transmission to P (Park) and release the brake pedal.
2. Assure the cruise control is OFF and the hood is closed.
3. Set the parking brake
4. Press and release the In-Cab PTO Switch.
5. The horn will chirp, the PTO load relay will engage, and the engine speed will advance to PTO Standby Speed.
6. The operator may now exit the vehicle. The vehicle doors may be locked with the key fob [if desired/available]
7. From the exterior panel the desired engine operating speed can now be accomplished. Two versions of engine rpm control are available, switches or potentiometer, depending on which was installed.
 - A. Switches - the PTO Remote Set Switch can be used to tap up and tap down to the desired engine speed.
 - B. Potentiometer - a PTO Remote Throttle Potentiometer can be used as a continuous variable throttle control to dial in the desired engine speed.

Notes:

1. The accelerator pedal is disabled when Remote PTO operation is selected.
2. PTO Remote operation can be ended by:
 - A. Opening the remote kill switch [if wired and configured]
 - B. Pressing In-Cab PTO Switch
 - C. Releasing the parking brake
 - D. Depressing the brake pedal

General Motors Upfitter Integration

<http://www.gmupfitter.com>



UI Bulletin 120g

- E. Shifting the transmission out of P (Park). The PTO load relay will disengage, and Engine speed will decline to idle speed.

Warning:

While operating your vehicle in stationary PTO mode, the Diesel Particulate Filter (DPF) will continue to filter the exhaust and accumulate soot. The engine control system, depending on the speed and load being applied by the PTO, may not be able to generate enough energy or adequate heat needed to clean or regenerate the DPF. Continued operation under conditions that do not allow effective regeneration or cleaning will eventually plug the DPF and result in reduced power. The ENGINE POWER IS REDUCED Driver Information Center (DIC) message and Malfunction Indicator Lamp will be displayed, and dealer/retailer service will be required to return your vehicle to normal, full power operation. To prevent this from occurring, frequently monitor your vehicle during PTO operation, paying particular attention to the CLEAN EXHAUST FILTER SEE OWNER MANUAL NOW DIC warning message or any horn chirps if operating PTO remotely. If the DIC message [or horn chirp] is presented during PTO operation, see OWNER MANUAL Diesel Particulate Filter for information on how to clean or regenerate the DPF.

Diesel Particulate Filter [DPF] Cleaning during Stationary PTO Operation

If the DPF becomes sufficiently loaded with soot during a PTO session the system will issue a DIC warning message and **horn chirps** as notification to the operator. If the operator is outside the vehicle [remote operation] he must return to the cab and, if running in 'key out' mode, insert and rotate the key to the 'run' position to respond to the system messages. [Messages are not displayed unless the key is in the 'run' position.]

Notes:

- Manual DPF [cleaning] regeneration can be initiated during a PTO idle up session.
- It is strongly recommended that the exhaust filter be cleaned before continuous PTO usage if possible.
- If a manual regen is initiated during the PTO session the PTOM will retain control of the engine speed and the selected speed will not change as the regen event initiates.
- Low PTO engine speeds and light loading will cause regeneration to take longer. To initiate a manual DPF regeneration, see "Manual Regeneration of Diesel Particulate Filter" under Diesel Particulate Filter in the Duramax Diesel Supplement pamphlet in the glove box. See UI Bulletin xxx DPF Regen for more detail.

Warning:

General Motors Upfitter Integration

<http://www.gmupfitter.com>



UI Bulletin 120g

The exhaust system and exhaust gases get very hot during a manual regeneration. Things that burn could touch hot exhaust parts under the vehicle and may catch fire. You or others could be burned. Do not leave the vehicle unattended during a manual regeneration. If operating from outside the vehicle maintain a safe personal distance away from the hot exhaust or you could be burned.

6. Mobile PTO

Mobile PTO - *in-cab operation only*: Enable Conditions - [requires programming with GM Service tool]

1. Engine must be running.
2. Cruise Control must be OFF.
3. Engine rpm must be less than 1500 rpm [Maximum PTO Engage Speed]
4. Transmission Shift Lever must be in manual shift selection M1, M2 or M3.
5. The brake must be tapped at least once and then remain released.
6. Press and release the PTO In-cab switch. The PTO telltale will blink rapidly until the PTO load becomes engaged. The telltale will then be steady. The engine speed will remain at the current throttle setting or advance to PTO Standby Speed, whichever value is greater. If the engine rpm is above 1500 rpm the PTO relay will not engage until the engine rpm drops below 1500.
7. Once engaged if additional engine speed is desired two control methods are available – Cruise switches or accelerator pedal.
 - A. Cruise Res + switch can be used to tap up [or if continuously held to ramp up (see Table in Section 11 for factory preset parameters)] to the desired operating speed. The Cruise Set - switch can be used to tap down [or coast down if continuously held] to the desired engine speed. [Top limit is PTO Max Engine Speed – default 2100 rpm and programmable to 2900 rpm. Lower limit is PTO Standby Speed – default 900 rpm with program range from base idle to 1500 rpm.]
 - B. Accelerator pedal – can be used to achieve the desired speed. When the desired speed is accomplished the Cruise Set - switch would be used to capture and maintain that speed.

Normal tap up and tap down can then be used to fine tune the setting.

Notes:

1. In Mobile PTO mode the vehicle speed achieved is the result of the current engine speed requested and the transmission gear range selected. When vehicle is placed in M2 or M3, the vehicle will upshift according to engine RPM set point, and vehicle speed will increase. To prevent upshifts and maintain lower vehicle speeds, place vehicle in M1.

General Motors Upfitter Integration

<http://www.gmupfitter.com>



2. Mobile mode [engine speed capture] is disengaged similarly to cruise control disengagement. See PTO System Disengage Conditions - Mobile Mode for more details.

7. OSIM PTO (Operator Selectable In-Cab Mode) [New feature for 2017]

Requires programming with GM service tool to configure Stationary & Mobile '*Paring*.' Available '*pairs*' are *preset and mobile* or else *variable and mobile*. Used for vehicles that require 2 PTO modes. Remote operation is not available.

OSIM PTO - *Preset [Stationary] Operation: Enable Conditions*

OSIM Preset operation can be initiated as follows:

1. With the engine running shift the transmission into P (Park) and release the brake pedal.
2. Assure the cruise control is OFF and the hood is closed.
3. Set the parking brake.
4. Press and release the In-Cab PTO Switch - the PTO indicator LED will begin flashing.
5. Within 10 seconds press and release the cruise Set (-) switch. The PTO indicator LED will go ON steady, the PTO load relay will engage, and the engine rpm will advance to PTO Standby Speed.
6. Again, press and release the Cruise Set (-) switch to go to PTO Set 1 Speed.
7. Press and release the Cruise Resume (+) switch to go to PTO Set 2 Speed.

OSIM PTO - *Variable [Stationary] Operation: Enable Conditions*

OSIM Variable Stationary Operation can be initiated as follows:

1. With the engine running shift the transmission into P (Park) and release the brake pedal.
2. Assure the cruise control is OFF and the hood is closed.
3. Set the parking brake.
4. Press and release the In-Cab PTO Switch - the PTO indicator LED will begin flashing. Within 10 seconds press and release the cruise Set (-) switch. The PTO indicator LED will go ON steady, the PTO load relay will engage, and the engine rpm will advance to PTO Standby Speed.
5. The desired operating speed can now be accomplished by tapping up and down with the Cruise Resume (+) and Set (-) switches.

OSIM PTO - *Mobile Operation: Enable Conditions*

OSIM Mobile Operation can be initiated as follows:

General Motors Upfitter Integration

<http://www.gmupfitter.com>



UI Bulletin 120g

1. Engine must be running.
2. Cruise Control must be OFF.
3. Engine rpm must be less than 1500 rpm [Maximum PTO Engage Speed]
4. With the vehicle rolling slowly, shift the transmission to M1, M2 or M3.
5. The brake pedal must be tapped at least once and then remain released.
6. Press and release the PTO In-cab switch. The PTO telltale will blink rapidly.
7. Within 10 seconds press and release the cruise control resume (+) switch. The PTO indicator light will continue blinking rapidly until the load becomes engaged and then come ON steady. The engine rpm will advance to PTO Standby Speed if that is greater than the engagement speed. If the engine speed is above 1500 rpm when engagement is attempted the PTO load relay will not engage until the engine rpm moves below 1500.
8. Once engaged the engine speed will hold steady at the PTO Standby Speed setting. The desired engine speed can now be adjusted with the cruise control buttons or the accelerator pedal. The cruise set (-) and resume (+) buttons will operate similar to normal highway cruise operation to either tap up and down or ramp up and down. The desired engine rpm can also be captured with the cruise set switch and then fine-tuned by tap up and tap down operations.
9. After initial engagement, if the service brake must be applied, the engine rpms will drop, and the PTO will not attempt to hold engine speed until it is again initiated [latched up] with the cruise Resume (+) switch. Once the resume (+) switch is pressed, the engine speed will slowly move to the last 'captured' speed.

Notes:

1. In Mobile PTO mode the vehicle speed achieved is the result of the current engine speed requested and the transmission gear range selected. When vehicle is placed in M2 or M3, the vehicle will upshift according to engine RPM set point, and vehicle speed will increase. To prevent upshifts and maintain lower vehicle speeds, place vehicle in M1.
2. Mobile mode [engine speed capture] is disengaged similarly to cruise control disengagement. See PTO System Disengage Conditions - Mobile Mode for more details.

8. PTO System Disengage Conditions

Stationary Modes [preset or variable] - in-cab control

To disengage PTO, perform one of the following actions:

- Depress the brake pedal. The engine returns to base idle, but the PTO load relay remains engaged. The PTO Telltale will blink slowly indicating that a PTO Set Speed is still stored in memory. Upon releasing the brake, the factory default programming is for the engine speed to remain at curb idle. Pressing and releasing the Cruise Res

General Motors Upfitter Integration

<http://www.gmupfitter.com>



UI Bulletin 120g

- + Switch will restore engine rpm to the last PTO Set speed. The PTO system can also be programmed to return engine rpm to the PTO Standby Speed setting.
- Depress the Cruise Cancel switch. The engine returns to base idle, but the PTO load relay remains engaged. The PTO Telltale will blink slowly indicating that a PTO Set Speed is still stored in memory. Activating the Cruise Res + switch, will restore engine rpm to the last PTO Set speed.
- Press and release the PTO in-cab switch. The PTO Load Relay disengages and engine returns to base idle. The PTO Telltale will turn OFF indicating the PTO Load Relay is disengaged and the stored set speed has been cleared from memory.
- Release Park Brake.
- Move shift lever from PARK [P] position.

Stationary Modes [preset or variable] - remote control [with or without in-cab engage]

To disengage PTO, perform any of the following actions:

- Open the PTO Remote Engine Start/Shutdown switch. Load Relay disengages and engine will stop.
- Assert the PTO Emergency Stop Switch. Load Relay disengages and engine will stop.
- Press and release the In-cab PTO switch.

Stationary Modes will also disengage if:

- Vehicle movement is detected.
- Park Brake is released.
- Transmission is shifted out of PARK [P].
- Ignition Key is cycled from "Run/Crank" to "Off" position.
- PTO feedback signal is lost [load disengaged] if used. See full system schematic.
- Cruise becomes ENABLED (Cruise ON/OFF switch pressed)
- Timed auto-engine shutdown: The timed auto-engine shutdown feature provides the means to shut down the engine automatically after a predefined time. PTO must be operational for this function to be active.
- Engine shutdown based on critical engine or PTO system fault conditions: The engine will be shut down when PTO is operating if a critical engine condition is detected by the vehicle system (i.e., low oil, low oil pressure, hot engine, hot transmission, low fuel, Diesel Particulate Filter (DPF) regeneration). If PTO operation is continued when critical engine conditions are present, a horn chirp warning will occur. The engine will shutdown 2 minutes after the horn warning. The operator can restart the engine with the ignition key or with the PTO remote engine start controls.

General Motors Upfitter Integration

<http://www.gmupfitter.com>



UI Bulletin 120g

The above horn warning and engine shutdown will again occur if the critical engine condition is still present.

All Stationary PTO modes provide for engine shutdown due to critical engine conditions, including a timed engine shutdown feature. However, vehicles containing a special calibration will have provisions allowing for PTO to be disabled from the following Automatic Engine Shutdown conditions...

- Low Fuel
- Engine Coolant Hot
- Transmission Fluid Hot
- Low Engine Oil
- Low Engine Oil Pressure
- Diesel Particulate Filter Regeneration Warning

NOTICE: Continuing to operate the vehicle in one or more of the above conditions may result in damage to vehicle's engine, transmission and/or emissions control system. Damage resulting from operating within any of the above conditions is not covered under the vehicle's warranty.

Notes:

When PTO remote engine starting has been initialed with the ignition key in the "Run" position, the Shift Lever will remain locked if the brake pedal is pressed and shift from Park is attempted while the engine is running, and PTO is active (stand-by mode). At this point, a shift to Park will not be allowed until one of the following actions is taken by the vehicle operator:

- Press the PTO Remote Engine Start/Shutdown
- Press and release the in-cab PTO switch
- Press Cruise Cancel or toggle the Cruise Control switch to ON
- Release Park Brake

Mobile Mode

To Disengage PTO:

- Depress the brake pedal. The PTO system releases control of engine speed, but the PTO load relay remains engaged (if configured). Engine will return to base idle unless the accelerator pedal is depressed. The PTO load relay remains engaged. The PTO Telltale will blink slowly indicating that a PTO Set Speed is still stored in memory. Upon releasing the brake, the factory default programming is for the engine speed to remain at base idle awaiting a press and release of the Cruise Res + Switch which will restore engine rpm to the last PTO Set speed. The system can also be programmed to return engine rpm to the PTO Standby Speed setting. Speed is still stored in memory. Upon releasing the brake, the factory default programming is for the engine speed to remain at curb idle awaiting an input from the Cruise Res

General Motors Upfitter Integration

<http://www.gmupfitter.com>



UI Bulletin 120g

- + Switch to restore engine rpm to the last PTO Set speed. The system can also be programmed to return engine rpm to the PTO Standby Speed setting.
- Press and release the Cruise Cancel switch. The engine returns to base idle; but the PTO load relay remains engaged. The PTO Telltale will blink slowly indicating that a PTO Set Speed is still stored in memory. Pressing and releasing the Cruise Res + switch, will restore engine rpm to the last PTO Set speed.
- Press and release the PTO in-cab switch. PTO will be disengaged with the initial 'press' of the switch and engine speed will return to base idle. The PTO Telltale will go OFF indicating the PTO Load Relay is disengaged and the stored set speed has been cleared from memory.

Mobile Mode will also disengage if any of these actions or events take place:

- PTO feedback input is lost [load disengaged] if configured.
- Vehicle Speed exceeds Max Vehicle Speed. Factory default setting = 58 MPH
- Engine Speed exceeds Max Engine Speed for greater than 15 seconds. Factory default setting = 2100 rpm.
- The Cruise Control On/Off switch is toggled to ON.
- The Park Brake is applied.
- The Transmission Shift Lever is moved out of manual shift selection [M1, M2, and M3].

Notes:

1. Resume memory speed is cleared for the above actions.
2. Although the PTO system attempts to limit accelerator and PTO switch inputs to comply with maximum speed and /or rpm parameters, some vehicle operating conditions such as downhill acceleration can cause the vehicle speed or engine rpm to exceed these limits and in those cases the PTO system may disengage.

9. Prolonged or Extended PTO Operation

Warning:

While operating your vehicle in stationary PTO mode, the Diesel Particulate Filter (DPF) will continue to filter the exhaust and accumulate soot. The engine control system, depending on the speed and load being applied by the PTO, may not be able to generate enough energy or adequate heat needed to clean or regenerate the DPF. Continued operation under conditions that do not allow effective regeneration or cleaning will eventually plug the DPF and result in reduced power. The ENGINE POWER IS REDUCED Driver Information Center (DIC) message and Malfunction Indicator Lamp will be displayed, and dealer/retailer service will be required to return your vehicle to normal, full power operation. To prevent this from occurring, frequently

General Motors Upfitter Integration

<http://www.gmupfitter.com>



UI Bulletin 120g

monitor your vehicle during PTO operation, paying particular attention to the CLEAN EXHAUST FILTER SEE OWNER MANUAL NOW DIC warning message or any horn chirps if operating PTO remotely. If the DIC message [or horn chirp] is presented during PTO operation, see OWNER MANUAL Diesel Particulate Filter for information on how to clean or regenerate the DPF.

Diesel Particulate Filter [DPF] Cleaning during Stationary PTO Operation

If the DPF becomes sufficiently loaded with soot during a PTO session the system will issue a DIC warning message and **horn chirps** as notification to the operator. If the operator is outside the vehicle [remote operation] he must return to the cab and, if running in 'key out' mode, insert and rotate the key to the 'run' position to respond to the system messages. [Messages are not displayed unless the key is in the 'run' position.]

Notes:

- Manual DPF [cleaning] regeneration can be initiated during a PTO idle up session.
- It is strongly recommended that the exhaust filter be cleaned before continuous PTO usage if possible.
- If a manual regen is initiated during the PTO session the PTOM will retain control of the engine speed and the selected speed will not change as the regen event initiates.
- Low PTO engine speeds and light loading will cause regeneration to take longer.

To initiate a manual DPF regeneration, see "Manual Regeneration of Diesel Particulate Filter" under Diesel Particulate Filter in the Duramax Diesel Supplement pamphlet in the glove box. See UI Bulletin xxx DPF Regen for more detail.

Warning:

The exhaust system and exhaust gases get very hot during a manual regeneration. Things that burn could touch hot exhaust parts under the vehicle and may catch fire. You or others could be burned. Do not leave the vehicle unattended during a manual regeneration. If operating from outside the vehicle maintain a safe personal distance away from the hot exhaust or you could be burned.

Warning:

Engine exhaust contains Carbon Monoxide (CO) which cannot be seen or smelled. Exposure to CO can cause unconsciousness or even death. Never operate PTO in an enclosed area such as a garage or building that has no fresh air ventilation. See "Engine Exhaust" in the Vehicle Owner Manual.

**Warning:**

If the key is in the ignition during Remote PTO operation, the vehicle can be shifted out of Park by an operator. Even though PTO will be disengaged, depending on PTO Upfitter application, personal injury or property damage may result from vehicle movement. Always remove key from the ignition before operating Remote PTO.

10. PTO Operational Speed Control

[Variable] PTO operational speed control provides the following functions:

Cruise Set - Switch (In-cab) or Remote PTO Tap Down switch

- **SET:** [in cab operation] - press and hold the accelerator to obtain the desired engine speed, then press and release the Set - position on the Cruise Switch. The current engine speed will be maintained. This action can be repeated as desired to a higher rpm value. The PTO set speed cannot exceed 2900 rpm (Mobile PTO only).
- **TAP-DOWN:** Press and release the Set - switch position on the Cruise Switch to reduce the engine speed by increments of 100 rpm. The TAP-DOWN Engine Speed increments can be adjusted by GM Service Tool. The Service Tool can enable the option for adjustment of TAP-DOWN Engine Speed increments via Radio Customization menu.
- **COAST:** Press and hold the Set - switch position on the Cruise Switch to reduce the rpm at 150 RPM per second until the desired engine speed is reached or until the initial PTO standby speed is reached.

In-cab Cruise Res + Switch (or Remote PTO Tap Up switch)

- **RESUME:** After a PTO set speed has been achieved during PTO operation, a "RESUME SPEED" is retained after an application of the brake pedal. Engine speed will reduce to basic idle speed. The PTO Telltale will blink slowly indicating the previous PTO set speed has been retained in memory. Press and release the Res + switch position on the Cruise Switch to resume the previous PTO set speed.
- **TAP-UP:** Press and release the Res + position on the Cruise Switch to increase the engine speed by increments of 100 rpm (factory present value). The TAP-UP Engine Speed increments can be adjusted by the GM Service Tool. The Service Tool can enable the option for adjustment of TAP-UP Engine Speed increments via Radio Customization menu.
- **ACCEL:** Press and hold the Res + position on the Cruise Switch to increase the rpm by 150 rpm per second until the desired engine speed is reached or until the maximum allowable PTO set speed is reached. Alternatively, the engine speed acceleration can be adjusted via the Radio Customization menu.

General Motors Upfitter Integration

<http://www.gmupfitter.com>



11. Factory Preset Parameters

The following table lists the factory preset parameters. These may be altered by a GM Service tool to configure the various PTO features.

Item#	Parameter Name/ Function	Factory Setting	Minimum Value	Maximum or Alternate Value[s]
1	PTO Option Operation Mode	PTO Stationary Preset Vehicle Stationary	Disabled	STATIONARY - Preset - Variable MOBILE - Variable [only]
2	PTO In-Cab Control	Enabled	Disabled	Enabled
3	PTO Remote Control Status	Enabled	Disabled	Enabled
4	PTO Personalization Control Status (HMI Customization Display)	Disabled	Disabled	Enabled
5	PTO Personalization Standby Speed Menu (HMI Customization Display)	Disabled	Disabled	Enabled
6	PTO Personalization SET 1 Speed Menu (HMI Customization Display)	Disabled	Disabled	Enabled
7	PTO Personalization SET 2 Speed Menu (HMI Customization Display)	Disabled	Disabled	Enabled
8	PTO Personalization Engine Shutdown Time Menu (HMI Customization Display)	Disabled	Disabled	Enabled
9	PTO Personalization Tap Menu (Engine Speed) (HMI Customization Display)	Disabled	Disabled	Enabled
10	PTO OSIM (Operator Selectable InCab Mode) Control Status	Disabled (In-Cab PTO Mode)	Enabled (In-Cab PTO Mode)	1) PTO Remote Mode 2) OSIM
11	PTO Ramp Rate (Engine Speed Ramp)	148 RPM/s	4RPM/s	148 RPM/s
12	PTO Set 1 Speed	1200 RPM	1100 RPM	2900 RPM for Model Year 17 thru 19 3100 RPM for Model Year 15 thru 16



UI Bulletin 120g

Item#	Parameter Name/ Function	Factory Setting	Minimum Value	Maximum or Alternate Value[s]
13	PTO Set 2 Speed	1900 RPM	1700 RPM	2900 RPM for Model Year 17 thru 19 3100 RPM for Model Year 15 thru 16
14	Interlock or Redundant Emergency Stop Feedback	NO	NO	YES
15	PTO Enable Solenoid On in Standby Disabled	YES	NO	YES
16 *	Fuel Level for Engine Shutdown	15%	0%	25% *
17	PTO On to Set 1 Speed Enable	Disabled	Disabled	Enabled
18	PTO Remote Variable Speed Enable	Disabled	Disabled	Enabled
19	PTO Remote Engine Start Enable	Disabled	Disabled	Enabled
20	PTO Remote Set Switch Enable	Disabled	Disabled	Enabled
21	PTO Remote Set Switch Type	Momentary	Momentary	Latching
22	PTO Remote Engine Shutdown	Disabled	Disabled	Enabled
23	Remote Set Switch Low = (<33% V_IGN) Low Input Signal Definition of Remote Mode Switch [Low Voltage State]	Set 1	Standby Speed/ set 1/set 2	Standby Speed/ set 1/set 2
24	Remote Set Switch High = (>66% V_IGN) High Input Signal Definition of Remote Mode Switch [High Voltage State]	Set 2	Standby Speed/ set 1/set 2	Standby Speed/ set 1/set 2
25	Remote Set Switch Open = (33% - 66% V_IGN) Default Input Signal Definition of Remote Mode Switch [Open State]	Standby Speed	Standby Speed/ set 1/set 2	Standby Speed/ set 1/set 2
26	PTO Min Engage Speed	500 RPM	500 RPM	1000 RPM
27	PTO Max Engage Speed	1500 RPM	1000 RPM	1800 RPM
28	PTO Max Engine Speed	2100 RPM	1100 RPM	2900 RPM for Model Year 17 thru 19 3100 RPM for Model Year 15 thru 16

General Motors Upfitter Integration

<http://www.gmupfitter.com>



UI Bulletin 120g

Item#	Parameter Name/ Function	Factory Setting	Minimum Value	Maximum or Alternate Value[s]
29	PTO Standby Speed	900 RPM	700 RPM	2100 RPM
30	Engine Run Timer, while PTO is Active	420 min	10 min	3480 min
31	PTO Remote Horn Chirp Before Start	Enabled	Disabled	Enabled
32	PTO Tap Step Engine Speed Change per Tap (Up/Down)	100 RPM	4 RPM	500 RPM
33	Brake Release Action-Engine Speed after Brake Event	Idle Speed (PTO Icon Flashing)	Idle Speed (PTO Icon Flashing)	Standby Speed [PTO ICON Solid] Max Vehicle Speed may be limited to 64 Km/h [40 mph] if this is programmed
34	PTO Remote Variable Speed Switch-PTO Remote Throttle [Potentiometer]	Disabled	Disabled	Enabled
35	PTO ON During Braking PTO Relay ON in Standby [Keep PRO Engaged During Braking-Icon Flashing]	Enabled	Disabled	Enabled
36	Maximum Vehicle Speed-for PTO Operation	94 Km/h (58 mph)	30 Km/h (19 mph)	94 Km/h (58 mph)
37	PTO Throttle Override-Accelerator Pedal Disabled [Stationary mode only]	Enabled	Disabled	Enabled
38	PTO Throttle Override Time-Maximum Time Accelerator can be applied before PTO is Disabled	600 sec	60 sec	780 sec (13 min)
39	PTO Remote Minimum Variable Speed-PTO Remote Engine Speed Control Minimum Input Signal [Potentiometer Minimum]	2%	0%	50%
40	PTO Remote Maximum Variable Speed-PTO Remote Engine Speed Control Maximum Input Signal [Potentiometer Maximum]	95%	50%	100%
41	Engine Shutdown Enable	Enabled	Disabled	Enabled
42	Driver Door Status Usage	Enabled	Disabled	Enabled
43	Remote PTO InCab Control Enabled-Remote PTO InCab Initiate	Disabled	Disabled	Enabled
Red * = parameter not programmable for Emergency vehicle provisions for PTO				

General Motors Upfitter Integration

<http://www.gmupfitter.com>



UI Bulletin 120g

If the PTO factory preset parameters do not match the settings described above, then they may have already been altered in order to satisfy the requirements of the installed PTO system and body equipment.

The following PTO Settings are also offered via the vehicle customization screens, which can be enabled by your service technician. These include the following parameters:

- PTO Standby RPM
- PTO Set 1 Speed
- PTO Set 2 Speed
- Tap Step
- PTO Engine Run Timer

12. Driver Information Center (DIC) Warnings Messages

If the PTO telltale does not remain on (i.e. goes out after one second), this indicates that not all PTO enabling conditions have been satisfied. In the case, one or more of the following Driver Information Center (DIC) messages may appear on the instrument panel cluster if the PTO will not engage. The operator must take the action indicated, then again attempt to re-enable PTO.

- PTO: SHIFT TO PARK (P) (Stationary only)
- PTO: SET PARK BRAKE (Stationary only)
- PTO: PRESS & RELEASE BRAKE (Mobile only)
- PTO: RELEASE BRAKE TO ENGAGE PTO
- PTO: REDUCE VEHICLE SPEED
- PTO: REDUCE ENGINE SPEED
- PTO: DISENGAGE CRUISE CONTROL

In addition to these messages, the PTO telltale will indicate when all conditions required to engage PTO have not been met. When enabling PTO, the PTO telltale will turn on, then turn off after one second. Under normal operating conditions, the PTO telltale will remain on throughout the PTO operating cycle.

Additional in-vehicle PTO module information can be accessed by the service technician to aid in troubleshooting. Also see service manual for more information.

The GM service technician can access service tool information which will contain reasons why PTO may not engage and reasons why PTO may unexpectedly disengage due to a system conditions.

**13. Appendix: Safety Recommendations**

No.	Safety Recommendations
1	PTO Feature has several characteristics that can be changed by configuration. Check all configuration selections carefully to avoid inadvertently deactivating safety mechanisms or impacting performance.
2	Upfitter's choice of components may affect performance. Even when system safety is available the overall performance of the system may be adversely affected by use of an improperly selected component or not following the recommended mechanization. The PTO System's safety mechanisms are designed to interrupt PTO operation in the event of a detected fault in related components or wiring-
3	The PTO safety mechanisms designed and built into the vehicle have been created by GM to cover PTO System operation only, which can include automatic engine shutdown to prevent unintended vehicle movement and protect the engine, transmission and PTO from damage. The PTO System should not be used for life support operations or an emergency back-up power source. Safety and function of any and all equipment added by the Upfitter to the vehicle is the responsibility of the Upfitter. Upfitter is responsible for compliance to applicable occupational health and safety standards, industrial safety standards or regulatory requirements.
4	Stationary Remote mode is not intended to operate with the vehicle's hood open. PTO system operation is terminated if the hood is opened during stationary operation.
5	Stationary Remote Mode is not intended to be operated with the ignition key in place.
6	Reference Best Practices Manual available through the GM Upfitter website. Reference incomplete vehicle document (IVD) for any additional regulatory requirements.



MY2018 GM K2Hx Chassis Cab with Power Take Off (PTO) Control,
Specific Safety Functions
Safety Reference
Application

Component		Related Signal(s)		Applicable PTO System Configuration	Requirements for Achieving and Maintaining			
Description	Attribute	Pin	Signal		Specific Operator Action	Significance Effect on (to Vehicle Safety)	Vehicle Safety	Vehicle Performance
Remote Arm Switch	N.O. Momentary Contact	A	PTO Remote Engine Arm	Stationary, Remote Mode Only	Wakes up PTO System to await further action	1.) First of two steps required to start the engine from a remote location outside the vehicle	<p><i>When starting these switches operate in tandem constituting a two-step operation that must be initiated in sequence before an engine start will take place. Activation (press and release) of either switch independently, or outside of the prescribed time window, is insufficient to initiate a start.</i></p> <p><i>When stopping the Remote Engine Shutdown/Start Switch operates independently supporting a fast shutdown if it becomes necessary for the operator to do so.</i></p>	<p>Poor quality switches may not always activate switch contacts properly when pushed, resulting in a 'no start' when starting, or a 'no stop' when requesting a shutdown.</p>
PTO Remote Engine Shutdown/Start Switch	N.C. Momentary Contact	J	PTO Remote Engine Shutdown / Start		<p>If engine is running toggling this switch will disengage the PTO then shut down the engine</p> <p>If engine is not running PTO System initiates Engine Start followed by PTO Engage, but only if this switch is pressed and released within 5 seconds of activation of the Remote Arm Switch</p>	<p>Initiates immediate disengagement of PTO and shutdown of vehicle's engine</p> <p>2.) Second of two steps required to start the engine from a remote location outside the vehicle</p>		



UI Bulletin 120g

Pendant Enable Switch	NC. Latching Contacts DPST Switch	J & K	Remote Pendant Connect/Disconnect	Switch must be OFF when Pendant is removed. Only close after Pendant is reconnected	Erratic signals to the control module are avoided during the reconnection of the Pendant	Switching off the pendant will ensure that there is no faulty contact that will pull the remote start line high when the pendant is reattached.	This switch must be selected carefully to ensure proper performance and sufficient durability in the intended Upfitter application.	Poor quality switches may activate inadvertently under vibration resulting in unwanted shutdowns or, if stuck in the 'out' position, prevent shutdown.
Emergency Stop Button	N.C. Contact 'A'	A	Engine Kill	Notifies PTO System that PTO disengagement and engine shutdown are required		This device is required to support an emergency shutdown initiated from outside the vehicle and in the vicinity of the remote location, prominently visible and easily accessible, should it become necessary. Other shutdown mechanisms (e.g. in-cab ones) may be located a significant distance from the remote panel, impacting the operator's ability to initiate an emergency shutdown, if needed, quickly if this button is not added to the Upfitter's equipment design.	It is recommended that an Industry Standard Emergency Stop button be used, large in size and red in color, with two fixed positions. When pushed to the fixed 'in' or 'stop' position an Emergency Stop has been commanded; when returned to the fixed 'out' position normal operation will return, enabling a subsequent start request to be accepted.	Poor quality switches may activate inadvertently under vibration resulting in an inadvertent shutdown; or could stick in the 'out' position preventing shutdown.
	N.C. Contact 'B'	R	IGN_1 (Run / Crank)	PTO System opens PTO Relay to disengage PTO (redundant disengagement)	Initiates immediate disengagement of PTO and shutdown of vehicle's engine			
Localized Power for Upfitter to use in powering	Power Supply (Switched Battery via Ignition Key)			Fuse will open to protect internal and external circuitry in the	Current Limited, Protected by 10A Fuse	A blown fuse must be always be replaced by one of the same capacity. Larger capacity	Smaller capacity fuses substituted in place of larger capacity fuses will blow too frequently.	Fuses blowing too often results in operator /

General Motors Upfitter Integration

<http://www.gmupfitter.com>

General Motors Upfitter Integration



UI Bulletin 120g

Power Supply (switched Battery via Pendant Enable switch)		K	V_BATT	event of excessive current draw		Current Limited, Protected by 10A Fuse	fuses must never be substituted for smaller capacity fuses or circuit overloading will occur potentially resulting in overheating , damage to components or possibly fire.		customer annoyance.
Remote Set Switch	N.O. Momentary Center-Off Pushbutton (Alternative 1)	N	PTO Remote Mode PPS/Set	Sets/Controls Engine Speed via Up/Down Stepping (multiple speeds)	PTO System accepts and implements the speed change request		This device, switch or potentiometer depending on the alternative chosen, sets / controls engine speed but the PTO System limits the maximum rate of change of engine speed during the transition to the newly selected speed.	This device must be selected carefully to ensure proper performance and sufficient durability in the intended Upfitter application.	Failure of this device may result in the inability to set or change speed, or in speed changing inadvertently resulting in operator / customer annoyance.
	SPDT Two-Position (Alternative 2)			Selects/Control s Engine Speed via Two-Position Speed Select (High/Low)					
Remote Variable Speed Control	Potentiometer (Alternative 3)			Sets/Controls Engine Speed via Rotation between 0 and 100%					
PTO Engage Relay	Coil Terminal 1	D	PTO Engage Relay High	Balanced drive used to eliminate the possibility that a short circuit in wiring could unintentionally activate the relay	Relay failure will be detected by the PTO System		Must not be tied to ground or power or a diagnostics fault code will be set, and PTO functionality will be locked out until the fault is cleared ¹ .	The relay must be selected carefully to ensure proper performance and sufficient durability in the intended Upfitter application. Poor quality relays fail more often.	If this device fails too often this may result in operator annoyance from safety responses occurring, and interrupting operation, too frequently.
	Coil Terminal 2	H	PTO Engage Relay Low						
	N.O. Contact	G	PTO Load Feedback	Provides confirmation that the PTO Relay has closed when requested, and that it opens when commanded to do so					
All Modes and Configurations									

General Motors Upfitter Integration

<http://www.gmupfitter.com>



UI Bulletin 120g

General Ground	Power Return	D	Vehicle Ground	Signal Reference	Reference for all signals monitored for faults that would lead to a safety issue	Measurements made at various points within the system are taken with respect to a nearby ground in the harness or to the frame of the upfitted equipment. If this "local" ground is not at the same voltage level as the rest of the vehicle ground (which can happen if there is high resistance in the ground circuit) these measurements will not be consistent. Safety Mechanisms require that they must be.	Good grounding practices must be employed. Voltage drop between any two points in the ground system must not exceed 1.0 VDC.	Safety mechanisms may activate unexpectedly, potentially leading to operator / customer annoyance.
Pendant Switch	Power Supply	J,	Pendant Supply					