



2027

BLAZER EV PPV



Shown with equipment from independent suppliers not covered by the GM New Vehicle Limited Warranty GM is not responsible for the safety or quality of independent supplier alterations.



Fleet



About This Publication

This catalog is not updated during the model year and should not be used for ordering purposes. It is intended as a source of basic information. All illustrations and specifications in this literature are based on the latest product information available at the time of publication. General Motors reserves the right to make changes at any time without notice. For further details, consult your local dealer.

Care must be taken during customer installation of equipment and wiring to ensure that all holes drilled in the body are corrosion protected, properly sealed and that vehicle wiring harnesses, piping or other components have not been displaced or damaged. Aftermarket equipment installers must be mindful of applicable Federal Motor Vehicle Safety Standards. This information can be obtained directly from the National Highway Traffic Safety Administration. Adding non-dealer accessories or making modifications to the vehicle can affect vehicle performance, aerodynamics, and overall top speed. Please return all police vehicles to factory condition and settings upon decommissioning to prevent civilians from using these new 2027 calibrations, lighting and other features intended only for police and emergency customers. Wiring connection or splice changes are to be removed before the vehicle is returned to civilian use.

These vehicles are equipped with an airbag system. The airbag system in your police vehicle includes frontal driver and front outboard passenger airbags, front seat back side impact airbags and Head-curtain airbags for all rows in outboard seating positions. Customer installed equipment such as security barriers behind the front seats should not be mounted so that the barrier ends are within the side airbag deployment zones. The sensors and other components for the airbag system must not be relocated to accommodate the installation of customer furnished equipment; please refer to the service manual for sensor and other component locations. For information concerning instrument panel top pad mounted equipment and airbag system deployment zones, see the airbag information section in this catalog and the vehicle owners manual.

A note about vehicle alterations by independent suppliers: This catalog shows pictures of vehicles that have been altered or upfitted with equipment or components supplied to Chevrolet or its dealers by independent suppliers. GM is not responsible for the safety or quality of design features, materials or workmanship of any alterations by third parties.

INDEX

2027 BLAZER EV SPECIALTY FLEET VEHICLES

POLICE PURSUIT (9C1)

DETECTIVE (9C3)

SPECIAL SERVICE (5W4) STREET APPEARANCE PACKAGE

• UPDATES FOR 2027	5
• STANDARD FEATURES	6-9
• OPTIONAL FEATURES	10-11
• EMISSIONS, SHIP THRU & TIRES	12-14
• SPECIFICATIONS	16
• COLORS, EXTERIOR AND INTERIOR	17
• APPROACH AND DEPARTURE ANGLE	18
• SPEEDOMETER/CLUSTER DISPLAY	20
• VEHICLE PERSONALIZATION MENU	21
• STANDARD FEATURE HIGHLIGHTS	22-28
• OPTIONAL FEATURE HIGHLIGHTS	30-32
• WIRING DIAGRAMS	33-49
• NO DRILL / NO CUT ZONES	50
• AIRBAG DIMENSIONS & FAQ	51-54
• OnStar® OPTIONS	55
• MAINTENANCE AND LIMITED WARRANTY	56
• UPFITTER INTEGRATION LINKS	57



BLAZER EV 9C1 INTERIOR

Shown with equipment from independent suppliers not covered by the GM New Vehicle Limited Warranty. GM is not responsible for the safety or quality of independent supplier alterations.



BLAZER EV 9C3 and 5W4 INTERIOR

UPDATES FOR 2027

NEW STANDARD FEATURES

- Power Charge Port Door (NDC)
- Charge station communication equipment (UED)
- HD Surround Vision and Recorder (UV2)
- Adaptive Cruise Control (KSG)
- Blind Zone Steering Assist (UKI)
- Enhanced Automatic Emergency Braking (UGN)
- Forward Collision Alert (UEU)
- Following Distance Indicator (UE4)
- Front Pedestrian and Bicyclist Braking (UKT)
- IntelliBeam (TQ5)
- Intersection Automatic Emergency Braking (CTB)
- Lane Keep Assist with Lane Departure Warning (UKM)
- Rear Cross Traffic Braking (UFB)
- Rear Pedestrian Alert (UKK)
- Reverse Automatic Braking (UVZ)
- Side Bicyclist Alert (UOW)
- Traffic Sign Recognition (UVX)
- Carpeted Floor Mats for Front (BKG) & Rear (BKL) 9C3 & 5W4 only.
Deleted when optional floor liners are ordered.

NEW OPTIONAL FEATURES

- Automatic Emergency Braking (UHY)
- Traditional Cruise Control for aftermarket push bumpers etc. (KSH)
- White Sands Exterior Solid Paint (G42)
- Wheels - 22 " Gloss Black aluminum 5W4 only (PJD)
- Level 2 Fast Charging Adapter Package (PEB)
- Charging Essentials Package (PEC)
- Premium Charging Package (PED)
- GM J1772 AC Adapter (RYK)
- GM CCS 1DC Adapter (RYW)
- GM PowerShift AC Charging Adapter (RYN)

DELETED FEATURES

- Floor Mats (VAV)
- GM NACS Level 2 Adapter (RYH)
- NACS DC Adapter (RYU)

GM restricts the sale of police vehicles, and they are not to be sold to retail customers.

The dual motor all-wheel drive Blazer EV Police Pursuit Package has been designed for police work up to, and including, high-Speed emergency vehicle operations. GM restricts the sale of police vehicles, and they are not to be sold to retail customers. Developed for the needs of Law Enforcement, the purpose-built electrical architecture is explicitly prepared for the demands of emergency equipment. A standard 400-volt to 12-volt DC power module is dedicated to emergency equipment demands and is engineered for 100-amps of continuous load. This architecture provides two 20-amp relays in front row with a 30-circuit harness and 50-amp battery feed. One 40-amp, and one 30-amp relay are located in left cargo corner with a 56-circuit harness that shares 25-redundant front signals. 100-amps of battery service and a ground are also standard. Wiring circuits are also included in the front doors to accommodate aftermarket exterior side-view mirror emergency lighting in addition to rear quarter glass wiring provisions. All circuits include a factory connector. A universal vehicle module is provided for CAN readability of selected signals. Model 1MF26 is required when ordering 9C1 or 9C3 Police Package. Content, options and specifications shown are for the police version only which differ from retail civilian models. Speed/Torque Limiter is not available for PPV.

The 9C1 Marked Police Pursuit Package includes;

(DLE) Front console delete, (BG9) black rubberized vinyl floor covering and (EPT) black cloth front and vinyl rear seating.

The 9C3 Detective Police Package includes;

(D06) Retail floor console with armrest, (B30) color-keyed carpeting in occupant area and (EKV) black cloth front and rear seating with cup-holders.

The 9C1 and 9C3 Police Packages includes;

265/50R20 All-season Firestone Firehawk blackwall Pursuit tires mounted on 20-inch steel wheels, 6-piston Brembo front calipers on 15.3-inch rotors for increased braking durability and performance during the rigors of a high-speed pursuit.

The 5W4 Special Service Package Option Includes;

(PJD) 22" machined-face aluminum wheels with carbon flash painted pockets, (QHN) 275/40R22 all-season self-sealing blackwall tires, (JBO) non-asbestos organic brake lining and (JFC) FNC brake rotor. This Brake and Tire package is not designed for Pursuits. Requires 9C3 Package. Rear seat includes fold down armrest with dual cup holder. Not available on 9C1. Does not include floor mats.

STANDARD INTERIOR FEATURES

AIRBAGS¹	Frontal, knee and seat-mounted side-impact for driver and front passenger, and roof-rail mounted head-curtain for outboard seating positions. Includes Passenger Sensing System for front passenger.
AIR CONDITIONING	Dual-zone automatic digital climate control. Rear passenger duct located on floor tunnel terminates at back of center console.
AIR FILTER	Pollutant, odor and fine dust.
ARMREST	Front and rear center console armrest with cup holders. Not available on 9C1.
ASSIST HANDLES	Front passenger and rear outboard.
AUDIO SYSTEM²	17.7" diagonal advanced color LCD display with Google built-in compatibility (select service plan required, terms and limitations apply), including navigation capability, connected apps, personalized profiles for each driver's settings, Natural Voice Recognition and Phone Integration.
BLUETOOTH®³	Personal cell phone connectivity to vehicle infotainment system.
BUCKLE TO DRIVE	Prevents vehicle from being shifted out of Park until driver seat belt is fastened; times out after 20 seconds and encourages seat belt use, can be turned on and off in Settings or Teen Driver menu. This feature is defaulted off for 9C1, 9C3 and 5W4 but can be turned on in the Infotainment menu.
CARGO TIE-DOWNS	2 cargo tie-downs in cargo area.
COMPASS	Shown in display.
CONSOLE, FLOOR	Console with armrest for 9C3 and 5W4 package ref. RPO (D06). Deleted for 9C1 package (reference RPO code DLE).
DEFOGGER	Rear-window electric.
DOOR LOCKS	Power locks for front and rear doors. Rear child security locks.
DRIVER INFORMATION CENTER	11 inch diagonal display.
FLOOR COVERING	Black rubberized vinyl floor covering for 9C1 (reference RPO code BG9). Does not include floor mats. Color-keyed carpeting in occupant area with black cloth front and rear seating for 9C3 and 5W4 (reference RPO code B30), Includes front and rear carpet but deleted when optional LPO (RIA) Floor Liners are ordered.
REMOTE KEYS	Two REMOTE KEYS and mechanical keys for ignition and doors. Four additional fobs are available. While an unlimited number of learned REMOTE KEYS can operate Keyless start and Keyless open, for a particular vehicle, only the last 8 REMOTE KEYS learned to a vehicle will allow the REMOTE KEYS buttons to work. See Available Options page for ordering codes. See Optional Equipment page for programming procedure.
HEADREST	Front seats and Rear Center seat.
KEYLESS OPEN	Includes extended range REMOTE KEYLESS Entry. If the REMOTE KEYS battery is depleted or due to wireless interference, vehicle may be unlocked using the mechanical key in the drivers door lock cylinder.
KEYLESS START	Includes extended range REMOTE KEYLESS Entry.
LATCH SYSTEM	(Lower Anchors and Tethers for Children), for child child restraint seats.
GLASS	Acoustic, laminated front windshield. Side rear tempered, solar glazing (Deep tint available as Option, see (ARU))
GLOVEBOX	Passenger side.
LIGHTING	Front courtesy and dual reading lights. Rear roof, courtesy and dual reading lights.
MICROPHONE, WIRING	Provision located above headliner over driver position for customer supplied microphone and department radio.
OnStar® SERVICES CAPABLE	Ref. RPO (UE1) See onstar.com for details and limitations. Services vary by model. Service plan required.
OnStar® BASICS	Core OnStar services including; remote commands, built-in voice assistance, real-time traffic and navigation, and Automatic Crash Response for eligible vehicles with compatible software. Requires (UE1) OnStar. OnStar Basics is standard for 8 years; OnStar plan, working electrical system, cell reception and GPS signal required. OnStar links to emergency services. Service coverage varies with conditions and location. Service availability, features and functionality vary by device and software version. See onstar.com for details and limitations. Not available with a ship-to of Guam, Puerto Rico or the Virgin Islands.
HD SURROUND VISION⁴	Provides selectable digital camera views of the area around your vehicle to help you park and avoid vehicles and objects. You can also display a guideline to show where your vehicle is heading. Includes instant ON hard button, left of steering wheel.

1. Always use seat belts and child restraints. Children are safer when properly secured in a rear seat in the appropriate child restraint. See the Owner's Manual for more information.

2. Functionality varies by model. Full functionality requires compatible Bluetooth and smartphone, and USB connectivity for some devices. Select service plan required, terms and limitations apply. Go to myChevrolet.com/learn/About/bluetooth to find out which phones are compatible with the vehicle.

3. Go to myChevrolet.com/learn/About/bluetooth to find out which phones are compatible with the vehicle.

STANDARD INTERIOR FEATURES (CONTINUED)

WI-FI HOTSPOT CAPABLE	(VV4) Wi-Fi and (UG5) 5G vehicle connectivity. Included and only available with (UE1) OnStar. Terms and limitations apply. See onstar.com or dealer for details.
5G VEHICLE CONNECTIVITY	Requires (UE1) OnStar. Terms and limitations apply. See onstar.com or dealer for details. Service varies with conditions and location. Requires active service plan and paid AT&T data plan. See OnStar.com/BusinessSolutions for details and limitations. subject to change. Vehicle must be on or in the accessory position for Wi-Fi to function.
POWER OUTLET	12-volt, Located in the center console compartment for 9C3 and 5W4 only. Not available on 9C1 package. Power outlets require the following GM dealer part numbers; 22936013, 13549534, 13561801 and installation.
REAR SEAT REMINDER²	Activates when the a rear door is opened and closed just before or during vehicle use. Check the rear seat before exiting your vehicle. Can be turned off in in your vehicle's Settings menu.
SEAT BELTS	3-point, all positions, includes front and rear seat belt pretensioners.
SEAT BELT INDICATORS	Driver, front passenger and rear passengers.
SEATS, FRONT	Police specific black cloth bucket seats, driver 8-way power, passenger 6-way power, driver and passenger 2-way power lumbar.
SEATS, REAR	60/40-split, fold-flat. 9C1 in vinyl, 9C3 and 5W4 in cloth with center armrest & cup holders. Rear Seat Reminder.
SIRIUSXM WITH 360L	Trial subscription. Requires (UE1) OnStar. The SiriusXM trial package is not provided on vehicles that are ordered for Fleet Daily Rental ("FDR") use. Trial subscription subject to the SiriusXM Customer Agreement and privacy policy. Visit www.siriusxm.com which includes full terms and how to cancel. All fees, content, features, and availability are subject to change.
STEERING COLUMN	Tilt and telescopic.
STEERING WHEEL	Urethane. Audio, Driver Information Center and phone interface controls
TEMPERATURE DISPLAY	Outside temperature. Cabin humidity and windshield temperature sensor.
THEFT DETERRENT SYSTEM	Unauthorized entry alert and immobilizer.
TPMS	Tire Pressure Monitoring System with auto learn and Tire Fill Alert.
UNIVERSAL VEHICLE MODULE	Provides CAN Readability of selected messages utilizing SAE J1939 formatting. This gateway module offers 10-switchable inputs and outputs, and includes a graphical user interface available to customize specific needs with more than 90 operating parameters available to read.
USB CHARGING PORTS	For 9C3; 2 type-C located forward of cup-holders, 2 Type-C located within the center console armrest bin and 2 charge only type-C located on back of center console. For 9C1; USB-C port, harness and accessory power outlet can be added to aftermarket center consoles by purchasing GM Part Numbers 13561801, 22936013 and 13549534.
VENT	Rear Console, air. 9C3 only.
VISORS	Driver and front passenger illuminated sliding vanity mirrors, covered.
WINDOWS, POWER	Power driver and passenger with Express-Up/Down. Power rear with Express-Down.

STANDARD EXTERIOR FEATURES

ANTENNA	Roof-mounted shark fin (black).
CALIBRATION TAILLAMP	5L0 Calibration for tail-lamp flasher Red/Red. For detailed technical information on activation of this feature, refer to the vehicle technical guide under the Body Builder Manuals section on www.gmupfitter.com.
CALIBRATION TAILLAMP	5J9 Calibration for tail-lamp flasher Red/White. For detailed technical information on activation of this feature, refer to the vehicle technical guide under the Body Builder Manuals section on www.gmupfitter.com.
CHARGE PORT DOOR	Power open/close
DRL	Day Time Running Lights. See option code 9G8 for permanent delete.
DOOR HANDLES	Body color.
FRONT GRILLE	Gloss black.
FLASHER SYSTEM	Headlamp and tail-lamp, DRL compatible with individual control wires.
FOG LAMPS	Not available.
GLASS	Acoustic, laminated front windshield. Solar Absorbing rear side window and rear quarter panel window. Tinted rear lift-gate window.
HEADLAMPS	Daytime Running Lamps. LED with automatic on and off.
LICENSE PLATE	Front mounting package (included on orders with ship-to states that require front license plate).
ROOF RAILS	Not available. Roof rails deleted.
MIRRORS, OUTSIDE	Outside heated, power-adjustable, power-folding, driver-side auto-dimming with turn signal indicators. High gloss black Mirror Cap.
MOLDING	Door upper. Low gloss black.
REAR CAMERA WASHER	Included with Rear Camera Mirror.
REAR LIFTGATE	Manual.
RECOVERY HOOK³	One Threaded eye-bolt shipped loose for use on front or rear of vehicle.
TIRES	Firestone Firehawk Pursuit 265/50R20 all-season, V-rated, black-wall. Not available on 5W4.
TIRE, SPARE	Standard Inflator Kit (KIT). Spare Tire and Jack Assembly not available.

1. Does not detect people or items. Always check rear seat before exiting.

2. To avoid the risk of injury, never use Recovery Hooks to tow a vehicle. For more information, see the Recovery Hooks section of your Owner's Manual.

STANDARD EXTERIOR FEATURES (CONTINUED)

SURROUND VISION RECORDER	Surround Vision Recorder lets you record, view and save videos that your vehicle captures using the Surround Vision cameras when your vehicle is on. When enabled through the Infotainment screen, this feature will record footage from the Surround Vision cameras and save it to the USB drive. The system is designed to record 2-hour loops at a time. This feature requires a customer-provided 64GB USB 3.0 drive (minimum) with 32 GB of space to operate. Check your vehicle Owner's Manual for the location of this feature's USB port and any requirements for the USB drive. When in PARK, you can scroll through and watch captured footage. The system will automatically save each trip you take as a separate video. You can also export footage from each camera if you want to see videos from a specific view.
WHEELS	20" (50.8 cm) steel with bolted-on aluminum black center cap with black finish. Not available on 5W4.
WINDSHIELD	Solar absorbing shaded upper with acoustic laminated glass.
WIPERS, WINDSHIELD	Front intermittent with Rainsense.

STANDARD ELECTRICAL FEATURES

AC CHARGING	19 kW capable.
BATTERY, DRIVE	102 kWh Battery Rated Energy, 190 kW DC fast charging capable.
BATTERY, SERVICE	12V/60AH, 680 ENCCA.
CHARGING STATION	New.
COMMUNICATION EQUIPMENT	
DUAL LEVEL CHARGE CORD	Dual-mode, portable, 120-volt (1.4 kW) and 240-volt (7.7 kW) capability, swappable NEMA 5-15 and NEMA 14-50 plugs with SAE J1772 vehicle connection.
ELECTRONIC PRECISION SHIFT	The electronic precision shift includes an electric parking brake. In the event of a loss of 12-volt battery power, the electric parking brake cannot be released, and the vehicle cannot be shifted to N (Neutral). Tire skates or dollies must be used under the non-rolling tires to prevent damage while loading/unloading the vehicle. Dragging the vehicle will cause damage not covered by the vehicle warranty.
GOOGLE AUTOMOTIVE SERVICES	Included and only available with (UE1) OnStar.
HANDS-FREE START	Push the brake pedal after closing the door to start vehicle. The REMOTE KEYS authorizes the hands-free start system.
RADIO SUPPRESSION	Designed to prevent unwanted emissions and to minimize susceptibility and maximize immunity to external emissions (Electromagnetic (EMI) or Radio Frequency (RFI) Interference). Most emergency vehicle communications equipment operating at frequencies in the VHF Band (30-300 MHz) and up to frequencies in the UHF Band (300 MHz-3GHz) will function as intended without enhanced noise suppression.
REGEN ON DEMAND™ 1	Helps convert the vehicle's kinetic energy into energy stored in the battery for later use to help get the most range.
REMOTE PANIC ALARM	Keyless remote panic button activates horn and flashing exterior lights. Can be disabled with optional (5J1) calibration.
REMOTE START	Key Fob activated. Smartphone app capable only with (UE1) OnStar.
SURVEILLANCE MODE	Calibration to shut-down non-federally mandated exterior and interior lighting (5J3). Exterior lighting will shut-off only if in auto mode and not equipped with optional LIGHTING DELETE (9G8). Cluster and PRND indicator dimmed to the minimum setting. Brake, reverse and turn signal lighting will override calibration and function if operated. For detailed technical information on activation of this feature, refer to the vehicle technical guide under the Body Builder Manuals section on www.gmupfitter.com
UPFITTER WIRING PROVISIONS	See WIRING Section for Circuit Diagrams and connector information.
USB POWER, FRONT	For 9C3, 2 type-C USB ports located forward of the cup holders, USB 2 type-C USB located on back of center console, charge only and USB port type C located within center console armrest bin. For 9C1; USB-C port, harness and accessory power outlet can be added to aftermarket center consoles by purchasing GM Part Numbers 13561801, 22936013 and 13549534.

STANDARD MECHANICAL FEATURES

BRAKES	Front Brembo, 4-wheel antilock, performance disc brakes. Non=FNC. FNC Rotor (JCF), Non-asbestos, organic lining (JBO) included and only available with (5W4) Special Service Package.
COOLING	Heavy-duty cooling.
PROPULSION	Electric performance dual-motor all-wheel drive (AWD).
SKID PLATES	Steel front and rear skid plates.
STABILITRAK	Stability Control System with Proactive Roll Avoidance and traction control, includes electronic trailer sway control and hill start assist.
STEERING	Power, non-variable ratio, eclectic.
SUSPENSION	Performance.
TRANSMISSION	Dual Motor All Wheel Drive System.
VEHICLE-TO-HOME (V2H) 2	Can provide power to your properly equipped home in a blackout.

1. Feature may be limited when the battery temperatures are extremely cold or hot or when battery is near full charge. See Owner's Manual for details

2. The GM Energy PowerShift Charger and GM V2H Enablement Kit requires an adequately charged and properly equipped GM EV having bidirectional charging capabilities, a properly equipped home, and proper grid interconnection. Weather conditions, life of the battery, vehicle variation and usage, and other external factors may impact the duration of power supply. Power supply may be interrupted. It is not recommended that the following devices be powered with the GM Energy PowerShift Charger and V2H Enablement Kit; Medical Devices.

STANDARD SAFETY AND DRIVER ASSISTANCE FEATURES¹

ADAPTIVE CRUISE CONTROL	Allows you to set a cruise control speed and automatically follow a detected vehicle ahead at a driver-selected following gap. If no vehicle is detected in your path, the feature works like regular cruise control. You can always override the feature and take control.
BLIND ZONE STEERING ASSIST	Alerts you and provide a brief, firm turn of the steering wheel when a potential crash is detected with a moving vehicle in the lane you're entering.
ENHANCED AUTOMATIC EMERGENCY BRAKING	At speeds above 2 mph, Enhanced Automatic Emergency Braking can help you avoid or reduce the severity of a collision with a detected vehicle you're following. Radar and camera technology are used to automatically provide hard emergency braking or enhance the driver's hard braking..
FORWARD COLLISION ALERT	Alerts Can warn you if it detects a potential collision with a detected vehicle you're following so you can take action. It can also provide a tailgating alert if you're following a vehicle much too closely.
FOLLOWING DISTANCE INDICATOR	Displays the following time in seconds between your vehicle and a detected vehicle you're following to help you maintain a safe following distance.
FRONT PEDESTRIAN AND BICYCLIST BRAKING	At speeds between 5 and 50 mph, Front Pedestrian and Bicyclist Braking can help you avoid or reduce the severity of a collision with a pedestrian or bicyclist it detects directly in front of you. It provides alerts and can automatically provide hard emergency braking or enhance the driver's hard braking. It has limited nighttime and low visibility performance.
HD REAR VISION CAMERA	HD Rear Vision Camera shows you a high-resolution digital image of the area directly behind your vehicle when in Reverse to help you park and avoid vehicles and objects. You can also display an overlay of where your vehicle is heading.
INTELLI-BEAM	At speeds above 25 mph, IntelliBeam can automatically turn the vehicle's high beams on and off according to surrounding traffic conditions.
INTERSECTION AUTOMATIC EMERGENCY BRAKING	Intersection Automatic Emergency Braking can help you avoid or reduce the severity of and intersection collision with a detected cross-traffic vehicle. It provides alerts and can even automatically provide hard emergency braking or enhance the driver's hard braking.
LANE KEEP ASSIST WITH LANE DEPARTURE WARNING	Uses a brief steering wheel turn to prevent a potential lane departure when it detects you are unintentionally drifting out of your lane lines. If needed, you may receive additional Lane Departure Warning Alerts. System alerts do not occur if you're using your turn signal, or it detects you may be intentionally leaving your lane.
REAR CAMERA MIRROR	Inside rear-view auto-dimming. Includes (CWA) Rear Camera Mirror Washer. Rear Camera Mirror allows user to choose between a traditional rear view mirror or a camera view unobstructed by the vehicle's pillars, trunk, roof, head restraints, rear-seat occupants or other interior aftermarket police equipment.
REAR CROSS TRAFFIC BRAKING	When you're in REVERSE, Rear Cross Traffic Braking alerts you and automatically provides hard emergency braking to help prevent a collision with detected vehicles crossing behind you.
REAR PARK ASSIST	Provides alerts of nearby detected vehicle and objects behind your vehicle to help you park and avoid collisions.
REAR PEDESTRIAN ALERT	When in REVERSE, provides alerts of nearby detected vehicle and objects behind your vehicle to help you park and avoid collisions.
REVERSE AUTOMATIC BRAKING	Reverse Automatic Braking alerts you and/or automatically provides hard emergency braking to help avoid collisions with detected vehicles crossing behind you when you're in REVERSE.
SAFETY ALERT SEAT	Safety Alert Seat uses left-, right- or both-side driver seat vibration pulses to help you detect and identify the direction of potential crashes. You can also switch to beeping crash avoidance alerts.
SIDE BICYCLIST ALERT	Side Bicyclist Alerts you to a detected bicyclist that is approaching a side blind zone. Also, during a brief time after parking, the feature can alert you when a detected bicyclist is approaching so you don't open your door.
TRAFFIC SIGN RECOGNITION	Traffic Sign Recognition can display detected speed limit signs in your instrument cluster. For full functionality, Traffic Sign Recognition requires an active OnStar plan ² .

¹. Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Visibility, weather, and road conditions may affect feature performance. Read the vehicle's owner's manual for more important feature limitations and information.

². Connected vehicle services vary by vehicle model and require active service plan, working electrical system, cell reception and GPS signal. OnStar links to emergency services. See onstar.com for details and limitations.

OPTIONAL INTERIOR FEATURES

KSH	CRUISE CONTROL - Electronic with set and resume speed, includes (UHY) Automatic Emergency Braking. Customer should order on vehicles designed for installation of aftermarket push bumpers and or front-mounted bicycle racks. Replaces (KSG) Adaptive Cruise Control and (UGN) Enhanced Automatic Emergency Braking.
R9L	REMOVES OnStar BASICS - Included and only available on vehicles being shipped to Puerto Rico, the Virgin Islands, or Guam. Will delete OnStar Services and OnStar standard equipment (OnStar Basics /Connected Access / EV Access /R9M Services i.e. OnStar One and OnStar One Super Cruise as equipped) for vehicles shipping to these territories.
6E2	REMOTE KEYS - Fleet Calibration, provides a single key and calibration with a specific code that is common to the driver door lock of the entire Blazer EV fleet with the same code. Key code is an alternate to SEO (6E8) Fleet Calibration. Includes (AU7) common fleet key. Requires (AMF) Remote Keyless Entry Package. Not available with SEO (6E8) complete vehicle fleet common key.
6E8	REMOTE KEYS - Fleet Calibration, provides a single key and calibration with a specific code that is common to the driver door lock of the entire Blazer EV fleet with the same code. Key code is an alternate to SEO (6E2) Fleet Calibration. Includes (AU7) common fleet key. Requires (AMF) Remote Keyless Entry Package. Not available with SEO (6E2) complete vehicle fleet common key.
AMF	REMOTE KEYLESS ENTRY PACKAGE - Includes 4 additional transmitters, NOTE: programming of remotes is at customer's expense. Programming remotes is not a warranty expense.
T53	LAMPS - Alternate flashing Red & Blue rear compartment lid warning (visible when lift-gate is open) and controlled by momentary lift-gate mounted switch or ground wire.
RIA	FLOOR LINERS - All-weather floor liners, front and rear. Not available with VAV. Not available on 9C1.
6C7	LIGHTING - Red and white LED auxiliary dome lamp is located on headliner between front row seats. The auxiliary lamp is wired independently from standard dome lamp.
6N6	REAR DOOR LOCKS AND HANDLES INOPERATIVE - Rear power locks are inoperable at rear door but operate from drivers position, rear doors can be opened only from outside the vehicle.
6N5	REAR DOOR WINDOW SWITCHES INOPERATIVE - Calibration for rear windows to operate from drivers position only. Window lockout switch remains illuminated.

OPTIONAL EXTERIOR FEATURES

VK3	LICENSE PLATE FRONT MOUNTING PACKAGE - Included on orders with ship-to states that require a front license plate.
AKP	LIFTGATE GLASS - Solar absorbing, non-tinted rear liftgate glass. Replaces tinted rear liftgate glass (AKO).
9G8	LIGHTING DELETE - Daytime Running Lamps and automatic headlamp control delete. Deletes standard Daytime Running Lamps and automatic headlamp control features, also disables automatic interior courtesy lighting.
ARU	REAR GLASS - Tinted rear window and rear quarter panel glass. Replaces solar absorbing non-tinted, rear window and rear quarter panel glass (ARS) .
TGK	SPECIAL PAINT - One color. Required with any special paint selection. Required with any SEO paint selection. May require extended lead time.
5T4	SPECIAL PAINT - Victory Red WA-9260. Requires SEO (TGK) special paint solid.
9W5	SPECIAL PAINT - Silver Ice Metallic WA-636R. Requires SEO (TGK) special paint solid.
9V7	SPECIAL PAINT - Dark Blue Metallic WA-722J. Requires SEO (TGK) special paint solid.
9V2	SPECIAL PAINT - MSP Blue Goose WA-5665. Requires SEO (TGK) special paint solid.
6JE	BLUE LEFT/BLUE RIGHT WHELEN LED ION LIGHT PACKAGE - Two ION light heads mounted on each exterior corner. Not available with 6JG, 6J9 or 6J8.
6JG	RED LEFT/BLUE RIGHT WHELEN LED ION LIGHT PACKAGE - Two ION light heads mounted on each exterior corner. Not available with 6JE, 6J9 or 6J8.
6J9	RED LEFT/RED RIGHT WHELEN LED ION LIGHT PACKAGE - Two ION light heads mounted on each exterior corner. Not available with 6JG, 6JG or 6J8.
6J8	WHITE LEFT/WHITE RIGHT WHELEN LED ION LIGHT PACKAGE - Two ION light heads mounted on each exterior corner. Not available with 6JG, 6J9 or 6J9.
VQK	SPLASH GUARDS - Front and rear molded splash guards.
7X3	SPOT-LAMP - Left hand, pillar-mounted unity, 6-inch with LED lamps; independently fused.
QHN	TIRES - 275/40R22 all-season self-sealing, blackwall. Included and only available with (5W4) Special Service Package.
PJD	WHEELS - 22" (55.9 cm) Gloss Black aluminum. Included and only available with (5W4) Special Service Package.

NOTE: Factory installation of spot-lamps are recommended. Special tooling is used to locate and drill the spot-lamp shaft hole in the pillars. (Interior trim covers provided with factory installed lamps are not available as service parts). Field installation of spot-lamps must not interfere with proper deployment of the roof rail mounted head-curtain airbags in the event of a crash.

OPTIONAL ELECTRICAL FEATURES

5J1	CALIBRATION - Disables the following standard features: Entry Lighting and Exit Lighting, Remote Keyless Entry Feedback (Horn Beep, Lamps Flash, and Panic Alarm).
1MP	SMARTPHONE APP REMOTE START - Only available with OnStar.
UTQ	THEFT DETERRENT SYSTEM DISABLE - The alarm and horn become non-functional in an attempt of theft to the vehicle. Recommended for vehicles utilizing 6E2 or 6E8 key codes.
WX7	WIRING - Auxiliary speaker. For upfitter connection to front door and windshield speakers.
6J3	WIRING - For grille lamps and siren speaker.
6J4	WIRING - For horn and siren.

OPTIONAL MECHANICAL FEATURES

UHY	AUTOMATIC EMERGENCY BRAKING¹ - At speeds between 5 and 50 mph, Automatic Emergency Braking can help you avoid or reduce the severity of a collision with a detected vehicle you're following using camera technology. It can automatically provide hard emergency braking or enhance the driver's hard braking.
5AV	GM ENERGY POWERSHIFT CHARGER² - Residential bidirectional EV charger; up to 19.2kW of charging, 80-amp, requiring a hardwired connection with 25' length cord included. Installation not included, professional install required for warranty. Requires (RYN) GM PowerShift AC Charging Adapter, LPO. Included with (PED) Premium Charging Package, LPO. Not available separately with PED. Not available with (5CH) GM PowerUp2 (NACS) Charger, LPO.
5CH	GM POWERUP2 CHARGER² - Residential bidirectional EV charger; up to 11.5kW of charging, 40-amp (48-amp max), requiring a hardwired connection with 25' length cord included. Installation not included, professional install required for warranty. Not available with (5AV) GM Energy PowerShift Charger, LPO or (PED) Premium Charging Package, LPO. Included with (PEC) Charging Essentials Package, LPO.
PEB	GM J1772 AC ADAPTER - Dealer Provided. Includes (RYK) GM J1772 AC Adapter, LPO and (RYW) GM CCS1 DC Adapter LPO. Not available with (PEC) Charging Essentials Package, LPO or (PED) Premium Charging Package, LPO.
PEC	GM CCS1DC ADAPTER - Dealer Provided. Includes (RYK) GM J1772 AC Adapter, LPO and (RYW) GM CCS1 DC Adapter LPO and (5CH) GM PowerUp 2 (NACS) Charger, LPO. Not available with (5AV) GM Energy PowerShift Charger, LPO, (PEB) Level 2 and Fast Charging Adapter Package, LPO or (PED) Premium Charging Package, LPO.
PED	PREMIUM CHAGING PACKAGE - Dealer Provided. Includes (RYK) GM J1772 AC Adapter, LPO and (RYW) GM CCS1 DC Adapter LPO and (5AV) GM Energy PowerShift Charger, LPO and (RYN) GM PowerShift Charging Adapter, LPO. Not available with (5CH) GM PowerUp 2 (NACS)Charger, LPO, (PEB) Level 2 and Fast Charging Adapter Package, LPO or (PEC) Charging Essentials Package, LPO.
RYN	GM POWERSHIFT AC CHARGING ADAPTER - Residential AC charging adapter for the use with the bi-directional (5AV) GM Energy PowerShift Charger, LPO. Intended for NACS native inlet vehicles. Included with (PED) Premium Charging Package, LPO.
RYK	GM J1772 AC ADAPTER - Residential and public AC charging adapter for use with the GM PowerUp 2 (NACS) Charger, non-V2H Level 2 home chargers, and non-NACS Level 2 public chargers. Intended for NACS native inlet vehicles. Included with (PEB) Level 2 and Fast Charging Adapter Package, LPO, (PEC) Charging Essentials Package, LPO and (PED) Premium Charging Package, LPO.
RYW	GM CCS1 DC ADAPTER - Dual purpose public fast charging and residential V2H discharging adapter. For public use at CCS1 fast charging stations not on the North American Charging Standard and residential use with the (5AV) GM Energy PowerShift Charger to discharge power from the vehicle to the home. Intended for NACS native inlet vehicles. Requires (NE1) or (YF5) certification. Available on (FE9) certification. Included with PEB/PEC/PED. Not available separately with PEB/PEC/PED. Included with (PEB) Level 2 and Fast Charging Adapter Package, LPO, (PEC) Charging Essentials Package, LPO and (PED) Premium Charging Package, LPO.
5W4	SPECIAL SERVICE PACKAGE - Includes (PHY) 22" machined-face aluminum wheels with carbon flash painted pockets, (QHN) 275/40R22 all-season self-sealing black-wall tires, (JBO) non-asbestos organic brake lining and (JFC) FNC brake rotor. When equipped, this option removes the pursuit rating. Brake and Tire pack age is not designed for Pursuit. Requires 9C3 Package which includes retail floor console, armrest, color-keyed carpeting in occupant area and black cloth front and rear seating. Not available on 9C1.
V92	TRAILERING PROVISIONS - Includes; Wiring, (CTT) Hitch Guidance and (PZ8) Hitch View.
SDE	TRAILER HITCH - Removable 2" (Class 2.) receiver. Requires (V92) trailering provisions and (VLG) trailer hitch trim bezel.
VLG	TRAILER HITCH TRIM BEZEL - Dealer installation trim. Requires (SDE) trailer hitch.

1. Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Visibility, weather, and road conditions may affect feature performance. Read the vehicle's owner's manual for more important feature limitations and information.


2. The GM Energy PowerShift Charger and GM Energy V2H Enablement Kit require an adequately charged and properly equipped GM EV having bidirectional charging capabilities, a properly equipped home and proper grid interconnection. Some eligible 24MY EVs will require a dealership or over-the-air update to enable bidirectional charging. Weather conditions, life of the battery, vehicle variation and usage, and other external factors may impact the duration of power supply. Power supply may be interrupted. It is not recommended that the following devices be powered with the GM Energy PowerShift Charger and V2H Enablement Kit: Medical Devices.

EMISSIONS - ZERO EMISSIONS VEHICLE (ZEV)

FE9	Emissions - Federal requirements. Not available with FDR/FBC/FLS/FNR/FRC/FGO/TSC/TSR/TSM order types. These order types require (YF5) California State emissions requirements or (NE1) emissions and (NC7) emissions.
NF6	Emissions System - Zero emissions vehicle (ZEV). Standard for all BLAZER EVs.
NE1	Emissions - Massachusetts, New York, Oregon, Vermont and Washington State.
YF5	Emissions - California state requirements.
NB8	Emissions override - California. Allows a dealer in states that require California emissions - California, Colorado, Delaware, Maryland, Massachusetts, Minnesota, Nevada, New Jersey, New Mexico, New York, Oregon, Pennsylvania, Rhode Island or Washington - to order Federal emissions for a vehicle that will be registered in a state that has Federal emissions requirements. Do not use for vehicles that will be registered in California, Colorado, Connecticut, Delaware, Maryland, Massachusetts, Minnesota, Nevada, New Jersey, New Mexico, New York, Oregon, Pennsylvania, Rhode Island or Washington. Requires (FE9) Federal emissions requirements.
NB9	Emissions override - State-specific. For dealers ordering vehicles in (YF5) or (NE1) emission states - Massachusetts, New York, Oregon, Vermont, and Washington State. Allows a California dealer (YF5 emissions) to order (NE1) emissions with (NB9) emissions override code for registration in (NE1) states; or, a Colorado, Delaware, Maryland, Massachusetts, New Jersey, New York, Oregon, Rhode Island, Vermont, Washington State and District of Columbia dealer (NE1 emissions) to order (YF5) emissions with (NB9) emissions override code for registration in California.
NC7	Emissions override - Federal. For vehicles ordered by dealers in Federal emission states with (YF5) or (NE1) emissions - Arizona, Connecticut, Idaho, New Jersey, Nevada, New Hampshire, Pennsylvania, Rhode Island and Utah. Requires (YF5) California state emissions requirements or (NE1) emissions states - Colorado, Delaware, Maryland, Massachusetts, New Jersey, New York, Oregon, Rhode Island, Vermont, Washington State or District of Columbia emissions requirements.

OPTIONAL SHIP THRU

TBP	SHIP THRU - Produced in GM Ramos and shipped to Kerr Industries of Texas, Returned to GM Arlington Plant for shipping to final destination. Included and only available with (6C7) Red and white LED auxiliary dome lamp, (6J8) White Left/White Right Whelen ION LED Lamp Package, (6J9) Red Left/Red Right Whelen LED ION Lamp Package, (6JE) Blue Left/Blue Right Whelen LED ION Lamp Package, (6JG) Red Left/Blue Right Whelen LED ION Lamp Package, (6N6) inside rear doors inoperative door locks and handles, (7X3) left- hand, LED spotlight or (T53) alternate flashing Red & Blue rear compartment lid warning lamps.
TVU	SHIP THRU - Produced in GM Ramos and shipped to Defender Supply. Shipped from Ramos to Argyle for upfit and back to Arlington for final assembly.
VCY	SHIP THRU - Produced in Ramos Arizpe Assembly, shipped to Auto Truck, Ft. Worth, TX for up-fit and back to Arlington for final assembly.

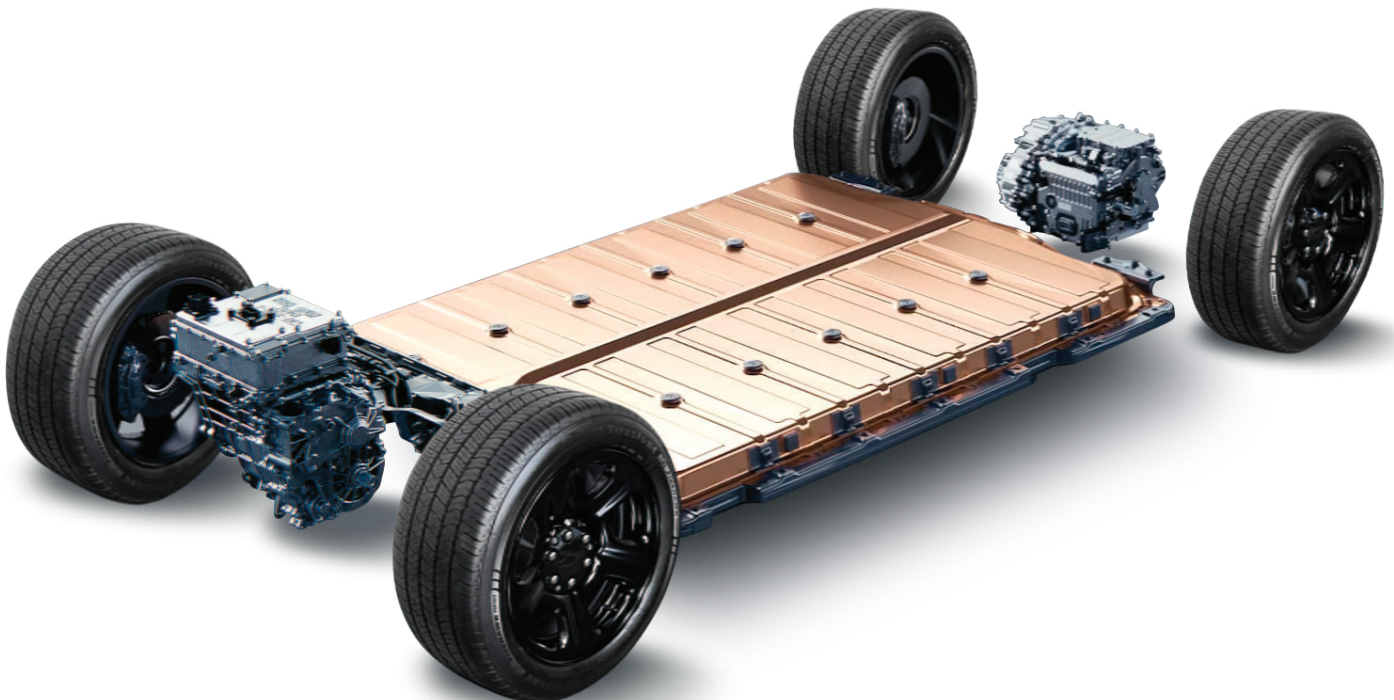

9C1 & 9C3 PURSUIT TIRE



9C1 & 9C3 WHEELS AND TIRES

PURSUIT RATED

MANUFACTURER	QUANTITY	SIZE	SPEED RATING	TYPE
TIRE Firestone Firehawk	4	265/50R20	V Pursuit	All-Season Black-wall

NOTE:

Due to specific requirements for performance durability and safety, GM recommends only the original equipment tires for replacement.

Tire Plies = Tread 6 ply; 2 Polyester, 2 Steel, 2 Nylon, Sidewall, 2 Polyester

Tire Chains - If the vehicle is equipped with tire size 265/50R20, use tire winter traction devices only where legal and only when necessary. Only use textile traction devices, such as tire snow socks, that are the proper size for the tires. Traction devices must be installed only on the tires of the drive axle. Drive slowly and follow the traction device manufacturer's instructions. Driving too fast or spinning the wheels can damage the traction device.

5W4 TIRE



5W4 TIRES

NOT PURSUIT RATED

MANUFACTURER	QUANTITY	SIZE	SPEED RATING	TYPE
Michelin	4	275/40R22	Y	All-Season Self-Sealing Blackwall

NOTE:
Due to specific requirements for performance durability and safety, GM recommends only the original equipment tires for replacement.

SPECIFICATIONS

DUAL MOTOR ALL WHEEL DRIVE

Model	1MF26
Projected top speed ¹ (mph/kph)	130/209
Projected stopping distance from 60mph (ft./m)	128/39
Projected top speed in reverse	25/40
Projected distance to reach top speed ¹ (miles/km)	0.76/1.22
Acceleration ¹ 0-20 mph (sec.)	1.66
Acceleration ¹ 0-30 mph (sec.)	2.48
Acceleration ¹ 0-40 mph (sec.)	3.30
Acceleration ¹ 0-50 mph (sec.)	4.13
Acceleration ¹ 0-60 mph (sec.)	5.08
Acceleration ¹ 0-70 mph (sec.)	6.21
Acceleration ¹ 0-80 mph (sec.)	7.59
Acceleration ¹ 0-90 mph (sec.)	9.27
Acceleration ¹ 0-100 mph (sec.)	11.23

RANGE ON A FULL CHARGE (Miles/Km)

EPA Estimated range on a full charge ⁷	286/460
GM Estimated range with emergency equipment ⁸	266/428

Note: EPA ESTIMATED ratings are official, not estimate based on GM testing

VEHICLE WEIGHT (lbs./kg)

Seating Capacity	2/3
GVWR ³ (Gross Vehicle Weight Rating)	6945/3150
FGAWR (Front Gross Axle Weight Rating)	1550/703
RGAWR (Rear Gross Axle Weight Rating)	1700/771
Payload without Trailer Hitch ⁴	1192/540
Payload with Trailer Hitch ⁴	1159/526
Base curb weight	5870/2663
Maximum Trailering Capacity ⁵	1000/454

FRONT COMPARTMENT (in./mm)

Head room	40.88/1038
Shoulder room, 1st row	58.70/1491
Hip room, 1st row	57.40/1458
Leg room, 1st row, max	44.20/1123

EXTERIOR (in./mm)

Wheelbase	121.80/3094
Overall length	192.62/4893
Overall width, without mirrors	78.02/1982
Overall width, including mirrors	86.50/2197
Overall height ⁶	64.78/1645
Lift in height ⁶ (Top of load floor to ground)	29.40/747
Front track width	65.90/1674
Rear track width	65.90/1674
Turning diameter curb to curb (ft./m)	39.7/12.1
Approach angle	19 degrees
Departure angle	22 degrees
Breakover angle	15 degrees
Ground Clearance	7.49/190
Overhang, front	35.09/891
Overhang, rear	35.37/898
Fording depth	12in/304.8mm @ 6.2mph/10kph

PASSENGER COMPARTMENT VOLUME (cu.ft./liters)

Passenger Volume Front Row	58/1642
Passenger Volume Second Row	25.7/728
Cargo Volume With Rear Seat Up	26.2/742

CARGO (in./mm)

Load floor length to center of front seat at floor	71/1804
Load floor length to center of 2nd seat at floor at seat	25/889
Inside width between wheelhouse	42/1067
Cargo area width	47.2/1200
Cargo area length	36.9/937
Cargo area height (headliner limited)	26.8/681
Cargo volume ² maximum behind front seat (cu. ft./liters)	59.1/1673.7
Cargo volume ² maximum behind second seat (cu. ft./liters)	25.5/722.2

REAR COMPARTMENT (in./mm)

Head room	38.10/968
Shoulder room	58.33/1482
Hip room	53.79/1366
Leg room	38.92/989

¹. Based on 2025MY Michigan State Police Vehicle Test Results. All vehicles tested with clean roof and no additional equipment or added ballast. Adding non dealer accessories or making modifications to the vehicle can affect vehicle performance, aerodynamics, overall top speed and acceleration.

². Cargo and load capacity limited by weight and distribution.

³. Gross Vehicle Weight Rating (GVWR). When properly equipped, includes vehicle, passengers, cargo and equipment.

⁴. These maximum payload ratings are intended for comparison purposes only. Before you buy a vehicle or use it to haul people or cargo, carefully review the vehicle loading section of the Owner's Manual and check the carrying capacity of your specific vehicle on the label on the inside of the driver's door jamb.

⁵. Maximum trailering ratings are intended for comparison purposes only. Before you buy a vehicle or use it for trailering, carefully review the trailering section of the Owner's Manual. The trailering capacity of your specific vehicle may vary. The weight of passengers, cargo and options or accessories may reduce the amount you can trailer.

⁶. Published dimension indicated is from ground and without optional equipment or accessories. Additional accessories or equipment ordered at the customer's request can result in a minor change in this dimension.

⁷. On a full charge based on development testing and/or analytical projection consistent with SAE J1634 revision 2017 - MCT. Range subject to change prior to production. Actual range may vary based on several factors, including ambient temperature, terrain, battery age and condition, loading, and how you use and maintain your vehicle.

⁸. On a full charge based on development testing and/or analytical projection consistent with SAE J1634 revision 2017 - MCT. Range subject to change prior to production. Actual range may vary based on several factors, including ambient temperature, terrain, battery age and condition, loading, and how you use and maintain your vehicle. EPA estimates not yet available.

SPECIFICATIONS

PROPULSION SYSTEMS

	STANDARD
Type	Dual Motor All Wheel Drive
Motor	2-Motor Permanent Magnetic Drive
Power on a full charge (hp/kW)	498/372
Torque on a full charge (lb.ft./Nm)	571/774

DRIVE BATTERY

Type	Rechargeable energy storage system with 12-module pack
Mass (lb / kg)	947 / 430
Battery chemistry	Lithium-ion
Cells	288
Energy	102 kWh
Projected Range ¹ (mi/km)	286/460

BRAKES

eBoost ABS	Disc/Disc
Front rotor diameter (in./mm)	15/381
Rear rotor diameter (in./mm)	13.5/343
Front rotor thickness (in./mm)	1.26/32
Rear rotor thickness (in./mm)	0.79/20
9C1 Projected Stopping Distance from 60.0 mph (ft.) ⁵	128.16

9C1 & 9C3 TIRES

Type	Firestone Firehawk Pursuit, V-rated, All-season
Size	265/50R20

5W4 TIRES

Type	Michelin, Y-rated, All-season
Size	275/40R22

9C1 & 9C3 WHEELS

Type	Black Steel with bolt on aluminum center cap
Size	20"x 9"

5W4 WHEELS

Type	Machine-faced Aluminum with carbon flash painted pockets
Size	22"x 9"

CHASSIS

Suspension	Heavy-duty police-rated suspension with unique StabiliTrak performance calibration
Steering type	Power, non-variable ratio, electric
Steering ratio	15.98:1

SERVICE BATTERIES

Type	Maintenance free
BCI group size	LN1
Volts	12 V
Amp hour rating	50 ah
Reserve capacity	80 min
Cold cranking-amps	520 a

LEVEL 1 RESIDENTIAL CHARGING¹

120-Volt (1.44kW/12amps)	Provides up to 3 miles of range per hour
--------------------------	--

DUAL MODE CHARGING¹

240-Volt (7.68kW/32amps)	Provides up to 19 miles of range per hour
--------------------------	---

LEVEL 2 RESIDENTIAL CHARGING²

240-Volt (11.5kW/48-amps)	Provides up to 27 miles of range per hour
240-Volt (19.2kW/80-amps)	Provides up to 44 miles of range per hour

LEVEL 3 DC FAST CHARGING³

400-Volt 190 Kilowatt	Provides up to 74-miles of range in 10 minutes or 10% to 80 % in approximately 40 minutes
-----------------------	---

¹. Requires professional installation of a compatible outlet. Actual charge times will vary based on battery starting state of charge, battery condition, output of charger, vehicle settings and outside temperature. See the vehicle's Owner's Manual for additional limitations.


². Requires public charge station or professionally installed dedicated charge station, sold separately. Actual charge times will vary based on battery starting state of charge, battery condition, output of charger, vehicle settings and outside temperature. See the vehicle's Owner's Manual for additional limitations.

³. Requires public DC Fast Charger. Actual charge times will vary based on battery starting state of charge, battery condition, output of charger, vehicle settings and outside temperature. See the vehicle's Owner's Manual for additional limitations.


COLORS, EXTERIOR AND INTERIOR

AVAILABLE EXTERIOR COLORS


ACTUAL COLORS MAY VARY



Summit White
WA-8624



Black
WA-8555



Riptide Blue Metallic
WA-121J



White Sands
WA-234L




Radiant Red Tintcoat
WA-170H
Available at extra cost




Sterling Gray Metallic
WA-130H

SEO PAINT AVAILABLE


ACTUAL COLORS MAY VARY




Victory Red
WA-9260



Silver Ice Metallic
WA-636R



Dark Blue Metallic
WA-722J




MSP Blue Goose
WA-5665

NOTE:


- May require extended lead time. Actual color may vary.

AVAILABLE INTERIOR COLORS

ACTUAL COLORS MAY VARY

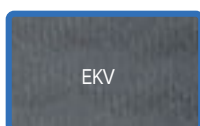

Black cloth Front
Black vinyl Rear
9C1 only

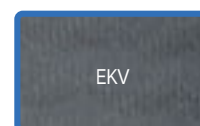

Black cloth Front and Rear
9C3, 5W4 only




Blazer EV 9C1 Interior



Blazer EV 9C3, 5W4 Interior


APPROACH AND DEPARTURE ANGLES

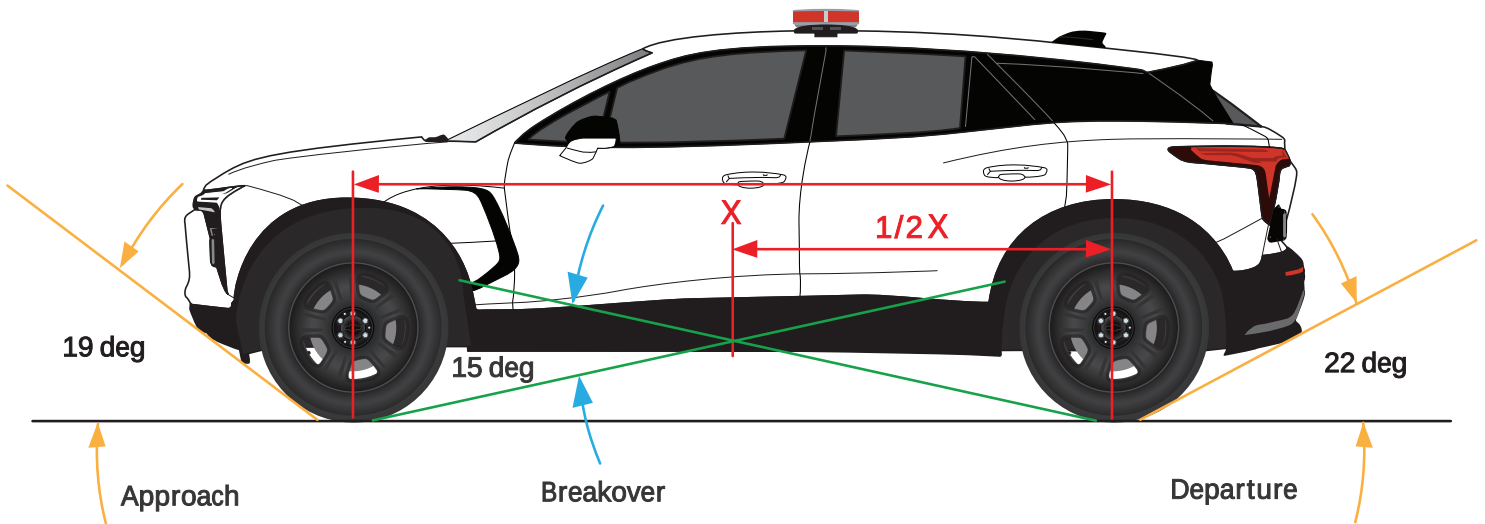


Approach Angle
Departure Angle
Break-over Angle
Ground Clearance
Wheelbase (X)
Overhang, front
Overhang, rear

BLAZER PPV AWD	
Approach Angle	19 degrees
Departure Angle	22 degrees
Break-over Angle	15 degrees
Ground Clearance	7.49 in. / 190 mm
Wheelbase (X)	121.8 in. / 891 mm
Overhang, front	35.09 in. / 891 mm
Overhang, rear	5.37 in. / 898 mm


EXTERNAL DIMENSIONS

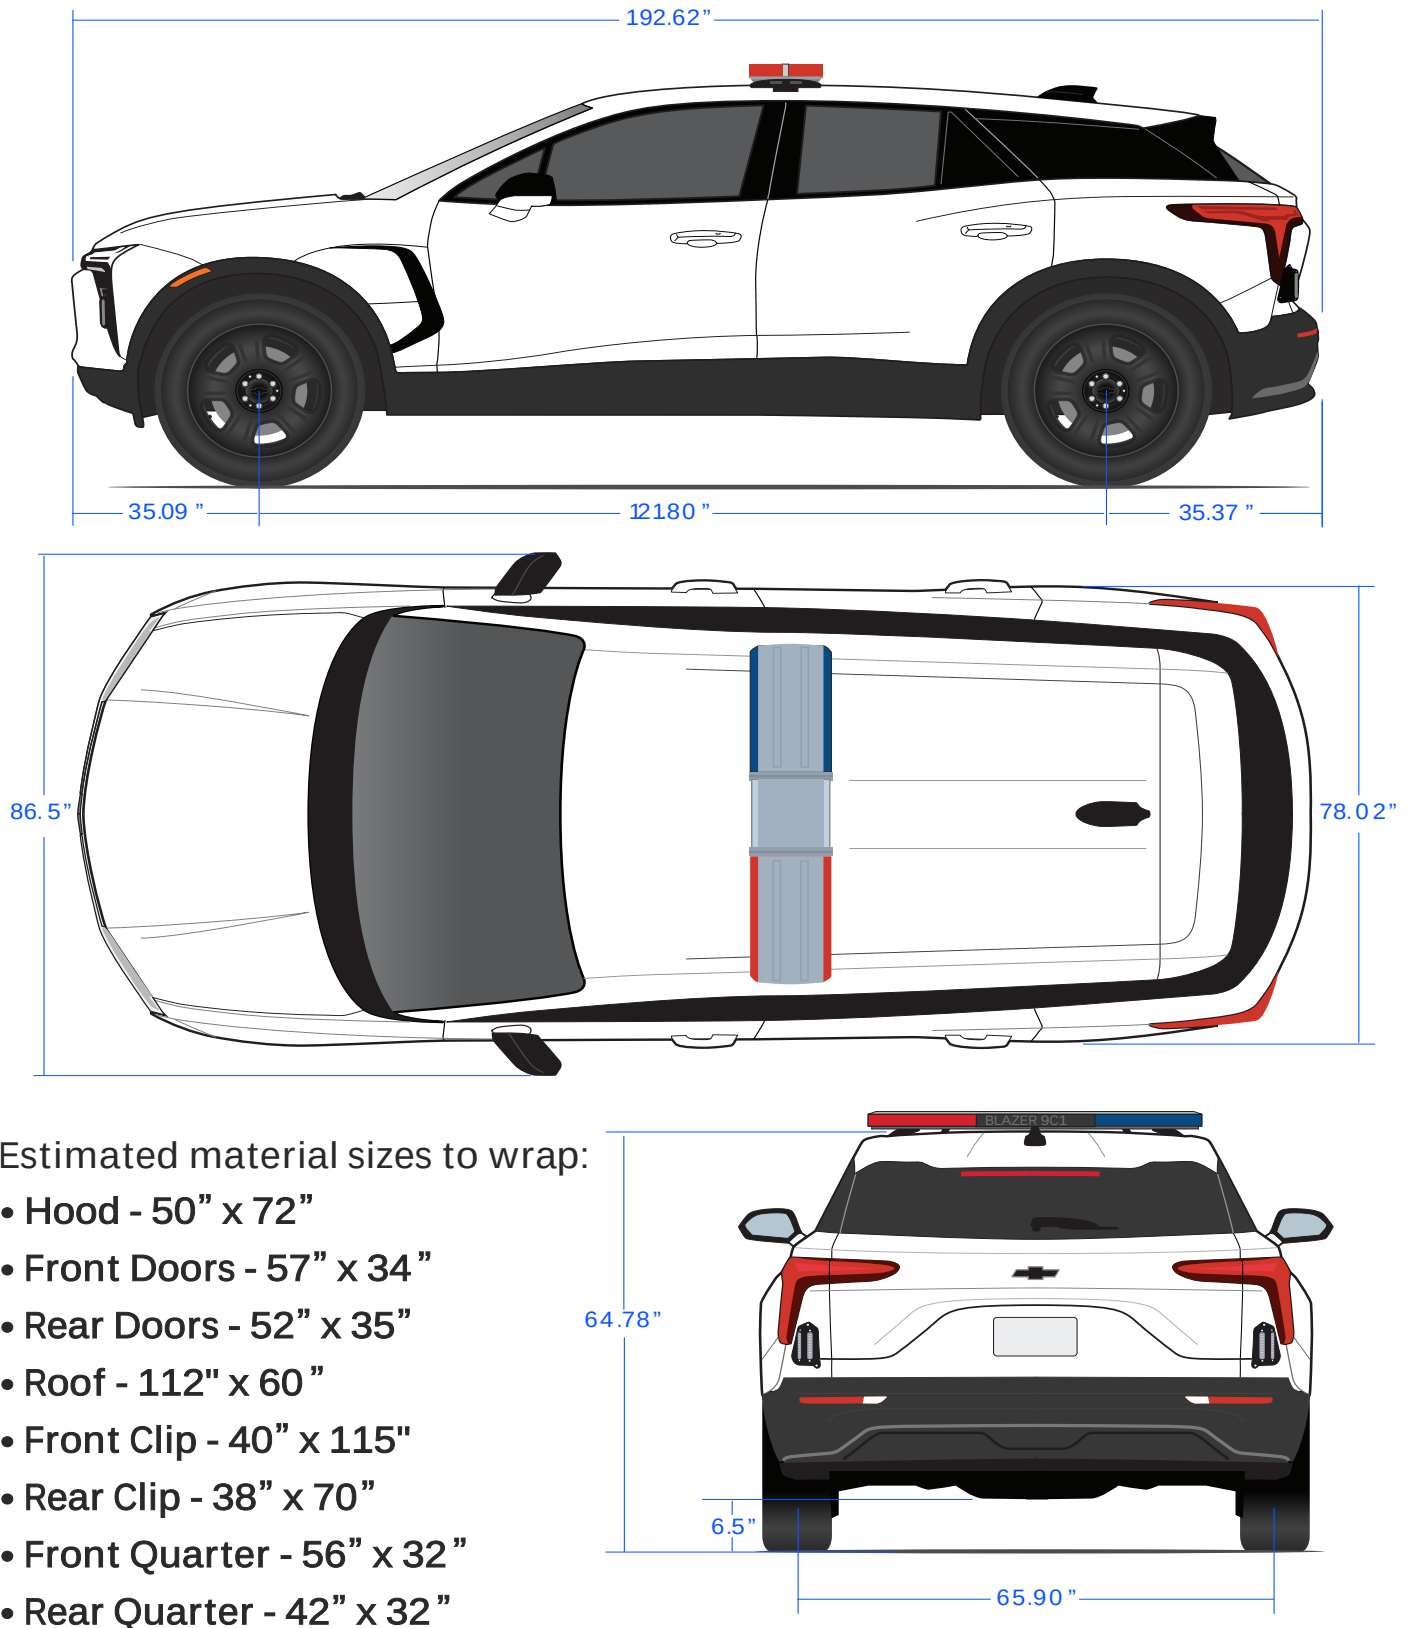

SPEEDOMETER/CLUSTER (CANADIAN SIMILAR)

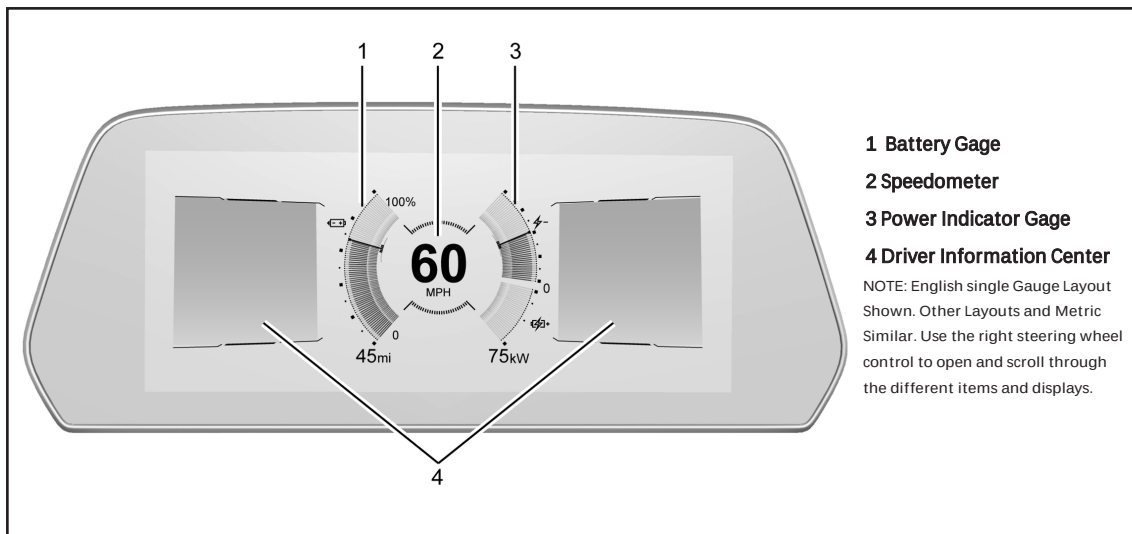


RADIO, SIREN/FLASHERS CONTROLS

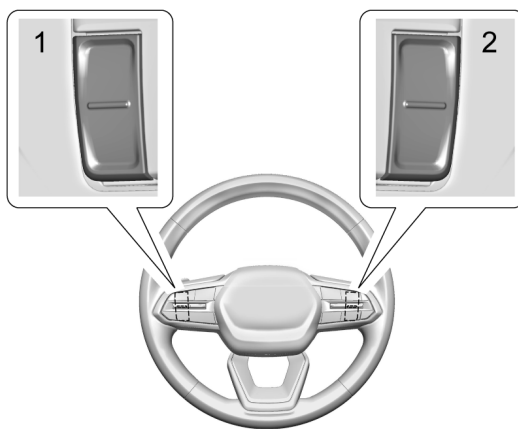

1. The steering wheel controls on left rear side control momentary output for two-way radio microphone and latching for siren/flashers.
2. Volume: Press to increase or decrease the volume.

STEERING WHEEL MENU CONTROLS

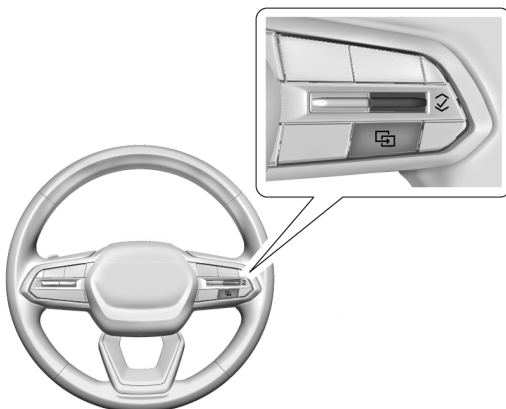

2027 BLAZER EV PPV (9C1/9C3) SPEEDOMETER CERTIFICATION/CALIBRATION

To Whom It May Concern:

The speedometer system in the 2027MY Police Blazer EV Vehicle is equipped with an electronically controlled speedometer which is designed to be accurate to ± 2 mph (± 3 km/h) through its range of function. The Police Package speedometer is calibrated with XFD performance dual motor all wheel drive, electrified propulsion system and 265/50R20 SL V rated tires (QH9). Specifications are at temperatures of 10 to 120 F (23 to 49 C). Inaccuracies due to vehicle speed sensing are included.

GM specified vehicle maintenance is required to maintain the stated accuracy of the speedometer system. The accuracy of the speedometer system is dependent on and affected by the required vehicle maintenance including; following placard tire inflation pressure of 39 psi, monitoring tire wear as directed by the vehicle owner's manual, tire replacement with all-season Firestone Firehawk Pursuit 256/50 R20 tires, maintaining original OEM driveline ratios, maintaining original OEM electronic module calibration files and following vehicle loading limitations.

Regards,

Brad Lutz
Performance Engineering
Manager

VEHICLE TOUCH SCREEN SETTINGS



VEHICLE PERSONALIZATION MENU

Important features in the VEHICLE SETTINGS sub-menu that can be changed are:

- Rear Seat Reminder¹
- Buckle to Drive
- Collision Detection²
- Comfort and Convenience
- Lighting
- Power Locks
- Safety Alert Seat²

See the Owner's Manual for a complete Vehicle Personalization Menu listing of items that may be available for your vehicle.

1. Does not detect people or items. Always check rear seat before exiting.


2. Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Visibility, weather, and road conditions may affect feature performance. Read the vehicle's owner's manual for more important feature limitations and information.

UNIQUE CLOSURE LOCK/UNLOCK FUNCTION

OUTSIDE OF VEHICLE LOCK/UNLOCK FUNCTION



2nd Row Doors and Liftgate only lock/unlock with remote or interior front door courtesy switches:

- Designed to prevent unwanted entry into 2nd row or rear cargo areas in hostile crowds
- Side doors and liftgate unlocking handles operate separately

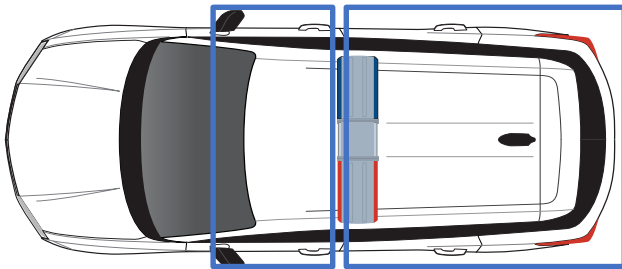


← The 2nd row doors and liftgate/glass can only be locked/unlocked with:

1. Remote Lock/Unlock button.
2. Front row interior courtesy switch Lock/Unlock buttons

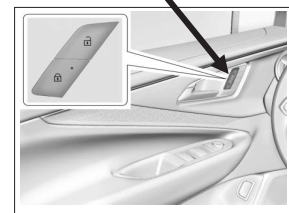

1st Row Passive Entry button will only unlock the front row doors





2nd Row Passive entry button WILL unlock 2nd Row door if Remote is present. A double press of either the remote fob Unlock button, or interior courtesy switch Lock/Unlock buttons will unlock all doors, including the liftgate.

INSIDE OF VEHICLE LOCK/UNLOCK FUNCTION

The ETRS (shifter) door locking/unlocking function :

- Shift out of Park locks all doors and liftgate/glass
- Shift into Park unlocks front row doors and rear doors



Customizable in infotainment center, however this will not unlock 2nd row doors or liftgate

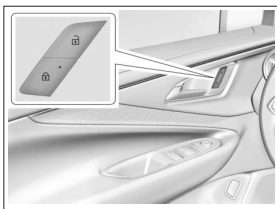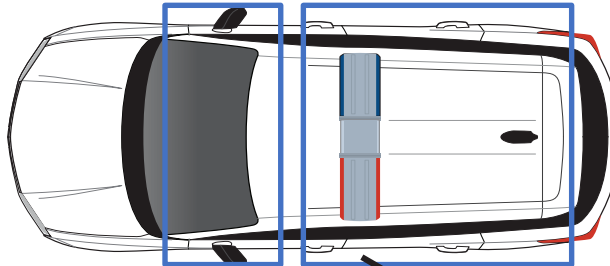

1st Row Doors interior courtesy switch locks/unlocks all the doors and liftgate/glass



2nd Row Door courtesy switches have no function

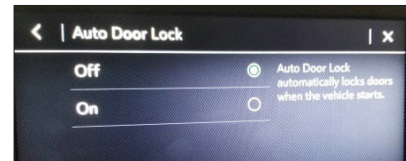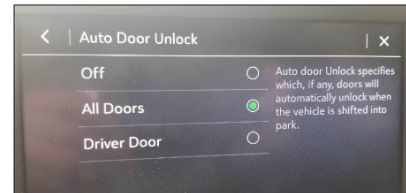

Note: default auto door locking is turned off

OTHER UNLOCKING COMMANDS

- OnStar unlocking commands unlocks all doors and liftgate
- Collision detection unlocks all doors and liftgate


STANDARD SAFETY & DRIVER ASSISTANCE FEATURES

SAFETY ALERT SEAT¹



The driver seat cushion may provide a vibrating pulse alert or audible beeping. To change settings from the infotainment screen, touch Settings > Vehicle > Collision/Detection Systems. Keep these areas of the vehicle clean and clear of obstacles to ensure the best driver assistance feature performance. Driver Information Center (DIC) messages may display when the systems are unavailable or blocked.

REAR PARK ASSIST¹


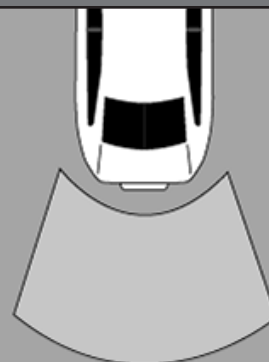


The cluster may display a Park Assist amphitheater-like display with bars that represent the estimated location of a detected object and the vehicle's distance from the object. As a detected object becomes closer, more bars light up and change color from yellow to amber to red. When an object is first detected in the rear, one beep will be heard from the rear, or the SAFETY SEAT will pulse two times. When an object is very close, five beeps will sound from the rear or the SAFETY SEAT will pulse five times.

The Park Assist System is no substitute for careful and attentive driving. The Park Assist system does not detect children, pedestrians, bicyclists, animals, or objects located below the bumper or that are too close or too far from the vehicle. It is not available at speeds greater than 9 km/h (6 mph). To prevent injury, death, or vehicle damage, even with Park Assist, always check the area around the vehicle and check all mirrors before moving forward or backing.

The REAR Park Assist System can be turned on or off using the infotainment system. To view available settings from the infotainment home screen, touch Settings > Vehicle > Collision/Detection Systems.

HD REAR VISION CAMERA¹

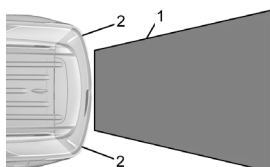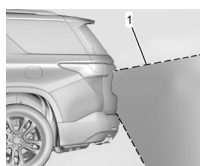

1. View Displayed by the Camera in Radio Screen
2. Corners of the Rear Bumper


Displayed images may be farther or closer than they appear. The area displayed is limited and objects that are close to either corner of the bumper or under the bumper do not display.

The camera(s) do not display children, pedestrians, bicyclists, crossing traffic, animals, or any other object outside of the cameras' field of view, below the bumper, or under the vehicle. Shown distances may be different from actual distances. Do not drive or park the vehicle using only these camera(s). Always check behind and around the vehicle before driving. Failure to use proper care may result in injury, death, or vehicle damage.

² Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Visibility, weather, and road conditions may affect feature performance. Read the vehicle's owner's manual for more important feature limitations and information. Read the vehicle's owners manual for more important feature limitations and information.

STANDARD SAFETY & DRIVER ASSISTANCE FEATURES

REAR CAMERA MIRROR

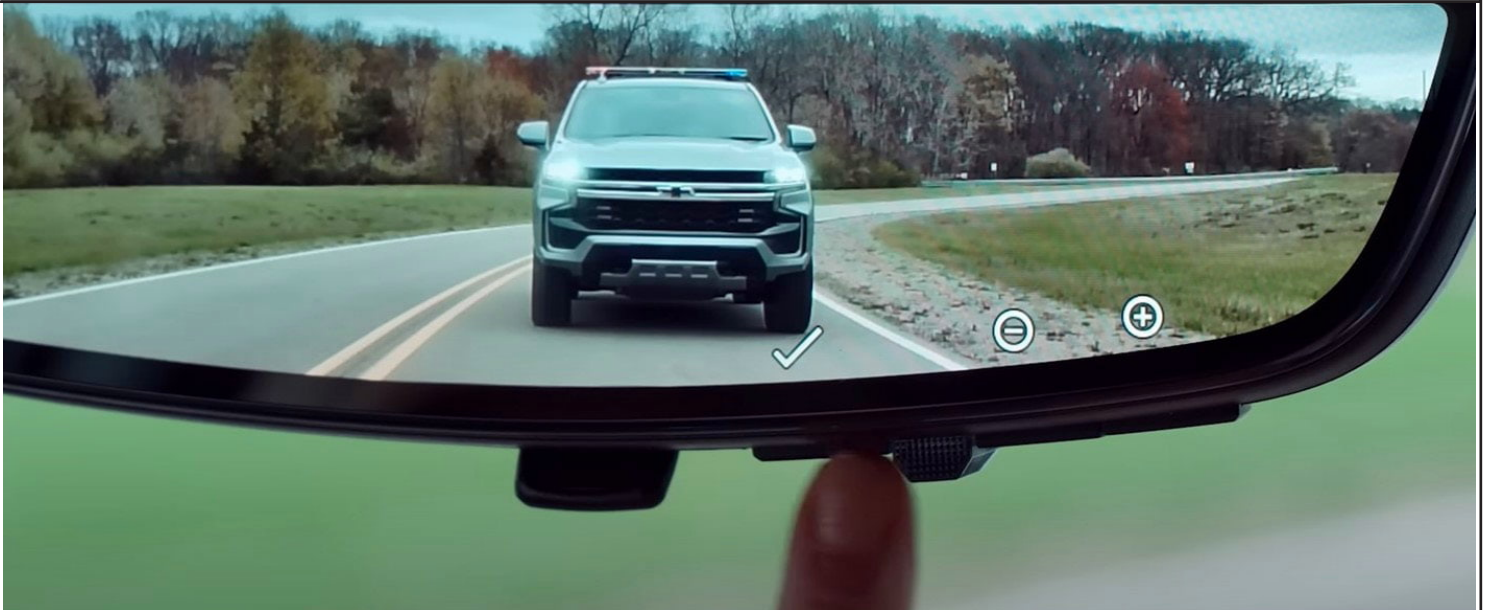

Inside rear-view auto-dimming with full camera display. Includes (CWA) Rear Camera Mirror Washer.

The automatic dimming mirror provides a wide angle camera view of the area behind the vehicle. Pull the tab to turn on the display. Push the tab to turn it off. When off the mirror is automatic dimming. Adjust the mirror for a clear view of the area behind the vehicle while the display is off.

The Rear Camera Mirror may not work properly or display a clear image if:

- There is glare from the sun or headlamps. This may obstruct objects from view. If needed, push the tab to turn off the display.
- Dirt, snow, or other debris blocks the camera lens. Clean the lens with Rear Camera Washer or a soft damp cloth.
- The camera's mounting on the vehicle has been damaged, and/or the position or the mounting angle of the camera has changed.

WARNING: The Rear Camera Mirror (RCM) has a limited view. Portions of the road, Vehicles, and other objects may not be seen. Do not drive or park the vehicle using only this camera. Objects may appear closer than they are. Check the outside mirrors or glance over your shoulder when making lane changes or merging. Failure to use proper care may result in injury, death, or vehicle damage.

Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Visibility, weather, and road conditions may affect feature performance. Read the vehicle's owner's manual for more important feature limitations and information.

HD SURROUND VISION¹




With Birds Eye View. Includes instant ON hard button, left of steering wheel. Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. Read the vehicle Owner's Manual for important feature limitations and information

STANDARD INTERIOR FEATURES


SURROUND VISION RECORDER

HOW TO USE THE RECORDINGS APP:

When your vehicle is on and in PARK, press the Recordings icon on the center display. The app will take you to the video player.

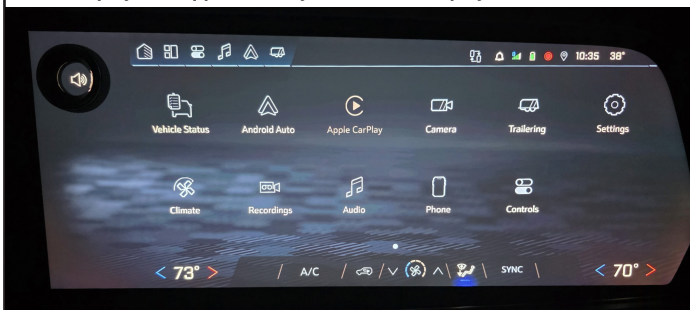


- A list of recent videos
- A list of different camera views (see icons on the right of screen)
- The recordings options menu
- An option to safely eject the USB drive
- Video player lets you play, pause, or scroll to other videos.

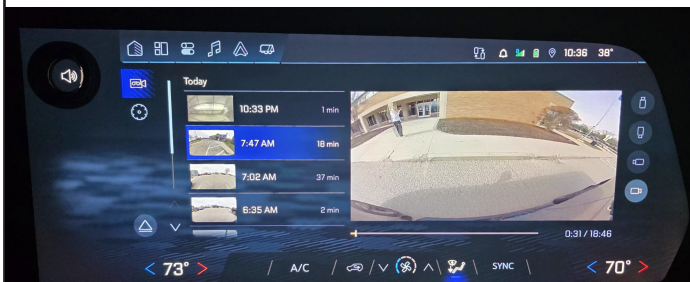

Note: THE SYSTEM DOES NOT RECORD AUDIO . This feature requires a customer-provide 64GB USB 3.0 drive (minimum) with 32 GB of space to operate.

Check your Owner's Manual for the location of this feature's USB port and any requirements for the USB drive.

OnStar® (UE1)

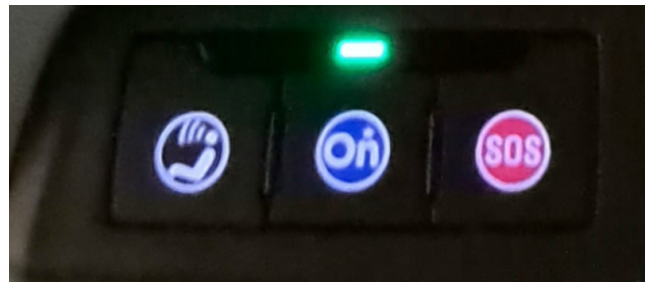

Voice Command Button

Blue OnStar® Button

Emergency Button

This vehicle is equipped with a comprehensive, in-vehicle system that can connect to a live OnStar® Advisor for Emergency, Security, Navigation, Connection, and Diagnostic Services. OnStar® services may require a paid subscription. OnStar® requires the vehicle battery and electrical system, cellular service, and GPS satellite signals to be available and operating. OnStar® acts as a link to existing public emergency service providers. OnStar® may collect information about you and your vehicle, including location information. See OnStar's® Terms and Conditions and Privacy Statement for more details including system limitations at www.OnStar.com (U.S.) or www.OnStar.ca (Canada). The OnStar® system status light is next to the OnStar® buttons. If the status light is:

- Solid Green: System is on.
- Flashing Green: On a call.
- Red: Indicates a problem.
- Off: System is off. Press the blue OnStar® button twice to speak with an OnStar® Advisor.

Press or call 1-888-4-ONSTAR

(1-888-466-7827) to speak to an Advisor.

Press to:

- Make a call, end a call, or answer an incoming call.
- Give OnStar® Hands-Free Calling voice commands.

NOTE: Do not activate OnStar® if you have no plans on using this feature

REAR SEAT REMINDER

The message REAR SEAT REMINDER LOOK IN REAR SEAT displays under certain conditions indicating there may be an item or passenger in the rear seat. Check before exiting the vehicle. This feature will activate when a second row door is opened while the vehicle is on or up to 10 minutes before the vehicle is turned on. There will be an alert when the vehicle is turned off. The alert does not directly detect objects in the rear seat; instead, under certain conditions, it detects when a rear door is opened and closed, indicating that there may be something in the rear seat.

The feature is active only once each time the vehicle is turned on and off, and will require reactivation by opening and closing the second row doors. There may be an alert even when there is nothing in the rear seat; for example, if a child entered the vehicle through the rear door and left the vehicle without the vehicle being shut off.

The feature can be turned on or off. Select Settings > Vehicle > Rear Seat Reminder > ON or OFF.

Does not detect people, animals or items. Always check rear seat before exiting.

STANDARD MECHANICAL FEATURES

SERVICE PARTS IDENTIFICATION LABEL

SPID Label Content Now Included with Certification Label. The Service Parts Identification (SPID) label, often located in the trunk or glovebox of a vehicle, lists a vehicle's VIN, RPO codes and other information that identify the content of the vehicle. Beginning with the 2018 model year, much of this information will be available through a QR code on the Certification label.



Software to read the QR code is commonly available for any Android, iPhone or Windows smartphone. Many basic applications can be downloaded for free. Tested QR code readers that are easy to use include NeoReader by NM LLC, inigma by 3GVision, QR Scanner by Honestly App, QR Droid by DroidLa and Bar-Code by PW2. GM does not recommend any particular software. Once the QR code is scanned, the vehicle information will appear in the following order: VIN, Model Year, Model, Build Month, Year, MOTORing Book, Vehicle Order Number, 3 Digit RPO Codes sorted alphanumerically, and the Paint Code (same code appears in the lower left of the QR code).

STABILITRAK CONTROL

The vehicle has a Traction Control System (TCS) and StabiliTrak/Electronic Stability Control (ESC) system.

These systems help limit wheel slip and assist the driver in maintaining control, especially on slippery road conditions.

TCS activates if it senses that any of the drive wheels are spinning or beginning to lose traction. When this happens, TCS applies the brakes to the spinning wheels and reduces propulsion system power to limit wheel spin.

StabiliTrak/ESC activates when the vehicle senses a difference between the intended path and the direction the vehicle is actually traveling.

StabiliTrak/ESC selectively applies braking pressure to any one of the vehicle brakes to assist the driver in keeping the vehicle on the intended path.

If TCS is limiting wheel spin when the accelerator pedal is pressed, the system will not turn off until the wheels stop spinning.

If cruise control is being used and TCS or StabiliTrak/ESC begins to limit wheel spin, cruise control will disengage. Cruise control may be turned back on when road conditions allow.

Both systems come on automatically when the vehicle is started and begins to move. The systems may be heard or felt while they are operating or while performing diagnostic checks. This is normal and does not mean there is a problem with the vehicle.

It is recommended to leave both systems on for normal driving conditions, but it may be necessary to turn TCS off if the vehicle gets stuck in sand, mud, ice, or snow. See "Turning the Systems Off and On" later in the Owners Manual.



PURSUIT MODE

The Pursuit Mode may activate when the vehicle detects continuous high-performance driving. This mode supports extended high demand driving such as law enforcement pursuits. Pursuit Mode modifies steering effort, accelerator and brake pedal tuning, and propulsion control.

Either the Traction Control System (TCS)/Electronic Stability Control (ESC) Light, the Electronic Stability Control (ESC) OFF Light, or both will display in the instrument cluster until Pursuit mode deactivates. The Traction Control System and StabiliTrak/Electronic Stability Control are still functional but operating at a modified level to support high-performance driving. See the "Warning Lights, Gages, and Indicators" section in the Owner's Manual for additional information on these lights.

(EVs Only) Pursuit mode may also limit propulsion power to help control energy use, manage heat, and maintain consistent performance.

Pursuit mode deactivates after high-performance driving is no longer detected, the vehicle remains idling for around an hour, or the vehicle is turned off and on. If Pursuit Mode is deactivated by turning the vehicle off and on again, vehicle performance and feel may vary until brakes and powertrain are fully cooled.

STANDARD ELECTRICAL FEATURES

UNIVERSAL VEHICLE MODULE (KGU)

Provides CAN Readability of selected messages utilizing SAE J1939 formatting. This gateway module offers 10-switchable inputs and outputs, and includes a GUI (Graphical User Interface) SW available to customize the UVM to specific customer needs. Provides access to key vehicle information (CAN Serial Data) and buffer between our Cybersecure vehicle architecture and the "dirty work" side. For instructional videos refer to <https://www.gmupfitter.com/instructional-videos/>

4 Preprogrammed Commanded Features (Specified Input Voltage Range)

- Automatic Vehicle Start
 - Input request commands under hood electrical center start up for up to 8 hours or Low power condition
- Shut Down Inhibit
 - Input request prevents under hood electrical center shutdown
- Increased Engine Idle
 - Input request commands engine idle to fixed RPM value
- Snow-Plow Support
 - Input request commands deactivation of conflicting active safety features
 - Input request headlamps to full dim status



10 input/outputs configurable through GUI. Allows extensive customization of output activation criteria. Outputs are high side drive by default. Configurations can be read/write and stored for multiple vehicles. Various operating parameters available to read only. Downloadable software to configure the UVM from GM Upfitter.com

UVM Application Examples:

- Police upfits that require under hood electrical center momentary start up feature to control the HVAC climate system for K9 vehicles.
- Large Fleet customers that use telematic equipment (Geotab) to monitor mileage and idle CAN bus messages for vehicle maintenance/service schedules.

UVM youtube instructional videos:

- Introduction to the UVM
<https://www.youtube.com/watch?v=c1p1q44QIfU>
- UVM Preset Features - Set-Up and Use
<https://www.youtube.com/watch?v=dGJM8IK7EA4>
- UVM Configuration Tool
<https://www.youtube.com/watch?v=fTDnJdIY1uk>

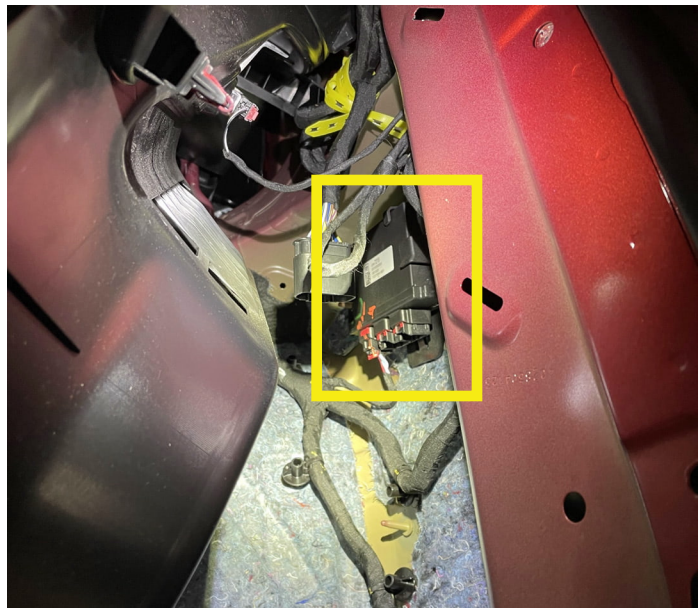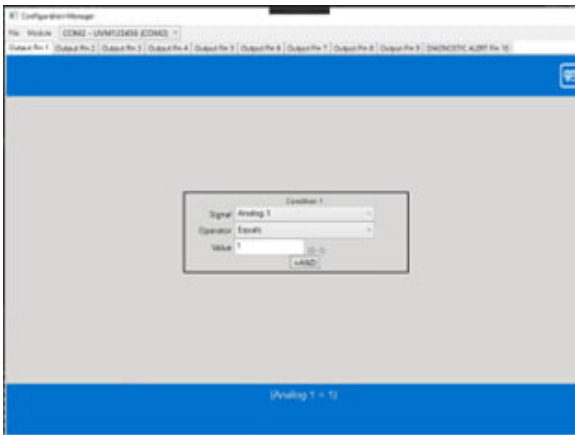

Module and user harness located right rear interior quarter panel.

STANDARD ELECTRICAL FEATURES

SURVEILLANCE MODE – SEO 5J3

The Blazer EV Police and Special Service Package has a Body Control Module (BCM) calibration which disables all automatic exterior and interior lighting.

When activated, with the exterior lamp control in the auto position, the exterior and interior lighting will be disabled or dimmed to a minimum federally regulated level.

For detailed technical information on activation of this feature, refer to the vehicle technical guide under the Body Builder Manuals section on www.gmupfitter.com.

RADIO MUTE FEATURE

A Radio Mute circuit (#10137) is provided to permit muting of the vehicle radio when an emergency vehicle radio is transmitting. It is the Gray/White blunt cut wire located between the front seats near the upfitter branch harness.

The following customer device electrical specifications must be met to avoid damage to the vehicle Exterior Lighting Module (ELM) input circuitry:

- No inductance allowed
- Maximum Load Capacitance: 600 nano-farads.
- Maximum Closed switch contact resistance: 20 ohms
- Minimum Open switch contact resistance: 100,000 ohms

EXTERIOR LAMPS EMERGENCY FLASHING SYSTEM

Standard 6J7 provides headlamp high beam flashing and rear lamps flashing via the Exterior Lighting Module (ELM). The exterior lamps flashing is activated by customer switching of ground circuits in the upfitter harness located between the front seats (CONSOL) in the rear cargo area (CARGO).

Headlamp high beam flashing is activated via connection of upfitter circuit 8863 to ground via customer switching. The headlamps and high beam indicator will flash alternately at 3 flashes per second. Rear lamps flashing is chosen by the customer to flash either Red-White alternately (Brake lamps and Reverse Lamps, grounding upfitter circuit 8865) or Red-Red alternately (Left and Right Brake Lamps, grounding upfitter circuit 8864). The rear lamps flash rate is 3 per second. Depressing the Brake pedal will override the brake lamp flashing and placing the transmission in Reverse will override the reverse lamps flashing.

During daylight conditions, the Daytime Running Lamps (DRL) are automatically turned off whenever the Lamp Flashing System is activated. During night time conditions the low beam headlamps and tail lamps automatically turn on while the high beams flash. Turning on the high beam headlamps will override high beam flashing. If Option 9G8 is present the low beam head lamps and tail lamps must be manually activated. The Center Mounted Stop Lamp will operate only when the service brakes are applied.

NOTES:

- Wiring connection or splice changes are to be removed before the vehicle is returned to civilian use.
- For wiring diagram see Wiring Section

PROTECTED IDLE

The Protected Idle Feature allows the vehicle to remain idling but will not allow the transmission to be shifted from Park without a valid key fob.

ACTIVATING PROTECTED IDLE

Preconditions (All preconditions must be met.)

Vehicle is in PROPULSION (running) state.

Vehicle is in Parked State.

Vehicle speed is less than 4 kilometers per hour.

Valid key fob is present.

Activation

Put vehicle in park, remove foot from brake.

Vehicle Feedback.

Upon activation of Protected Idle, the Digital Information Center (DIC) will display the following:

"Protected Idle ON take your key to secure vehicle."

If any of the above preconditions are not met while activating Protected Idle, DIC will display the message: "Protected Idle Unavailable"

DEACTIVATING PROTECTED IDLE

Valid key fob is present

Press brake pedal and shift out of Park OR

Press and hold the Cruise Cancel Switch for 2 seconds OR

Press the Ignition Switch with the Brake Pedal pressed.

DIC messages will turn off, indicating Protected Idle is no longer activated.

CONDITIONS UNDER WHICH THE PROTECTED IDLE WILL TURN OFF AND VEHICLE WILL TRANSITION TO OFF POWER MODE

Brake pedal pressed without a valid key fob present OR

Cruise Cancel Switch depressed without a valid key fob present OR

Ignition Switch pressed without a valid key fob present OR

With a valid key fob present, ignition switch is pressed and brake pedal is not pressed (the system treats this action as a customer request to turn OFF the vehicle.) OR

Engine stalls. Horn chirps occur. OR

Low State of Charge (SOC) condition. Horn chirps occur.

CONDITIONS UNDER WHICH THE PROTECTED IDLE WILL TURN OFF AND VEHICLE WILL TRANSITION TO RUN POWER MODE.

If the Shift Lock mechanism is defeated and shifted Out of Park while the Protected Idle is active, the vehicle will transition to the RUN power mode (the engine will be turned off) and Protected Idle will be deactivated and Horn chirps occur. DIC messages will turn off indicating Protected Idle is inactive.

ALWAYS PROPERLY SUPERVISE A VEHICLE WHEN PEOPLE OR ANIMALS ARE INSIDE WHEN THE ENGINE IS IDLING.

OPTIONAL FEATURES



OPTIONAL FRONT AND REAR WHELEN CORNER LIGHTING

Shown with equipment from independent suppliers not covered by the GM New Vehicle Limited Warranty
GM is not responsible for the safety or quality of independent supplier alterations.

OPTIONAL FEATURES



T53 REAR LIFTGATE WARNING LIGHTS




REAR CARGO AREA (SHOWN WITH FALSE CARGO FLOOR) REMOVED.

Shown with equipment from independent suppliers not covered by the GM New Vehicle Limited Warranty. GM is not responsible for the safety or quality of independent supplier alterations.

OPTIONAL FEATURES

7X3

LED SPOTLAMP

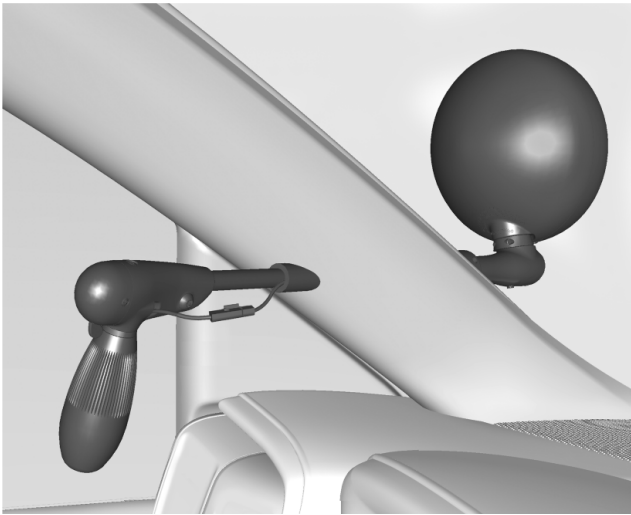

15 cm High Intensity LED spotlamp mounted to left A pillar. The lamp is protected by a 15 amp fuse in the under hood Battery Disconnect Unit (BDU). See your dealer or www.gmupfitter.com for lamp replacement procedures

6C7

AUXILIARY DOME LAMP



Auxiliary dome lamp is located on the headliner to the rear of the overhead console and is switched at the rear lamp base. Lamp is wired separately standard dome lamps with red and white LED bulbs.

SDE

TRAILER HITCH



Removable 2" (Class 2.) receiver. Requires (V92) trailering provisions and (VLG) trailer hitch closeout panel.

VLG

TRAILER HITCH TRIM BEZEL




Requires (SDE) removable trailer hitch." at bottom.

OPTIONAL FEATURES

6N5


SWITCHES – REAR WINDOW INOPERATIVE

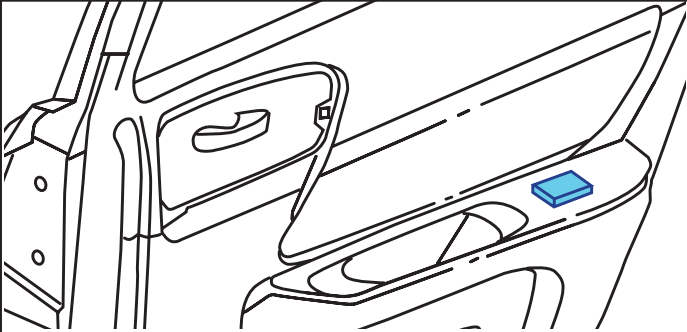

Calibration for rear windows to operate from drivers position only.
Rear door window switches are inoperable.
Rear door power regulators are operable only from driver position switches.
Rear door window lockout switch remains illuminated in all positions when equipped with this feature.

6N6

REAR DOOR LOCKS AND HANDLES INOPERATIVE

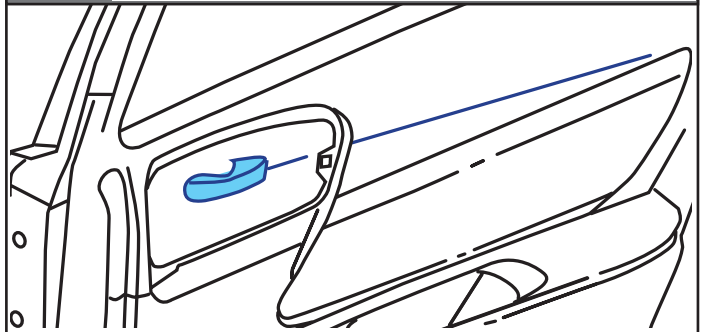

Rear door locking rods are disabled.
Rear door locks are inoperable at rear doors, but operate from driver position. Inside rear door handles are disconnected.
Rear doors can only be opened from the outside.

6E2

FLEET KEY & REMOTE FOB

6E8

The Fleet Key allows the mechanical key to operate an entire fleet of vehicle locks and allows an unlimited number of remote keys to be paired for Keyless Open / Keyless Start and Protected Idle feature. Use of this on other fleet keyed-a-like vehicles will be limited to locking or unlocking the driver's door by pressing the exterior door handle button and starting the vehicle once inside. Note that a vehicle is only capable of recognizing the last 8 remote keys programmed for remote button functions. Adding a 9th remote key will bump fob #1 button functionality until it is reprogrammed, Adding remote #1 back into the infotainment screen will bump fob #2 remote button functionality, etc. There are no limitations to the amount of fleet keys that will be recognized for Keyless Open/ Keyless Start of the vehicle. Purchasing extra KEY/FOBS and programming is a customer's responsibility. See your dealer for additional information regarding availability of more KEY/FOBS. Requires AMF. Includes Fleet Common Key AU7.

AMF

PACKAGE OF FOUR UNPROGRAMMED REMOTE KEYS

AMF allows for an unlimited number of REMOTE KEYS to be paired for keyless start and keyless open, only the last 8 REMOTE KEYS learned will have the REMOTE KEYS buttons work for that vehicle. The programming procedure requires that TWO* previously learned REMOTE KEYS be present in the vehicle as well as the new unprogrammed fobs.

PROGRAMMING PROCEDURE :

1. Two* previously paired Remote Key must be in the vehicle.
Place the Remote Key you want to pair in the transmitter pocket.
2. On the infotainment home screen, select;
Vehicle>Settings> Remote Lock, Unlock, Star > Remote Key Pairing.
3. Follow the on-screen instructions.



*Note: Vehicles equipped with option (6E2) or (6E8) will only require ONE previously paired remote keys to program additional fobs.

9G8

DRL & AHC DISABLED

Daytime Running Lamps (DRL) and Automatic Headlamp Control (AHC) are deleted. Also disables automatic interior courtesy lighting. Main light sensor now works for day and night mode to allow dimming at any-time. See your dealer to restore the DRL and AHC to normal operation. With 9G8, the instrument cluster displays are dimmable only when the exterior lamp control is in the parking lamp or headlamp position.

UTQ

THEFT DETERRENT DISABLE

Theft-deterrent system content is disabled.
The alarm and horn become non-functional in an attempt of theft to the vehicle (recommended for vehicles utilizing 6E2 or 6E8 key codes).

WIRING

Original Equipment Alterations: Limited warranty does not cover any damage or failure resulting from modification or alteration to the vehicle's original equipment as manufactured or assembled by General Motors. Examples of the types of alterations that would not be covered include: installation or use of any non-GM part, accessory, materials, or the cutting, welding or disconnecting of the vehicle's original equipment parts and components. Any upfit device¹ connected to the open ended blunt cut circuits should be fuse protected per the "Wire Gage Table" on page 45

K219 - Lighting Control Module

DRZ - A10 - Inside Rear view Mirror

A11 - Radio

E7L - Rear License Plate Lamp –Left

E7R - Rear License Plate Lamp –Right

E73L - Rear Fascia Signal Lamp –Left A90 Logic

E73R - Rear Fascia Signal Lamp – Right A90 Logic

E6 - High Mount Stop Lamp

R44 - Radio AM Antenna Signal Filter Module –

KEY FOR ACRONYMS AND TERMS

CONSOL = SPACE BETWEEN FRONT SEATS

CARGO = CARGO AREA LEFT SIDE

IP RY CTR = IP RELAY CENTER ABOVE AND TO RIGHT OF BRAKE PEDAL

EBCM = ELECTRIC BRAKE CONTROL MODULE

PPM = 4000 PULSES PER MILE SPEED SIGNAL

ACCY = ACCESSORY

SURVEILLANCE = ALL AUTOMATIC LIGHTING DISABLED

WHEN ACTIVATED PARK ENABLE = PARK RELAY ACTIVATED

CHML = CENTER HIGH MOUNTED STOP LAMP; ON WHEN BRAKES APPLIED

BCM = BODY CONTROL MODULE

ELM = EXTERIOR LIGHT MODULE

WDO = WINDOW

SYNC = SYNCHRONIZED

WIRING


GM Option Code	Wire Gage [mm ²]	Console Connector	Cargo Connector Terminal	Wire Color Terminal	Circuit Name /Circuit #
6J3	0.8	13533797 Terminal 2	13533797 Terminal 2	Brown	8855-Police Front Grille Light 1 Power
6J3	0.8	13533797 Terminal 3	13533797 x 1 Terminal 3	Brown/Blue	8856-Police Front Grille Light 2 Power
6J3	0.8	13533797 Terminal 4	13533797 x 1 Terminal 4	Black/Brown	8857-Police Front Grille Light Return
6J3	0.8	13533797 x 1 Terminal 5	13533797 x 1 Terminal 5	White	8858-Police Front Grille Light Synchronization
6J3	0.8	13533797 x 1 Terminal 6	13533797 x 1 Terminal 6	Brown/Yellow	8859-Police Front Grille Light Steady Burn Activation
6J3	0.8	13533797 x 1 Terminal 7	13533797 x 1 Terminal 7	White/Black	8860-Police Front Grille Spare 1
6J3	1.5	13533797 x 1 Terminal 36	13533797 x 1 Terminal 36	Green/White	8861-Police Front Grille Speaker +
6J3	1.5	13533797 x 1 Terminal 37	13533797 x 1 Terminal 37	Blue/White	8862-Police Front Grille Speaker -
6J7	0.35	13533797 x 1 Terminal 8	13533797 x 1 Terminal 8	Green	8863-Police High Beam Alternate Flash Enable.
5L0	0.35	13533797 x 1 Terminal 9	13533797 x 1 Terminal 9	Blue/Green	8864-Police Tail Lamp Red/Red Alternate Flash Enable.
5J9	0.35	13533797 x 1 Terminal 10	13533797 x 1 Terminal 10	Gray/Green	8865-Police Tail Lamp Red/White Alternate Flash Enable.
T53	0.8	X1 - 13533797 Terminal 11	X1 - 13533797 Terminal 11	White	8867-Police Liftgate Strobe Synch
T53	0.35	X1 - 13533797 Terminal 12	X1 - 13533797 Terminal 12	Violet/Yellow	8868-Police Liftgate Strobe Enable 1
T66 left front	0.75	None	X1 - 13544146 - Terminal 1	Violet	8870-Police Left Mirror Light Power
T66 left front	0.75	None	X1 - 13544146 - Terminal 2	Black/Violet	8871-Police Left Mirror Light Return
T66 left front	0.75	None	X1 - 13544146 - Terminal 3	White/Violet	8872-Police Left Mirror Light Synchronization
T66 left front	0.75	None	X1 - 13544146 - Terminal 4	Blue/Violet	8873-Police Left Mirror Light Steady Burn
T66 left front	0.75	None	X1 - 13544146 - Terminal 5	Yellow/Violet	8874-Police Left Mirror Light Flash Enable
T66 left rear	0.75	None	X1 - 13544146 - Terminal 6	Green	8875-Police Left Rear Window Light Power
T66 left rear	0.75	None	X1 - 13544146 - Terminal 7	Black/Green	8876-Police Left Rear Window Light Return
T66 left rear	0.75	None	X1 - 13544146 - Terminal 8	White/Green	8877-Police Left Rear Window Light Synchronization
T66 left rear	0.75	None	X1 - 13544146 - Terminal 9	Blue/Green	8878-Police Right Rear Window Light Steady Burn
T66 left rear	0.75	None	X1 - 13544146 - Terminal 10	Yellow/Green	8879-Police Right Rear Window Light Flash Enable
T66 right front	0.75	None	X1 - 13544146 - Terminal 11	Gray	8880-Police Right Mirror Light Power
T66 right front	0.75	None	X1 - 13544146 - Terminal 12	Black/Gray	8881-Police Right Mirror Light Return
T66 right front	0.75	None	X1 - 13544146 - Terminal 13	White/Gray	8882-Police Right Mirror Light Synchronization
T66 right front	0.75	None	X1 - 13544146 - Terminal 14	Blue/Gray	8883-Police Right Mirror Light Steady Burn
T66 right front	0.75	None	X1 - 13544146 - Terminal 15	Yellow/Gray	8884-Police Right Mirror Light Flash Enable
T66 right rear	0.75	None	X1 - 13544146 - Terminal 16	Brown	8885-Police Right Rear Window Light Power
T66 right rear	0.75	None	X1 - 13544146 - Terminal 17	Black/Brown	8886-Police Right Rear Window Light Return
T66 right rear	0.75	None	X1 - 13544146 - Terminal 18	White/Brown	8887-Police Right Rear Window Light Synchronization
T66 right rear	0.75	None	X1 - 13544146 - Terminal 19	Blue/Brown	8888-Police Right Rear Window Light Steady Burn
T66 right rear	0.75	None	X1 - 13544146 - Terminal 20	Yellow/Brown	8889-Police Right Rear Window Light Flash Enable
UT7 / 6J1	5	13533168 x1 for pwr and grd term 2	NA	Black	7150-Ground (71) Police
6J1 , Police Provisions (Rear)	5	13533168		RD/GN	742-Primary Fused Battery Positive Voltage (7)
6J8/9/G/E	1	None	X1 - 13533797 Terminal 29	Blue	8890-Police Front Corner Light Power
6J8/9/G/E	1	None	X1 - 13533797 Terminal 31	Blue/White	8891-Police Corner Strobe Synchronization
6J8/9/G/E	1	None	X1 - 13533797 Terminal 38	Green	8892-Police Rear Corner Light Power
6J8/9/G/E	1	None	X1 - 13533797 Terminal 34	Violet	8893-Police Front Corner Stone Power
6J8/9/G/E	1	None	X1 - 13533797 Terminal 30	BN/WH	8915
6J8/9/G/E	1	None	X1 - 13533797 Terminal 35	Yellow	8894-Police Rear Corner Strobe Power
WX7	0.5	NA	NA	See K2 Tahoe wire colors	201
WX7	0.5	NA	NA	See K2 Tahoe wire colors	118
WX7	0.5	NA	NA	See K2 Tahoe wire colors	200
WX7	0.5	NA	NA	See K2 Tahoe wire colors	117
WX7	0.5	NA	NA	See K2 Tahoe wire colors	199
WX7	0.5	NA	NA	See K2 Tahoe wire colors	116
WX7	0.5	NA	NA	See K2 Tahoe wire colors	46
WX7	0.5	NA	NA	See K2 Tahoe wire colors	115
T53	0.8	NA	NA	Violet	8866-Police Liftgate Strobe Power
T53	0.8	NA	NA	Black	7650-Ground (76) Police
T53	0.35	NA	NA	Violet/Green	8869-Police Liftgate Strobe Rear On OFF
7X3	0.75			RD/GN	10240-Secondary Fused Battery Positive Voltage (102) Police
7X3	0.75			Black	7750-Ground (77) Police
7X3	0.75			RD/GY	10340-Secondary Fused Battery Positive Voltage (103) Police
7X3	0.75			Black	7850-Ground (78) Police
6C7 Aux. dome lamp	0.75			D/BU	10140-Secondary Fused Battery Positive Voltage (101) Police
6C7 Aux. dome lamp	0.75			Black	7550-Ground (75) Police
6J4	0.35			BN/WH	Circuit 28

WIRING

GM Option Code	Wire Gage [mm ²]	Console Connector Terminal	Cargo Connector Terminal	Wire Color	Circuit Name /Circuit #
Police Provisions, console area	0.5	X1 - 13533797 Terminal 28	NA	Blue/Yellow	8895-Police Relay 1 Control
Police Provisions, console area	1	X1 13533797 Terminal 32	NA	RD/GN	8911-Police Select Supply Voltage 1
Police Provisions, console area	0.5	X1 - 13533797 Terminal 29	NA	Green/Yellow	8896-Police Relay 2 Control
Police Provisions, console area	1	13533797 Terminal 33	NA	RD/GY	8912-Police Select Supply Voltage 2
Police Provisions, console area	10	NA	13533168 x1 for pwr and grd	RD/VT	842-Primary Fused Battery Positive Voltage (8)
6J1 , Police Provisions, console area	10	NA	13533168 x1 for pwr and grd	Black	7350-Ground (73) Police
6J1 , Police Provisions, console area	0.5	X1 - 13533797 Terminal 13	X1 - 13533797 Terminal 13		Circuit 817
6J1 , Police Provisions, console area	0.5	X1 - 13533797 Terminal 14	X1 - 13533797 Terminal 14		Circuit 2801
6J1 , Police Provisions, console area	0.5	X1 - 13533797 Terminal 15	X1 - 13533797 Terminal 15		4939-Run/Crank Ignition 1 Voltage (49)
6J1 , Police Provisions, console area	0.35	X1 - 13533797 Terminal 16	X1 - 13533797 Terminal 16		Circuit 8917
6J1 , Police Provisions, console are	0.35	X1 - 13533797 Terminal 18	X1 - 13533797 Terminal 18		Circuit 6821
6J1 , Police Provisions, console area	0.5	X1 - 13533797 Terminal 19	X1 - 13533797 Terminal 19		Circuit 820
6J1 , Police Provisions, console area	0.5	X1 - 13533797 Terminal 20	X1 - 13533797 Terminal 20		Circuit 5813
6J1 , Police Provisions (Rear)	0.5	NA	X1 - 13533797 Terminal 21	Gray/Yellow	8897-Police Relay 3 Control
8907-Police Select Fuse Supply Voltage 3	2.5	NA	X1 13533797 Terminal 1	RD/WH	8913- Select fuse supply voltage
8898 6J1 , Police Provisions (Rear)	0.5	NA	X1 - 13533797 Terminal 32	Violet/Yellow	8898-Police Relay 4 Control
8914-Police Select Fuse Supply Voltage 4	2.5	NA	X1 13533797 Terminal 17	RD/YE	8914- Select fuse supply voltage
Steering wheel switches	0.35	X1 - 13533797 Terminal 22	X1 - 13533797 Terminal 22	BN/GY	8021-Police Microphone Enable
Steering wheel switches	0.35	X1 - 13533797 Terminal 23	X1 - 13533797 Terminal 23	Grey/Violet	8022-Police Roof Lamp Control
Radio mic.	0.5	X1 - 13533797 Terminal 24	X1 - 13533797 Terminal 24	Black	7450-Ground (74) Police
Radio mic.	0.5	X1 - 13533797 Terminal 25	X1 - 13533797 Terminal 25	Blue/White	8899-Police Microphone Data
Radio mic.	0.5	X1 - 13533797 Terminal 26	X1 - 13533797 Terminal 26	Blue/Violet	8900-Police Microphone Input
Dimmer function for Instrument Panel	0.8	X1 - 13533797 Terminal 27	X1 - 13533797 Terminal 27	YE	Circuit 6817

WIRING

XP2 UPFITTER WIRING HARNESS

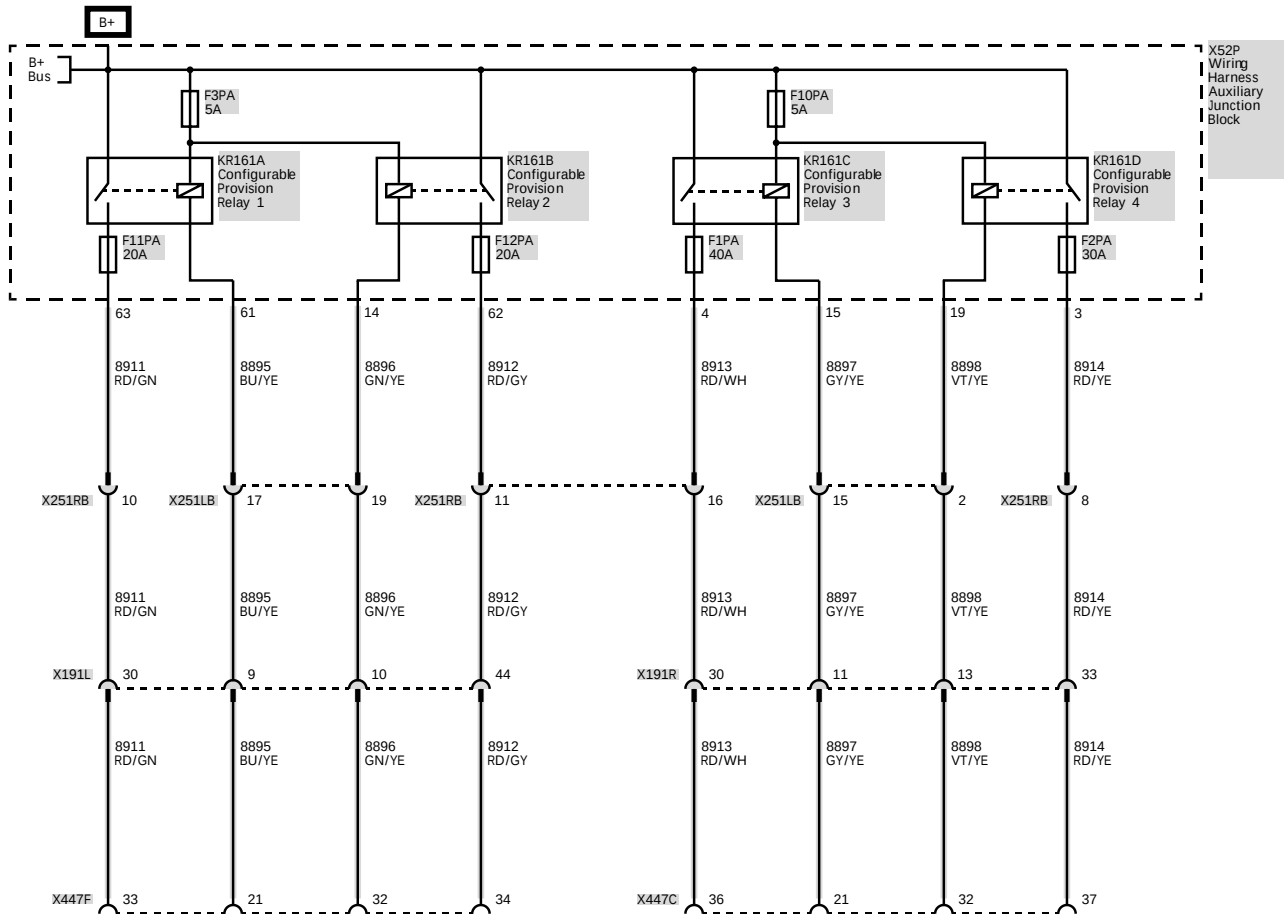


CONNECTOR BETWEEN FRONT SEATS

CONNECTOR IN REAR CARGO AREA




Located under console

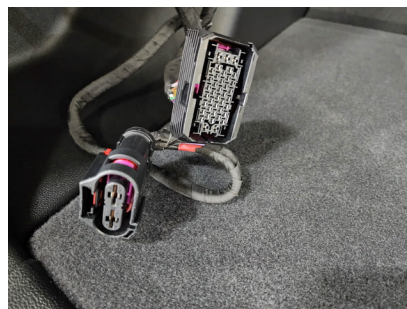

Located behind left rear cargo trim

WIRING


MAIN FUSE POWER, ACCESSORY RUN, VEHICLE SPEED*

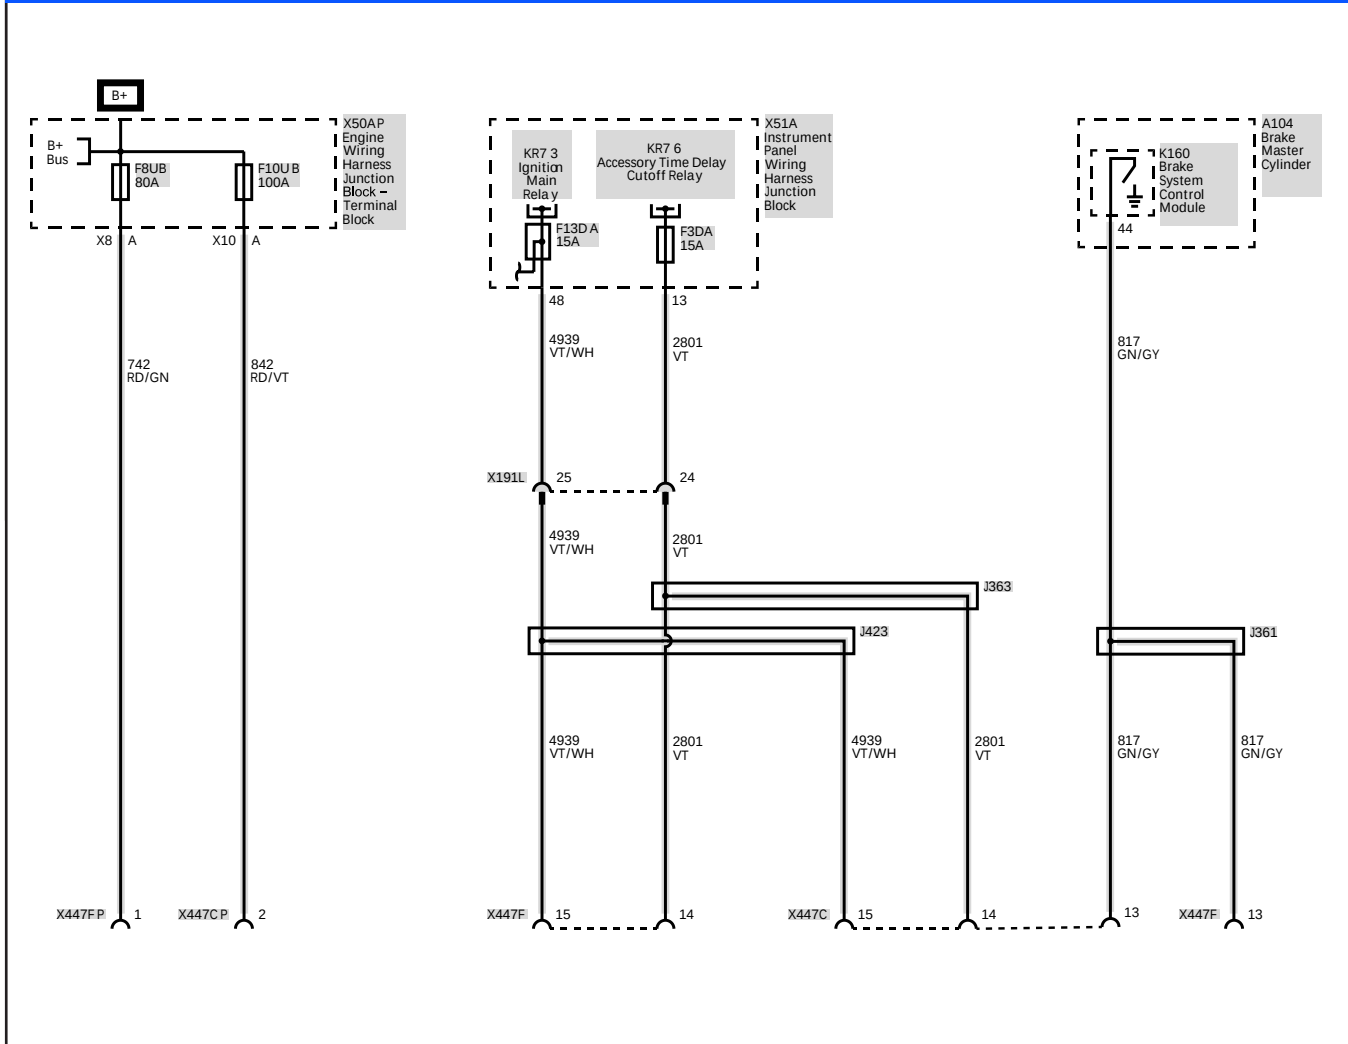

* Speed Signal located in front row 40-way connector harness, cavity 13, GN/GY wire. Also available in rear cargo harness

WIRING


KGU UNIVERSAL VEHICLE MODULE

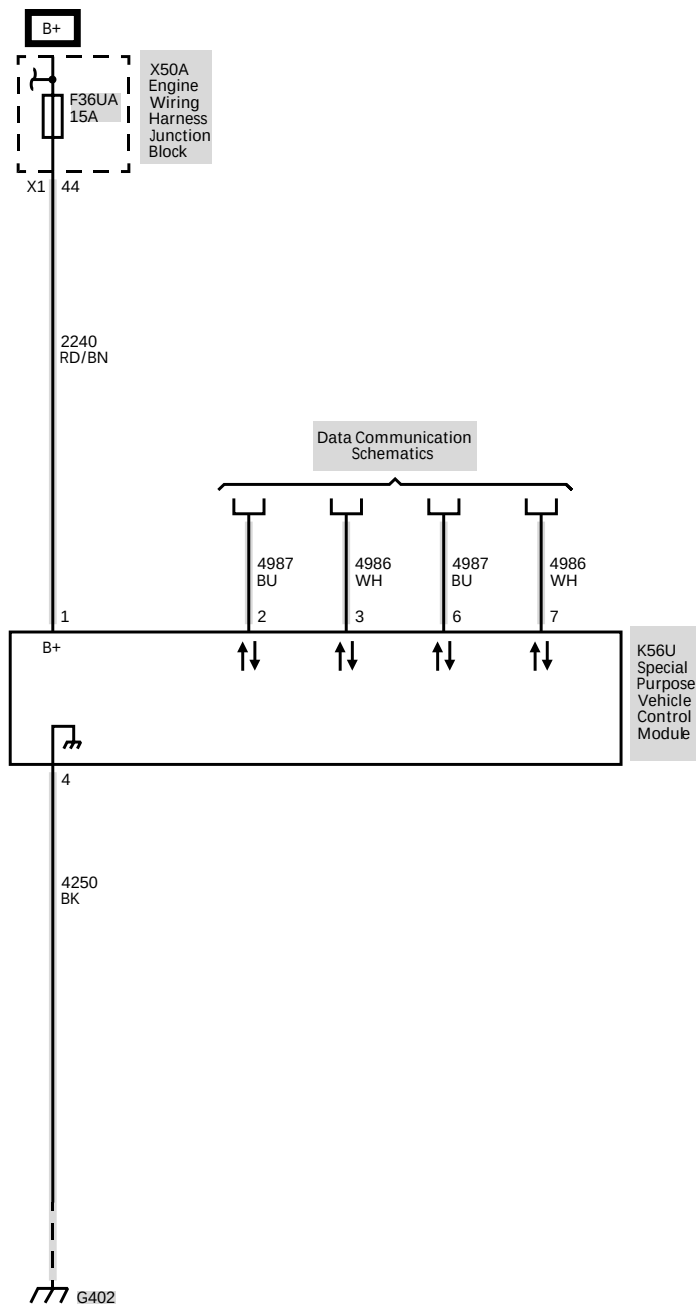

For instructional videos refer to https://www.gmupfitter.com/wp-content/uploads/2025/02/UI-Bulletin_203-b-UVM-1.pdf


WIRING

REPURPOSED STEERING WHEEL SWITCHES

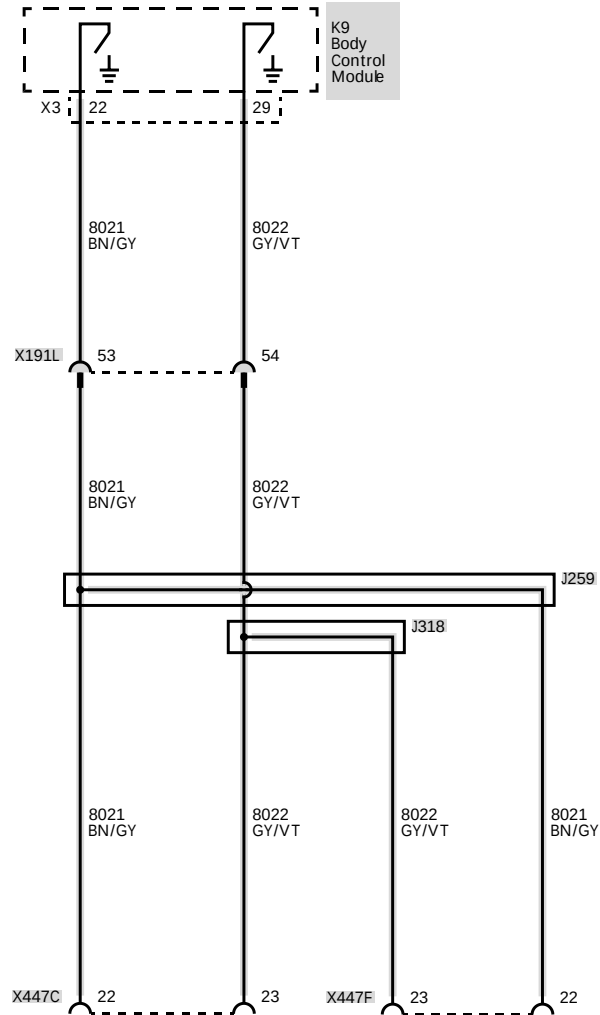


WIRING

BCM SIGNAL PROVISIONS

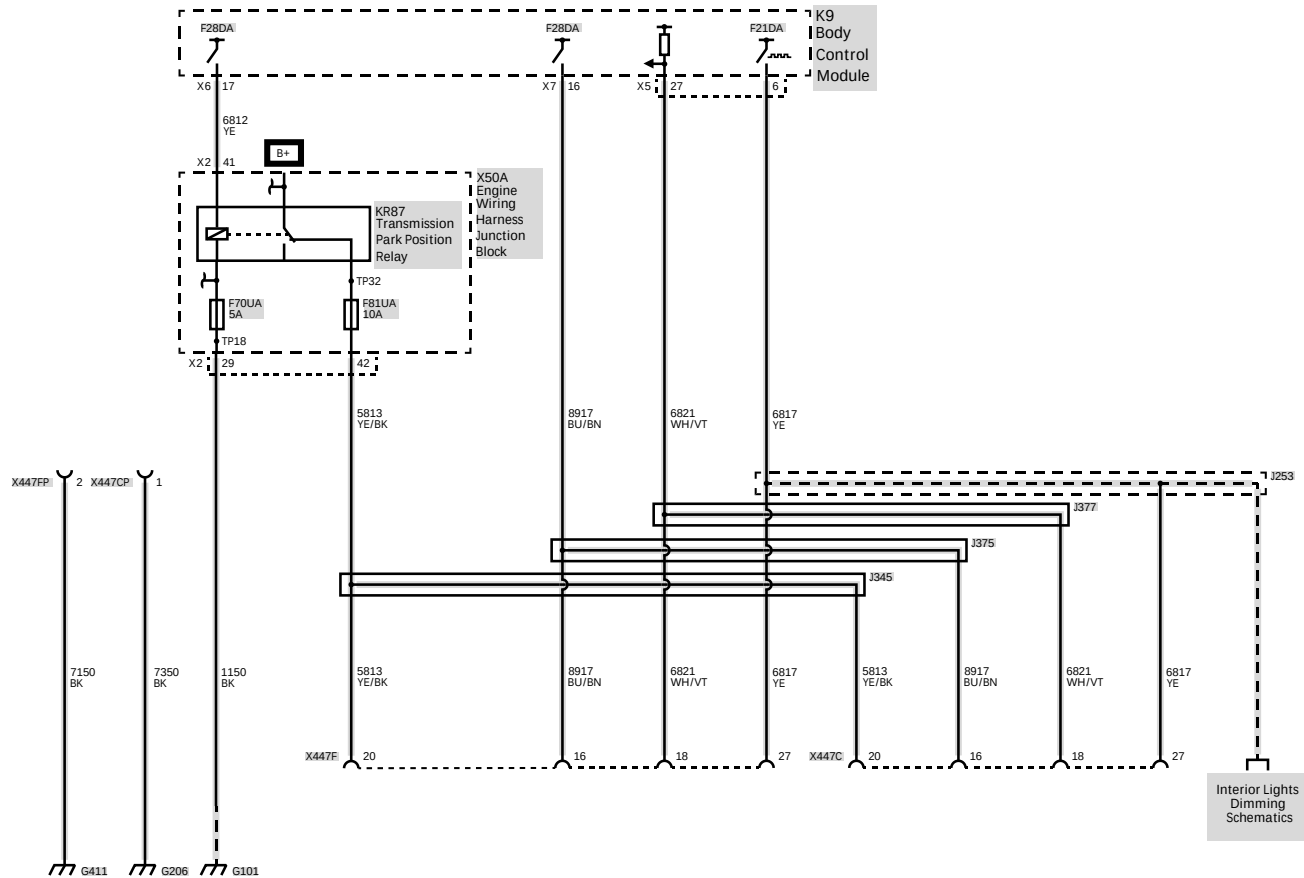


WIRING

RADIO MICROPHONE PROVISIONS

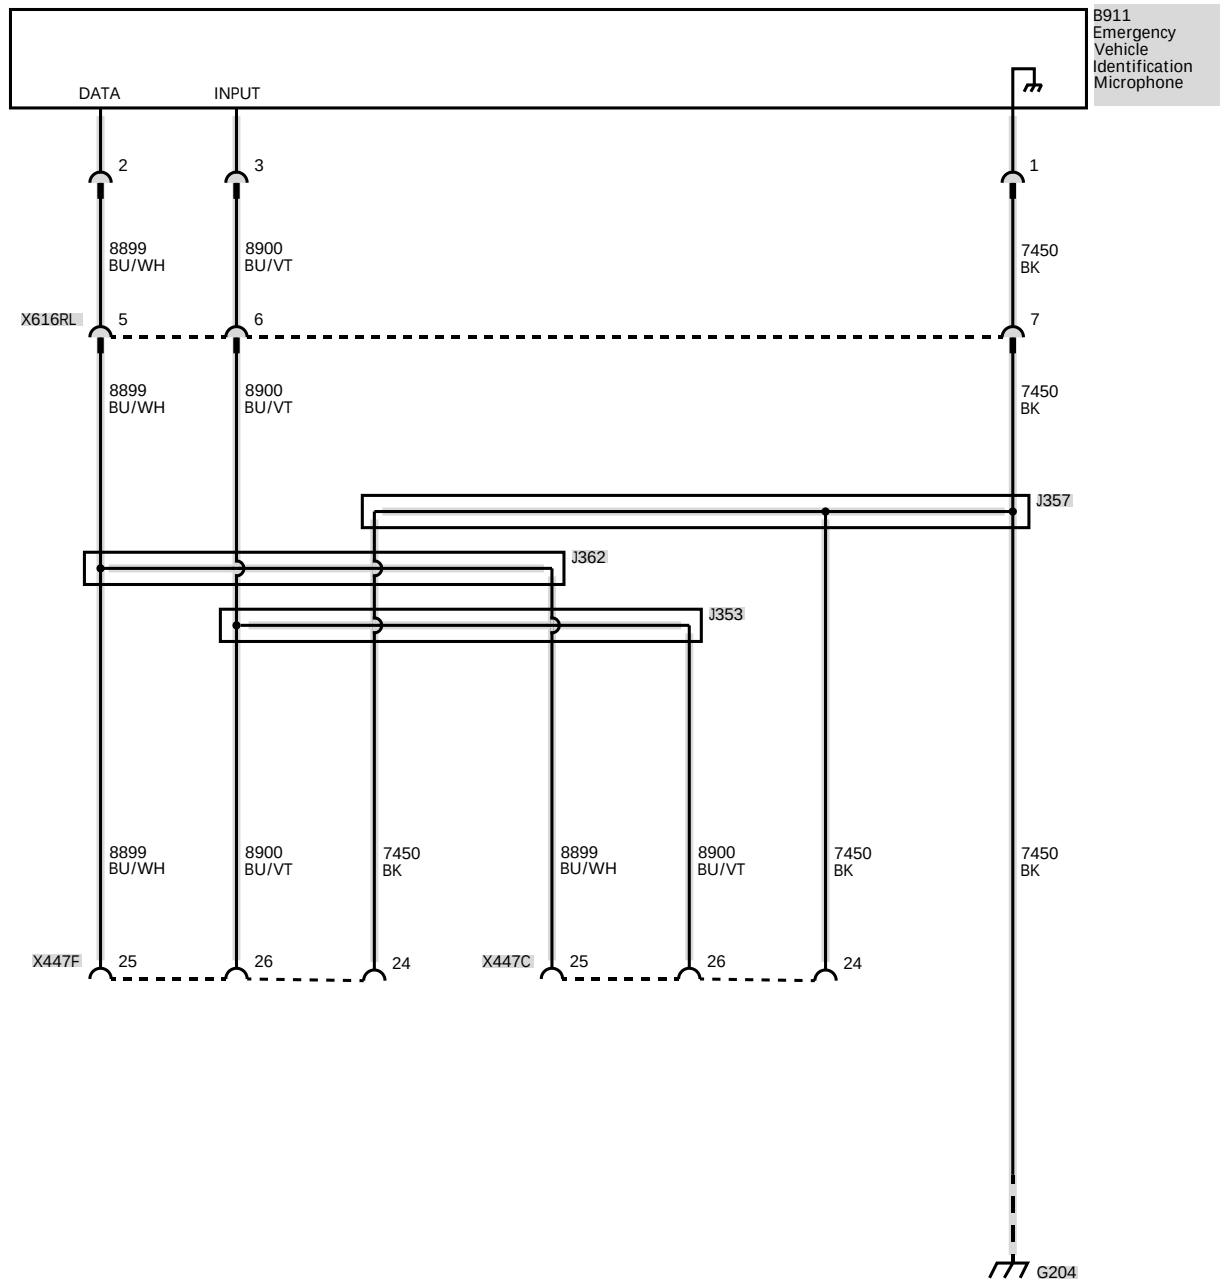


WIRING

6JE / 6JG / 6J8 / 6J9 EMERGENCY VEHICLE CORNER STROBE LIGHTS FRONT

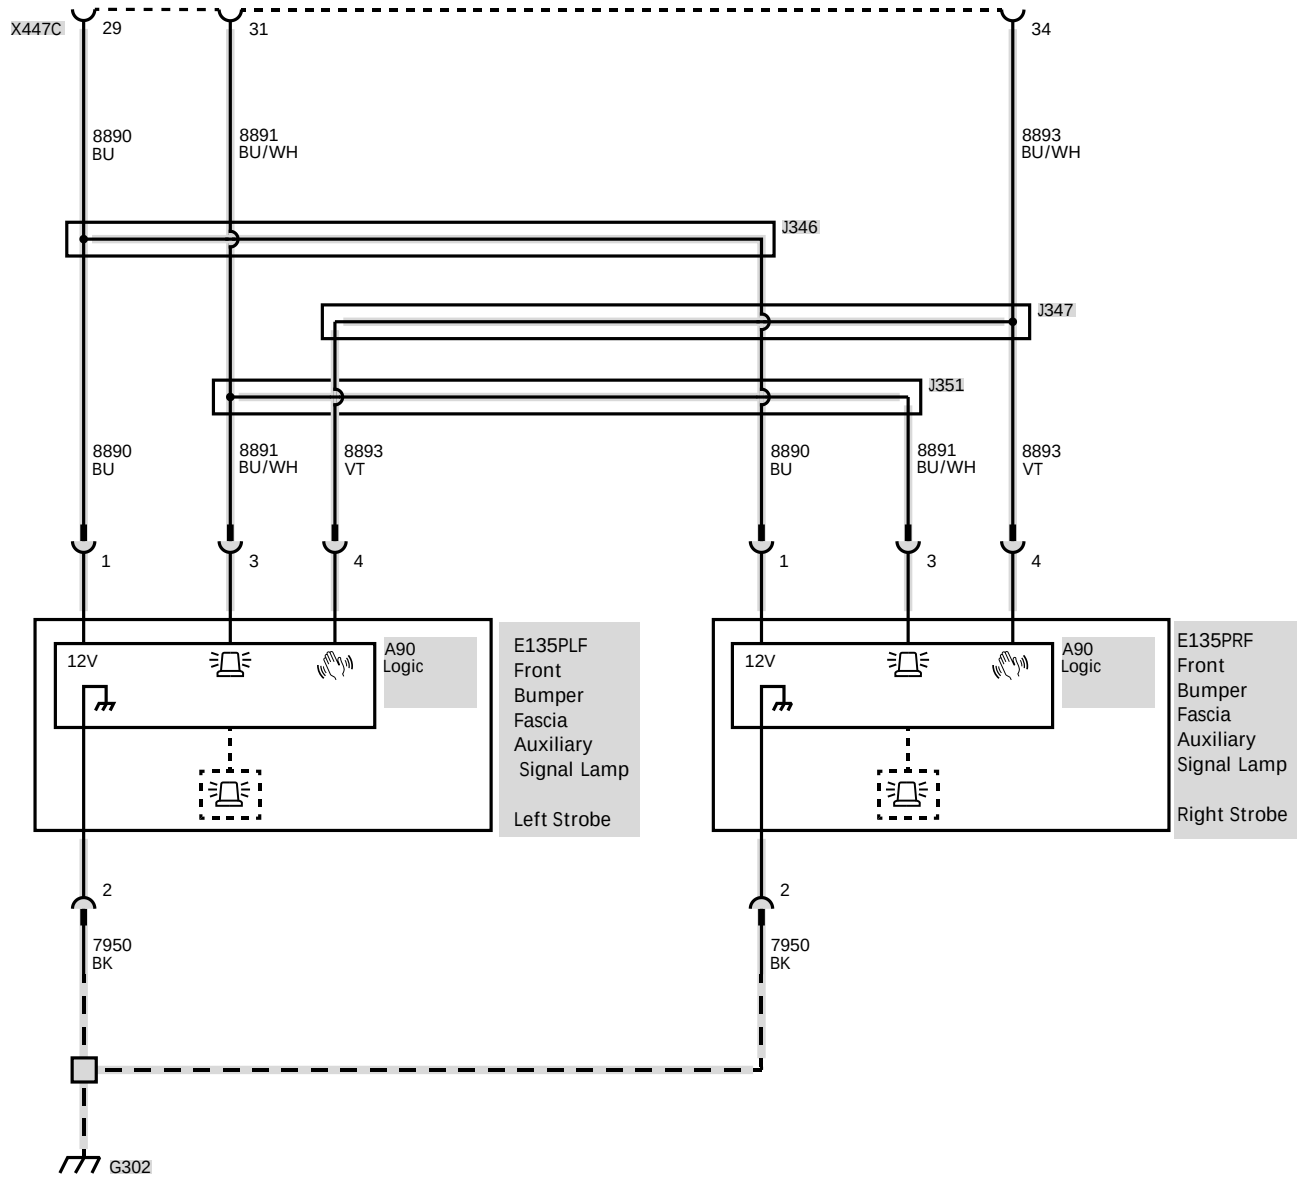


WIRING

6JE / 6JG / 6J8 / 6J9
EMERGENCY VEHICLE CORNER STROBE LIGHTS REAR

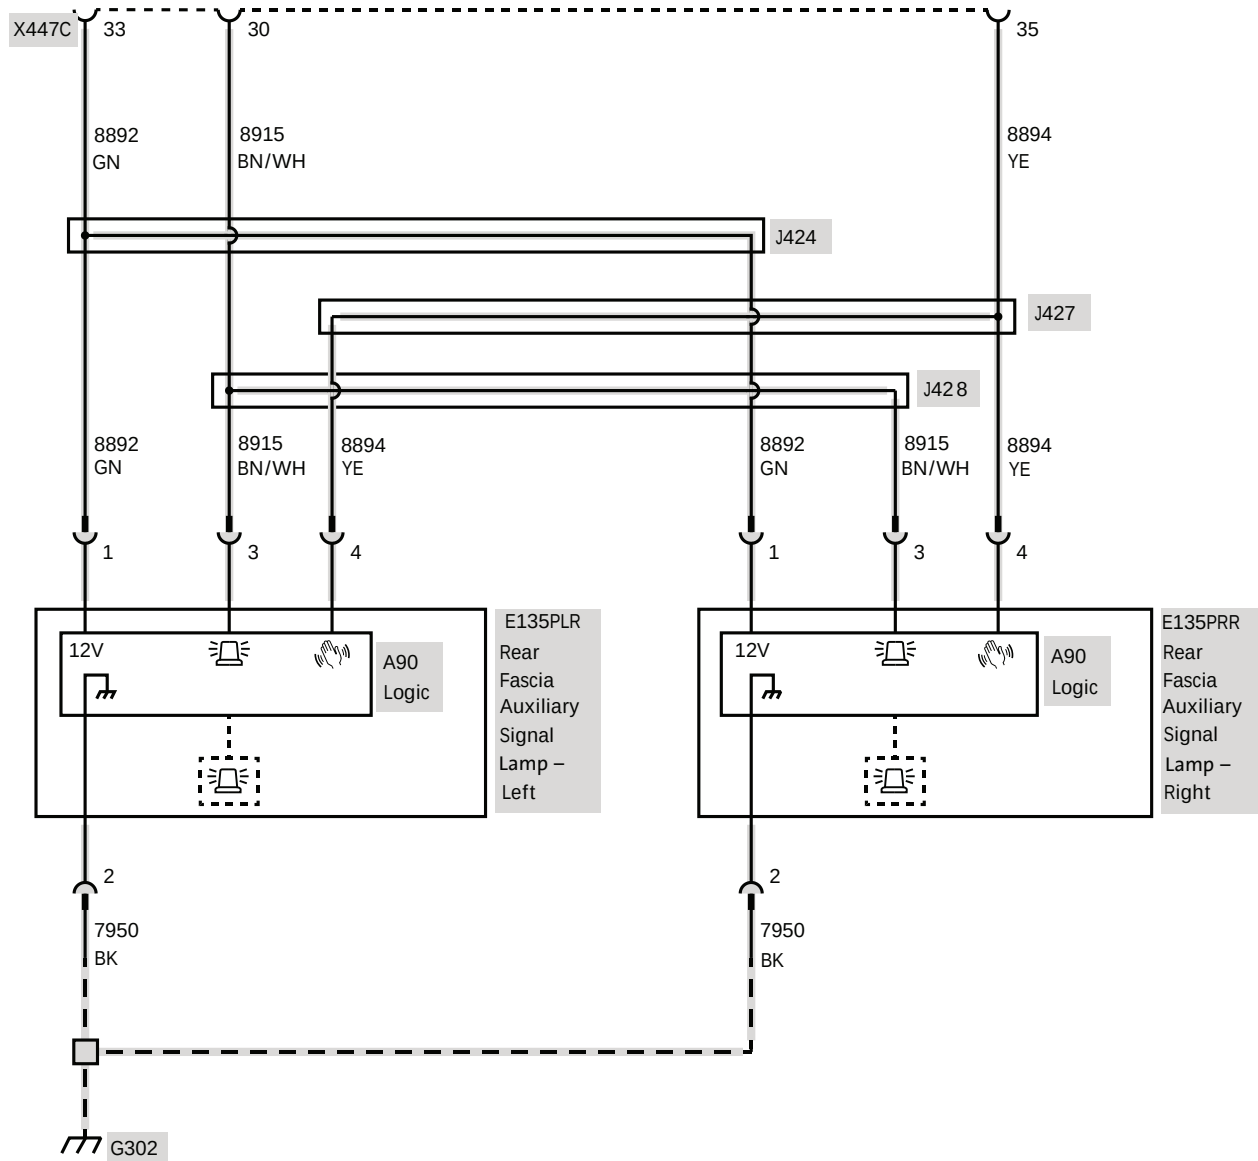


OPTIONAL WIRING

6J3 - GRILLE LAMPS AND SIREN SPEAKER PROVISIONS

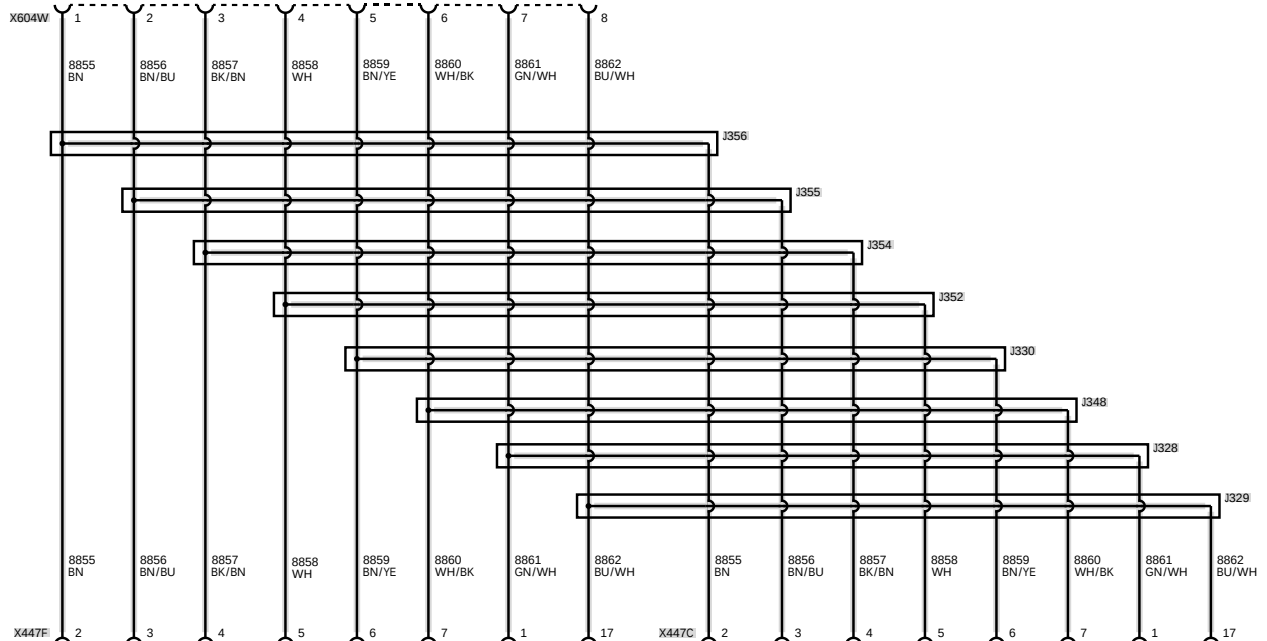


FRONT MIRROR AND REAR WINDOW FLASHER PROVISIONS

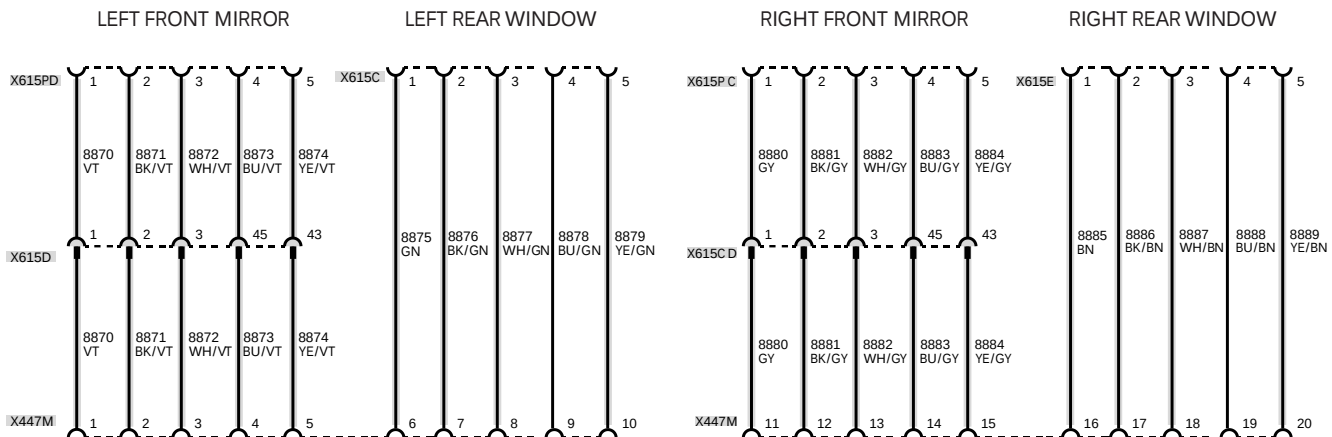


OPTIONAL WIRING

6J7, 5LO & 5J9 - HEADLAMPS AND REAR LAMPS FLASHING SYSTEM PROVISIONS

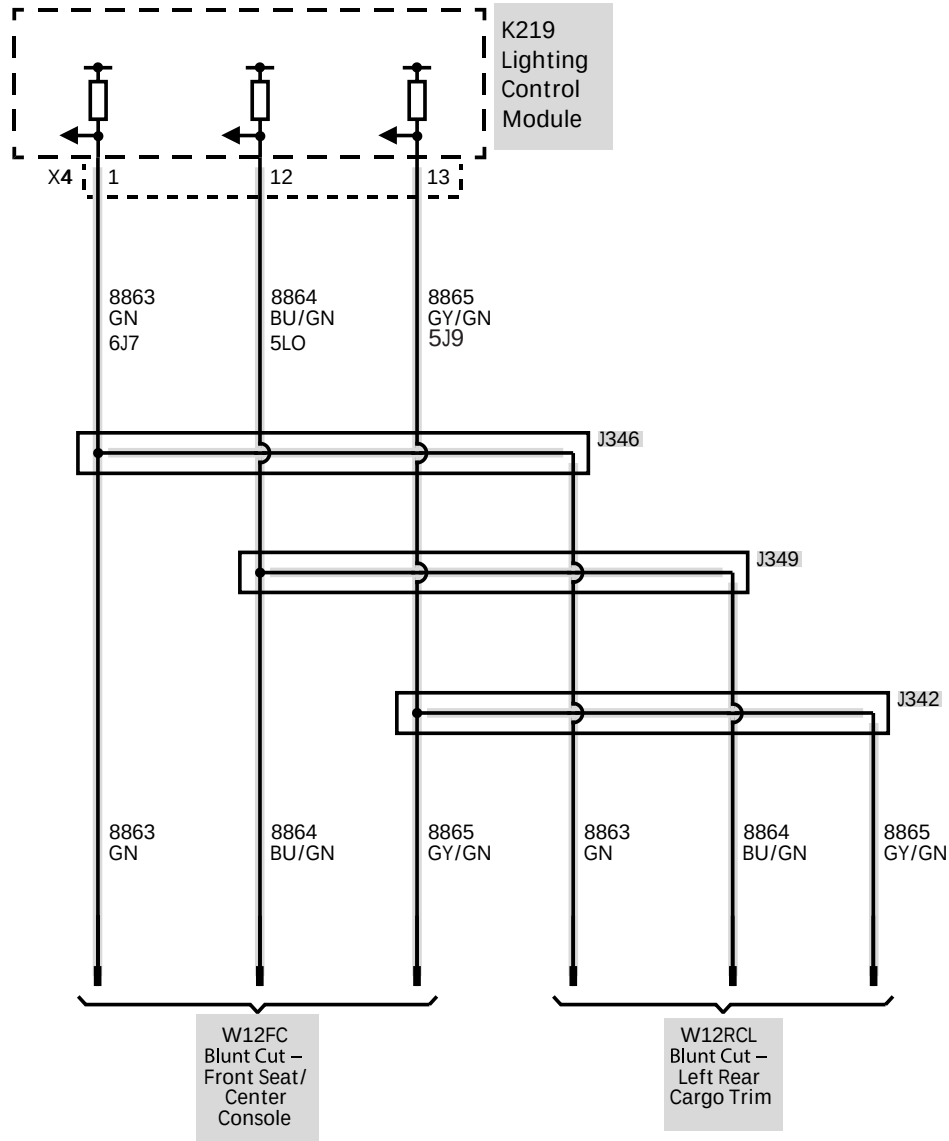


OPTIONAL WIRING

WX7 FRONT DOOR SPEAKERS PROVISIONS

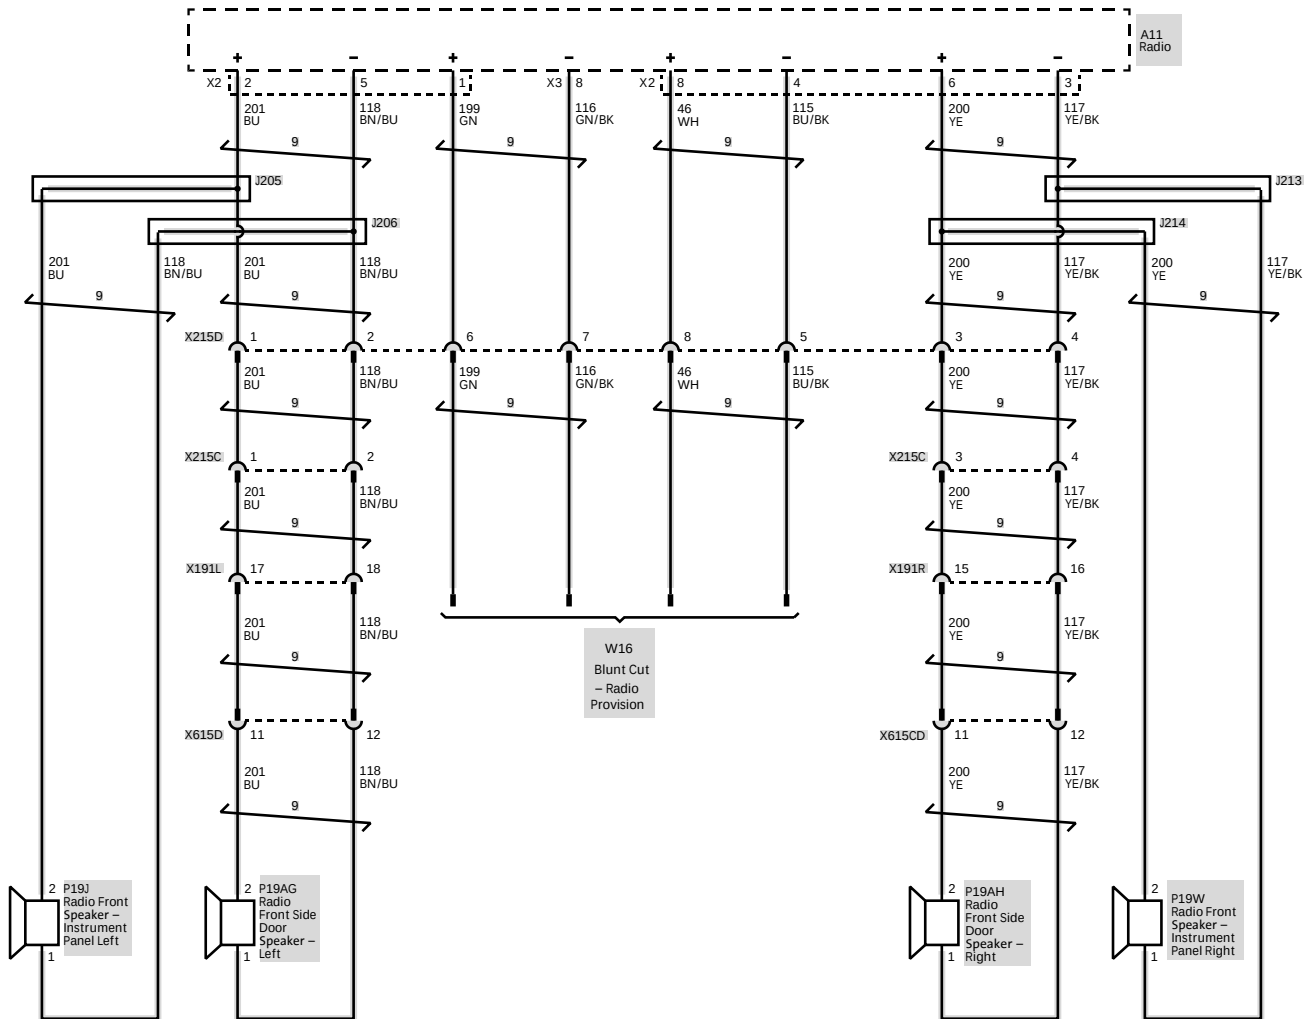


OPTIONAL WIRING

6J4 - HORN AND SIREN CONTROL PROVISION

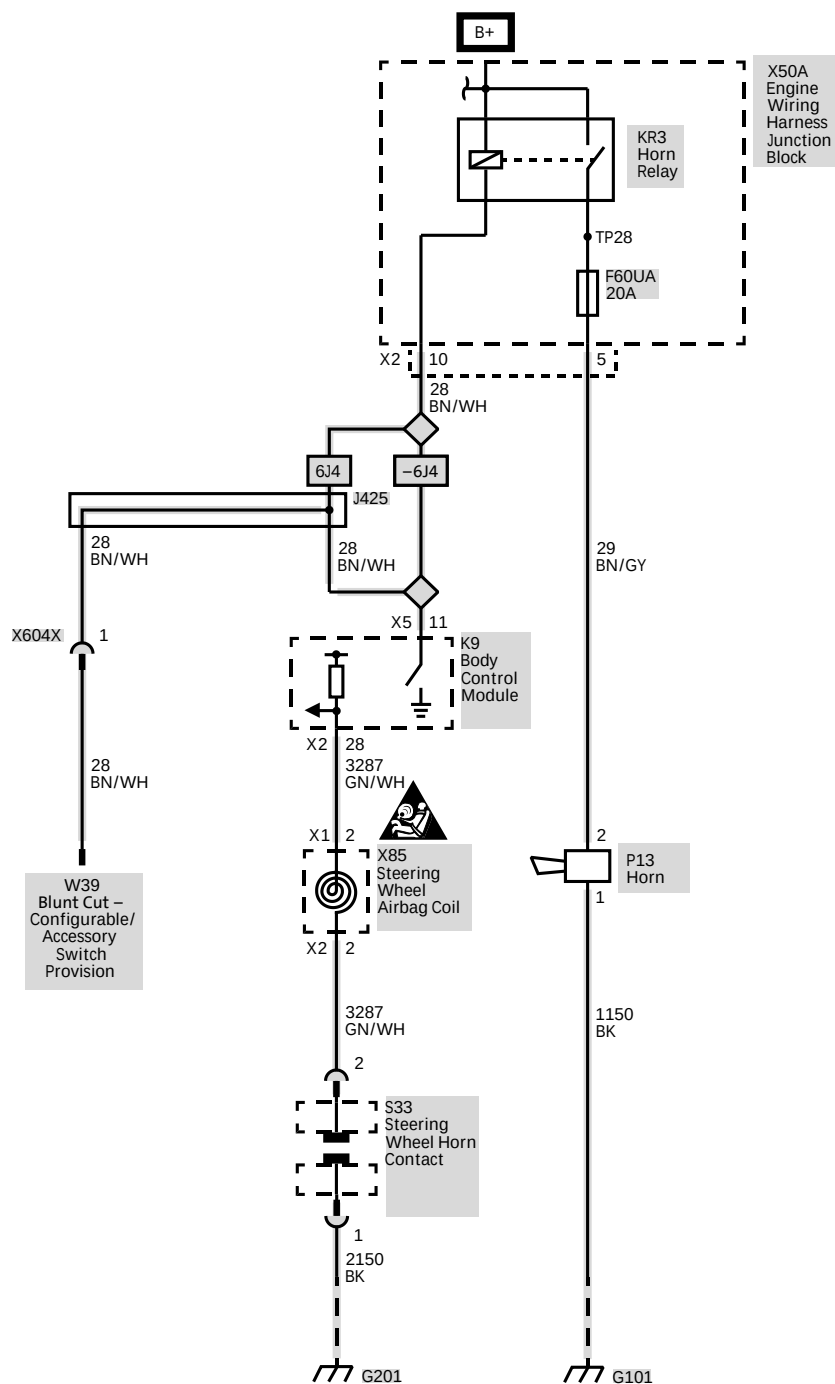


OPTIONAL WIRING

T53 – LIFTGATE WARNING LAMPS & 6C7 AUXILIARY DOME LAMP

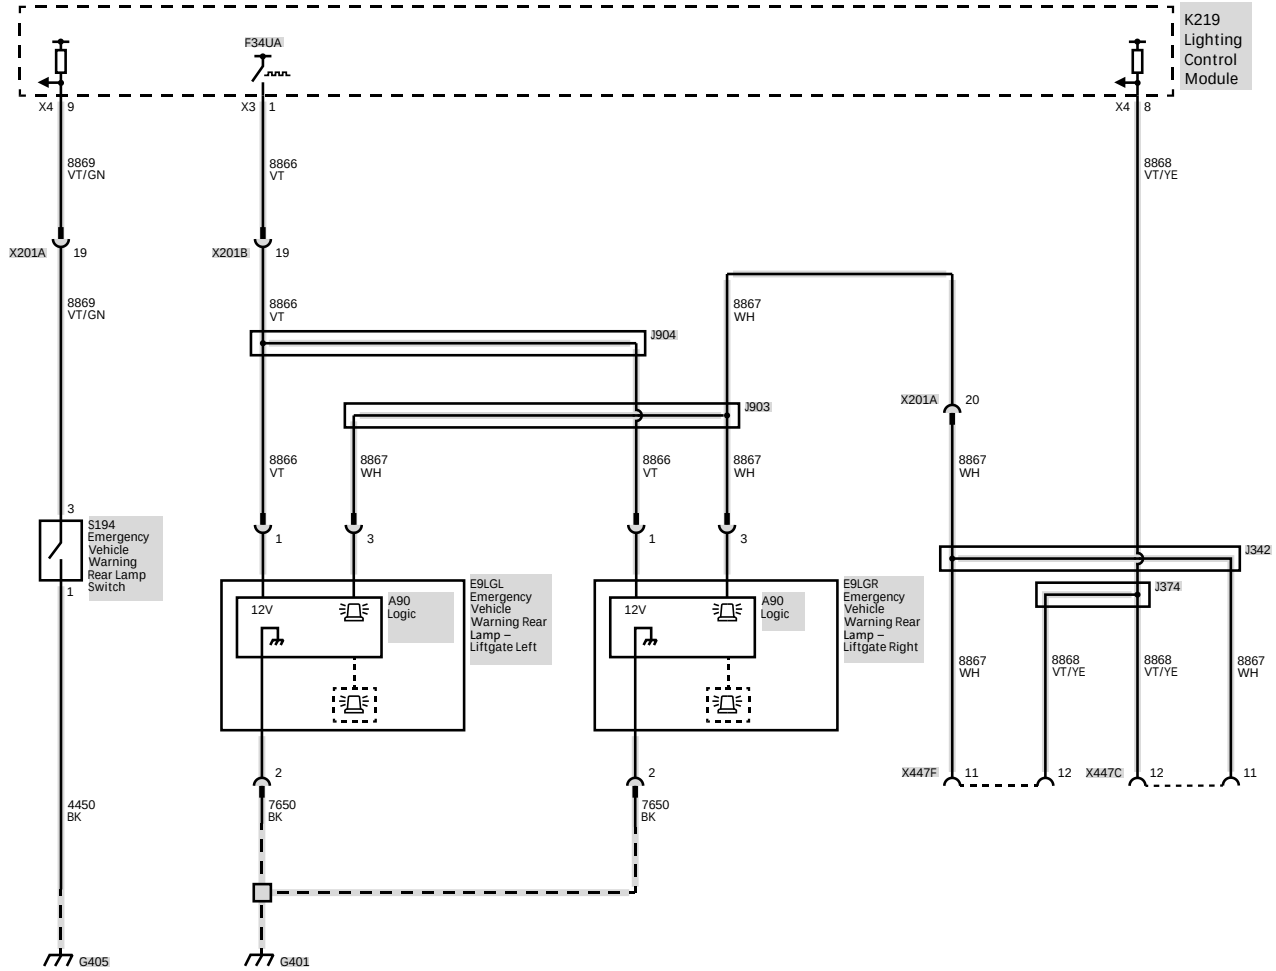


OPTIONAL WIRING

7X3 LED SPOT LAMPS & 6C7 AUXILIARY DOME LAMP

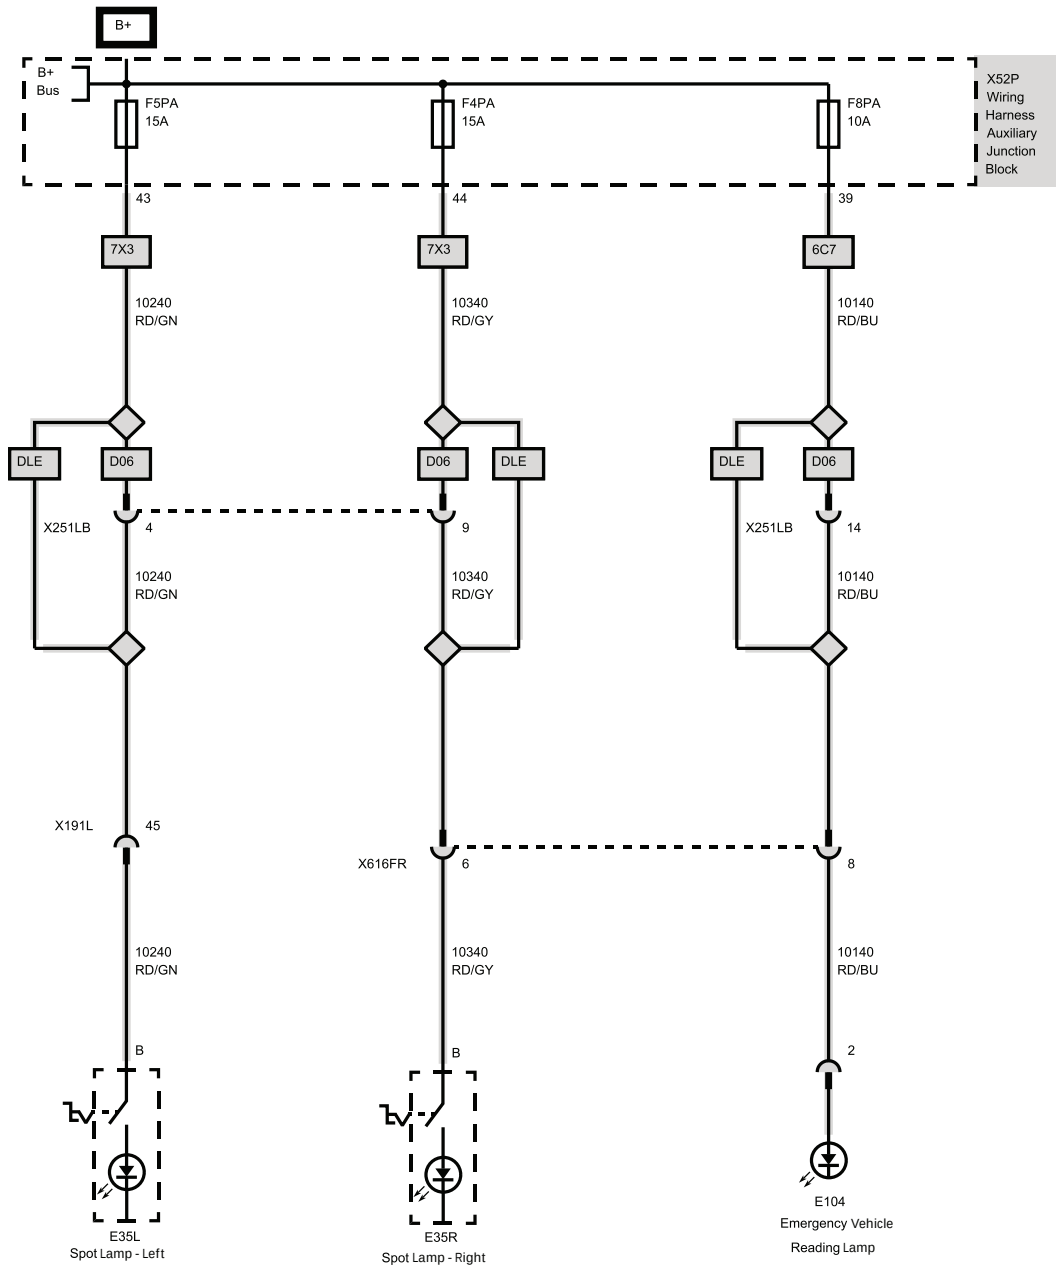

NO DRILL / NO CUT ZONES

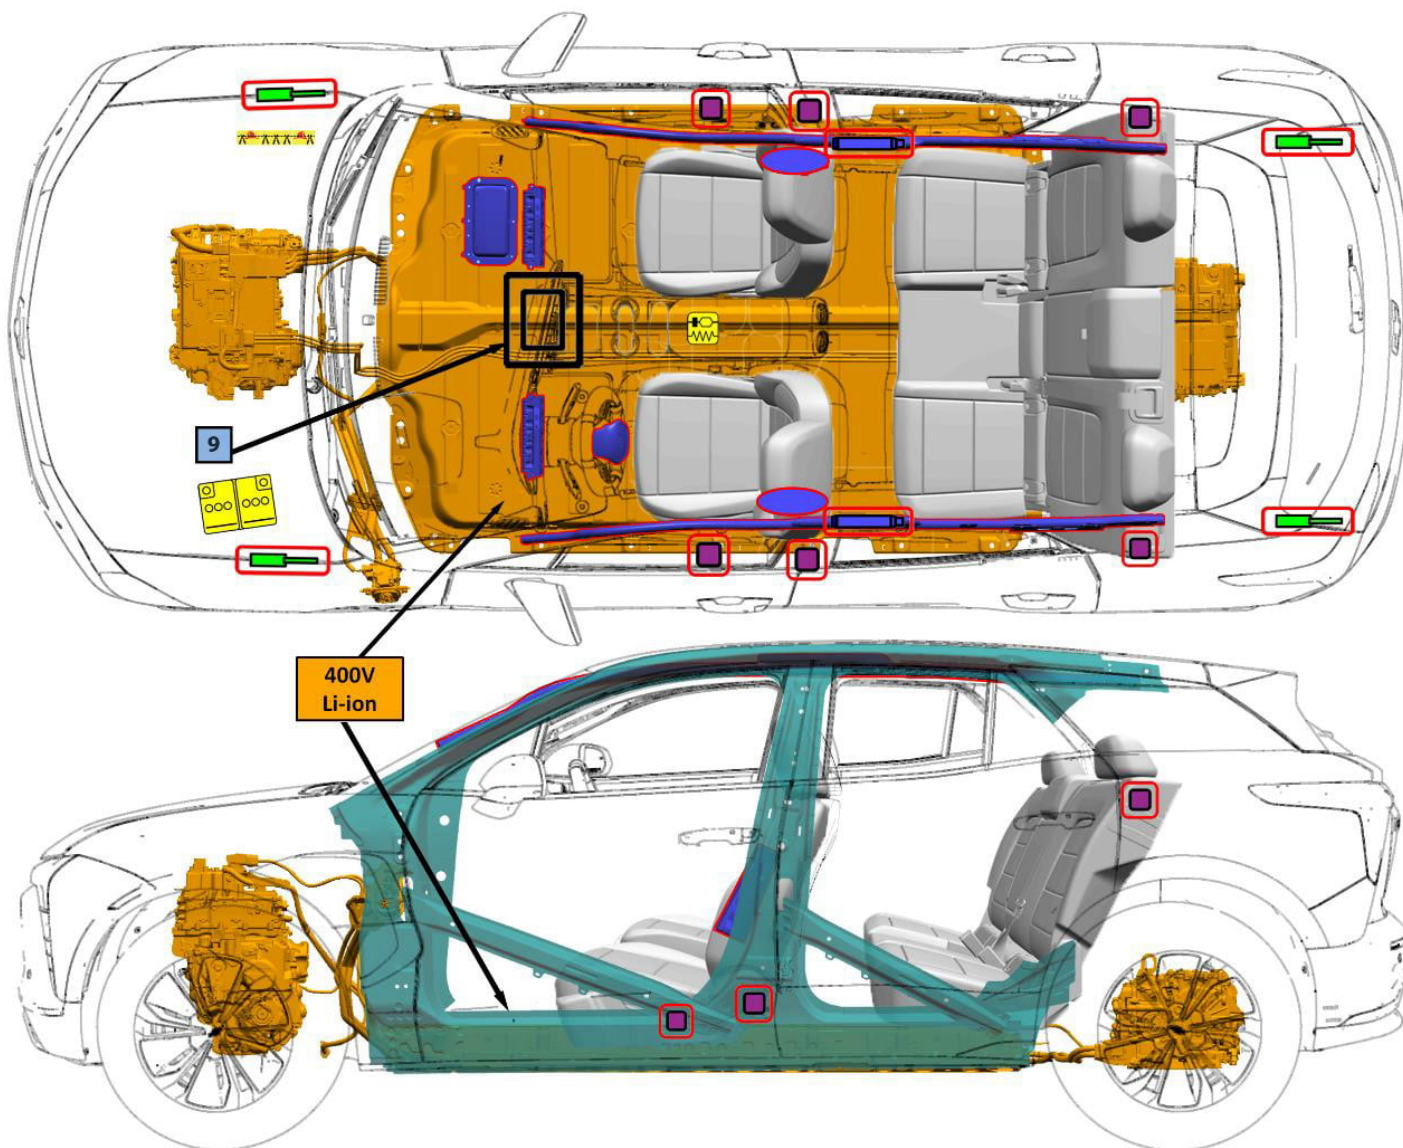


WARNING - DO NOT CUT ANY ORANGE COLORED HIGH VOLTAGE CABLES


LEGEND				
 Airbag	 Stored gas inflator	 Seat belt pretensioner	 SRS control unit	 Gas strut/ Preloaded spring
 High strength zone	 Zone requiring special attention	 Battery low voltage	 High voltage battery pack	 High voltage power cable component
 Cable Cut Location				

INFLATED AIRBAG DIMENSIONS


FRONTAL AIRBAGS

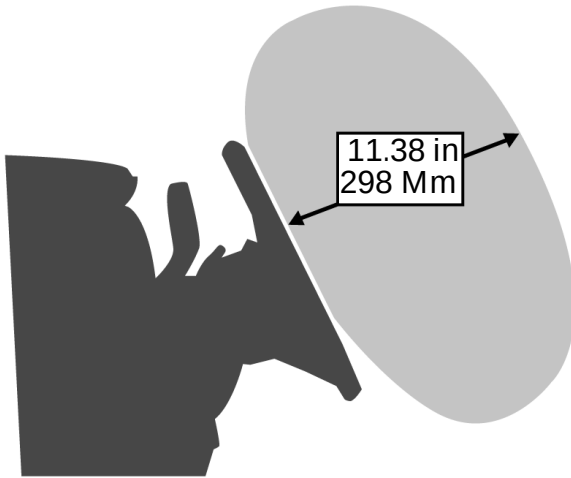


STEERING WHEEL DRIVER AIRBAG
VIEW FROM DRIVER SIDE

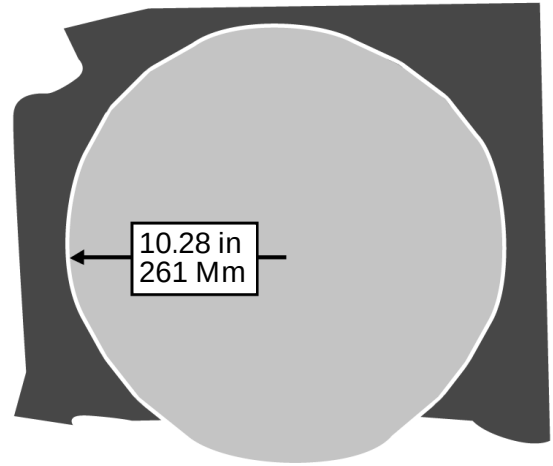

STEERING WHEEL DRIVER AIRBAG
VIEW FROM DRIVER SIDE

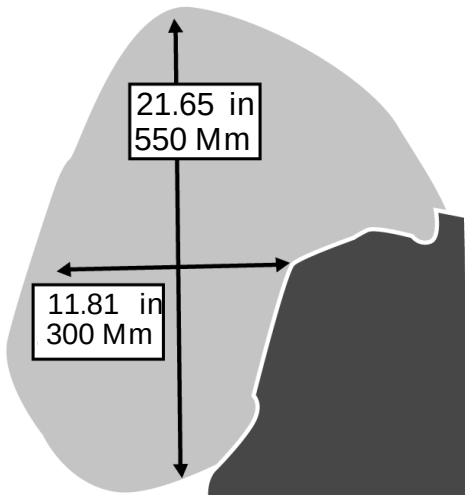

FRONT OUTBOARD PASSENGER AIRBAG
VIEW FROM PASSENGER SIDE

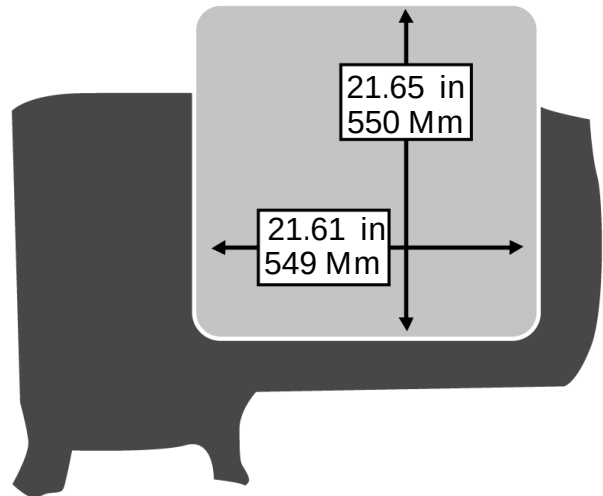


FRONT OUTBOARD PASSENGER AIRBAG
VIEW FROM PASSENGER SIDE


Sitting too close to an airbag when it deploys can increase the risk of serious injury or death. Always properly wear your seat belt. See Owner's Manual for more information.

AIRBAGS

HEAD-CURTAIN AND FRONT SIDE IMPACT AIRBAGS

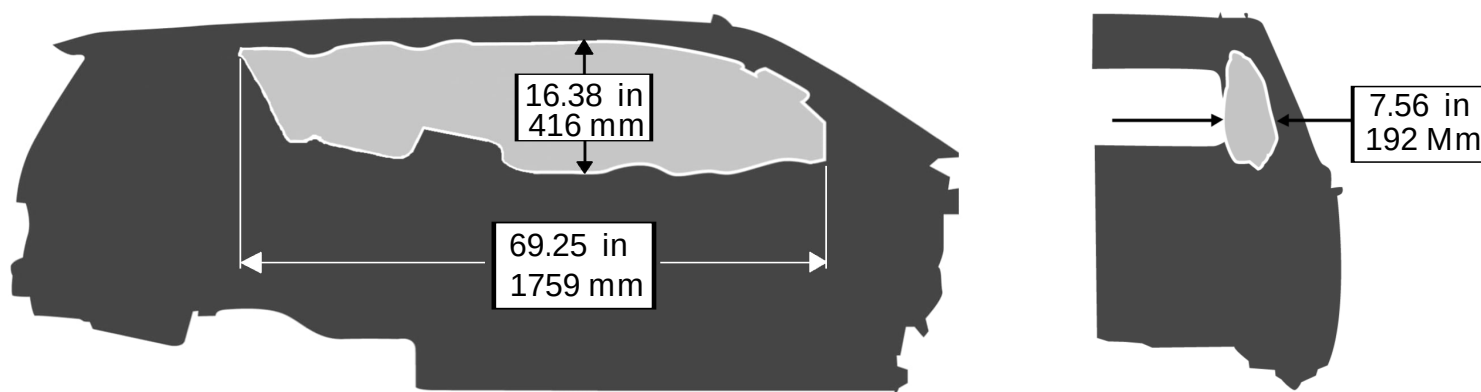

HEAD CURTAIN AIRBAG
DRIVER SIDE SHOWN - PASSENGER SIDE SIMILAR

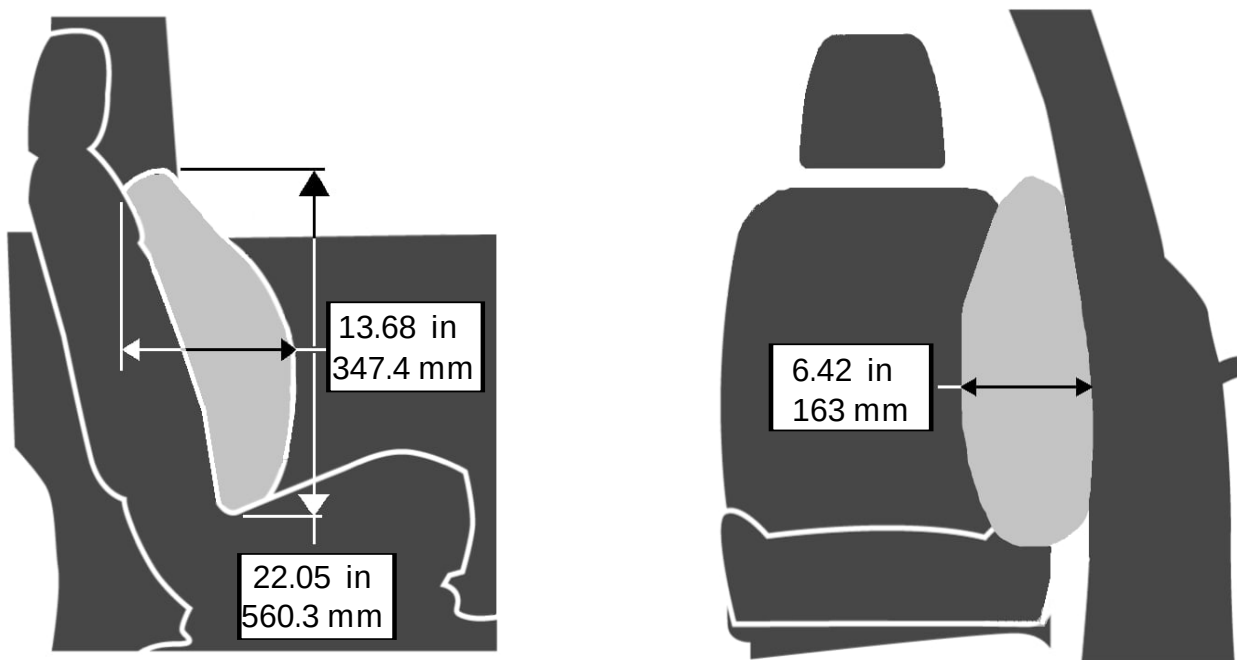


FRONT SEAT SIDE IMPACT AIRBAG
DRIVER SEAT SHOWN - FRONT OUTBOARD PASSENGER SIMILAR


Always use seat belts and child restraints. Children are safer when properly secured in a rear seat in the appropriate child restraint. See the Owner's Manual for more information.

AIRBAGS


KNEE IMPACT AIRBAGS

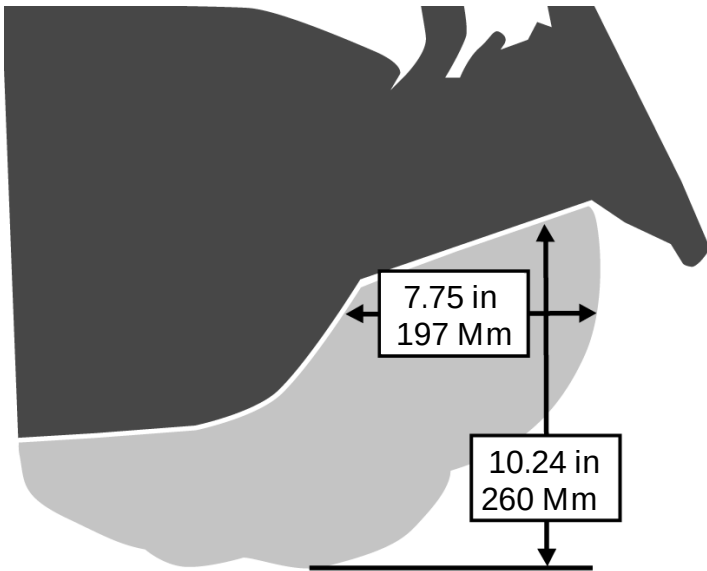


KNEE AIRBAG
SIDE VIEW FROM DRIVER SIDE

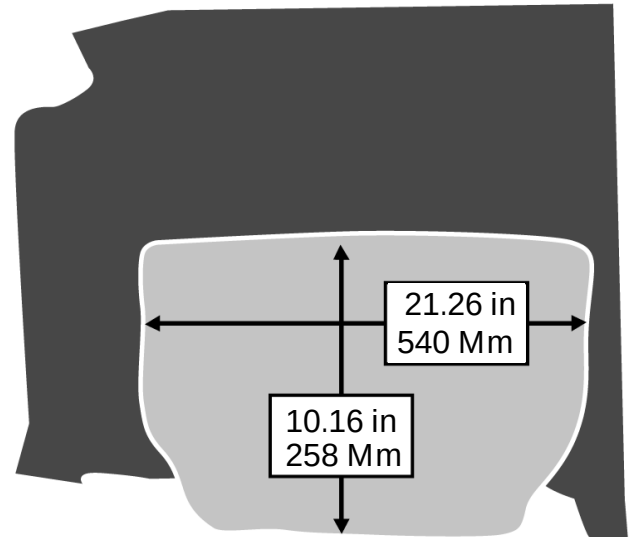

KNEE AIRBAG
FRONT VIEW FROM DRIVER SIDE

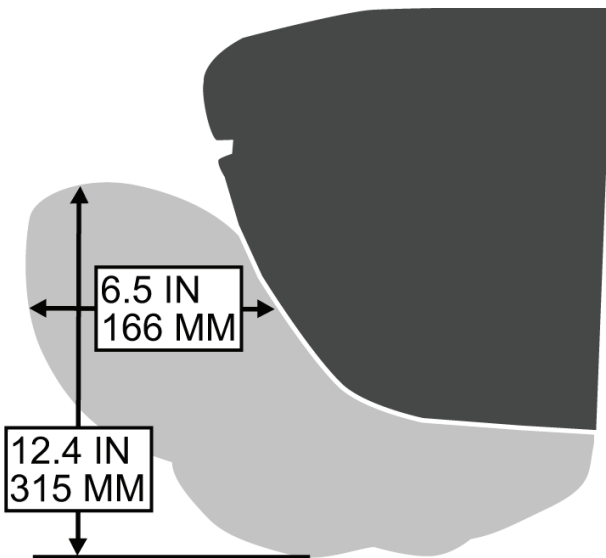

KNEE AIRBAG
SIDE VIEW FROM PASSENGER SIDE

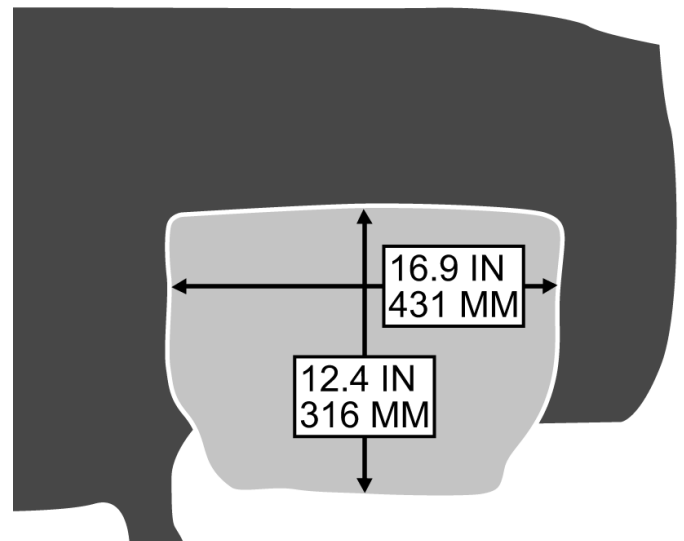

KNEE AIRBAG
FRONT VIEW FROM PASSENGER SIDE

Always use seat belts and child restraints. Children are safer when properly secured in a rear seat in the appropriate child restraint. See the Owner's Manual for more information.

AIRBAGS FAQ

Q: Can equipment such as radar devices, video cameras, and radio trees be mounted in a specialty vehicle equipped with a right front passenger frontal airbag?

A: Yes, but care must be taken to properly mount the equipment outside of the airbag "deployment zone."

Q: What is the airbag "deployment zone"?

A: The term "deployment zone" describes the space an airbag takes up when fully inflated. Airbags need room to work properly, and anything in the "deployment zone" – such as improperly mounted equipment – can greatly affect the performance of the airbag.

Q: How can I identify the airbag "deployment zone" in my vehicle?

A: See Airbag Deployment Diagrams for more information. The diagrams provide the approximate dimensions of the "deployment zones" for your specialty vehicle. Before doing any service work, including the installation of any equipment, consult the appropriate service manual.

Q: Is it possible to shield equipment so it does not interfere with airbag deployment?

A: While shielding may protect certain equipment from being damaged or dislodged, it may also negatively affect how an airbag inflates. Therefore, we do not recommend the placement of any equipment in the deployment zone, even if shielded.

Q: Can the installation of push bumpers on the front end of the vehicle affect the deployment of the airbag?

A: It is not likely that installing push bumpers will affect deployment for the airbag as long as the vehicle structure itself is not modified. GM is not aware of any adverse defects effect on the deployment of the front airbags due to use of many aftermarket push bumpers installed on current GM police vehicles See "Adding Equipment to the Airbag-Equipped Vehicle" in the owner manual for more information.

See "Adding Equipment to the Airbag-Equipped Vehicle" in the owner manual for more information.

Customer-Installed Equipment

Before installing equipment, read the following.

- Airbags inflate with great force, faster than the blink of an eye. No objects, such as shotguns, should be placed over or near the airbag covers. Equipment mounted too close to an inflating airbag could prevent the airbag from operating properly to protect the occupants or could be forced into an occupant or break and become a dangerous projectile, causing severe injury or even death. To help prevent injury and to allow the airbag to perform as it was designed, do not mount equipment inside the airbag deployment zones.
- Do not attach anything to the steering wheel hub or mount any equipment within the deployment zone for the driver airbag.
- Do not mount equipment on the passenger side of the instrument panel top pad deployment zone. Equipment should not be mounted on or around the passenger airbag opening because of a deploying airbag. To allow the airbag to perform as it was designed, do not mount equipment inside the airbag deployment zone.
- Do not mount a security barrier such that the ends of the barrier or brackets are within the roof-rail airbag deployment zones.
- Avoid installing wiring for roof-rail emergency lighting or radio antennas that may restrict the proper deployment of the roof-rail airbags.
- GM approved service procedures must be followed to remove and reinstall the instrument panel to the pad to ensure proper airbag deployment.

ONSTAR OPTIONS

POU¹	ONSTAR PROTECT -	Includes up to 12 Months of OnStar Protect. Emergency Advisors and Security Services.
POJ¹	ONSTAR PROTECT -	Includes up to 24 Months of OnStar Protect. Emergency Advisors and Security Services.
POK¹	ONSTAR PROTECT -	Includes up to 36 Months of OnStar Protect. Emergency Advisors and Security Services.
POL¹	ONSTAR PROTECT -	Includes up to 48 Months of OnStar Protect. Emergency Advisors and Security Services.
POQ¹	ONSTAR PROTECT -	Includes up to 60 Months of OnStar Protect. Emergency Advisors and Security Services.
POV²	ONSTAR TELEMATICS -	Includes up to 12 Months of OnStar Telematics. Fleet operations and remote vehicle management.
POW²	ONSTAR TELEMATICS -	Includes up to 24 Months of OnStar Telematics. Fleet operations and remote vehicle management.
P0X²	ONSTAR TELEMATICS -	Includes up to 36 Months of OnStar Telematics. Fleet operations and remote vehicle management.
POY²	ONSTAR TELEMATICS -	Includes up to 48 Months of OnStar Telematics. Fleet operations an remote vehicle management.
POZ²	ONSTAR TELEMATICS -	Includes up to 60 Months of OnStar Telematics. Fleet operations and remote vehicle management.
R8G³	ONSTAR ONE FLEET -	Includes up to 12 months of OnStar One Fleet. Includes safety, telematics, Wi-Fi hotspot, and streaming services
RFH³	ONSTAR ONE FLEET -	Includes up to 24 months of OnStar One Fleet. Includes safety, telematics, Wi-Fi hotspot, and streaming services.
R8P³	ONSTAR ONE FLEET -	Includes up to 36 months of OnStar One Fleet. Includes safety, telematics, Wi-Fi hotspot, and streaming services.
R8Z³	ONSTAR ONE FLEET -	Includes up to 48 months of OnStar One Fleet. Includes safety, telematics, Wi-Fi hotspot, and streaming services.
R8W³	ONSTAR ONE FLEET -	Includes up to 60 months of OnStar One Fleet. Includes safety, telematics, Wi-Fi hotspot, and streaming services.
POH⁴	ONSTAR CONNECT PLUS -	Includes up to 12 months of OnStar Connect Plus. In-vehicle entertainment and productivity through access to a suite of apps in your center display including media streaming, navigation, voice assistance, and Wi-Fi hotspot.
POI⁴	ONSTAR CONNECT PLUS -	Includes up to 24 months of OnStar Connect Plus. In-vehicle entertainment and productivity through access to a suite of apps in your center display including media streaming, navigation, voice assistance, and Wi-Fi hotspot.
PQG⁴	ONSTAR CONNECT PLUS -	Includes up to 36 months of OnStar Connect Plus. In-vehicle entertainment and productivity through access to a suite of apps in your center display including media streaming, navigation, voice assistance, and Wi-Fi hotspot.
PQH⁴	ONSTAR CONNECT PLUS -	Includes up to 48 months of OnStar Connect Plus. In-vehicle entertainment and productivity through access to a suite of apps in your center display including media streaming, navigation, voice assistance, and Wi-Fi hotspot.
PQI⁴	ONSTAR CONNECT PLUS -	Includes up to 60 months of OnStar Connect Plus. In-vehicle entertainment and productivity through access to a suite of apps in your center display including media streaming, navigation, voice assistance, and Wi-Fi hotspot.
PQL⁵	ONSTAR VIDEO TELEMATICS WITH HARDWARE -	Includes hardware and up to 12 months of OnStar Video Telematics. Requires additional paid Telematics plan and is subject to terms. Lytx Surfsight AI-14 camera hardware unit is included in price of Video Telematics with Hardware plan. Installation of camera hardware is not included. The interior and front-facing exterior camera views produce video clips that can be viewed.
PQM⁵	ONSTAR VIDEO TELEMATICS WITH HARDWARE -	Includes hardware and up to 24 months of OnStar Video Telematics. Requires additional paid Telematics plan and is subject to terms. Lytx Surfsight AI-14 camera hardware unit is included in price of Video Telematics with Hardware plan. Installation of camera hardware is not included. The interior and front-facing exterior camera views produce video clips that can be viewed.
PQP⁵	ONSTAR VIDEO TELEMATICS WITH HARDWARE -	Includes hardware and up to 36 months of OnStar Video Telematics. Requires additional paid Telematics plan and is subject to terms. Lytx Surfsight AI-14 camera hardware unit is included in price of Video Telematics with Hardware plan. Installation of camera hardware is not included. The interior and front-facing exterior camera views produce video clips that can be viewed.
PQQ⁵	ONSTAR VIDEO TELEMATICS WITH HARDWARE -	Includes hardware and up to 48 months of OnStar Video Telematics. Requires additional paid Telematics plan and is subject to terms. Lytx Surfsight AI-14 camera hardware unit is included in price of Video Telematics with Hardware plan. Installation of camera hardware is not included. The interior and front-facing exterior camera views produce video clips that can be viewed.
PQT⁵	ONSTAR VIDEO TELEMATICS WITH HARDWARE -	Includes hardware and up to 60 months of OnStar Video Telematics. Requires additional paid Telematics plan and is subject to terms. Lytx Surfsight AI-14 camera hardware unit is included in price of Video Telematics with Hardware plan. Installation of camera hardware is not included. The interior and front-facing exterior camera views produce video clips that can be viewed.

1. Working electrical system, cell reception and GPS signal required. OnStar links to emergency services. Service coverage varies with conditions and location. Service availability, features and functionality vary by device and software version. See gmfleet.com/software/onstar for details and limitations. Non-transferable and non-refundable. Requires (UE1) OnStar. Requires one of the following US Fleet or Government order types: FLS, FNR, FRC, FBC, FGO or FEF. Not available with other OnStar Protect plans, R8G, RFH, R8P, R8Z or R8W. Not available with a ship-to of Guam, Puerto Rico or the Virgin Islands.

2. OnStar Telematics does not include emergency or security services. Eligible customers must sign up for an account at gmfleet.com/software/onstar. Active connected vehicle services, working electrical system, cell reception and GPS signal required. Service coverage varies with conditions and location. Service availability, features and functionality vary by vice and software version. See gmfleet.com/software/onstar for details and limitations. Non-transferable and non-refundable. Requires (UE1) OnStar. Requires one of the following US Fleet or Government order types: FDR, FLS, FNR, FRC, FBC, FGO or FEF. Not available with other OnStar Telematics plans, R8G, RFH, R8P, R8W, or R8Z. Not available with a ship-to of Guam, Puerto Rico or the Virgin Islands.

3. Working electrical system, cell reception and GPS signal required. OnStar links to emergency services. Service coverage varies with conditions and location. Service availability, features and functionality vary by device and software version. Requires eligible vehicle. Streaming services vary with conditions and location. Terms apply. See gmfleet.com/software/onstar for additional details and limitations. Requires (UE1) OnStar and (VV4) Wi-Fi Hotspot capable. Requires one of the following US Fleet or Government order types: FLS, FNR, FRC, FBC, FEF. Not available with other OnStar One Fleet plans, POU, POJ, POK, POL, POQ, POV, POW, P0X, POY, POZ, POH, POI, PQG, PQH or PQI. Not available with a ship-to of Guam, the Virgin Islands.

4. OnStar Connect Plus does not include emergency or security services. Requires eligible vehicle. Streaming services vary with conditions and location. HD Streaming services are subject to terms and limitations. Availability may vary by vehicle, infotainment system, location and active service plan. Hulu service requires subscription. U.S. only. Terms apply. Hulu and Hulu logo are registered trademarks of Hulu, LLC. See gmfleet.com/software/onstar for additional details and limitations. Non-transferable and non-refundable. Requires (UE1) OnStar and (VV4) Wi-Fi Hotspot Capable. Requires one of the following Fleet or Government order types: FLS, FNR, FRC, FBC, FGO or FEF. Not available with other OnStar Connect Plus plans, R8G, RFH, R8P, R8Z or R8W. Not available with a ship-to of Guam, Puerto Rico or the Virgin Islands.

5. Terms apply. See gmfleet.com/software/onstar for additional details and limitations. Non-transferable and non-refundable. Requires (UE1) OnStar. Must be ordered with OnStar Telematics (POV, POW, P0X, POY, (POZ) or OnStar One Fleet (R8G), (RFH), (R8P), (R8Z), (R8W). Requires one of the following Fleet or Government order types: FLS, FNR, FRC, FBC, FGO or FEF. Not available with other OnStar Video Telematics with Hardware plans, PQL, PQM, PQP, PQT, or PQQ. Not available with a ship-to of Guam, Puerto Rico or the Virgin Islands.

MAINTAINACE / LIMITED WARRANTY

SCHEDULED MAINTENANCE	One visit within first year of vehicle delivery ¹
BUMPER-TO BUMPER LIMITED WARRANTY	3 years/36,000 miles ² Bumper-to-Bumper Limited Warranty with no deductible.
ELECTRIC VEHICLE PROPULSION LIMITED WARRANTY	8 Years / 100,000 Miles ²
TIRES ⁴	3 years/36,000 miles ² ; coverage prorated after first 12,000 miles
ROADSIDE ASSISTANCE AND COURTESY TRANSPORTATION	Qualified Fleet Customers: 5 years/100,000 miles ³
RUST-THROUGH	6 years/100,000 miles ²
CORROSION	3 years/36,000 miles ²
WHEEL ALIGNMENT AND BALANCE	Up to 7,500 miles ⁵

1. Includes first required maintenance visit as stated in vehicle maintenance schedule. Maintenance visit consists of oil change, tire rotation and Multi-Point Vehicle Inspection.

Does not include air filters. See participating dealer for other restrictions and complete details.

2. Whichever comes first. See dealer for limited warranty details.

3. Tires also covered under the Bumper-to-Bumper Warranty but are prorated based upon mileage. See dealer for warranty details.

4. If the vehicle has a warrantable failure, see your Owner's Manual for full details on the Courtesy Transportation program.

5. Customer maintenance item after 7,500 miles.

UPFITTER INTEGRATION LINKS

GM upfitter Integration Technical Bulletins are intended for use by professional technicians, NOT a do-it-yourselfer. They are written to inform these technicians of conditions that may occur on some vehicles, or to provide information that could assist in the proper service and/or modification of a vehicle. These properly trained technicians have the equipment, tools, safety instructions and know-how to do a job properly and safely. If a condition is described, DO NOT assume that the bulletin applies to your vehicle or that your vehicle will have that condition. Contact GM Upfitter Integration or information on whether the information is applicable to your vehicle.

GM LINKS QUICK LINKS

GM FLEET GUIDE - <https://www.gmfleet.com/resources/guides-and-manuals>

UNIVERSAL VEHICLE MODULE (KGU) - https://www.gmupfitter.com/wp-content/uploads/2025/02/UI-Bulletin_203-b-UVM-1.pdf

CHEVROLET COMMERCIAL VEHICLES - Versatility meets performance, efficiency, and technology in every Chevrolet commercial vehicle. With a proven lineup of dependable trucks and vans.
<https://www.chevrolet.com/commercial>

ONLINE ORDER GUIDES - Online Order / Reference Guide is intended solely for reference purposes only. Certain models, options or equipment may be available only to customers who qualify as fleet or commercial customers.
<https://www.gmfleetorderguide.com/map>

GM ACCESSIBILITY - Get information about vehicles that suit the individual requirements of special-needs drivers, and programs to make them more affordable.
<https://www.gmfleet.com>

OWNER SERVICE MANUALS - For Manuals and CD ROMs: Factory Repair Manuals, Owner Manuals, ETMs, Wiring Diagrams, Body Repair Manuals, Collision Books, TSBs.
https://experience.gm.com/certified-service?evar25=xbhub_globalnav_service

SVM LOCATOR - General Motors Special Vehicle Manufacturers provide quality upfit products that enhance GM trucks and vans. SVMs are selected on the merit of their upfit/conversion, financial stability, and adherence to the governmental and trade association requirements.
http://www.gmfleet.com/fleet/finddealer/svmlocator_landing.jsp

GM UPFITTER INTEGRATION - QUICK LINKS (NON-GM LINKS)

The following links will launch you to an independent website outside of General Motors, which has its own privacy policies;

INTERNATIONAL FLEET SALES - International Fleet Sales (IFS) is the authorized export distributor of General Motors vehicles, parts and service.
<http://www.internationalfleetsales.com/>

AC DELCO TECHCONNECT - Comprehensive coverage, product quality, competitive prices, and industry-leading training make the AC Delco All Makes, All Models product line a true winner and a must-have for Independent Service Centers.
<https://www.acdelcotds.com/subscriptions>

FIRST RESPONDERS - Here you will find information to assist First Responders in learning about vehicles and/or systems that may affect how they perform in an emergency situation.
<https://www.gmstc.com/index.php/first-responders>

TRAINING - Here you will find information on how to obtain GM Technical Training for Dealers, Fleet Customers and Non GM dealers. <https://www.gmupfitter.com/wp-content/uploads/2023/09/Training.pdf>

NATIONAL TRUCK EQUIPMENT ASSOCIATION (NTEA) – TECHNICAL RESOURCES - How to obtain supportive information such as an FMVSS Guide, Weight Calculators and OEM Chassis Considerations Guide and more.
<https://www.ntea.com/technicalresources>



GM reserves the right to make changes at any time, without notice, in prices, colors, materials, equipment, specifications, models, and availability. Specifications, dimensions, measurements, ratings, and other numbers in this catalog and other printed materials provided at the dealership or affixed to vehicles are approximates based upon design and engineering drawings and prototypes and laboratory tests. Your vehicle may differ due to variations in manufacture and equipment. Since some information may have been updated since the time of printing, please check with your GM dealer for complete details. Some of the equipment shown or described throughout this publication may be available at extra cost, and/or is supplied by an independent supplier.

Copyright 2026 General Motors. All rights reserved. All text, images, graphics, and other materials in this publication are subject to the copyright and other intellectual property rights of General Motors. These materials may not be reproduced, distributed, or modified without the express written permission of General Motors. The marks appearing in this publication including, but not limited to: GM and the GM logo; Chevrolet and their respective logos, emblems, slogans, and vehicle model names and body designs; and other marks such as GM FLEET and Commercial are trademarks and/or service marks of General Motors, its subsidiaries, affiliates, or licensors.

For more detailed information, contact your District Sales Manager or see;

<https://www.gmfleet.com/resources/guides-and-manuals>

