

# Table of Contents

<b>General Information</b> .....	<a href="#">1-1</a>	<b>HVAC</b> .....	<a href="#">5-1</a>
General Information .....	<a href="#">1-3</a>	Heating, Ventilation, and Air Conditioning .....	<a href="#">5-3</a>
<b>Body Systems</b> .....	<a href="#">2-1</a>	HVAC - Automatic .....	<a href="#">5-4</a>
Fixed and Moveable Windows .....	<a href="#">2-3</a>	HVAC - Manual .....	<a href="#">5-14</a>
Horns and Pedestrian Alerts .....	<a href="#">2-11</a>	<b>Power and Signal Distribution</b> .....	<a href="#">6-1</a>
Lighting .....	<a href="#">2-14</a>	Data Communications .....	<a href="#">6-3</a>
Mirrors .....	<a href="#">2-37</a>	Electrical Component and Inline Harness	
Trailer Systems .....	<a href="#">2-44</a>	Connector End Views .....	<a href="#">6-26</a>
Vehicle Access .....	<a href="#">2-55</a>	Electrical Component Locator and Harness	
Wipers and Washers .....	<a href="#">2-64</a>	Routing Views .....	<a href="#">6-512</a>
<b>Driver Information and Entertainment</b> .....	<a href="#">3-1</a>	Power Outlets .....	<a href="#">6-541</a>
Image Display Cameras .....	<a href="#">3-3</a>	Wiring Systems and Power	
<b>Engine/Propulsion</b> .....	<a href="#">4-1</a>	Management .....	<a href="#">6-552</a>
Starting, Charging, and Low Voltage Energy		<b>Transmission</b> .....	<a href="#">7-1</a>
Storage .....	<a href="#">4-3</a>	Shift Lock Control .....	<a href="#">7-3</a>
		<b>INDEX</b> .....	<a href="#">INDEX-1</a>

**BLANK**

## Section 1

# General Information

<b>General Information</b> .....	<a href="#">1-3</a>
<b>Introduction</b> .....	<a href="#">1-3</a>
Training .....	<a href="#">1-3</a>
Vehicle, Engine and Transmission ID and VIN Location, Derivative and Usage .....	<a href="#">1-4</a>
Vehicle Certification, Tire Placard, and Anti-Theft Label .....	<a href="#">1-6</a>
RPO Code List .....	<a href="#">1-8</a>

**BLANK**

# General Information

## Introduction Training

### Dealers

All U.S. GM Dealers participating in the Center of Learning / GM Service Technical College (STC) Programs can enroll through the Center of Learning website at <https://www.centerlearning.com>. Within the website, there are individual training paths that are designed to assist in planning the training needs for each individual and their job role. Dealers who have questions about Center of Learning Training should contact the Center of Learning help desk at 1-888-748-2687. The help desk is available Monday through Friday, 8:00 am – 9:00 pm Eastern Standard Time, excluding holidays. For GM Access support, contact the GM Access Help Desk at 1-888-337-1010.

### Fleets

GM Fleet customers with GM Warranty In-Shop agreements are able to participate in service technical training through the Center of Learning/GM Service Technical College (STC).

Assistance for GM fleet registered customers using GM STC training is provided by the Center of Learning help desk at 1-888-748-2687. The help desk is available Monday through Friday, 8:00 am–9:00 pm Eastern Standard Time, excluding holidays. For GM Access support, contact the GM Access Help Desk at 1-888-337-1010.

Most GM STC course materials have associated charges.

To purchase authentic GM STC Training Materials, contact the GM Training Materials Headquarters at 1-800-393-4831.

### Non-GM Dealer Technicians

Technician training for non-GM dealers is available through ACDelco. This training is for ACDelco PSC and Fleet program members employed in the automotive or truck service industry.

ACDelco courses are available at approved GM STC Training Centers. Availability and schedules can be obtained by calling 1-800-825-5886 (prompt 1) or contact us via the web at [www.acdelcotechconnect.com](http://www.acdelcotechconnect.com) and select the Training tab. Seminars are also offered through the ACDelco Warehouse Distribution channel. Contact your Local ACDelco representative or distributor directly for more information.

## 1-4 General Information

### Vehicle, Engine and Transmission ID and VIN Location, Derivative and Usage



5028742

The VIN plate (1) is the legal identifier of the vehicle. The VIN plate is located on the upper left corner of the instrument panel (I/P) and can be seen through the windshield from the outside of the vehicle:

#### Vehicle Identification Number (VIN) System

Position	Definition	Character	Description
1	Country of Origin	1	United States
2	Manufacturer	G	General Motors
3	Vehicle Brand/Type	C	Chevrolet Truck
4	GVWR/Brake System/Body Style	G	5001–6000/Hydraulic – Crew Cab
		H	5001–6000/Hydraulic – Extended Cab
		P	6001–7000/Hydraulic – CrewCab
		R	6001–7000/Hydraulic – Extended Cab

**Vehicle Identification Number (VIN) System (cont'd)**

Position	Definition	Character	Description
5-6	Chassis/Series	S/B	Chevrolet Colorado, Work Truck 2WD
		S/C	Chevrolet Colorado, LT 2WD
		S/D	Chevrolet Colorado, Z71 2WD
		S/9	Chevrolet Colorado 2WD, (Non-US, Non-Canada)
		T/B	Chevrolet Colorado, Work Truck 4WD
		T/C	Chevrolet Colorado, LT 4WD
		T/D	Chevrolet Colorado, Z71 4WD
		T/E	Chevrolet Colorado, Trail Boss 4WD
		T/F	Chevrolet Colorado, ZR2 4WD
		T/9	Chevrolet Colorado 4WD, (Non-US, Non-Canada)
7	Restraint System	E	AYH - Active Manual Belts, Airbags-Driver & Passenger-Front (1st 1: United States row), Front Seat Side (1st row), Roof Side (all seating rows)
8	Engine Type	C	L2R - ENGINE-GAS, 4 CYL, L4, 2.7L, DI, TURBO, DOHC, ALUM
		K	L3B - ENGINE GAS, 4CYL, L4, 2.7L, SIDI, VVT, TURBO, DOHC, ALUM
9	Check Digit	—	Check Digit
10	Model Year	R	2024
11	Plant Location	1	Wentzville, MO
12-17	Plant Sequence Number	—	Plant Sequence Number

## 1-6 General Information


### 2.7L Engine ID and VIN Derivative Location

Engine Identification

### 8L45/8L90 Transmission ID and VIN Derivative Location

Transmission Identification Information

## Vehicle Certification, Tire Placard, and Anti-Theft Label

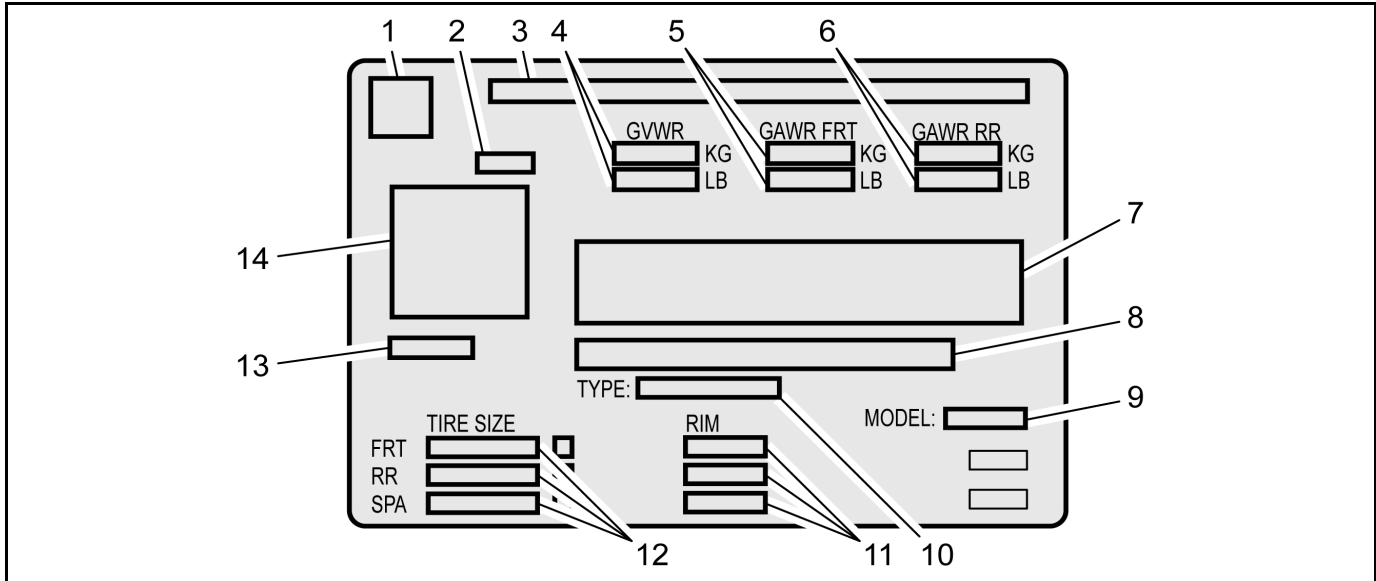


4992823

### Vehicle Certification Label

Callout	Description
A vehicle-specific Certification label is attached to the vehicle's center pillar (B-pillar) and displays the following assessments:	
1	Logo
2	Final Date of Manufacture (Month and Year MM/YY) Date of manufacture is to reflect the date that the vehicle is counted as built. In those cases where a replacement label is needed, the replacement label should reflect the actual build date not the date of replacement.
3	Name of Manufacturer
4	Maximum Gross Vehicle Weight Rating (GVWR)
5	Maximum Gross Axle Weight Rating (GAWR) - Front
6	Maximum Gross Axle Weight Rating (GAWR) - Rear
7	Certification Statement
8	Vehicle Identification Number (VIN)
9	Engineering Model Number
10	Vehicle Class Type (Pass Car, etc.)
11	Original Equipment Rim Size
12	Original Equipment Tire Size
13	Paint Code
14	QR Code Once the QR code is scanned, the information will appear in this order on your smartphone or laptop: VIN, Model Year, Model, Build Month, Year, Engineering Book, Vehicle Order Number, 3 Digit RPO Codes sorted alphanumerically and the Paint Code (same code appears the lower left of the QR code)




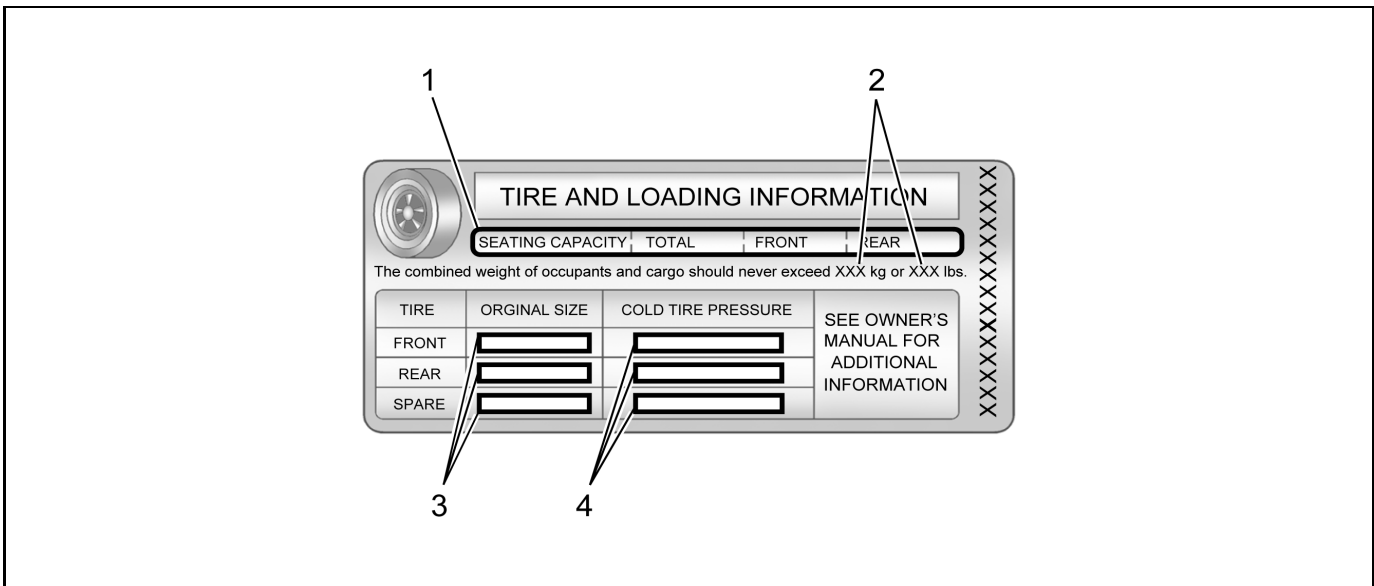

4962282

### Tire Placard

Callout	Description
A vehicle-specific Tire and Loading Information label is attached to the vehicle's center pillar (B-pillar) and displays the following assessments:	
1	Specified Occupant Seating Positions
2	Maximum Vehicle Capacity Weight
3	Original Equipment Tire Size
4	Tire Pressure, Front, Rear, and Spare (Cold)

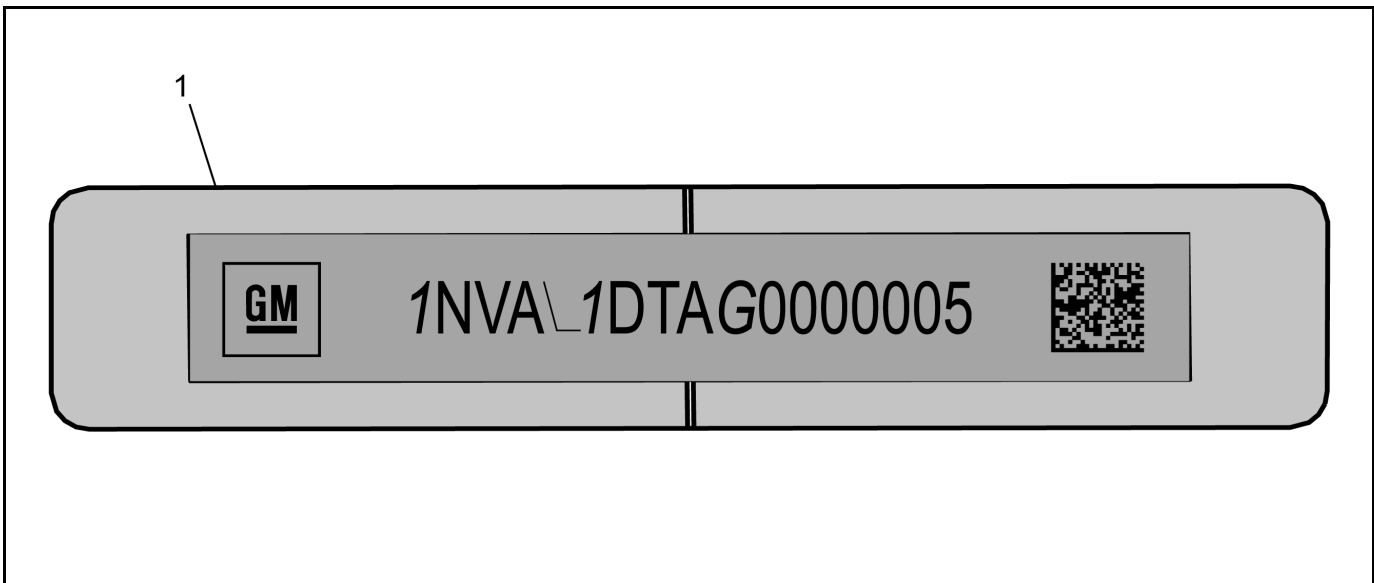

4962289

## 1-8 General Information

### Anti-Theft Label

Callout	Description
This legal identifier is in the front corner of the instrument panel, on the driver side of the vehicle. It can be seen through the windshield from outside. The Vehicle Identification Number (VIN) also appears on the Vehicle Certification and certificates of title and registration.	
1	Vehicle Identification Number (VIN)

### RPO Code List

The following table provides the description of the Regular Production Option (RPO) codes that are available on the vehicle. The vehicle's RPO list is printed on the Service Parts Identification Label.

RPO	Description
060	IDENTIFICATION - NOT EQUIPPED WITH FRONT AND/OR REAR PARK ASSIST
0TR	PACKAGE - TRAIL BOSS
2LT	PACKAGE - LT OPTION 2
2WT	PACKAGE - WT OPTION 2
3F9	SEAT BELT COLOR - RED (01)
3M9	SEAT BELT COLOR - YELLOW
4AA	INTERIOR TRIM - JET BLACK
4G2	INTERIOR TRIM - JET BLACK / ADRENALINE RED
4KW	INTERIOR TRIM - JET BLACK / ARTEMIS
4LT	PACKAGE - LT OPTION 4
4WT	PACKAGE - WT OPTION 4
4Z7	PACKAGE - Z71 OPTION 2
4ZR	PACKAGE - ZR OPTION 4
5BO	ACCESSORY - LAMP KIT - OFF ROAD
5GD	CALIBRATION - TURN ON TOW/ HAUL MODE
5K2	ACCESSORY - DECAL PACKAGE - BODY SIDE, DESIGN 1
5K5	ACCESSORY - DECAL PACKAGE - BODYSIDE - DESIGN 3
5VI	ACCESSORY - TIE DOWN RINGS - CARGO AREA
5VQ	ACCESSORY - PUBX BEDLINER - W/ INTEGRAL STORAGE COMPARTMENTS
5XC	ACCESSORY - SNORKEL - AIR INTAKE
65C	LABEL, WARNING - CALIFORNIA, PROP 65 COMPLIANT
6K5	ADJUSTER DRIVER SEAT - 8WAY, PWR RECLINE, PWR FORE/AFT, PWR HEIGHT, PWR TILT
6K5	CHARGER - INDUCTIVE PORTABLE WIRELESS DEVICE
6K5	COMPARTMENT - STOWAGE TAILGATE
6K5	ENGINE - GAS, 4 CYL, L4, 2.7L, SIDI, VVT, TURBO, DOHC, ALUM
6K5	EQUIPMENT - ASSIST, OPEN & CLOSE, TAILGATE
6K5	HEATER SEAT FRT - DRVR & PASS

RPO	Description
6K5	HVAC SYSTEM - AIR CONDITIONER FRT, AUTO TEMP CONT, AUX TEMP CONT
6K5	LOCK CYLINDER - RR COMPT
6K5	LUMBAR DRIVER - SEAT, POWER, 2 WAY
6K5	MIRROR I/S R/V - LT SENSITIVE
6K5	MIRROR O/S - LH & RH, RC, ELEC, HEAT, MAN FOLD, FLAT/DRVR, CNVXPASS
6K5	REMOTE START - VEHICLE
6K5	SALES PACKAGE - CONVENIENCE
6K5	STEERING COLUMN - TILT, TELESCOPING
6K5	TIRE SPARE - 255/65R17 SL 110T BW ALS VAR1
6K5	SALES PACKAGE - CONVENIENCE II
719	SEAT BELT COLOR - BLACK (10)
A28	WINDOW RR - FULL WIDTH, SLIDING, MANUAL
A2V	ADJUSTER DRIVER SEAT - 6WAY, DISCONT MAN RECLINE, MAN FORE/AFT, MAN HEIGHT
A2X	ADJUSTER DRIVER SEAT - 8WAY, PWR RECLINE, PWR FORE/AFT, PWR HEIGHT, PWR TILT
A45	MEMORY - SEAT ADJUSTER, MIRROR, POWER, DRIVER, PERSONALIZATION
A50	SEAT - FRT BKT
A7E	ADJUSTER PASS ST - 4WAY, DISCONT MAN RECLINE, MAN FORE/AFT
A91	LOCK CONTROL RR CMPT - TAILGATE, REM CONT ELEC OPEN/CLOSE
ACH	RESTRAINT PROVISIONS - RETRACTOR, AUTOMATIC LOCKING
AEC	WINDOW REG DRVR DR - POWER OPERATED, EXPRESS DOWN
AED	WINDOW REG PASS DR - POWER OPERATED, EXPRESS DOWN
AEO	RESTRAINT - SEAT BELT 2ND TENSIONER, FRT
AEQ	WINDOW REG REAR DR - POWER OPERATED, EXPRESS DOWN
AGJ	WINDOW SIDE FRT - TEMPERED, SOLAR GLAZING
AKO	WINDOW TYPE - PRIVACY
AKX	WINDSHIELD TYPE - SOLAR ABSORBING
AL0	SENSOR INDICATOR - INFLATABLE RESTRAINT, FRT PASS/CHILD PRESENCE DETECTOR
AL9	LUMBAR DRIVER - SEAT, POWER, 2 WAY

RPO	Description
AQP	RESTRAINT - HEAD, RR SEAT, CENTER
ARU	WINDOW SIDE RR - TEMPERED, PRIVACY GLAZING
AT7	RESTRAINT SYSTEM RR - SEAT, SHLDR, RETR, 3 POINT, 3 SHLDR
ATG	LOCK CONTROL, ENTRY - REMOTE ENTRY, STANDARD RANGE
AUW	SEAT REAR - FOLDING, CUSHION 60/40, STORAGE BOX
AVJ	LOCK CONTROL, ENTRY - REMOTE ENTRY, EXTENDED RANGE, PASSIVE ENTRY, FRONT DOORS
AVN	RESTRAINT - HEAD, RR SEAT
AXG	WINDOW REG DRVR DR - POWER OPERATED, EXPRESS UP/DOWN
AXK	VEHICLE TYPE - TRUCK
AYH	RESTRAINT SYSTEM - DRVR (SINGLE, ADAPTIVE) & PASS (DUAL) FRT, SEAT SIDE, ROOF SIDE
B26	MIRROR O/S - LH & RH, RC, ELEC, HEAT, MAN FOLD, FLAT/DRVR, CNVXPASS
B26	PARK ASSIST - REAR
B26	REAR CROSS TRAFFIC - ALERT, BRAKING
B26	SALES PACKAGE - CONVENIENCE
B26	SIDE ACTIVE SAFETY - OBSTACLE DETECTION ENHANCED, STEERING ASSIST
B26	SIDE ACTIVE SAFETY - OBSTACLE DETECTION ENHANCED, STEERING ASSIST, EXTENDED TRAILER VIEW
B26	SALES PACKAGE - SAFETY PACKAGE VAR. 1
B30	COVERING FLOOR - CARPET
B34	COVERING FRT - FLOOR MATS, CARPETED INSERT
B35	COVERING REAR - FLOOR MATS, CARPETED INSERT
B38	COVERING FLOOR - VINYL, FRT & RR, FULL WIDTH
B96	MOLDING WHL OPENING -
BCP	COVER ENGINE - APPEARANCE
BDR	LOCK CYLINDER - RR COMPT
BPC	COMPARTMENT - STOWAGE TAILGATE
BS5	INSULATION - FLR, ACOUSTICAL PKG, VAR. 2
BTM	SWITCH - START, KEYLESS
BTV	REMOTE START - VEHICLE
BW5	MOLDING B/S (OPEL) - EXTR, MLDG, SIDE WINDOW REVEAL, BLACK
BW7	ORNAMENTATION - EXTR, PLR APLQ
BWN	STEPS - CORNER ASSIST, BUMPER
BZT	STEPS, RUNNINGBOARD - PROTECTOR, ROCKER PANEL, BLACK
C49	DEFOGGER - RR WINDOW, ELECTRIC

RPO	Description
C59	VENT - AIR, CONSOLE, RR
C67	HVAC SYSTEM - AIR CONDITIONER FRT, ELECTRONIC CONTROLS
C75	LAMP - INTR, FRT HEADER, COURTESY & DUAL READING
C7C	HEATER - AIR CONDITIONER DUCT, RR PASS
C91	LAMP - INTR, ROOF, COURTESY
CAC	ROOF - SUN, SINGLE GLASS, INR SLIDING, MAN SUNSHADE
CGN	LINER - PUBX, SPRAY ON
CJ2	HVAC SYSTEM - AIR CONDITIONER FRT, AUTO TEMP CONT, AUX TEMP CONT
CTT	HITCH ASSIST - GUIDELINES
CWM	CRUISE CONTROL - AUTOMATIC, ADAPTIVE, WITH STOP/GO
CWM	LOCK CYLINDER - RR COMPT
CWM	SALES PACKAGE - SAFETY PACKAGE VAR. 1
CWM	SENSOR INDICATOR - PEDESTRIAN DETECTION - REAR
CWM	SPEAKER SYSTEM - PREMIUM AUDIO, BRANDED AMPLIFIER
CWM	VISION - 360 VIEW, MONO, HD DIGITAL
CWM	WHEEL - 20 X 9.0, J, ALUMINUM, DESIGN 18
CWM	SALES PACKAGE - TECHNOLOGY
D07	CONSOLE - FRT COMPT, FLOOR, CUSTOM
D31	MIRROR I/S R/V - TILT
D54	CONSOLE - FRT COMPT, FLOOR, W/O LID
D72	HANDLE O/S DOOR - BLACK
D75	HANDLE O/S DOOR - BODY COLOR
D87	HANDLE, REAR CLOSURE - O/S, L/GATE, R/COMPT, BLACK
DA5	ARM REST - RR SEAT, CENTER
DD8	MIRROR I/S R/V - LT SENSITIVE
DEG	SUNSHADE - DRIVER, MIRROR, COVER, ILLUM, SLIDING, PASS, MIRROR, COVER, ILLUM, SLIDING
DIL	LENS INFOT DISPLAY - FULL GLASS
DLF	MIRROR O/S - LH & RH, RC, ELEC, HEAT, MAN FOLD, FLAT/DRVR, CNVXPASS
DLV	MIRROR I/S FRT VAN - SUNSHADE, DRIVER & PASS, W/MIRROR & COVER
DNS	EQUIPMENT - SUPPLIER INSTALLED
DP5	MIRROR PROVISIONS - HOUSING, MOLDED W/COLOR
DP6	MIRROR PROVISIONS - HOUSING, PAINTED
DWV	MIRROR O/S - LH & RH, RC, ELEC, MANFOLD, FLAT/DRVR, CNVX/PASS
E33	HANDLE - I/S, DR, GLOSSY CHROME

## 1-10 General Information

RPO	Description
E49	HANDLE - I/S, DR, JET BLACK
E63	BODY EQUIPMENT - FLEETSIDE PICK-UP BOX
E90	POCKET - FRONT SEAT BACK, DRIVER
E91	POCKET - FRONT SEAT BACK, PASS
EF7	COUNTRY - UNITED STATES OF AMERICA (USA)
ENL	ENG CONTROL DISABLE - STOP/START, NON-LATCHING
F46	CHASSIS DRIVE LINE - ALL WHEEL DRIVE (AWD)/FOUR WHEEL DRIVE(4WD)
FE9	CERTIFICATION - EMISSION, FEDERAL
FJW	VEHICLE FUEL - GASOLINE E15
G80	AXLE POSITRACTION - LIMITED SLIP
G93	AXLE - FRT ELECTRONIC LOCKING DIFFERENTIAL, DRIVER SELECT
G94	AXLE - RR ELECTRONIC LOCKING DIFFERENTIAL, DRIVER SELECT
GAZ	PRIMARY COLOR - EXTERIOR, SUMMIT WHITE (G) 8624
GBA	PRIMARY COLOR - EXTERIOR, BLACK (G) 8555
GCP	PRIMARY COLOR - EXTERIOR, TRIPP MET-1 (628G)
GLT	PRIMARY COLOR - EXTERIOR, POW ZINGA MET-1 (327E)
GNT	PRIMARY COLOR - EXTERIOR, RADIANT RED TINT MET-1 (170H)
GTL	PRIMARY COLOR - EXTERIOR, SAND DUNE MET-1 (661G)
GU6	AXLE REAR - 3.42 RATIO
GXD	PRIMARY COLOR - EXTERIOR, SHARKSKIN MET-1 (130H)
GXN	PRIMARY COLOR - EXTERIOR, RETROGRADE MET-1 (135H)
H1T	INTERIOR TRIM CONFIG - CLOTH, LEVEL 1, JET BLACK
H2G	INTERIOR TRIM CONFIG - VINYL, LEVEL 1, JET BLACK
H2Z	INTERIOR TRIM CONFIG - CLOTH, LEVEL 2, VAR1, JET BLACK
HFD	INTERIOR TRIM CONFIG - LEATHER, LEVEL 1, JET BLACK / ARTEMIS
HUQ	INTERIOR TRIM CONFIG - LEATHER, LEVEL 1.0, JET BLACK / ADRENALINE RED
HV3	INTERIOR TRIM CONFIG - CLOTH/VINYL, LEVEL 1, JET BLACK / ARTEMIS
HXR	INTERIOR TRIM CONFIG - VINYL, LEVEL 2, JET BLACK
HZY	INTERIOR TRIM CONFIG - CLOTH/VINYL, LEVEL 1, JET BLACK / ADRENALINE RED
IKP	VEH CONTENT BASIS - US
IVD	INFOTAINMENT - VIRTUAL COCKPIT SYS - MID

RPO	Description
J24	ENGINEERING YEAR - 2024
JCF	BRAKE ROTOR - FNC
JGU	BRAKE SYSTEM - 17" FRT FIXED CALIPER DISC, 17" RR SLIDING CALIPER DISC
JHE	CONTROL - HILL DESCENT CONTROL (HDC)
JL1	BRK APL CTRL FEATURE - INTEGRATED TRAILER BRAKE
K05	HEATER ENG - BLOCK
K10	FILTER MONITOR - ENGINE AIR
K34	CRUISE CONTROL - AUTOMATIC, ELECTRONIC
K4C	CHARGER - INDUCTIVE PORTABLE WIRELESS DEVICE
K4F	BATTERY - LN4, AGM, 12V, 80AH, 800 ENCCA
KA1	HEATER SEAT FRT - DRVR & PASS
KC9	RECEPTACLE PUBX - ELECTRICAL, 110 VOLT
KI3	STEERING WHEEL HEAT - AUTOMATIC
KI6	RECEPTCL FRT CNSL RR - ELECTRICAL, 110 VOLT
KL9	ENG CONTROL - STOP/START SYS, CONVENTIONAL AT, CONVENTIONAL MT OR BRAKE RELEASE LATE RESTART
KPA	RECEPTACLE - ELECTRICAL, FRT CONSOLE RR, 12 VOLT
KQX	CAP - FUEL FILL, CAPLESS SYSTEM
KRV	REFRIGERANT - LOW GWP
KSG	CRUISE CONTROL - AUTOMATIC, ADAPTIVE, WITH STOP/GO
KU9	VENTILATED SEAT FRT - DRVR & PASS
KW5	GENERATOR - 220 AMP
KW7	GENERATOR - 170 AMP
L2R	ENGINE - GAS, 4 CYL, L4, 2.7L, DI, TURBO, DOHC, ALUM
L3B	ENGINE - GAS, 4 CYL, L4, 2.7L, SIDI, VVT, TURBO, DOHC, ALUM
LHD	VEHICLE DRIVE - LEFTHAND DRIVE
MFC	TRANSMISSION - AUTO 8 SPD, 8L80, GEN 2, ATSS, CPA
N33	STEERING COLUMN - TILT TYPE
N37	STEERING COLUMN - TILT, TELESCOPING
N5G	STEERING WHEEL - SYNTHETIC, 4 SPOKE, SPORT, ROUND
N8R	TRANSMISSION - AUTO 8 SPD, 8L45, GEN 2, CPA, ATSS
NAM	NAVIGATION - APPS
NCH	LOCK - MANUAL CHILD LOCK SYSTEM (REAR DOOR LATCH)
NE1	CERTIFICATION - EMISSION, GEOGRAPHICALLY RESTRICTED REGISTRATION

RPO	Description
NE8	EVAPORATIVE SYSTEM - LEVEL 3 EMISSIONS
NK5	STEERING WHEEL - STANDARD
NKD	NOISE CONTROL - ENGINE SOUND ENHANCEMENT, ADDED
NP0	TRANSFER CASE - ACTIVE, SINGLE SPEED, SWITCH ACTIVATED, ALUM
NQH	TRANSFER CASE - ACTIVE, TWO SPEED, SWITCH ACTIVATED, ALUM
NTB	EMISSION SYSTEM - FEDERAL, TIER 3
NUG	EMISSION SYSTEM - CALIFORNIA, SULEV30
NYG	WHEEL SPARE - 20 X 9.0, J, ALUMINUM, DESIGN 3
NZS	WHEEL - 20 X 9.0, J, ALUMINUM, DESIGN 17
NZT	WHEEL - 20 X 9.0, J, ALUMINUM, DESIGN 18
P1D	CARRIER - BED MOUNTED, SPARE TIRE
PAN	PHONE PROJ TECH - VAR 1
PAP	PHONE PROJ TECH - VAR 2
PPA	EQUIPMENT - ASSIST, OPEN & CLOSE, TAILGATE
PPW	PHONE PROJECTION - PHONE PROJECTION WIRELESS
PZ8	IMAGE ADJUSTMENT - HITCH VIEW
PZ9	PLATE - SKID, FUEL TANK
PZG	PLATE - SKID FRT
PZI	WHEEL - 18 X 8.5, J, ALUMINUM, DESIGN 9
PZL	PLATE - SKID RR DIFFERENTIAL
PZN	PLATE - SKID TRANSFER CASE
PZX	WHEEL - 18 X 8.5, J, ALUMINUM, DESIGN 2
Q2P	TIRE ALL - 265/65R18 SL 114T AT VAR 2
Q5W	WHEEL - 17 X 8.0, J, ALUMINUM, DESIGN 1
QAE	TIRE ALL - 275/60R20 SL 115S BW AT
QAF	TIRE ALL - LT285/70R17 C 116/113Q BW OOR
QDC	TIRE SPARE - T175/90D18 LL 111M BW SPR
QHR	TIRE ALL - 255/65R17 SL 110T BW ALS
QIA	TIRE ALL - 265/60R18 SL 110T BW AL2
QTE	TIRE ALL - LT315/70R17 C 113/110 S BW OOR VAR1
QXP	TIRE ALL - 255/55R20 SL 107S BW AT
R1U	WHEEL - 17 X 8.0, J, ALUMINUM, DESIGN 3
R3O	TIRE ALL - LT275/65R18 C 113/110Q BW OOR, VAR1
R5C	TIRE BRAND ALL - BRIDGESTONE

RPO	Description
R88	ACCESSORY - ILLUMINATED EMBLEM - EXTERIOR - DESIGN 2
RD6	WHEEL - 17 X 8.0, J, STEEL, DESIGN 2
RD8	TIRE SPARE - LT315/70R17 C 113/110 S BW OOR VAR 1
RDI	ACCESSORY - KEYLESS ENTRY
RIA	ACCESSORY - FLOOR LINER - CONTOURED
RIK	ACCESSORY - BADGE - EXTERIOR, PACKAGE, DESIGN 1
RM7	WHEEL SPARE - 17 X 8.0, J, STEEL, DESIGN 1
RMR	TIRE SPARE - LT285/70R17 C 116/113Q BW OOR
RMW	TIRE SPARE - 275/60R20 SL 115S BW AT
RPE	WHEEL - 17 X 8.5, J, ALUMINUM, DESIGN 6
RPP	WHEEL - 17 X 8.0, J, STEEL, DESIGN 4
RPS	WHEEL - 20 X 9.0, J, ALUMINUM, DESIGN 13
RSR	OCCUPANT DETECT SYS - REAR SEAT, DOOR ACTIVATED
RTI	WHEEL SPARE - 18 X 4.5, B, STEEL, DESIGN 1
RVP	ACCESSORY - ASSIST STEPS - REMOVABLE
RW2	ACCESSORY - BED RAILS - BLACK
RWF	ACCESSORY - JOUNCE SHOCKS
RWL	CHASSIS DRIVE LINE - REAR WHEEL DRIVE (RWD)
RX9	ACCESSORY TIRE - 255/55R20 SL 107S BW AT
RXC	ACCESSORY - AIR, POLLUTANT, ODOR, FINE DUST, ALLERGEN
RXH	ACCESSORY - CENTER CAP - WHEEL - DESIGN 1
RXJ	ACCESSORY - CENTER CAP - WHEEL - DESIGN 2
RYT	ACCESSORY - FIRST AID KIT
RZU	ACCESSORY - LAMPS-AUX OFF ROAD
RZW	ACCESSORY - HARNESS - TRAILER HITCH
RZY	ACCESSORY - HARNESS - WIRING
S08	ACCESSORY - HIGHWAY SAFETY KIT
S0Y	ACCESSORY - LAMPS - CARGO AREA
S1H	ACCESSORY - OFF-ROAD RECOVERY KIT
S3W	ACCESSORY - LAMPS - FRONT GRILLE MOUNTED - OFF-ROAD
S3X	ACCESSORY - LAMPS - FRONT ROOF MOUNTED - OFF-ROAD
S47	ACCESSORY - LUG NUTS
S6L	ACCESSORY - PROTECTOR - ROCKER PANEL
S6P	ACCESSORY - REMOTE START KIT

## 1-12 General Information

RPO	Description
SA5	ACCESSORY - SHIELD - UNDERBODY
SAX	ACCESSORY - SPEAKER KIT - LEVEL 1
SB1	ACCESSORY - SPLASH GUARDS - FLAT
SB7	ACCESSORY - DECAL PACKAGE - DESIGN 1
SBY	ACCESSORY - SPORT BAR - BED MOUNTED - DESIGN 1
SD0	ACCESSORY - OFF ROAD FRONT BUMPER FASCIA
SD5	ACCESSORY - TIRE PRESSURE MONITOR
SDE	ACCESSORY - TRAILER HITCH - REMOVABLE
SF8	ACCESSORY - DECAL PACKAGE - DESIGN 3
SFE	ACCESSORY - WHEEL LOCKS
SFZ	ACCESSORY - EMBLEM - EXTERIOR - DESIGN 1
SHQ	ACCESSORY - DECAL PACKAGE - DESIGN 11
SHS	ACCESSORY - DECAL PACKAGE - DESIGN 13
SIQ	ACCESSORY - SKID PLATES - FRONT DESIGN 1
SIR	ACCESSORY - SKID PLATES - REAR DESIGN 1
SJ8	ACCESSORY - ILLUMINATION PACKAGE - INTERIOR AMBIENT
SKA	WHEEL SPARE - 17 X 8.5, J, ALUMINUM, DESIGN 1
SMY	ACCESSORY - WHEEL - 17 X 8.0 - J - ALUMINUM - DESIGN 1
SMZ	ACCESSORY - OFF ROAD DRIVE SHAFT
SNU	ACCESSORY - WHEEL - 20 X 9 - J - ALUMINUM - DESIGN 4
SNX	ACCESSORY - WHEEL - 20 X 9 - J - ALUMINUM - DESIGN 1
SPY	ACCESSORY - LUG NUTS - ALT FINISH
SPZ	ACCESSORY - WHEEL LOCKS - ALT FINISH
SQI	ACCESSORY - SUSPENSION LIFT KIT
SRH	ACCESSORY - WHEEL - 17 X 8.0 - J - ALUMINUM - DESIGN 3
SRL	ACCESSORY - WHEEL - 22 X 9.0 - J - ALUMINUM - DESIGN 13
SRV	ACCESSORY - WHEEL - 22 X 9.0 - J - ALUMINUM - DESIGN 14
T3V	LAMP - CHMSL - CENTER HIGH MOUNT STOP LIGHT (SEE BFO BEFORE USING)
T40	LAMP FRT FOG - FRT FOG, LED
T4A	HEADLAMPS - HALOGEN
T4L	HEADLAMPS - LED
T4Z	SEAT BELT SAFETY SYS - SHIFTER INTERLOCK, GEN 1, NON-CUSTOMIZABLE

RPO	Description
T7E	LAMP SYSTEM - DAYTIME RUNNING, LED
T7Q	LAMP SYSTEM - DAYTIME RUNNING, HALOGEN
T83	CONTROL, HEADLAMPS - AUTOMATIC ON-OFF
T8Z	SEAT BELT SAFETY SYS - SHIFTER INTERLOCK, GEN 3, INFOTAINMENT CUSTOMIZABLE
T93	LAMP - TAIL & STOP, SPECIAL
TCA	LAMP - DOME, CENTER
TCK	DEFLECTOR - RR TIRE, AIR
TDM	MODE DRIVER SETTINGS - TEEN DRIVER, INFOTAINMENT
TGZ	ACCESSORY - TAILGATE ORGANIZER DESIGN 3
TQ5	HEADLAMP HIGH BEAM - AUTO CONTROL
U1D	INDICATOR - TRAILER INFORMATION
U2K	DIGITAL AUDIO SYSTEM - S-BAND
U91	ANTENNA - SHORT, ROOF, RADIO
UBD	RECPT USB FLR CNSL F - DUAL, CHARGE, DATA
UBI	RECPT USB FLR CNSL R - DUAL, CHARGE
UBP	RECPT USB FLR CNSL R - SINGLE, CHARGE
UD7	PARK ASSIST - REAR
UE1	COMMUNICATION SYSTEM - VEHICLE, ONSTAR
UE4	SENSOR INDICATOR - FOLLOWING DISTANCE
UEU	SENSOR INDICATOR - FORWARD COLLISION ALERT
UF2	LAMP - CARGO
UFB	REAR CROSS TRAFFIC - ALERT, BRAKING
UGA	HOOK - TOW, RED
UH5	INDICATOR - SEAT BELT WARNING, REAR SEAT
UHX	LANE ACTIVE SAFETY - KEEP ASSIST
UHY	COLL IMMINENT BRK - LOW SPEED, VEH FWD MOVEMENT, BRAKE PREFILL, INTEGRATED BRAKE ASSIST
UIT	ALERT DISPLAY - REFLECTED, SINGLE COLOR
UJN	TIRE PRESS INDICATOR - AUTO LEARN
UKI	SIDE ACTIVE SAFETY - OBSTACLE DETECTION ENHANCED, STEERING ASSIST
UKK	SENSOR INDICATOR - PEDESTRIAN DETECTION - REAR
UKT	PED DETECTION FRT - ENHANCED, PEDESTRIANS AND BICYLISTS

RPO	Description
UKW	SIDE ACTIVE SAFETY - OBSTACLE DETECTION ENHANCED, STEERING ASSIST, EXTENDED TRAILER VIEW
ULK	ACCESSORY - TOW HOOKS - RED
ULV	ACCESSORY - FLOOR LINER - CONTOURED
ULV	ACCESSORY - JOUNCE SHOCKS
ULV	ACCESSORY - WHEEL FLARES
ULV	BUMPER - RR, VAR 1
ULV	BUMPER FRT - SPORT
ULV	CARRIER - BED MOUNTED, SPARE TIRE
ULV	EQUIPMENT - SUPPLIER INSTALLED
ULV	PLATE - SKID FRT
ULV	PLATE - SKID RR DIFFERENTIAL
ULV	PLATE - SKID TRANSFER CASE
ULV	PLATE - SKID, FUEL TANK
ULV	SALES PACKAGE - SAFETY PACKAGE VAR. 1
ULV	TIRE ALL - LT315/70R17 C 113/110 S BW OOR VAR1
ULV	TIRE SPARE - LT315/70R17 C 113/110 S BW OOR VAR 1
ULV	WHEEL - 17 X 8.5, J, ALUMINUM, DESIGN 6
ULV	WHEEL SPARE - 17 X 8.5, J, ALUMINUM, DESIGN 1
ULV	SALES PACKAGE - CHEVROLET BISON
UMN	SPEEDOMETER - INST, MILES & KILO, MILES ODOMETER
UQ3	SPEAKER SYSTEM - ENHANCED AUDIO
UQA	SPEAKER SYSTEM - PREMIUM AUDIO, BRANDED AMPLIFIER
URC	SWITCH - FLEXRIDE MODE SYSTEM
URF	DISPLAY INSTRUMENT - DRIVER INFO, DISPLAY ONLY, FAMILY C, 11", 2000 X 810
URL	INFOTAINMENT DISPLAY - FAMILY C, 11"+, 2000X970
UTJ	THEFT DETERENT - ELECTRICAL, UNAUTHORIZED ENTRY
UUA	DISPLAY AOS - OCCUPANT SENSING, MVSS
UUT	ALARM, HORN - TIRE FILL ALERT
UV2	VISION - 360 VIEW, MONO, HD DIGITAL
UVB	VISION - REAR VIEW, MONO, HD DIGITAL
UXA	VISION UNDERBODY - FORWARD AND REARWARD FACING
V8D	VEHICLE STATEMENT - VEHICLE LABEL CONTENT - U.S. FMVSS
VAV	ACCESSORY - FLOOR MATS - ALL WEATHER
VBP	ACCESSORY - POWER DISTRIBUTION BOX
VBR	ACCESSORY - PUBX RUBBER MAT

RPO	Description
VHM	PROGNOSTIC SYSTEM - VEHICLE HEALTH MANAGEMENT
VHU	BUMPER FRT - SPORT
VJQ	HOOK - TOW, FRT
VK3	LICENSE PLATE FRONT - FRT MOUNTING PKG
VKV	ACCESSORY - WHEEL FLARES
VOZ	ACCESSORY - TONNEAU - RR COMPT - HARD FOLDING - ALT DESIGN
VPB	ACCESSORY - TONNEAU - RR COMPT - VINYL W/ INTEGRAL CROSSBOW SUPPORTS
VQH	BUMPER - RR, VAR 1
VQK	ACCESSORY - SPLASH GUARDS - CUSTOM MOLDED
VQM	ACCESSORY - ASSIST STEPS - CHROME
VQO	ACCESSORY - ASSIST STEPS - BLACK
VQZ	ACCESSORY - EXHAUST TIP - DESIGN 1
VST	ACCESSORY - SILL PLATES - ALTERNATE DESIGN 1
VTA	ACCESSORY - EXHAUST TIP - DESIGN 2
VV4	COMMUNICATION EQUIP - MOBILE INTERNET CONNECTIVITY
VW1	ACCESSORY - WINCH
VW9	ACCESSORY - CENTER CAP - WHEEL - DESIGN 3
VWD	ACCESSORY - CENTER CAP - WHEEL - DESIGN 4
VZJ	ACCESSORY - SWITCH PLATE - INTERIOR
VZT	ACCESSORY - ASSIST STEPS - OFF ROAD
W0H	ACCESSORY - TOW HOOKS - ALT FINISH
W1Y	CONTROL - STEERING WHEEL, RADIO, REDUNDANT CONTROLS
W7X	PERFORMANCE PACKAGE - INCREASED ENGINE HORSE POWER
WEN	PLANT CODE - WENTZVILLE, MO, USA
WLD	WINDOW CONTROL - REMOTE EXPRESS DOWN, ALL WINDOWS
WMI	SHUTTERS - FRONT GRILLE, ACTIVE, UPR AND LWR
WMY	VIN MODEL YEAR - 2024
WPC	ADJUSTER PASS ST - 6WAY, PWR RECLINE, PWR FORE/AFT, PWR HEIGHT
WPC	ARM REST - RR SEAT, CENTER
WPC	CHARGER - INDUCTIVE PORTABLE WIRELESS DEVICE
WPC	COMPARTMENT - STOWAGE TAILGATE
WPC	DEFOGGER - RR WINDOW, ELECTRIC
WPC	EQUIPMENT - ASSIST, OPEN & CLOSE, TAILGATE
WPC	HVAC SYSTEM - AIR CONDITIONER FRT, AUTO TEMP CONT, AUX TEMP CONT

## 1-14 General Information

RPO	Description
WPC	INTERIOR TRIM CONFIG - LEATHER, LEVEL 3, JET BLACK / SIGNET
WPC	LAMP - INTR, FRT HEADER, COURTESY & DUAL READING
WPC	LAMP FRT FOG - FRT FOG, LED
WPC	LOCK CYLINDER - RR COMPT
WPC	LUMBAR PASSENGER - SEAT, POWER, 2 WAY
WPC	MEMORY - SEAT ADJUSTER, MIRROR, POWER, DRIVER, PERSONALIZATION
WPC	MIRROR I/S R/V - LT SENSITIVE
WPC	MIRROR O/S - LH & RH, RC, ELEC, HEAT, MAN FOLD, FLAT/DRVR, CNVXPASS
WPC	PARK ASSIST - REAR
WPC	POCKET - FRONT SEAT BACK, DRIVER
WPC	REAR CROSS TRAFFIC - ALERT, BRAKING
WPC	RECEPTACLE PUBX - ELECTRICAL, 110 VOLT
WPC	RECEPTCL FRT CNSL RR - ELECTRICAL, 110 VOLT
WPC	RECPT USB FLR CNSL R - DUAL, CHARGE
WPC	REMOTE START - VEHICLE
WPC	SIDE ACTIVE SAFETY - OBSTACLE DETECTION ENHANCED, STEERING ASSIST
WPC	SIDE ACTIVE SAFETY - OBSTACLE DETECTION ENHANCED, STEERING ASSIST, EXTENDED TRAILER VIEW
WPC	STEERING COLUMN - TILT, TELESCOPING
WPC	STEERING WHEEL HEAT - AUTOMATIC
WPC	SUNSHADE - DRIVER, MIRROR, COVER, ILLUM, SLIDING, PASS, MIRROR, COVER, ILLUM, SLIDING
WPC	VENTILATED SEAT FRT - DRVR & PASS
WPC	WINDOW RR - FULL WIDTH, SLIDING, MANUAL
WPL	ARM REST - RR SEAT, CENTER
WPL	INTERIOR TRIM CONFIG - VINYL, LEVEL 2, JET BLACK
WPL	POCKET - FRONT SEAT BACK, DRIVER
WPL	SALES PACKAGE - COLD WEATHER
WPL	SALES PACKAGE - DRIVER AWARENESS 1
XCQ	TIRE SPARE - 265/70R17 SL 115S BW SPR VAR1
XD5	ACCESSORY TIRE - TIRE ALL-275/50R22 SL 111T BW AL2
XDF	ACCESSORY TIRE - TIRE ALL - 275/60R20 SL 115S BW AT
XEV	ACCESSORY - FLOOR LINER - CONTOURED

RPO	Description
XEV	ACCESSORY - POWER DISTRIBUTION BOX
XEV	ACCESSORY - SWITCH PLATE - INTERIOR
XEV	ACCESSORY - WHEEL FLARES
XEV	BUMPER - RR, VAR 1
XEV	BUMPER FRT - CHANNEL, STEEL, BLACK
XEV	CARRIER - BED MOUNTED, SPARE TIRE
XEV	EQUIPMENT - SUPPLIER INSTALLED
XEV	PLATE - SKID FRT
XEV	PLATE - SKID RR DIFFERENTIAL
XEV	PLATE - SKID TRANSFER CASE
XEV	PLATE - SKID, FUEL TANK
XEV	TIRE ALL - LT315/70R17 C 113/110 S BW OOR VAR1
XEV	TIRE SPARE - LT315/70R17 C 113/110 S BW OOR VAR 1
XEV	WHEEL - 17 X 8.5, J, ALUMINUM, DESIGN 8
XEV	WHEEL SPARE - 17 X 8.5, J, ALUMINUM, DESIGN 2
Y19	ADJUSTER DRIVER SEAT - 8WAY, PWR RECLINE, PWR FORE/AFT, PWR HEIGHT, PWR TILT
Y19	HEATER SEAT FRT - DRVR & PASS
Y19	LUMBAR DRIVER - SEAT, POWER, 2 WAY
Y19	SALES PACKAGE - COMFORT AND CONVENIENCE
Y5D	CRUISE CONTROL - AUTOMATIC, ADAPTIVE, WITH STOP/GO
Y5D	HEAD UP DISPLAY - WINDSHIELD
Y5D	SALES PACKAGE - COMFORT AND CONVENIENCE
Y5D	SENSOR INDICATOR - PEDESTRIAN DETECTION - REAR
Y5D	VISION - 360 VIEW, MONO, HD DIGITAL
Y5W	PARK ASSIST - REAR
Y5W	REAR CROSS TRAFFIC - ALERT, BRAKING
Y5W	SALES PACKAGE - COMFORT AND CONVENIENCE
Y5W	SIDE ACTIVE SAFETY - OBSTACLE DETECTION ENHANCED, STEERING ASSIST
Y5W	SIDE ACTIVE SAFETY - OBSTACLE DETECTION ENHANCED, STEERING ASSIST, EXTENDED TRAILER VIEW
Y5X	CRUISE CONTROL - AUTOMATIC, ADAPTIVE, WITH STOP/GO
Y5X	LOCK CYLINDER - RR COMPT
Y5X	SALES PACKAGE - DRIVER AWARENESS 1
Y5X	SENSOR INDICATOR - PEDESTRIAN DETECTION - REAR
Y5X	VISION - 360 VIEW, MONO, HD DIGITAL



RPO	Description
YF5	CERTIFICATION - EMISSION, CALIFORNIA
Z2I	CHASSIS PACKAGE - 2 INCH LIFT
Z82	TRAILER PROVISIONS - SPECIAL EQUIPMENT, H.D.
ZAO	TIRE SPARE - 255/65R17 SL 110T BW ALS VAR1
ZL3	COMPARTMENT - STOWAGE TAILGATE
ZL3	CONSOLE - FRT COMPT, FLOOR, CUSTOM
ZL3	CRUISE CONTROL - AUTOMATIC, ELECTRONIC
ZL3	DEFOGGER - RR WINDOW, ELECTRIC
ZL3	EQUIPMENT - ASSIST, OPEN & CLOSE, TAILGATE
ZL3	HVAC SYSTEM - AIR CONDITIONER FRT, AUTO TEMP CONT, AUX TEMP CONT
ZL3	LAMP FRT FOG - FRT FOG, LED
ZL3	LOCK CONTROL RR CMPT - TAILGATE, REM CONT ELEC OPEN/CLOSE
ZL3	LOCK CYLINDER - RR COMPT
ZL3	STEERING COLUMN - TILT, TELESCOPING
ZL3	SUNSHADE - DRIVER, MIRROR, COVER, ILLUM, SLIDING, PASS, MIRROR, COVER, ILLUM, SLIDING
ZL3	WINDOW RR - FULL WIDTH, SLIDING, MANUAL
ZL3	SALES PACKAGE - CONVENIENCE
ZL4	ARM REST - RR SEAT, CENTER
ZL4	CHARGER - INDUCTIVE PORTABLE WIRELESS DEVICE
ZL4	HEADLAMPS - LED
ZL4	INTERIOR TRIM CONFIG - LEATHER, LEVEL 1, JET BLACK / ARTEMIS
ZL4	INTERIOR TRIM CONFIG - LEATHER, LEVEL 1.0, JET BLACK / ADRENALINE RED
ZL4	INTERIOR TRIM CONFIG - VINYL, LEVEL 2, JET BLACK
ZL4	LAMP - TAIL & STOP, SPECIAL
ZL4	LAMP SYSTEM - DAYTIME RUNNING, LED
ZL4	MEMORY - SEAT ADJUSTER, MIRROR, POWER, DRIVER, PERSONALIZATION
ZL4	POCKET - FRONT SEAT BACK, DRIVER
ZL4	RECEPTACLE PUBX - ELECTRICAL, 110 VOLT
ZL4	RECEPTCL FRT CNSL RR - ELECTRICAL, 110 VOLT
ZL4	RECPT USB FLR CNSL R - DUAL, CHARGE
ZL4	SALES PACKAGE - CONVENIENCE II
ZL4	SALES PACKAGE - SAFETY PACKAGE VAR. 1
ZL4	STEERING WHEEL HEAT - AUTOMATIC

RPO	Description
ZL4	VENTILATED SEAT FRT - DRVR & PASS
ZL4	SALES PACKAGE - CONVENIENCE III
ZL6	AXLE POSITRACTION - LIMITED SLIP
ZL6	INDICATOR - TRAILER INFORMATION
ZL6	TRAILER PROVISIONS - SPECIAL EQUIPMENT, H.D.
ZL6	SALES PACKAGE - TRAILER INTEGRATION
ZR2	CHASSIS PACKAGE - HIGH WIDER PERFORMANCE, 4 X 4 SPORT

**BLANK**

## Section 2

# Body Systems


<p><b>Fixed and Moveable Windows</b> ..... <a href="#">2-3</a></p> <p>  <b>Schematic and Routing Diagrams</b> ..... <a href="#">2-3</a></p> <p>    Moveable Window Schematics ..... <a href="#">2-4</a></p> <p>    Defogger Schematics ..... <a href="#">2-9</a></p> <p>  <b>Description and Operation</b> ..... <a href="#">2-10</a></p> <p>    Power Windows Description and Operation .... <a href="#">2-10</a></p> <p>    Rear Window Defogger Description and     Operation ..... <a href="#">2-10</a></p> <p><b>Horns and Pedestrian Alerts</b> ..... <a href="#">2-11</a></p> <p>  <b>Schematic and Routing Diagrams</b> ..... <a href="#">2-11</a></p> <p>    Horn Schematics ..... <a href="#">2-12</a></p> <p>  <b>Description and Operation</b> ..... <a href="#">2-13</a></p> <p>    Horns System Description and Operation ..... <a href="#">2-13</a></p> <p><b>Lighting</b> ..... <a href="#">2-14</a></p> <p>  <b>Schematic and Routing Diagrams</b> ..... <a href="#">2-14</a></p> <p>    Headlights/Daytime Running Lights (DRL)     Schematics ..... <a href="#">2-15</a></p> <p>    Fog Lights Schematics ..... <a href="#">2-18</a></p> <p>    Exterior Lights Schematics ..... <a href="#">2-19</a></p> <p>    Interior Lights Schematics ..... <a href="#">2-28</a></p> <p>    Interior Lights Dimming Schematics ..... <a href="#">2-30</a></p> <p>  <b>Description and Operation</b> ..... <a href="#">2-33</a></p> <p>    Exterior Lighting Systems Description and     Operation ..... <a href="#">2-33</a></p> <p>    Interior Lighting Systems Description and     Operation ..... <a href="#">2-35</a></p> <p><b>Mirrors</b> ..... <a href="#">2-37</a></p> <p>  <b>Schematic and Routing Diagrams</b> ..... <a href="#">2-37</a></p> <p>    Inside Rearview Mirror Schematics ..... <a href="#">2-38</a></p> <p>    Outside Rearview Mirror Schematics ..... <a href="#">2-39</a></p> <p>  <b>Description and Operation</b> ..... <a href="#">2-42</a></p> <p>    Automatic Day-Night Mirror Description and     Operation ..... <a href="#">2-42</a></p> <p>    Outside Mirror Description and Operation ..... <a href="#">2-42</a></p> <p><b>Trailer Systems</b> ..... <a href="#">2-44</a></p> <p>  <b>Schematic and Routing Diagrams</b> ..... <a href="#">2-44</a></p> <p>    Trailer Systems Schematics ..... <a href="#">2-45</a></p> <p>  <b>Description and Operation</b> ..... <a href="#">2-49</a></p> <p>    Trailer Description and Operation ..... <a href="#">2-49</a></p> <p><b>Vehicle Access</b> ..... <a href="#">2-55</a></p> <p>  <b>Schematic and Routing Diagrams</b> ..... <a href="#">2-55</a></p> <p>    Door Lock/Indicator Schematics ..... <a href="#">2-56</a></p>	<p>    Hood Latch Schematics ..... <a href="#">2-61</a></p> <p>  <b>Description and Operation</b> ..... <a href="#">2-62</a></p> <p>    Door Ajar Indicator Description and     Operation ..... <a href="#">2-62</a></p> <p>    Door Ajar Indicator Description and     Operation ..... <a href="#">2-62</a></p> <p>    Endgate Description and Operation ..... <a href="#">2-62</a></p> <p>    Hood Ajar Indicator Description and     Operation ..... <a href="#">2-62</a></p> <p>    Power Door Locks Description and     Operation ..... <a href="#">2-63</a></p> <p><b>Wipers and Washers</b> ..... <a href="#">2-64</a></p> <p>  <b>Schematic and Routing Diagrams</b> ..... <a href="#">2-64</a></p> <p>    Wiper/Washer Schematics ..... <a href="#">2-65</a></p> <p>  <b>Description and Operation</b> ..... <a href="#">2-68</a></p> <p>    Wiper/Washer System Description and     Operation ..... <a href="#">2-68</a></p>
--	--

**BLANK**


# Fixed and Moveable Windows

## Schematic and Routing Diagrams


Moveable Window Schematics (Driver Window (AXG))

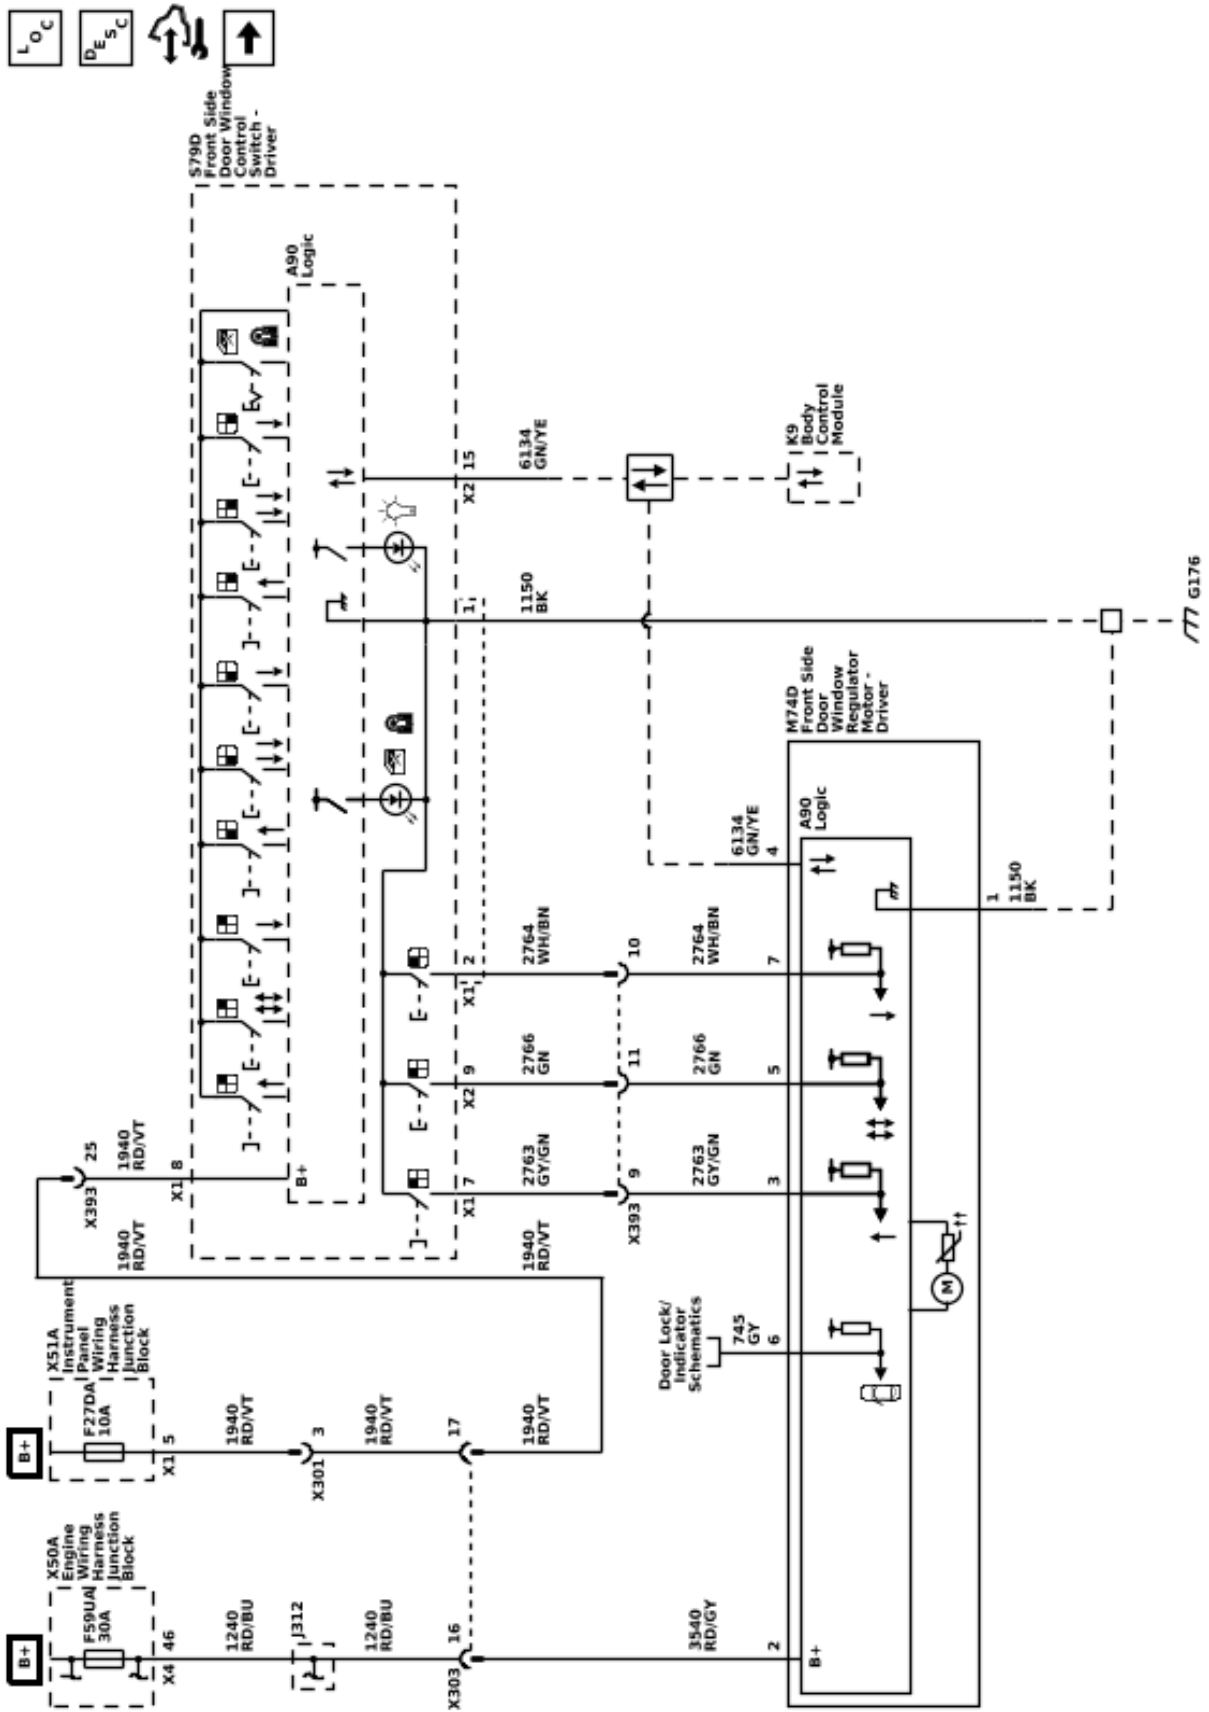

Moveable Window Schematics (Driver Window (AEC))

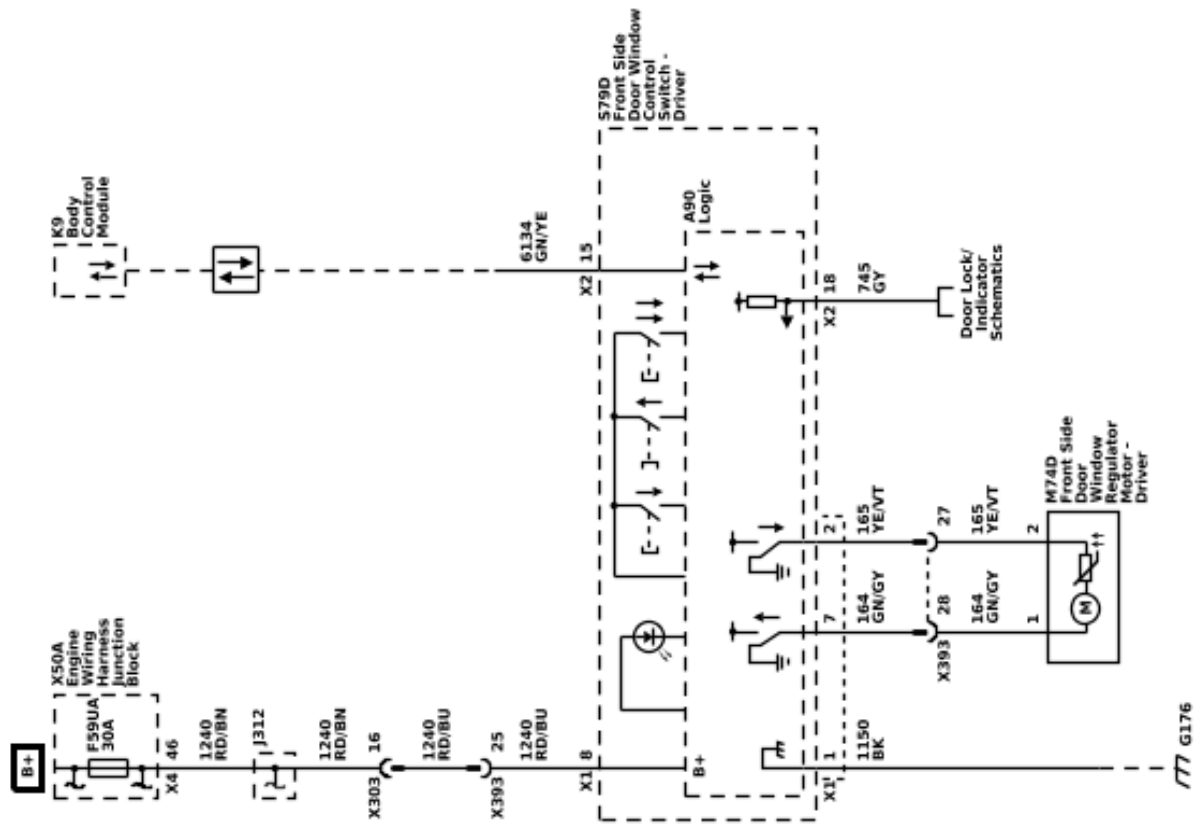


Moveable Window Schematics (Passenger Window)

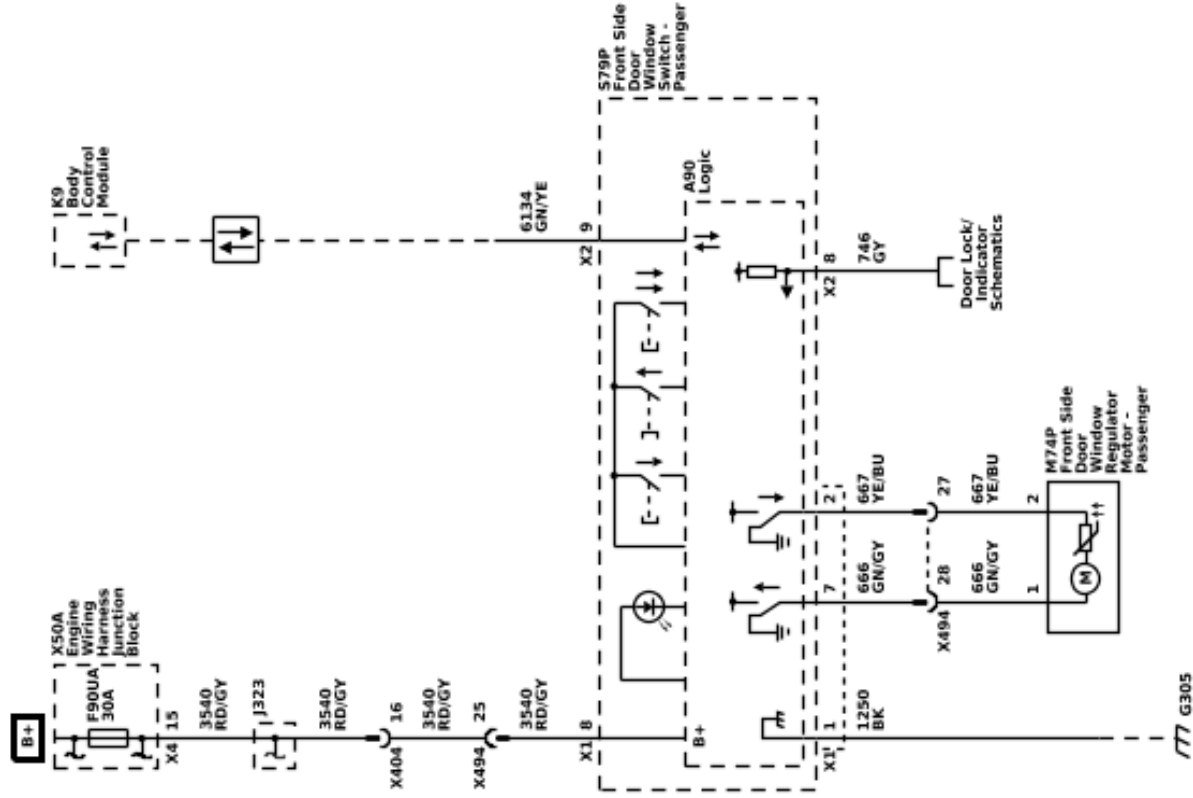




Moveable Window Schematics (Rear windows)

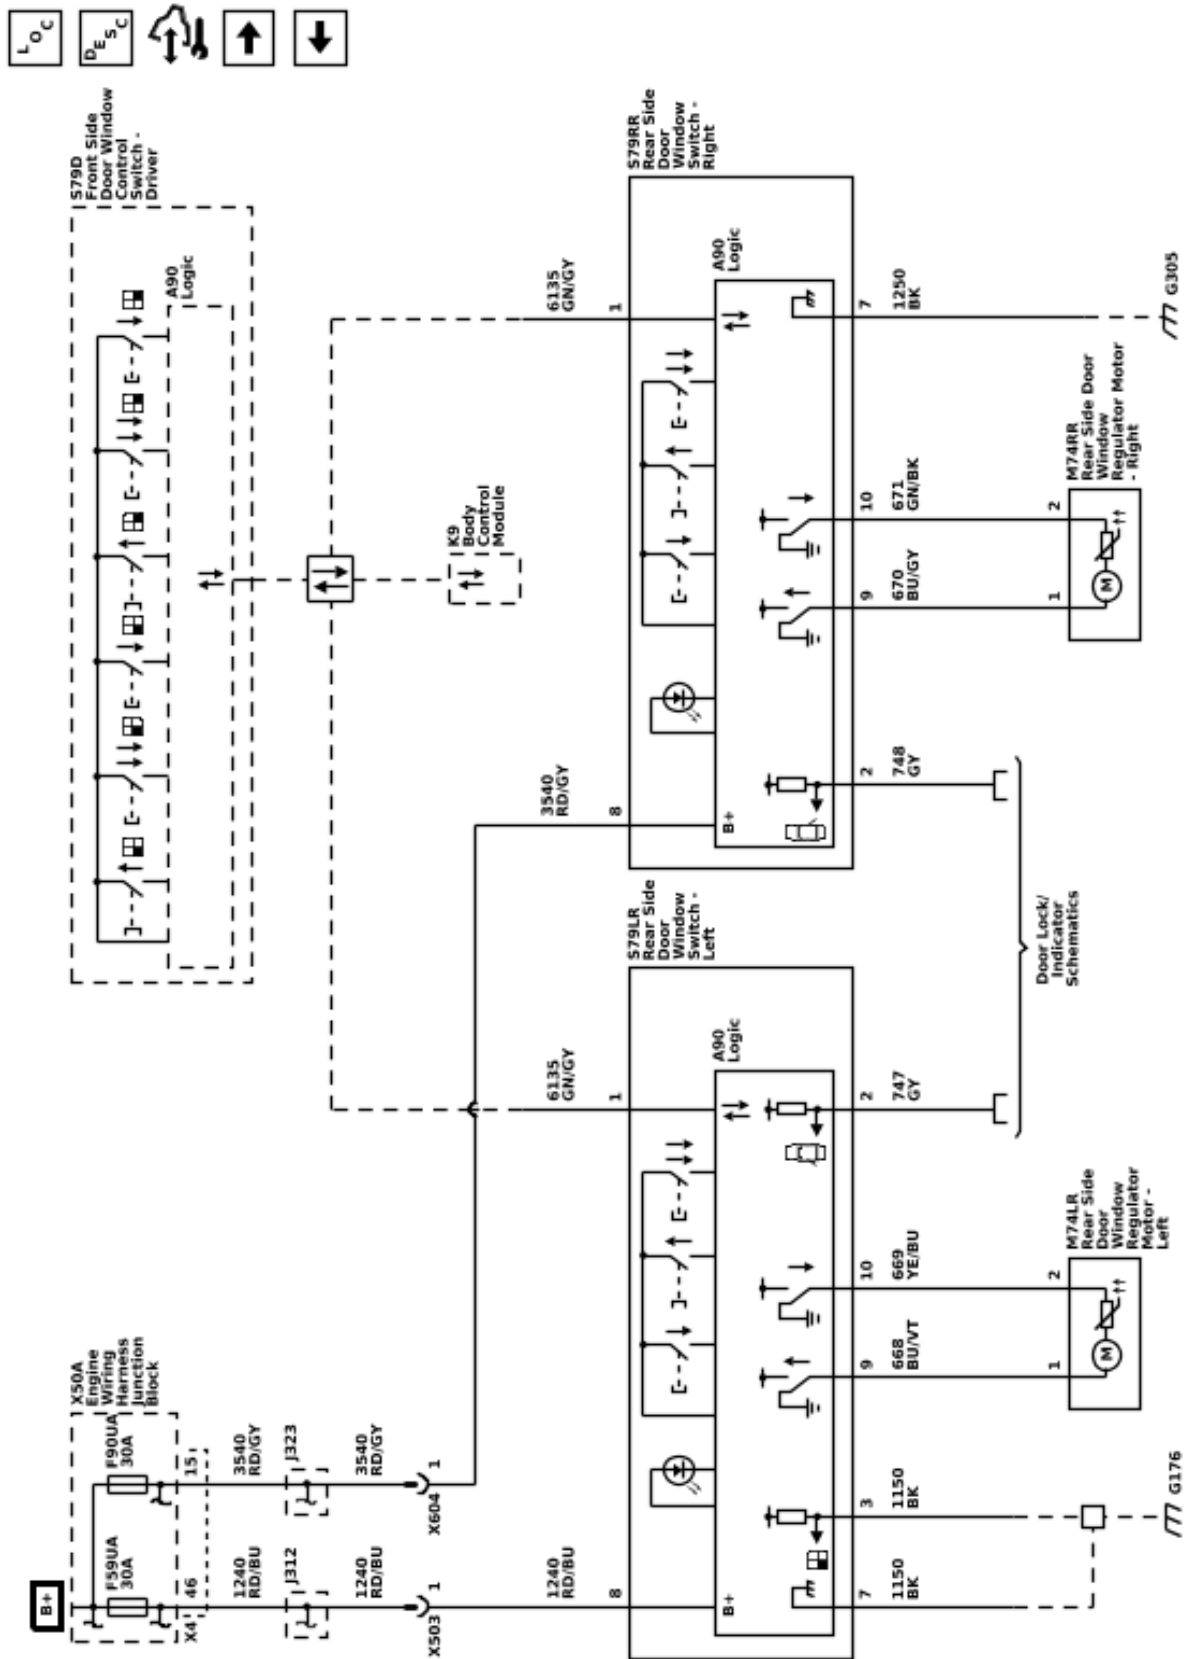


Moveable Window Schematics (Global Window Express Down Switch (WLD))

LOC

DES

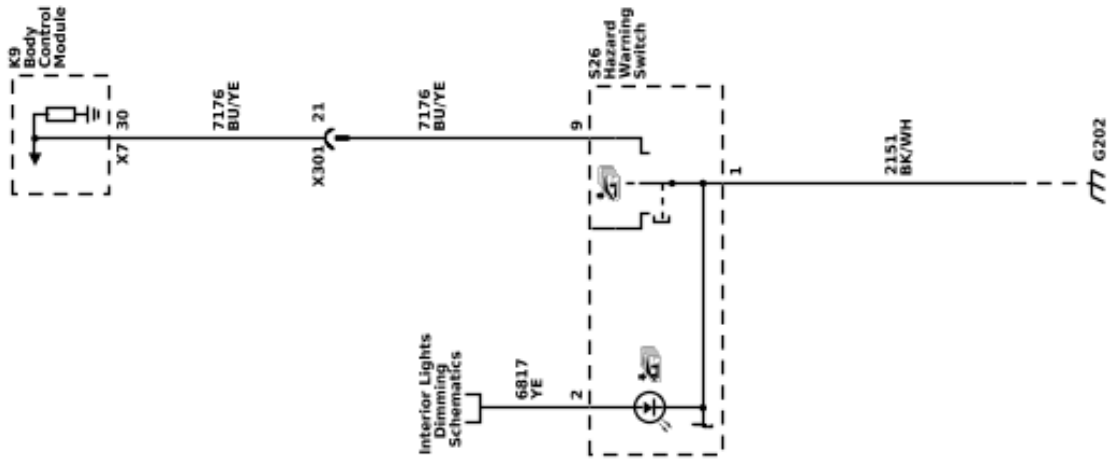

### Defogger Schematics (Defogger (C49))

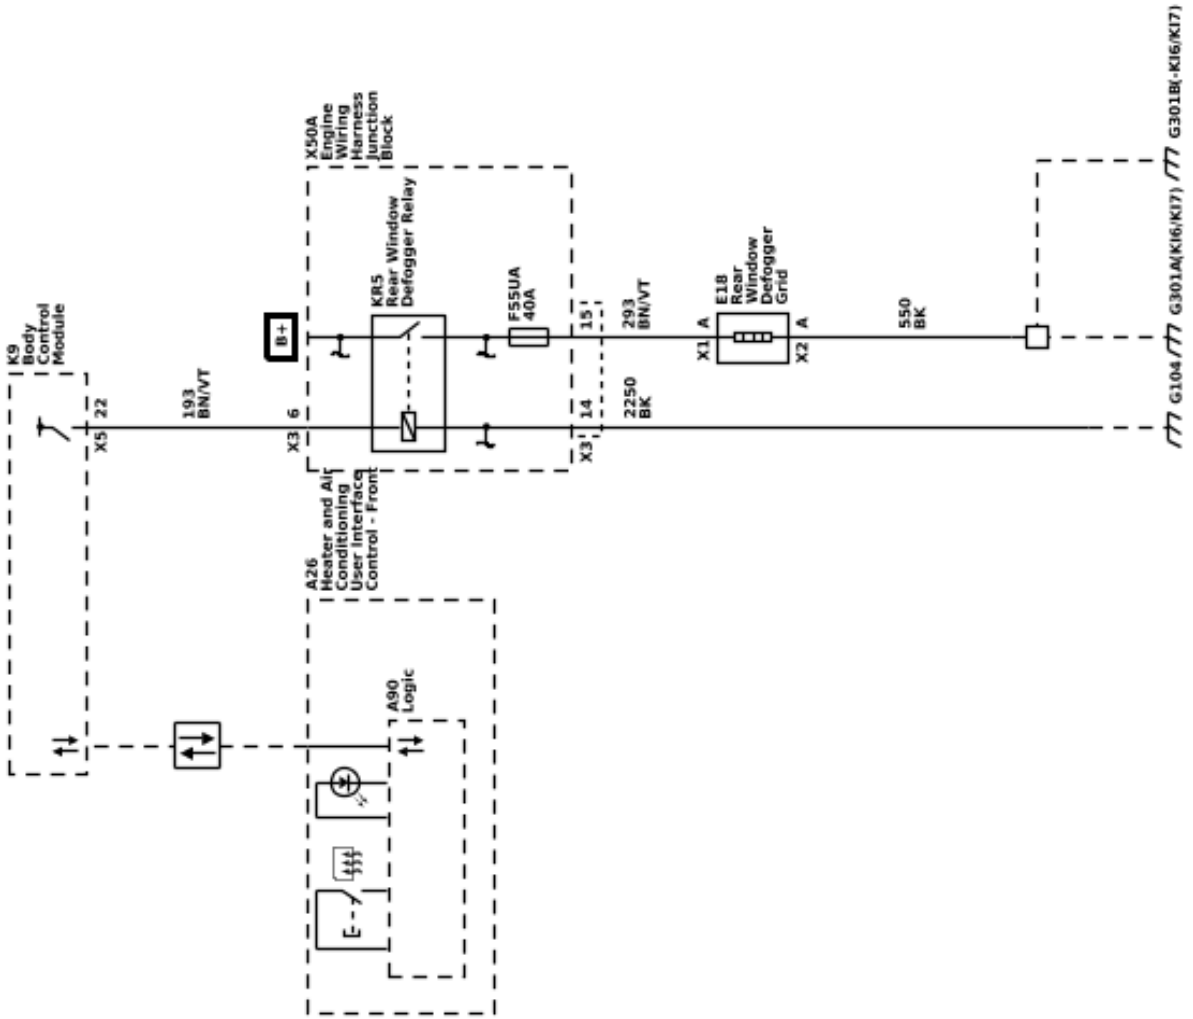

## Description and Operation

### Power Windows Description and Operation

#### Power Windows System Components

The power window system consists of the following components:

- Driver front side door window control switch
- Passenger front side door window control switch
- Left rear side door window switch
- Right rear side door window switch
- Global window down switch
- Window motors in each of the doors
- Body control module (BCM)

#### Driver Express Up and Express Down Power Window Motors

The driver door contains a smart window motor that will detect excessive resistance while performing the express up function and automatically reverse direction to prevent injury to any occupants that may become trapped between the closing window and the door frame. The automatic reverse safety feature can be overridden by pulling and holding the window switch.

The logic circuit within the window motor monitors the up, down and express signal circuits which are normally equal to B+ voltage. When a switch is used on the front side door window control switch, the contacts close causing a voltage drop within the appropriate signal circuit. The window motor will detect the voltage drop and will command the window to move in the direction requested.

The driver front side door window control switch communicates to the BCM by a serial data circuit. When the driver wishes to control the passenger windows, the driver will use the appropriate switch on the driver front side door window control switch. When this switch is used, a serial data message is sent to the BCM requesting the passenger window motor command, the BCM will then send a serial data message to the passenger window motor which will then move in the direction requested.

#### Passenger, Left Rear, Right Rear Express Down Window Motors

For the passenger, and rear doors, when their window switch is pressed in the down position, battery positive voltage is applied to their respective window motor control circuit and ground to the other window motor control circuit causing that window to open. When the individual window switch is pulled in the up position, voltage and ground is applied to the window motor in the opposite direction causing that window to close. The return path to ground is supplied through the inactive control circuit being normally grounded through the window switch.

Each of the passenger window switches communicates to the BCM by a serial data circuit. When the driver wishes to control the left rear or right rear window, the driver will use the appropriate switch on the driver front side door window control switch. When this switch is

used, a serial data message is sent to the BCM requesting a window motor command, the BCM will then send a serial data message to the appropriate rear side door window switch which will then command that window to move in the direction requested.

#### Lockout Switch Feature

The driver front side door window control switch contains a window lockout switch, when the driver presses the window lockout switch, a serial data message is sent to the BCM which will send a disable command to the rear side door window switches, deactivating them. The rear windows will still function normally from the switches on the driver front side door window control switch.

### Rear Window Defogger Description and Operation

#### Rear Window Defogger System Components

The rear window defogger system consists of the following components:

- Body Control Module
- Front Heater and Air Conditioning User Interface Control
- Engine Wiring Harness Junction Block (Contains PCB Rear Defogger Relay)
- Rear Defogger Grid
- 40A Fuse

#### Rear Window Defogger Operation

The rear defog control system utilizes a single zone backlight design, driven with a single relay configuration. A switch for the customer to control the system is provided within the front heater and air conditioning user interface control. Also included in the front heater and air conditioning user interface control is an indicator to inform the customer with the current state of the system. The system is only operational when engine is running or during remote start.


Pressing the heated rear window switch causes the front heater and air conditioning user interface control to send a serial data message to the body control module requesting rear window defog operation. The body control module upon receipt of the serial data message will provide voltage to the coil side of the rear defogger relay, this will energize the relay causing the relay switch contacts to close allowing B+ voltage to flow through the rear defogger grid control circuit to the rear defogger grid.

When the rear heated rear window switch is pressed and the engine is running, the rear window defogger grid will activate and will turn off automatically depending upon the vehicle speed (refer to owner's manual for rear window defogger operation cycles)

# Horns and Pedestrian Alerts

## Schematic and Routing Diagrams

Horn Schematics (Horns)

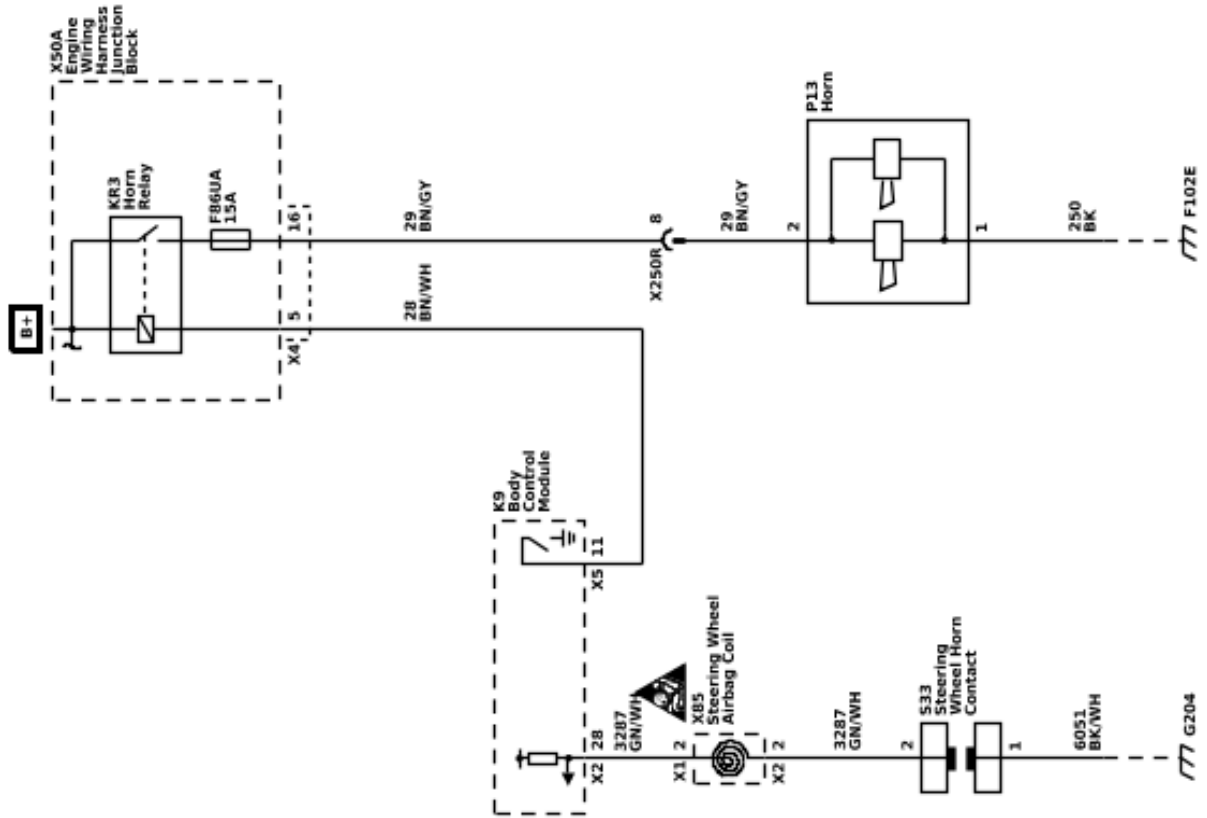

# Description and Operation

## Horns System Description and Operation

### System Description

The horn system consists of the following components:

- HORN fuse
- Engine wiring harness junction block (contains horn PCB relay)
- Steering wheel horn contact
- Steering wheel airbag coil
- Horn
- Body control module (BCM)

### System Operation

The vehicle horn system is activated under the following conditions:

- When the horn switch is depressed
- The BCM commands the horns ON under any of the following conditions:
  - When the content theft deterrent system detects a vehicle intrusion.
  - When the panic button is depressed on the remote control door lock transmitter—For further information refer to Keyless Entry System Description and Operation.
  - When the keyless entry system is used to lock the vehicle, a horn chirp may sound to notify the driver that the vehicle has been locked. The notification feature may be enabled or disabled through personalization. For further information refer to Keyless Entry System Description and Operation
  - When the OnStar<sup>®</sup> system is used to sound the horns if equipped—For further information, refer to OnStar Description and Operation

### Circuit Operation



Battery positive voltage is applied at all times to the horn relay coil and the horn relay switch. Pressing either of the horn switches applies ground to the horn relay control circuit. The BCM may also apply ground to the horn relay control circuit as described above. When the horn relay control circuit is grounded, the horn relay is energized and battery positive voltage is applied to the horns through the horn control circuit. The horns sound as long as ground is applied to the horn relay control circuit.

# Lighting


## Schematic and Routing Diagrams




Headlights/Daytime Running Lights (DRL) Schematics (Controls and Indicators)

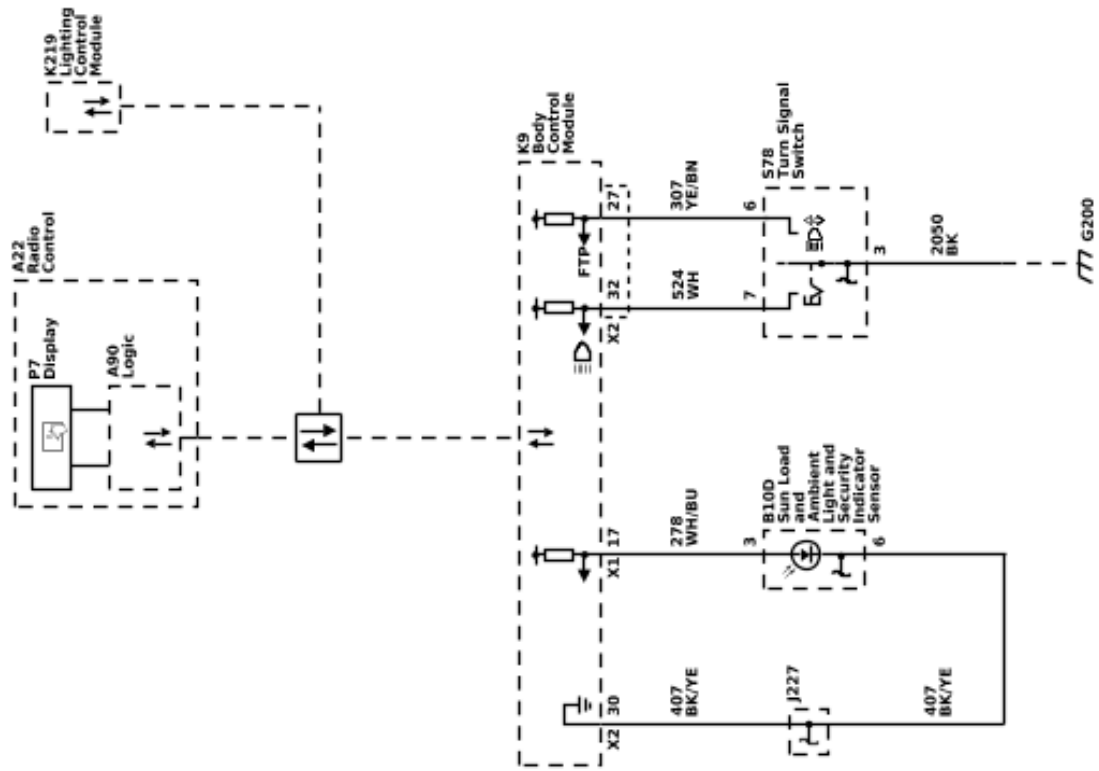


Headlights/Daytime Running Lights (DRL) Schematics (Low Beam, High Beam, and Daytime Running Lights (T4A))

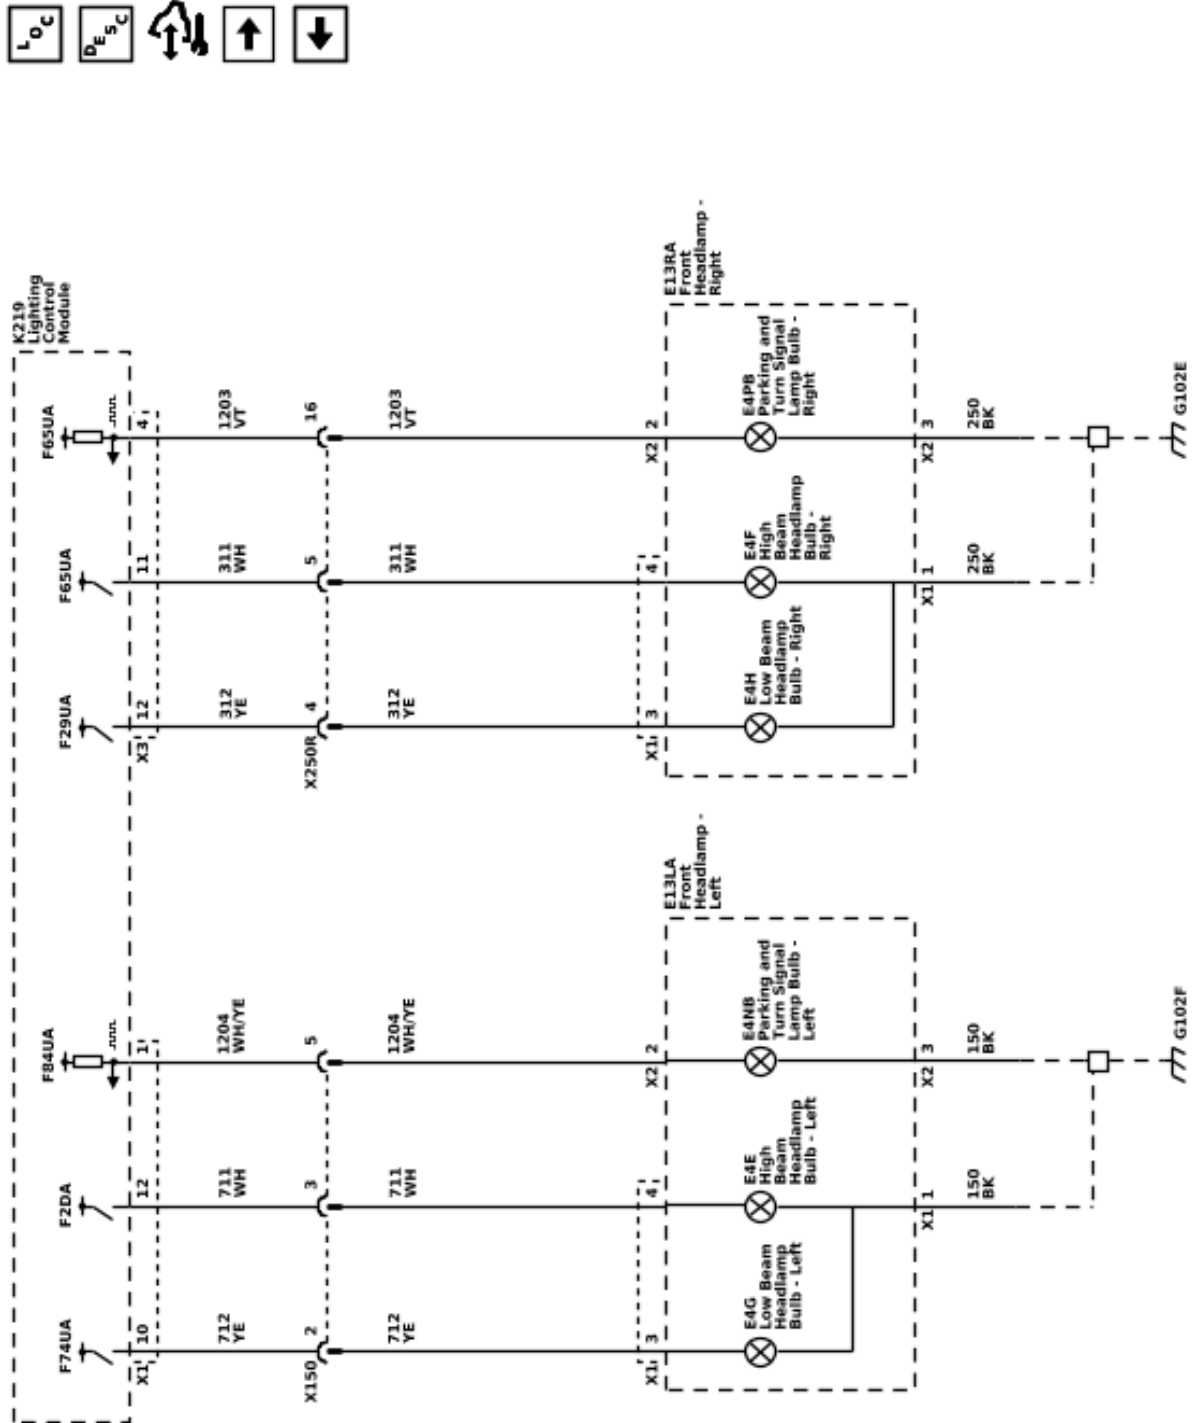


Headlights/Daytime Running Lights (DRL) Schematics (Low Beam, High Beam, and Daytime Running Lights (T4L))

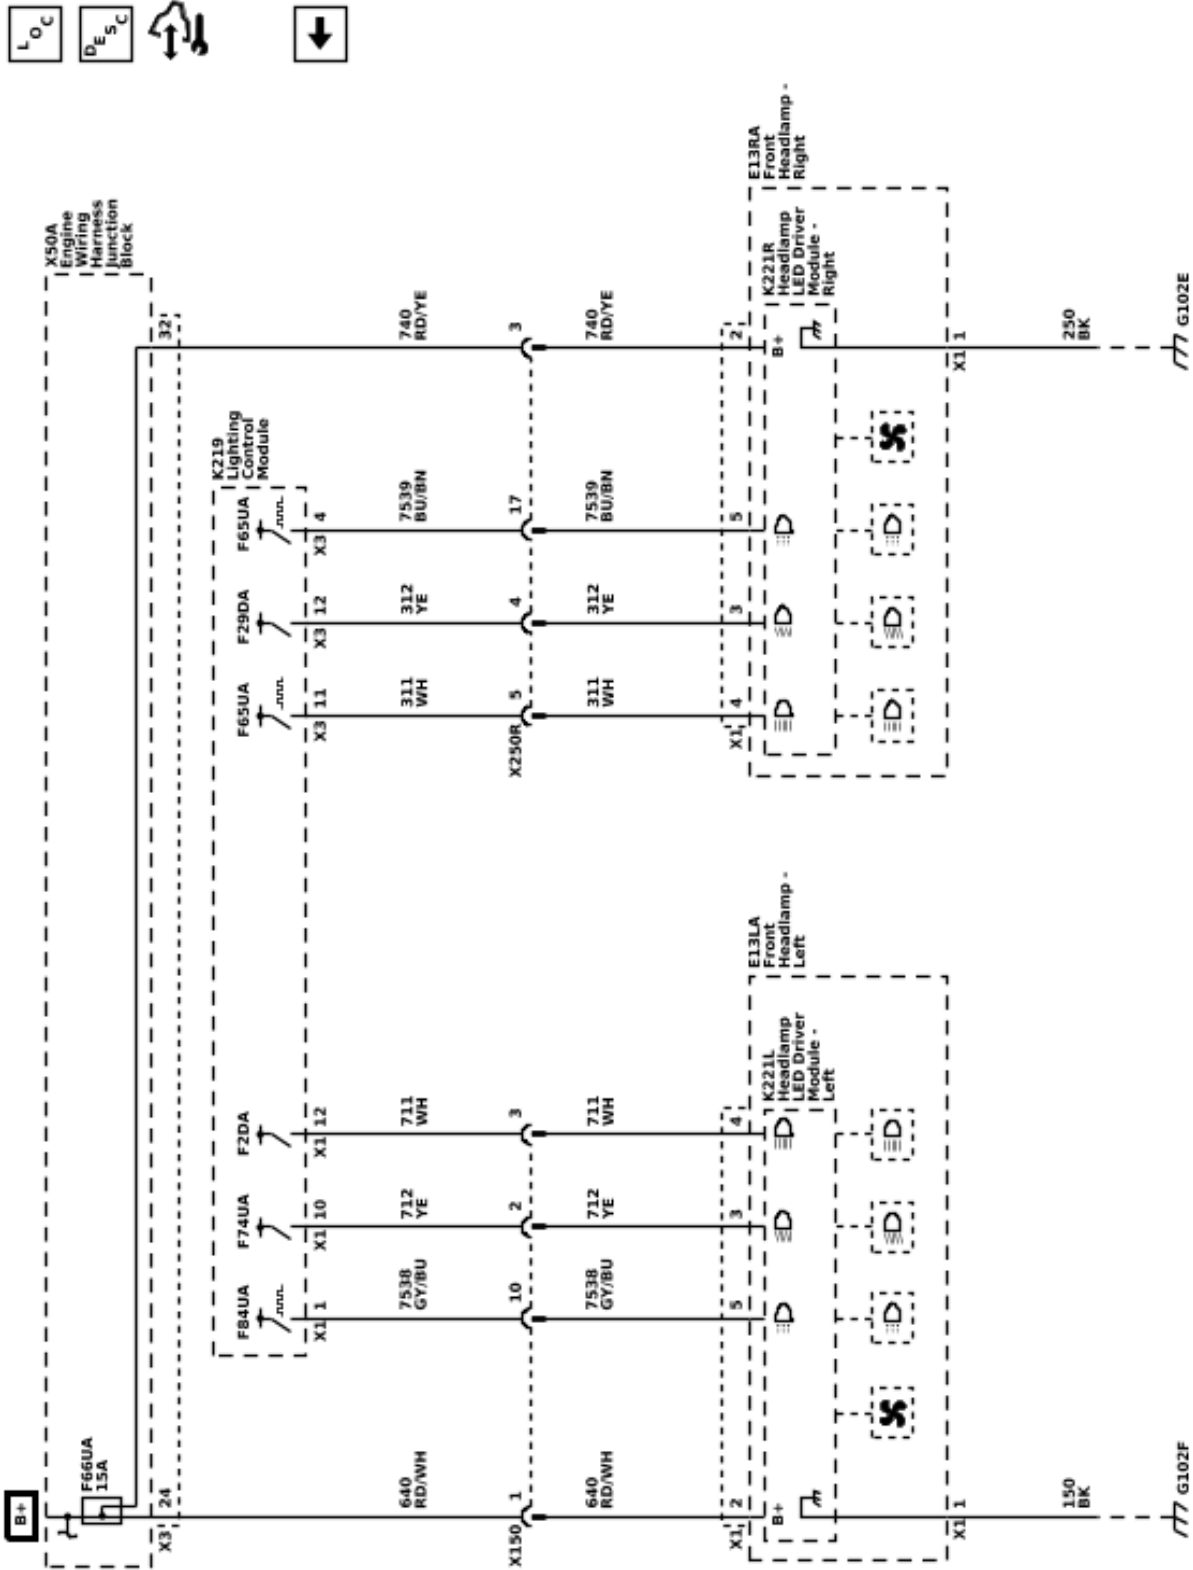


Fog Lights Schematics (Fog Lamps (T40))

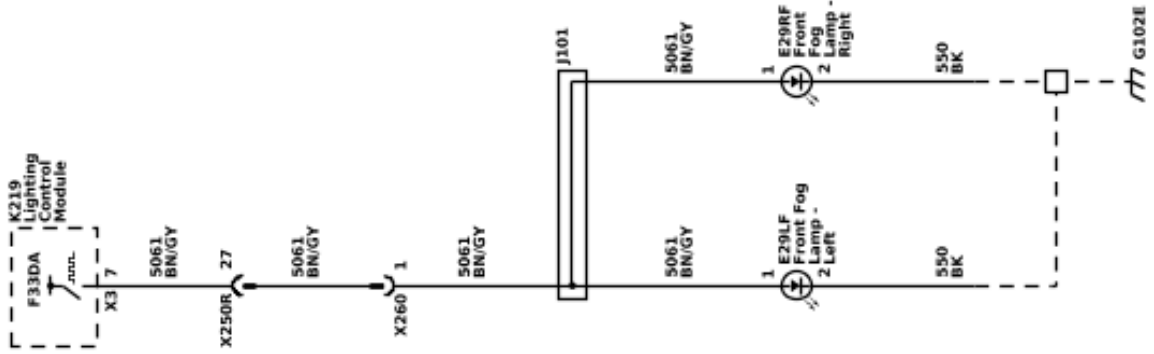



Exterior Lights Schematics (Lighting Control Module Power, Ground, and Serial Data)

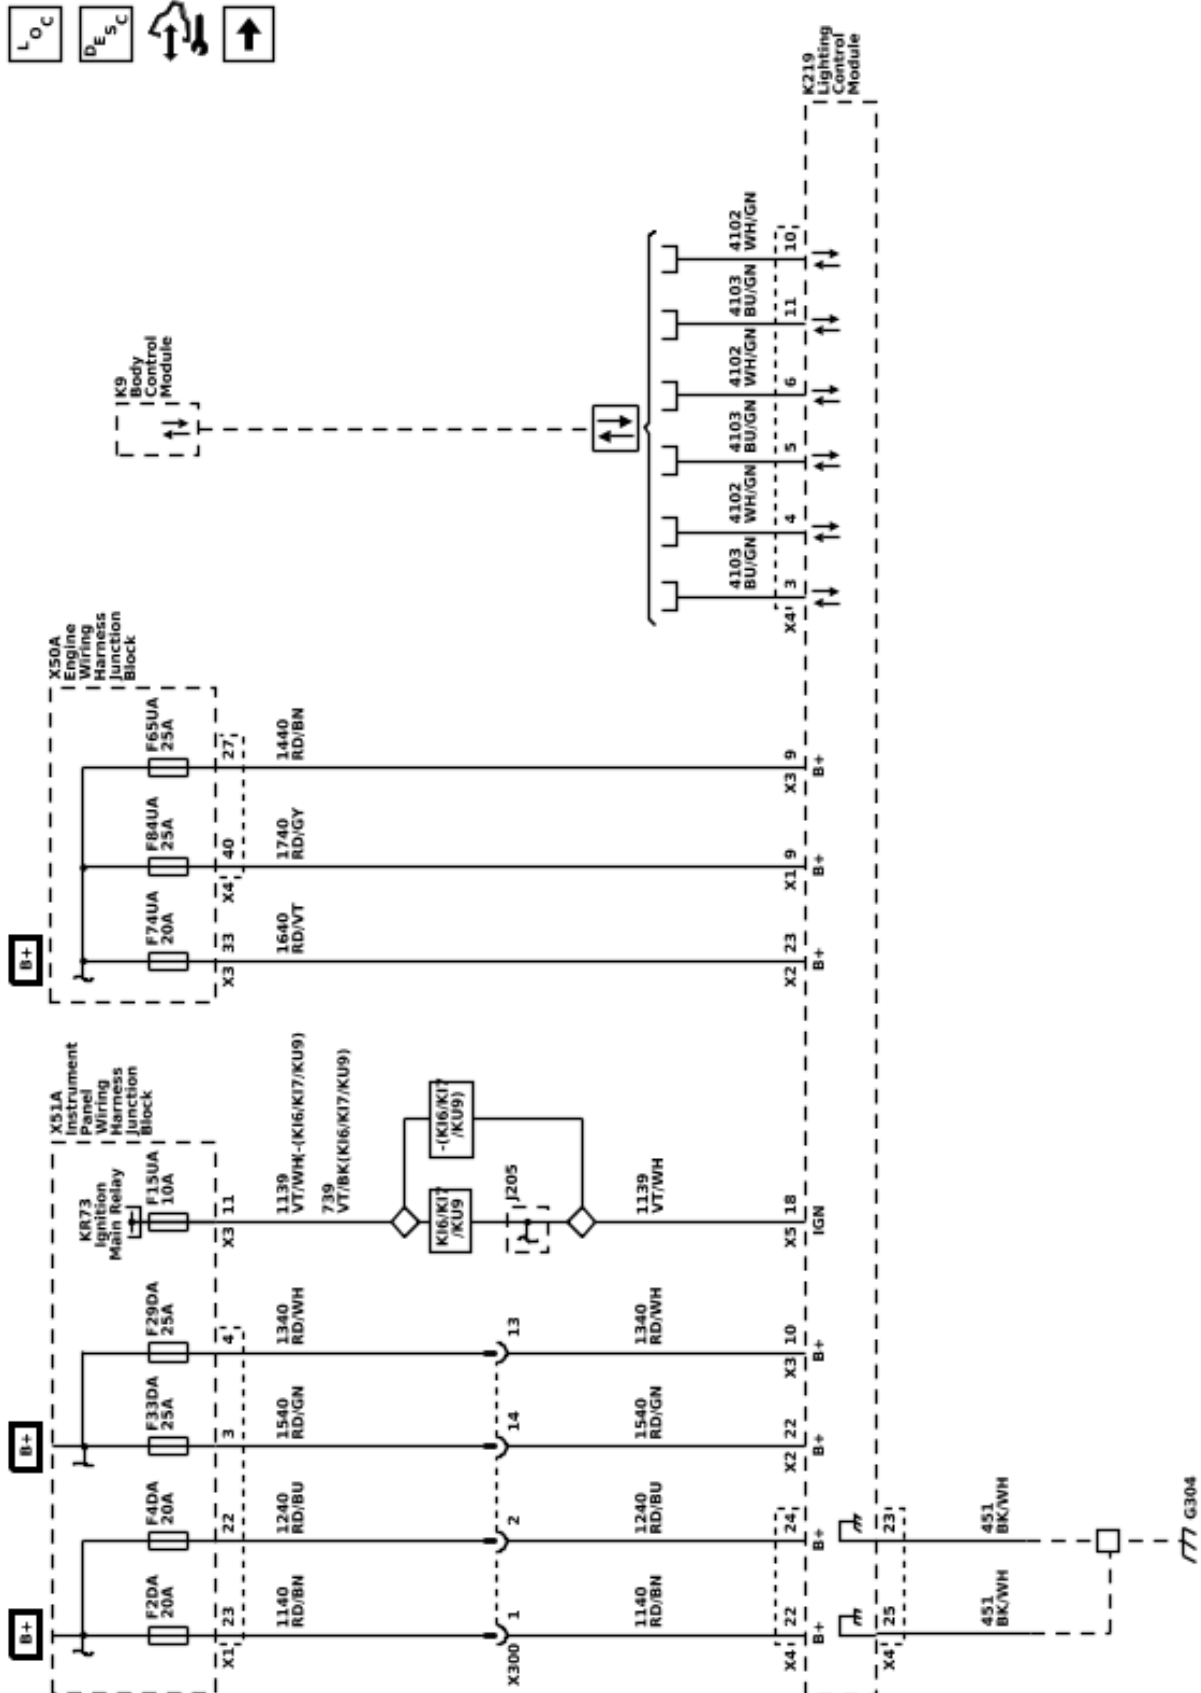


Exterior Lights Schematics (Lighting Control Module Subsystem References)

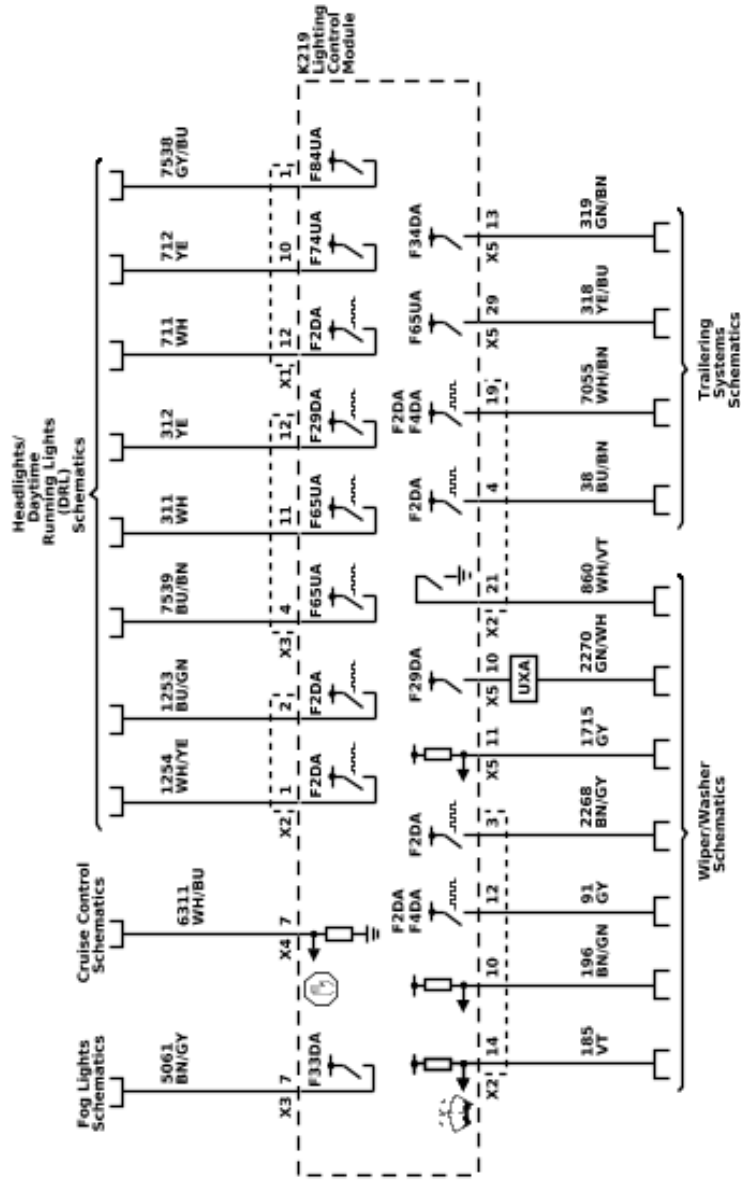

Exterior Lights Schematics (Exterior Light Controls and Indicators)

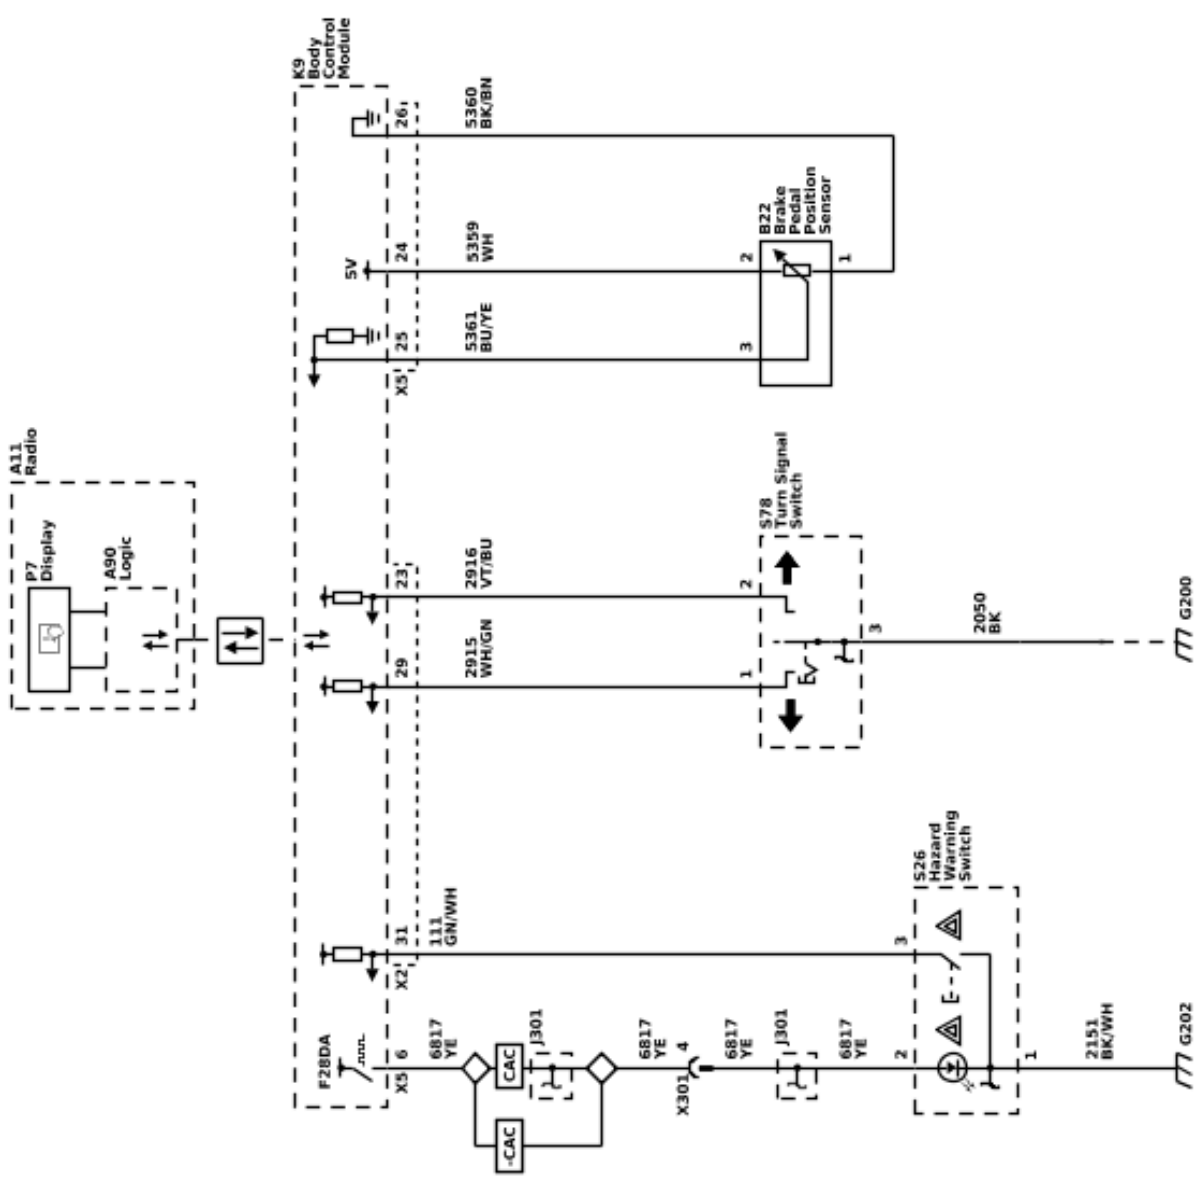


Exterior Lights Schematics (Front Turn and Park Lamps (T4A))


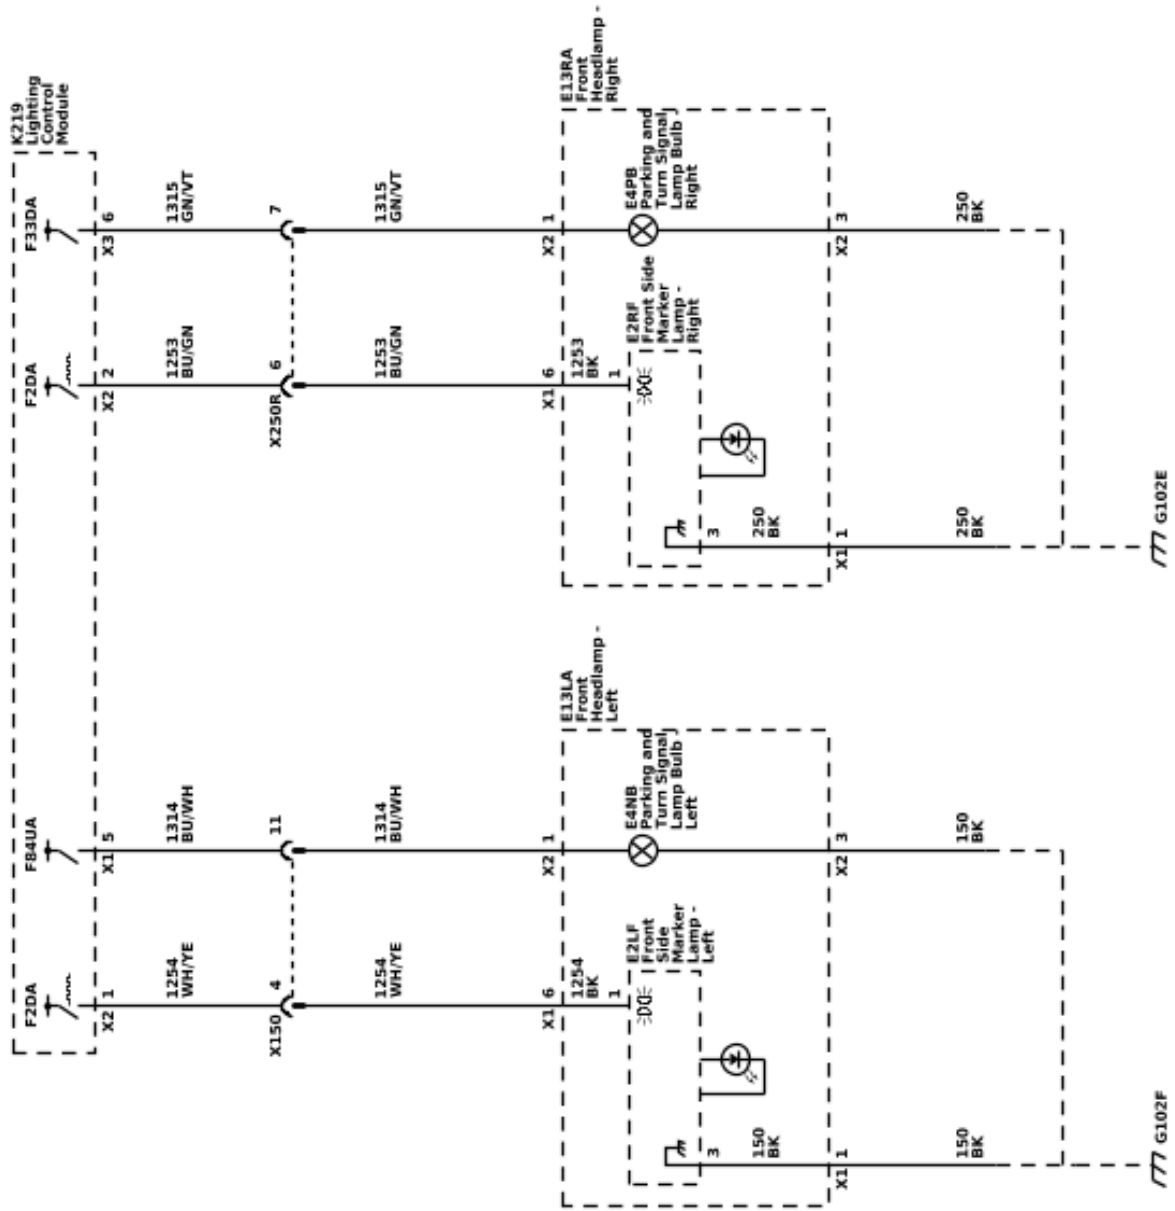






### Exterior Lights Schematics (Front Turn and Park Lamps (T4L))

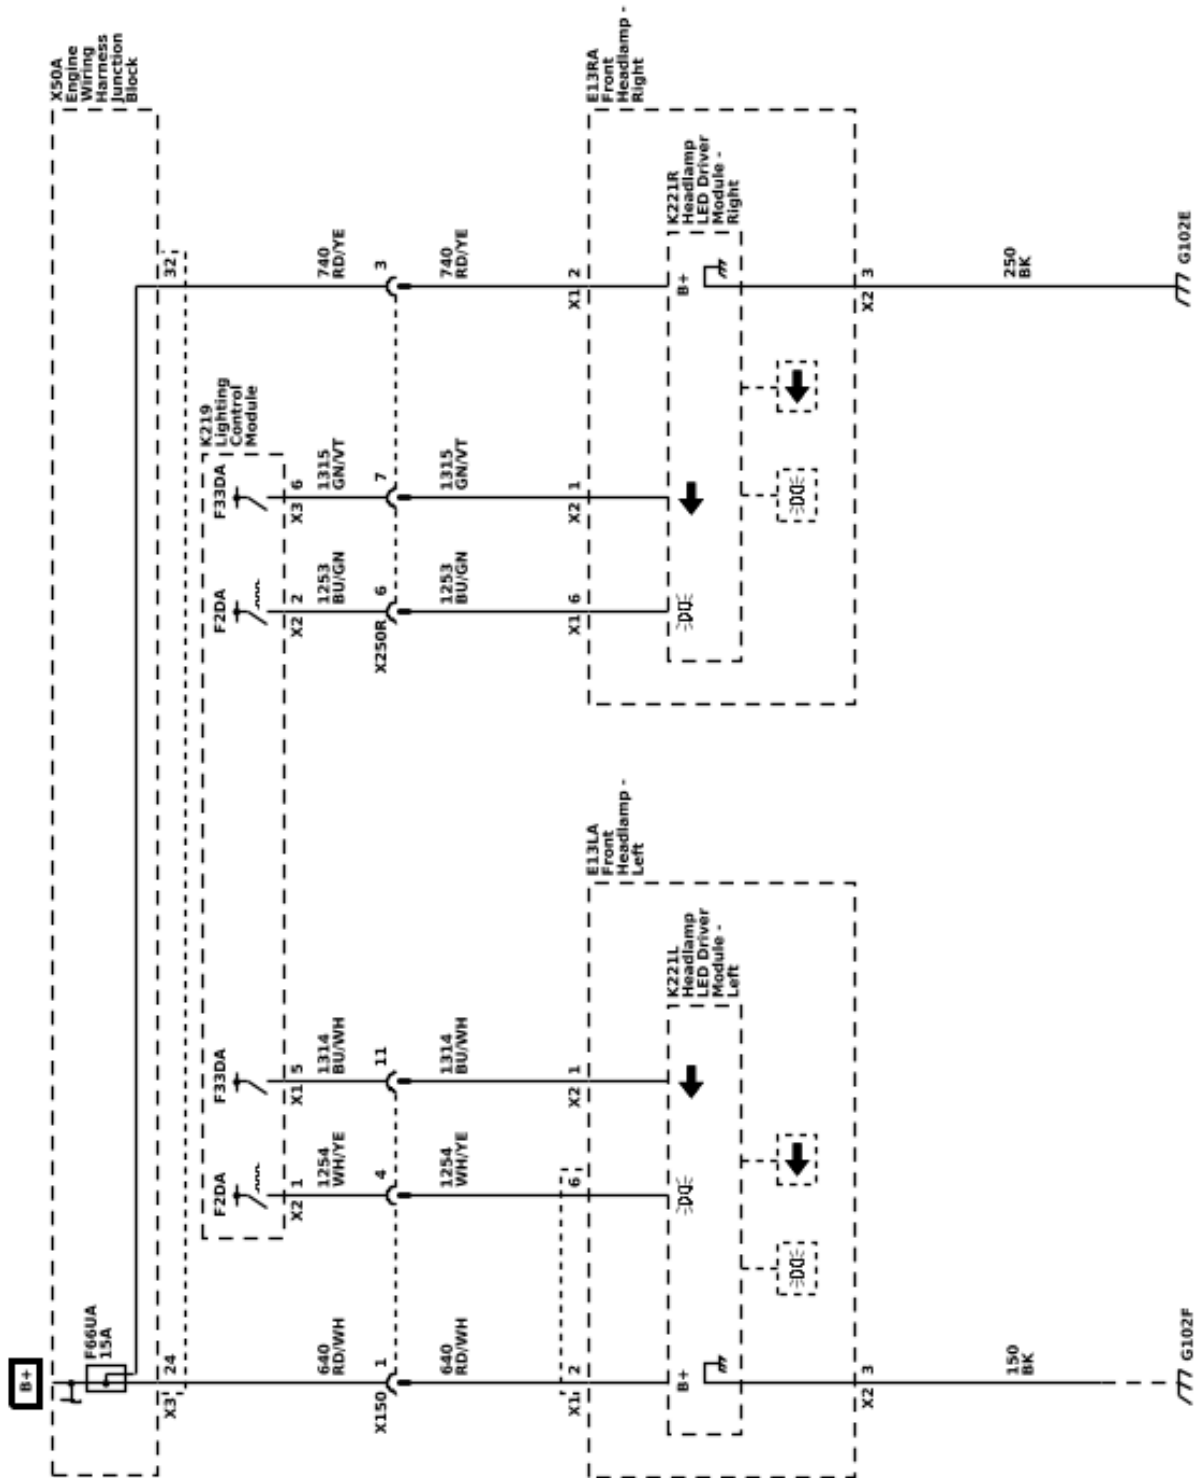


Exterior Lights Schematics (Rear Body Structure Stop, Turn, and Running Lamps (- T93))

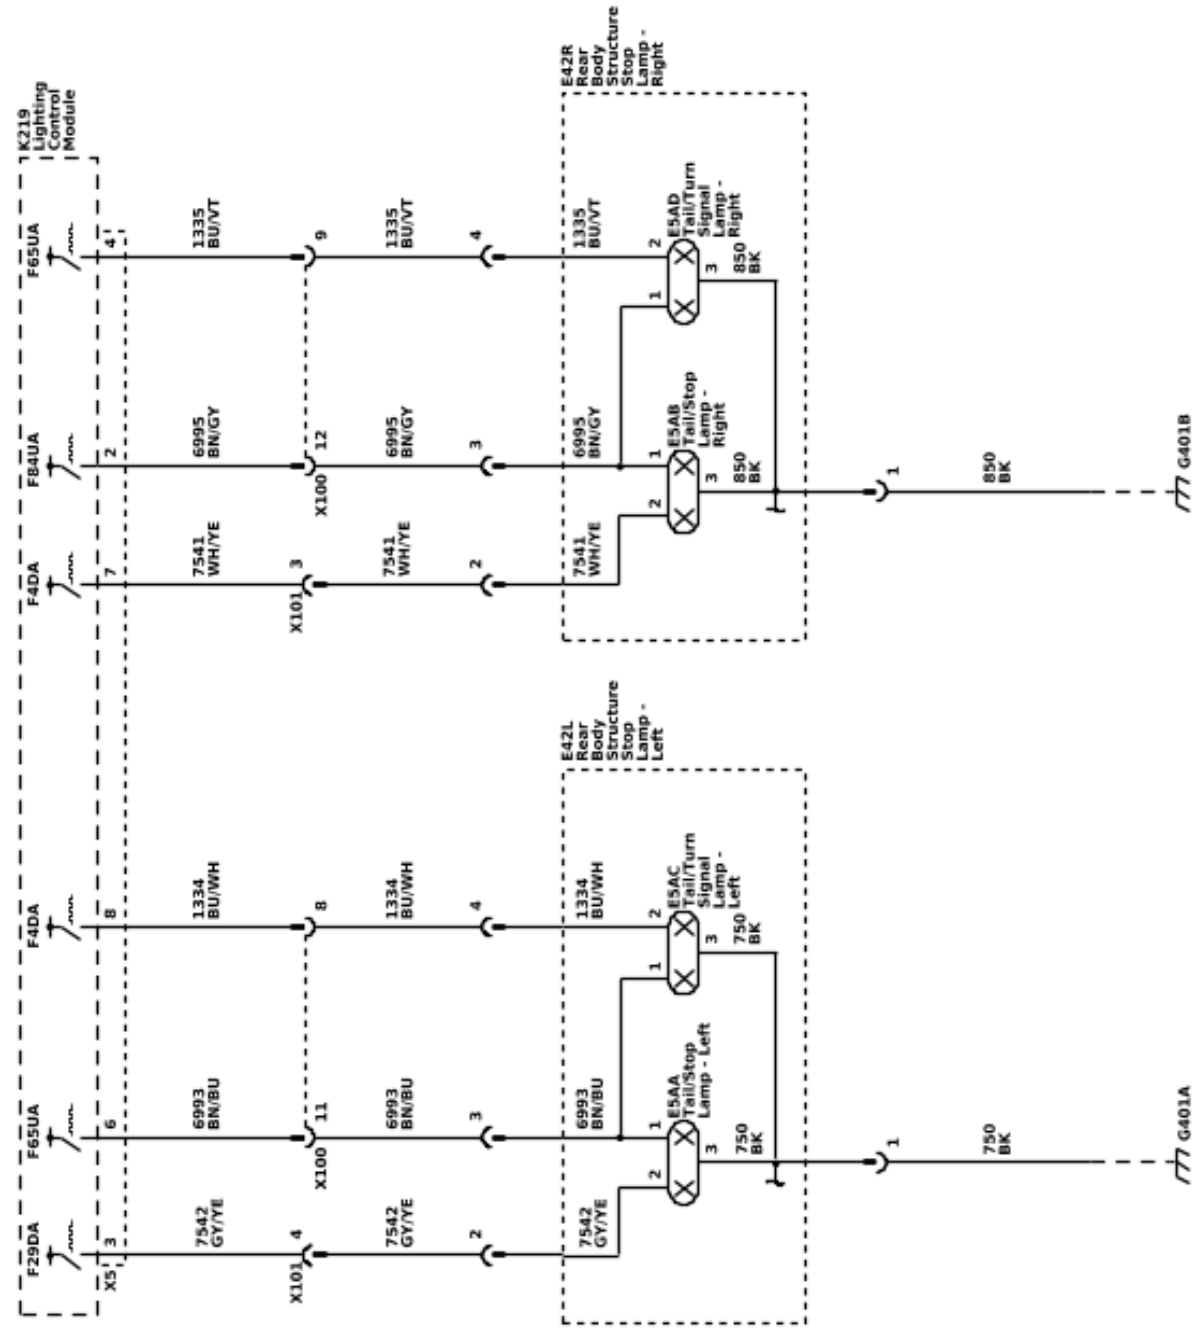

Exterior Lights Schematics (Rear Body Structure Stop, Turn, and Running Lamps (T93))

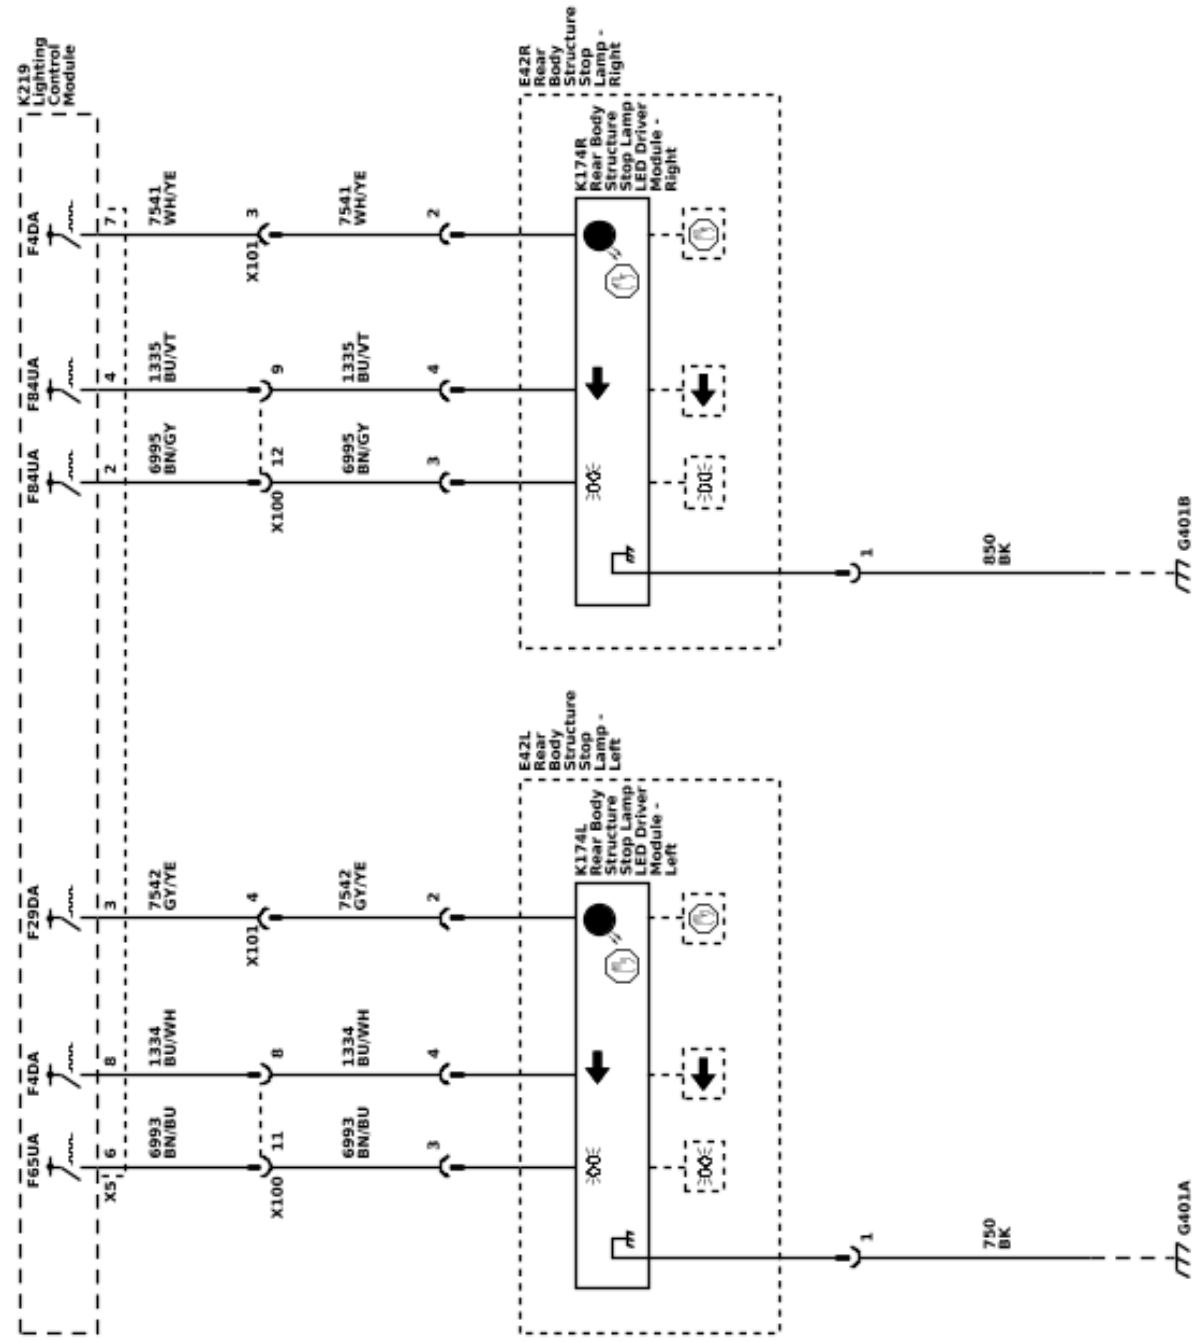


Exterior Lights Schematics (Center High Mount Stop and Cargo Lamps)

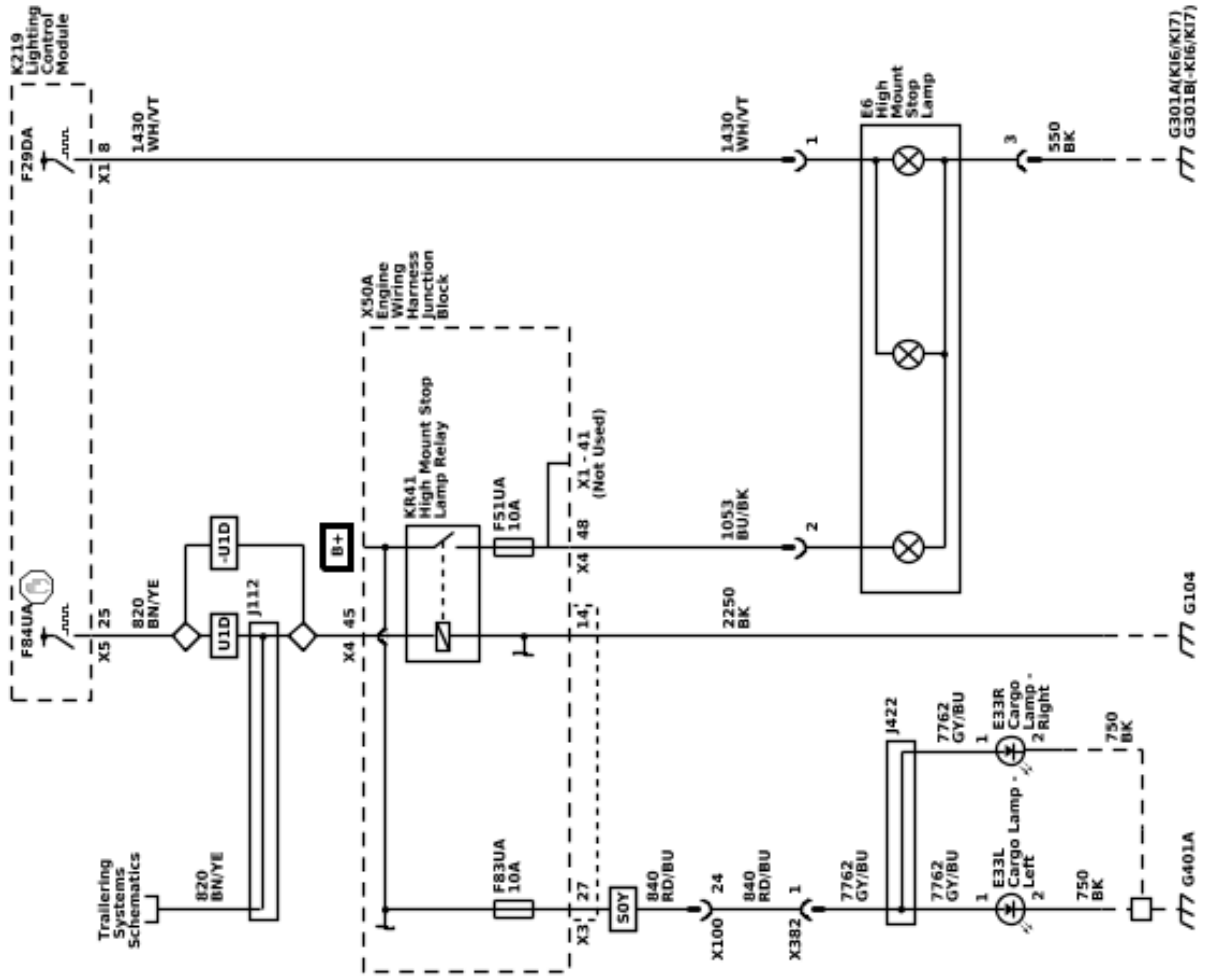


6331911


Exterior Lights Schematics (Backup and License Lamps)

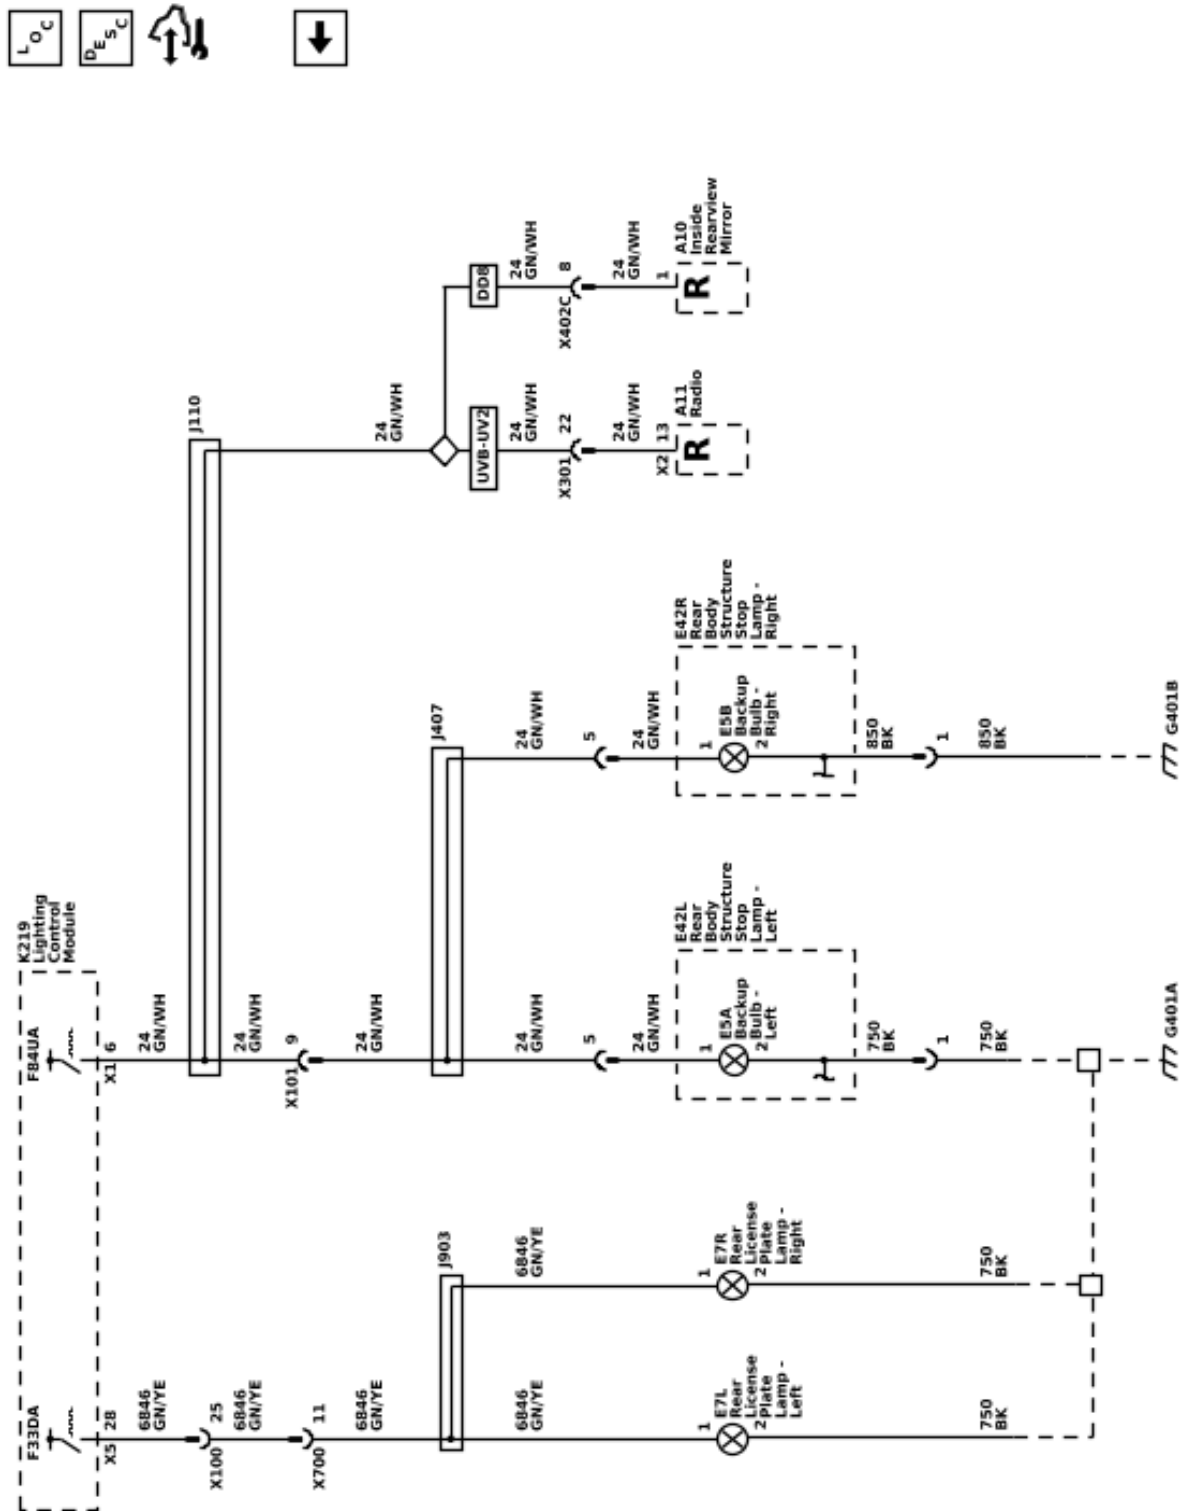



Interior Lights Schematics (Dome Lamps (C91))

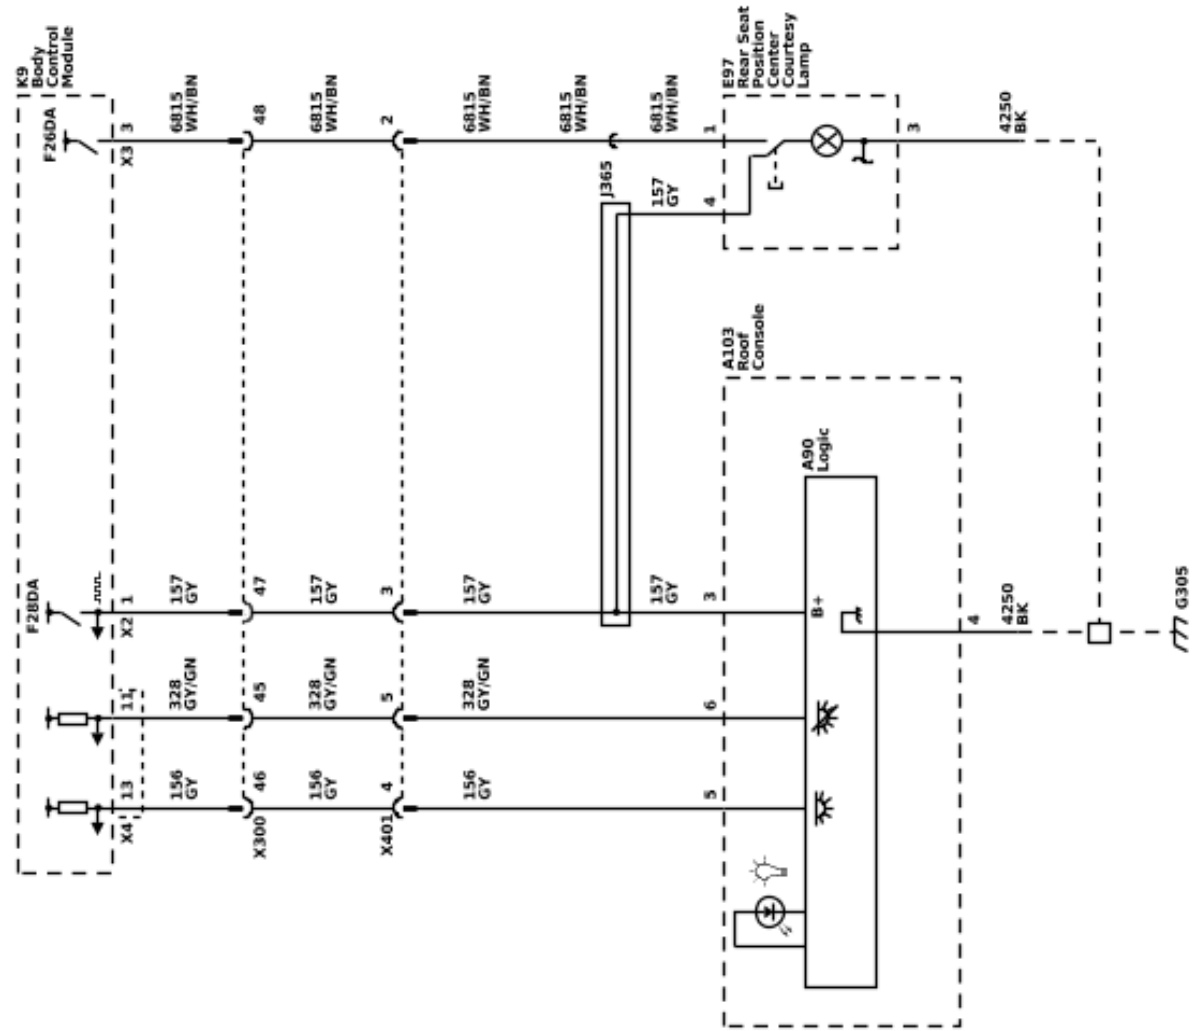

### Interior Lights Schematics (Dome/Reading, and Sunshades (C75 / DEG))

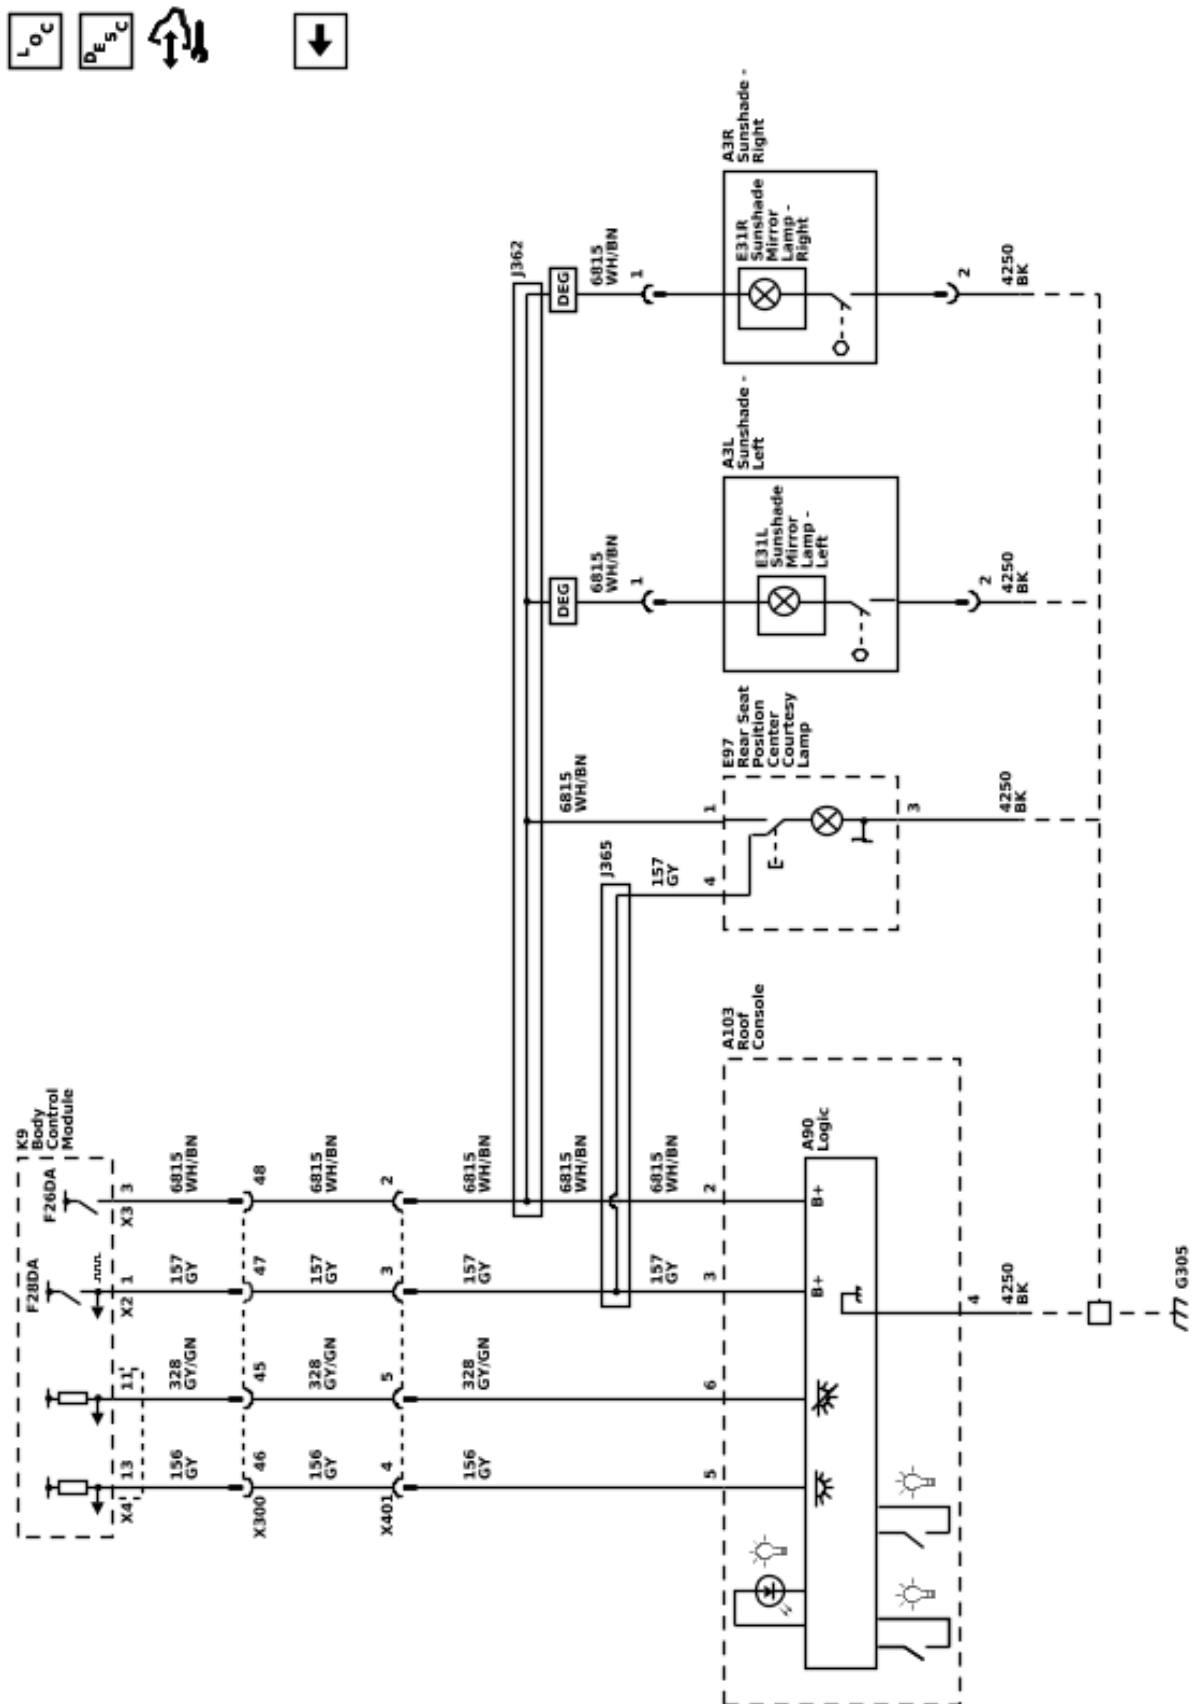


Interior Lights Dimming Schematics (Dimming Control, Instrument Panel, and Sunroof Lights)

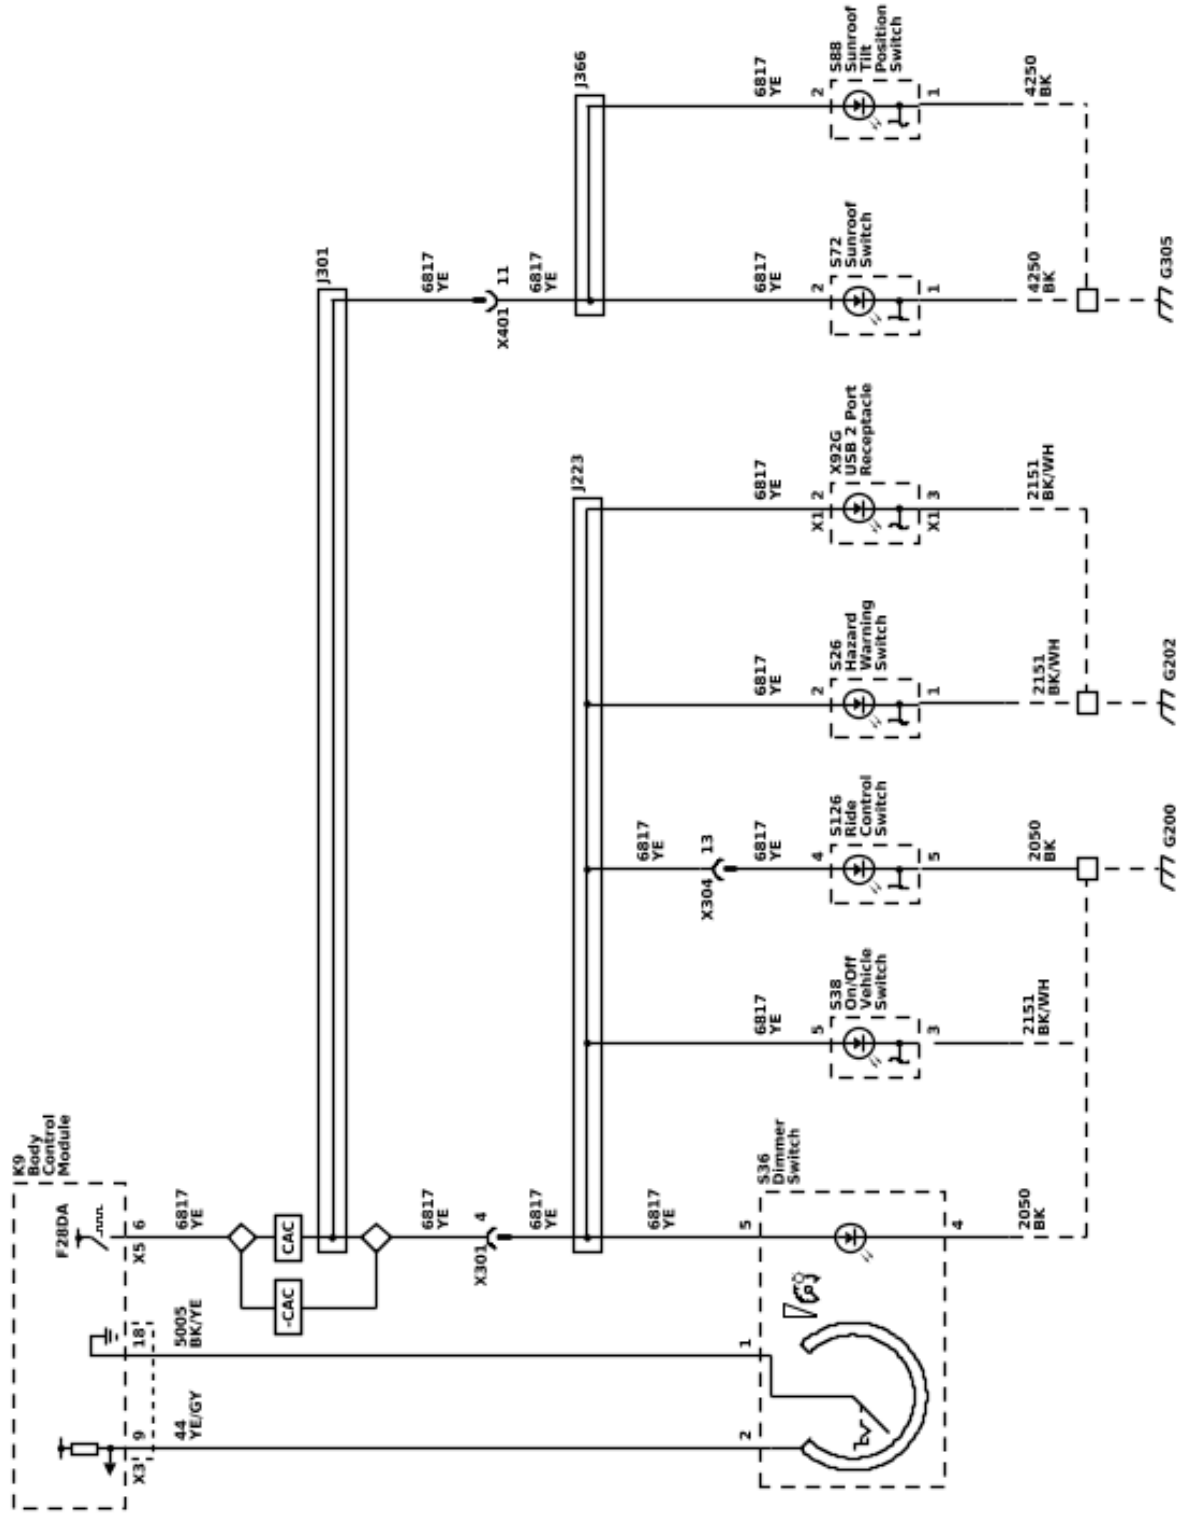




Interior Lights Dimming Schematics (Door, Component, and Steering Wheel Switch Lamps)

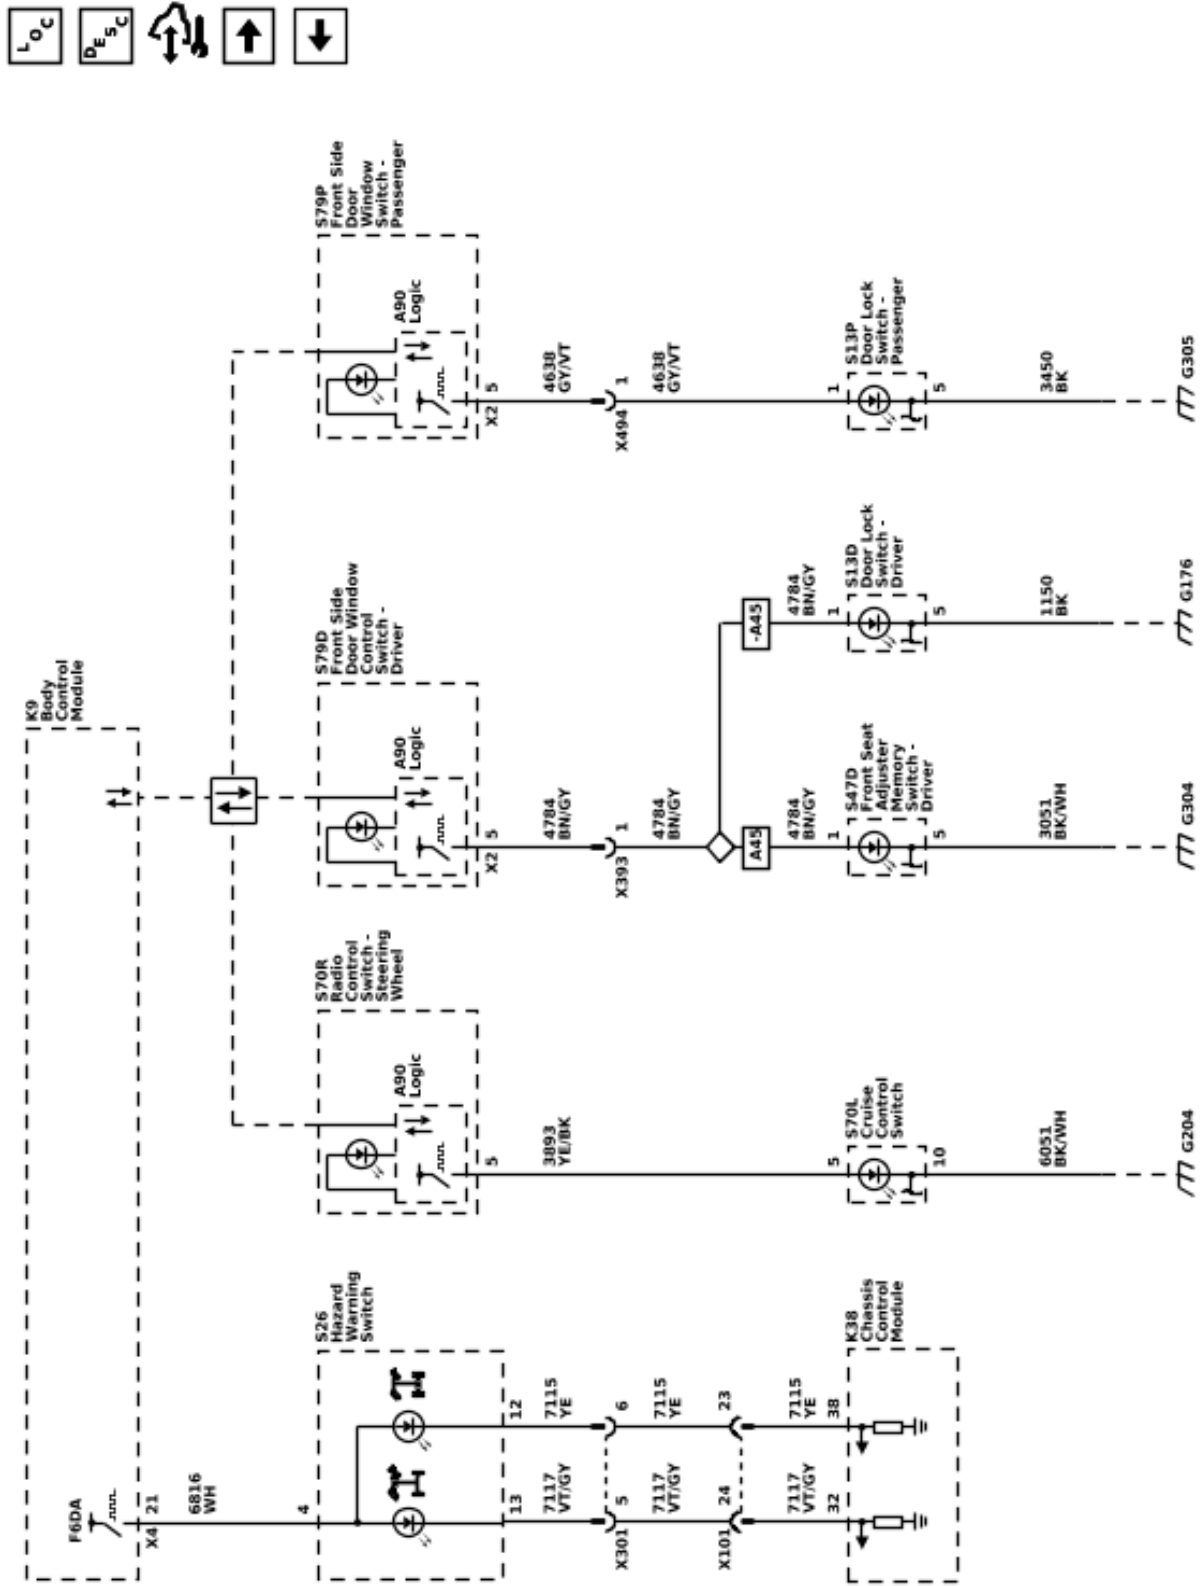

Interior Lights Dimming Schematics (Serial Data Dimming)

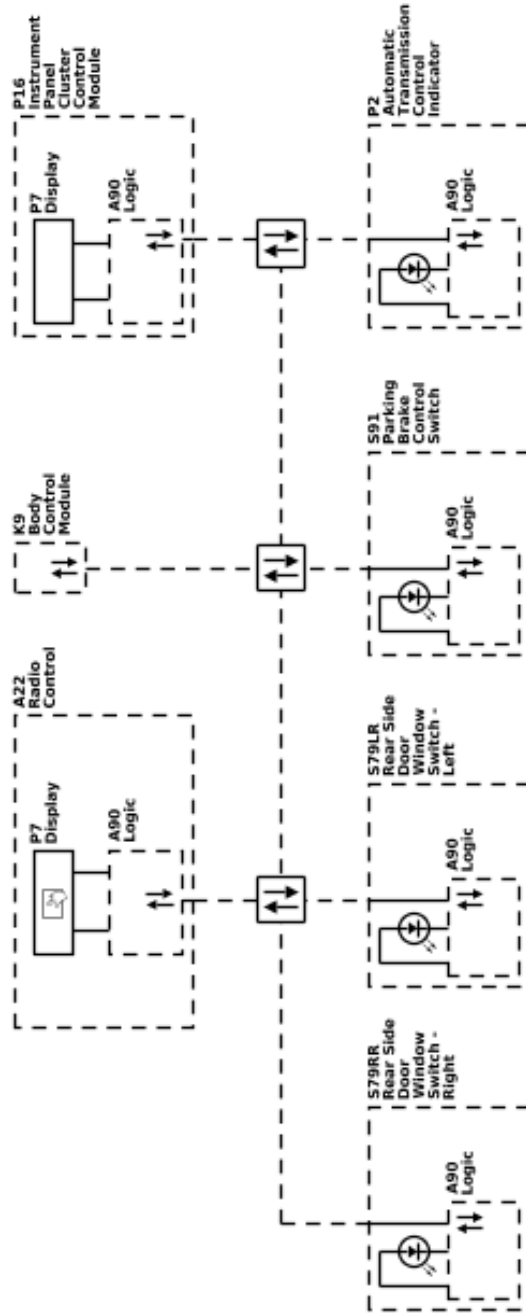

## Description and Operation

### Exterior Lighting Systems

### Description and Operation

The exterior lighting system consist of the following lamps:

- Backup lamps
- Cargo lamps
- Daytime running lamps (DRL)
- Exterior courtesy lamps
- Hazard warning lamps
- Headlamps
- Park, tail, license, and marker lamps
- Front fog lamps (T3U)
- Stop lamps
- Task lamps
- Turn signal lamps
- Trailer lighting, refer to [Trailer Description and Operation on page 2-49](#) for more information.

### Headlamp Controls

The Infotainment Display is used to determine headlamp mode between AUTO, ON, Park, and OFF. When the user selects the desired headlamp mode, the Radio sends out a serial data message to multiple modules containing headlamp mode status information. The modules that receive the serial data message respond accordingly. The headlamps may be turned ON in 3 different ways utilizing the Infotainment Display controls:

- When the headlamp mode is placed in the ON position, for normal operation
- When the headlamp mode is placed in the AUTO position, for automatic lamp control during low ambient light conditions
- When the headlamp mode is placed in the AUTO position, with the windshield wipers ON in daylight conditions, after a 6 second delay

### Low Beam Headlamps

The K219 Lighting Control Module responds to low beam requests by applying pulse width modulated (PWM) voltage to both headlamp low beam control circuits, illuminating the low beam headlamps. When the Lighting Control Module commands the low beam headlamps ON, the operator will notice the interior backlighting for the instrument cluster and the various other switches dim to the level of brightness selected by the instrument panel dimmer switch.

### High Beam Headlamps

The high beam and flash to pass (FTP) functions are contained within the S78 Turn Signal Switch. The K9 Body Control Module (BCM) provides the turn signal/multifunction switch with two signal circuits, the high beam signal circuit and the FTP signal circuit. When the low beam headlamps are ON, and the turn signal/multifunction switch is placed in either the high beam position or FTP position, ground is applied to the BCM through the high beam/FTP signal circuit. The BCM responds to the high beam request by sending a serial data message to the K219 Lighting Control

Module. The Lighting Control Module responds by applying pulse width modulated (PWM) voltage to both headlamp high beam control circuits, illuminating the high beam headlamps. The status of the high beam lamps is shown by a blue indicator located on the instrument cluster. When high beams are commanded on, the indicator will be illuminated continuously. If the driver turns the high beams off, the indicator will also turn off.

### Flash to Pass

When the S78 Turn Signal Switch is momentarily placed in the flash to pass position, ground is applied to the turn signal/multifunction switch. The turn signal/multifunction switch applies ground to the K9 Body Control Module (BCM) through the flash to pass switch signal circuit. The BCM responds to the flash to pass request by sending a serial data message to the K219 Lighting Control Module. The Lighting Control Module responds by applying pulse width modulated (PWM) voltage to both headlamp high beam control circuits, illuminating the high beam headlamps. This causes the high beam headlamps to illuminate at full brightness until the turn signal/multifunction switch is returned to the at rest position.

### Automatic Headlamp Control

When the headlamp mode is in the AUTO position, the BCM relies on the B10D Sun Load and Ambient Light and Security Indicator Sensor input to determine if headlamps are required or if daytime running lamps will be activated based on outside lighting conditions. During automatic lamp control, the headlamps will be off during daylight conditions but will turn on when the ambient light sensor detects low ambient light conditions. The ambient light sensor is a light sensitive transistor that varies the voltage signal to the BCM. The BCM provides a 5 volt reference signal and a low reference ground to the ambient light sensor. During low light conditions the BCM will request the low beam headlamps ON by sending a serial data message to the K219 Lighting Control Module. The Lighting Control Module responds by applying pulse width modulated (PWM) voltage to both headlamp low beam control circuits, illuminating the low beam headlamps.

### IntelliBeam – Automatic High Beam Assist (TQ5)

The IntelliBeam system is activated by selecting the automatic high beam assist with the Infotainment Display while the exterior lamp control is in AUTO mode and the engine running. The AHBA system consists of a front camera module that detects light, and is able to identify approaching vehicles on an even, straight road at a distance of greater than 0.4 km (0.25 mi). The front camera module analyzes light color, intensity, and movement. The AHBA system will turn OFF the high beam headlamps when approaching vehicle headlamps or preceding vehicle taillights are detected by the front camera module. The AHBA system is turned off anytime the headlamp mode is out of the AUTO position.

#### AHBA System Activation

- Vehicle ON
- Headlamp mode placed in the AUTO position

## 2-34 Lighting

- Outside lighting conditions must be dark
- Vehicle speed greater than 25 mph (40 km/h)

### AHBA System Operation

The following are conditions that the AHBA system will turn the high beam headlamps off during operation:

- The system detects approaching traffic headlamps
- The system detects preceding traffic tail lamps
- Ambient light level too high due to towns or twilight situations
- The vehicle's speed drops below 13 mph (22 km/h)
- Delay

**Note:** AHBA may not operate properly if any of the following conditions exist:

- Approaching and preceding vehicles lamps are undetectable due to dirt, snow, road spray, smoke, fog, or any other airborne conditions.
- The front camera module is covered with ice, dirt, snow, haze, or is obstructed.
- The vehicle is being driven on winding or hilly road conditions which would make any on coming vehicle headlamps undetectable by the AHBA.

### AHBA System Deactivation

- Manually operating the high beam headlamp mode from neutral to high beam position
- AHBA is deactivated automatically when the front or rear fog lamps are turned ON

### AHBA System Indicator

The status of the AHBA system is shown by a green indicator located on the instrument panel cluster. When AHBA is active, the indicator will be illuminated continuously. If the operator deactivates the AHBA system, the indicator will turn off.

## Daytime Running Lamps

The daytime running lamps (DRL) will illuminate continuously when the following conditions are met:

- Engine running
- The headlamp mode is in the AUTO position
- Ambient light conditions are daytime conditions

The B10D Sun Load and Ambient Light and Security Indicator Sensor is used to monitor outside lighting conditions. The ambient light sensor provides a voltage signal that will vary between 0.2 and 4.9 volts depending on outside lighting conditions. The K9 Body Control Module (BCM) provides a 5 volt reference signal and a low reference ground to the ambient light sensor. The BCM monitors the ambient light sensor signal circuit to determine if outside lighting conditions are correct for either daytime running lamps (DRL) or automatic lamp control when the headlamp mode is in the AUTO position. In daylight conditions the BCM will send a serial data message to the K219 Lighting Control Module to command the DRLs ON, the Lighting Control Module responds by applying pulse width modulated (PWM) voltage to both DRL control circuits, illuminating the DRLs. During low light conditions the Lighting Control Module will command the low beam headlamps ON.

## Hazard Lamps

The hazard flashers may be activated in any power mode. The Hazard Warning Switch signal circuit is momentarily grounded when the hazard switch is pressed. The K9 Body Control Module (BCM) responds to the hazard switch signal input by sending a serial data message to the K219 Lighting Control Module. The Lighting Control Module responds by supplying battery voltage to all turn signal lamps in an ON and OFF duty cycle. When the hazard switch is activated, the BCM also sends a serial data message to the instrument cluster requesting both turn signal indicators to be cycled ON and OFF.

## Park, Tail, and License Lamps

When the headlamp mode is placed in the HEAD or PARK position, the K219 Lighting Control Module responds by applying battery voltage to the park lamps, tail lamps, and license lamps control circuits illuminating the park, tail, and license lamps.

## Stop Lamps

The B22 Brake Pedal Position Sensor is used to sense the action of the driver application of the brake pedal. The K9 Body Control Module (BCM) provides the brake pedal position sensor with low reference, signal, and 5 volt reference circuits. When the variable signal reaches a voltage threshold indicating the brakes have been applied, the BCM will respond by sending a serial data message to the K219 Lighting Control Module requesting the stop lamps to be turned ON. The Lighting Control Module responds by applying battery voltage to the left and right stop lamp control circuits as well as the center high mounted stop lamp control circuit illuminating the left and right stop lamps and the center high mounted stop lamp. If serial data communication is lost between the BCM and the Lighting Control Module, the Lighting Control Module will receive a serial data message from the Electronic Brake Control Module indicating that the brakes have been applied. If serial data communication is lost between all three modules, the Lighting Control Module also receives a hard wired voltage signal from the BCM to signal the brake lamps ON.

## Turn Signal Lamps

### Turn Signals

The K9 Body Control Module (BCM) provides the S78 Turn Signal Switch with left and right turn signal switch signal circuits. Ground is applied at all times to the turn signal/multifunction switch. The turn signal lamps may only be activated with the ignition switch in the ON or START positions. When the turn signal/multifunction switch is placed in either the turn right or turn left position, ground is applied to the BCM through either the right turn or left turn signal switch signal circuit. The BCM responds to the turn signal switch input by sending a serial data message to the K219 Lighting Control Module. The Lighting Control Module responds by applying a pulsating voltage to the turn signal lamps through their respective control circuits. When a turn signal request is received by the BCM, a serial data message is also sent to the instrument cluster requesting the respective turn signal indicator be pulsed ON and OFF.

## Turn Signal Outage Detection

Vehicles with LED turn signals require additional turn signal outage detection circuits that provide turn signal feedback to the K219 Lighting Control Module. The Lighting Control Module uses the feedback information to send a serial data message to the instrument cluster to alert the driver anytime a turn signal fault is detected. If a fault is detected on a turn signal circuit or a turn signal feedback circuit, the turn signals will flash in a rapid manner to alert the driver of the fault.

## Backup Lamps

With the engine running and the transmission in the reverse position, the transmission control module (TCM) sends a serial data message to the multiple control modules. The message indicates that the gear selector is in the reverse position. The K9 Body Control Module (BCM) responds to the reverse position message by sending a serial data message to the K219 Lighting Control Module to request the backup lamps on. The Lighting Control Module responds by applying battery voltage to the backup lamps control circuit(s) illuminating the backup lamps. The applied voltage is also sent to the A11 Radio and A10 Inside Rearview Mirror for rearview camera purposes. Once the driver moves the gear selector out of the reverse position, a serial data message is sent by the TCM that the transmission is no longer in the reverse position. The BCM responds to the reverse position message by sending a serial data message to the Lighting Control Module to request the backup lamps off. The Lighting Control Module responds by removing battery voltage from the backup lamp circuits. The engine must be running for the backup lamps to operate.

## Cargo Lamps

When the K219 Lighting Control Module receives a cargo lamp request from the Infotainment Display, the lighting control module responds by applying pulse width modulated (PWM) voltage to the cargo lamp control circuits illuminating the cargo lamps. In the event that the cargo lamps were to remain illuminated for more than 10 minutes with the ignition switch in the OFF position, the lighting control module will deactivate the cargo lamp control circuits to prevent total battery discharge.

## Approach Lighting

Approach lighting is commanded ON when the unlock button is pressed on the keyless entry transmitter during dark ambient light conditions. When the keyless entry transmitter unlock button is pressed, a serial data message is sent by the K9 Body Control Module (BCM) that the vehicle is being unlocked. The K219 Lighting Control Module responds to the serial data message by applying voltage to the approach lamp control circuit illuminating the LED lighting located under each outside rearview mirror as part of approach lighting.

## Battery Run Down Protection/ Inadvertent Power

To provide battery run down protection, the exterior lamps will be deactivated automatically under certain conditions. The K9 Body Control Module (BCM) monitors the state of the S30 Headlamp Switch. If the headlamp switch is in the park or headlamp position

when the ignition switch is ON and then the ignition switch is placed in the OFF position, the BCM initiates a 10 minutes timer. At the end of the 10 minutes, the BCM will send a serial data message to the K219 Lighting Control Module to deactivate the exterior lamps to prevent total battery discharge. This feature will be cancelled if any power mode other than OFF becomes active.

The BCM will disable battery run down protection if any of the following conditions exist:

- The park or headlamp switch is changed from the ON to OFF position, and back to the ON position during battery run down protection.
- The BCM determined that the park or headlamp switch was not active when the ignition was turned OFF.

## Interior Lighting Systems Description and Operation

### Interior Lamps

#### Dome Lamps

The dome lamps are controlled by door ajar inputs to the K9 Body Control Module (BCM). When any door is opened, the door ajar switch contacts close and the BCM receives a door-open input. The BCM responds by sending a serial data message to the A103 Roof Console. The Roof Console responds by applying battery voltage to the dome lamps illuminating the dome lamps. The BCM will also send a serial data message to request the dome lamps on when a door lock/unlock request is activated with the key fob. After all doors have been closed, the dome lamp will remain illuminated approximately 3 seconds after the last door closes. In the event that the dome lamp were to remain illuminated for more than 10 minutes with the ignition switch in the OFF position, the BCM will deactivate the dome lamp control circuit to prevent total battery discharge. The dome lamps will turn OFF using the theater dimming feature when controlled by the BCM.

#### Keyless Entry Interior Illumination

When the operator uses the keyless entry transmitter in order to unlock the doors, the K9 Body Control Module (BCM) receives a door-unlock signal. The BCM must receive inputs from various systems that indicate that the ignition switch is OFF, the courtesy lamp switch is OFF, and all doors are closed before the BCM will activate the interior lamps. After all doors have been closed, the courtesy lamps will turn OFF immediately if the ignition switch is turned to the ON position, the door locks are LOCKED, or approximately 20 seconds after the last door closes. The BCM will turn off the courtesy lamps through the theater dimming feature. The BCM keeps the courtesy lamps on for 40 seconds after an alarm event is completed.

#### Reading Lamps

When a reading lamp button is pressed, the switch contacts close providing a path to ground for the signal circuit from the A103 Roof Console. The roof console responds by applying battery voltage to the appropriate reading lamp control circuit illuminating the reading lamp. If the operator inadvertently leaves a reading

## 2-36 Lighting

---

lamp ON, the BCM will send a serial data message to turn all interior lighting off after 10 minutes has passed to prevent total battery discharge.

### **Sunshade Mirror Lamp**

The inadvertent power supply voltage circuit from the K9 Body Control Module (BCM) provides battery voltage to the passenger side sunshade mirror lamp. When the sunshade mirror cover is opened, a switch closes providing ground and the sunshade lamp illuminates. If the operator inadvertently leaves the sunshade mirror cover open with the lamp ON, the BCM will turn all interior lamps OFF after 10 minutes has passed to prevent total battery discharge.

### **Interior Lamps Dimming**

With the headlamp mode in the PARK or HEAD position, the K9 Body Control Module (BCM) responds by applying voltage to the backlight dimming control circuits illuminating all components with interior backlighting. All interior backlighting turns on at the dimming level set by the dimmer switch. The dimmer switch is used to increase and decrease the brightness of the interior backlighting components. The BCM provides a signal circuit and a low reference circuit to the dimmer switch for backlight dimming. When a dimming setting is selected, the signal circuit becomes grounded through the variable resistor internal to the dimmer switch and voltage from the BCM will decrease accordingly. The BCM interprets the signal and responds in two ways. The BCM applies a pulse width modulated (PWM) voltage through the LED dimming control circuits illuminating the interior backlighting to the requested level of brightness. The BCM also sends a serial data message to the appropriate control modules requesting all dimming components to be illuminated to the same level of brightness.


### **Battery Rundown Protection/ Inadvertent Power**

The K9 Body Control Module (BCM) inadvertent power supply voltage circuit provides battery voltage to all of the interior courtesy lamps. In the event that any of these lamps were to remain illuminated for a period of more than 10 minutes with the ignition switch in the OFF position, the BCM will deactivate the inadvertent power supply voltage circuit to prevent total battery discharge. If the ignition switch is turned to any position other than OFF, or if a lamp switch is activated during this 10 minute period, the timer resets for another 10 minutes.

# Mirrors

## Schematic and Routing Diagrams



Inside Rearview Mirror Schematics (Auto-Dimming Mirror (DD8))

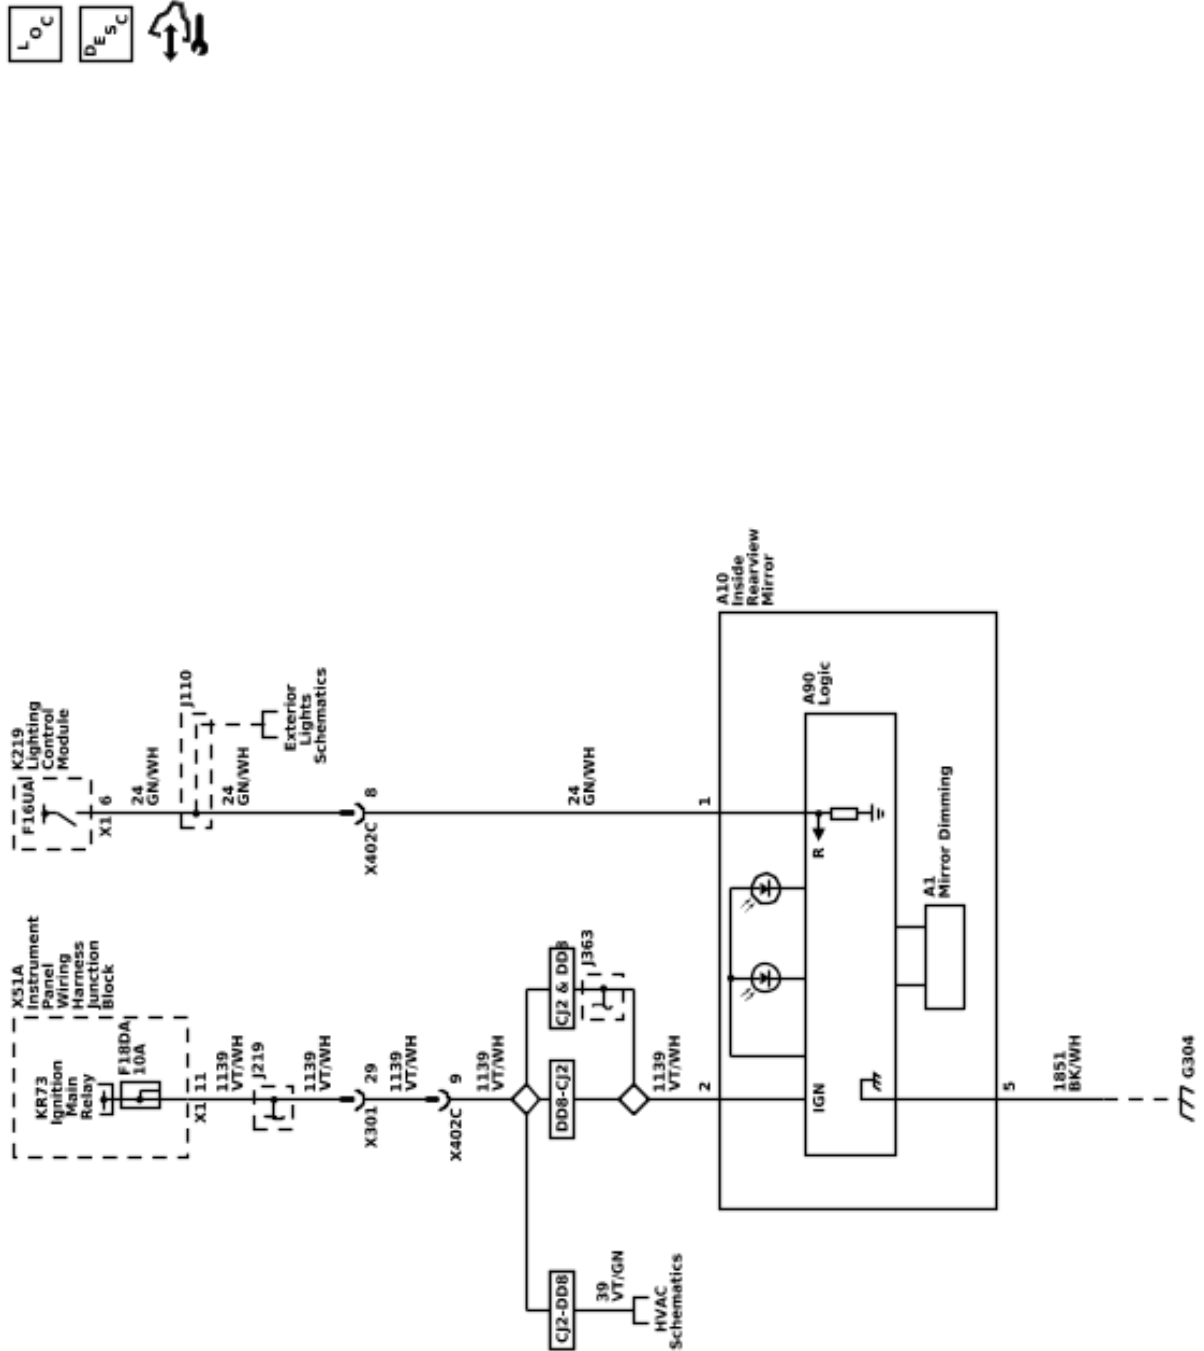


6331919




Outside Rearview Mirror Schematics (Driver Controls and Position)

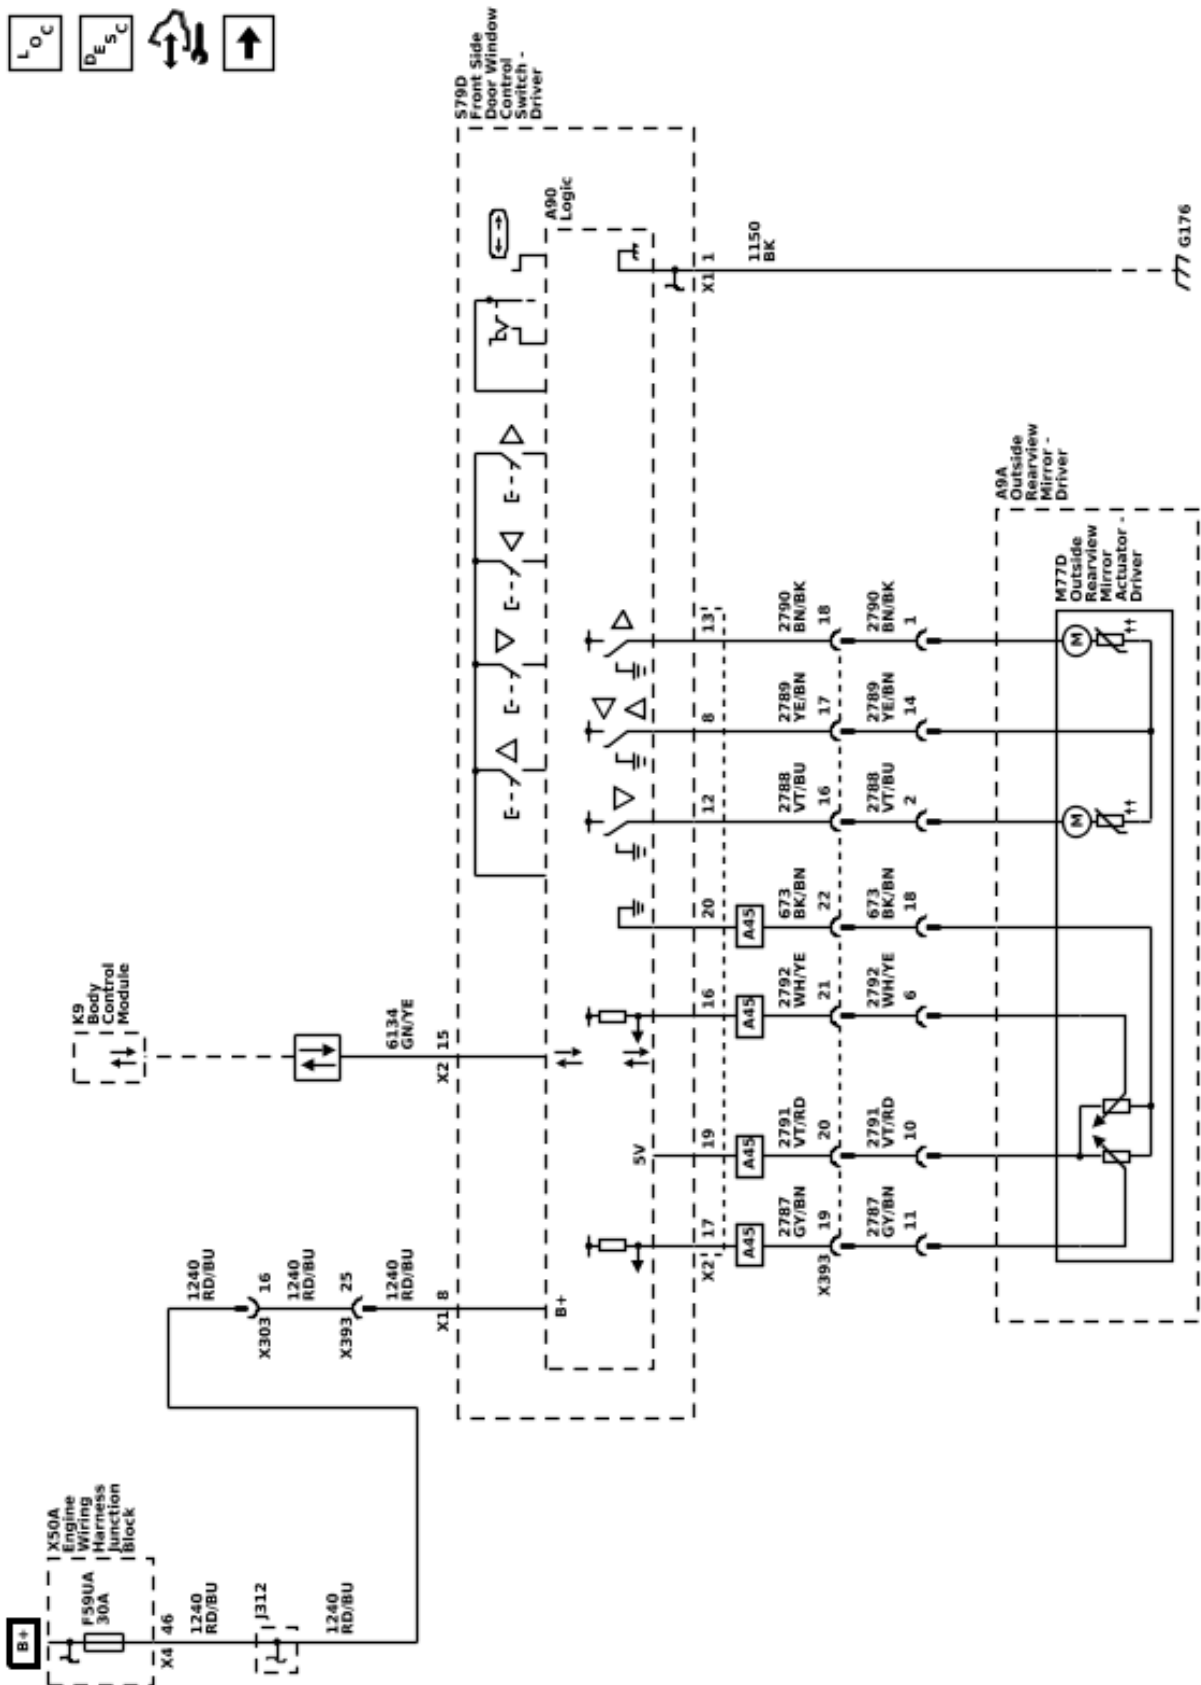

Outside Rearview Mirror Schematics (Passenger Controls, and Position)

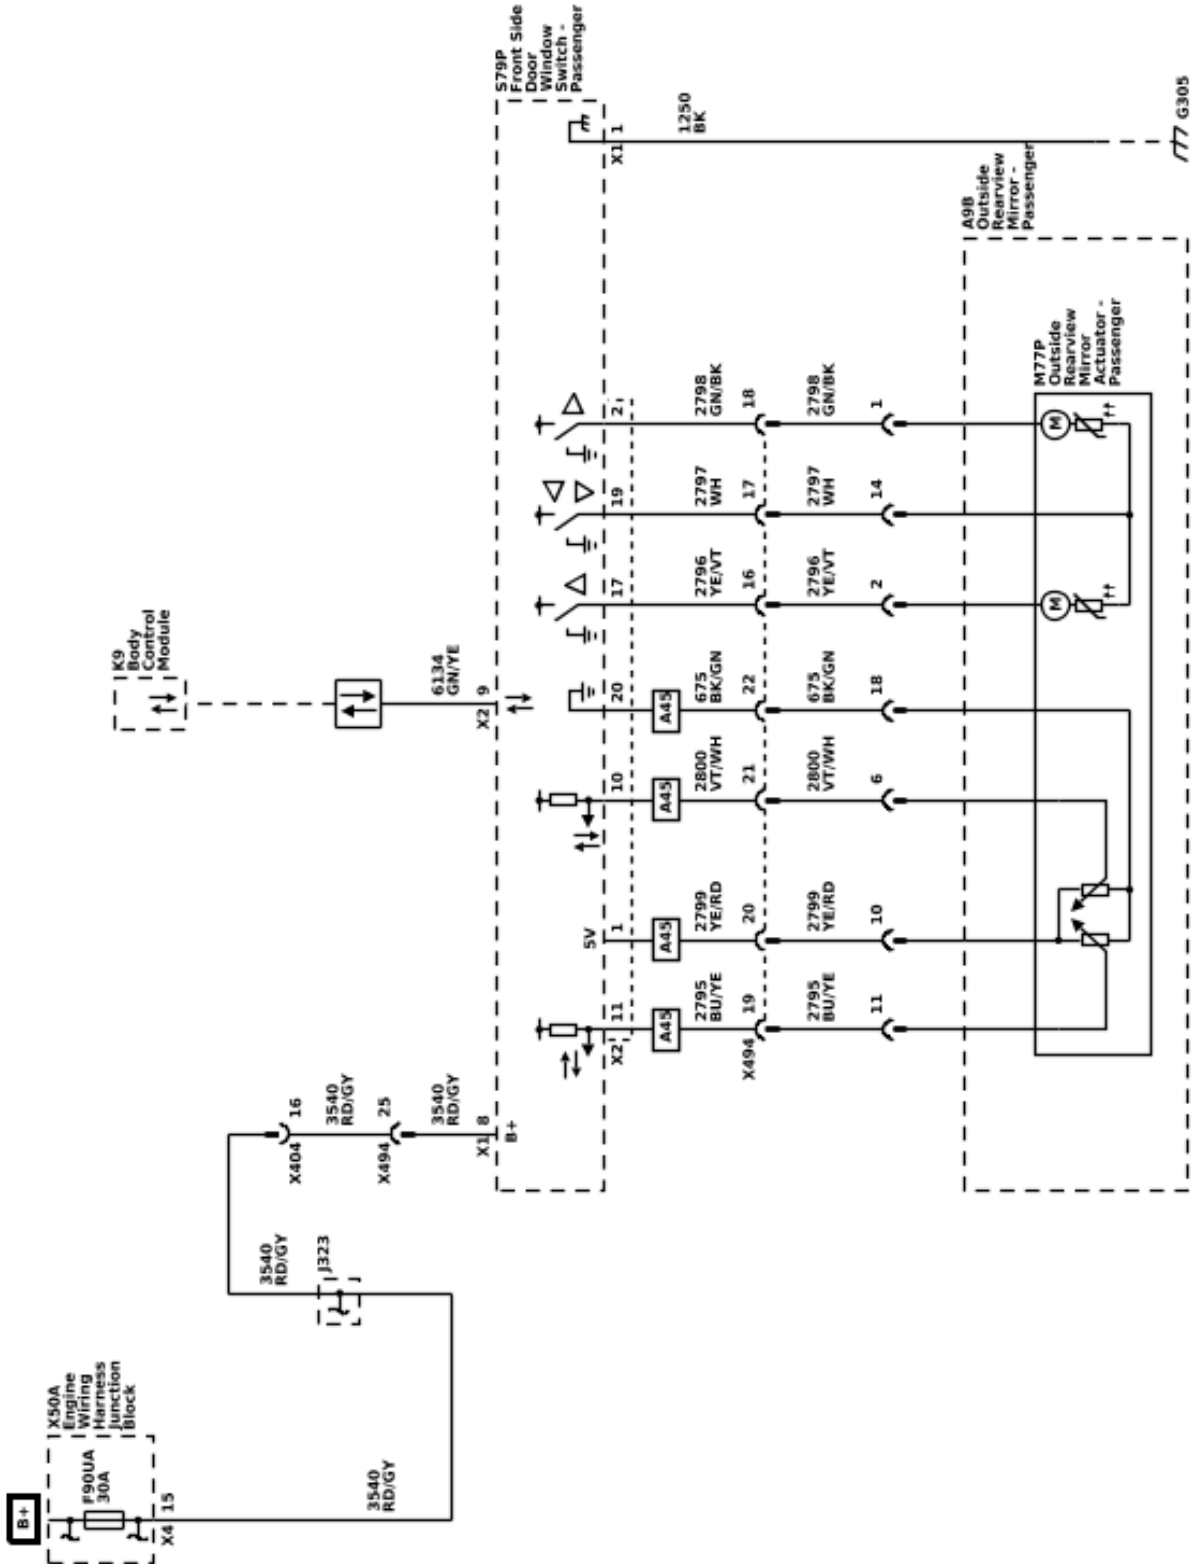

Outside Rearview Mirror Schematics (Heating)

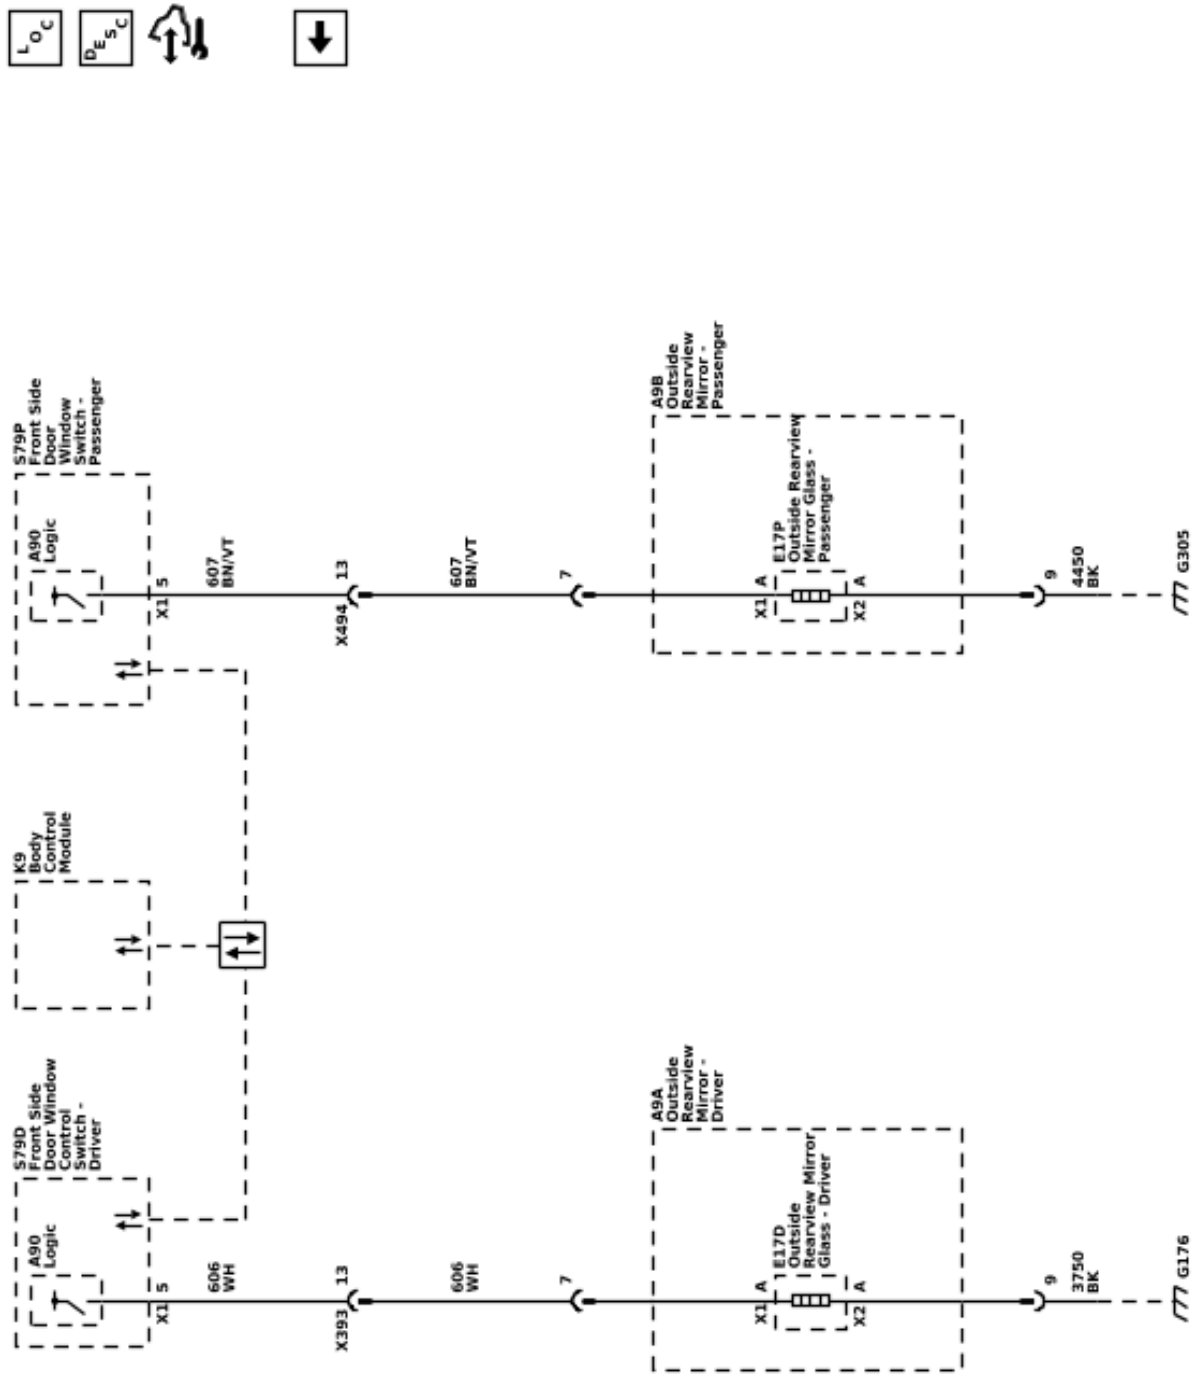

## Description and Operation

### Automatic Day-Night Mirror

#### Description and Operation

#### Inside Rearview Mirror with the Automatic Day-Night Feature System Operation

The inside rearview mirror uses 2 photocell sensors. One sensor is the headlight sensor, located on the face side of the mirror. The headlight sensor is used to determine light conditions present at the mirror face. The other sensor is the ambient light sensor, located on the rear of the mirror or windshield side. The ambient light sensor is used to determine the exterior light conditions. With a low exterior light condition detected, and a high light condition from behind the car, at the headlight sensor, the inside rearview mirror will automatically darken the face of the mirror.

In the daytime, the mirror is in a normal state because of the high exterior light condition that is indicated by the ambient light sensor. With the gear selector lever in the REVERSE position and the Ignition ON/Vehicle in Service Mode, backup lamp supply voltage is supplied as an input to the inside rearview mirror. The mirror monitors this input to disable the automatic day-night feature. This allows the driver to see objects in the mirror clearly when backing up, even during the night.

#### Driver Outside Rearview Mirror with Automatic Day-Night System Operation (If Equipped)

The automatic day-night feature of the driver outside rearview mirror is controlled by the inside rearview mirror. The inside rearview mirror supplies control and low reference to the driver outside rearview mirror. At night, with the automatic day-night feature enabled, the driver outside rearview mirror will automatically darken with the inside rearview mirror to reduce glare from headlamps behind the vehicle.

### Outside Mirror Description and Operation

#### Power Mirror System Components

The power mirror system consists of the following components:

- Body Control Module
- Driver Seat Adjuster Memory Module
- Outside Mirror Switch
- Passenger Window Switch
- Left Outside Rearview Mirror
- Right Outside Rearview Mirror

#### Power Mirror System Controls

The outside rearview mirror switch is part of the S79D Driver Front Side Door Window Control Switch and uses serial data to control the passenger mirror through the S79P Passenger Front Side Door Window Control Switch. Each S79 Side Door Window Control Switch

has its own 12V, ground and data communications circuit along with mirror directional control and mirror fold circuits.

#### Driver Mirror Controls

The S79D Driver Front Side Door Window Control Switch has internal connections for the driver mirror. When the mirror position switch is active the driver mirror is commanded to move through bi-directional motor control circuits. The motor control circuits are floating while in an inactive state and the switches will apply power and ground to the control circuits as necessary to move the mirror in the commanded direction.

#### Passenger Mirror Controls

The S79D Driver Front Side Door Window Control Switch uses serial data circuits to communicate the active states for the passenger mirror switch to the S79P Passenger Front Side Door Window Control Switch. The S79P Passenger Front Side Door Window Control Switch has internal connections for the passenger mirror. When the mirror position switch is active the passenger mirror is commanded to move through bi-directional motor control circuits. The motor control circuits are floating while in an inactive state and the switches will apply power and ground to the control circuits as necessary to move the mirror in the commanded direction.

#### Mirror Position

Mirror position is determined by both horizontal and vertical position sensors in each of the power mirrors. Each S79 Front Side Door Window Control Switch supplies a 5 V reference, low reference, and horizontal and vertical position signal circuits to these sensors. The signal circuits are referenced from 5 V by the S79 Front Side Door Window Control Switch and the signal circuit voltage levels represent the mirror positions. The mirror positions are stored in each S79 Front Side Door Window Control Switch for memory mirror operation. When the memory seat module receives a memory recall command, the memory seat control module will send the go to position to the S79 Front Side Door Window Control Switch. The S79 Front Side Door Window Control Switches will then drive the appropriate mirror motors to the commanded position sensor settings.

#### Mirror Select

The S79D Driver Front Side Door Window Control Switch has internal connections for the mirror select switch. When the mirror select switch is active the S79 Front Side Door Window Control Switch will either control the driver mirror or send a serial data message to control the passenger mirror.

#### Folding Mirrors

The S79D Driver Front Side Door Window Control Switch sends the mirror fold/unfold inputs to the K9 Body Control Module (BCM) through serial data. When the BCM receives a fold/unfold signal it will send a fold/unfold command to the S79 Driver Front Side Door Window Control Switch which will send a serial data message to the S79P Passenger Front Side Door Window Control Switch. The outside mirrors will fold or

unfold depending on their current state. The BCM will also send a serial data message to unfold the mirrors when the vehicle reaches 20 km/h (12 mph). The S79 Front Side Door Window Control Switches control the fold/unfold motors through bi-directional control circuits



### **Heated Mirrors**

The heated mirrors are controlled through each S79 Front Side Door Window Control Switch. When the vehicle is running and the HVAC control module receives a rear window defog request from the radio/HVAC controls, the HVAC control module will send a serial data message to the S79D Driver Front Side Door Window Control Switch and S79P Passenger Front Side Door Window Control Switch. Each S79 Front Side Door Window Control Switch provide B+ voltage to the driver and passenger outside rearview mirror heating elements.

# Trailing Systems


## Schematic and Routing Diagrams

Trailer Systems Schematics (Trailer Lamp Control Module and Trailer Connector Pins: A, B, D, E, F, G (Z82 & U1D))

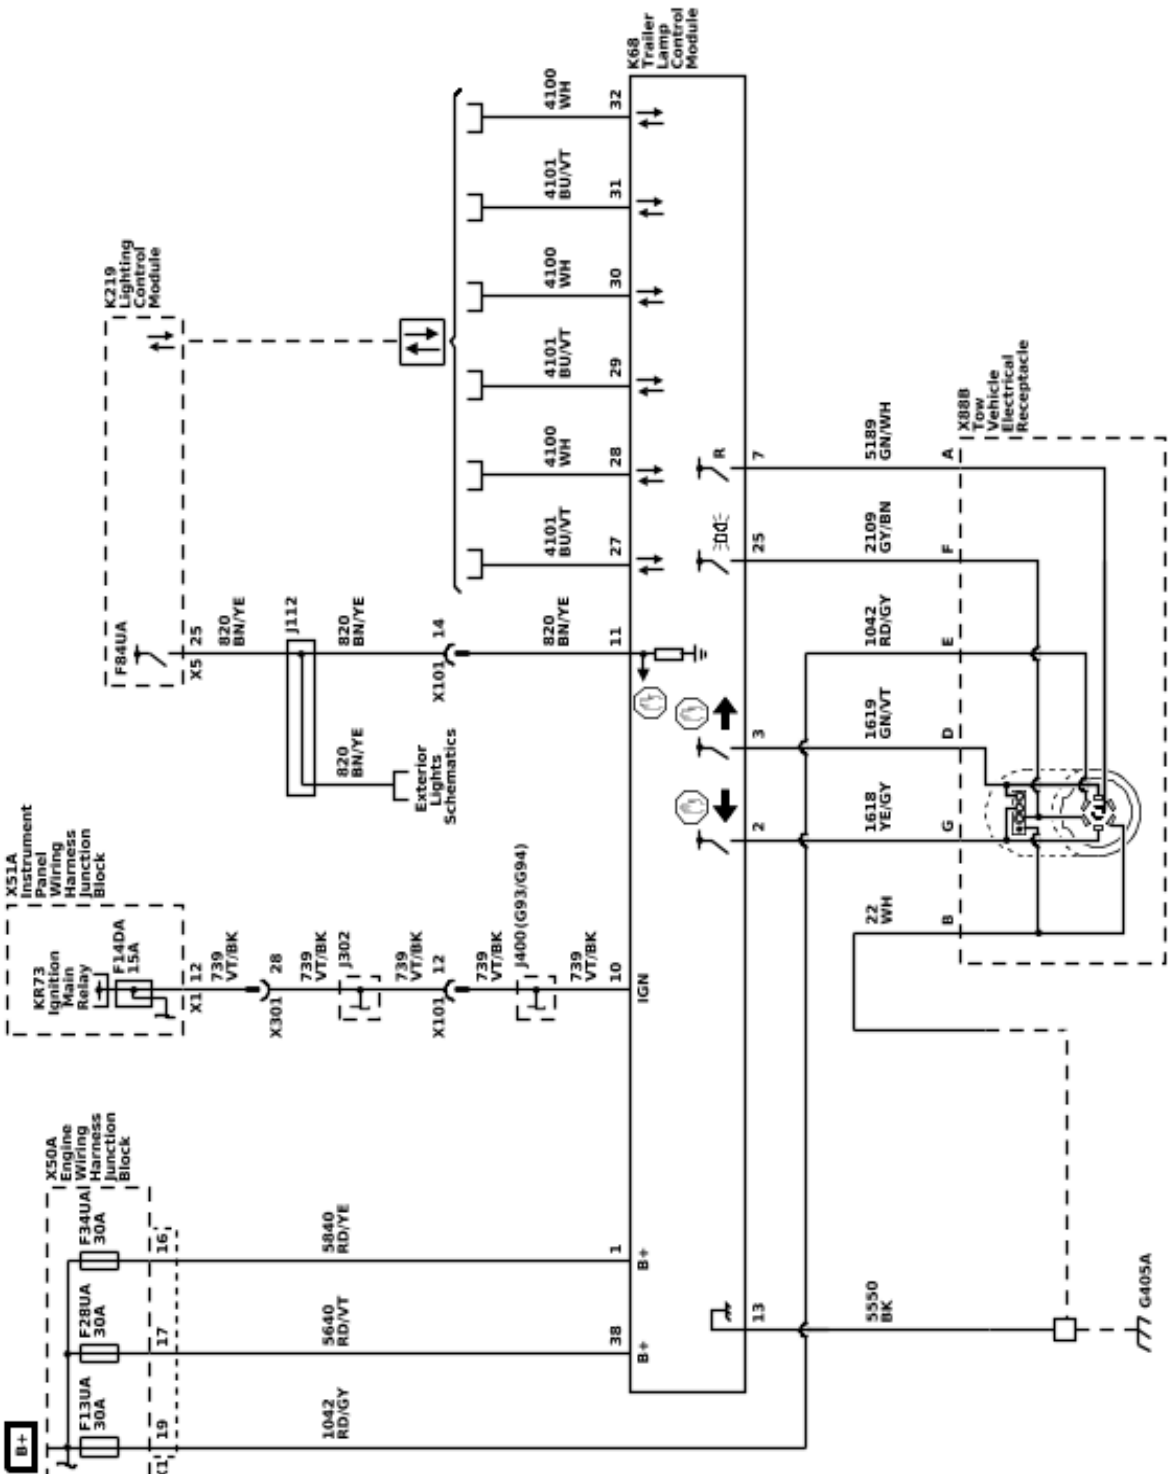


6331923

Trailing Systems Schematics (Trailer Connector Pins: A, B, D, E, F, G (Z82 - U1D))

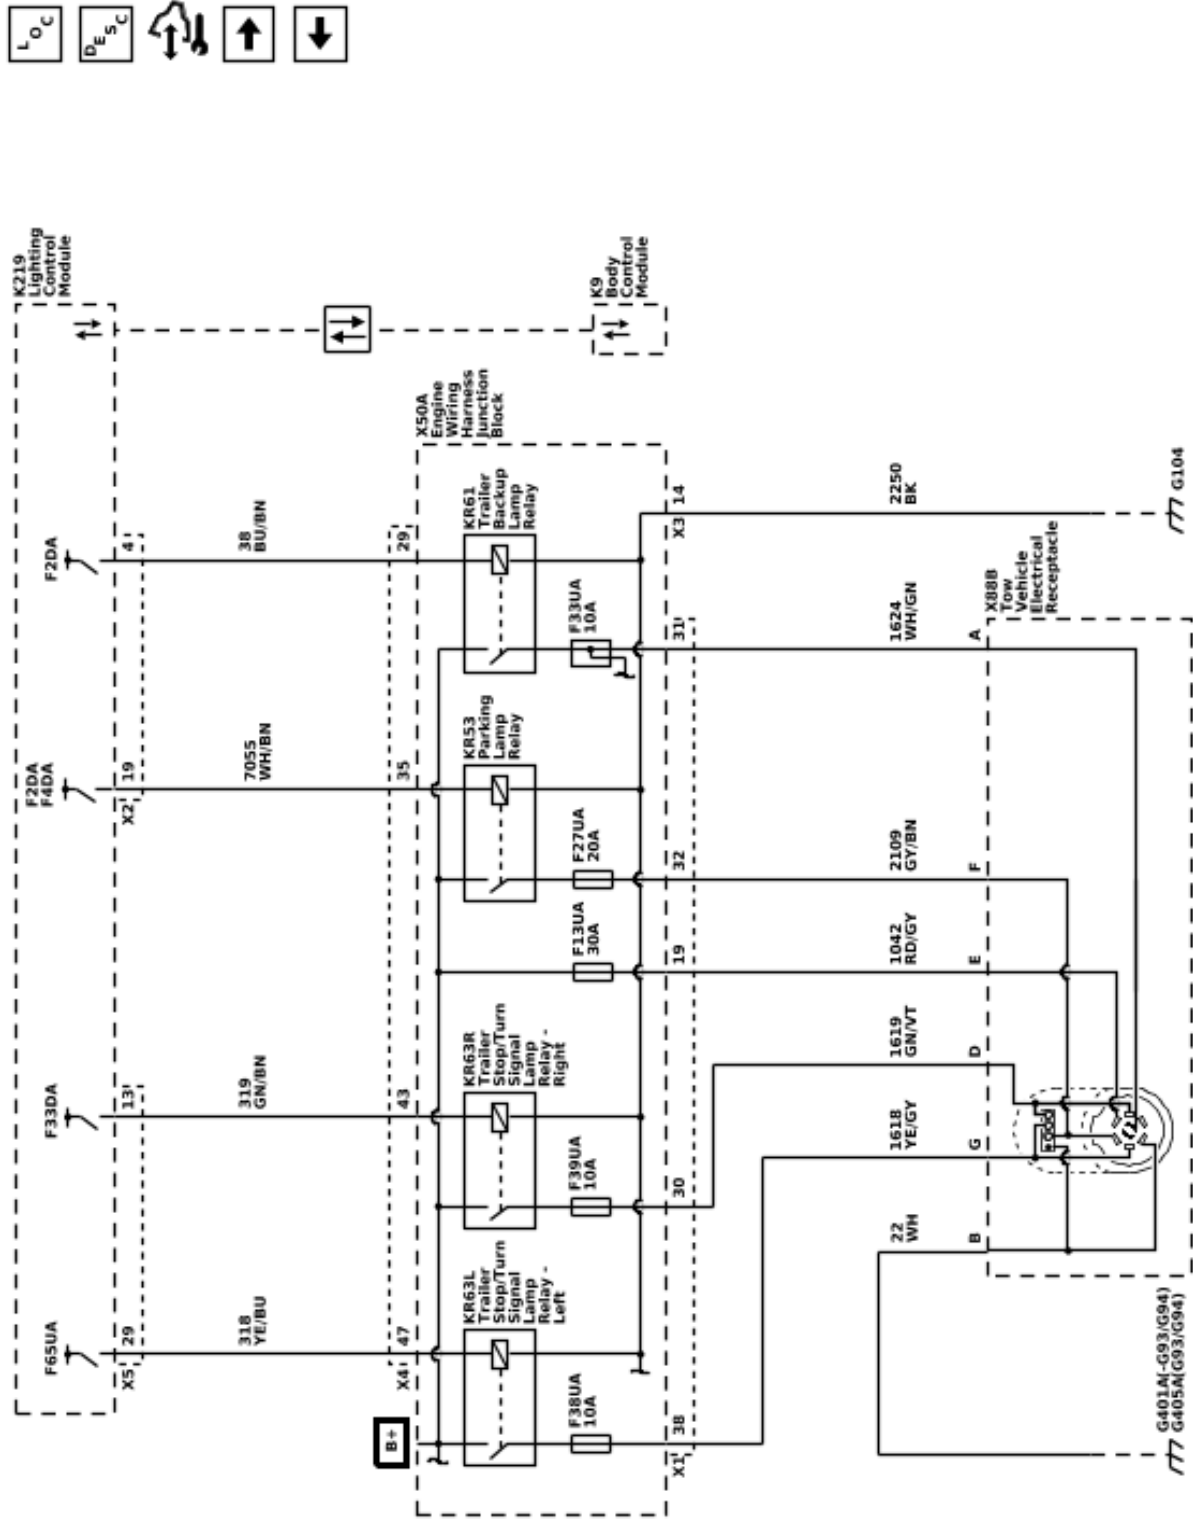




Trailer Systems Schematics (Trailer Brake and Trailer Connector Pin: C (JL1))

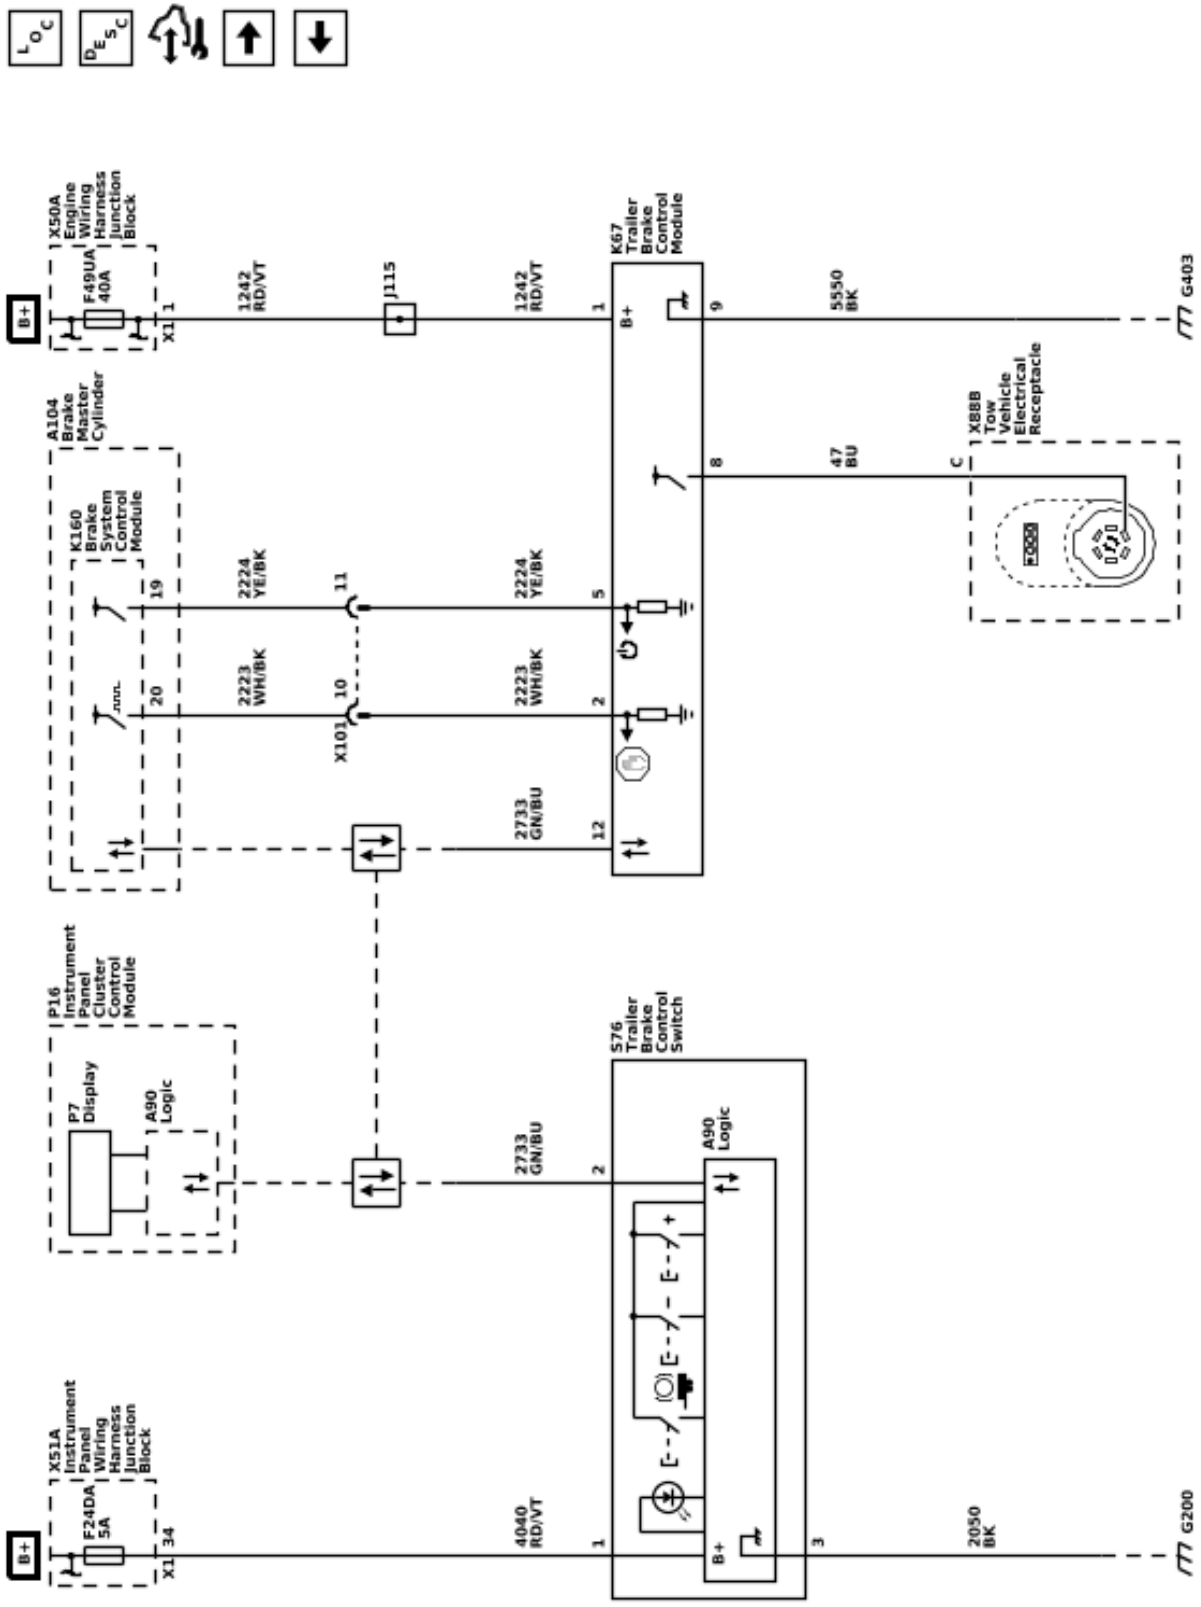

Trailing Systems Schematics (Trailer Brake Provisions (Z82 - U1D))

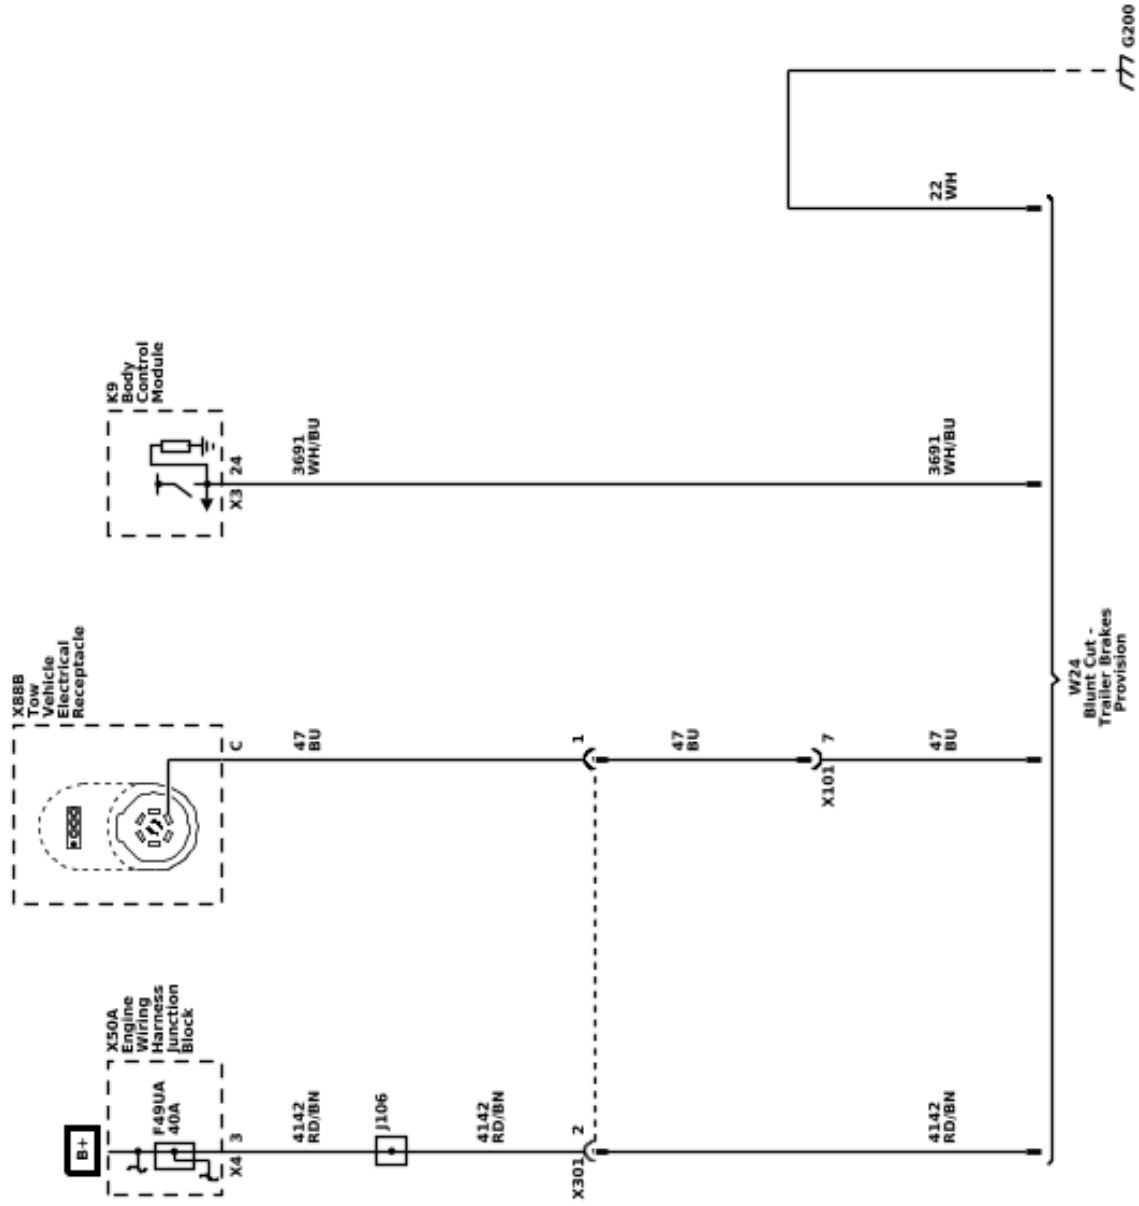

## Description and Operation

### Trailer Description and Operation

#### Trailer System Overview

Begin the trailering system diagnosis with Diagnostic System Check - Trailering. The Diagnostic System Check - Trailering will provide a complete strategy to locate and repair a vehicle trailering electrical fault. Not following this strategy may cause additional diagnostic time and/or misdiagnosis.

The trailering system consists of the following:

- Trailer Lighting, refer to Trailer Lamps Malfunction for additional diagnostic information.
- {JL1} Trailer Brakes, refer to Trailer Brake Malfunction for additional diagnostic information.
- Trailer Battery Charging System, refer to Trailer Battery Charging Malfunction for additional diagnostic information.
- Trailer Detection, refer to Trailer Detection Malfunction for additional diagnostic information.
- Trailer Theft Detection.

#### 7-Terminal Tow Vehicle Electrical Receptacle Pinout

- Terminal A – Trailer Backup Lamp Control
- Terminal B – Ground
- Terminal C – Trailer Brake Control
- Terminal D – Right Trailer Stop/Turn Signal Lamp Control
- Terminal E – B+
- Terminal F – Trailer Park Lamp Control
- Terminal G – Left Trailer Stop/Turn Signal Lamp Control

#### Connecting Aftermarket Accessories

- Some aftermarket accessories that connect to the X88B Tow Vehicle Electrical Receptacle will be recognized by the vehicle as a trailer connected, even if the accessory is not a trailer. As a result, side blind zone detection, rear park assist, and/or rear cross traffic alert will be turned off anytime the vehicle detects a trailer/accessory is connected.
- Vehicles equipped with U1D/UET have trailer theft detection that constantly monitors trailer connected status when enabled. This is done by randomly pulsing the lighting circuits of the trailer when the vehicle is parked. As a result, some aftermarket accessories may be turned ON/OFF when connected to the vehicle with theft detection enabled.
- Vehicles equipped with U1D/UET use pulse width modulation voltage (PWM) for trailer lighting functions. Some aftermarket accessories are incompatible with PWM and may not function correctly when connected to the trailer lighting circuits of the vehicle.

#### Trailer Battery Charging System

Trailer battery charging is accomplished through constant battery voltage from the X50A Engine Wiring Harness Junction Block to the X88B Tow Vehicle Electrical Receptacle. Battery voltage is supplied to terminal E at the X88B Tow Vehicle Electrical

Receptacle at all times. If equipped, the trailer battery will constantly be charged by the vehicle's electrical system anytime the trailer is connected. Some trailers require the B+ circuit to the X88B Tow Vehicle Electrical Receptacle for the trailer brakes to function.

#### Trailer Lighting and Detection With U1D/UET

##### Note:

- Some trailers utilize a trailer mounted control module to operate some or all of the trailer lights. These trailers may use the B+ circuit from the trailer connector to power the trailer lighting circuits. These trailers may not always be detected by the Trailer Lighting Control Module and may set faults.
- When a trailer is detected on a vehicle equipped with side blind zone detection, rear park assist, and/or rear cross traffic alert, the vehicle will automatically turn these features off. These features are turned off to prevent false detections due to the trailer obstructing the view of the sensors.
- Vehicles equipped with IOR/1FL do not come equipped with the trailering APP however may still be equipped with a K68 trailer Lamp Control Module.

The K68 Trailer Lamp Control Module is responsible for controlling the trailer lighting on vehicles with U1D/UET. The combined trailer stop/turn signal lamps of the trailer must draw at least 55mA of total current to be detected as a trailer or the Trailer Lamp Control Module will not control the lighting circuits. The Trailer Lamp Control Module receives serial data messages from the K9 Body Control Module (BCM) indicating what lamps have been activated on the vehicle. The Trailer Lamp Control Module responds by applying pulse width modulated voltage (PWM) to the appropriate control circuits for the requested lamps illuminating the lamps on the attached trailer. The Trailer Lamp Control Module constantly monitors for trailer connection status, trailer lighting faults, and trailer theft deterrent purposes. This is accomplished through the lighting circuits of the trailer to determine if a trailer is connected. When a trailer is connected, the Trailer Lamp Control Module senses the trailer connection and alerts the driver by requesting a trailer profile setup through the Trailering App, which is displayed on the infotainment screen. If a trailer is disconnected with the ignition ON, the vehicle will display multiple trailer lighting messages until a trailer is reconnected or the message is dismissed by the user. With the key OFF, the Trailer Lamp Control Module will periodically pulse the lighting circuits of the trailer to verify it is still connected. The lights on the trailer may flash at different intervals with the key OFF depending on which type of lights the trailer is built with. If a trailer is disconnected with the key ON, the vehicle will display a trailer disconnected message until a trailer is reconnected or the ignition is cycled.

#### Trailer Lighting Without U1D/UET

The K219 Lighting Control Module is responsible for controlling the trailer lighting on vehicles without U1D/UET. The lighting control module receives serial data

## 2-50 Trailing Systems

messages from the K9 Body Control Module (BCM) indicating what lamps have been activated on the vehicle. The lighting control module responds by applying voltage to the appropriate relay control circuits for the requested lamps anytime the vehicle lamps are commanded ON. With the relay coil energized, the relay contacts close and allow voltage to flow through the relay illuminating the appropriate lamps on the attached trailer.

### Trailer Messages

The driver information center (P16 Instrument Cluster) or infotainment screen (P17 Info Display Module) may display one or more of the following messages to the user related to trailing:

Trailing Message	Description
Check Trailer Left Turn Signal Lamp	The K68 Trailer Lighting Control Module detects a fault on the left trailer stop/turn lamp control circuit
Check Trailer Right Turn Signal Lamp	The K68 Trailer Lighting Control Module detects a fault on the right trailer stop/turn lamp control circuit
Check Trailer Rear Lamp	The K68 Trailer Lighting Control Module detects a fault on the trailer park lamp control circuit.
Check Trailer Reversing Lamp	The K68 Trailer Lighting Control Module detects a fault on the trailer backup lamp control circuit.
Check Trailer Brake Lamps	The K68 Trailer Lighting Control Module detects a fault on the left and/or right trailer stop/turn lamp control circuits
{JL1} Check Trailer Wiring	The K67 Trailer Brake Power Control Module detects a fault on the trailer brake control circuit or the trailer was disconnected.
Lane Change Alert Off	Reminder to the user that lane change alerts are turned off anytime a trailer is detected.
Rear Cross Traffic Alert Off	Reminder to the user that rear cross traffic alerts are turned off anytime a trailer is detected.
Rear Park Assist Off	Reminder to the user that rear park assist is turned off anytime a trailer is detected.
Remember to turn On Tow/Haul Mode	Reminder to the user to turn ON Tow/Haul Mode when towing.
{JL1} Service Trailer Brake System	The K67 Trailer Brake Power Control Module detects a fault on the trailer brake control circuit.
Service Trailer Tire Monitor System	The K214 Trailer Tire Pressure Indicator Module detects one or more issues with the trailer tire pressure monitoring system.
Trailer Detected	The K68 Trailer Lighting Control Module detects a trailer has been connected to the X88B Tow Vehicle electrical Receptacle.
{JL1} Trailer Brakes Detected	The K67 Trailer Brake Power Control Module detects a trailer with trailer brakes has been connected to the X88B Tow Vehicle electrical Receptacle.
Trailer Disconnected Check Connection	The K68 Trailer Lighting Control Module detects a trailer has been disconnected from the X88B Tow Vehicle electrical Receptacle.
Trailer Tire Pressure High	The K214 Trailer Tire Pressure Indicator Module detects one or more of the trailer tire pressures is high.
Trailer Tire Pressure Low	The K214 Trailer Tire Pressure Indicator Module detects one or more of the trailer tire pressures is low.
Trailer Tire Sensor Fault	The K214 Trailer Tire Pressure Indicator Module detects one or more of the trailer tire pressure sensors has a fault.
Trailer Tire Temperature High	The K214 Trailer Tire Pressure Indicator Module detects one or more of the trailer tire temperatures is too high.

## Trailer Theft Detection (With U1D/ UET Only)

Trailer theft monitoring can be turned ON and OFF through the vehicle Trailer App. When enabled, any time the trailer theft deterrent system is armed, the trailer lighting circuits are constantly monitored to determine if a trailer is connected for trailer theft deterrent purposes. With the key OFF, the K68 Trailer Lamp Control Module will randomly pulse the lighting circuits of the trailer to verify it is still connected by monitoring the voltage drop of the circuit. Depending on the configuration of the trailer lights, the trailer lights may randomly flash as part of the trailer theft deterrent function. These flashes correspond to when the K68 Trailer Lamp Control Module pulses the lighting circuits to ensure the trailer is still connected and is considered normal. If the trailer is disconnected while the trailer theft deterrent system is armed, the vehicle will flash the exterior lights and cycle the horn to alert of a trailer theft event. Refer to Theft Systems Description and Operation for more information on the content theft deterrent system.

## Trailer Brakes (JL1)

The vehicle is equipped with the following trailer braking components:

- K160 Brake System Control Module
- K67 Trailer Brake Control Module
- S76 Trailer Brake Control Switch
- Trailer Brake Driver Information Center Display

### Trailer Brake Circuits

- Circuit 2223 is the trailer brake apply signal circuit. The K160 Brake System Control Module receives vehicle braking force data and/or data from the application of the manual trailer brake slide lever. The brake system control module responds by applying the appropriate amount of pulse width modulated (PWM) voltage based on the amount of trailer brake application desired. The K67 Trailer Brake Power Control Module responds to the signal circuit by applying the appropriate amount of PWM voltage to the trailer auxiliary control circuit 47.
- Circuit 2224 is the trailer brake enable signal circuit. The K160 Brake System Control Module applies voltage to the enable circuit anytime a LIN data communication fault is not present, a trailer is connected, and the vehicle brakes are being applied. The enable circuit must have voltage applied to it before the K133 Trailer Brake Power Control Module applies the appropriate amount of pulse width modulated (PWM) voltage to the trailer auxiliary control circuit 47.
- Circuit 2733 is the brake system control module LIN bus 2 circuit. The K160 Brake System Control Module, K67 Trailer Brake Power Control Module, and the S76 Trailer Brake Control Switch all communicate through the brake system control

module LIN bus 2 circuit. If the LIN bus has a fault on the circuit, trailer braking will be disabled until the fault is repaired.

- Circuit 47 is the trailer auxiliary control circuit. The K133 Trailer Brake Power Control Module responds to signal circuit 2223 and enable circuit 2224 by applying the appropriate amount of PWM voltage to the trailer auxiliary control circuit. A properly functioning trailer will apply the appropriate amount of braking force to the brakes of the trailer.

**The Trailer Brake Control System is compatible with two types of Trailer Brake Systems as listed below:**

1. **Electric Brakes** A controlled electrical output signal energizes an electric-magnet/lever arm assembly that directly actuates the brake mechanism. The GDS name for this system is "Electromagnetic Brakes".
2. **Electric Over Hydraulic Brakes** A controlled electrical output signal energizes a remote, trailer mounted hydraulic pump to build brake pressure in a closed hydraulic system on the trailer. The hydraulic fluid pressure actuates the brake mechanism. The GDS name for this system is "Electrohydraulic Brakes".

### Trailer Brake Output Versus Trailer Brake Type

- The trailer brake system characterizes the trailer brakes as either Electric Brake or Electric Over Hydraulic Brake automatically. This characterization may be affected by the number, type, and age of the trailer brake magnets, as well as any other devices installed on the trailer brakes (i.e. adapters for Electric Over Hydraulic brake functionality).
- The trailer brake system is fully operational with either characterization.
- Sliding the manual trailer brake apply lever will produce output at zero speed for either characterization.

The user gain allows the driver to adjust the amount of trailer brake output to match the trailer load and road surface. The controller determines the desired trailer brake output and provides a control signal to the K67 Trailer Brake Control Module (TBPM). The K67 Trailer Brake Control Module amplifies the signal and provides the output required to activate the Electric or Electric Over Hydraulic trailer brakes.

The trailer brake control can support up to a maximum of four axles with electric trailer brakes (8 brake magnets).

Connecting a trailer that is not compatible with the trailer brake system may result in reduced or complete loss of trailer braking. There may be an increase in stopping distance or trailer instability which could result in personal injury or damage to the vehicle, trailer or other property. An aftermarket controller may be available for use with incompatible trailer brake systems.

To determine the type of brakes on your trailer and the availability of controllers, check with your trailer manufacturer or dealer. Do not power up an aftermarket controller with the factory brake controller at the same time.

### Trailer Brake Control Panel

The S76 Trailer Brake Control Switch contains the trailer gain and manual apply switches. It is located in the vehicle center stack. Refer to the owner's manual for more information on the location. The control panel and switches allows you to adjust the amount of output, referred to as trailer gain, available to the Electric or Electric Over Hydraulic brakes. It also allows you to manually apply the trailer brakes. The trailer brake control switch is used along with the trailer brake display page on the driver information center to adjust and display power output to the trailer brakes.

### Manual Trailer Brake Apply

The manual trailer brake apply lever is located on the S76 Trailer Brake Control Switch and is used to apply the trailer's Electric or Electric Over Hydraulic brakes independent of the vehicle's brakes. This lever is used in the trailer gain adjustment procedure to properly adjust the power output to the trailer brakes.

Sliding the lever will apply only the trailer brakes. The power output to the trailer is indicated in the trailer brake display page in the Driver Information Center (DIC). If the vehicle's service brakes are applied while using the manual trailer brake apply lever, the trailer brake control output power will be the greater of the two.

The trailer and the vehicle's brake lamps will come on when either the vehicle's braking or manual trailer brakes are applied.

### Trailer Brake Gain Adjustment

Trailer gain should be set for a specific trailing condition and must be adjusted any time vehicle loading, trailer loading or road surface conditions change. It is important to re-adjust trailer gain any time the tow vehicle, trailer loading or road surface conditions change or if you notice trailer wheel lock-up at any time while you are towing.

Setting the trailer gain properly is needed for the best trailer stopping performance. A trailer that is over-gained may result in locked trailer brakes. A trailer that is under-gained may result in not enough trailer braking. Both of these conditions may result in poor stopping and stability of the vehicle and trailer.

#### Trailer Gain Adjustment Procedure

- Adjust trailer gain in 0.5 step increments up to 10 gain setting by using the gain adjustment +/- buttons on the trailer brake control panel switch. Pressing and holding a gain button will cause the trailer gain to continuously increment or decrement. To turn the output to the trailer off, set the gain to zero.
- Drive the tow vehicle and trailer combination on a level surface representative of the towing condition and free of traffic at approximately 32–40 km/h (20–25 mph) and fully apply the manual trailer brake apply lever mechanism located on the trailer brake control panel switch. Adjusting the trailer gain at slower speeds may result in an incorrect gain setting.

- Adjust the trailer gain to just below the threshold of trailer wheel lock-up. Trailer wheel lock-up may not occur if towing a heavily loaded trailer. In this case, adjust the trailer gain to the highest allowable setting for the towing condition.

### Trailer Brake Gain and Output Display

This display menu can be accessed by scrolling through the DIC menu, or any time the trailer gain +/- button is depressed, or the manual trailer brake apply lever is actuated. The trailer output is displayed from 0 to full output and indicates the output power provided to the trailer brakes, relative to the gain setting.

After the electrical connection is made to a trailer equipped with electric brakes or electric over hydraulic brakes, the TRAILER CONNECTED message will be displayed momentarily on the DIC. The Trailer Brake Display Page can be selected on the DIC showing TRAILER GAIN and OUTPUT, after all vehicle related service messages are acknowledged by the driver. Depending on which instrument panel cluster is in the vehicle, the DIC may display dashed lines, a greyed out display, or it may be blank signifying a disconnected trailer or a trailer brake fault condition.

### Trailer Brake Driver Information Center Indicators and Messages

#### Trailer Brake Detection

The K67 Trailer Brake Control Module constantly monitors the trailer auxiliary control circuit from Terminal C at the X88B Tow Vehicle electrical Receptacle. When a trailer is connected with trailer brakes, the K67 Trailer Brake Control Module senses the connection and alerts the driver with a Trailer Connected message. If the K67 Trailer Brake Control Module senses a fault, or the trailer becomes disconnected, the vehicle will alert the driver with a Check Trailer Wiring message.

The following indicators are used to inform the driver of several different conditions:

#### Trailer Connected

This message will be briefly displayed when a trailer with Electric or Electric Over Hydraulic brakes is first connected to the vehicle. This message will automatically turn off in about ten seconds. The driver can also acknowledge this message before it automatically turns off.

#### Check Trailer Wiring

This message will be displayed if:

- The system detects that a trailer with Electric or Electric Over Hydraulic brakes is connected to the vehicle and then the trailer harness becomes disconnected from the vehicle.
- The trailer connection is recognized initially and then a disconnect occurs while the vehicle is stationary. This message will automatically turn off in about thirty seconds. This message will also turn off if the driver selects to turn this message off or if the trailer harness is reconnected.
- A disconnect of the trailer wiring harness occurs while the vehicle is moving. The Check Trailer Wiring message will continue until the ignition is

turned off. The message will also turn off if the driver selects to turn this message off or if the trailer harness is re-connected.

- There is an electrical fault in the wiring to the electric trailer brakes. The Check Trailer Wiring message will continue as long as there is an electrical fault in the trailer wiring. This message will also turn off if the driver acknowledges this message off.
- A poor connection at the 7-way connector may cause the Check Trailer Wiring message. Some aftermarket 7-way trailer side connector adapters or plugs may cause deformation or excessive wear to the vehicle's trailer terminals. It is recommended that you use an OEM or Pollak heavy duty 7-way trailer side connector adapter.

### Service Trailer Brake System

This message will be displayed when there is a problem with the trailer brake control system. The trailer brake system may not be fully functional, or may not be functioning at all. The trailer brake system is designed to provide trailer braking, if possible, even when faults prevent it from being fully functional. This reduced functionality includes:

1. Providing trailer braking when the master cylinder pressure or brake pedal switch are faulted.
2. Providing trailer braking when hill start assist and trailer sway control communication is faulted.
3. Providing trailer braking when certain manual trailer brake apply lever faults are present.


### Trailer Diagnostic Tools

In some situations when diagnosing trailer tire pressure monitoring, trailer lighting, or integrated trailer brakes, it may be necessary to connect the vehicle to a trailer to confirm proper operation. Performing this activity may prove difficult in the service environment since trailers are not often available for diagnostic use, may have existing electrical issues outside of the issues a technician is attempting to diagnose, or simply may be too unwieldy to connect for diagnosis.

With all this in mind, it may be helpful to build or create a tool that can be plugged into the vehicle's trailer connector and simulate a connected trailer. This tool would include park lamps, stop lamps, and a reverse lamp for lighting and trailer tire pressure monitoring diagnosis. It can be expanded to include trailer brake magnets to diagnose integrated trailer brake concerns. Also, an additional lamp can be included to diagnose the B+ circuit to the trailer.

Trailer issues are NOT covered under warranty, but these tools may be used to verify the vehicle is functioning properly and to help the customer understand and correct any trailer related issues if they so choose.

### Available Trailer Presence Simulator Tool

Illustration	Tool Number/Description
	<p>EL-52641 Trailer Presence Simulator Tool</p>

### Simulated Trailer Lighting

Creating a tool to simulate a connected trailer can be used to diagnose issues with trailer lighting, trailer brake (if equipped), the Trailing App (if equipped), and trailer tire pressure monitoring system (if equipped).

If the vehicle is equipped with a K68 Trailer Lamp Control Module (U1D/UET), the module monitors the current on the lighting circuits to determine a trailer has been connected. The Trailer Lamp Control Module pulses current on the trailer lighting circuits every 42 minutes to monitor for a connected trailer. If a current draw greater than 55mA is detected, the Trailer Lamp Control Module recognizes this as a connected trailer. This will enable any trailer lighting controlled by the Trailer Lamp Control Module. The Center Stack Module will also use this trailer detection as a cue to enable the Trailing App and trailer tire pressure monitoring functions.

### Creating a Simulated Trailer Lighting Tool

Parts needed:

- 7-way RV trailer connector Qty: 1
- Note:** The combination trailer stop/turn, and backup lamps must draw at least 55mA of total current to be detected as a trailer. Some LED combination lamps will not draw enough current. If an LED combination lamp is used, make sure it draws at least 55mA. A load resistor can be added to the circuit if necessary to obtain the correct load.
- Combination trailer park/stop/turn lamp (greater than 55mA drawn when on) Qty: 2
  - Reverse lamp Qty: 1
  - 12 gauge wire and terminals/connectors Qty: As needed
  - 18 gauge wire and terminals/connectors Qty: As needed
  - Mounting board Qty: 1
1. Connect a 12 gauge wire to the ground terminal of the 7-way trailer connector and the ground circuit of each combination trailer park/stop/turn lamp and the reverse lamp in parallel.
  2. Connect an 18 gauge wire between the park lamp terminal of the 7-way trailer connector and the park lamp circuit of each combination trailer park/stop/turn lamp in parallel.

## 2-54 Trailing Systems

---

3. Connect an 18 gauge wire between the left turn/stop lamp terminal of the 7-way trailer connector and the turn/stop lamp circuit of left trailer park/stop/turn lamp.
4. Connect an 18 gauge wire between the right turn/stop lamp terminal of the 7-way trailer connector and the turn/stop lamp circuit of right trailer park/stop/turn lamp.
5. Connect an 18 gauge wire between the reverse lamp terminal of the 7-way trailer connector and the reverse lamp.  
**Note:** A combination trailer lighting and trailer brake tool can be created on the same mounting board.
6. Mount the left combination trailer park/stop/turn lamp, right combination trailer park/stop/turn lamp, and reverse lamp to the mounting board.
7. Plug the 7-way RV trailer connector to the vehicle and verify functionality.

### Simulated Trailer Brakes

Creating a tool to simulate trailer brakes can be used to diagnose trailer brake issues.

The trailer brake control system is compatible with two types of trailer brake systems: electromagnetic or electro-over hydraulic trailer brakes. The Brake System Control Module must determine which type of brakes the trailer is equipped with so the system can output correctly for the trailer's brake system. Because the Brake System Control Module has to determine the type of trailer brake system that is being used, it can be sensitive to a variety of trailer wiring issues.

The Trailer Brake Control Module continuously sends a test pulse out on the trailer brake control circuit (circuit 47) to determine if a trailer with trailer brakes has been connected. How the pulse reacts when a trailer is connected is how the Trailer Brake Control Module determines which type of braking system the trailer is equipped with.

Even after the system detects the trailer, Trailer Brake Control Module will continue to send this test pulse on the trailer brake control circuit, which now is monitoring both the truck and trailer circuitry. The trailer brake control circuit continues to be monitored for any faults so the driver can be notified of any issues that may occur within the truck or trailer, as well as, to determine when the trailer is disconnected from the truck.

### Creating a Simulated Trailer Brake Tool

Parts needed:

- 7-way RV trailer connector Qty: 1
  - Electric trailer brake magnets Qty: 2, 4, 6, or 8
  - Reverse lamp Qty: 1
  - Mounting board Qty: 1
  - 12 gauge wire and terminals/connectors Qty: As needed
1. Connect a 12 gauge wire to the ground terminal of the 7-way trailer connector.
  2. Connect a 12 gauge wire to the brake controller output terminal of the 7-way trailer connector.

**Note:** The trailer brake magnets must be connected in parallel. Connecting in series will create an excessive current draw and disable the trailer brake system.



3. Connect the trailer brake magnets to the 12 gauge wires from the 7-way trailer connector in parallel.  
**Note:** A combination trailer lighting and trailer brake tool can be created on the same mounting board.
4. Mount the trailer brake magnets to the mounting board.
5. Plug the 7-way RV trailer connector to the vehicle and verify functionality.





# Vehicle Access

## Schematic and Routing Diagrams


Door Lock/Indicator Schematics (Interior Control Switches (- A45))

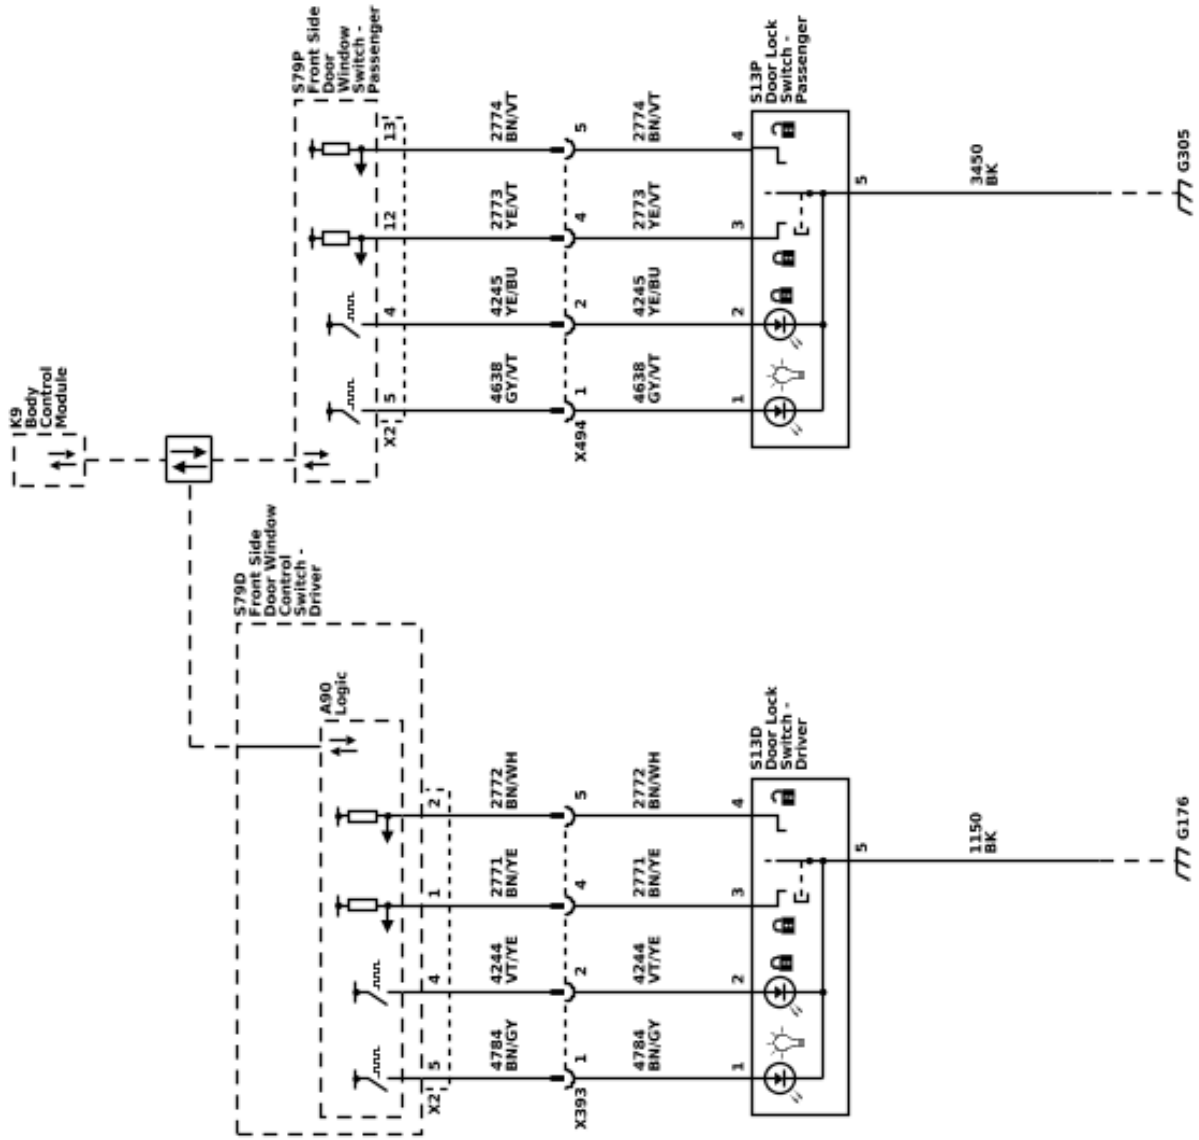

Door Lock/Indicator Schematics (Interior Control Switches and Indicators (A45))

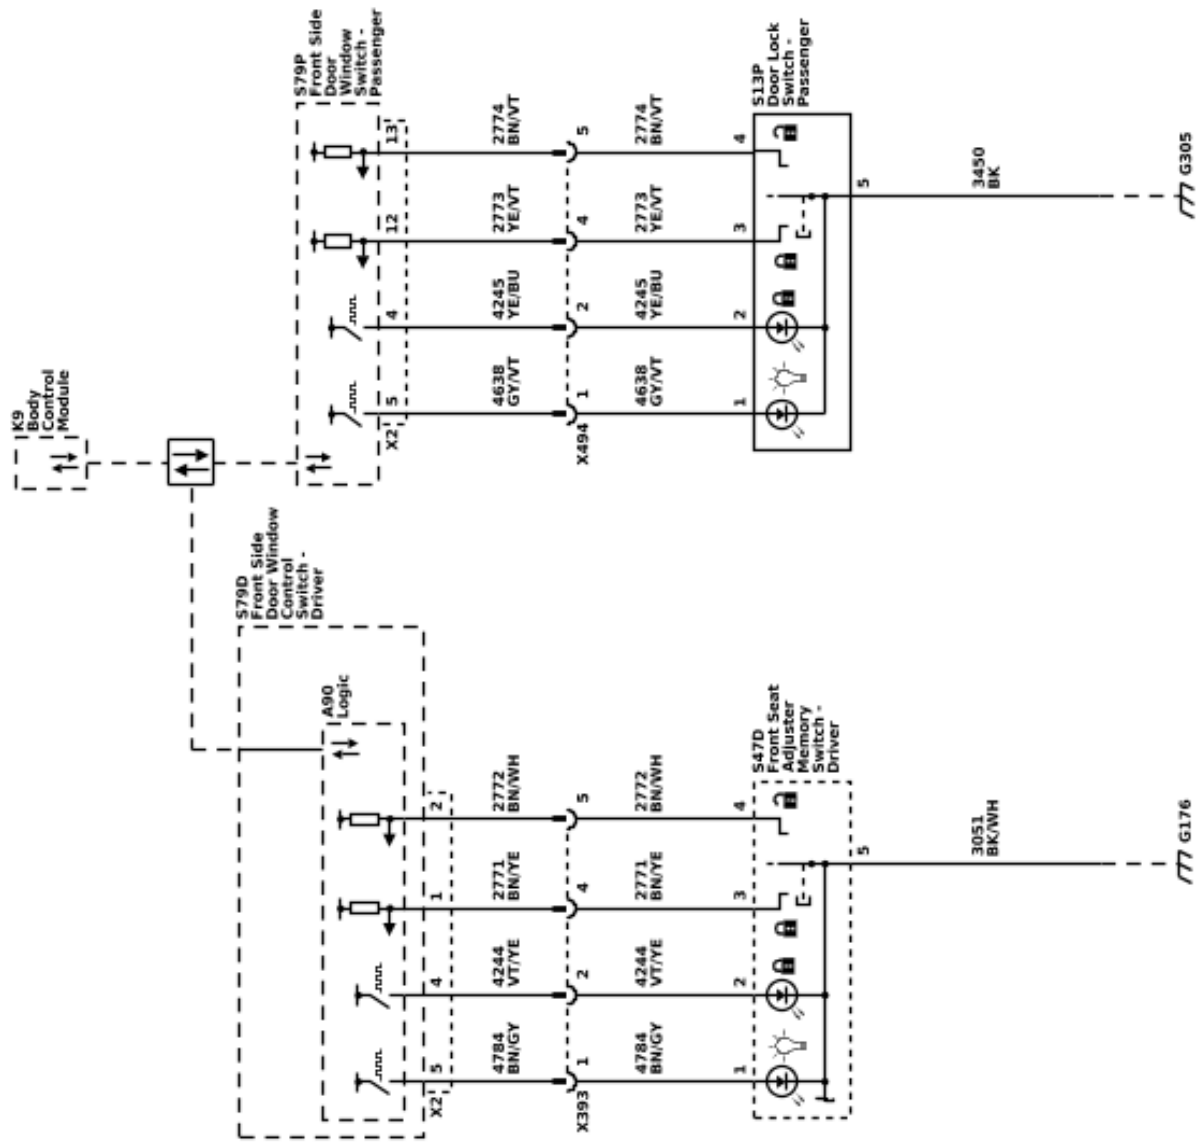


Door Lock/Indicator Schematics (Ajar Switches and Lock Status)


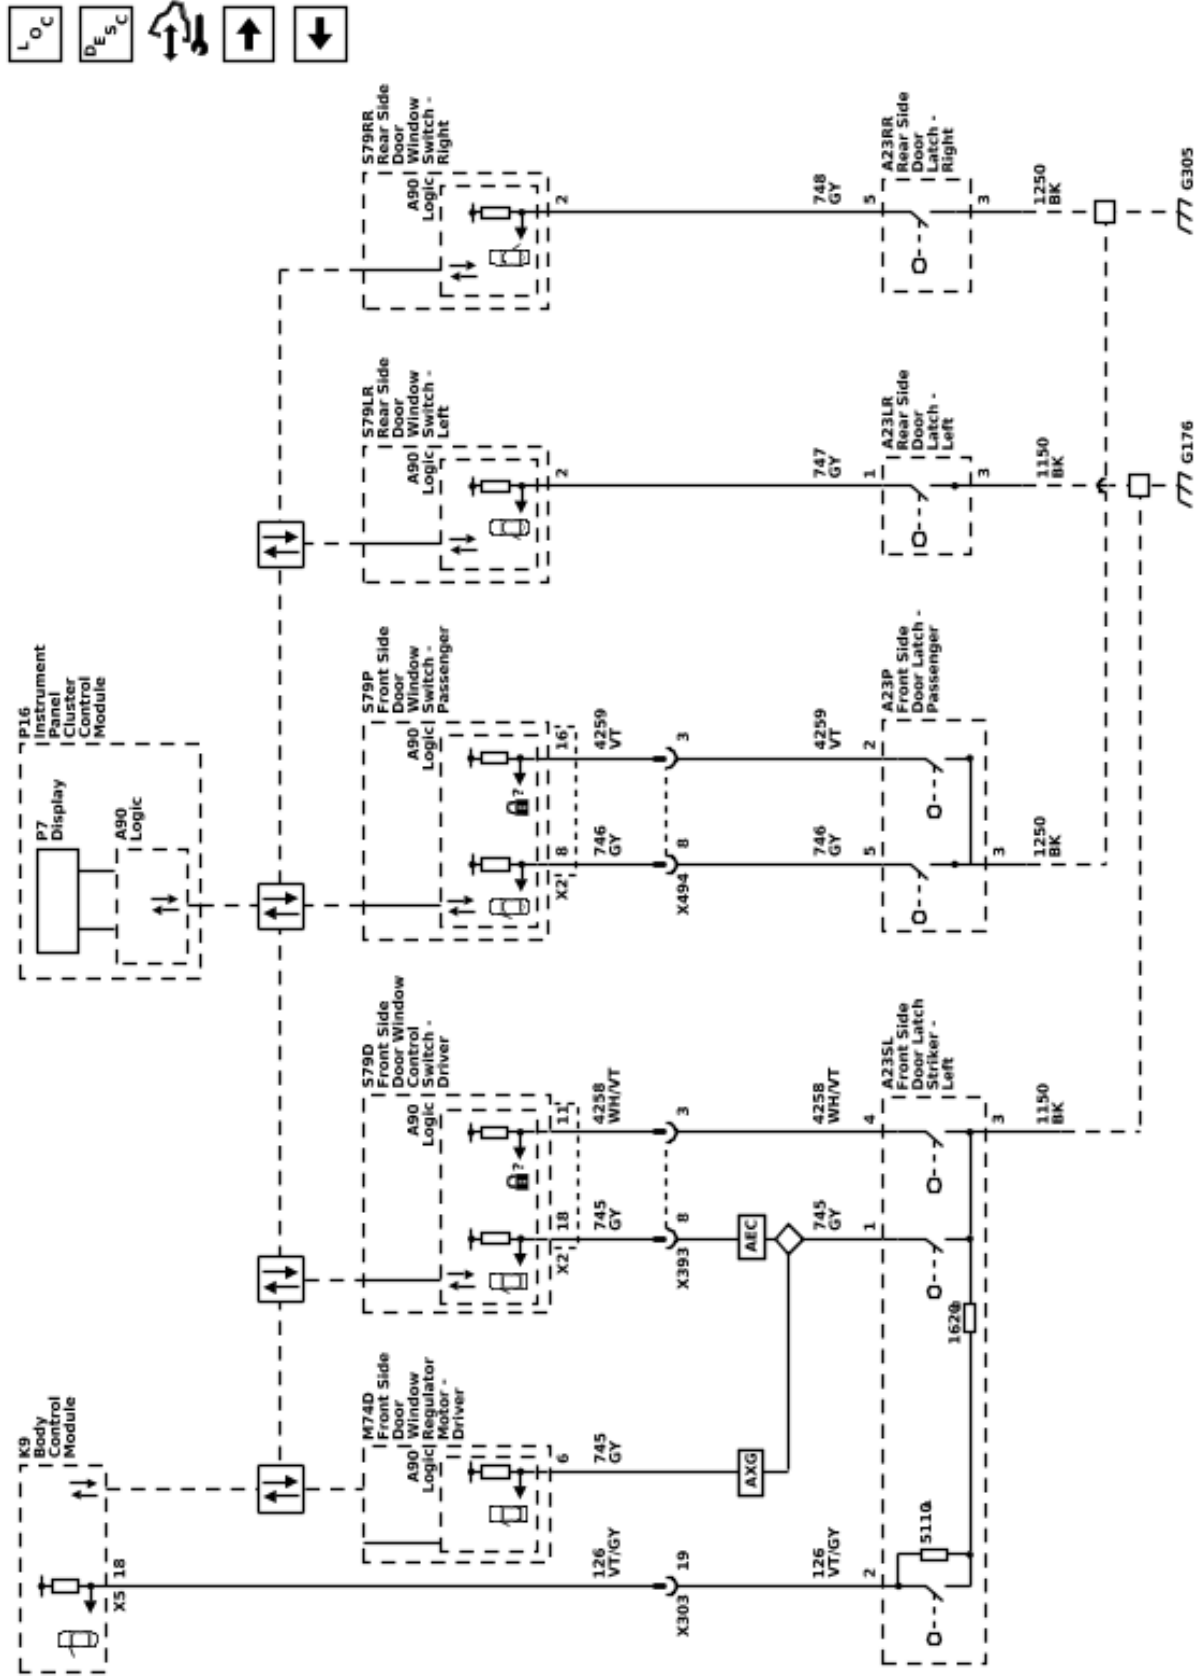


6331929


Door Lock/Indicator Schematics (Actuators)

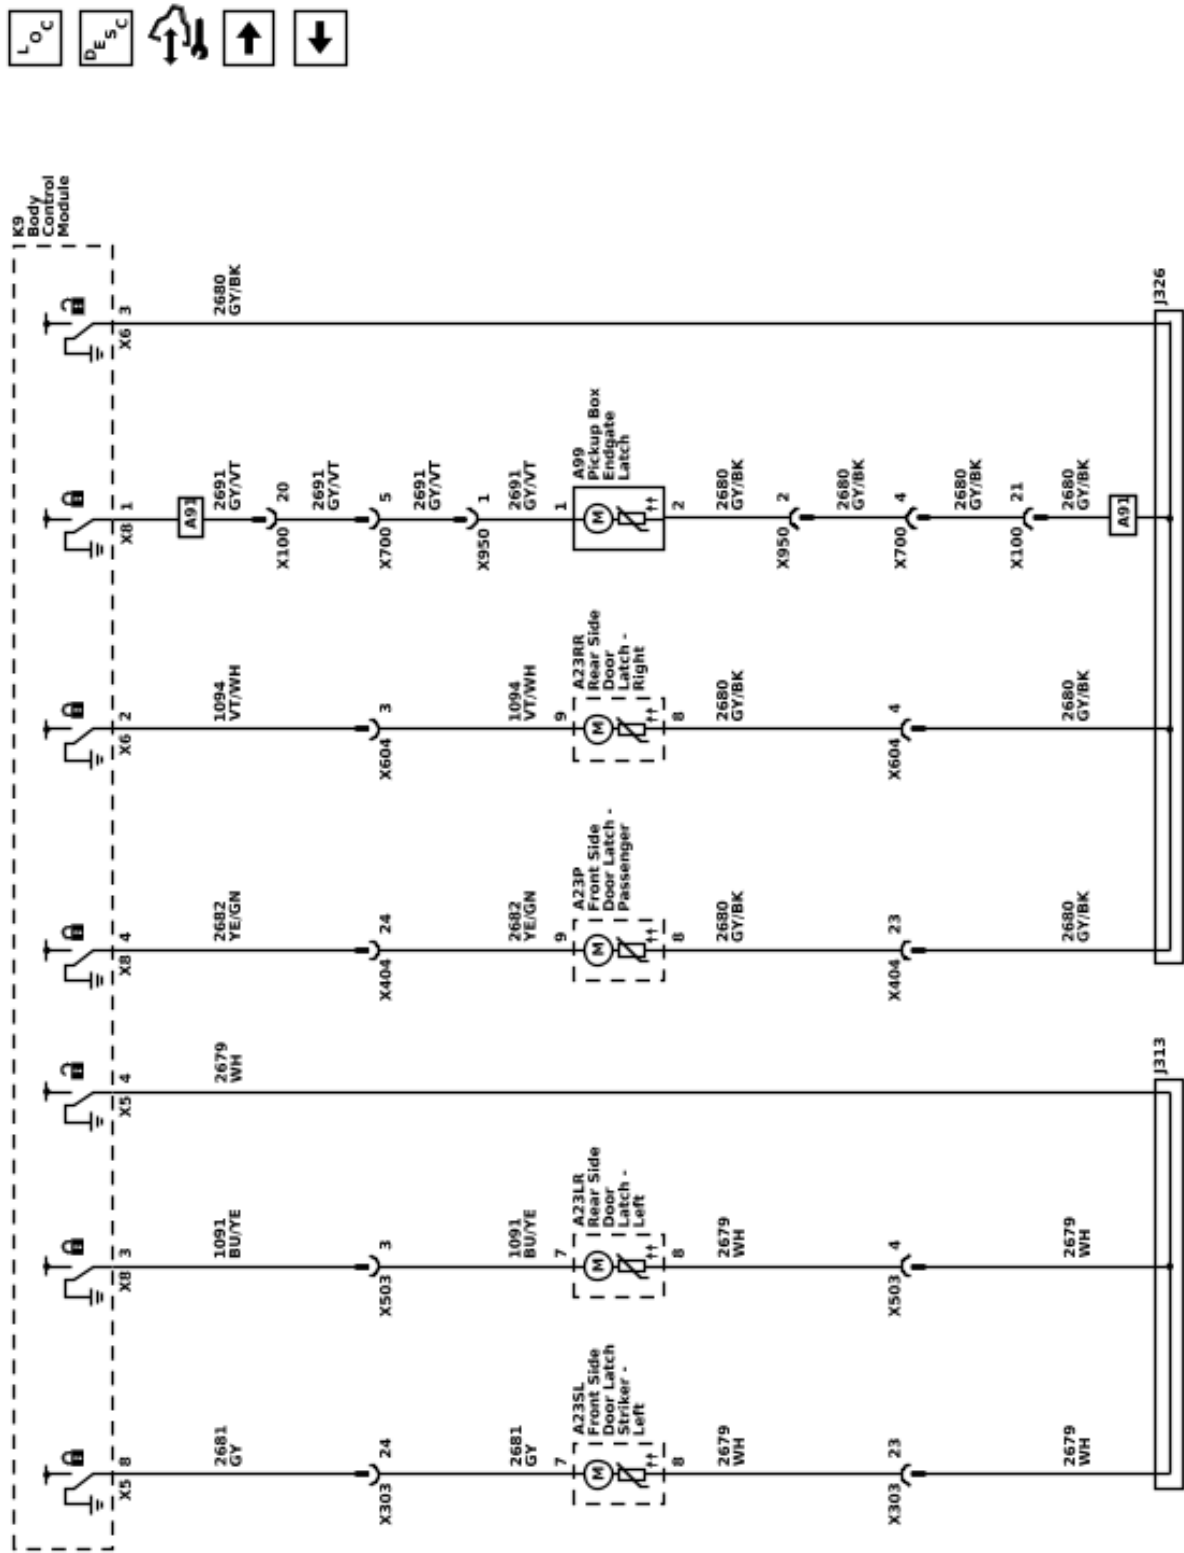

Door Lock/Indicator Schematics (Door Handle Switches (AVJ))

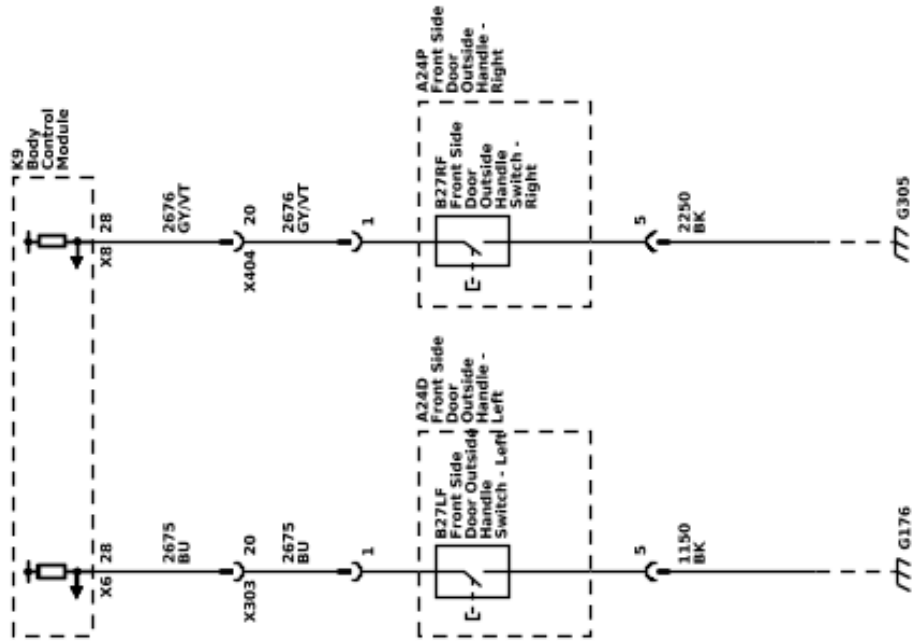

Hood Latch Schematics (Engine Compartment Cover Switch)

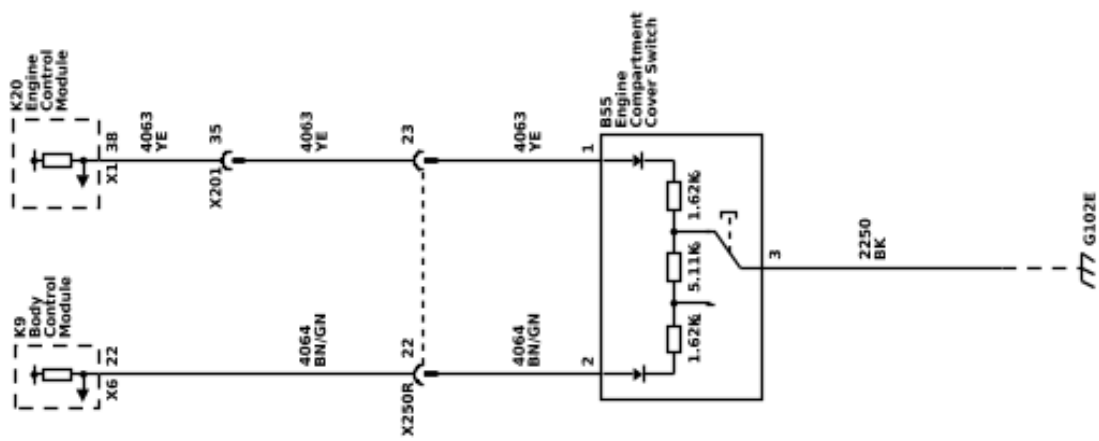

## Description and Operation

### Door Ajar Indicator Description and Operation

#### Door Ajar Indicator System Components

The door ajar indicator system consists of the following components:

- Body control module (BCM)
- Instrument cluster
- Driver door latch
- Passenger door latch
- Left rear door latch
- Right rear door latch
- Driver side door window switch
- Passenger side door window switch
- Left rear side door window switch
- Right rear side door window switch

#### Door Ajar Indicator Operation

The side door window switches each provide a 7.5 V signal to their respective door ajar switch signal circuits. The door ajar switches are integral to each door latch assembly. When a door is opened, the normally open door ajar switch closes. With the door ajar switch closed, ground is provided to the door ajar switch signal circuit and the voltage within the signal circuit drops. The appropriate side door window switch will detect the voltage drop and will send a serial data message to the body control module which will then send a message to the instrument cluster to command the door ajar message

### Door Ajar Indicator Description and Operation

#### Door Ajar Indicator System Components

The door ajar indicator system consists of the following components:

- Body control module (BCM)
- Instrument cluster
- Driver door latch
- Passenger door latch
- Left rear door latch
- Right rear door latch
- Driver window motor
- Passenger side door window switch
- Left rear side door window switch
- Right rear side door window switch

#### Driver Door Ajar

The window motor supplies a 7.5 V signal to the door ajar switch within the door latch, when a door is open the door ajar switch closes pulling the 7.5 V signal low. When the window motor detects the drop in the 7.5 V signal circuit, it will then communicate this status to the BCM via local interconnect network (LIN) bus. The

BCM communicates with the instrument cluster via serial data message. The instrument cluster, upon receipt of this serial data message, will illuminate the door ajar indicator and also send a serial data message to the radio to activate the door ajar audible warning when the vehicle speed is greater than 8 km/h (5 mph).

### Passenger and Rear Doors Ajar

The passenger and rear side door window switches each provide a 7.5 V signal to their respective door ajar switch signal circuits. The passenger and rear door ajar switches are integral to each door latch assembly. When the passenger door or a rear door is opened, the normally open door ajar switch closes. With the door ajar switch closed, ground is provided to the door ajar switch signal circuit and the voltage within the signal circuit drops. The passenger or rear side door window switches will detect the voltage drop and will send a serial data message to the body control module which will then send a message to the instrument cluster to command the door ajar message

### Endgate Description and Operation

#### Endgate Lock System Components

- Body control module (BCM)
- Pickup box endgate latch

If equipped, the locking and unlocking of the endgate is a function of the power door lock system. The pickup box endgate latch unlock control is supplied by the passenger door unlock control circuit and the rear closure actuator lock control circuit. The BCM, upon receipt of a lock switch lock or unlock signal, will supply battery voltage to the passenger door lock actuator unlock or rear closure actuator lock control circuits. Since the opposite side of the lock actuator is connected to ground through the other lock actuator control circuit, the passenger door and endgate will then lock or unlock as commanded.

### Hood Ajar Indicator Description and Operation

#### Hood Ajar Switch

The body control module (BCM) applies B+ to the hood ajar signal circuit and monitors the voltage to determine the position of the hood. When the hood is open, the switch is open and voltage remains high. When the hood is closed, the switch is closed and the voltage is pulled low.

The BCM uses the hood ajar switch as a content theft deterrent alarm trigger.

#### Hood Ajar Indicator/Message

When the hood is ajar, a message is displayed on the DIC or the hood ajar indicator will be illuminated.



## Power Door Locks Description and Operation

### Door Lock System Components

The power door lock system consists of the following components:

- Driver door lock switch
- Passenger door lock switch
- Driver front side door window control switch
- Passenger front side door window switch
- Driver front side door latch
- Passenger front side door latch
- Left rear side door latch
- Right rear side door latch
- Pickup box endgate latch (A91)
- Exterior door handle switches (AVJ)
- Body control module

### Door Lock System Controls

The power door lock system can be controlled by any of the following:

- Power door lock switch activation
- Keyless entry lock or unlock command
- Delayed locking command
- Automatic door lock command
- When the OnStar<sup>®</sup> system is used to unlock the driver door

### Door Lock and Unlock Operation

The driver or passenger front side door window control switch will monitor the voltage of their respective door lock switches, when the driver or passenger door lock switch is activated in the lock or unlock position the signal voltage will be pulled low, the corresponding front side door window control switch will detect the voltage drop in the signal circuit and will send a serial data message to the body control module requesting the door lock or unlock command.

The body control module upon receipt of a lock or unlock request, will supply battery voltage to the door lock actuator and if equipped the endgate latch lock or unlock control circuits. Since the opposite side of the lock actuator is connected to ground through the other lock actuator control circuit, the doors, and fuel filler door will then lock or unlock as commanded.

The following control circuits are used to operate the door lock actuators:

- Driver door unlock only
- Passenger and rear door unlock
- All door lock

This sequence can be modified through the personalization settings

### Passive Door Lock/Unlock Operation (AVJ)



The exterior door handle switch signal circuits provide inputs to the body control module when the exterior door handle switches are activated. These inputs allow the body control module to detect a door lock or a door

unlock request. The body control module provides a 7 V signal to each exterior door handle switch via the door handle switch signal circuits. When a door handle switch is pressed, the switch closes and the voltage signal within the signal circuit is pulled to ground. The body control module will detect the voltage drop and a low frequency antenna will transmit a challenge to the keyless entry transmitter. If the challenge is met, the keyless entry transmitter will respond, and the body control module will command the door(s) to be locked or unlocked


# Wipers and Washers

## Schematic and Routing Diagrams

Wiper/Washer Schematics (Wiper/Washer Control)

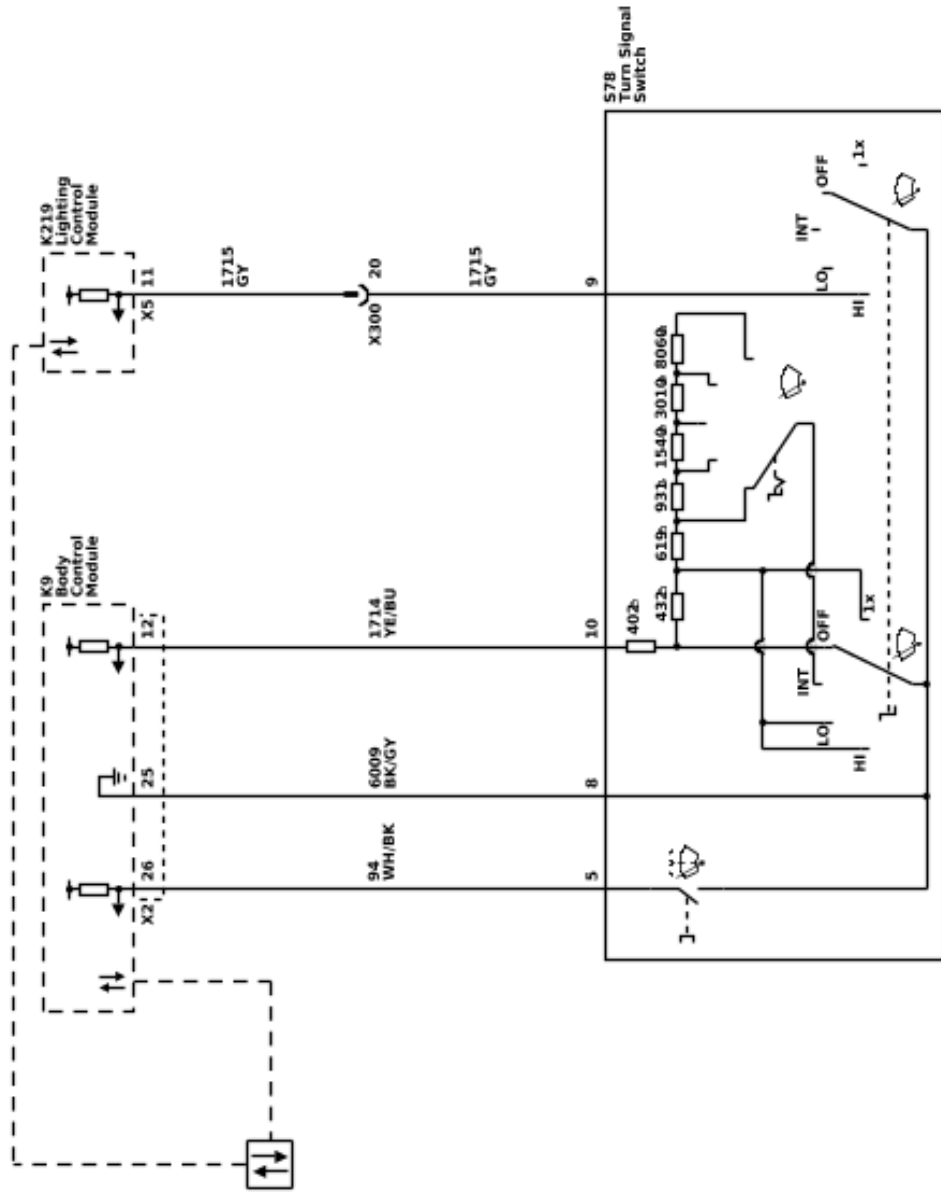


Wiper/Washer Schematics (Wiper Motor)

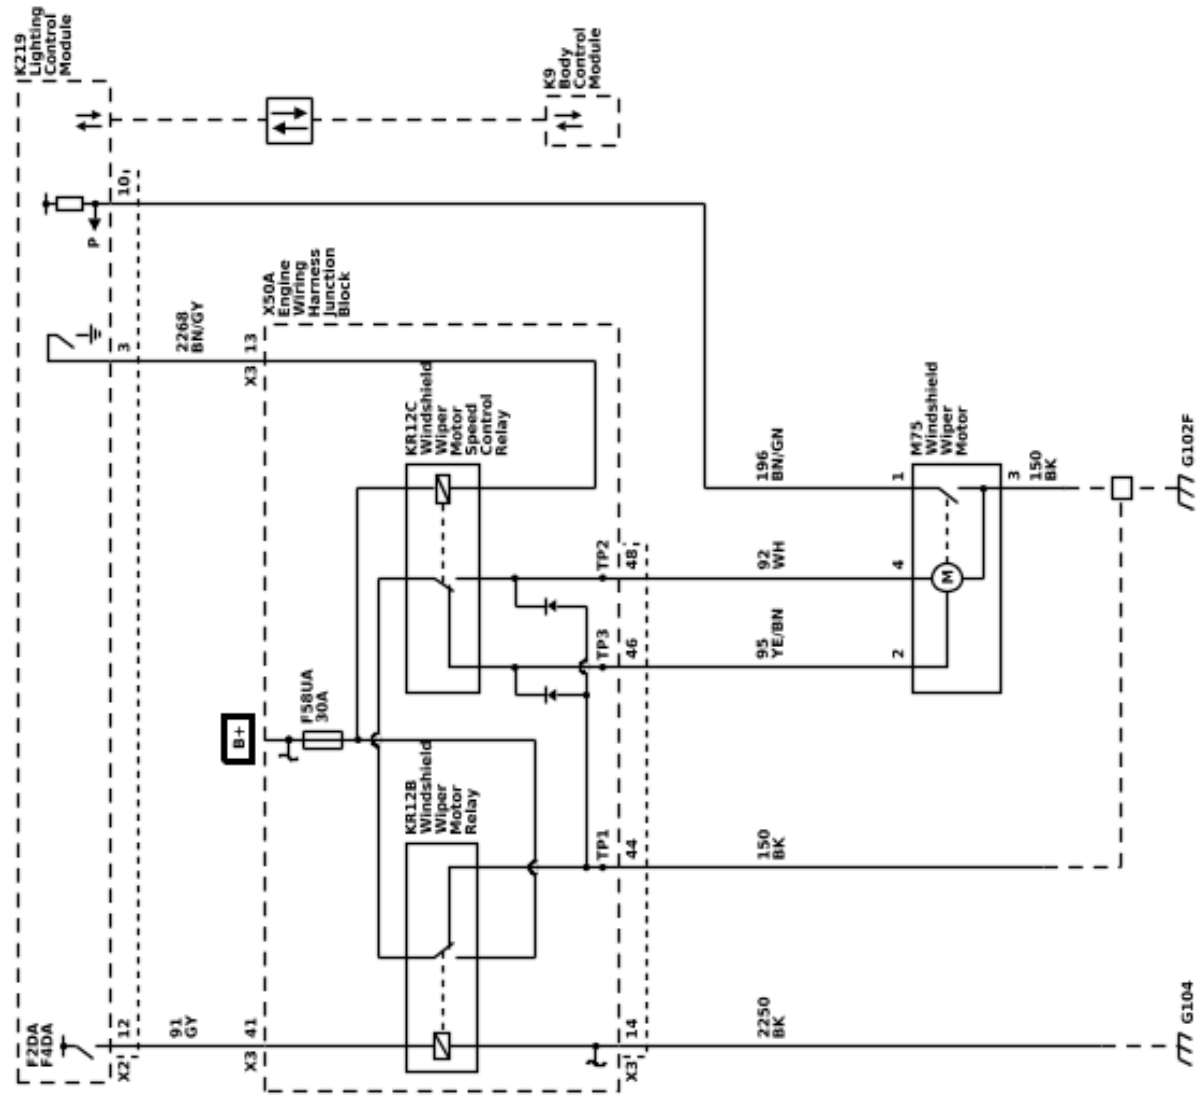

6331935

Wiper/Washer Schematics (Washer Pump)

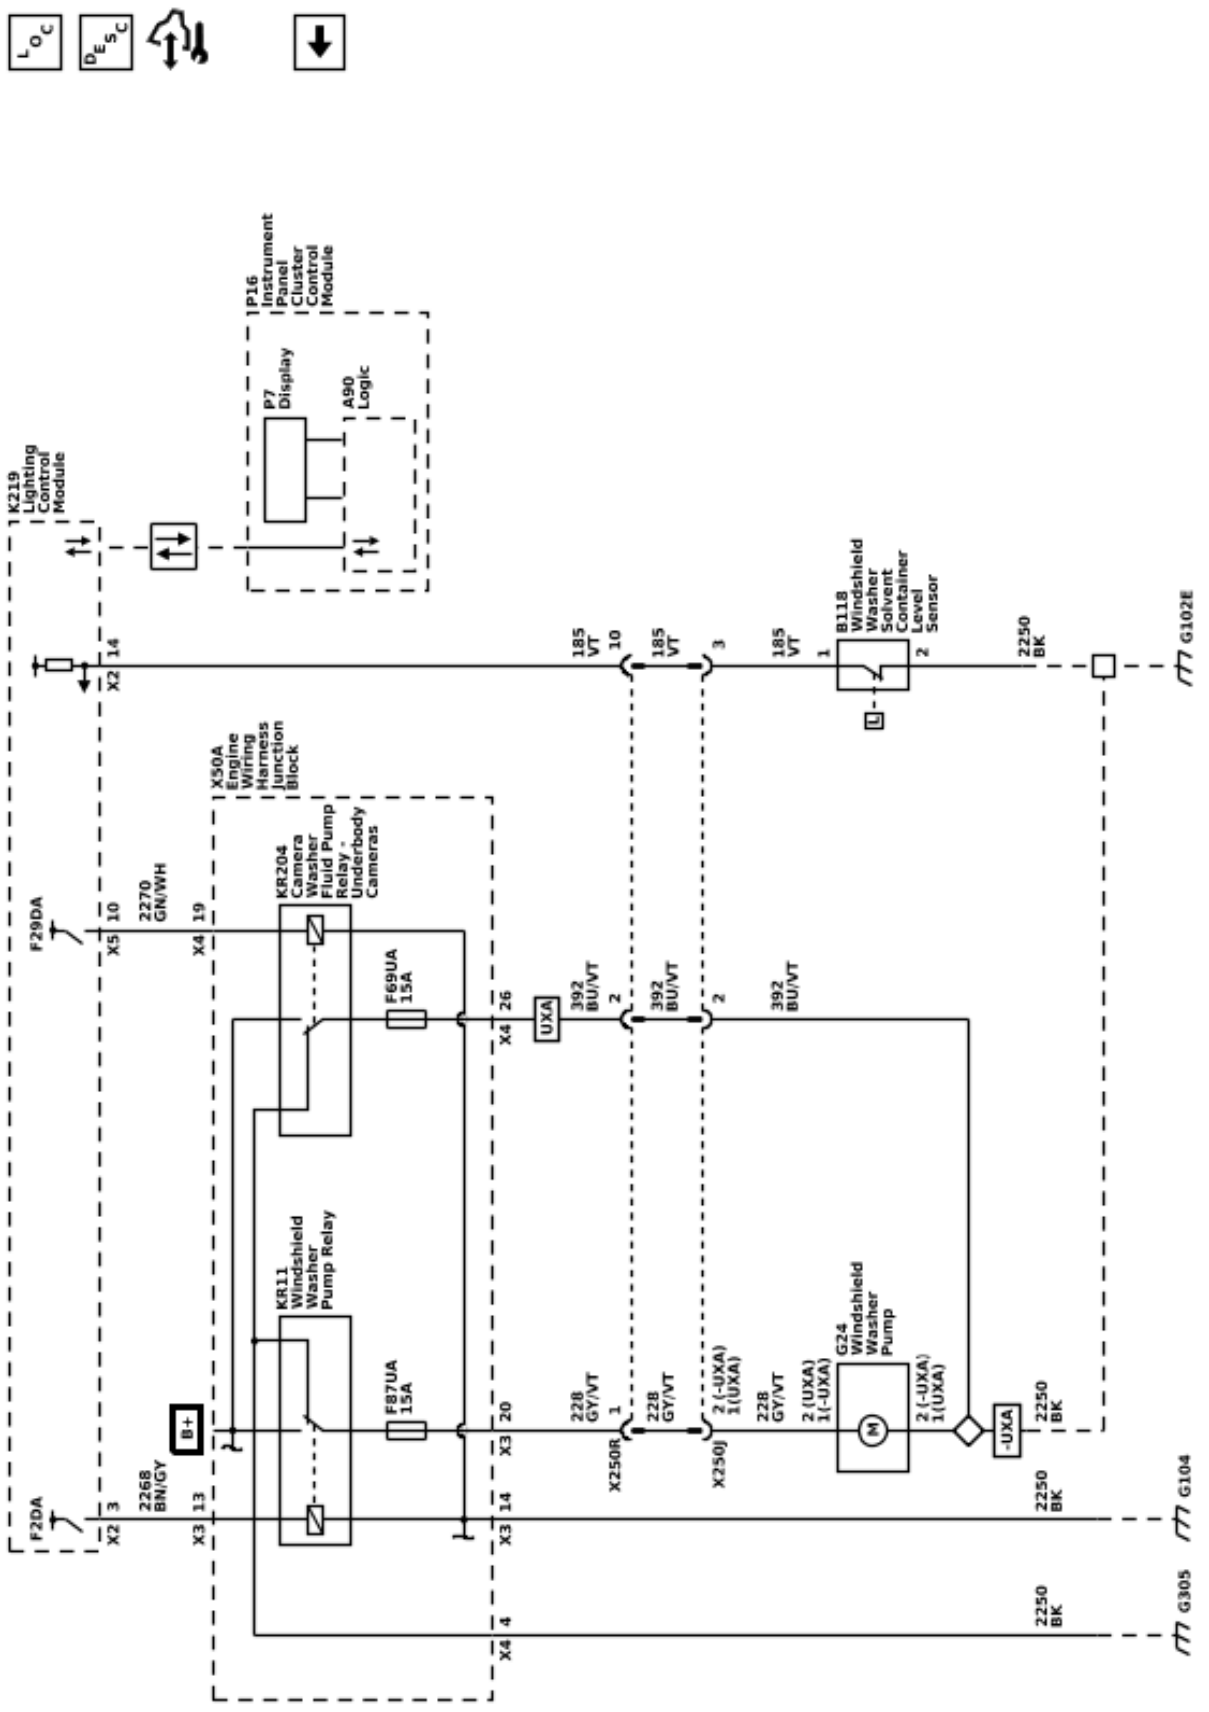

LOC

DESIGN

REVISION

APPROVAL

## Description and Operation

### Wiper/Washer System Description and Operation

#### Windshield Wiper Operation

The windshield wipers system allows the driver to clear the vehicle's windshield using a discrete switch or through an automatic rain sensing system. The windshield wiper system functions through a primary control, but also allows redundant high speed-only operation in the event of a system fault. The wiper systems uses the S82 Windshield Wiper/Washer Switch as the primary means of driver control, along with the B117A Windshield Outside Moisture/Ambient Light and Humidity Sensor to modulate intermittent wiper operation. The S82 Windshield Wiper/Washer Switch is a discrete input to the K9 Body Control Module. The K9 Body Control Module communicates with the K219 Lighting Control Module over CAN, and with the B117A Windshield Outside Moisture/Ambient Light and Humidity Sensor over LIN, to control wiper activation.

#### Low Speed Wiper Operation

With the S82 Windshield Wiper/Washer Switch in the low speed position, the discrete signal circuit to the K9 Body Control Module is pulled down through two resistors in a resistor ladder to a low reference provided by the K9 Body Control Module. The K9 Body Control Module communicates with the K219 Lighting Control Module over CAN, requesting consistent low speed wiping operation. To initiate low speed operation, the K219 Lighting Control Module energizes the KR12B Windshield Wiper Relay. This allows battery voltage from the wiper fuse to be applied through the switched contacts of the KR12B Windshield Wiper Relay, through the normally closed contacts of the KR12C Windshield Wiper Speed Control Relay, to the windshield wiper low speed control circuit of the M75 Windshield Wiper Motor.

#### Intermittent Wiper Operation

With the S82 Windshield Wiper/Washer Switch in the intermittent position, the discrete signal circuit to the K9 Body Control Module is pulled down through a number of resistors within a resistor ladder to a low reference provided by the K9 Body Control Module. The number of resistors the signal travels through is dependent on the intermittent selection made on the S82 Windshield Wiper/Washer Switch. The K9 Body Control Module interprets this range of voltage pull-down as a request for intermittent wiper activation, with each pull-down voltage value equating an intermittent delay (sensitivity) level. If the rain sense is enabled the K9 Body Control Module communicates with the B117A Windshield Outside Moisture/Ambient Light and Humidity Sensor via LIN. The B117A Windshield Outside Moisture/Ambient Light and Humidity Sensor utilizes windshield optics to determine the amount of water on the windshield and will communicate this info to the K9 Body Control Module, which will vary wiping cadence based on the intermittent sensitivity selection on the S82 Windshield Wiper/Washer Switch and the amount of water on the windshield. If the rain sense is disabled the K9 Body

Control will vary the wiping cadence based on a preset amount of time determined by the intermittent delay selection on the S82 Windshield Wiper/Washer Switch. To initiate wiper operation, the K219 Lighting Control Module energizes the KR12B Windshield Wiper Relay. This allows battery voltage from the wiper fuse to be applied through the switched contacts of the KR12B Windshield Wiper Relay, through the normally closed contacts of the KR12C Windshield Wiper Speed Control Relay, to the low speed control circuit of the M75 Windshield Wiper Motor.

#### High Speed Wiper Operation

With the S82 Windshield Wiper/Washer Switch in the high speed position, the discrete signal circuit to the K9 Body Control Module is pulled down through two resistors in a resistor ladder to a low reference provided by the K9 Body Control Module. The K9 Body Control Module interprets this specific voltage pull-down as a request for wiper activation. In addition to this pull-down signal, a second switch in the S82 Windshield Wiper/Washer Switch is also pulled down to low reference. This signal is a discrete input to the K219 Lighting Control Module. The K219 Lighting Control Module requests wiping operation. To initiate high speed operation, the K219 Lighting Control Module energizes the KR12B Windshield Wiper Relay and grounds the KR12C Windshield Wiper Speed Control Relay. This allows battery voltage from the wiper fuse to be applied through the switched contacts of the KR12B Windshield Wiper Relay, through the switched contacts of the KR12C Windshield Wiper Speed Control Relay, to the windshield wiper motor high speed control circuit of the M75 Windshield Wiper Motor.

#### Mist (Single Wipe) Operation

The mist (single wipe) position is a momentary switch position that will return the S82 Windshield Wiper/Washer Switch to the off position as soon as the switch is released. With the S82 Windshield Wiper/Washer Switch in the mist (single wipe) position, the discrete signal circuit to the K9 Body Control Module is pulled down through two resistors in a resistor ladder to a low reference provided by the K9 Body Control Module. The K9 Body Control Module interprets this specific voltage pull-down as a request for wiper activation. The K9 Body Control Module communicates with the K219 Lighting Control Module via CAN, requesting consistent low speed wiping operation as long as the S82 Windshield Wiper/Washer Switch is held in the mist (single wipe) position. If the mist (single wipe) position is only briefly selected, the K9 Body Control Module will request only a single wipe.

#### Wiper Park Operation

With the S82 Windshield Wiper/Washer Switch in the off position, the discrete signal circuit to the K9 Body Control Module is pulled down through one resistor in a resistor ladder to a low reference provided by the K9 Body Control Module. The K9 Body Control Module interprets this specific voltage pull-down as a request to stop wiper activation. The K9 Body Control Module communicates with the K219 Lighting Control Module via CAN, requesting wiper operation stop. At this time, the K219 Lighting Control Module will deactivate the KR12B Windshield Wiper Relay and KR12C Windshield Wiper Speed Control Relay. The relay contacts will

switch back to their normally closed position and will apply ground to the wiper motor power inputs through the normally closed contacts of the wiper relays. This deactivates and dynamically brakes the wiper motor in the park position. When the wiper switch is turned to the OFF position while the wiper motor is somewhere in mid-cycle, the K219 Lighting Control Module will continue to operate the motor until the wipers reach the park position. If the ignition is turned OFF while the wipers are in mid-cycle, the wipers will stop immediately, regardless of position. The K219 Lighting Control Module will park the wipers next time the ignition is turned ON.

The windshield wiper system consists of the following electrical components:

- S82 Windshield Wiper/Washer Switch
- K9 Body Control Module
- K219 Lighting Control Module
- KR12B Windshield Wiper Relay
- KR12C Windshield Wiper Speed Control Relay
- B117A Windshield Outside Moisture/Ambient Light and Humidity Sensor
- M75 Windshield Wiper Motor

## Windshield Wiper Components

### S82 Windshield Wiper/Washer Switch

The S82 Windshield Wiper/Washer Switch is the primary input to the K9 Body Control Module for the driver to control windshield wiper operation. The S82 Windshield Wiper/Washer Switch also provides discrete input to the K219 Lighting Control Module during high speed wiper operation.

The S82 Windshield Wiper/Washer Switch contains three individual internal switch. One switch changes between mist (single wipe), off, intermittent, low speed, and high speed selection. The second switch changes with differing intermittent sensitivity selection. The third switch is only active when high speed wiper operation is selected. A resistor ladder is also used to determine switch selection and intermittent sensitivity selection. The high speed switch does not utilize the resistor ladder.

The K9 Body Control Module provides the S82 Windshield Wiper/Washer Switch with ground through a single low reference circuit and monitors the switch position through a single signal circuit. Voltage is applied by the K9 Body Control Module to this signal circuit and voltage drop is monitored to determine switch selection. This voltage drop will vary depending on the number of resistors in the resistor ladder, which changes depending on switch position. In the off position, current flows through a single resistor. In the mist (single wipe), low speed, and high speed position, current flows through two resistors. In the intermittent position, current flows through three or more resistors, depending on the intermittent sensitivity selected.

The S82 Windshield Wiper/Washer Switch provides a discrete switch input to the K219 Lighting Control Module during high speed wiper operation. Voltage is applied by the K219 Lighting Control Module to this signal circuit and voltage drop is monitored to

determine switch selection. When high speed operation is selected, the signal circuit is pulled to ground (low reference).

### K9 Body Control Module

The K9 Body Control Module will send a CAN message to the K219 Lighting Control Module to request wiper operation. The K9 Body Control Module responds to input requests from the S82 Windshield Wiper/Washer Switch. The K9 Body Control Module provides a constant ground for the S82 Windshield Wiper/Washer Switch and monitors a signal circuit to determine the requested windshield wiper position.

The K9 Body Control Module communicates with the B117A Windshield Outside Moisture/Ambient Light and Humidity Sensor via LIN. Messages are received from the B117A Windshield Outside Moisture/Ambient Light and Humidity Sensor to indicate the amount of water on the windshield.

### K219 Lighting Control Module

The K219 Lighting Control Module controls the wiper motor via two PCB relays (KR12B Windshield Wiper Relay and KR12C Windshield Wiper Speed Control Relay). The K219 Lighting Control Module receives a message from K9 Body Control Module over CAN to determine what type of wiper operation is requested.

### KR12B Windshield Wiper Relay

The KR12B Windshield Wiper Relay supplies B+ to the M75 Windshield Wiper Motor and is controlled by the K219 Lighting Control Module. The coil side of the relay receives a constant chassis ground and the switch side receives a constant B+. When wiper operation is requested, the K219 Lighting Control Module will provide voltage to the coil side of the relay. This will energize the relay, closing the high current contact, and supply B+ to the M75 Windshield Wiper Motor through the KR12C Windshield Wiper Speed Control Relay, enabling wiper operation.

### KR12C Windshield Wiper Speed Control Relay

The KR12C Windshield Wiper Speed Control Relay controls B+ to the M75 Windshield Wiper Motor and is controlled by the K219 Lighting Control Module. The coil side of the relay receives a ground controlled by the K219 Lighting Control Module. The switch side of the relay receives B+ through the KR12B Windshield Wiper Relay. When high speed wiper operation is requested, the K219 Lighting Control Module will provide ground to the coil side of the relay. This will energize the relay, closing the high current contact, and supply the B+ to the M75 Windshield Wiper Motor high speed control, enabling high speed wiper operation.

### B117A Windshield Outside Moisture/Ambient Light and Humidity Sensor

**Note:** Due to the sensitivity of the sensor, the wipers may swipe once upon start up or rapid lighting changes.

The B117A Windshield Outside Moisture/Ambient Light and Humidity Sensor utilizes an internal infrared LED and an optic sensor to determine the amount of water on the windshield. The infrared LED bounces infrared light against the inside of the windshield. The optic sensor measures the amount of light returned after

## 2-70 Wipers and Washers

bouncing off the windshield. With a dry windshield, all light bounced off the windshield is returned to the optic sensor. As water accumulates on the windshield, the light input to the optic sensor is diffused and reduced. The amount of light reduction corresponds directly to the amount of water on the windshield. The B117A Windshield Outside Moisture/Ambient Light and Humidity Sensor interprets the amount of light returned and communicates this info to the K9 Body Control Module, which will control intermittent wiper operation based on the sensitivity selection of the S82 Windshield Wiper/Washer Switch and the amount of water on the windshield.

### M75 Windshield Wiper Motor

The M75 Windshield Wiper Motor receives a constant chassis ground. B+ is controlled by the KR12B Windshield Wiper Relay and KR12C Windshield Wiper Speed Control Relay being operated by the K219 Lighting Control Module.

The M75 Windshield Wiper Motor includes a DC motor and an internal position switch to indicate the wiper park position. When wiper operation is requested, the DC motor spins. The spinning motor is directed to a wiping motion through the windshield wiper transmission. When wiper operation is no longer required, the M75 Windshield Wiper Motor will continue spinning until the internal position switch indicates it is in the park position.

### Windshield Washer Operation

The windshield washer system allows the driver to clean the vehicle's windshield using a discrete switch. The washer system uses the S82 Windshield Wiper/Washer Switch as the primary means of driver control. The S82 Windshield Wiper/Washer Switch is a discrete input to the K9 Body Control Module. The K9 Body Control Module communicates with the K219 Lighting Control Module over CAN to control G24 Windshield Washer Pump activation. The K9 Body Control Module also communicates with the K219 Lighting Control Module to control B+ to the M75 Windshield Wiper Motor during operation.

The windshield wiper system consists of the following electrical components:

- S82 Windshield Wiper/Washer Switch
- K9 Body Control Module
- K219 Lighting Control Module
- KR12B Windshield Wiper Relay
- KR11 Windshield Washer Pump Relay
- G24 Windshield Washer Pump
- M75 Windshield Wiper Motor
- B118B Windshield Washer Fluid Level Switch

### Windshield Washer Components

#### S82 Windshield Wiper/Washer Switch

The S82 Windshield Wiper/Washer Switch is the primary input to the K9 Body Control Module for the driver to control windshield washer operation.

The K9 Body Control Module provides the S82 Windshield Wiper/Washer Switch with ground through a single low reference circuit and monitors the switch position through a single signal circuit. Voltage is

applied by the K9 Body Control Module to this signal circuit and voltage drop is monitored to determine switch selection. The S82 Windshield Wiper/Washer Switch contains an internal switch dedicated to windshield washer operation. When the switch is closed, the signal circuit is pulled to ground, indicating washer operation is requested.

#### K9 Body Control Module

The K9 Body Control Module responds to input requests from the S82 Windshield Wiper/Washer Switch. The K9 Body Control Module provides a constant ground for the S82 Windshield Wiper/Washer Switch and monitors a signal circuit to determine the requested windshield wiper position.

When washer operation is requested, the K9 Body Control Module will send a CAN message to the K219 Lighting Control Module to enable the G24 Windshield Washer Pump, as well as supply B+ to the M75 Windshield Wiper Motor for low speed wiper operation.

#### K219 Lighting Control Module

The K219 Lighting Control Module controls B+ to the G24 Windshield Washer Pump. When washer operation is requested from a CAN message from the K9 Body Control Module, the K219 Lighting Control Module will apply voltage via a high side driver to the KR11 Windshield Washer Pump Relay. The K219 Lighting Control Module also controls B+ to the M75 Windshield Wiper Motor. When washer operation is requested, the K219 Lighting Control Module will apply voltage via a high side driver to the KR12B Windshield Wiper Relay.

The K219 Lighting Control Module also monitors the B118B Windshield Washer Fluid Level Switch through a discrete signal circuit.

#### KR12B Windshield Wiper Relay

The KR12B Windshield Wiper Relay supplies B+ to the M75 Windshield Wiper Motor and is controlled by the K219 Lighting Control Module. The coil side of the relay receives a constant chassis ground and the switch side receives a constant B+. When wiper operation is requested, the K219 Lighting Control Module will provide voltage to the coil side of the relay. This will energize the relay, closing the high current contact, and supply B+ to the M75 Windshield Wiper Motor through the KR12C Windshield Wiper Speed Control Relay, enabling wiper operation.

#### KR11 Windshield Washer Pump Relay

The KR11 Windshield Washer Pump Relay supplies B+ to the G24 Windshield Washer Pump and is controlled by the K219 Lighting Control Module. The coil side of the relay receives a constant chassis ground and the switch side receives a constant B+. When wiper operation is requested, the K219 Lighting Control Module will provide voltage to the coil side of the relay. This will energize the relay, closing the high current contact, and supply B+ to the G24 Windshield Washer Pump, enabling washer pump operation.



**G24 Windshield Washer Pump**

The G24 Windshield Washer Pump receives a constant chassis ground. B+ is controlled by the KR11 Windshield Washer Pump Relay. With voltage applied, a DC motor spins, connecting and pressurizing washer fluid from the washer fluid reservoir. The pressurized washer fluid is deposited on the windshield through a series of lines and nozzles.

**M75 Windshield Wiper Motor**

The M75 Windshield Wiper Motor receives a constant chassis ground. B+ is controlled by the KR12B Windshield Wiper Relay and KR12C Windshield Wiper Speed Control Relay being operated by the K219 Lighting Control Module. The M75 Windshield Wiper Motor will wiper at low speed when washer operation is requested.

The M75 Windshield Wiper Motor includes a DC motor and an internal position switch to indicate the wiper park position. When wiper operation is requested, the DC motor spins. The spinning motor is directed to a wiping motion through the windshield wiper transmission. When wiper operation is no longer required, the M75 Windshield Wiper Motor will continue spinning until the internal position switch indicates it is in the park position.

**B118B Windshield Washer Fluid Level Switch**

The B118B Windshield Washer Fluid Level Switch receives a constant chassis ground. A signal circuit is monitored by the K219 Lighting Control Module. The K219 Lighting Control Module applies voltage to the signal circuit. When the B118B Windshield Washer Fluid Level Switch is closed, voltage on the signal circuit is pulled to ground, indicating fluid in the washer fluid reservoir.

**BLANK**

## Section 3

# Driver Information and Entertainment

<b>Image Display Cameras</b> .....	<a href="#">3-3</a>
<b>Schematic and Routing Diagrams</b> .....	<a href="#">3-3</a>
Image Display Camera Schematics .....	<a href="#">3-4</a>
<b>Description and Operation</b> .....	<a href="#">3-6</a>
Rearview Camera Full Display Mirror Description and Operation .....	<a href="#">3-6</a>
Rear Vision Camera Description and Operation .....	<a href="#">3-6</a>
Surround Vision Camera Description and Operation (UV2/UXP & UXA) .....	<a href="#">3-6</a>
Surround Vision Camera Description and Operation (UV2/UXP - UXA) .....	<a href="#">3-7</a>

**BLANK**

# Image Display Cameras

## Schematic and Routing Diagrams

Image Display Camera Schematics (Rearview Driver Information Camera (UVB))



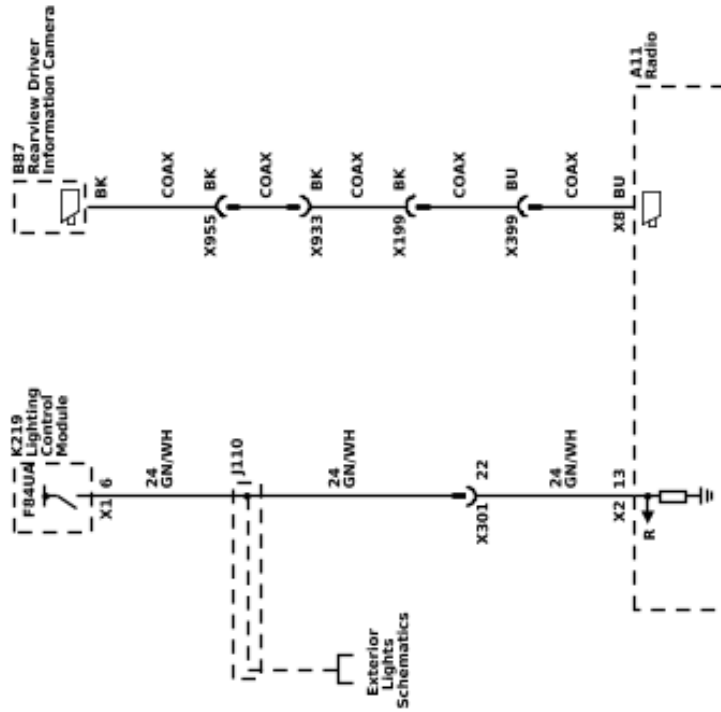


Image Display Camera Schematics (360 Degree Vision (UV2 / UXA))

L<sub>O</sub>C
D<sub>E</sub>S<sub>C</sub>
↕
↕

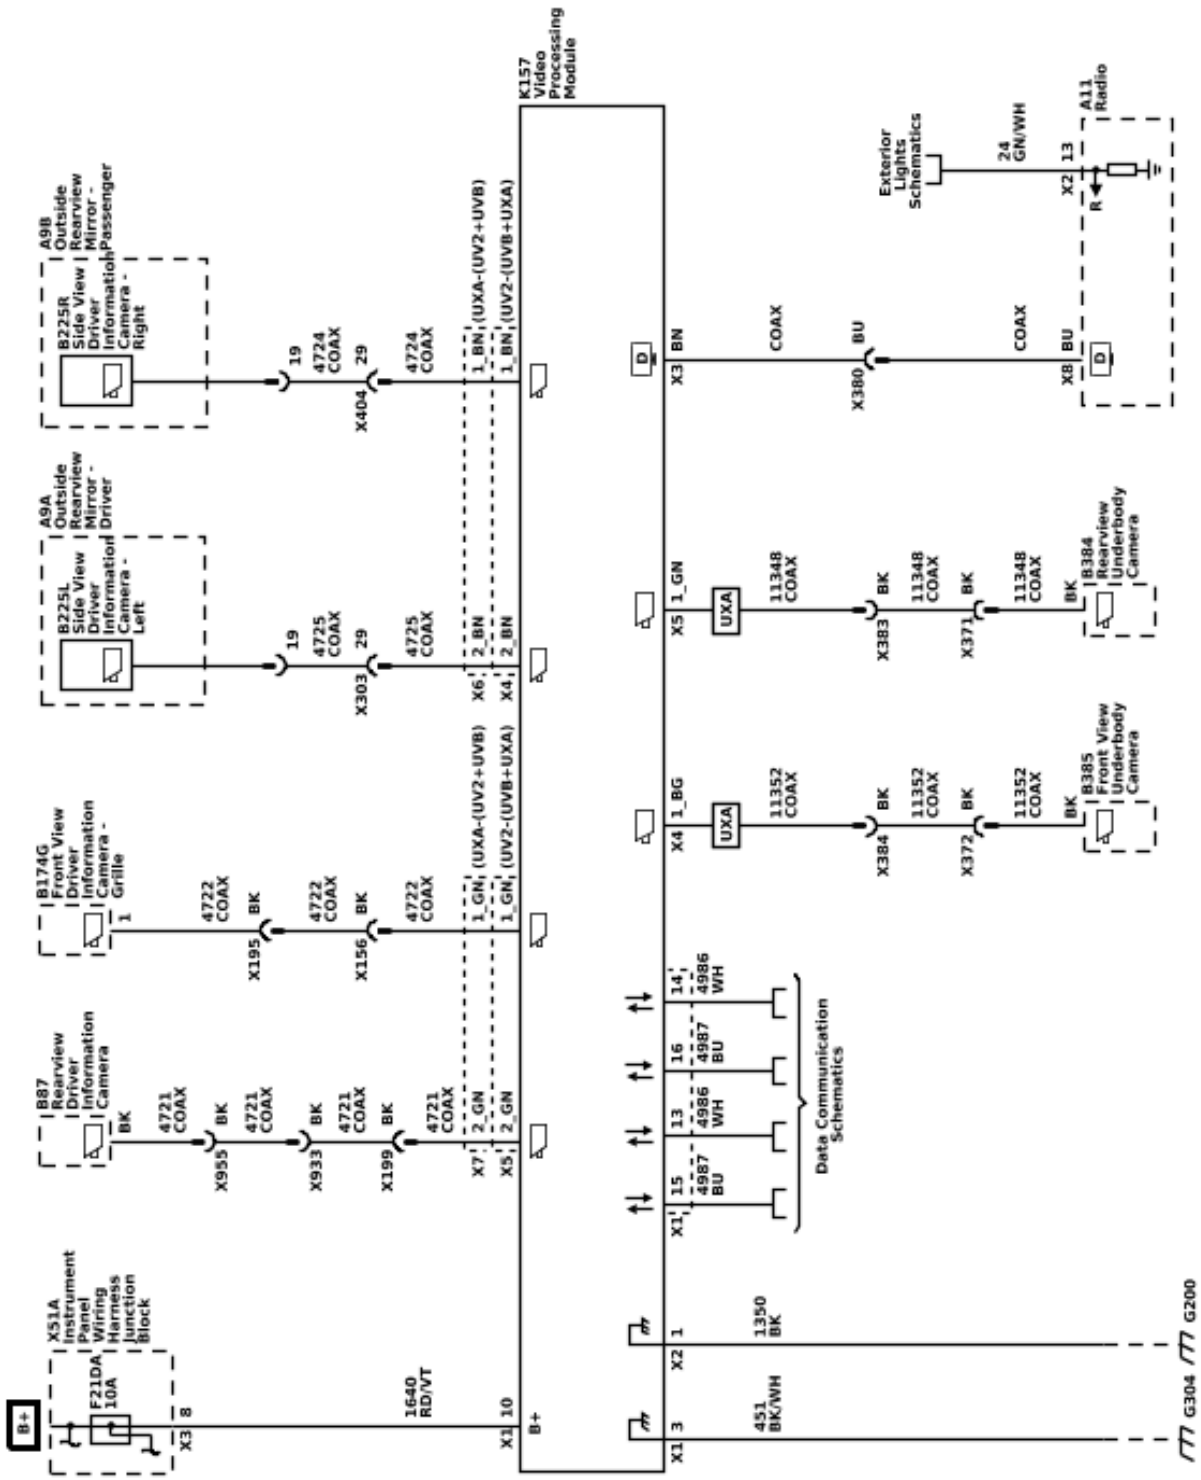

## Description and Operation Rearview Camera Full Display Mirror Description and Operation

If equipped, full display mirror provides a wider field of view than normally seen from the inside rearview mirror to assist when driving and changing lanes. When the tab under the inside rearview mirror is pulled rearward, a view of the area behind the vehicle displays on the mirror. The inside rearview camera full display mirror is connected to the outside rearview camera via a shielded coaxial cable.

When the tab under the inside rearview mirror is pulled rearward, a view of the area behind the vehicle displays on the mirror.

Adjust the rearview mirror for a clear view of the area behind the vehicle before turning on full display mirror. Use the three buttons on the bottom of the mirror to adjust the brightness, zoom, and tilt of the display. Make sure the light sensor is not covered when adjusting the brightness.

The inside rearview camera full display mirror may not work properly or display a clear image if:

- It is dark.
- The sun or the beam of headlamps are shining directly into the camera lens.
- Ice, snow, mud, or anything else builds up on the camera lens. Clean the lens, rinse it with water, and wipe it with a soft cloth.

When the mirror detects that the camera is not sending a valid video signal, it “blue screens” with a “no video” decal for 3 seconds, then reverts back to the mirror.

## Rear Vision Camera Description and Operation

### Rear Vision Camera System Operation

The rear vision camera system consists of a video camera located at the rear of the vehicle and the Radio. When the transmission is placed into REVERSE, a signal is sent to the Radio indicating that camera operation is requested. The rearview camera sends video information to the radio through a coax cable. The coax cable also provides power from the Radio to the rearview camera.


The following conditions may cause a degraded rear vision camera image:

- Ice, snow, or mud has built up on the rear vision camera
- Dark conditions
- Extreme light conditions, such as glare from the sun or the headlights of another vehicle
- Damage to the rear of the vehicle
- Extreme high temperatures or extreme temperature changes

If a malfunction is detected in the system, Service Rear Vision Camera may be displayed on the Info Display Module as an indicator to the customer that a problem exists that requires service.

## Surround Vision Camera Description and Operation (UV2/UXP & UXV)

**Warning:** The Surround Vision cameras have blind spots and will not display all objects near the corners of the vehicle. Folding outside mirrors that are out of position may not display surround view correctly. Always check around the vehicle when parking or backing.

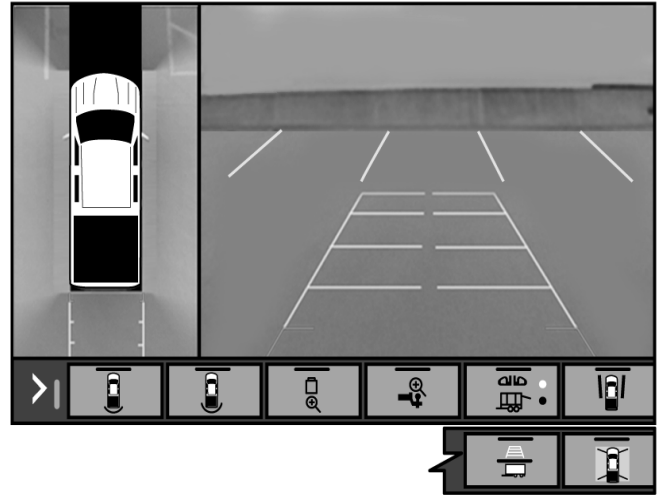

5147466

The Surround Vision- Trailer/Underbody Vision camera system (TRG) consists of the following components:

- K157 Video Processing Control Module
- A11 Radio
- B87 Rearview Driver Information Camera
- B225L Sideview Driver Information Camera – Left
- B225R Sideview Driver Information Camera – Right
- B174G Frontview Driver Information Camera – Grille
- Trailer Rearview Camera (if customer installed)
- Front View Underbody Camera
- Rearview Underbody Camera

### Features of the Surround Vision– Trailer Vision System

- Rear camera (B87 Rearview Camera) alongside overhead view is displayed in reverse
- Trailer Rearview Camera (if customer installed) image is displayed when selected via the Trailing application on the Infotainment screen.
- Front View Underbody Camera image and Rearview Underbody Camera image are displayed when selected via the application on the Infotainment screen.
- Hitch View (when selected) displays a rear view camera image with a single guideline, which aids in aligning the truck to the trailer. If the driver shifts



into PARK while in Hitch View, the parking brake is engaged to keep the vehicle from rocking when the driver gets out of the vehicle to hitch the trailer.

- Surround Vision displays an overhead view of the area surrounding the vehicle, along with the rear camera views in the center stack. The side cameras are on the bottom of the outside rearview mirrors, the rear vision camera is above the license plate, a rearview trailer camera can be mounted on the rear of a trailer, and a trailer interior camera can be mounted on the rear of a trailer.

**Note:** Images from the Sideview Cameras are only displayed when both front doors are properly closed.

### System Operation

The video processing control module is connected to each camera via a shielded coaxial cable. The coaxial cable provides power for the camera and also carries the video image from the cameras to the video processing control module for processing. The video processing control module will then send the processed image output to infotainment system via another coaxial cable.

The video processing control module receives CAN information from Rear Park Assist object detection module and Steering Wheel angle from body control module during Reverse. A warning triangle may display during the surround view screen if Rear Parking Assist has detected an object during a reverse. This triangle changes from amber to red and increases in size the closer the object. Also a dynamic guideline is displayed in Reverse to show the projected path of the vehicle.


When the vehicle is traveling at speeds slower than 6 mph (10kph) the video processing control module will power up the cameras and send a video signal to the radio.

The following conditions may cause a degraded surround vision camera image:

- Ice, snow, or mud has built up on any camera
- Dark conditions
- Extreme light conditions, such as glare from the sun or the headlights of another vehicle
- Body damage to the vehicle
- Extreme high temperatures or extreme temperature changes


### Surround Vision Camera Description and Operation (UV2/UXP - UXA)

**Warning:** *The Surround Vision cameras have blind spots and will not display all objects near the corners of the vehicle. Folding outside mirrors that are out of position may not display surround view correctly. Always check around the vehicle when parking or backing.*

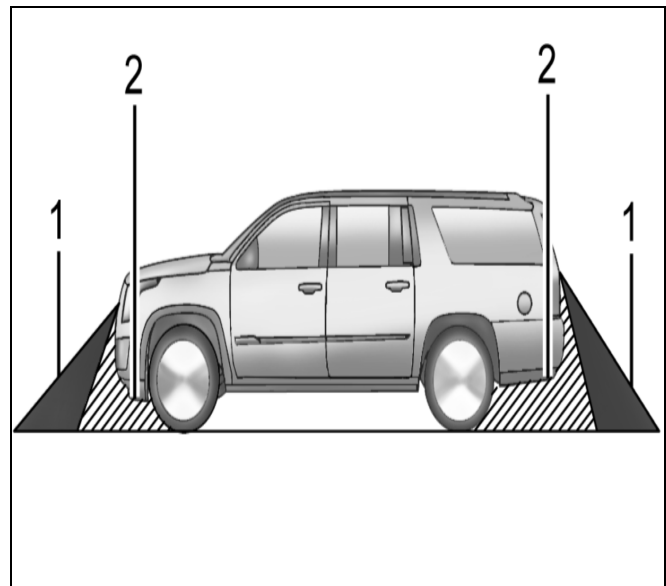

4291164

1. View Displayed by the Surround Vision Camera
2. Area Not Shown

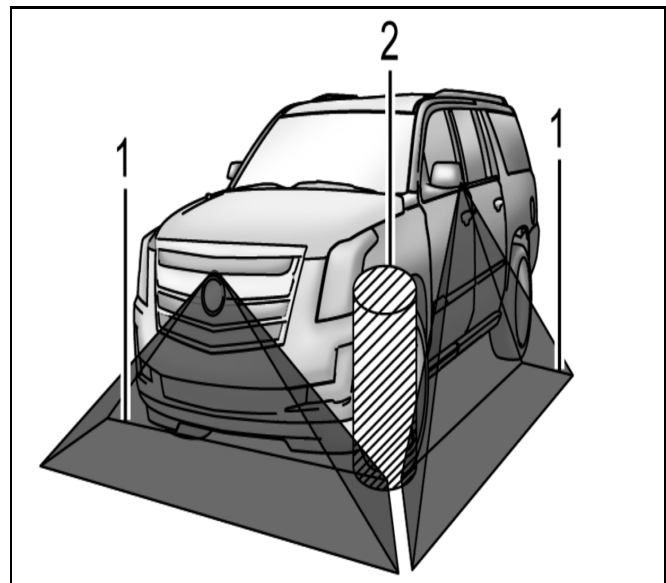

4291749

1. View Displayed by the Surround Vision Camera
2. Area Not Shown

The surround vision camera system consists of the following components:

- B87 Rearview Camera
- B174G Frontview Camera – Grille
- K157 Video Processing Control Module
- A11 Radio **OR** K74 Human Machine Interface Module
- B225L Sideview Camera – Left
- B225R Sideview Camera – Right
- X20 Memory Card Receptacle (with XVR)

When the vehicle is traveling at speeds slower than 6 mph (10kph) the video processing control module will power up the cameras and send a video signal to the radio or human machine interface module.

## 3-8 Image Display Cameras

---

The following conditions may cause a degraded surround vision camera image:

- Ice, snow, or mud has built up on the rear vision camera
- Dark conditions
- Extreme light conditions, such as glare from the sun or the headlights of another vehicle
- Damage to the rear of the vehicle
- Extreme high temperatures or extreme temperature changes

Surround Vision displays an overhead view of the area surrounding the vehicle, along with the front or rear camera views in the center stack. The front camera is in the grille or near the front emblem, the side cameras are on the bottom of the outside rearview mirrors, and the rear vision camera is above the license plate.

**Note:** Images from the Sideview Cameras are only displayed when both front doors are properly closed.

### Features of the Surround Vision System

- Rear camera (B87 Rearview Camera) view alongside overhead view is displayed in reverse
- Front camera (B174G Frontview Camera – Grille) view alongside overhead view is displayed after shifting out of reverse to Neutral or Drive
- Will display front view when front park assist object is within trigger range calibration value (30 cm (12 in) in a forward gear
- Image is removed from display when vehicle speed exceeds speed calibration (10kph/6 mph) or button press / screen touch

### System Operation

The video processing control module is connected to each camera via a shielded coaxial cable. The coaxial cable provides power for the camera and also carries the video image from the cameras to the video processing control module for processing. The video processing control module will then send the processed image output to infotainment system via another coaxial cable.

The video processing module receives various vehicle information (such as steering wheel angle, object detection, etc) from other sources such as parking assist modules and the Body Control Module via serial data. This information is used to produce the enhanced surround vision system images that include a warning triangle that may display if an object is detected nearby. This triangle changes from amber to red and increases in size as the object gets closer to the vehicle. Also, dynamic guidelines are displayed in Reverse to show the projected path of the vehicle based on steering wheel angle. Due to this use of vehicle information, any faults or DTCs in these related systems can prohibit proper surround vision operation.

If equipped, the video processing control module system may have a memory card receptacle (with XVR) located in the trunk. The memory card receptacle interfaces with the video processing control module via a USB cable. The memory card receptacle also receives fused battery voltage and ground from the

video processing control module. The video processing control module uses the memory card as a mass storage device, similar to a USB storage device.

## Section 4

# Engine/Propulsion

### Starting, Charging, and Low Voltage Energy


<b>Storage</b> .....	<a href="#">4-3</a>
<b>Schematic and Routing Diagrams</b> .....	<a href="#">4-3</a>
Starting and Charging Schematics .....	<a href="#">4-4</a>
<b>Description and Operation</b> .....	<a href="#">4-7</a>
Battery Description and Operation .....	<a href="#">4-7</a>
Charging System Description and Operation ....	<a href="#">4-7</a>
Electrical Power Management Description and Operation .....	<a href="#">4-10</a>
Starting System Description and Operation ....	<a href="#">4-12</a>
Stop/Start System Description and Operation .....	<a href="#">4-13</a>

**BLANK**

# Starting, Charging, and Low Voltage Energy Storage


## Schematic and Routing Diagrams

Starting and Charging Schematics (Starting)

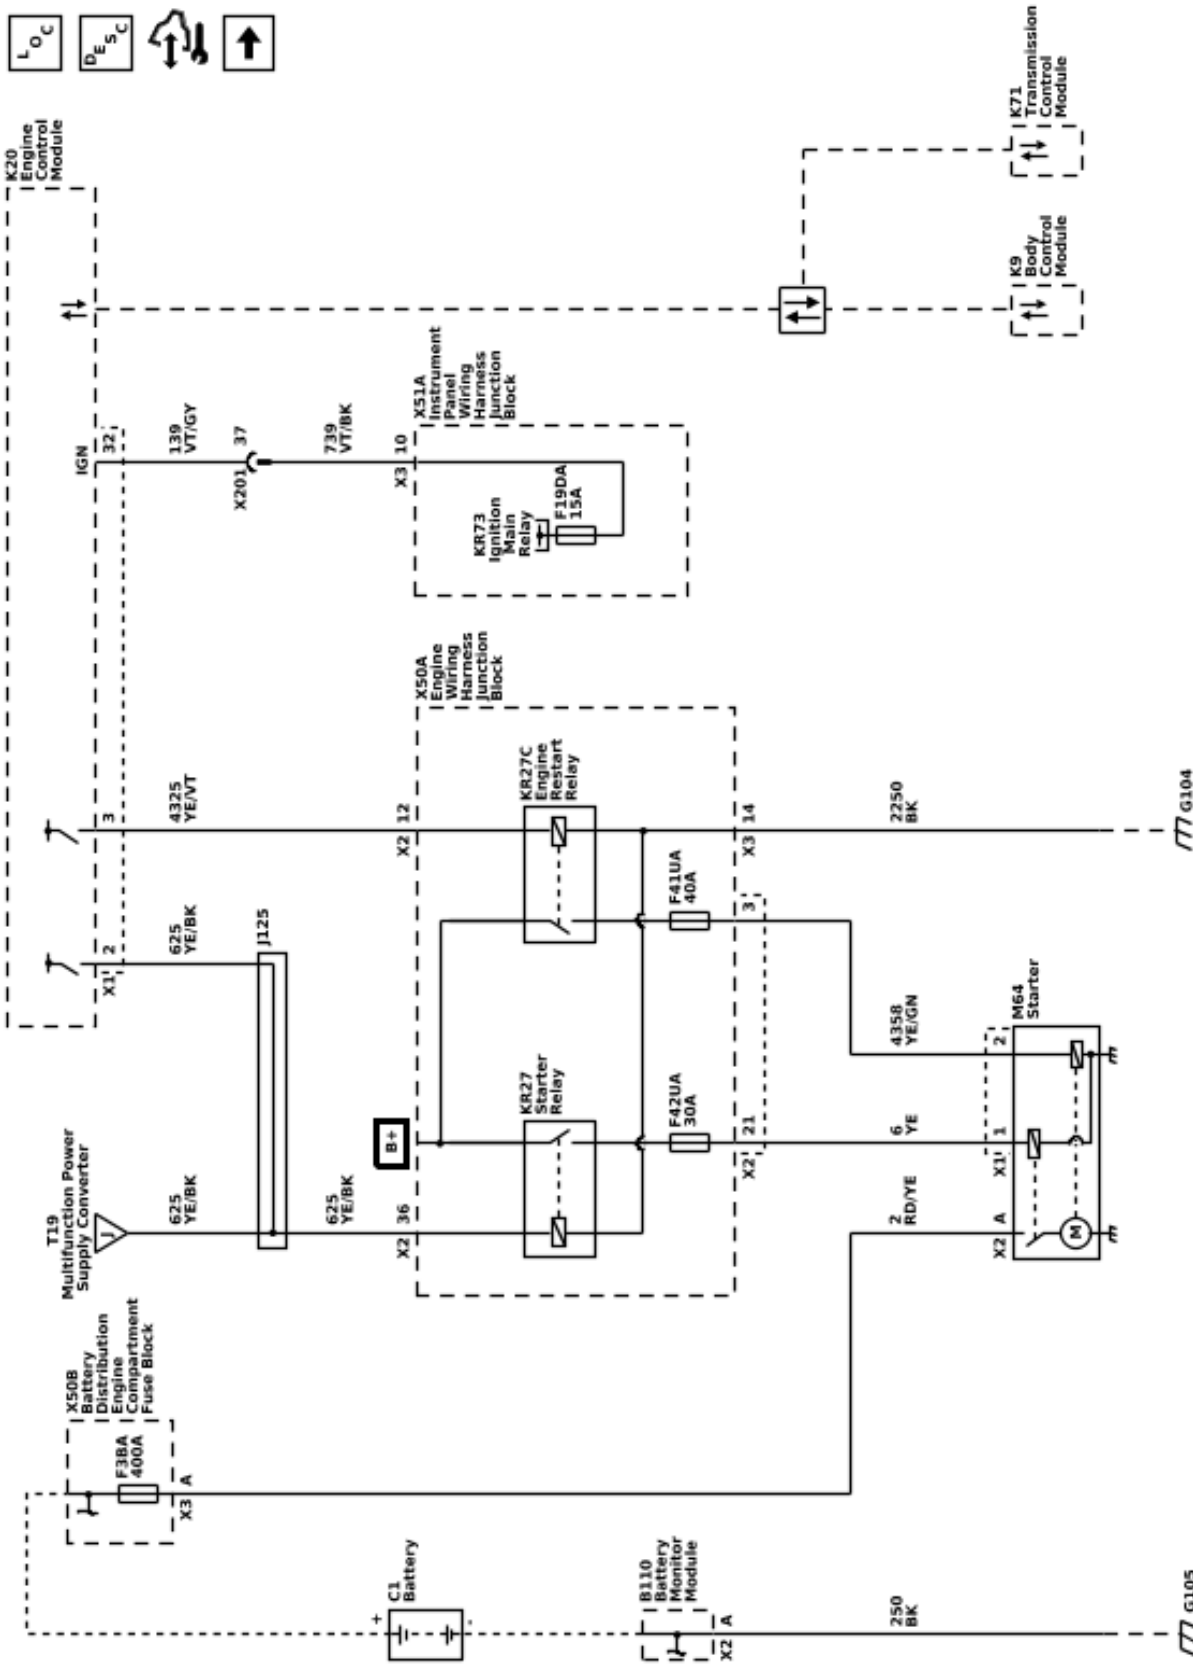


6331961

Starting and Charging Schematics (Charging)

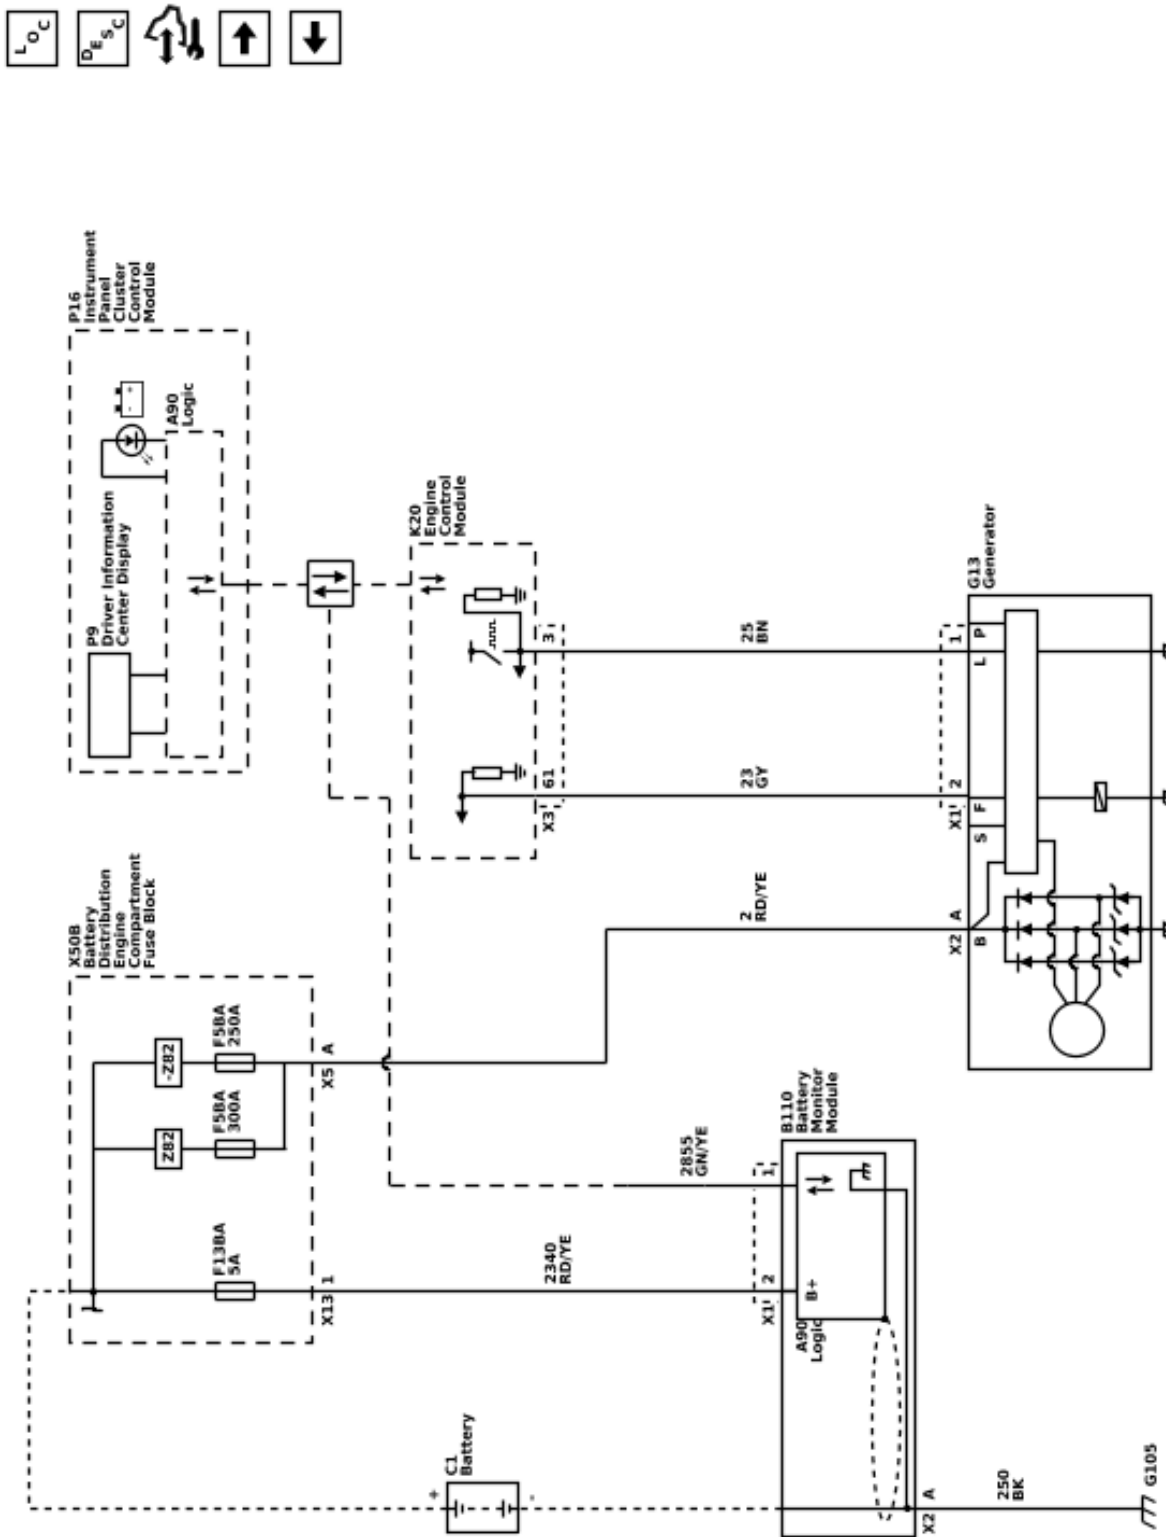

Starting and Charging Schematics (Stop/Start System)

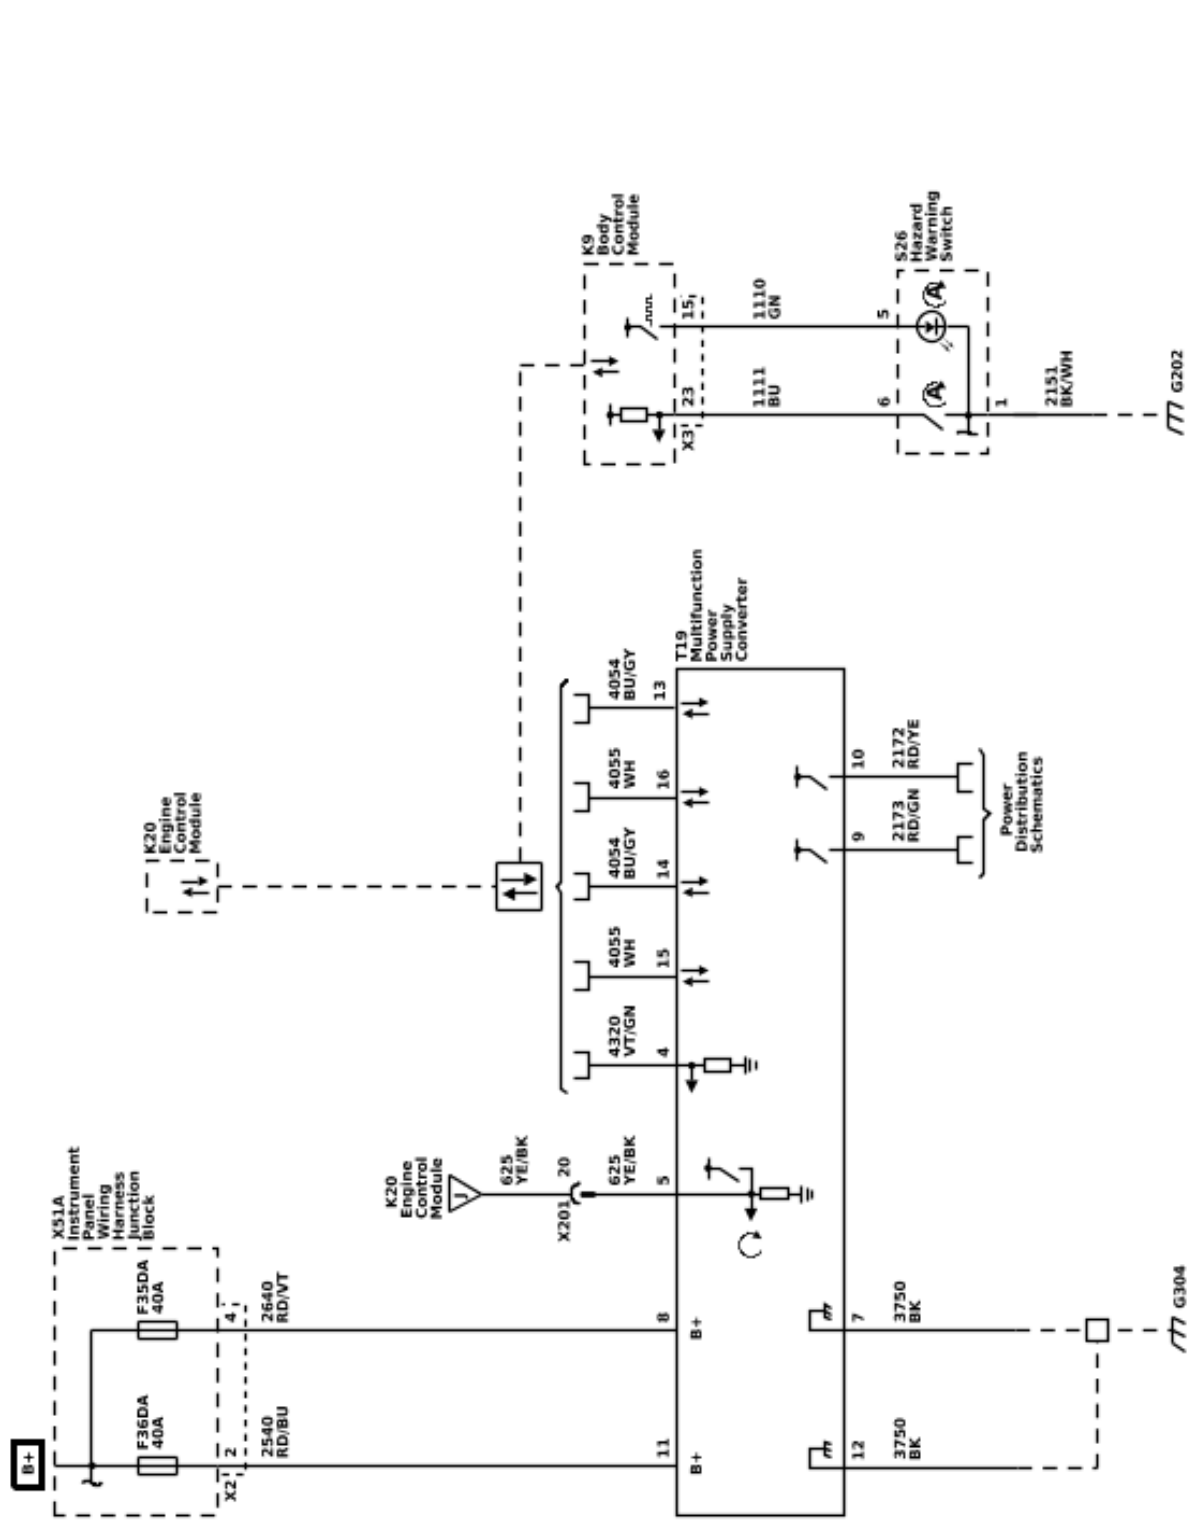



## Description and Operation

### Battery Description and Operation

**Warning:** Batteries produce explosive gases, contain corrosive acid, and supply levels of electrical current high enough to cause burns. Therefore, to reduce the risk of personal injury when working near a battery:

- Always shield your eyes and avoid leaning over the battery whenever possible.
- Do not expose the battery to open flames or sparks.
- Do not allow the battery electrolyte to contact the eyes or the skin. Flush immediately and thoroughly any contacted areas with water and get medical help.
- Follow each step of the jump starting procedure in order.
- Treat both the booster and the discharged batteries carefully when using the jumper cables.

Batteries that are no longer wanted must be disposed of by an approved battery recycler and must never be thrown in the trash or sent to a landfill.

Batteries that are not part of the vehicle itself, not the battery under the hood, must only be transported on public streets for business purposes via approved hazardous material transportation procedures.

Battery storage, charging and testing facilities in repair shops must meet various requirements for ventilation, safety equipment, material segregation, etc.

The maintenance free battery is standard. There are no vent plugs in the cover. The battery is completely sealed except for 2 small vent holes in the side. These vent holes allow the small amount of gas that is produced in the battery to escape.

The battery has 3 functions as a major source of energy:

- Engine cranking
- Voltage stabilizer
- Alternate source of energy with generator overload

### Battery Low Start Vehicle Message

The body control module (BCM) monitors battery positive voltage to determine battery state of charge. If one or more of the BCM battery positive voltage terminals measure less than approximately 11.6V compared to the BCM ground circuits, this message will display and four chimes may sound. Start the vehicle immediately. If the vehicle is not started and the battery continues to discharge, the climate controls, heated seats, and audio systems will shut off and the vehicle may require a jump start. These systems will function again after the vehicle is started.

### Battery Ratings

A battery has 2 ratings:

- Cold cranking amperage
- Amperage hours

When a battery is replaced use a battery with similar ratings. See battery specification label on the original battery.

### Amperage Hours

The amperage hour rating tells you how much amperage is available when discharged evenly over a 20 hour period. The amperage hour rating is cumulative, so in order to know how many constant amperage the battery will output for 20 h, you have to divide the amperage hour rating by 20. Example: If a battery has an amperage hour rating of 74, dividing by 20 = 3.75. Such a battery can carry a 3.75 A load for 20 hours before dropping to 10.5 V. (10.5 V is the fully discharged level, at which point the battery needs to be recharged.) A battery with an amperage hour rating of 55 will carry a 2.75 A load for 20 hours before dropping to 10.5 V.

### Cold Cranking Amperage

The cold cranking amperage is an indication of the ability of the battery to crank the engine at cold temperatures. The cold cranking amperage rating is the minimum amperage the battery must maintain for 30 seconds at  $-18^{\circ}\text{C}$  ( $0^{\circ}\text{F}$ ) while maintaining at least 7.2 V. See battery label for the cold cranking amperage rating of this battery.

## Charging System Description and Operation

### Electrical Power Management Overview

The electrical power management system is designed to monitor and control the charging system and send diagnostic messages to alert the driver of possible problems with the battery and generator. This electrical power management system primarily utilizes existing on-board computer capability to maximize the effectiveness of the generator, to manage the load, improve battery state-of-charge and life, and minimize the system's impact on fuel economy. The electrical power management system performs 3 functions:

- Monitor the battery voltage and estimate the battery condition
- Take corrective actions by boosting idle speeds, and adjusting the regulated voltage
- Perform diagnostics and driver notification

The battery condition is estimated during ignition/vehicle off and during ignition/vehicle on. During ignition/vehicle off the state-of-charge of the battery is determined by measuring the open-circuit voltage. The state-of-charge is a function of the acid concentration and the internal resistance of the battery, and is estimated by reading the battery open circuit voltage when the battery has been at rest for several hours.

Any time the ignition/vehicle is on, the vehicle algorithm continuously estimates battery state-of-charge based on adjusted net amp hours, battery capacity, initial state-of-charge, and calculated temperature.

While the engine is running, the battery degree of discharge is primarily determined by the integrated battery current sensor, to obtain net amp hours.

## 4-8 Starting, Charging, and Low Voltage Energy Storage

In addition, the electrical power management function is designed to perform regulated voltage control to improve battery state-of-charge, battery life, and fuel economy. This is accomplished by using knowledge of the battery state-of-charge and temperature to set the charging voltage to an optimum battery voltage level for recharging without detriment to battery life.

### Charging System Components

#### G13 Generator

The engine drive belt drives the generator. When the rotor is spun, it induces an alternating current (AC) into the stator windings. The AC voltage is then sent through a series of diodes for rectification. The rectified voltage has been converted into a direct current (DC) for use by the vehicles electrical system to maintain electrical loads and the battery charge. The voltage regulator integral to the generator controls the output of the generator; it is not serviceable. The voltage regulator controls the amount of current provided to the rotor. If the generator has field control circuit fault, the generator defaults to an output voltage of 13.8 V.

The generator is serviced as a complete assembly. If there is a diagnosed fault in the generator, it must be replaced as an assembly.

#### Generator Pulley

The pulley drives the Generator via the engine drive belt. There are 2 types of pulleys:

1. Conventional solid Pulley which is bolted to the Generator stator shaft. This Pulley can be serviced separately.
2. One Way Clutch Pulley or Overrunning Alternator Decoupler Pulley allows the Generator to spin freely when the engine rapidly slows down on sudden deceleration. This part is not serviceable and the Generator needs to be replaced as an assembly.

#### K9 Body Control Module (BCM)

The K9 Body Control Module communicates with the K20 Engine Control Module and the instrument cluster for electrical power management operation. The BCM determines the output of the generator and sends the information to the ECM for control of the generator turn on signal circuit. It monitors the generator field duty cycle signal circuit information sent from the ECM for control of the generator. It monitors the battery current sensor, the battery positive voltage circuit, and estimates battery temperature to determine battery state of charge. The BCM also performs idle boost.

#### B110 Battery Monitor Module

The Battery Monitor Module communicates to the BCM via LIN. The BCM shares this information with the ECM. The purpose of the battery sensor module is to transmit battery information that the BCM/ECM can use to make decisions regarding stop/start, battery saver mode, and load shedding.

#### K20 Engine Control Module (ECM)

When the engine is running, the generator turn-on signal is sent to the generator from the ECM, turning on the regulator. The generator's voltage regulator controls current to the rotor, thereby controlling the output voltage. The rotor current is proportional to the

electrical pulse width supplied by the regulator. When the engine is started, the regulator senses generator rotation by detecting AC voltage at the stator through an internal wire. Once the engine is running, the regulator varies the field current by controlling the pulse width. This regulates the generator output voltage for proper battery charging and electrical system operation. The generator field duty terminal is connected internally to the voltage regulator and externally to the ECM. When the voltage regulator detects a charging system problem, it grounds this circuit to signal the ECM that a problem exists. The ECM monitors the generator field duty cycle signal circuit, and receives control decisions based on information from the BCM.

#### P16 Instrument Cluster

As a means of displaying the charging system functions, some vehicles may be equipped with a voltmeter gauge on the instrument cluster and/or a system voltage display in the driver information center. These will indicate the current vehicle system voltage.

The instrument cluster also provides customer notification if there is a concern with the charging system. There are two means of notification: a charge indicator on the instrument cluster and/or a service system message displayed on the Driver Information Center (DIC) if equipped.

### Charging System Operation

The purpose of the charging system is to maintain the battery charge and vehicle loads. There are 6 modes of operation and they include:

- Battery Sulfation Mode
- Charge Mode
- Fuel Economy Mode
- Head lamp Mode
- Start Up Mode
- Voltage Reduction Mode

The ECM Controls the Generator through the generator turn-on signal circuit, also known as the Generator L-terminal. The ECM monitors the generator performance through the Generator field duty cycle signal circuit, also known as the generator F-terminal.

The Generator turn-on signal (Generator L-terminal) is a Pulse Width Modulation (PWM) signal of 128 Hz with a duty cycle of 0–100%. Normal duty cycle is between 5–95%. 0–5% and 95–100% are for diagnostic purposes, with 0–5% monitoring for an open circuit and 95–100% monitoring for a short to ground at a fixed 13.8 V. The following table shows the commanded duty cycle and output voltage of the Generator:

Commanded Duty Cycle	Generator Output Voltage (+/- .25 V)
0–5%	13.8 V
10%	11 V
20%	11.56 V
30%	12.13 V
40%	12.69 V
50%	13.25 V
60%	13.81 V

Commanded Duty Cycle	Generator Output Voltage (+/- .25 V)
70%	14.38 V
80%	14.94 V
90%	15.5 V
95–100%	13.8 V

The Generator provides a PWM feedback signal of the Generator voltage output through the Generator field duty cycle signal circuit to the ECM. This information is sent to the Body Control Module (BCM). The Generator field duty cycle signal (Generator F-terminal) is a PWM signal of 60–460 Hz with a duty cycle of 0–100%. Normal duty cycle is between 5–100%. 0–5% is reserved for diagnostic purposes.

As the charging systems works to maintain the battery charge and manage vehicle electrical loads, it is normal for the voltmeter gauge on the instrument cluster or the system voltage displayed in the DIC to fluctuate or change. This does not indicate a malfunction. Depending on the battery state of charge and the vehicle electrical load, these values may be anywhere from 12.5 V to 15.5 V.

## Charging System Modes

### Battery Sulfation Mode

The BCM will enter this mode when the interpreted Generator output voltage is less than 13.2 V for 45 minutes. When this condition exists the BCM will enter Charge Mode for 2–3 minutes. The BCM will then determine which mode to enter depending on voltage requirements.

### Charge Mode

The BCM will enter Charge Mode when ever one of the following conditions are met:

- Windshield wipers are ON for more than 3 s.
- Climate Control Voltage Boost Mode Request is true, as sensed by the HVAC control module via serial data. High speed cooling fan, rear defogger, and HVAC high speed blower operation can cause the BCM to enter the Charge Mode.
- The estimated battery temperature is less than 0° C (32°F).
- Battery State of Charge is less than 80%.
- Vehicle speed is greater than 145 km/h (90 mph)
- A current sensor malfunction exists.
- System voltage is determined to be below 12.56 V

When any one of these conditions is met, the system will set targeted generator output voltage to a charging voltage between 13.9–15.5 V, depending on the battery state of charge and estimated battery temperature.

### Fuel Economy Mode

The BCM will enter Fuel Economy Mode when the estimated battery temperature is at least 0° C (32°F) but less than or equal to 80° C (176°F), the calculated battery current is less than 15 A and greater than –8 A, and the battery state-of-charge is greater than or equal to 80%. Its targeted generator output voltage is the open circuit voltage of the battery and can be between 12.5–13.1 V. When fuel economy mode is active, the

generator is not charging, only maintaining open circuit battery voltage. The BCM will exit this mode and enter Charge Mode when any of the conditions described above are present.

### Headlamp Mode

The BCM will enter Headlamp Mode when ever the head lamps are ON (high or low beams). Voltage will be regulated between 13.9–14.5 V.

### Start Up Mode

When the engine is started the BCM sets a targeted generator output voltage of 14.5 V for 30 s.

### Tow/Haul Mode (if applicable)

Pressing the Tow/Haul Mode button located on the center stack, the vehicle system voltage is raised and the remote (non-vehicle) battery will be charged. Having the headlamps on will raise the system voltage and if the Tow/Haul button is applied it will not serve any purpose. The voltage is regulated between 13.9–14.5 V.

## Instrument Cluster Operation

### Charge Indicator Operation

The instrument cluster illuminates the charge indicator and displays a warning message in the driver information center if equipped, when the one or more of the following occurs:

- The ECM detects that the generator output is less than 11 V or greater than 16 V. The instrument cluster receives a serial data message from the ECM requesting illumination.
- The instrument cluster determines that the system voltage is less than 11 V or greater than 16 V for more than 30 s. The instrument cluster receives a serial data message from the BCM indicating there is a system voltage range concern.
- The instrument cluster performs the displays test at the start of each ignition cycle. The indicator illuminates for approximately 3 s.

### Driver Information Center Message: BATTERY NOT CHARGING SERVICE CHARGING SYSTEM or SERVICE BATTERY CHARGING SYSTEM

The BCM and the ECM will send a serial data message to the driver information center for the BATTERY NOT CHARGING SERVICE CHARGING SYSTEM or SERVICE BATTERY CHARGING SYSTEM message to be displayed. It is displayed when a charging system DTC is a current DTC. The message is turned off when the conditions for clearing the DTC have been met.

### Voltmeter Gauge and/or System Voltage Display (if equipped)

As a means of displaying the charging system functions, some vehicles may be equipped with a voltmeter gauge on the instrument cluster and/or a system voltage display in the driver information center. These will indicate the current vehicle system voltage.

As the charging systems works to maintain the battery charge and manage vehicle electrical loads, it is normal for the voltmeter gauge on the instrument cluster or the system voltage display in the driver information center to fluctuate or change. This does not indicate a

## 4-10 Starting, Charging, and Low Voltage Energy Storage

malfunction. Depending on the battery state of charge and the vehicle electrical load, these values may be anywhere from 12.5 V to 15.5 V.

### Electrical Power Management Description and Operation

#### Electrical Power Management

The electrical power management is used to monitor and control the charging system and alert the driver of possible problems within the charging system. The electrical power management system makes the most efficient use of the generator output, improves the battery state-of-charge, extends battery life, and manages system electrical loads.

The load shed operation is a means of reducing electrical loads during a low voltage or low battery state-of-charge condition.

The idle boost operation is a means of improving generator performance during a low voltage or low battery state-of-charge condition.

Each electrical power management function, either idle boost or load shed, is activated in incremental steps. For example, idle boost 1 must be active before idle boost 2 can be active. The criteria used by the body control module (BCM) to regulate electrical power management are outlined below:

#### Idle Boost and Load Shed With Current Sensor

Function	Battery Temperature Calculation	Battery Voltage Calculation	Amp-Hour Calculation	Action Taken
Idle Boost 1 Start	Less Than -15°C (5°F)	Less Than 13 V	—	First level Idle boost requested
Idle Boost 1 Start	—	—	Battery has a net loss greater than 0.6 Ah	First level Idle boost requested
Idle Boost 1 Start	—	Less Than 11 V	—	First level Idle boost requested
Idle Boost 1 End	Greater Than -10°C (14°F)	Greater Than 12 V	Battery has a net loss less than 0.2 Ah	First level Idle boost request cancelled
Idle Boost 2 Start	—	—	Battery has a net loss greater than 1.6 Ah	Second level Idle boost requested
Idle Boost 2 Start	—	Less Than 11 V	—	Second level Idle boost requested
Idle Boost 2 End	—	Greater Than 12 V	Battery has a net loss less than 0.8 Ah	Second level Idle boost request cancelled
Load Shed 1 Start	—	—	Battery has a net loss of 4 Ah	Rear Defrost, Heated Mirrors, Heated Seats, HVAC cycled OFF for 20% of their cycle
Load Shed 1 Start	—	Less Than 11 V	—	Rear Defrost, Heated Mirrors, Heated Seats, HVAC cycled OFF for 20% of their cycle
Load Shed 1 End	—	Greater Than 12 V	Battery has a net loss of less than 2 Ah	Clear Load Shed 1
Idle Boost 3 Start	—	—	Battery has a net loss of 10 Ah	Third level Idle boost requested
Idle Boost 3 Start	—	Less Than 11 V	—	Third level Idle boost requested
Idle Boost 3 End	—	Greater Than 12 V	Battery has a net loss of less than 6.0 Ah	Third level Idle boost request cancelled

**Idle Boost and Load Shed With Current Sensor (cont'd)**

Function	Battery Temperature Calculation	Battery Voltage Calculation	Amp-Hour Calculation	Action Taken
Load Shed 2 Start	—	—	Battery has a net loss greater than 12 Ah	Rear Defrost, Heated Mirrors, Heated Seats, HVAC cycled OFF for 50% of their cycle. The BATTERY SAVER ACTIVE message will be displayed on the DIC
Load Shed 2 Start	—	Less Than 11 V	—	Rear Defrost, Heated Mirrors, Heated Seats, HVAC cycled OFF for 50% of their cycle. The BATTERY SAVER ACTIVE message will be displayed on the DIC
Load Shed 2 End	—	Greater Than 12 V	Battery has a net loss of less than 8 Ah	Clear Load Shed 2
Load Shed 3 Start	—	Less Than 11.9 V	Battery has a net loss greater than 20 Ah	Rear Defrost, Heated Mirrors, Heated Seats, HVAC cycled OFF for 100% of their cycle. The BATTERY SAVER ACTIVE message will be displayed on the DIC
Load Shed 3 Start	—	Less Than 11 V	—	Rear Defrost, Heated Mirrors, Heated Seats, HVAC cycled OFF for 100% of their cycle. The BATTERY SAVER ACTIVE message will be displayed on the DIC
Load Shed 3 End	—	Greater Than 12.6 V	Battery has a net loss of less than 13 Ah	Clear Load Shed 3

**Idle Boost and Load Shed Without Current Sensor (based on battery voltage)**

Function	Battery Temperature Calculation	Battery Voltage Calculation	Action Taken
Idle Boost 1 Start	Less Than -15°C (5°F)	Less Than 13 V	First level Idle boost requested
Idle Boost 1 Start	—	Less Than 12.6 V	First level Idle boost requested
Idle Boost 1 End	Greater Than -15°C (5°F)	—	First level Idle boost request cancelled
Idle Boost 1 End	—	Greater Than 13 V	First level Idle boost request cancelled
Idle Boost 2 Start	—	Less Than 12.4 V	Second level Idle boost requested
Idle Boost 2 End	—	Greater Than 12.5 V	Second level Idle boost request cancelled
Load Shed 1 Start	—	Less Than 12.3 V	Rear Defrost, Heated Mirrors, Heated Seats, HVAC cycled OFF for 20% of their cycle
Load Shed 1 End	—	Greater Than 12.4 V	Clear Load Shed 1
Idle Boost 3 Start	—	Less Than 10 V	Third level Idle boost requested

**Idle Boost and Load Shed Without Current Sensor (based on battery voltage) (cont'd)**

Function	Battery Temperature Calculation	Battery Voltage Calculation	Action Taken
Idle Boost 3 End	—	Greater Than 12.3 V	Third level Idle boost request cancelled
Load Shed 2 Start	—	Less Than 12.1 V	Rear Defrost, Heated Mirrors, Heated Seats, HVAC cycled OFF for 50% of their cycle. The BATTERY SAVER ACTIVE message will be displayed on the DIC
Load Shed 2 End	—	Greater Than 12.2 V	Clear Load Shed 2
Load Shed 3 Start	—	Less Than 11.9 V	Rear Defrost, Heated Mirrors, Heated Seats, HVAC cycled OFF for 100% of their cycle. The BATTERY SAVER ACTIVE message will be displayed on the DIC
Load Shed 3 End	—	Greater Than 12.0 V	Clear Load Shed 3

**Starting System Description and Operation**

**Starter Motor Operation (Without KL9)**

The starter motors are non-repairable. They have pole pieces that are arranged around the armature. Both solenoid windings are energized. The pull-in winding circuit is completed to the ground through the starter motor. The windings work together magnetically to pull and hold in the plunger. The plunger moves the shift lever. This action causes the starter drive assembly to rotate on the armature shaft spline as it engages with the flywheel ring gear on the engine. Moving at the same time, the plunger also closes the solenoid switch contacts in the starter solenoid. Full battery voltage is applied directly to the starter motor and it cranks the engine.

As soon as the solenoid switch contacts close, current stops flowing thorough the pull-in winding because battery voltage is applied to both ends of the windings. The hold-in winding remains energized. Its magnetic field is strong enough to hold the plunger, shift lever, starter drive assembly, and solenoid switch contacts in place to continue cranking the engine. When the engine starts, pinion overrun protects the armature from excessive speed until the switch is opened.

When the crank signal is removed, the starter relay opens and battery voltage is removed from the starter solenoid S terminal. Current flows from the motor contacts through both windings to the ground at the end of the hold-in winding. However, the direction of the current flow through the pull-in winding is now opposite the direction of the current flow when the winding was first energized.

The magnetic fields of the pull-in and hold-in windings now oppose one another. This action of the windings, along with the help of the return spring, causes the starter drive assembly to disengage and the solenoid switch contacts to open simultaneously. As soon as the contacts open, the starter circuit is turned off.

**Enhanced Starter Motor Operation (KL9)**

The Engine Stop/Start system in GM vehicles automatically turns off the engine when the vehicle comes to a stop under certain driving conditions, and can quickly restart the engine in about 0.3 seconds when commanded to do so.

In order to smoothly restart the engine as quickly as possible while managing the greater number of engine starts, the Stop/Start system uses an enhanced starter motor that operates differently from a conventional starter motor. It has a high performance electric motor and a stronger pinion engagement mechanism than a conventional starter. It also has independent control of the pinion and motor.

The enhanced starter motor continues using the typical pinion engagement mechanism with a starter solenoid that drives the pinion gear to engage or disengage the flywheel of the engine. When engaged, the starter motor can rotate the engine flywheel and, in turn, the crankshaft.

On the enhanced starter of a Stop/Start system the operation is done in two separate functions inside the solenoid, Starter Motor and Pinion Actuator. Each function controlled individually by the ECM. There are two separate relays to control the two separate parts of the enhanced solenoid:

- KR27 Starter Motor Relay
- KR27C Starter Pinion Actuator Relay

The two individually-controlled relays allow for smooth engagement of the pinion gear into the flywheel with minimum noise and wear.

When the vehicle is coming to a stop, just before the engine stops rotating (at approximately 50 RPM) during stop/start operation, the ECM energizes the Starter Pinion Solenoid Actuator Relay to easily push the pinion gear into the flywheel gear without gear clash. (Fig. 8) When the engine stops rotating during Stop/Start operation (Auto Stop mode), the starter pinion gear is fully engaged, ready for the starter motor to become energized to quickly start the engine again.

A secondary need for the starter pinion to be driven into the flywheel gear before the engine stops rotating is to address quickly changing demands on the engine. For example, when a driver is slowing nearly to a stop — and the Stop/Start system is preparing for Auto Stop mode — but suddenly decides to release the brake and accelerate

In this situation, the engine has already stopped rotating, or nearly so. A conventional starter cannot restart the engine until the engine has completely stopped. However, with the enhanced starter, the starter pinion gear is fully engaged and ready to begin rotating the engine even before it fully stops turning. Otherwise, the engine would actually have to stop rotating before the pinion can engage smoothly to begin a restart.

To prevent a lag in engine operation, the ECM uses predictive speed matching of the flywheel gear speed and the pinion gear speed to engage the pinion gear into the flywheel gear without gear clash before the engine fully stops. By predicting how long it takes the starter motor to spin up using an algorithm, the pinion gear speed can be matched to the flywheel gear speed. The result is an almost instant restart that is possible at extremely low engine speeds.

## Circuit Description

### Keyless Start

When the Ignition mode switch is placed in the crank position, a discrete signal is supplied to the body control module (BCM) notifying it that the ignition is in the crank position. The BCM then sends a serial data message to the engine control module (ECM) that crank has been requested. The ECM then verifies that the brake pedal is applied and for manual transmission the clutch is fully depressed or for automatic transmission is in Park/Neutral. If it is, the ECM then supplies 12 V to the control circuit of the starter relay. When this occurs, battery positive voltage is supplied through the switch side of the crank relay to the S terminal of the starter solenoid.

### Key Start

When the ignition switch is placed in the Start position, a discrete signal is supplied to the body control module (BCM) notifying it that the ignition is in the Start position. The BCM then sends a message to the engine control module (ECM) notifying it that CRANK has been requested. The ECM verifies that the transmission is in Park or Neutral. If it is, the ECM then supplies 12 V to the control circuit of the crank relay. When this occurs, battery positive voltage is supplied through the switch side of the crank relay to the S terminal of the starter solenoid.

## Stop/Start System Description and Operation

The Stop/Start System is used to improve fuel efficiency in stop/start driving. The vehicle automatically shuts down the engine in appropriate conditions at a traffic light, for example, resulting in zero tail pipe emissions and saving fuel which otherwise is used idling the engine when stationary. The engine instantly restarts when the driver is ready to move away.

As soon as the driver prepares to move away (by releasing the brake pedal and/or depressing the accelerator pedal), the engine will start; it only takes the system around 0.3 s to start the engine.

To support the increased number of engine starts, the starter motor is upgraded with a high performance electric motor and a stronger pinion engagement mechanism with reduced noise levels.

Along with the upgraded starter motor, advanced battery technology is required to ensure the vehicles battery can handle the frequent charge and discharge cycles common with stop/start operation. There is battery sensor module connected to the battery which continually monitors the battery charge and healthy state. The Engine Control Module (ECM) uses this information from the battery sensor module to determine if the battery charge and health is sufficient for an Stop/Start condition.

The Stop/Start system can reduce fuel consumption and carbon dioxide (CO<sub>2</sub>) emissions by up to 5% in mixed driving conditions. In an urban environment and in heavy traffic with frequent stops the savings may increase to as much as 10%.

There are also sophisticated controls in place to help ensure the Stop/Start System does not compromise the needs of either the driver or vehicle. For the engine to shutdown, the vehicle must be below 5 km/h (3 MPH), the selector lever in position D, and brake pedal depressed. To restart, the driver simply releases the brake pedal and the enhanced starter motor engages the engine. When the engine has been shut down by the Stop/Start System, a control indicator will be illuminated in the Driver Information Center (DIC). When the engine is restarted, the control indicator in the DIC extinguishes.

To ensure neither the needs of the driver or vehicle are compromised the engine will not shut down in the following circumstances:

- Ambient and coolant temperature correlation does not match specified values.
- Ambient temperature is less than  $-10^{\circ}\text{C}$  ( $14^{\circ}\text{F}$ )
- Battery temperature is less than  $0^{\circ}\text{C}$  ( $32^{\circ}\text{F}$ ) or greater than  $55^{\circ}\text{C}$  ( $131^{\circ}\text{F}$ )
- Driver seat belt is not fastened and the drivers door is not fully closed (not applicable to vehicles in North America)
- HVAC system demand is high
- HVAC defrost has been selected
- Battery charge is low

Likewise the engine will automatically restart if:

- Driver door opened and driver seat belt unbuckled (not applicable to vehicles in North America)
- Engine hood opened
- Battery charge is low
- HVAC demand increases
- Vehicle speed increases
- Brake booster vacuum has been reduced
- Engine coolant temperature is greater than  $125^{\circ}\text{C}$  ( $257^{\circ}\text{F}$ )
- Economy mode turned OFF by driver
- Autostop time exceeded 2 min

## 4-14 Starting, Charging, and Low Voltage Energy Storage

---

When the Stop/Start System has shut down the engine, and the ambient temperature is below 15°C (59°F), the ECM will activate the Stop/Start auxiliary relay which controls the electric engine coolant pump motor to continually circulate the engine coolant through the engine while the engine is off. This is to ensure the engine and passenger compartment temperature is maintained while off. Once the Stop/Start System has restarted the engine, the ECM will turn off the electric coolant pump motor, thus allowing the engines internal coolant pump to circulate the engine coolant. The Stop/Start System is automatically activated each time the ignition switch is turned on.

Through the climate control system, the vehicle can be cycled between off, comfort, and eco air conditioning modes (if equipped). In comfort mode, the priority for Stop/Start operation is on customer comfort. Depending on ambient temp, humidity, cabin temperature and cabin temperature setpoint, the least amount of autostops occur in this mode. In eco mode, the priority is on fuel economy. There are more frequent autostops with some sacrificing of cabin temperature control. With the HVAC turned off, the maximum autostops occur since there will be no A/C compressor requests.

### Autostop Criteria

The ECM will send an Autostop state message to the body control module (BCM) and shut down the engine when all of the following criteria is met. The BCM will

transmit the Autostop state message to the instrument cluster which will display the Autostop indicator in the tachometer display.

- Initial minimum vehicle speed during drive cycle must be 19 km/h (12 MPH) or greater. Subsequent autostop minimum speed may vary from 2-10 km/h (1-6 MPH), depending on vehicle
- Ambient and engine coolant temperature correlation meets specified values.
- Ambient and transmission fluid temperature correlation meets specified values.
- Hood switch status is closed
- Driver door status is closed
- Driver seat belt status is buckled
- Brake booster vacuum is greater than 45 kPa (7 PSI)
- Transmission gear selector is in the Drive position
- Vehicle speed is less than 5 km/h (3 MPH)
- Engine speed is below 1,500 RPM
- Engine coolant temperature is less than 120°C (248°F)
- Ambient temperature is greater than -10°C (14°F)
- No A/C compressor request from HVAC (A/C or Defrost modes)
- Battery voltage greater than 12 V
- Battery state of charge greater than 75% (changes with state of health)



**Autostop Enable Ambient and Engine Coolant Temperature Table**

Ambient Temperature	Minimum Coolant Temperature	Autostop Enable
-10°C (14°F)	60°C (140°F)	Yes
0°C (32°F)	50°C (122°F)	Yes
6°C (43°F)	40°C (104°F)	Yes
12°C (54°F)	30°C (86°F)	Yes
20°C (68°F)	18°C (64°F)	Yes
30°C (86°F)	18°C (64°F)	Yes

## Autostart Criteria

The ECM will send an Autostart state message to the BCM. If all of the following conditions are true the ECM and BCM will restart the vehicle.

Driver Enabled Conditions that will engage Autostart:

- Driver removes pressure from the brake or depresses the accelerator pedal while the vehicle is in the forward Drive gear

System Enabled Conditions that will engage Autostart

**Note:** If one or more of the following conditions occur, the system will force the engine to restart.

- Brake booster vacuum is less than 40 kPa (6 PSI)
- A/C compressor request from HVAC (A/C or Defrost modes)
- Battery voltage less than 11 V,
- Battery state of charge is less than 73% (changes with state of health)
- Driver door status changes to open and driver seat belt status changes to unbuckled (not applicable to vehicles in North America)
- Hood switch status changes to open
- Autostop time exceeded 2 min

If the crank time exceeds 2 s, a manual ignition switch restart will be necessary.

## System Components

### Engine Control Module (ECM)

The ECM monitors the inputs from the Engine Coolant Temperature (ECT) sensor, Vehicle Speed Sensor (VSS), Battery Sensor Module, hood ajar switch, brake booster vacuum sensor, and engine speed to determine Autostart and Autostop conditions. The ECM also controls the auxiliary coolant pump motor (if equipped).

### Transmission Control Module (TCM)

The TCM monitors the inputs from the transmission neutral safety switch to determine the driver selected gear. This information is transmitted to the ECM via serial data to support the Auto Stop Start algorithm.

### Engine Coolant Temperature sensor (ECT)

The ECT sensor is used to determine engine operating temperature.

### Intake Air Temperature Sensor (IAT)

The ECM uses this sensor to monitor ambient air temperature. If too cold, the Autostop will not occur.

### Inside air temperature sensor

The HVAC control module monitors the passenger compartment temperature sensor to determine the temperature inside the passenger compartment. The HVAC control module sends this temperature reading to the ECM on the data communication circuit. The ECM uses this temperature values to determine if a restart is required based on the temperature inside the passenger compartment.

### Vehicle speed sensor

The vehicle speed sensor is used to determine vehicle speed. If vehicle speed is detected above a calculated value during an Autostop condition, the ECM will start the engine.

### Hood Ajar Switch

If the hood switch is in the open position, the vehicle will not Autostop. If the hood is opened during Autostop, the vehicle will automatically restart.

### Brake Booster Vacuum Sensor

The ECM monitors vacuum in order to ensure proper power assist for the brake pedal. If the ECM determines vacuum is too low, it will restart the engine.

### Brake Pedal Position Sensor (BPPS) & Accelerator Pedal Position Sensor (APP)

The ECM monitors both the brake pedal position sensor and the accelerator pedal position sensor to determine the level of activation for each. While the accelerator pedal is in its at rest position with no pressure applied by the operator, a partially depressed Brake pedal will cause the ECM to prepare the engine for an Autostop event. When the vehicle is in an auto stop event and the status of the brake pedal position sensor changes from meeting the autostop criteria to not meeting this criteria the engine will be restarted provided all of the other conditions to allow an autostart are met. If the Accelerator pedal is moved from its at rest position the vehicle will also enter an auto start event if all other conditions to support an autostart event, except for the brake pedal position, are met.

### Transmission Gear Shift Position Switch

The transmission gear shift position switch is used to determine if the transmission is in the proper state to allow an auto stop/start event. The ECM will not allow Autostop until the brake is engaged, the transmission is in the forward gear position and then the vehicle slows to below the minimum speed required to allow and autostop while meeting all of the other minimum criteria to support an autostop event.

## 4-16 Starting, Charging, and Low Voltage Energy Storage

---

### **Coolant Pump Motor**

The ECM will turn on the auxiliary coolant pump motor during Autostop to maintain engine operating temperature and HVAC temperature. Once the engine is running, the ECM will turn off the coolant pump motor.

### **Body Control Module (BCM)**

The Body Control Module (BCM) monitors the Autostop Disable switch in order to enable or disable the system. It sends the appropriate messages to the ECM Via serial data to enable or disable the system.

### **Battery Sensor Module**

The Battery Sensor Module monitors the battery current load, state of health, and state of charge, the information is sent to the BCM Via LIN then to the ECM Via Serial Data. If the module detects high current load, the battery is in a poor state of health or a low charge condition, the ECM will not allow Autostop to occur.

### **Autostop Disable Switch**

The disable switch is an input to the BCM, it allows the customer to disable or re-enable the Autostop system. After the vehicle is turned off the Autostop system will turn back on the next time the vehicle is started.

### **Power Supply Transformer**

The DC to DC converter monitors battery voltage and will maintain operating voltage to the radio, instrument cluster and instrument panel displays. The DC to DC converter will provide a boosted voltage to sensitive loads during Autostart to ensure proper operation of the driver informational displays.

### **Instrument Cluster**

In order to differentiate between a normal engine shut down (engine speed 0 RPM) and when the engine has been shut down by the Stop/Start System, the tachometer needle will rest at the Autostop indicator icon (500 RPM point) indicating the engine has been shut down by the Stop/Start System. Once the engine is restarted, or the ECO button has disengaged Autostop, the tachometer will function normally.

## Section 5

# HVAC

<b>Heating, Ventilation, and Air</b>	
<b>Conditioning</b> .....	<a href="#">5-3</a>
<b>Description and Operation</b> .....	<a href="#">5-3</a>
Heating and Air Conditioning System Description and Operation .....	<a href="#">5-3</a>
<b>HVAC - Automatic</b> .....	<a href="#">5-4</a>
<b>Schematic and Routing Diagrams</b> .....	<a href="#">5-4</a>
HVAC Schematics .....	<a href="#">5-5</a>
<b>Description and Operation</b> .....	<a href="#">5-10</a>
Automatic HVAC Description and Operation .....	<a href="#">5-10</a>
<b>HVAC - Manual</b> .....	<a href="#">5-14</a>
<b>Schematic and Routing Diagrams</b> .....	<a href="#">5-14</a>
HVAC Schematics .....	<a href="#">5-15</a>
<b>Description and Operation</b> .....	<a href="#">5-20</a>
Manual HVAC Description and Operation .....	<a href="#">5-20</a>

**BLANK**

# Heating, Ventilation, and Air Conditioning

## Description and Operation Heating and Air Conditioning System Description and Operation

### Engine Coolant

Engine coolant is the key element of the heating system. The engine thermostat controls the normal engine operating coolant temperature. Coolant pumped out of the engine enters the heater core through the inlet heater hose. The air flowing through the Heating, Ventilation, and Air Conditioning (HVAC) module absorbs the heat of the coolant flowing through the heater core. The coolant then exits the heater core through the heater outlet hose and returns back to the engine block.

### Air Conditioning

Refrigerant is the key element in an air conditioning system. R-1234yf is a very low temperature gas that can transfer the undesirable heat from the passenger compartment to the outside air.

The air conditioning compressor is belt driven and operates when the magnetic clutch is engaged. The compressor builds pressure in the air conditioning system. Compressing the refrigerant also adds heat to the refrigerant. The refrigerant is discharged from the compressor through the discharge hose, and forced to flow to the condenser and then through the balance of the air conditioning system. The air conditioning system is mechanically protected with the use of a high pressure relief valve. If the high pressure air conditioning switch were to fail or if the refrigerant system becomes restricted and refrigerant pressure continued to rise, the high pressure relief will pop open and release refrigerant from the system.

Compressed refrigerant enters the condenser in a high temperature, high pressure vapor state. As the refrigerant flows through the condenser, the heat of the refrigerant is transferred to the ambient air passing through the condenser. Cooling the refrigerant causes the refrigerant to condense and change from a vapor to a liquid state.

The condenser is located in front of the radiator for maximum heat transfer. The condenser is made of aluminum tubing and aluminum cooling fins, which allows rapid heat transfer for the refrigerant. The semi-cooled liquid refrigerant exits the condenser and flows through the liquid line, to the Thermostatic Expansion Valve (TXV).

The TXV is located at the evaporator inlet. The TXV is the dividing point for the high and the low pressure sides of the air conditioning system. As the refrigerant passes through the TXV, the refrigerant is lowered. Due to the pressure differential on the liquid refrigerant, the refrigerant will begin to boil at the TXV. The TXV also meters the amount of liquid refrigerant that can flow into the evaporator.

Refrigerant exiting the TXV flows into the evaporator core in a low pressure, liquid state. Ambient air is drawn through the HVAC module and passes through the evaporator core. Warm and moist air will cause the liquid refrigerant to boil inside the evaporator core.

The boiling refrigerant absorbs heat from the ambient air and draws moisture onto the evaporator. The refrigerant exits the evaporator through the suction line and back to the compressor, in a vapor state. This completes the air conditioning cycle of heat removal. At the compressor, the refrigerant is compressed again and the cycle of heat removal is repeated.


Vehicles equipped with R-1234yf may utilize an integral heat exchanger in the air conditioning line set. An integral heat exchanger transfers heat between liquid line and the suction line. It uses the cold vapor from the evaporator to cool the warm liquid refrigerant before it enters the TXV, resulting in increased cooling and higher efficiency.

The conditioned air is distributed through the HVAC module for passenger comfort. The moisture removed from the passenger compartment will also change form, or condense, and is discharged from the HVAC module as water.


# HVAC - Automatic

## Schematic and Routing Diagrams

HVAC Schematics (Power, Ground, Serial Data and HVAC Controls)

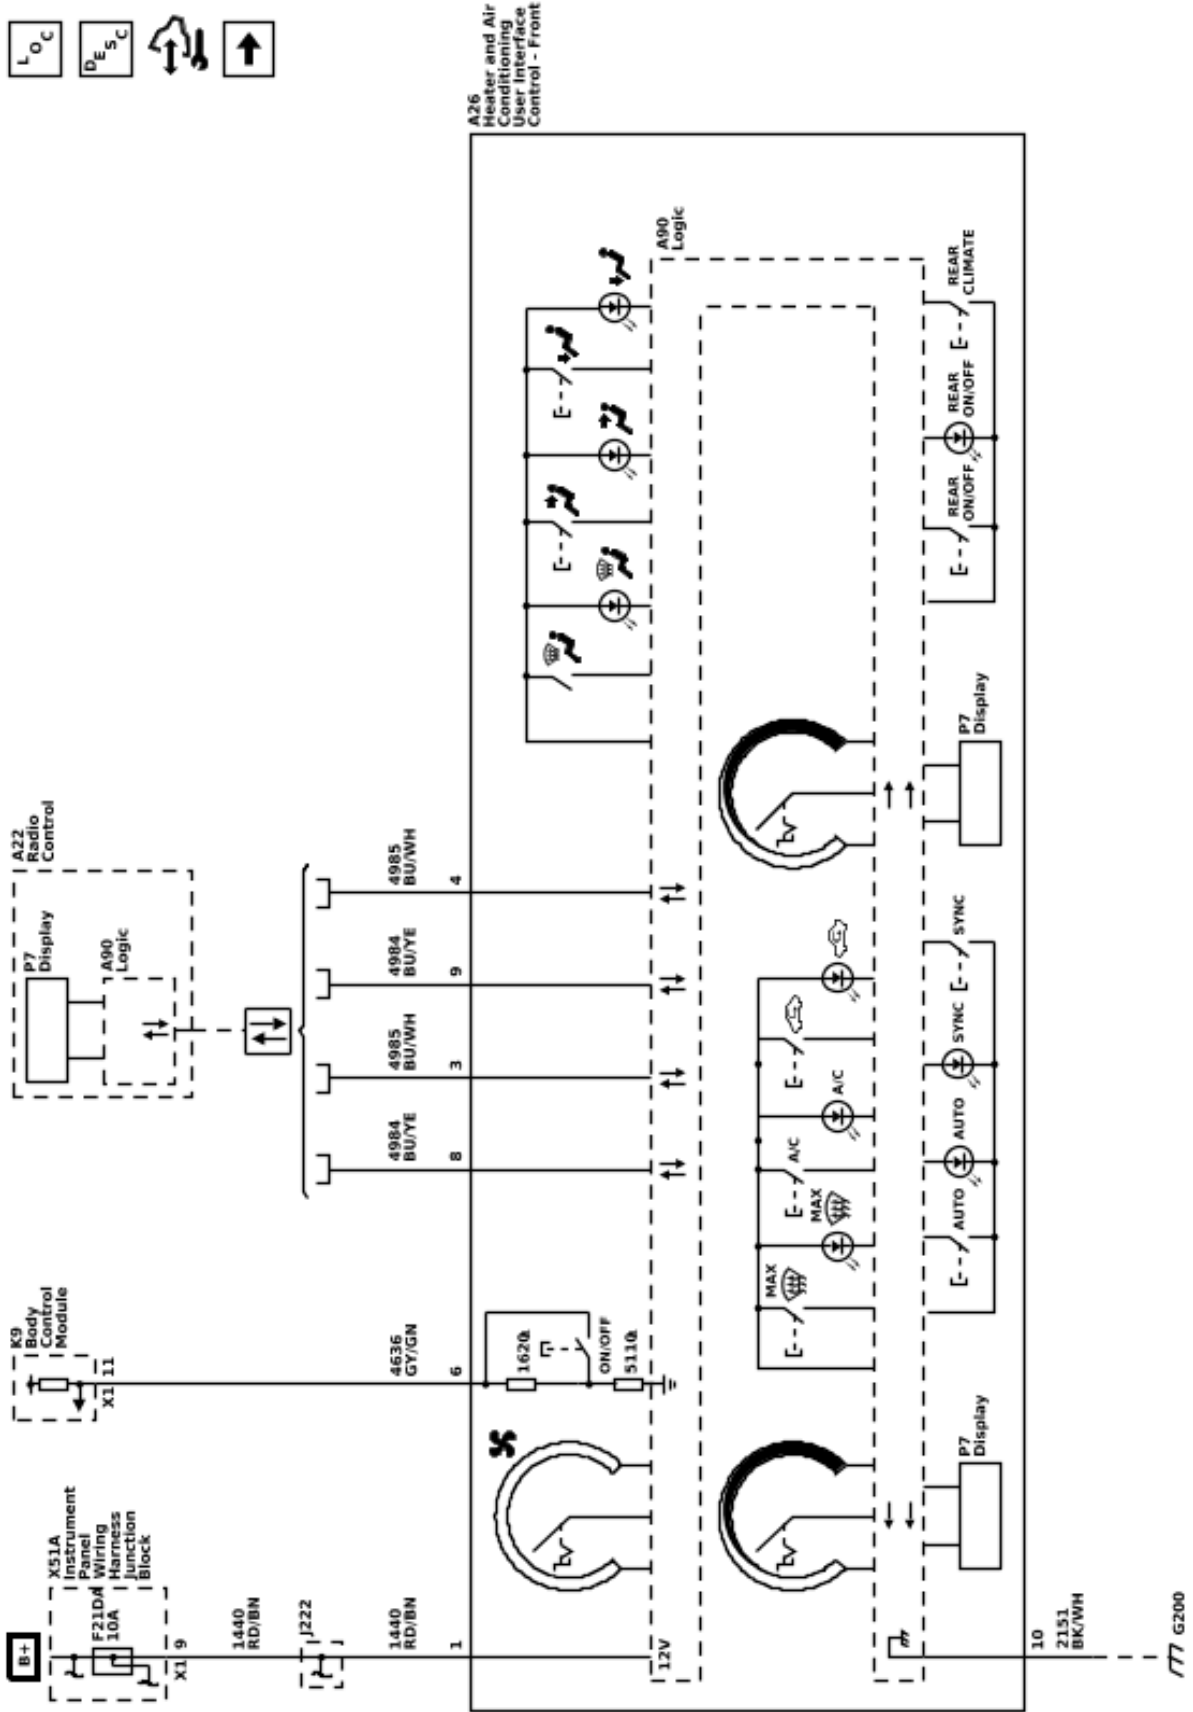


HVAC Schematics (A/C Compressor Controls)

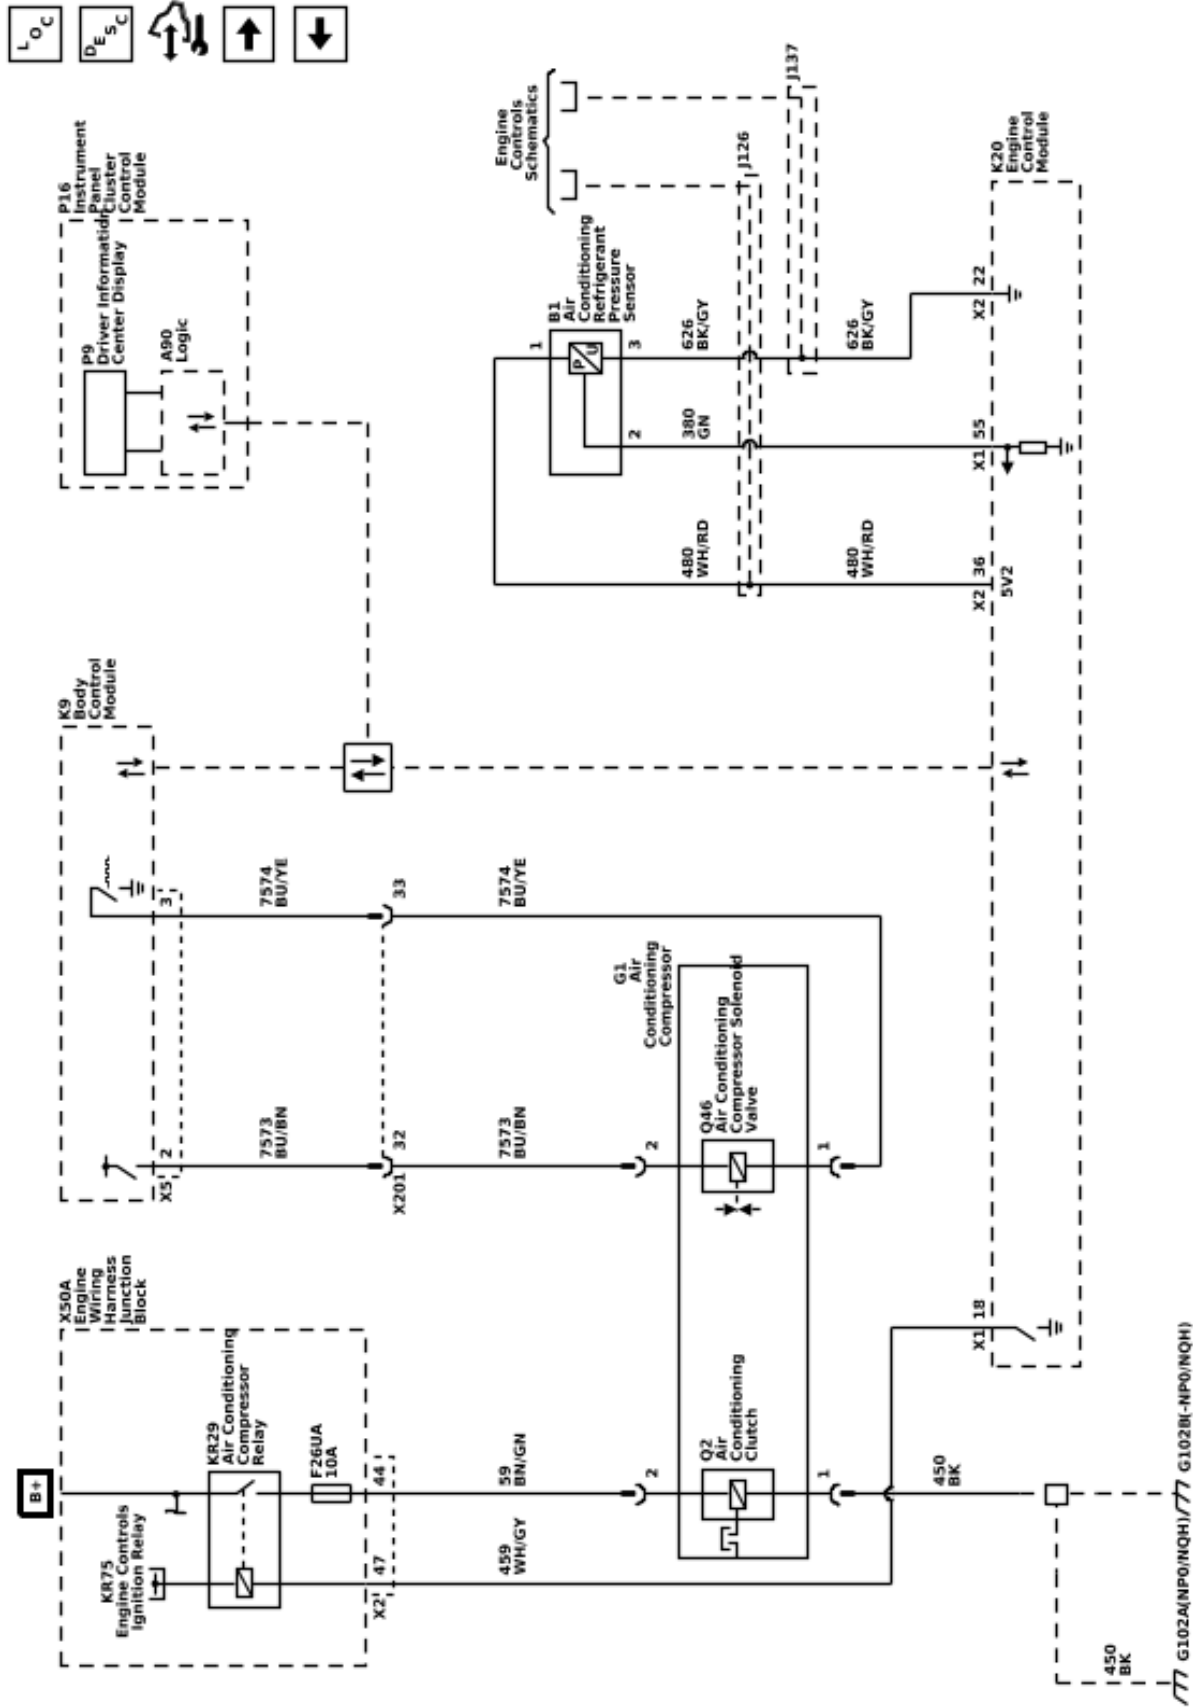


6331988




HVAC Schematics (Blower Motor)

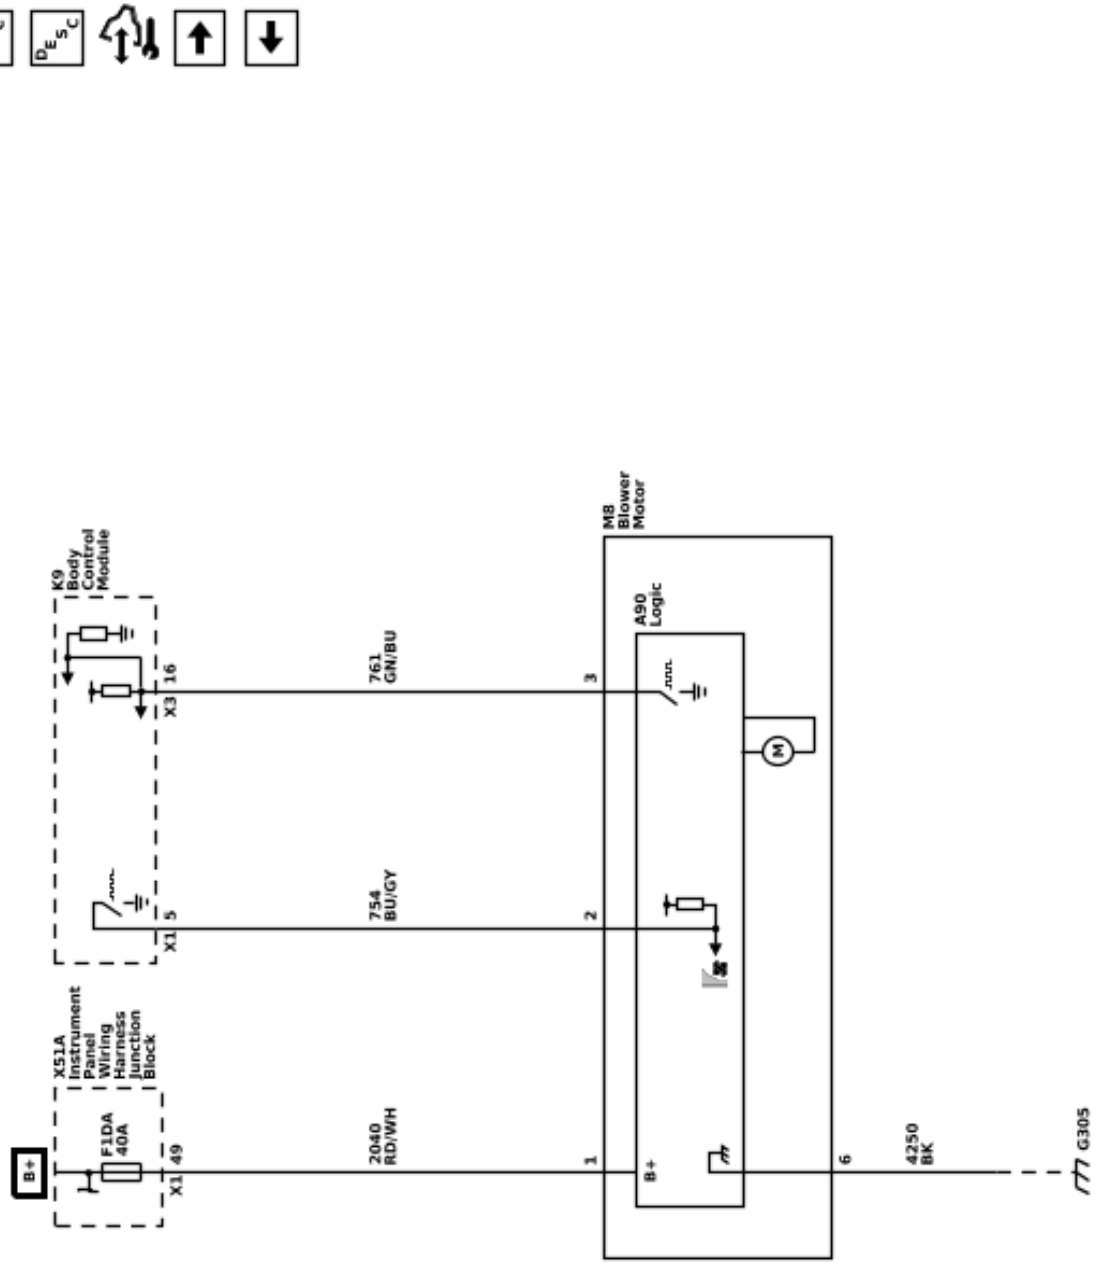

HVAC Schematics (Mode and Temperature Control Actuators)

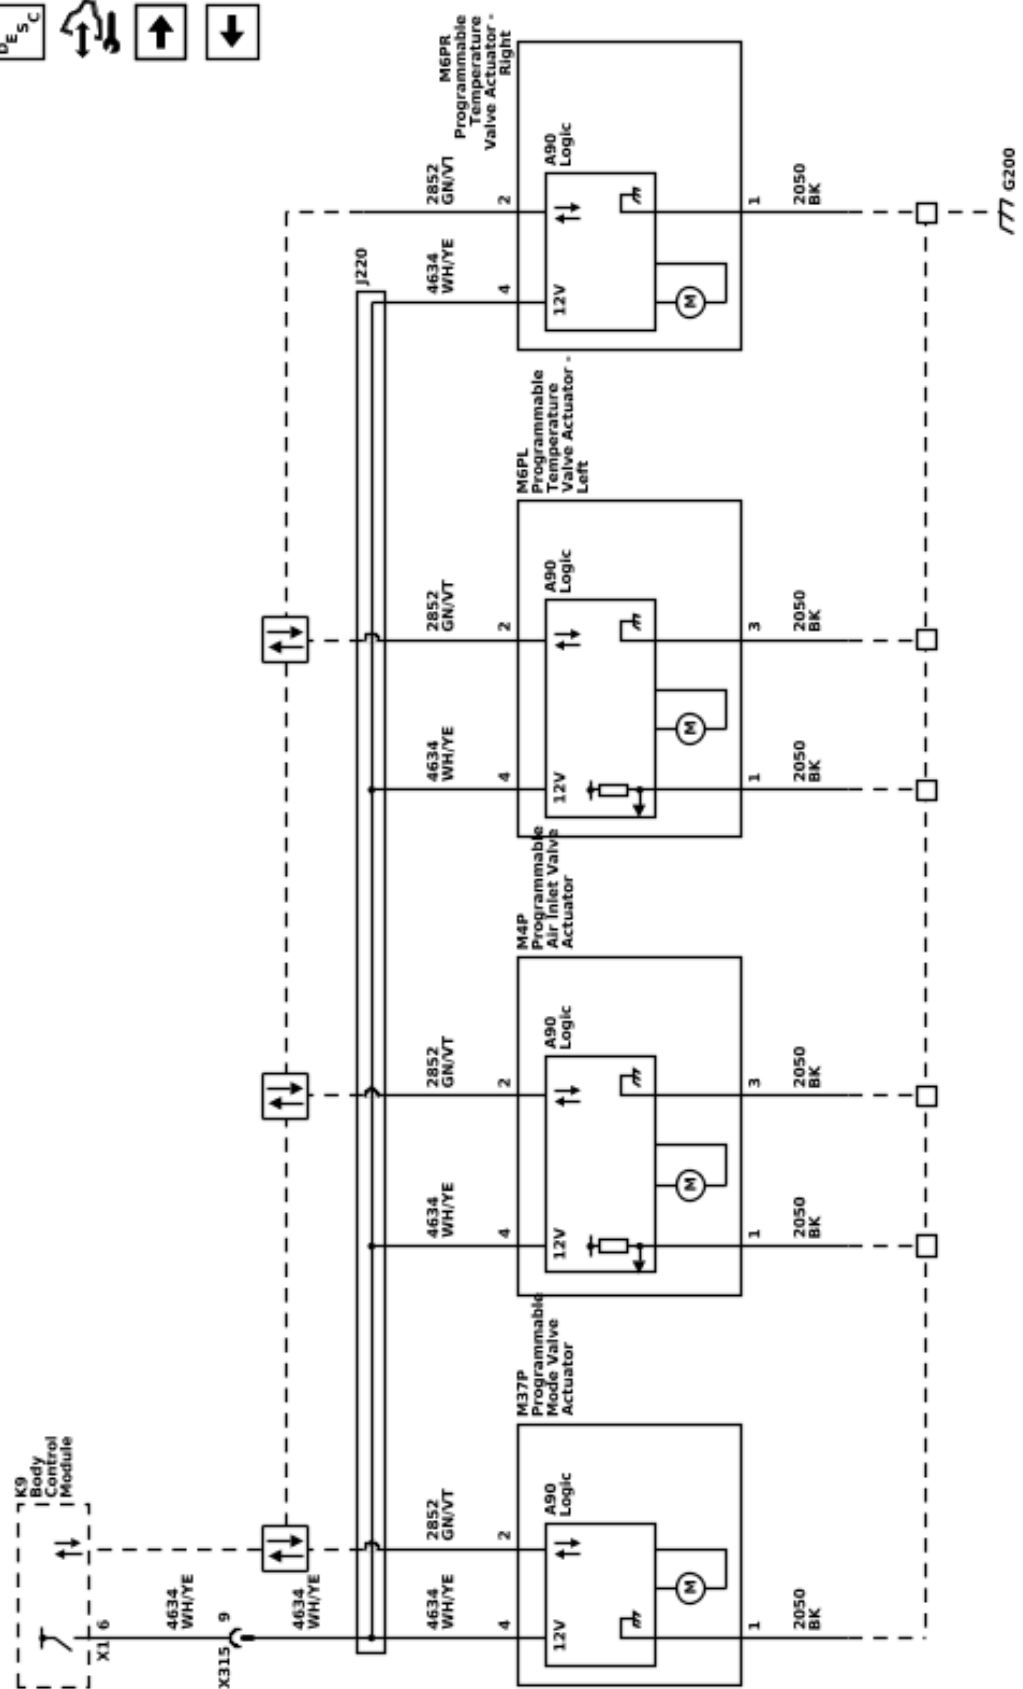

HVAC Schematics (Windshield Sensors and A/C Evaporator Temperature Sensor)

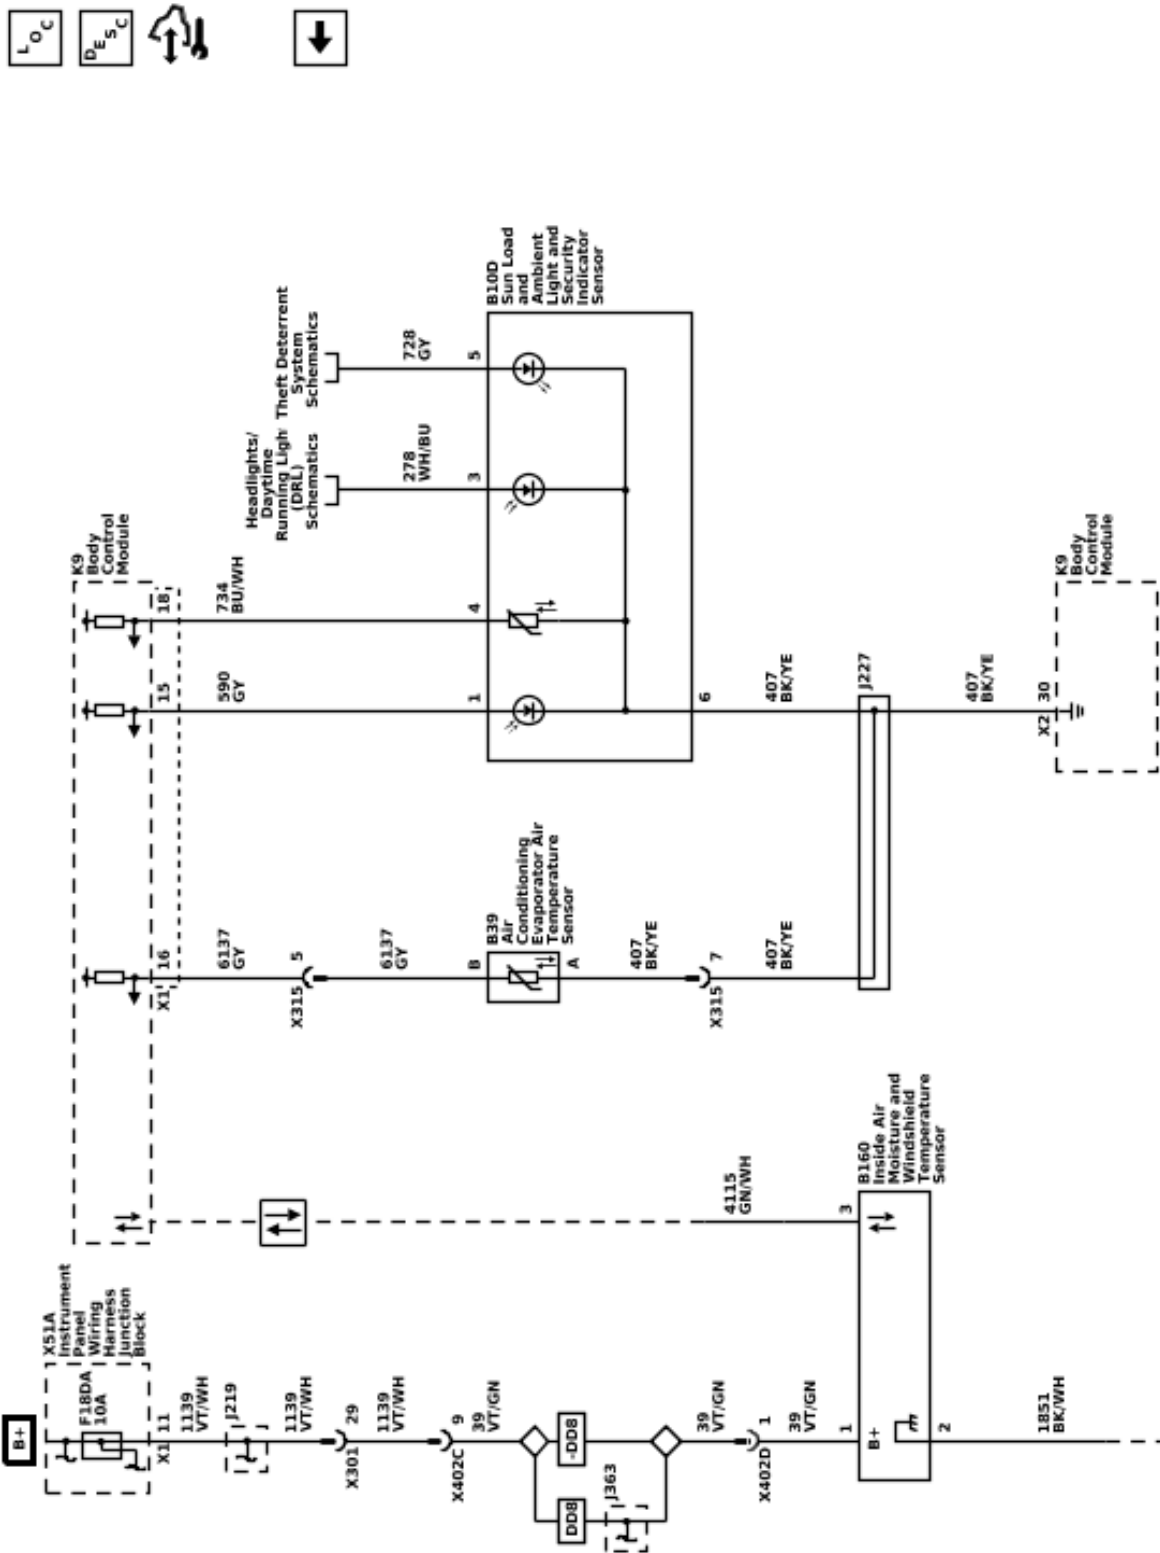

## Description and Operation

### Automatic HVAC Description and Operation

The air temperature and the air delivery description and operation are divided into the following:

- HVAC Control Components
- Air Speed and Blower Motor
- Air Delivery
- Heating and A/C Operation
- Recirculation Operation
- Automatic Operation
- Engine Coolant and A/C System Refrigerant

## HVAC Control Components

### K9 Body Control Module

The body control module (BCM) is a CAN device that interfaces between the operator and the HVAC system to maintain and control desired air temperature and air distribution settings. The BCM provides a device ON-Signal for the HVAC controls. The BCM provides blower, air delivery mode and air temperature control.

### A26 Heater and Air Conditioning User Interface Control - Front

The HVAC control contains all switches which are required to control the functions of HVAC and serve as interface between the operator and the BCM. The selected values are passed to the BCM via serial data.

### Actuators

Doors in the HVAC case assembly are used to control air flow. The BCM operates the doors through the use of actuators, with one actuator being used for each door. The system has the following air control doors and associated actuators: mode, left and right temperature, and recirculation.

Each actuator used in the system is a LIN device controlled by the BCM. The BCM supplies a 12 V reference voltage to the actuators, and ground is provided by the wiring harness. When the BCM sends a request message to the actuator, the actuator then operates internal stepper motors to move the door to the required position.

### Air Speed and M8 Blower Motor

The selected blower motor speed is passed from the controls to the BCM via serial data.

The motor uses a fused B+, ground, control, and speed output signal circuits to operate. The blower motor speed is controlled by increasing or decreasing the voltage drop on the ground side of the blower motor speed control circuit. The BCM provides a low side pulse width modulation (PWM) signal to the blower motor to request a specific motor speed. The blower motor internal circuitry translates the PWM signal and drives the motor accordingly.

The blower motor has a signal wire used to output a speed signal. The signal is monitored by the BCM. The BCM monitors the blower motor speed to modify the total commanded engine coolant flow rate, which is a percentage of available coolant flow sent to the heater

core for occupant comfort and windshield defrosting. The HVAC Blower Speed is monitored so that the ECM can optimize engine coolant flow for fuel economy and emissions.

### Afterblow

Afterblow is a feature that dries the evaporator core by operating the blower motor after the engine is turned OFF under certain conditions. This reduces the amount of moisture that can create undesirable odors. For additional information on afterblow, the default setting, and changing the setting, refer to Afterblow Configuration

### Duct Air Temperature

Physical duct air temperature sensors are not used with the front system. The air temperature in the air distribution ducts is calculated by the BCM based on the engine coolant temperature, coolant flow, evaporator temperature, outside air temperature, solar load, blower motor speed, air inlet door position, and temperature door position information. The BCM uses the values to calculate actuator position.

### B39 Air Conditioning Evaporator Air Temperature Sensor

The evaporator temperature sensor is a 2-wire negative temperature coefficient thermistor. The sensor operates within a temperature range of  $-40$  to  $+85^{\circ}\text{C}$  ( $-40$  to  $+185^{\circ}\text{F}$ ). The sensor is installed near the evaporator core to measure the air temperature exiting the core.

Based on vehicle operating conditions and operator settings, the HVAC software algorithms will determine a target evaporator air temperature. The operation of the compressor solenoid will be adjusted as needed to quickly reach and maintain the targeted temperature.

### B1 Air Conditioning Refrigerant Pressure Sensor

The A/C refrigerant pressure sensor is a 3-wire piezoelectric pressure transducer. A 5 V reference voltage, low reference, and signal circuits enable the sensor to operate. The A/C pressure signal can be between 0.2–4.8 V. When the A/C refrigerant pressure is low, the signal value is near 0 V. When the A/C refrigerant pressure is high, the signal value is near 5 V. The engine control module (ECM) converts the voltage signal to a pressure value. When pressure is too high or too low, the ECM will not allow the A/C compressor clutch to engage.

### G1 Air Conditioning Compressor

The A/C compressor uses a conventional belt driven magnetic clutch to engage and mechanically turn the compressor. When the A/C switch is pressed, the BCM sends an A/C request message to the ECM via serial data. If specific criteria is met, the ECM then grounds the A/C compressor clutch relay control circuit, which will switch the A/C compressor clutch relay. With the relay contacts closed, battery voltage is supplied to the permanently grounded A/C compressor clutch. The A/C compressor clutch will then be activated.

This A/C system utilizes a variable displacement solenoid valve to alter the amount of displacement created by the turning of the compressor. The BCM provides both battery voltage and a pulse width modulated ground to the Q46 Air Conditioning

Compressor Solenoid Valve. When the A/C switch is pressed, the BCM grounds the variable displacement solenoid using a (PWM) signal in order to determine the amount of compressor displacement. The performance of the A/C compressor is regulated based on cooling load.

### **B160 Inside Air Moisture and Windshield Temperature Sensor**

The windshield temperature and inside moisture sensor includes the relative humidity sensor, windshield temperature sensor and humidity sensing element temperature sensor.

This sensor assembly provides information about:

- Relative humidity level at windshield (passenger compartment side)
- Temperature of the windshield (passenger compartment side)
- Temperature of the humidity sensor element

The relative humidity sensor measures the relative humidity of the passenger compartment side of the windshield. It also detects the temperature of the windshield surface on the passenger compartment side. Both values are used as control inputs for the BCM application to calculate the fog risk on windshield compartment side and ability to reduce fuel consumption by decreasing A/C compressor power to a minimum without causing any fog. The sensor will also enable partial recirculation mode in order to improve heat-up performance of the passenger compartment under cold ambient temperature conditions without the risk of mist build-up on the windshield. The humidity sensor element temperature sensor supplies the temperature of the humidity sensor element. It is only needed if the thermal contact between the humidity sensing element and the inside windshield surface is not sufficient.

The sensor is a LIN device, and the sensor values are transmitted to the BCM via serial data.

When equipped with CE1, the sensor is part of the B117A Windshield Outside Moisture/Ambient Light and Humidity Sensor LIN windshield sensor array, and the windshield temperature and humidity values are transmitted to the BCM via serial data.

### **B10D Sun Load Temperature and Ambient Light and Security Indicator Sensor**

The ambient light/sunload sensor includes the solar sensor and passenger compartment temperature sensor.

The solar sensor is connected to a low reference and 5 V supply through the BCM. As the sunload increases, the sensor signal voltage also increases and vice versa. The signal provided to the BCM varies between 1.2–4.85 V.

The passenger compartment temperature sensor is a negative temperature coefficient thermistor, connected to a low reference and 5 V supply through the BCM. As the air temperature increases, the sensor resistance decreases. The signal varies between 0–5 V.

Bright or high intensity light can cause the vehicles interior temperature to increase. The HVAC system uses the sensor values and compensates for the increased temperature to maintain the system settings.

## **Air Delivery**

The BCM controls the distribution of air by the use of recirculation and mode door actuators. The modes that may be selected are:

- Defrost: windshield outlet
- Panel: dashboard outlets
- Floor: front footwell outlets
- Defog: defrost + floor
- Bi-level: panel + floor
- Tri-level: panel + defrost + floor
- Hi-level: panel + defrost

The desired air distribution mode can be selected with the air distribution switches at the HVAC control. The HVAC control delivers the values to the BCM via serial data. The BCM sends a request to the mode door actuator to move the door to the required position. Depending on the position of the door, air is distributed through various ducts leading to the outlets in the dash. When defrost airflow is active, the BCM will move the recirculation actuator to outside air, to aid in reducing window fogging. When defrost is selected the blower motor will be activated, regardless of the coolant temperature. A/C is available in all modes.

Refer to the owners manual for operation of the HVAC controls and mode selection.

### **Recirculation Operation**

The recirculation switch is integrated into the HVAC control. The selected recirculation setting is sent to the BCM via serial data. The BCM controls the air intake using the recirculation actuator. In recirculation mode the recirculation door is positioned to block outside air from entering and circulate the air within the vehicle. In outside air mode the recirculation door is positioned to route outside air into the vehicle.

Recirculation is only available if the defrost mode is not active. When the defrost mode is active, the recirculation actuator positions the recirculation door so that outside air is circulated to the windshield to reduce fogging.

In automatic mode the values of the sensors are used as inputs for the BCM to calculate the fog risk on the passenger compartment side of the windshield. The A/C compressor and the defrost mode may be activated to prevent or remove fog on the passenger compartment side of the windshield.

In automatic mode, a partial recirculation mode may be commanded to accelerate cabin heating or cooling and reduce energy usage. The recirculation indicator remains illuminated at all times, regardless of the actual operating mode determined by the system.

### **Heating and A/C Operation**

The purpose of the heating and A/C system is to provide heated and cooled air to the interior of the vehicle. The A/C system will also remove humidity from the interior and reduce windshield fogging. Regardless

## 5-12 HVAC - Automatic

of the temperature setting, the following may affect the rate that the HVAC system can achieve the desired temperature:

- Recirculation setting
- Difference between inside and desired temperature
- Blower motor speed setting
- Mode setting
- Dashboard outlet open/closed position

When the A/C switch or the AUTO switch is pressed, the HVAC control sends a signal to the BCM via serial data. The BCM evaluates this signal and sends an A/C request signal to the ECM via CAN-Bus. The ECM checks all preconditions before releasing and if all conditions are met sends a release signal back to the BCM. The A/C compressor is activated by the BCM. The BCM supplies battery voltage to the A/C compressor solenoid. When the A/C switch is pressed, the BCM provides a pulse width modulation (PWM) signal to the A/C compressor solenoid in order to command the performance of the A/C compressor. The performance of the A/C compressor is regulated using evaporator temperature and engine load.

The A/C indicator does not indicate the compressor is currently active. The A/C indicator shows that A/C has been requested and the system will activate the compressor as needed.

The following conditions must be met in order to activate the A/C compressor:

- Battery voltage is between 9–18 V
- Engine coolant temperature is less than 124°C (255°F)
- Engine speed is greater than 600 RPM
- Engine speed is less than 5 500 RPM
- A/C high side pressure is between 269–2 929 kPa (39–425 PSI)
- Throttle position is less than 100%
- Evaporator temperature is greater than 3°C (38°F)
- ECM does not detect immoderate torque load
- ECM does not detect insufficient idle quality
- The ambient temperature is above 1°C (34°F)

The sensor information is used by the ECM to determine the following:

- The A/C high side pressure
- An A/C system load on the engine
- An immoderate A/C high side pressure
- The heat load at the A/C condenser

The air streams into the passenger compartment through the heater core and the evaporator core. The air temperature actuator drives the mixed air door to direct the airflow. If the interior temperature should be increased, the mixed air door is put into the position in which more air streams through the heater core. If the interior temperature should be decreased, the mixed air door is put into the position in which more air streams through the evaporator core.

## Automatic Operation

In automatic operation, the BCM maintains the comfort level inside of the vehicle by controlling the A/C compressor solenoid, the blower motor, the air temperature actuators, mode actuator and recirculation actuator.

The automatic mode indicator shows that the system is in full automatic operation. If an individual setting is changed (excluding temperature), the automatic indicator will turn off, and that function will enter manual control. All other functions will remain under automatic control unless manually changed.

To put the HVAC system in automatic mode, the following is required:

1. The auto switch must be activated.
2. The air temperature switch must not be in either the full hot or full cold position.

Once the desired temperature is reached, the blower motor, mode, recirculation and temperature actuators automatically adjust to maintain the temperature selected. The BCM performs the following functions to maintain the desired air temperature:

- Monitors the following:
  - Ambient (outside) air temperature sensor
  - Passenger compartment temperature sensor
  - Calculated front duct air temperatures
  - Windshield temperature and inside moisture sensor
  - Evaporator temperature sensor
  - Ambient light/sunload sensor
- Regulate the blower motor speed
- Position the air temperature actuators
- Position the mode door actuators
- Position the recirculation actuator
- Control of the A/C compressor solenoid

When the temperature setting is set to full hot, the blower speed will increase gradually as the coolant warms to normal operating temperature. When normal engine operating temperature is reached the blower stays on high speed and the air temperature actuators stay in the full heat position.

When the temperature setting is set to full cold, the blower will immediately operate at high speed and the air temperature actuators move to full cold position. The mode actuator moves to the panel position and the recirculation actuator moves to the recirculation position.

Under cold ambient temperatures, the automatic HVAC system provides heat in the most efficient manner. The operator can select an extreme temperature setting but the system will not warm the vehicle any faster. Under warm ambient temperatures, the automatic HVAC system also provides air conditioning in the most efficient manner. Selecting an extreme cool temperature will not cool the vehicle any faster.

In automatic mode the values of the windshield temperature and inside moisture sensor are used as control inputs for the BCM application to calculate the fog risk on the passenger compartment side of the windshield and ability to reduce fuel consumption by decreasing A/C compressor power to a minimum

without causing any fog. The A/C compressor and the defrost mode are activated to prevent or remove fog on the passenger compartment side of the windshield. The sensor will also enable partial recirculation mode in order to improve heat-up performance of the passenger compartment under cold ambient temperature conditions without the risk of mist build-up on the windshield.

## **Engine Coolant and A/C System Refrigerant**


For information on engine coolant, coolant flow, A/C refrigerant, and the A/C refrigerant cycle, refer to [Heating and Air Conditioning System Description and Operation on page 5-3.](#)

# HVAC - Manual


## Schematic and Routing Diagrams





HVAC Schematics (Power, Ground, Serial Data and HVAC Controls)

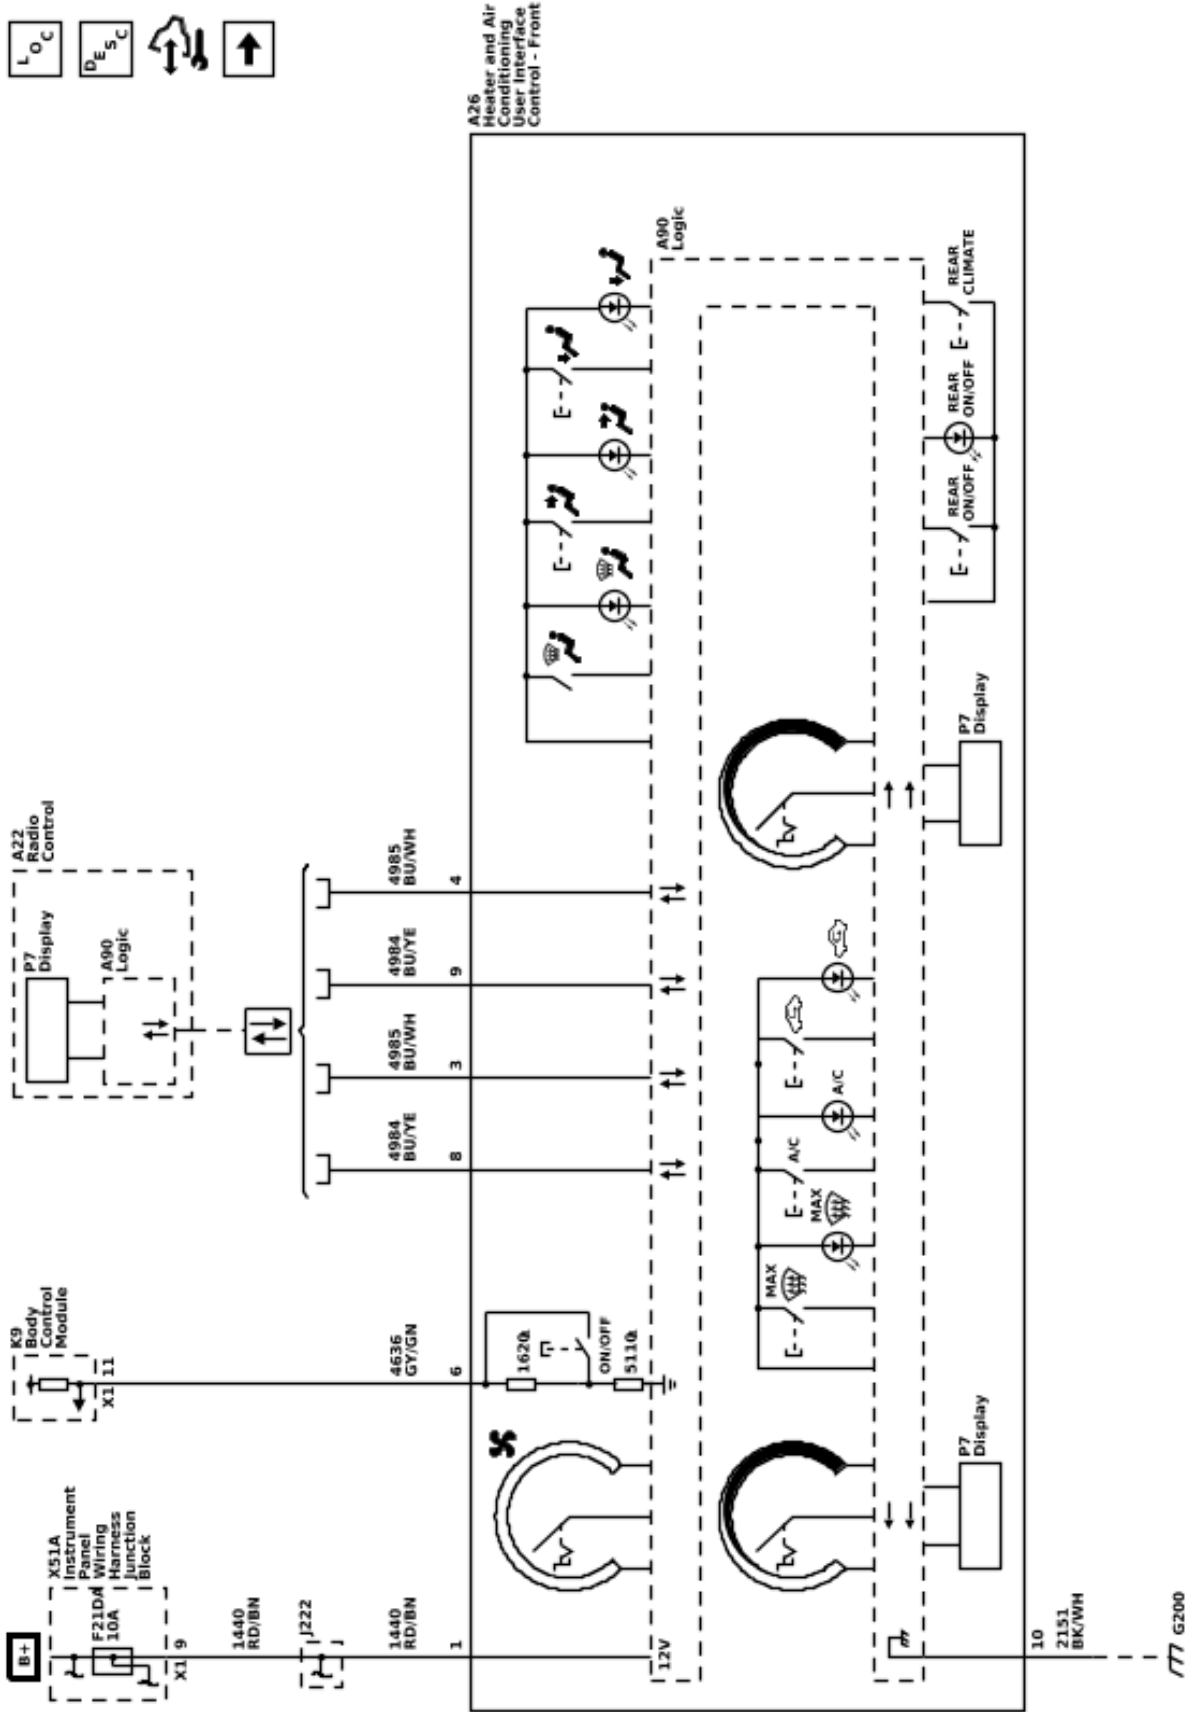


HVAC Schematics (A/C Compressor Controls)

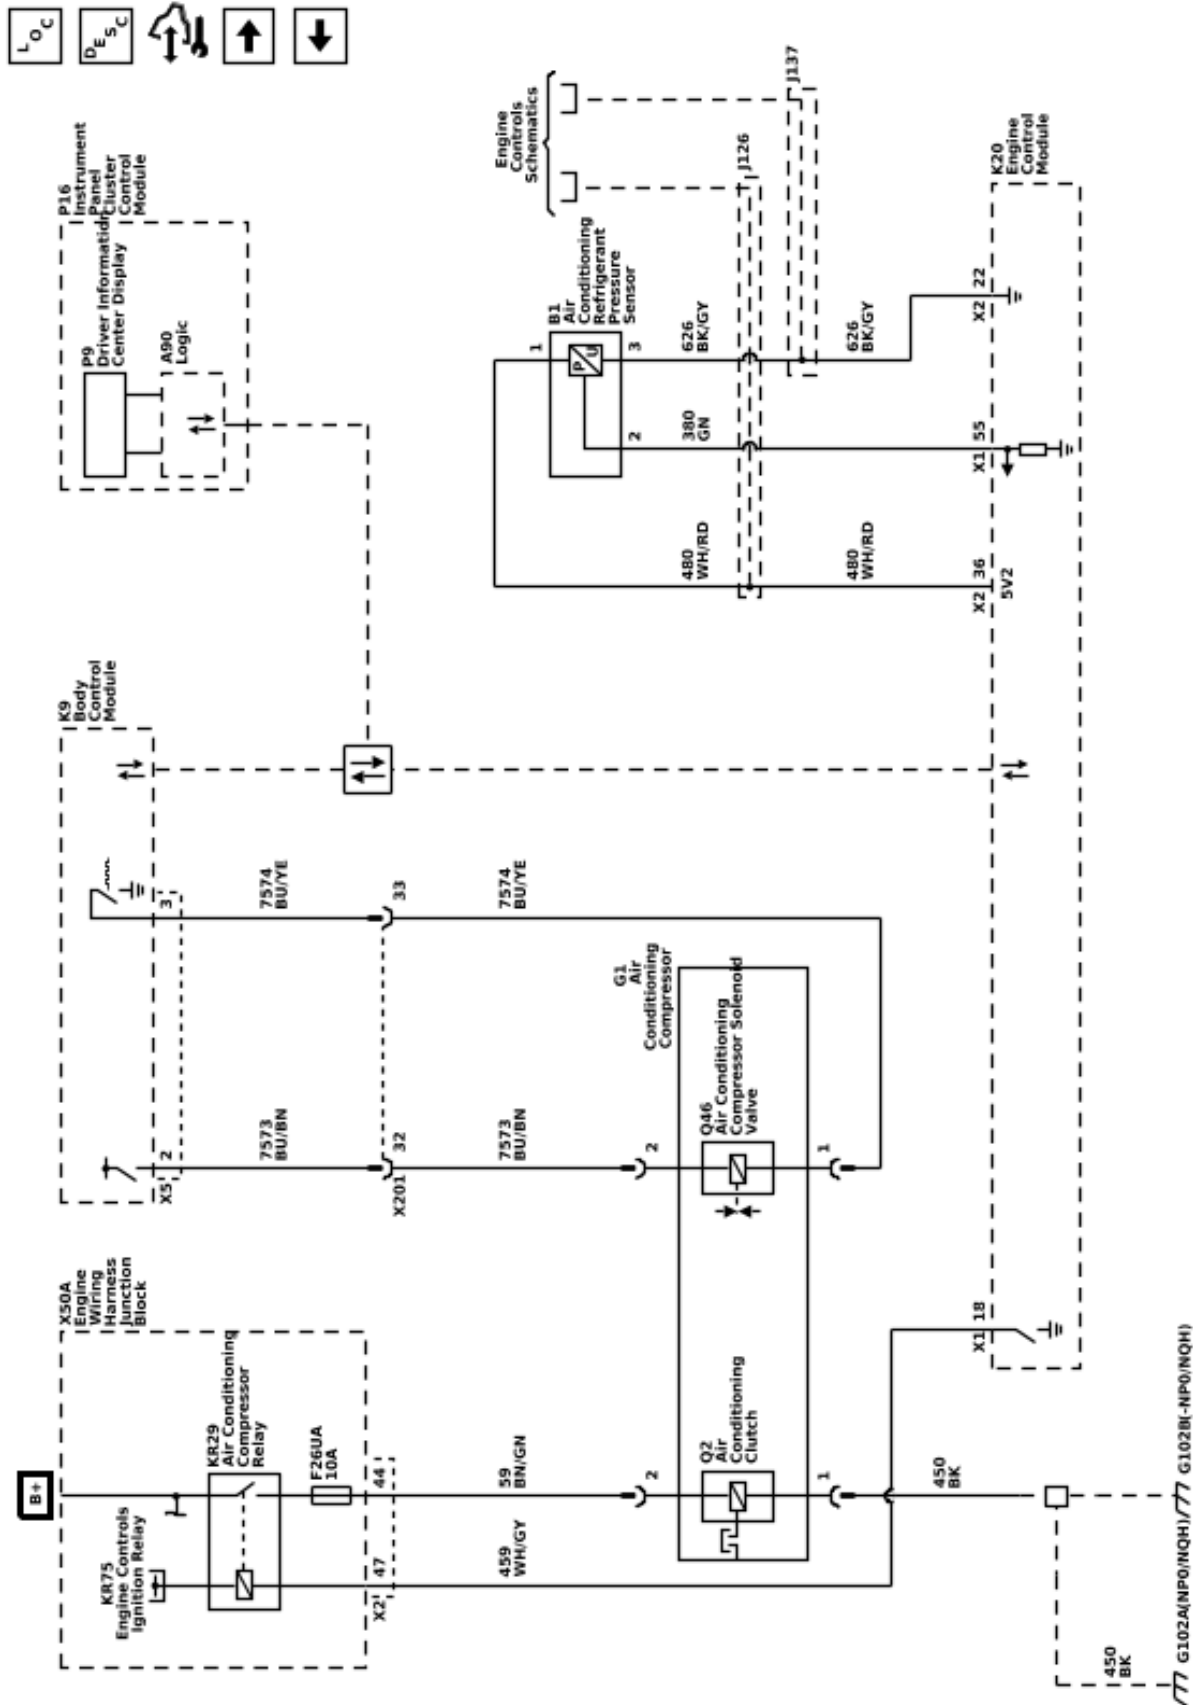


HVAC Schematics (Blower Motor)

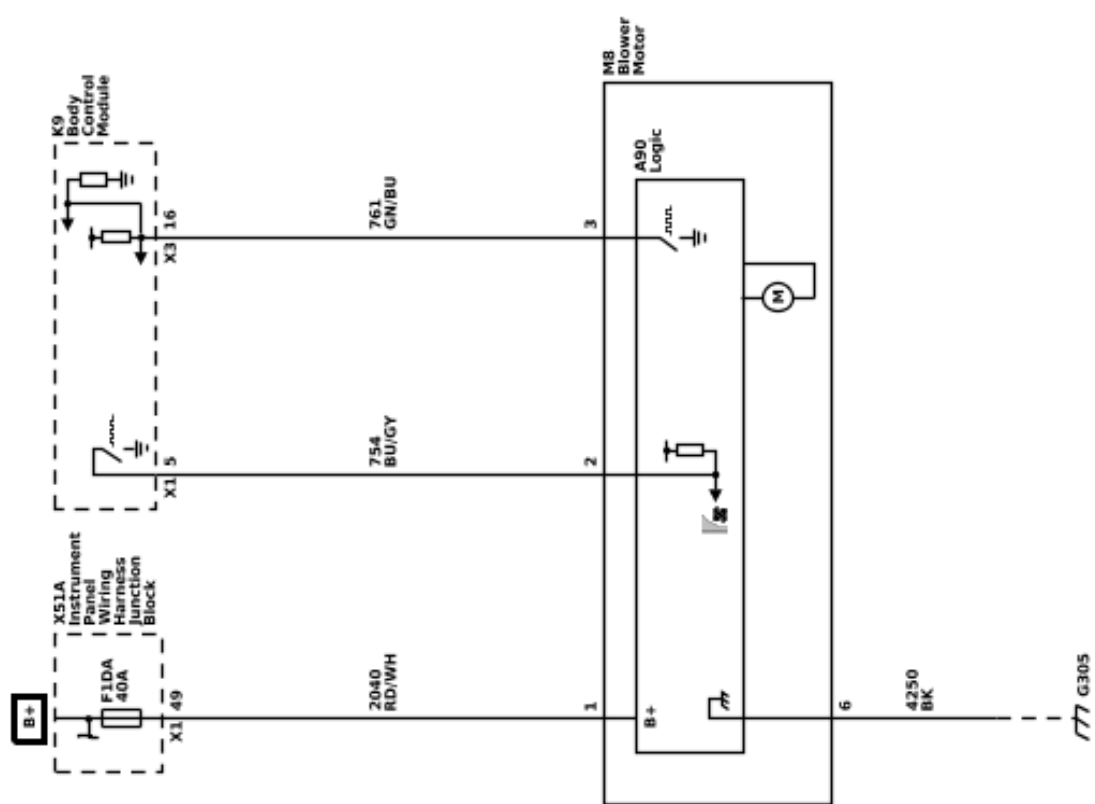

HVAC Schematics (Mode and Temperature Control Actuators)

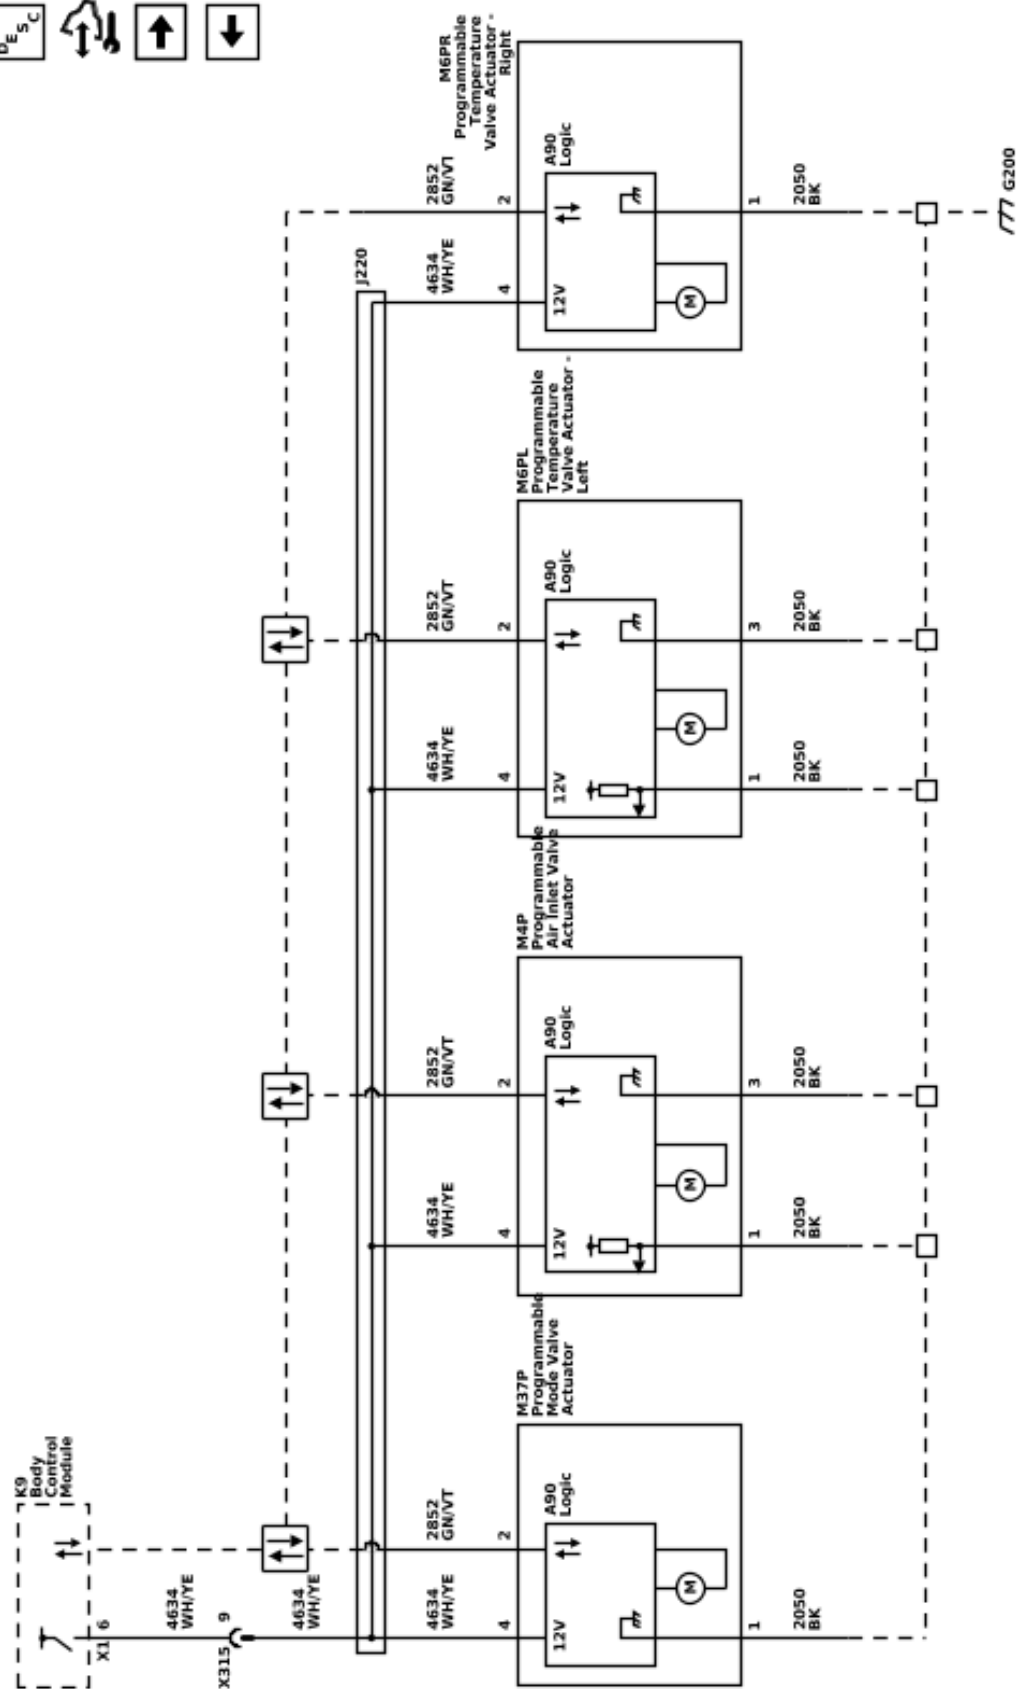

HVAC Schematics (Windshield Sensors and A/C Evaporator Temperature Sensor)

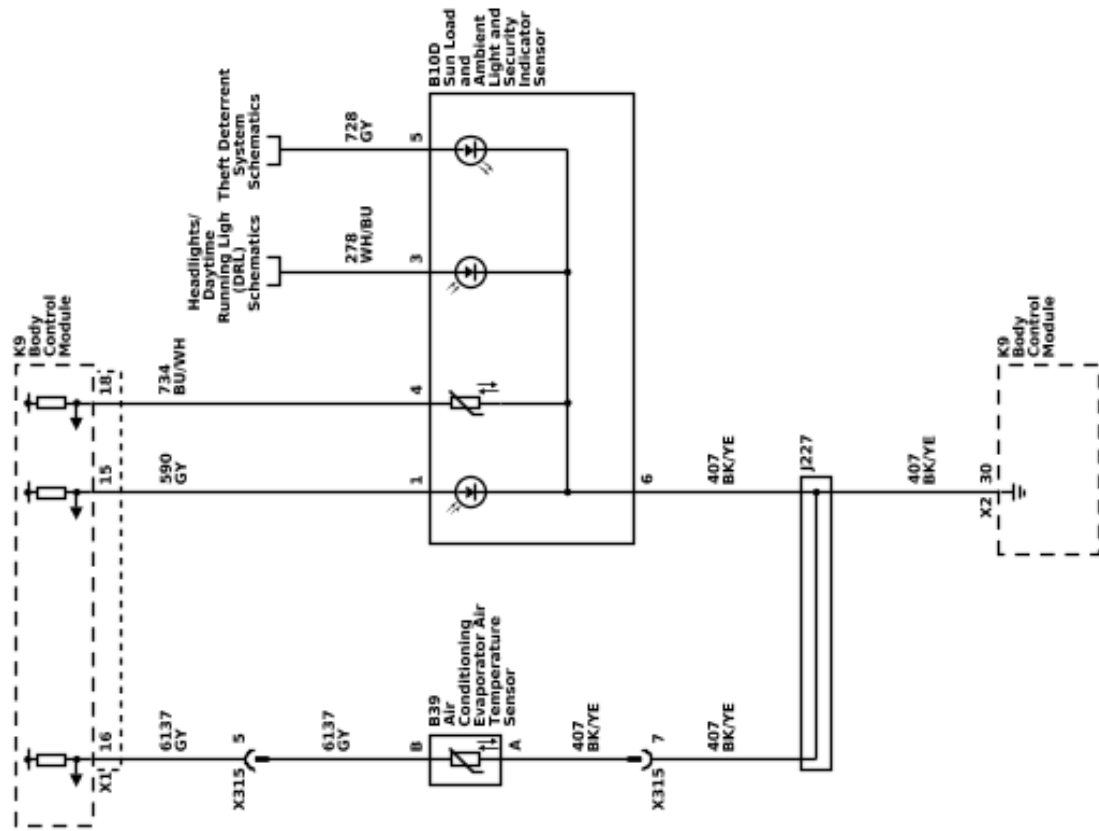

## Description and Operation

### Manual HVAC Description and Operation

The air temperature and the air delivery description and operation are divided into the following:

- HVAC Control Components
- Air Speed and Blower Motor
- Air Delivery
- Heating and A/C Operation
- Recirculation Operation
- Engine Coolant and A/C System Refrigerant

## HVAC Control Components

### K9 Body Control Module

The body control module (BCM) is a CAN device that interfaces between the operator and the HVAC system to maintain and control desired air temperature and air distribution settings. The BCM provides a device ON-Signal for the HVAC controls. The BCM provides blower, air delivery mode and air temperature control.

### A26 Heater and Air Conditioning User Interface Control - Front

The HVAC control contains all switches which are required to control the functions of HVAC and serve as interface between the operator and the BCM. The selected values are passed to the BCM via serial data.

### Actuators

Doors in the HVAC case assembly are used to control air flow. The BCM operates the doors through the use of actuators, with one actuator being used for each door. The system has the following air control doors and associated actuators: mode, temperature, and recirculation.

Each actuator used in the system is a LIN device controlled by the BCM. The BCM supplies a 12 V reference voltage to the actuators, and ground is provided by the wiring harness. When the BCM sends a request message to the actuator, the actuator then operates internal stepper motors to move the door to the required position.

### Air Speed and M8 Blower Motor

The selected blower motor speed is passed from the controls to the BCM via serial data.

The motor uses a fused B+, ground, control, and speed output signal circuits to operate. The blower motor speed is controlled by increasing or decreasing the voltage drop on the ground side of the blower motor speed control circuit. The BCM provides a low side pulse width modulation (PWM) signal to the blower motor to request a specific motor speed. The blower motor internal circuitry translates the PWM signal and drives the motor accordingly.

The blower motor has a signal wire used to output a speed signal. The signal is monitored by the BCM. The BCM monitors the blower motor speed to modify the total commanded engine coolant flow rate, which is a percentage of available coolant flow sent to the heater core for occupant comfort and windshield defrosting.

The HVAC Blower Speed is monitored so that the ECM can optimize engine coolant flow for fuel economy and emissions.

### Afterblow

Afterblow is a feature that dries the evaporator core by operating the blower motor after the engine is turned OFF under certain conditions. This reduces the amount of moisture that can create undesirable odors. For additional information on afterblow, the default setting, and changing the setting, refer to Afterblow Configuration

### B39 Air Conditioning Evaporator Air Temperature Sensor

The evaporator temperature sensor is a 2-wire negative temperature coefficient thermistor. The sensor operates within a temperature range of  $-40$  to  $+85^{\circ}\text{C}$  ( $-40$  to  $+185^{\circ}\text{F}$ ). The sensor is installed near the evaporator core to measure the air temperature exiting the core.

Based on vehicle operating conditions and operator settings, the HVAC software algorithms will determine a target evaporator air temperature. The operation of the compressor solenoid will be adjusted as needed to quickly reach and maintain the targeted temperature.

### B1 Air Conditioning Refrigerant Pressure Sensor

The A/C refrigerant pressure sensor is a 3-wire piezoelectric pressure transducer. A 5 V reference voltage, low reference, and signal circuits enable the sensor to operate. The A/C pressure signal can be between 0.2–4.8 V. When the A/C refrigerant pressure is low, the signal value is near 0 V. When the A/C refrigerant pressure is high, the signal value is near 5 V. The engine control module (ECM) converts the voltage signal to a pressure value. When pressure is too high or too low, the ECM will not allow the A/C compressor clutch to engage.

### G1 Air Conditioning Compressor

The A/C compressor uses a conventional belt driven magnetic clutch to engage and mechanically turn the compressor. When the A/C switch is pressed, the BCM sends an A/C request message to the ECM via serial data. If specific criteria is met, the ECM then grounds the A/C compressor clutch relay control circuit, which will switch the A/C compressor clutch relay. With the relay contacts closed, battery voltage is supplied to the permanently grounded A/C compressor clutch. The A/C compressor clutch will then be activated.

This A/C system utilizes a variable displacement solenoid valve to alter the amount of displacement created by the turning of the compressor. The BCM provides both battery voltage and a pulse width modulated ground to the Q46 Air Conditioning Compressor Solenoid Valve. When the A/C switch is pressed, the BCM grounds the variable displacement solenoid using a (PWM) signal in order to determine the amount of compressor displacement. The performance of the A/C compressor is regulated based on cooling load.

## Air Delivery

The BCM controls the distribution of air by the use of recirculation and mode door actuators. The modes that may be selected are:

- Defrost: windshield outlet
- Panel: dashboard outlets
- Floor: front footwell outlets
- Defog: defrost + floor
- Bi-level: panel + floor
- Tri-level: panel + defrost + floor
- Hi-level: panel + defrost

The desired air distribution mode can be selected with the air distribution switches at the HVAC control. The HVAC control delivers the values to the BCM via serial data. The BCM sends a request to the mode door actuator to move the door to the required position. Depending on the position of the door, air is distributed through various ducts leading to the outlets in the dash. When defrost airflow is active, the BCM will move the recirculation actuator to outside air, to aid in reducing window fogging. When defrost is selected the blower motor will be activated, regardless of the coolant temperature. A/C is available in all modes.

Refer to the owners manual for operation of the HVAC controls and mode selection.

### Recirculation Operation

The recirculation switch is integrated into the HVAC control. The selected recirculation setting is sent to the BCM via serial data. The BCM controls the air intake using the recirculation actuator. In recirculation mode the recirculation door is positioned to block outside air from entering and circulate the air within the vehicle. In outside air mode the recirculation door is positioned to route outside air into the vehicle.

Recirculation is only available if the defrost mode is not active. When the defrost mode is active, the recirculation actuator positions the recirculation door so that outside air is circulated to the windshield to reduce fogging.

## Heating and A/C Operation

The purpose of the heating and A/C system is to provide heated and cooled air to the interior of the vehicle. The A/C system will also remove humidity from the interior and reduce windshield fogging. Regardless of the temperature setting, the following may affect the rate that the HVAC system can achieve the desired temperature:

- Recirculation setting
- Difference between inside and desired temperature
- Blower motor speed setting
- Mode setting
- Dashboard outlet open/closed position

When the A/C switch or the AUTO switch is pressed, the HVAC control sends a signal to the BCM via serial data. The BCM evaluates this signal and sends an A/C request signal to the ECM via CAN-Bus. The ECM checks all preconditions before releasing and if all conditions are met sends a release signal back to the BCM. The A/C compressor is activated by the BCM.

The BCM supplies battery voltage to the A/C compressor solenoid. When the A/C switch is pressed, the BCM provides a pulse width modulation (PWM) signal to the A/C compressor solenoid in order to command the performance of the A/C compressor. The performance of the A/C compressor is regulated using evaporator temperature and engine load.

The A/C indicator does not indicate the compressor is currently active. The A/C indicator shows that A/C has been requested and the system will activate the compressor as needed.

The following conditions must be met in order to activate the A/C compressor:

- Battery voltage is between 9–18 V
- Engine coolant temperature is less than 124°C (255°F)
- Engine speed is greater than 600 RPM
- Engine speed is less than 5 500 RPM
- A/C high side pressure is between 269–2 929 kPa (39–425 PSI)
- Throttle position is less than 100%
- Evaporator temperature is greater than 3°C (38°F)
- ECM does not detect immoderate torque load
- ECM does not detect insufficient idle quality
- The ambient temperature is above 1°C (34°F)

The sensor information is used by the ECM to determine the following:

- The A/C high side pressure
- An A/C system load on the engine
- An immoderate A/C high side pressure
- The heat load at the A/C condenser

The air streams into the passenger compartment through the heater core and the evaporator core. The air temperature actuator drives the mixed air door to direct the airflow. If the interior temperature should be increased, the mixed air door is put into the position in which more air streams through the heater core. If the interior temperature should be decreased, the mixed air door is put into the position in which more air streams through the evaporator core.

## Engine Coolant and A/C System Refrigerant

For information on engine coolant, coolant flow, A/C refrigerant, and the A/C refrigerant cycle, refer to [Heating and Air Conditioning System Description and Operation on page 5-3](#).

**BLANK**



## Section 6

# Power and Signal Distribution



<b>Data Communications</b> .....	<a href="#">6-3</a>
<b>Schematic and Routing Diagrams</b> .....	<a href="#">6-3</a>
Data Communication Schematics .....	<a href="#">6-4</a>
Body Control System Schematics .....	<a href="#">6-20</a>
<b>Description and Operation</b> .....	<a href="#">6-23</a>
Data Link Communications Description and Operation .....	<a href="#">6-23</a>
<b>Electrical Component and Inline Harness</b>	
<b>Connector End Views</b> .....	<a href="#">6-26</a>
<b>Component Locator</b> .....	<a href="#">6-26</a>
Electrical Center Identification Views .....	<a href="#">6-26</a>
Component Connector End Views .....	<a href="#">6-63</a>
Inline Harness Connector End Views .....	<a href="#">6-413</a>
<b>Electrical Component Locator and Harness Routing Views</b> .....	<a href="#">6-512</a>
<b>Schematic and Routing Diagrams</b> .....	<a href="#">6-512</a>
Harness Routing Views .....	<a href="#">6-512</a>
<b>Power Outlets</b> .....	<a href="#">6-541</a>
Cigar Lighter/Power Outlet Schematics .....	<a href="#">6-542</a>
<b>Description and Operation</b> .....	<a href="#">6-549</a>
Mobile Device Wireless Charger Description and Operation .....	<a href="#">6-549</a>
Power Outlets Description and Operation .....	<a href="#">6-549</a>
<b>Wiring Systems and Power Management</b> .....	<a href="#">6-552</a>
Power Mode Description and Operation .....	<a href="#">6-552</a>
Retained Accessory Power Description and Operation .....	<a href="#">6-556</a>

**BLANK**



# Data Communications

## Schematic and Routing Diagrams


Data Communication Schematics (Serial Data Gateway Module and Data Link Connector Power and Ground)

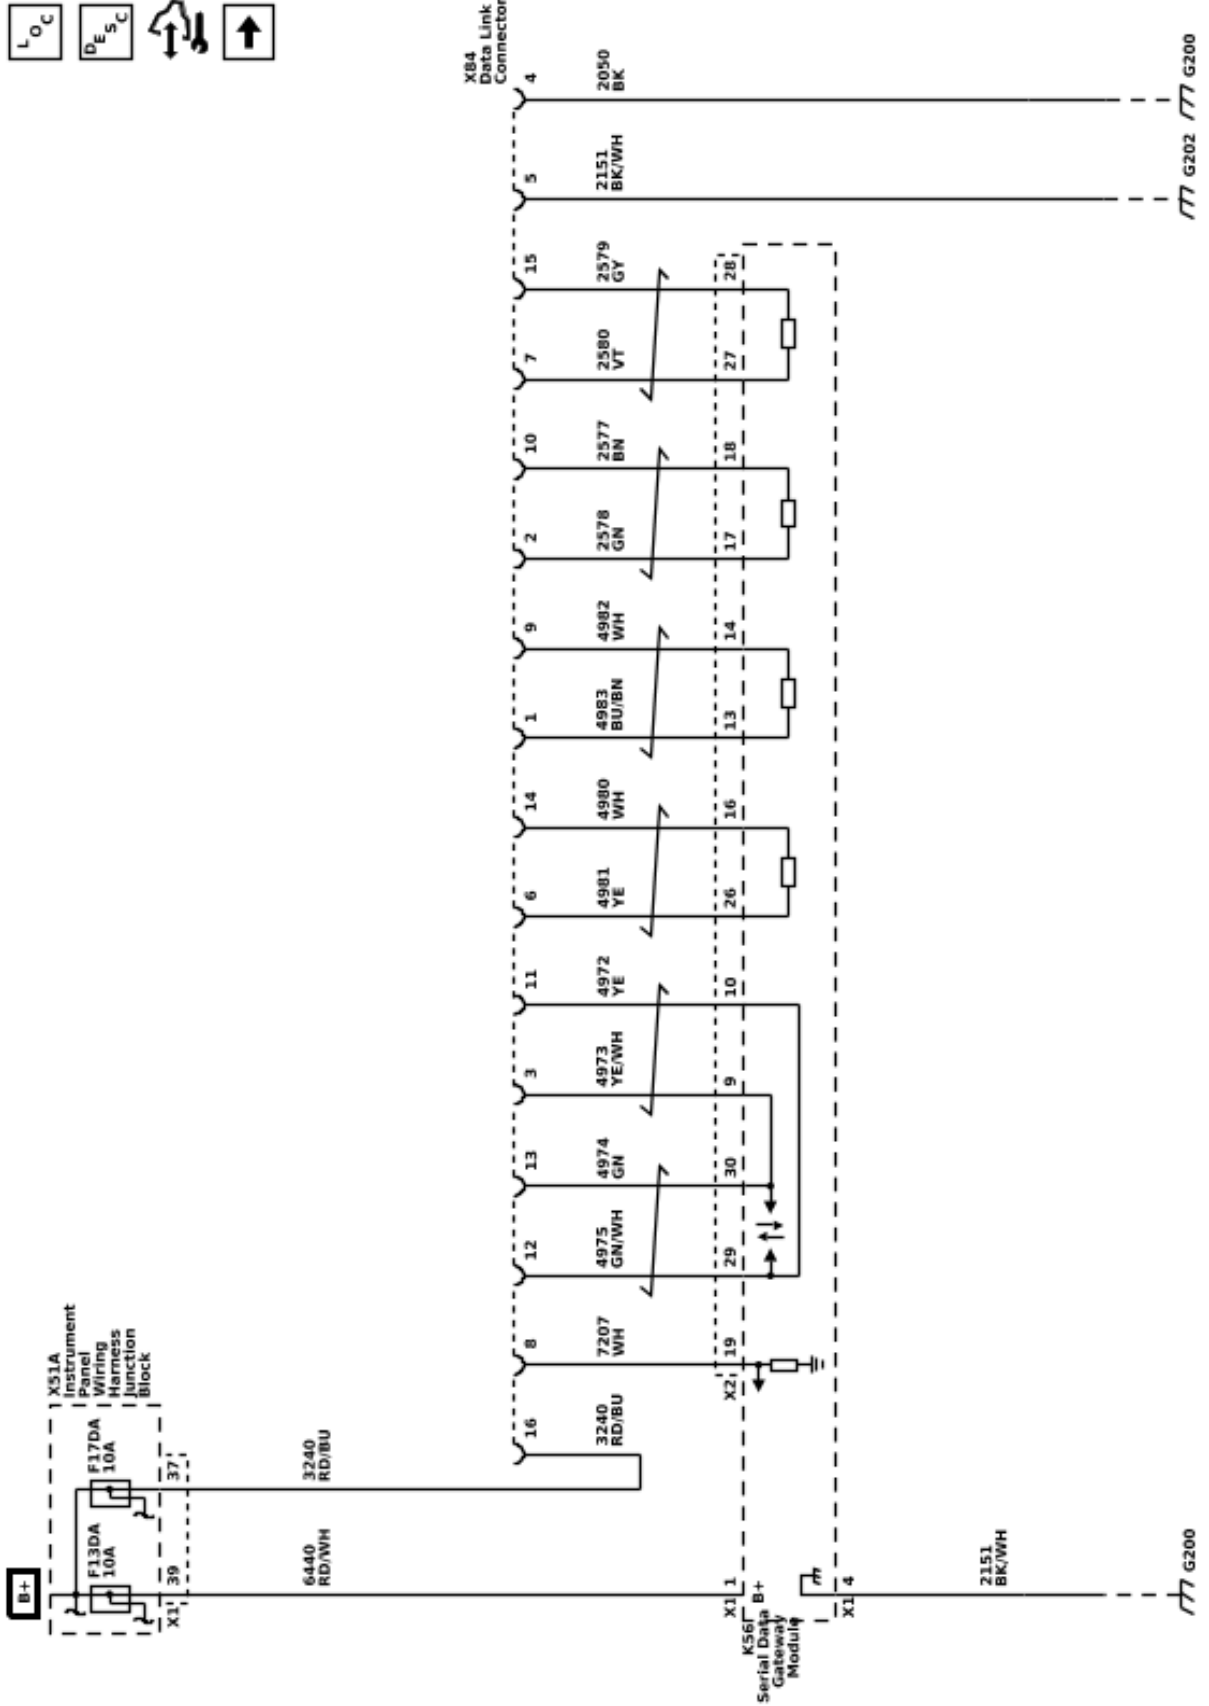


Data Communication Schematics (CAN 1)

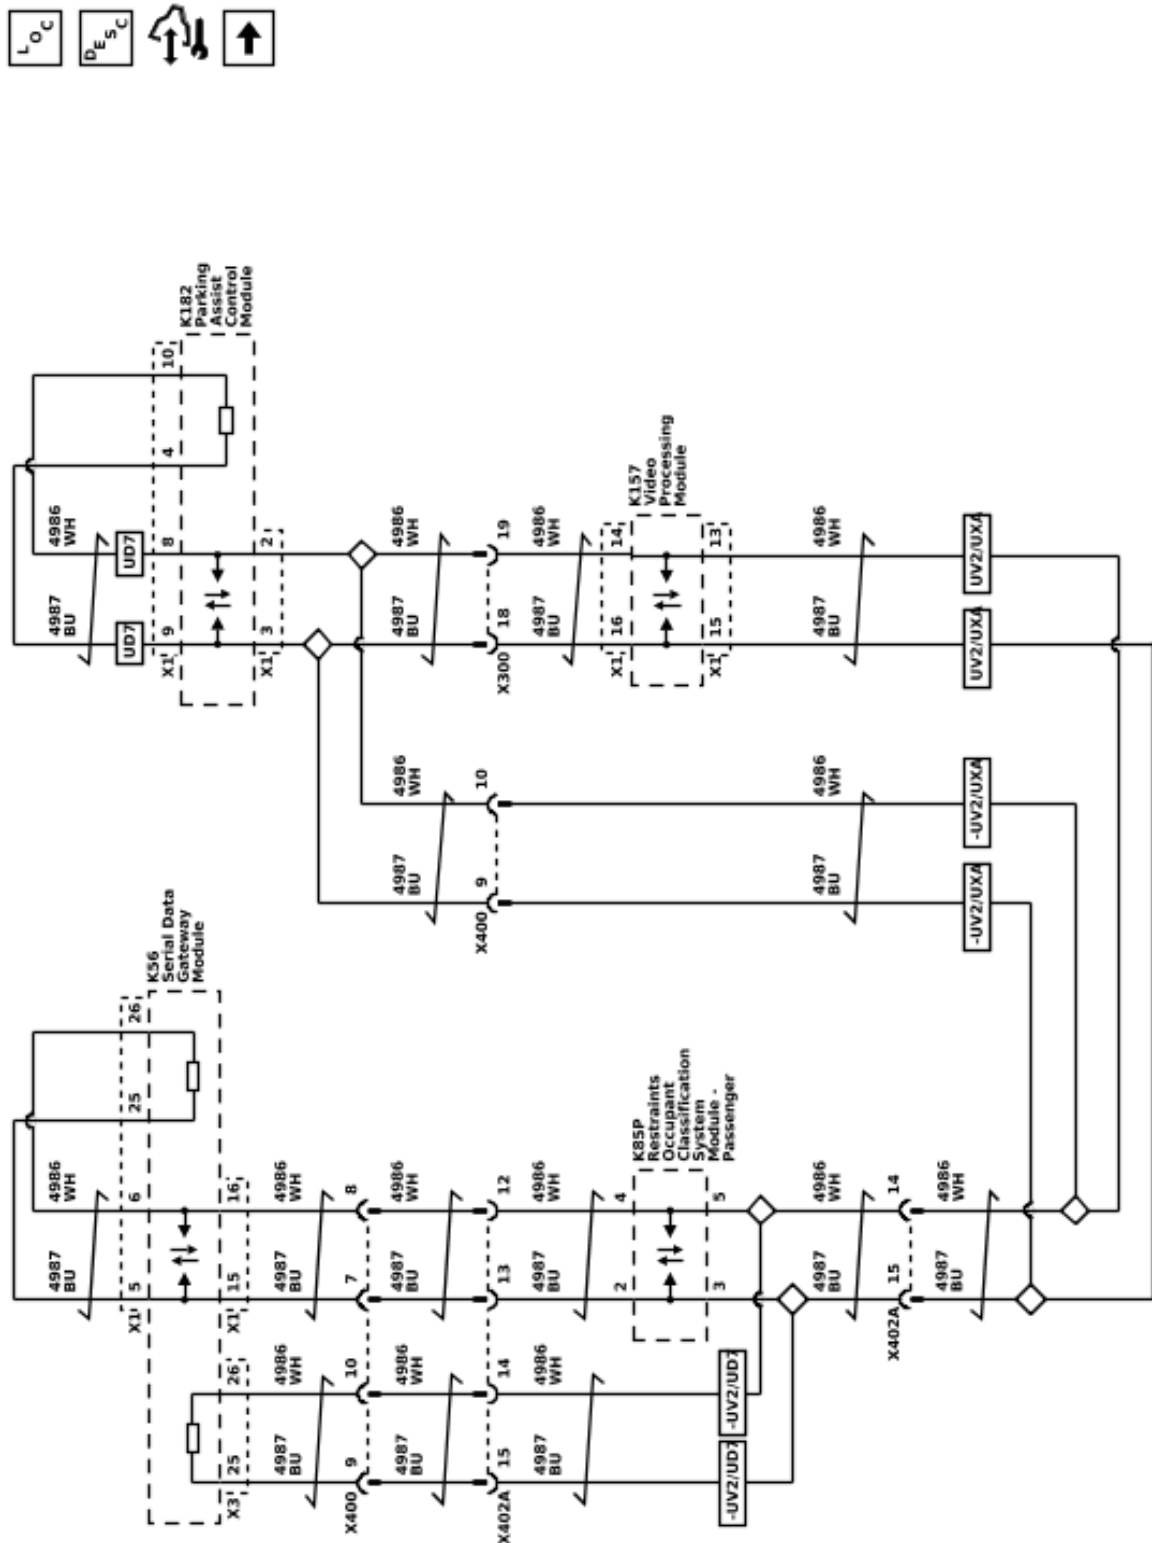


Data Communication Schematics (CAN 2)

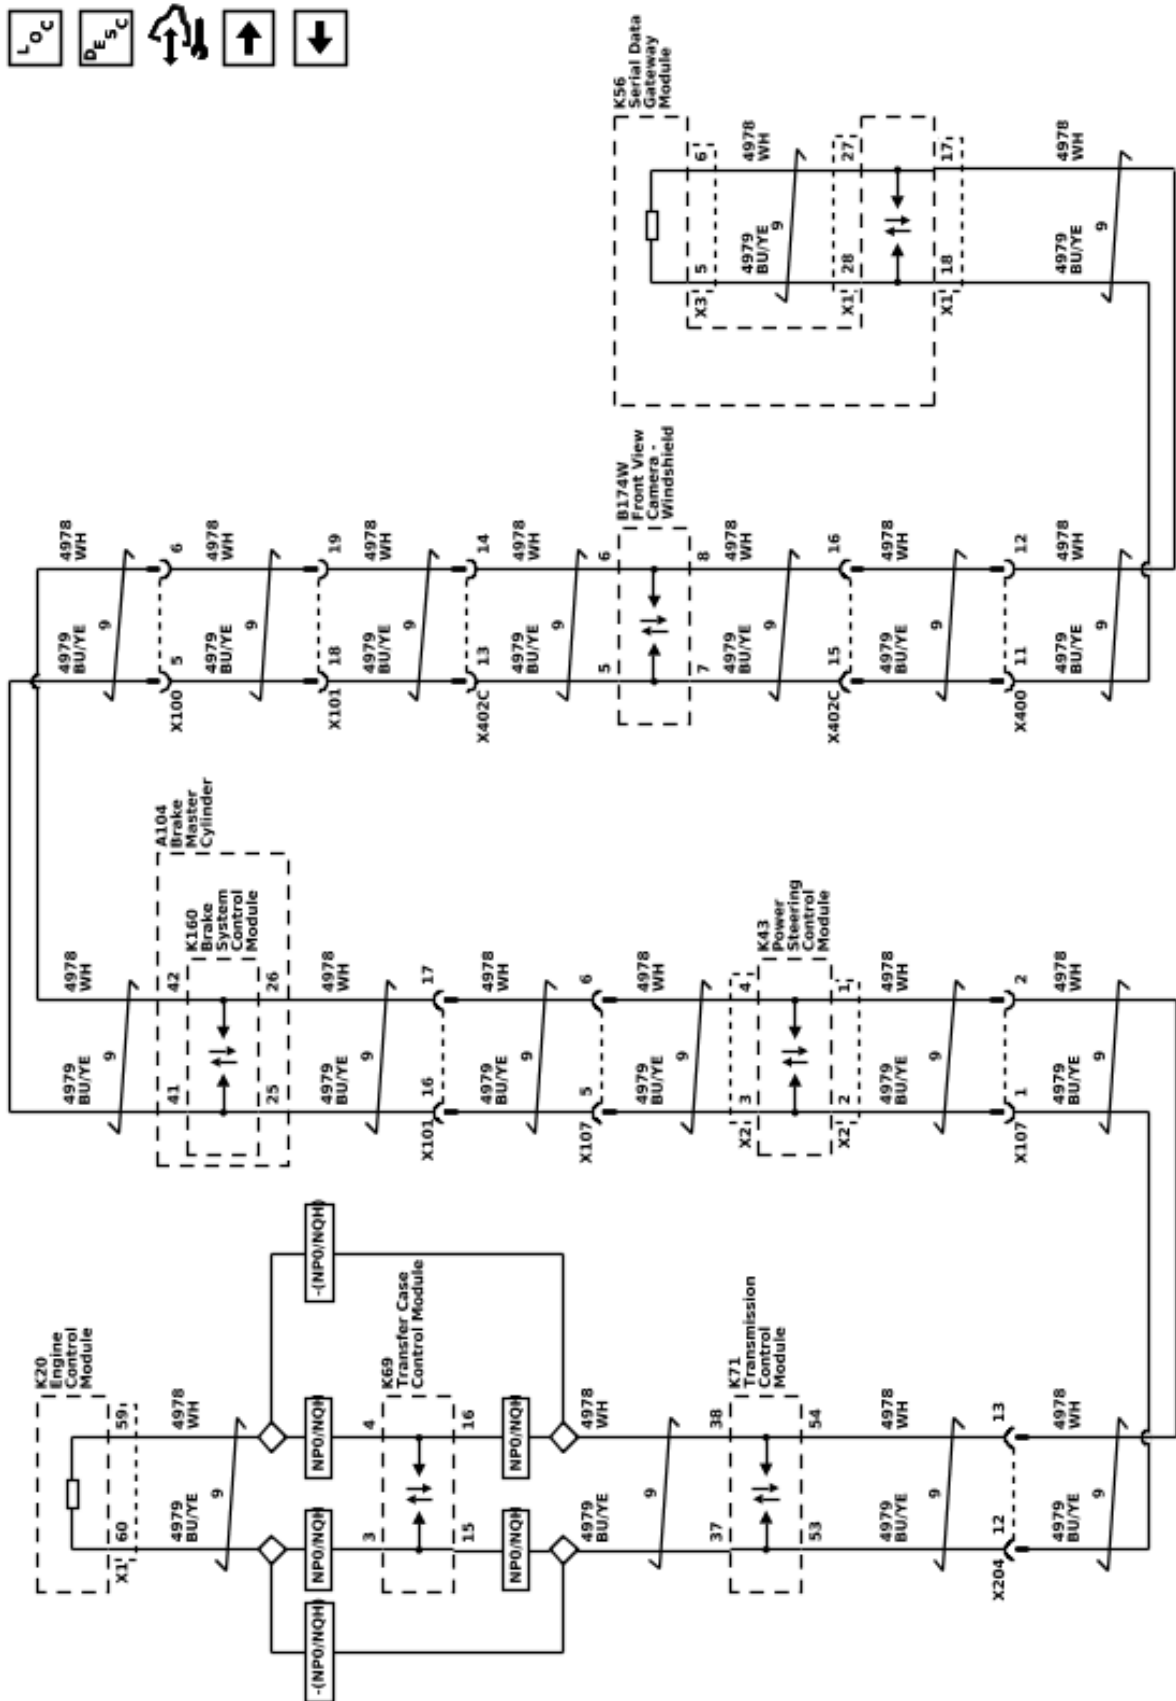

Data Communication Schematics (CAN 3)

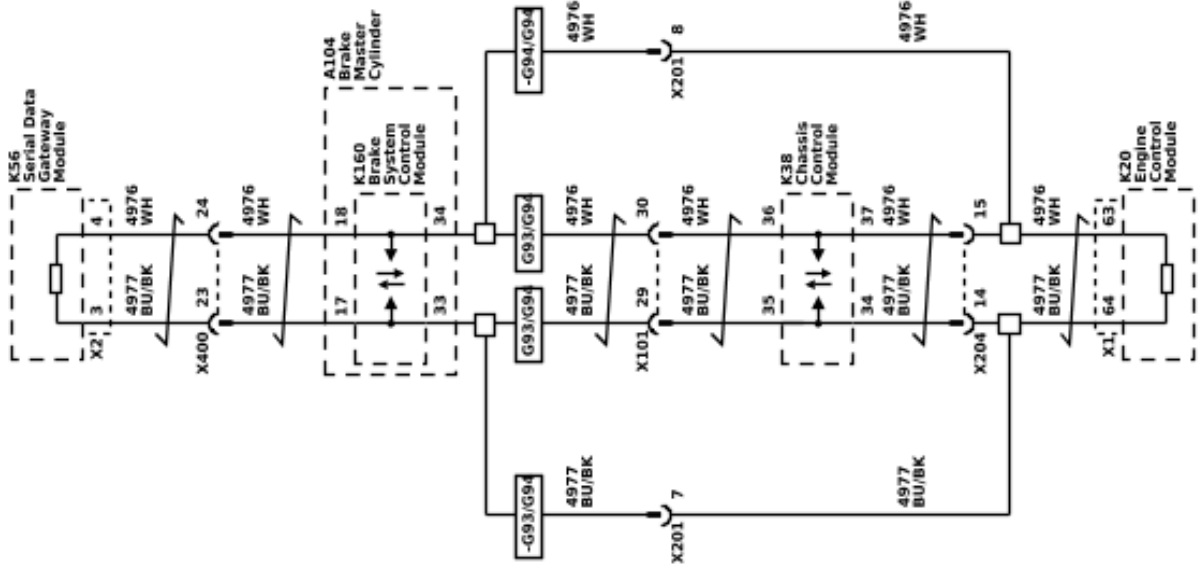


Data Communication Schematics (CAN 4)

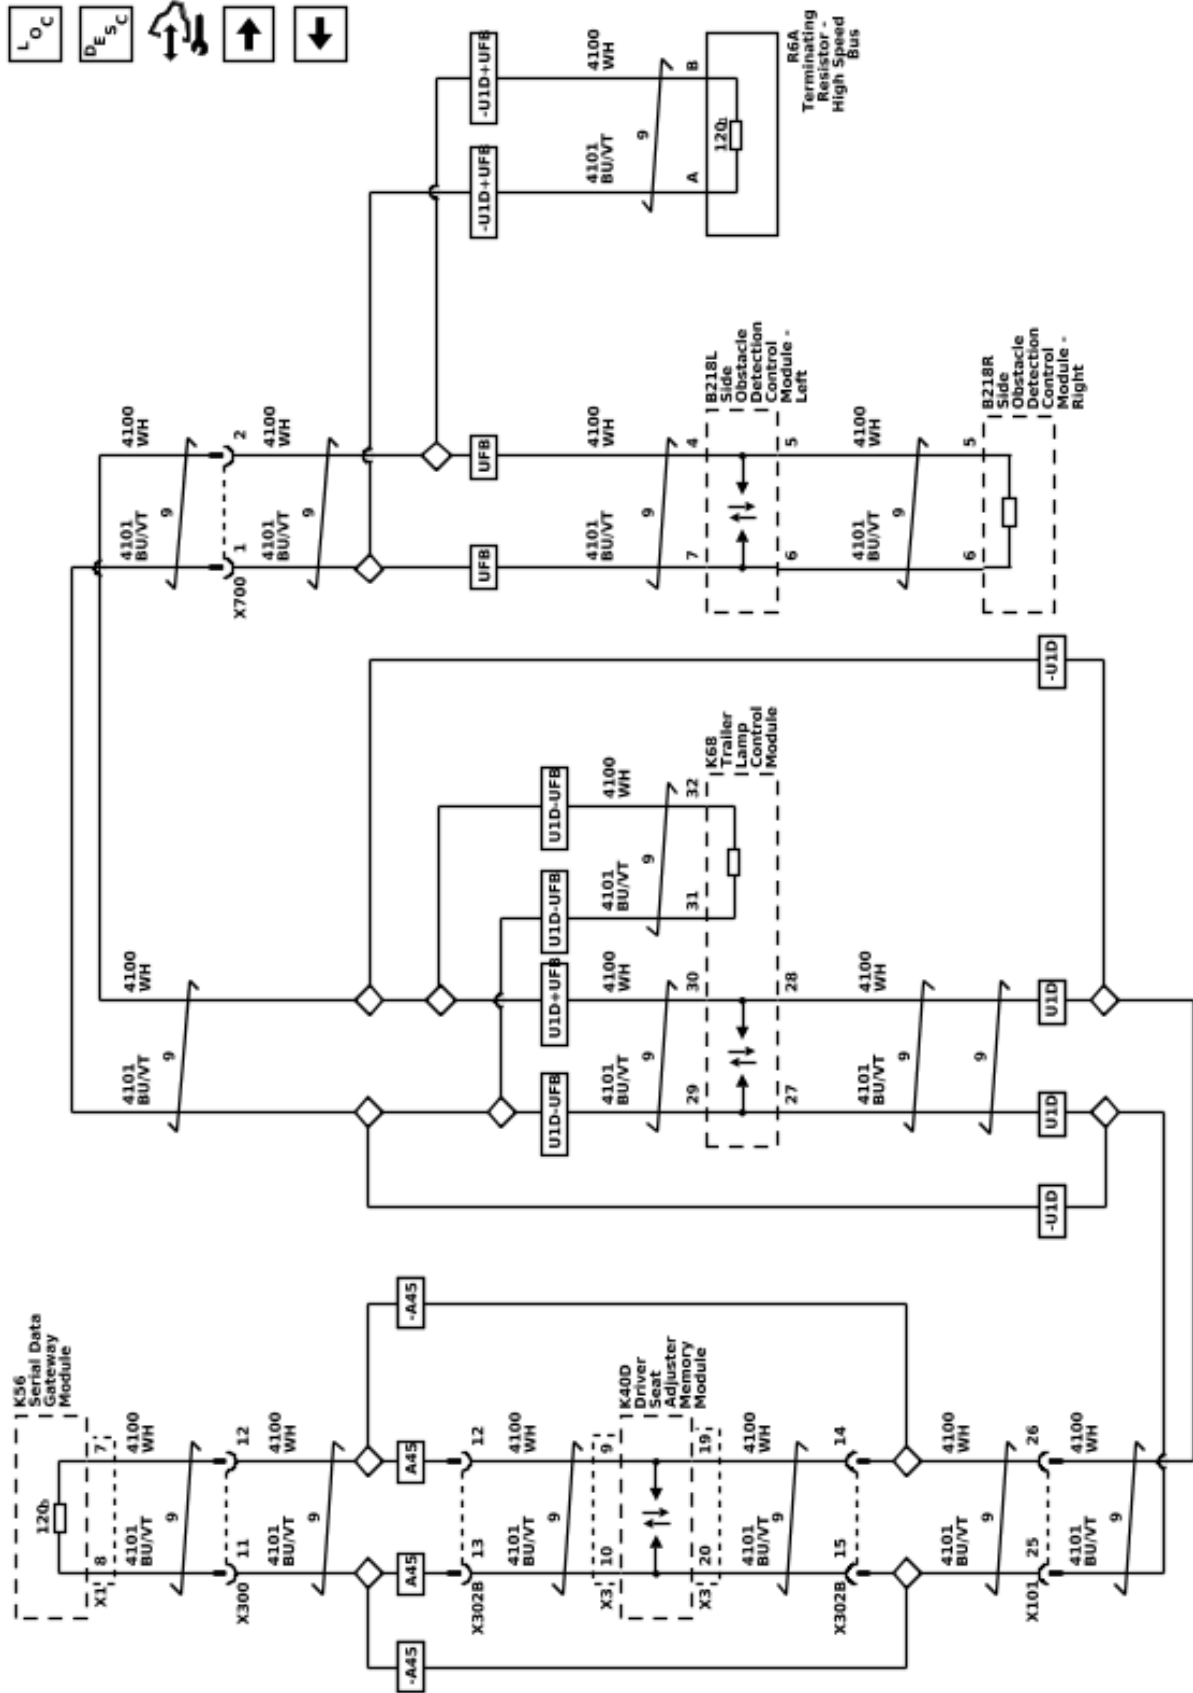





Data Communication Schematics (CAN 5 (K4C / UQA))

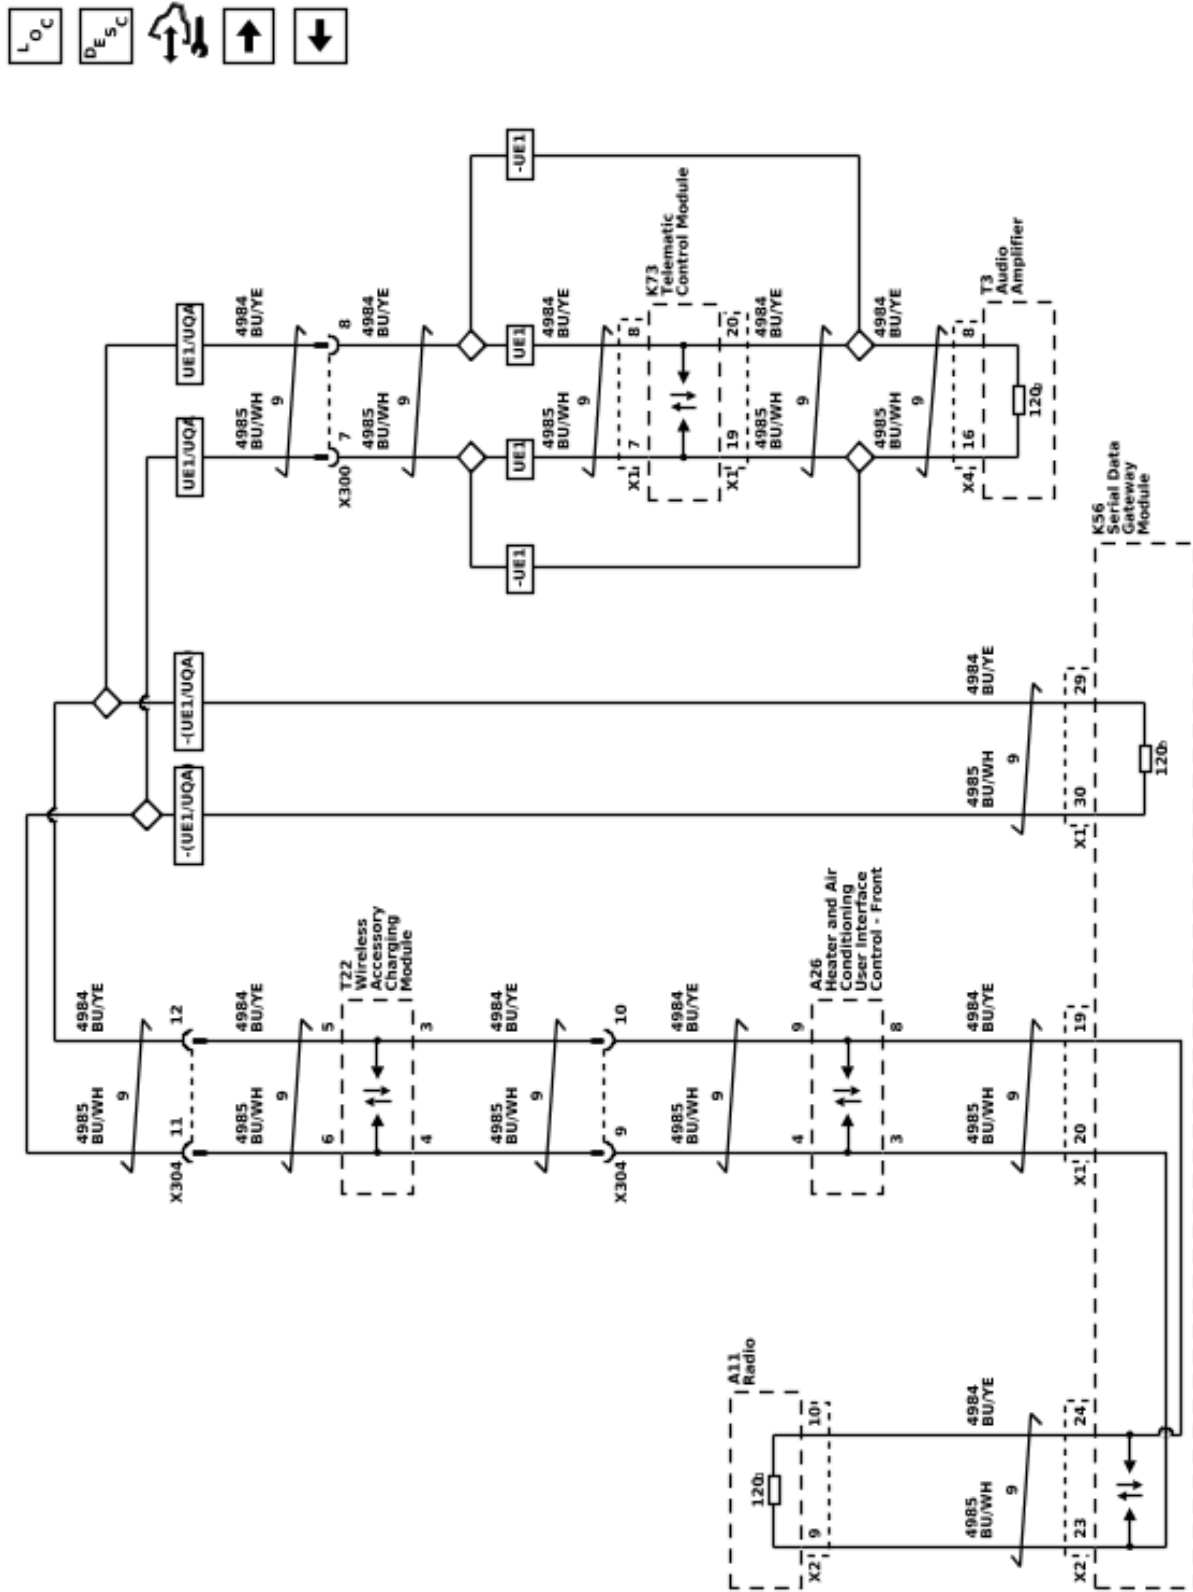


Data Communication Schematics (CAN 5 (- ( K4C / UQA )))

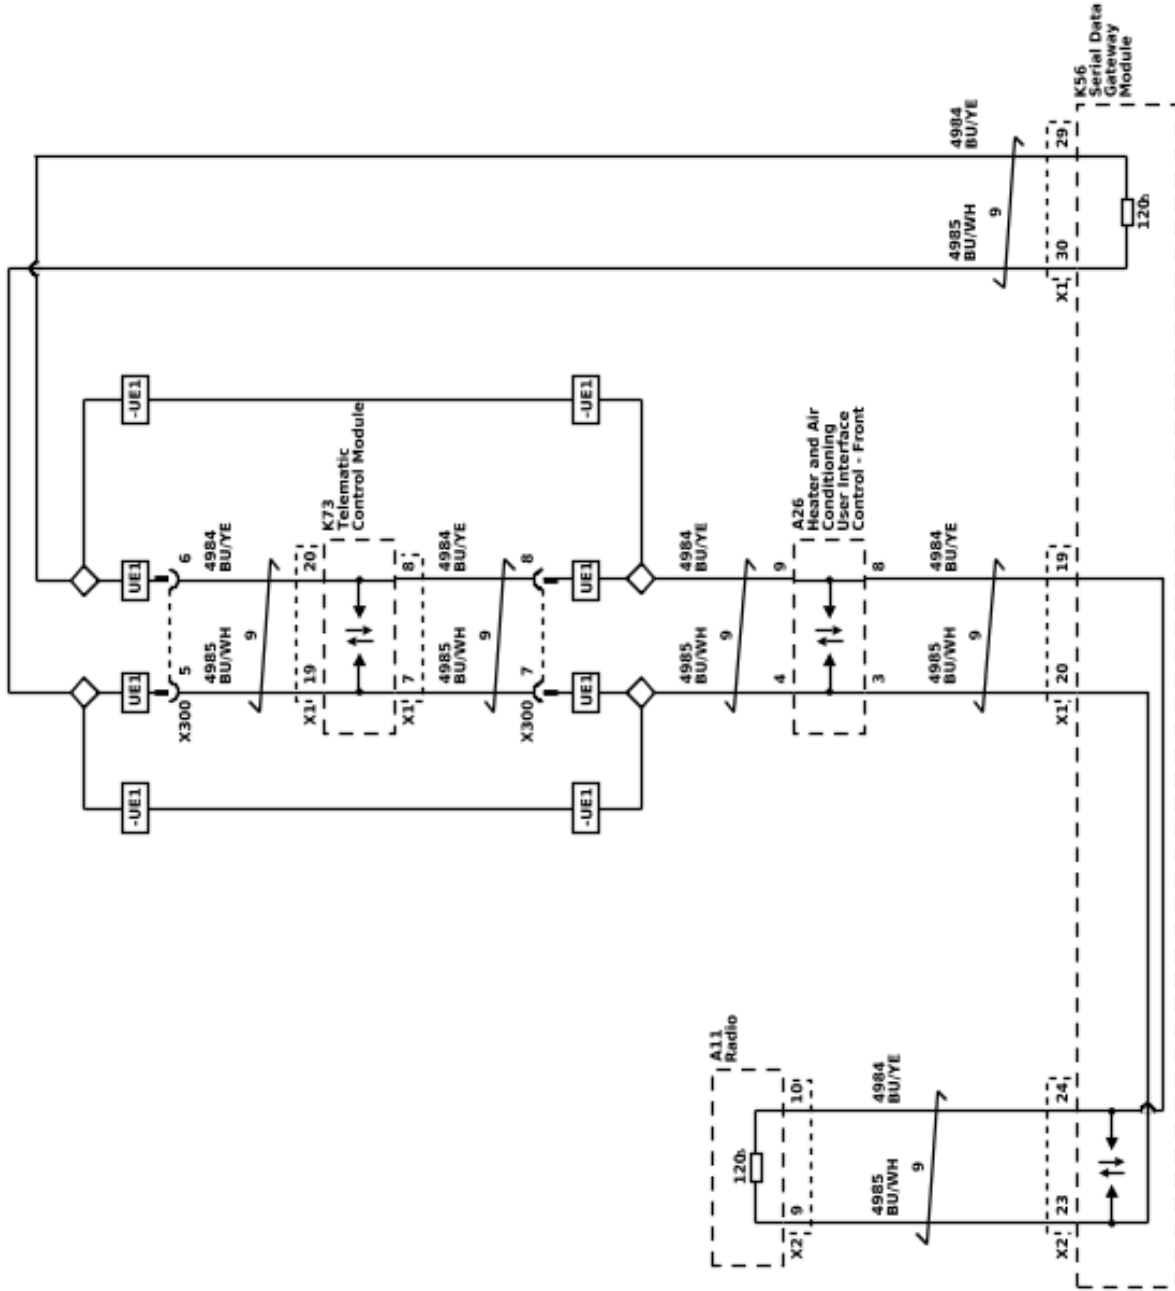


Data Communication Schematics (CAN 9)

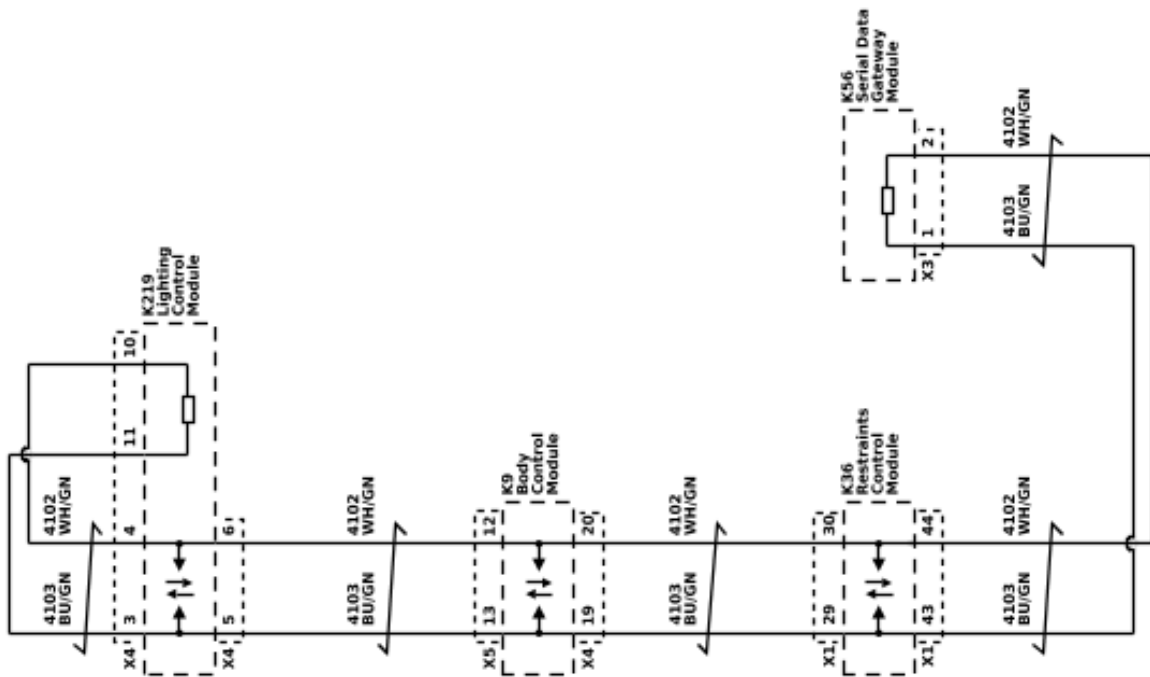


Data Communication Schematics (Body Control Module Local Interconnect Network LIN Buses 2, 3, and 4)

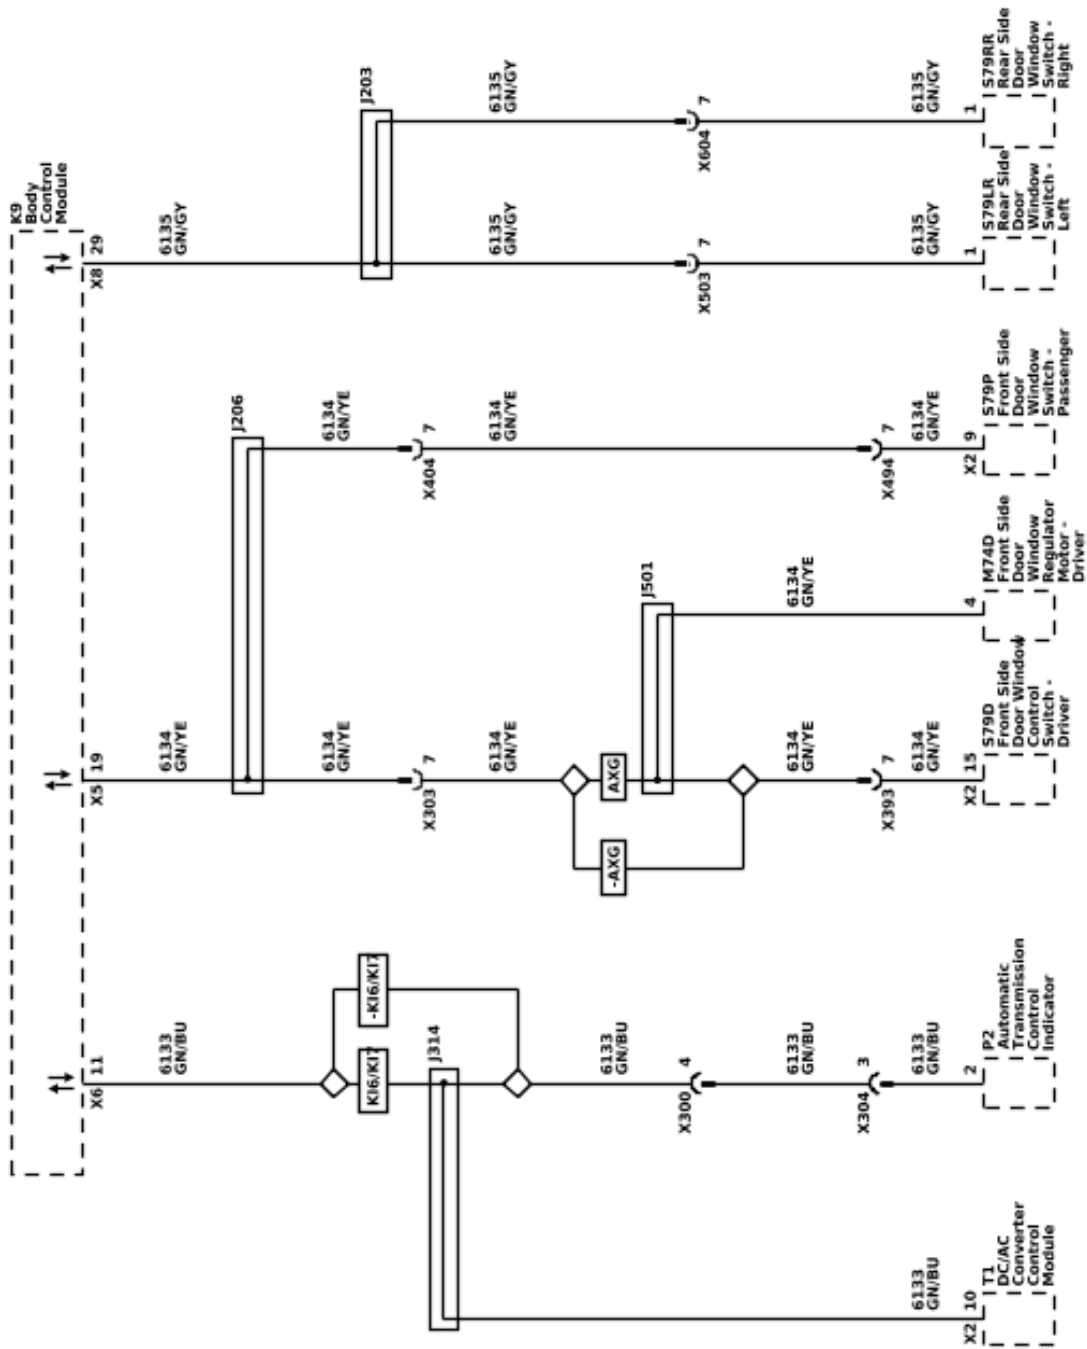


Data Communication Schematics (Body Control Module Local Interconnect Network LIN Buses 5, 6, and 8)

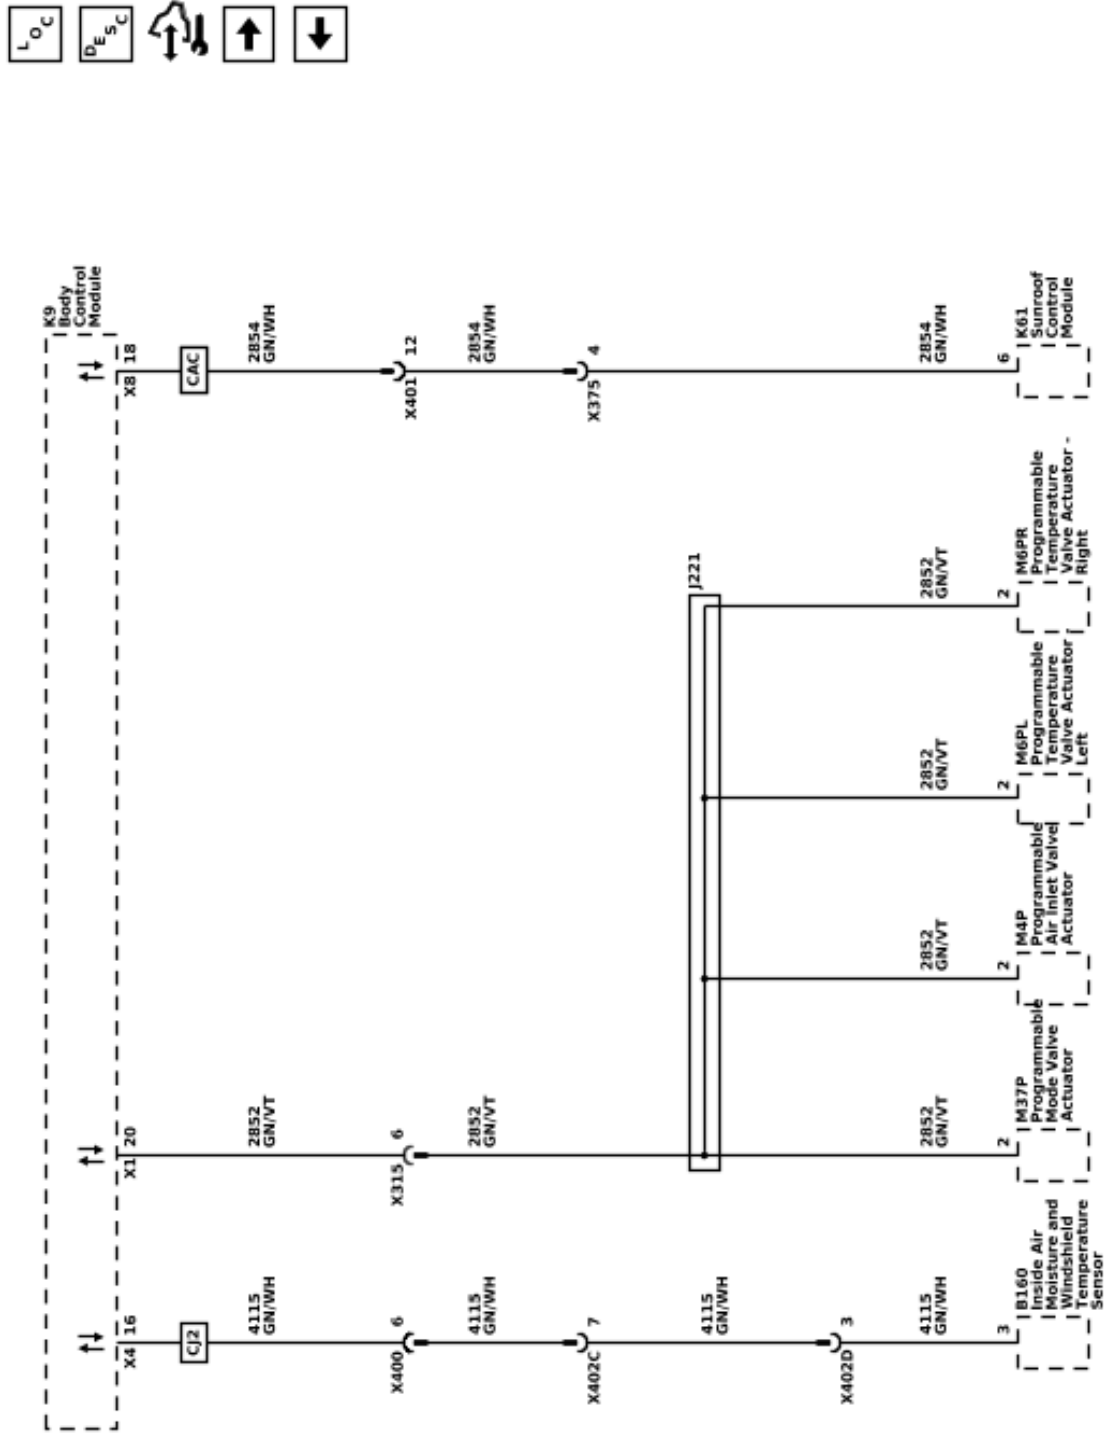


Data Communication Schematics (Body Control Module Local Interconnect Network LIN Buses 9, 11, 12, and 16)

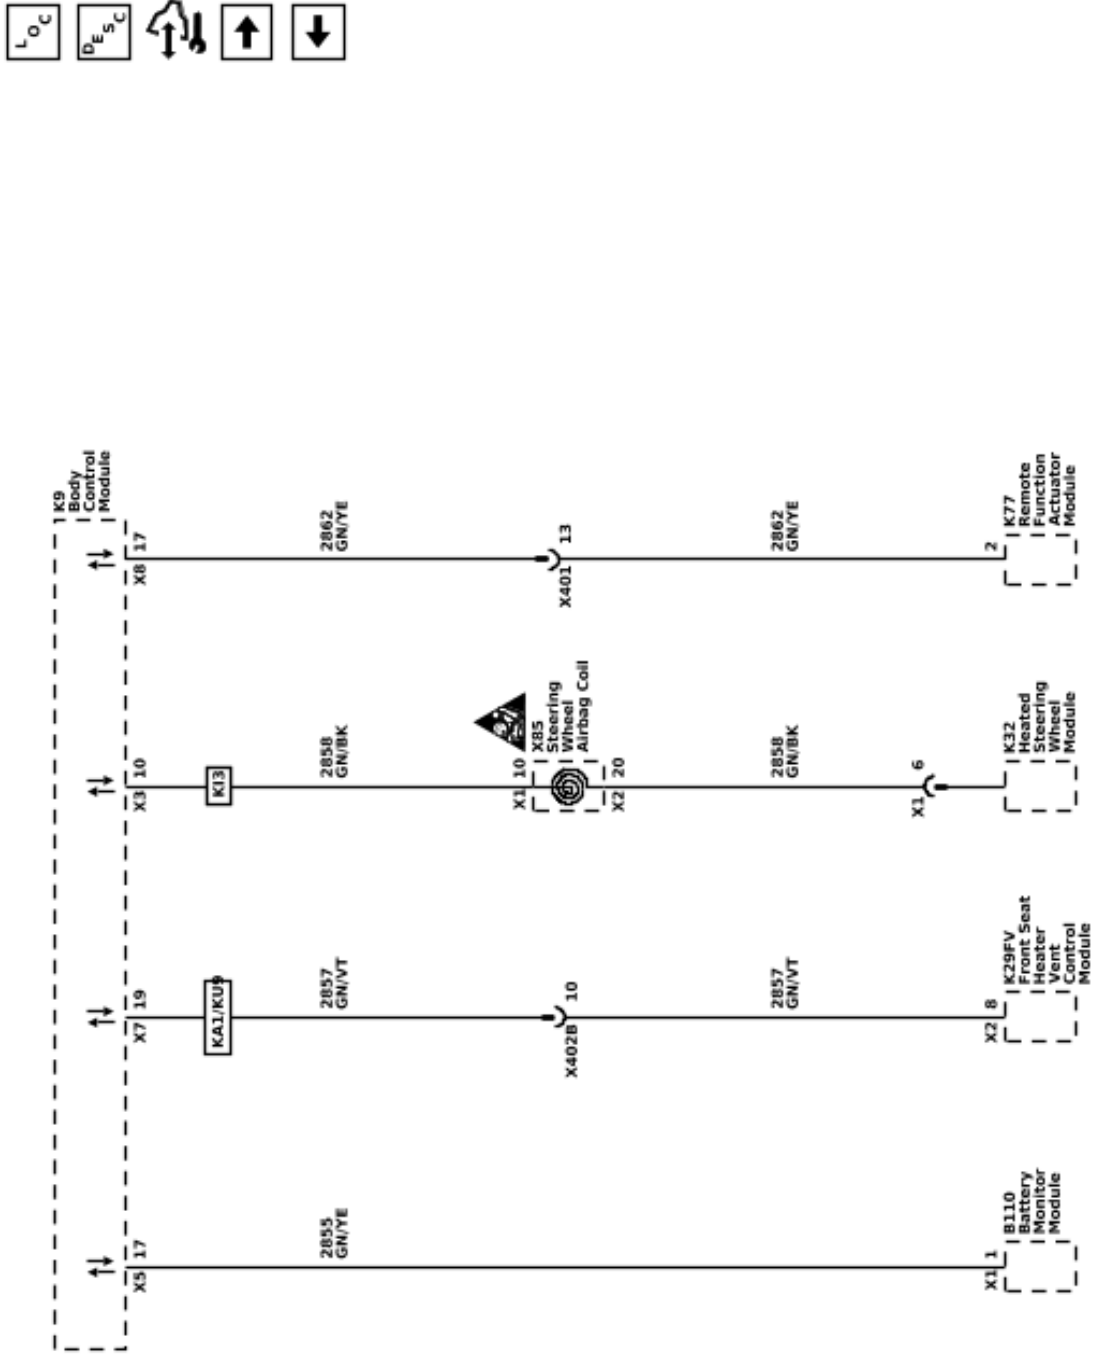

Data Communication Schematics (Engine Control Module Local Interconnect Network LIN Buses)

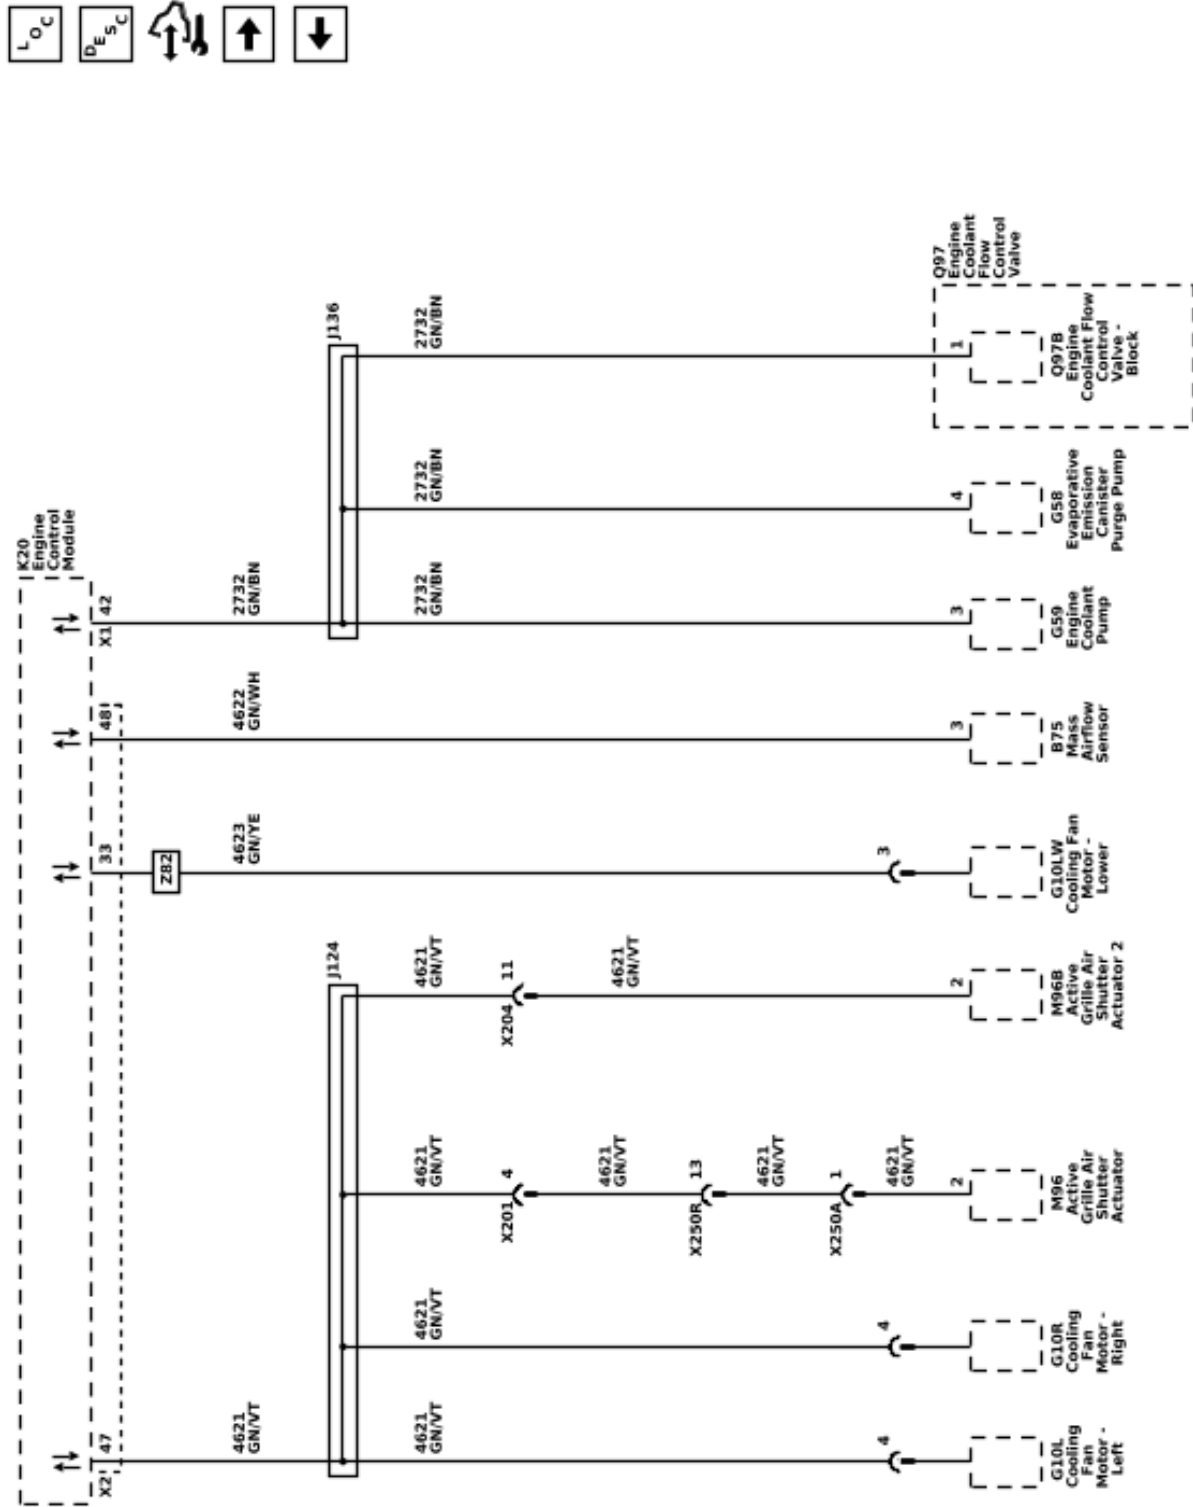


Data Communication Schematics (General Local Interconnect Network - LIN Buses)

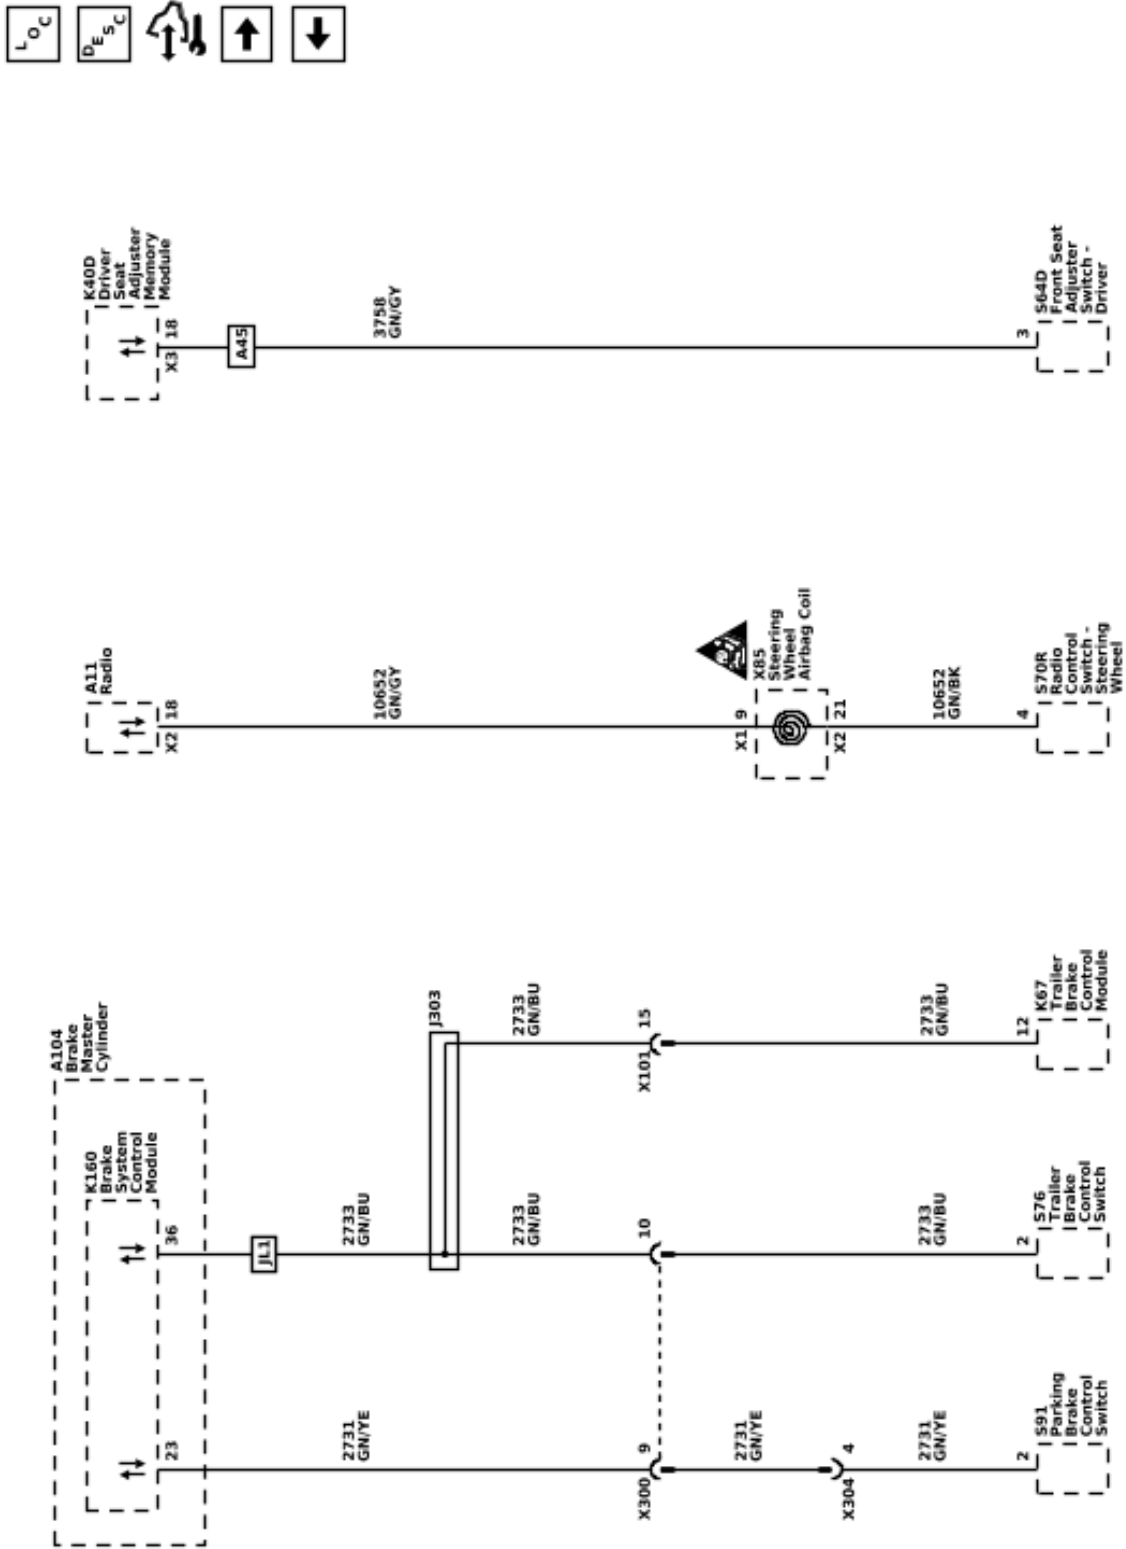


6332009




Data Communication Schematics (Powertrain and Enable CAN)

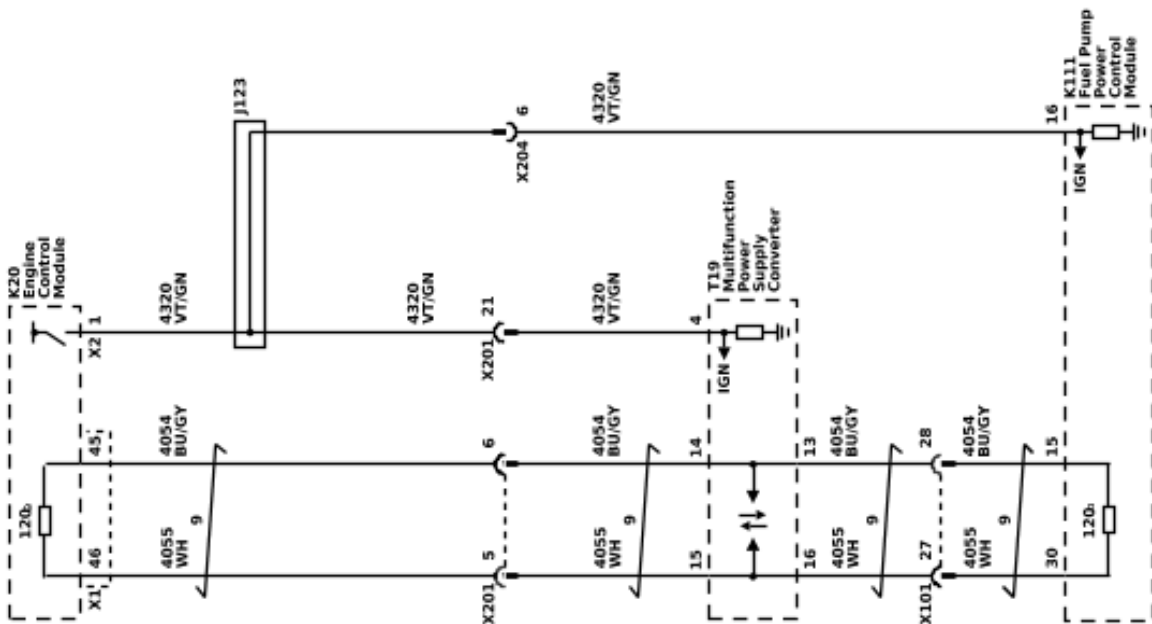



Data Communication Schematics (Automotive Audio Bus A2B Serial Data 1 (UQA))

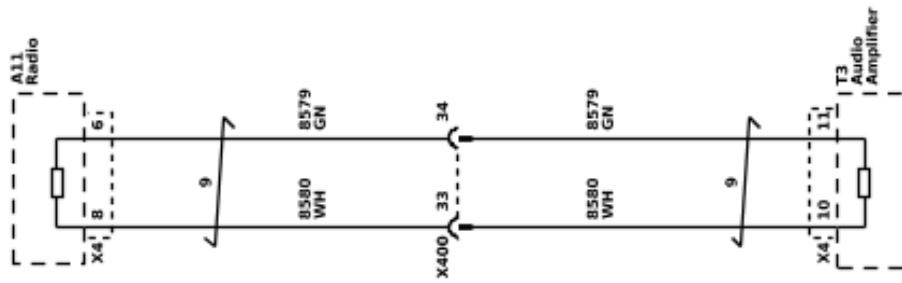

Data Communication Schematics (Ethernet Bus)


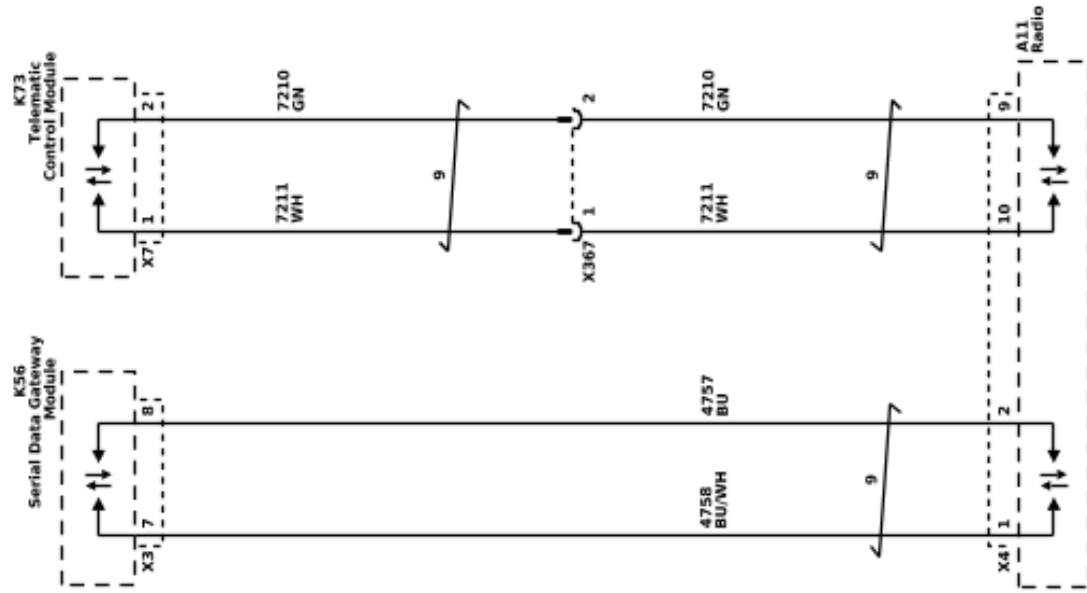


Body Control System Schematics (Power, Ground, Serial Data, and Subsystem References 1 of 3)

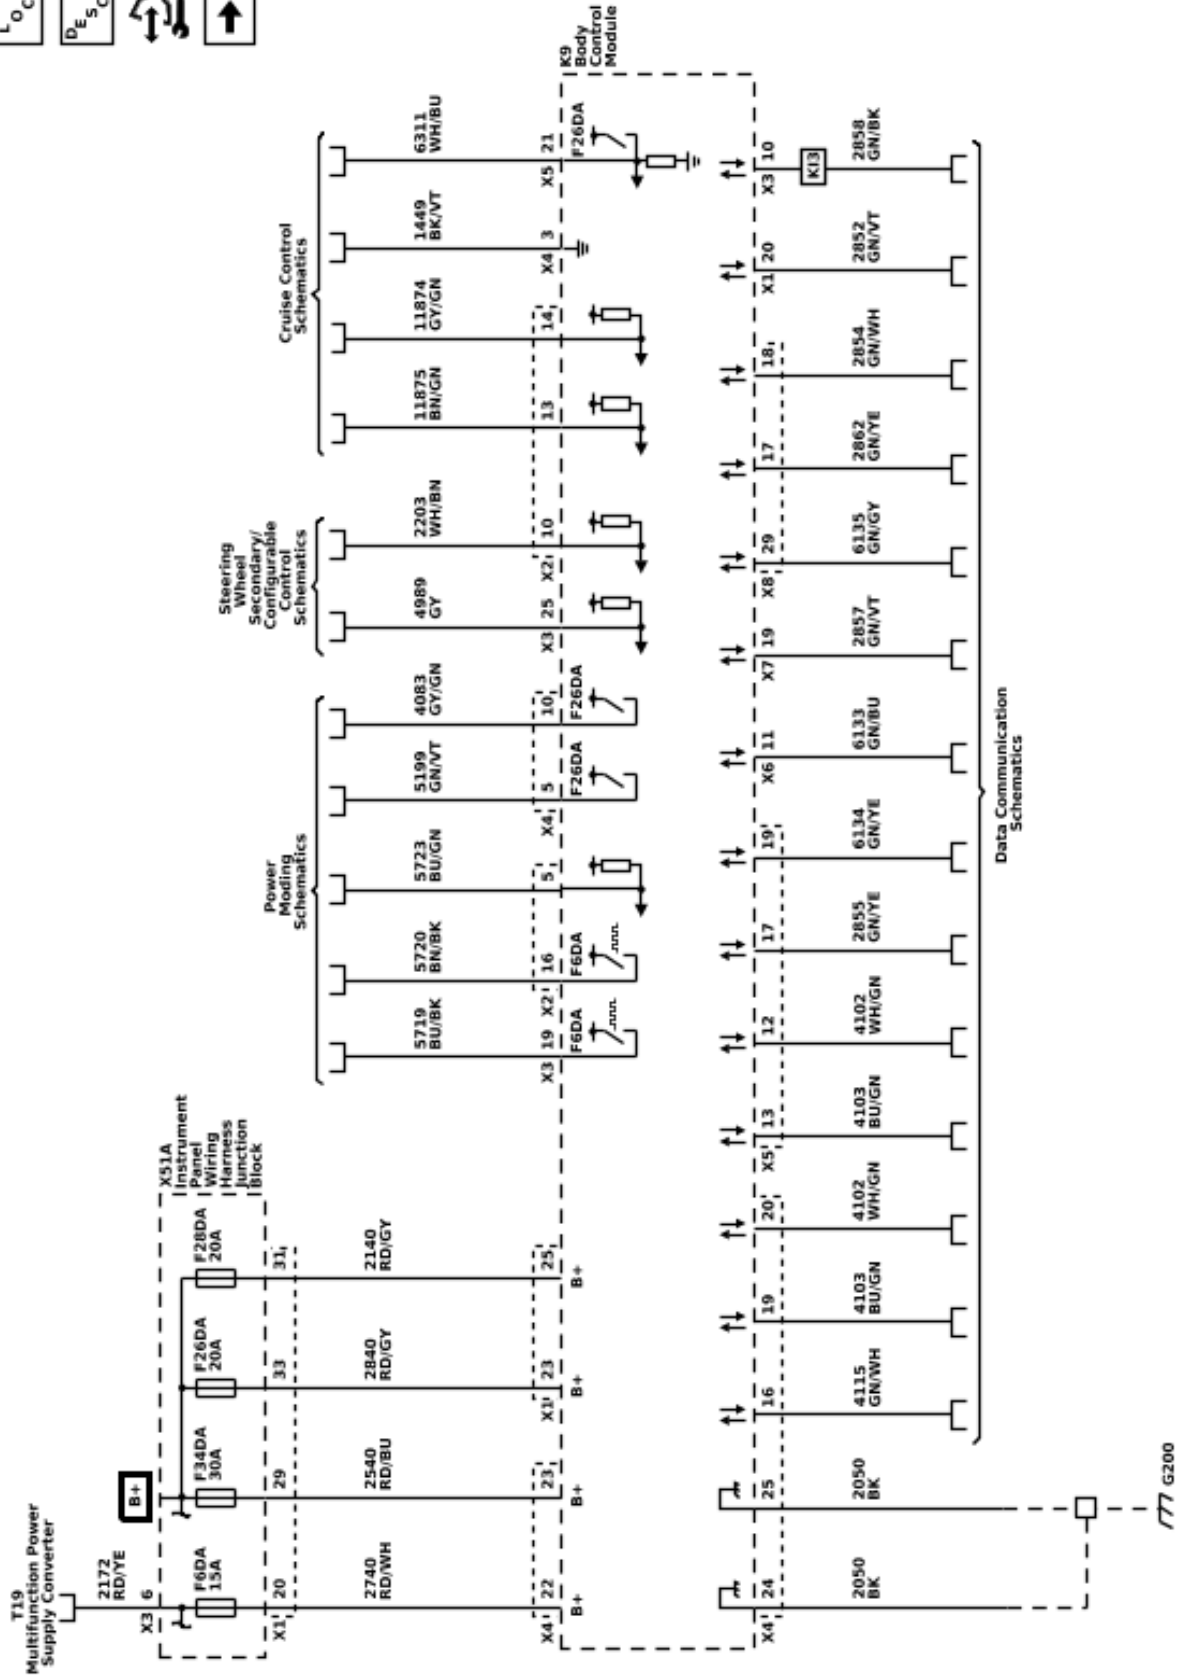


632013

Body Control System Schematics (Subsystem References 2 of 3)

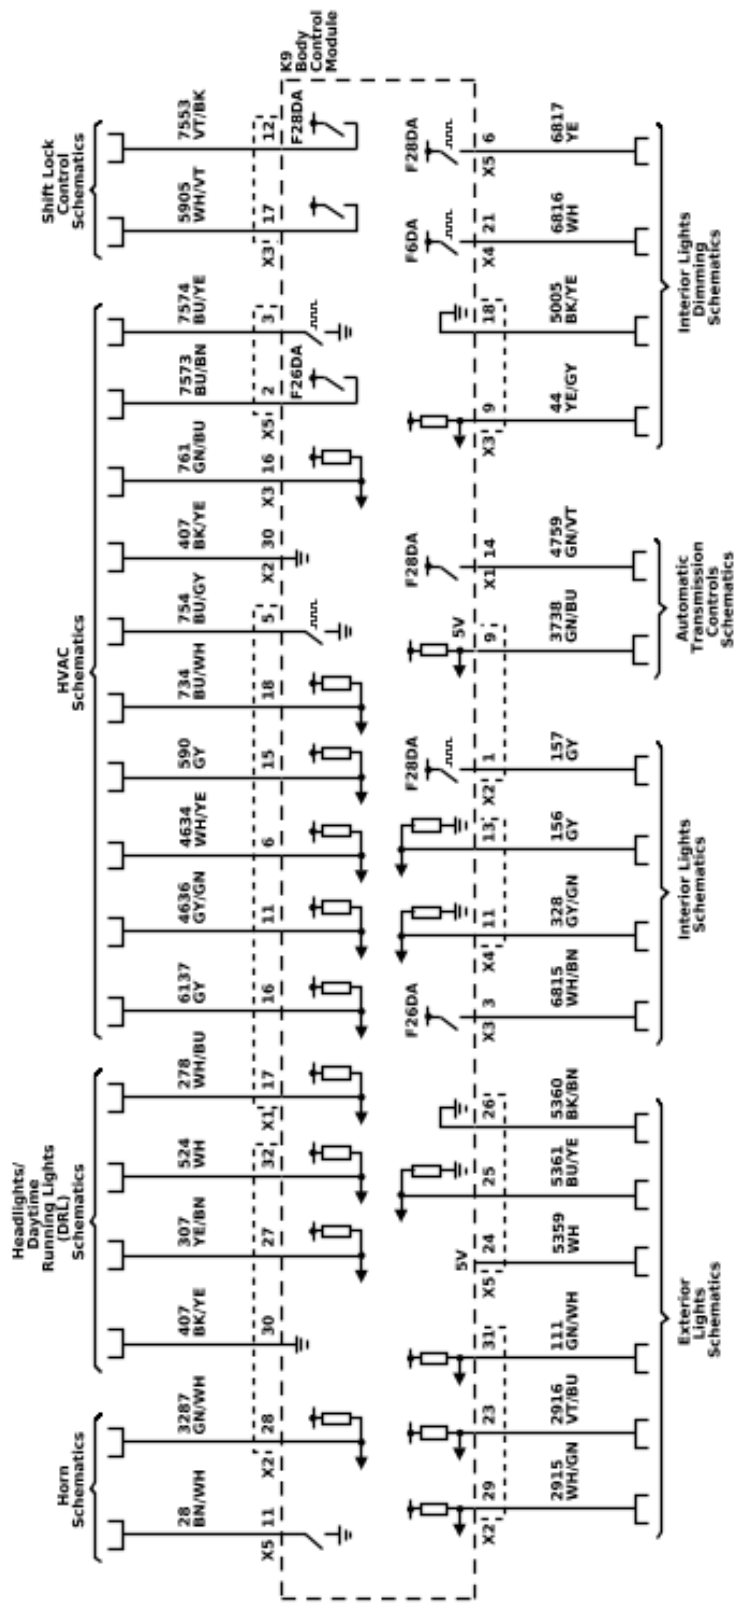

Body Control System Schematics (Subsystem References 3 of 3)

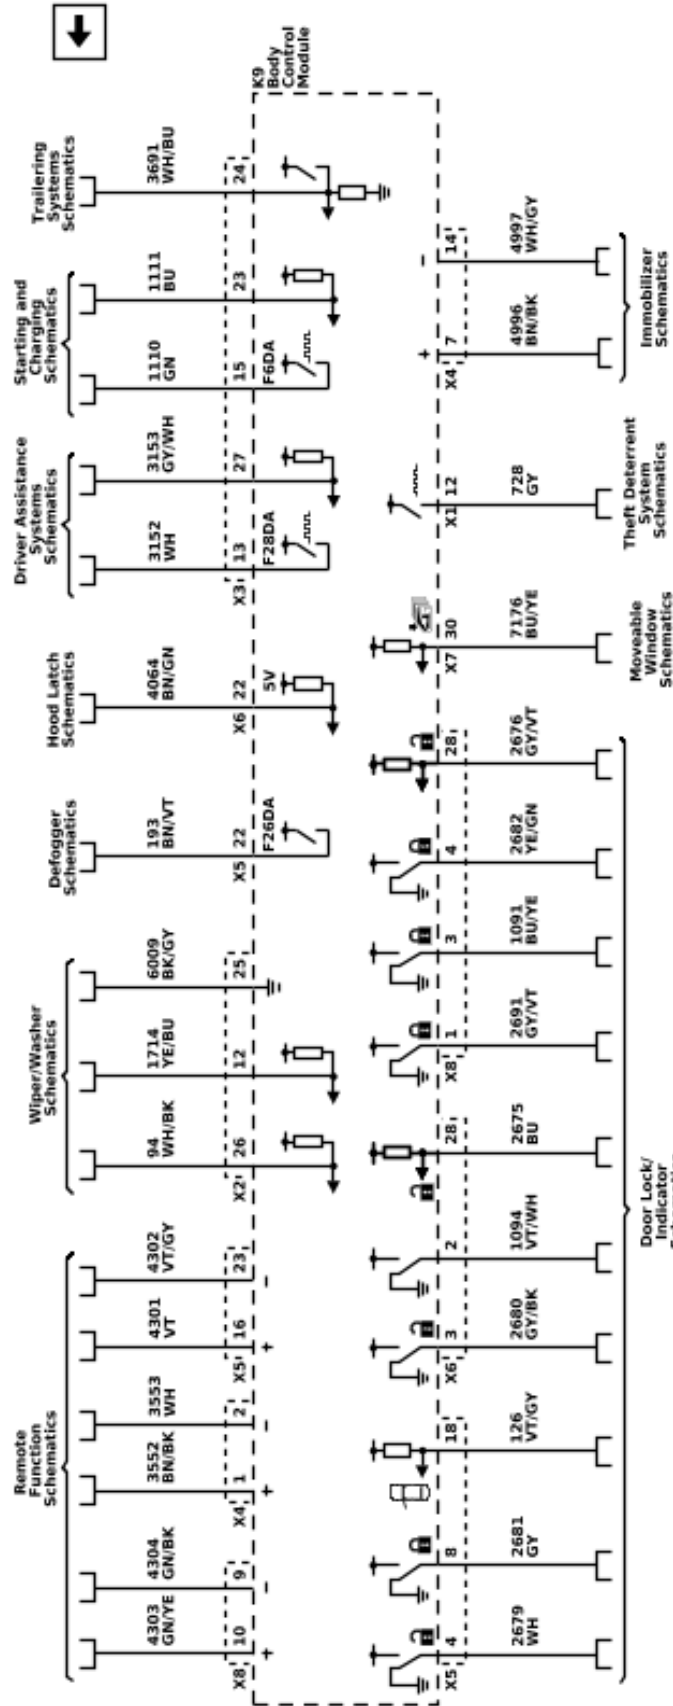

## Description and Operation

### Data Link Communications

### Description and Operation

**Note:** This is an overview of different serial data buses used by control modules to communicate with each others. Use [Data Communication Schematics on page 6-4](#) to find out which serial data buses are configured for a specific vehicle.

### Data Link Communications Overview

There are many components in a vehicle that rely on information from other sources, transmit information to other sources, or both. Serial data communication networks provide a reliable, cost effective, way for various components of the vehicle to “talk” to one another and share information.

General Motors uses a number of different communication buses to insure the timely and efficient exchange of information between control modules. When compared to each other, some of these buses are different in nature as far as speed, signal characteristics, and behavior.

On the other hand, when other buses are compared to each other they have similar characteristics and simply operate in parallel. In this case they are used to group together components which have high interaction. Examples are the Controller Area Network (CAN), private CAN, and LIN buses. This allows them to communicate with each other on a bus with reduced message congestion insuring faster and the more timely exchange of information than if all vehicle control modules were on a single bus.

The majority of information that exists within a given network generally stays local; however some information will have to be shared on other networks. Control modules designated as Gateway’s perform the function of transferring information between the various buses. A Gateway module is connected to at least 2 buses and will interact with each network according to its message strategy and transmission models.

CAN provides the capability for a receiving control module to monitor message transmissions from other control modules in order to determine if messages of interest are not being received. The primary purpose is to allow reasonable default values to be substituted for the information no longer being received. Additionally, a control module may set a Diagnostic Trouble Code (DTC) to indicate that the control module it is expecting information from is no longer communicating.

### K9 Body Control Module (BCM)

The body control system consists of the K9 Body Control Module, communications, and various input and outputs. Some inputs, outputs and messages require other control modules to interact with the K9 Body Control Module. The K9 Body Control Module also has discrete input and output terminals to control the vehicle’s body functions. The K9 Body Control Module is wired to CAN bus and multiple Local Interconnect Network (LIN) buses and acts as a gateway between them.

The various K9 Body Control Module input and output circuits are illustrated in the corresponding functional areas on the K9 Body Control Module electrical schematics. Refer to the [Body Control System Schematics on page 6-20](#) for more detailed information.

### K56 Serial Data Gateway Module

The K56 Serial Data Gateway Module gates messages between the CAN networks described in the Controller Area Network (CAN) Bus Description section below. The K56 Serial Data Gateway Module needs to know what CAN control modules are present on a given vehicle in order to enable/disable loss of communication DTCs and to know what CAN control modules to track for their communication status. The K56 Serial Data Gateway Module has the ability to learn the diagnostic addresses list of CAN control modules to identify what CAN control modules are equipped on the vehicle and what CAN buses they are on. If the K56 Serial Data Gateway Module is replaced, this learn/verification process will have to be done again through K56 Serial Data Gateway Module programming and setup procedure in SPS. This learn process will not cause any previously learned contents to be forgotten/overwritten. If the learn process is not done on a new K56 Serial Data Gateway Module, DTC U1977 will be set until the learn procedure is executed. If the learn is invalid due to control module internal malfunction or a K56 Serial Data Gateway Module swap, DTC U3000 42 or DTC U3002 56 will be set. If any of these DTCs sets, the K56 Serial Data Gateway Module will enable loss of communication for all CAN control modules. This will result in loss of communication DTCs being set against CAN control modules that are not equipped on the vehicle.

A fault can be localized by monitoring the normal mode messages on a CAN bus. The K56 Serial Data Gateway Module will monitor one signal per CAN control module per CAN bus to determine control module status. When a signal times out, a loss of communication event will be started.

### Controller Area Network (CAN) Bus Description

The CAN buses are used where data needs to be exchanged at a high enough rate to minimize the delay between the occurrence of a change in sensor value and the reception of this information by a control device using the information to adjust vehicle system performance.

Each CAN serial data network consists of two twisted wires. One signal circuit is identified as CAN-High and the other signal circuit is identified as CAN-Low. At each end of the data bus there is a 120 Ω termination resistor between the CAN-High and CAN-Low circuits. Most CAN control modules have an internal resistance of 4.950K Ω. There may be one or two CAN control modules that have a higher internal resistance like the K60 Column Lock Module which has an internal resistance of 77.4K Ω. The internal resistance of CAN control modules causes lower terminating resistor reading when splitting the CAN network to check for faults. The more CAN control modules on the network the lower the terminating resistor will read.

The data to be transmitted over a CAN bus is represented by the voltage difference between the CAN-High signal voltage and the CAN-Low signal voltage. Data symbols (1's and 0's) are transmitted sequentially at the following rate:

- CAN 1 (circuits 4986 & 4987) = 500 Kbit/s
- CAN 2 (circuits 4978 & 4979) = 2 Mbit/s
- CAN 3 (circuits 4976 & 4977) = 500 Kbit/s
- CAN 4 (circuits 4100 & 4101) = 500 Kbit/s
- CAN 5 (circuits 4984 & 4985) = 500 Kbit/s
- CAN 6 (circuits 4980 & 4981) = 5 Mbit/s
- CAN 7 (circuits 4982 & 4983) = 5 Mbit/s
- CAN 8 (circuits 4104 & 4105) = 2 Mbit/s
- CAN 9 (circuits 4102 & 4103) = 2 Mbit/s

When the two wire bus is at rest the CAN-High and CAN-Low signal circuits are not being driven and this represents a logic "1". In this state both signal circuits are at the same voltage of 2.5 V. The differential voltage is approximately 0 V.

When a logic "0" is to be transmitted, the CAN-High signal circuit is driven higher to about 3.5 V and the CAN-Low circuit is driven lower to about 1.5 V. The differential voltage becomes approximately 2.0 (+/- 0.5) V.

The CAN 1, CAN 2, CAN 3, CAN 4, CAN 5, CAN 8, and CAN 9 buses are used to communicate between the K56 Serial Data Gateway Module and other CAN control modules.

The CAN 8, and CAN 9 buses are reserved for the following systems:

- The CAN 8 bus is reserved for most control modules and sensors related to active safety system, if applicable.
- The CAN 9 bus is reserved for most control modules and sensors related to Hybrid/EV system, if applicable.

The following CAN buses are between the X84 Data Link Connector and the K56 Serial Data Gateway Module:

- The CAN 6 bus is used for CAN diagnostics and programming.
- The CAN 7 bus is used for programming by assembly plant only.
- The Private Presentation CAN 1 bus (circuits 2577 & 2578) is used by Engineering to observe data communications on CAN buses not directly accessible at the X84 Data Link Connector. It requires special security access and will not be used in a service environment.
- The Private Presentation CAN 2 bus (circuits 2579 & 2580) is used by Engineering to observe data communications on CAN buses not directly accessible at the X84 Data Link Connector. It requires special security access and will not be used in a service environment.

### Private Powertrain CAN Bus Description

The Private Powertrain CAN bus (circuits 4054 & 4055) is reserved for Powertrain components. It has a transmission rate of 500 Kbit/s. Sometimes

communication is required between the Private Powertrain CAN bus and another CAN bus. This is accomplished by using the K20 Engine Control Module (for gas vehicles) or K16 Battery Energy Control Module (for electric vehicles) as the Gateway module. Since the Private Powertrain CAN bus and other CAN buses operate in the same manner, the diagnostics for each are similar.

### Local Interconnect Network (LIN) Bus Description

The LIN Bus consists of a single wire with a transmission rate of 10.417 Kbit/s. This bus is used to exchange information between a master control module and other smart devices which provide supporting functionality. This type of configuration does not require the capacity or speed of a CAN bus and is thus relatively simpler.

The data symbols (1's and 0's) to be transmitted are represented by different voltage levels on the communication bus. When the LIN Bus is at rest and is not being driven, the signal is in a high voltage state of approximately  $V_{batt}$ . This represents a logic "1". When a logic "0" is to be transmitted, the signal voltage is driven low to about ground (0.0 V).

### Ethernet Bus Description

Ethernet is a data communication technology that uses a single twisted copper pair of wires at speeds of 100 Mbit/s and 1000 Mbit/s. The Ethernet system uses point-to-point communication that is connected via an Ethernet switch [Module <-> Switch <-> Module]. The Ethernet bus does not use terminating resistors.

The K56 Serial Data Gateway Module and the A11 Radio have an Ethernet switch that connects to other Ethernet modules. The K56 Serial Data Gateway Module and the A11 Radio communicate with other devices and systems in the vehicle via CAN and LIN buses. Diagnostic Trouble Codes will be read on CAN to diagnose Ethernet, LIN and system faults.

**Note:** Ethernet harness failures should only be repaired using an appropriate kit to perform de-pin/ re-pin overlays or in cases where the wiring harness repair kits are not available, the entire harness should be replaced. No crimps or splicing should be performed on the Ethernet wiring harness.

#### Ethernet 1

Ethernet bus 1 consists of 2 twisted pair of wires [1 pair for Ethernet bus 1R (circuits 4972 & 4973) and 1 pair for Ethernet bus 1T (circuits 4974 & 4975)]. It is connected between X84 Data Link Connector (DLC) and K56 Serial Data Gateway Module. This bus is used for diagnostics and service programming of control modules using Ethernet instead of CAN. The K56 Serial Data Gateway Module will convert Ethernet serial data to CAN as necessary, and vice versa. There is an Ethernet enable circuit (circuit 7207) which can be used to wake up the K56 Serial Data Gateway Module for Ethernet diagnostic and programming.

#### Ethernet 2

Ethernet bus 2 (circuits 4757 & 4758) is for connection between the A11 Radio and the K56 Serial Data Gateway Module.



**Ethernet 3**

Ethernet bus 3 (circuits 7208 & 7209) is for connection between the K56 Serial Data Gateway Module and K179 Automated Driving Mapping Module.

**Ethernet 4**

Ethernet bus 4 (circuits 7210 & 7211) is for connection between the following control modules:

- K56 Serial Data Gateway Module and K73 Communication Interface Module for vehicles equipped with IOR radio.
- A11 Radio and K73 Communication Interface Module for vehicles equipped with other radios.

**Ethernet 5**

Ethernet bus 5 (circuits 7212 & 7213) is for connection between the A11 Radio and P22F Video Display - Right Front Seat Back.

**Ethernet 6**

Ethernet bus 6 (circuits 7214 & 7215) is for connection between the A11 Radio and T3 Audio Amplifier.

**Ethernet 7**

Ethernet bus 7 (circuits 7216 & 7217) is for connection between the K56 Serial Data Gateway Module and P16 Instrument Panel Cluster Control Module or K190 Off-Board Charger Control Module.

**Ethernet 11**

Ethernet bus 11 (circuits 7224 & 7225) is for connection between the K124 Image Processing Module and K179 Automated Driving Mapping Module.

**Ethernet 14**

Ethernet bus 14 (circuits 7230 & 7231) is for connection between the A11 Radio and P29 Head-Up Display.

**Ethernet 15**

Ethernet bus 15 (circuits 7232 & 7233) is for connection between the K56 Serial Data Gateway Module, K161 Vehicle Performance Data Recorder, and P22F Video Display - Passenger Seat Back.

**X84 Data Link Connector (DLC)**

The X84 Data Link Connector is a standardized 16-cavity connector. Connector design and location is dictated by an industry wide standard, and is required to provide the following:

- Terminal 1: CAN Bus 7 Serial Data [+]
- Terminal 2: Private Presentation CAN Bus 1 Serial Data [+]
- Terminal 3: Ethernet Bus 1R [+]
- Terminal 4: Scan tool power ground
- Terminal 5: Common signal ground
- Terminal 6: CAN Bus 6 Serial Data [+]
- Terminal 7: Private Presentation CAN Bus 2 Serial Data [+]
- Terminal 8: Ethernet Bus 1 Enable Signal
- Terminal 9: CAN Bus 7 Serial Data [-]
- Terminal 10: Private Presentation CAN Bus 1 Serial Data [-]
- Terminal 11: Ethernet Bus 1R [-]
- Terminal 12: Ethernet Bus 1T [+]

- Terminal 13: Ethernet Bus 1T [-]
- Terminal 14: CAN Bus 6 Serial Data [-]
- Terminal 15: Private Presentation CAN Bus 2 Serial Data [-]
- Terminal 16: Scan tool power, B+

**Serial Data Reference**


The scan tool communicates over the various buses on the vehicle. When a scan tool is installed on a vehicle, the scan tool will try to communicate with every control module that could be optioned into the vehicle. If an option is not installed on the vehicle, the scan tool will display No Communication for that optional control module. In order to avert misdiagnoses of No Communication with a specific control module, refer to Data Link References for a list of control modules and the buses they communicate with. Use schematics and specific vehicle build RPO codes to determine optional control modules.

# Electrical Component and Inline Harness Connector End Views


## Component Locator

### Electrical Center Identification Views

### X50A Engine Wiring Harness Junction Block Label

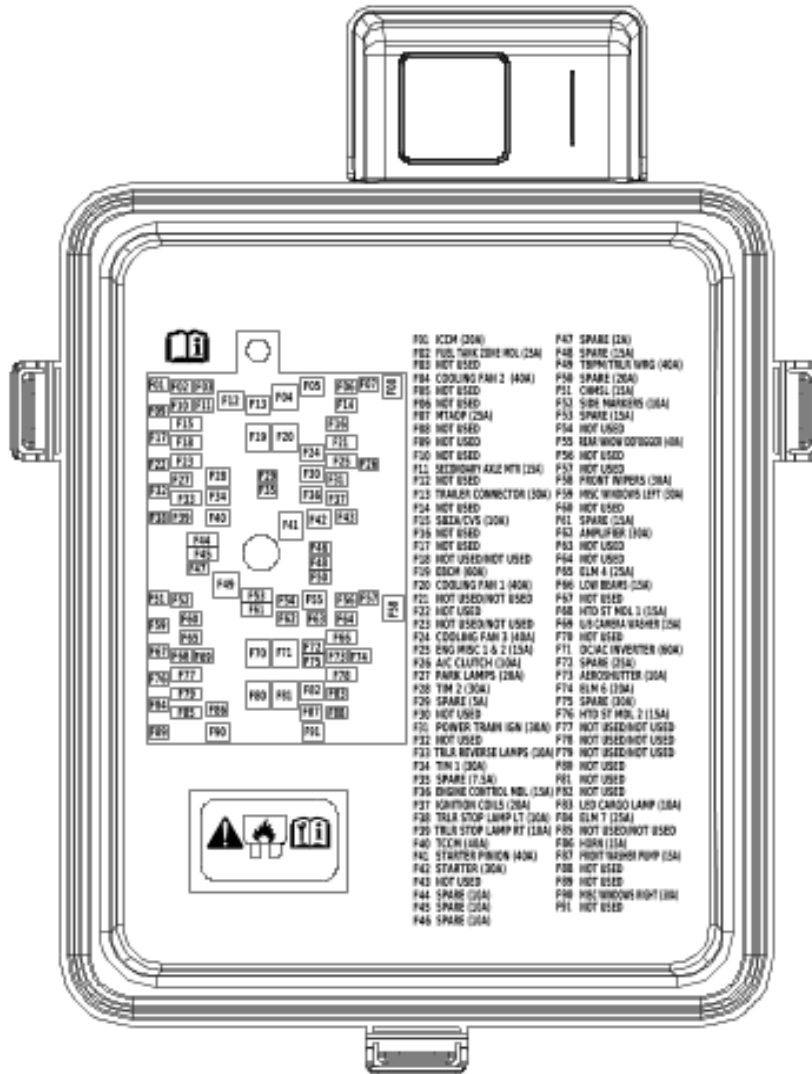

X50A Engine Wiring Harness Junction Block Top View

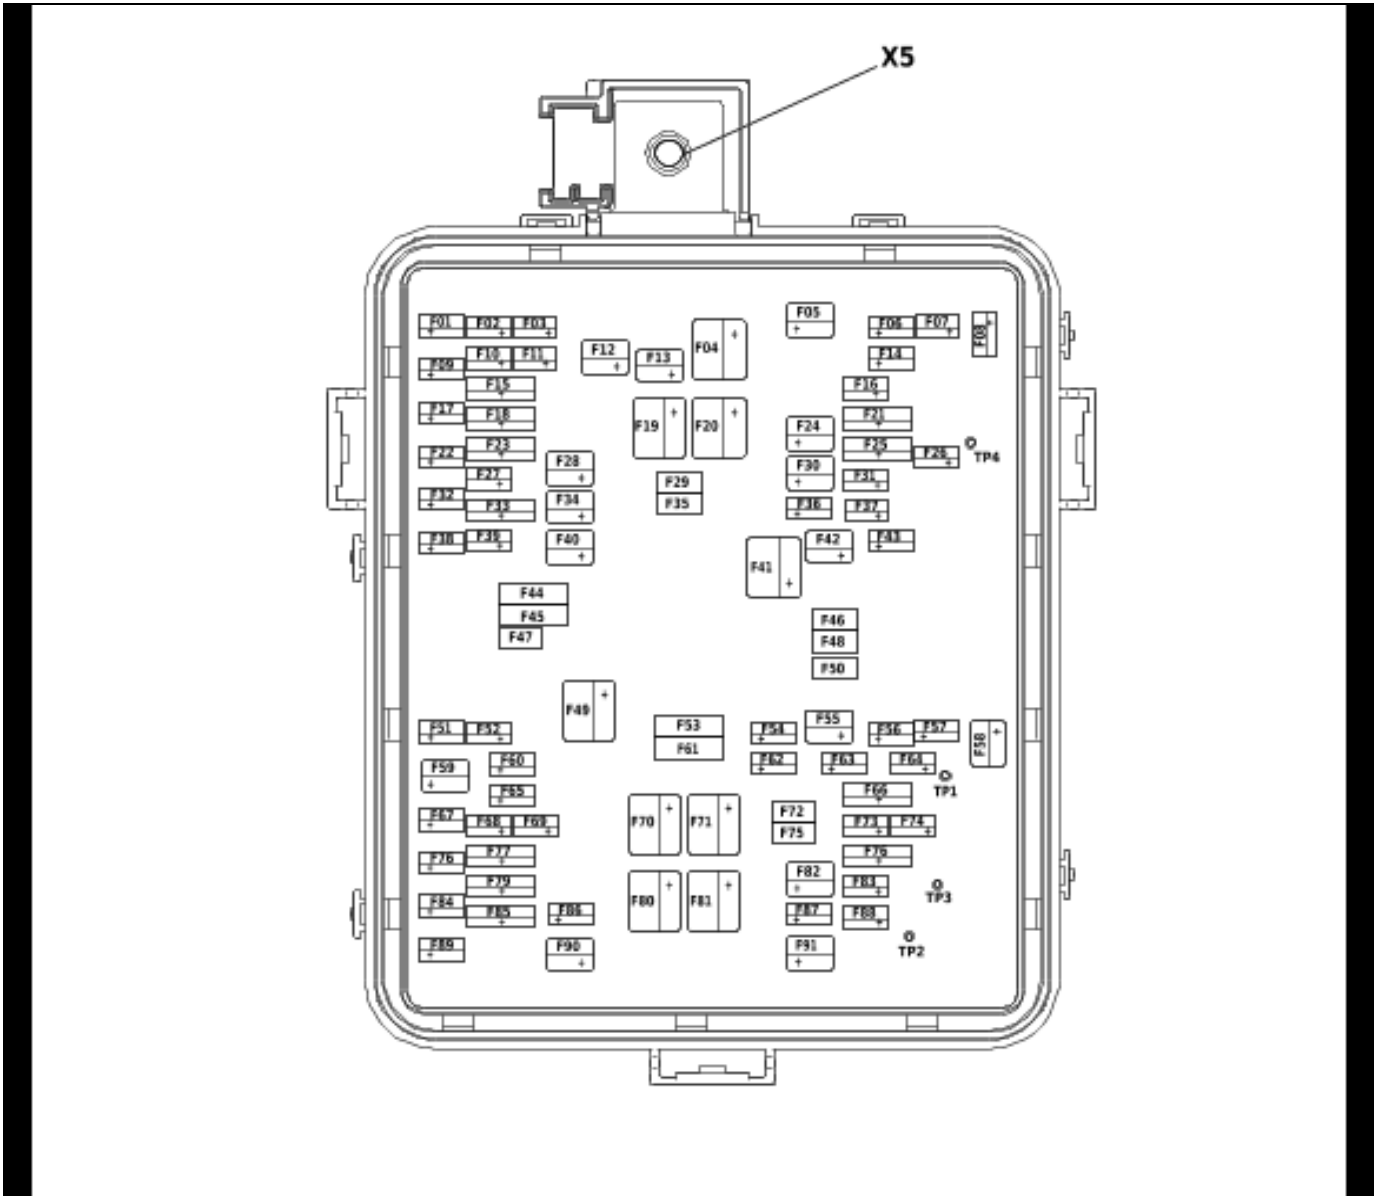

6181029

Usage Table

No.	Device Label Name	Device Assigned Name	Rating	Description
<b>Fuses</b>				
F1	ICCM	F1UA	20A	• K38 Chassis Control Module
F2	NOT USED	F2UA	—	• Not Used
F3	NOT USED	F3UA	—	• Not Used
F4	COOLING FAN 2	F4UA	40A	• G10R Cooling Fan Motor - Right
F5	NOT USED	F5UA	—	• Not Used
F6	NOT USED	F6UA	—	• Not Used
F7	MTAOP	F7UA	25A	• G5 Automatic Transmission Auxiliary Fluid Pump (KL9)
F8	NOT USED	F8UA	—	• Not Used
F9	NOT USED	F9UA	—	• Not Used

## 6-28 Electrical Component and Inline Harness Connector End Views

### Usage Table (cont'd)

No.	Device Label Name	Device Assigned Name	Rating	Description
F10	NOT USED	F10UA	—	• Not Used
F11	SECONDARY AXLE MTR	F11UA	15A	• M26 Front Drive Axle Actuator (NP0/NQH)
F12	NOT USED	F12UA	—	• Not Used
F13	TRAILER CON-NECTOR	F13UA	30A	• X88B Tow Vehicle Electrical Receptacle
F14	NOT USED	F14UA	—	• Not Used
F15	SVZA/CVS	F15UA	10A	<ul style="list-style-type: none"> <li>• B218L Side Obstacle Detection Control Module - Left (UFB/UKI)</li> <li>• B218R Side Obstacle Detection Control Module - Right (UFB/UKI)</li> <li>• Q13 Evaporative Emission Canister Vent Solenoid Valve</li> </ul>
F16	NOT USED	F16UA	—	• Not Used
F17	NOT USED	F17UA	—	• Not Used
F18	NOT USED/NOT USED	F18UA	—	• Not Used
F19	EBCM	F19UA	60A	• K160 Brake System Control Module
F20	COOLING FAN 1	F20UA	40A	• G10L Cooling Fan Motor - Left
F21	NOT USED/NOT USED	F21UA	—	• Not Used
F22	NOT USED	F22UA	—	• Not Used
F23	NOT USED/NOT USED	F23UA	—	• Not Used
F24	COOLING FAN 3	F24UA	40A	• G10LW Cooling Fan Motor - Lower (Z82)
F25	ENG MISC 1 and 2	F25UA	15A	<ul style="list-style-type: none"> <li>• B52A Heated Oxygen Sensor 1</li> <li>• B52B Heated Oxygen Sensor 2</li> <li>• B75 Mass Airflow Sensor</li> <li>• K20 Engine Control Module</li> <li>• G58 Evaporative Emission Canister Purge Pump</li> <li>• M129A Intake Camshaft Profile Actuator 1</li> <li>• M129B Intake Camshaft Profile Actuator 2</li> <li>• M129C Intake Camshaft Profile Actuator 3</li> <li>• M129D Intake Camshaft Profile Actuator 4</li> <li>• M130B Exhaust Camshaft Profile Actuator 2</li> <li>• M130C Exhaust Camshaft Profile Actuator 3</li> <li>• Q12 Evaporative Emission Canister Purge Solenoid Valve</li> <li>• Q40 Turbocharger Bypass Valve Solenoid</li> <li>• Q97B Engine Coolant Flow Control Valve - Block</li> </ul>
F26	A/C CLUTCH	F26UA	10A	• Q2 Air Conditioning Clutch
F27	FUEL TANK ZONE MDL	F27UA	25A	• K111 Fuel Pump Power Control Module
F28	PRK_LMP	F28UA	20A	• X88B Tow Vehicle Electrical Receptacle (Z82-U1D)
F29	SPARE	F29UA	5A	• Not Used
F30	TIM 2	F30UA	—	• K68 Trailer Lamp Control Module (U1D+Z82)
F31	PT_IGN_ECM	F31UA	30A	• K20 Engine Control Module
F32	NOT USED	F32UA	—	• Not Used
F33	TRLR REVERSE LAMPS	F33UA	10A	• X88B Tow Vehicle Electrical Receptacle (Z82-U1D)

**Usage Table (cont'd)**

No.	Device Label Name	Device Assigned Name	Rating	Description
F34	TIM 1	F34UA	30A	• K68 Trailer Lamp Control Module (U1D+Z82)
F35	SPARE	F35UA	7.5A	• Not Used
F36	ENGINE CONTROL MDL	F36UA	15A	• K20 Engine Control Module
F37	IGNITION COILS	F37UA	20A	<ul style="list-style-type: none"> <li>• K20 Engine Control Module</li> <li>• T8A Ignition Coil 1</li> <li>• T8B Ignition Coil 2</li> <li>• T8C Ignition Coil 3</li> <li>• T8D Ignition Coil 4</li> </ul>
F38	TRAIL STOP LAMP LT	F38UA	10A	• X88B Tow Vehicle Electrical Receptacle (Z82-U1D)
F39	TRAIL STOP LAMP RT	F39UA	10A	• X88B Tow Vehicle Electrical Receptacle (Z82-U1D)
F40	TCCM	F40UA	40A	• K69 Transfer Case Control Module (NP0/NQH)
F41	STARTER PINON	F41UA	40A	• M64 Starter
F42	STARTER	F42UA	30A	• M64 Starter
F43	SPARE	F43UA	10A	• Not Used
F44	SPARE	F44UA	10A	• Not Used
F45	SPARE	F45UA	10A	• Not Used
F46	SPARE	F46UA	10A	• Not Used
F47	SPARE	F47UA	2A	• Not Used
F48	SPARE	F48UA	15A	• Not Used
F49	TBPM/TRLR WRG	F49UA	40A	<ul style="list-style-type: none"> <li>• K67 Trailer Brake Control Module (JL1+Z82)</li> <li>• W24 Blunt Cut -Trailer Brakes Provisions (Z82-JL1)</li> </ul>
F50	SPARE	F50UA	20A	• Not Used
F51	CHMSL	F51UA	15A	• E6 High Mount Stop Lamp
F52	SIDE MARKERS	F52UA	15A	<ul style="list-style-type: none"> <li>• E2LFW Front Side Marker Lamp - Left Wheel Opening Molding</li> <li>• E2RFW Front Side Marker Lamp - Right Wheel Opening Molding</li> <li>• E2LRW Rear Side Marker Lamp - Left Wheel Opening Molding</li> <li>• E2RRW Rear Side Marker Lamp - Right Wheel Opening Molding</li> </ul>
F53	SPARE	F53UA	15A	• Not Used
F54	NOT USED	F54UA	—	• Not Used
F55	REAR WNDWS DE-FOGGER	F55UA	40A	• E18 Rear Window Defogger Grid
F56	NOT USED	F56UA	—	• Not Used
F57	NOT USED	F57UA	—	• Not Used
F58	FRONT WIPERS	F58UA	30A	<ul style="list-style-type: none"> <li>• KR12B Windshield Wiper Motor Relay</li> <li>• KR12C Windshield Wiper Motor Speed Control Relay</li> </ul>
F59	MISC WINDOWS LEFT	F59UA	30A	<ul style="list-style-type: none"> <li>• S79D Front Side Door Window Control Switch - Driver</li> <li>• S79LR Rear Side Door Window Switch - Left</li> </ul>
F60	NOT USED	F60UA	—	• Not Used
F61	SPARE	F61UA	15A	• Not Used
F62	AMPLIFIER	F62UA	30A	• T3 Audio Amplifier (UQA)
F63	NOT USED	F63UA	—	• Not Used

## 6-30 Electrical Component and Inline Harness Connector End Views


### Usage Table (cont'd)

No.	Device Label Name	Device Assigned Name	Rating	Description
F64	NOT USED	F64UA	—	• Not Used
F65	ELM 4	F65UA	25A	• K219 Lighting Control Module
F66	LOW BEAMS	F66UA	15A	• K221L Headlamp LED Driver Module - Left (T4L) • K221R Headlamp LED Driver Module - Right (T4L)
F67	NOT USED	F67UA	—	• Not Used
F68	HTD ST MDL 1	F68UA	15A	• K29FV Front Seat Heater Vent Control Module (KA1)
F69	U/B CAMERA WASHER	F69UA	15A	• KR204 Camera Washer Fluid Pump Relay - Underbody Cameras (UXA)
F70	NOT USED	F70UA	—	• Not Used
F71	DC/AC INVERTER	F71UA	60A	• T1 DC/AC Converter Control Module
F72	SPARE	F72UA	25A	• Not Used
F73	AEROSHUTTER	F73UA	10A	• M96 Active Grille Air Shutter Actuator • M96B Active Grille Air Shutter Actuator 2
F74	ELM 6	F74UA	20A	• K219 Lighting Control Module
F75	SPARE	F75UA	30A	• Not Used
F76	HTD ST MDL 2	F76UA	15A	• K29FV Front Seat Heater Vent Control Module (KA1)
F77	NOT USED/NOT USED	F77UA	—	• Not Used
F78	NOT USED/NOT USED	F78UA	—	• Not Used
F79	NOT USED/NOT USED	F79UA	—	• Not Used
F80	NOT USED	F80UA	—	• Not Used
F81	NOT USED	F81UA	—	• Not Used
F82	NOT USED	F82UA	—	• Not Used
F83	LED CARGO LAMP	F83UA	10A	• W26 Blunt Cut - Cargo Lamps Provision (S0Y)
F84	ELM 7	F84UA	25A	• K219 Lighting Control Module
F85	NOT USED/NOT USED	F85UA	—	• Not Used
F86	HORN	F86UA	15A	• P13 Horn
F87	FRONT WASHER PUMP	F87UA	15A	• KR11 Windshield Washer Pump Relay
F88	NOT USED	F88UA	—	• Not Used
F89	NOT USED	F89UA	—	• Not Used
F90	MISC WINDOWS RIGHT	F90UA	30A	• S79P Front Side Door Window Switch - Passenger • S79RR Rear Side Door Window Switch - Right
F91	NOT USED	F91UA	—	• Not Used
<b>Note: Relays listed below are non-serviceable Printed Circuit Board (PCB) relays and are internal to the block.</b>				
—	—	KR3 Horn Relay	—	• F86UA
—	—	KR5 Rear Window Defogger Relay	—	• F55UA • F63UA
—	—	KR11 Windshield Washer Pump Relay	—	• G24 Windshield Washer Pump
—	—	KR12B Windshield Wiper Motor Relay	—	• M75 Windshield Wiper Motor

**Usage Table (cont'd)**

No.	Device Label Name	Device Assigned Name	Rating	Description
—	—	KR12C Windshield Wiper Motor Speed Control Relay	—	• M75 Windshield Wiper Motor
—	—	KR27 Starter Motor	—	• F42UA
—	—	KR27C Engine Re-start Relay	—	• F41UA
—	—	KR29 A/C Compressor Clutch Relay	—	• F26UA
—	—	KR41 High Mount Stop Lamp Relay	—	• F51UA
—	—	KR53 Parking Lamp Relay	—	• F27UA • F25UA • F60UA
—	—	KR61 Trailer Back-up Lamp Relay	—	• F33UA
—	—	KR63L Trailer Stop/Turn Signal Lamp Relay - Left	—	• F38UA
—	—	KR63R Trailer Stop/Turn Signal Lamp Relay - Right	—	• F39UA
—	—	KR75 Engine Controls Ignition Relay	—	• F14UA • F16UA • F21UA • F25UA • F31UA • F37UA • F43UA • F73UA
—	—	KR203 Front Drive Axle Actuator Relay	—	• F11UA
—	—	KR202 Accessory AC and DC Power Control Module Relay	—	• F71UA
—	—	KR204 Camera Washer Fluid Pump Relay - Underbody Cameras	—	• G24 Windshield Washer Pump
<b>Note: Items listed below are diagnostic test points for Wiper/Washer</b>				
TP1	—	TP1	—	• Front Wiper Control
TP2	—	TP2	—	• Front Wiper High
TP3	—	TP3	—	• Front Wiper Low
<b>Note: Items listed below are diagnostic test points not used</b>				
TP4	—	TP4	—	• Not Used


X50A Engine Wiring Harness Junction Block Bottom View

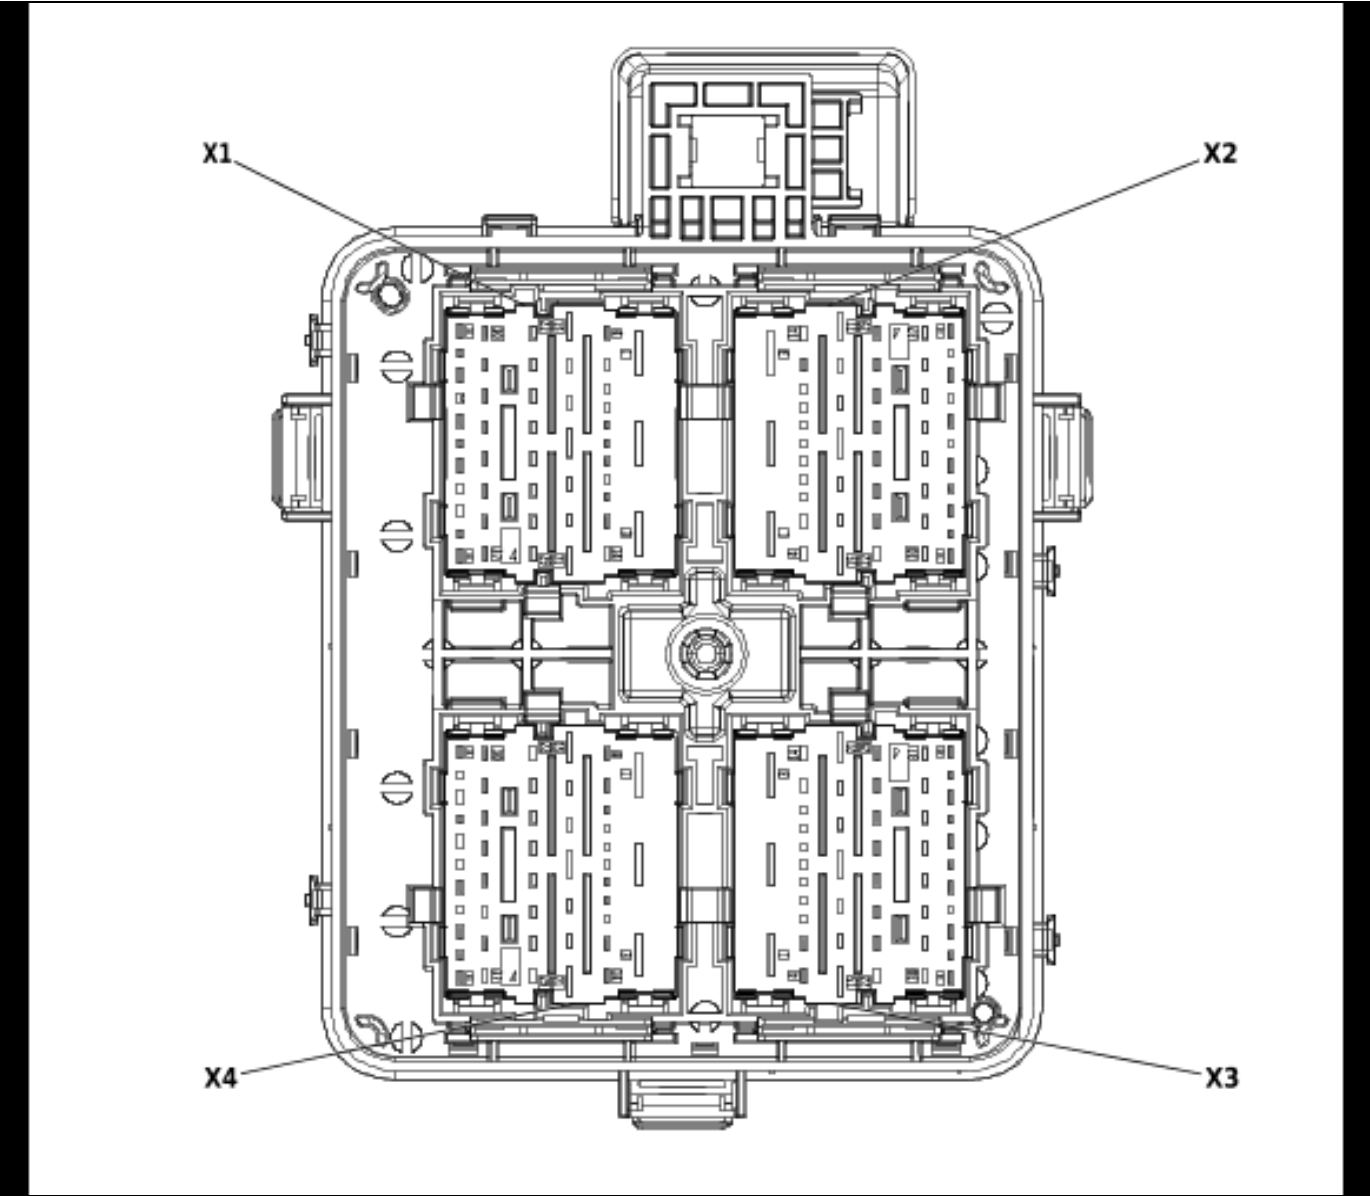

6181030



**X50A Engine Wiring Harness Junction Block X1**

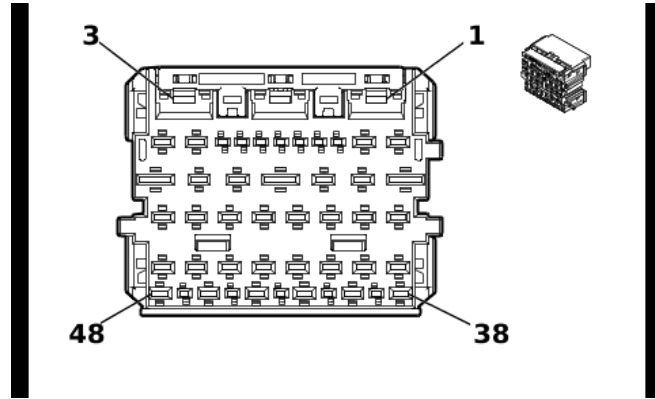

5834300

**Connector Part Information**

Harness Type: Chassis Wiring Harness  
 OEM Connector: 7298-4594-60  
 Service Connector: 85595153  
 Description: 48-Way F 1.5, 2.8, 6.3 MCP, 9.5 YESC Series( GN)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19333301	J-35616-22 (RD)	J-38125-215A
II	84764078	J-35616-42 (RD)	J-38125-215A
III	84779405	J-35616-35 (VT)	J-38125-215A


**X50A Engine Wiring Harness Junction Block X1**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	4	RD / VT	1242	Battery Positive Voltage	I	—
2	6	RD / BN	440	Battery Positive Voltage	I	—
3 - 14	—	—	—	Not Occupied	—	—
15	3	RD / WH	2242	Battery Positive Voltage	II	—
16	2.5	RD / YE	5840	Battery Positive Voltage	III	—
17	2.5	RD / VT	5640	Battery Positive Voltage	III	—
18	—	—	—	Not Occupied	—	—
19	3	RD / GY	1042	Battery Positive Voltage	III	—
20 - 26	—	—	—	Not Occupied	—	—
27	0.5	RD / WH	4140	Battery Positive Voltage	III	—
28	0.5	GN	8016	Secondary Axle Motor Control	III	—
29	—	—	—	Not Occupied	—	—
30	0.75	GN / VT	1619	Right Rear Trailer Stop/Turn Lamp Control	III	—
31	0.75	WH / GN	1624	Trailer Backup Lamp Control	III	—
32	1.5	GY / BN	2109	Trailer Park Lamp Control	III	—
33 - 34	—	—	—	Not Occupied	—	—
35	0.5	RD / BN	4940	Battery Positive Voltage	III	—
36	—	—	—	Not Occupied	—	—
37	3	RD / VT	1940	Battery Positive Voltage	III	—
38	0.75	YE / GY	1618	Left Rear Trailer Stop/Turn Lamp Control	III	—

**6-34 Electrical Component and Inline Harness Connector End Views****X50A Engine Wiring Harness Junction Block X1 (cont'd)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
39 - 47	—	—	—	Not Occupied	—	—
48	1	RD / WH	2140	Battery Positive Voltage	III	—

**X50A Engine Wiring Harness Junction Block X2**

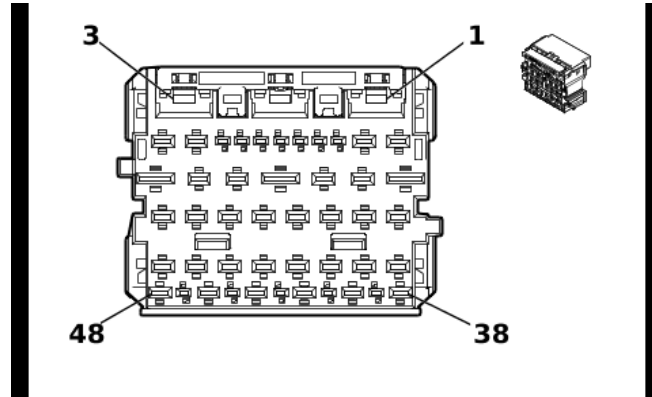

5838162

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 7298-4593-40  
 Service Connector: 85595155  
 Description: 48-Way F 1.5, 2.8, 6.3 MCP, 9.5 YESC Series( GY)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19333301	J-35616-22 (RD)	J-38125-215A
II	19369711	J-35616-14 (GN)	EL-38125-560A
III	84764078	J-35616-42 (RD)	J-38125-215A
IV	84779405	J-35616-35 (VT)	J-38125-215A


**X50A Engine Wiring Harness Junction Block X2**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	5	RD / YE	1442	Battery Positive Voltage	I	—
2	5	RD / BU	1542	Battery Positive Voltage	I	—
3	4	YE / GN	4358	Starter Pinion Solenoid Voltage	I	—
4 - 9	—	—	—	Not Occupied	—	—
10	0.5	VT / GY	8017	Secondary Axle Motor Relay Control	II	—
11	—	—	—	Not Occupied	—	—
12	0.5	YE / VT	4325	Starter Pinion Solenoid Actuator Relay Control	II	—
13 - 17	—	—	—	Not Occupied	—	—
18	5	RD / GY	1342	Battery Positive Voltage	III	—
19	—	—	—	Not Occupied	—	—
20	0.5	RD / WH	140	Battery Positive Voltage	IV	—
21	2.5	YE	6	Starter Solenoid Crank Ignition Voltage	III	—
22 - 25	—	—	—	Not Occupied	—	—
26	0.5	VT / BU	5294	Powertrain Main Relay Fused Supply Voltage 5	IV	—
27	2	VT / BU	5290	Powertrain Main Relay Fused Supply Voltage 1	IV	—
28	1	VT / BU	5291	Powertrain Main Relay Fused Supply Voltage 2	IV	—
29 - 33	—	—	—	Not Occupied	—	—
34	0.5	VT / BU	5293	Powertrain Main Relay Fused Supply Voltage 4	IV	—
35	0.5	YE	5991	Powertrain Relay Coil Control	IV	—

**6-36 Electrical Component and Inline Harness Connector End Views****X50A Engine Wiring Harness Junction Block X2 (cont'd)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
36	1	YE / BK	625	Starter Enable Relay Control	IV	—
37	—	—	—	Not Occupied	—	—
38	1.5	RD / BU	840	Battery Positive Voltage	IV	—
39 - 43	—	—	—	Not Occupied	—	—
44	0.75	BN / GN	59	Air Conditioning Compressor Clutch Control	IV	—
45 - 46	—	—	—	Not Occupied	—	—
47	0.5	WH / GY	459	Air Conditioning Compressor Clutch Relay Control	II	—
48	—	—	—	Not Occupied	—	—

**X50A Engine Wiring Harness Junction Block X3**

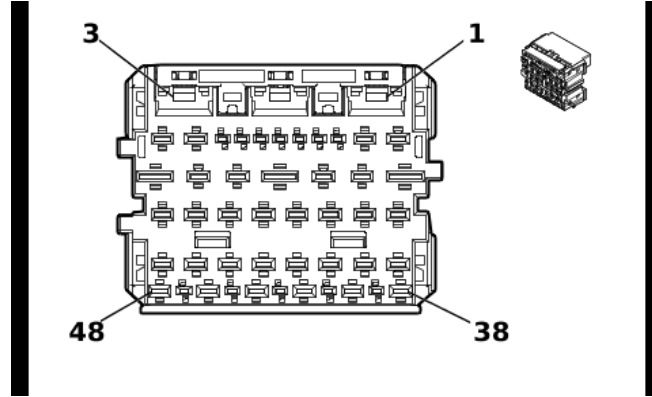

5833039

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 7298-4633-90  
 Service Connector: 85595154  
 Description: 48-Way F 1.5, 2.8, 6.3 MCP, 9.5 YESC Series( BU)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19333301	J-35616-22 (RD)	J-38125-215A
II	19369711	J-35616-14 (GN)	EL-38125-560A
III	84764078	J-35616-42 (RD)	J-38125-215A
IV	84779405	J-35616-35 (VT)	J-38125-215A


**X50A Engine Wiring Harness Junction Block X3**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	—	Not Occupied	—	—
2	5	BN / BK	4629	DC/AC Inverter Control	I	—
3 - 4	—	—	—	Not Occupied	—	—
5	3	RD / YE	3740	Battery Positive Voltage	IV	—
6	0.35	BN / VT	193	Rear Defogger Relay Control	II	—
7 - 10	—	—	—	Not Occupied	—	—
11	0.5	WH / GN	4628	DC/AC Inverter Relay Control	II	—
12	—	—	—	Not Occupied	—	—
13	0.35	BN / GY	2268	Windshield Washer Relay Control	IV	—
14	0.75	BK	2250	Ground	IV	—
15	2.5	BN / VT	293	Rear Defogger Grid Control	III	—
16 - 19	—	—	—	Not Occupied	—	—
20	0.75	GY / VT	228	Windshield Washer Pump Control	IV	—
21 - 23	—	—	—	Not Occupied	—	—
24	0.75	RD / WH	640	Battery Positive Voltage	IV	—
25	0.5	VT / BU	5705	Powertrain Main Relay Control	IV	—
26	—	—	—	Not Occupied	—	—
27	0.75	RD / BU	840	Battery Positive Voltage	IV	—
28 - 31	—	—	—	Not Occupied	—	—

**6-38 Electrical Component and Inline Harness Connector End Views****X50A Engine Wiring Harness Junction Block X3 (cont'd)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
32	0.75	RD / YE	740	Battery Positive Voltage	IV	—
33	1	RD / VT	1640	Battery Positive Voltage	IV	—
34 - 40	—	—	—	Not Occupied	—	—
41	0.35	GY	91	Windshield Wiper Motor Relay Coil Control	II	—
42 - 43	—	—	—	Not Occupied	—	—
44	2.5	BK	150	Ground	IV	—
45	—	—	—	Not Occupied	—	—
46	2.5	YE / BN	95	Windshield Wiper Motor Low Speed Control	IV	—
47	0.35	WH / VT	860	Windshield Wiper Switch High Signal	II	—
48	2.5	WH	92	Windshield Wiper Motor High Speed Control	IV	—

**X50A Engine Wiring Harness Junction Block X4**

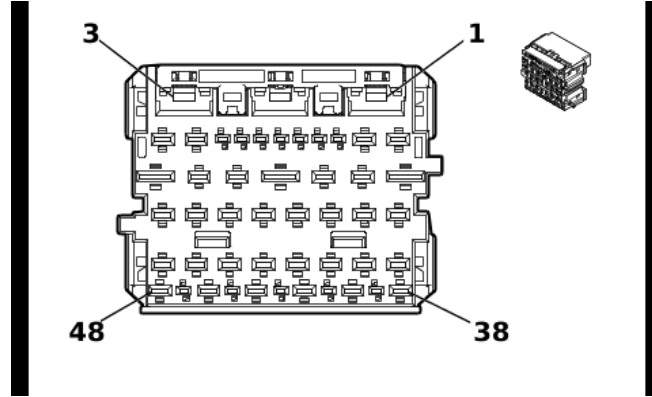

5830395

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 7298-4588-30  
 Service Connector: 85650078  
 Description: 48-Way F 1.5, 2.8, 6.3 MCP, 9.5 YESC Series( BK)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19333301	J-35616-22 (RD)	J-38125-215A
II	19369711	J-35616-14 (GN)	EL-38125-560A
III	84764078	J-35616-42 (RD)	J-38125-215A
IV	84779405	J-35616-35 (VT)	J-38125-215A

**X50A Engine Wiring Harness Junction Block X4**


Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 2	—	—	—	Not Occupied	—	—
3	4	RD / BN	4142	Primary Fused Battery Positive Voltage	I	—
4	2.5	BK	2250	Ground	IV	—
5	0.35	BN / WH	28	Horn Relay Control	IV	—
6 - 14	—	—	—	Not Occupied	—	—
15	2.5	RD / GY	3540	Battery Positive Voltage	III	—
16	0.75	BN / GY	29	Horn Control	IV	—
17	0.5	RD / VT	3340	Battery Positive Voltage	IV	—
18	—	—	—	Not Occupied	—	—
19	0.35	GN / WH	2270	Rear Window Washer Relay Control	IV	—
20 - 21	—	—	—	Not Occupied	—	—
22	2.5	RD / GY	3540	Battery Positive Voltage	IV	—
23 - 25	—	—	—	Not Occupied	—	—
26	0.75	BU / VT	392	Rear Window Washer Pump Control	IV	—
27	1.5	RD / BN	1440	Battery Positive Voltage	IV	—
28	—	—	—	Not Occupied	—	—
29	0.35	BU / BN	38	Backup Lamp Relay Control	IV	—
30	2.5	RD / YE	4340	Battery Positive Voltage	IV	—
31 - 33	—	—	—	Not Occupied	—	—

**6-40 Electrical Component and Inline Harness Connector End Views****X50A Engine Wiring Harness Junction Block X4 (cont'd)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
34	0.75	RD / BU	4540	Battery Positive Voltage	IV	—
35	0.35	WH / BN	7055	Auxiliary Park Lamp Relay Control	IV	—
36	—	—	—	Not Occupied	—	—
37	0.5	BN / GN	4246	Identification Lamp Control	IV	—
38 - 39	—	—	—	Not Occupied	—	—
40	1.5	RD / GY	1740	Battery Positive Voltage	IV	—
41	—	—	—	Not Occupied	—	—
42	0.75	RD / VT	4640	Battery Positive Voltage	IV	—
43	0.35	GN / BN	319	Right Rear Trailer Stop/Turn Lamp Control	II	—
44	—	—	—	Not Occupied	—	—
45	0.35	BN / YE	820	Center High Mounted Stop Lamp Supply Voltage	II	—
46	2.5	RD / BU	1240	Battery Positive Voltage	IV	—
47	0.35	YE / BU	318	Left Rear Trailer Stop/Turn Lamp Control	II	—
48	0.5	BU / BK	1053	Center High Mounted Stop Lamp Control 3	IV	—



**X50A Engine Wiring Harness Junction Block X5**

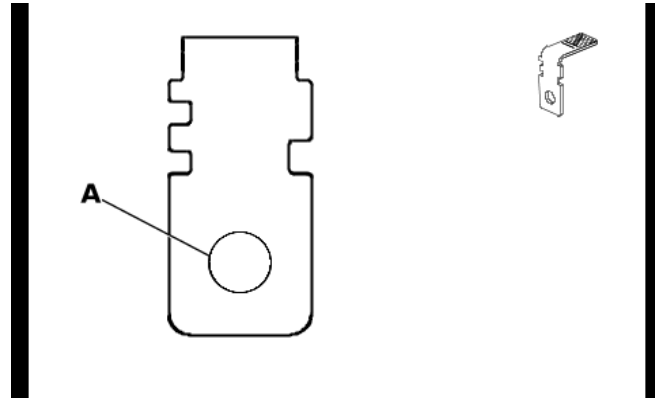

5881235

**Connector Part Information**

Harness Type: Battery Negative Cable Extension Cable  
 OEM Connector: 84809756  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 1-Way Ring Terminal


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**X50A Engine Wiring Harness Junction Block X5**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	—	RD / WH	4042	Battery Positive Voltage	I	—

**X50B Battery Distribution Engine Compartment Fuse Block Top View**

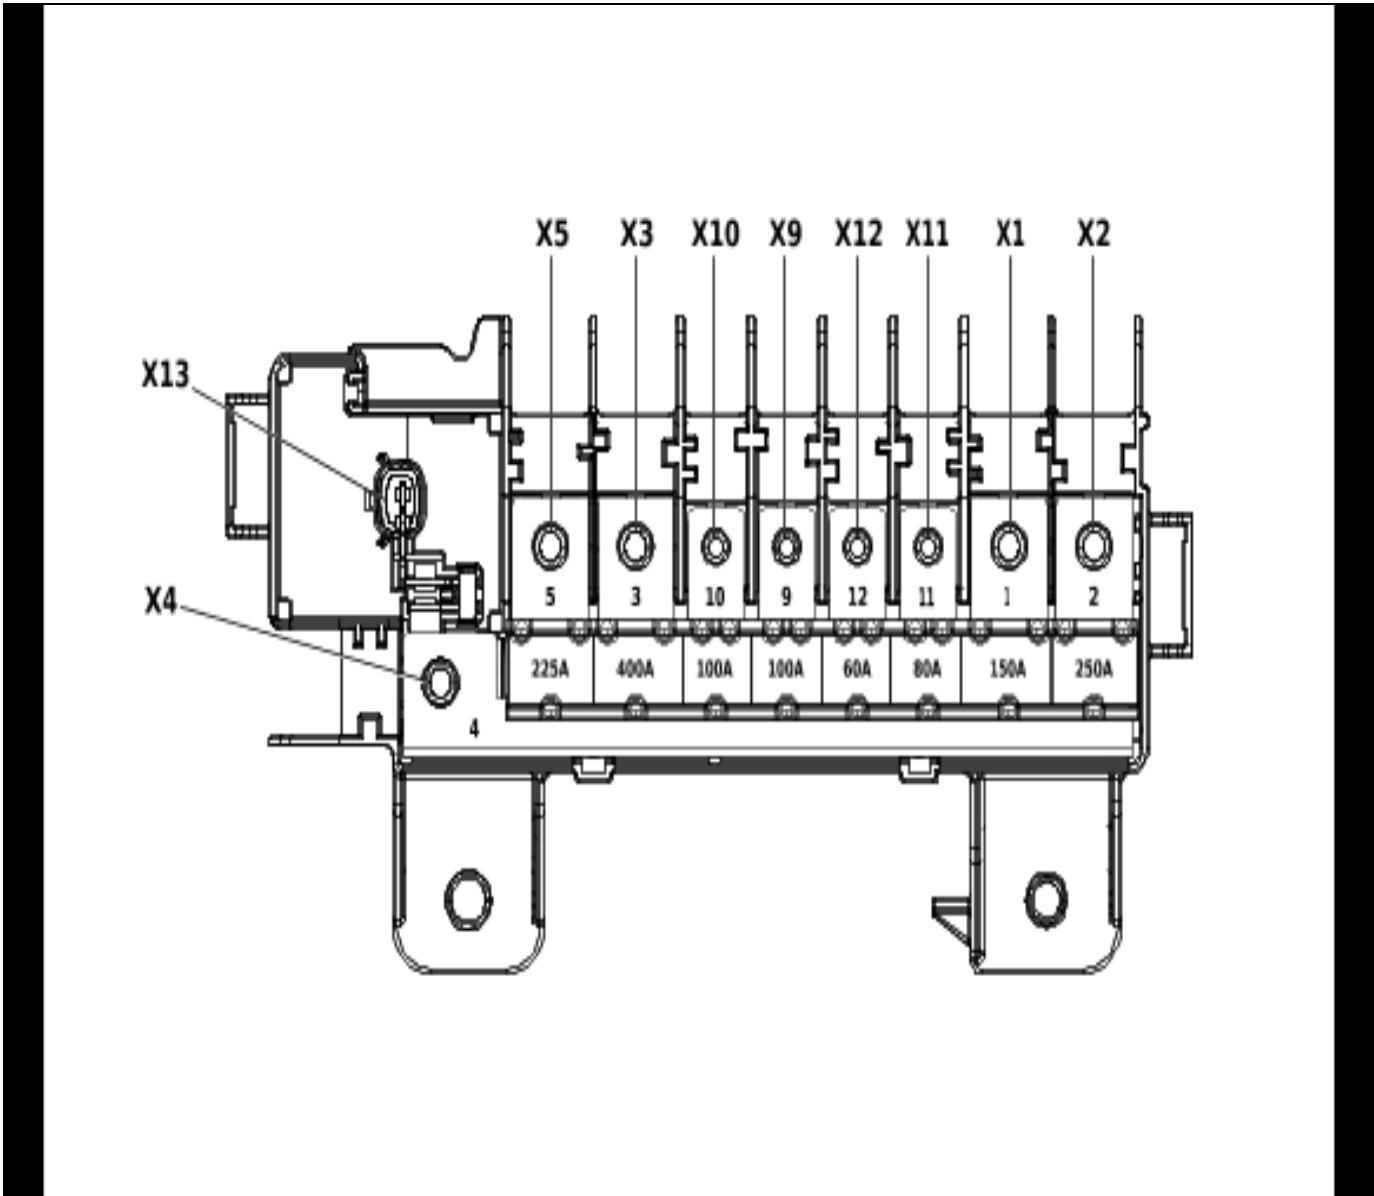

6181031


**Usage Table**

No.	Device Label Name	Device Assigned Name	Rating	Description
<b>Fuses</b>				
1	—	F1BA	150A	• K43 Power Steering Control Module
2	—	F2BA	250A	• X50A Engine Wiring Harness Junction Block
3	—	F3BA	400A	• M64 Starter
5	—	F5BA	225A	• G13 Generator (-Z82)
5	—	F5BA	300A	• G13 Generator (Z82)
9	—	F9BA	100A	• X51A Instrument Panel Wiring Harness Junction Block
10	—	F10BA	100A	• X51A Instrument Panel Wiring Harness Junction Block
11	—	F11BA	80A	• G59 Engine Coolant Pump
12	—	F12BA	60A	• K160 Brake System Control Module

**Usage Table (cont'd)**

No.	Device Label Name	Device Assigned Name	Rating	Description
13	—	F13BA	5A	• B110 Battery Monitor Module

**X50B Battery Distribution Engine Compartment Fuse Block X1**

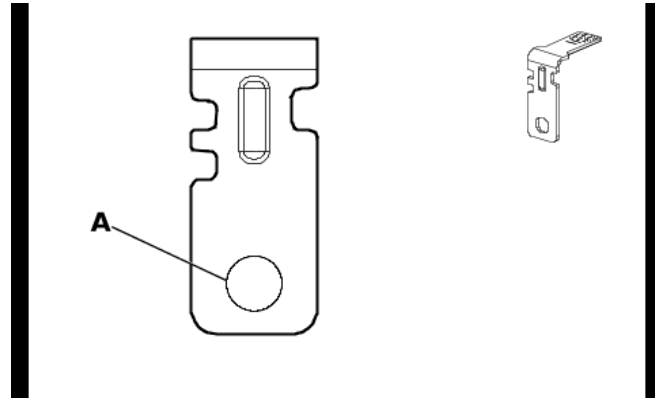

6143262

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 1136902  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 1-Way Ring Terminal


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**X50B Battery Distribution Engine Compartment Fuse Block X1**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	—	RD / VT	542	Battery Positive Voltage	I	—

**X50B Battery Distribution Engine Compartment Fuse Block X2**

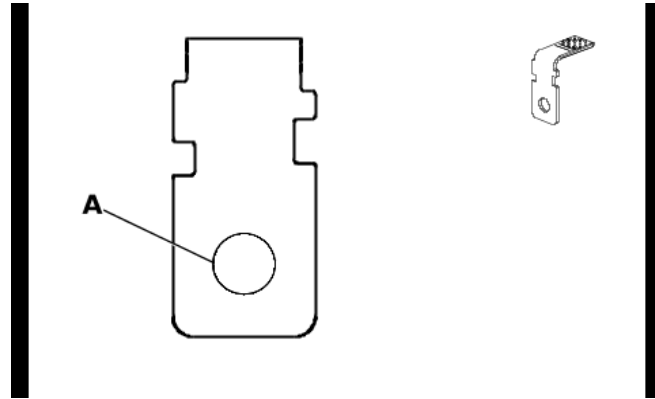

5902836

**Connector Part Information**

Harness Type: Battery Negative Cable Extension Cable  
 OEM Connector: 84809755  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 1-Way Ring Terminal

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**X50B Battery Distribution Engine Compartment Fuse Block X2**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	—	RD / WH	4042	Battery Positive Voltage	I	—

**X50B Battery Distribution Engine Compartment Fuse Block X3**

**Connector Part Information**

Harness Type: Battery Negative Cable  
 OEM Connector: 84809753  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 1-Way

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**X50B Battery Distribution Engine Compartment Fuse Block X3**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	—	RD / YE	2	Battery Positive Voltage	I	—

## X50B Battery Distribution Engine Compartment Fuse Block X5

—

### Connector Part Information

Harness Type: Battery Negative Cable Extension Cable  
 OEM Connector: 84809756  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 1-Way


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

### X50B Battery Distribution Engine Compartment Fuse Block X5

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	—	RD / YE	2	Battery Positive Voltage	I	—

**X50B Battery Distribution Engine Compartment Fuse Block X9**

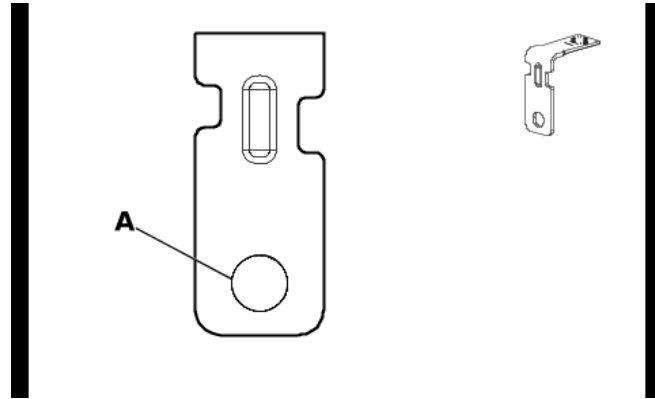

6143257

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 1136802  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 1-Way Ring Terminal

**Terminal Part Information**


Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**X50B Battery Distribution Engine Compartment Fuse Block X9**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	10	RD / GN	742	Battery Positive Voltage	I	—



**X50B Battery Distribution Engine Compartment Fuse Block X10**

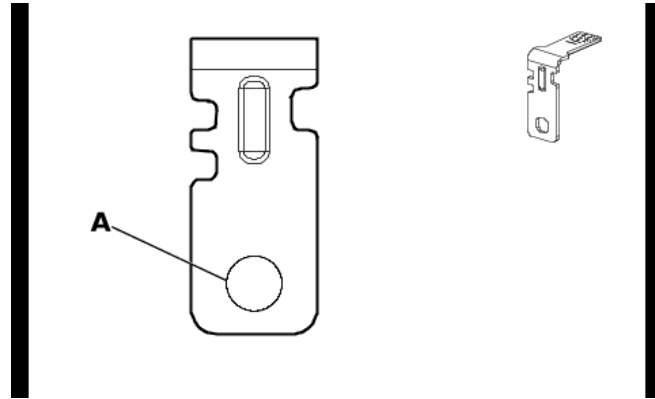

6143262

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 1136902  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 1-Way Ring Terminal


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**X50B Battery Distribution Engine Compartment Fuse Block X10**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	10	RD / VT	542	Battery Positive Voltage	I	—

**X50B Battery Distribution Engine Compartment Fuse Block X11**

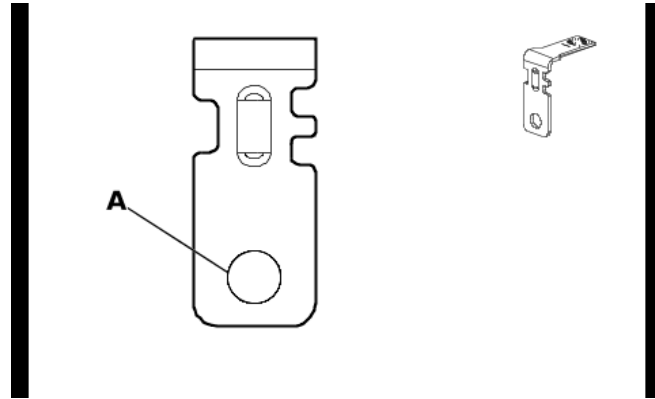

6143251

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 85528456  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 1-Way Ring Terminal


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**X50B Battery Distribution Engine Compartment Fuse Block X11**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	10	RD / YE	442	Battery Positive Voltage	I	—

**X50B Battery Distribution Engine Compartment Fuse Block X12**

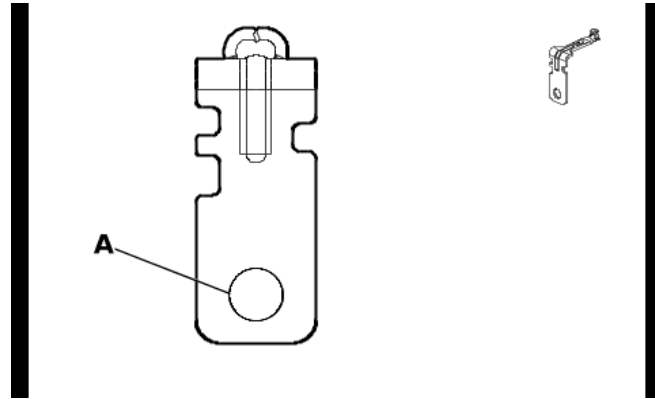

5877012

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 84841283  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 1-Way Ring Terminal


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**X50B Battery Distribution Engine Compartment Fuse Block X12**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	6	RD / WH	342	Battery Positive Voltage	I	—

**X50B Battery Distribution Engine Compartment Fuse Block X13**

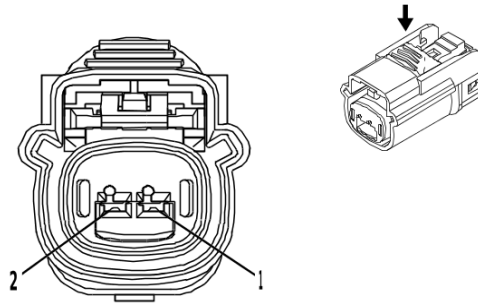

4332222

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 33314786  
 Service Connector: 19368124  
 Description: 2-Way F 1.5 OCS Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required


**X50B Battery Distribution Engine Compartment Fuse Block X13**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	RD / YE	2340	Battery Positive Voltage	I	—
2	—	—	—	Not Occupied	—	—

X51A Instrument Panel Wiring Harness Junction Block Label

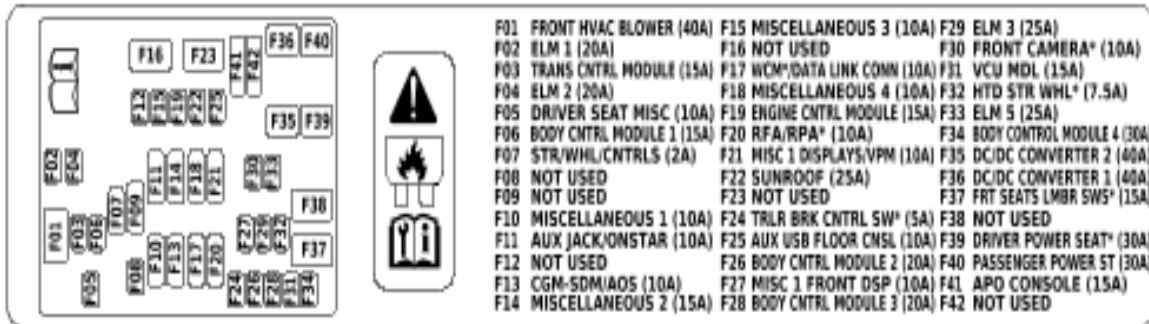

X51A Instrument Panel Wiring Harness Junction Block Top View

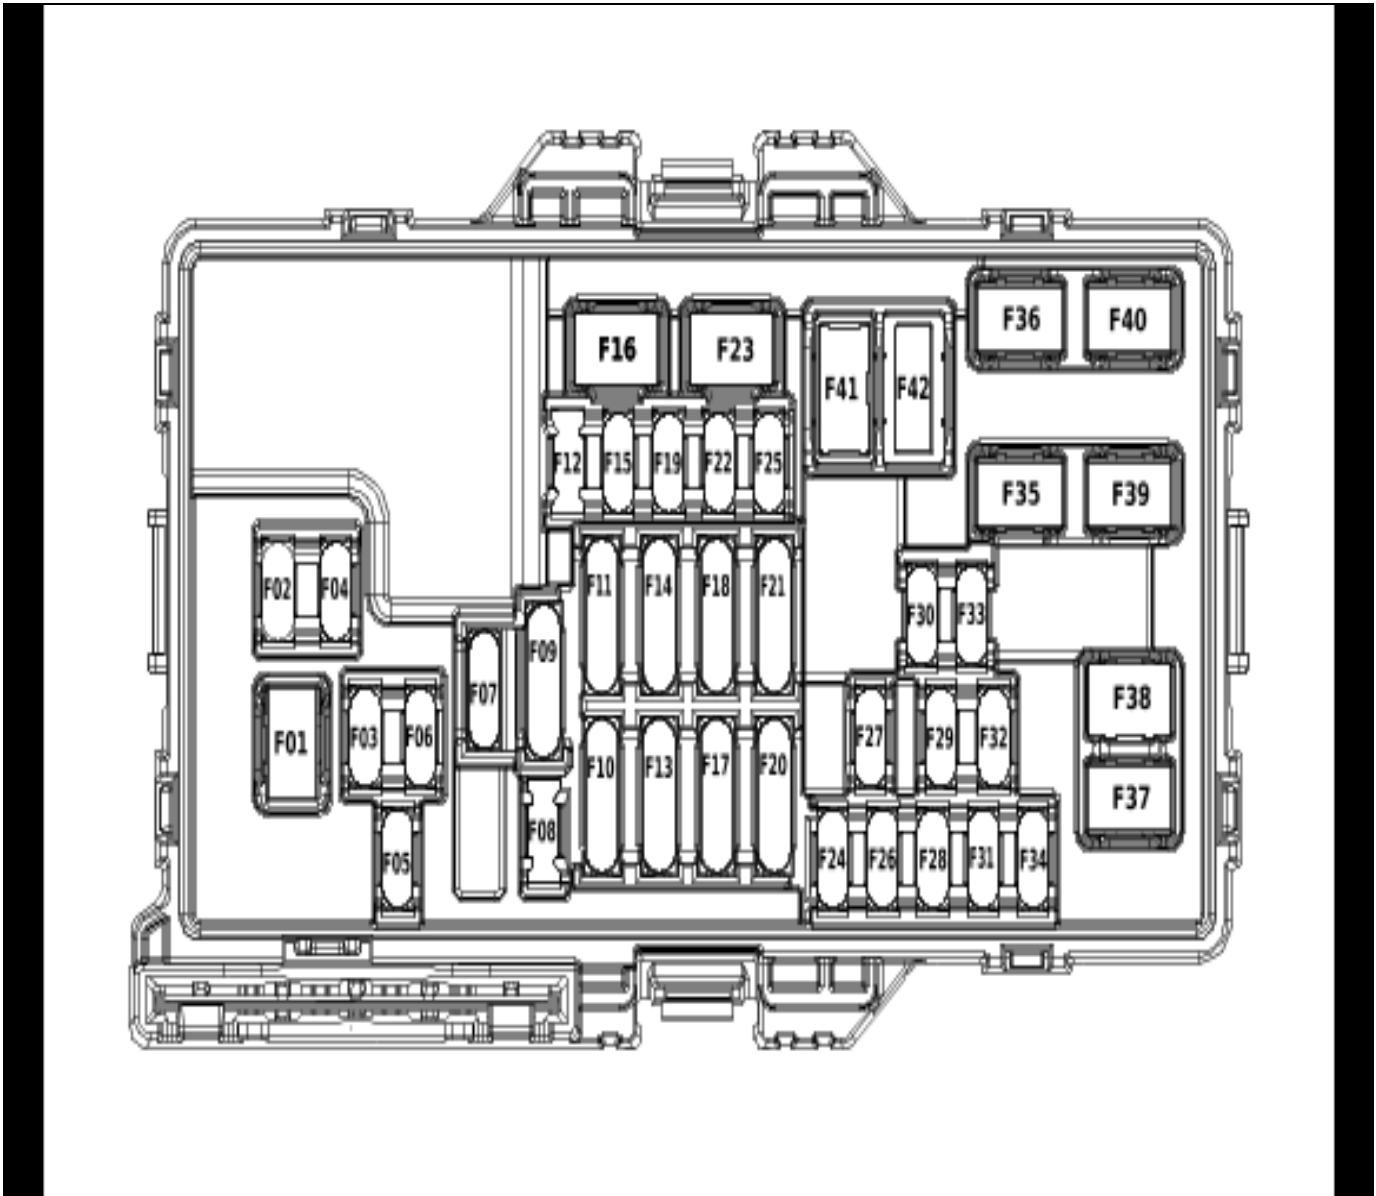

6181034

Usage Table

No.	Device Label Name	Device Assigned Name	Rating	Description
<b>Fuses</b>				
F1	FRONT HVAC BLOWER	F1DA	40A	• M8 Blower Motor
F2	ELM 1	F2DA	20A	• K219 Lighting Control Module
F3	TRANS CNTRL MODULE	F3DA	15A	• K71 Transmission Control Module
F4	ELM 2	F4DA	20A	• K219 Lighting Control Module
F5	DRIVER SEAT MISC	F5DA	10A	• K40D Driver Seat Adjuster Memory Module (A45) • S64D Front Seat Adjuster Switch - Driver (A45)
F6	BODY CNTRL MODULE 1	F6DA	20A	• K9 Body Control Module
F7	STR/WHL/ CNTRLS	F7DA	2A	• S70R Radio Control Switch - Steering Wheel

**Usage Table (cont'd)**

No.	Device Label Name	Device Assigned Name	Rating	Description
F8	NOT USED	F8DA	—	• Not Used
F9	NOT USED	F9DA	—	• Not Used
F10	MISCELLANEOUS 1	F10DA	10A	• P14 Instrument Panel Airbag Arming Status Display • S91 Parking Brake Control Switch
F11	AUX JACK/ON-STAR	F11DA	10A	• K73 Telematic Control Module • X92G USB 2 Port Receptacle
F12	NOT USED	F12DA	—	• Not Used
F13	CGM-SCM/AOS	F13DA	10A	• K36 Restraints Control Module • K56 Serial Data Gateway Module • K85P Restraints Occupant Classification System Module - Passenger
F14	MISCELLANEOUS 2	F14DA	15A	• K38 Chassis Control Module (G93/G94) • K71 Transmission Control Module • K160 Brake System Control Module
F15	MISCELLANEOUS 3	F15DA	10A	• K219 Lighting Control Module • M73D Front Seat Cushion Ventilation Blower - Driver (KU9) • M73P Front Seat Cushion Ventilation Blower - Passenger (KU9) • T1 DC/AC Converter Control Module
F16	NOT USED	F16DA	—	• Not Used
F17	WCM/DATA LINK CONN	F17DA	10A	• T22 Wireless Accessory Charging Module (K4C) • X84 Data Link Connector
F18	MISCELLANEOUS 4	F18DA	10A	• A10 Inside Rearview Mirror (DD8) • B160 Inside Air Moisture and Windshield Temperature Sensor • K36 Restraints Control Module • P43 Forward Collision Alert Display (UIT- UV6) • S126 Ride Control Switch (NP0/NPQ)
F19	ENGINE CNTRL MODULE	F19DA	15A	• K20 Engine Control Module
F20	RFA / RPA	F20DA	10A	• K77 Remote Function Actuator Module • K182 Parking Assist Control Module (UD7)
F21	MISC 1 DISPLAYS/VPM	F21DA	10A	• A22 Radio Control • A26 Heater and Air Conditioning User Interface Control • K157 Video Processing Module (UV2/UXA-UVB) • P16 Instrument Panel Cluster Control Module • P29 Head-Up Display (UV6)
F22	SUNROOF	F22DA	25A	• K61 Sunroof Control Module (CAC)
F23	NOT USED	F23DA	—	• Not Used
F24	TRLR BRK CNRTL SW	F24DA	5A	• S76 Trailer Brake Control Switch (JL1+Z82)
F25	AUS USB FLOOR CNSL	F25DA	10A	• X92C Single Charge Only 2nd Row Receptacle - Floor Console Rear
F26	BODY CNTRL MODULE 2	F26DA	20A	• K9 Body Control Module
F27	MISC 1 FRONT DSP	F27DA	10A	• S79D Front Side Door Window Control Switch - Driver
F28	BODY CNTRL MODULE 3	F28DA	20A	• K9 Body Control Module


## 6-56 Electrical Component and Inline Harness Connector End Views

### Usage Table (cont'd)

No.	Device Label Name	Device Assigned Name	Rating	Description
F29	ELM 3	F29DA	25A	• K219 Lighting Control Module
F30	FRONT CAMERA	F30DA	10A	• B174W Front View Camera - Windshield
F31	VCU MDL	F31DA	15A	• A11 Radio
F32	HTD STR WHL	F32DA	7.5A	• K32 Heated Steering Wheel Module (KI3)
F33	ELM 5	F33DA	25A	• K219 Lighting Control Module
F34	BODY CNTRL MODULE 4	F34DA	30A	• K9 Body Control Module
F35	DC/DC CONVERTER 2	F35DA	40A	• T19 Multifunction Power Supply Converter
F36	DC/DC CONVERTER 1	F36DA	40A	• T19 Multifunction Power Supply Converter
F37	FRT SEATS LMBR SWS	F37DA	15A	• S65D Front Seat Lumbar Switch - Driver (AL9) • S65P Front Seat Lumbar Switch - Passenger (AT9)
F38	NOT USED	F38DA	—	• Not Used
F39	DRIVER POWER SEAT	F39DA	30A	• K40D Driver Seat Adjuster Memory Module (A45) • S64D Front Seat Adjuster Switch - Driver (A2X)
F40	PASSENGER POWER ST	F40DA	30A	• S64P Front Seat Adjuster Switch - Passenger (A7J)
F41	APO CONSOLE	CB41DA	15A	• X80L Front Floor Console Accessory Power Rear Receptacle
F42	NOT USED	CB42DA	—	• Not Used
<b>Note: Relays listed below are non-serviceable Printed Circuit Board (PCB) relays and are internal to the block.</b>				
—	—	KR73 Ignition Main Relay	—	• F12DA • F14DA • F15DA • F19DA • F18DA
—	—	KR76 Accessory Time Delay Cutoff Relay	—	• F23DA • F25DA • CB41DA • CB42DA




X51A Instrument Panel Wiring Harness Junction Block Bottom View

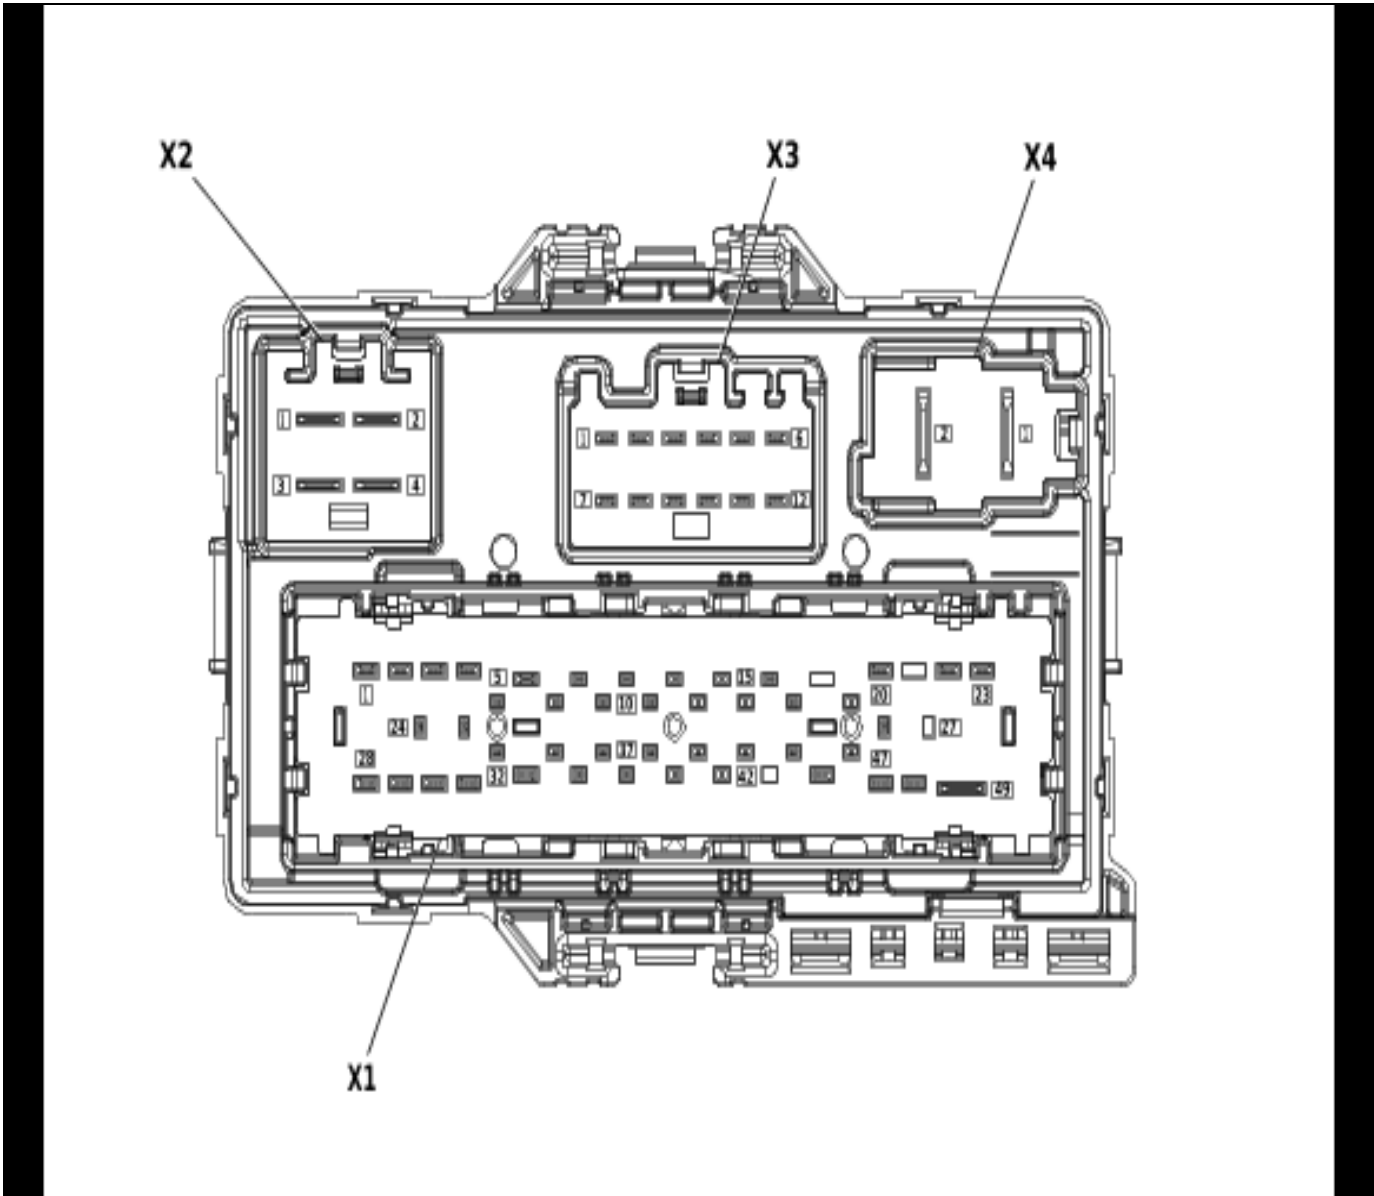

6181035

**X51A Instrument Panel Wiring Harness Junction Block X1**

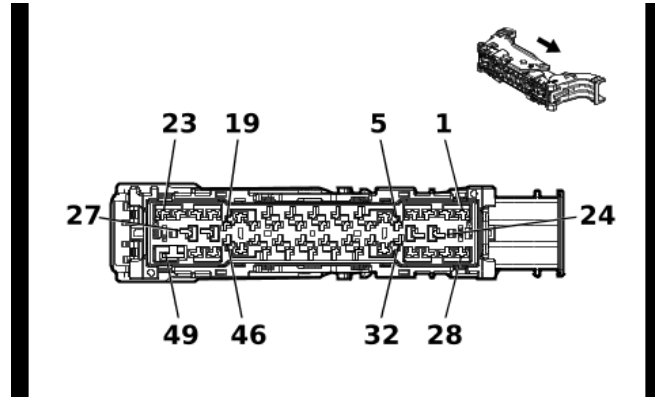

5835272

**Connector Part Information**

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: 13537037  
 Service Connector: 85564872  
 Description: 49-Way F 1.5, 2.8, 6.3 Kaizen Series( BK)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	13575835	J-35616-42 (RD)	J-38125-11A
II	13575850	J-35616-2A (GY)	J-38125-557
III	19368264	J-35616-4A (PU)	J-38125-11A


**X51A Instrument Panel Wiring Harness Junction Block X1**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 2	—	—	—	Not Occupied	—	—
3	1.5	RD / GN	1540	Battery Positive Voltage	III	—
4	1.5	RD / WH	1340	Battery Positive Voltage	III	—
5	0.5	RD / VT	1940	Battery Positive Voltage	II	—
6	1	VT	1001	Retained Accessory Power Ignition Voltage	III	—
7	—	—	—	Not Occupied	—	—
8	0.5	VT	4701	Retained Accessory Power Control	II	—
9	0.35	RD / BN	1440	Battery Positive Voltage	II	—
10	—	—	—	Not Occupied	—	—
11	0.5	VT / WH	1139	Run/Crank Ignition 1 Voltage	II	—
12	0.5	VT / BK	739	Run/Crank Ignition 1 Voltage	II	—
13	—	—	—	Not Occupied	—	—
14	0.35	RD / WH	7240	Battery Positive Voltage	II	—
15	0.5	RD / BU	3240	Battery Positive Voltage	II	—
16 - 18	—	—	—	Not Occupied	—	—
19	0.35	GN / VT	5199	Run/Crank Relay Coil Control	II	—
20	0.75	RD / WH	2740	Battery Positive Voltage	III	—
21	—	—	—	Not Occupied	—	—
22	1	RD / BU	1240	Battery Positive Voltage	III	—
23	1	RD / BN	1140	Battery Positive Voltage	III	—

**X51A Instrument Panel Wiring Harness Junction Block X1 (cont'd)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
24	0.35	RD / BN	10040	Battery Positive Voltage	II	—
25	—	—	—	Not Occupied	—	—
26	0.35	GY / GN	4083	Retained Accessory Power Relay 2 Coil Control	II	—
27	0.75	RD / GN	1840	Battery Positive Voltage	II	—
28	0.75	RD / WH	3440	Battery Positive Voltage	III	—
29	2	RD / BU	2540	Battery Positive Voltage	III	—
30	0.75	RD / WH	2040	Battery Positive Voltage	III	IVD+ UQA
	0.75	RD / BN	2240	Battery Positive Voltage	III	IVD- UQA
31	1	RD / GY	2140	Battery Positive Voltage	III	—
32	—	—	—	Not Occupied	—	—
33	1	RD / GY	2840	Battery Positive Voltage	III	—
34	0.35	RD / VT	4040	Battery Positive Voltage	II	—
35	—	—	—	Not Occupied	—	—
36	0.35	VT / GN	39	Run/Crank Ignition 1 Voltage	II	—
37	0.5	RD / BU	3240	Battery Positive Voltage	II	—
38	0.5	RD / VT	6340	Battery Positive Voltage	II	—
39	0.35	RD / WH	6440	Battery Positive Voltage	II	—
40	0.5	RD / GN	4440	Battery Positive Voltage	II	—
41	—	—	—	Not Occupied	—	—
42	0.5	RD / GN	5140	Battery Positive Voltage	II	—
43 - 45	—	—	—	Not Occupied	—	—
46	0.35	RD / GN	5140	Battery Positive Voltage	II	—
47	—	—	—	Not Occupied	—	—
48	0.35	RD / VT	3340	Battery Positive Voltage	III	—
49	5	RD / WH	2040	Battery Positive Voltage	I	—

**X51A Instrument Panel Wiring Harness Junction Block X2**

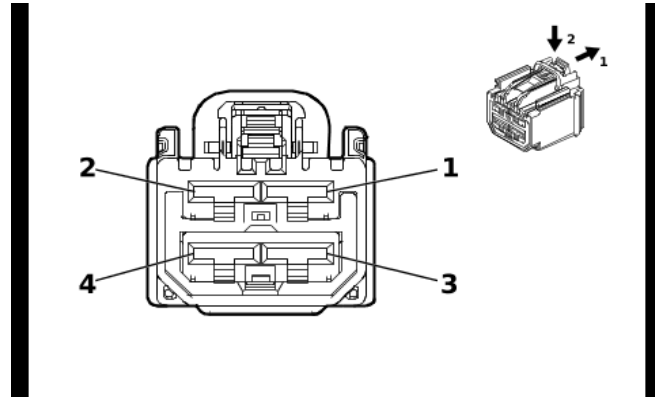

5492913

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 7289-7459-40  
 Service Connector: 84766433  
 Description: 4-Way F 6.3 YESC Series( GY)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-42 (RD)	No Tool Required

**X51A Instrument Panel Wiring Harness Junction Block X2**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	RD / YE	4340	Battery Positive Voltage	I	—
2	2.5	RD / BU	2540	Battery Positive Voltage	I	—
3	2.5	RD / GY	3540	Battery Positive Voltage	I	—
4	2.5	RD / VT	2640	Battery Positive Voltage	I	—

## X51A Instrument Panel Wiring Harness Junction Block X3

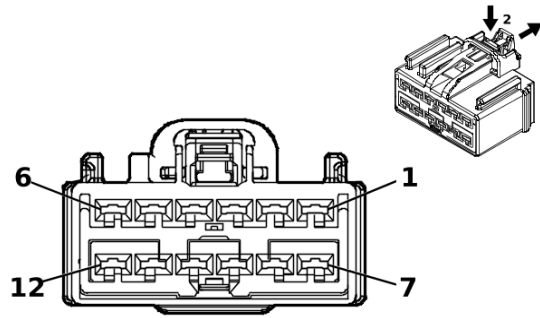

5254826

### Connector Part Information

Harness Type: Body Wiring Harness  
 OEM Connector: 7289-9152-40  
 Service Connector: 13518424  
 Description: 12-Way F 2.8 Kaizen Series( L-GY)


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19368264	J-35616-4A (PU)	J-38125-11A

### X51A Instrument Panel Wiring Harness Junction Block X3

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	RD / GN	2173	12V Regulated Supply Voltage 2	I	—
2	1.5	RD / YE	2340	Battery Positive Voltage	I	—
3 - 4	—	—	—	Not Occupied	—	—
5	0.5	BK / WH	451	Signal Ground	I	—
6	2.5	RD / YE	2172	12V Regulated Supply Voltage 1	I	—
7	0.35	RD / YE	240	Battery Positive Voltage	I	—
8	0.5	RD / VT	1640	Battery Positive Voltage	I	—
9	0.35	RD / VT	1640	Battery Positive Voltage	I	—
10	0.5	VT / BK	739	Run/Crank Ignition 1 Voltage	I	—
11	0.35	VT / WH	1139	Run/Crank Ignition 1 Voltage	I	—
12	—	—	—	Not Occupied	—	—

**X51A Instrument Panel Wiring Harness Junction Block X4**

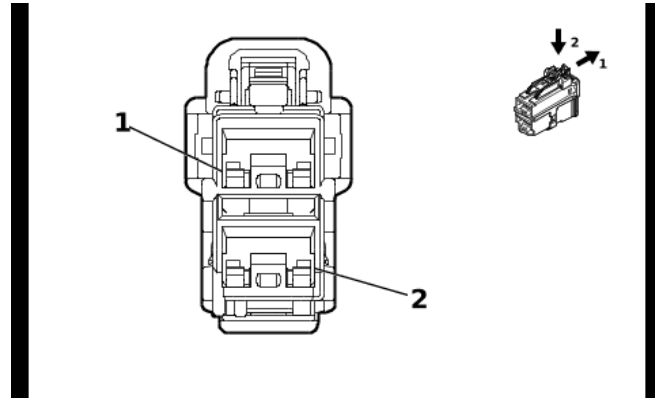

5835292

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 7289-8732-30  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F 9.5 YESC Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-42 (RD)	No Tool Required

**X51A Instrument Panel Wiring Harness Junction Block X4**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	10	RD / VT	542	Battery Positive Voltage	I	—
2	10	RD / GN	742	Battery Positive Voltage	I	—

**Component Connector End Views**  
**A3L Sunshade - Left (DEG)**

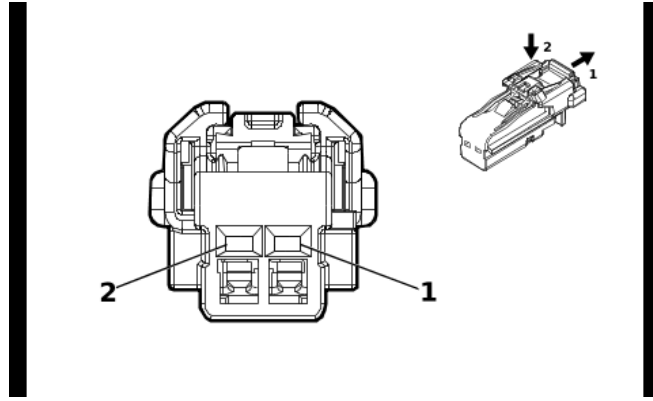

4115691

**Connector Part Information**

Harness Type: Roof Wiring Harness  
 OEM Connector: 6098-8988  
 Service Connector: 87816612  
 Description: 2-Way F 1.2 MCON Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

**A3L Sunshade - Left (DEG)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	WH / BN	6815	Inadvertent Load Control	I	—
2	0.35	BK	4250	Ground	I	—

**A3R Sunshade - Right (DEG)**

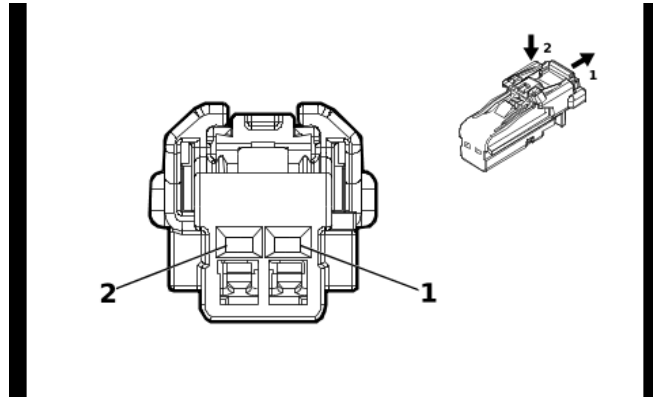

4115691

**Connector Part Information**

Harness Type: Roof Wiring Harness  
 OEM Connector: 6098-8988  
 Service Connector: 87816612  
 Description: 2-Way F 1.2 MCON Series( BK)

**Terminal Part Information**


Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

**A3R Sunshade - Right (DEG)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	WH / BN	6815	Inadvertent Load Control	I	—
2	0.35	BK	4250	Ground	I	—



**A7 Fuel Tank Fuel Pump Module**

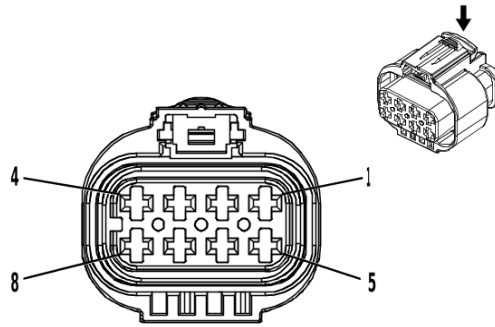

3749582

**Connector Part Information**

Harness Type: Chassis Wiring Harness  
 OEM Connector: 2-2109441-5  
 Service Connector: 19354078  
 Description: 8-Way F 2.8 Series, Sealed( L-GY)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required
II	Not required	J-35616-4A (PU)	No Tool Required

**A7 Fuel Tank Fuel Pump Module**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	GY	120	Fuel Pump Control	I	—
2	2.5	YE / GY	4137	Fuel Pump Supply Voltage Phase 2	I	—
3	2.5	WH / BN	4138	Fuel Pump Supply Voltage Phase 3	I	—
4	0.5	WH	7444	Fuel Pump Assembly Shield Ground	II	—
5	0.5	BU / GN	1936	Primary Fuel Level Sensor Signal	II	—
6	0.5	BK / GN	6281	Fuel Level Sensor Low Reference	II	—
7 - 8	—	—	—	Not Occupied	—	—

**A9A Outside Rearview Mirror - Driver**

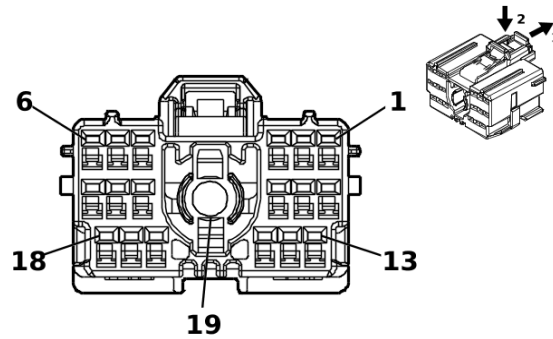

5253439

**Connector Part Information**

Harness Type: Front Side Door Door Wiring Harness - Driver  
 OEM Connector: 6098-8386  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 19-Way F 1.2 MCON, Coaxial Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required
II	Not required	No Tool Required	No Tool Required

**A9A Outside Rearview Mirror - Driver**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	BN / BK	2790	Left Front Mirror Motor Right [+] Left [-] Control	I	—
2	0.35	VT / BU	2788	Left Front Mirror Motor Up [+] Down [-] Control	I	—
3	—	—	—	Not Occupied	—	—
4	0.35	GY / YE	1760	Left Side Object Detection LED Control	I	—
5	—	—	—	Not Occupied	—	—
6	0.35	WH / YE	2792	Left Front Mirror Position Sensor Left [-] Right [+] Signal	I	—
7	0.5	WH	606	Left Outside Rearview Mirror Heater Control	I	—
8	—	—	—	Not Occupied	—	—
9	0.35	BK	3750	Ground	I	—
10	0.35	VT / RD	2791	Left Front Mirror Position Sensor High Reference	I	—
11	0.35	GY / BN	2787	Left Front Mirror Position Sensor Up [+] Down [-] Signal	I	—
12 - 13	—	—	—	Not Occupied	—	—
14	0.35	YE / BN	2789	Left Front Mirror Motor Common Control	I	—
15 - 17	—	—	—	Not Occupied	—	—
18	0.35	BK / BN	673	Left Outside Rearview Mirror Position Sensor Low Reference	I	—
19	0	Coax Cable	4725	Left Sideview Camera LVDS (Low Voltage Differential Signaling) Coaxial Signal	II	—

**A9B Outside Rearview Mirror - Passenger**

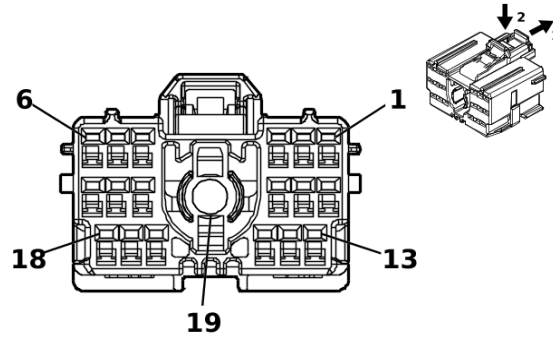

5253439

**Connector Part Information**

Harness Type: Front Side Door Door Wiring Harness - Passenger  
 OEM Connector: 6098-8386  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 19-Way F 1.2 MCON, Coaxial Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required
II	Not required	No Tool Required	No Tool Required

**A9B Outside Rearview Mirror - Passenger**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	GN / BK	2798	Right Front Mirror Motor Right [+] Left [-] Control	I	—
2	0.35	YE / VT	2796	Right Front Mirror Motor Up [+] Down [-] Control	I	—
3	—	—	—	Not Occupied	—	—
4	0.35	GY	1761	Right Side Object Detection LED Control	I	—
5	—	—	—	Not Occupied	—	—
6	0.35	VT / WH	2800	Right Front Mirror Position Sensor Left [-] Right [+] Signal	I	—
7	0.5	BN / VT	607	Right Outside Rearview Mirror Heater Control	I	—
8	—	—	—	Not Occupied	—	—
9	0.35	BK	4450	Ground	I	—
10	0.35	YE / RD	2799	Right Front Mirror Position Sensor High Reference	I	—
11	0.35	BU / YE	2795	Right Front Mirror Position Sensor Up [+] Down [-] Signal	I	—
12 - 13	—	—	—	Not Occupied	—	—
14	0.35	WH	2797	Right Front Mirror Motor Common Control	I	—
15 - 17	—	—	—	Not Occupied	—	—
18	0.35	BK / GN	675	Right Outside Rearview Mirror Position Sensor Low Reference	I	—
19	0	Coax Cable	4724	Right Sideview Camera LVDS (Low Voltage Differential Signaling) Coaxial Signal	II	—

**A10 Inside Rearview Mirror**

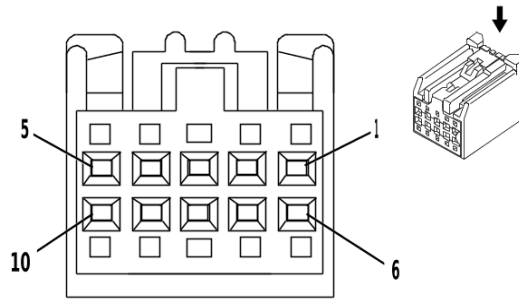

2180211

**Connector Part Information**

Harness Type: Roof Wiring Harness  
 OEM Connector: AIT2PB-10P-2AK  
 Service Connector: 13577390  
 Description: 10-Way F 0.64 Kaizen Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	13575742	J-35616-64B (L-BU)	J-38125-215A

**A10 Inside Rearview Mirror**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	GN / WH	24	Backup Lamp Control	I	—
2	0.35	VT / WH	1139	Run/Crank Ignition 1 Voltage	I	—
3 - 4	—	—	—	Not Occupied	—	—
5	0.35	BK / WH	1851	Signal Ground	I	—
6 - 10	—	—	—	Not Occupied	—	—

**A11 Radio X1**

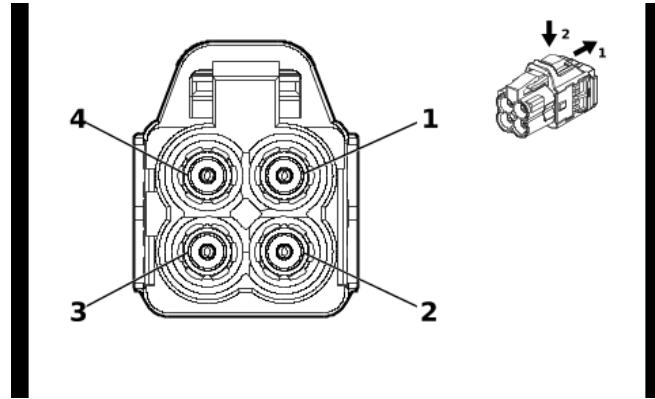

5835118

**Connector Part Information**

Harness Type: Instrument Panel Wiring Harness COAX  
 OEM Connector: 13544819  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 4-Way F Mini Coax Type( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**A11 Radio X1**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 4	—	—	—	Not Occupied	—	—
2_BK	0.01	Coax Ca- ble	6130	Coaxial Antenna XM Signal	I	—
3_BK	0	Coax Ca- ble	3297	Coaxial Antenna DAB Signal	I	—
4_BK	0.01	Coax Ca- ble	6001	Coaxial Antenna RF Signal	I	—

A11 Radio X2

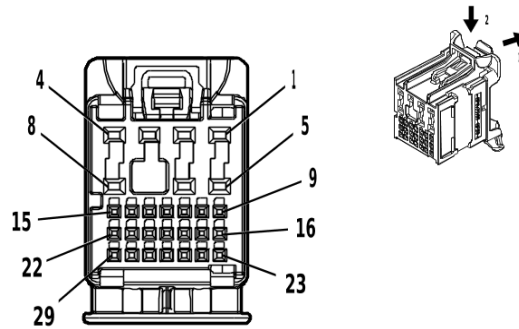

4578560

**Connector Part Information**

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: 160014-0011  
 Service Connector: 13534971  
 Description: 29-Way F 0.5 NANO, 1.2 MCON, stAK50h Series( GY)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19370262	EL-35616-58 (BK)	EL-38125-58
II	84729890	J-35616-12 (BU)	J-38125-215A

**A11 Radio X2**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	GN	199	Left Rear Speaker [+] Control	II	—
2	0.75	BU	201	Left Front Speaker 1 [+] Control	II	—
3	0.75	YE / BK	117	Right Front Speaker [-] Control 1	II	—
4	0.75	BU / BK	115	Right Rear Speaker [-] Control	II	—
5	0.75	BN / BU	118	Left Front Speaker [-] Control 1	II	—
6	0.75	YE	200	Right Front Speaker 1 [+] Control	II	—
7	—	—	—	Not Occupied	—	—
8	0.75	WH	46	Right Rear Speaker [+] Control	II	—
9	0.35	BU / WH	4985	AUTOSAR CAN Bus [+] 5 Serial Data	I	—
10	0.35	BU / YE	4984	AUTOSAR CAN Bus [-] 5 Serial Data	I	—
11 - 12	—	—	—	Not Occupied	—	—
13	0.35	GN / WH	24	Backup Lamp Control	I	—
14 - 17	—	—	—	Not Occupied	—	—
18	0.35	GN / GY	10652	Radio LIN Bus 1	I	—
19 - 21	—	—	—	Not Occupied	—	—
22	0.35	GY / YE	3885	Forward Collision Alert LED Control	I	—
23	0.35	GY / BK	4787	Day Night LED Control	I	—
24 - 29	—	—	—	Not Occupied	—	—

**A11 Radio X3**

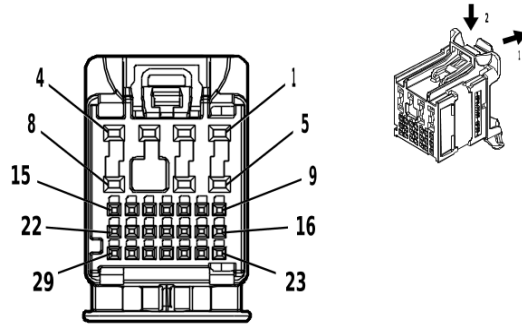

4496253

**Connector Part Information**

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: 160014-0014  
 Service Connector: 13534974  
 Description: 29-Way F 0.5 NANO, 1.2 MCON, stAK50h Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19370262	EL-35616-58 (BK)	EL-38125-58
II	84729890	J-35616-12 (BU)	J-38125-215A
III	Not required	No Tool Required	No Tool Required

**A11 Radio X3**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	RD / WH	2040	Battery Positive Voltage	II	UQA
	0.75	RD / BN	2240	Battery Positive Voltage	II	- UQA
2	0.75	RD / BN	2240	Battery Positive Voltage	II	—
3	0.75	BK / WH	2151	Signal Ground	II	—
4 - 5	—	—	—	Not Occupied	—	—
6	0.75	BK / WH	2151	Signal Ground	II	—
7	—	—	—	Not Occupied	—	—
8	0.75	GN / BK	116	Left Rear Speaker [-] Control	II	—
9	0.35	GY / YE	5149	Voice Recognition Audio Signal	I	UE1
	0.35	BU	655	Cellular Telephone Microphone Signal	III	- UE1
10	0.35	BK / GY	5152	Voice Recognition Audio [-] Control	I	UE1
	0.35	BK / BN	654	Cellular Telephone Microphone Low Reference	III	- UE1
11	0.35	VT / YE	7043	Microphone [+] Signal	I	—
12	0.35	BU / BK	7044	Microphone [-] Signal	I	—
13 - 29	—	—	—	Not Occupied	—	—

**A11 Radio X4**

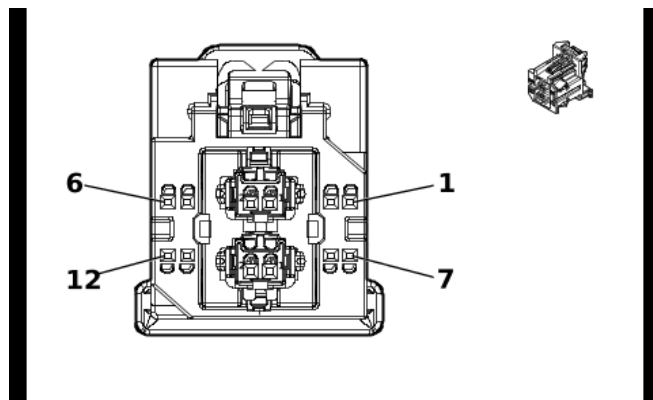

5902882

**Connector Part Information**

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: 35552567  
 Service Connector: 86555356  
 Description: 12-Way F 0.5 CTS, AMEC High Speed Data Series( BK)

**Terminal Part Information**


Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required
II	Service by Cable	No Tool Required	No Tool Required

**A11 Radio X4**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	BU / WH	4758	Ethernet Bus 2 [+]	II	—
2	0.35	BU	4757	Ethernet Bus 2 [-]	II	—
3 - 4	—	—	—	Not Occupied	—	—
5	0.35	WH	8580	Automotive Audio Bus A2B Serial Data 1 [+]	II	—
6	0.35	GN	8579	Automotive Audio Bus A2B Serial Data 1 [-]	II	—
7	—	—	—	Not Occupied	—	—
8	—	WH	8580	Automotive Audio Bus A2B Serial Data 1 [+]	I	—
9	0.01	GN	7210	Ethernet Bus 4 [-]	II	—
10	0.01	WH	7211	Ethernet Bus 4 [+]	II	—
11 - 12	—	—	—	Not Occupied	—	—



## A11 Radio X5

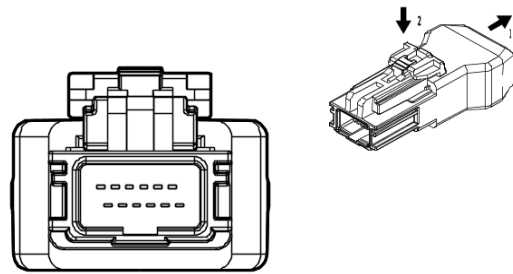

4584321

### Connector Part Information

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: 13598058  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 12-Way M 2.0 HSAL-2 Series( GY)


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

### A11 Radio X5

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 12	—	—	—	Not Occupied	—	—
GY	—	—	LVDS	Low Voltage Differential Signaling Cable	I	—

A11 Radio X9

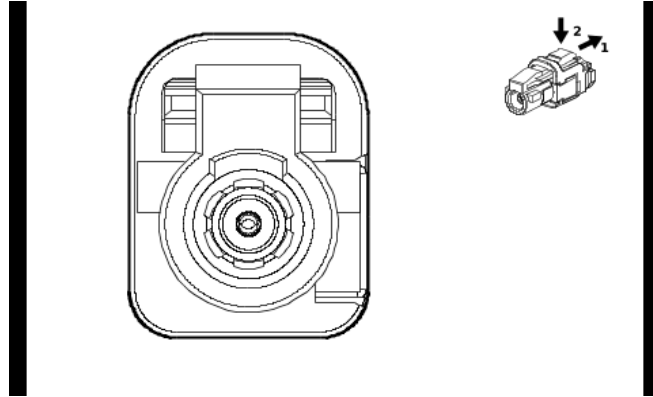

5926227

**Connector Part Information**

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: 13544788  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 1-Way F Mini Coax Type( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**A11 Radio X9**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
BK	—	Coax Cable	3137	Coaxial Antenna WLAN Signal	I	—
Coax Cable	—	—	—	Not Occupied	—	—

**A16 Transfer Case Four Wheel Drive Actuator (NP0 / NQH)**

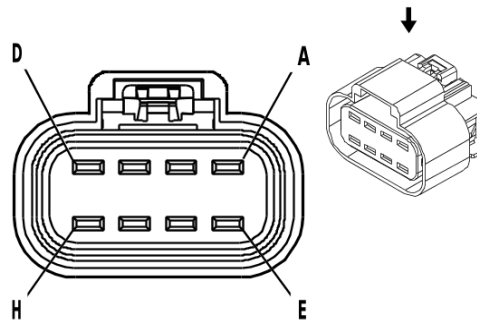

646372

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 13538370  
 Service Connector: 19369184  
 Description: 8-Way F 280 GT Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-4A (PU)	No Tool Required

**A16 Transfer Case Four Wheel Drive Actuator (NP0 / NQH)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	2.5	YE / GY	1552	Transfer Case Motor Clockwise Control	I	—
B	0.75	BU	8013	Transfer Case Lock Solenoid Control 2	I	—
C	0.75	YE / BN	1569	Transfer Case Lock Solenoid Valve Control	I	—
D	2.5	YE / VT	1553	Transfer Case Motor Counter Clockwise Control	I	—
E	0.5	YE	7474	Incremental Encoder Direction Signal	I	—
F	0.5	BU / GY	7473	Incremental Encoder Impulse Signal	I	—
G	0.5	WH / GN	7475	Incremental Encoder Sensor Voltage Reference	I	—
H	0.5	VT	7476	Incremental Encoder Sensor Low Reference	I	—

**A22 Radio Control X1**

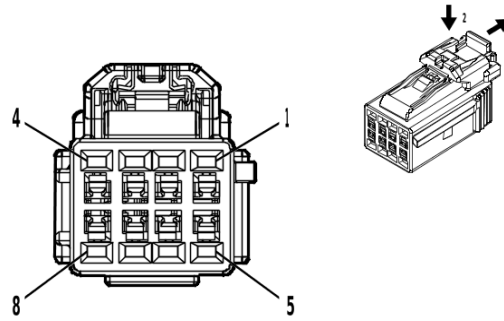

5086387

**Connector Part Information**

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: 6098-8443  
 Service Connector: 84613126  
 Description: 8-Way F 1.2 Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

**A22 Radio Control X1**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	RD / BN	1440	Battery Positive Voltage	I	—
2 - 7	—	—	—	Not Occupied	—	—
8	0.35	BK / WH	2151	Signal Ground	I	—

**A23LR Rear Side Door Latch - Left**

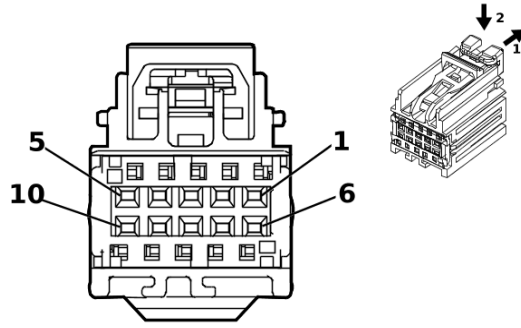

4622549

**Connector Part Information**

Harness Type: Rear Side Door Door Wiring Harness - Left  
 OEM Connector: 7289-5068-60  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 10-Way F 0.64 Kaizen Series( GN)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

**A23LR Rear Side Door Latch - Left**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	GY	747	Left Rear Door Ajar Switch Signal	I	—
2	—	—	—	Not Occupied	—	—
3	0.75	BK	1150	Ground	I	—
4 - 6	—	—	—	Not Occupied	—	—
7	0.75	BU / YE	1091	Left Rear Door Lock Actuator Lock Control	I	—
8	0.75	WH	2679	Lock Actuators Unlock Control 1	I	—
9 - 10	—	—	—	Not Occupied	—	—

**A23P Front Side Door Latch - Passenger**

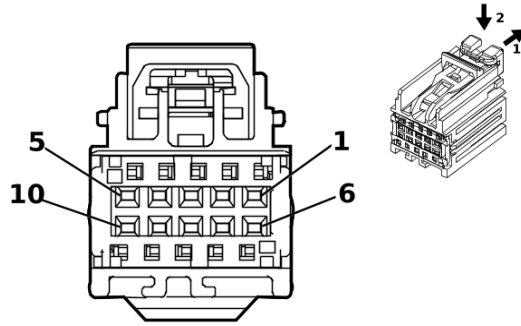

4622549

**Connector Part Information**

Harness Type: Front Side Door Door Wiring Harness - Passenger  
 OEM Connector: 7289-5068-60  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 10-Way F 0.64 Kaizen Series( GN)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

**A23P Front Side Door Latch - Passenger**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	—	Not Occupied	—	—
2	0.35	VT	4259	Right Front Door Lock Status Signal	I	—
3	0.35	BK	1250	Ground	I	—
4	—	—	—	Not Occupied	—	—
5	0.35	GY	746	Right Front Door Ajar Switch Signal	I	—
6 - 7	—	—	—	Not Occupied	—	—
8	0.75	GY / BK	2680	Lock Actuators Unlock Control 2	I	—
9	0.75	YE / GN	2682	Right Front Door Lock Actuator Lock Control	I	—
10	—	—	—	Not Occupied	—	—

**A23RR Rear Side Door Latch - Right**

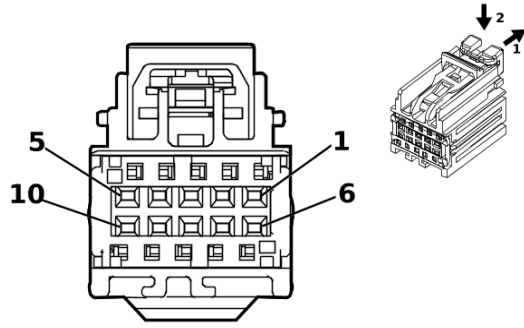

4622549

**Connector Part Information**

Harness Type: Rear Side Door Door Wiring Harness - Right  
 OEM Connector: 7289-5068-60  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 10-Way F 0.64 Kaizen Series( GN)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

**A23RR Rear Side Door Latch - Right**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 2	—	—	—	Not Occupied	—	—
3	0.75	BK	1250	Ground	I	—
4	—	—	—	Not Occupied	—	—
5	0.35	GY	748	Right Rear Door Ajar Switch Signal	I	—
6 - 7	—	—	—	Not Occupied	—	—
8	0.75	GY / BK	2680	Lock Actuators Unlock Control 2	I	—
9	0.75	VT / WH	1094	Right Rear Door Lock Actuator Lock Control	I	—
10	—	—	—	Not Occupied	—	—

**A23SL Front Side Door Latch Striker - Left**

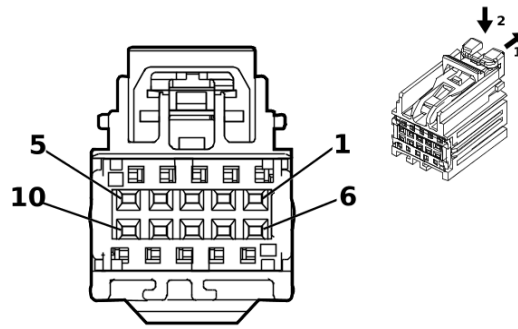

4622549

**Connector Part Information**

Harness Type: Front Side Door Door Wiring Harness - Driver  
 OEM Connector: 7289-5068-60  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 10-Way F 0.64 Kaizen Series( GN)

**Terminal Part Information**


Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

**A23SL Front Side Door Latch Striker - Left**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	GY	745	Left Front Door Ajar Switch Signal	I	—
2	0.35	VT / GY	126	Left Front Door Open Switch Signal	I	—
3	0.75	BK	1150	Ground	I	—
4	0.35	WH / VT	4258	Left Front Door Lock Status Signal	I	—
5 - 6	—	—	—	Not Occupied	—	—
7	0.75	GY	2681	Left Front Door Lock Actuator Lock Control	I	—
8	0.75	WH	2679	Lock Actuators Unlock Control 1	I	—
9 - 10	—	—	—	Not Occupied	—	—



**A24D Front Side Door Outside Handle - Left**

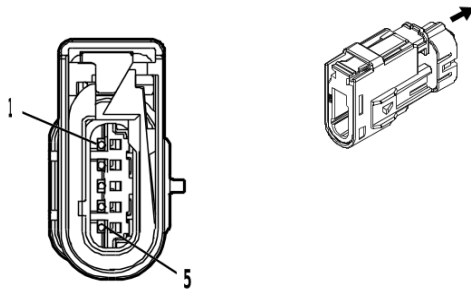

4808321

**Connector Part Information**

Harness Type: Front Side Door Door Wiring Harness - Driver  
 OEM Connector: SRVWSB-04A-BS  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 5-Way M 1.2 Series, Sealed( NA)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-13 (BU)	No Tool Required
II	Not required	J-35616-17 (L-GN)	No Tool Required

**A24D Front Side Door Outside Handle - Left**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	BU	2675	Left Front Exterior Door Handle Switch Unlock Signal	II	—
2	0.5	VT	4301	Passive Entry Left Antenna Signal High	I	—
3	—	—	—	Not Occupied	—	—
4	0.5	VT / GY	4302	Passive Entry Left Antenna Signal Low	I	—
5	0.35	BK	1150	Ground	II	—

**A24P Front Side Door Outside Handle - Right**

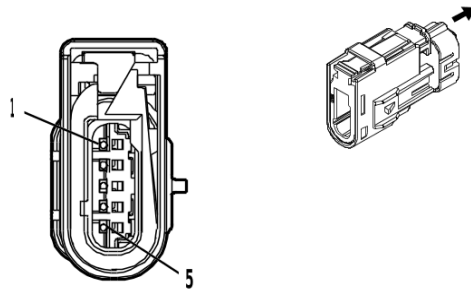

4808321

**Connector Part Information**

Harness Type: Front Side Door Door Wiring Harness - Passenger  
 OEM Connector: SRVWSB-04A-BS  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 5-Way M 1.2 Series, Sealed( NA)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-13 (BU)	No Tool Required
II	Not required	J-35616-17 (L-GN)	No Tool Required

**A24P Front Side Door Outside Handle - Right**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	GY / VT	2676	Right Front Door Exterior Switch Unlock Signal	II	—
2	0.5	GN / YE	4303	Passive Entry Right Antenna Signal High	I	—
3	—	—	—	Not Occupied	—	—
4	0.5	GN / BK	4304	Passive Entry Right Antenna Signal Low	I	—
5	0.35	BK	2250	Ground	II	—

**A26 Heater and Air Conditioning User Interface Control - Front**

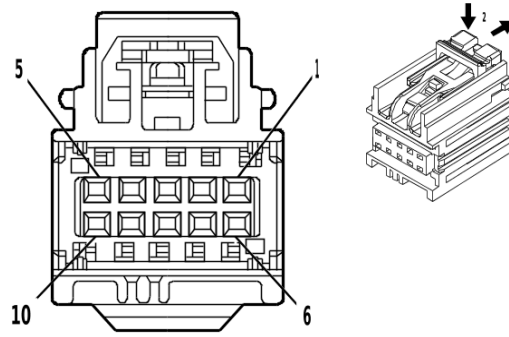

4891168

**Connector Part Information**

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: 7289-4885  
 Service Connector: 13509649  
 Description: 10-Way F 0.64 Kaizen Series( NA)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19300629	J-35616-64B (L-BU)	J-38125-215A

**A26 Heater and Air Conditioning User Interface Control - Front**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	RD / BN	1440	Battery Positive Voltage	I	—
2	—	—	—	Not Occupied	—	—
3	0.35	BU / WH	4985	AUTOSAR CAN Bus [+] 5 Serial Data	I	—
4	0.35	BU / WH	4985	AUTOSAR CAN Bus [+] 5 Serial Data	I	—
5	—	—	—	Not Occupied	—	—
6	0.35	GY / GN	4636	HVAC System Enable Signal	I	—
7	—	—	—	Not Occupied	—	—
8	0.35	BU / YE	4984	AUTOSAR CAN Bus [-] 5 Serial Data	I	—
9	0.35	BU / YE	4984	AUTOSAR CAN Bus [-] 5 Serial Data	I	—
10	0.35	BK / WH	2151	Signal Ground	I	—

**A99 Pickup Box Endgate Latch**

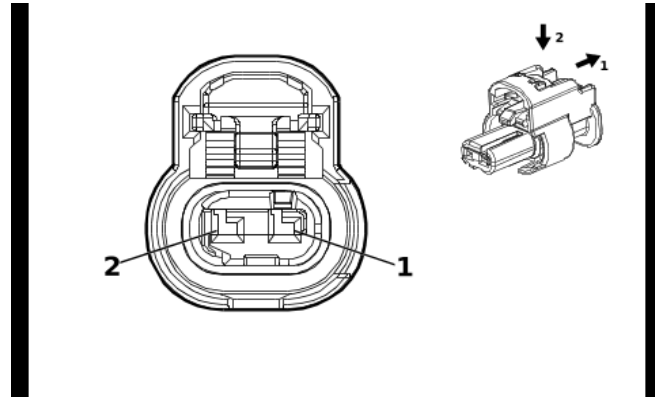

4649903

**Connector Part Information**

Harness Type: Liftgate Jumper Wiring Harness  
 OEM Connector: 1-2296694-1  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F 1.2 MCON Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required

**A99 Pickup Box Endgate Latch**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GY / VT	2691	Rear Closure Actuator Lock Control	I	—
2	0.5	GY / BK	2680	Lock Actuators Unlock Control 2	I	—

**A103 Roof Console**

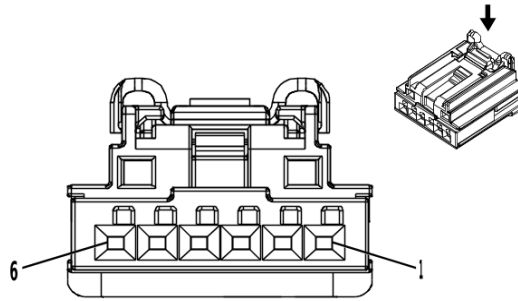

4145138

**Connector Part Information**

Harness Type: Roof Wiring Harness  
 OEM Connector: 2035363-2  
 Service Connector: 19356359  
 Description: 6-Way F 0.64 Generation Y Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

**A103 Roof Console**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	—	Not Occupied	—	—
2	0.35	WH / BN	6815	Inadvertent Load Control	I	—
3	0.35	GY	157	Interior Lamp Control	I	—
4	0.35	BK	4250	Ground	I	—
5	0.35	GY	156	Courtesy Lamp Switch Signal	I	—
6	0.35	GY / GN	328	Interior Lamp Defeat Switch Signal	I	—

**B1 Air Conditioning Refrigerant Pressure Sensor**

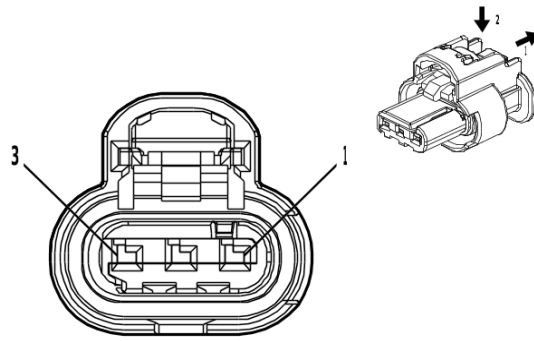

4581126

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 1-2296695-1  
 Service Connector: 86792094  
 Description: 3-Way F 1.2 MCON-CB Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required

**B1 Air Conditioning Refrigerant Pressure Sensor**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH / RD	480	Engine Control Vehicle Sensors 5 Volt Reference 1	I	—
2	0.5	GN	380	Air Conditioning Refrigerant Pressure Sensor Signal	I	—
3	0.5	BK / GY	626	Engine Control Vehicle Sensors Low Reference 1	I	—

## B5LF Front Wheel Speed Sensor - Left

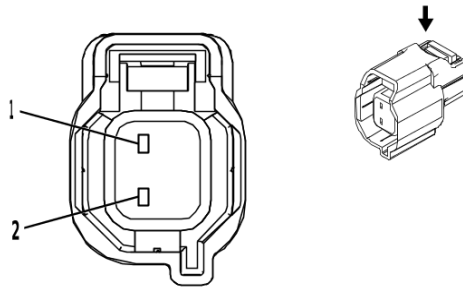

2900396

### Connector Part Information

Harness Type: Chassis Wiring Harness  
 OEM Connector: 34062-0026  
 Service Connector: 19366856  
 Description: 2-Way F 1.5 Series, Sealed( L-GY)


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required

### B5LF Front Wheel Speed Sensor - Left

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GY / WH	7064	Left Front Wheel Speed Sensor Control	I	—
2	0.5	GY	830	Left Front Wheel Speed Sensor Signal	I	—

**B5LR Rear Wheel Speed Sensor - Left**

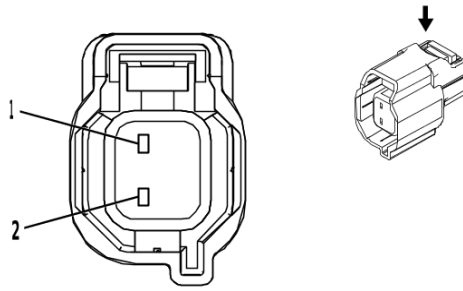

2900396

**Connector Part Information**

Harness Type: Chassis Wiring Harness  
 OEM Connector: 34062-0026  
 Service Connector: 19366856  
 Description: 2-Way F 1.5 Series, Sealed( L-GY)

**Terminal Part Information**


Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required

**B5LR Rear Wheel Speed Sensor - Left**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GY / BK	7127	Left Rear Wheel Speed Sensor Control	I	—
2	0.5	BU	884	Left Rear Wheel Speed Sensor Signal	I	—



**B5RF Front Wheel Speed Sensor - Right**

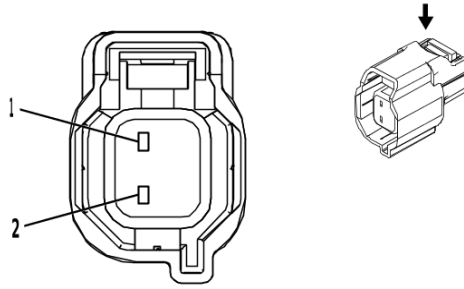

2900396

**Connector Part Information**

Harness Type: Chassis Wiring Harness  
 OEM Connector: 34062-0026  
 Service Connector: 19366856  
 Description: 2-Way F 1.5 Series, Sealed( L-GY)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required

**B5RF Front Wheel Speed Sensor - Right**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GY / BN	7065	Right Front Wheel Speed Sensor Control	I	—
2	0.5	YE	872	Right Front Wheel Speed Sensor Signal	I	—

**B5RR Rear Wheel Speed Sensor - Right**

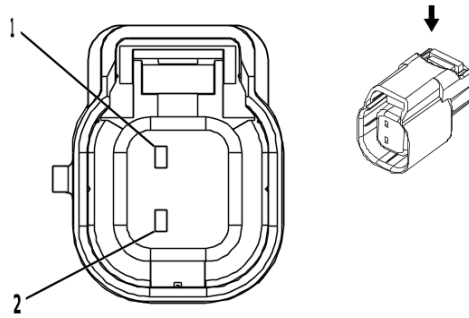

4115616

**Connector Part Information**

Harness Type: Chassis Wiring Harness  
 OEM Connector: 34062-0046  
 Service Connector: 19366860  
 Description: 2-Way F 1.5 Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required

**B5RR Rear Wheel Speed Sensor - Right**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GY / YE	7128	Right Rear Wheel Speed Sensor Control	I	—
2	0.5	VT	882	Right Rear Wheel Speed Sensor Signal	I	—

## B9 Ambient Air Temperature Sensor

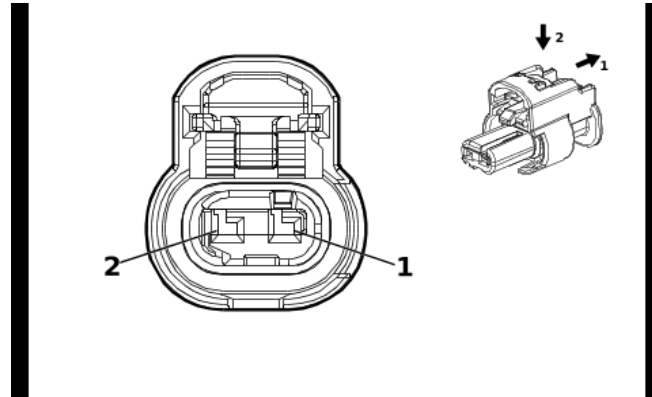

4649903

### Connector Part Information

Harness Type: Radiator Shutter Jumper  
 OEM Connector: 13512365  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F 1.2 MCON Series, Sealed( BK)


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

### B9 Ambient Air Temperature Sensor

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BU / GY	636	Ambient Air Temperature Sensor Signal	I	—
2	—	BK / GY	626	Engine Control Vehicle Sensors Low Reference 1	I	—

**B10D Sun Load and Ambient Light and Security Indicator Sensor**

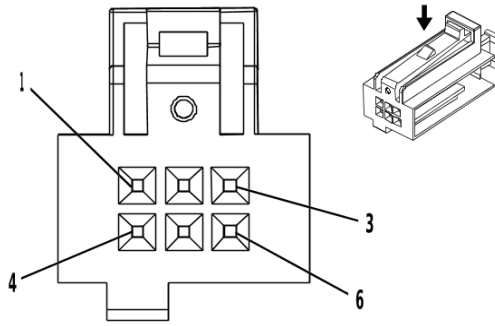

2220563

**Connector Part Information**

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: 965413-1  
 Service Connector: 85587649  
 Description: 6-Way F 0.64 Micro-Quadlock Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

**B10D Sun Load and Ambient Light and Security Indicator Sensor**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	GY	590	Driver Solar Sensor Signal	I	—
2	—	—	—	Not Occupied	—	—
3	0.35	WH / BU	278	Ambient Light Sensor Signal	I	—
4	0.35	BU / WH	734	Inside Air Temperature Sensor Signal	I	—
5	0.35	GY	728	Security Indicator Control	I	—
6	0.35	BK / YE	407	Sensor Low Reference	I	—

**B12B Automatic Transmission Fluid Pressure Sensor**

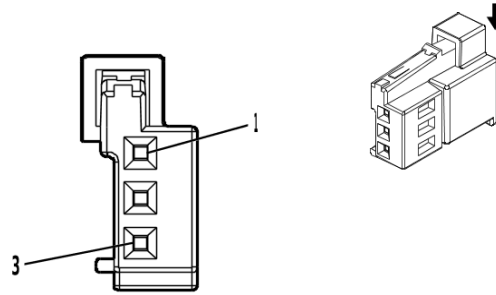

4829276

**Connector Part Information**

Harness Type: Automatic Transmission Wiring Harness  
 OEM Connector: 13511013  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 3-Way F 0.64 Series( BU)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**B12B Automatic Transmission Fluid Pressure Sensor**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	GY / RD	10817	Lubricant Circuit Pressure Sensor 5 Volt Reference	I	—
2	—	BU / BK	10819	Lubricant Circuit Pressure Sensor Low Reference	I	—
3	—	GN / YE	10816	Lubricant Circuit Pressure Sensor Signal	I	—

**B13 Automatic Transmission Fluid Temperature Sensor**

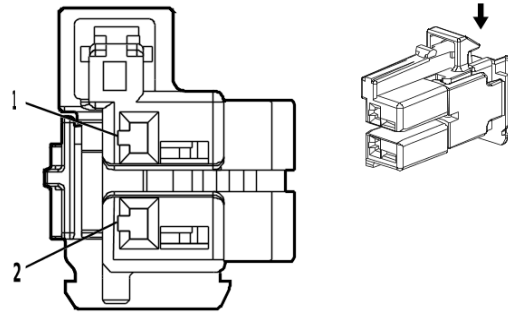

4672650

**Connector Part Information**

Harness Type: Automatic Transmission Wiring Harness  
 OEM Connector: 13514136  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F 1.2 MCON Series( BN)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**B13 Automatic Transmission Fluid Temperature Sensor**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BN / WH	585	Transmission Fluid Temperature Sensor Signal	I	—
2	—	BK / BN	586	Transmission Fluid Temperature Sensor Low Reference	I	—

## B20A Brake Fluid Level Indicator Switch

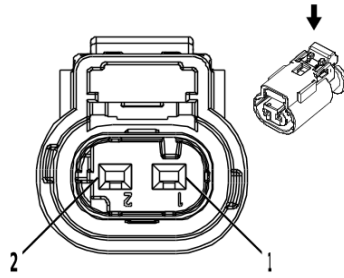

2717066

### Connector Part Information

Harness Type: Body Wiring Harness  
 OEM Connector: 10010337  
 Service Connector: 13587326  
 Description: 2-Way F 1.2 Multilock Series, Sealed( BK)


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required

### B20A Brake Fluid Level Indicator Switch

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GN / GY	333	Brake Fluid Level Signal	I	—
2	0.5	BK / WH	2251	Signal Ground	I	—

**B22 Brake Pedal Position Sensor**

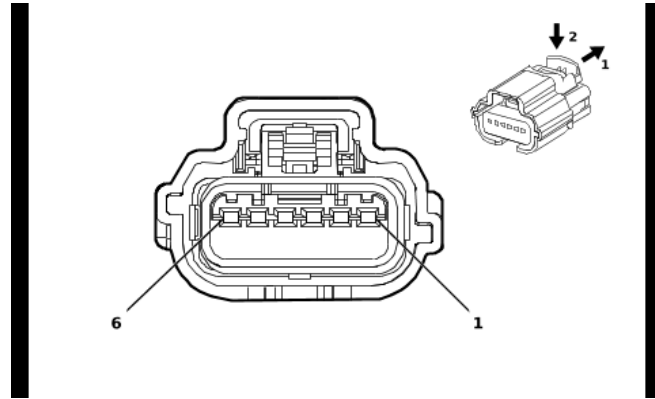

4773396

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 31404-7810  
 Service Connector: 84683650  
 Description: 6-Way F 64 Series, Sealed( NA)

**Terminal Part Information**


Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

**B22 Brake Pedal Position Sensor**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	BK / BN	5360	Brake Apply Sensor Low Reference	I	—
2	0.35	WH	5359	Brake Apply Sensor Control	I	—
3	0.35	BU / YE	5361	Brake Apply Sensor Signal	I	—
4	0.5	WH / GN	5380	Brake Position Sensor Signal	I	—
5	0.5	BK / GY	626	Engine Control Vehicle Sensors Low Reference 1	I	—
6	0.5	WH / RD	480	Engine Control Vehicle Sensors 5 Volt Reference 1	I	—



**B23E Camshaft Position Sensor - Exhaust**

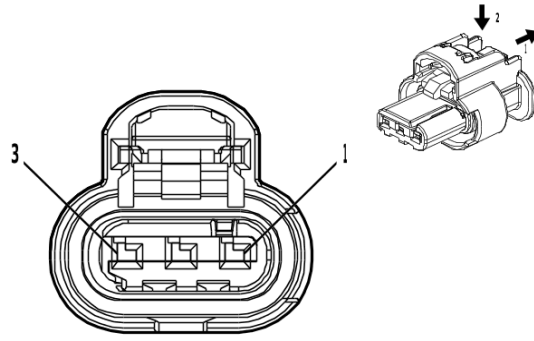

4581126

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 1-2296695-1  
 Service Connector: 86792094  
 Description: 3-Way F 1.2 MCON-CB Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

**B23E Camshaft Position Sensor - Exhaust**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GY / YE	5297	Exhaust Camshaft Position Sensor 1 Voltage Reference	I	—
2	0.5	BK / GY	5296	Exhaust Camshaft Position Sensor Low Reference 1	I	—
3	0.5	VT / BK	5273	Exhaust Camshaft Position Sensor 1	I	—

**B23F Camshaft Position Sensor - Intake**

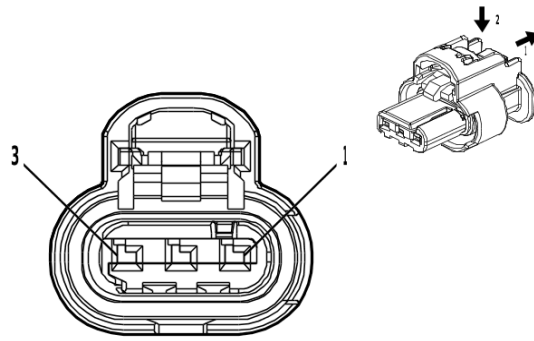

4581126

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 1-2296695-1  
 Service Connector: 86792094  
 Description: 3-Way F 1.2 MCON-CB Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

**B23F Camshaft Position Sensor - Intake**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GY / BU	5300	Intake Camshaft Position Sensor 1 Voltage Reference	I	—
2	0.5	BK / GN	5301	Intake Camshaft Position Sensor Low Reference 1	I	—
3	0.5	YE / VT	5275	Intake Camshaft Position Sensor 1	I	—

## B24 Mobile Telephone Microphone

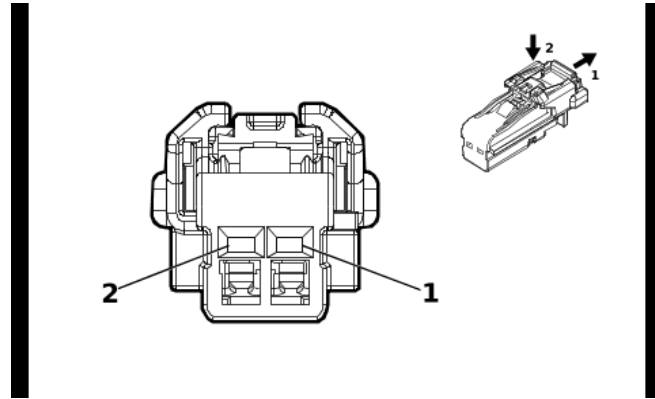

4115691

### Connector Part Information

Harness Type: Roof Wiring Harness  
 OEM Connector: 6098-8988  
 Service Connector: 87816612  
 Description: 2-Way F 1.2 MCON Series( BK)


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

### B24 Mobile Telephone Microphone

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	BK / BN	654	Cellular Telephone Microphone Low Reference	I	—
2	0.35	BU	655	Cellular Telephone Microphone Signal	I	—

**B26 Crankshaft Position Sensor**

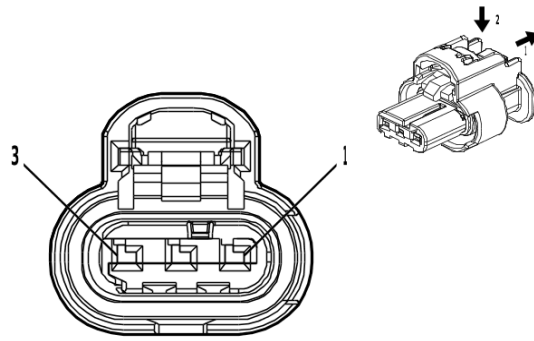

4778903

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 1-2296695-2  
 Service Connector: 86792095  
 Description: 3-Way F 1.2 MCON-CB Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

**B26 Crankshaft Position Sensor**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	VT / BU	6270	Crankshaft Position Sensor Voltage	I	—
2	0.5	BK / VT	6272	Crankshaft Position Sensor Low Reference	I	—
3	0.5	GN	6271	Crankshaft Position Sensor Signal	I	—

## B34A Engine Coolant Temperature Sensor 1

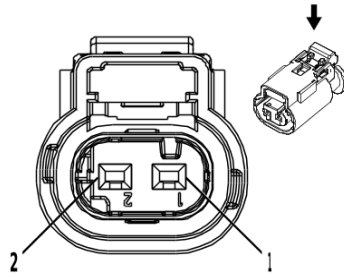

2717066

### Connector Part Information

Harness Type: Engine Wiring Harness  
 OEM Connector: 10010337  
 Service Connector: 13587326  
 Description: 2-Way F 1.2 Multilock Series, Sealed( BK)


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

### B34A Engine Coolant Temperature Sensor 1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	YE / BU	2408	Engine Inlet Coolant Temperature Signal	I	—
2	0.5	BK / GY	626	Engine Control Vehicle Sensors Low Reference 1	I	—

**B34B Engine Coolant Temperature Sensor 2**

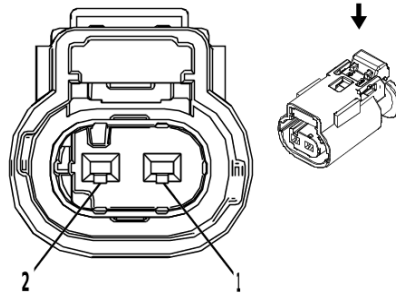

2830969

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 10010339  
 Service Connector: 13587321  
 Description: 2-Way F 1.2 Multilock Series, Sealed( D-GY)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

**B34B Engine Coolant Temperature Sensor 2**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	VT	2988	Engine Outlet Coolant Temperature Signal	I	—
2	0.5	BK / GY	626	Engine Control Vehicle Sensors Low Reference 1	I	—

## B34E Engine Coolant Temperature Sensor 5

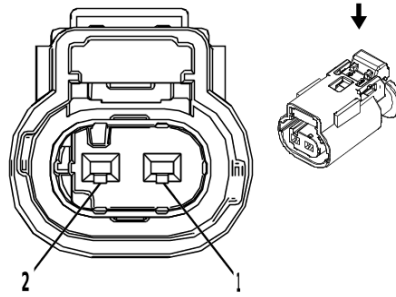

2830969

### Connector Part Information

Harness Type: Engine Wiring Harness  
 OEM Connector: 10010339  
 Service Connector: 13587321  
 Description: 2-Way F 1.2 Multilock Series, Sealed( D-GY)


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

### B34E Engine Coolant Temperature Sensor 5

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BU / YE	8938	Engine Integrated Exhaust Manifold Temperature Signal	I	—
2	0.5	BK / YE	548	Engine Control Sensors Low Reference 1	I	—

**B34F Engine Coolant Temperature Sensor 6**

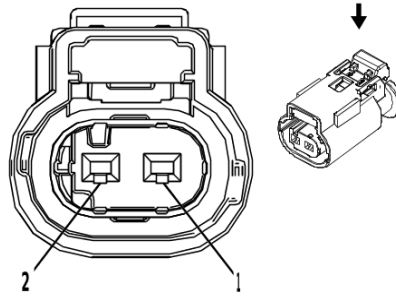

2830969

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 10010339  
 Service Connector: 13587321  
 Description: 2-Way F 1.2 Multilock Series, Sealed( D-GY)

**Terminal Part Information**


Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

**B34F Engine Coolant Temperature Sensor 6**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GY / VT	2404	Engine Block Coolant Temperature Signal	I	—
2	0.5	BK / YE	548	Engine Control Sensors Low Reference 1	I	—



## B36 Engine Oil Temperature Sensor

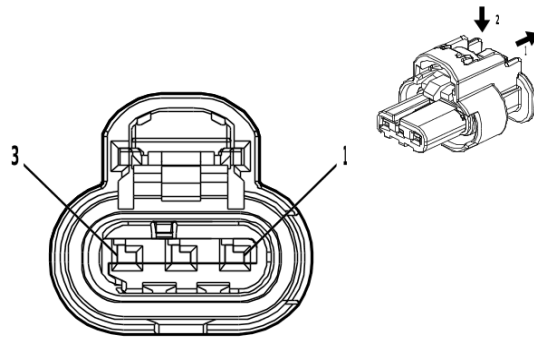

4994602

### Connector Part Information

Harness Type: Engine Wiring Harness  
 OEM Connector: 1-2296695-3  
 Service Connector: 19371199  
 Description: 3-Way F 1.2 MCON-CB Series, Sealed( BK)


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

### B36 Engine Oil Temperature Sensor

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BK / GY	626	Engine Control Vehicle Sensors Low Reference 1	I	—
2	0.5	BN / BU	357	Oil Temperature Sensor Signal	I	—
3	0.5	VT	7485	Engine Oil Temperature Sensor 2 Signal	I	—

**B37B Engine Oil Pressure Sensor**

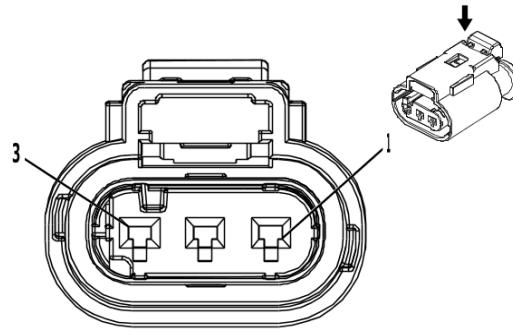

3240107

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 10010344  
 Service Connector: 19301717  
 Description: 3-Way F 1.2 Multilock Series, Sealed( BK)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

**B37B Engine Oil Pressure Sensor**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	YE / BN	331	Oil Pressure Sensor Signal	I	—
2	0.5	BK / YE	548	Engine Control Sensors Low Reference 1	I	—
3	0.5	BU / RD	460	Engine Control Sensors 5 Volt Reference 1	I	—

## B39 Air Conditioning Evaporator Air Temperature Sensor

### Connector Part Information

Harness Type: Air Conditioning Wiring Harness  
 OEM Connector: 1205-9247  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

### B39 Air Conditioning Evaporator Air Temperature Sensor

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	—	BK / YE	407	Sensor Low Reference	I	—
B	—	GY	6137	Air Conditioning Evaporator Temperature Sensor Signal	I	—

**B47 Fuel Pressure Sensor**

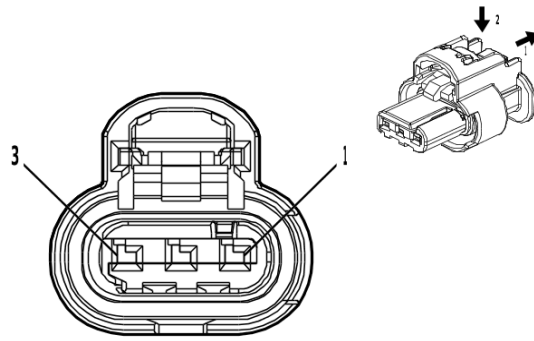

4581126

**Connector Part Information**

Harness Type: Chassis Wiring Harness  
 OEM Connector: 1-2296695-1  
 Service Connector: 86792094  
 Description: 3-Way F 1.2 MCON-CB Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required

**B47 Fuel Pressure Sensor**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN / RD	7445	Fuel Line Pressure Sensor 5V Reference	I	—
2	0.5	BK / YE	7447	Fuel Pressure Sensor Low Reference	I	—
3	0.5	BU / WH	7446	Fuel Pressure Sensor Signal	I	—

## B52A Heated Oxygen Sensor 1

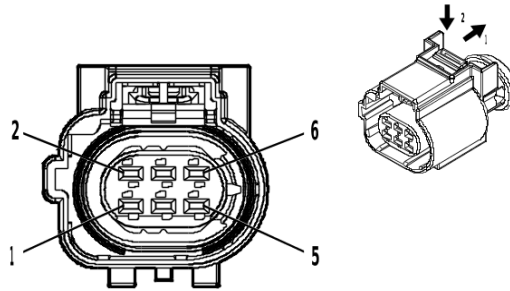

5086832

### Connector Part Information

Harness Type: Engine Wiring Harness  
 OEM Connector: 2-2309220-8  
 Service Connector: 84613131  
 Description: 6-Way F 1.5 MCP Series, Sealed( GY)


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required

### B52A Heated Oxygen Sensor 1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN / WH	6933	HO2S Pump Current Signal	I	—
2	0.5	BN	6934	HO2S Ground	I	—
3	—	—	—	Not Occupied	—	—
4	0.5	VT / BU	5293	Powertrain Main Relay Fused Supply Voltage 4	I	—
5	0.5	GN	6935	HO2S Pump Current Trim Signal	I	—
6	0.5	YE / GY	6936	HO2S Signal	I	—

**B52B Heated Oxygen Sensor 2**

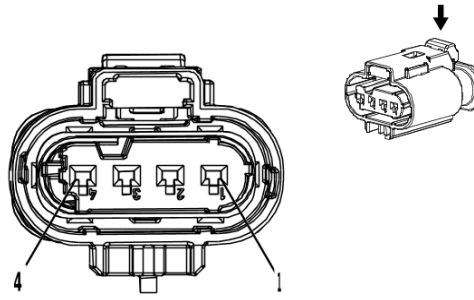

4036496

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 10021265  
 Service Connector: 19330904  
 Description: 4-Way F 1.2 Multilock Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required

**B52B Heated Oxygen Sensor 2**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GY / WH	3122	HO2S Heater Low Control Bank 1 Sensor 2	I	—
2	0.5	VT / BU	5294	Powertrain Main Relay Fused Supply Voltage 5	I	—
3	0.5	WH / YE	3121	HO2S Low Signal Bank 1 Sensor 2	I	—
4	0.5	BN	3120	HO2S High Signal Bank 1 Sensor 2	I	—

## B55 Engine Compartment Cover Switch

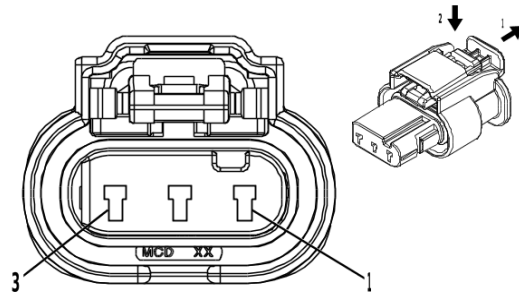

4421568

### Connector Part Information

Harness Type: Forward Lamp Wiring Harness  
 OEM Connector: 34900-3120  
 Service Connector: 19368220  
 Description: 3-Way F 1.2 MCON-LL Series, Sealed( BK)


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

### B55 Engine Compartment Cover Switch

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	YE	4063	Hood Status A Signal	I	—
2	0.5	BN / GN	4064	Hood Status B Signal	I	—
3	0.75	BK	2250	Ground	I	—

**B58L Airbag Front End Discriminating Sensor - Left**

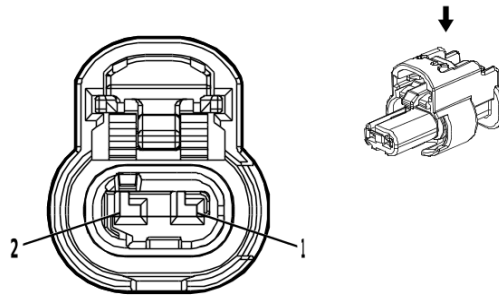

4690744

**Connector Part Information**

Harness Type: Forward Lamp Wiring Harness  
 OEM Connector: 1-2296694-3  
 Service Connector: 19366871  
 Description: 2-Way F 1.2 MCON Series, Sealed( BK)

**Terminal Part Information**


Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required

**B58L Airbag Front End Discriminating Sensor - Left**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	OG / YE	354	Left Front Impact Discriminating Sensor Signal	I	—
2	0.5	BK / OG	5045	Left Front Impact Discriminating Sensor Low Reference	I	—



**B58R Airbag Front End Discriminating Sensor - Right**

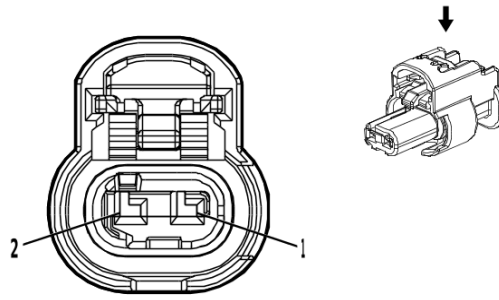

4690744

**Connector Part Information**

Harness Type: Forward Lamp Wiring Harness  
 OEM Connector: 1-2296694-3  
 Service Connector: 19366871  
 Description: 2-Way F 1.2 MCON Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required

**B58R Airbag Front End Discriminating Sensor - Right**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	OG / GN	1409	Right Front Impact Discriminating Sensor Signal	I	—
2	0.5	BK / OG	5600	Right Front Impact Discriminating Sensor Low Reference	I	—

**B61P Seat Belt Tension Sensor - Passenger**

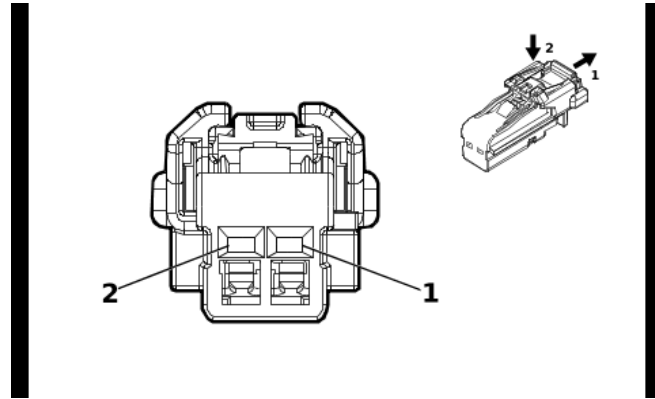

4115691

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 6098-8988  
 Service Connector: 87816612  
 Description: 2-Way F 1.2 MCON Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

**B61P Seat Belt Tension Sensor - Passenger**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GY / OG	3946	Passenger Automatic Locking Retractor Switch Low Reference	I	—
2	0.5	OG / BN	3947	Passenger Automatic Locking Retractor Switch Signal	I	—

**B63LF Airbag Side Impact Sensor - Left Front Door**

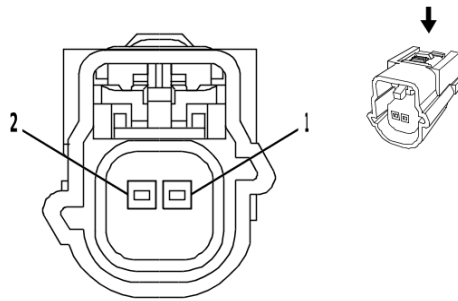

2179777

**Connector Part Information**

Harness Type: Front Side Door Door Wiring Harness - Driver  
 OEM Connector: 54390242  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F 0.64 Series, Sealed( GY)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

**B63LF Airbag Side Impact Sensor - Left Front Door**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	OG / GN	2132	Left Front Side Impact Sensor Signal	I	—
2	0.5	BK / OG	6628	Left Front Side Impact Sensor Low Reference	I	—

**B63LRG Airbag Side Impact Rear Sensor - Left**

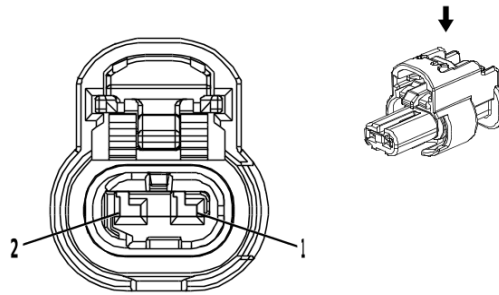

4335931

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 1-2296694-2  
 Service Connector: 19366843  
 Description: 2-Way F 1.2 MCON Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required

**B63LRG Airbag Side Impact Rear Sensor - Left**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	OG / BU	6622	Left Rear Side Impact Sensor Signal	I	—
2	0.5	BK / OG	6623	Left Rear Side Impact Sensor Low Reference	I	—

**B63RF Airbag Side Impact Sensor - Right Front Door**

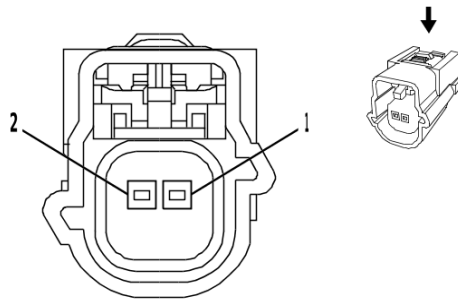

2179777

**Connector Part Information**

Harness Type: Front Side Door Door Wiring Harness - Passenger  
 OEM Connector: 54390242  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F 0.64 Series, Sealed( GY)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

**B63RF Airbag Side Impact Sensor - Right Front Door**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN / OG	2134	Right Front Side Impact Sensor Signal	I	—
2	0.5	BK / OG	6629	Right Front Side Impact Sensor Low Reference	I	—

**B63RRG Airbag Side Impact Rear Sensor - Right**

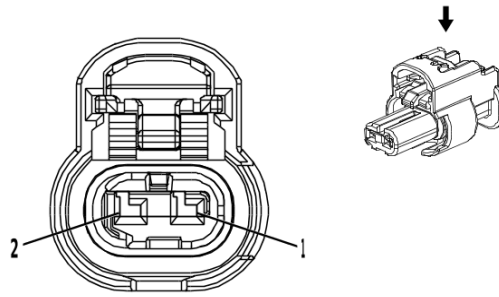

4335931

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 1-2296694-2  
 Service Connector: 19366843  
 Description: 2-Way F 1.2 MCON Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required

**B63RRG Airbag Side Impact Rear Sensor - Right**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	OG / WH	6626	Right Rear Side Impact Sensor Signal	I	—
2	0.5	BK / OG	6627	Right Rear Side Impact Sensor Low Reference	I	—

**B65 Manifold Absolute Pressure and Intake Air Temperature Sensor**

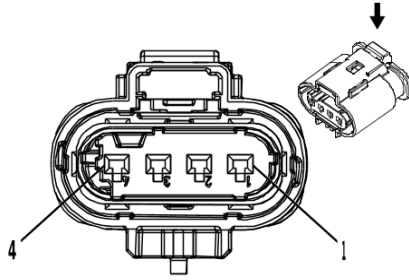

2717079

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 10010346  
 Service Connector: 13587299  
 Description: 4-Way F 1.2 Multilock Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

**B65 Manifold Absolute Pressure and Intake Air Temperature Sensor**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH / BU	7329	Pre-Throttle Air Temperature Signal	I	—
2	0.5	GY / RD	2704	Manifold Absolute Pressure Sensor 5V Reference	I	—
3	0.5	BK / GN	469	Manifold Absolute Pressure Sensor Low Reference	I	—
4	0.5	GN / WH	432	Manifold Absolute Pressure Sensor Signal	I	—

**B68A Knock Sensor 1**

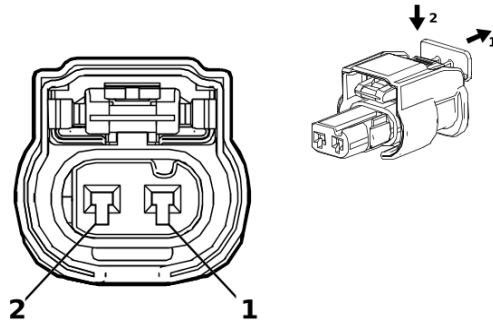

3960139

**Connector Part Information**

Harness Type: Fuel Injector Wiring Harness  
 OEM Connector: 34900-2120  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F 1.2 MCON Series, Sealed( BK)

**Terminal Part Information**


Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**B68A Knock Sensor 1**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	VT / GY	496	Knock Sensor 1 Signal	I	—
2	—	BK / YE	1716	Knock Sensor Low Reference 1	I	—



**B68B Knock Sensor 2**

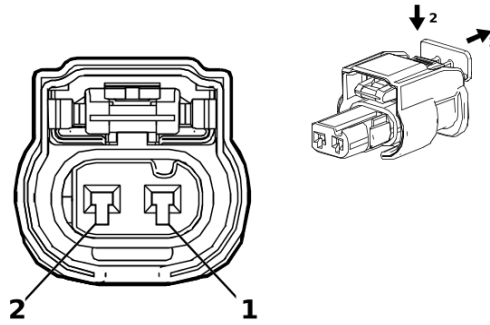

3960139

**Connector Part Information**

Harness Type: Fuel Injector Wiring Harness  
 OEM Connector: 34900-2120  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F 1.2 MCON Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**B68B Knock Sensor 2**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	WH / GY	1876	Knock Sensor 2 Signal	I	—
2	—	BK / GY	2303	Knock Sensor Low Reference 2	I	—

**B75 Mass Airflow Sensor**

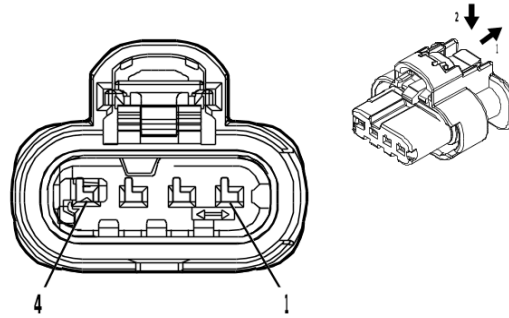

4934614

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 1-2296696-2  
 Service Connector: 85519071  
 Description: 4-Way F 1.2 MCON-CB Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

**B75 Mass Airflow Sensor**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	VT / BU	5294	Powertrain Main Relay Fused Supply Voltage 5	I	—
2	0.5	BU	492	Mass Air Flow Sensor Signal	I	—
3	0.5	GN / WH	4622	Engine Control Module LIN Bus 2	I	—
4	0.75	BK / WH	151	Signal Ground	I	—

**B87 Rearview Driver Information Camera (UV2)**

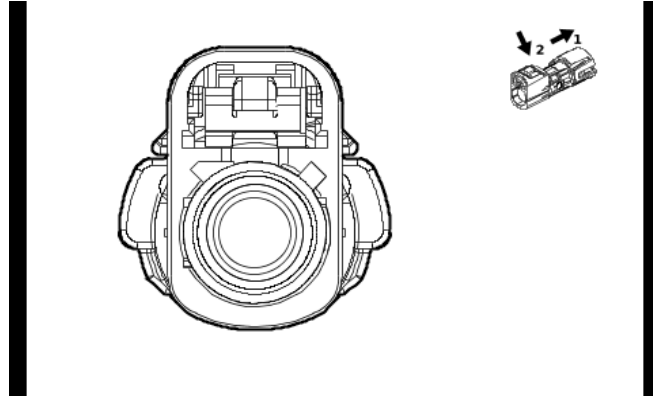

5758030

**Connector Part Information**

Harness Type: Liftgate Jumper Wiring Harness COAX  
 OEM Connector: 13529782  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 1-Way F Coax Type( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**B87 Rearview Driver Information Camera (UV2)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	Coax Cable	—	Rear Vision Camera Coaxial Video Signal	I	—

**B87 Rearview Driver Information Camera (UVB)**

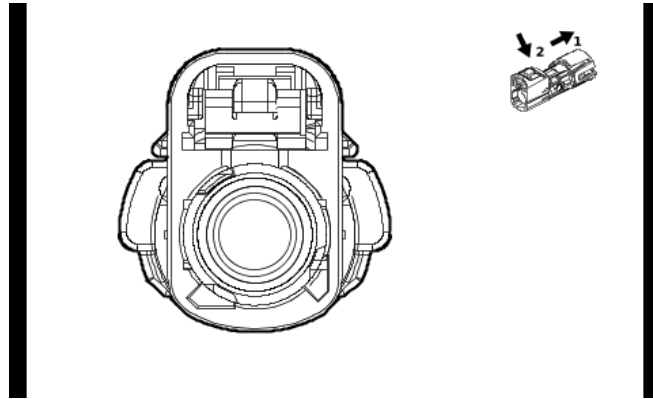

5757455

**Connector Part Information**

Harness Type: Liftgate Jumper Wiring Harness COAX  
 OEM Connector: 13529793  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 1-Way F Coax Type( OG)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**B87 Rearview Driver Information Camera (UVB)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	Coax Cable	—	Rear Vision Camera Coaxial Video Signal	I	—

**B88D Seat Belt Switch - Driver**

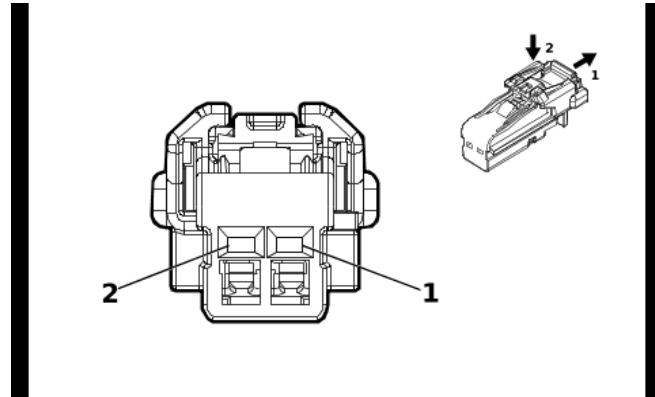

4115691

**Connector Part Information**

Harness Type: Front Seat Wiring Harness - Driver  
 OEM Connector: 6098-8988  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F 1.2 MCON Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

**B88D Seat Belt Switch - Driver**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BK / OG	1363	Driver Seat Belt Switch Low Reference	I	—
2	0.5	OG / BN	238	Driver Seat Belt Switch Signal	I	—

**B88P Seat Belt Switch - Passenger**

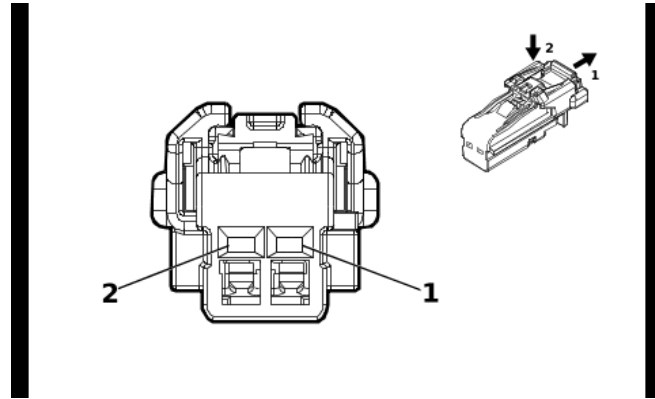

4115691

**Connector Part Information**

Harness Type: Front Seat Wiring Harness - Passenger  
 OEM Connector: 6098-8988  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F 1.2 MCON Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

**B88P Seat Belt Switch - Passenger**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BK / OG	1363	Driver Seat Belt Switch Low Reference	I	—
2	0.5	OG / VT	1362	Passenger Seat Belt Switch Signal	I	—

## B107 Accelerator Pedal Position Sensor

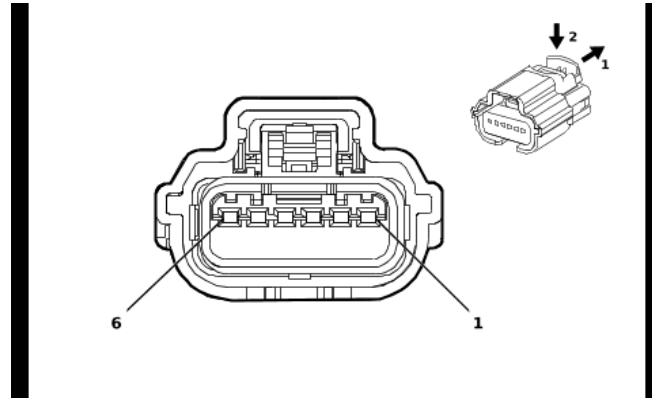

5157678

### Connector Part Information

Harness Type: Body Wiring Harness  
 OEM Connector: 31404-7110  
 Service Connector: 84773558  
 Description: 6-Way F 64 Series, Sealed( BK)


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

### B107 Accelerator Pedal Position Sensor

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN / RD	1274	Accelerator Pedal Position 5V Reference 2	I	—
2	0.5	GN / WH	1162	Accelerator Pedal Position Signal 2	I	—
3	0.5	BK / VT	1272	Accelerator Pedal Position Low Reference 2	I	—
4	0.5	BK / BU	1271	Accelerator Pedal Position Low Reference 1	I	—
5	0.5	YE / WH	1161	Accelerator Pedal Position Signal 1	I	—
6	0.5	WH / RD	1164	Accelerator Pedal Position 5V Reference 1	I	—

**B110 Battery Monitor Module X1**

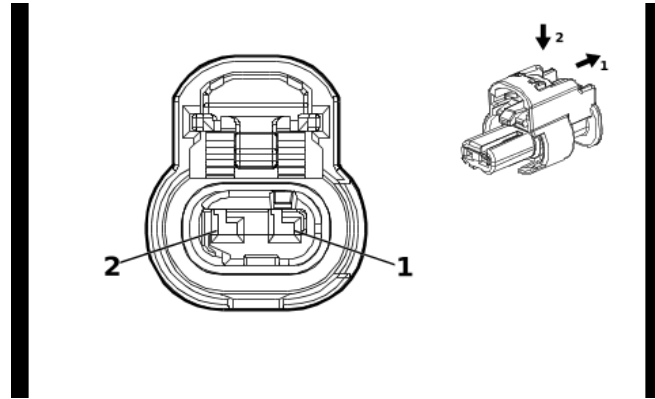

4649903

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 1-2296694-1  
 Service Connector: 85519075  
 Description: 2-Way F 1.2 MCON Series, Sealed( BK)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required

**B110 Battery Monitor Module X1**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	GN / YE	2855	Body Control Module LIN Bus 9	I	—
2	0.75	RD / YE	2340	Battery Positive Voltage	I	—



## B110 Battery Monitor Module X2

### Connector Part Information

Harness Type: Body Wiring Harness  
 OEM Connector: BBS64596  
 Service Connector: Not Available  
 Description: 1-Way


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

### B110 Battery Monitor Module X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	—	BK	250	Ground	I	—

**B111 Turbocharger/Supercharger Boost Pressure Sensor**

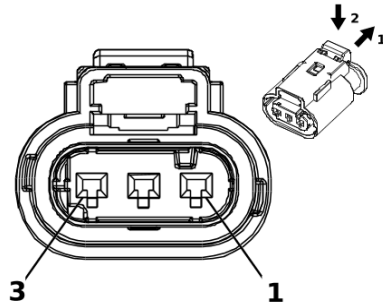

2717069

**Connector Part Information**

Harness Type: Forward Lamp Wiring Harness  
 OEM Connector: 10010341  
 Service Connector: 84601390  
 Description: 3-Way F 1.2 Multilock Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

**B111 Turbocharger/Supercharger Boost Pressure Sensor**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BU / RD	460	Engine Control Sensors 5 Volt Reference 1	I	—
2	0.5	BK / YE	548	Engine Control Sensors Low Reference 1	I	—
3	0.5	YE / WH	3200	Throttle Inlet Absolute Pressure Sensor Signal	I	—

**B118 Windshield Washer Solvent Container Level Sensor**

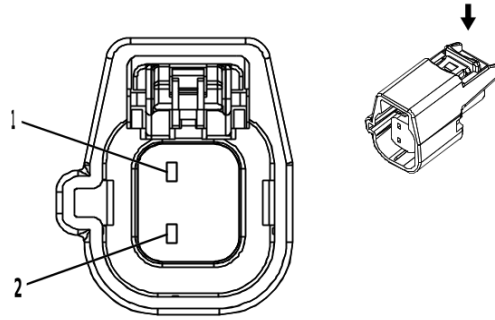

3958652

**Connector Part Information**

Harness Type: Windshield Washer Pump Extension Wiring Harness  
 OEM Connector: 7287-8378-40  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F 1.5 Series, Sealed( L-GY)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**B118 Windshield Washer Solvent Container Level Sensor**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	VT	185	Low Washer Fluid Indicator Control	I	—
2	—	BK	2250	Ground	I	—

**B137B Power Steering Shaft Torque/Position Sensor**

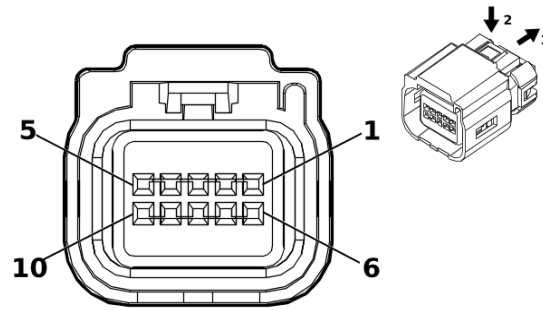

3608469

**Connector Part Information**

Harness Type: Power Steering Control Module Wiring Harness - Shaft Sensor  
 OEM Connector: 13587225  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 10-Way F 0.64 Kaizen Series, Sealed( GY)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**B137B Power Steering Shaft Torque/Position Sensor**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BU / WH	8367	Handwheel Channel A Torque Pressure Sensor 1 SENT Signal	I	—
2	—	BN / RD	8366	Handwheel Channel A High Reference	I	—
3	—	BK / GN	8370	Handwheel Channel A Low Reference	I	—
4	—	GY / RD	8371	Handwheel Channel B High Reference	I	—
5	—	GN	8372	Handwheel Channel B Torque Pressure Sensor 1 SENT Signal	I	—
6	—	VT	8368	Handwheel Channel A Torque Pressure Sensor 2 SENT Signal	I	—
7	—	WH	8369	Handwheel Channel A Angle Position Sensor SENT Signal	I	—
8	—	BK / GY	8375	Handwheel Channel B Low Reference	I	—
9	—	GN / BU	8374	Handwheel Channel B Angle Position Sensor SENT Signal	I	—
10	—	YE / GN	8373	Handwheel Channel B Torque Pressure Sensor 2 SENT Signal	I	—

**B139 Transfer Case Two/Four Wheel Drive Actuator Position Sensor (NP0 / NQH)**

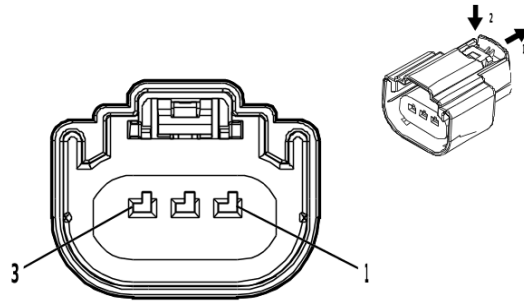

4569745

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 160073-3105  
 Service Connector: 19179750  
 Description: 3-Way F 1.5 MX Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required

**B139 Transfer Case Two/Four Wheel Drive Actuator Position Sensor (NP0 / NQH)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH / RD	7477	Gear Position Sensor 5V Reference	I	—
2	0.5	WH / GN	7479	Rotary Position Sensor Signal	I	—
3	0.5	YE / BK	7478	Gear Position Sensor Low Reference	I	—

**B150 Fuel Tank Pressure Sensor**

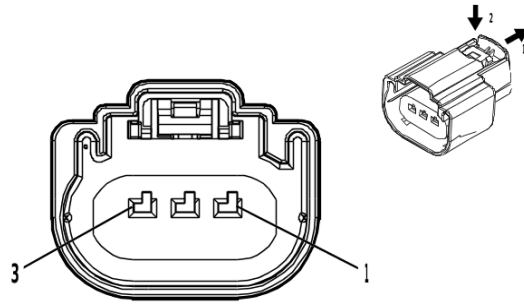

4589538

**Connector Part Information**

Harness Type: Chassis Wiring Harness  
 OEM Connector: 160073-3106  
 Service Connector: 84569854  
 Description: 3-Way F 1.5 MX Series, Sealed( GY)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required

**B150 Fuel Tank Pressure Sensor**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BU / WH	890	Fuel Tank Pressure Sensor Signal	I	—
2	0.5	BK / BN	6284	Fuel Tank Pressure Sensor Low Reference	I	—
3	0.5	YE / RD	2709	Fuel Tank Pressure Sensor 5V Reference	I	—

**B153LR Rear Seat Belt Buckle - Left**

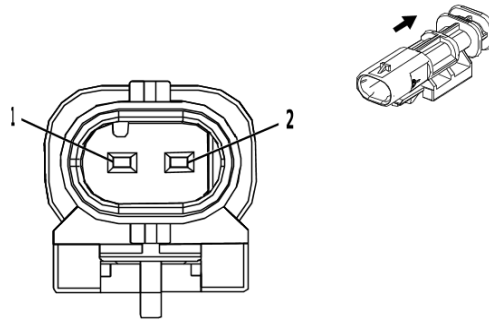

2474755

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 2203314-1  
 Service Connector: 85533165  
 Description: 2-Way M 1.2 MCON Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-17 (L-GN)	No Tool Required

**B153LR Rear Seat Belt Buckle - Left**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BK / OG	1363	Driver Seat Belt Switch Low Reference	I	—
2	0.5	YE / OG	5161	Left Rear Seat Belt Switch Signal	I	—

**B153RM Rear Center Seat Belt Buckle**

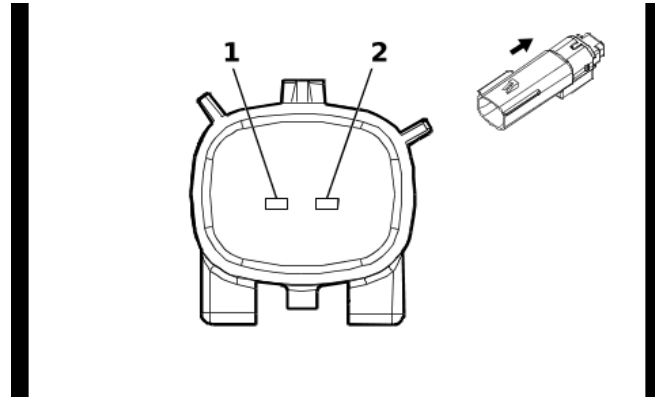

6366248

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 33481-2202  
 Service Connector: 85043200  
 Description: 2-Way M 1.5 MX Series, Sealed( GY)

**Terminal Part Information**


Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-3 (GY)	No Tool Required

**B153RM Rear Center Seat Belt Buckle**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BK / OG	1363	Driver Seat Belt Switch Low Reference	I	—
2	0.5	BU / OG	5163	Rear Center Seat Belt Switch Signal	I	—



**B153RR Rear Seat Belt Buckle - Right**

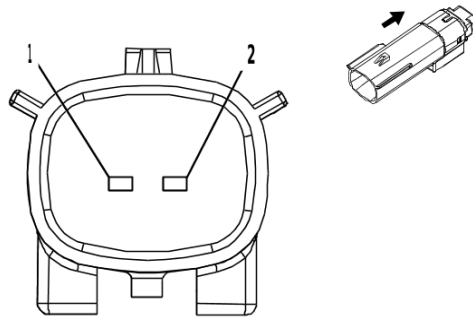

3338703

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 33481-2201  
 Service Connector: 84867146  
 Description: 2-Way M 1.5 MX Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-3 (GY)	No Tool Required

**B153RR Rear Seat Belt Buckle - Right**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BK / OG	1363	Driver Seat Belt Switch Low Reference	I	—
2	0.5	BN / OG	5162	Right Rear Seat Belt Switch Signal	I	—

**B160 Inside Air Moisture and Windshield Temperature Sensor**

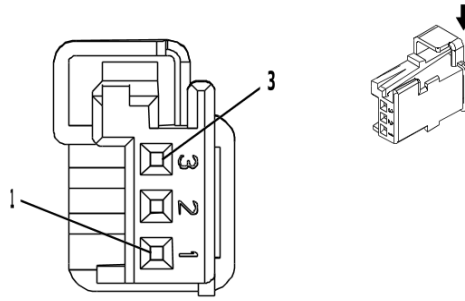

4218883

**Connector Part Information**

Harness Type: Inside Rearview Mirror Wiring Harness - Jumper  
 OEM Connector: 13593004  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 3-Way F 0.64 Micro-Quadlock Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**B160 Inside Air Moisture and Windshield Temperature Sensor**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	VT / GN	39	Run/Crank Ignition 1 Voltage	I	—
2	—	BK / WH	1851	Signal Ground	I	—
3	—	GN / WH	4115	Body Control Module LIN Bus 5	I	—

**B172LF Front Disc Brake Pad Wear Sensor - Left**

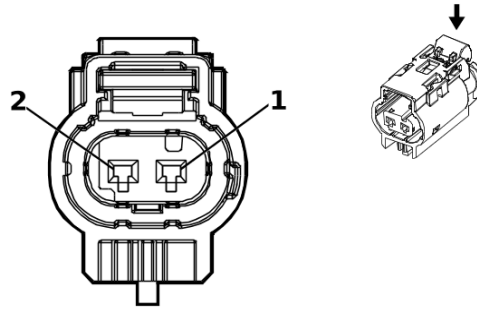

3747581

**Connector Part Information**

Harness Type: Chassis Wiring Harness  
 OEM Connector: 10094234  
 Service Connector: 84727362  
 Description: 2-Way F 1.2 Multilock Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

**B172LF Front Disc Brake Pad Wear Sensor - Left**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN / BU	1602	Front Brake Pad Wear Sensor Signal	I	—
2	0.5	BK / WH	2051	Signal Ground	I	—

**B172LR Rear Disc Brake Pad Wear Sensor - Left**

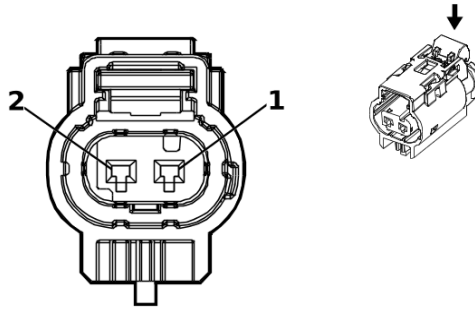

3747581

**Connector Part Information**

Harness Type: Chassis Rear Wiring Harness Extension Harness  
 OEM Connector: 10094234  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F 1.2 Multilock Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

**B172LR Rear Disc Brake Pad Wear Sensor - Left**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	GN / YE	1616	Rear Brake Pad Wear Sensor Signal	I	—
2	0.75	BK / WH	1751	Signal Ground	I	—

**B174G Front View Driver Information Camera - Grille**

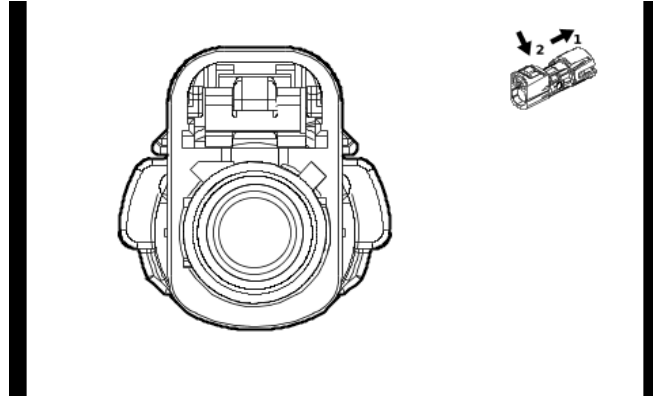

5758030

**Connector Part Information**

Harness Type: Front Object Alarm Sensor Wiring Harness COAX  
 OEM Connector: 13529782  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 1-Way F Coax Type( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**B174G Front View Driver Information Camera - Grille**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	Coax Cable	—	Front Vision Camera 1 Coaxial Video Signal	I	—

**B174W Front View Camera - Windshield**

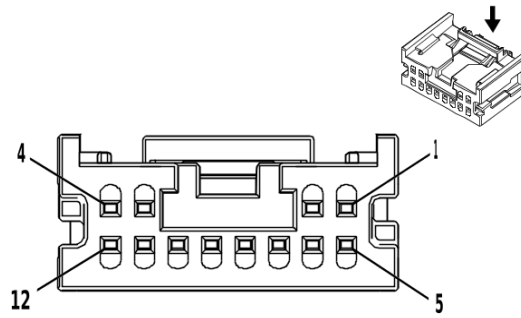

3824362

**Connector Part Information**

Harness Type: Roof Wiring Harness  
 OEM Connector: 34824-5124  
 Service Connector: 13507121  
 Description: 12-Way F Mini 50 Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19333221	EL-35616-58 (BK)	EL-38125-58

**B174W Front View Camera - Windshield**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	BK / WH	1851	Signal Ground	I	—
2	—	—	—	Not Occupied	—	—
3	0.35	RD / YE	240	Battery Positive Voltage	I	—
4	—	—	—	Not Occupied	—	—
5	0.35	BU / YE	4979	AUTOSAR CAN Bus [+] 2 Serial Data	I	—
6	0.35	WH	4978	AUTOSAR CAN Bus [-] 2 Serial Data	I	—
7	0.35	BU / YE	4979	AUTOSAR CAN Bus [+] 2 Serial Data	I	—
8	0.35	WH	4978	AUTOSAR CAN Bus [-] 2 Serial Data	I	—
9 - 12	—	—	—	Not Occupied	—	—

## B203 Radiator Coolant Temperature Sensor

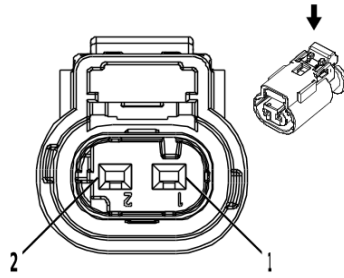

2717066

### Connector Part Information

Harness Type: Engine Wiring Harness  
 OEM Connector: 10010337  
 Service Connector: 13587326  
 Description: 2-Way F 1.2 Multilock Series, Sealed( BK)


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

### B203 Radiator Coolant Temperature Sensor

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	YE / BK	3000	Coolant Temperature Sensor 2 Signal	I	—
2	0.5	BK / GN	580	Engine Control Sensors Low Reference 2	I	—

**B218L Side Obstacle Detection Control Module - Left**

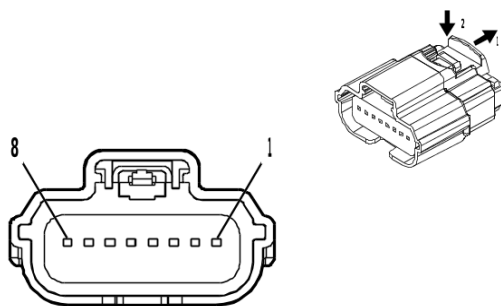

4708234

**Connector Part Information**

Harness Type: Rear Object Alarm Sensor Wiring Harness  
 OEM Connector: 31404-9110  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 8-Way F 64 Series, Sealed( BK)

**Terminal Part Information**


Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

**B218L Side Obstacle Detection Control Module - Left**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH	4087	Private Serial Data Side Obstacle Detection CAN Bus [-] Serial Data	I	—
2	0.5	BU / VT	4088	Private Serial Data Side Obstacle Detection CAN Bus [+] Serial Data	I	—
3	0.5	BK / WH	751	Signal Ground	I	—
4	0.5	WH	4100	AUTOSAR CAN Bus [-] 4 Serial Data	I	—
5	0.5	WH	4100	AUTOSAR CAN Bus [-] 4 Serial Data	I	—
6	0.5	BU / VT	4101	AUTOSAR CAN Bus [+] 4 Serial Data	I	—
7	0.5	BU / VT	4101	AUTOSAR CAN Bus [+] 4 Serial Data	I	—
8	0.5	RD / BN	4940	Battery Positive Voltage	I	—



**B218R Side Obstacle Detection Control Module - Right**

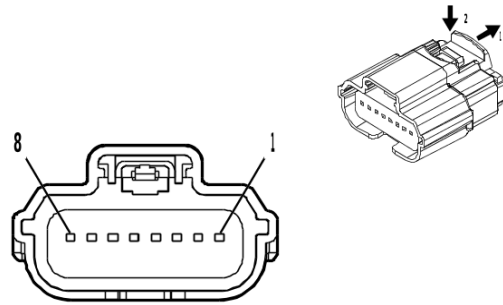

4708234

**Connector Part Information**

Harness Type: Rear Object Alarm Sensor Wiring Harness  
 OEM Connector: 31404-9532  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 8-Way F 64 Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

**B218R Side Obstacle Detection Control Module - Right**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH	4087	Private Serial Data Side Obstacle Detection CAN Bus [-] Serial Data	I	—
2	0.5	BU / VT	4088	Private Serial Data Side Obstacle Detection CAN Bus [+] Serial Data	I	—
3	0.5	BK / WH	751	Signal Ground	I	—
4	—	—	—	Not Occupied	—	—
5	0.5	WH	4100	AUTOSAR CAN Bus [-] 4 Serial Data	I	—
6	0.5	BU / VT	4101	AUTOSAR CAN Bus [+] 4 Serial Data	I	—
7	—	—	—	Not Occupied	—	—
8	0.5	RD / BN	4940	Battery Positive Voltage	I	—

**B306E Parking Assist Alarm Sensor - Rear Left Outer (UD7)**

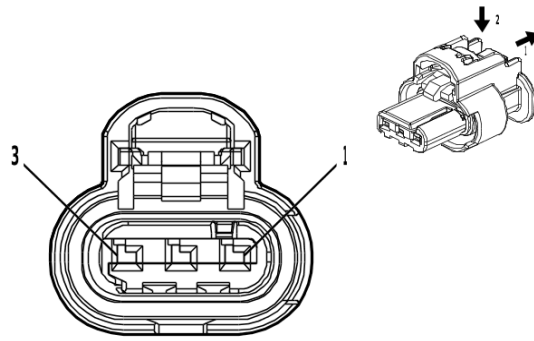

4581126

**Connector Part Information**

Harness Type: Rear Object Alarm Sensor Wiring Harness  
 OEM Connector: 1-2296695-1  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 3-Way F 1.2 MCON-CB Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

**B306E Parking Assist Alarm Sensor - Rear Left Outer (UD7)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN / WH	2374	Object Sensor Voltage Reference	I	—
2	0.5	YE	2375	Left Rear Outer Parking Assist Sensor Signal	I	—
3	0.5	BK / GY	2379	Object Sensor Low Reference	I	—

**B306F Parking Assist Alarm Sensor - Rear Left Middle (UD7)**

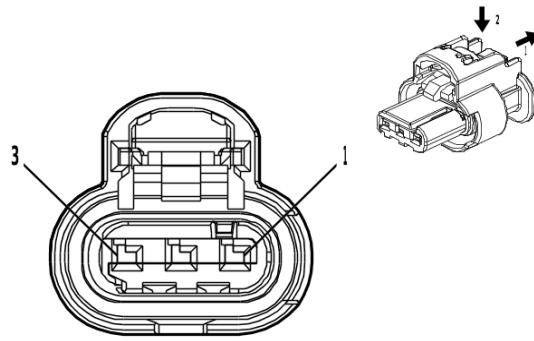

4581126

**Connector Part Information**

Harness Type: Rear Object Alarm Sensor Wiring Harness  
 OEM Connector: 1-2296695-1  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 3-Way F 1.2 MCON-CB Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

**B306F Parking Assist Alarm Sensor - Rear Left Middle (UD7)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN / WH	2374	Object Sensor Voltage Reference	I	—
2	0.5	YE / BU	2376	Left Rear Middle Parking Assist Sensor Signal	I	—
3	0.5	BK / GY	2379	Object Sensor Low Reference	I	—

**B306G Parking Assist Alarm Sensor - Rear Right Middle (UD7)**

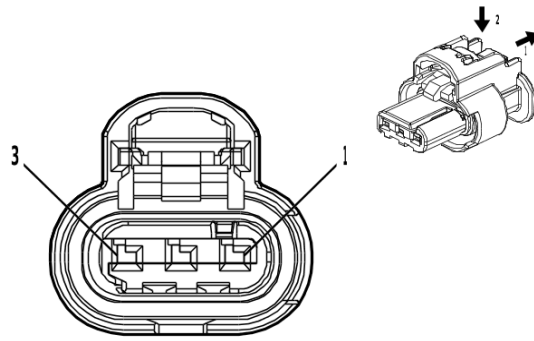

4581126

**Connector Part Information**

Harness Type: Rear Object Alarm Sensor Wiring Harness  
 OEM Connector: 1-2296695-1  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 3-Way F 1.2 MCON-CB Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

**B306G Parking Assist Alarm Sensor - Rear Right Middle (UD7)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN / WH	2374	Object Sensor Voltage Reference	I	—
2	0.5	YE / WH	2377	Right Rear Middle Parking Assist Sensor Signal	I	—
3	0.5	BK / GY	2379	Object Sensor Low Reference	I	—

**B306H Parking Assist Alarm Sensor - Rear Right Outer**

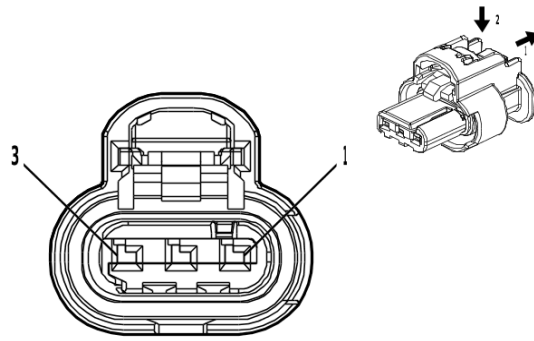

4581126

**Connector Part Information**

Harness Type: Rear Object Alarm Sensor Wiring Harness  
 OEM Connector: 1-2296695-1  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 3-Way F 1.2 MCON-CB Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

**B306H Parking Assist Alarm Sensor - Rear Right Outer**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN / WH	2374	Object Sensor Voltage Reference	I	—
2	0.5	YE / VT	2378	Right Rear Outer Parking Assist Sensor Signal	I	—
3	0.5	BK / GY	2379	Object Sensor Low Reference	I	—

**B310 Fuel Pressure and Temperature Sensor**

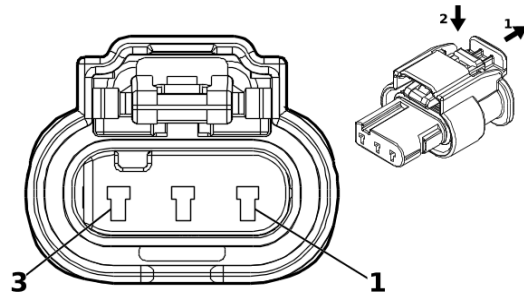

5420917

**Connector Part Information**

Harness Type: Fuel Injector Wiring Harness  
 OEM Connector: 34900-3127  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 3-Way F 1.2 MCON-LL Series, Sealed( GY)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**B310 Fuel Pressure and Temperature Sensor**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BK / GN	580	Engine Control Sensors Low Reference 2	I	—
2	—	BU / WH	2918	Fuel Rail Pressure Sensor Signal	I	—
3	—	WH / RD	480	Engine Control Vehicle Sensors 5 Volt Reference 1	I	—

## B321 Crankcase Pressure Sensor

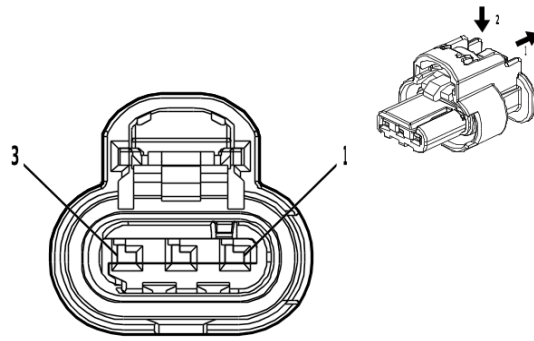

4581126

### Connector Part Information

Harness Type: Engine Wiring Harness  
 OEM Connector: 1-2296695-1  
 Service Connector: 86792094  
 Description: 3-Way F 1.2 MCON-CB Series, Sealed( BK)


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

### B321 Crankcase Pressure Sensor

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	YE / GY	3926	Crankcase Differential Pressure Sensor Signal	I	—
2	0.5	BK / YE	548	Engine Control Sensors Low Reference 1	I	—
3	0.5	BU / RD	460	Engine Control Sensors 5 Volt Reference 1	I	—

**B338A Intake Camshaft Profile Sleeve Position Sensor 1**

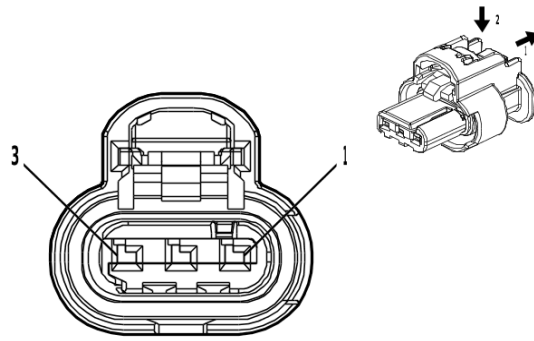

4581126

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 1-2296695-1  
 Service Connector: 86792094  
 Description: 3-Way F 1.2 MCON-CB Series, Sealed( BK)

**Terminal Part Information**


Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

**B338A Intake Camshaft Profile Sleeve Position Sensor 1**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH / RD	480	Engine Control Vehicle Sensors 5 Volt Reference 1	I	—
2	0.5	BK / GN	580	Engine Control Sensors Low Reference 2	I	—
3	0.5	VT / WH	3744	Camshaft Intake Lobe Axial Position Signal 1	I	—



**B338B Intake Camshaft Profile Sleeve Position Sensor 2**

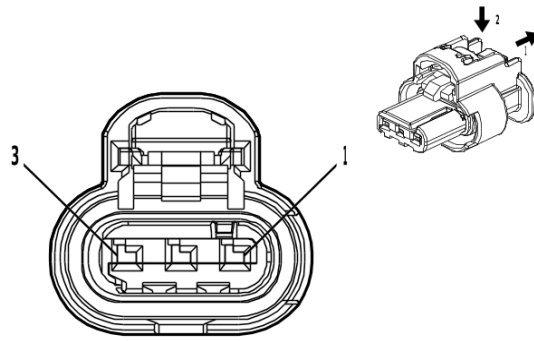

4581126

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 1-2296695-1  
 Service Connector: 86792094  
 Description: 3-Way F 1.2 MCON-CB Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

**B338B Intake Camshaft Profile Sleeve Position Sensor 2**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH / RD	480	Engine Control Vehicle Sensors 5 Volt Reference 1	I	—
2	0.5	BK / GN	580	Engine Control Sensors Low Reference 2	I	—
3	0.5	VT / GN	3745	Camshaft Intake Lobe Axial Position Signal 2	I	—

**B339A Exhaust Camshaft Profile Sleeve Position Sensor 1**

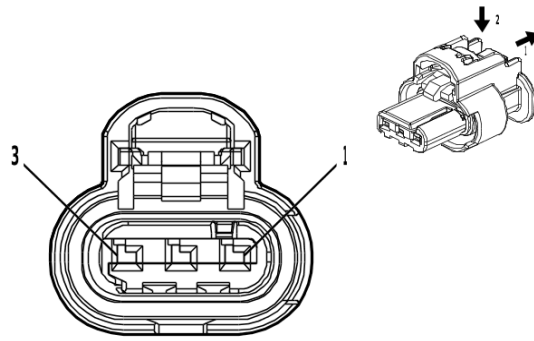

4581126

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 1-2296695-1  
 Service Connector: 86792094  
 Description: 3-Way F 1.2 MCON-CB Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

**B339A Exhaust Camshaft Profile Sleeve Position Sensor 1**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH / RD	480	Engine Control Vehicle Sensors 5 Volt Reference 1	I	—
2	0.5	BK / GN	580	Engine Control Sensors Low Reference 2	I	—
3	0.5	YE / WH	3746	Camshaft Exhaust Lobe Axial Position Signal 1	I	—

**B339B Exhaust Camshaft Profile Sleeve Position Sensor 2**

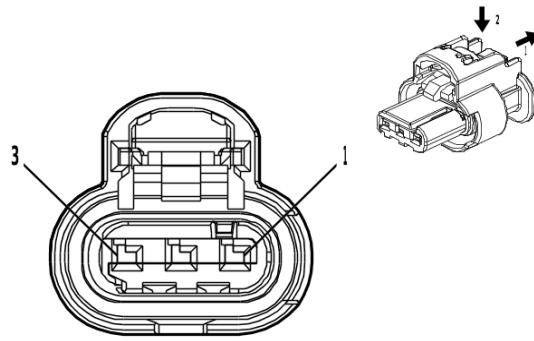

4581126

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 1-2296695-1  
 Service Connector: 86792094  
 Description: 3-Way F 1.2 MCON-CB Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

**B339B Exhaust Camshaft Profile Sleeve Position Sensor 2**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH / RD	480	Engine Control Vehicle Sensors 5 Volt Reference 1	I	—
2	0.5	BK / GN	580	Engine Control Sensors Low Reference 2	I	—
3	0.5	YE / GN	3747	Camshaft Exhaust Lobe Axial Position Signal 2	I	—

**B355 Communication Interface Module Microphone**

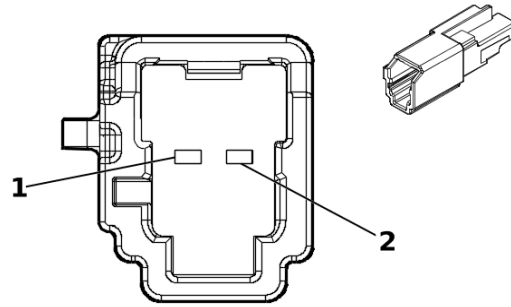

5360948

**Connector Part Information**

Harness Type: Roof Wiring Harness  
 OEM Connector: 6098-9073  
 Service Connector: 84847259  
 Description: 2-Way M 1.2 MCON Series( GY)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-17 (L-GN)	No Tool Required

**B355 Communication Interface Module Microphone**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	BU / BK	7044	Microphone [-] Signal	I	—
2	0.35	VT / YE	7043	Microphone [+] Signal	I	—

**B384 Rearview Underbody Camera (UXA)**

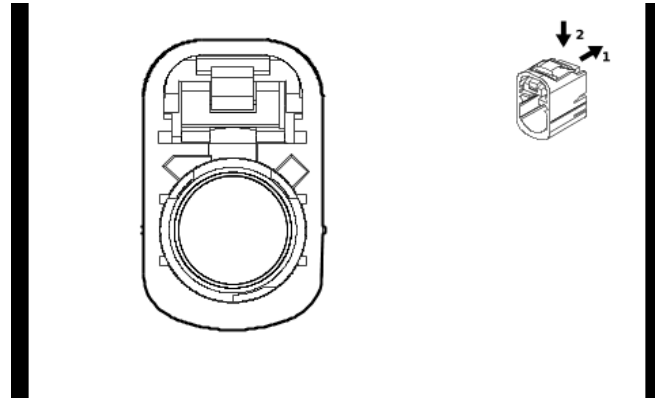

5920539

**Connector Part Information**

Harness Type: Rearview Camera Wiring Harness  
 OEM Connector: 13537644  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 1-Way F Coax Type( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**B384 Rearview Underbody Camera (UXA)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	LVDS	—	(PDR) Front Vision Camera #2	I	—

**B385 Front View Underbody Camera (UXA)**

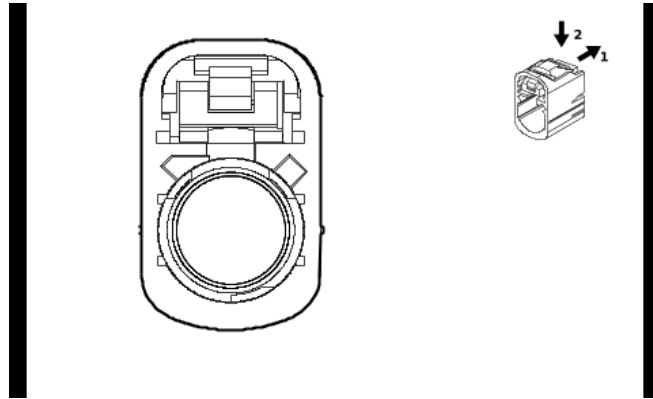

5920539

**Connector Part Information**

Harness Type: Rearview Camera Wiring Harness  
 OEM Connector: 13537644  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 1-Way F Coax Type( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**B385 Front View Underbody Camera (UXA)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	LVDS	—	(PDR) Front Vision Camera #2	I	—

## E6 High Mount Stop Lamp

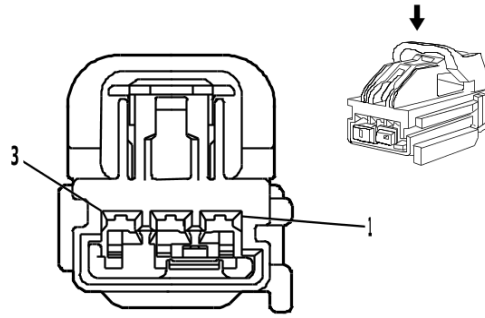

1787799

### Connector Part Information

Harness Type: Body Wiring Harness  
 OEM Connector: 7283-3440-40  
 Service Connector: 86825460  
 Description: 3-Way F 1.5 Kaizen Series( L-GY)


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required

### E6 High Mount Stop Lamp

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH / VT	1430	Exterior Courtesy Lamp Control	I	—
2	0.5	BU / BK	1053	Center High Mounted Stop Lamp Control 3	I	—
3	0.5	BK	550	Ground	I	—

**E7L Rear License Plate Lamp - Left**

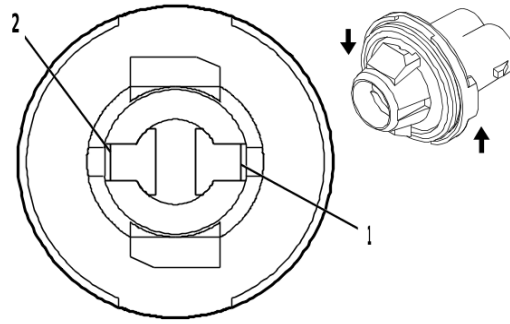

5153536

**Connector Part Information**

Harness Type: Rear Object Alarm Sensor Wiring Harness  
 OEM Connector: 15324946  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F Lamp Socket Wedge Base, Type W-2( D-GY)

**Terminal Part Information**


Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**E7L Rear License Plate Lamp - Left**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	GN / YE	6846	Rear License Plate Lamp Control	I	—
2	0.35	BK	750	Ground	I	—



**E7R Rear License Plate Lamp - Right**

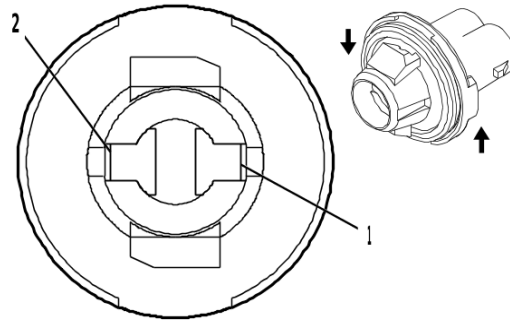

5153536

**Connector Part Information**

Harness Type: Rear Object Alarm Sensor Wiring Harness  
 OEM Connector: 15324946  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F Lamp Socket Wedge Base, Type W-2( D-GY)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**E7R Rear License Plate Lamp - Right**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	GN / YE	6846	Rear License Plate Lamp Control	I	—
2	0.35	BK	750	Ground	I	—

E13LA Front Headlamp - Left X1

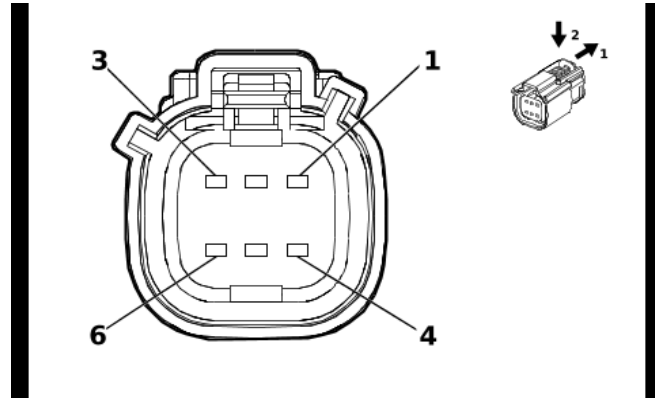

5926694

**Connector Part Information**

Harness Type: Forward Lamp Wiring Harness  
 OEM Connector: 33472-0607  
 Service Connector: 19301527  
 Description: 6-Way F 1.5 MX Series, Sealed( GY)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required
II	Not required	J-35616-2A (GY)	No Tool Required

**E13LA Front Headlamp - Left X1**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	1.5	BK	150	Ground	I	—
2	0.75	RD / WH	640	Battery Positive Voltage	II	—
3	0.75	YE	712	Left Headlamp Low Beam Control	II	—
4	0.75	WH	711	Left Headlamp High Beam Control	II	—
5	0.5	GY / BU	7538	Left Front DRL Control	I	—
6	0.5	WH / YE	1254	Left Front Park Lamp Control	I	—

**E13LA Front Headlamp - Left X2**

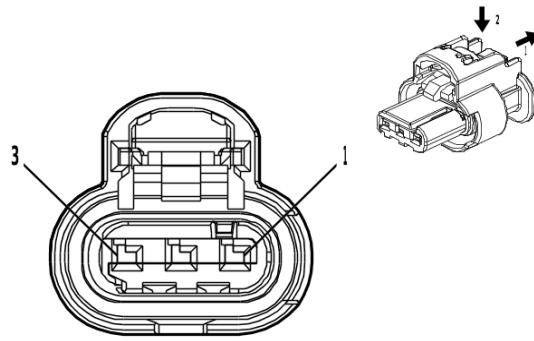

4581126

**Connector Part Information**

Harness Type: Forward Lamp Wiring Harness  
 OEM Connector: 1-2296695-1  
 Service Connector: 86792094  
 Description: 3-Way F 1.2 MCON-CB Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required

**E13LA Front Headlamp - Left X2**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BU / WH	1314	Left Front Turn Signal Lamp Control	I	—
2	0.5	WH / YE	1204	Left Park Lamp Control 2	I	—
3	0.5	BK	150	Ground	I	—

E13RA Front Headlamp - Right X1

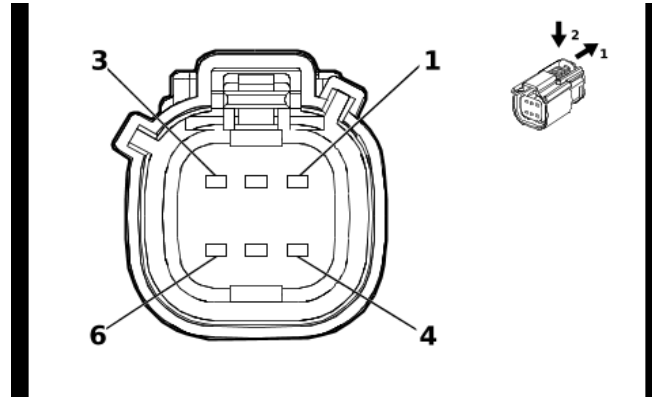

5926694

**Connector Part Information**

Harness Type: Forward Lamp Wiring Harness  
 OEM Connector: 33472-0607  
 Service Connector: 19301527  
 Description: 6-Way F 1.5 MX Series, Sealed( GY)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required
II	Not required	J-35616-2A (GY)	No Tool Required

**E13RA Front Headlamp - Right X1**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	1.5	BK	250	Ground	I	—
2	0.75	RD / YE	740	Battery Positive Voltage	II	—
3	0.75	YE	312	Right Headlamp Low Beam Control	II	—
4	0.75	WH	311	Right Headlamp High Beam Control	II	—
5	0.5	BU / BN	7539	Right Front DRL Control	I	—
6	0.5	BU / GN	1253	Right Front Park Lamp Control	I	—

**E13RA Front Headlamp - Right X2**

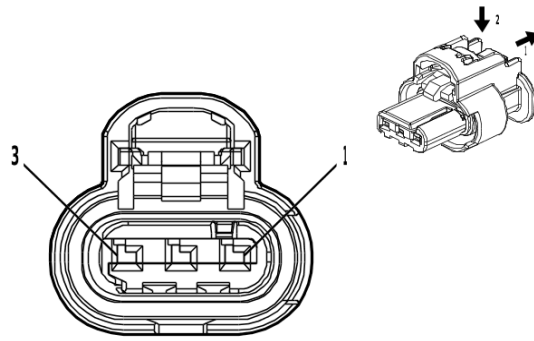

4581126

**Connector Part Information**

Harness Type: Forward Lamp Wiring Harness  
 OEM Connector: 1-2296695-1  
 Service Connector: 86792094  
 Description: 3-Way F 1.2 MCON-CB Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required

**E13RA Front Headlamp - Right X2**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GN / VT	1315	Right Front Turn Signal Lamp Control	I	—
2	0.5	VT	1203	Right Park Lamp Control 2	I	—
3	0.75	BK	250	Ground	I	—

**E14A Front Seat Back Heater - Driver (KA1)**

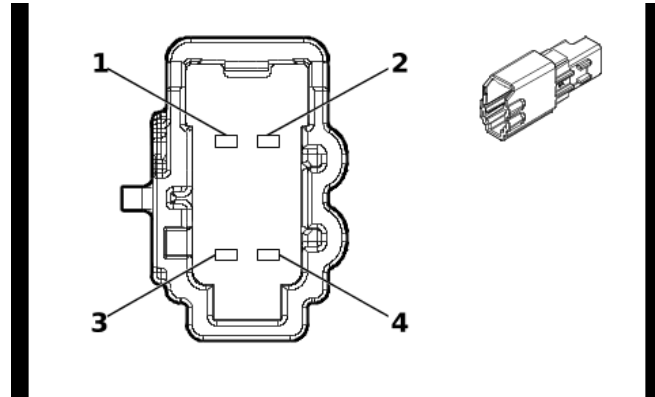

5423974

**Connector Part Information**

Harness Type: Front Seat Wiring Harness - Driver  
 OEM Connector: 6098-9049  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 4-Way M 1.2 MCON Series( GY)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-13 (BU)	No Tool Required
II	Not required	J-35616-17 (L-GN)	No Tool Required

**E14A Front Seat Back Heater - Driver (KA1)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BN / VT	2077	Driver Seat Heating Element Control	I	—
2	0.5	BU	2425	Driver Seat Back Heating Temperature Sensor Signal	II	—
3	0.5	BK / YE	2080	Driver Heated Seat Thermistor Low Reference	II	—
4	0.75	BN / BK	2078	Driver Seat Heating Element Low Reference	I	—

**E14B Front Seat Cushion Heater - Driver (KA1)**

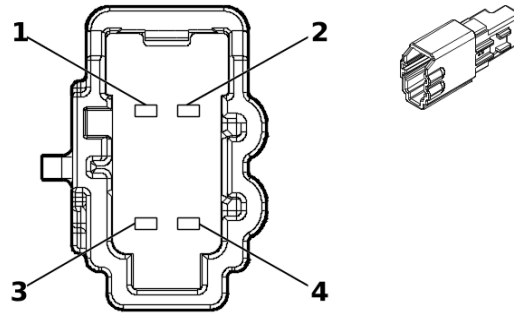

5360963

**Connector Part Information**

Harness Type: Front Seat Wiring Harness - Driver  
 OEM Connector: 6098-9046  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 4-Way M 1.2 MCON Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-13 (BU)	No Tool Required
II	Not required	J-35616-17 (L-GN)	No Tool Required

**E14B Front Seat Cushion Heater - Driver (KA1)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BN / VT	2077	Driver Seat Heating Element Control	I	—
2	0.5	YE / GY	2079	Driver Seat Heating Temperature Sensor Signal	II	—
3	0.5	BK / YE	2080	Driver Heated Seat Thermistor Low Reference	II	—
4	0.75	BN / BK	2078	Driver Seat Heating Element Low Reference	I	—

**E14C Front Seat Back Heater - Passenger (KA1)**

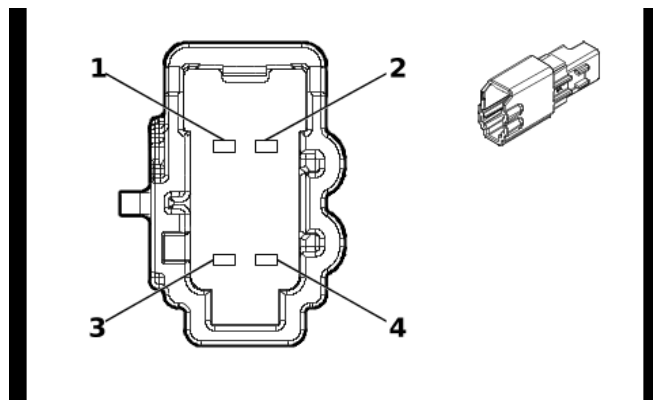

5423974

**Connector Part Information**

Harness Type: Front Seat Wiring Harness - Passenger  
 OEM Connector: 6098-9049  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 4-Way M 1.2 MCON Series( GY)

**Terminal Part Information**


Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-13 (BU)	No Tool Required
II	Not required	J-35616-17 (L-GN)	No Tool Required

**E14C Front Seat Back Heater - Passenger (KA1)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BN / BU	2479	Passenger Seat Heating Element Control	I	—
2	0.5	WH / BU	2436	Passenger Seat Back Heating Temperature Sensor Signal	II	—
3	0.5	BK / GN	2482	Passenger Heated Back Thermistor Low Reference	II	—
4	0.75	GY / BK	2480	Passenger Seat Heating Element Low Reference	I	—



**E14D Front Seat Cushion Heater - Passenger (KA1)**

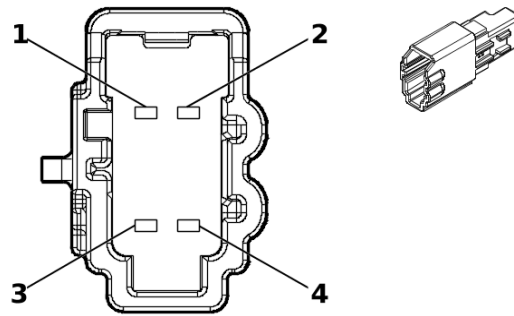

5360963

**Connector Part Information**

Harness Type: Front Seat Wiring Harness - Passenger  
 OEM Connector: 6098-9046  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 4-Way M 1.2 MCON Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-13 (BU)	No Tool Required
II	Not required	J-35616-17 (L-GN)	No Tool Required

**E14D Front Seat Cushion Heater - Passenger (KA1)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BN / BU	2479	Passenger Seat Heating Element Control	I	—
2	0.5	WH / GY	2434	Passenger Seat Heating Temperature Sensor Signal	II	—
3	0.5	BK / GY	2435	Passenger Heated Seat Thermistor Low Reference	II	—
4	0.75	GY / BK	2480	Passenger Seat Heating Element Low Reference	I	—

**E18 Rear Window Defogger Grid X1**

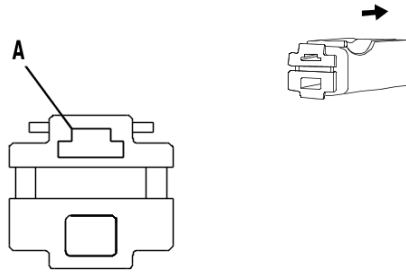

4248834

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 7123-5014-30  
 Service Connector: 19367647  
 Description: 1-Way F 250 Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-42 (RD)	No Tool Required

**E18 Rear Window Defogger Grid X1**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	2.5	BN / VT	293	Rear Defogger Grid Control	I	—

## E18 Rear Window Defogger Grid X2

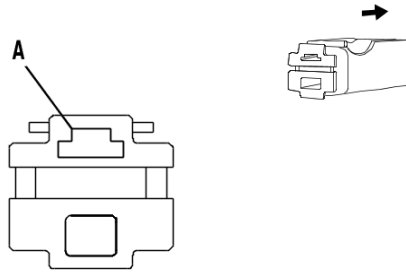

4248834

### Connector Part Information

Harness Type: Body Wiring Harness  
 OEM Connector: 7123-5014-30  
 Service Connector: 19367647  
 Description: 1-Way F 250 Series( BK)


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-42 (RD)	No Tool Required

### E18 Rear Window Defogger Grid X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	2.5	BK	550	Ground	I	—

**E29LF Front Fog Lamp - Left (T40)**

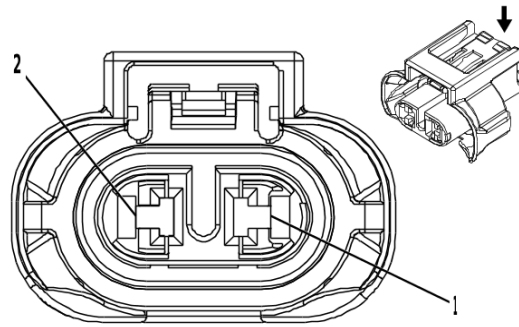

3404058

**Connector Part Information**

Harness Type: Front Object Alarm Sensor Wiring Harness  
 OEM Connector: F194300  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F 2.8 APEX Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-4A (PU)	No Tool Required

**E29LF Front Fog Lamp - Left (T40)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	1.5	BN / GY	5061	Left Front Fog Lamp Control	I	—
2	1.5	BK	550	Ground	I	—

**E29RF Front Fog Lamp - Right (T40)**

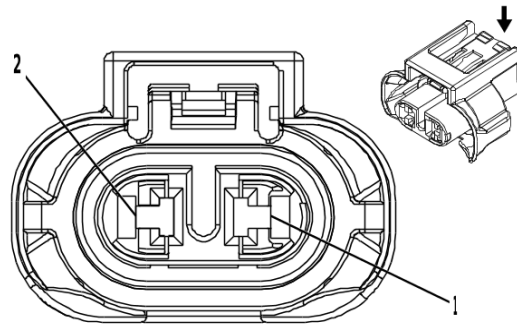

3404058

**Connector Part Information**

Harness Type: Front Object Alarm Sensor Wiring Harness  
 OEM Connector: F194300  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F 2.8 APEX Series, Sealed( BK)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-4A (PU)	No Tool Required

**E29RF Front Fog Lamp - Right (T40)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	1.5	BN / GY	5061	Left Front Fog Lamp Control	I	—
2	1.5	BK	550	Ground	I	—

## 6-174 Electrical Component and Inline Harness Connector End Views

### E33L Cargo Lamp - Left (S0Y)

#### Connector Part Information

Harness Type: Cargo Lamp Wiring Harness

OEM Connector: Not Available

Service Connector: Service by Harness - See Part Catalog

Description: 2-Way

#### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

#### E33L Cargo Lamp - Left (S0Y)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	GY / BU	7762	Cargo Lamp Control	I	—
2	—	BK	750	Ground	I	—

## E33R Cargo Lamp - Right (S0Y)

### Connector Part Information

Harness Type: Cargo Lamp Wiring Harness  
 OEM Connector: Not Available  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

### E33R Cargo Lamp - Right (S0Y)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	GY / BU	7762	Cargo Lamp Control	I	—
2	—	BK	750	Ground	I	—

**E42L Rear Body Structure Stop Lamp - Left**

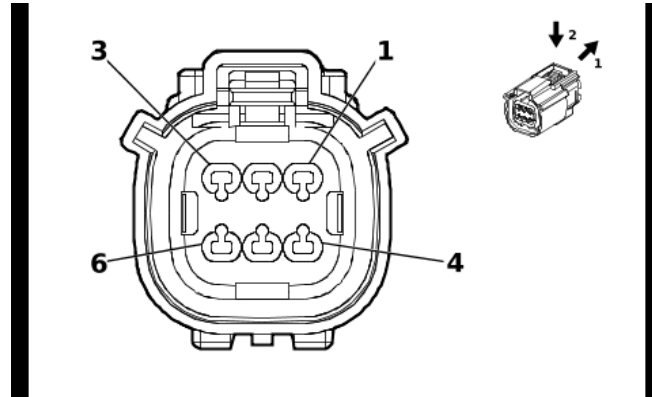

5666225

**Connector Part Information**

Harness Type: Chassis Wiring Harness  
 OEM Connector: 33472-0705  
 Service Connector: 86526151  
 Description: 6-Way F 1.5 MX Series, Sealed( BK)

**Terminal Part Information**


Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required

**E42L Rear Body Structure Stop Lamp - Left**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BK	750	Ground	I	—
2	0.5	GY / YE	7542	Left Rear Stop Lamp Control	I	T93+ X88
	0.5	BU / WH	1334	Left Rear Turn Signal Lamp Control 2	I	- T93+ X88
3	0.5	BN / BU	6993	Left Rear Park Lamp Control	I	—
4	0.5	BU / WH	1334	Left Rear Turn Signal Lamp Control 2	I	T93+ X88
	0.5	GN / WH	24	Backup Lamp Control	I	- T93+ X88
5	0.5	GN / WH	24	Backup Lamp Control	I	—
6	—	—	—	Not Occupied	—	—



### E42R Rear Body Structure Stop Lamp - Right

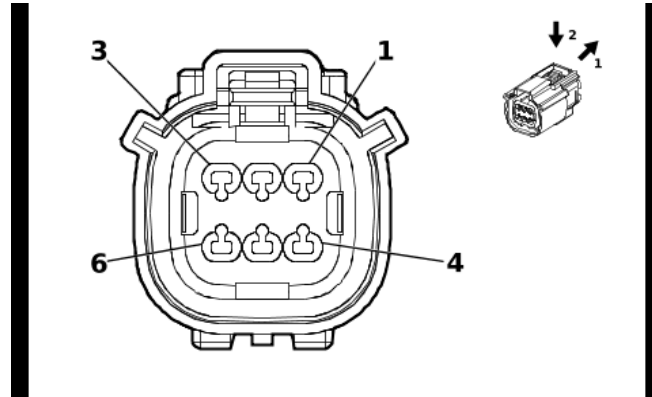

5666225

#### Connector Part Information

Harness Type: Chassis Wiring Harness  
 OEM Connector: 33472-0705  
 Service Connector: 86526151  
 Description: 6-Way F 1.5 MX Series, Sealed( BK)


#### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required
II	Not required	J-35616-2A (GY)	No Tool Required

### E42R Rear Body Structure Stop Lamp - Right

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BK	850	Ground	I	T93+ X88
	0.75	BK	850	Ground	II	- T93+ X88
2	0.5	WH / YE	7541	Right Rear Stop Lamp Control	I	T93+ X88
	0.75	BU / VT	1335	Right Rear Turn Signal Lamp Control 2	II	- T93+ X88
3	0.5	BN / GY	6995	Right Rear Park Lamp Control	I	—
4	0.75	BU / VT	1335	Right Rear Turn Signal Lamp Control 2	II	T93+ X88
	0.5	GN / WH	24	Backup Lamp Control	I	- T93+ X88
5	0.5	GN / WH	24	Backup Lamp Control	I	—
6	—	—	—	Not Occupied	—	—

**E97 Rear Seat Position Center Courtesy Lamp**

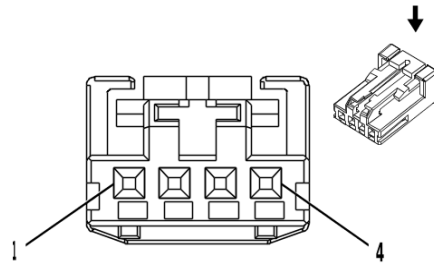

2717162

**Connector Part Information**

Harness Type: Roof Wiring Harness  
 OEM Connector: 936119-1  
 Service Connector: 19367524  
 Description: 4-Way F 0.64 Micro-Quadlock Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

**E97 Rear Seat Position Center Courtesy Lamp**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	WH / BN	6815	Inadvertent Load Control	I	—
2	—	—	—	Not Occupied	—	—
3	0.35	BK	4250	Ground	I	—
4	0.35	GY	157	Interior Lamp Control	I	—

## F101 Instrument Panel Airbag

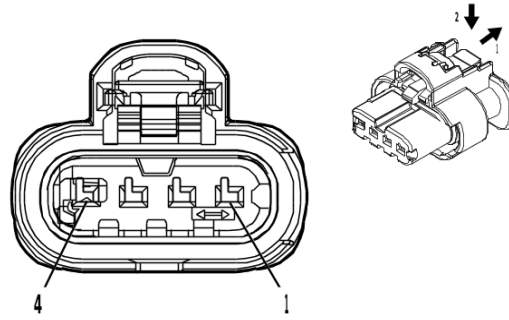

4280383

### Connector Part Information

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: 2296700-6  
 Service Connector: 19368563  
 Description: 4-Way F 1.2 MCON-CB Series, Sealed( YE)


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

### F101 Instrument Panel Airbag

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	OG / WH	3024	Passenger Instrument Panel Air Bag Stage 1 Low Control	I	—
2	0.5	YE / OG	3025	Passenger Instrument Panel Air Bag Stage 1 High Control	I	—
3	0.5	OG / VT	3026	Passenger Instrument Panel Air Bag Stage 2 Low Control	I	—
4	0.5	GY / OG	3027	Passenger Instrument Panel Air Bag Stage 2 High Control	I	—

**F105L Front and Rear Row Roof Rail Airbag - Left**

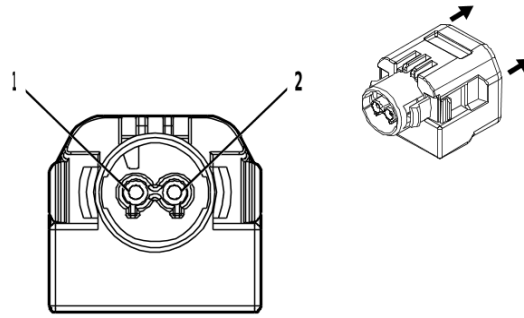

4676225

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 1-1802367-3  
 Service Connector: 13529172  
 Description: 2-Way F ABX-5 Series( GY with YE Cover)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-10 (GN)	No Tool Required

**F105L Front and Rear Row Roof Rail Airbag - Left**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	OG / GN	5019	Left Front Roof Rail Air Bag High Control	I	—
2	0.5	VT / OG	5020	Left Front Roof Rail Air Bag Low Control	I	—

**F105R Front and Rear Row Roof Rail Airbag - Right**

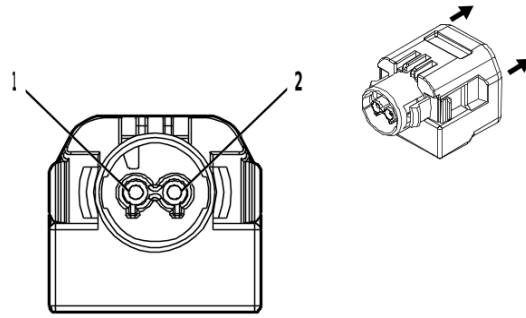

4676225

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 1-1802367-3  
 Service Connector: 13529172  
 Description: 2-Way F ABX-5 Series( GY with YE Cover)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-10 (GN)	No Tool Required

**F105R Front and Rear Row Roof Rail Airbag - Right**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	OG / GY	5021	Right Front Roof Rail Air Bag High Control	I	—
2	0.5	WH / OG	5022	Right Front Roof Rail Air Bag Low Control	I	—

**F106D Front Seat Outboard Seat Back Airbag - Driver**

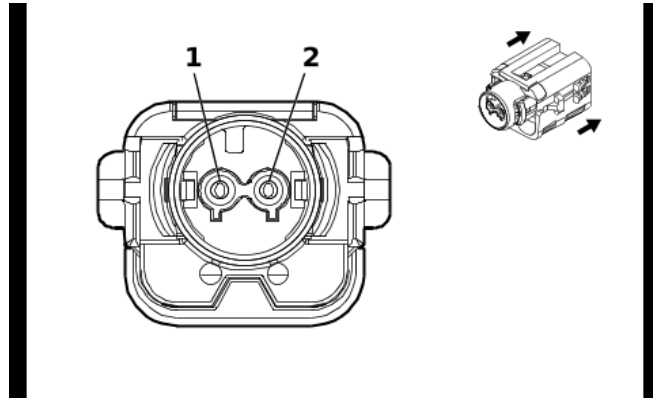

5499727

**Connector Part Information**

Harness Type: Front Seat Wiring Harness - Driver  
 OEM Connector: 35212936  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F ABX-5 Series( PK with YE Cover)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-10 (GN)	No Tool Required

**F106D Front Seat Outboard Seat Back Airbag - Driver**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	OG / BU	4962	Driver Seat Back Air Bag High Control	I	—
2	0.5	BK / OG	4963	Driver Seat Back Air Bag Low Control	I	—

**F106P Front Seat Outboard Seat Back Airbag - Passenger**

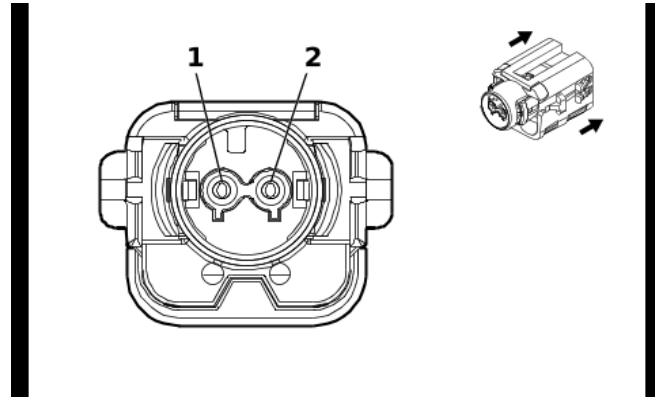

5499727

**Connector Part Information**

Harness Type: Front Seat Wiring Harness - Passenger  
 OEM Connector: 35212936  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F ABX-5 Series( PK with YE Cover)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-10 (GN)	No Tool Required

**F106P Front Seat Outboard Seat Back Airbag - Passenger**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	OG / GY	4956	Passenger Seat Back Air Bag High Control	I	—
2	0.5	BU / OG	4957	Passenger Seat Back Air Bag Low Control	I	—

**F107 Steering Wheel Airbag**

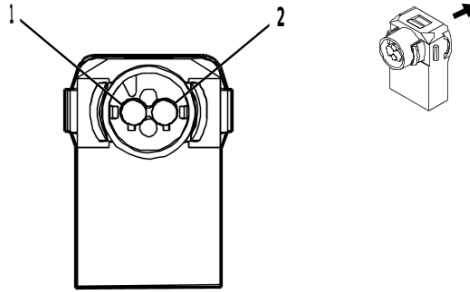

4679778

**Connector Part Information**

Harness Type: Steering Wheel Horn Switch Wiring Harness  
 OEM Connector: 33345783  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F ABX-5 Series( GY with YE Cover)

**Terminal Part Information**


Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**F107 Steering Wheel Airbag**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	OG / VT	3021	Steering Wheel Air Bag Stage 1 High Control	I	—
2	—	BN / OG	3020	Steering Wheel Air Bag Stage 1 Low Control	I	—



**F112D Front Seat Belt Retractor - Driver**

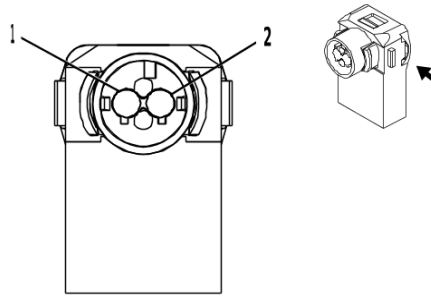

4241364

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 35504153  
 Service Connector: 85666123  
 Description: 2-Way F ABX-5 Series( PU with YE Cover)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-10 (GN)	No Tool Required

**F112D Front Seat Belt Retractor - Driver**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	OG / WH	3477	Driver Seat Belt Retractor Pretensioner High Control	I	—
2	0.5	VT / OG	3478	Driver Seat Belt Retractor Pretensioner Low Control	I	—

**F112P Front Seat Belt Retractor - Passenger**

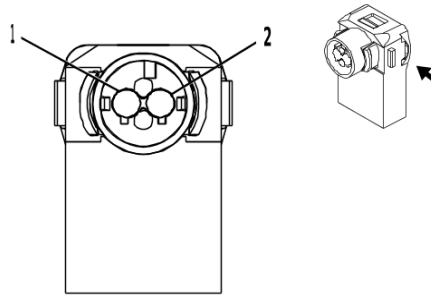

4241364

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 35504153  
 Service Connector: 85666123  
 Description: 2-Way F ABX-5 Series( PU with YE Cover)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-10 (GN)	No Tool Required

**F112P Front Seat Belt Retractor - Passenger**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	OG / GN	3475	Passenger Seat Belt Retractor Pretensioner High Control	I	—
2	0.5	WH / OG	3476	Passenger Seat Belt Retractor Pretensioner Low Control	I	—

**F113D Front Seat Belt Anchor Plate Tensioner - Driver**

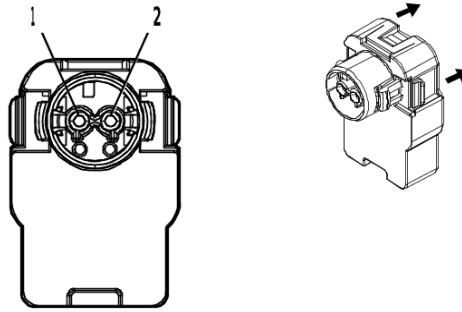

4823732

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 1-1802365-1  
 Service Connector: 13530531  
 Description: 2-Way F ABX-5 Series( PK with YE Cover)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-10 (GN)	No Tool Required

**F113D Front Seat Belt Anchor Plate Tensioner - Driver**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	OG / YE	3481	Driver Seat Belt Anchor Pretensioner High Control	I	—
2	0.5	VT / OG	3482	Driver Seat Belt Anchor Pretensioner Low Control	I	—

**F113P Front Seat Belt Anchor Plate Tensioner - Passenger**

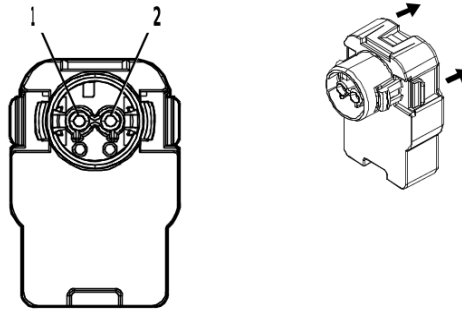

4823732

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 1-1802365-1  
 Service Connector: 13530531  
 Description: 2-Way F ABX-5 Series( PK with YE Cover)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-10 (GN)	No Tool Required

**F113P Front Seat Belt Anchor Plate Tensioner - Passenger**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	OG / BN	3479	Passenger Seat Belt Anchor Pretensioner High Control	I	—
2	0.5	GY / OG	3480	Passenger Seat Belt Anchor Pretensioner Low Control	I	—

## G5 Automatic Transmission Auxiliary Fluid Pump

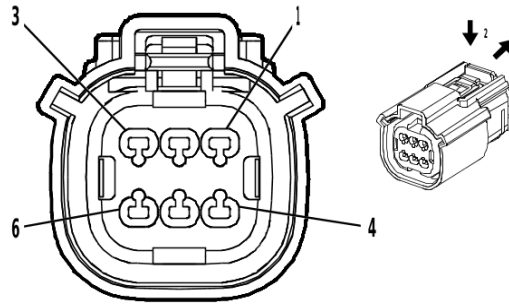

4574736

### Connector Part Information

Harness Type: Automatic Transmission Wiring Harness  
 OEM Connector: 160038-3009  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 6-Way F 1.5 MX Series, Sealed( WH)


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

### G5 Automatic Transmission Auxiliary Fluid Pump

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	RD / GN	840	Battery Positive Voltage	I	—
2	—	—	—	Not Occupied	—	—
3	—	GN / GY	6387	Transmission High Side Driver 1 Control	I	—
4	—	GN / WH	2968	Transmission Auxiliary Fluid Pump Control	I	—
5	—	—	—	Not Occupied	—	—
6	—	BK	6250	Transmission Ground	I	—

G10L Cooling Fan Motor - Left

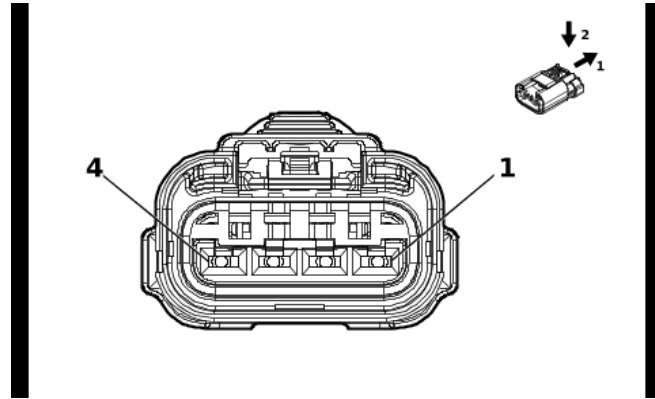

5838592

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 35243535  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 4-Way F 2.8 APEX Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required

**G10L Cooling Fan Motor - Left**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	5	BK	150	Ground	I	—
2	5	RD / BU	1542	Battery Positive Voltage	I	—
3	—	—	—	Not Occupied	—	—
4	0.75	GN / VT	4621	Engine Control Module LIN Bus 1	I	—

**G10LW Cooling Fan Motor - Lower (Z82)**

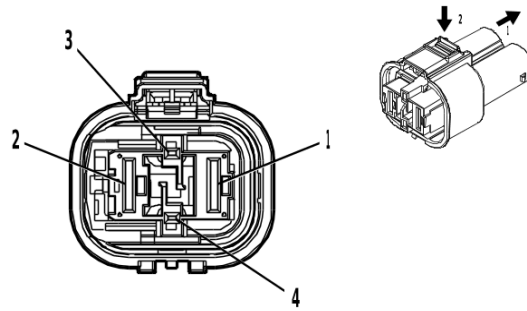

4847569

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 3-2286732-1  
 Service Connector: 84766431  
 Description: 4-Way F 1.2, 9.5 MCON Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required
II	Not required	J-35616-22 (RD)	No Tool Required

**G10LW Cooling Fan Motor - Lower (Z82)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	5	RD / GY	1342	Battery Positive Voltage	II	—
2	5	BK	150	Ground	II	—
3	0.5	GN / YE	4623	Engine Control Module LIN Bus 3	I	—
4	—	—	—	Not Occupied	—	—

G10R Cooling Fan Motor - Right

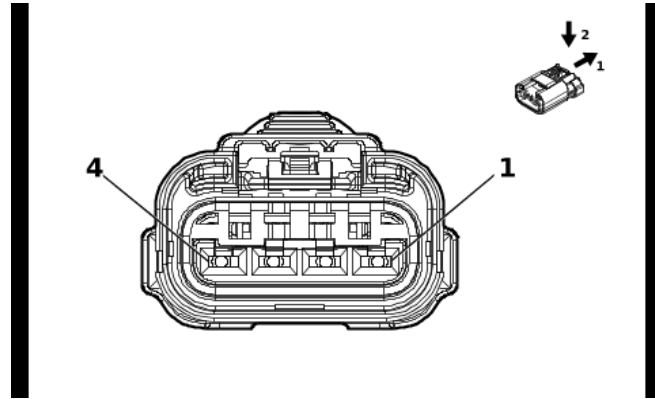

5838592

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 35243535  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 4-Way F 2.8 APEX Series, Sealed( BK)

**Terminal Part Information**


Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required

**G10R Cooling Fan Motor - Right**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	5	BK	150	Ground	I	—
2	5	RD / YE	1442	Battery Positive Voltage	I	—
3	—	—	—	Not Occupied	—	—
4	0.75	GN / VT	4621	Engine Control Module LIN Bus 1	I	—



## G13 Generator X1

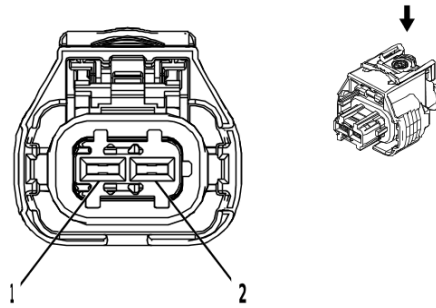

2577394

### Connector Part Information

Harness Type: Engine Wiring Harness  
 OEM Connector: 1928405714  
 Service Connector: 13384371  
 Description: 2-Way F 2.8 Series, Sealed( BK)

### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required

### G13 Generator X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN	25	Charge Indicator Control	I	—
2	0.5	GY	23	Generator Field Duty Cycle Signal	I	—

## G13 Generator X2

### Connector Part Information

Harness Type: Battery Negative Cable

OEM Connector: 23385196

Service Connector: Service by Harness - See Part Catalog

Description: 1-Way


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

### G13 Generator X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	—	RD / YE	2	Battery Positive Voltage	I	—

**G18 Fuel Pump - High Pressure**

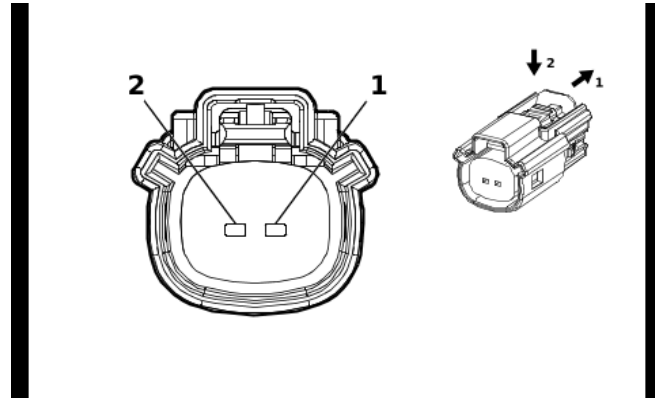

2474713

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 33471-0206  
 Service Connector: 13577534  
 Description: 2-Way F 1.5 Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required

**G18 Fuel Pump - High Pressure**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	VT / BK	7300	High Pressure Fuel Pump Low Control	I	—
2	0.75	YE	7301	High Pressure Fuel Pump High Control	I	—

G24 Windshield Washer Pump

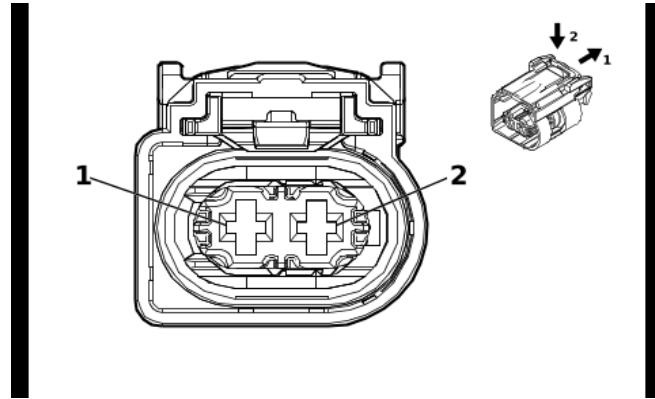

5580410

**Connector Part Information**

Harness Type: Windshield Washer Pump Extension Wiring Harness  
 OEM Connector: 2425741-1  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F 2.8 MCP Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**G24 Windshield Washer Pump**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BK	2250	Ground	I	—
	—	GY / VT	228	Windshield Washer Pump Control	I	—
	—	BU / VT	392	Rear Window Washer Pump Control	I	—
2	—	BK	2250	Ground	I	—
	—	GY / VT	228	Windshield Washer Pump Control	I	—
	—	BU / VT	392	Rear Window Washer Pump Control	I	—

## G58 Evaporative Emission Canister Purge Pump

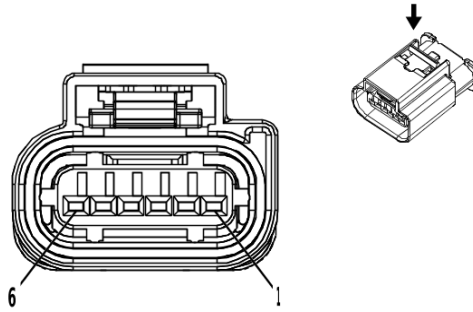

3747579

### Connector Part Information

Harness Type: Engine Wiring Harness  
 OEM Connector: 2272975-1  
 Service Connector: 19354437  
 Description: 6-Way F 1.2 MCON Series, Sealed( BK)


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required

### G58 Evaporative Emission Canister Purge Pump

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN / BU	2447	Evaporative Purge Pump Pressure Signal	I	—
2	0.5	BK / YE	548	Engine Control Sensors Low Reference 1	I	—
3	0.5	BU / RD	460	Engine Control Sensors 5 Volt Reference 1	I	—
4	0.5	GN / BN	2732	Engine Control Module LIN Bus 4	I	—
5	0.5	BK	550	Ground	I	—
6	0.5	VT / BU	5294	Powertrain Main Relay Fused Supply Voltage 5	I	—

G59 Engine Coolant Pump

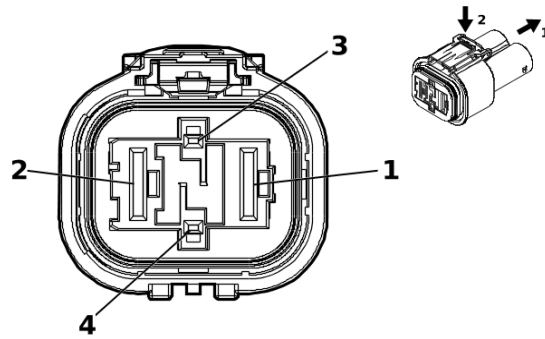

5389785

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 1-2332470-1  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 4-Way F 1.2, 9.5 MCON Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required
II	Not required	J-35616-22 (RD)	No Tool Required

**G59 Engine Coolant Pump**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	10	RD / YE	442	Battery Positive Voltage	II	—
2	10	BK	6550	Ground	II	—
3	0.5	GN / BN	2732	Engine Control Module LIN Bus 4	I	—
4	—	—	—	Not Occupied	—	—

## K9 Body Control Module X1

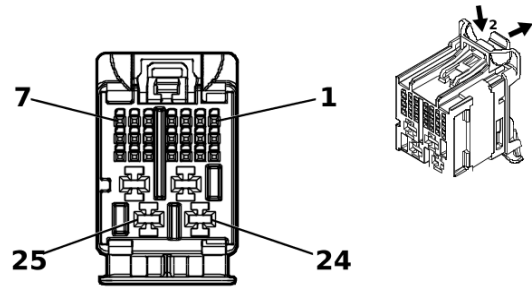

5203995

### Connector Part Information

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: 160027-0013  
 Service Connector: 13534967  
 Description: 25-Way F 0.5 MQS, 2.8 MCP Series( BK with GY Inner Connector)


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19370262	EL-35616-58 (BK)	EL-38125-58
II	87814662	J-35616-4A (PU)	J-38125-557

### K9 Body Control Module X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 4	—	—	—	Not Occupied	—	—
5	0.35	BU / GY	754	Blower Motor Speed Control	I	—
6	0.35	WH / YE	4634	HVAC Remote Enable Signal	I	—
7 - 10	—	—	—	Not Occupied	—	—
11	0.35	GY / GN	4636	HVAC System Enable Signal	I	—
12	0.35	GY	728	Security Indicator Control	I	—
13	—	—	—	Not Occupied	—	—
14	0.35	GN / VT	4759	Transmission Shift Lever Position Indicator 2 Control	I	—
15	0.35	GY	590	Driver Solar Sensor Signal	I	—
16	0.35	GY	6137	Air Conditioning Evaporator Temperature Sensor Signal	I	—
17	0.35	WH / BU	278	Ambient Light Sensor Signal	I	—
18	0.35	BU / WH	734	Inside Air Temperature Sensor Signal	I	—
19	—	—	—	Not Occupied	—	—
20	0.35	GN / VT	2852	Body Control Module LIN Bus 6	I	—
21 - 22	—	—	—	Not Occupied	—	—
23	1	RD / GY	2840	Battery Positive Voltage	II	—
24	—	—	—	Not Occupied	—	—
25	1	RD / GY	2140	Battery Positive Voltage	II	—

**K9 Body Control Module X2**

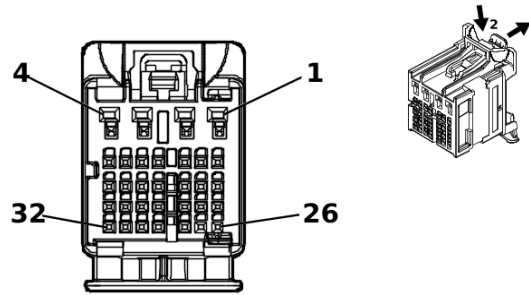

5204222

**Connector Part Information**

Harness Type: Instrument Panel Wiring Harness

OEM Connector: 160028-0015

Service Connector: 13534980

Description: 32-Way F 0.5 NANO, 1.2 MCON, stAK50h Series( PK with GY Inner Connector)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19370262	EL-35616-58 (BK)	EL-38125-58
II	84729890	J-35616-12 (BU)	J-38125-215A

**K9 Body Control Module X2**


Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GY	157	Interior Lamp Control	II	—
2 - 4	—	—	—	Not Occupied	—	—
5	0.35	BU / GN	5723	Ignition Mode Switch Mode Voltage	I	—
6 - 8	—	—	—	Not Occupied	—	—
9	0.35	GN / BU	3738	Tap Up/Tap Down Switch Signal 2	I	—
10	0.35	WH / BN	2203	Enhanced Driver Mode 2 Switch Signal	I	—
11	—	—	—	Not Occupied	—	—
12	0.35	YE / BU	1714	Windshield Wiper Switch Low Signal	I	—
13	0.35	BN / GN	11875	Cruise Control Bank 2 Switch Signal	I	—
14	0.35	GY / GN	11874	Cruise Control Bank 1 Switch Signal	I	—
15	—	—	—	Not Occupied	—	—
16	0.35	BN / BK	5720	Ignition Mode Switch Accessory LED Signal	I	—
17 - 22	—	—	—	Not Occupied	—	—
23	0.35	VT / BU	2916	Right Turn Signal Switch Signal	I	—
24	—	—	—	Not Occupied	—	—
25	0.35	BK / GY	6009	Windshield Wiper Switch Low Reference	I	—
26	0.35	WH / BK	94	Windshield Washer Switch Signal	I	—
27	0.35	YE / BN	307	Headlamp Switch Flash Signal	I	—
28	0.35	GN / WH	3287	Horn Switch Signal	I	—
29	0.35	WH / GN	2915	Left Turn Signal Switch Signal	I	—
30	0.35	BK / YE	407	Sensor Low Reference	I	—



**K9 Body Control Module X2 (cont'd)**

<b>Pin</b>	<b>Size</b>	<b>Color</b>	<b>Circuit</b>	<b>Function</b>	<b>Terminal Type ID</b>	<b>Option</b>
31	0.35	GN / WH	111	Hazard Warning Switch Signal	I	—
32	0.35	WH	524	High Beam Select Switch High Beam Signal	I	—

**K9 Body Control Module X3**

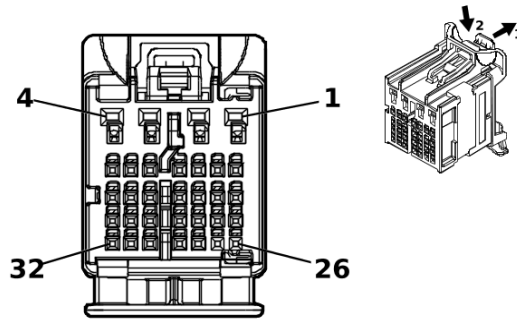

5203925

**Connector Part Information**

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: 160028-0012  
 Service Connector: 13534977  
 Description: 32-Way F 0.5 NANO, 1.2 MCON, stAK50h Series( BU with GY Inner Connector)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19370262	EL-35616-58 (BK)	EL-38125-58
II	84729890	J-35616-12 (BU)	J-38125-215A


**K9 Body Control Module X3**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 2	—	—	—	Not Occupied	—	—
3	0.5	WH / BN	6815	Inadvertent Load Control	II	—
4 - 8	—	—	—	Not Occupied	—	—
9	0.35	YE / GY	44	Instrument Panel Lamp Dimmer Switch Signal	I	—
10	0.35	GN / BK	2858	Body Control Module LIN Bus 12	I	—
11	—	—	—	Not Occupied	—	—
12	0.35	VT / BK	7553	Park Lock Solenoid Actuator Control	I	—
13	0.35	WH	3152	Lane Departure Warning Indicator Control	I	—
14	—	—	—	Not Occupied	—	—
15	0.35	GN	1110	Stop/Start Indicator Control	I	—
16	0.35	GN / BU	761	Blower Speed Feedback Signal	I	—
17	0.35	WH / VT	5905	Key Capture/Column Lock Shift Position Signal	I	—
18	0.35	BK / YE	5005	Instrument Panel Lamp Dimmer Switch Low Reference	I	—
19	0.35	BU / BK	5719	Ignition Mode Switch Start LED Signal	I	—
20 - 22	—	—	—	Not Occupied	—	—
23	0.35	BU	1111	Stop/Start Switch Signal	I	—
24	0.35	WH / BU	3691	Trailer Brake Apply Signal	I	—
25	0.35	GY	4989	Driver Mode 2 Switch Signal	I	—
26	—	—	—	Not Occupied	—	—
27	0.35	GY / WH	3153	Lane Departure Warning Disable Switch Signal	I	—

**K9 Body Control Module X3 (cont'd)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
28 - 32	—	—	—	Not Occupied	—	—

**K9 Body Control Module X4**

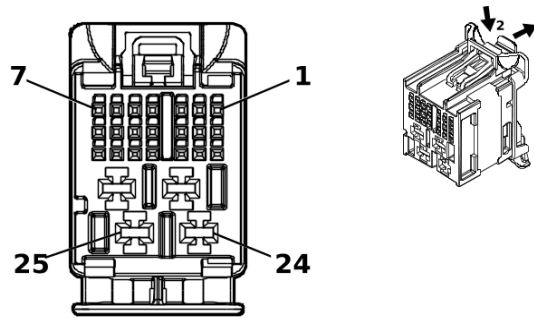

5203893

**Connector Part Information**

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: 160027-0018  
 Service Connector: 13534970  
 Description: 25-Way F 0.5 MQS, 2.8 MCP Series( GY)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19370262	EL-35616-58 (BK)	EL-38125-58
II	87814662	J-35616-4A (PU)	J-38125-557


**K9 Body Control Module X4**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	BN / BK	3552	Interior Passive Entry Antenna 1 High Signal	I	—
2	0.35	WH	3553	Interior Passive Entry Antenna 1 Low Signal	I	—
3	0.35	BK / VT	1449	Steering Wheel Resistor Ladder Low Reference	I	—
4	—	—	—	Not Occupied	—	—
5	0.35	GN / VT	5199	Run/Crank Relay Coil Control	I	—
6	—	—	—	Not Occupied	—	—
7	0.35	BN / BK	4996	Immobilizer Antenna Signal [+]	I	—
8 - 9	—	—	—	Not Occupied	—	—
10	0.35	GY / GN	4083	Retained Accessory Power Relay 2 Coil Control	I	—
11	0.35	GY / GN	328	Interior Lamp Defeat Switch Signal	I	—
12	—	—	—	Not Occupied	—	—
13	0.35	GY	156	Courtesy Lamp Switch Signal	I	—
14	0.35	WH / GY	4997	Immobilizer Antenna Low Signal	I	—
15	—	—	—	Not Occupied	—	—
16	0.35	GN / WH	4115	Body Control Module LIN Bus 5	I	—
17 - 18	—	—	—	Not Occupied	—	—
19	0.35	BU / GN	4103	AUTOSAR CAN Bus [+] 9 Serial Data	I	—
20	0.35	WH / GN	4102	AUTOSAR CAN Bus [-] 9 Serial Data	I	—
21	0.35	WH	6816	Indicator Dimming Control	I	—
22	0.75	RD / WH	2740	Battery Positive Voltage	II	—
23	2	RD / BU	2540	Battery Positive Voltage	II	—

**K9 Body Control Module X4 (cont'd)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
24	2	BK	2050	Ground	II	—
25	2	BK	2050	Ground	II	—

**K9 Body Control Module X5**

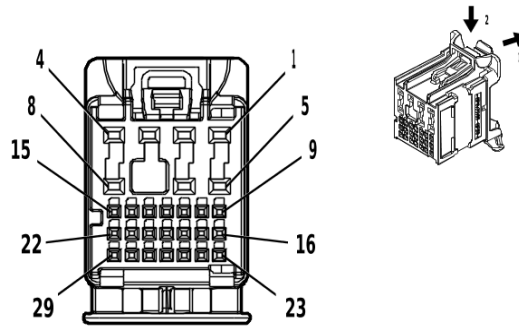

4584346

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 160014-0012  
 Service Connector: 13534972  
 Description: 29-Way F 0.5 NANO, 1.2 MCON Series( GN)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19370262	EL-35616-58 (BK)	EL-38125-58
II	84729890	J-35616-12 (BU)	J-38125-215A


**K9 Body Control Module X5**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	—	Not Occupied	—	—
2	0.5	BU / BN	7573	Air Conditioning Compressor Solenoid Valve Control	II	—
3	0.5	BU / YE	7574	Air Conditioning Compressor Solenoid Valve Control	II	—
4	0.75	WH	2679	Lock Actuators Unlock Control 1	II	—
5	—	—	—	Not Occupied	—	—
6	0.5	YE	6817	LED Backlight Dimming Control 1	II	—
7	—	—	—	Not Occupied	—	—
8	0.75	GY	2681	Left Front Door Lock Actuator Lock Control	II	—
9 - 10	—	—	—	Not Occupied	—	—
11	0.35	BN / WH	28	Horn Relay Control	I	—
12	0.35	WH / GN	4102	AUTOSAR CAN Bus [-] 9 Serial Data	I	—
13	0.35	BU / GN	4103	AUTOSAR CAN Bus [+] 9 Serial Data	I	—
14 - 15	—	—	—	Not Occupied	—	—
16	0.35	VT	4301	Passive Entry Left Antenna Signal High	I	—
17	0.35	GN / YE	2855	Body Control Module LIN Bus 9	I	—
18	0.35	VT / GY	126	Left Front Door Open Switch Signal	I	—
19	0.35	GN / YE	6134	Body Control Module LIN Bus 3	I	—
20	—	—	—	Not Occupied	—	—
21	0.35	WH / BU	6311	Cruise/ETC/TCC Brake Signal	I	—
22	0.35	BN / VT	193	Rear Defogger Relay Control	I	—

**K9 Body Control Module X5 (cont'd)**

<b>Pin</b>	<b>Size</b>	<b>Color</b>	<b>Circuit</b>	<b>Function</b>	<b>Terminal Type ID</b>	<b>Option</b>
23	0.35	VT / GY	4302	Passive Entry Left Antenna Signal Low	I	—
24	0.35	WH	5359	Brake Apply Sensor Control	I	—
25	0.35	BU / YE	5361	Brake Apply Sensor Signal	I	—
26	0.35	BK / BN	5360	Brake Apply Sensor Low Reference	I	—
27 - 29	—	—	—	Not Occupied	—	—

**K9 Body Control Module X6**

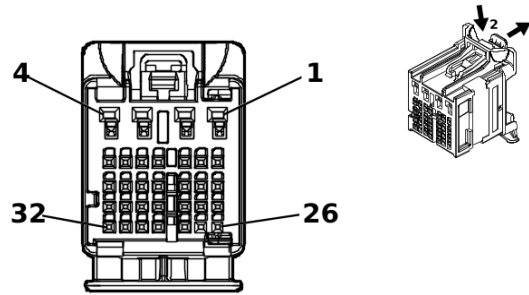

5202291

**Connector Part Information**

Harness Type: Body Wiring Harness

OEM Connector: 160028-0017

Service Connector: 13534981

Description: 32-Way F 0.5 MQS, 1.2 OCS Series( BN with GY Inner Connector)

**Terminal Part Information**


Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19370262	EL-35616-58 (BK)	EL-38125-58
II	84729890	J-35616-12 (BU)	J-38125-215A

**K9 Body Control Module X6**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	—	Not Occupied	—	—
2	0.75	VT / WH	1094	Right Rear Door Lock Actuator Lock Control	II	—
3	0.75	GY / BK	2680	Lock Actuators Unlock Control 2	II	—
4 - 10	—	—	—	Not Occupied	—	—
11	0.35	GN / BU	6133	Body Control Module LIN Bus 2	I	—
12 - 21	—	—	—	Not Occupied	—	—
22	0.35	BN / GN	4064	Hood Status B Signal	I	—
23 - 27	—	—	—	Not Occupied	—	—
28	0.35	BU	2675	Left Front Exterior Door Handle Switch Unlock Signal	I	—
29 - 32	—	—	—	Not Occupied	—	—



## K9 Body Control Module X7

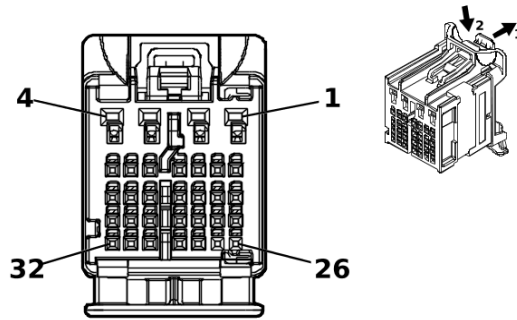

5202294

### Connector Part Information

Harness Type: Body Wiring Harness

OEM Connector: 160028-0014

Service Connector: 13534979

Description: 32-Way F 0.5 MQS, 1.2 OCS Series( PU with GY Inner Connector)


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19370262	EL-35616-58 (BK)	EL-38125-58

### K9 Body Control Module X7

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 18	—	—	—	Not Occupied	—	—
19	0.35	GN / VT	2857	Body Control Module LIN Bus 11	I	—
20 - 29	—	—	—	Not Occupied	—	—
30	0.35	BU / YE	7176	All Windows Open Switch Signal	I	—
31 - 32	—	—	—	Not Occupied	—	—

**K9 Body Control Module X8**

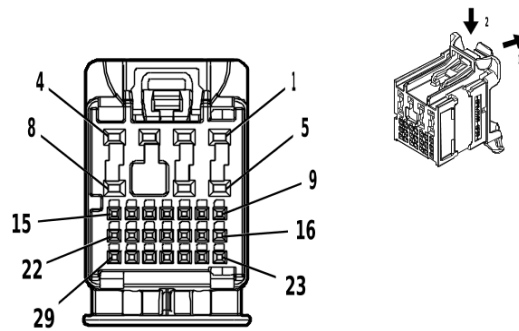

4578560

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 160014-0011  
 Service Connector: 13534971  
 Description: 29-Way F 0.5 NANO, 1.2 MCON, stAK50h Series( GY)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19370262	EL-35616-58 (BK)	EL-38125-58
II	84729890	J-35616-12 (BU)	J-38125-215A

**K9 Body Control Module X8**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GY / VT	2691	Rear Closure Actuator Lock Control	II	—
2	—	—	—	Not Occupied	—	—
3	0.75	BU / YE	1091	Left Rear Door Lock Actuator Lock Control	II	—
4	0.75	YE / GN	2682	Right Front Door Lock Actuator Lock Control	II	—
5 - 8	—	—	—	Not Occupied	—	—
9	0.35	GN / BK	4304	Passive Entry Right Antenna Signal Low	I	—
10	0.35	GN / YE	4303	Passive Entry Right Antenna Signal High	I	—
11 - 16	—	—	—	Not Occupied	—	—
17	0.35	GN / YE	2862	Body Control Module LIN Bus 16	I	—
18	0.35	GN / WH	2854	Body Control Module LIN Bus 8	I	—
19 - 27	—	—	—	Not Occupied	—	—
28	0.35	GY / VT	2676	Right Front Door Exterior Switch Unlock Signal	I	—
29	0.35	GN / GY	6135	Body Control Module LIN Bus 4	I	—

## K20 Engine Control Module X1

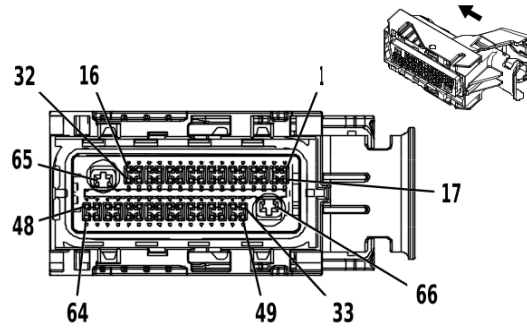

4504420

### Connector Part Information

Harness Type: Engine Wiring Harness  
 OEM Connector: 34822-0033  
 Service Connector: 19371186  
 Description: 66-Way F 0.64, 2.8 Series, Sealed( BK with BU Terminal Position Assurance)

### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	13587518	J-35616-35 (VT)	J-38125-11A
II	19351723	J-35616-64B (L-BU)	J-38125-213

### K20 Engine Control Module X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	YE	5991	Powertrain Relay Coil Control	II	—
2	0.5	YE / BK	625	Starter Enable Relay Control	II	—
3	0.5	YE / VT	4325	Starter Pinion Solenoid Actuator Relay Control	II	—
4 - 5	—	—	—	Not Occupied	—	—
6	0.5	VT / GY	3615	Intake Camshaft Profile Actuator 1 Control A	II	—
7	0.5	GN / BK	3616	Intake Camshaft Profile Actuator 1 Control B	II	—
8	0.5	GN	3585	Intake Camshaft Profile Actuator 2 Control A	II	—
9	0.5	BU	3584	Intake Camshaft Profile Actuator 2 Control B	II	—
10	0.5	YE / BU	3587	Intake Camshaft Profile Actuator 3 Control A	II	—
11	0.5	GY	3586	Intake Camshaft Profile Actuator 3 Control B	II	—
12	0.5	BU / WH	3589	Intake Camshaft Profile Actuator 1 Position Sensor Signal	II	—
13	0.5	GN / WH	3592	Intake Camshaft Profile Actuator 2 Position Sensor Signal	II	—
14	0.5	BK / GN	3593	Intake Camshaft Profile Actuator 3 Position Sensor Signal	II	—
15	—	—	—	Not Occupied	—	—
16	0.75	VT / BU	5291	Powertrain Main Relay Fused Supply Voltage 2	II	—
17	0.5	GN / GY	465	Fuel Pump Primary Relay Control	II	—
18	0.5	WH / GY	459	Air Conditioning Compressor Clutch Relay Control	II	—
19 - 21	—	—	—	Not Occupied	—	—

## 6-212 Electrical Component and Inline Harness Connector End Views


### K20 Engine Control Module X1 (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
22	0.5	GN / YE	1402	Intake Camshaft Profile Actuator 4 Control A	II	—
23	0.5	GY / YE	1502	Intake Camshaft Profile Actuator 4 Control B	II	—
24	0.5	YE / VT	6265	Exhaust Camshaft Profile Actuator 2 Control B	II	—
25	0.5	VT / BK	6264	Exhaust Camshaft Profile Actuator 2 Control A	II	—
26	0.5	GY / BN	6262	Exhaust Camshaft Profile Actuator 3 Control B	II	—
27	0.5	GN / BN	6261	Exhaust Camshaft Profile Actuator 3 Control A	II	—
28	0.5	YE / BN	1702	Intake Camshaft Profile Actuator 4 Position Sensor Signal	II	—
29	0.5	GN / BK	6266	Exhaust Camshaft Profile Actuator 2 Position Sensor Signal	II	—
30	0.5	YE	6263	Exhaust Camshaft Profile Actuator 3 Position Sensor Signal	II	—
31	—	—	—	Not Occupied	—	—
32	0.5	VT / GY	139	Run/Crank Ignition 1 Voltage	II	—
33	0.5	BK / BU	1271	Accelerator Pedal Position Low Reference 1	II	—
34	0.5	YE / WH	3746	Camshaft Exhaust Lobe Axial Position Signal 1	II	—
35	0.5	BK / VT	1272	Accelerator Pedal Position Low Reference 2	II	—
36	0.5	YE / GN	3747	Camshaft Exhaust Lobe Axial Position Signal 2	II	—
37	—	—	—	Not Occupied	—	—
38	0.5	YE	4063	Hood Status A Signal	II	—
39	0.5	YE / WH	1161	Accelerator Pedal Position Signal 1	II	—
40 - 41	—	—	—	Not Occupied	—	—
42	0.5	GN / BN	2732	Engine Control Module LIN Bus 4	II	—
43 - 44	—	—	—	Not Occupied	—	—
45	0.5	BU / GY	4054	Private Serial Data Powertrain CAN Bus [-] Serial Data	II	—
46	0.5	WH	4055	Private Serial Data Powertrain CAN Bus [+] Serial Data	II	—
47	0.5	BU	492	Mass Air Flow Sensor Signal	II	—
48	0.5	RD / WH	140	Battery Positive Voltage	II	—
49	0.5	WH / RD	1164	Accelerator Pedal Position 5V Reference 1	II	—
50	0.5	VT / WH	3744	Camshaft Intake Lobe Axial Position Signal 1	II	—
51	0.5	BN / RD	1274	Accelerator Pedal Position 5V Reference 2	II	—
52	0.5	VT / GN	3745	Camshaft Intake Lobe Axial Position Signal 2	II	—
53	0.5	BU / GY	636	Ambient Air Temperature Sensor Signal	II	—
54	—	—	—	Not Occupied	—	—
55	0.5	GN	380	Air Conditioning Refrigerant Pressure Sensor Signal	II	—
56	0.5	WH / GN	5380	Brake Position Sensor Signal	II	—
57	0.5	GN / WH	1162	Accelerator Pedal Position Signal 2	II	—
58	—	—	—	Not Occupied	—	—
59	0.5	WH	4978	AUTOSAR CAN Bus [-] 2 Serial Data	II	—
60	0.5	BU / YE	4979	AUTOSAR CAN Bus [+] 2 Serial Data	II	—
61 - 62	—	—	—	Not Occupied	—	—
63	0.5	WH	4976	AUTOSAR CAN Bus [-] 3 Serial Data	II	—
64	0.5	BU / BK	4977	AUTOSAR CAN Bus [+] 3 Serial Data	II	—
65	2.5	BK / WH	151	Signal Ground	I	—

**K20 Engine Control Module X1 (cont'd)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
66	2	VT / BU	5290	Powertrain Main Relay Fused Supply Voltage 1	I	—

**K20 Engine Control Module X2**

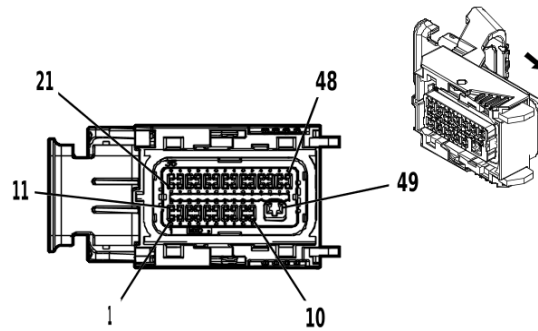

4596458

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 34576-0103  
 Service Connector: 19355678  
 Description: 49-Way F 0.64, 2.8 Series, Sealed( BK with BK Terminal Position Assurance)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	13587518	J-35616-35 (VT)	J-38125-11A
II	19351723	J-35616-64B (L-BU)	J-38125-213


**K20 Engine Control Module X2**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	VT / GN	4320	Powertrain Sensor Bus Enable	II	—
2	0.5	BU / RD	460	Engine Control Sensors 5 Volt Reference 1	II	—
3 - 4	—	—	—	Not Occupied	—	—
5	0.5	BN / BU	2447	Evaporative Purge Pump Pressure Signal	II	—
6 - 8	—	—	—	Not Occupied	—	—
9	0.5	VT / BU	5294	Powertrain Main Relay Fused Supply Voltage 5	II	—
10	0.5	BU / GY	2978	Coolant Diverter Valve Position Signal	II	—
11	—	—	—	Not Occupied	—	—
12	0.5	BK / GN	580	Engine Control Sensors Low Reference 2	II	—
13 - 14	—	—	—	Not Occupied	—	—
15	0.5	GN / BK	3337	Transmission Internal Mode Switch Mode Control Y	II	—
16	0.5	YE / BN	331	Oil Pressure Sensor Signal	II	—
17 - 18	—	—	—	Not Occupied	—	—
19	0.5	BU / WH	2918	Fuel Rail Pressure Sensor Signal	II	—
20	0.5	WH	2590	Turbocharger Wastegate Motor Feedback Signal	II	—
21	—	—	—	Not Occupied	—	—
22	0.5	BK / GY	626	Engine Control Vehicle Sensors Low Reference 1	II	—
23	0.5	VT	7485	Engine Oil Temperature Sensor 2 Signal	II	—
24	0.5	BN / BU	357	Oil Temperature Sensor Signal	II	—
25	0.5	YE / WH	3200	Throttle Inlet Absolute Pressure Sensor Signal	II	—

**K20 Engine Control Module X2 (cont'd)**

<b>Pin</b>	<b>Size</b>	<b>Color</b>	<b>Circuit</b>	<b>Function</b>	<b>Terminal Type ID</b>	<b>Option</b>
26 - 28	—	—	—	Not Occupied	—	—
29	0.5	YE / GY	3926	Crankcase Differential Pressure Sensor Signal	II	—
30	—	—	—	Not Occupied	—	—
31	0.5	YE / GY	6936	HO2S Signal	II	—
32	0.5	BN	6934	HO2S Ground	II	—
33	0.5	GN / YE	4623	Engine Control Module LIN Bus 3	II	—
34	0.5	GY / WH	3113	HO2S Heater Low Control Bank 1 Sensor 1	II	—
35	—	—	—	Not Occupied	—	—
36	0.5	WH / RD	480	Engine Control Vehicle Sensors 5 Volt Reference 1	II	—
37	0.5	YE / BK	3000	Coolant Temperature Sensor 2 Signal	II	—
38 - 39	—	—	—	Not Occupied	—	—
40	0.5	GY / VT	2404	Engine Block Coolant Temperature Signal	II	—
41 - 44	—	—	—	Not Occupied	—	—
45	0.5	GN	6935	HO2S Pump Current Trim Signal	II	—
46	0.5	BN / WH	6933	HO2S Pump Current Signal	II	—
47	0.75	GN / VT	4621	Engine Control Module LIN Bus 1	II	—
48	0.5	GN / WH	4622	Engine Control Module LIN Bus 2	II	—
49	2.5	BK / WH	151	Signal Ground	I	—

**K20 Engine Control Module X3**

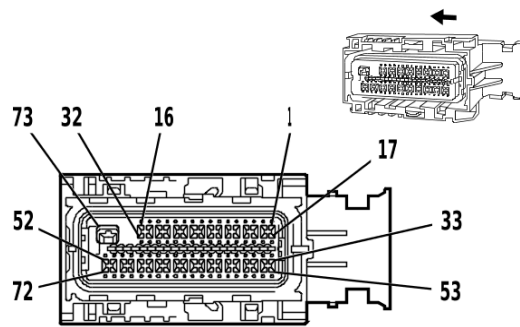

1650395

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 34566-0203  
 Service Connector: 19333091  
 Description: 73-Way F 0.64, 2.8 Series, Sealed( BK with GY Terminal Position Assurance)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	13587518	J-35616-35 (VT)	J-38125-11A
II	19354746	J-35616-64B (L-BU)	J-38125-215A

**K20 Engine Control Module X3**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	—	Not Occupied	—	—
2	0.5	GN	3060	Turbocharger Bypass Solenoid Valve Control Bank 1	II	—
3	0.5	BN	25	Charge Indicator Control	II	—
4 - 5	—	—	—	Not Occupied	—	—
6	0.5	VT / BU	6270	Crankshaft Position Sensor Voltage	II	—
7	0.5	BN / RD	2701	Throttle Position Sensor 5V Reference	II	—
8	—	—	—	Not Occupied	—	—
9	0.5	GN / WH	432	Manifold Absolute Pressure Sensor Signal	II	—
10	0.5	BN	3120	HO2S High Signal Bank 1 Sensor 2	II	—
11	0.5	WH / YE	3121	HO2S Low Signal Bank 1 Sensor 2	II	—
12	0.5	VT / BN	5284	Intake Camshaft Position Actuator Solenoid Valve 1	II	—
13	0.5	GY / BU	5282	Exhaust Camshaft Position Actuator Solenoid Valve 1	II	—
14	0.5	BU	2976	Coolant Diverter Valve Actuator Control Open	II	—
15	0.75	WH / BN	2591	Turbocharger Wastegate Motor Open Control	II	—
16	0.75	WH / BU	2592	Turbocharger Wastegate Motor Close Control	II	—
17 - 20	—	—	—	Not Occupied	—	—
21	0.5	BK / YE	548	Engine Control Sensors Low Reference 1	II	—
22	0.5	BK / VT	6272	Crankshaft Position Sensor Low Reference	II	—
23	0.5	BK / BN	2752	Throttle Position Sensor Low Reference	II	—




**K20 Engine Control Module X3 (cont'd)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
24	0.5	YE / BU	2408	Engine Inlet Coolant Temperature Signal	II	—
25	0.5	VT	2988	Engine Outlet Coolant Temperature Signal	II	—
26	0.5	WH / BU	7329	Pre-Throttle Air Temperature Signal	II	—
27	0.5	BU / YE	8938	Engine Integrated Exhaust Manifold Temperature Signal	II	—
28	0.5	BK / BN	6753	Camshaft Position Actuator Solenoid Valve W Low Reference	II	—
29	0.5	BK / VT	6754	Camshaft Position Actuator Solenoid Valve X Low Reference	II	—
30	0.5	YE	581	Throttle Actuator Open Control	II	—
31	0.5	BN / WH	582	Throttle Actuator Close Control	II	—
32	0.5	BU / BN	2977	Coolant Diverter Valve Actuator Control Close	II	—
33	0.5	VT / GY	496	Knock Sensor 1 Signal	II	—
34	0.5	WH / GY	1876	Knock Sensor 2 Signal	II	—
35	0.5	BK / GN	469	Manifold Absolute Pressure Sensor Low Reference	II	—
36	0.5	GN / BU	428	EVAP Canister Purge Solenoid Control	II	—
37 - 38	—	—	—	Not Occupied	—	—
39	0.5	BK / GN	5301	Intake Camshaft Position Sensor Low Reference 1	II	—
40	0.5	BK / GY	5296	Exhaust Camshaft Position Sensor Low Reference 1	II	—
41	—	—	—	Not Occupied	—	—
42	0.5	VT / BK	5273	Exhaust Camshaft Position Sensor 1	II	—
43	0.5	GN	6271	Crankshaft Position Sensor Signal	II	—
44	0.75	YE / BU	2124	Ignition Control 4	II	—
45	0.75	BU / WH	2122	Ignition Control 2	II	—
46	0.75	BK / BU	2129	Ignition Control Low Reference Bank 1	II	—
47	0.5	GY / WH	3122	HO2S Heater Low Control Bank 1 Sensor 2	II	—
48	0.5	BU / WH	3630	Throttle Position Sensor SENT 1 Signal	II	—
49	0.75	BU / WH	4904	Direct Fuel Injector High Voltage Supply Cylinder 4	II	—
50	0.75	GY / BU	4804	Direct Fuel Injector High Voltage Control Cylinder 4	II	—
51	0.75	BU / GY	4902	Direct Fuel Injector High Voltage Supply Cylinder 2	II	—
52	0.75	BU	4802	Direct Fuel Injector High Voltage Control Cylinder 2	II	—
53	0.5	BK / YE	1716	Knock Sensor Low Reference 1	II	—
54	0.5	BK / GY	2303	Knock Sensor Low Reference 2	II	—
55	0.5	GY / RD	2704	Manifold Absolute Pressure Sensor 5V Reference	II	—
56	0.5	YE / BN	106	Oil Pump Motor Control	II	—
57	0.5	BU	179	Engine Oil Pump Control	II	—
58	—	—	—	Not Occupied	—	—
59	0.5	GY / BU	5300	Intake Camshaft Position Sensor 1 Voltage Reference	II	—
60	0.5	GY / YE	5297	Exhaust Camshaft Position Sensor 1 Voltage Reference	II	—

**6-218 Electrical Component and Inline Harness Connector End Views****K20 Engine Control Module X3 (cont'd)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
61	0.5	GY	23	Generator Field Duty Cycle Signal	II	—
62	—	—	—	Not Occupied	—	—
63	0.5	YE / VT	5275	Intake Camshaft Position Sensor 1	II	—
64	0.75	BU / VT	2121	Ignition Control 1	II	—
65	0.75	GN / BU	2123	Ignition Control 3	II	—
66	—	—	—	Not Occupied	—	—
67	0.75	VT / BK	7300	High Pressure Fuel Pump Low Control	II	—
68	0.75	YE	7301	High Pressure Fuel Pump High Control	II	—
69	0.75	BN / WH	4901	Direct Fuel Injector High Voltage Supply Cylinder 1	II	—
70	0.75	BN	4801	Direct Fuel Injector High Voltage Control Cylinder 1	II	—
71	0.75	GN / GY	4903	Direct Fuel Injector High Voltage Supply Cylinder 3	II	—
72	0.75	GN	4803	Direct Fuel Injector High Voltage Control Cylinder 3	II	—
73	2	VT / BU	5290	Powertrain Main Relay Fused Supply Voltage 1	I	—

**K29FV Front Seat Heater Vent Control Module X1 (KA1)**

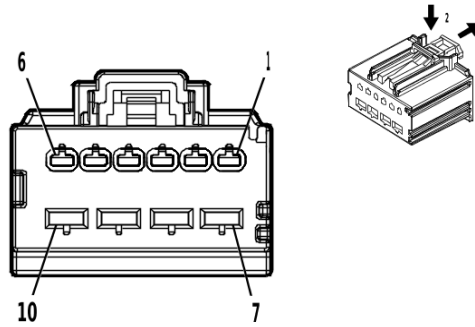

5035058

**Connector Part Information**

Harness Type: Front Seat Wiring Harness - Passenger  
 OEM Connector: 31372-1600  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 10-Way F 1.5, 2.8 MX Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required
II	Not required	J-35616-4A (PU)	No Tool Required

**K29FV Front Seat Heater Vent Control Module X1 (KA1)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	—	Not Occupied	—	—
2	0.75	BN / BU	2479	Passenger Seat Heating Element Control	I	—
3	0.75	GY / BK	2480	Passenger Seat Heating Element Low Reference	I	—
4	0.75	BN / BK	2078	Driver Seat Heating Element Low Reference	I	—
5	—	—	—	Not Occupied	—	—
6	0.75	BN / VT	2077	Driver Seat Heating Element Control	I	—
7	0.75	RD / VT	4640	Battery Positive Voltage	II	—
8	1.5	BK	4250	Ground	II	—
9	—	—	—	Not Occupied	—	—
10	0.75	RD / BU	4540	Battery Positive Voltage	II	—

**K29FV Front Seat Heater Vent Control Module X2 (KA1)**

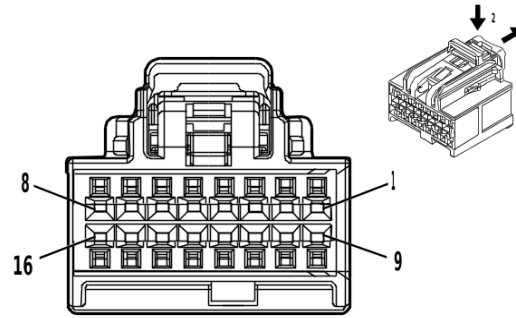

4873243

**Connector Part Information**

Harness Type: Front Seat Wiring Harness - Passenger  
 OEM Connector: 35016343  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 16-Way F 0.64 OCS Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

**K29FV Front Seat Heater Vent Control Module X2 (KA1)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BK / YE	2080	Driver Heated Seat Thermistor Low Reference	I	—
2	0.5	BK / GY	2435	Passenger Heated Seat Thermistor Low Reference	I	—
3	0.5	BU	2425	Driver Seat Back Heating Temperature Sensor Signal	I	—
4	0.5	WH / BU	2436	Passenger Seat Back Heating Temperature Sensor Signal	I	—
5	0.5	WH / GY	2434	Passenger Seat Heating Temperature Sensor Signal	I	—
6	0.5	YE / GY	2079	Driver Seat Heating Temperature Sensor Signal	I	—
7	—	—	—	Not Occupied	—	—
8	0.5	GN / VT	2857	Body Control Module LIN Bus 11	I	—
9	0.5	GN / VT	5906	Driver Seat Blower Motor Control 1	I	—
10	0.5	VT / WH	5908	Passenger Seat Blower Motor Control 1	I	—
11	—	—	—	Not Occupied	—	—
12	0.5	BK / GN	2482	Passenger Heated Back Thermistor Low Reference	I	—
13 - 16	—	—	—	Not Occupied	—	—

### K32 Heated Steering Wheel Module X1 (K13)

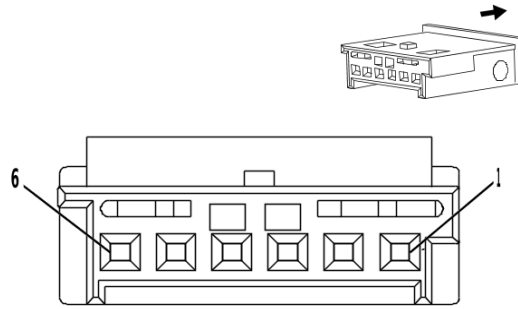

1862024

#### Connector Part Information

Harness Type: Steering Wheel Horn Switch Wiring Harness  
 OEM Connector: 1-1241370-3  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 6-Way F 0.64 Micro-Quadlock Series( BK)


#### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

#### K32 Heated Steering Wheel Module X1 (K13)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	YE / GY	5883	Steering Wheel Heating Switch Signal	I	—
2	—	BN / WH	5884	Steering Wheel Heating Switch LED Control	I	—
3	—	RD / BN	10040	Battery Positive Voltage	I	—
4	—	BK	6050	Steering Wheel Ground	I	—
5	—	BK / WH	6051	Steering Wheel Ground	I	—
6	—	GN / BK	2858	Body Control Module LIN Bus 12	I	—

**K32 Heated Steering Wheel Module X2 (K13)**

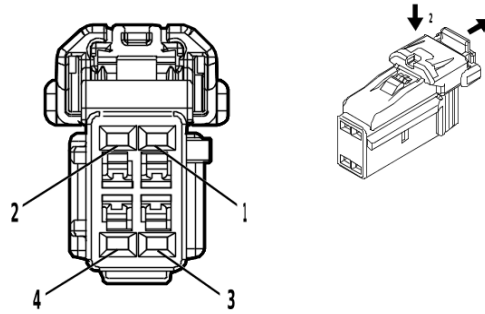

4872683

**Connector Part Information**

Harness Type: Steering Wheel Horn Switch Wiring Harness  
 OEM Connector: 13533335  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 4-Way F 1.2 Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**K32 Heated Steering Wheel Module X2 (K13)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	WH / YE	5888	Steering Wheel Heating High Control	I	—
2	—	GY / YE	5887	Steering Wheel Heating Low Control	I	—
3	—	VT / BU	5886	Steering Wheel Heating Temperature Sensor Signal	I	—
4	—	YE / RD	5885	Steering Wheel Heating Voltage Reference	I	—

**K36 Restraints Control Module X1**

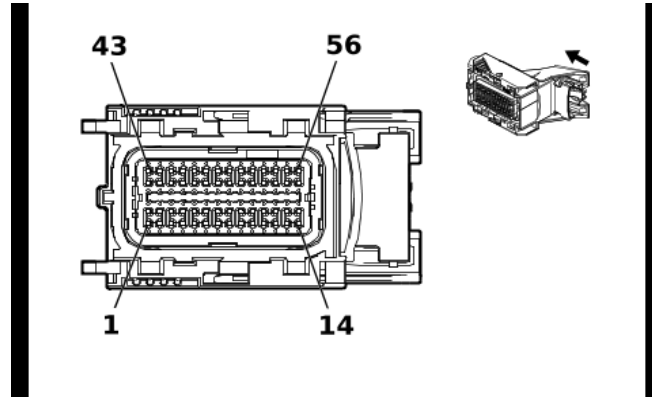

5581812

**Connector Part Information**

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: 160099-0019  
 Service Connector: 85004499  
 Description: 56-Way F 0.64 Series, Sealed( BK with BU Terminal Position Assurance)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19354746	J-35616-64B (L-BU)	J-38125-215A

**K36 Restraints Control Module X1**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 6	—	—	—	Not Occupied	—	—
7	0.5	BK / OG	5045	Left Front Impact Discriminating Sensor Low Reference	I	—
8	0.5	OG / YE	354	Left Front Impact Discriminating Sensor Signal	I	—
9	0.5	OG / GN	1409	Right Front Impact Discriminating Sensor Signal	I	—
10	0.5	BK / OG	5600	Right Front Impact Discriminating Sensor Low Reference	I	—
11	0.5	WH / OG	3476	Passenger Seat Belt Retractor Pretensioner Low Control	I	—
12	0.5	OG / GN	3475	Passenger Seat Belt Retractor Pretensioner High Control	I	—
13	0.5	YE / OG	3025	Passenger Instrument Panel Air Bag Stage 1 High Control	I	—
14	0.5	OG / WH	3024	Passenger Instrument Panel Air Bag Stage 1 Low Control	I	—
15 - 24	—	—	—	Not Occupied	—	—
25	0.5	VT / OG	3478	Driver Seat Belt Retractor Pretensioner Low Control	I	—
26	0.5	OG / WH	3477	Driver Seat Belt Retractor Pretensioner High Control	I	—
27	0.5	OG / VT	3021	Steering Wheel Air Bag Stage 1 High Control	I	—
28	0.5	BN / OG	3020	Steering Wheel Air Bag Stage 1 Low Control	I	—
29	0.35	BU / GN	4103	AUTOSAR CAN Bus [+] 9 Serial Data	I	—
30	0.35	WH / GN	4102	AUTOSAR CAN Bus [-] 9 Serial Data	I	—
31	—	—	—	Not Occupied	—	—


## 6-224 Electrical Component and Inline Harness Connector End Views

### K36 Restraints Control Module X1 (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
32	0.5	OG / BN	3479	Passenger Seat Belt Anchor Pretensioner High Control	I	—
33	0.5	GY / OG	3480	Passenger Seat Belt Anchor Pretensioner Low Control	I	—
34 - 36	—	—	—	Not Occupied	—	—
37	0.35	GN	2308	Passenger Air Bag Off Indicator Control	I	—
38	0.5	OG / VT	3026	Passenger Instrument Panel Air Bag Stage 2 Low Control	I	—
39	0.5	GY / OG	3027	Passenger Instrument Panel Air Bag Stage 2 High Control	I	—
40	0.35 0.35	VT / WH GN	5234 3118	Passenger Seat Belt Indicator Control Roof Rail Air Bag Disable Indicator Control	I I	AL0 - C9I AL0 & C9I
41	—	—	—	Not Occupied	—	—
42	0.5	BK / WH	1351	Signal Ground	I	—
43	0.35	BU / GN	4103	AUTOSAR CAN Bus [+] 9 Serial Data	I	—
44	0.35	WH / GN	4102	AUTOSAR CAN Bus [-] 9 Serial Data	I	—
45	—	—	—	Not Occupied	—	—
46	0.5	VT / OG	3482	Driver Seat Belt Anchor Pretensioner Low Control	I	—
47	0.5	OG / YE	3481	Driver Seat Belt Anchor Pretensioner High Control	I	—
48 - 49	—	—	—	Not Occupied	—	—
50	0.35	BN / WH	3895	Roof Rail Air Bag Disable Switch Low Reference	I	—
51	0.35	BU / WH	3119	Roof Rail Air Bag Disable Switch Signal	I	—
52	0.35	BU	2307	Passenger Air Bag On Indicator Control	I	—
53 - 54	—	—	—	Not Occupied	—	—
55	0.5	VT / WH	1139	Run/Crank Ignition 1 Voltage	I	—
56	0.5	RD / GN	4440	Battery Positive Voltage	I	—



### K36 Restraints Control Module X2

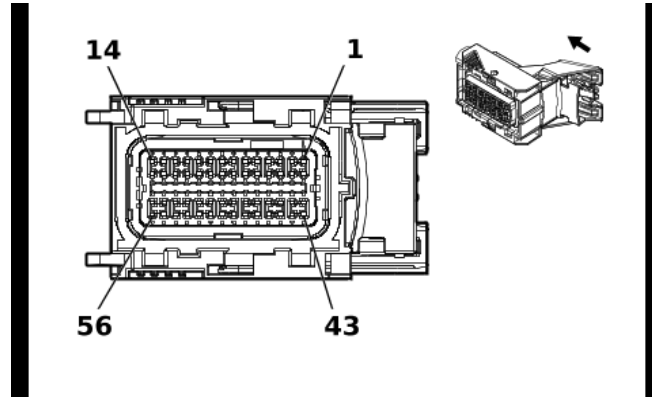

6154815

#### Connector Part Information

Harness Type: Body Wiring Harness  
 OEM Connector: 160099-0012  
 Service Connector: 86526150  
 Description: 56-Way F 0.64 Series, Sealed( NA)

#### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19354746	J-35616-64B (L-BU)	J-38125-213
II	19354746	J-35616-64B (L-BU)	J-38125-215A


#### K36 Restraints Control Module X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 9	—	—	—	Not Occupied	—	—
10	0.5	BU / OG	5163	Rear Center Seat Belt Switch Signal	II	—
11	0.5	YE / OG	5161	Left Rear Seat Belt Switch Signal	II	—
12	0.5	OG / BN	238	Driver Seat Belt Switch Signal	II	—
13	0.5	BK / OG	6627	Right Rear Side Impact Sensor Low Reference	II	—
14	0.5	OG / WH	6626	Right Rear Side Impact Sensor Signal	II	—
15 - 22	—	—	—	Not Occupied	—	—
23	0.5	BK / OG	1363	Driver Seat Belt Switch Low Reference	II	—
24	0.5	BN / OG	5162	Right Rear Seat Belt Switch Signal	II	—
25	0.5	OG / VT	1362	Passenger Seat Belt Switch Signal	II	—
26	—	—	—	Not Occupied	—	—
27	0.5	BK / OG	6628	Left Front Side Impact Sensor Low Reference	II	—
28	0.5	OG / GN	2132	Left Front Side Impact Sensor Signal	II	—
29 - 36	—	—	—	Not Occupied	—	—
37	0.5	OG / GY	5021	Right Front Roof Rail Air Bag High Control	I	—
38	0.5	WH / OG	5022	Right Front Roof Rail Air Bag Low Control	I	—
39	0.5	BU / OG	4957	Passenger Seat Back Air Bag Low Control	II	—
40	0.5	OG / GY	4956	Passenger Seat Back Air Bag High Control	II	—
41	0.5	BK / OG	6629	Right Front Side Impact Sensor Low Reference	II	—
42	0.5	BN / OG	2134	Right Front Side Impact Sensor Signal	II	—
43 - 50	—	—	—	Not Occupied	—	—

**6-226 Electrical Component and Inline Harness Connector End Views****K36 Restraints Control Module X2 (cont'd)**

<b>Pin</b>	<b>Size</b>	<b>Color</b>	<b>Circuit</b>	<b>Function</b>	<b>Terminal Type ID</b>	<b>Option</b>
51	0.5	OG / GN	5019	Left Front Roof Rail Air Bag High Control	I	—
52	0.5	VT / OG	5020	Left Front Roof Rail Air Bag Low Control	I	—
53	0.5	BK / OG	4963	Driver Seat Back Air Bag Low Control	II	—
54	0.5	OG / BU	4962	Driver Seat Back Air Bag High Control	II	—
55	0.5	BK / OG	6623	Left Rear Side Impact Sensor Low Reference	II	—
56	0.5	OG / BU	6622	Left Rear Side Impact Sensor Signal	II	—

### K38 Chassis Control Module

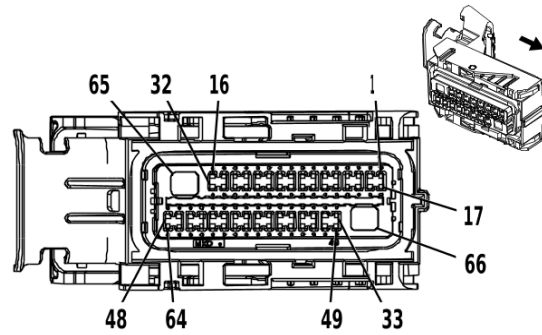

4024881

#### Connector Part Information

Harness Type: Chassis Wiring Harness  
 OEM Connector: 34822-0023  
 Service Connector: 19330900  
 Description: 66-Way F 0.64, 2.8 Series, Sealed( BK with BK Terminal Position Assurance)


#### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	13587518	J-35616-35 (VT)	J-38125-11A
II	19351723	J-35616-64B (L-BU)	J-38125-213

#### K38 Chassis Control Module

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 5	—	—	—	Not Occupied	—	—
6	0.5	VT / BK	739	Run/Crank Ignition 1 Voltage	II	—
7 - 12	—	—	—	Not Occupied	—	—
13	0.5	YE / GN	7122	Axle Differential Lock Switch Signal	II	—
14 - 31	—	—	—	Not Occupied	—	—
32	0.5	VT / GY	7117	Front Axle Differential Lock Indicator Control	II	—
33	0.75	VT / WH	7256	Front Differential Lock Actuator Control	II	—
34	0.5	BU / BK	4977	AUTOSAR CAN Bus [+] 3 Serial Data	II	—
35	0.5	BU / BK	4977	AUTOSAR CAN Bus [+] 3 Serial Data	II	—
36	0.5	WH	4976	AUTOSAR CAN Bus [-] 3 Serial Data	II	—
37	0.5	WH	4976	AUTOSAR CAN Bus [-] 3 Serial Data	II	—
38	0.5	YE	7115	Rear Axle Differential Lock Indicator Control	II	—
39 - 43	—	—	—	Not Occupied	—	—
44	0.75	GY / BK	7253	Rear Differential Lock Actuator Low Control	II	—
45 - 49	—	—	—	Not Occupied	—	—
50	0.75	VT / BN	7258	Rear Differential Lock Actuator Control	II	—
51 - 59	—	—	—	Not Occupied	—	—
60	0.75	WH / BK	7254	Front Differential Lock Actuator Low Control	II	—
61 - 64	—	—	—	Not Occupied	—	—
65	1	BK	5550	Ground	I	—
66	1	RD / WH	2140	Battery Positive Voltage	I	—

**K40D Driver Seat Adjuster Memory Module X1 (A45)**

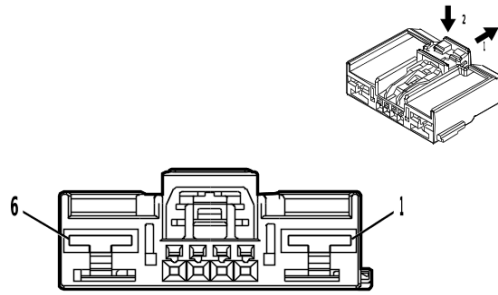

4650258

**Connector Part Information**

Harness Type: Front Seat Wiring Harness - Driver  
 OEM Connector: 7289-7139-30  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 6-Way F 0.64, 6.3 Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-42 (RD)	No Tool Required
II	Not required	J-35616-64B (L-BU)	No Tool Required

**K40D Driver Seat Adjuster Memory Module X1 (A45)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	BK	3750	Ground	I	—
2	—	—	—	Not Occupied	—	—
3	0.5	RD / VT	3340	Battery Positive Voltage	II	—
4 - 5	—	—	—	Not Occupied	—	—
6	2.5	RD / BN	3640	Battery Positive Voltage	I	—

## K40D Driver Seat Adjuster Memory Module X2 (A45)

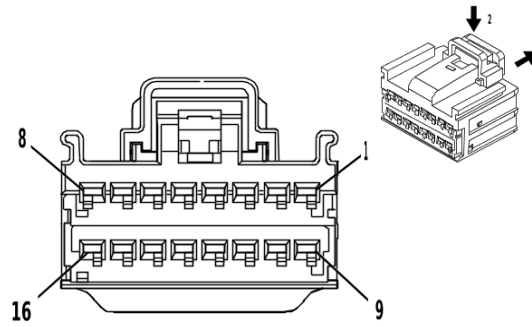

4332214

### Connector Part Information

Harness Type: Front Seat Wiring Harness - Driver  
 OEM Connector: 15512506  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 16-Way F 1.5 OCS Series( BK)


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required

### K40D Driver Seat Adjuster Memory Module X2 (A45)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	1.5	YE / BU	285	Driver Seat Horizontal Motor Forward Control	I	—
2	—	—	—	Not Occupied	—	—
3	1.5	GN / YE	276	Driver Seat Recline Motor Forward Control	I	—
4 - 5	—	—	—	Not Occupied	—	—
6	1.5	BU / VT	287	Driver Seat Front Vertical Motor Down Control	I	—
7	1.5	YE	282	Driver Seat Rear Vertical Motor Up Control	I	—
8	—	—	—	Not Occupied	—	—
9	1.5	BU / YE	277	Driver Seat Recline Motor Rearward Control	I	—
10	—	—	—	Not Occupied	—	—
11	1.5	GY / GN	284	Driver Seat Horizontal Motor Rearward Control	I	—
12	—	—	—	Not Occupied	—	—
13	1.5	GY / BU	283	Driver Seat Rear Vertical Motor Down Control	I	—
14 - 15	—	—	—	Not Occupied	—	—
16	1.5	GN / BN	286	Driver Seat Front Vertical Motor Up Control	I	—

**K40D Driver Seat Adjuster Memory Module X3 (A45)**

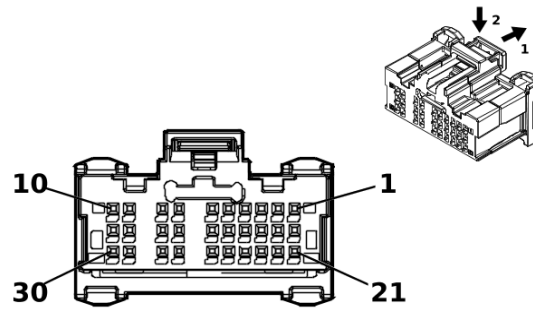

5202284

**Connector Part Information**

Harness Type: Front Seat Wiring Harness - Driver  
 OEM Connector: 2309644-1  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 30-Way F 0.5 MQS Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	EL-35616-58 (BK)	No Tool Required

**K40D Driver Seat Adjuster Memory Module X3 (A45)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	—	Not Occupied	—	—
2	0.35	BU / GN	614	Seat Memory Switch Set Signal	I	—
3 - 8	—	—	—	Not Occupied	—	—
9	0.35	WH	4100	AUTOSAR CAN Bus [-] 4 Serial Data	I	—
10	0.35	BU / VT	4101	AUTOSAR CAN Bus [+] 4 Serial Data	I	—
11 - 15	—	—	—	Not Occupied	—	—
16	0.35	WH	615	Seat Memory Switch Signal 1	I	—
17	—	—	—	Not Occupied	—	—
18	0.35	GN / GY	3758	Driver Seat Adjuster Memory Module LIN Bus 2	I	—
19	0.35	WH	4100	AUTOSAR CAN Bus [-] 4 Serial Data	I	—
20	0.35	BU / VT	4101	AUTOSAR CAN Bus [+] 4 Serial Data	I	—
21 - 30	—	—	—	Not Occupied	—	—

## K43 Power Steering Control Module X1

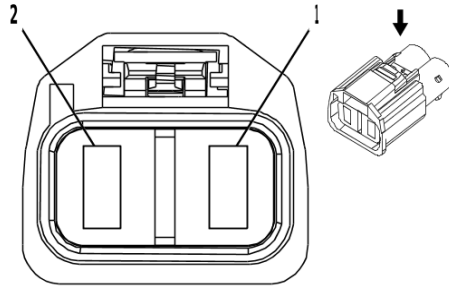

2748050

### Connector Part Information

Harness Type: Power Steering Wiring Harness  
 OEM Connector: 7287-1990-30  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F 9.5 Series, Sealed( BK)


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-22 (RD)	No Tool Required

### K43 Power Steering Control Module X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	16	BK	250	Ground	I	—
2	16	RD / VT	542	Battery Positive Voltage	I	—

**K43 Power Steering Control Module X2**

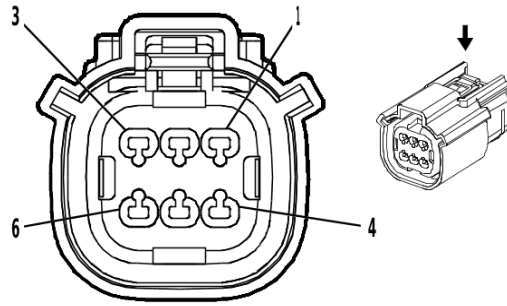

1986157

**Connector Part Information**

Harness Type: Power Steering Wiring Harness  
 OEM Connector: 33472-0674  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 6-Way F 1.5 MX Series, Sealed( BK)

**Terminal Part Information**


Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required

**K43 Power Steering Control Module X2**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH	4978	AUTOSAR CAN Bus [-] 2 Serial Data	I	—
2	0.5	BU / YE	4979	AUTOSAR CAN Bus [+] 2 Serial Data	I	—
3	0.5	BU / YE	4979	AUTOSAR CAN Bus [+] 2 Serial Data	I	—
4	0.5	WH	4978	AUTOSAR CAN Bus [-] 2 Serial Data	I	—
5 - 6	—	—	—	Not Occupied	—	—



### K43 Power Steering Control Module X3

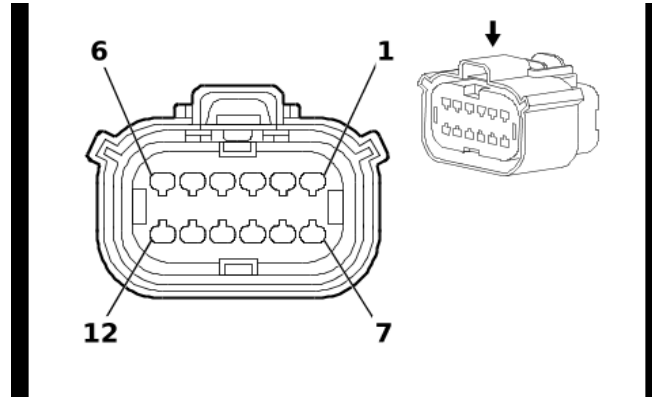

1825165

#### Connector Part Information

Harness Type: Power Steering Control Module Wiring Harness - Shaft Sensor  
 OEM Connector: 33472-1252  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 12-Way F 1.5 MX Series, Sealed( BK)


#### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

#### K43 Power Steering Control Module X3

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BU / WH	8367	Handwheel Channel A Torque Pressure Sensor 1 SENT Signal	I	—
2	—	BN / RD	8366	Handwheel Channel A High Reference	I	—
3	—	BK / GN	8370	Handwheel Channel A Low Reference	I	—
4	—	GY / RD	8371	Handwheel Channel B High Reference	I	—
5	—	GN	8372	Handwheel Channel B Torque Pressure Sensor 1 SENT Signal	I	—
6	—	VT	8368	Handwheel Channel A Torque Pressure Sensor 2 SENT Signal	I	—
7	—	WH	8369	Handwheel Channel A Angle Position Sensor SENT Signal	I	—
8	—	BK / GY	8375	Handwheel Channel B Low Reference	I	—
9	—	GN / BU	8374	Handwheel Channel B Angle Position Sensor SENT Signal	I	—
10	—	YE / GN	8373	Handwheel Channel B Torque Pressure Sensor 2 SENT Signal	I	—
11 - 12	—	—	—	Not Occupied	—	—

**K56 Serial Data Gateway Module X1**

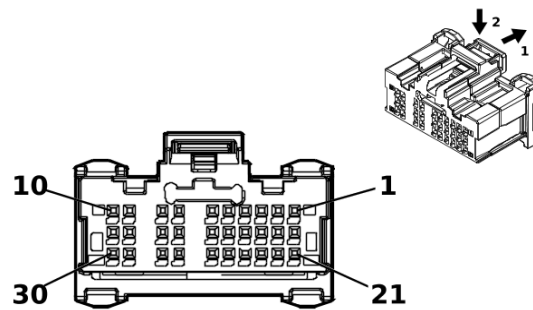

5202284

**Connector Part Information**

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: 2309644-1  
 Service Connector: 84766507  
 Description: 30-Way F 0.5 MQS Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19370262	EL-35616-58 (BK)	EL-38125-58

**K56 Serial Data Gateway Module X1**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	RD / WH	6440	Battery Positive Voltage	I	—
2 - 3	—	—	—	Not Occupied	—	—
4	0.35	BK / WH	2151	Signal Ground	I	—
5	0.35	BU	4987	AUTOSAR CAN Bus [+] 1 Serial Data	I	—
6	0.35	WH	4986	AUTOSAR CAN Bus [-] 1 Serial Data	I	—
7	0.35	WH	4100	AUTOSAR CAN Bus [-] 4 Serial Data	I	—
8	0.35	BU / VT	4101	AUTOSAR CAN Bus [+] 4 Serial Data	I	—
9 - 14	—	—	—	Not Occupied	—	—
15	0.35	BU	4987	AUTOSAR CAN Bus [+] 1 Serial Data	I	—
16	0.35	WH	4986	AUTOSAR CAN Bus [-] 1 Serial Data	I	—
17	0.35	WH	4978	AUTOSAR CAN Bus [-] 2 Serial Data	I	—
18	0.35	BU / YE	4979	AUTOSAR CAN Bus [+] 2 Serial Data	I	—
19	0.35	BU / YE	4984	AUTOSAR CAN Bus [-] 5 Serial Data	I	—
20	0.35	BU / WH	4985	AUTOSAR CAN Bus [+] 5 Serial Data	I	—
21 - 24	—	—	—	Not Occupied	—	—
25	0.35	BU	4987	AUTOSAR CAN Bus [+] 1 Serial Data	I	—
26	0.35	WH	4986	AUTOSAR CAN Bus [-] 1 Serial Data	I	—
27	0.35	WH	4978	AUTOSAR CAN Bus [-] 2 Serial Data	I	—
28	0.35	BU / YE	4979	AUTOSAR CAN Bus [+] 2 Serial Data	I	—
29	0.35	BU / YE	4984	AUTOSAR CAN Bus [-] 5 Serial Data	I	—
30	0.35	BU / WH	4985	AUTOSAR CAN Bus [+] 5 Serial Data	I	—

## K56 Serial Data Gateway Module X2

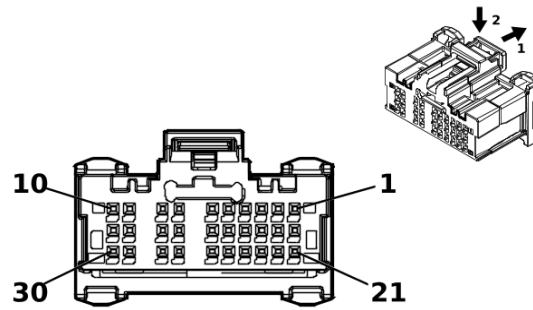

5203942

### Connector Part Information

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: 2309644-2  
 Service Connector: 84766509  
 Description: 30-Way F 0.5 MQS Series( BK with L-GY Front Housing)

### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19370262	EL-35616-58 (BK)	EL-38125-58
II	Service by Cable	No Tool Required	No Tool Required


### K56 Serial Data Gateway Module X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 2	—	—	—	Not Occupied	—	—
3	0.35	BU / BK	4977	AUTOSAR CAN Bus [+] 3 Serial Data	I	—
4	0.35	WH	4976	AUTOSAR CAN Bus [-] 3 Serial Data	I	—
5	0.35	BK / GY	3559	Passive Start Switch 2 Low Reference	I	—
6	—	—	—	Not Occupied	—	—
7	0.35	GN / VT	5199	Run/Crank Relay Coil Control	I	—
8	—	—	—	Not Occupied	—	—
9	0.35	YE / WH	4973	Ethernet Bus 1R [+]	II	—
10	0.35	YE	4972	Ethernet Bus 1R [-]	II	—
11 - 12	—	—	—	Not Occupied	—	—
13	0.35	BU / BN	4983	AUTOSAR CAN Bus [+] 7 Serial Data	I	—
14	0.35	WH	4982	AUTOSAR CAN Bus [-] 7 Serial Data	I	—
15	0.35	GN / BK	3558	Passive Start Switch Signal 2	I	—
16	0.35	WH	4980	AUTOSAR CAN Bus [-] 6 Serial Data	I	—
17	0.35	GN	2578	Private Serial Data Presentation CAN Bus [+] 1 Serial Data	I	—
18	0.35	BN	2577	Private Serial Data Presentation CAN Bus [-] 1 Serial Data	I	—
19	0.35	WH	7207	Ethernet Bus 1 Enable Signal	I	—
20 - 22	—	—	—	Not Occupied	—	—
23	0.35	BU / WH	4985	AUTOSAR CAN Bus [+] 5 Serial Data	I	—
24	0.35	BU / YE	4984	AUTOSAR CAN Bus [-] 5 Serial Data	I	—

**6-236 Electrical Component and Inline Harness Connector End Views****K56 Serial Data Gateway Module X2 (cont'd)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
25	—	—	—	Not Occupied	—	—
26	0.35	YE	4981	AUTOSAR CAN Bus [+] 6 Serial Data	I	—
27	0.35	VT	2580	Private Serial Data Presentation CAN Bus [+] 2 Serial Data	I	—
28	0.35	GY	2579	Private Serial Data Presentation CAN Bus [-] 2 Serial Data	I	—
29	0.35	GN / WH	4975	Ethernet Bus 1T [+]	II	—
30	0.35	GN	4974	Ethernet Bus 1T [-]	II	—

## K56 Serial Data Gateway Module X3

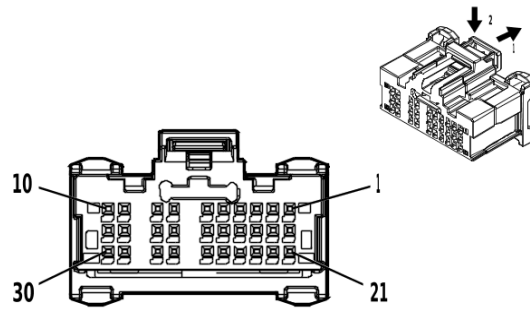

4900333

### Connector Part Information

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: 2309644-3  
 Service Connector: 13519319  
 Description: 30-Way F 0.5 MQS Series( BK with D-GY Front Housing)


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19370262	EL-35616-58 (BK)	EL-38125-58
II	Service by Cable	No Tool Required	No Tool Required

### K56 Serial Data Gateway Module X3

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	BU / GN	4103	AUTOSAR CAN Bus [+] 9 Serial Data	I	—
2	0.35	WH / GN	4102	AUTOSAR CAN Bus [-] 9 Serial Data	I	—
3 - 4	—	—	—	Not Occupied	—	—
5	0.35	BU / YE	4979	AUTOSAR CAN Bus [+] 2 Serial Data	I	—
6	0.35	WH	4978	AUTOSAR CAN Bus [-] 2 Serial Data	I	—
7	0.35	BU / WH	4758	Ethernet Bus 2 [+]	II	—
8	0.35	BU	4757	Ethernet Bus 2 [-]	II	—
9 - 24	—	—	—	Not Occupied	—	—
25	0.35	BU	4987	AUTOSAR CAN Bus [+] 1 Serial Data	I	—
26	0.35	WH	4986	AUTOSAR CAN Bus [-] 1 Serial Data	I	—
27 - 30	—	—	—	Not Occupied	—	—

**K61 Sunroof Control Module (CAC)**

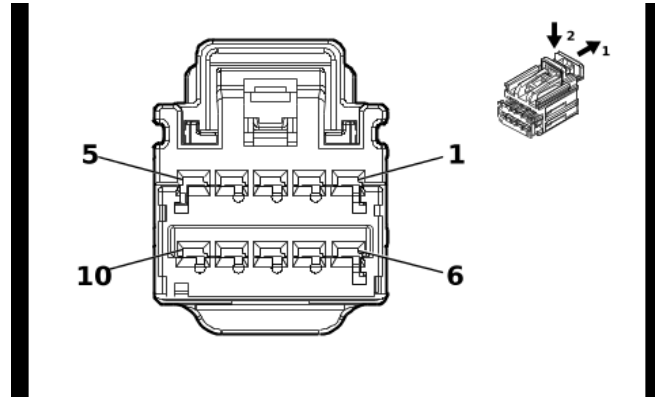

6153939

**Connector Part Information**

Harness Type: Sunroof Wiring Harness  
 OEM Connector: 13590453  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 10-Way F 1.5 OCS Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**K61 Sunroof Control Module (CAC)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	—	Not Occupied	—	—
2	—	BU / VT	5027	Sunroof Switch Serial Data 1 Signal	I	—
3	—	—	—	Not Occupied	—	—
4	—	WH / GN	3031	Sunroof Vent Switch Signal	I	—
5	—	—	—	Not Occupied	—	—
6	—	GN / WH	2854	Body Control Module LIN Bus 8	I	—
7	—	—	—	Not Occupied	—	—
8	—	RD / YE	2340	Battery Positive Voltage	I	—
9	—	—	—	Not Occupied	—	—
10	—	BK	1850	Ground	I	—

## K67 Trailer Brake Control Module

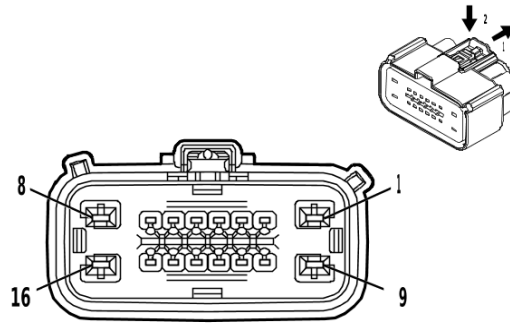

4624589

### Connector Part Information

Harness Type: Chassis Wiring Harness  
 OEM Connector: 34985-4016  
 Service Connector: 13599889  
 Description: 16-Way F 1.5, 2.8 MX Series, Sealed( GY)


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	13576377	J-35616-35 (VT)	J-38125-12A
II	85528055	J-35616-2A (GY)	J-38125-217

### K67 Trailer Brake Control Module

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	RD / VT	1242	Battery Positive Voltage	I	—
2	0.5	WH / BK	2223	Trailer Brake Apply Signal	II	—
3 - 4	—	—	—	Not Occupied	—	—
5	0.5	YE / BK	2224	Trailer Brake Enable Signal	II	—
6 - 7	—	—	—	Not Occupied	—	—
8	2.5	BU	47	Trailer Auxiliary Control	I	—
9	2.5	BK	5550	Ground	I	—
10 - 11	—	—	—	Not Occupied	—	—
12	0.5	GN / BU	2733	Brake System Control Module LIN Bus 2	II	—
13 - 16	—	—	—	Not Occupied	—	—

**K68 Trailer Lamp Control Module**

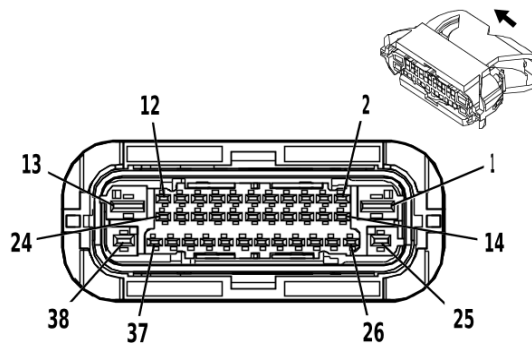

5141918

**Connector Part Information**

Harness Type: Chassis Wiring Harness  
 OEM Connector: 35497871  
 Service Connector: 86825459  
 Description: 38-Way F 1.5, 2.8, 4.8 MCP Series, Sealed( BK with BN Inner Connector)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19368624	J-35616-35 (VT)	J-38125-212
II	19369235	J-35616-14 (GN)	EL-38125-560A
III	85158596	J-35616-40 (BU)	EL-38125-560A

**K68 Trailer Lamp Control Module**


Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	RD / YE	5840	Battery Positive Voltage	III	—
2	0.75	YE / GY	1618	Left Rear Trailer Stop/Turn Lamp Control	II	—
3	0.75	GN / VT	1619	Right Rear Trailer Stop/Turn Lamp Control	II	—
4 - 6	—	—	—	Not Occupied	—	—
7	0.75	GN / WH	5189	Trailer Backup Lamp Control	II	—
8 - 9	—	—	—	Not Occupied	—	—
10	0.5	VT / BK	739	Run/Crank Ignition 1 Voltage	II	—
11	0.5	BN / YE	820	Center High Mounted Stop Lamp Supply Voltage	II	—
12	—	—	—	Not Occupied	—	—
13	2.5	BK	5550	Ground	III	—
14 - 24	—	—	—	Not Occupied	—	—
25	1.5	GY / BN	2109	Trailer Park Lamp Control	I	—
26	—	—	—	Not Occupied	—	—
27	0.5	BU / VT	4101	AUTOSAR CAN Bus [+] 4 Serial Data	II	—
28	0.5	WH	4100	AUTOSAR CAN Bus [-] 4 Serial Data	II	—
29	0.5	BU / VT	4101	AUTOSAR CAN Bus [+] 4 Serial Data	II	—
30	0.5	WH	4100	AUTOSAR CAN Bus [-] 4 Serial Data	II	—
31	0.5	BU / VT	4101	AUTOSAR CAN Bus [+] 4 Serial Data	II	—
32	0.5	WH	4100	AUTOSAR CAN Bus [-] 4 Serial Data	II	—
33 - 37	—	—	—	Not Occupied	—	—



**K68 Trailer Lamp Control Module (cont'd)**

<b>Pin</b>	<b>Size</b>	<b>Color</b>	<b>Circuit</b>	<b>Function</b>	<b>Terminal Type ID</b>	<b>Option</b>
38	2.5	RD / VT	5640	Battery Positive Voltage	I	—

**K69 Transfer Case Control Module**

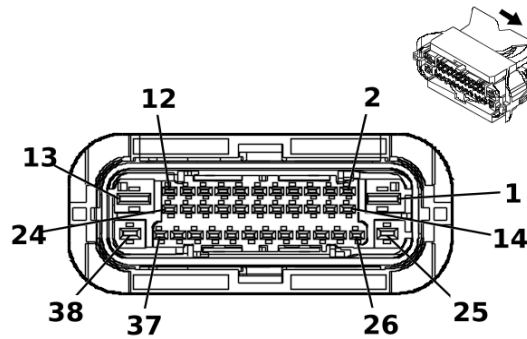

5199340

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 35497867  
 Service Connector: 86825458  
 Description: 38-Way F 1.5, 2.8, 4.8 MCP Series, Sealed( BK with BN Inner Connector)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19368624	J-35616-35 (VT)	J-38125-212
II	19369235	J-35616-14 (GN)	EL-38125-560A
III	85158596	J-35616-40 (BU)	EL-38125-560A


**K69 Transfer Case Control Module**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	4	RD / WH	2242	Battery Positive Voltage	III	—
2	—	—	—	Not Occupied	—	—
3	0.5	BU / YE	4979	AUTOSAR CAN Bus [+] 2 Serial Data	II	—
4	0.5	WH	4978	AUTOSAR CAN Bus [-] 2 Serial Data	II	—
5	0.5	WH / GN	7479	Rotary Position Sensor Signal	II	—
6	—	—	—	Not Occupied	—	—
7	0.5	YE	7474	Incremental Encoder Direction Signal	II	—
8	—	—	—	Not Occupied	—	—
9	0.5	YE / WH	1695	4WD Locked Range Indicator Control	II	—
10	—	—	—	Not Occupied	—	—
11	0.5	VT / GY	8017	Secondary Axle Motor Relay Control	II	—
12	0.5	GY / BK	1570	Front Axle Actuator Control	II	—
13	2.5	YE / VT	1553	Transfer Case Motor Counter Clockwise Control	III	—
14	—	—	—	Not Occupied	—	—
15	0.5	BU / YE	4979	AUTOSAR CAN Bus [+] 2 Serial Data	II	—
16	0.5	WH	4978	AUTOSAR CAN Bus [-] 2 Serial Data	II	—
17	—	—	—	Not Occupied	—	—
18	0.5	VT / BK	2139	Run/Crank Ignition 1 Voltage	II	—
19	0.5	BU / GY	7473	Incremental Encoder Impulse Signal	II	—
20	0.5	WH / RD	7477	Gear Position Sensor 5V Reference	II	—

**K69 Transfer Case Control Module (cont'd)**

<b>Pin</b>	<b>Size</b>	<b>Color</b>	<b>Circuit</b>	<b>Function</b>	<b>Terminal Type ID</b>	<b>Option</b>
21 - 23	—	—	—	Not Occupied	—	—
24	0.5	BK	8015	Transfer Case Motor Low Reference	II	—
25	2.5	BK	450	Ground	I	—
26	—	—	—	Not Occupied	—	—
27	0.5	BK	8014	Transfer Case Lock Solenoid Low Reference	II	—
28 - 29	—	—	—	Not Occupied	—	—
30	0.5	YE / BK	7478	Gear Position Sensor Low Reference	II	—
31	0.5	WH / GN	7475	Incremental Encoder Sensor Voltage Reference	II	—
32	—	—	—	Not Occupied	—	—
33	0.75	BU	8013	Transfer Case Lock Solenoid Control 2	II	—
34	0.75	YE / BN	1569	Transfer Case Lock Solenoid Valve Control	II	—
35	—	—	—	Not Occupied	—	—
36	0.5	VT	7476	Incremental Encoder Sensor Low Reference	II	—
37	—	—	—	Not Occupied	—	—
38	2.5	YE / GY	1552	Transfer Case Motor Clockwise Control	I	—

**K71 Transmission Control Module**

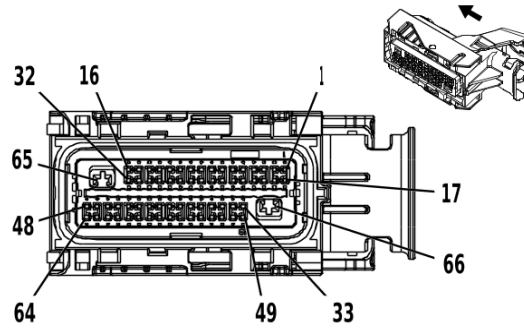

3621452

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 34822-0013  
 Service Connector: 19329822  
 Description: 66-Way F 0.64, 2.8 Series, Sealed( BK with BK Terminal Position Assurance)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	13587518	J-35616-35 (VT)	J-38125-11A
II	19351723	J-35616-64B (L-BU)	J-38125-213


**K71 Transmission Control Module**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH / BU	4507	Transmission Clutch H Control	II	—
2	0.5	BU	6401	Clutch Solenoid Valve B Control	II	—
3	0.5	GN / BU	1530	Transmission Line Pressure Control Solenoid Valve Control	II	—
4	—	—	—	Not Occupied	—	—
5	0.5	GY / RD	10817	Lubricant Circuit Pressure Sensor 5 Volt Reference	II	—
6	—	—	—	Not Occupied	—	—
7	0.5	YE / GN	4170	Transmission Output Shaft Speed Sensor Circuit 9V Reference	II	—
8	0.5	YE / BU	4171	Transmission Input Shaft Speed Sensor Circuit 9V Reference	II	—
9 - 10	—	—	—	Not Occupied	—	—
11	0.5	BU / BK	10819	Lubricant Circuit Pressure Sensor Low Reference	II	—
12	—	—	—	Not Occupied	—	—
13	0.5	GN / VT	4510	Transmission Intermediate Speed Signal	II	—
14	0.5	GY / BU	6358	Output Speed Signal	II	—
15	0.5	GN / RD	6353	Input Speed Signal	II	—
16	—	—	—	Not Occupied	—	—
17	0.5	WH	4508	Transmission Clutch G Control	II	—
18	0.5	BN	6400	Clutch Solenoid Valve A Control	II	—
19	0.5	GY	6402	Clutch Solenoid Valve C Control	II	—

**K71 Transmission Control Module (cont'd)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
20	0.5	VT / WH	422	Torque Converter Clutch Solenoid Valve Control	II	—
21	0.5	GN / BN	6380	Torque Converter Clutch Enable Solenoid Valve A Control	II	—
22	0.5	YE / BN	6210	Torque Converter Clutch Enable Solenoid Valve B Control	II	—
23	—	—	—	Not Occupied	—	—
24	0.5	GN / WH	2968	Transmission Auxiliary Fluid Pump Control	II	—
25 - 27	—	—	—	Not Occupied	—	—
28	0.5	BK / BN	586	Transmission Fluid Temperature Sensor Low Reference	II	—
29 - 32	—	—	—	Not Occupied	—	—
33	0.75	GN / GY	6387	Transmission High Side Driver 1 Control	II	—
34	—	—	—	Not Occupied	—	—
35	0.5	VT / BK	2139	Run/Crank Ignition 1 Voltage	II	—
36	—	—	—	Not Occupied	—	—
37	0.5	BU / YE	4979	AUTOSAR CAN Bus [+] 2 Serial Data	II	—
38	0.5	WH	4978	AUTOSAR CAN Bus [-] 2 Serial Data	II	—
39 - 44	—	—	—	Not Occupied	—	—
45	0.5	GN / YE	10816	Lubricant Circuit Pressure Sensor Signal	II	—
46 - 48	—	—	—	Not Occupied	—	—
49	0.75	GY / BN	6388	Transmission High Side Driver 2 Control	II	—
50 - 52	—	—	—	Not Occupied	—	—
53	0.5	BU / YE	4979	AUTOSAR CAN Bus [+] 2 Serial Data	II	—
54	0.5	WH	4978	AUTOSAR CAN Bus [-] 2 Serial Data	II	—
55 - 62	—	—	—	Not Occupied	—	—
63	0.5	BN / WH	585	Transmission Fluid Temperature Sensor Signal	II	—
64	0.5	BU / WH	3338	Transmission Internal Mode Switch Mode Control X	II	—
65	1.5	BK / WH	6251	Transmission Control Module Ground	I	—
66	0.75	RD / GN	1840	Battery Positive Voltage	I	—

**K73 Telematic Control Module X1**

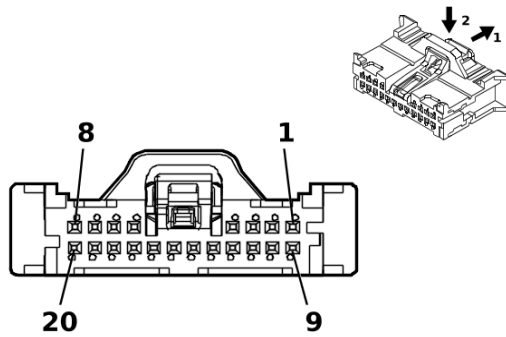

5200955

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 35068196  
 Service Connector: 84769280  
 Description: 20-Way F Mini 50 Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	84944580	EL-35616-58 (BK)	EL-38125-58

**K73 Telematic Control Module X1**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	RD / BU	3240	Battery Positive Voltage	I	—
2	—	—	—	Not Occupied	—	—
3	0.35	GN / BK	2515	Telematics Switch Supply Voltage	I	—
4	0.35	GN / WH	2514	Telematics Switch Signal	I	—
5	0.35	YE / VT	2516	Telematics Switch Green LED Indicator Control	I	—
6	0.35	BN / WH	2517	Telematics Switch Red LED Indicator Control	I	—
7	0.35	BU / WH	4985	AUTOSAR CAN Bus [+] 5 Serial Data	I	—
8	0.35	BU / YE	4984	AUTOSAR CAN Bus [-] 5 Serial Data	I	—
9	0.35	BK / WH	451	Signal Ground	I	—
10 - 18	—	—	—	Not Occupied	—	—
19	0.35	BU / WH	4985	AUTOSAR CAN Bus [+] 5 Serial Data	I	—
20	0.35	BU / YE	4984	AUTOSAR CAN Bus [-] 5 Serial Data	I	—

## K73 Telematic Control Module X2

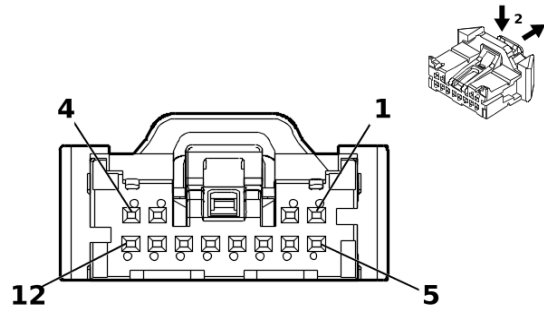

5360826

### Connector Part Information

Harness Type: Body Wiring Harness  
 OEM Connector: 35068239  
 Service Connector: 13529935  
 Description: 12-Way F 050 CTS Series( BK)


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	84944580	EL-35616-58 (BK)	EL-38125-58

### K73 Telematic Control Module X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	GY / GN	4770	Emergency Call Backup Speaker [+] Control	I	—
2	0.35	WH / BK	4769	Emergency Call Backup Speaker [-] Control	I	—
3 - 5	—	—	—	Not Occupied	—	—
6	0.35	GY / YE	5149	Voice Recognition Audio Signal	I	—
7	0.35	BK / GY	5152	Voice Recognition Audio [-] Control	I	—
8	0.35	BU	655	Cellular Telephone Microphone Signal	I	—
9	0.35	BK / BN	654	Cellular Telephone Microphone Low Reference	I	—
10	0.35	Bare	1792	Low Reference	I	—
11 - 12	—	—	—	Not Occupied	—	—

**K73 Telematic Control Module X3**

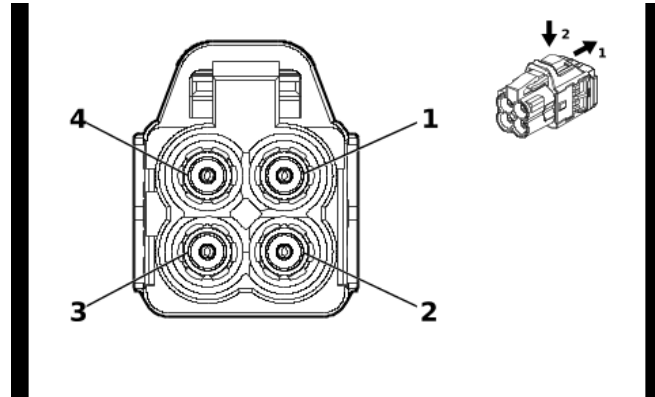

5835118

**Connector Part Information**

Harness Type: Body Wiring Harness COAX  
 OEM Connector: 13544819  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 4-Way F Mini Coax Type( BK)

**Terminal Part Information**


Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**K73 Telematic Control Module X3**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	Coax Cable	—	(GPS/Cell) Coaxial Antenna Cell/GPS combined Signal	I	—



**K73 Telematic Control Module X7**

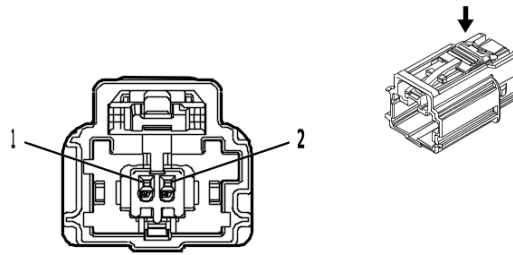

4942391

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 35122188  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F 050 CTS Ethernet Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Service by Cable	No Tool Required	No Tool Required

**K73 Telematic Control Module X7**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0	WH	7211	Ethernet Bus 4 [+]	I	—
2	0	GN	7210	Ethernet Bus 4 [-]	I	—

**K77 Remote Function Actuator Module**

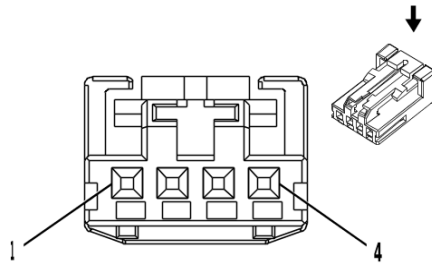

2717162

**Connector Part Information**

Harness Type: Roof Wiring Harness  
 OEM Connector: 1-936119-1  
 Service Connector: 19367524  
 Description: 4-Way F 0.64 Micro-Quadlock Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

**K77 Remote Function Actuator Module**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	RD / VT	1640	Battery Positive Voltage	I	—
2	0.35	GN / YE	2862	Body Control Module LIN Bus 16	I	—
3	—	—	—	Not Occupied	—	—
4	0.35	BK / WH	451	Signal Ground	I	—

**K85P Restraints Occupant Classification System Module - Passenger**

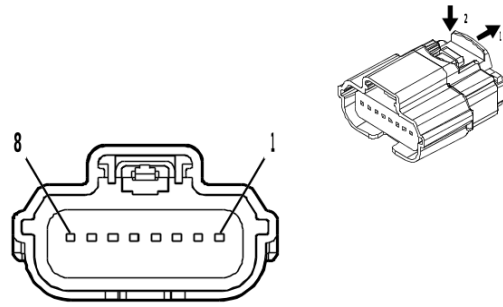

4708234

**Connector Part Information**

Harness Type: Front Seat Wiring Harness - Passenger  
 OEM Connector: 31404-9110  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 8-Way F 64 Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

**K85P Restraints Occupant Classification System Module - Passenger**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	RD / GN	4440	Battery Positive Voltage	I	—
2	0.5	BU	4987	AUTOSAR CAN Bus [+] 1 Serial Data	I	—
3	0.5	BU	4987	AUTOSAR CAN Bus [+] 1 Serial Data	I	—
4	0.5	WH	4986	AUTOSAR CAN Bus [-] 1 Serial Data	I	—
5	0.5	WH	4986	AUTOSAR CAN Bus [-] 1 Serial Data	I	—
6	0.5	BK / WH	1351	Signal Ground	I	—
7	0.5	OG / BN	3947	Passenger Automatic Locking Retractor Switch Signal	I	—
8	0.5	GY / OG	3946	Passenger Automatic Locking Retractor Switch Low Reference	I	—

**K111 Fuel Pump Power Control Module**

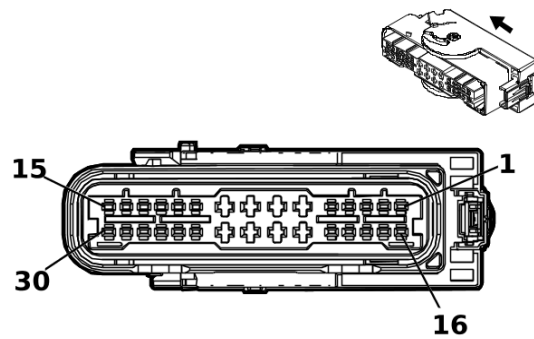

3240109

**Connector Part Information**

Harness Type: Chassis Wiring Harness  
 OEM Connector: 5-2109446-2  
 Service Connector: 86545828  
 Description: 30-Way F 1.5, 2.8 MCP Series, Sealed( BK)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19329958	J-35616-2A (GY)	J-38125-11A
II	85533337	J-35616-35 (VT)	J-38125-11A


**K111 Fuel Pump Power Control Module**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 6	—	—	—	Not Occupied	—	—
7	2.5	RD / VT	1940	Battery Positive Voltage	II	—
8	2.5	GY	120	Fuel Pump Control	II	—
9	2.5	YE / GY	4137	Fuel Pump Supply Voltage Phase 2	II	—
10	0.5	YE / RD	2709	Fuel Tank Pressure Sensor 5V Reference	I	—
11	0.5	BU / WH	890	Fuel Tank Pressure Sensor Signal	I	—
12	0.5	BN / RD	7445	Fuel Line Pressure Sensor 5V Reference	I	—
13	0.5	BU / GN	1936	Primary Fuel Level Sensor Signal	I	—
14	—	—	—	Not Occupied	—	—
15	0.5	BU / GY	4054	Private Serial Data Powertrain CAN Bus [-] Serial Data	I	—
16	0.5	VT / GN	4320	Powertrain Sensor Bus Enable	I	—
17	—	—	—	Not Occupied	—	—
18	0.5	GN / GY	465	Fuel Pump Primary Relay Control	I	—
19 - 20	—	—	—	Not Occupied	—	—
21	0.5	WH	1310	EVAP Vent Solenoid Valve Control	II	—
22	2.5	BK	750	Ground	II	—
23	0.5	BU	7444	Fuel Pump Assembly Shield Ground	II	—
24	2.5	WH / BN	4138	Fuel Pump Supply Voltage Phase 3	II	—
25	0.5	BK / BN	6284	Fuel Tank Pressure Sensor Low Reference	I	—
26	0.5	BU / WH	7446	Fuel Pressure Sensor Signal	I	—

**K111 Fuel Pump Power Control Module (cont'd)**

<b>Pin</b>	<b>Size</b>	<b>Color</b>	<b>Circuit</b>	<b>Function</b>	<b>Terminal Type ID</b>	<b>Option</b>
27	0.5	BK / YE	7447	Fuel Pressure Sensor Low Reference	I	—
28	0.5	BK / GN	6281	Fuel Level Sensor Low Reference	I	—
29	—	—	—	Not Occupied	—	—
30	0.5	WH	4055	Private Serial Data Powertrain CAN Bus [+] Serial Data	I	—

**K157 Video Processing Module X1 ((UV2 / UXA) - UVB)**

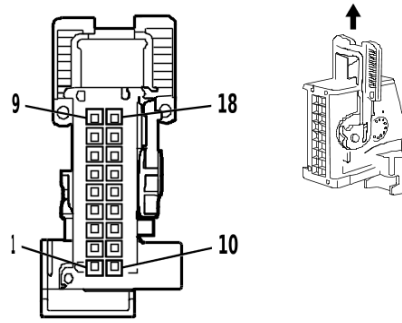

1567082

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 1379102-1  
 Service Connector: 84976200  
 Description: 18-Way F Micro-Quadlock Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19300632	J-35616-64B (L-BU)	J-38125-215A

**K157 Video Processing Module X1 ((UV2 / UXA) - UVB)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 2	—	—	—	Not Occupied	—	—
3	0.5	BK / WH	451	Signal Ground	I	—
4 - 9	—	—	—	Not Occupied	—	—
10	0.5	RD / VT	1640	Battery Positive Voltage	I	—
11 - 12	—	—	—	Not Occupied	—	—
13	0.35	WH	4986	AUTOSAR CAN Bus [-] 1 Serial Data	I	—
14	0.35	WH	4986	AUTOSAR CAN Bus [-] 1 Serial Data	I	—
15	0.35	BU	4987	AUTOSAR CAN Bus [+] 1 Serial Data	I	—
16	0.35	BU	4987	AUTOSAR CAN Bus [+] 1 Serial Data	I	—
17 - 18	—	—	—	Not Occupied	—	—

**K157 Video Processing Module X2 ((UV2 / UXA) - UVB)**

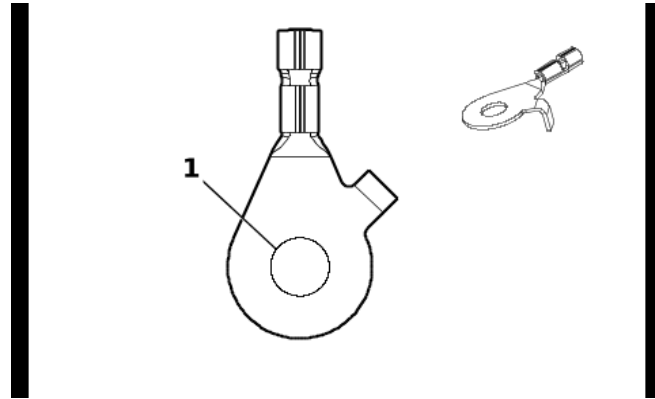

6154799

**Connector Part Information**

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: 84172962  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 1-Way Ring Terminal


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**K157 Video Processing Module X2 ((UV2 / UXA) - UVB)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	1.5	BK	1350	Ground	I	—

**K157 Video Processing Module X4 (UV2 - (UVB / UXA))**

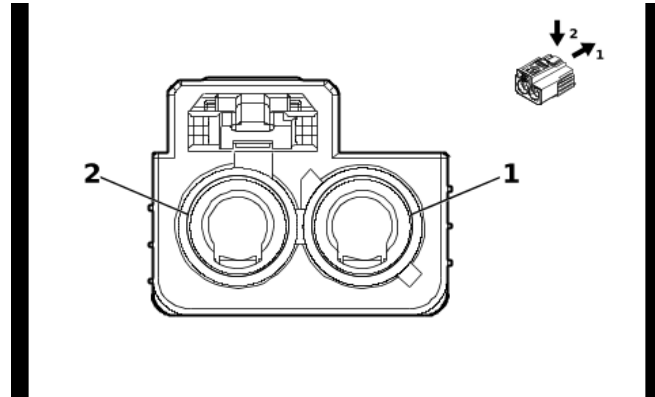

5810836

**Connector Part Information**

Harness Type: Body Wiring Harness COAX  
 OEM Connector: 13516082  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 2-Way F Coax Type( BG)

**Terminal Part Information**


Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**K157 Video Processing Module X4 (UV2 - (UVB / UXA))**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 2	—	—	—	Not Occupied	—	—
1_BN	0.01	Coax Ca- ble	4724	Right Sideview Camera LVDS (Low Voltage Dif- ferential Signaling) Coaxial Signal	I	—
2_BN	0.01	Coax Ca- ble	4725	Left Sideview Camera LVDS (Low Voltage Dif- ferential Signaling) Coaxial Signal	I	—



**K157 Video Processing Module X4 (UXA)**

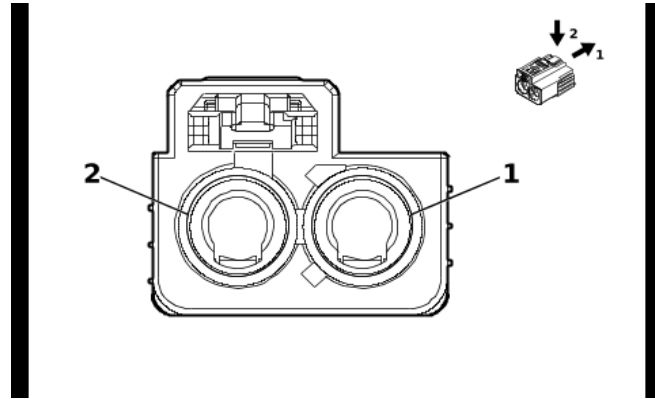

5810832

**Connector Part Information**

Harness Type: Body Wiring Harness COAX  
 OEM Connector: 13516079  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 2-Way F Coax Type( BN)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**K157 Video Processing Module X4 (UXA)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 2	—	—	—	Not Occupied	—	—
1_BG	0.01	Coax Ca- ble	11352	Underbody Camera 2 LVDS (Low Voltage Differ- ential Signaling) Coaxial Signal	I	—

**K157 Video Processing Module X5 (UV2 - (UVB / UXA))**

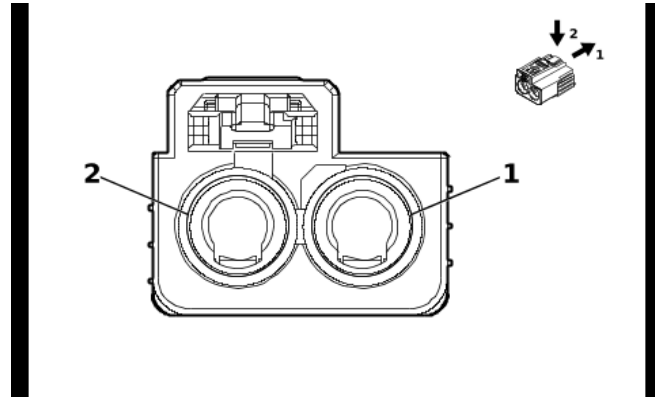

5810827

**Connector Part Information**

Harness Type: Body Wiring Harness COAX  
 OEM Connector: 13516078  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 2-Way F Coax Type( GN)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**K157 Video Processing Module X5 (UV2 - (UVB / UXA))**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 2	—	—	—	Not Occupied	—	—
1_GN	0.01	Coax Ca- ble	4722	Frontview Camera LVDS (Low Voltage Differential Signaling) Coaxial Signal	I	—
2_GN	0.01	Coax Ca- ble	4721	Rearview Camera LVDS (Low Voltage Differential Signaling) Coaxial Signal	I	—

**K157 Video Processing Module X5 (UXA)**

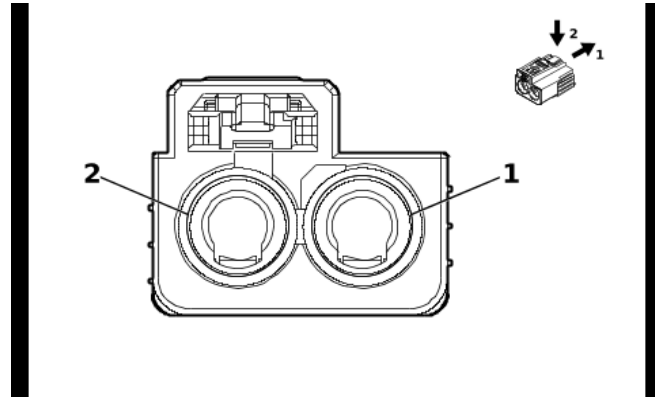

5810827

**Connector Part Information**

Harness Type: Body Wiring Harness COAX  
 OEM Connector: 13516078  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 2-Way F Coax Type( GN)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**K157 Video Processing Module X5 (UXA)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 2	—	—	—	Not Occupied	—	—
1_GN	0.01	Coax Ca- ble	11348	Underbody Camera LVDS (Low Voltage Differential Signaling) Coaxial Signal	I	—

**K157 Video Processing Module X6 (UXA - ( UV2 & UVB ))**

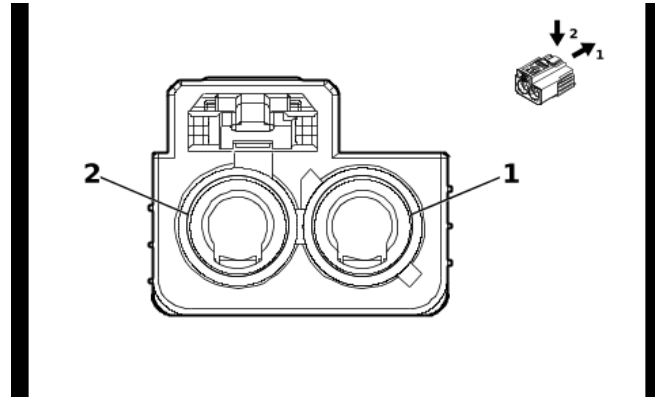

5810836

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 13516082  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 2-Way F Coax Type( BG)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**K157 Video Processing Module X6 (UXA - ( UV2 & UVB ))**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 2	—	—	—	Not Occupied	—	—
1_BN	—	Coax Ca- ble	4724	Right Sideview Camera LVDS (Low Voltage Dif- ferential Signaling) Coaxial Signal	I	—
2_BN	—	Coax Ca- ble	4725	Left Sideview Camera LVDS (Low Voltage Dif- ferential Signaling) Coaxial Signal	I	—

**K157 Video Processing Module X7 (UXA - ( UV2 & UVB ))**

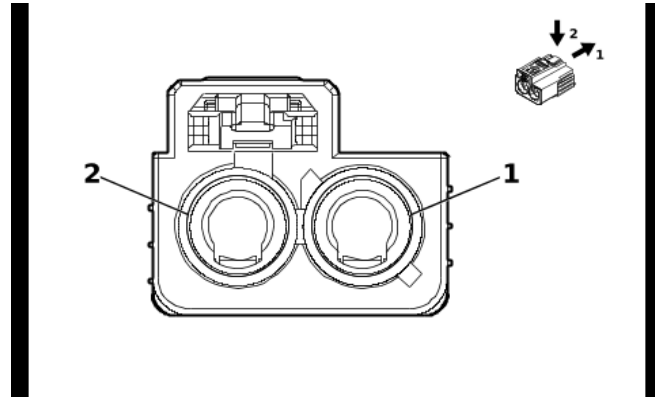

5810836

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 13516082  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 2-Way F Coax Type( BG)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**K157 Video Processing Module X7 (UXA - ( UV2 & UVB ))**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 2	—	—	—	Not Occupied	—	—
1_GN	—	Coax Ca- ble	4722	Frontview Camera LVDS (Low Voltage Differential Signaling) Coaxial Signal	I	—
2_GN	—	Coax Ca- ble	4721	Rearview Camera LVDS (Low Voltage Differential Signaling) Coaxial Signal	I	—

**K160 Brake System Control Module**

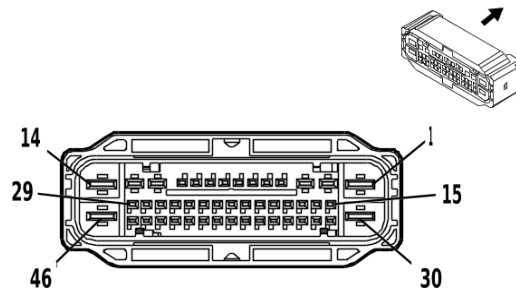

4162046

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 33222138  
 Service Connector: 19333026  
 Description: 46-Way F 1.2 OCS, 2.8, 6.3 CTS Series, Sealed( GY)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	13575368	J-35616-35 (VT)	J-38125-36
II	19370818	J-35616-12 (BU)	J-38125-215A
III	84634921	J-35616-42 (RD)	J-38125-212


**K160 Brake System Control Module**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	6	BK	150	Ground	III	—
2	2.5	WH	2001	Left Park Brake Motor Apply Control	I	—
3	2.5	GY / BK	4369	Left Park Brake Motor Low Reference	I	—
4	0.5	GY / WH	7064	Left Front Wheel Speed Sensor Control	II	—
5	0.5	GY	830	Left Front Wheel Speed Sensor Signal	II	—
6 - 8	—	—	—	Not Occupied	—	—
9	0.5	VT / WH	639	Run/Crank Ignition 1 Voltage	II	—
10	0.5	GY / BN	7065	Right Front Wheel Speed Sensor Control	II	—
11	0.5	YE	872	Right Front Wheel Speed Sensor Signal	II	—
12	2.5	GN / VT	1988	Right Park Brake Motor Apply Control	I	—
13	2.5	GY	4368	Right Park Brake Motor Low Reference	I	—
14	6	RD / BN	440	Battery Positive Voltage	III	—
15	0.5	GY / BK	7127	Left Rear Wheel Speed Sensor Control	II	—
16	0.5	BU	884	Left Rear Wheel Speed Sensor Signal	II	—
17	0.5	BU / BK	4977	AUTOSAR CAN Bus [+] 3 Serial Data	II	—
18	0.5	WH	4976	AUTOSAR CAN Bus [-] 3 Serial Data	II	—
19	0.5	YE / BK	2224	Trailer Brake Enable Signal	II	—
20	0.5	WH / BK	2223	Trailer Brake Apply Signal	II	—
21 - 22	—	—	—	Not Occupied	—	—
23	0.35	GN / YE	2731	Brake System Control Module LIN Bus 1	II	—

**K160 Brake System Control Module (cont'd)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
24	—	—	—	Not Occupied	—	—
25	0.5	BU / YE	4979	AUTOSAR CAN Bus [+] 2 Serial Data	II	—
26	0.5	WH	4978	AUTOSAR CAN Bus [-] 2 Serial Data	II	—
27	0.5	GN / YE	1616	Rear Brake Pad Wear Sensor Signal	II	—
28	0.5	GY / YE	7128	Right Rear Wheel Speed Sensor Control	II	—
29	0.5	VT	882	Right Rear Wheel Speed Sensor Signal	II	—
30	6	BK	3550	Ground	III	—
31	0.5	GN / GY	333	Brake Fluid Level Signal	II	—
32	—	—	—	Not Occupied	—	—
33	0.5	BU / BK	4977	AUTOSAR CAN Bus [+] 3 Serial Data	II	—
34	0.5	WH	4976	AUTOSAR CAN Bus [-] 3 Serial Data	II	—
35	0.5	BN / BU	1602	Front Brake Pad Wear Sensor Signal	II	—
36	0.5	GN / BU	2733	Brake System Control Module LIN Bus 2	II	—
37 - 40	—	—	—	Not Occupied	—	—
41	0.5	BU / YE	4979	AUTOSAR CAN Bus [+] 2 Serial Data	II	—
42	0.5	WH	4978	AUTOSAR CAN Bus [-] 2 Serial Data	II	—
43 - 45	—	—	—	Not Occupied	—	—
46	6	RD / WH	342	Battery Positive Voltage	III	—

**K182 Parking Assist Control Module X1 (UD7)**

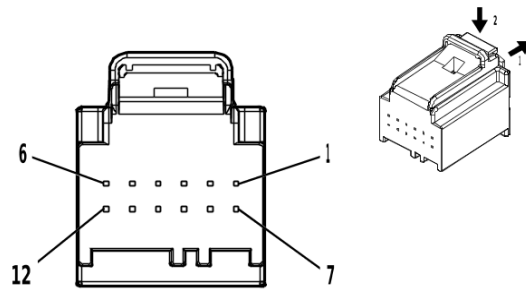

5095565

**Connector Part Information**

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: 31410-0125  
 Service Connector: 13525987  
 Description: 12-Way F 0.64 Series( BK)

**Terminal Part Information**


Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**K182 Parking Assist Control Module X1 (UD7)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	RD / WH	4740	Battery Positive Voltage	I	—
2	—	WH	4986	AUTOSAR CAN Bus [-] 1 Serial Data	I	—
3	—	BU	4987	AUTOSAR CAN Bus [+] 1 Serial Data	I	—
4	—	BU	4987	AUTOSAR CAN Bus [+] 1 Serial Data	I	—
5	—	—	—	Not Occupied	—	—
6	—	BK / WH	2151	Signal Ground	I	—
7	—	—	—	Not Occupied	—	—
8	—	WH	4986	AUTOSAR CAN Bus [-] 1 Serial Data	I	—
9	—	BU	4987	AUTOSAR CAN Bus [+] 1 Serial Data	I	—
10	—	WH	4986	AUTOSAR CAN Bus [-] 1 Serial Data	I	—
11 - 12	—	—	—	Not Occupied	—	—



**K182 Parking Assist Control Module X2 (UD7)**

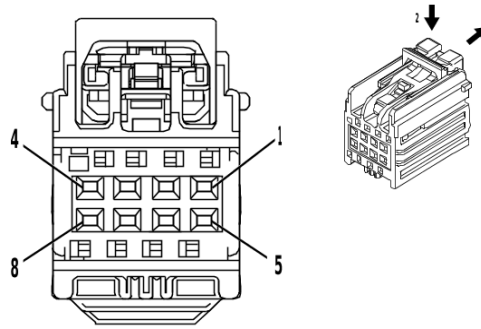

4280711

**Connector Part Information**

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: 7289-2895-40  
 Service Connector: 19355209  
 Description: 8-Way F 0.64 Kaizen Series( GY)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**K182 Parking Assist Control Module X2 (UD7)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	—	Not Occupied	—	—
2	—	YE / WH	2377	Right Rear Middle Parking Assist Sensor Signal	I	—
3	—	YE	2375	Left Rear Outer Parking Assist Sensor Signal	I	—
4	—	BN / WH	2374	Object Sensor Voltage Reference	I	—
5	—	YE / VT	2378	Right Rear Outer Parking Assist Sensor Signal	I	—
6	—	YE / BU	2376	Left Rear Middle Parking Assist Sensor Signal	I	—
7	—	—	—	Not Occupied	—	—
8	—	BK / GY	2379	Object Sensor Low Reference	I	—

**K219 Lighting Control Module X1**

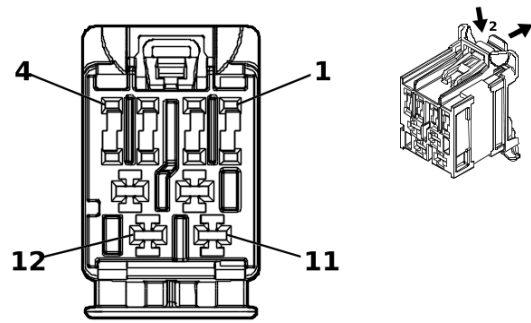

5203784

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 160026-0003  
 Service Connector: 13509990  
 Description: 12-Way F 1.2, 2.8 stAK50h Series( L-PU)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	84729890	J-35616-12 (BU)	J-38125-215A
II	87814662	J-35616-4A (PU)	J-38125-557

**K219 Lighting Control Module X1**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH / YE	1204	Left Park Lamp Control 2	I	T4A
	0.5	GY / BU	7538	Left Front DRL Control	I	T7E
2 - 4	—	—	—	Not Occupied	—	—
5	0.5	BU / WH	1314	Left Front Turn Signal Lamp Control	I	—
6	0.5	GN / WH	24	Backup Lamp Control	I	—
7	—	—	—	Not Occupied	—	—
8	0.5	WH / VT	1430	Exterior Courtesy Lamp Control	I	—
9	1.5	RD / GY	1740	Battery Positive Voltage	II	—
10	0.75	YE	712	Left Headlamp Low Beam Control	II	—
11	—	—	—	Not Occupied	—	—
12	0.75	WH	711	Left Headlamp High Beam Control	II	—

## K219 Lighting Control Module X2

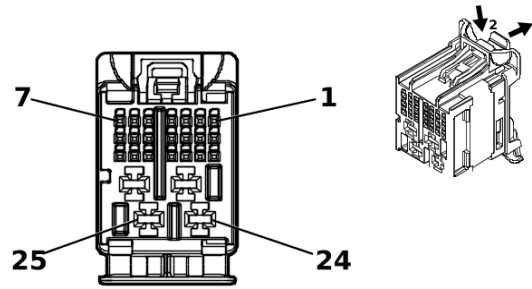

5203807

### Connector Part Information

Harness Type: Body Wiring Harness

OEM Connector: 160027-0012

Service Connector: 13534966

Description: 25-Way F 0.5 MQS, 2.8 MCP Series( GY with GY Inner Connector)


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19370262	EL-35616-58 (BK)	EL-38125-58
II	87814662	J-35616-4A (PU)	J-38125-557

### K219 Lighting Control Module X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	WH / YE	1254	Left Front Park Lamp Control	I	—
2	0.35	BU / GN	1253	Right Front Park Lamp Control	I	—
3	0.35	BN / GY	2268	Windshield Washer Relay Control	I	—
4	0.35	BU / BN	38	Backup Lamp Relay Control	I	—
5 - 9	—	—	—	Not Occupied	—	—
10	0.35	BN / GN	196	Windshield Wiper Motor Park Switch Signal	I	—
11	—	—	—	Not Occupied	—	—
12	0.35	GY	91	Windshield Wiper Motor Relay Coil Control	I	—
13	—	—	—	Not Occupied	—	—
14	0.35	VT	185	Low Washer Fluid Indicator Control	I	—
15 - 18	—	—	—	Not Occupied	—	—
19	0.35	WH / BN	7055	Auxiliary Park Lamp Relay Control	I	—
20	—	—	—	Not Occupied	—	—
21	0.35	WH / VT	860	Windshield Wiper Switch High Signal	I	—
22	1.5	RD / GN	1540	Battery Positive Voltage	II	—
23	1	RD / VT	1640	Battery Positive Voltage	II	—
24 - 25	—	—	—	Not Occupied	—	—

**K219 Lighting Control Module X3**

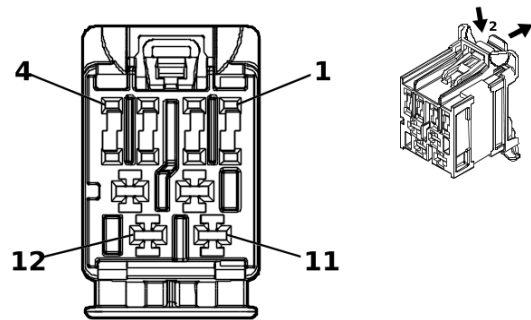

5203797

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 160026-0002  
 Service Connector: 13509989  
 Description: 12-Way F 1.2, 2.8 stAK50h Series( GN)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	84729890	J-35616-12 (BU)	J-38125-215A
II	87814662	J-35616-4A (PU)	J-38125-557

**K219 Lighting Control Module X3**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 3	—	—	—	Not Occupied	—	—
4	0.5	VT	1203	Right Park Lamp Control 2	I	T4A
	0.5	BU / BN	7539	Right Front DRL Control	I	T7E
5	—	—	—	Not Occupied	—	—
6	0.5	GN / VT	1315	Right Front Turn Signal Lamp Control	I	—
7	0.5	BN / GY	5061	Left Front Fog Lamp Control	I	—
8	—	—	—	Not Occupied	—	—
9	1.5	RD / BN	1440	Battery Positive Voltage	II	—
10	1.5	RD / WH	1340	Battery Positive Voltage	II	—
11	0.75	WH	311	Right Headlamp High Beam Control	II	—
12	1	YE	312	Right Headlamp Low Beam Control	II	—

## K219 Lighting Control Module X4

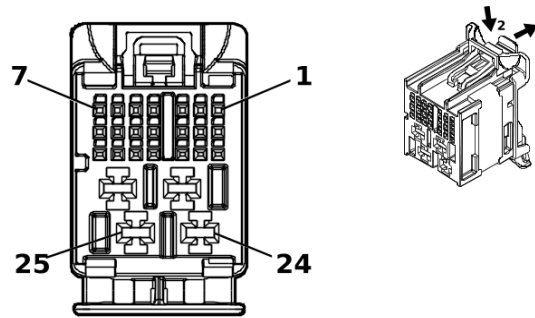

5203416

### Connector Part Information

Harness Type: Body Wiring Harness

OEM Connector: 160027-0015

Service Connector: 13534969

Description: 25-Way F 0.5 MQS, 2.8 MCP Series( PU with GY Inner Connector)


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19370262	EL-35616-58 (BK)	EL-38125-58
II	87814662	J-35616-4A (PU)	J-38125-557

### K219 Lighting Control Module X4

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 2	—	—	—	Not Occupied	—	—
3	0.35	BU / GN	4103	AUTOSAR CAN Bus [+] 9 Serial Data	I	—
4	0.35	WH / GN	4102	AUTOSAR CAN Bus [-] 9 Serial Data	I	—
5	0.35	BU / GN	4103	AUTOSAR CAN Bus [+] 9 Serial Data	I	—
6	0.35	WH / GN	4102	AUTOSAR CAN Bus [-] 9 Serial Data	I	—
7	0.35	WH / BU	6311	Cruise/ETC/TCC Brake Signal	I	—
8 - 9	—	—	—	Not Occupied	—	—
10	0.35	WH / GN	4102	AUTOSAR CAN Bus [-] 9 Serial Data	I	—
11	0.35	BU / GN	4103	AUTOSAR CAN Bus [+] 9 Serial Data	I	—
12 - 21	—	—	—	Not Occupied	—	—
22	1	RD / BN	1140	Battery Positive Voltage	II	—
23	1.5	BK / WH	451	Signal Ground	II	—
24	1	RD / BU	1240	Battery Positive Voltage	II	—
25	1.5	BK / WH	451	Signal Ground	II	—

**K219 Lighting Control Module X5**

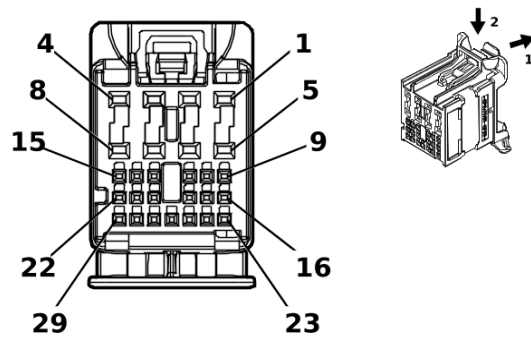

5203373

**Connector Part Information**

Harness Type: Body Wiring Harness

OEM Connector: 160029-0013

Service Connector: 13534975

Description: 29-Way F 0.5 NANO, 1.2 MCON, stAK50h Series( BU with GY Inner Connector)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19370262	EL-35616-58 (BK)	EL-38125-58
II	84729890	J-35616-12 (BU)	J-38125-215A

**K219 Lighting Control Module X5**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	—	Not Occupied	—	—
2	0.5	BN / GY	6995	Right Rear Park Lamp Control	II	—
3	0.5	GY / YE	7542	Left Rear Stop Lamp Control	II	—
4	0.5	BU / VT	1335	Right Rear Turn Signal Lamp Control 2	II	—
5	—	—	—	Not Occupied	—	—
6	0.5	BN / BU	6993	Left Rear Park Lamp Control	II	—
7	0.5	WH / YE	7541	Right Rear Stop Lamp Control	II	—
8	0.5	BU / WH	1334	Left Rear Turn Signal Lamp Control 2	II	—
9	—	—	—	Not Occupied	—	—
10	0.35	GN / WH	2270	Rear Window Washer Relay Control	I	—
11	0.35	GY	1715	Windshield Wiper Switch High Signal	I	—
13	0.35	GN / BN	319	Right Rear Trailer Stop/Turn Lamp Control	I	—
14 - 17	—	—	—	Not Occupied	—	—
18	0.35	VT / WH	1139	Run/Crank Ignition 1 Voltage	I	—
20 - 24	—	—	—	Not Occupied	—	—
25	0.35	BN / YE	820	Center High Mounted Stop Lamp Supply Voltage	I	—
26 - 27	—	—	—	Not Occupied	—	—
28	0.35	GN / YE	6846	Rear License Plate Lamp Control	I	—
29	0.35	YE / BU	318	Left Rear Trailer Stop/Turn Lamp Control	I	—

## M4P Programmable Air Inlet Valve Actuator

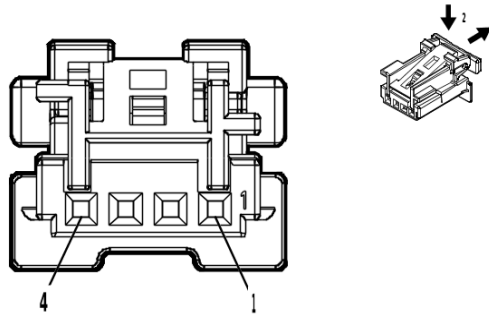

4997407

### Connector Part Information

Harness Type: Air Conditioning Wiring Harness  
 OEM Connector: 2294218-1  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 4-Way F 0.64 Micro-Quadlock Series( BK)


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

### M4P Programmable Air Inlet Valve Actuator

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BK	2050	Ground	I	—
2	—	GN / VT	2852	Body Control Module LIN Bus 6	I	—
3	—	BK	2050	Ground	I	—
4	—	WH / YE	4634	HVAC Remote Enable Signal	I	—

**M6PL Programmable Temperature Valve Actuator - Left**

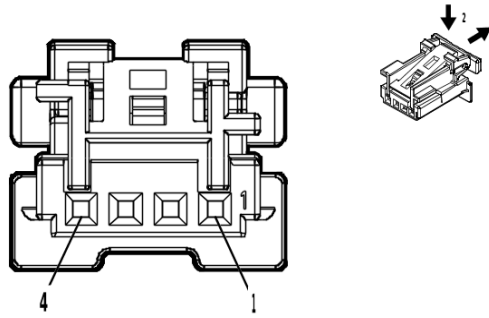

4997407

**Connector Part Information**

Harness Type: Air Conditioning Wiring Harness  
 OEM Connector: 2294218-1  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 4-Way F 0.64 Micro-Quadlock Series( BK)

**Terminal Part Information**


Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**M6PL Programmable Temperature Valve Actuator - Left**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BK	2050	Ground	I	—
2	—	GN / VT	2852	Body Control Module LIN Bus 6	I	—
3	—	BK	2050	Ground	I	—
4	—	WH / YE	4634	HVAC Remote Enable Signal	I	—



**M6PR Programmable Temperature Valve Actuator - Right**

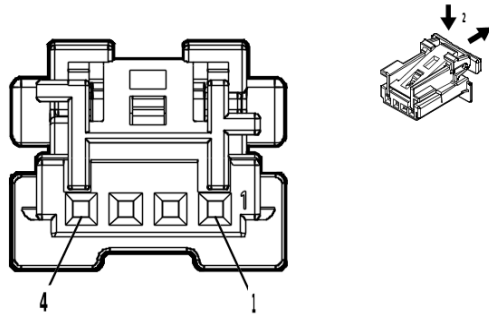

4997407

**Connector Part Information**

Harness Type: Air Conditioning Wiring Harness  
 OEM Connector: 2294218-1  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 4-Way F 0.64 Micro-Quadlock Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**M6PR Programmable Temperature Valve Actuator - Right**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BK	2050	Ground	I	—
2	—	GN / VT	2852	Body Control Module LIN Bus 6	I	—
3	—	—	—	Not Occupied	—	—
4	—	WH / YE	4634	HVAC Remote Enable Signal	I	—

**M8 Blower Motor**

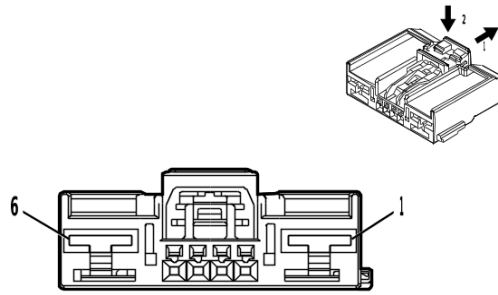

4650258

**Connector Part Information**

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: 7289-7139-30  
 Service Connector: 19356432  
 Description: 6-Way F 0.64, 6.3 Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-42 (RD)	No Tool Required
II	Not required	J-35616-64B (L-BU)	No Tool Required

**M8 Blower Motor**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	5	RD / WH	2040	Battery Positive Voltage	I	—
2	0.35	BU / GY	754	Blower Motor Speed Control	II	—
3	0.35	GN / BU	761	Blower Speed Feedback Signal	II	—
4 - 5	—	—	—	Not Occupied	—	—
6	2.5	BK	4250	Ground	I	—

**M26 Front Drive Axle Actuator (NP0 / NQH)**

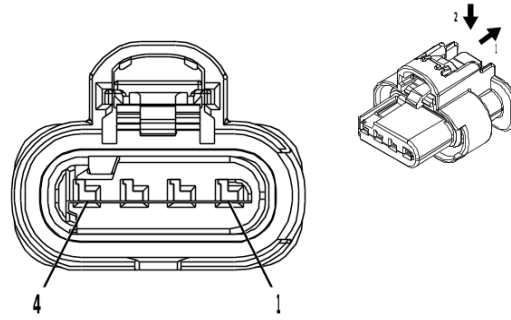

4210809

**Connector Part Information**

Harness Type: Power Steering Wiring Harness  
 OEM Connector: 1-2296696-1  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 4-Way F 1.2 MCON-CB Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required

**M26 Front Drive Axle Actuator (NP0 / NQH)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GN	8016	Secondary Axle Motor Control	I	—
2	0.5	GY / BK	1570	Front Axle Actuator Control	I	—
3	0.5	YE / WH	1695	4WD Locked Range Indicator Control	I	—
4	0.5	BK	2250	Ground	I	—

**M37P Programmable Mode Valve Actuator**

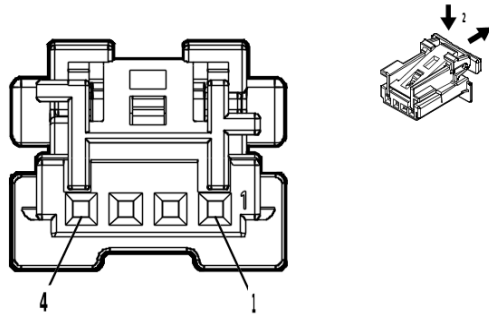

4997407

**Connector Part Information**

Harness Type: Air Conditioning Wiring Harness  
 OEM Connector: 2294218-1  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 4-Way F 0.64 Micro-Quadlock Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**M37P Programmable Mode Valve Actuator**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BK	2050	Ground	I	—
2	—	GN / VT	2852	Body Control Module LIN Bus 6	I	—
3	—	—	—	Not Occupied	—	—
4	—	WH / YE	4634	HVAC Remote Enable Signal	I	—

**M50D Front Seat Tilt Adjuster Actuator - Driver (A45 / A2X)**

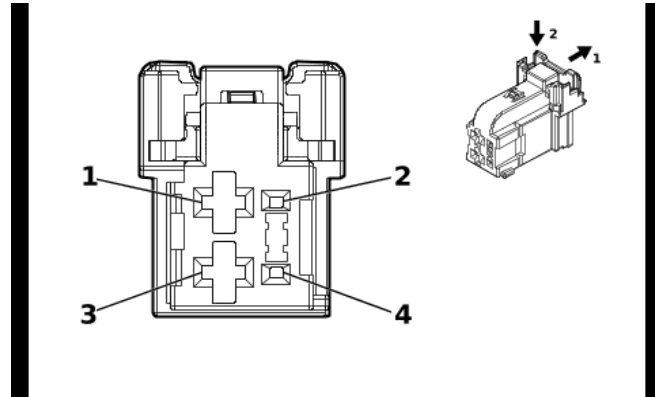

5410027

**Connector Part Information**

Harness Type: Front Seat Wiring Harness - Driver  
 OEM Connector: 2316171-1  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 4-Way F 0.64, 2.8 Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required

**M50D Front Seat Tilt Adjuster Actuator - Driver (A45 / A2X)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	1.5	BU / VT	287	Driver Seat Front Vertical Motor Down Control	I	—
2	—	—	—	Not Occupied	—	—
3	1.5	GN / BN	286	Driver Seat Front Vertical Motor Up Control	I	—
4	—	—	—	Not Occupied	—	—

**M51D Front Seat Adjuster Actuator - Driver (A45 / A2X)**

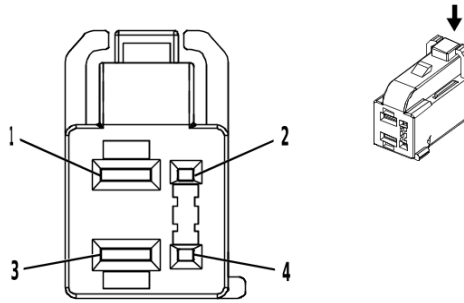

3683652

**Connector Part Information**

Harness Type: Front Seat Wiring Harness - Driver  
 OEM Connector: 13583828  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 4-Way F 0.64, 2.8 Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-4A (PU)	No Tool Required

**M51D Front Seat Adjuster Actuator - Driver (A45 / A2X)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	1.5	GY / GN	284	Driver Seat Horizontal Motor Rearward Control	I	—
2	—	—	—	Not Occupied	—	—
3	1.5	YE / BU	285	Driver Seat Horizontal Motor Forward Control	I	—
4	—	—	—	Not Occupied	—	—

**M53D Front Seat Back Lumbar Motor - Driver (AL9)**

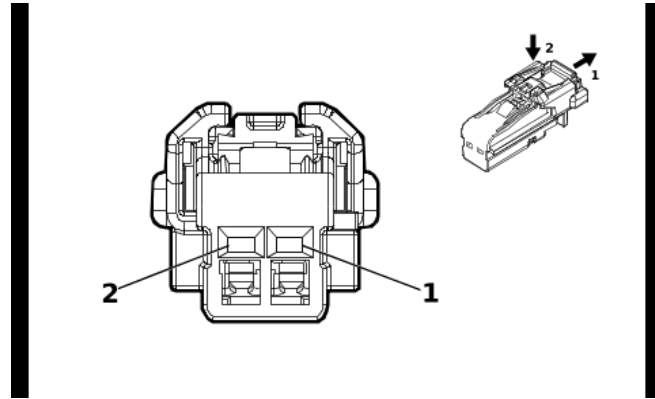

4115691

**Connector Part Information**

Harness Type: Front Seat Wiring Harness - Driver  
 OEM Connector: 6098-8988  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F 1.2 MCON Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

**M53D Front Seat Back Lumbar Motor - Driver (AL9)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BU	611	Driver Seat Lumbar Support Motor Forward Control	I	—
2	0.75	VT	610	Driver Seat Lumbar Support Motor Backward Control	I	—

**M55D Front Seat Vertical Adjuster Actuator - Driver**

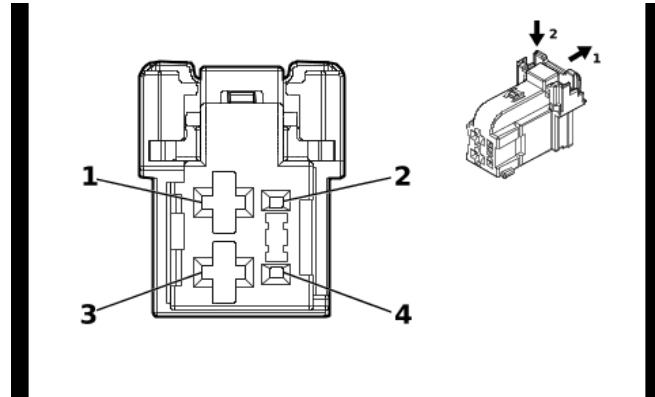

5410027

**Connector Part Information**

Harness Type: Front Seat Wiring Harness - Driver  
 OEM Connector: 2316171-1  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 4-Way F 0.64, 2.8 Series( BK)

**Terminal Part Information**


Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required

**M55D Front Seat Vertical Adjuster Actuator - Driver**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	1.5	GY / BU	283	Driver Seat Rear Vertical Motor Down Control	I	—
2	—	—	—	Not Occupied	—	—
3	1.5	YE	282	Driver Seat Rear Vertical Motor Up Control	I	—
4	—	—	—	Not Occupied	—	—



**M56D Front Seat Recliner Actuator - Driver (A45 / A2X)**

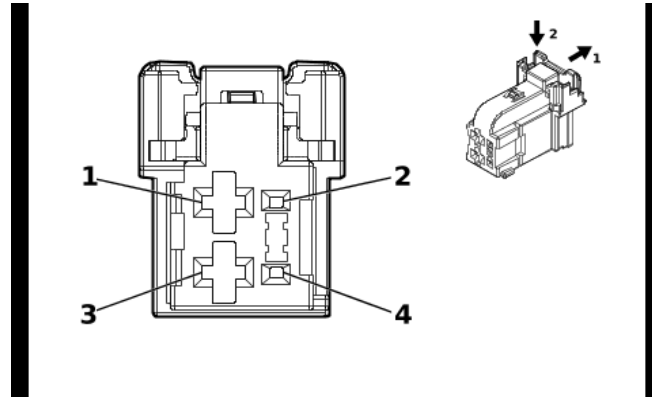

5410027

**Connector Part Information**

Harness Type: Front Seat Wiring Harness - Driver  
 OEM Connector: 2316171-1  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 4-Way F 0.64, 2.8 Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required

**M56D Front Seat Recliner Actuator - Driver (A45 / A2X)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	1.5	GN / YE	276	Driver Seat Recline Motor Forward Control	I	—
2	—	—	—	Not Occupied	—	—
3	1.5	BU / YE	277	Driver Seat Recline Motor Rearward Control	I	—
4	—	—	—	Not Occupied	—	—

**M64 Starter X1**

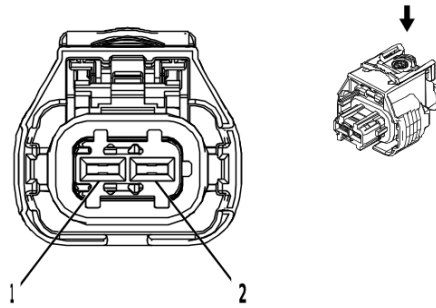

2577394

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 1928405714  
 Service Connector: 13384371  
 Description: 2-Way F 2.8 Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required

**M64 Starter X1**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	YE	6	Starter Solenoid Crank Ignition Voltage	I	—
2	2.5	YE / GN	4358	Starter Pinion Solenoid Voltage	I	—

**M64 Starter X2**

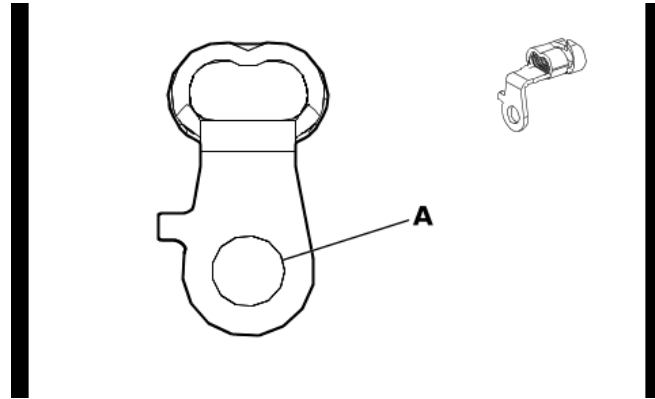

5524606

**Connector Part Information**

Harness Type: Battery Negative Cable  
 OEM Connector: 1133401  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 1-Way Ring Terminal


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**M64 Starter X2**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	—	RD / YE	2	Battery Positive Voltage	I	—

**M73A Front Seat Back Ventilation Blower - Driver (KU9)**

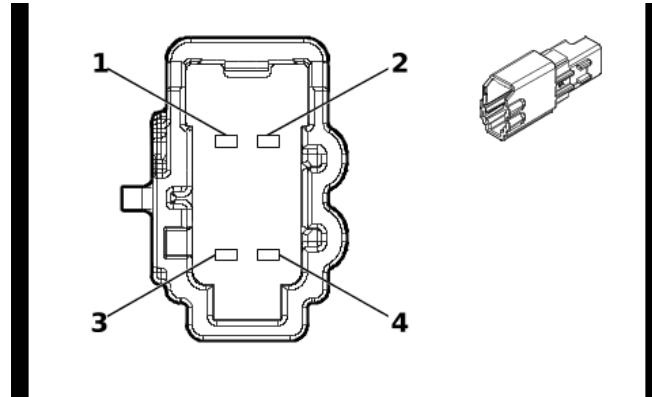

5423974

**Connector Part Information**

Harness Type: Front Seat Wiring Harness - Driver  
 OEM Connector: 6098-9049  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 4-Way M 1.2 MCON Series( GY)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-17 (L-GN)	No Tool Required

**M73A Front Seat Back Ventilation Blower - Driver (KU9)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	VT / GN	839	Run/Crank Ignition 1 Voltage	I	—
2	0.5	GN / VT	5906	Driver Seat Blower Motor Control 1	I	—
3	0.5	BK	3750	Ground	I	—
4	—	—	—	Not Occupied	—	—

**M73B Front Seat Back Ventilation Blower - Passenger (KU9)**

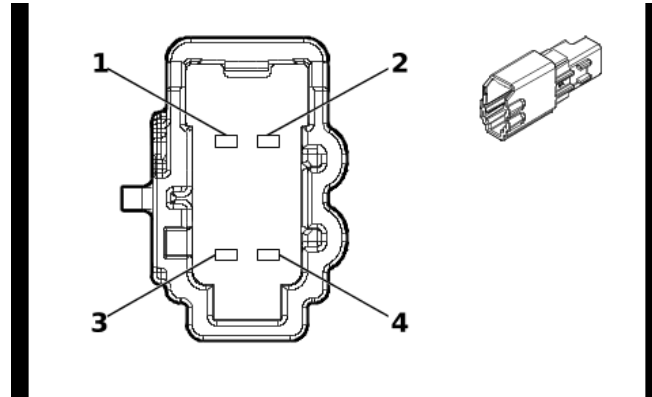

5423974

**Connector Part Information**

Harness Type: Front Seat Wiring Harness - Passenger  
 OEM Connector: 6098-9049  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 4-Way M 1.2 MCON Series( GY)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-17 (L-GN)	No Tool Required

**M73B Front Seat Back Ventilation Blower - Passenger (KU9)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	VT / GN	839	Run/Crank Ignition 1 Voltage	I	—
2	0.5	VT / WH	5908	Passenger Seat Blower Motor Control 1	I	—
3	0.5	BK	4250	Ground	I	—
4	—	—	—	Not Occupied	—	—

**M73D Front Seat Cushion Ventilation Blower - Driver (KU9)**

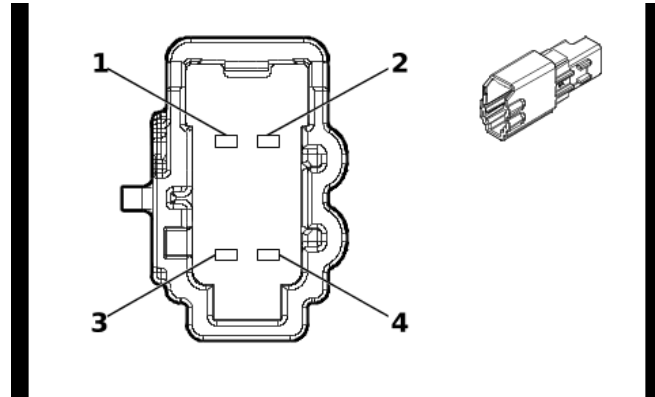

5423974

**Connector Part Information**

Harness Type: Front Seat Wiring Harness - Driver  
 OEM Connector: 6098-9049  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 4-Way M 1.2 MCON Series( GY)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-17 (L-GN)	No Tool Required

**M73D Front Seat Cushion Ventilation Blower - Driver (KU9)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	VT / GN	839	Run/Crank Ignition 1 Voltage	I	—
2	0.5	GN / VT	5906	Driver Seat Blower Motor Control 1	I	—
3	0.5	BK	3750	Ground	I	—
4	—	—	—	Not Occupied	—	—

**M73P Front Seat Cushion Ventilation Blower - Passenger (KU9)**

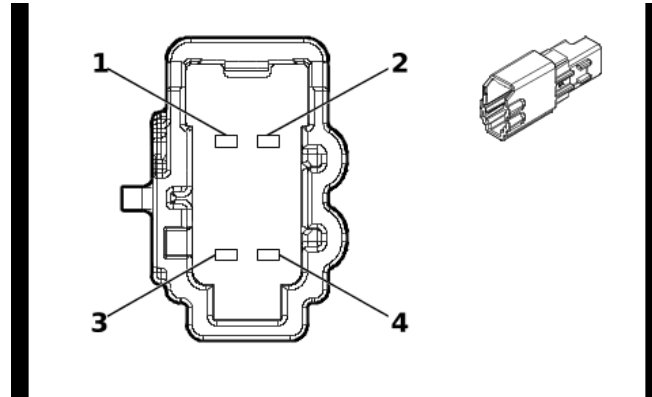

5423974

**Connector Part Information**

Harness Type: Front Seat Wiring Harness - Passenger  
 OEM Connector: 6098-9049  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 4-Way M 1.2 MCON Series( GY)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-17 (L-GN)	No Tool Required

**M73P Front Seat Cushion Ventilation Blower - Passenger (KU9)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	VT / GN	839	Run/Crank Ignition 1 Voltage	I	—
2	0.5	VT / WH	5908	Passenger Seat Blower Motor Control 1	I	—
3	0.5	BK	4250	Ground	I	—
4	—	—	—	Not Occupied	—	—

**M74D Front Side Door Window Regulator Motor - Driver (AXG)**

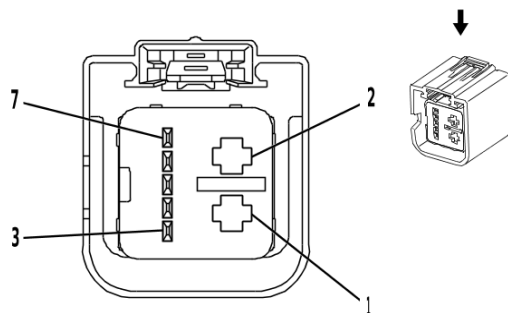

2282932

**Connector Part Information**

Harness Type: Front Side Door Door Wiring Harness - Driver  
 OEM Connector: 1-1732115-1  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 7-Way F 0.64, 2.8 Kaizen Timer Series, Sealed( GY)

**Terminal Part Information**


Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-4A (PU)	No Tool Required
II	Not required	J-35616-64B (L-BU)	No Tool Required

**M74D Front Side Door Window Regulator Motor - Driver (AXG)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	BK	1150	Ground	I	—
2	2.5	RD / GY	3540	Battery Positive Voltage	I	—
3	0.35	GY / GN	2763	Window Switch Left Front Up Signal	II	—
4	0.35	GN / YE	6134	Body Control Module LIN Bus 3	II	—
5	0.35	GN	2766	Power Window Switch Left Front Express Signal	II	—
6	0.35	GY	745	Left Front Door Ajar Switch Signal	II	—
7	0.35	WH / BN	2764	Window Switch Left Front Down Signal	II	—



**M74D Front Side Door Window Regulator Motor - Driver (AEC)**

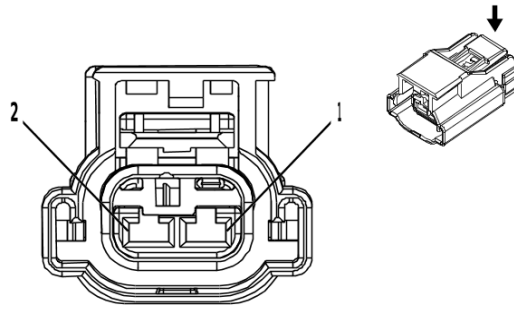

2716333

**Connector Part Information**

Harness Type: Front Side Door Door Wiring Harness - Driver  
 OEM Connector: 13579062  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F 2.8 Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-4A (PU)	No Tool Required
II	Not required	J-35616-64B (L-BU)	No Tool Required

**M74D Front Side Door Window Regulator Motor - Driver (AEC)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	BK	1150	Ground	I	—
2	2.5	RD / GY	3540	Battery Positive Voltage	I	—
3	0.35	GY / GN	2763	Window Switch Left Front Up Signal	II	—
4	0.35	GN / YE	6134	Body Control Module LIN Bus 3	II	—
5	0.35	GN	2766	Power Window Switch Left Front Express Signal	II	—
6	0.35	GY	745	Left Front Door Ajar Switch Signal	II	—
7	0.35	WH / BN	2764	Window Switch Left Front Down Signal	II	—

**M74LR Rear Side Door Window Regulator Motor - Left**

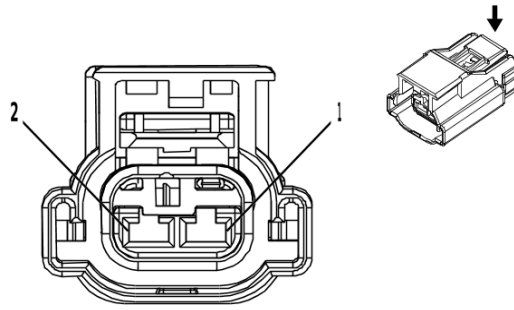

2716333

**Connector Part Information**

Harness Type: Rear Side Door Door Wiring Harness - Left  
 OEM Connector: 54200220N  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F 2.8 Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-4A (PU)	No Tool Required

**M74LR Rear Side Door Window Regulator Motor - Left**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2	BU / VT	668	Left Rear Window Motor Up Control	I	—
2	2	YE / BU	669	Left Rear Window Motor Down Control	I	—

**M74P Front Side Door Window Regulator Motor - Passenger**

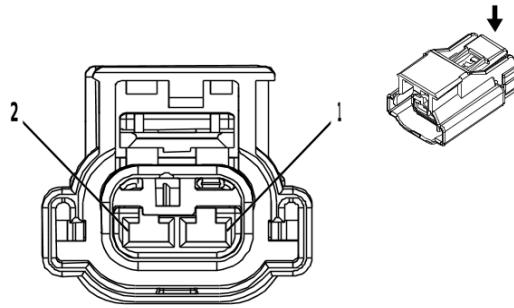

2716333

**Connector Part Information**

Harness Type: Front Side Door Door Wiring Harness - Passenger  
 OEM Connector: 54200220N  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F 2.8 Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-4A (PU)	No Tool Required

**M74P Front Side Door Window Regulator Motor - Passenger**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2	GN / GY	666	Right Front Window Motor Up Control	I	—
2	2	YE / BU	667	Right Front Window Motor Down Control	I	—

**M74RR Rear Side Door Window Regulator Motor - Right**

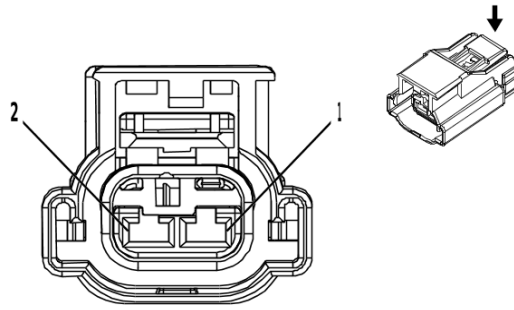

2716333

**Connector Part Information**

Harness Type: Rear Side Door Door Wiring Harness - Right  
 OEM Connector: 54200220N  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F 2.8 Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-4A (PU)	No Tool Required

**M74RR Rear Side Door Window Regulator Motor - Right**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2	BU / GY	670	Right Rear Window Motor Up Control	I	—
2	2	GN / BK	671	Right Rear Window Motor Down Control	I	—

## M75 Windshield Wiper Motor

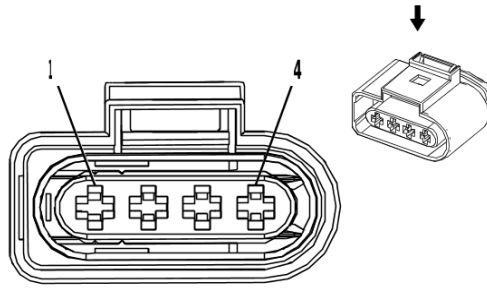

2474722

### Connector Part Information

Harness Type: Body Wiring Harness  
 OEM Connector: 638245-2  
 Service Connector: 85596545  
 Description: 4-Way F Junior Power Timer Series, Sealed( BK)


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-4A (PU)	No Tool Required

### M75 Windshield Wiper Motor

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	BN / GN	196	Windshield Wiper Motor Park Switch Signal	I	—
2	2.5	YE / BN	95	Windshield Wiper Motor Low Speed Control	I	—
3	2.5	BK	150	Ground	I	—
4	2.5	WH	92	Windshield Wiper Motor High Speed Control	I	—

**M96 Active Grille Air Shutter Actuator**

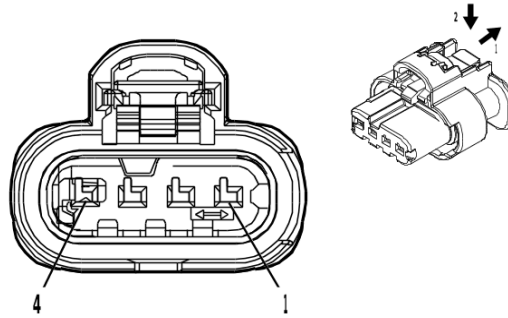

4934614

**Connector Part Information**

Harness Type: Radiator Extension Harness  
 OEM Connector: 13514087  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 4-Way F 1.2 MCON-CB Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**M96 Active Grille Air Shutter Actuator**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	VT / BU	5705	Powertrain Main Relay Control	I	—
2	—	GN / VT	4621	Engine Control Module LIN Bus 1	I	—
3	—	—	—	Not Occupied	—	—
4	—	BK	150	Ground	I	—

## M96B Active Grille Air Shutter Actuator 2

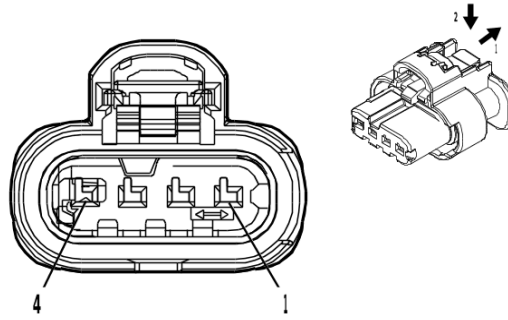

4934614

### Connector Part Information

Harness Type: Chassis Wiring Harness  
 OEM Connector: 1-2296696-2  
 Service Connector: 85519071  
 Description: 4-Way F 1.2 MCON-CB Series, Sealed( BK)


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required

### M96B Active Grille Air Shutter Actuator 2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	VT / BU	5705	Powertrain Main Relay Control	I	—
2	0.5	GN / VT	4621	Engine Control Module LIN Bus 1	I	—
3	0.5	BK	150	Ground	I	—
4	0.5	BK	150	Ground	I	—

**M104L Parking Brake Actuator - Left**

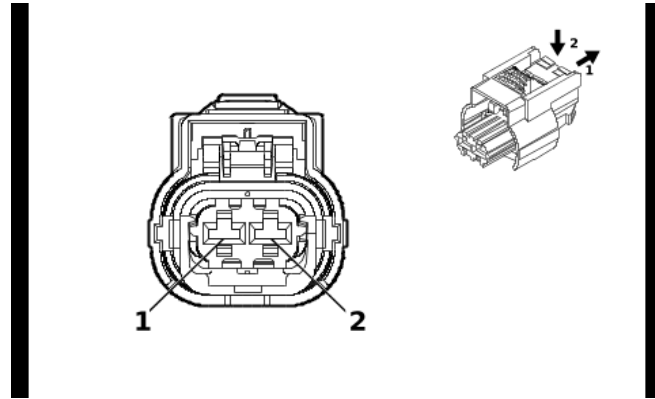

4992524

**Connector Part Information**

Harness Type: Chassis Rear Wiring Harness Extension Harness  
 OEM Connector: 35182447  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F 2.8 MCP Series, Sealed( BK)

**Terminal Part Information**


Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required

**M104L Parking Brake Actuator - Left**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	WH	2001	Left Park Brake Motor Apply Control	I	—
2	2.5	GY / BK	4369	Left Park Brake Motor Low Reference	I	—



## M104R Parking Brake Actuator - Right

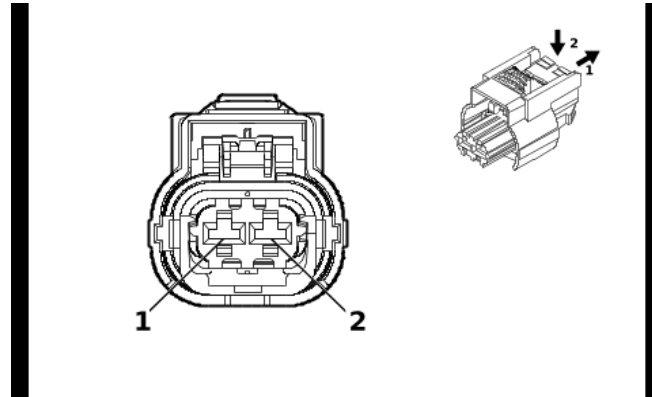

4992524

### Connector Part Information

Harness Type: Chassis Rear Wiring Harness Extension Harness  
 OEM Connector: 35182447  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F 2.8 MCP Series, Sealed( BK)


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required

### M104R Parking Brake Actuator - Right

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	GN / VT	1988	Right Park Brake Motor Apply Control	I	—
2	2.5	GY	4368	Right Park Brake Motor Low Reference	I	—

**M128 Turbocharger Wastegate Actuator**

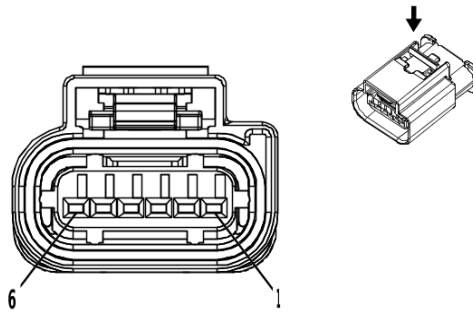

3747579

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 2272975-5  
 Service Connector: 19352911  
 Description: 6-Way F 1.2 MCON Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required

**M128 Turbocharger Wastegate Actuator**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BK / YE	548	Engine Control Sensors Low Reference 1	I	—
2	0.5	WH	2590	Turbocharger Wastegate Motor Feedback Signal	I	—
3	0.5	BU / RD	460	Engine Control Sensors 5 Volt Reference 1	I	—
4	0.75	WH / BU	2592	Turbocharger Wastegate Motor Close Control	I	—
5	0.75	WH / BN	2591	Turbocharger Wastegate Motor Open Control	I	—
6	—	—	—	Not Occupied	—	—

## M129A Intake Camshaft Profile Actuator 1

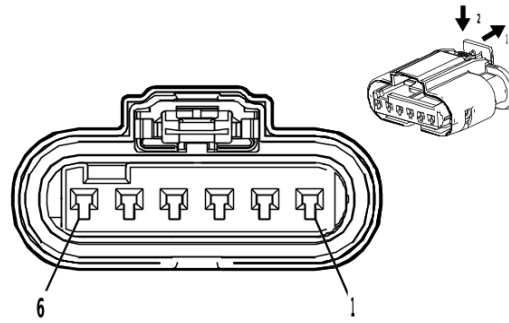

3960142

### Connector Part Information

Harness Type: Engine Wiring Harness  
 OEM Connector: 34900-6219  
 Service Connector: 85005020  
 Description: 6-Way F 1.2 MCON-LL Series, Sealed( BK)


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required

### M129A Intake Camshaft Profile Actuator 1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	VT / GY	3615	Intake Camshaft Profile Actuator 1 Control A	I	—
2	0.5	BU / WH	3589	Intake Camshaft Profile Actuator 1 Position Sensor Signal	I	—
3	0.5	BK / YE	548	Engine Control Sensors Low Reference 1	I	—
4	0.5	BU / RD	460	Engine Control Sensors 5 Volt Reference 1	I	—
5	0.5	VT / BU	5293	Powertrain Main Relay Fused Supply Voltage 4	I	—
6	0.5	GN / BK	3616	Intake Camshaft Profile Actuator 1 Control B	I	—

**M129B Intake Camshaft Profile Actuator 2**

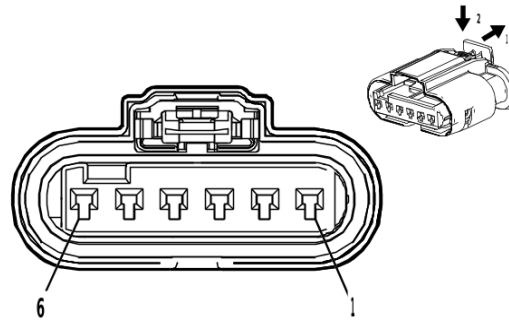

3960142

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 34900-6219  
 Service Connector: 85005020  
 Description: 6-Way F 1.2 MCON-LL Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required

**M129B Intake Camshaft Profile Actuator 2**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GN	3585	Intake Camshaft Profile Actuator 2 Control A	I	—
2	0.5	GN / WH	3592	Intake Camshaft Profile Actuator 2 Position Sensor Signal	I	—
3	0.5	BK / YE	548	Engine Control Sensors Low Reference 1	I	—
4	0.5	BU / RD	460	Engine Control Sensors 5 Volt Reference 1	I	—
5	0.5	VT / BU	5293	Powertrain Main Relay Fused Supply Voltage 4	I	—
6	0.5	BU	3584	Intake Camshaft Profile Actuator 2 Control B	I	—

### M129C Intake Camshaft Profile Actuator 3

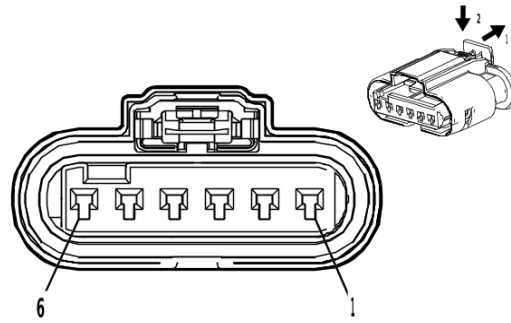

3960142

#### Connector Part Information

Harness Type: Engine Wiring Harness  
 OEM Connector: 34900-6219  
 Service Connector: 85005020  
 Description: 6-Way F 1.2 MCON-LL Series, Sealed( BK)


#### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required

#### M129C Intake Camshaft Profile Actuator 3

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	YE / BU	3587	Intake Camshaft Profile Actuator 3 Control A	I	—
2	0.5	BK / GN	3593	Intake Camshaft Profile Actuator 3 Position Sensor Signal	I	—
3	0.5	BK / YE	548	Engine Control Sensors Low Reference 1	I	—
4	0.5	BU / RD	460	Engine Control Sensors 5 Volt Reference 1	I	—
5	0.5	VT / BU	5293	Powertrain Main Relay Fused Supply Voltage 4	I	—
6	0.5	GY	3586	Intake Camshaft Profile Actuator 3 Control B	I	—

**M129D Intake Camshaft Profile Actuator 4**

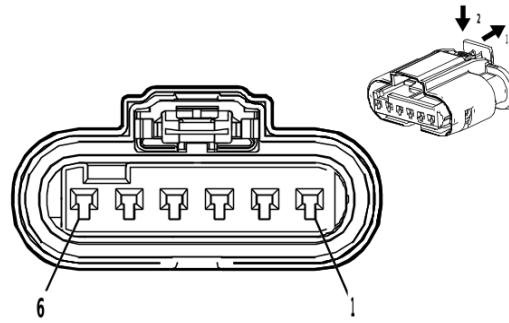

3960142

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 34900-6219  
 Service Connector: 85005020  
 Description: 6-Way F 1.2 MCON-LL Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required

**M129D Intake Camshaft Profile Actuator 4**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GN / YE	1402	Intake Camshaft Profile Actuator 4 Control A	I	—
2	0.5	YE / BN	1702	Intake Camshaft Profile Actuator 4 Position Sensor Signal	I	—
3	0.5	BK / YE	548	Engine Control Sensors Low Reference 1	I	—
4	0.5	BU / RD	460	Engine Control Sensors 5 Volt Reference 1	I	—
5	0.5	VT / BU	5293	Powertrain Main Relay Fused Supply Voltage 4	I	—
6	0.5	GY / YE	1502	Intake Camshaft Profile Actuator 4 Control B	I	—

## M130B Exhaust Camshaft Profile Actuator 2

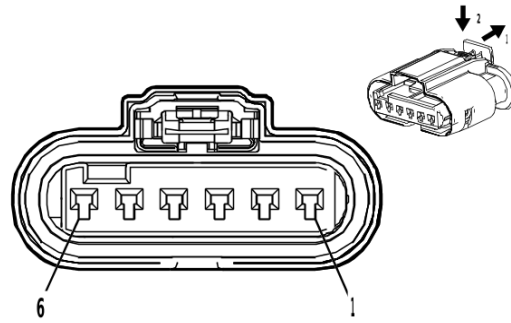

3960142

### Connector Part Information

Harness Type: Engine Wiring Harness  
 OEM Connector: 34900-6219  
 Service Connector: 85005020  
 Description: 6-Way F 1.2 MCON-LL Series, Sealed( BK)


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required

### M130B Exhaust Camshaft Profile Actuator 2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	YE / VT	6265	Exhaust Camshaft Profile Actuator 2 Control B	I	—
2	0.5	GN / BK	6266	Exhaust Camshaft Profile Actuator 2 Position Sensor Signal	I	—
3	0.5	BK / YE	548	Engine Control Sensors Low Reference 1	I	—
4	0.5	BU / RD	460	Engine Control Sensors 5 Volt Reference 1	I	—
5	0.5	VT / BU	5293	Powertrain Main Relay Fused Supply Voltage 4	I	—
6	0.5	VT / BK	6264	Exhaust Camshaft Profile Actuator 2 Control A	I	—

**M130C Exhaust Camshaft Profile Actuator 3**

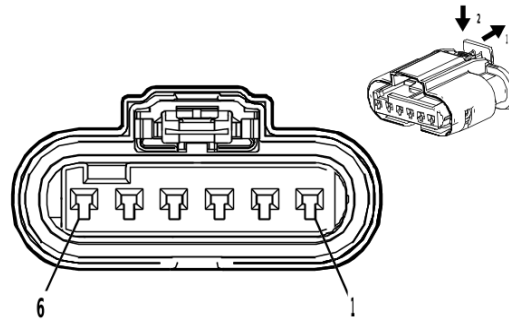

3960142

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 34900-6219  
 Service Connector: 85005020  
 Description: 6-Way F 1.2 MCON-LL Series, Sealed( BK)

**Terminal Part Information**


Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required

**M130C Exhaust Camshaft Profile Actuator 3**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GY / BN	6262	Exhaust Camshaft Profile Actuator 3 Control B	I	—
2	0.5	YE	6263	Exhaust Camshaft Profile Actuator 3 Position Sensor Signal	I	—
3	0.5	BK / YE	548	Engine Control Sensors Low Reference 1	I	—
4	0.5	BU / RD	460	Engine Control Sensors 5 Volt Reference 1	I	—
5	0.5	VT / BU	5293	Powertrain Main Relay Fused Supply Voltage 4	I	—
6	0.5	GN / BN	6261	Exhaust Camshaft Profile Actuator 3 Control A	I	—



**P2 Automatic Transmission Control Indicator**

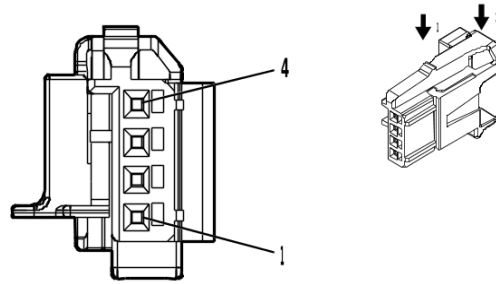

5092142

**Connector Part Information**

Harness Type: Front Floor Console Wiring Harness Extension Harness  
 OEM Connector: 2294399-5  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 4-Way F 0.64 MQS Series


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

**P2 Automatic Transmission Control Indicator**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	GN / VT	4759	Transmission Shift Lever Position Indicator 2 Control	I	—
2	0.35	GN / BU	6133	Body Control Module LIN Bus 2	I	—
3	0.35	BK	2050	Ground	I	—
4	—	—	—	Not Occupied	—	—

P13 Horn

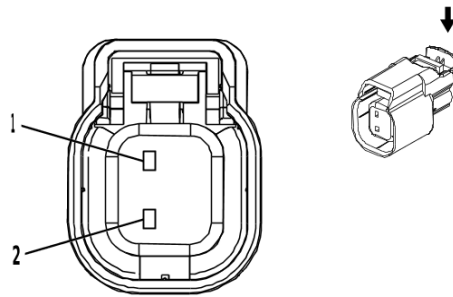

2792100

**Connector Part Information**

Harness Type: Forward Lamp Wiring Harness  
 OEM Connector: 34062-0027  
 Service Connector: 87821959  
 Description: 2-Way F 1.5 Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required

**P13 Horn**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BK	250	Ground	I	—
2	0.75	BN / GY	29	Horn Control	I	—

## P14 Instrument Panel Airbag Arming Status Display

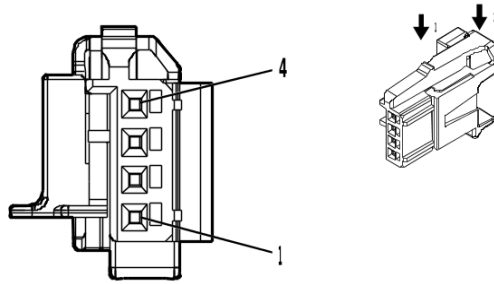

5092142

### Connector Part Information

Harness Type: Roof Wiring Harness  
 OEM Connector: 2294399-5  
 Service Connector: 84766302  
 Description: 4-Way F 0.64 MQS Series


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

### P14 Instrument Panel Airbag Arming Status Display

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	RD / VT	4040	Battery Positive Voltage	I	—
2	0.35	BU	2307	Passenger Air Bag On Indicator Control	I	—
3	0.35	GN	2308	Passenger Air Bag Off Indicator Control	I	—
4	0.35	VT / WH	5234	Passenger Seat Belt Indicator Control	I	AL0 - C9I
	0.35	GN	3118	Roof Rail Air Bag Disable Indicator Control	I	AL0 & C9I

**P16 Instrument Panel Cluster Control Module X1**

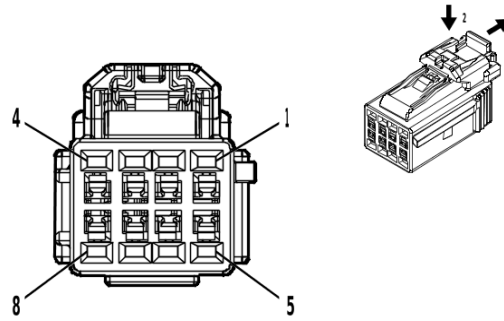

5086387

**Connector Part Information**

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: 6098-8443  
 Service Connector: 84613126  
 Description: 8-Way F 1.2 Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

**P16 Instrument Panel Cluster Control Module X1**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	RD / BN	1440	Battery Positive Voltage	I	—
2 - 7	—	—	—	Not Occupied	—	—
8	0.35	BK	2050	Ground	I	—

**P16 Instrument Panel Cluster Control Module X2**

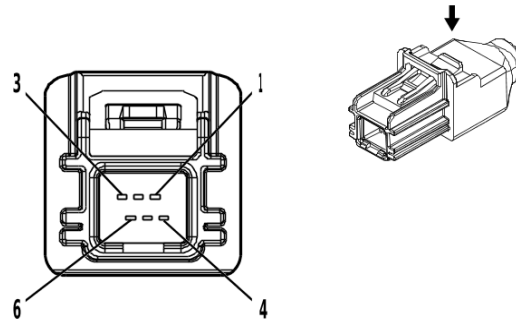

4806625

**Connector Part Information**

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: 13522802  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 6-Way M HSAL-2 Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**P16 Instrument Panel Cluster Control Module X2**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	LVDS	—	(Infotainment) Infotainment Display Signal	I	—

**P19AG Radio Front Side Door Speaker - Left (UQ3)**

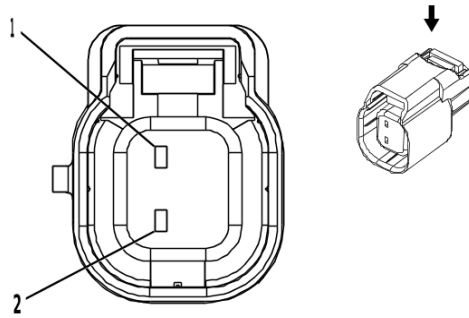

4115616

**Connector Part Information**

Harness Type: Front Side Door Door Wiring Harness - Driver  
 OEM Connector: 34062-0046  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F 1.5 Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required

**P19AG Radio Front Side Door Speaker - Left (UQ3)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	1	BN / BU	118	Left Front Speaker [-] Control 1	I	—
2	1	BU	201	Left Front Speaker 1 [+] Control	I	—

**P19AG Radio Front Side Door Speaker - Left (UQA)**

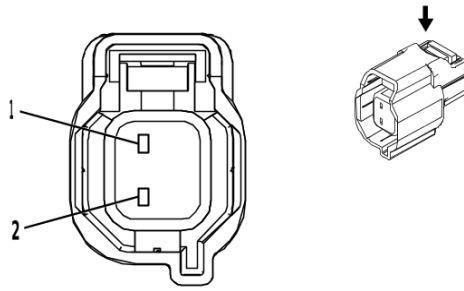

2900396

**Connector Part Information**

Harness Type: Front Side Door Door Wiring Harness - Driver  
 OEM Connector: 34062-0026  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F 1.5 Series, Sealed( L-GY)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required

**P19AG Radio Front Side Door Speaker - Left (UQA)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	1	BN / BU	118	Left Front Speaker [-] Control 1	I	—
2	1	BU	201	Left Front Speaker 1 [+] Control	I	—

**P19AH Radio Front Side Door Speaker - Right (UQ3)**

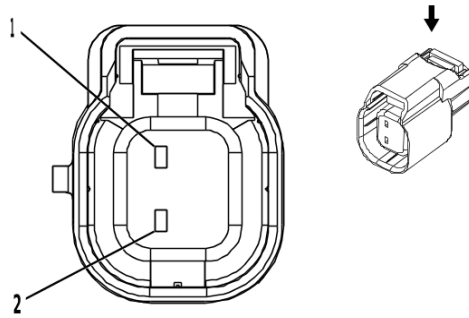

4115616

**Connector Part Information**

Harness Type: Front Side Door Door Wiring Harness - Passenger  
 OEM Connector: 34062-0046  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F 1.5 Series, Sealed( BK)

**Terminal Part Information**


Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required

**P19AH Radio Front Side Door Speaker - Right (UQ3)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	YE / BK	117	Right Front Speaker [-] Control 1	I	—
2	0.75	YE	200	Right Front Speaker 1 [+] Control	I	—



**P19AH Radio Front Side Door Speaker - Right (UQA)**

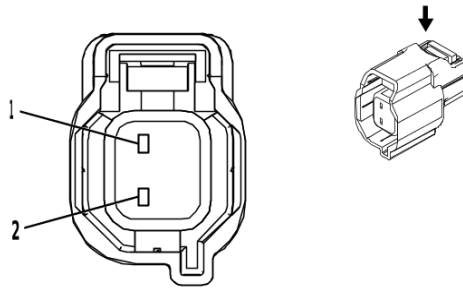

2900396

**Connector Part Information**

Harness Type: Front Side Door Door Wiring Harness - Passenger  
 OEM Connector: 34062-0026  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F 1.5 Series, Sealed( L-GY)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required

**P19AH Radio Front Side Door Speaker - Right (UQA)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	1	YE / BK	117	Right Front Speaker [-] Control 1	I	—
2	1	YE	200	Right Front Speaker 1 [+] Control	I	—

**P19AL Radio Rear Side Door Speaker - Left (UQ3)**

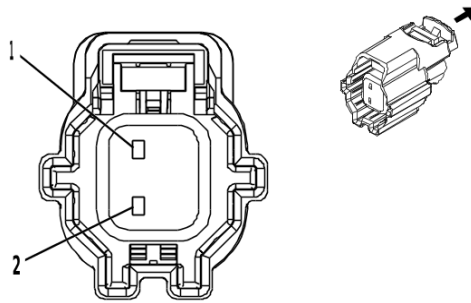

4223204

**Connector Part Information**

Harness Type: Rear Side Door Door Wiring Harness - Left  
 OEM Connector: 34062-0044  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F 1.5 MX Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required

**P19AL Radio Rear Side Door Speaker - Left (UQ3)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	GN / BK	116	Left Rear Speaker [-] Control	I	—
2	0.75	GN	199	Left Rear Speaker [+] Control	I	—

**P19AL Radio Rear Side Door Speaker - Left (UQA)**

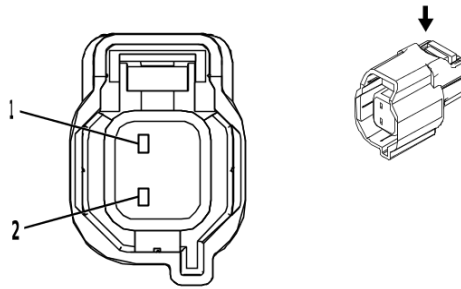

2900396

**Connector Part Information**

Harness Type: Rear Side Door Door Wiring Harness - Left  
 OEM Connector: 34062-0026  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F 1.5 Series, Sealed( L-GY)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required

**P19AL Radio Rear Side Door Speaker - Left (UQA)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GN / BK	116	Left Rear Speaker [-] Control	I	—
2	0.5	GN	199	Left Rear Speaker [+] Control	I	—

**P19AM Radio Rear Side Door Speaker - Right (UQ3)**

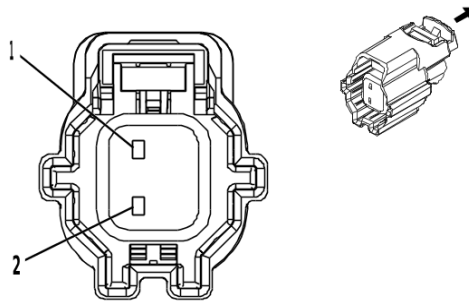

4223204

**Connector Part Information**

Harness Type: Rear Side Door Door Wiring Harness - Right  
 OEM Connector: 34062-0044  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F 1.5 MX Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required

**P19AM Radio Rear Side Door Speaker - Right (UQ3)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BU / BK	115	Right Rear Speaker [-] Control	I	—
2	0.75	WH	46	Right Rear Speaker [+] Control	I	—

**P19AM Radio Rear Side Door Speaker - Right (UQA)**

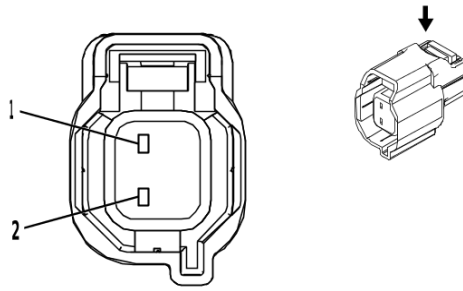

2900396

**Connector Part Information**

Harness Type: Rear Side Door Door Wiring Harness - Right  
 OEM Connector: 34062-0026  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F 1.5 Series, Sealed( L-GY)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required

**P19AM Radio Rear Side Door Speaker - Right (UQA)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BU / BK	115	Right Rear Speaker [-] Control	I	—
2	0.5	WH	46	Right Rear Speaker [+] Control	I	—

**P19B Radio Front Center Speaker (UQA)**

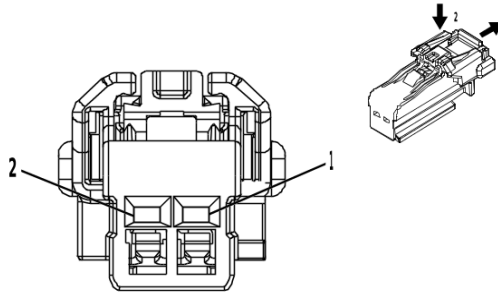

4373379

**Connector Part Information**

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: 6098-8989  
 Service Connector: 19369632  
 Description: 2-Way F 1.2 MCON Series( GY)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

**P19B Radio Front Center Speaker (UQA)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BU / YE	1960	Front Center Speaker [-] Control	I	—
2	0.5	YE / WH	1860	Front Center Speaker [+] Control	I	—

**P19J Radio Front Speaker - Instrument Panel Left (UQ3)**

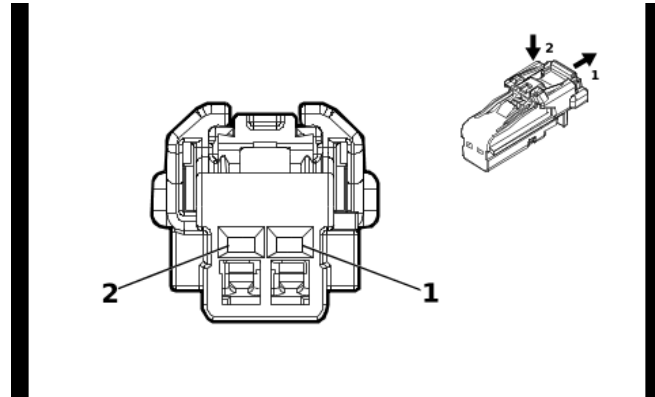

4115691

**Connector Part Information**

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: 6098-8988  
 Service Connector: 87816612  
 Description: 2-Way F 1.2 MCON Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

**P19J Radio Front Speaker - Instrument Panel Left (UQ3)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BN / BU	118	Left Front Speaker [-] Control 1	I	—
2	0.75	BU	201	Left Front Speaker 1 [+] Control	I	—

**P19J Radio Front Speaker - Instrument Panel Left (UQA)**

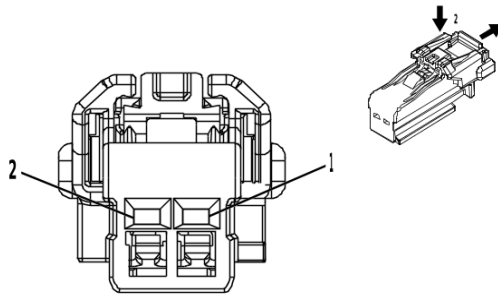

4373379

**Connector Part Information**

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: 6098-8989  
 Service Connector: 19369632  
 Description: 2-Way F 1.2 MCON Series( GY)

**Terminal Part Information**


Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

**P19J Radio Front Speaker - Instrument Panel Left (UQA)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BU / BN	1957	Left Front Midrange Speaker [-] Control	I	—
2	0.5	BU / VT	1857	Left Front Midrange Speaker [+] Control	I	—



**P19W Radio Front Speaker - Instrument Panel Right (UQ3)**

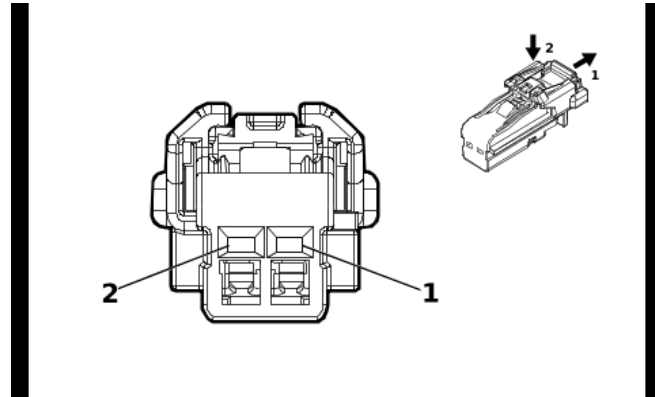

4115691

**Connector Part Information**

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: 6098-8988  
 Service Connector: 87816612  
 Description: 2-Way F 1.2 MCON Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

**P19W Radio Front Speaker - Instrument Panel Right (UQ3)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	YE / BK	117	Right Front Speaker [-] Control 1	I	—
2	0.75	YE	200	Right Front Speaker 1 [+] Control	I	—

**P19W Radio Front Speaker - Instrument Panel Right (UQA)**

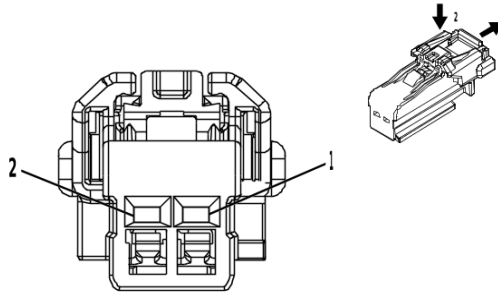

4373379

**Connector Part Information**

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: 6098-8989  
 Service Connector: 19369632  
 Description: 2-Way F 1.2 MCON Series( GY)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

**P19W Radio Front Speaker - Instrument Panel Right (UQA)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN / BK	1953	Right Front Midrange Speaker [-] Control	I	—
2	0.5	WH / YE	1853	Right Front Midrange Speaker [+] Control	I	—

**P43 Forward Collision Alert Display (UIT - UV6)**

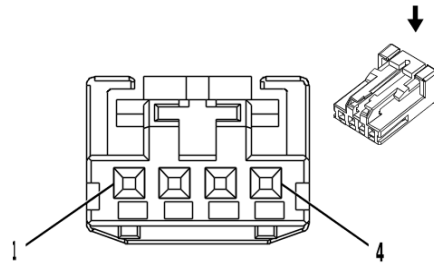

2717162

**Connector Part Information**

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: 1-936119-1  
 Service Connector: 19367524  
 Description: 4-Way F 0.64 Micro-Quadlock Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

**P43 Forward Collision Alert Display (UIT - UV6)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	VT / BK	1639	Run/Crank Ignition 1 Voltage	I	—
2	0.35	GY / YE	3885	Forward Collision Alert LED Control	I	—
3	0.35	GY / BK	4787	Day Night LED Control	I	—
4	0.35	BK / WH	2151	Signal Ground	I	—

**Q2 Air Conditioning Clutch**

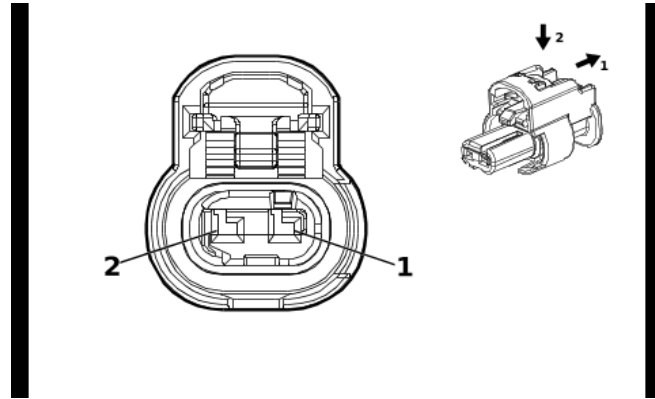

4649903

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 1-2296694-1  
 Service Connector: 85519075  
 Description: 2-Way F 1.2 MCON Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

**Q2 Air Conditioning Clutch**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BK	450	Ground	I	—
2	0.75	BN / GN	59	Air Conditioning Compressor Clutch Control	I	—

**Q6E Camshaft Position Actuator Solenoid Valve - Exhaust**

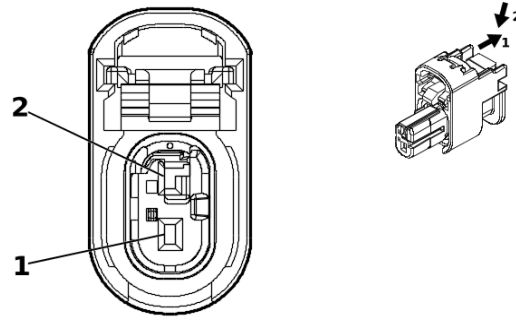

5340268

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 1-2296702-2  
 Service Connector: 19371204  
 Description: 2-Way F 1.2 MCON-CB Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

**Q6E Camshaft Position Actuator Solenoid Valve - Exhaust**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GY / BU	5282	Exhaust Camshaft Position Actuator Solenoid Valve 1	I	—
2	0.5	BK / VT	6754	Camshaft Position Actuator Solenoid Valve X Low Reference	I	—

**Q6F Camshaft Position Actuator Solenoid Valve - Intake**

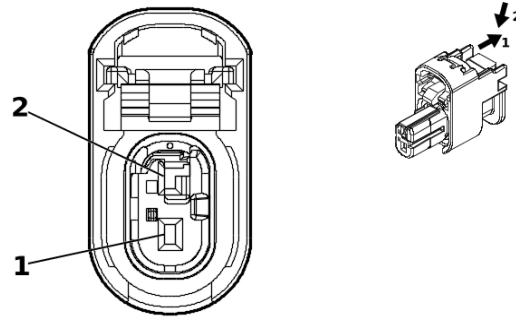

5340268

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 1-2296702-2  
 Service Connector: 19371204  
 Description: 2-Way F 1.2 MCON-CB Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

**Q6F Camshaft Position Actuator Solenoid Valve - Intake**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	VT / BN	5284	Intake Camshaft Position Actuator Solenoid Valve 1	I	—
2	0.5	BK / BN	6753	Camshaft Position Actuator Solenoid Valve W Low Reference	I	—

**Q9F Differential Locking Actuator - Front (G93)**

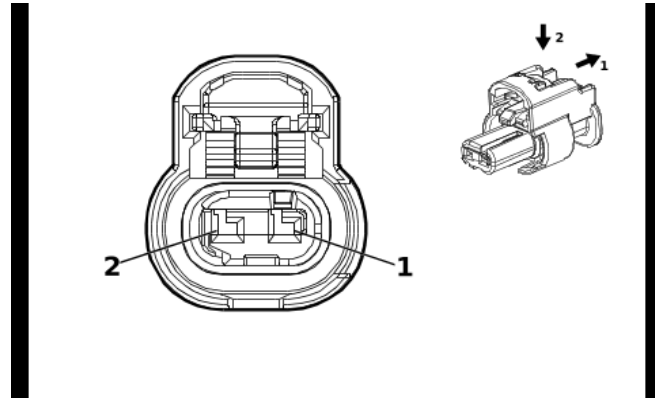

4649903

**Connector Part Information**

Harness Type: Power Steering Wiring Harness  
 OEM Connector: 1-2296694-1  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F 1.2 MCON Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required

**Q9F Differential Locking Actuator - Front (G93)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	VT / WH	7256	Front Differential Lock Actuator Control	I	—
2	0.75	WH / BK	7254	Front Differential Lock Actuator Low Control	I	—

**Q9R Differential Locking Actuator - Rear**

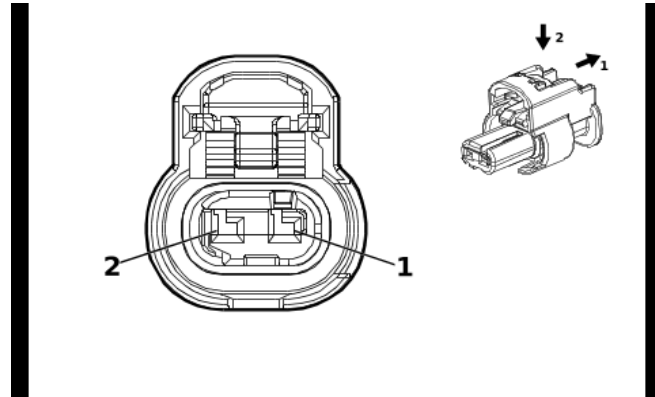

4649903

**Connector Part Information**

Harness Type: Chassis Rear Wiring Harness Extension Harness  
 OEM Connector: 1-2296694-1  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F 1.2 MCON Series, Sealed( BK)

**Terminal Part Information**


Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

**Q9R Differential Locking Actuator - Rear**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	VT / BN	7258	Rear Differential Lock Actuator Control	I	—
2	0.75	GY / BK	7253	Rear Differential Lock Actuator Low Control	I	—



## Q12 Evaporative Emission Canister Purge Solenoid Valve

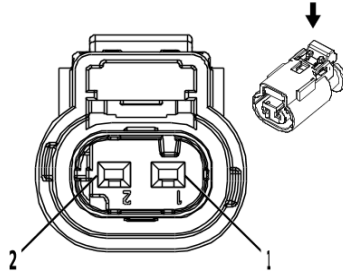

2717066

### Connector Part Information

Harness Type: Engine Wiring Harness  
 OEM Connector: 10010337  
 Service Connector: 13587326  
 Description: 2-Way F 1.2 Multilock Series, Sealed( BK)


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

### Q12 Evaporative Emission Canister Purge Solenoid Valve

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	VT / BU	5293	Powertrain Main Relay Fused Supply Voltage 4	I	—
2	0.5	GN / BU	428	EVAP Canister Purge Solenoid Control	I	—

**Q13 Evaporative Emission Canister Vent Solenoid Valve**

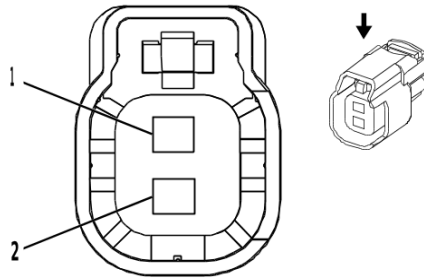

2422378

**Connector Part Information**

Harness Type: Chassis Wiring Harness  
 OEM Connector: 34062-0028  
 Service Connector: 13579002  
 Description: 2-Way F 1.5 Series, Sealed( BK)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required

**Q13 Evaporative Emission Canister Vent Solenoid Valve**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH	1310	EVAP Vent Solenoid Valve Control	I	—
2	0.5	RD / WH	4140	Battery Positive Voltage	I	—

## Q17A Fuel Injector 1

### Connector Part Information

Harness Type: Fuel Injector Wiring Harness  
 OEM Connector: 34751-1002  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way

### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

### Q17A Fuel Injector 1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BN	4801	Direct Fuel Injector High Voltage Control Cylinder 1	I	—
2	—	BN / WH	4901	Direct Fuel Injector High Voltage Supply Cylinder 1	I	—

## Q17B Fuel Injector 2

### Connector Part Information

Harness Type: Fuel Injector Wiring Harness  
 OEM Connector: 34751-1002  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way

### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

### Q17B Fuel Injector 2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BU	4802	Direct Fuel Injector High Voltage Control Cylinder 2	I	—
2	—	BU / GY	4902	Direct Fuel Injector High Voltage Supply Cylinder 2	I	—

## Q17C Fuel Injector 3

### Connector Part Information

Harness Type: Fuel Injector Wiring Harness  
 OEM Connector: 34751-1002  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way

### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

### Q17C Fuel Injector 3

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	GN	4803	Direct Fuel Injector High Voltage Control Cylinder 3	I	—
2	—	GN / GY	4903	Direct Fuel Injector High Voltage Supply Cylinder 3	I	—

**Q17D Fuel Injector 4**

**Connector Part Information**

Harness Type: Fuel Injector Wiring Harness  
 OEM Connector: 34751-1002  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**Q17D Fuel Injector 4**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	GY / BU	4804	Direct Fuel Injector High Voltage Control Cylinder 4	I	—
2	—	BU / WH	4904	Direct Fuel Injector High Voltage Supply Cylinder 4	I	—

## Q38 Throttle Body

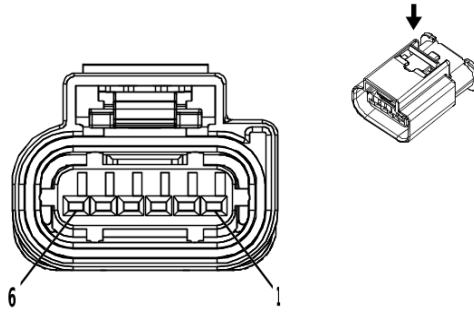

3747579

### Connector Part Information

Harness Type: Engine Wiring Harness  
 OEM Connector: 2272975-5  
 Service Connector: 19352911  
 Description: 6-Way F 1.2 MCON Series, Sealed( BK)


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required

### Q38 Throttle Body

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	YE	581	Throttle Actuator Open Control	I	—
2	0.5	BN / WH	582	Throttle Actuator Close Control	I	—
3	0.5	BU / WH	3630	Throttle Position Sensor SENT 1 Signal	I	—
4	0.5	BK / BN	2752	Throttle Position Sensor Low Reference	I	—
5	0.5	BN / RD	2701	Throttle Position Sensor 5V Reference	I	—
6	—	—	—	Not Occupied	—	—

**Q40 Turbocharger Bypass Valve Solenoid**

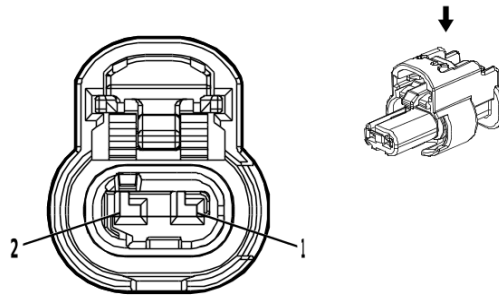

4690744

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 1-2296694-3  
 Service Connector: 19366871  
 Description: 2-Way F 1.2 MCON Series, Sealed( BK)

**Terminal Part Information**


Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

**Q40 Turbocharger Bypass Valve Solenoid**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	VT / BU	5293	Powertrain Main Relay Fused Supply Voltage 4	I	—
2	0.5	GN	3060	Turbocharger Bypass Solenoid Valve Control Bank 1	I	—



**Q44 Engine Oil Pressure Control Solenoid Valve**

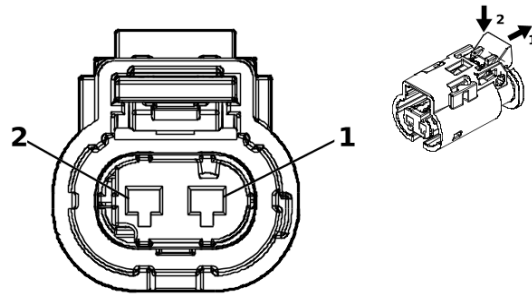

5245486

**Connector Part Information**

Harness Type: Engine Oil Pressure Control Solenoid Valve Jumper Harness  
 OEM Connector: 13522570  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way M 1.2 MLK Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**Q44 Engine Oil Pressure Control Solenoid Valve**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	YE / BN	106	Oil Pump Motor Control	I	—
2	—	BU	179	Engine Oil Pump Control	I	—

**Q46 Air Conditioning Compressor Solenoid Valve**

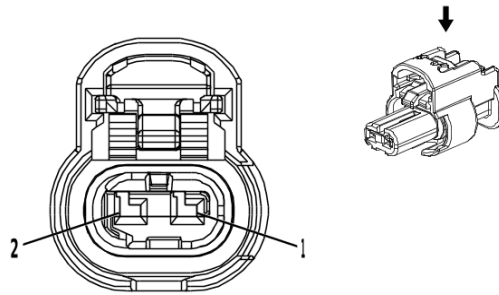

4335931

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 1-2296694-2  
 Service Connector: 19366843  
 Description: 2-Way F 1.2 MCON Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required

**Q46 Air Conditioning Compressor Solenoid Valve**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BU / YE	7574	Air Conditioning Compressor Solenoid Valve Control	I	—
2	0.5	BU / BN	7573	Air Conditioning Compressor Solenoid Valve Control	I	—

## Q74 Engine Coolant Bypass Valve

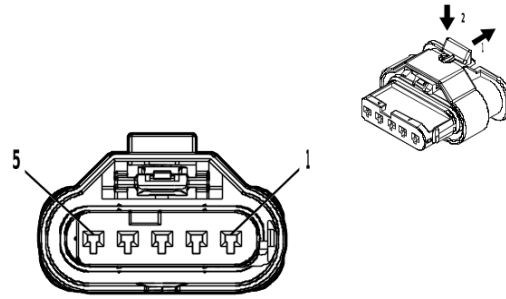

4994456

### Connector Part Information

Harness Type: Engine Wiring Harness  
 OEM Connector: 2-2236898-5  
 Service Connector: 19371191  
 Description: 5-Way F 1.2 MCON-LL Series, Sealed( NA)

### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required

### Q74 Engine Coolant Bypass Valve

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BU	2976	Coolant Diverter Valve Actuator Control Open	I	—
2	0.5	BU / BN	2977	Coolant Diverter Valve Actuator Control Close	I	—
3	0.5	WH / RD	480	Engine Control Vehicle Sensors 5 Volt Reference 1	I	—
4	0.5	BU / GY	2978	Coolant Diverter Valve Position Signal	I	—
5	0.5	BK / GN	580	Engine Control Sensors Low Reference 2	I	—

**Q77A Transmission Control Solenoid Valve 1**

**Connector Part Information**

Harness Type: Automatic Transmission Wiring Harness  
 OEM Connector: 13543894  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**Q77A Transmission Control Solenoid Valve 1**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BN	6400	Clutch Solenoid Valve A Control	I	—
2	—	GY / BN	6388	Transmission High Side Driver 2 Control	I	—

## Q77B Transmission Control Solenoid Valve 2

### Connector Part Information

Harness Type: Automatic Transmission Wiring Harness  
 OEM Connector: 13543894  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way

### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

### Q77B Transmission Control Solenoid Valve 2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BU	6401	Clutch Solenoid Valve B Control	I	—
2	—	GY / BN	6388	Transmission High Side Driver 2 Control	I	—

**Q77C Transmission Control Solenoid Valve 3**

**Connector Part Information**

Harness Type: Automatic Transmission Wiring Harness  
 OEM Connector: 13543894  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**Q77C Transmission Control Solenoid Valve 3**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	GY	6402	Clutch Solenoid Valve C Control	I	—
2	—	GY / BN	6388	Transmission High Side Driver 2 Control	I	—

## Q77D Transmission Control Solenoid Valve 4

### Connector Part Information

Harness Type: Automatic Transmission Wiring Harness  
 OEM Connector: 13543894  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way

### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

### Q77D Transmission Control Solenoid Valve 4

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	WH	4508	Transmission Clutch G Control	I	—
2	—	GN / GY	6387	Transmission High Side Driver 1 Control	I	—

**Q77E Transmission Control Solenoid Valve 5**

**Connector Part Information**

Harness Type: Automatic Transmission Wiring Harness  
 OEM Connector: 13543894  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 3-Way

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**Q77E Transmission Control Solenoid Valve 5**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	WH / BU	4507	Transmission Clutch H Control	I	—
2	—	GN / GY	6387	Transmission High Side Driver 1 Control	I	—
7	—	WH / BU	4507	Transmission Clutch H Control	I	—



## Q77F Transmission Control Solenoid Valve 6

### Connector Part Information

Harness Type: Automatic Transmission Wiring Harness  
 OEM Connector: 13543894  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way

### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

### Q77F Transmission Control Solenoid Valve 6

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	GN / WH	1530	Transmission Line Pressure Control Solenoid Valve Control	I	—
2	—	GY / BN	6388	Transmission High Side Driver 2 Control	I	—

**Q77G Transmission Control Solenoid Valve 7**

**Connector Part Information**

Harness Type: Automatic Transmission Wiring Harness  
 OEM Connector: 13543894  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**Q77G Transmission Control Solenoid Valve 7**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	VT / WH	422	Torque Converter Clutch Solenoid Valve Control	I	—
2	—	GY / BN	6388	Transmission High Side Driver 2 Control	I	—

## Q77H Transmission Control Solenoid Valve 8

### Connector Part Information

Harness Type: Automatic Transmission Wiring Harness  
 OEM Connector: 13584267  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way

### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

### Q77H Transmission Control Solenoid Valve 8

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	GN / WH	6380	Torque Converter Clutch Enable Solenoid Valve A Control	I	—
	—	GN / GY	6387	Transmission High Side Driver 1 Control	I	—
2	—	GN / WH	6380	Torque Converter Clutch Enable Solenoid Valve A Control	I	—

**Q77J Transmission Control Solenoid Valve 9**

**Connector Part Information**

Harness Type: Automatic Transmission Wiring Harness  
 OEM Connector: 13584267  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**Q77J Transmission Control Solenoid Valve 9**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	GY / BN	6388	Transmission High Side Driver 2 Control	I	—
2	—	YE / BN	6210	Torque Converter Clutch Enable Solenoid Valve B Control	I	—

**Q97B Engine Coolant Flow Control Valve - Block**

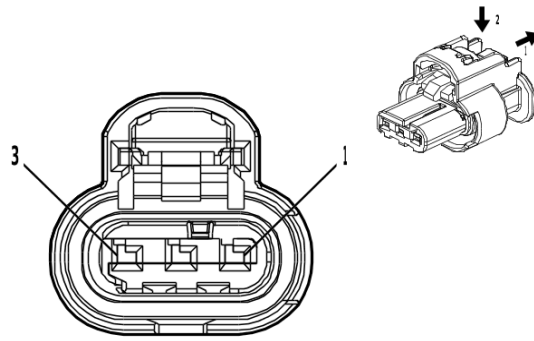

4778903

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 1-2296695-2  
 Service Connector: 86792095  
 Description: 3-Way F 1.2 MCON-CB Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

**Q97B Engine Coolant Flow Control Valve - Block**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GN / BN	2732	Engine Control Module LIN Bus 4	I	—
2	0.5	BK	550	Ground	I	—
3	0.5	VT / BU	5294	Powertrain Main Relay Fused Supply Voltage 5	I	—

**R6A Terminating Resistor - High Speed Bus (A45)**

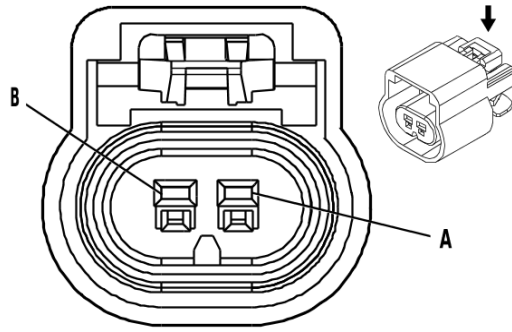

523630

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 19153731  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F 150 GT Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**R6A Terminating Resistor - High Speed Bus (A45)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	—	BU / VT	4101	AUTOSAR CAN Bus [+] 4 Serial Data	I	—
B	—	WH	4100	AUTOSAR CAN Bus [-] 4 Serial Data	I	—

**S2 Automatic Transmission Manual Shift Shaft Position Switch**

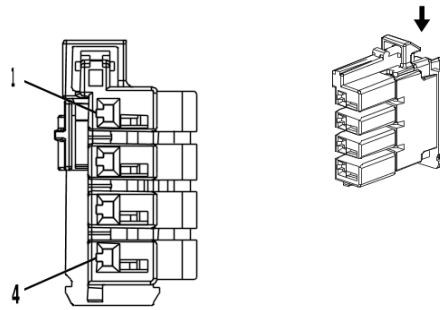

4364148

**Connector Part Information**

Harness Type: Automatic Transmission Wiring Harness  
 OEM Connector: 2289524-1  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 4-Way F 1.2 MCON Series( BN)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**S2 Automatic Transmission Manual Shift Shaft Position Switch**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	GN / YE	3337	Transmission Internal Mode Switch Mode Control Y	I	—
2	—	WH / RD	480	Engine Control Vehicle Sensors 5 Volt Reference 1	I	—
3	—	BK / GY	626	Engine Control Vehicle Sensors Low Reference 1	I	—
4	—	BU / WH	3338	Transmission Internal Mode Switch Mode Control X	I	—

**S3 Automatic Transmission Control**

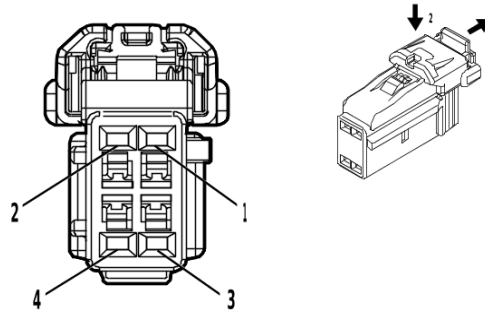

4872683

**Connector Part Information**

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: 6098-8435  
 Service Connector: 19369633  
 Description: 4-Way F 1.2 Series( BK)

**Terminal Part Information**


Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

**S3 Automatic Transmission Control**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	VT / BK	7553	Park Lock Solenoid Actuator Control	I	—
2	0.35	WH / VT	5905	Key Capture/Column Lock Shift Position Signal	I	—
3	0.35	GN / BU	3738	Tap Up/Tap Down Switch Signal 2	I	—
4	0.5	BK	2050	Ground	I	—



**S13D Door Lock Switch - Driver**

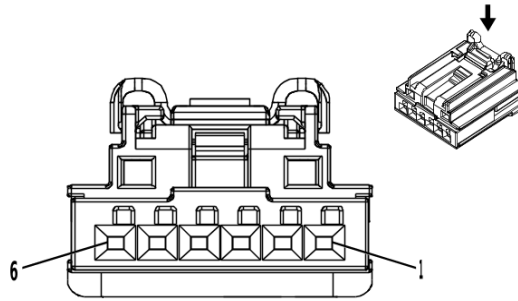

4145138

**Connector Part Information**

Harness Type: Front Side Door Door Wiring Harness - Driver  
 OEM Connector: 2035363-2  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 6-Way F 0.64 Generation Y Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

**S13D Door Lock Switch - Driver**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	BN / GY	4784	Left Front Door LED Backlight Dimming Control	I	—
2	0.35	VT / YE	4244	Left Front Door Lock Indicator Control	I	—
3	0.35	BN / YE	2771	Left Front Door Lock Switch Lock Signal	I	—
4	0.35	BN / WH	2772	Left Front Door Lock Switch Unlock Signal	I	—
5	0.35	BK	1150	Ground	I	—
6	—	—	—	Not Occupied	—	—

**S13P Door Lock Switch - Passenger**

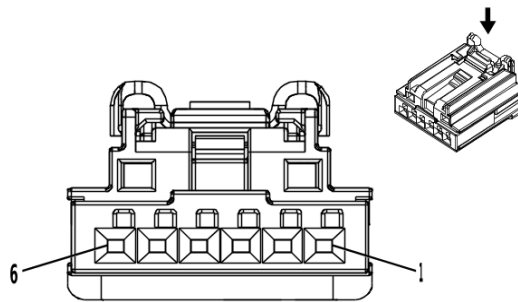

4145138

**Connector Part Information**

Harness Type: Front Side Door Door Wiring Harness - Passenger  
 OEM Connector: 2035363-2  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 6-Way F 0.64 Generation Y Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

**S13P Door Lock Switch - Passenger**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	GY / VT	4638	LED Backlight Dimming Control Right Front Door	I	—
2	0.35	YE / BU	4245	Right Front Door Lock Indicator Control	I	—
3	0.35	YE / VT	2773	Right Front Door Lock Switch Lock Control	I	—
4	0.35	BN / VT	2774	Right Front Door Lock Switch Unlock Control	I	—
5	0.35	BK	3450	Ground	I	—
6	—	—	—	Not Occupied	—	—

## S26 Hazard Warning Switch

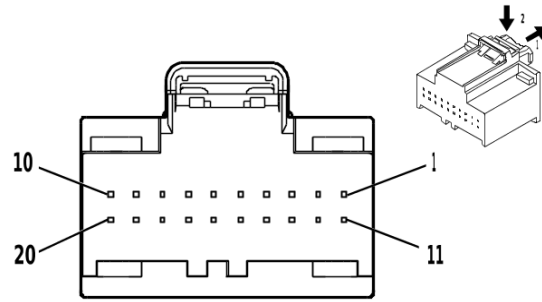

5109511

### Connector Part Information

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: 31410-0208  
 Service Connector: 13525993  
 Description: 20-Way F 0.64 Series( GN)

### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	13584547	J-35616-64B (L-BU)	J-38125-215A

### S26 Hazard Warning Switch

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	BK / WH	2151	Signal Ground	I	—
2	0.35	YE	6817	LED Backlight Dimming Control 1	I	—
3	0.35	GN / WH	111	Hazard Warning Switch Signal	I	—
4	0.35	WH	6816	Indicator Dimming Control	I	—
5	0.35	GN	1110	Stop/Start Indicator Control	I	—
6	0.35	BU	1111	Stop/Start Switch Signal	I	—
7	0.35	WH	3152	Lane Departure Warning Indicator Control	I	—
8	0.35	GY / WH	3153	Lane Departure Warning Disable Switch Signal	I	—
9	0.35	BU / YE	7176	All Windows Open Switch Signal	I	—
10	—	—	—	Not Occupied	—	—
11	0.5	YE / GN	7122	Axle Differential Lock Switch Signal	I	—
12	0.5	YE	7115	Rear Axle Differential Lock Indicator Control	I	—
13	0.5	VT / GY	7117	Front Axle Differential Lock Indicator Control	I	—
14	—	—	—	Not Occupied	—	—
15	0.35	BU / WH	3119	Roof Rail Air Bag Disable Switch Signal	I	—
16	0.35	BN / WH	3895	Roof Rail Air Bag Disable Switch Low Reference	I	—
17	—	—	—	Not Occupied	—	—
18	0.5	BU / WH	10716	Upfitter Accessory Relay 1 Coil Control	I	—
19	0.35	GY	4989	Driver Mode 2 Switch Signal	I	—
20	—	—	—	Not Occupied	—	—

**S33 Steering Wheel Horn Contact**

**Connector Part Information**

Harness Type: Steering Wheel Horn Switch Wiring Harness  
 OEM Connector: 3-170823-8  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**S33 Steering Wheel Horn Contact**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BK / WH	6051	Steering Wheel Ground	I	—
2	—	GN / WH	3287	Horn Switch Signal	I	—

### S36 Dimmer Switch

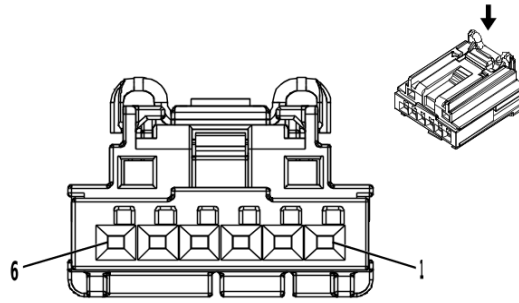

3960313

#### Connector Part Information

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: 2035363-4  
 Service Connector: 19332786  
 Description: 6-Way F 0.64 Generation Y Series( BK)


#### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

#### S36 Dimmer Switch

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	BK / YE	5005	Instrument Panel Lamp Dimmer Switch Low Reference	I	—
2	0.35	YE / GY	44	Instrument Panel Lamp Dimmer Switch Signal	I	—
3	—	—	—	Not Occupied	—	—
4	0.35	BK	2050	Ground	I	—
5	0.35	YE	6817	LED Backlight Dimming Control 1	I	—
6	—	—	—	Not Occupied	—	—

**S38 On/Off Vehicle Switch**

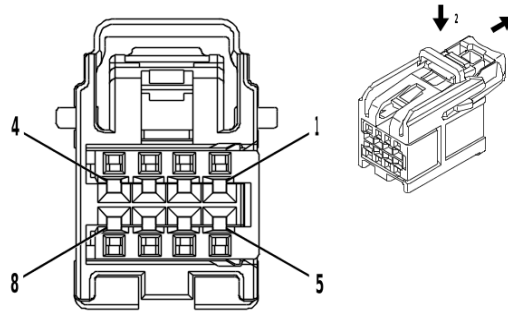

4232228

**Connector Part Information**

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: 15526973  
 Service Connector: 19353873  
 Description: 8-Way F 0.64 OCS Series( GY)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

**S38 On/Off Vehicle Switch**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	BU / BK	5719	Ignition Mode Switch Start LED Signal	I	—
2	0.35	BN / BK	5720	Ignition Mode Switch Accessory LED Signal	I	—
3	0.75	BK / WH	2151	Signal Ground	I	—
4	0.35	BU / GN	5723	Ignition Mode Switch Mode Voltage	I	—
5	0.35	YE	6817	LED Backlight Dimming Control 1	I	—
6	—	—	—	Not Occupied	—	—
7	0.35	BK / GY	3559	Passive Start Switch 2 Low Reference	I	—
8	0.35	GN / BK	3558	Passive Start Switch Signal 2	I	—

**S47D Front Seat Adjuster Memory Switch - Driver (A45)**

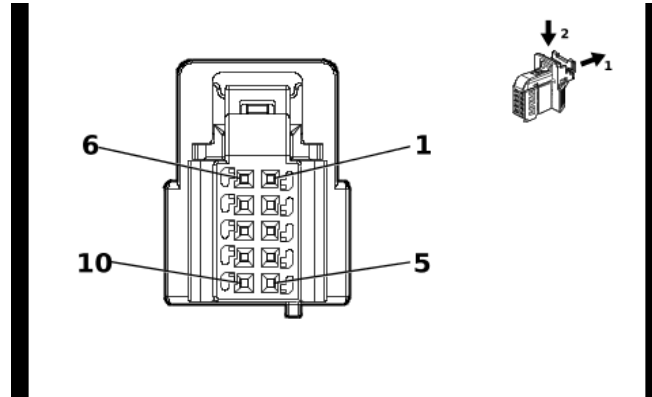

5838155

**Connector Part Information**

Harness Type: Front Side Door Door Wiring Harness - Driver  
 OEM Connector: 2310000-1  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 10-Way F 0.64 MQS Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

**S47D Front Seat Adjuster Memory Switch - Driver (A45)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	BN / GY	4784	Left Front Door LED Backlight Dimming Control	I	—
2	0.35	VT / YE	4244	Left Front Door Lock Indicator Control	I	—
3	0.35	BN / YE	2771	Left Front Door Lock Switch Lock Signal	I	—
4	0.35	BN / WH	2772	Left Front Door Lock Switch Unlock Signal	I	—
5	0.35	BK / WH	3051	Signal Ground	I	—
6	0.35	BU / GN	614	Seat Memory Switch Set Signal	I	—
7	0.35	WH	615	Seat Memory Switch Signal 1	I	—
8 - 10	—	—	—	Not Occupied	—	—

**S51 Communication Center Call Switch**

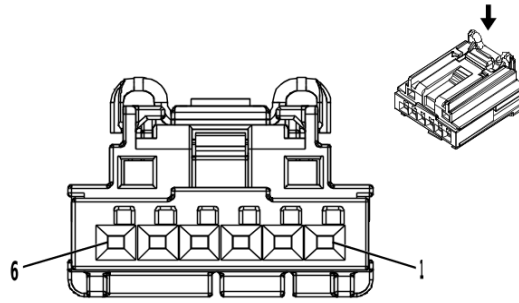

3960313

**Connector Part Information**

Harness Type: Roof Wiring Harness  
 OEM Connector: 2035363-4  
 Service Connector: 19332786  
 Description: 6-Way F 0.64 Generation Y Series( BK)

**Terminal Part Information**


Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

**S51 Communication Center Call Switch**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	GN / BK	2515	Telematics Switch Supply Voltage	I	—
2	—	—	—	Not Occupied	—	—
3	0.35	GN / WH	2514	Telematics Switch Signal	I	—
4	0.35	YE / VT	2516	Telematics Switch Green LED Indicator Control	I	—
5	0.35	BN / WH	2517	Telematics Switch Red LED Indicator Control	I	—
6	0.35	BK / WH	451	Signal Ground	I	—



**S64D Front Seat Adjuster Switch - Driver (A2X)**

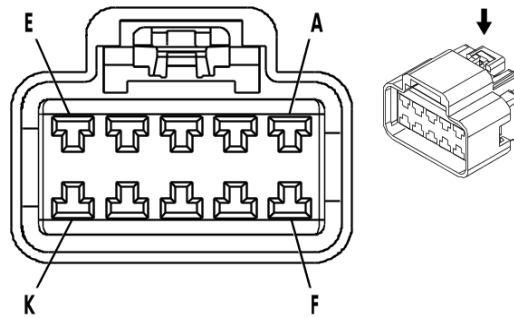

623046

**Connector Part Information**

Harness Type: Front Seat Wiring Harness - Driver  
 OEM Connector: 35058909  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 10-Way F 280 GT Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-4A (PU)	No Tool Required

**S64D Front Seat Adjuster Switch - Driver (A2X)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	2.5	RD / GY	3540	Battery Positive Voltage	I	—
B	1.5	BU / YE	277	Driver Seat Recline Motor Rearward Control	I	—
C	1.5	YE / BU	285	Driver Seat Horizontal Motor Forward Control	I	—
D	1.5	GY / GN	284	Driver Seat Horizontal Motor Rearward Control	I	—
E	1.5	GY / BU	283	Driver Seat Rear Vertical Motor Down Control	I	—
F	1.5	GN / BN	286	Driver Seat Front Vertical Motor Up Control	I	—
G	1.5	YE	282	Driver Seat Rear Vertical Motor Up Control	I	—
H	1.5	GN / YE	276	Driver Seat Recline Motor Forward Control	I	—
J	2.5	BK	3750	Ground	I	—
K	1.5	BU / VT	287	Driver Seat Front Vertical Motor Down Control	I	—

**S64D Front Seat Adjuster Switch - Driver (A45)**

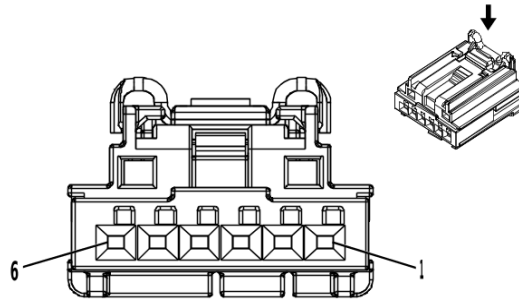

3960313

**Connector Part Information**

Harness Type: Front Seat Wiring Harness - Driver  
 OEM Connector: 2035363-4  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 6-Way F 0.64 Generation Y Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

**S64D Front Seat Adjuster Switch - Driver (A45)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	RD / VT	3340	Battery Positive Voltage	I	—
2	—	—	—	Not Occupied	—	—
3	0.35	GN / GY	3758	Driver Seat Adjuster Memory Module LIN Bus 2	I	—
4	0.5	BK	3750	Ground	I	—
5 - 6	—	—	—	Not Occupied	—	—

**S65D Front Seat Lumbar Switch - Driver (AL9)**

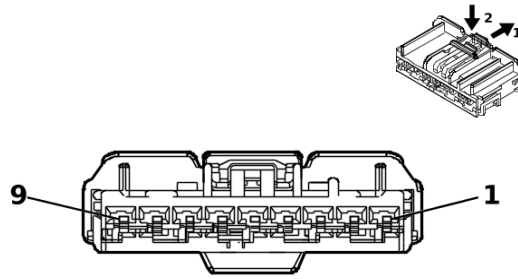

5204289

**Connector Part Information**

Harness Type: Front Seat Wiring Harness - Driver  
 OEM Connector: 7289-6875-40  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 9-Way F 2.8 YESC Series( GY)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-4A (PU)	No Tool Required

**S65D Front Seat Lumbar Switch - Driver (AL9)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BK	3750	Ground	I	—
2	—	—	—	Not Occupied	—	—
3	0.75	RD / WH	3440	Battery Positive Voltage	I	—
4	—	—	—	Not Occupied	—	—
5	0.75	BU	611	Driver Seat Lumbar Support Motor Forward Control	I	—
6	—	—	—	Not Occupied	—	—
7	0.75	VT	610	Driver Seat Lumbar Support Motor Backward Control	I	—
8 - 9	—	—	—	Not Occupied	—	—

**S70E Radio Favorites Switch - Steering Wheel**

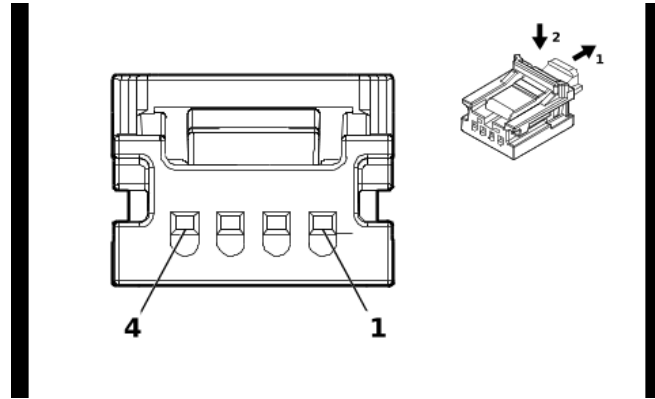

5493278

**Connector Part Information**

Harness Type: Steering Wheel Horn Switch Wiring Harness  
 OEM Connector: 34791-5140  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 4-Way F Mini 50 Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**S70E Radio Favorites Switch - Steering Wheel**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BK / WH	6051	Steering Wheel Ground	I	—
2	—	WH / YE	4313	Radio Favorite Forward Switch Signal	I	—
3	—	YE / BU	4312	Radio Favorite Back Switch Signal	I	—
4	—	—	—	Not Occupied	—	—

**S70F Radio Volume Switch - Steering Wheel**

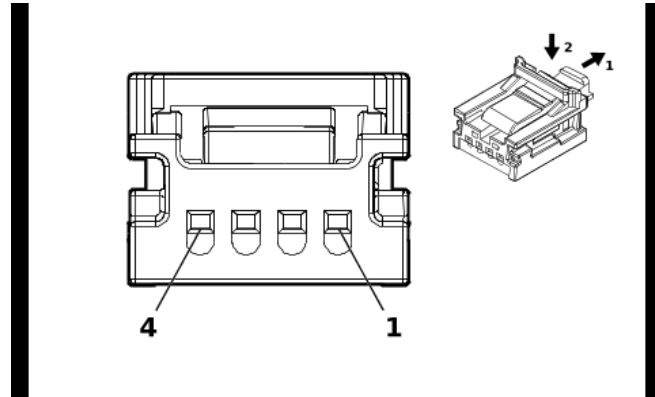

5493584

**Connector Part Information**

Harness Type: Steering Wheel Horn Switch Wiring Harness  
 OEM Connector: 34791-5141  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 4-Way F Mini 50 Series( GY)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**S70F Radio Volume Switch - Steering Wheel**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BK / WH	6051	Steering Wheel Ground	I	—
2	—	GY / BN	4314	Radio Volume Down Switch Signal	I	—
3	—	BU	4315	Radio Volume Up Switch Signal	I	—
4	—	—	—	Not Occupied	—	—

**S70L Cruise Control Switch**

**Connector Part Information**

Harness Type: Steering Wheel Horn Switch Wiring Harness

OEM Connector: 2282268-1

Service Connector: Service by Harness - See Part Catalog

Description: 8-Way

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**S70L Cruise Control Switch**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	RD / GN	5140	Battery Positive Voltage	I	—
3	—	GY / GN	5737	Distance Sensing Cruise Control Gap Up/Down Switch Signal	I	—
4	—	GY / GN	5737	Distance Sensing Cruise Control Gap Up/Down Switch Signal	I	—
5	—	YE / BK	3893	Steering Wheel LED Backlight Dimming Control	I	—
6	—	BK / WH	6051	Steering Wheel Ground	I	—
7	—	BN / GN	1884	Cruise Control Set/Coast/Resume/Accelerate Switch Signal	I	—
8	—	BK / VT	1449	Steering Wheel Resistor Ladder Low Reference	I	—
10	—	BK / WH	6051	Steering Wheel Ground	I	—

## S70R Radio Control Switch - Steering Wheel

### Connector Part Information

Harness Type: Steering Wheel Horn Switch Wiring Harness  
 OEM Connector: 2282268-2  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 10-Way


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

### S70R Radio Control Switch - Steering Wheel

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	RD / GN	5140	Battery Positive Voltage	I	—
2	—	GY / BN	4314	Radio Volume Down Switch Signal	I	—
3	—	WH / YE	4313	Radio Favorite Forward Switch Signal	I	—
4	—	GN / BK	10652	Radio LIN Bus 1	I	—
5	—	YE / BK	3893	Steering Wheel LED Backlight Dimming Control	I	—
6	—	YE / GY	5883	Steering Wheel Heating Switch Signal	I	—
7	—	BN / WH	5884	Steering Wheel Heating Switch LED Control	I	—
8	—	BK / WH	6051	Steering Wheel Ground	I	—
9	—	BU	4315	Radio Volume Up Switch Signal	I	—
10	—	YE / BU	4312	Radio Favorite Back Switch Signal	I	—

**S72 Sunroof Switch (CAC)**

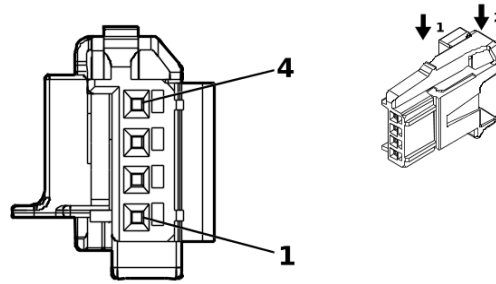

5191926

**Connector Part Information**

Harness Type: Roof Wiring Harness  
 OEM Connector: 2294399-1  
 Service Connector: 84724190  
 Description: 4-Way F 0.64 Micro-Quadlock Series( BK)

**Terminal Part Information**


Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

**S72 Sunroof Switch (CAC)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	BK	4250	Ground	I	—
2	0.35	YE	6817	LED Backlight Dimming Control 1	I	—
3	—	—	—	Not Occupied	—	—
4	0.35	BU / VT	5027	Sunroof Switch Serial Data 1 Signal	I	—



**S76 Trailer Brake Control Switch (JL1 & Z82)**

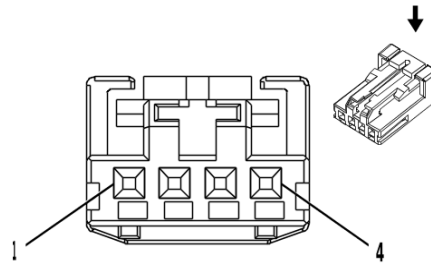

2717162

**Connector Part Information**

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: 1-936119-1  
 Service Connector: 19367524  
 Description: 4-Way F 0.64 Micro-Quadlock Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

**S76 Trailer Brake Control Switch (JL1 & Z82)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	RD / VT	4040	Battery Positive Voltage	I	—
2	0.35	GN / BU	2733	Brake System Control Module LIN Bus 2	I	—
3	0.35	BK	2050	Ground	I	—
4	—	—	—	Not Occupied	—	—

**S78 Turn Signal Switch**

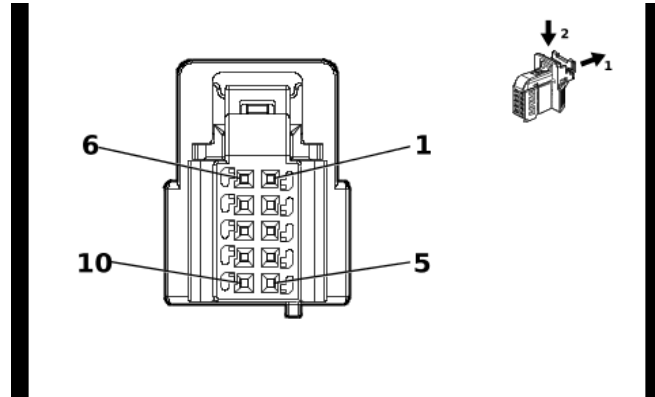

5838155

**Connector Part Information**

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: 2310000-1  
 Service Connector: 13518417  
 Description: 10-Way F 0.64 MQS Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19300632	J-35616-64B (L-BU)	J-38125-215A

**S78 Turn Signal Switch**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	WH / GN	2915	Left Turn Signal Switch Signal	I	—
2	0.35	VT / BU	2916	Right Turn Signal Switch Signal	I	—
3	0.35	BK	2050	Ground	I	—
4	—	—	—	Not Occupied	—	—
5	0.35	WH / BK	94	Windshield Washer Switch Signal	I	—
6	0.35	YE / BN	307	Headlamp Switch Flash Signal	I	—
7	0.35	WH	524	High Beam Select Switch High Beam Signal	I	—
8	0.35	BK / GY	6009	Windshield Wiper Switch Low Reference	I	—
9	0.35	GY	1715	Windshield Wiper Switch High Signal	I	—
10	0.35	YE / BU	1714	Windshield Wiper Switch Low Signal	I	—

**S79D Front Side Door Window Control Switch - Driver X1**

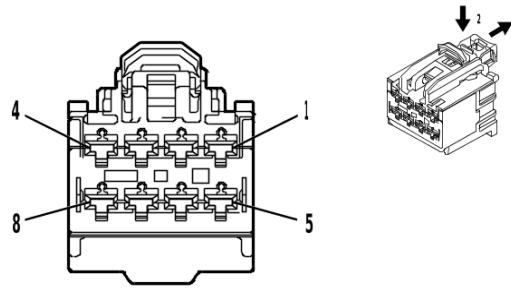

4875738

**Connector Part Information**

Harness Type: Front Side Door Door Lock Door Wiring Harness - Driver  
 OEM Connector: 33223792  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 8-Way F 2.8 OCS Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-4A (PU)	No Tool Required

**S79D Front Side Door Window Control Switch - Driver X1**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	BK	1150	Ground	I	AEC+ AED
	0.5	BK	1150	Ground	I	AXG+ AED
2	2	YE / VT	165	Left Front Window Motor Down Control	I	AEC+ AED
	0.35	WH / BN	2764	Window Switch Left Front Down Signal	I	AXG+ AED
3 - 4	—	—	—	Not Occupied	—	—
5	0.5	WH	606	Left Outside Rearview Mirror Heater Control	I	—
6	—	—	—	Not Occupied	—	—
7	2	GN / GY	164	Left Front Window Motor Up Control	I	AEC+ AED
	0.35	GY / GN	2763	Window Switch Left Front Up Signal	I	AXG+ AED
8	2.5	RD / BU	1240	Battery Positive Voltage	I	AEC+ AED
	0.5	RD / VT	1940	Battery Positive Voltage	I	AXG+ AED

**S79D Front Side Door Window Control Switch - Driver X2**

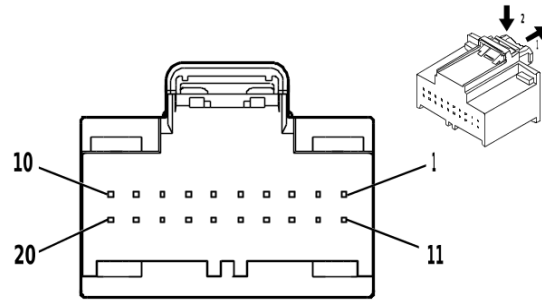

5109537

**Connector Part Information**

Harness Type: Front Side Door Door Lock Door Wiring Harness - Driver  
 OEM Connector: 31410-0206  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 20-Way F 0.64 Series( GY)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required


**S79D Front Side Door Window Control Switch - Driver X2**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	BN / YE	2771	Left Front Door Lock Switch Lock Signal	I	—
2	0.35	BN / WH	2772	Left Front Door Lock Switch Unlock Signal	I	—
3	—	—	—	Not Occupied	—	—
4	0.35	VT / YE	4244	Left Front Door Lock Indicator Control	I	—
5	0.35	BN / GY	4784	Left Front Door LED Backlight Dimming Control	I	—
6	0.35	GY / YE	1760	Left Side Object Detection LED Control	I	—
7	—	—	—	Not Occupied	—	—
8	0.35	YE / BN	2789	Left Front Mirror Motor Common Control	I	—
9	0.35	GN	2766	Power Window Switch Left Front Express Signal	I	—
10	—	—	—	Not Occupied	—	—
11	0.35	WH / VT	4258	Left Front Door Lock Status Signal	I	—
12	0.35	VT / BU	2788	Left Front Mirror Motor Up [+] Down [-] Control	I	—
13	0.35	BN / BK	2790	Left Front Mirror Motor Right [+] Left [-] Control	I	—
14	—	—	—	Not Occupied	—	—
15	0.35	GN / YE	6134	Body Control Module LIN Bus 3	I	—
16	0.35	WH / YE	2792	Left Front Mirror Position Sensor Left [-] Right [+] Signal	I	—
17	0.35	GY / BN	2787	Left Front Mirror Position Sensor Up [+] Down [-] Signal	I	—
18	0.35	GY	745	Left Front Door Ajar Switch Signal	I	—
19	0.35	VT / RD	2791	Left Front Mirror Position Sensor High Reference	I	—

**S79D Front Side Door Window Control Switch - Driver X2 (cont'd)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
20	0.35	BK / BN	673	Left Outside Rearview Mirror Position Sensor Low Reference	I	—

**S79LR Rear Side Door Window Switch - Left**

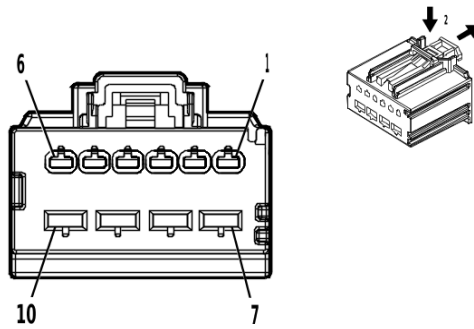

5035058

**Connector Part Information**

Harness Type: Rear Side Door Door Wiring Harness - Left  
 OEM Connector: 31372-1600  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 10-Way F 1.5, 2.8 MX Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required
II	Not required	J-35616-2A (GY)	No Tool Required
III	Not required	J-35616-4A (PU)	No Tool Required

**S79LR Rear Side Door Window Switch - Left**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	GN / GY	6135	Body Control Module LIN Bus 4	I	—
2	0.35	GY	747	Left Rear Door Ajar Switch Signal	I	—
3	0.75	BK	1150	Ground	II	—
4 - 6	—	—	—	Not Occupied	—	—
7	2.5	BK	1150	Ground	III	—
8	2.5	RD / BU	1240	Battery Positive Voltage	III	—
9	2	BU / VT	668	Left Rear Window Motor Up Control	III	—
10	2	YE / BU	669	Left Rear Window Motor Down Control	III	—

**S79P Front Side Door Window Switch - Passenger X1**

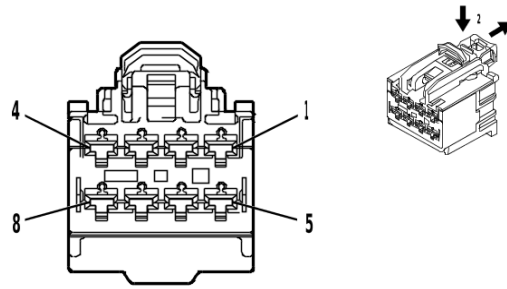

4875738

**Connector Part Information**

Harness Type: Front Side Door Door Lock Door Wiring Harness - Passenger  
 OEM Connector: 33223792  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 8-Way F 2.8 OCS Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-4A (PU)	No Tool Required

**S79P Front Side Door Window Switch - Passenger X1**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	BK	1250	Ground	I	—
2	2	YE / BU	667	Right Front Window Motor Down Control	I	—
3 - 4	—	—	—	Not Occupied	—	—
5	0.5	BN / VT	607	Right Outside Rearview Mirror Heater Control	I	—
6	—	—	—	Not Occupied	—	—
7	2	GN / GY	666	Right Front Window Motor Up Control	I	—
8	2.5	RD / GY	3540	Battery Positive Voltage	I	—

**S79P Front Side Door Window Switch - Passenger X2**

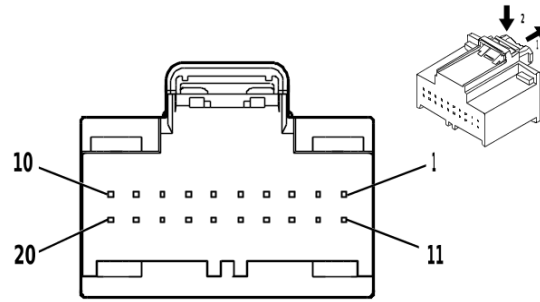

5109537

**Connector Part Information**

Harness Type: Front Side Door Door Lock Door Wiring Harness - Passenger  
 OEM Connector: 31410-0206  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 20-Way F 0.64 Series( GY)

**Terminal Part Information**


Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

**S79P Front Side Door Window Switch - Passenger X2**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	YE / RD	2799	Right Front Mirror Position Sensor High Reference	I	—
2	0.35	GN / BK	2798	Right Front Mirror Motor Right [+] Left [-] Control	I	—
3	—	—	—	Not Occupied	—	—
4	0.35	YE / BU	4245	Right Front Door Lock Indicator Control	I	—
5	0.35	GY / VT	4638	LED Backlight Dimming Control Right Front Door	I	—
6	0.35	GY	1761	Right Side Object Detection LED Control	I	—
7	—	—	—	Not Occupied	—	—
8	0.35	GY	746	Right Front Door Ajar Switch Signal	I	—
9	0.35	GN / YE	6134	Body Control Module LIN Bus 3	I	—
10	0.35	VT / WH	2800	Right Front Mirror Position Sensor Left [-] Right [+] Signal	I	—
11	0.35	BU / YE	2795	Right Front Mirror Position Sensor Up [+] Down [-] Signal	I	—
12	0.35	YE / VT	2773	Right Front Door Lock Switch Lock Control	I	—
13	0.35	BN / VT	2774	Right Front Door Lock Switch Unlock Control	I	—
14 - 15	—	—	—	Not Occupied	—	—
16	0.35	VT	4259	Right Front Door Lock Status Signal	I	—
17	0.35	YE / VT	2796	Right Front Mirror Motor Up [+] Down [-] Control	I	—
18	—	—	—	Not Occupied	—	—
19	0.35	WH	2797	Right Front Mirror Motor Common Control	I	—
20	0.35	BK / GN	675	Right Outside Rearview Mirror Position Sensor Low Reference	I	—



## S79RR Rear Side Door Window Switch - Right

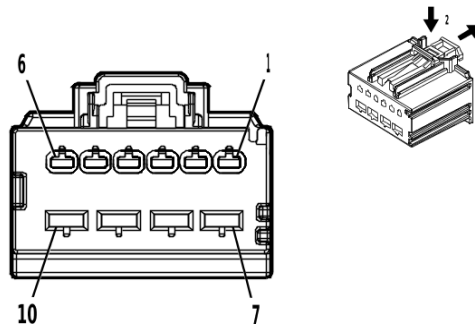

5035058

### Connector Part Information

Harness Type: Rear Side Door Door Wiring Harness - Right  
 OEM Connector: 31372-1600  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 10-Way F 1.5, 2.8 MX Series( BK)


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required
II	Not required	J-35616-4A (PU)	No Tool Required

### S79RR Rear Side Door Window Switch - Right

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	GN / GY	6135	Body Control Module LIN Bus 4	I	—
2	0.35	GY	748	Right Rear Door Ajar Switch Signal	I	—
3 - 6	—	—	—	Not Occupied	—	—
7	2.5	BK	1250	Ground	II	—
8	2.5	RD / GY	3540	Battery Positive Voltage	II	—
9	2	BU / GY	670	Right Rear Window Motor Up Control	II	—
10	2	GN / BK	671	Right Rear Window Motor Down Control	II	—

**S88 Sunroof Tilt Position Switch**

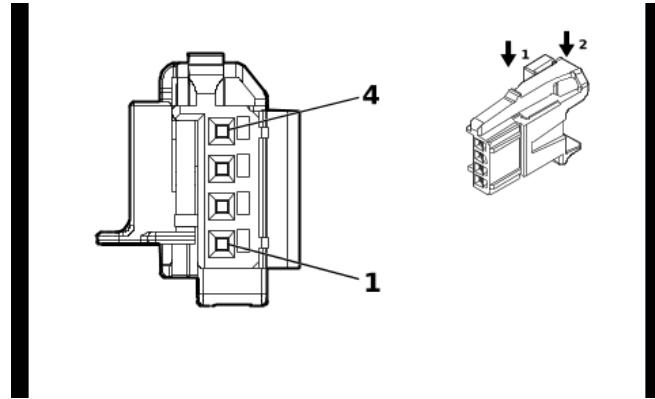

5417126

**Connector Part Information**

Harness Type: Roof Wiring Harness  
 OEM Connector: 2294399-2  
 Service Connector: 84880893  
 Description: 4-Way F 0.64 MQS Series( WH)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

**S88 Sunroof Tilt Position Switch**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	BK	4250	Ground	I	—
2	0.35	YE	6817	LED Backlight Dimming Control 1	I	—
3	—	—	—	Not Occupied	—	—
4	0.35	WH / GN	3031	Sunroof Vent Switch Signal	I	—

## S91 Parking Brake Control Switch

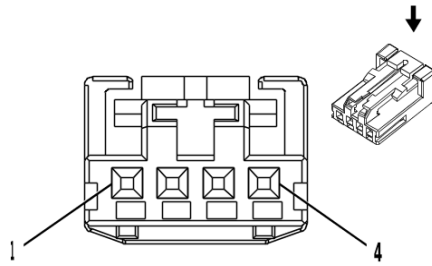

2717162

### Connector Part Information

Harness Type: Front Floor Console Wiring Harness Extension Harness  
 OEM Connector: 1-936119-1  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 4-Way F 0.64 Micro-Quadlock Series( BK)


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

### S91 Parking Brake Control Switch

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	RD / GN	5140	Battery Positive Voltage	I	—
2	0.35	GN / YE	2731	Brake System Control Module LIN Bus 1	I	—
3	—	—	—	Not Occupied	—	—
4	0.35	BK / WH	2151	Signal Ground	I	—

**S126 Ride Control Switch (NP0 / NQH)**

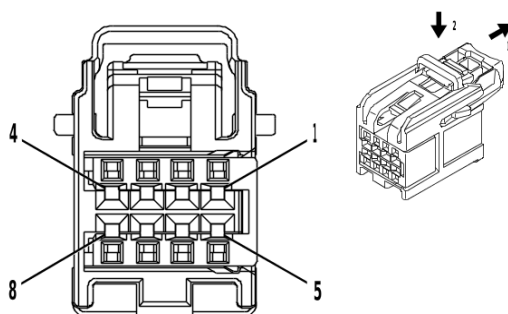

4232228

**Connector Part Information**

Harness Type: Front Floor Console Wiring Harness Extension Harness  
 OEM Connector: 15526973  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 8-Way F 0.64 OCS Series( GY)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

**S126 Ride Control Switch (NP0 / NQH)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	WH / BN	2203	Enhanced Driver Mode 2 Switch Signal	I	—
2	—	—	—	Not Occupied	—	—
3	0.35	BK / GY	2204	Enhanced Driver Mode 1 Switch Low Reference	I	—
4	0.35	YE	6817	LED Backlight Dimming Control 1	I	—
5	0.35	BK	2050	Ground	I	—
6 - 7	—	—	—	Not Occupied	—	—
8	0.35	VT / GN	39	Run/Crank Ignition 1 Voltage	I	—

**T1 DC/AC Converter Control Module X1**

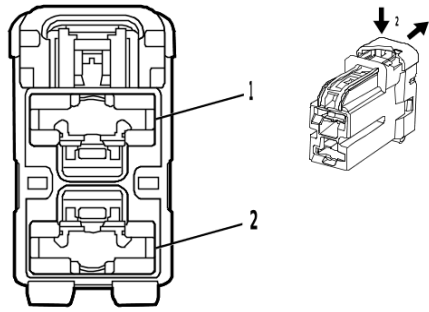

2453116

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 7283-0724-30  
 Service Connector: 85011842  
 Description: 2-Way F 9.5 Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-22 (RD)	No Tool Required

**T1 DC/AC Converter Control Module X1**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	5	BN / BK	4629	DC/AC Inverter Control	I	—
2	5	BK	550	Ground	I	—

**T1 DC/AC Converter Control Module X2 (KI6)**

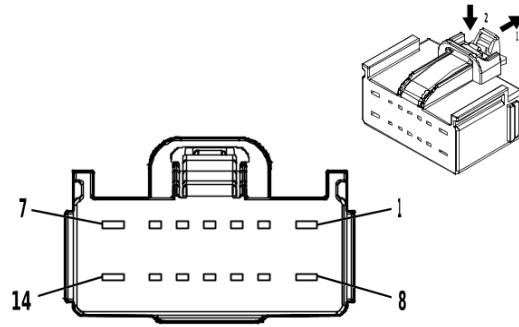

4934172

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 7289-7630-30  
 Service Connector: 13513604  
 Description: 14-Way F 1.5, 2.8 YESC Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	13575850	J-35616-2A (GY)	J-38125-557
II	84962855	J-35616-4A (PU)	J-38125-11A

**T1 DC/AC Converter Control Module X2 (KI6)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BK	10117	AC Outlet Phase A Control	II	—
2	0.5	VT / RD	4049	AC Power Outlet Sensor High Reference	I	—
3	0.5	VT / GY	539	Run/Crank Ignition 1 Voltage	I	—
4	0.5	WH / GN	4628	DC/AC Inverter Relay Control	I	—
5	0.5	BU / BN	6807	DC/AC Inverter Control	I	—
6	—	—	—	Not Occupied	—	—
7	0.75	BK / WH	10120	AC Outlet 2 Phase A Control	II	—
8	0.75	RD	10118	AC Outlet Phase B Control	II	—
9	0.75	Bare	10116	AC Outlet Low Reference	I	—
10	0.35	GN / BU	6133	Body Control Module LIN Bus 2	I	—
11	—	—	—	Not Occupied	—	—
12	0.5	GN / BN	2266	DC/AC Inverter Control 2	I	—
13	0.75	BK	10119	AC Outlet 2 Low Reference	I	—
14	0.75	RD / WH	10121	AC Outlet 2 Phase B Control	II	—

## T1 DC/AC Converter Control Module X2 (KI7)

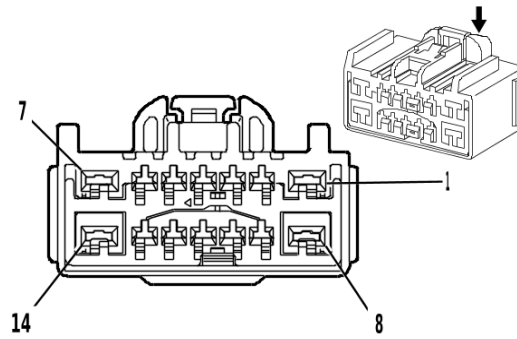

1540775

### Connector Part Information

Harness Type: Body Wiring Harness  
 OEM Connector: 7289-7631-90  
 Service Connector: 13513603  
 Description: 14-Way F 1.5, 2.8 YESC Series( BU)


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	13575850	J-35616-2A (GY)	J-38125-557
II	84962855	J-35616-4A (PU)	J-38125-11A

### T1 DC/AC Converter Control Module X2 (KI7)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BK	10117	AC Outlet Phase A Control	II	—
2	0.5	VT / RD	4049	AC Power Outlet Sensor High Reference	I	—
3	0.5	VT / GY	539	Run/Crank Ignition 1 Voltage	I	—
4	0.5	WH / GN	4628	DC/AC Inverter Relay Control	I	—
5	0.5	BU / BN	6807	DC/AC Inverter Control	I	—
6	—	—	—	Not Occupied	—	—
7	0.75	BK / WH	10120	AC Outlet 2 Phase A Control	II	—
8	0.75	RD	10118	AC Outlet Phase B Control	II	—
9	0.75	Bare	10116	AC Outlet Low Reference	I	—
10	0.35	GN / BU	6133	Body Control Module LIN Bus 2	I	—
11	—	—	—	Not Occupied	—	—
12	0.5	GN / BN	2266	DC/AC Inverter Control 2	I	—
13	0.75	BK	10119	AC Outlet 2 Low Reference	I	—
14	0.75	RD / WH	10121	AC Outlet 2 Phase B Control	II	—

T3 Audio Amplifier X1

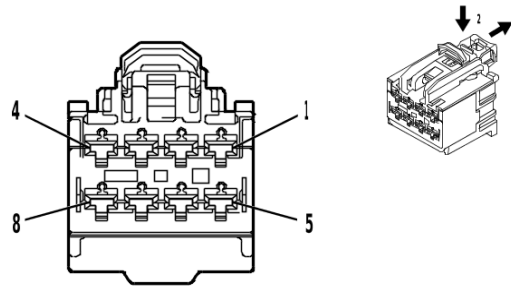

4875738

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 33223792  
 Service Connector: 19369366  
 Description: 8-Way F 2.8 OCS Series( BK)

**Terminal Part Information**


Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-4A (PU)	No Tool Required

**T3 Audio Amplifier X1**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	YE	200	Right Front Speaker 1 [+] Control	I	—
2	—	—	—	Not Occupied	—	—
3	2.5	BU	201	Left Front Speaker 1 [+] Control	I	—
4	3	RD / YE	3740	Battery Positive Voltage	I	—
5	2.5	YE / BK	117	Right Front Speaker [-] Control 1	I	—
6	—	—	—	Not Occupied	—	—
7	2.5	BN / BU	118	Left Front Speaker [-] Control 1	I	—
8	3	BK / WH	651	Signal Ground	I	—



### T3 Audio Amplifier X2

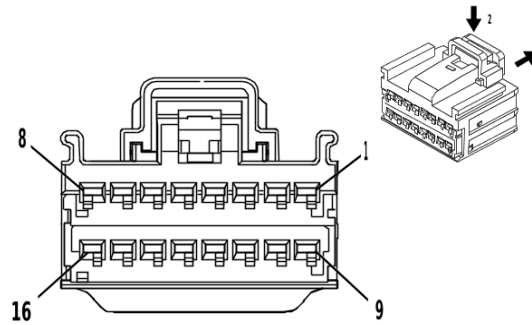

4332214

#### Connector Part Information

Harness Type: Body Wiring Harness  
 OEM Connector: 15512506  
 Service Connector: 13591061  
 Description: 16-Way F 1.5 OCS Series( BK)


#### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	84757974	J-35616-2A (GY)	J-38125-215A

#### T3 Audio Amplifier X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	—	Not Occupied	—	—
2	0.5	WH / YE	1853	Right Front Midrange Speaker [+] Control	I	—
3	0.5	BU / VT	1857	Left Front Midrange Speaker [+] Control	I	—
4	0.5	WH	46	Right Rear Speaker [+] Control	I	—
5	0.5	GN	199	Left Rear Speaker [+] Control	I	—
6	—	—	—	Not Occupied	—	—
7	0.5	YE / WH	1860	Front Center Speaker [+] Control	I	—
8 - 9	—	—	—	Not Occupied	—	—
10	0.5	BN / BK	1953	Right Front Midrange Speaker [-] Control	I	—
11	0.5	BU / BN	1957	Left Front Midrange Speaker [-] Control	I	—
12	0.5	BU / BK	115	Right Rear Speaker [-] Control	I	—
13	0.5	GN / BK	116	Left Rear Speaker [-] Control	I	—
14	—	—	—	Not Occupied	—	—
15	0.5	BU / YE	1960	Front Center Speaker [-] Control	I	—
16	—	—	—	Not Occupied	—	—

**T3 Audio Amplifier X4**

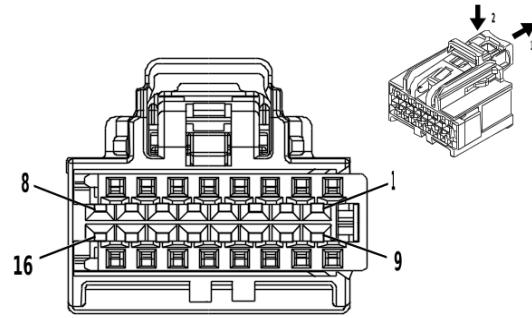

4256181

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 35016345  
 Service Connector: 13519740  
 Description: 16-Way F 0.64 OCS Series( BN)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	84619127	J-35616-64B (L-BU)	J-38125-215A
II	Service by Cable	No Tool Required	No Tool Required

**T3 Audio Amplifier X4**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 7	—	—	—	Not Occupied	—	—
8	0.35	BU / YE	4984	AUTOSAR CAN Bus [-] 5 Serial Data	I	—
9	—	—	—	Not Occupied	—	—
10	0.35	WH	8580	Automotive Audio Bus A2B Serial Data 1 [+]	II	—
11	0.35	GN	8579	Automotive Audio Bus A2B Serial Data 1 [-]	II	—
12 - 15	—	—	—	Not Occupied	—	—
16	0.35	BU / WH	4985	AUTOSAR CAN Bus [+] 5 Serial Data	I	—

**T4P High Frequency Antenna (- MAM)**

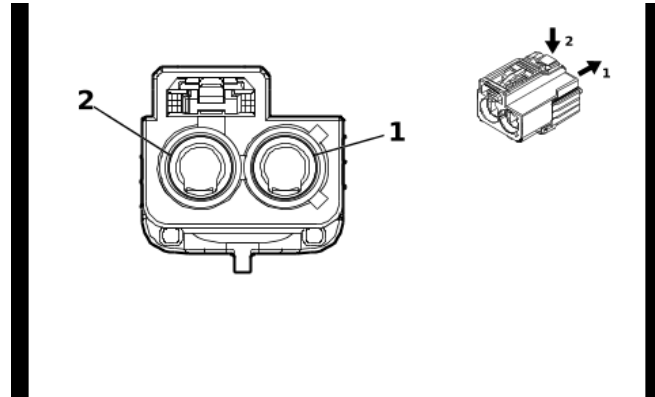

5661671

**Connector Part Information**

Harness Type: Body Wiring Harness COAX  
 OEM Connector: 13516425  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 2-Way F Coax Type( VT)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**T4P High Frequency Antenna (- MAM)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	Coax Cable	—	(GPS/Cell) Coaxial Antenna Cell/GPS combined Signal	I	—

T4P High Frequency Antenna (IVD)

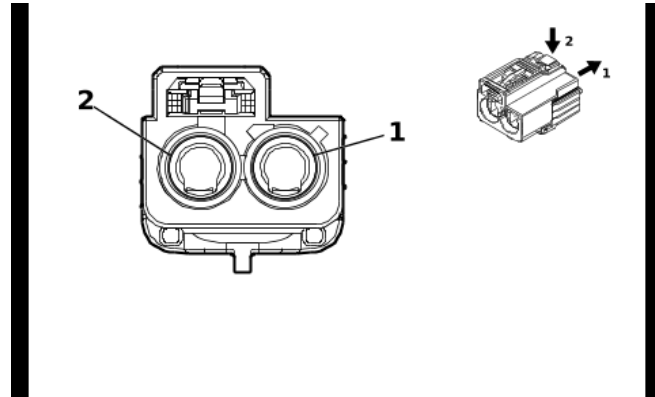

5633474

**Connector Part Information**

Harness Type: Body Wiring Harness COAX  
 OEM Connector: 13516422  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 2-Way F Coax Type( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**T4P High Frequency Antenna (IVD)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.01	WH	6001	Coaxial Antenna RF Signal	I	—
2	0.01	WH	3297	Coaxial Antenna DAB Signal	I	—

**T4P High Frequency Antenna (IVD - U2Q - U2K - MCX)**

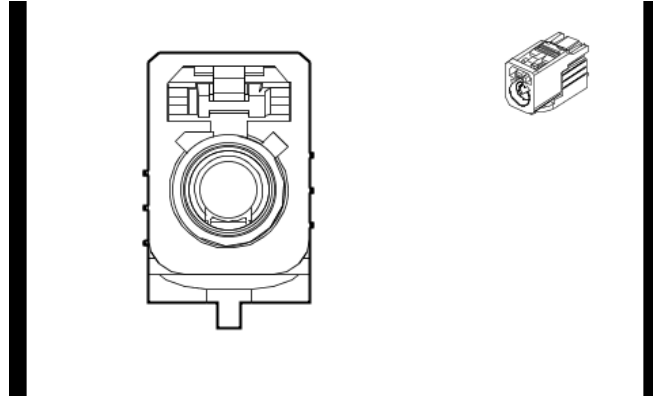

5633209

**Connector Part Information**

Harness Type: Body Wiring Harness COAX  
 OEM Connector: 13516408  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 1-Way F Coax Type( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**T4P High Frequency Antenna (IVD - U2Q - U2K - MCX)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	Coax Cable	—	(AM/FM) Antenna RF Signal	I	—

**T4P High Frequency Antenna (MAM)**

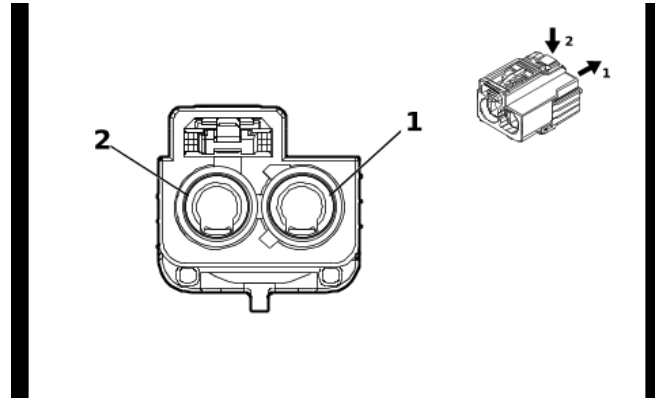

5979943

**Connector Part Information**

Harness Type: Body Wiring Harness COAX  
 OEM Connector: 13516427  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 2-Way F Coax Type( BN)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**T4P High Frequency Antenna (MAM)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	Coax Cable	—	(Cell only) Coaxial Antenna Cell Phone Signal	I	—

**T4P High Frequency Antenna (U2K / (MCX - U2K))**

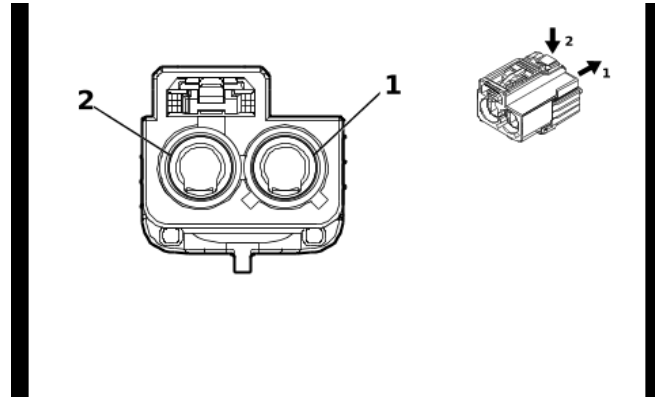

5907715

**Connector Part Information**

Harness Type: Body Wiring Harness COAX  
 OEM Connector: 13516431  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 2-Way F Coax Type( CU)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**T4P High Frequency Antenna (U2K / (MCX - U2K))**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0	WH	6130	Coaxial Antenna XM Signal	I	—
2	0.01	WH	6001	Coaxial Antenna RF Signal	I	—

**T4TA Auxiliary Wireless Communication Interface Antenna**

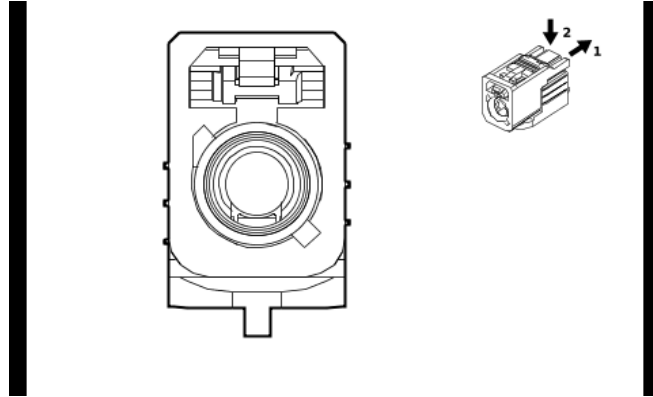

5518436

**Connector Part Information**

Harness Type: Instrument Panel Wiring Harness COAX  
 OEM Connector: 13516416  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 1-Way F Coax Type( BG)

**Terminal Part Information**


Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**T4TA Auxiliary Wireless Communication Interface Antenna**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	Coax Cable	—	WiFi Antenna Coaxial Signal	I	—



## T8A Ignition Coil 1

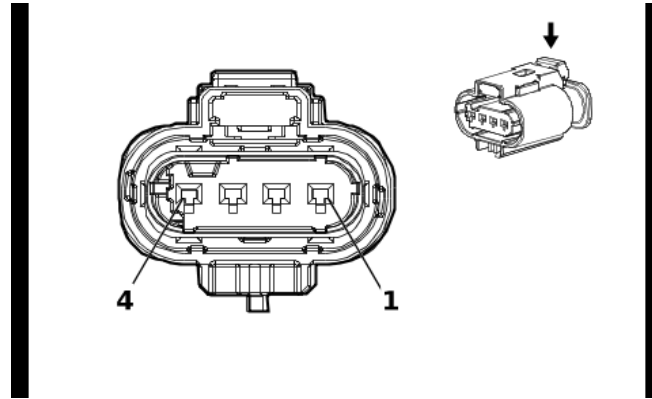

5402120

### Connector Part Information

Harness Type: Engine Wiring Harness  
 OEM Connector: 10092979  
 Service Connector: 84889372  
 Description: 4-Way F 1.2 Multilock Series, Sealed( BK)


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required

### T8A Ignition Coil 1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BK	6450	Engine Even Bank Ground	I	—
2	0.75	BK / BU	2129	Ignition Control Low Reference Bank 1	I	—
3	0.75	BU / VT	2121	Ignition Control 1	I	—
4	0.75	VT / BU	5291	Powertrain Main Relay Fused Supply Voltage 2	I	—

T8B Ignition Coil 2

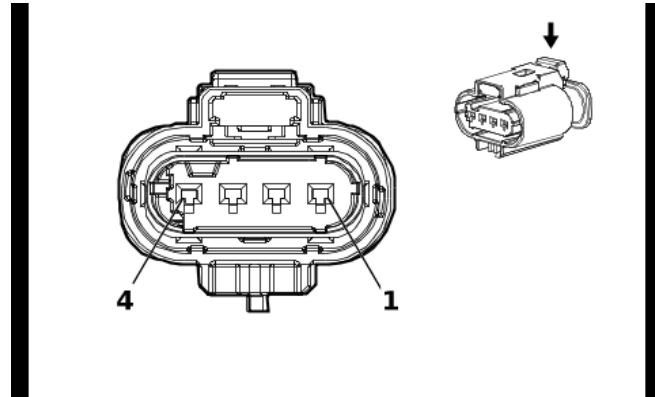

5402120

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 10092979  
 Service Connector: 84889372  
 Description: 4-Way F 1.2 Multilock Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required

**T8B Ignition Coil 2**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BK	6450	Engine Even Bank Ground	I	—
2	0.75	BK / BU	2129	Ignition Control Low Reference Bank 1	I	—
3	0.75	BU / WH	2122	Ignition Control 2	I	—
4	0.75	VT / BU	5291	Powertrain Main Relay Fused Supply Voltage 2	I	—

### T8C Ignition Coil 3

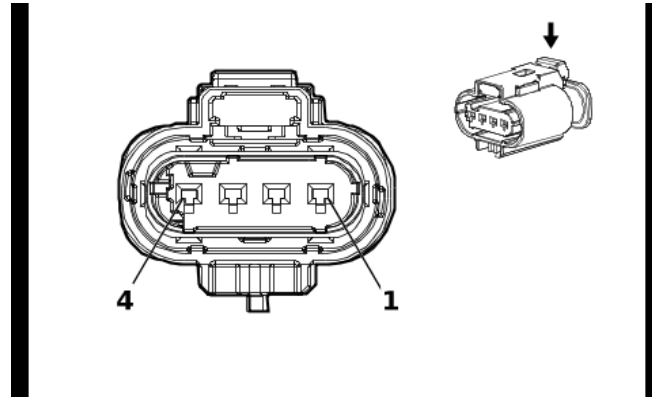

5402120

#### Connector Part Information

Harness Type: Engine Wiring Harness  
 OEM Connector: 10092979  
 Service Connector: 84889372  
 Description: 4-Way F 1.2 Multilock Series, Sealed( BK)


#### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required

#### T8C Ignition Coil 3

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BK	6450	Engine Even Bank Ground	I	—
2	0.75	BK / BU	2129	Ignition Control Low Reference Bank 1	I	—
3	0.75	GN / BU	2123	Ignition Control 3	I	—
4	0.75	VT / BU	5291	Powertrain Main Relay Fused Supply Voltage 2	I	—

T8D Ignition Coil 4

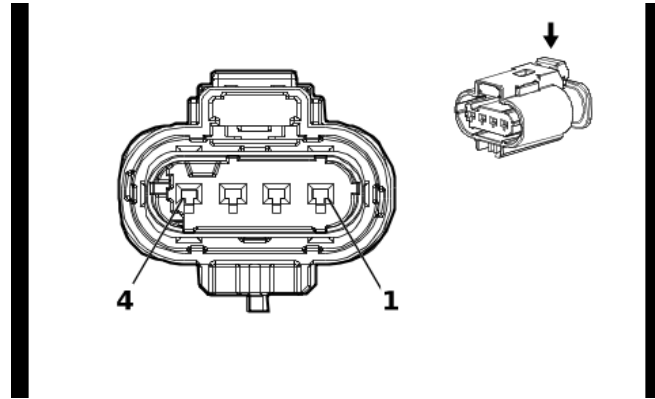

5402120

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 10092979  
 Service Connector: 84889372  
 Description: 4-Way F 1.2 Multilock Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required

**T8D Ignition Coil 4**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BK	6450	Engine Even Bank Ground	I	—
2	0.75	BK / BU	2129	Ignition Control Low Reference Bank 1	I	—
3	0.75	YE / BU	2124	Ignition Control 4	I	—
4	0.75	VT / BU	5291	Powertrain Main Relay Fused Supply Voltage 2	I	—

**T10KA Low Frequency Console Number 2 Antenna**

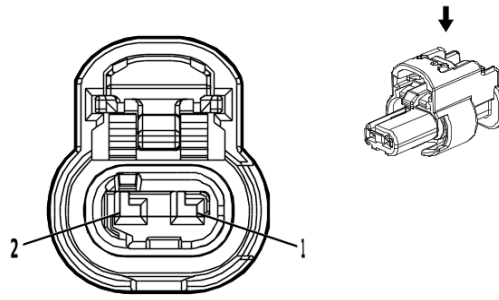

4690744

**Connector Part Information**

Harness Type: Front Floor Console Wiring Harness  
 OEM Connector: 1-2296694-3  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F 1.2 MCON Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required

**T10KA Low Frequency Console Number 2 Antenna**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	BN / BK	3552	Interior Passive Entry Antenna 1 High Signal	I	—
2	0.35	WH	3553	Interior Passive Entry Antenna 1 Low Signal	I	—

**T10UA Low Frequency Console Antenna**

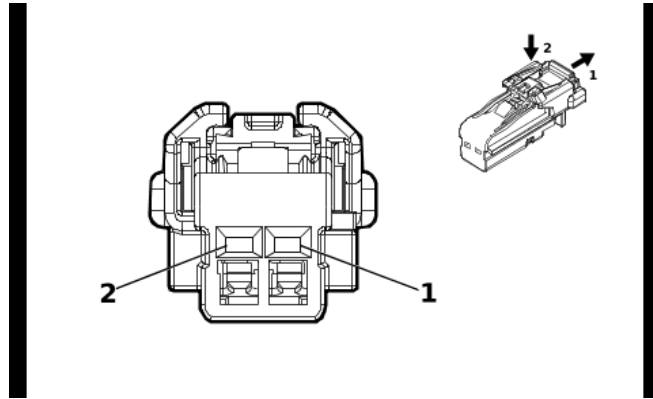

4115691

**Connector Part Information**

Harness Type: Front Floor Console Wiring Harness  
 OEM Connector: 6098-8988  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F 1.2 MCON Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

**T10UA Low Frequency Console Antenna**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	BN / BK	4996	Immobilizer Antenna Signal [+]	I	—
2	0.35	WH / GY	4997	Immobilizer Antenna Low Signal	I	—

## T19 Multifunction Power Supply Converter

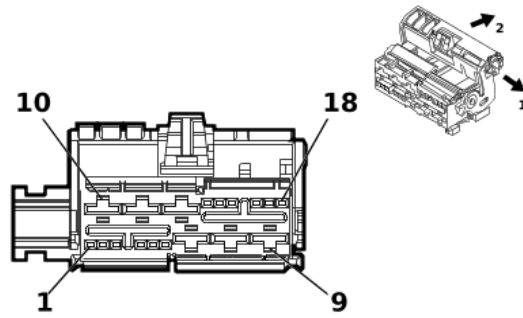

3825662

### Connector Part Information

Harness Type: Body Wiring Harness  
 OEM Connector: 35509388  
 Service Connector: 13549243  
 Description: 18-Way F 0.64 MTS, 6.3 MCP Series( BK)


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19300632	J-35616-64B (L-BU)	J-38125-215A
II	19367600	J-35616-42 (RD)	J-38125-556

### T19 Multifunction Power Supply Converter

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 3	—	—	—	Not Occupied	—	—
4	0.5	VT / GN	4320	Powertrain Sensor Bus Enable	I	—
5	0.5	YE / BK	625	Starter Enable Relay Control	I	—
6	—	—	—	Not Occupied	—	—
7	2.5	BK	3750	Ground	II	—
8	2.5	RD / VT	2640	Battery Positive Voltage	II	—
9	2.5	RD / GN	2173	12V Regulated Supply Voltage 2	II	—
10	2.5	RD / YE	2172	12V Regulated Supply Voltage 1	II	—
11	2.5	RD / BU	2540	Battery Positive Voltage	II	—
12	2.5	BK	3750	Ground	II	—
13	0.5	BU / GY	4054	Private Serial Data Powertrain CAN Bus [-] Serial Data	I	—
14	0.5	BU / GY	4054	Private Serial Data Powertrain CAN Bus [-] Serial Data	I	—
15	0.5	WH	4055	Private Serial Data Powertrain CAN Bus [+] Serial Data	I	—
16	0.5	WH	4055	Private Serial Data Powertrain CAN Bus [+] Serial Data	I	—
17 - 18	—	—	—	Not Occupied	—	—

**T22 Wireless Accessory Charging Module (K4C)**

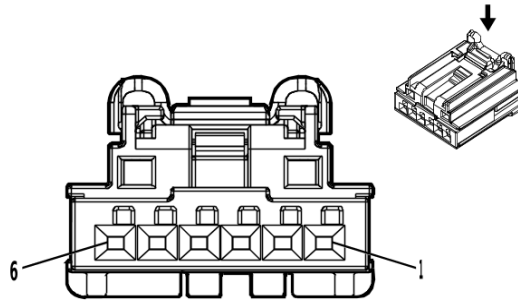

5020940

**Connector Part Information**

Harness Type: Front Floor Console Wiring Harness Extension Harness  
 OEM Connector: 2035363-6  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 6-Way F 0.64 Generation Y Series( BK)

**Terminal Part Information**


Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

**T22 Wireless Accessory Charging Module (K4C)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	RD / VT	6340	Battery Positive Voltage	I	—
2	0.5	BK	2050	Ground	I	—
3	0.35	BU / YE	4984	AUTOSAR CAN Bus [-] 5 Serial Data	I	—
4	0.35	BU / WH	4985	AUTOSAR CAN Bus [+] 5 Serial Data	I	—
5	0.35	BU / YE	4984	AUTOSAR CAN Bus [-] 5 Serial Data	I	—
6	0.35	BU / WH	4985	AUTOSAR CAN Bus [+] 5 Serial Data	I	—



**X80L Front Floor Console Accessory Power Rear Receptacle (KCA)**

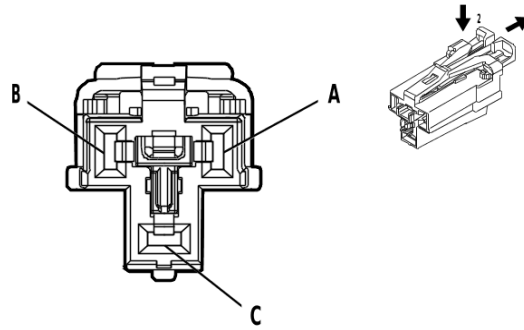

4872413

**Connector Part Information**

Harness Type: Front Floor Console Wiring Harness  
 OEM Connector: 33386302  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 3-Way F 2.8 APEX Series( GY)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required

**X80L Front Floor Console Accessory Power Rear Receptacle (KCA)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	1	VT	1001	Retained Accessory Power Ignition Voltage	I	—
B	—	—	—	Not Occupied	—	—
C	1	BK	2050	Ground	I	—

**X81ACA Front Floor Console Accessory Power Rear Receptacle - 110V AC (KI6)**

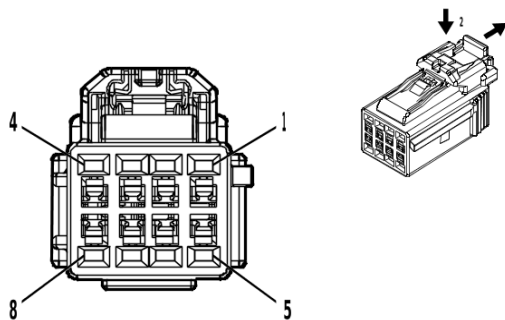

5086387

**Connector Part Information**

Harness Type: Front Floor Console Wiring Harness  
 OEM Connector: 6098-8443  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 8-Way F 1.2 Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

**X81ACA Front Floor Console Accessory Power Rear Receptacle - 110V AC (KI6)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BK	10117	AC Outlet Phase A Control	I	—
2	—	—	—	Not Occupied	—	—
3	0.5	VT / RD	4049	AC Power Outlet Sensor High Reference	I	—
4	0.5	BU / BN	6807	DC/AC Inverter Control	I	—
5	0.75	RD	10118	AC Outlet Phase B Control	I	—
6	—	—	—	Not Occupied	—	—
7	0.5	BK	2050	Ground	I	—
8	—	—	—	Not Occupied	—	—

**X81AP Pickup Box Accessory Power Receptacle - 110V AC (KC9)**

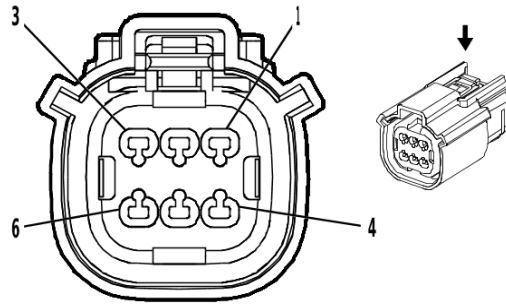

1986157

**Connector Part Information**

Harness Type: Body Rear Wiring Harness  
 OEM Connector: 33472-0616  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 6-Way F 1.5 MX Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required
II	Not required	J-35616-2A (GY)	No Tool Required

**X81AP Pickup Box Accessory Power Receptacle - 110V AC (KC9)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	VT / RD	4049	AC Power Outlet Sensor High Reference	I	—
2	0.5	GN / BN	2266	DC/AC Inverter Control 2	I	—
3	—	—	—	Not Occupied	—	—
4	0.75	BK / WH	10120	AC Outlet 2 Phase A Control	II	—
5	0.5	BK	850	Ground	I	—
6	0.75	RD / WH	10121	AC Outlet 2 Phase B Control	II	—

**X81BCA Front Floor Console Accessory Power Rear Receptacle - 220V AC (KI7)**

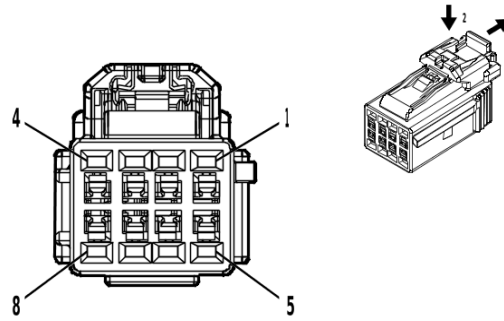

5086387

**Connector Part Information**

Harness Type: Front Floor Console Wiring Harness  
 OEM Connector: 6098-8443  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 8-Way F 1.2 Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

**X81BCA Front Floor Console Accessory Power Rear Receptacle - 220V AC (KI7)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BK	10117	AC Outlet Phase A Control	I	—
2	—	—	—	Not Occupied	—	—
3	0.5	VT / RD	4049	AC Power Outlet Sensor High Reference	I	—
4	0.5	BU / BN	6807	DC/AC Inverter Control	I	—
5	0.75	RD	10118	AC Outlet Phase B Control	I	—
6	—	—	—	Not Occupied	—	—
7	0.5	BK	2050	Ground	I	—
8	—	—	—	Not Occupied	—	—

**X81BP Pickup Box Accessory Power Receptacle - 220V AC**

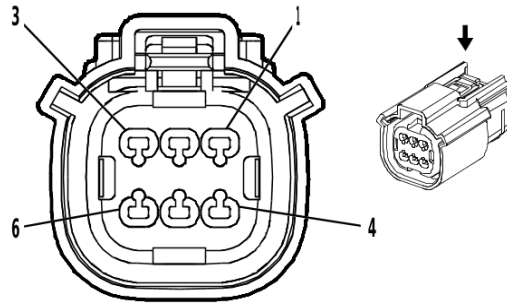

1986157

**Connector Part Information**

Harness Type: Pickup Box Accessory Power Receptacle Jumper Harness  
 OEM Connector: 13577153  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 6-Way F 1.5 MX Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**X81BP Pickup Box Accessory Power Receptacle - 220V AC**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	VT / RD	4049	AC Power Outlet Sensor High Reference	I	—
2	—	GN / BN	2266	DC/AC Inverter Control 2	I	—
3	—	—	—	Not Occupied	—	—
4	—	BK / WH	10120	AC Outlet 2 Phase A Control	I	—
5	—	BK	850	Ground	I	—
6	—	RD / WH	10121	AC Outlet 2 Phase B Control	I	—

**X84 Data Link Connector**

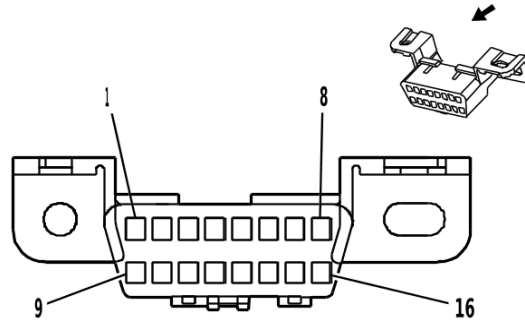

68793

**Connector Part Information**

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: 12110250  
 Service Connector: 12110250  
 Description: 16-Way F 150 Metri-Pack Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	13580059	J-35616-14 (GN)	J-38125-12A
II	Service by Cable	No Tool Required	No Tool Required

**X84 Data Link Connector**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	BU / BN	4983	AUTOSAR CAN Bus [+] 7 Serial Data	I	—
2	0.35	GN	2578	Private Serial Data Presentation CAN Bus [+] 1 Serial Data	I	—
3	0.35	YE / WH	4973	Ethernet Bus 1R [+]	II	—
4	0.75	BK	2050	Ground	I	—
5	0.5	BK / WH	2151	Signal Ground	I	—
6	0.35	YE	4981	AUTOSAR CAN Bus [+] 6 Serial Data	I	—
7	0.35	VT	2580	Private Serial Data Presentation CAN Bus [+] 2 Serial Data	I	—
8	0.35	WH	7207	Ethernet Bus 1 Enable Signal	I	—
9	0.35	WH	4982	AUTOSAR CAN Bus [-] 7 Serial Data	I	—
10	0.35	BN	2577	Private Serial Data Presentation CAN Bus [-] 1 Serial Data	I	—
11	0.35	YE	4972	Ethernet Bus 1R [-]	II	—
12	0.35	GN / WH	4975	Ethernet Bus 1T [+]	II	—
13	0.35	GN	4974	Ethernet Bus 1T [-]	II	—
14	0.35	WH	4980	AUTOSAR CAN Bus [-] 6 Serial Data	I	—
15	0.35	GY	2579	Private Serial Data Presentation CAN Bus [-] 2 Serial Data	I	—
16	0.5	RD / BU	3240	Battery Positive Voltage	I	—

## X85 Steering Wheel Airbag Coil X1

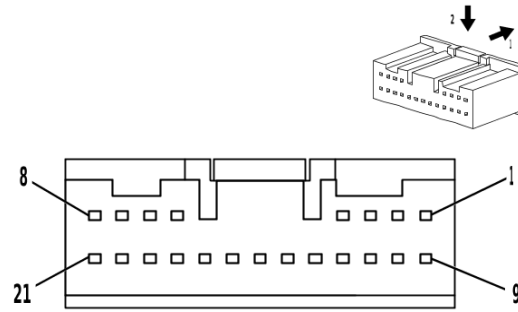

3960237

### Connector Part Information

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: ATLCPB-21B-2AY  
 Service Connector: 13510218  
 Description: 21-Way F 0.64 Series( YE)


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	13575742	J-35616-64B (L-BU)	J-38125-215A
II	13575865	J-35616-64B (L-BU)	J-38125-215A

### X85 Steering Wheel Airbag Coil X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BK / WH	6051	Steering Wheel Ground	I	—
2	0.35	GN / WH	3287	Horn Switch Signal	I	—
3 - 6	—	—	—	Not Occupied	—	—
7	0.5	BN / OG	3020	Steering Wheel Air Bag Stage 1 Low Control	II	—
8	0.5	OG / VT	3021	Steering Wheel Air Bag Stage 1 High Control	II	—
9	0.35	GN / GY	10652	Radio LIN Bus 1	I	—
10	0.35	GN / BK	2858	Body Control Module LIN Bus 12	I	—
11	0.35	GY / GN	11874	Cruise Control Bank 1 Switch Signal	I	—
12	0.35	BK / VT	1449	Steering Wheel Resistor Ladder Low Reference	I	—
13	—	—	—	Not Occupied	—	—
14	0.35	RD / GN	5140	Battery Positive Voltage	I	—
15	0.35	BN / GN	11875	Cruise Control Bank 2 Switch Signal	I	—
16 - 19	—	—	—	Not Occupied	—	—
20	0.5	BK	2050	Ground	I	—
21	0.35	RD / BN	10040	Battery Positive Voltage	I	—

**X85 Steering Wheel Airbag Coil X2**

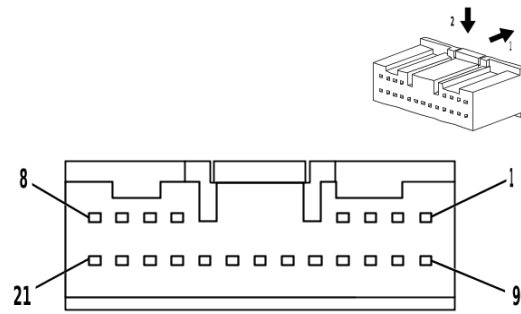

3960237

**Connector Part Information**

Harness Type: Steering Wheel Horn Switch Wiring Harness  
 OEM Connector: 13510218  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 21-Way F 0.64 Series( YE)

**Terminal Part Information**


Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**X85 Steering Wheel Airbag Coil X2**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BK / WH	6051	Steering Wheel Ground	I	—
2	—	GN / WH	3287	Horn Switch Signal	I	—
3 - 6	—	—	—	Not Occupied	—	—
7	—	BN / OG	3020	Steering Wheel Air Bag Stage 1 Low Control	I	—
8	—	OG / VT	3021	Steering Wheel Air Bag Stage 1 High Control	I	—
9	—	RD / BN	10040	Battery Positive Voltage	I	—
10	—	BK	6050	Steering Wheel Ground	I	—
11 - 14	—	—	—	Not Occupied	—	—
15	—	GY / GN	5737	Distance Sensing Cruise Control Gap Up/Down Switch Signal	I	—
16	—	RD / GN	5140	Battery Positive Voltage	I	—
17	—	—	—	Not Occupied	—	—
18	—	BK / VT	1449	Steering Wheel Resistor Ladder Low Reference	I	—
19	—	BN / GN	1884	Cruise Control Set/Coast/Resume/Accelerate Switch Signal	I	—
20	—	GN / BK	2858	Body Control Module LIN Bus 12	I	—
21	—	GN / BK	10652	Radio LIN Bus 1	I	—



**X88B Tow Vehicle Electrical Receptacle (U1D & Z82)**

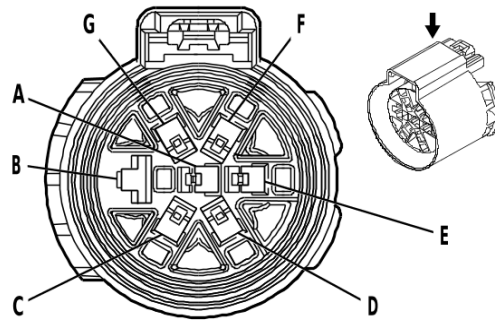

2056936

**Connector Part Information**

Harness Type: Chassis Wiring Harness  
 OEM Connector: 13857223  
 Service Connector: 86816072  
 Description: 7-Way F 280, 630 Metri-Pack Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-42 (RD)	No Tool Required
II	Not required	J-35616-4A (PU)	No Tool Required

**X88B Tow Vehicle Electrical Receptacle (U1D & Z82)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	0.75	WH / GN	1624	Trailer Backup Lamp Control	II	—
B	5	WH	22	Trailer Ground	I	—
C	2.5	BU	47	Trailer Auxiliary Control	II	—
D	0.75	GN / VT	1619	Right Rear Trailer Stop/Turn Lamp Control	II	—
E	3	RD / GY	1042	Battery Positive Voltage	II	—
F	1.5	GY / BN	2109	Trailer Park Lamp Control	II	—
G	0.75	YE / GY	1618	Left Rear Trailer Stop/Turn Lamp Control	II	—

**X92C Single Charge Only 2nd Row Receptacle - Floor Console Rear**

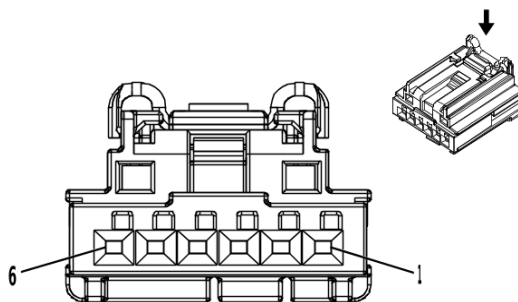

3960313

**Connector Part Information**

Harness Type: Front Floor Console Wiring Harness  
 OEM Connector: 2035363-4  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 6-Way F 0.64 Generation Y Series( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

**X92C Single Charge Only 2nd Row Receptacle - Floor Console Rear**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	VT	4701	Retained Accessory Power Control	I	—
2	—	—	—	Not Occupied	—	—
3	0.5	BK	2050	Ground	I	—
4 - 6	—	—	—	Not Occupied	—	—

## X92G USB 2 Port Receptacle X1

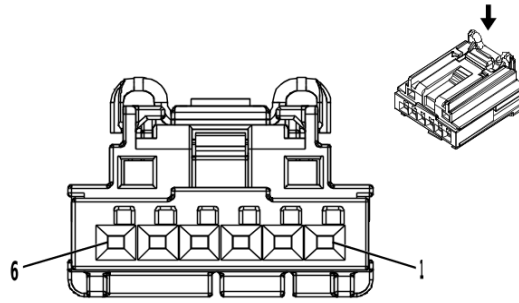

3960313

### Connector Part Information

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: 2035363-4  
 Service Connector: 19332786  
 Description: 6-Way F 0.64 Generation Y Series( BK)


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

### X92G USB 2 Port Receptacle X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	RD / WH	7240	Battery Positive Voltage	I	—
2	0.35	YE	6817	LED Backlight Dimming Control 1	I	—
3	0.5	BK / WH	2151	Signal Ground	I	—
4 - 6	—	—	—	Not Occupied	—	—

**X92G USB 2 Port Receptacle X2**

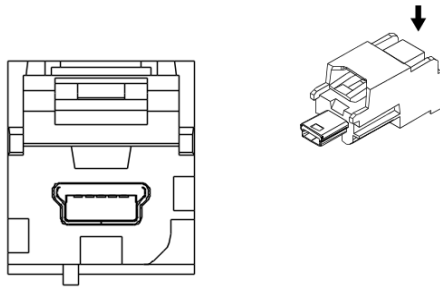

3028807

**Connector Part Information**

Harness Type: Instrument Panel Wiring Harness USB  
 OEM Connector: 13585100  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 5-Way M 2.0 Mini-B USB Type( GY)



**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**X92G USB 2 Port Receptacle X2**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	USB	—	USB Serial Data	I	—

## Inline Harness Connector End Views X100 Chassis Wiring Harness to Body Wiring Harness

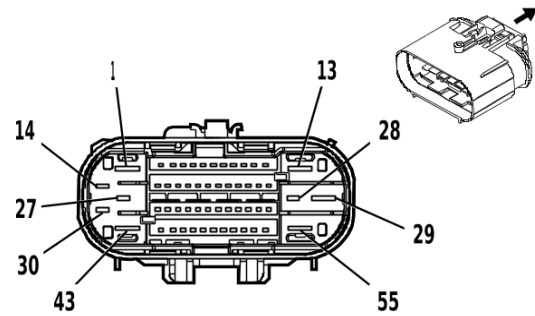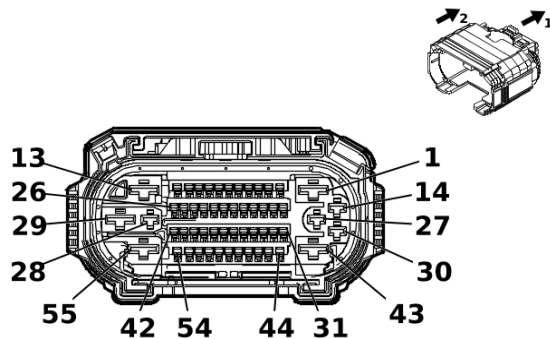

5246872

4994369

### Connector Part Information

Harness Type: Chassis Wiring Harness  
 OEM Connector: 35016653  
 Service Connector: 19371184  
 Description: 55-Way F 1.2 OCS, 2.8, 6.3 CTS Series, Sealed( GY)

### Connector Part Information

Harness Type: Body Wiring Harness  
 OEM Connector: 35205174  
 Service Connector: 84727363  
 Description: 55-Way M 1.2 OCS, 2.8, 6.3 CTS Series, Sealed( GY)

### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19370818	J-35616-12 (BU)	J-38125-215A
II	84634921	J-35616-42 (RD)	J-38125-212
III	84847992	J-35616-32 (OG)	J-38125-36
IV	84867140	J-35616-13 (BU)	J-38125-215A
V	84992391	J-35616-5 (PU)	J-38125-215A
VI	Not required	No Tool Required	No Tool Required

### X100 Chassis Wiring Harness to Body Wiring Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	6	GY	4368	II	—	Right Park Brake Motor Low Reference	1	2.5	GY	4368	III	—
2	0.5	VT / BU	5705	I	—	Powertrain Main Relay Control	2	0.5	VT / BU	5705	IV	—
3	0.5	BK	150	I	—	Ground	3	0.5	BK	150	IV	—
4	—	—	—	—	—	Not Occupied	4	—	—	—	—	—
5	0.5	BU / YE	4979	I	—	AUTOSAR CAN Bus [+] 2 Serial Data	5	0.5	BU / YE	4979	IV	—
6	0.5	WH	4978	I	—	AUTOSAR CAN Bus [-] 2 Serial Data	6	0.5	WH	4978	IV	—
7	—	—	—	—	—	Not Occupied	7	—	—	—	—	—

**6-414 Electrical Component and Inline Harness Connector End Views**

**X100 Chassis Wiring Harness to Body Wiring Harness (cont'd)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
8	0.5	BU / WH	1334	I	—	Left Rear Turn Signal Lamp Control 2	8	0.5	BU / WH	1334	IV	—
9	0.75	BU / VT	1335	I	—	Right Rear Turn Signal Lamp Control 2	9	0.5	BU / VT	1335	IV	—
10	—	—	—	—	—	Not Occupied	10	—	—	—	—	—
11	0.5	BN / BU	6993	I	—	Left Rear Park Lamp Control	11	0.5	BN / BU	6993	IV	—
12	0.5	BN / GY	6995	I	—	Right Rear Park Lamp Control	12	0.5	BN / GY	6995	IV	—
13	6	RD / BN	440	II	—	Battery Positive Voltage	13	6	RD / BN	440	III	—
14	—	—	—	—	—	Not Occupied	14	—	—	—	—	—
15	0.75	BU / WH	10119	I	—	AC Outlet 2 Low Reference	15	0.75	BK	10119	IV	—
16	0.75	BK / WH	10120	I	—	AC Outlet 2 Phase A Control	16	0.75	BK / WH	10120	IV	—
17	0.75	RD / WH	10121	I	—	AC Outlet 2 Phase B Control	17	0.75	RD / WH	10121	IV	—
18 - 19	—	—	—	—	—	Not Occupied	18 - 19	—	—	—	—	—
20	0.5	GY / VT	2691	I	—	Rear Closure Actuator Lock Control	20	0.5	GY / VT	2691	IV	—
21	0.5	GY / BK	2680	I	—	Lock Actuators Unlock Control 2	21	0.5	GY / BK	2680	IV	—
22 - 23	—	—	—	—	—	Not Occupied	22 - 23	—	—	—	—	—
24	0.75	RD / BU	840	I	—	Battery Positive Voltage	24	0.75	RD / BU	840	IV	—
25	0.5	GN / YE	6846	I	—	Rear License Plate Lamp Control	25	0.35	GN / YE	6846	IV	—
26	0.5	BN / GN	4246	I	—	Identification Lamp Control	26	0.5	BN / GN	4246	IV	—
27	—	—	—	—	—	Not Occupied	27	—	—	—	—	—
28	—	—	—	—	—	Ground	28	2.5	BK	150	V	—
29	6	GY / BK	4369	II	—	Left Park Brake Motor Low Reference	29	2.5	GY / BK	4369	III	—
30	—	—	—	—	—	Not Occupied	30	—	—	—	—	—

**X100 Chassis Wiring Harness to Body Wiring Harness (cont'd)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
31	0.5	BN / BU	1602	I	—	Front Brake Pad Wear Sensor Signal	31	0.5	BN / BU	1602	IV	—
32	0.5	BK / WH	2051	I	—	Signal Ground	32	0.5	BK / WH	2051	IV	—
33	0.5	YE	872	I	—	Right Front Wheel Speed Sensor Signal	33	0.5	YE	872	IV	—
34	0.5	GY / BN	7065	I	—	Right Front Wheel Speed Sensor Control	34	0.5	GY / BN	7065	IV	—
35	0.5	GY	830	I	—	Left Front Wheel Speed Sensor Signal	35	0.5	GY	830	IV	—
36	0.5	GY / WH	7064	I	—	Left Front Wheel Speed Sensor Control	36	0.5	GY / WH	7064	IV	—
37	0.5	VT	882	I	—	Right Rear Wheel Speed Sensor Signal	37	0.5	VT	882	IV	—
38	0.5	GY / YE	7128	I	—	Right Rear Wheel Speed Sensor Control	38	0.5	GY / YE	7128	IV	—
39	0.5	BU	884	I	—	Left Rear Wheel Speed Sensor Signal	39	0.5	BU	884	IV	—
40	0.5	GY / BK	7127	I	—	Left Rear Wheel Speed Sensor Control	40	0.5	GY / BK	7127	IV	—
41 - 42	—	—	—	—	—	Not Occupied	41 - 42	—	—	—	—	—
43	6	GN / VT	1988	II	—	Right Park Brake Motor Apply Control	43	2.5	GN / VT	1988	III	—
44	0.75	BK	1	I	—	Unfused Battery Positive Voltage	44	0.75	BK	2203	IV	—
45	0.5	GN / YE	1616	I	—	Rear Brake Pad Wear Sensor Signal	45	0.5	GN / YE	1616	IV	—
46	0.5	YE	2375	I	UD7	Left Rear Outer Parking Assist Sensor Signal	46	0.5	YE	2375	VI	—
47	0.75	BN / WH	2374	I	UD7	Object Sensor Voltage Reference	47	0.5	BN / WH	2374	VI	—


## 6-416 Electrical Component and Inline Harness Connector End Views

### X100 Chassis Wiring Harness to Body Wiring Harness (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
48	0.5	YE / BU	2376	I	UD7	Left Rear Middle Parking Assist Sensor Signal	48	0.5	YE / BU	2376	VI	—
49	0.5	YE / VT	2378	I	UD7	Right Rear Outer Parking Assist Sensor Signal	49	0.5	YE / VT	2378	VI	—
50	0.75	BK / GY	2379	I	UD7	Object Sensor Low Reference	50	0.5	BK / GY	2379	VI	—
51	0.5	YE / WH	2377	I	UD7	Right Rear Middle Parking Assist Sensor Signal	51	0.5	YE / WH	2377	VI	—
52 - 53	—	—	—	—	—	Not Occupied	52 - 53	—	—	—	—	—
54	0.75	BK	2206	I	—	Stabilizer Bar Disconnected Indicator Control	54	0.75	BK	2206	IV	—
55	6	WH	2001	II	—	Left Park Brake Motor Apply Control	55	2.5	WH	2001	III	—



### X101 Body Wiring Harness to Chassis Wiring Harness

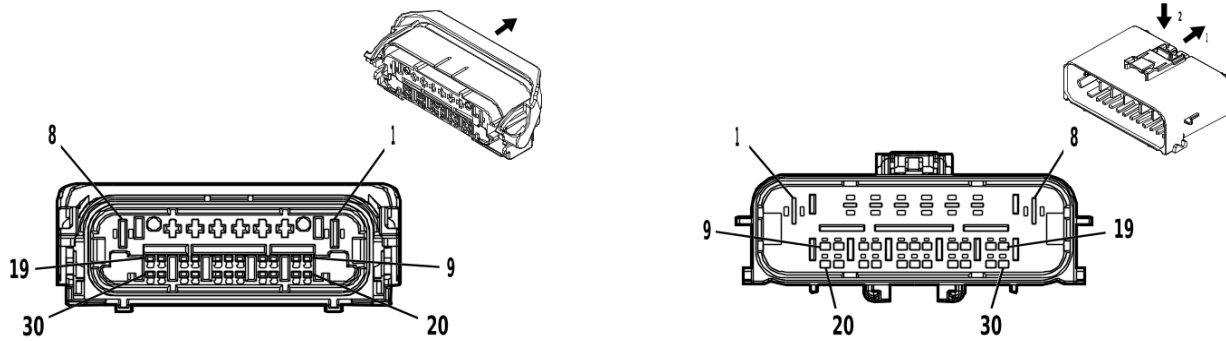

4650150

4817393

#### Connector Part Information

Harness Type: Body Wiring Harness  
 OEM Connector: 2301462-1  
 Service Connector: 19368311  
 Description: 30-Way F 1.2 MCON, 2.8, 6.3 MCP Series, Sealed( BK)

#### Connector Part Information

Harness Type: Chassis Wiring Harness  
 OEM Connector: 2401461-1  
 Service Connector: 19371177  
 Description: 30-Way M 1.2 MCON, 2.8, 6.3 MCP Series, Sealed( BK)

#### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19331733	J-35616-12 (BU)	J-38125-215A
II	19371214	J-35616-4A (PU)	J-38125-215A
III	13578827	J-35616-5 (PU)	J-38125-36
IV	19330704	J-35616-13 (BU)	J-38125-215A

### X101 Body Wiring Harness to Chassis Wiring Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	—	—	—	—	—	Not Occupied	1	—	—	—	—	—
2	0.5	BK	2250	II	—	Ground	2	0.5	BK	2250	III	—
3	0.5	WH / YE	7541	II	—	Right Rear Stop Lamp Control	3	0.5	WH / YE	7541	III	—
4	0.5	GY / YE	7542	II	—	Left Rear Stop Lamp Control	4	0.5	GY / YE	7542	III	—
5-6	—	—	—	—	—	Not Occupied	5-6	—	—	—	—	—
7	2.5	BU	47	II	—	Trailer Auxiliary Control	7	2.5	BU	47	III	—
8	—	—	—	—	—	Not Occupied	8	—	—	—	—	—
9	0.5	GN / WH	24	I	—	Backup Lamp Control	9	0.75	GN / WH	24	IV	—
10	0.5	WH / BK	2223	I	—	Trailer Brake Apply Signal	10	0.5	WH / BK	2223	IV	—
11	0.5	YE / BK	2224	I	—	Trailer Brake Enable Signal	11	0.5	YE / BK	2224	IV	—

**6-418 Electrical Component and Inline Harness Connector End Views**


**X101 Body Wiring Harness to Chassis Wiring Harness (cont'd)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
12	0.5	VT / BK	739	I	—	Run/Crank Ignition 1 Voltage	12	0.5	VT / BK	739	IV	—
13	—	—	—	—	—	Not Occupied	13	—	—	—	—	—
14	0.35	BN / YE	820	I	—	Center High Mounted Stop Lamp Supply Voltage	14	0.5	BN / YE	820	IV	—
15	0.5	GN / BU	2733	I	—	Brake System Control Module LIN Bus 2	15	0.5	GN / BU	2733	IV	—
16	0.5	BU / YE	4979	I	—	AUTOSAR CAN Bus [+] 2 Serial Data	16	0.5	BU / YE	4979	IV	—
17	0.5	WH	4978	I	—	AUTOSAR CAN Bus [-] 2 Serial Data	17	0.5	WH	4978	IV	—
18	0.5	BU / YE	4979	I	—	AUTOSAR CAN Bus [+] 2 Serial Data	18	0.5	BU / YE	4979	IV	—
19	0.5	WH	4978	I	—	AUTOSAR CAN Bus [-] 2 Serial Data	19	0.5	WH	4978	IV	—
20	0.5	GN / BN	2266	I	—	DC/AC Inverter Control 2	20	0.5	GN / BN	2266	IV	—
21	0.5	VT / RD	4049	I	—	AC Power Outlet Sensor High Reference	21	0.5	VT / RD	4049	IV	—
22	0.5	YE / GN	7122	I	—	Axle Differential Lock Switch Signal	22	0.5	YE / GN	7122	IV	—
23	0.5	YE	7115	I	—	Rear Axle Differential Lock Indicator Control	23	0.5	YE	7115	IV	—
24	0.5	VT / GY	7117	I	—	Front Axle Differential Lock Indicator Control	24	0.5	VT / GY	7117	IV	—
25	0.5	BU / VT	4101	I	—	AUTOSAR CAN Bus [+] 4 Serial Data	25	0.5	BU / VT	4101	IV	—
26	0.5	WH	4100	I	—	AUTOSAR CAN Bus [-] 4 Serial Data	26	0.5	WH	4100	IV	—
27	0.5	WH	4055	I	—	Private Serial Data Powertrain CAN Bus [+] Serial Data	27	0.5	WH	4055	IV	—
28	0.5	BU / GY	4054	I	—	Private Serial Data Powertrain CAN Bus [-] Serial Data	28	0.5	BU / GY	4054	IV	—


**X101 Body Wiring Harness to Chassis Wiring Harness (cont'd)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
29	0.5	BU / BK	4977	I	—	AUTOSAR CAN Bus [+] 3 Serial Data	29	0.5	BU / BK	4977	IV	—
30	0.5	WH	4976	I	—	AUTOSAR CAN Bus [-] 3 Serial Data	30	0.5	WH	4976	IV	—

**X107 Chassis Wiring Harness to Power Steering Wiring Harness**

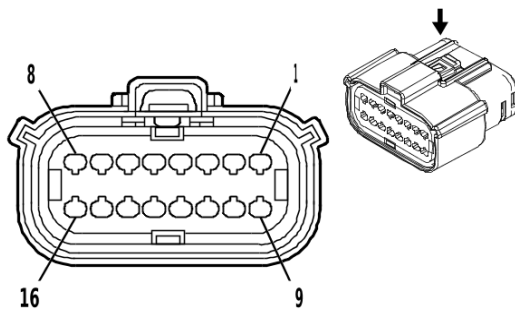

2548389

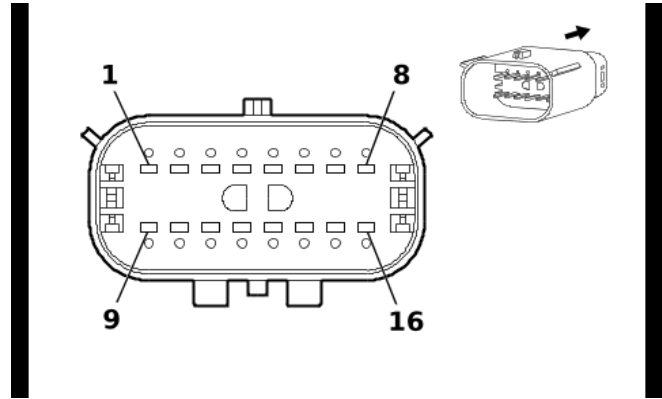

2548390

**Connector Part Information**

Harness Type: Chassis Wiring Harness  
 OEM Connector: 33472-1606  
 Service Connector: 13584788  
 Description: 16-Way F 1.5 MX Series, Sealed( BK)

**Connector Part Information**

Harness Type: Power Steering Wiring Harness  
 OEM Connector: 33482-8601  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 16-Way M 1.5 MX Series, Sealed( BK)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19368973	J-35616-2A (GY)	J-38125-217
II	Not required	J-35616-3 (GY)	No Tool Required


**X107 Chassis Wiring Harness to Power Steering Wiring Harness**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.5	BU / YE	4979	I	—	AUTOSAR CAN Bus [+] 2 Serial Data	1	0.5	BU / YE	4979	II	—
2	0.5	WH	4978	I	—	AUTOSAR CAN Bus [-] 2 Serial Data	2	0.5	WH	4978	II	—
3 - 4	—	—	—	—	—	Not Occupied	3 - 4	—	—	—	—	—
5	0.5	BU / YE	4979	I	—	AUTOSAR CAN Bus [+] 2 Serial Data	5	0.5	BU / YE	4979	II	—
6	0.5	WH	4978	I	—	AUTOSAR CAN Bus [-] 2 Serial Data	6	0.5	WH	4978	II	—
7 - 8	—	—	—	—	—	Not Occupied	7 - 8	—	—	—	—	—
9	0.75	VT / WH	7256	I	—	Front Differential Lock Actuator Control	9	0.75	VT / WH	7256	II	—
10	0.75	WH / BK	7254	I	—	Front Differential Lock Actuator Low Control	10	0.75	WH / BK	7254	II	—
11 - 12	—	—	—	—	—	Not Occupied	11 - 12	—	—	—	—	—

**X107 Chassis Wiring Harness to Power Steering Wiring Harness (cont'd)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
13	0.5	YE / WH	1695	I	—	4WD Locked Range Indicator Control	13	0.5	YE / WH	1695	II	—
14	0.5	GY / BK	1570	I	—	Front Axle Actuator Control	14	0.5	GY / BK	1570	II	—
15	0.5	BK	2250	I	—	Ground	15	0.5	BK	2250	II	—
16	0.5	GN	8016	I	—	Secondary Axle Motor Control	16	0.5	GN	8016	II	—


**X144 Engine Wiring Harness to Camshaft Position Actuator Solenoid Valve - Exhaust Jumper Wiring Harness**

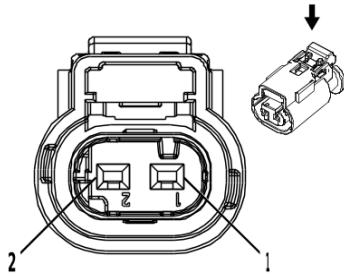

2717066

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 10010337  
 Service Connector: 13587326  
 Description: 2-Way F 1.2 Multilock Series, Sealed( BK)

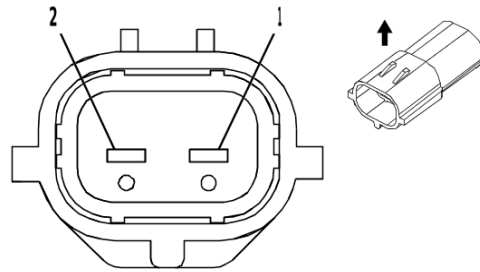

2684367

**Connector Part Information**

Harness Type: Camshaft Position Actuator Solenoid Valve - Exhaust Jumper Wiring Harness  
 OEM Connector: Not Available  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way M ( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required
II	Not required	No Tool Required	No Tool Required

**X144 Engine Wiring Harness to Camshaft Position Actuator Solenoid Valve - Exhaust Jumper Wiring Harness**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.5	YE / BN	106	I	—	Oil Pump Motor Control	1	0.5	YE / BN	106	II	—
2	0.5	BU	179	I	—	Engine Oil Pump Control	2	0.5	BU	179	II	—

### X150 Body Wiring Harness to Forward Lamp Wiring Harness

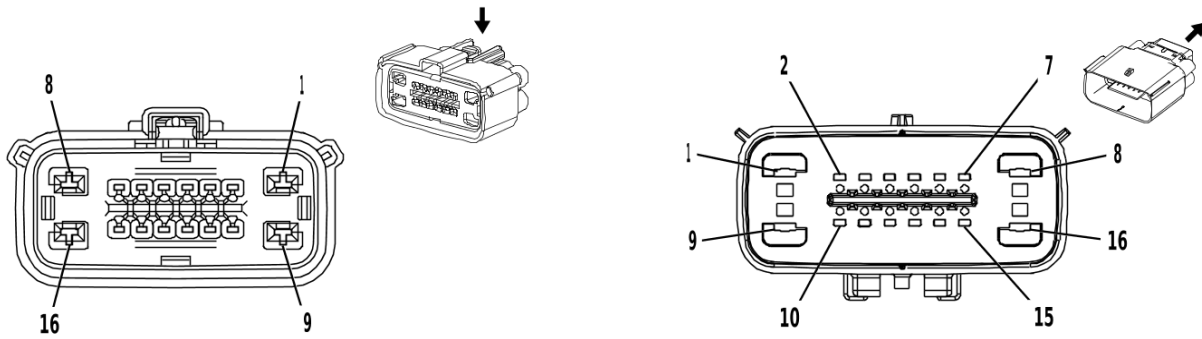

3684497

2373686

#### Connector Part Information

Harness Type: Body Wiring Harness  
 OEM Connector: 34985-1606  
 Service Connector: 19352906  
 Description: 16-Way F 1.5, 2.8 MX Series, Sealed( BK)

#### Connector Part Information

Harness Type: Forward Lamp Wiring Harness  
 OEM Connector: 34986-1601  
 Service Connector: 19331031  
 Description: 16-Way M 1.5, 2.8 MX Series, Sealed( BK)

#### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	13576377	J-35616-35 (VT)	J-38125-12A
II	85528055	J-35616-2A (GY)	J-38125-217
III	19366658	J-35616-5 (PU)	J-38125-12A
IV	86800300	J-35616-3 (GY)	J-38125-217

#### X150 Body Wiring Harness to Forward Lamp Wiring Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.75	RD / WH	640	I	—	Battery Positive Voltage	1	0.75	RD / WH	640	III	—
2	0.75	YE	712	II	—	Left Head-lamp Low Beam Control	2	0.75	YE	712	IV	—
3	0.75	WH	711	II	—	Left Head-lamp High Beam Control	3	0.75	WH	711	IV	—
4	0.35	WH / YE	1254	II	—	Left Front Park Lamp Control	4	0.5	WH / YE	1254	IV	—
5	0.5	WH / YE	1204	II	—	Left Park Lamp Control 2	5	0.5	WH / YE	1204	IV	—
6 - 8	—	—	—	—	—	Not Occupied	6 - 8	—	—	—	—	—
9	2.5	BK	150	I	—	Ground	9	2.5	BK	150	III	—
10	0.5	GY / BU	7538	II	—	Left Front DRL Control	10	0.5	GY / BU	7538	IV	—
11	0.5	BU / WH	1314	II	—	Left Front Turn Signal Lamp Control	11	0.5	BU / WH	1314	IV	—


**6-424 Electrical Component and Inline Harness Connector End Views**

**X150 Body Wiring Harness to Forward Lamp Wiring Harness (cont'd)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
12	0.35	VT / BK	6568	II	—	Front Turn Signal Lamp Feedback Signal	12	—	—	—	—	—
13	—	—	—	—	—	Not Occupied	13	—	—	—	—	—
14	0.5	OG / YE	354	II	—	Left Front Impact Discriminating Sensor Signal	14	0.5	OG / YE	354	IV	—
15	0.5	BK / OG	5045	II	—	Left Front Impact Discriminating Sensor Low Reference	15	0.5	BK / OG	5045	IV	—
16	—	—	—	—	—	Not Occupied	16	—	—	—	—	—




**X156 Body Wiring Harness to Forward Lamp Wiring Harness**

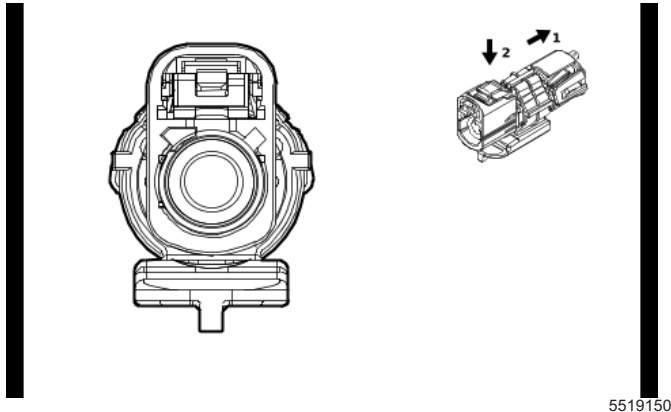

5519150

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 13529796  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 1-Way F Coax Type, Sealed( BK)

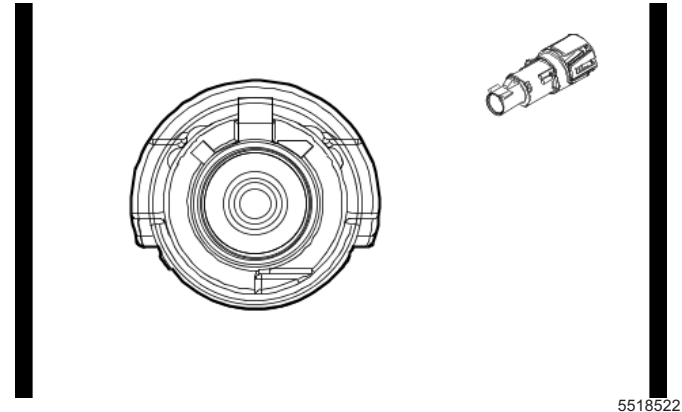

5518522

**Connector Part Information**

Harness Type: Forward Lamp Wiring Harness  
 OEM Connector: 13516806  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 1-Way M Coax Type, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**X156 Body Wiring Harness to Forward Lamp Wiring Harness**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
—	—	LVDS	—	I	—	(PDR) Front Vision Camera #2	—	—	LVDS	—	I	—

**X160 Engine Wiring Harness to Fuel Injector Wiring Harness**

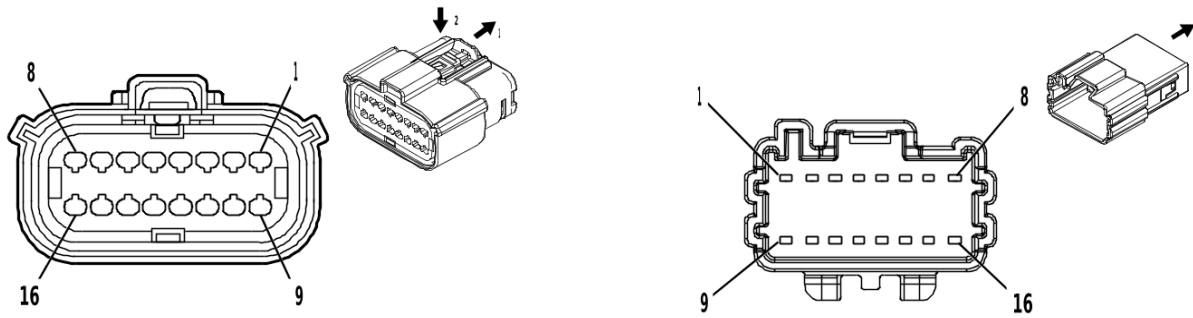

4574233

4223086

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 33472-1866  
 Service Connector: 13584788  
 Description: 16-Way F 1.5 MX Series, Sealed( BK)

**Connector Part Information**

Harness Type: Fuel Injector Wiring Harness  
 OEM Connector: Not Available  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 16-Way M ( BK)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19368973	J-35616-2A (GY)	J-38125-217
II	Not required	No Tool Required	No Tool Required


**X160 Engine Wiring Harness to Fuel Injector Wiring Harness**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.5	VT / GY	496	I	—	Knock Sensor 1 Signal	1	0.5	VT / GY	496	II	—
2	0.75	BN	4801	I	—	Direct Fuel Injector High Voltage Control Cylinder 1	2	0.75	BN	4801	II	—
3	0.5	WH / RD	480	I	—	Engine Control Vehicle Sensors 5 Volt Reference 1	3	0.5	WH / RD	480	II	—
4	0.75	GY / BU	4804	I	—	Direct Fuel Injector High Voltage Control Cylinder 4	4	0.75	GY / BU	4804	II	—
5	—	—	—	—	—	Not Occupied	5	—	—	—	—	—
6	0.75	GN	4803	I	—	Direct Fuel Injector High Voltage Control Cylinder 3	6	0.75	GN	4803	II	—
7	0.75	BU	4802	I	—	Direct Fuel Injector High Voltage Control Cylinder 2	7	0.75	BU	4802	II	—


**X160 Engine Wiring Harness to Fuel Injector Wiring Harness (cont'd)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
8	0.5	WH / GY	1876	I	—	Knock Sensor 2 Signal	8	0.5	WH / GY	1876	II	—
9	0.5	BK / YE	1716	I	—	Knock Sensor Low Reference 1	9	0.5	BK / YE	1716	II	—
10	0.75	BN / WH	4901	I	—	Direct Fuel Injector High Voltage Supply Cylinder 1	10	0.75	BN / WH	4901	II	—
11	0.5	BU / WH	2918	I	—	Fuel Rail Pressure Sensor Signal	11	0.5	BU / WH	2918	II	—
12	0.5	BK / GN	580	I	—	Engine Control Sensors Low Reference 2	12	0.5	BK / GN	580	II	—
13	0.75	BU / WH	4904	I	—	Direct Fuel Injector High Voltage Supply Cylinder 4	13	0.75	BU / WH	4904	II	—
14	0.75	GN / GY	4903	I	—	Direct Fuel Injector High Voltage Supply Cylinder 3	14	0.75	GN / GY	4903	II	—
15	0.75	BU / GY	4902	I	—	Direct Fuel Injector High Voltage Supply Cylinder 2	15	0.75	BU / GY	4902	II	—
16	0.5	BK / GY	2303	I	—	Knock Sensor Low Reference 2	16	0.5	BK / GY	2303	II	—

**X175 Engine Wiring Harness to Transmission Wiring Harness**

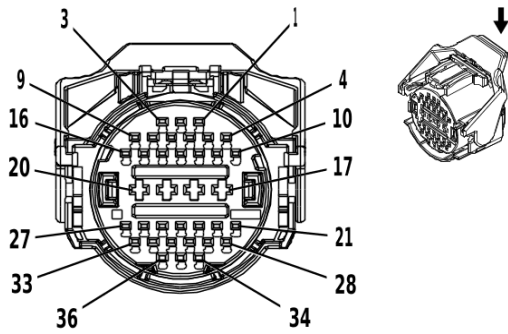

3621473

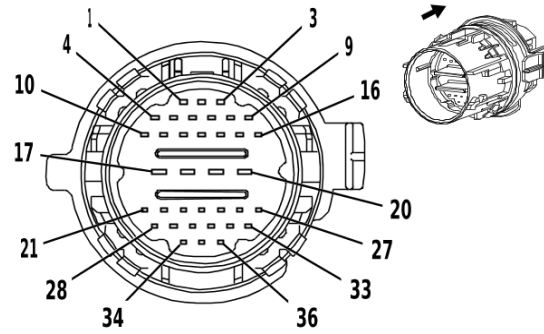

3977661

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 2138314-1  
 Service Connector: 19329922  
 Description: 36-Way F 1.2 MCON-CB, 2.8 MCP Series, Sealed( BK)

**Connector Part Information**

Harness Type: Transmission Wiring Harness  
 OEM Connector: Not Available  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 36-Way M ( BK)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	13575368	J-35616-35 (VT)	J-38125-36
II	19300445	J-35616-12 (BU)	J-38125-11A
III	Not required	No Tool Required	No Tool Required

**X175 Engine Wiring Harness to Transmission Wiring Harness**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.5	GN / BN	6380	II	—	Torque Converter Clutch Enable Solenoid Valve A Control	1	0.5	GN / BN	6380	III	—
2	—	—	—	—	—	Not Occupied	2	—	—	—	—	—
3	0.5	VT / WH	422	II	—	Torque Converter Clutch Solenoid Valve Control	3	0.5	VT / WH	422	III	—
4	0.5	GN / BU	1530	II	—	Transmission Line Pressure Control Solenoid Valve Control	4	0.5	GN / BU	1530	III	—
5	0.5	BN	6400	II	—	Clutch Solenoid Valve A Control	5	0.5	BN	6400	III	—
6	0.5	BU	6401	II	—	Clutch Solenoid Valve B Control	6	0.5	BU	6401	III	—

**X175 Engine Wiring Harness to Transmission Wiring Harness (cont'd)**


Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
7	0.5	YE / BN	6210	II	—	Torque Converter Clutch Enable Solenoid Valve B Control	7	0.5	YE / BN	6210	III	—
8	0.5	GN / WH	2968	II	—	Transmission Auxiliary Fluid Pump Control	8	0.5	GN / WH	2968	III	—
9	—	—	—	—	—	Not Occupied	9	—	—	—	—	—
10	0.5	GY	6402	II	—	Clutch Solenoid Valve C Control	10	0.5	GY	6402	III	—
11	0.5	BK / BN	586	II	—	Transmission Fluid Temperature Sensor Low Reference	11	0.5	BK / BN	586	III	—
12	0.5	BN / WH	585	II	—	Transmission Fluid Temperature Sensor Signal	12	0.5	BN / WH	585	III	—
13	0.5	WH	4508	II	—	Transmission Clutch G Control	13	0.5	WH	4508	III	—
14	0.5	WH / BU	4507	II	—	Transmission Clutch H Control	14	0.5	WH / BU	4507	III	—
15 - 16	—	—	—	—	—	Not Occupied	15 - 16	—	—	—	—	—
17	1.5	RD / BU	840	I	—	Battery Positive Voltage	17	1.5	RD / BU	840	III	—
18	0.75	GN / GY	6387	I	—	Transmission High Side Driver 1 Control	18	0.75	GN / GY	6387	III	—
19	0.75	GY / BN	6388	I	—	Transmission High Side Driver 2 Control	19	0.75	GY / BN	6388	III	—
20	1.5	BK	450	I	—	Ground	20	1.5	BK	6250	III	—
21	0.5	GN / BK	3337	II	—	Transmission Internal Mode Switch Mode Control Y	21	0.5	GN / YE	3337	III	—
22	0.5	BU / WH	3338	II	—	Transmission Internal Mode Switch Mode Control X	22	0.5	BU / WH	3338	III	—
23	—	—	—	—	—	Not Occupied	23	—	—	—	—	—
24	0.5	GY / BU	6358	II	—	Output Speed Signal	24	0.5	GY / BU	6358	III	—

**6-430 Electrical Component and Inline Harness Connector End Views**


**X175 Engine Wiring Harness to Transmission Wiring Harness (cont'd)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
25	0.5	YE / GN	4170	II	—	Transmission Output Shaft Speed Sensor Circuit 9V Reference	25	0.5	YE / GN	4170	III	—
26	0.5	GN / RD	6353	II	—	Input Speed Signal	26	0.5	GN / YE	6353	III	—
27	0.5	YE / BU	4171	II	—	Transmission Input Shaft Speed Sensor Circuit 9V Reference	27	0.5	YE / BU	4171	III	—
28	—	—	—	—	—	Not Occupied	28	—	—	—	—	—
29	0.5	WH / RD	480	II	—	Engine Control Vehicle Sensors 5 Volt Reference 1	29	0.5	WH / RD	480	III	—
30	0.5	BK / GY	626	II	—	Engine Control Vehicle Sensors Low Reference 1	30	0.5	BK / GY	626	III	—
31	—	—	—	—	—	Not Occupied	31	—	—	—	—	—
32	0.5	GN / VT	4510	II	—	Transmission Intermediate Speed Signal	32	0.5	GN / VT	4510	III	—
33	—	—	—	—	—	Not Occupied	33	—	—	—	—	—
34	0.5	GY / RD	10817	II	—	Lubricant Circuit Pressure Sensor 5 Volt Reference	34	0.5	GY / RD	10817	III	—
35	0.5	BU / BK	10819	II	—	Lubricant Circuit Pressure Sensor Low Reference	35	0.5	BU / BK	10819	III	—
36	0.5	GN / YE	10816	II	—	Lubricant Circuit Pressure Sensor Signal	36	0.5	GN / YE	10816	III	—

### X176 Automatic Transmission Wiring Harness to Automatic Transmission Wiring Harness

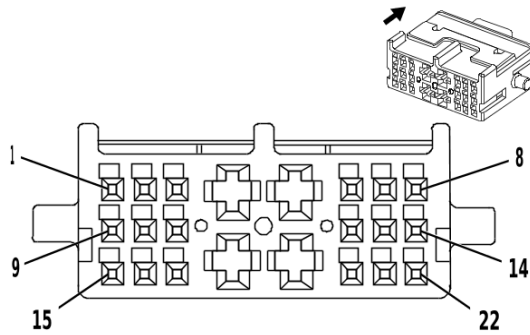

3977748

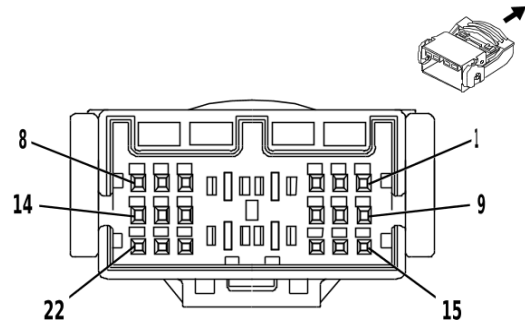

3977770

#### Connector Part Information

Harness Type: Automatic Transmission Wiring Harness  
 OEM Connector: 1897543-1  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 22-Way F 0.64 Micro-Quadlock, 2.8 Micro-Power Series( NA)

#### Connector Part Information

Harness Type: Automatic Transmission Wiring Harness  
 OEM Connector: 1897540-1  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 22-Way M 0.64 Micro-Quadlock, 2.8 Micro-Power Series( NA)

#### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required
II	Not required	No Tool Required	No Tool Required

### X176 Automatic Transmission Wiring Harness to Automatic Transmission Wiring Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	—	—	—	—	—	Not Occupied	1	—	—	—	—	—
2	—	BU / WH	3338	I	—	Transmission Internal Mode Switch Mode Control X	2	—	BU / WH	3338	II	—
3	—	GY / RD	10817	I	—	Lubricant Circuit Pressure Sensor 5 Volt Reference	3	—	GY / RD	10817	II	—
4	—	GN / GY	6387	I	—	Transmission High Side Driver 1 Control	4	—	GN / GY	6387	II	—
5	—	WH / RD	480	I	—	Engine Control Vehicle Sensors 5 Volt Reference 1 Battery Positive Voltage	5	—	WH / RD	480	II	—
	—	RD / GN	840	I	—		5	—	RD / GN	840	II	—
6 - 8	—	—	—	—	—	Not Occupied	6 - 8	—	—	—	—	—


**6-432 Electrical Component and Inline Harness Connector End Views**

**X176 Automatic Transmission Wiring Harness to Automatic Transmission Wiring Harness (cont'd)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
9	—	WH	4508	I	—	Transmission Clutch G Control	9	—	WH	4508	II	—
10	—	YE / BN	6210	I	—	Torque Converter Clutch Enable Solenoid Valve B Control	10	—	YE / BN	6210	II	—
11	—	GN / YE	3337	I	—	Transmission Internal Mode Switch Mode Control Y	11	—	GN / YE	3337	II	—
12	—	BU / BK	10819	I	—	Lubricant Circuit Pressure Sensor Low Reference	12	—	BU / BK	10819	II	—
13	—	GY	6402	I	—	Clutch Solenoid Valve C Control	13	—	GY	6402	II	—
14	—	GN / WH	1530	I	—	Transmission Line Pressure Control Solenoid Valve Control	14	—	GN / WH	1530	II	—
15	—	BN / WH	585	I	—	Transmission Fluid Temperature Sensor Signal	15	—	BN / WH	585	II	—
16	—	BK / BN	586	I	—	Transmission Fluid Temperature Sensor Low Reference	16	—	BK / BN	586	II	—
17	—	GN / YE	10816	I	—	Lubricant Circuit Pressure Sensor Signal	17	—	GN / YE	10816	II	—
18	—	GY / BN	6388	I	—	Transmission High Side Driver 2 Control	18	—	GY / BN	6388	II	—
19	—	BK	450	I	—	Ground Transmission Ground	19	—	BK	6250	II	—
	—	BK	6250	I	—							
20	—	BK / GY	626	I	—	Engine Control Vehicle Sensors Low Reference 1	20	—	BK / GY	626	II	—
21	—	BN	6400	I	—	Clutch Solenoid Valve A Control	21	—	BN	6400	II	—
22	—	BU	6401	I	—	Clutch Solenoid Valve B Control	22	—	BU	6401	II	—




**X195 Forward Lamp Wiring Harness to Front Object Alarm Sensor Wiring Harness**

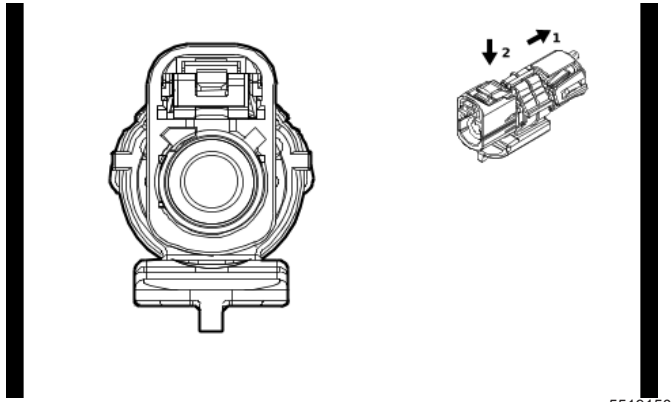

5519150

**Connector Part Information**

Harness Type: Forward Lamp Wiring Harness COAX  
 OEM Connector: 13529796  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 1-Way F Coax Type, Sealed( BK)

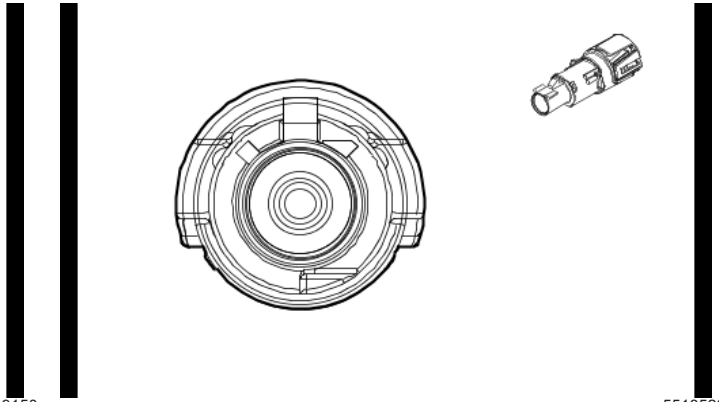

5518522

**Connector Part Information**

Harness Type: Front Object Alarm Sensor Wiring Harness COAX  
 OEM Connector: 13516806  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 1-Way M Coax Type, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**X195 Forward Lamp Wiring Harness to Front Object Alarm Sensor Wiring Harness**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
—	—	Coax Cable	—	I	—	Front Vision Camera 1 Coaxial Video Signal	—	—	Coax Cable	—	I	—

**X198 Power Steering Wiring Harness to Battery Wiring Harness**

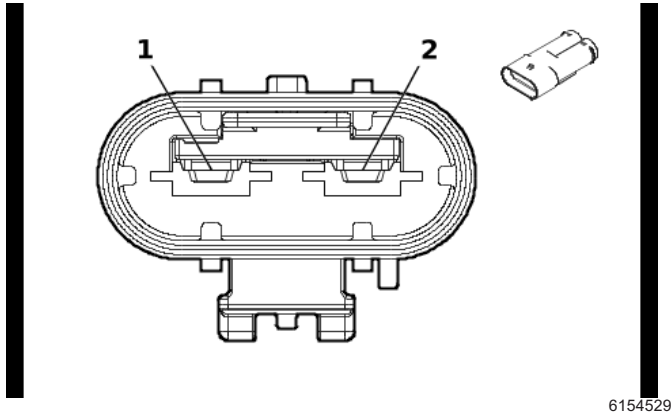

**Connector Part Information**

Harness Type: Power Steering Wiring Harness  
 OEM Connector: 13544729  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F 12 MAS Series( BK)

**Connector Part Information**

Harness Type: Battery Wiring Harness  
 OEM Connector: Not Available  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way M ( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required
II	Not required	No Tool Required	No Tool Required

**X198 Power Steering Wiring Harness to Battery Wiring Harness**


Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	16	RD / VT	542	I	—	Battery Positive Voltage	1	16	RD / VT	542	II	—
2	16	BK	250	I	—	Ground	2	16	BK	250	II	—

### X199 Chassis Wiring Harness to Body Wiring Harness

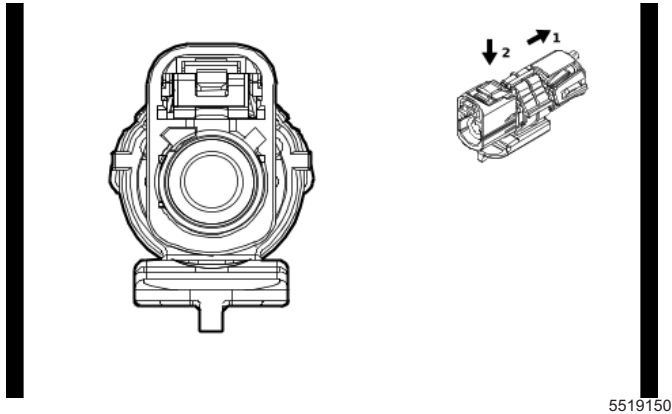

#### Connector Part Information

Harness Type: Chassis Wiring Harness COAX  
 OEM Connector: 13529796  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 1-Way F Coax Type, Sealed( BK)

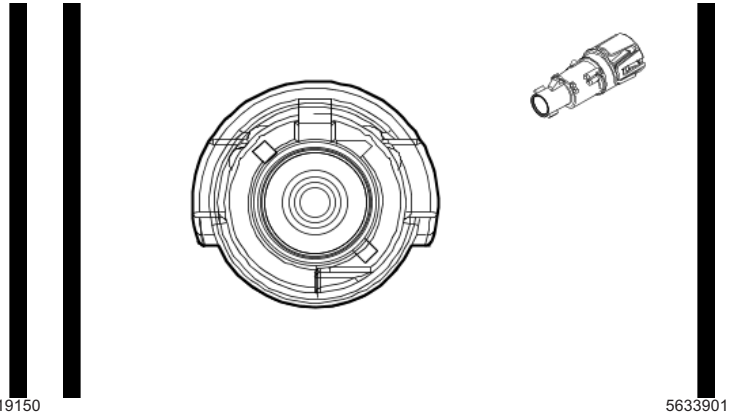

#### Connector Part Information

Harness Type: Body Wiring Harness COAX  
 OEM Connector: 13516808  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 1-Way M Coax Type, Sealed( BU)



#### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

#### X199 Chassis Wiring Harness to Body Wiring Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
—	—	Coax Cable	—	I	—	Rear Vision Camera Co-axial Video Signal	—	—	Coax Cable	—	I	—

X201 Engine Wiring Harness to Body Wiring Harness

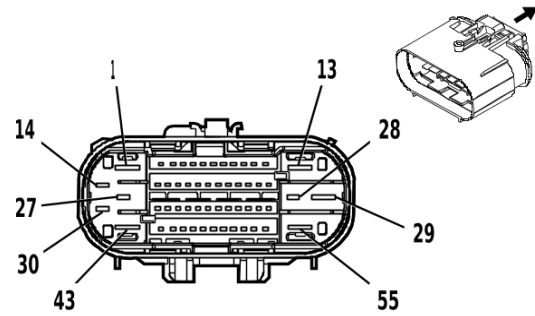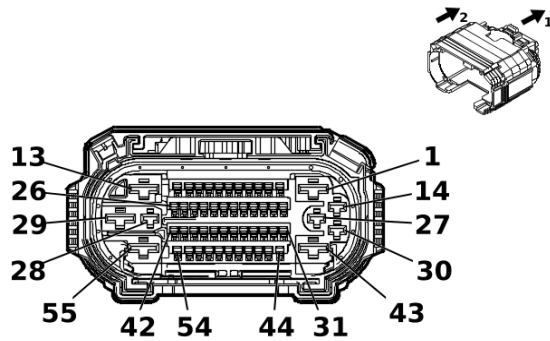

5246872

4994369

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 35016653  
 Service Connector: 19371184  
 Description: 55-Way F 1.2 OCS, 2.8, 6.3 CTS Series, Sealed( GY)

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 35205174  
 Service Connector: 84727363  
 Description: 55-Way M 1.2 OCS, 2.8, 6.3 CTS Series, Sealed( GY)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19332901	J-35616-35 (VT)	J-38125-212
II	19370818	J-35616-12 (BU)	J-38125-215A
III	84867140	J-35616-13 (BU)	J-38125-215A
IV	84992391	J-35616-5 (PU)	J-38125-215A

**X201 Engine Wiring Harness to Body Wiring Harness**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	—	—	—	—	—	Not Occu- pied	1	—	—	—	—	—
2	0.75	BK	5133	II	—	Left Rear Door Dead Lock Lock Signal	2	0.75	BK	2201	III	—
3	—	—	—	—	—	Not Occu- pied	3	—	—	—	—	—
4	0.5	GN / VT	4621	II	—	Engine Con- trol Module LIN Bus 1	4	0.5	GN / VT	4621	III	—
5	0.5	WH	4055	II	—	Private Serial Data Power- train CAN Bus [+] Serial Data	5	0.5	WH	4055	III	—
6	0.5	BU / GY	4054	II	—	Private Serial Data Power- train CAN Bus [-] Serial Data	6	0.5	BU / GY	4054	III	—
7	0.5	BU / BK	4977	II	—	AUTOSAR CAN Bus [+] 3 Serial Data	7	0.5	BU / BK	4977	III	—

**X201 Engine Wiring Harness to Body Wiring Harness (cont'd)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
8	0.5	WH	4976	II	—	AUTOSAR CAN Bus [-] 3 Serial Data	8	0.5	WH	4976	III	—
9-11	—	—	—	—	—	Not Occupied	9-11	—	—	—	—	—
12	0.75	BK	5133	II	—	Left Rear Door Dead Lock Lock Signal	12	0.75	BK	2202	III	—
13-14	—	—	—	—	—	Not Occupied	13-14	—	—	—	—	—
15	0.5	WH / RD	480	II	—	Engine Control Vehicle Sensors 5 Volt Reference 1	15	0.5	WH / RD	480	III	—
16	0.5	WH / GN	5380	II	—	Brake Position Sensor Signal	16	0.5	WH / GN	5380	III	—
17	0.5	BK / GY	626	II	—	Engine Control Vehicle Sensors Low Reference 1	17	0.5	BK / GY	626	III	—
18	0.5	BK / GY	626	II	—	Engine Control Vehicle Sensors Low Reference 1	18	0.5	BK / GY	626	III	—
19	0.5	BU / GY	636	II	—	Ambient Air Temperature Sensor Signal	19	0.5	BU / GY	636	III	—
20	0.5	YE / BK	625	II	—	Starter Enable Relay Control	20	0.5	YE / BK	625	III	—
21	0.5	VT / GN	4320	II	—	Powertrain Sensor Bus Enable	21	0.5	VT / GN	4320	III	—
22	0.5	VT / BK	2139	II	—	Run/Crank Ignition 1 Voltage	22	0.5	VT / BK	2139	III	—
23	—	—	—	—	—	Not Occupied	23	—	—	—	—	—
24	0.5	WH / RD	1164	II	—	Accelerator Pedal Position 5V Reference 1	24	0.5	WH / RD	1164	III	—
25	0.5	YE / WH	1161	II	—	Accelerator Pedal Position Signal 1	25	0.5	YE / WH	1161	III	—
26	0.5	BK / BU	1271	II	—	Accelerator Pedal Position Low Reference 1	26	0.5	BK / BU	1271	III	—
27	—	—	—	—	—	Not Occupied	27	—	—	—	—	—
28	0.75	RD / GN	1840	I	—	Battery Positive Voltage	28	1.5	RD / GN	1840	IV	—


**X201 Engine Wiring Harness to Body Wiring Harness (cont'd)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
29 - 31	—	—	—	—	—	Not Occupied	29 - 31	—	—	—	—	—
32	0.5	BU / BN	7573	II	—	Air Conditioning Compressor Solenoid Valve Control	32	0.5	BU / BN	7573	III	—
33	0.5	BU / YE	7574	II	—	Air Conditioning Compressor Solenoid Valve Control	33	0.5	BU / YE	7574	III	—
34	—	—	—	—	—	Not Occupied	34	—	—	—	—	—
35	0.5	YE	4063	II	—	Hood Status A Signal	35	0.5	YE	4063	III	—
36	—	—	—	—	—	Not Occupied	36	—	—	—	—	—
37	0.5	VT / GY	139	II	—	Run/Crank Ignition 1 Voltage	37	0.5	VT / BK	739	III	—
38 - 39	—	—	—	—	—	Not Occupied	38 - 39	—	—	—	—	—
40	0.5	BN / RD	1274	II	—	Accelerator Pedal Position 5V Reference 2	40	0.5	BN / RD	1274	III	—
41	0.5	GN / WH	1162	II	—	Accelerator Pedal Position Signal 2	41	0.5	GN / WH	1162	III	—
42	0.5	BK / VT	1272	II	—	Accelerator Pedal Position Low Reference 2	42	0.5	BK / VT	1272	III	—
43	—	—	—	—	—	Not Occupied	43	—	—	—	—	—
44	0.75	BK	5133	II	—	Left Rear Door Dead Lock Lock Signal	44	0.75	BK	2204	III	—
45 - 46	—	—	—	—	—	Not Occupied	45 - 46	—	—	—	—	—
47	0.5	BU / RD	460	II	—	Engine Control Sensors 5 Volt Reference 1	47	0.5	BU / RD	460	III	—
48	0.5	BK / YE	548	II	—	Engine Control Sensors Low Reference 1	48	0.5	BK / YE	548	III	—
49	0.5	YE / WH	3200	II	—	Throttle Inlet Absolute Pressure Sensor Signal	49	0.5	YE / WH	3200	III	—

**X201 Engine Wiring Harness to Body Wiring Harness (cont'd)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
50 - 53	—	—	—	—	—	Not Occupied	50 - 53	—	—	—	—	—
54	0.75	BK	5133	II	—	Left Rear Door Dead Lock Lock Signal	54	0.75	BK	2205	III	—
55	—	—	—	—	—	Not Occupied	55	—	—	—	—	—

**X204 Engine Wiring Harness to Chassis Wiring Harness**

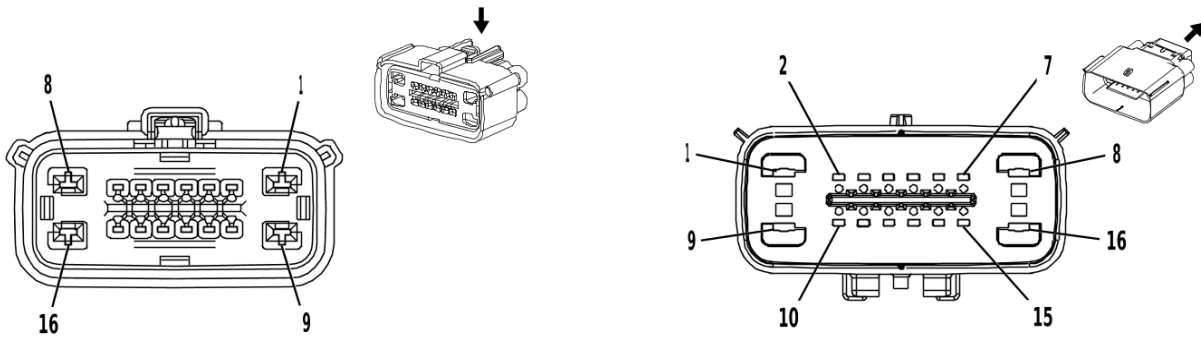

3684497

2373686

**Connector Part Information**

Harness Type: Engine Wiring Harness  
 OEM Connector: 34985-1601  
 Service Connector: 19352906  
 Description: 16-Way F 1.5, 2.8 MX Series, Sealed( BK)

**Connector Part Information**

Harness Type: Chassis Wiring Harness  
 OEM Connector: 34986-1601  
 Service Connector: 19331031  
 Description: 16-Way M 1.5, 2.8 MX Series, Sealed( BK)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	13576377	J-35616-35 (VT)	J-38125-12A
II	85528055	J-35616-2A (GY)	J-38125-217
III	19366658	J-35616-5 (PU)	J-38125-12A
IV	86800300	J-35616-3 (GY)	J-38125-217

**X204 Engine Wiring Harness to Chassis Wiring Harness**


Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	3	RD / WH	2242	I	—	Battery Positive Voltage	1	3	RD / WH	2242	III	—
2	—	—	—	—	—	Not Occupied	2	—	—	—	—	—
3	0.5	GY / BK	1570	II	—	Front Axle Actuator Control	3	0.5	GY / BK	1570	IV	—
4	0.5	YE / WH	1695	II	—	4WD Locked Range Indicator Control	4	0.5	YE / WH	1695	IV	—
5	—	—	—	—	—	Not Occupied	5	—	—	—	—	—
6	0.5	VT / GN	4320	II	—	Powertrain Sensor Bus Enable	6	0.5	VT / GN	4320	IV	—
7	0.5	GN / GY	465	II	—	Fuel Pump Primary Relay Control	7	0.5	GN / GY	465	IV	—
8-10	—	—	—	—	—	Not Occupied	8-10	—	—	—	—	—
11	0.5	GN / VT	4621	II	—	Engine Control Module LIN Bus 1	11	0.5	GN / VT	4621	IV	—




**X204 Engine Wiring Harness to Chassis Wiring Harness (cont'd)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
12	0.5	BU / YE	4979	II	—	AUTOSAR CAN Bus [+] 2 Serial Data	12	0.5	BU / YE	4979	IV	—
13	0.5	WH	4978	II	—	AUTOSAR CAN Bus [-] 2 Serial Data	13	0.5	WH	4978	IV	—
14	0.5	BU / BK	4977	II	—	AUTOSAR CAN Bus [+] 3 Serial Data	14	0.5	BU / BK	4977	IV	—
15	0.5	WH	4976	II	—	AUTOSAR CAN Bus [-] 3 Serial Data	15	0.5	WH	4976	IV	—
16	—	—	—	—	—	Not Occupied	16	—	—	—	—	—

**X250A Radiator Shutter Wiring Harness to Forward Lamp Wiring Harness**

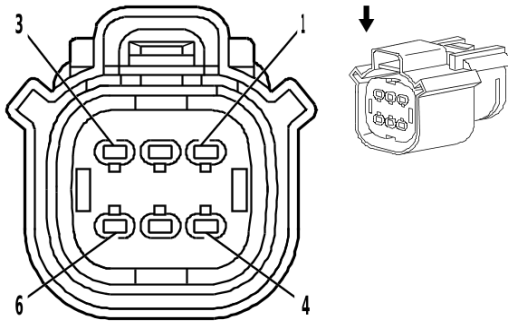

1664625

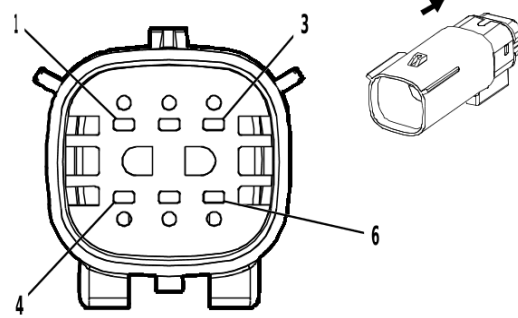

1986159

**Connector Part Information**

Harness Type: Radiator Shutter Wiring Harness  
 OEM Connector: Not Available  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 6-Way F

**Connector Part Information**

Harness Type: Forward Lamp Wiring Harness  
 OEM Connector: 33482-3640  
 Service Connector: 19370462  
 Description: 6-Way M 1.5 MX Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required
II	Not required	J-35616-3 (GY)	No Tool Required

**X250A Radiator Shutter Wiring Harness to Forward Lamp Wiring Harness**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.5	GN / VT	4621	I	—	Engine Control Module LIN Bus 1	1	0.5	GN / VT	4621	II	—
2	0.5	BK	150	I	—	Ground	2	0.5	BK	150	II	—
3	0.5	VT / BU	5705	I	—	Powertrain Main Relay Control	3	0.5	VT / BU	5705	II	—
4	—	—	—	—	—	Not Occupied	4	—	—	—	—	—
5	0.5	BU / GY	636	I	—	Ambient Air Temperature Sensor Signal	5	0.5	BU / GY	636	II	—
6	0.5	BK / GY	626	I	—	Engine Control Vehicle Sensors Low Reference 1	6	0.5	BK / GY	626	II	—

## X250J Windshield Washer Pump Jumper Wiring Harness to Forward Lamp Wiring Harness

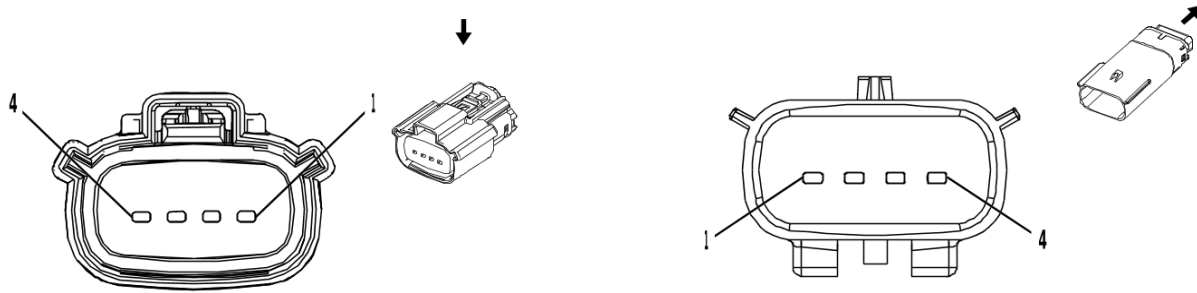

2474747

2917338

### Connector Part Information

Harness Type: Windshield Washer Pump Jumper Wiring Harness  
 OEM Connector: Not Available  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 4-Way F

### Connector Part Information

Harness Type: Forward Lamp Wiring Harness  
 OEM Connector: 33481-4401  
 Service Connector: 19330690  
 Description: 4-Way M 1.5 Series, Sealed( BK)


### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required
II	Not required	J-35616-3 (GY)	No Tool Required


## X250J Windshield Washer Pump Jumper Wiring Harness to Forward Lamp Wiring Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.75 0.75	GY / VT BK	228 2250	I I	UXA - UXA	Windshield Washer Pump Control Ground	1	0.75 0.75	GY / VT BK	228 2250	II II	UXA - UXA
2	0.75 0.75	BU / VT GY / VT	392 228	I I	UXA - UXA	Rear Window Washer Pump Control Windshield Washer Pump Control	2	0.75 0.75	BU / VT GY / VT	392 228	II II	UXA —
3	0.5	VT	185	I	—	Low Washer Fluid Indicator Control	3	0.5	VT	185	II	—
4	0.5	BK	2250	I	—	Ground	4	0.5	BK	2250	II	—

**X250R Body Wiring Harness to Forward Lamp Wiring Harness**

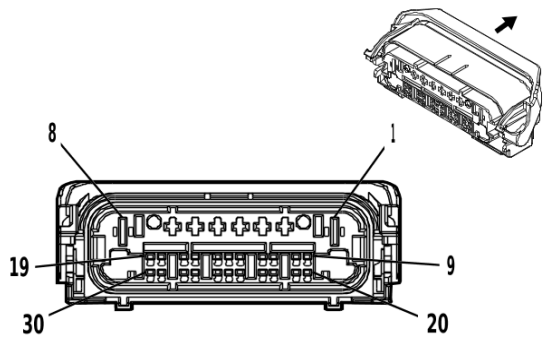

4650150

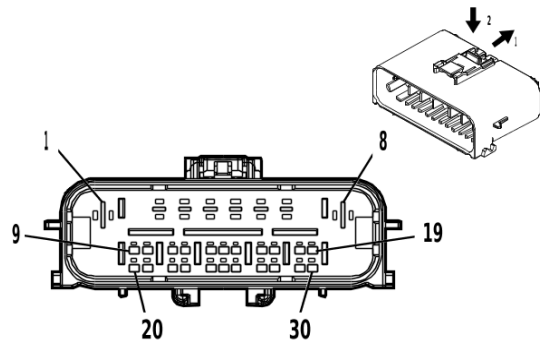

4817393

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 2301462-1  
 Service Connector: 19368311  
 Description: 30-Way F 1.2 MCON, 2.8, 6.3 MCP Series, Sealed( BK)

**Connector Part Information**

Harness Type: Forward Lamp Wiring Harness  
 OEM Connector: 2401461-1  
 Service Connector: 19371177  
 Description: 30-Way M 1.2 MCON, 2.8, 6.3 MCP Series, Sealed( BK)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19331733	J-35616-12 (BU)	J-38125-215A
II	19371214	J-35616-4A (PU)	J-38125-215A
III	85158596	J-35616-40 (BU)	EL-38125-560A
IV	13575376	J-35616-32 (OG)	J-38125-36
V	13578827	J-35616-5 (PU)	J-38125-36
VI	19330704	J-35616-13 (BU)	J-38125-215A

**X250R Body Wiring Harness to Forward Lamp Wiring Harness**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.75	GY / VT	228	III	—	Windshield Washer Pump Control	1	0.75	GY / VT	228	IV	—
2	0.75	BU / VT	392	II	—	Rear Window Washer Pump Control	2	0.75	BU / VT	392	V	—
3	0.75	RD / YE	740	II	—	Battery Positive Voltage	3	0.75	RD / YE	740	V	—
4	1	YE	312	II	—	Right Headlamp Low Beam Control	4	0.75	YE	312	V	—
5	0.75	WH	311	II	—	Right Headlamp High Beam Control	5	0.75	WH	311	V	—
6	0.35	BU / GN	1253	II	—	Right Front Park Lamp Control	6	0.5	BU / GN	1253	V	—


**X250R Body Wiring Harness to Forward Lamp Wiring Harness (cont'd)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
7	0.5	GN / VT	1315	II	—	Right Front Turn Signal Lamp Control	7	0.5	GN / VT	1315	V	—
8	0.75	BN / GY	29	III	—	Horn Control	8	0.75	BN / GY	29	IV	—
9	—	—	—	—	—	Not Occupied	9	—	—	—	—	—
10	0.35	VT	185	I	—	Low Washer Fluid Indicator Control	10	0.5	VT	185	VI	—
11	0.5	BN / GN	4246	I	—	Identification Lamp Control	11	—	—	—	—	—
12	—	—	—	—	—	Not Occupied	12	—	—	—	—	—
13	0.5	GN / VT	4621	I	—	Engine Control Module LIN Bus 1	13	0.5	GN / VT	4621	VI	—
14	—	—	—	—	—	Not Occupied	14	—	—	—	—	—
15	0.5	VT / BU	5705	I	—	Powertrain Main Relay Control	15	0.5	VT / BU	5705	VI	—
16	0.5	VT	1203	I	—	Right Park Lamp Control 2	16	0.5	VT	1203	VI	—
17	0.5	BU / BN	7539	I	—	Right Front DRL Control	17	0.5	BU / BN	7539	VI	—
18	0.35	WH / YE	7545	I	—	Right Front Turn Signal Lamp Feedback Signal	18	—	—	—	—	—
19	—	—	—	—	—	Not Occupied	19	—	—	—	—	—
20	0.5	BU / GY	636	I	—	Ambient Air Temperature Sensor Signal	20	0.5	BU / GY	636	VI	—
21	0.5	BK / GY	626	I	—	Engine Control Vehicle Sensors Low Reference 1	21	0.5	BK / GY	626	VI	—
22	0.35	BN / GN	4064	I	—	Hood Status B Signal	22	0.5	BN / GN	4064	VI	—
23	0.5	YE	4063	I	—	Hood Status A Signal	23	0.5	YE	4063	VI	—
24	0.5	BU / RD	460	I	—	Engine Control Sensors 5 Volt Reference 1	24	0.5	BU / RD	460	VI	—
25	0.5	BK / YE	548	I	—	Engine Control Sensors Low Reference 1	25	0.5	BK / YE	548	VI	—
26	0.5	YE / WH	3200	I	—	Throttle Inlet Absolute Pressure Sensor Signal	26	0.5	YE / WH	3200	VI	—

**6-446 Electrical Component and Inline Harness Connector End Views****X250R Body Wiring Harness to Forward Lamp Wiring Harness (cont'd)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
27	0.5	BN / GY	5061	I	—	Left Front Fog Lamp Control	27	0.5	BN / GY	5061	VI	—
28	—	—	—	—	—	Not Occupied	28	—	—	—	—	—
29	0.5	OG / GN	1409	I	—	Right Front Impact Discriminating Sensor Signal	29	0.5	OG / GN	1409	VI	—
30	0.5	BK / OG	5600	I	—	Right Front Impact Discriminating Sensor Low Reference	30	0.5	BK / OG	5600	VI	—

### X260 Front Object Alarm Sensor Wiring Harness to Forward Lamp Wiring Harness (T40)

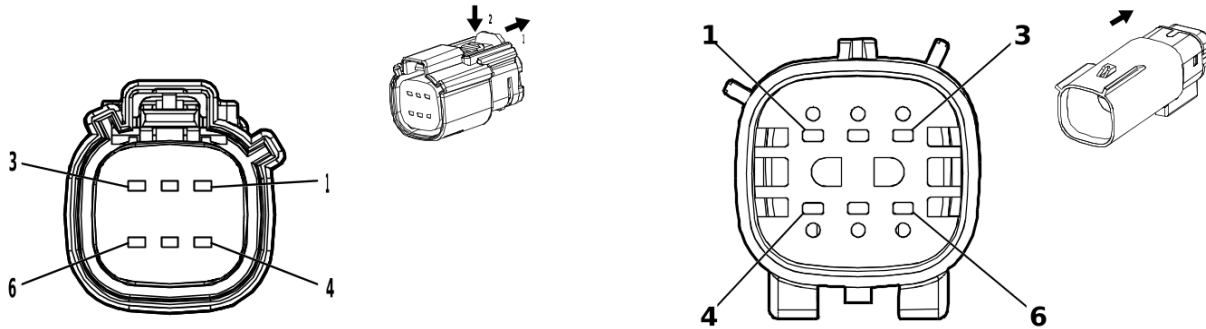

4828881

5318944

#### Connector Part Information

Harness Type: Front Object Alarm Sensor Wiring Harness  
 OEM Connector: 33472-0670  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 6-Way F 1.5 MX Series, Sealed( GY)

#### Connector Part Information

Harness Type: Forward Lamp Wiring Harness  
 OEM Connector: 33482-3628  
 Service Connector: 84856300  
 Description: 6-Way M 1.5 MX Series, Sealed( GY)


#### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required
II	Not required	J-35616-3 (GY)	No Tool Required

#### X260 Front Object Alarm Sensor Wiring Harness to Forward Lamp Wiring Harness (T40)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.5	BN / GY	5061	I	—	Left Front Fog Lamp Control	1	0.5	BN / GY	5061	II	—
2	0.5	BK	550	I	—	Ground	2	0.75	BK	550	II	—
3-6	—	—	—	—	—	Not Occupied	3-6	—	—	—	—	—


**X300 Body Wiring Harness to Instrument Panel Wiring Harness**

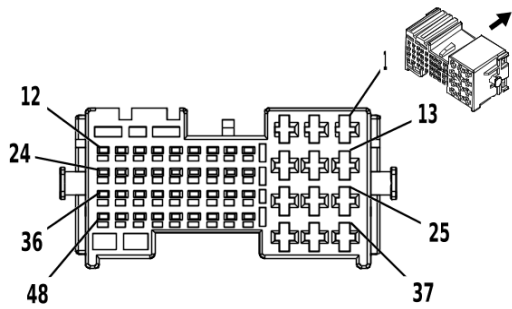

3277913

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 2109452-2  
 Service Connector: 19329739  
 Description: 48-Way F 1.2 MCON, 2.8 MCP Series( BK)

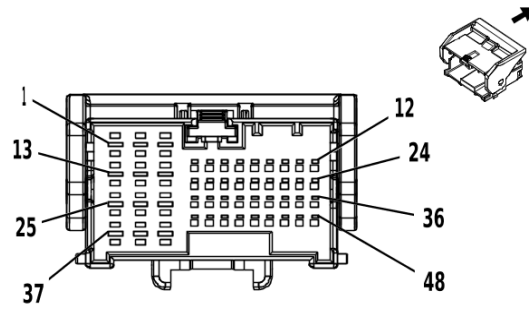

3277901

**Connector Part Information**

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: 5-2109455-2  
 Service Connector: 19329740  
 Description: 48-Way M 1.2 MCON, 2.8 MCP Series( BK)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19329758	J-35616-12 (BU)	J-38125-215A
II	87814662	J-35616-4A (PU)	J-38125-557
III	Not required	J-35616-12 (BU)	No Tool Required
IV	13575574	J-35616-5 (PU)	J-38125-215A
V	86509266	J-35616-13 (BU)	J-38125-215A

**X300 Body Wiring Harness to Instrument Panel Wiring Harness**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	1	RD / BN	1140	II	—	Battery Positive Voltage	1	1	RD / BN	1140	IV	—
2	1	RD / BU	1240	II	—	Battery Positive Voltage	2	1	RD / BU	1240	IV	—
3	0.35	RD / VT	3340	II	—	Battery Positive Voltage	3	0.35	RD / VT	3340	IV	—
4	0.35	GN / BU	6133	I	—	Body Control Module LIN Bus 2	4	0.35	GN / BU	6133	V	—
5	0.35	BU / WH	4985	I	—	AUTOSAR CAN Bus [+] 5 Serial Data	5	0.35	BU / WH	4985	V	—
6	0.35	BU / YE	4984	I	—	AUTOSAR CAN Bus [-] 5 Serial Data	6	0.35	BU / YE	4984	V	—
7	0.35	BU / WH	4985	I	—	AUTOSAR CAN Bus [+] 5 Serial Data	7	0.35	BU / WH	4985	V	—
8	0.35	BU / YE	4984	I	—	AUTOSAR CAN Bus [-] 5 Serial Data	8	0.35	BU / YE	4984	V	—



**X300 Body Wiring Harness to Instrument Panel Wiring Harness (cont'd)**


Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
9	0.35	GN / YE	2731	I	—	Brake System Control Module LIN Bus 1	9	0.35	GN / YE	2731	V	—
10	0.5	GN / BU	2733	I	—	Brake System Control Module LIN Bus 2	10	0.35	GN / BU	2733	V	—
11	0.5	BU / VT	4101	I	( UFB/UKI) - (U1D) A45	AUTOSAR CAN Bus [+] 4 Serial Data	11	0.35	BU / VT	4101	V	—
	0.35	BU / VT	4101	I								
12	0.5	WH	4100	I	( UFB/UKI) - (U1D) A45	AUTOSAR CAN Bus [-] 4 Serial Data	12	0.35	WH	4100	V	—
	0.35	WH	4100	I								
13	1.5	RD / WH	1340	II	—	Battery Positive Voltage	13	1.5	RD / WH	1340	IV	—
14	1.5	RD / GN	1540	II	—	Battery Positive Voltage	14	1.5	RD / GN	1540	IV	—
15	0.75	RD / WH	3440	II	—	Battery Positive Voltage	15	0.75	RD / WH	3440	IV	—
16 - 17	—	—	—	—	—	Not Occupied	16 - 17	—	—	—	—	—
18	0.35	BU	4987	I	—	AUTOSAR CAN Bus [+] 1 Serial Data	18	0.35	BU	4987	V	—
19	0.35	WH	4986	I	—	AUTOSAR CAN Bus [-] 1 Serial Data	19	0.35	WH	4986	V	—
20	0.35	GY	1715	I	—	Windshield Wiper Switch High Signal	20	0.35	GY	1715	V	—
21	0.5	VT / OG	3482	III	—	Driver Seat Belt Anchor Pretensioner Low Control	21	0.5	VT / OG	3482	V	—
22	0.5	OG / YE	3481	III	—	Driver Seat Belt Anchor Pretensioner High Control	22	0.5	OG / YE	3481	V	—
23	0.5	GY / OG	3480	III	—	Passenger Seat Belt Anchor Pretensioner Low Control	23	0.5	GY / OG	3480	V	—
24	0.5	OG / BN	3479	III	—	Passenger Seat Belt Anchor Pretensioner High Control	24	0.5	OG / BN	3479	V	—
25	0.75	GN / BK	116	II	—	Left Rear Speaker [-] Control	25	0.75	GN / BK	116	IV	—

**6-450 Electrical Component and Inline Harness Connector End Views**


**X300 Body Wiring Harness to Instrument Panel Wiring Harness (cont'd)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
26	0.75	GN	199	II	—	Left Rear Speaker [+] Control	26	0.75	GN	199	IV	—
27 - 28	—	—	—	—	—	Not Occupied	27 - 28	—	—	—	—	—
29	0.5	OG / YE	354	I	—	Left Front Impact Discriminating Sensor Signal	29	0.5	OG / YE	354	V	—
30	0.5	BK / OG	5045	I	—	Left Front Impact Discriminating Sensor Low Reference	30	0.5	BK / OG	5045	V	—
31	0.5	OG / GN	1409	I	—	Right Front Impact Discriminating Sensor Signal	31	0.5	OG / GN	1409	V	—
32	0.5	BK / OG	5600	I	—	Right Front Impact Discriminating Sensor Low Reference	32	0.5	BK / OG	5600	V	—
33	0.5	VT / OG	3478	III	—	Driver Seat Belt Retractor Pretensioner Low Control	33	0.5	VT / OG	3478	V	—
34	0.5	OG / WH	3477	III	—	Driver Seat Belt Retractor Pretensioner High Control	34	0.5	OG / WH	3477	V	—
35	0.5	WH / OG	3476	III	—	Passenger Seat Belt Retractor Pretensioner Low Control	35	0.5	WH / OG	3476	V	—
36	0.5	OG / GN	3475	III	—	Passenger Seat Belt Retractor Pretensioner High Control	36	0.5	OG / GN	3475	V	—
37 - 44	—	—	—	—	—	Not Occupied	37 - 44	—	—	—	—	—
45	0.35	GY / GN	328	I	—	Interior Lamp Defeat Switch Signal	45	0.35	GY / GN	328	V	—
46	0.35	GY	156	I	—	Courtesy Lamp Switch Signal	46	0.35	GY	156	V	—
47	0.5	GY	157	I	—	Interior Lamp Control	47	0.5	GY	157	V	—
48	0.5	WH / BN	6815	I	—	Inadvertent Load Control	48	0.5	WH / BN	6815	V	—

**X301 Body Wiring Harness to Instrument Panel Wiring Harness**

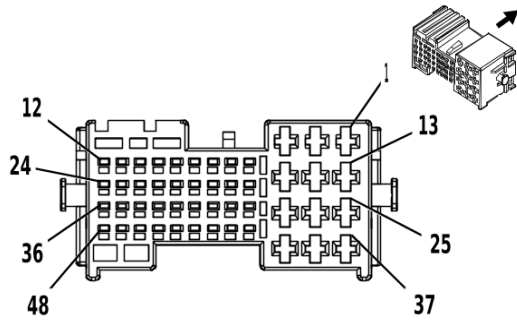

3924402

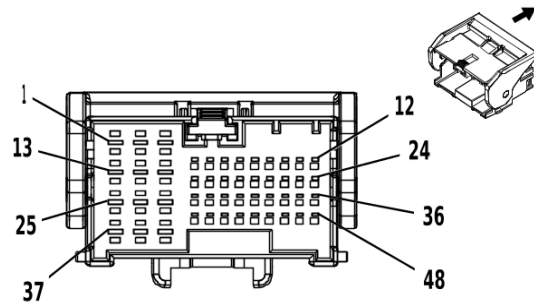

3924404

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 1-2109452-3  
 Service Connector: 19329737  
 Description: 48-Way F 1.2 MCON, 2.8 MCP Series( GY)

**Connector Part Information**

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: 1-2109455-3  
 Service Connector: 19329738  
 Description: 48-Way M 1.2 MCON, 2.8 MCP Series( GY)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19300446	J-35616-12 (BU)	J-38125-12A
II	87814662	J-35616-4A (PU)	J-38125-557
III	13575574	J-35616-5 (PU)	J-38125-215A
IV	86509266	J-35616-13 (BU)	J-38125-215A

**X301 Body Wiring Harness to Instrument Panel Wiring Harness**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	2.5	BU	47	II	—	Trailer Auxiliary Control	1	2.5	BU	47	III	—
2	2.5	RD / BN	4142	II	—	Primary Fused Battery Positive Voltage	2	2.5	RD / BN	4142	III	—
3	0.5	RD / VT	1940	II	—	Battery Positive Voltage	3	0.5	RD / VT	1940	III	—
4	0.5	YE	6817	I	—	LED Backlight Dimming Control 1	4	0.5	YE	6817	IV	—
5	0.5	VT / GY	7117	I	—	Front Axle Differential Lock Indicator Control	5	0.5	VT / GY	7117	IV	—
6	0.5	YE	7115	I	—	Rear Axle Differential Lock Indicator Control	6	0.5	YE	7115	IV	—
7	0.5	YE / GN	7122	I	—	Axle Differential Lock Switch Signal	7	0.5	YE / GN	7122	IV	—

**6-452 Electrical Component and Inline Harness Connector End Views**


**X301 Body Wiring Harness to Instrument Panel Wiring Harness (cont'd)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
8 - 12	—	—	—	—	—	Not Occupied	8 - 12	—	—	—	—	—
13	0.35	WH / BK	4769	II	—	Emergency Call Backup Speaker [-] Control	13	0.5	WH / BK	4769	III	—
14	0.35	GY / GN	4770	II	—	Emergency Call Backup Speaker [+] Control	14	0.5	GY / GN	4770	III	—
15 - 20	—	—	—	—	—	Not Occupied	15 - 20	—	—	—	—	—
21	0.35	BU / YE	7176	I	—	All Windows Open Switch Signal	21	0.35	BU / YE	7176	IV	—
22	0.35	GN / WH	24	I	—	Backup Lamp Control	22	0.35	GN / WH	24	IV	—
23 - 24	—	—	—	—	—	Not Occupied	23 - 24	—	—	—	—	—
25	0.75	BN / BU	118	II	UQ3	Left Front Speaker [-] Control 1	25	0.75	BN / BU	118	III	UQ3
	0.5	BU / BN	1957	II	UQA	Left Front Midrange Speaker [-] Control						
26	0.75	BU	201	II	UQ3	Left Front Speaker 1 [+] Control	26	0.75	BU	201	III	UQ3
	0.5	BU / VT	1857	II	UQA	Left Front Midrange Speaker [+] Control						
27	—	—	—	—	—	Not Occupied	27	—	—	—	—	—
28	0.5	VT / BK	739	I	—	Run/Crank Ignition 1 Voltage	28	0.5	VT / BK	739	IV	—
29	0.5	VT / WH	1139	I	—	Run/Crank Ignition 1 Voltage	29	0.5	VT / WH	1139	IV	—
30 - 34	—	—	—	—	—	Not Occupied	30 - 34	—	—	—	—	—
35	0.5	VT / RD	4049	I	—	AC Power Outlet Sensor High Reference	35	0.5	VT / RD	4049	IV	—
36	0.5	BU / BN	6807	I	—	DC/AC Inverter Control	36	0.5	BU / BN	6807	IV	—
37 - 40	—	—	—	—	—	Not Occupied	37 - 40	—	—	—	—	—
41	0.35	RD / BU	3240	I	—	Battery Positive Voltage	41	0.5	RD / BU	3240	IV	—
42	0.35	RD / VT	4040	I	—	Battery Positive Voltage	42	0.35	RD / VT	4040	IV	—

**X301 Body Wiring Harness to Instrument Panel Wiring Harness (cont'd)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
43	0.35	BU	2307	I	—	Passenger Air Bag On Indicator Control	43	0.35	BU	2307	IV	—
44	0.35	GN	2308	I	—	Passenger Air Bag Off Indicator Control	44	0.35	GN	2308	IV	—
45	0.35	VT / WH GN	5234	I	AL0 - C9I AL0 & C9I	Passenger Seat Belt Indicator Control	45	0.35	VT / WH GN	5234	IV	AL0 - C9I AL0 & C9I
	0.35		3118	I		Roof Rail Air Bag Disable Indicator Control		0.35		3118	IV	
46	0.75	Bare	10116	I	—	AC Outlet Low Reference	46	0.75	Bare	10116	IV	—
47	0.75	BK	10117	I	—	AC Outlet Phase A Control	47	0.75	BK	10117	IV	—
48	0.75	RD	10118	I	—	AC Outlet Phase B Control	48	0.75	RD	10118	IV	—

**X302A Front Seat Wiring Harness - Driver to Body Wiring Harness**

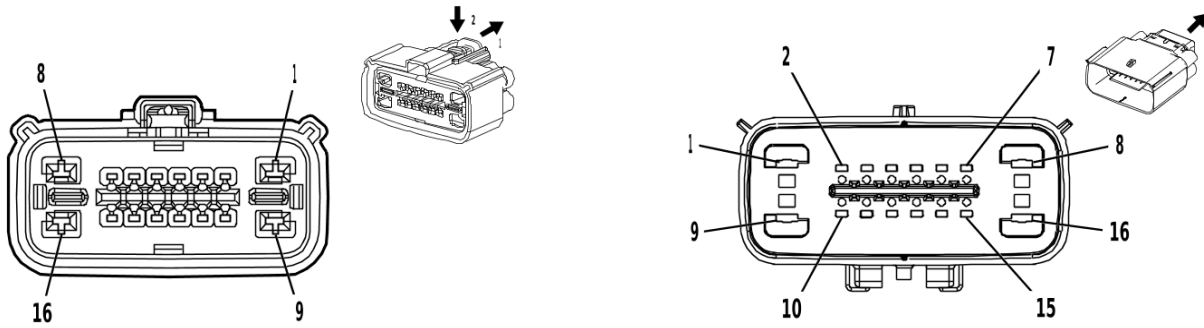

4283035

2373686

**Connector Part Information**

Harness Type: Front Seat Wiring Harness - Driver  
 OEM Connector: 34985-2161  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 16-Way F 1.5, 2.8 MX Series, Sealed( YE)

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 34986-1605  
 Service Connector: 19331031  
 Description: 16-Way M 1.5, 2.8 MX Series, Sealed( YE)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required
II	Not required	J-35616-2A (GY)	No Tool Required
III	Not required	J-35616-35 (VT)	No Tool Required
IV	Not required	No Tool Required	No Tool Required
V	19366658	J-35616-5 (PU)	J-38125-12A
VI	86800300	J-35616-3 (GY)	J-38125-217



**X302A Front Seat Wiring Harness - Driver to Body Wiring Harness**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	2.5	BK	3750	III	—	Ground	1	2.5	BK	3750	V	—
2	0.5	OG / BU	4962	IV	—	Driver Seat Back Air Bag High Control	2	0.5	OG / BU	4962	VI	—
3	0.5	BK / OG	4963	IV	—	Driver Seat Back Air Bag Low Control	3	0.5	BK / OG	4963	VI	—
4	0.5	BK / OG	1363	I	—	Driver Seat Belt Switch Low Reference	4	0.5	BK / OG	1363	VI	—
5	0.5	OG / BN	238	I	—	Driver Seat Belt Switch Signal	5	0.5	OG / BN	238	VI	—
6-7	—	—	—	—	—	Not Occupied	6-7	—	—	—	—	—
8	2.5 2.5	RD / GY RD / BN	3540 3640	III III	A2X- A45 A45	Battery Positive Voltage Battery Positive Voltage	8	2.5	RD / GY	3540	V	—
9	0.5	RD / VT	3340	III	—	Battery Positive Voltage	9	0.35	RD / VT	3340	V	—

**X302A Front Seat Wiring Harness - Driver to Body Wiring Harness (cont'd)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
10	—	—	—	—	—	Not Occu- pied	10	—	—	—	—	—
11	0.5	BU	2425	I	—	Driver Seat Back Heating Temperature Sensor Sig- nal	11	0.5	BU	2425	VI	—
12	0.5	BK / YE	2080	I	—	Driver Heated Seat Thermistor Low Refer- ence	12	0.5	BK / YE	2080	VI	—
13	0.5	YE / GY	2079	I	—	Driver Seat Heating Tem- perature Sensor Sig- nal	13	0.5	YE / GY	2079	VI	—
14	0.75	BN / BK	2078	II	—	Driver Seat Heating Ele- ment Low Reference	14	0.75	BN / BK	2078	VI	—
15	0.75	BN / VT	2077	II	—	Driver Seat Heating Ele- ment Control	15	0.75	BN / VT	2077	VI	—
16	0.75	RD / WH	3440	III	—	Battery Posi- tive Voltage	16	0.75	RD / WH	3440	V	—

**X302B Front Seat Wiring Harness - Driver to Body Wiring Harness**

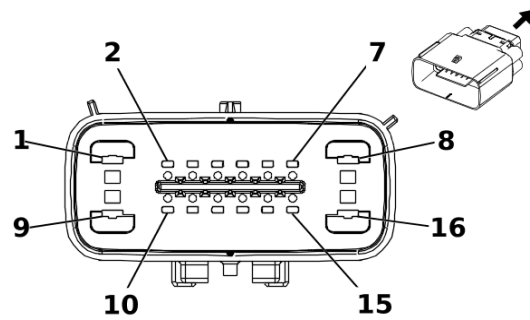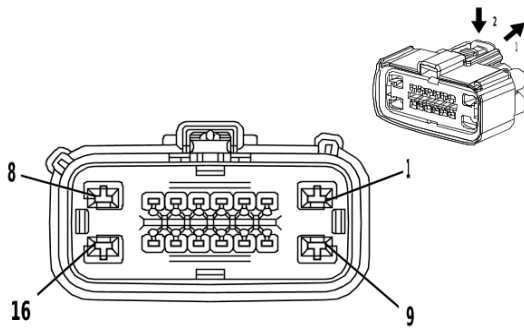

4341043

4209017

**Connector Part Information**

Harness Type: Front Seat Wiring Harness - Driver  
 OEM Connector: 34985-1607  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 16-Way F 1.5, 2.8 MX Series, Sealed( GY)

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 34986-1602  
 Service Connector: 19352214  
 Description: 16-Way M 1.5, 2.8 MX Series, Sealed( L-GY)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required
II	86800300	J-35616-3 (GY)	J-38125-217

**X302B Front Seat Wiring Harness - Driver to Body Wiring Harness**


Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	—	—	—	—	—	Not Occu- pied	1	—	—	—	—	—
2	0.35	BU / GN	614	I	—	Seat Memory Switch Set Signal	2	0.35	BU / GN	614	II	—
3	0.35	WH	615	I	—	Seat Memory Switch Sig- nal 1	3	0.35	WH	615	II	—
4- 9	—	—	—	—	—	Not Occu- pied	4- 9	—	—	—	—	—
10	0.5	VT / GN	839	I	—	Run/Crank Ignition 1 Voltage	10	0.5	VT / GN	839	II	—
11	0.5	GN / VT	5906	I	—	Driver Seat Blower Motor Control 1	11	0.5	GN / VT	5906	II	—
12	0.35	WH	4100	I	—	AUTOSAR CAN Bus [-] 4 Serial Data	12	0.35	WH	4100	II	—
13	0.35	BU / VT	4101	I	—	AUTOSAR CAN Bus [+] 4 Serial Data	13	0.35	BU / VT	4101	II	—
14	0.35	WH	4100	I	—	AUTOSAR CAN Bus [-] 4 Serial Data	14	0.5	WH	4100	II	—




**X302B Front Seat Wiring Harness - Driver to Body Wiring Harness (cont'd)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
15	0.35	BU / VT	4101	I	—	AUTOSAR CAN Bus [+] 4 Serial Data	15	0.5	BU / VT	4101	II	—
16	—	—	—	—	—	Not Occupied	16	—	—	—	—	—

**X303 Body Wiring Harness to Front Side Door Door Wiring Harness - Driver**

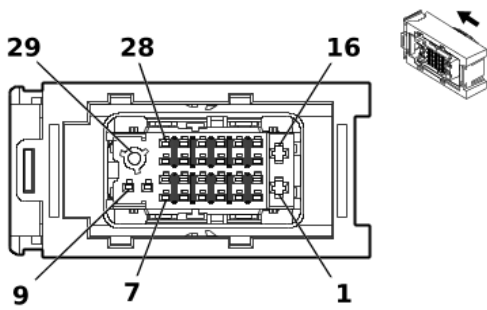

6174956

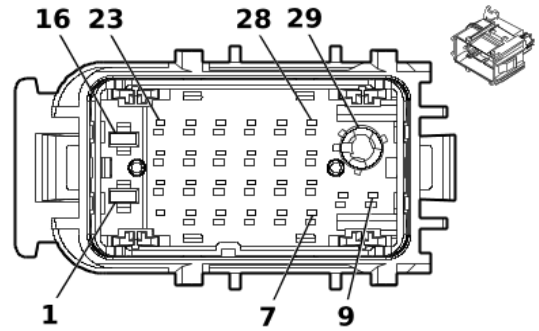

6154847

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 35383762  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 29-Way F 1.2, 2.8 CTS Coaxial Series, Sealed( YE)

**Connector Part Information**

Harness Type: Front Side Door Door Wiring Harness - Driver  
 OEM Connector: 35383764  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 29-Way M 1.2 CTS, 2.8 DCS-2, Coaxial Series, Sealed( YE)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required
II	Not required	J-35616-35 (VT)	No Tool Required
III	Service by Cable	No Tool Required	J-38125-12A
IV	Not required	J-35616-13 (BU)	No Tool Required
V	Not required	J-35616-17 (L-GN)	No Tool Required
VI	Not required	J-35616-5 (PU)	No Tool Required
VII	Not required	No Tool Required	No Tool Required

**X303 Body Wiring Harness to Front Side Door Door Wiring Harness - Driver**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	2.5	BK	3750	II	—	Ground	1	2.5	BK	1150	VI	—
2	—	—	—	—	—	Not Occu- pied	2	—	—	—	—	—
3	0.35	BK / WH	451	I	—	Signal Ground	3	0.35	BK / WH	3051	V	—
4	0.35	BU / GN	614	I	—	Seat Memory Switch Set Signal	4	0.35	BU / GN	614	V	—
5	0.35	WH	615	I	—	Seat Memory Switch Sig- nal 1	5	0.35	WH	615	V	—
6	—	—	—	—	—	Not Occu- pied	6	—	—	—	—	—
7	0.35	GN / YE	6134	I	—	Body Control Module LIN Bus 3	7	0.35	GN / YE	6134	V	—
8 - 10	—	—	—	—	—	Not Occu- pied	8 - 10	—	—	—	—	—

**X303 Body Wiring Harness to Front Side Door Door Wiring Harness - Driver (cont'd)**


Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
11	0.5	OG / GN	2132	I	—	Left Front Side Impact Sensor Signal	11	0.5	OG / GN	2132	V	—
12	0.5	BK / OG	6628	I	—	Left Front Side Impact Sensor Low Reference	12	0.5	BK / OG	6628	V	—
13	—	—	—	—	—	Not Occupied	13	—	—	—	—	—
14	0.35	VT / GY	4302	I	—	Passive Entry Left Antenna Signal Low	14	0.5	VT / GY	4302	V	—
15	0.35	VT	4301	I	—	Passive Entry Left Antenna Signal High	15	0.5	VT	4301	V	—
16	2.5	RD / BU	1240	II	—	Battery Positive Voltage	16	2.5	RD / BU	1240	VI	AEC/ AXG
						Battery Positive Voltage		2.5	RD / GY	3540	VI	AXG+ AED
17	0.5	RD / VT	1940	I	—	Battery Positive Voltage	17	0.5	RD / VT	1940	V	—
18	—	—	—	—	—	Not Occupied	18	—	—	—	—	—
19	0.35	VT / GY	126	I	—	Left Front Door Open Switch Signal	19	0.35	VT / GY	126	V	—
20	0.35	BU	2675	I	—	Left Front Exterior Door Handle Switch Unlock Signal	20	0.35	BU	2675	V	—
21 - 22	—	—	—	—	—	Not Occupied	21 - 22	—	—	—	—	—
23	0.75	WH	2679	I	—	Lock Actuators Unlock Control 1	23	0.75	WH	2679	V	—
24	0.75	GY	2681	I	—	Left Front Door Lock Actuator Lock Control	24	0.75	GY	2681	V	—
25 - 26	—	—	—	—	—	Not Occupied	25 - 26	—	—	—	—	—
27	0.75 1	BU BU	201 201	I I	UQ3 UQA	Left Front Speaker 1 [+] Control Left Front Speaker 1 [+] Control	27	1	BU	201	IV	—
28	0.75 1	BN / BU BN / BU	118 118	I I	UQ3 UQA	Left Front Speaker [-] Control 1 Left Front Speaker [-] Control 1	28	1	BN / BU	118	IV	—

**6-460 Electrical Component and Inline Harness Connector End Views**

**X303 Body Wiring Harness to Front Side Door Door Wiring Harness - Driver (cont'd)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
29	0	WH	4725	III	—	Left Sideview Camera LVDS (Low Voltage Differential Signaling) Co-axial Signal	29	0	WH	4725	VII	—

### X304 Instrument Panel Wiring Harness to Front Floor Console Wiring Harness Extension Harness

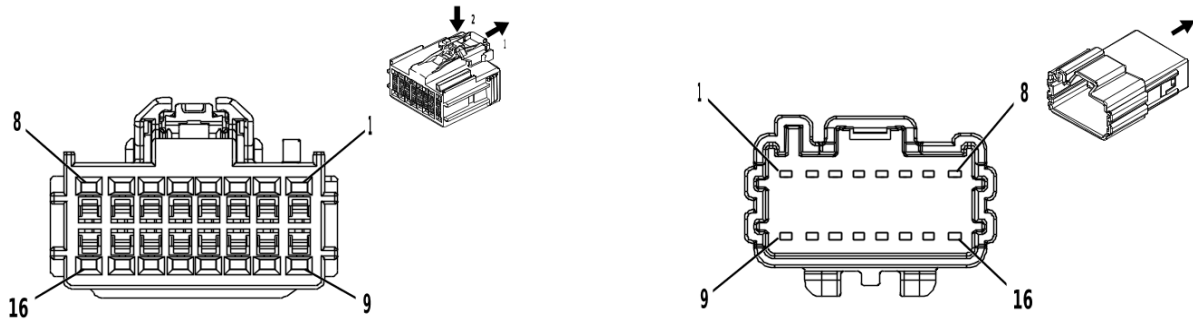

4115730

4223086

#### Connector Part Information

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: 6098-8451  
 Service Connector: 13541574  
 Description: 16-Way F 1.2 OCS Series( BK)

#### Connector Part Information

Harness Type: Front Floor Console Wiring Harness Extension Harness  
 OEM Connector: 6098-8828  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 16-Way M 1.2 Series( BK)

#### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19371240	J-35616-12 (BU)	J-38125-215A
II	Not required	J-35616-17 (L-GN)	No Tool Required

### X304 Instrument Panel Wiring Harness to Front Floor Console Wiring Harness Extension Harness


Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.35	WH / BN	2203	I	—	Enhanced Driver Mode 2 Switch Signal	1	0.35	WH / BN	2203	II	—
2	0.35	BK / GY	2204	I	—	Enhanced Driver Mode 1 Switch Low Reference	2	0.35	BK / GY	2204	II	—
3	0.35	GN / BU	6133	I	—	Body Control Module LIN Bus 2	3	0.35	GN / BU	6133	II	—
4	0.35	GN / YE	2731	I	—	Brake System Control Module LIN Bus 1	4	0.35	GN / YE	2731	II	—
5	—	—	—	—	—	Not Occupied	5	—	—	—	—	—
6	0.35	VT / GN	39	I	—	Run/Crank Ignition 1 Voltage	6	0.35	VT / GN	39	II	—
7	0.5	RD / VT	6340	I	—	Battery Positive Voltage	7	0.5	RD / VT	6340	II	—
8	0.35	RD / GN	5140	I	—	Battery Positive Voltage	8	0.35	RD / GN	5140	II	—

**6-462 Electrical Component and Inline Harness Connector End Views**

**X304 Instrument Panel Wiring Harness to Front Floor Console Wiring Harness Extension  
Harness (cont'd)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
9	0.35	BU / WH	4985	I	—	AUTOSAR CAN Bus [+] 5 Serial Data	9	0.35	BU / WH	4985	II	—
10	0.35	BU / YE	4984	I	—	AUTOSAR CAN Bus [-] 5 Serial Data	10	0.35	BU / YE	4984	II	—
11	0.35	BU / WH	4985	I	—	AUTOSAR CAN Bus [+] 5 Serial Data	11	0.35	BU / WH	4985	II	—
12	0.35	BU / YE	4984	I	—	AUTOSAR CAN Bus [-] 5 Serial Data	12	0.35	BU / YE	4984	II	—
13	0.35	YE	6817	I	—	LED Back-light Dimming Control 1	13	0.35	YE	6817	II	—
14	0.35	GN / VT	4759	I	—	Transmission Shift Lever Position Indicator 2 Control	14	0.35	GN / VT	4759	II	—
15	0.35	BK / WH	2151	I	—	Signal Ground	15	0.35	BK / WH	2151	II	—
16	0.5	BK	2050	I	—	Ground Ground	16	0.35 0.5	BK BK	2050 2050	II II	- ( NP0/ NQH/ K4C) ( NP0/ NQH/ K4C)


**X305 Instrument Panel Wiring Harness to Front Floor Console Wiring Harness**

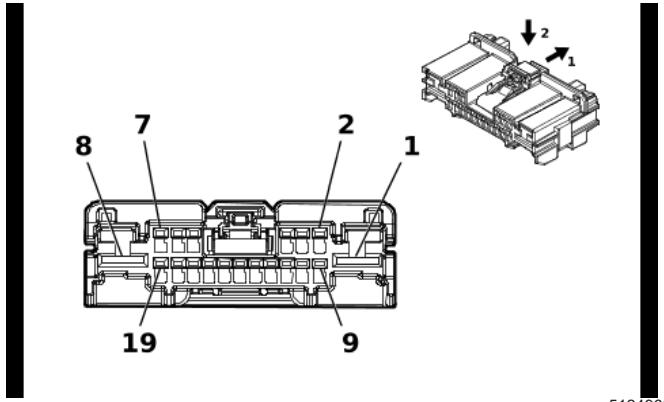

5124963

**Connector Part Information**

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: 6098-8756  
 Service Connector: 13526847  
 Description: 19-Way F 1.2, 6.3 Series( BK)

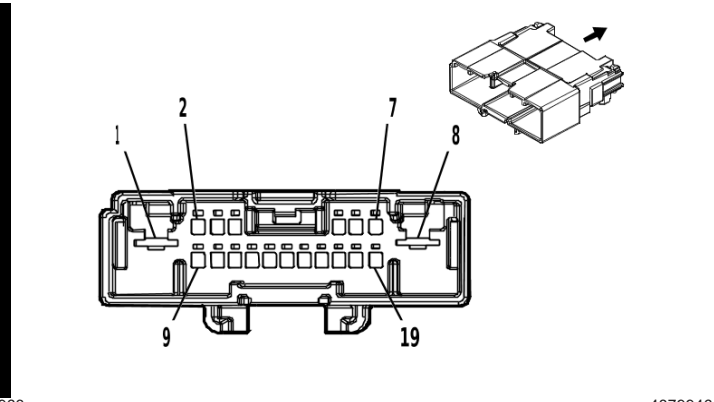

4879946

**Connector Part Information**

Harness Type: Front Floor Console Wiring Harness  
 OEM Connector: 6098-8086  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 19-Way M 1.2 MCON, 6.3 YESC Series( BK)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	13578928	J-35616-42 (RD)	J-38125-11A
II	19371240	J-35616-12 (BU)	J-38125-215A
III	84962854	J-35616-12 (BU)	J-38125-215A
IV	Not required	J-35616-13 (BU)	No Tool Required
V	Not required	J-35616-17 (L-GN)	No Tool Required
VI	Not required	J-35616-43 (RD)	No Tool Required

**X305 Instrument Panel Wiring Harness to Front Floor Console Wiring Harness**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	2.5	BK	2050	I	—	Ground Ground	1	1 2.5	BK BK	2050 2050	VI VI	( KPA) - ( K16/ K17/ UBI/ UBP) ( KPA) + ( K16/ K17/ UBI/ UBP)
2	0.5	VT	4701	III	—	Retained Accessory Power Control	2	0.5	VT	4701	V	—
3-4	—	—	—	—	—	Not Occupied	3-4	—	—	—	—	—
5	0.75	Bare	10116	III	—	AC Outlet Low Reference	5	0.75	Bare	10116	IV	—
6	0.75	BK	10117	III	—	AC Outlet Phase A Control	6	0.75	BK	10117	IV	—
7	0.75	RD	10118	III	—	AC Outlet Phase B Control	7	0.75	RD	10118	IV	—


**6-464 Electrical Component and Inline Harness Connector End Views**

**X305 Instrument Panel Wiring Harness to Front Floor Console Wiring Harness (cont'd)**


Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
8	—	—	—	—	—	Not Occupied	8	—	—	—	—	—
9	1	VT	1001	II	—	Retained Accessory Power Ignition Voltage	9	1	VT	1001	IV	—
10 - 11	—	—	—	—	—	Not Occupied	10 - 11	—	—	—	—	—
12	0.35	WH / GY	4997	III	—	Immobilizer Antenna Low Signal	12	0.35	WH / GY	4997	V	—
13	0.35	BN / BK	4996	III	—	Immobilizer Antenna Signal [+]	13	0.35	BN / BK	4996	V	—
14	0.35	BN / BK	3552	III	—	Interior Passive Entry Antenna 1 High Signal	14	0.35	BN / BK	3552	V	—
15	0.35	WH	3553	III	—	Interior Passive Entry Antenna 1 Low Signal	15	0.35	WH	3553	V	—
16 - 17	—	—	—	—	—	Not Occupied	16 - 17	—	—	—	—	—
18	0.5	VT / RD	4049	III	—	AC Power Outlet Sensor High Reference	18	0.5	VT / RD	4049	V	—
19	0.5	BU / BN	6807	III	—	DC/AC Inverter Control	19	0.5	BU / BN	6807	V	—



### X315 Instrument Panel Wiring Harness to HVAC Wiring Harness

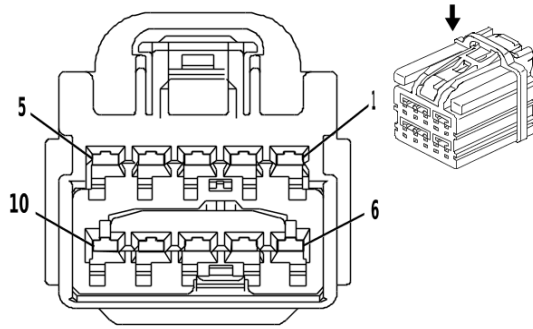

1733159

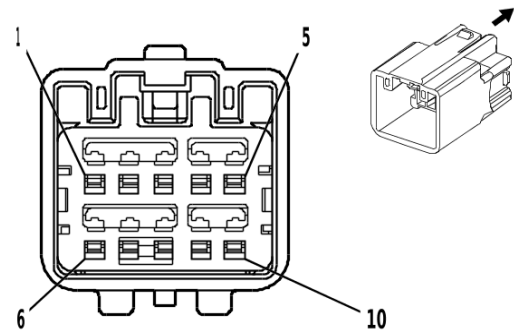

1732767

#### Connector Part Information

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: 7283-6455-40  
 Service Connector: 22708788  
 Description: 10-Way F 1.5 Kaizen Series( L-GY)

#### Connector Part Information

Harness Type: HVAC Wiring Harness  
 OEM Connector: Not Available  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 10-Way M ( L-GY)


#### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	13578891	J-35616-2A (GY)	J-38125-11A
II	Not required	No Tool Required	No Tool Required


#### X315 Instrument Panel Wiring Harness to HVAC Wiring Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1-4	—	—	—	—	—	Not Occupied	1-4	—	—	—	—	—
5	0.35	GY	6137	I	—	Air Conditioning Evaporator Temperature Sensor Signal	5	0.35	GY	6137	II	—
6	0.35	GN / VT	2852	I	—	Body Control Module LIN Bus 6	6	0.35	GN / VT	2852	II	—
7	0.35	BK / YE	407	I	—	Sensor Low Reference	7	0.35	BK / YE	407	II	—
8	—	—	—	—	—	Not Occupied	8	—	—	—	—	—
9	0.35	WH / YE	4634	I	—	HVAC Remote Enable Signal	9	0.35	WH / YE	4634	II	—
10	0.5	BK	2050	I	—	Ground	10	0.5	BK	2050	II	—

**X367 Instrument Panel Wiring Harness to Body Wiring Harness**

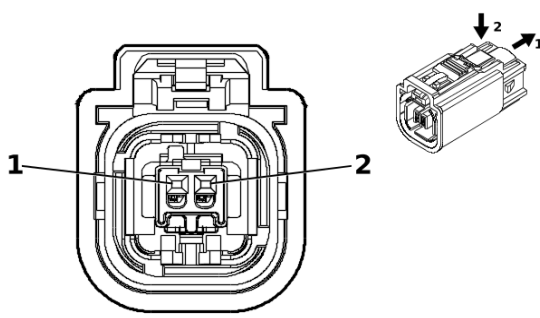

5358341

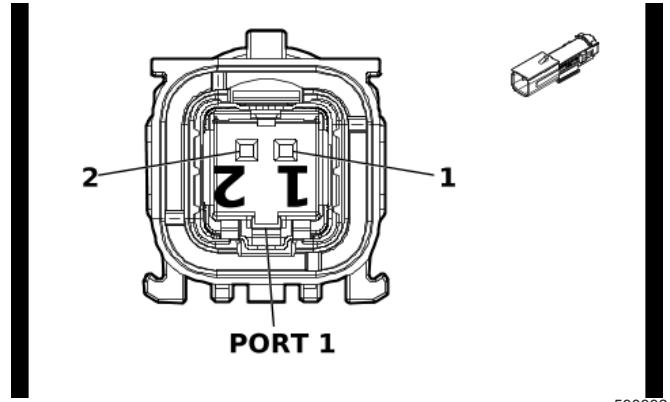

5909921

**Connector Part Information**

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: 35212796  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F 050 CTS Ethernet Series, Sealed( BK)

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 35185531  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way M 050 CTS Ethernet Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Service by Cable	No Tool Required	No Tool Required
II	Service by Cable	No Tool Required	No Tool Required

**X367 Instrument Panel Wiring Harness to Body Wiring Harness**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.01	WH	7211	I	—	Ethernet Bus 4 [+]	1	0	WH	7211	II	—
2	0.01	GN	7210	I	—	Ethernet Bus 4 [-]	2	0	GN	7210	II	—

**X371 Rearview Underbody Camera Jumper Wiring Harness to Rearview Camera Wiring Harness (UXA)**

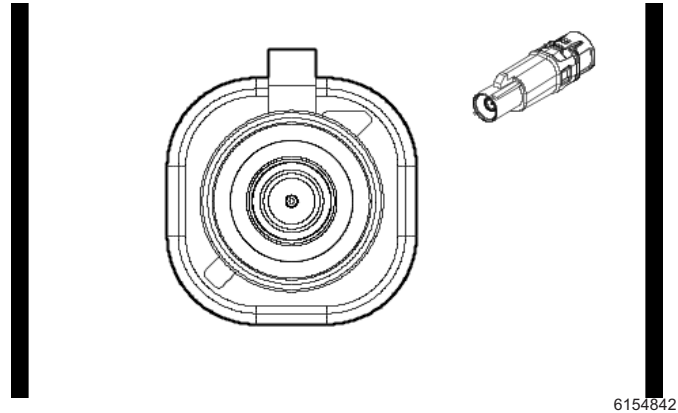

**Connector Part Information**

Harness Type: Rearview Underbody Camera Jumper Wiring Harness  
 OEM Connector: Not Available  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 1-Way F

**Connector Part Information**

Harness Type: Rearview Camera Wiring Harness  
 OEM Connector: 13517385  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 1-Way M Coax Type( GY)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**X371 Rearview Underbody Camera Jumper Wiring Harness to Rearview Camera Wiring Harness (UXA)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
—	—	LVDS	—	I	—	(Infotainment) Infotainment Display Signal	—	—	LVDS	—	I	—

**X372 Front View Underbody Camera Jumper Wiring Harness to Rearview Camera Wiring Harness (UXA)**

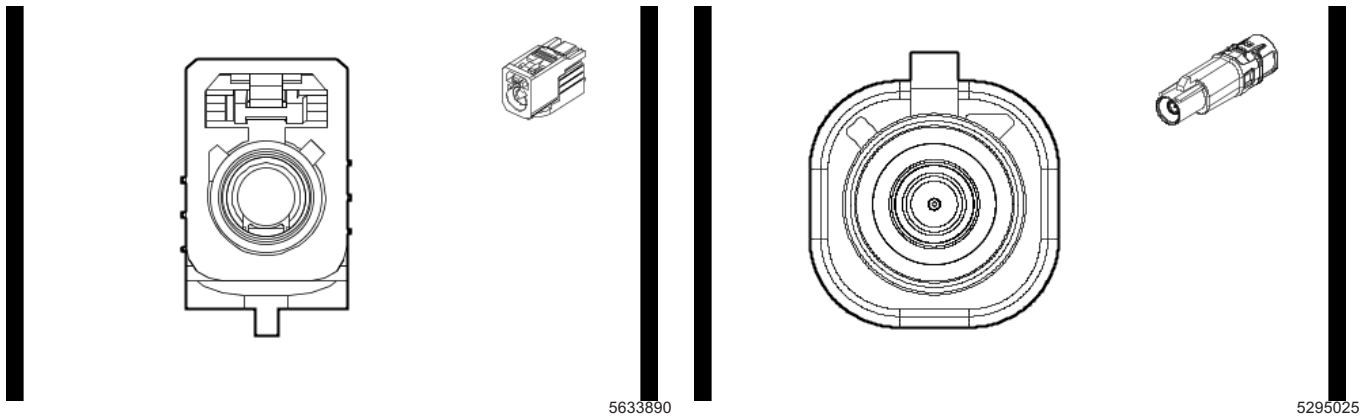

**Connector Part Information**

Harness Type: Front View Underbody Camera Jumper Wiring Harness  
 OEM Connector: Not Available  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 1-Way F

**Connector Part Information**

Harness Type: Rearview Camera Wiring Harness  
 OEM Connector: 13517379  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 1-Way M Coax Type( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**X372 Front View Underbody Camera Jumper Wiring Harness to Rearview Camera Wiring Harness (UXA)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
—	—	LVDS	—	I	—	(PDR) Front Vision Camera #2	—	—	LVDS	—	I	—

### X375 Roof Wiring Harness to Sunroof Wiring Harness (CAC)

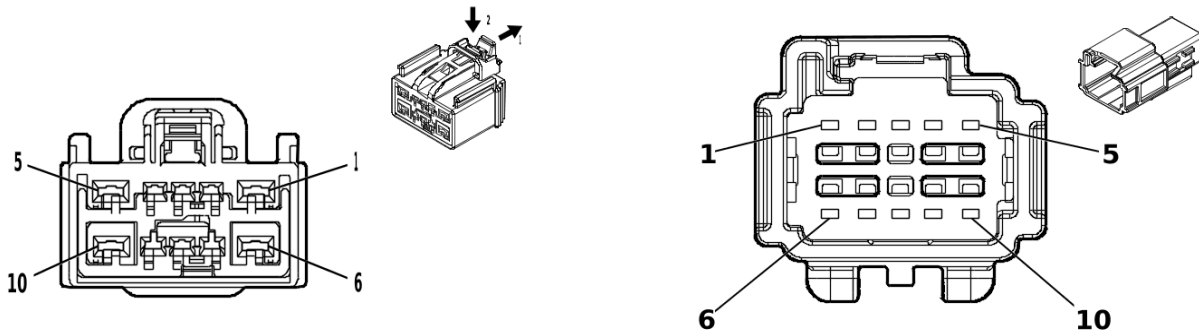

5020939

5355759

#### Connector Part Information

Harness Type: Roof Wiring Harness  
 OEM Connector: 7289-9153-40  
 Service Connector: 13518747  
 Description: 10-Way F 1.5, 2.8 Kaizen Series( L-GY)

#### Connector Part Information

Harness Type: Sunroof Wiring Harness  
 OEM Connector: Not Available  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 10-Way M ( L-GY)



#### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	13587516	J-35616-4A (PU)	J-38125-11A
II	19332534	J-35616-2A (GY)	J-38125-557
III	Not required	No Tool Required	No Tool Required


### X375 Roof Wiring Harness to Sunroof Wiring Harness (CAC)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1 - 3	—	—	—	—	—	Not Occupied	1 - 3	—	—	—	—	—
4	0.35	GN / WH	2854	II	—	Body Control Module LIN Bus 8	4	0.35	GN / WH	2854	III	—
5	1.5	BK	1850	I	—	Ground	5	1.5	BK	1850	III	—
6	1.5	RD / YE	2340	I	—	Battery Positive Voltage	6	1.5	RD / YE	2340	III	—
7	0.35	BU / VT	5027	II	—	Sunroof Switch Serial Data 1 Signal	7	0.35	BU / VT	5027	III	—
8	—	—	—	—	—	Not Occupied	8	—	—	—	—	—
9	0.35	WH / GN	3031	II	—	Sunroof Vent Switch Signal	9	0.35	WH / GN	3031	III	—
10	—	—	—	—	—	Not Occupied	10	—	—	—	—	—

**X380 Instrument Panel Wiring Harness to Body Wiring Harness ((UV2 / UXA) - UVB)**

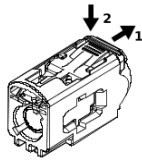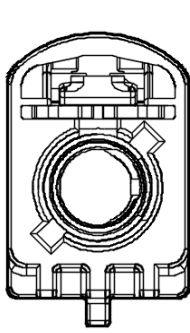

5215274

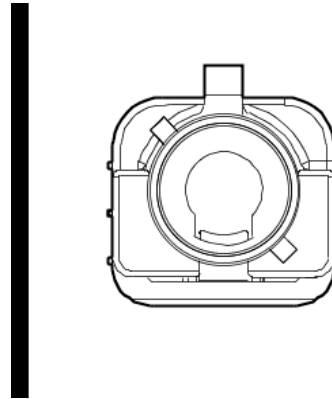

5873701

**Connector Part Information**

Harness Type: Instrument Panel Wiring Harness COAX  
 OEM Connector: 13516215  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 1-Way F Coax Type( BU)

**Connector Part Information**

Harness Type: Body Wiring Harness COAX  
 OEM Connector: 13516061  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 1-Way M Coax Type( BU)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**X380 Instrument Panel Wiring Harness to Body Wiring Harness ((UV2 / UXA) - UVB)**


Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
—	—	Coax Cable	—	I	—	Video Processing Module Coaxial Video Signal	—	—	Coax Cable	—	I	—

**X382 Chassis Wiring Harness to Chassis Wiring Harness (S0Y)**

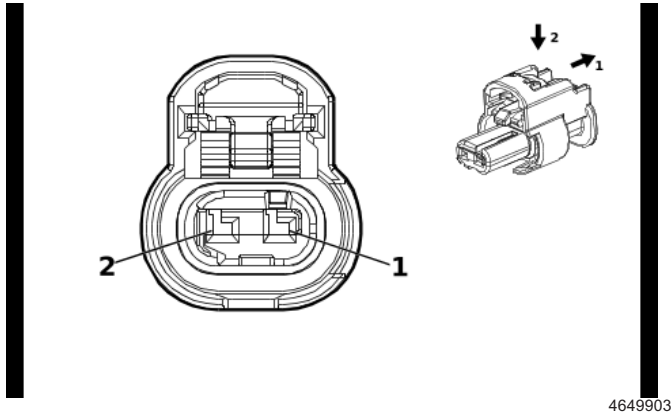

**Connector Part Information**

Harness Type: Chassis Wiring Harness  
 OEM Connector: 1-2296694-1  
 Service Connector: 85519075  
 Description: 2-Way F 1.2 MCON Series, Sealed( BK)

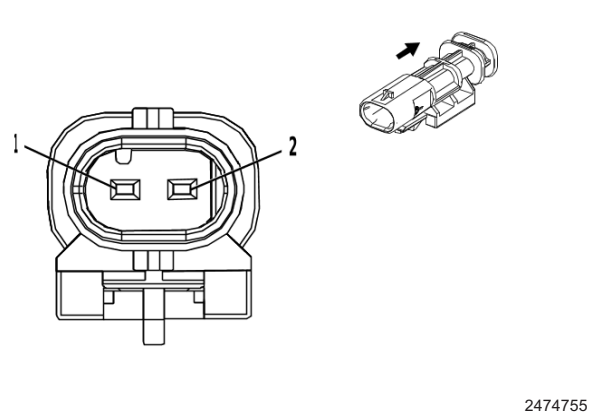

**Connector Part Information**

Harness Type: Chassis Wiring Harness  
 OEM Connector: 13591337  
 Service Connector: 85533165  
 Description: 2-Way M 1.2 MCON Series, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required
II	Not required	J-35616-17 (L-GN)	No Tool Required

**X382 Chassis Wiring Harness to Chassis Wiring Harness (S0Y)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.5	RD / BU	840	I	—	Battery Positive Voltage	1	0.75	RD / BU	840	II	—
2	0.5	BK	750	I	—	Ground	2	0.75	BK	750	II	—

**X383 Rearview Camera Wiring Harness Jumper to Body Wiring Harness (UXA)**

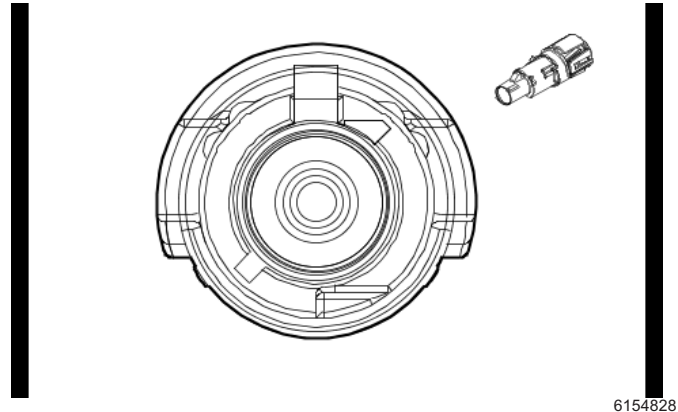

**Connector Part Information**

Harness Type: Rearview Camera Wiring Harness Jumper  
 OEM Connector: Not Available  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 1-Way F

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 13516812  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 1-Way M Coax Type, Sealed( GY)

**Terminal Part Information**


Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**X383 Rearview Camera Wiring Harness Jumper to Body Wiring Harness (UXA)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
—	—	LVDS	—	I	—	(Infotainment) Info-tainment Display Signal	—	—	LVDS	—	I	—



**X384 Rearview Camera Wiring Harness Jumper to Body Wiring Harness (UXA)**

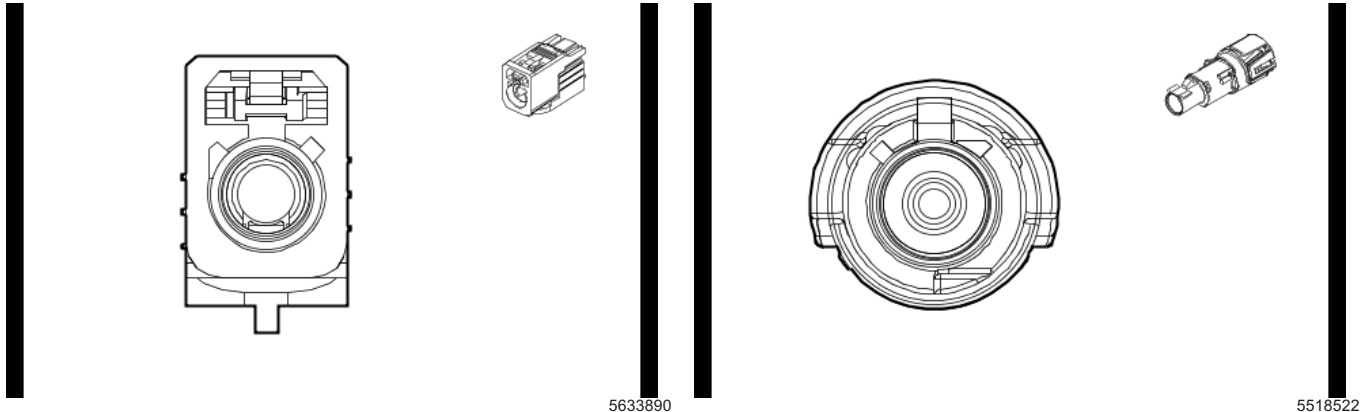

**Connector Part Information**

Harness Type: Rearview Camera Wiring Harness Jumper  
 OEM Connector: Not Available  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 1-Way F

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 13516806  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 1-Way M Coax Type, Sealed( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required


**X384 Rearview Camera Wiring Harness Jumper to Body Wiring Harness (UXA)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
—	—	LVDS	—	I	—	(PDR) Front Vision Camera #2	—	—	LVDS	—	I	—

**X393 Front Side Door Door Wiring Harness - Driver to Front Side Door Door Lock Door Wiring Harness - Driver**

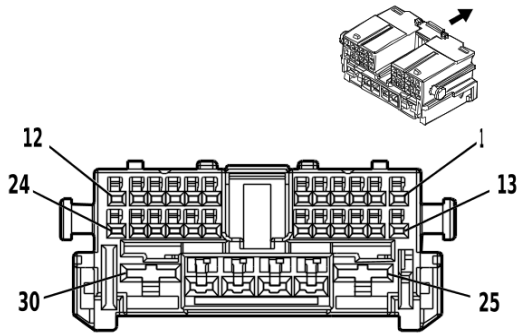

4253192

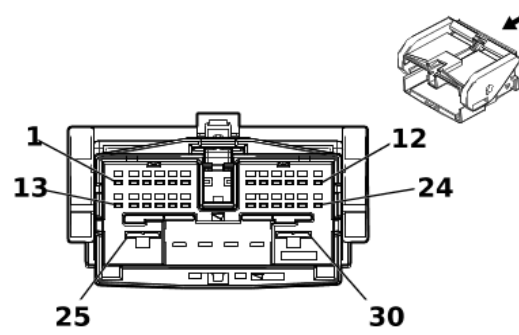

4249201

**Connector Part Information**

Harness Type: Front Side Door Door Wiring Harness - Driver  
 OEM Connector: 7298-4329-30  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 30-Way F 1.2 MCON, 2.8, 6.3 YESC Series( BK)

**Connector Part Information**

Harness Type: Front Side Door Door Lock Door Wiring Harness - Driver  
 OEM Connector: 7297-4331-30  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 30-Way M 1.2 MCON, 2.8, 6.3 YESC Series( BK)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required
II	Not required	J-35616-35 (VT)	No Tool Required
III	Not required	J-35616-42 (RD)	No Tool Required
IV	Not required	J-35616-4A (PU)	No Tool Required
V	Not required	J-35616-17 (L-GN)	No Tool Required
VI	Not required	J-35616-43 (RD)	No Tool Required
VII	Not required	J-35616-5 (PU)	No Tool Required

**X393 Front Side Door Door Wiring Harness - Driver to Front Side Door Door Lock Door Wiring Harness - Driver**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.35	BN / GY	4784	I	—	Left Front Door LED Backlight Dimming Control	1	0.35	BN / GY	4784	V	—
2	0.35	VT / YE	4244	I	—	Left Front Door Lock Indicator Control	2	0.35	VT / YE	4244	V	—
3	0.35	WH / VT	4258	I	—	Left Front Door Lock Status Signal	3	0.35	WH / VT	4258	V	—
4	0.35	BN / YE	2771	I	—	Left Front Door Lock Switch Lock Signal	4	0.35	BN / YE	2771	V	—

**X393 Front Side Door Door Wiring Harness - Driver to Front Side Door Door Lock Door Wiring Harness - Driver (cont'd)**



Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
5	0.35	BN / WH	2772	I	—	Left Front Door Lock Switch Un-lock Signal	5	0.35	BN / WH	2772	V	—
6	0.35	GY / YE	1760	I	—	Left Side Object Detection LED Control	6	0.35	GY / YE	1760	V	—
7	0.35	GN / YE	6134	I	—	Body Control Module LIN Bus 3	7	0.35	GN / YE	6134	V	—
8	0.35	GY	745	I	—	Left Front Door Ajar Switch Signal	8	0.35	GY	745	V	—
9	0.35	GY / GN	2763	I	—	Window Switch Left Front Up Signal	9	0.35	GY / GN	2763	V	—
10	0.35	WH / BN	2764	I	—	Window Switch Left Front Down Signal	10	0.35	WH / BN	2764	V	—
11	0.35	GN	2766	I	—	Power Window Switch Left Front Express Signal	11	0.35	GN	2766	V	—
12	—	—	—	—	—	Not Occupied	12	—	—	—	—	—
13	0.5	WH	606	I	—	Left Outside Rearview Mirror Heater Control	13	0.5	WH	606	V	—
14 - 15	—	—	—	—	—	Not Occupied	14 - 15	—	—	—	—	—
16	0.35	VT / BU	2788	I	—	Left Front Mirror Motor Up [+] Down [-] Control	16	0.35	VT / BU	2788	V	—
17	0.35	YE / BN	2789	I	—	Left Front Mirror Motor Common Control	17	0.35	YE / BN	2789	V	—
18	0.35	BN / BK	2790	I	—	Left Front Mirror Motor Right [+] Left [-] Control	18	0.35	BN / BK	2790	V	—
19	0.35	GY / BN	2787	I	—	Left Front Mirror Position Sensor Up [+] Down [-] Signal	19	0.35	GY / BN	2787	V	—
20	0.35	VT / RD	2791	I	—	Left Front Mirror Position Sensor High Reference	20	0.35	VT / RD	2791	V	—

**6-476 Electrical Component and Inline Harness Connector End Views**


**X393 Front Side Door Door Wiring Harness - Driver to Front Side Door Door Lock Door Wiring Harness - Driver (cont'd)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
21	0.35	WH / YE	2792	I	—	Left Front Mirror Position Sensor Left [-] Right [+] Signal	21	0.35	WH / YE	2792	V	—
22	0.35	BK / BN	673	I	—	Left Outside Rearview Mirror Position Sensor Low Reference	22	0.35	BK / BN	673	V	—
23 - 24	—	—	—	—	—	Not Occupied	23 - 24	—	—	—	—	—
25	2.5 0.5	RD / BU RD / VT	1240 1940	III III	AEC AXG	Battery Positive Voltage Battery Positive Voltage	25	2.5 0.5	RD / BU RD / VT	1240 1940	VI VI	AEC AXG
26	2.5 0.5	BK BK	1150 1150	IV II	AEC AXG+ AED	Ground Ground	26	2.5 0.5	BK BK	1150 1150	VII VII	AEC AXG+ AED
27	2	YE / VT	165	IV	—	Left Front Window Motor Down Control	27	2	YE / VT	165	VII	—
28	2	GN / GY	164	IV	—	Left Front Window Motor Up Control	28	2	GN / GY	164	VII	—
29 - 30	—	—	—	—	—	Not Occupied	29 - 30	—	—	—	—	—

**X399 Instrument Panel Wiring Harness to Body Wiring Harness (UVB - UV2)**

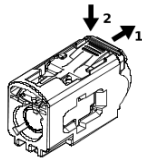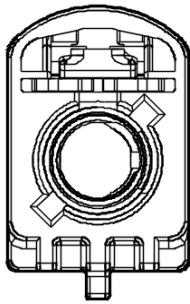

5215274

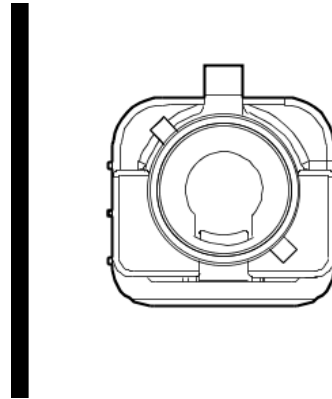

5873701

**Connector Part Information**

Harness Type: Instrument Panel Wiring Harness COAX  
 OEM Connector: 13516215  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 1-Way F Coax Type( BU)

**Connector Part Information**

Harness Type: Body Wiring Harness COAX  
 OEM Connector: 13516061  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 1-Way M Coax Type( BU)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**X399 Instrument Panel Wiring Harness to Body Wiring Harness (UVB - UV2)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
—	—	Coax Cable	—	I	—	Rear Vision Camera Co-axial Video Signal	—	—	Coax Cable	—	I	—


**X400 Instrument Panel Wiring Harness to Body Wiring Harness**

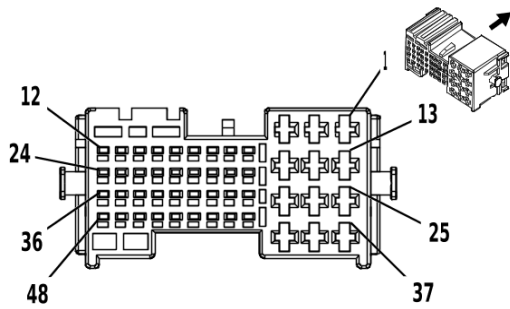

3277913

**Connector Part Information**

Harness Type: Instrument Panel Wiring Harness  
 OEM Connector: 2109452-2  
 Service Connector: 19329739  
 Description: 48-Way F 1.2 MCON, 2.8 MCP Series( BK)



3277901

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 5-2109455-2  
 Service Connector: 19329740  
 Description: 48-Way M 1.2 MCON, 2.8 MCP Series( BK)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19329758	J-35616-12 (BU)	J-38125-215A
II	87814662	J-35616-4A (PU)	J-38125-557
III	Service by Cable	No Tool Required	No Tool Required
IV	13575574	J-35616-5 (PU)	J-38125-215A
V	86509266	J-35616-13 (BU)	J-38125-215A
VI	Service by Cable	No Tool Required	No Tool Required

**X400 Instrument Panel Wiring Harness to Body Wiring Harness**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.75	YE / BK	117	II	UQ3	Right Front Speaker [-] Control 1	1	0.75	YE / BK	117	IV	UQ3
	0.5	BN / BK	1953	II	UQA	Right Front Midrange Speaker [-] Control						
2	0.75	YE	200	II	UQ3	Right Front Speaker 1 [+] Control	2	0.75	YE	200	IV	UQ3
	0.5	WH / YE	1853	II	UQA	Right Front Midrange Speaker [+] Control						
3	0.5	YE / WH	1860	II	—	Front Center Speaker [+] Control	3	0.5	YE / WH	1860	IV	—
4	0.5	RD / GN	4440	I	—	Battery Positive Voltage	4	0.5	RD / GN	4440	V	—
5	0.5	BK / WH	1351	I	—	Signal Ground	5	0.5	BK / WH	1351	V	—

**X400 Instrument Panel Wiring Harness to Body Wiring Harness (cont'd)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
6	0.35	GN / WH	4115	I	—	Body Control Module LIN Bus 5	6	0.35	GN / WH	4115	V	—
7	0.35	BU	4987	I	—	AUTOSAR CAN Bus [+] 1 Serial Data	7	0.35	BU	4987	V	—
8	0.35	WH	4986	I	—	AUTOSAR CAN Bus [-] 1 Serial Data	8	0.35	WH	4986	V	—
9	0.35	BU	4987	I	—	AUTOSAR CAN Bus [+] 1 Serial Data	9	0.35	BU	4987	V	—
10	0.35	WH	4986	I	—	AUTOSAR CAN Bus [-] 1 Serial Data	10	0.35	WH	4986	V	—
11	0.35	BU / YE	4979	I	—	AUTOSAR CAN Bus [+] 2 Serial Data	11	0.35	BU / YE	4979	V	—
12	0.35	WH	4978	I	—	AUTOSAR CAN Bus [-] 2 Serial Data	12	0.35	WH	4978	V	—
13	0.75	BU / BK	115	II	—	Right Rear Speaker [-] Control	13	0.75	BU / BK	115	IV	—
14	0.75	WH	46	II	—	Right Rear Speaker [+] Control	14	0.75	WH	46	IV	—
15	0.5	BU / YE	1960	II	—	Front Center Speaker [-] Control	15	0.5	BU / YE	1960	IV	—
16	0.35	BK / GY	5152	I	—	Voice Recognition Audio [-] Control	16	0.35	BK / GY	5152	V	—
17	0.35	GY / YE	5149	I	—	Voice Recognition Audio Signal	17	0.35	GY / YE	5149	V	—
18	0.35	Bare	1792	I	—	Low Reference	18	0.35	Bare	1792	V	—
19 - 22	—	—	—	—	—	Not Occupied	19 - 22	—	—	—	—	—
23	0.35	BU / BK	4977	I	—	AUTOSAR CAN Bus [+] 3 Serial Data	23	0.5	BU / BK	4977	V	—
24	0.35	WH	4976	I	—	AUTOSAR CAN Bus [-] 3 Serial Data	24	0.5	WH	4976	V	—
25 - 27	—	—	—	—	—	Not Occupied	25 - 27	—	—	—	—	—
28	0.35	BU / BK	7044	I	—	Microphone [-] Signal	28	0.35	BU / BK	7044	V	—
29	0.35	VT / YE	7043	I	—	Microphone [+] Signal	29	0.35	VT / YE	7043	V	—
30 - 32	—	—	—	—	—	Not Occupied	30 - 32	—	—	—	—	—


**6-480 Electrical Component and Inline Harness Connector End Views**

**X400 Instrument Panel Wiring Harness to Body Wiring Harness (cont'd)**


Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
33	0.35	WH	8580	III	—	Automotive Audio Bus A2B Serial Data 1 [+]	33	0.35	WH	8580	VI	—
34	0.35	GN	8579	III	—	Automotive Audio Bus A2B Serial Data 1 [-]	34	0.35	GN	8579	VI	—
35 - 36	—	—	—	—	—	Not Occupied	35 - 36	—	—	—	—	—
37	2.5	BK	4250	II	—	Ground	37	2.5	BK	4250	IV	—
38	—	—	—	—	—	Not Occupied	38	—	—	—	—	—
39	0.75	RD / GN	1840	II	—	Battery Positive Voltage	39	1.5	RD / GN	1840	IV	—
40 - 48	—	—	—	—	—	Not Occupied	40 - 48	—	—	—	—	—



### X401 Roof Wiring Harness to Body Wiring Harness

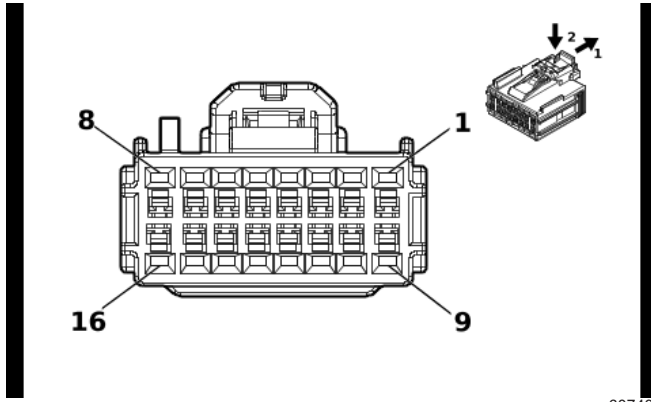

6074371

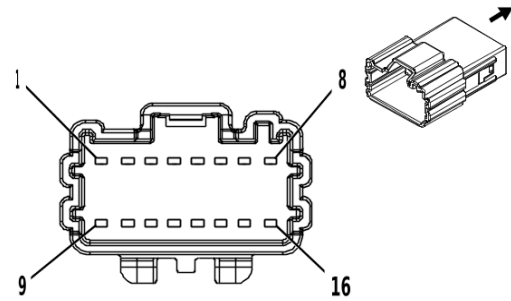

4218594

#### Connector Part Information

Harness Type: Roof Wiring Harness  
 OEM Connector: 6098-9013  
 Service Connector: 13541573  
 Description: 16-Way F 1.2 MCON Series( GY)

#### Connector Part Information

Harness Type: Body Wiring Harness  
 OEM Connector: 6098-8829  
 Service Connector: 13527235  
 Description: 16-Way M 1.2 Series( GY)

#### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19371240	J-35616-12 (BU)	J-38125-215A
II	84726946	J-35616-13 (BU)	J-38125-215A


### X401 Roof Wiring Harness to Body Wiring Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.75	BK	4250	I	—	Ground	1	0.75	BK	4250	II	—
2	0.5 0.35	WH / BN WH / BN	6815 6815	I I	( TCA+ C75) / ( TCA+ DEG) ( TCA+ DEG) + C75 ( TCA+ C75) - DEG	Inadvertent Load Control Inadvertent Load Control	2	0.5	WH / BN	6815	II	—
3	0.5	GY	157	I	—	Interior Lamp Control	3	0.5	GY	157	II	—
4	0.35	GY	156	I	—	Courtesy Lamp Switch Signal	4	0.35	GY	156	II	—
5	0.35	GY / GN	328	I	—	Interior Lamp Defeat Switch Sig- nal	5	0.35	GY / GN	328	II	—
6 - 10	—	—	—	—	—	Not Occu- pied	6 - 10	—	—	—	—	—
11	0.35	YE	6817	I	—	LED Back- light Dim- ming Control 1	11	0.35	YE	6817	II	—

**6-482 Electrical Component and Inline Harness Connector End Views****X401 Roof Wiring Harness to Body Wiring Harness (cont'd)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
12	0.35	GN / WH	2854	I	—	Body Control Module LIN Bus 8	12	0.35	GN / WH	2854	II	—
13	0.35	GN / YE	2862	I	—	Body Control Module LIN Bus 16	13	0.35	GN / YE	2862	II	—
14 - 16	—	—	—	—	—	Not Occupied	14 - 16	—	—	—	—	—

**X402A Front Seat Wiring Harness - Passenger to Body Wiring Harness**

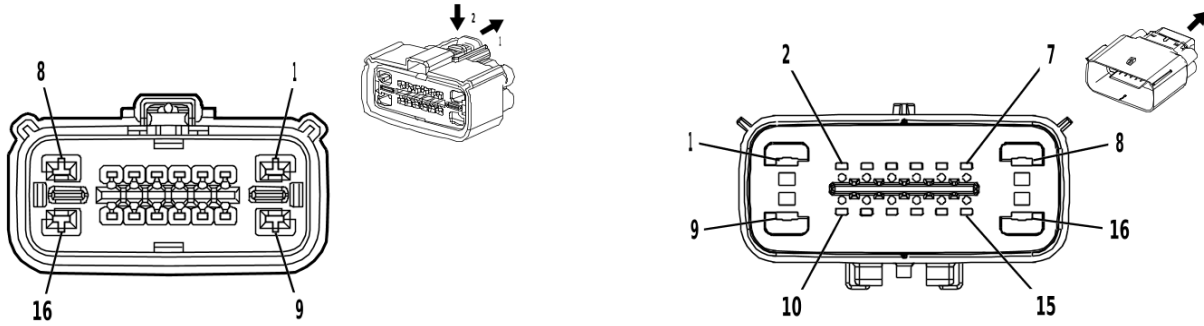

4283035

2373686

**Connector Part Information**

Harness Type: Front Seat Wiring Harness - Passenger  
 OEM Connector: 34985-2161  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 16-Way F 1.5, 2.8 MX Series, Sealed( YE)

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 34986-1605  
 Service Connector: 19331031  
 Description: 16-Way M 1.5, 2.8 MX Series, Sealed( YE)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required
II	Not required	J-35616-35 (VT)	No Tool Required
III	Not required	No Tool Required	No Tool Required
IV	19366658	J-35616-5 (PU)	J-38125-12A
V	86800300	J-35616-3 (GY)	J-38125-217

**X402A Front Seat Wiring Harness - Passenger to Body Wiring Harness**



Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	2.5 1.5	BK BK	4250 4250	II II	A7J/ (KA1+ KU9) KA1- KU9- A7J	Ground Ground	1	2.5	BK	4250	IV	—
2	0.5	OG / GY	4956	III	—	Passenger Seat Back Air Bag High Control	2	0.5	OG / GY	4956	V	—
3	0.5	BU / OG	4957	III	—	Passenger Seat Back Air Bag Low Control	3	0.5	BU / OG	4957	V	—
4	0.5	BK / WH	1351	I	—	Signal Ground	4	0.5	BK / WH	1351	V	—
5	0.5	GY / OG	3946	I	—	Passenger Automatic Locking Retractor Switch Low Reference	5	0.5	GY / OG	3946	V	—

**6-484 Electrical Component and Inline Harness Connector End Views**

**X402A Front Seat Wiring Harness - Passenger to Body Wiring Harness (cont'd)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
6	0.5	OG / BN	3947	I	—	Passenger Automatic Locking Retractor Switch Signal	6	0.5	OG / BN	3947	V	—
7	0.5	RD / GN	4440	I	—	Battery Positive Voltage	7	0.5	RD / GN	4440	V	—
8	2.5	RD / YE	4340	II	—	Battery Positive Voltage	8	2.5	RD / YE	4340	IV	—
9	—	—	—	—	—	Not Occupied	9	—	—	—	—	—
10	0.5	OG / VT	1362	I	—	Passenger Seat Belt Switch Signal	10	0.5	OG / VT	1362	V	—
11	0.5	BK / OG	1363	I	—	Driver Seat Belt Switch Low Reference	11	0.5	BK / OG	1363	V	—
12	0.5	WH	4986	I	—	AUTOSAR CAN Bus [-] 1 Serial Data	12	0.35	WH	4986	V	—
13	0.5	BU	4987	I	—	AUTOSAR CAN Bus [+] 1 Serial Data	13	0.35	BU	4987	V	—
14	0.5	WH	4986	I	—	AUTOSAR CAN Bus [-] 1 Serial Data	14	0.35	WH	4986	V	—
15	0.5	BU	4987	I	—	AUTOSAR CAN Bus [+] 1 Serial Data	15	0.35	BU	4987	V	—
16	0.75	RD / BN	4240	II	—	Battery Positive Voltage	16	0.75	RD / BN	4240	IV	—

**X402B Front Seat Wiring Harness - Passenger to Body Wiring Harness**

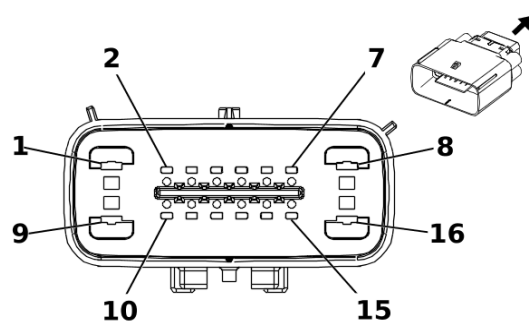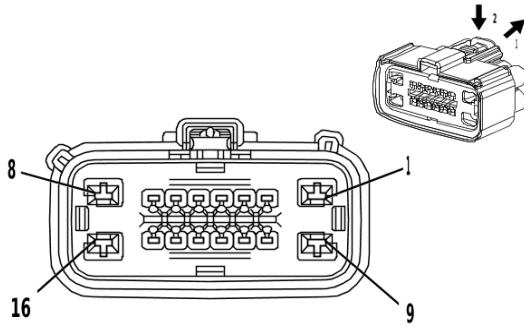

4341043

4209017

**Connector Part Information**

Harness Type: Front Seat Wiring Harness - Passenger  
 OEM Connector: 34985-1607  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 16-Way F 1.5, 2.8 MX Series, Sealed( GY)

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 34986-1602  
 Service Connector: 19352214  
 Description: 16-Way M 1.5, 2.8 MX Series, Sealed( L-GY)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required
II	Not required	J-35616-2A (GY)	No Tool Required
III	86800300	J-35616-3 (GY)	J-38125-217

**X402B Front Seat Wiring Harness - Passenger to Body Wiring Harness**


Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	—	—	—	—	—	Not Occu- pied	1	—	—	—	—	—
2	0.75	BN / VT	2077	II	—	Driver Seat Heating Ele- ment Control	2	0.75	BN / VT	2077	III	—
3	0.75	BN / BK	2078	II	—	Driver Seat Heating Ele- ment Low Reference	3	0.75	BN / BK	2078	III	—
4	0.5	YE / GY	2079	I	—	Driver Seat Heating Tem- perature Sensor Sig- nal	4	0.5	YE / GY	2079	III	—
5	0.5	BK / YE	2080	I	—	Driver Heated Seat Thermistor Low Refer- ence	5	0.5	BK / YE	2080	III	—
6	0.5	BU	2425	I	—	Driver Seat Back Heating Temperature Sensor Sig- nal	6	0.5	BU	2425	III	—
7- 9	—	—	—	—	—	Not Occu- pied	7- 9	—	—	—	—	—

**6-486 Electrical Component and Inline Harness Connector End Views**


**X402B Front Seat Wiring Harness - Passenger to Body Wiring Harness (cont'd)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
10	0.5	GN / VT	2857	I	—	Body Control Module LIN Bus 11	10	0.35	GN / VT	2857	III	—
11	0.75	RD / BU	4540	II	—	Battery Positive Voltage	11	0.75	RD / BU	4540	III	—
12	0.75	RD / VT	4640	II	—	Battery Positive Voltage	12	0.75	RD / VT	4640	III	—
13	—	—	—	—	—	Not Occupied	13	—	—	—	—	—
14	0.5	GN / VT	5906	I	—	Driver Seat Blower Motor Control 1	14	0.5	GN / VT	5906	III	—
15	0.5	VT / GN	839	I	—	Run/Crank Ignition 1 Voltage	15	0.5	VT / GN	839	III	—
16	—	—	—	—	—	Not Occupied	16	—	—	—	—	—

### X402C Roof Wiring Harness to Body Wiring Harness

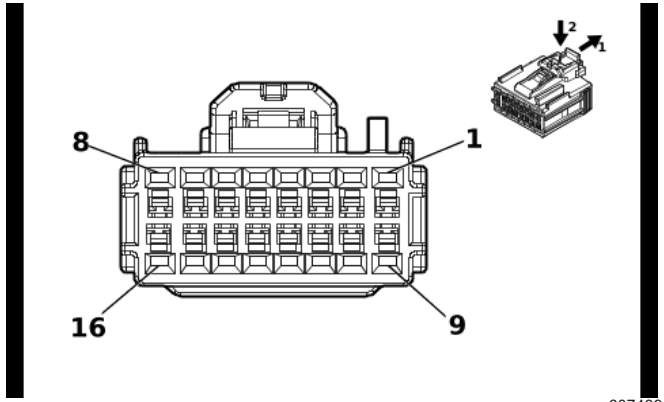

6074391

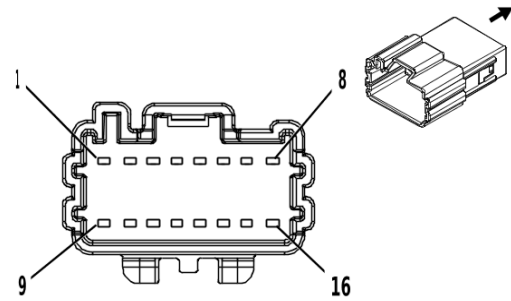

4223086

#### Connector Part Information

Harness Type: Roof Wiring Harness  
 OEM Connector: 6098-9012  
 Service Connector: 13541574  
 Description: 16-Way F 1.2 MCON Series( BK)

#### Connector Part Information

Harness Type: Body Wiring Harness  
 OEM Connector: 6098-8828  
 Service Connector: 13526848  
 Description: 16-Way M 1.2 Series( BK)

#### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19371240	J-35616-12 (BU)	J-38125-215A
II	84726946	J-35616-13 (BU)	J-38125-215A

### X402C Roof Wiring Harness to Body Wiring Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.35	BK / WH	1851	I	( ( UE4/ UEU/ UHY/ UHX/ TQ5) ) - ( DD8/ CJ2)	Signal Ground	1	0.5	BK / WH	451	II	—
	0.5	BK / WH	1851	I								
2	0.35	RD / YE	240	I	—	Battery Positive Voltage	2	0.35	RD / YE	240	II	—
3	0.35	RD / VT	4040	I	—	Battery Positive Voltage	3	0.35	RD / VT	4040	II	—
4	0.35	BU	2307	I	—	Passenger Air Bag On Indicator Control	4	0.35	BU	2307	II	—
5	0.35	GN	2308	I	—	Passenger Air Bag Off Indicator Control	5	0.35	GN	2308	II	—


**6-488 Electrical Component and Inline Harness Connector End Views**

**X402C Roof Wiring Harness to Body Wiring Harness (cont'd)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
6	0.35	GN	3118	I	AL0+ C9I	Roof Rail Air Bag Disable Indicator Control	6	0.35	GN	3118	II	AL0+ C9I
	0.35	VT / WH	5234	I	AL0- C9I	Passenger Seat Belt Indicator Control		0.35	VT / WH	5234	II	AL0- C9I
7	0.35	GN / WH	4115	I	—	Body Control Module LIN Bus 5	7	0.35	GN / WH	4115	II	—
8	0.35	GN / WH	24	I	—	Backup Lamp Control	8	0.35	GN / WH	24	II	—
9	0.35	VT / WH	1139	I	( CJ2/ DD8)	Run/Crank Ignition 1 Voltage	9	0.5	VT / WH	1139	II	—
10	0.35	BU / BK	7044	I	—	Microphone [-] Signal	10	0.35	BU / BK	7044	II	—
11	0.35	VT / YE	7043	I	—	Microphone [+] Signal	11	0.35	VT / YE	7043	II	—
12	—	—	—	—	—	Not Occupied	12	—	—	—	—	—
13	0.35	BU / YE	4979	I	—	AUTOSAR CAN Bus [+] 2 Serial Data	13	0.5	BU / YE	4979	II	—
14	0.35	WH	4978	I	—	AUTOSAR CAN Bus [-] 2 Serial Data	14	0.5	WH	4978	II	—
15	0.35	BU / YE	4979	I	—	AUTOSAR CAN Bus [+] 2 Serial Data	15	0.35	BU / YE	4979	II	—
16	0.35	WH	4978	I	—	AUTOSAR CAN Bus [-] 2 Serial Data	16	0.35	WH	4978	II	—



### X402D Inside Air Moisture and Windshield Temperature Sensor Jumper Wiring Harness to Roof Wiring Harness (CJ2)

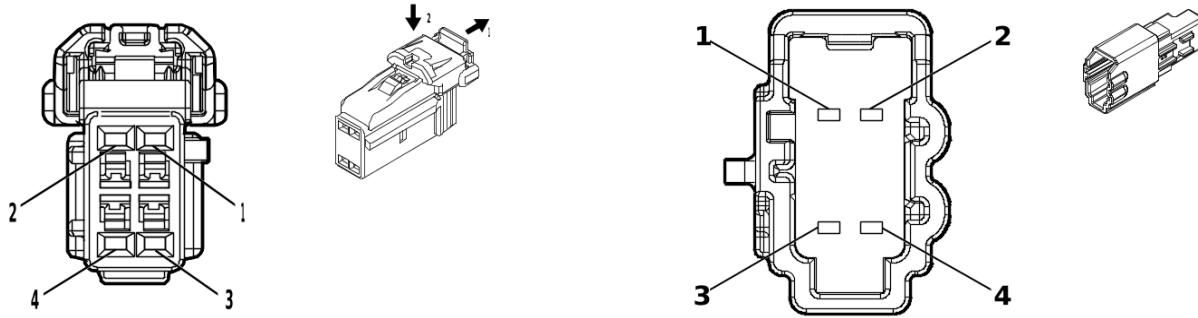

4872683

5360963

#### Connector Part Information

Harness Type: Inside Air Moisture and Windshield Temperature Sensor Jumper Wiring Harness  
 OEM Connector: Not Available  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 4-Way F

#### Connector Part Information

Harness Type: Roof Wiring Harness  
 OEM Connector: 6098-9046  
 Service Connector: 84847258  
 Description: 4-Way M 1.2 MCON Series( BK)



#### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required
II	Not required	J-35616-17 (L-GN)	No Tool Required

### X402D Inside Air Moisture and Windshield Temperature Sensor Jumper Wiring Harness to Roof Wiring Harness (CJ2)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.35	VT / GN	39	I	—	Run/Crank Ignition 1 Voltage	1	0.35	VT / GN	39	II	—
2	0.35	BK / WH	1851	I	—	Signal Ground	2	0.35	BK / WH	1851	II	—
3	0.35	GN / WH	4115	I	—	Body Control Module LIN Bus 5	3	0.35	GN / WH	4115	II	—
4	—	—	—	—	—	Not Occupied	4	—	—	—	—	—

**X404 Body Wiring Harness to Front Side Door Door Wiring Harness - Passenger**

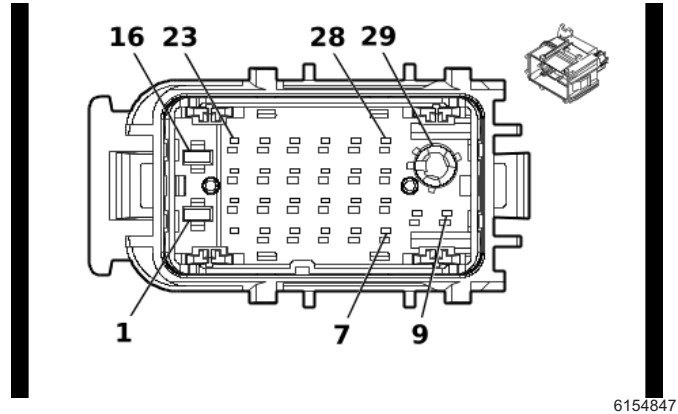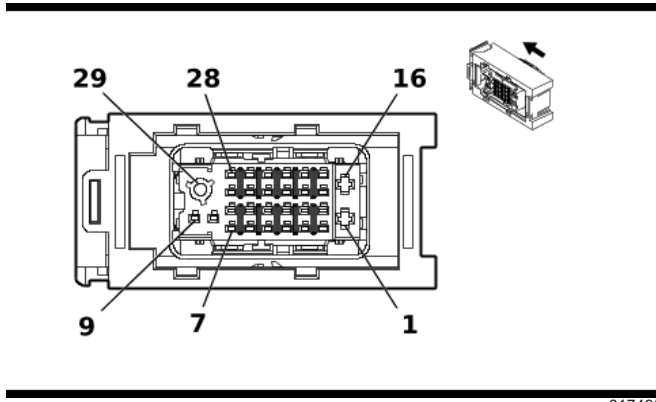

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 35383762  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 29-Way F 1.2, 2.8 CTS Coaxial Series, Sealed( YE)

**Connector Part Information**

Harness Type: Front Side Door Door Wiring Harness - Passenger  
 OEM Connector: 35383764  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 29-Way M 1.2 CTS, 2.8 DCS-2, Coaxial Series, Sealed( YE)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required
II	Not required	J-35616-35 (VT)	No Tool Required
III	Service by Cable	No Tool Required	J-38125-12A
IV	Not required	J-35616-13 (BU)	No Tool Required
V	Not required	J-35616-17 (L-GN)	No Tool Required
VI	Not required	J-35616-5 (PU)	No Tool Required
VII	Not required	No Tool Required	No Tool Required


**X404 Body Wiring Harness to Front Side Door Door Wiring Harness - Passenger**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	2.5	BK	4250	II	—	Ground	1	2.5	BK	1250	VI	—
2-6	—	—	—	—	—	Not Occupied	2-6	—	—	—	—	—
7	0.35	GN / YE	6134	I	—	Body Control Module LIN Bus 3	7	0.35	GN / YE	6134	V	—
8-10	—	—	—	—	—	Not Occupied	8-10	—	—	—	—	—
11	0.5	BN / OG	2134	I	—	Right Front Side Impact Sensor Signal	11	0.5	BN / OG	2134	V	—
12	0.5	BK / OG	6629	I	—	Right Front Side Impact Sensor Low Reference	12	0.5	BK / OG	6629	V	—
13	—	—	—	—	—	Not Occupied	13	—	—	—	—	—


**X404 Body Wiring Harness to Front Side Door Door Wiring Harness - Passenger (cont'd)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
14	0.35	GN / BK	4304	I	—	Passive Entry Right Antenna Signal Low	14	0.5	GN / BK	4304	V	—
15	0.35	GN / YE	4303	I	—	Passive Entry Right Antenna Signal High	15	0.5	GN / YE	4303	V	—
16	2.5	RD / GY	3540	II	—	Battery Positive Voltage	16	2.5	RD / GY	3540	VI	—
17 - 19	—	—	—	—	—	Not Occupied	17 - 19	—	—	—	—	—
20	0.35	GY / VT	2676	I	—	Right Front Door Exterior Switch Unlock Signal	20	0.35	GY / VT	2676	V	—
21 - 22	—	—	—	—	—	Not Occupied	21 - 22	—	—	—	—	—
23	0.75	GY / BK	2680	I	—	Lock Actuators Unlock Control 2	23	0.75	GY / BK	2680	V	—
24	0.75	YE / GN	2682	I	—	Right Front Door Lock Actuator Lock Control	24	0.75	YE / GN	2682	V	—
25 - 26	—	—	—	—	—	Not Occupied	25 - 26	—	—	—	—	—
27	0.75 1	YE	200	I	UQ3	Right Front Speaker 1 [+] Control	27	0.75 1	YE	200	V	UQ3
		YE	200	I	UQA	Right Front Speaker 1 [+] Control			YE	200	IV	UQA
28	0.75 1	YE / BK	117	I	UQ3	Right Front Speaker [-] Control 1	28	0.75 1	YE / BK	117	V	UQ3
		YE / BK	117	I	UQA	Right Front Speaker [-] Control 1			YE / BK	117	IV	UQA
29	0	Coax Cable	4724	III	—	Right Side-view Camera LVDS (Low Voltage Differential Signaling) Coaxial Signal	29	0	Coax Cable	4724	VII	—

**X494 Front Side Door Door Wiring Harness - Passenger to Front Side Door Door Lock Door Wiring Harness - Passenger**

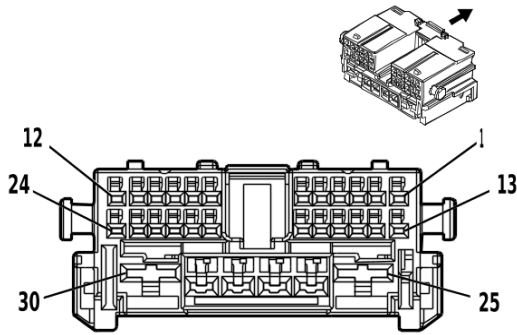

4253192

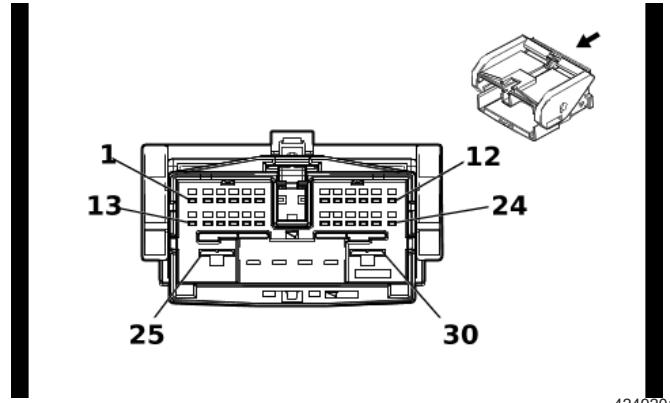

4249201

**Connector Part Information**

Harness Type: Front Side Door Door Wiring Harness - Passenger  
 OEM Connector: 7298-4329-30  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 30-Way F 1.2 MCON, 2.8, 6.3 YESC Series( BK)

**Connector Part Information**

Harness Type: Front Side Door Door Lock Door Wiring Harness - Passenger  
 OEM Connector: 7297-4331-30  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 30-Way M 1.2 MCON, 2.8, 6.3 YESC Series( BK)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required
II	Not required	J-35616-42 (RD)	No Tool Required
III	Not required	J-35616-4A (PU)	No Tool Required
IV	Not required	J-35616-17 (L-GN)	No Tool Required
V	Not required	J-35616-43 (RD)	No Tool Required
VI	Not required	J-35616-5 (PU)	No Tool Required

**X494 Front Side Door Door Wiring Harness - Passenger to Front Side Door Door Lock Door Wiring Harness - Passenger**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.35	GY / VT	4638	I	—	LED Back-light Dimming Control Right Front Door	1	0.35	GY / VT	4638	IV	—
2	0.35	YE / BU	4245	I	—	Right Front Door Lock Indicator Control	2	0.35	YE / BU	4245	IV	—
3	0.35	VT	4259	I	—	Right Front Door Lock Status Signal	3	0.35	VT	4259	IV	—
4	0.35	YE / VT	2773	I	—	Right Front Door Lock Switch Lock Control	4	0.35	YE / VT	2773	IV	—

**X494 Front Side Door Door Wiring Harness - Passenger to Front Side Door Door Lock Door Wiring Harness - Passenger (cont'd)**


Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
5	0.35	BN / VT	2774	I	—	Right Front Door Lock Switch Unlock Control	5	0.35	BN / VT	2774	IV	—
6	0.35	GY	1761	I	—	Right Side Object Detection LED Control	6	0.35	GY	1761	IV	—
7	0.35	GN / YE	6134	I	—	Body Control Module LIN Bus 3	7	0.35	GN / YE	6134	IV	—
8	0.35	GY	746	I	—	Right Front Door Ajar Switch Signal	8	0.35	GY	746	IV	—
9 - 12	—	—	—	—	—	Not Occupied	9 - 12	—	—	—	—	—
13	0.5	BN / VT	607	I	—	Right Outside Rear-view Mirror Heater Control	13	0.5	BN / VT	607	IV	—
14 - 15	—	—	—	—	—	Not Occupied	14 - 15	—	—	—	—	—
16	0.35	YE / VT	2796	I	—	Right Front Mirror Motor Up [+] Down [-] Control	16	0.35	YE / VT	2796	IV	—
17	0.35	WH	2797	I	—	Right Front Mirror Motor Common Control	17	0.35	WH	2797	IV	—
18	0.35	GN / BK	2798	I	—	Right Front Mirror Motor Right [+] Left [-] Control	18	0.35	GN / BK	2798	IV	—
19	0.35	BU / YE	2795	I	—	Right Front Mirror Position Sensor Up [+] Down [-] Signal	19	0.35	BU / YE	2795	IV	—
20	0.35	YE / RD	2799	I	—	Right Front Mirror Position Sensor High Reference	20	0.35	YE / RD	2799	IV	—
21	0.35	VT / WH	2800	I	—	Right Front Mirror Position Sensor Left [-] Right [+] Signal	21	0.35	VT / WH	2800	IV	—
22	0.35	BK / GN	675	I	—	Right Outside Rear-view Mirror Position Sensor Low Reference	22	0.35	BK / GN	675	IV	—
23 - 24	—	—	—	—	—	Not Occupied	23 - 24	—	—	—	—	—

**6-494 Electrical Component and Inline Harness Connector End Views**

**X494 Front Side Door Door Wiring Harness - Passenger to Front Side Door Door Lock  
Door Wiring Harness - Passenger (cont'd)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
25	2.5	RD / GY	3540	II	—	Battery Positive Voltage	25	2.5	RD / GY	3540	V	—
26	2.5	BK	1250	III	—	Ground	26	2.5	BK	1250	VI	—
27	2	YE / BU	667	III	—	Right Front Window Motor Down Control	27	2	YE / BU	667	VI	—
28	2	GN / GY	666	III	—	Right Front Window Motor Up Control	28	2	GN / GY	666	VI	—
29 - 30	—	—	—	—	—	Not Occupied	29 - 30	—	—	—	—	—


**X499A Body Wiring Harness to Instrument Panel Wiring Harness**

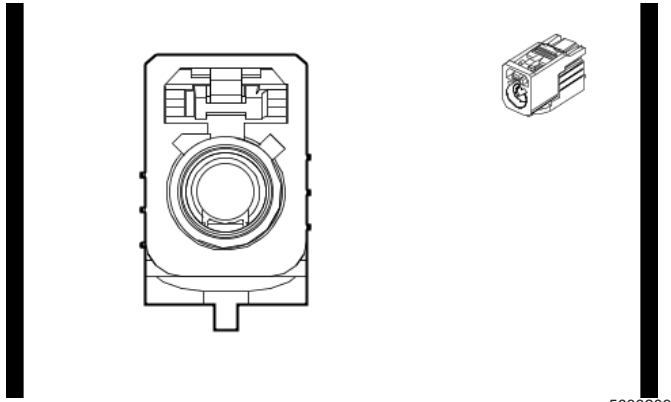

5633209

**Connector Part Information**

Harness Type: Body Wiring Harness COAX  
 OEM Connector: 13516408  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 1-Way F Coax Type( BK)

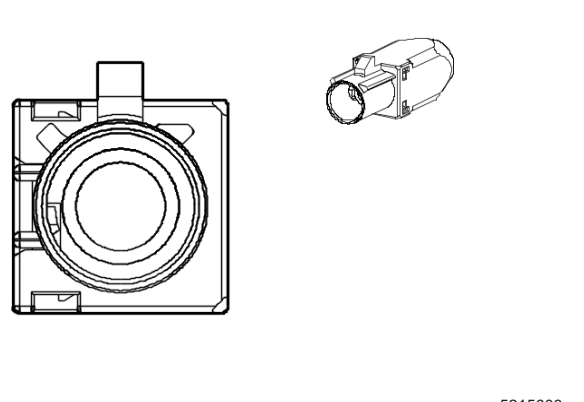

5215603

**Connector Part Information**

Harness Type: Instrument Panel Wiring Harness COAX  
 OEM Connector: 13515639  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 1-Way M Coax Type( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**X499A Body Wiring Harness to Instrument Panel Wiring Harness**


Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
—	—	Coax Cable	—	I	—	(AM/FM) Antenna RF Signal	—	—	Coax Cable	—	I	—

**X499C Body Wiring Harness to Instrument Panel Wiring Harness (U2K)**

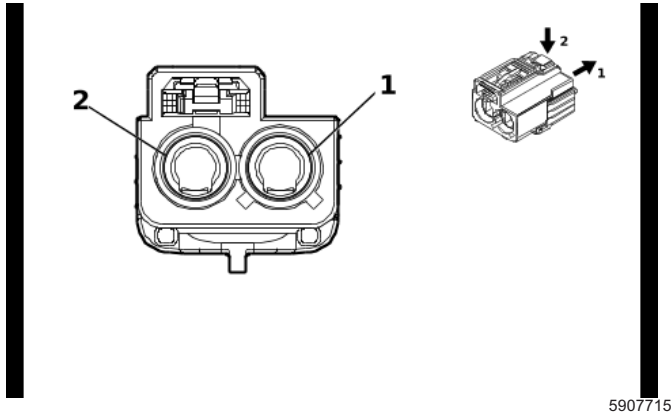

**Connector Part Information**

Harness Type: Body Wiring Harness COAX  
 OEM Connector: 13516431  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 2-Way F Coax Type( CU)

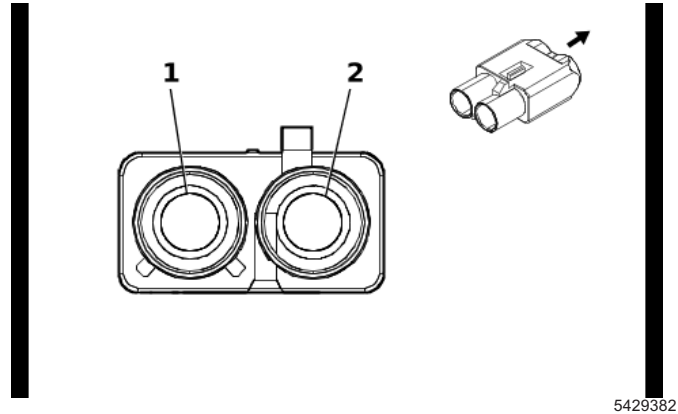

**Connector Part Information**

Harness Type: Instrument Panel Wiring Harness COAX  
 OEM Connector: 13515678  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 2-Way M Coax Type( CU)

**Terminal Part Information**


Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**X499C Body Wiring Harness to Instrument Panel Wiring Harness (U2K)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
—	—	Coax Cable	—	I	—	(FM2) Antenna RF Signal (2)	—	—	Coax Cable	—	I	—



### X500 Roof Wiring Harness to Body Wiring Harness

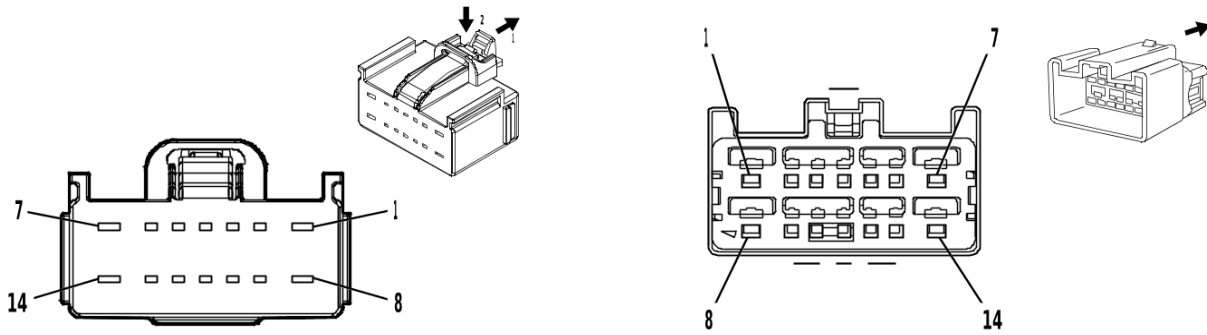

4934172

1283905

#### Connector Part Information

Harness Type: Roof Wiring Harness  
 OEM Connector: 7289-7630-40  
 Service Connector: 13513605  
 Description: 14-Way F 1.5, 2.8 YESC Series( GY)

#### Connector Part Information

Harness Type: Body Wiring Harness  
 OEM Connector: 7282-6447-40  
 Service Connector: 88956523  
 Description: 14-Way M 1.5, 2.8 YESC Series( L-GY)

#### Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	13575850	J-35616-2A (GY)	J-38125-557
II	84962855	J-35616-4A (PU)	J-38125-11A
III	13578907	J-35616-3 (GY)	J-38125-215A
IV	13578908	J-35616-5 (PU)	J-38125-11A

#### X500 Roof Wiring Harness to Body Wiring Harness


Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	1.5	RD / YE	2340	II	—	Battery Positive Voltage	1	1.5	RD / YE	2340	IV	—
2	—	—	—	—	—	Not Occupied	2	—	—	—	—	—
3	0.35	GN / BK	2515	I	—	Telematics Switch Supply Voltage	3	0.35	GN / BK	2515	III	—
4	0.35	GN / WH	2514	I	—	Telematics Switch Signal	4	0.35	GN / WH	2514	III	—
5	0.35	YE / VT	2516	I	—	Telematics Switch Green LED Indicator Control	5	0.35	YE / VT	2516	III	—
6	0.35	BN / WH	2517	I	—	Telematics Switch Red LED Indicator Control	6	0.35	BN / WH	2517	III	—
7	—	—	—	—	—	Not Occupied	7	—	—	—	—	—
8	1.5	BK	1850	II	—	Ground	8	1.5	BK	4250	IV	—

**6-498 Electrical Component and Inline Harness Connector End Views**

**X500 Roof Wiring Harness to Body Wiring Harness (cont'd)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
9	0.35	BK / WH	451	I	- ( UE1/ UER)	Signal Ground	9	0.5	BK / WH	451	III	—
	0.5	BK / WH	451	I		Signal Ground						
10	0.35	RD / VT	1640	I	—	Battery Positive Voltage	10	0.35	RD / VT	1640	III	—
11	—	—	—	—	—	Not Occupied	11	—	—	—	—	—
12	0.35	BK / BN	654	I	—	Cellular Telephone Microphone Low Reference	12	0.35	BK / BN	654	III	—
13	0.35	BU	655	I	—	Cellular Telephone Microphone Signal	13	0.35	BU	655	III	—
14	—	—	—	—	—	Not Occupied	14	—	—	—	—	—

**X503 Rear Side Door Door Wiring Harness - Left to Body Wiring Harness**

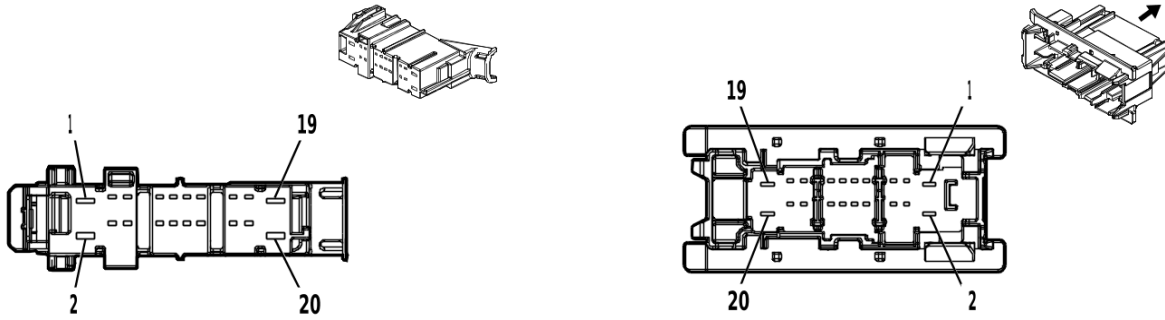

4650257

4663657

**Connector Part Information**

Harness Type: Rear Side Door Door Wiring Harness - Left  
 OEM Connector: 6098-8196  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 20-Way F 1.2 MCON, 2.8 MCP Series( BK)

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 6098-8887  
 Service Connector: 13527239  
 Description: 20-Way M 1.2 MCON, 2.8 MCP Series( BK)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required
II	Not required	J-35616-35 (VT)	No Tool Required
III	13586064	J-35616-5 (PU)	J-38125-212
IV	84616651	J-35616-13 (BU)	J-38125-215A

**X503 Rear Side Door Door Wiring Harness - Left to Body Wiring Harness**


Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	2.5	RD / BU	1240	II	—	Battery Positive Voltage	1	2.5	RD / BU	1240	III	—
2	2.5	BK	1150	II	—	Ground	2	2.5	BK	3750	III	—
3	0.75	BU / YE	1091	I	—	Left Rear Door Lock Actuator Lock Control	3	0.75	BU / YE	1091	IV	—
4	0.75	WH	2679	I	—	Lock Actuators Unlock Control 1	4	0.75	WH	2679	IV	—
5-6	—	—	—	—	—	Not Occupied	5-6	—	—	—	—	—
7	0.35	GN / GY	6135	I	—	Body Control Module LIN Bus 4	7	0.35	GN / GY	6135	IV	—
8-11	—	—	—	—	—	Not Occupied	8-11	—	—	—	—	—
12	0.75	GN / BK	116	I	UQ3	Left Rear Speaker [-] Control	12	0.75	GN / BK	116	IV	UQ3
	0.5	GN / BK	116	I	UQA	Left Rear Speaker [-] Control						

**6-500 Electrical Component and Inline Harness Connector End Views**


**X503 Rear Side Door Door Wiring Harness - Left to Body Wiring Harness (cont'd)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
13	0.75	GN	199	I	UQ3	Left Rear Speaker [+] Control	13	0.75	GN	199	IV	UQ3
	0.5	GN	199	I	UQA	Left Rear Speaker [+] Control		0.5	GN	199	IV	UQA
14 - 20	—	—	—	—	—	Not Occupied	14 - 20	—	—	—	—	—

**X604 Rear Side Door Door Wiring Harness - Right to Body Wiring Harness**

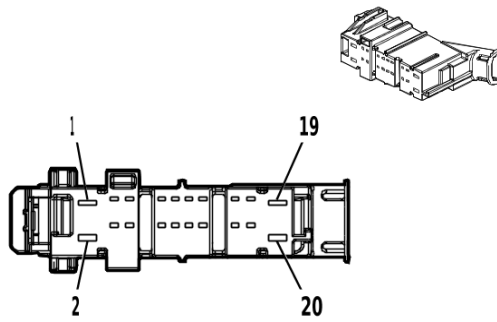

4650257

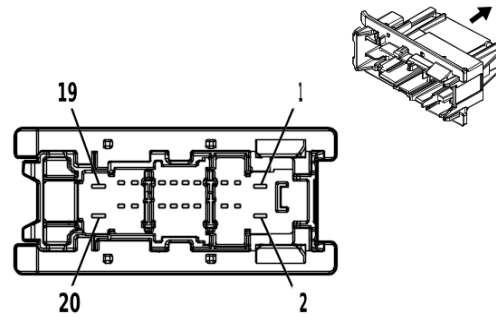

4663657

**Connector Part Information**

Harness Type: Rear Side Door Door Wiring Harness - Right  
 OEM Connector: 6098-8196  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 20-Way F 1.2 MCON, 2.8 MCP Series( BK)

**Connector Part Information**

Harness Type: Body Wiring Harness  
 OEM Connector: 6098-8887  
 Service Connector: 13527239  
 Description: 20-Way M 1.2 MCON, 2.8 MCP Series( BK)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required
II	Not required	J-35616-35 (VT)	No Tool Required
III	13586064	J-35616-5 (PU)	J-38125-212
IV	84616651	J-35616-13 (BU)	J-38125-215A

**X604 Rear Side Door Door Wiring Harness - Right to Body Wiring Harness**



Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	2.5	RD / GY	3540	II	—	Battery Positive Voltage	1	2.5	RD / GY	3540	III	—
2	2.5	BK	1250	II	—	Ground	2	2.5	BK	4250	III	—
3	0.75	VT / WH	1094	I	—	Right Rear Door Lock Actuator Lock Control	3	0.75	VT / WH	1094	IV	—
4	0.75	GY / BK	2680	I	—	Lock Actuators Unlock Control 2	4	0.75	GY / BK	2680	IV	—
5-6	—	—	—	—	—	Not Occupied	5-6	—	—	—	—	—
7	0.35	GN / GY	6135	I	—	Body Control Module LIN Bus 4	7	0.35	GN / GY	6135	IV	—
8-11	—	—	—	—	—	Not Occupied	8-11	—	—	—	—	—
12	0.75	BU / BK	115	I	UQ3	Right Rear Speaker [-] Control	12	0.75	BU / BK	115	IV	UQ3
	0.5	BU / BK	115	I	UQA	Right Rear Speaker [-] Control						

**6-502 Electrical Component and Inline Harness Connector End Views**

**X604 Rear Side Door Door Wiring Harness - Right to Body Wiring Harness (cont'd)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
13	0.75	WH	46	I	UQ3	Right Rear Speaker [+] Control	13	0.75	WH	46	IV	UQ3
	0.5	WH	46	I	UQA	Right Rear Speaker [+] Control		0.5	WH	46	IV	UQA
14 - 20	—	—	—	—	—	Not Occupied	14 - 20	—	—	—	—	—

**X700 Rear Object Alarm Sensor Wiring Harness to Chassis Wiring Harness**

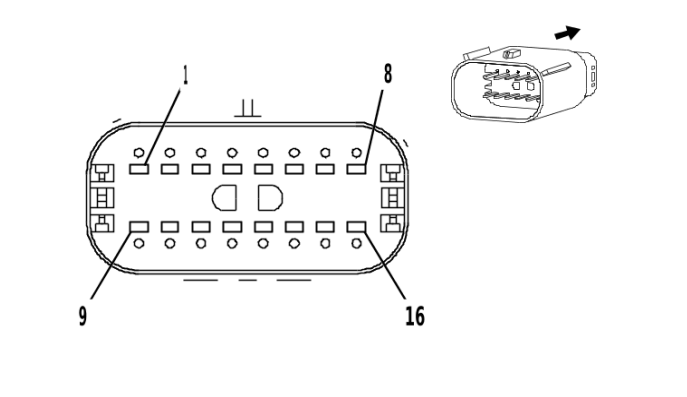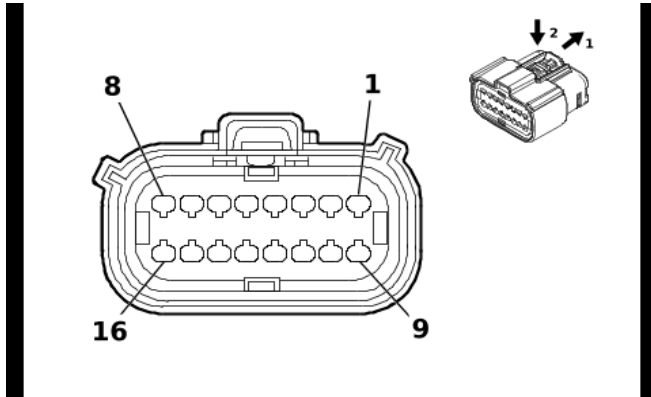

**Connector Part Information**

Harness Type: Rear Object Alarm Sensor Wiring Harness  
 OEM Connector: 33472-1607  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 16-Way F 1.5 MX Series, Sealed( L-GY)

**Connector Part Information**

Harness Type: Chassis Wiring Harness  
 OEM Connector: 33482-8602  
 Service Connector: 84625100  
 Description: 16-Way M 1.5 MX Series, Sealed( GY)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required
II	Not required	J-35616-2A (GY)	No Tool Required
III	19119395	J-35616-3 (GY)	J-38125-217

**X700 Rear Object Alarm Sensor Wiring Harness to Chassis Wiring Harness**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.5	BU / VT	4101	I	—	AUTOSAR CAN Bus [+] 4 Serial Data	1	0.5	BU / VT	4101	III	—
2	0.5	WH	4100	I	—	AUTOSAR CAN Bus [-] 4 Serial Data	2	0.5	WH	4100	III	—
3	—	—	—	—	—	Not Occupied	3	—	—	—	—	—
4	0.5	GY / BK	2680	I	—	Lock Actuators Unlock Control 2	4	0.5	GY / BK	2680	III	—
5	0.5	GY / VT	2691	I	—	Rear Closure Actuator Lock Control	5	0.5	GY / VT	2691	III	—
6	0.5	YE	2375	I	—	Left Rear Outer Parking Assist Sensor Signal	6	0.5	YE	2375	III	—
7	0.75	BK / GY	2379	II	—	Object Sensor Low Reference	7	0.75	BK / GY	2379	III	—
8	0.75	BN / WH	2374	II	—	Object Sensor Voltage Reference	8	0.75	BN / WH	2374	III	—


**6-504 Electrical Component and Inline Harness Connector End Views**

**X700 Rear Object Alarm Sensor Wiring Harness to Chassis Wiring Harness (cont'd)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
9	0.5	RD / BN	4940	I	—	Battery Positive Voltage	9	0.5	RD / BN	4940	III	—
10	0.5	BK / WH	751	I	—	Signal Ground	10	0.5	BK / WH	751	III	—
11	0.5	GN / YE	6846	I	—	Rear License Plate Lamp Control	11	0.5	GN / YE	6846	III	—
12	0.5	BK	750	I	—	Ground	12	0.5	BK	750	III	—
13	—	—	—	—	—	Not Occupied	13	—	—	—	—	—
14	0.5	YE / BU	2376	I	—	Left Rear Middle Parking Assist Sensor Signal	14	0.5	YE / BU	2376	III	—
15	0.5	YE / WH	2377	I	—	Right Rear Middle Parking Assist Sensor Signal	15	0.5	YE / WH	2377	III	—
16	0.5	YE / VT	2378	I	—	Right Rear Outer Parking Assist Sensor Signal	16	0.5	YE / VT	2378	III	—



**X777 Chassis Rear Wiring Harness Extension Harness to Chassis Wiring Harness (- G94)**

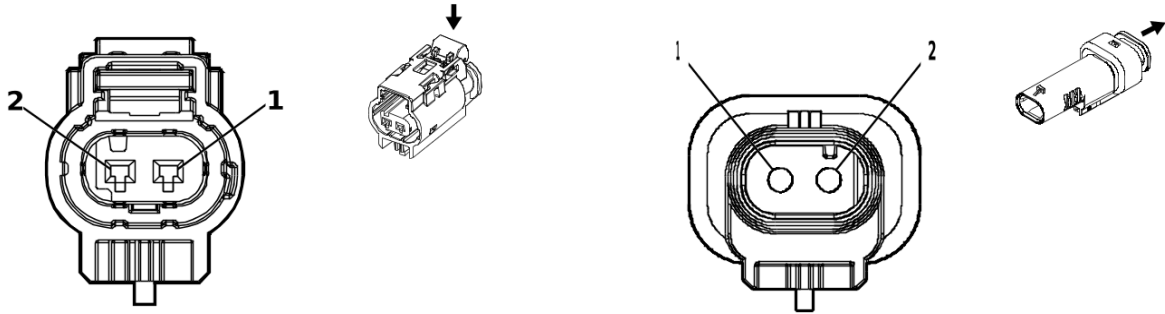

5207726

4992757

**Connector Part Information**

Harness Type: Chassis Rear Wiring Harness Extension Harness  
 OEM Connector: 13583199  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F 1.2 Multilock Series, Sealed( GY)

**Connector Part Information**

Harness Type: Chassis Wiring Harness  
 OEM Connector: 10094251  
 Service Connector: 19371200  
 Description: 2-Way M 1.2 MLK Series, Sealed( GY)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required
II	Not required	J-35616-13 (BU)	No Tool Required

**X777 Chassis Rear Wiring Harness Extension Harness to Chassis Wiring Harness (- G94)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.75	GN / YE	1616	I	—	Rear Brake Pad Wear Sensor Signal	1	0.5	GN / YE	1616	II	—
2	0.75	BK / WH	1751	I	—	Signal Ground	2	0.5	BK / WH	2051	II	—


**X788 Chassis Wiring Harness to Chassis Rear Wiring Harness Extension Harness (G94)**

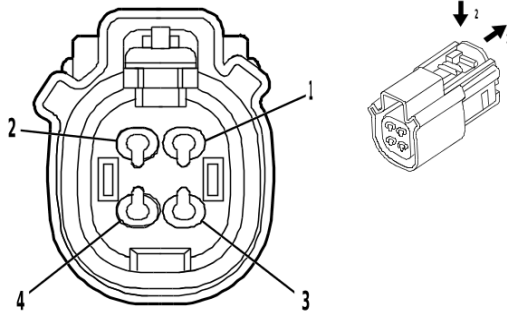

3960090

**Connector Part Information**

Harness Type: Chassis Wiring Harness  
 OEM Connector: 33472-4007  
 Service Connector: 19368970  
 Description: 4-Way F 1.5 MX Series, Sealed( GY)

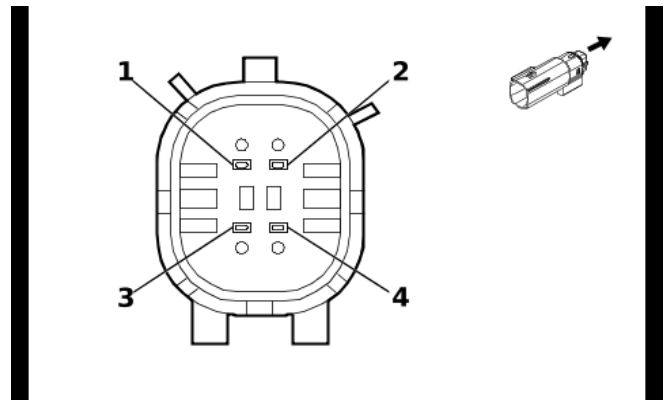

5604894

**Connector Part Information**

Harness Type: Chassis Rear Wiring Harness Extension Harness  
 OEM Connector: 13510902  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 4-Way M 1.5 MX Series, Sealed( GY)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required
II	Not required	J-35616-2A (GY)	No Tool Required
III	Not required	J-35616-3 (GY)	No Tool Required

**X788 Chassis Wiring Harness to Chassis Rear Wiring Harness Extension Harness (G94)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.75	VT / BN	7258	II	—	Rear Differential Lock Actuator Control	1	0.75	VT / BN	7258	III	—
2	0.75	GY / BK	7253	II	—	Rear Differential Lock Actuator Low Control	2	0.75	GY / BK	7253	III	—
3	0.5	GN / YE	1616	I	—	Rear Brake Pad Wear Sensor Signal	3	0.75	GN / YE	1616	III	—
4	0.5	BK / WH	2051	I	—	Signal Ground	4	0.75	BK / WH	1751	III	—

**X820 Body Rear Wiring Harness to Chassis Wiring Harness (KC9 / KCA)**

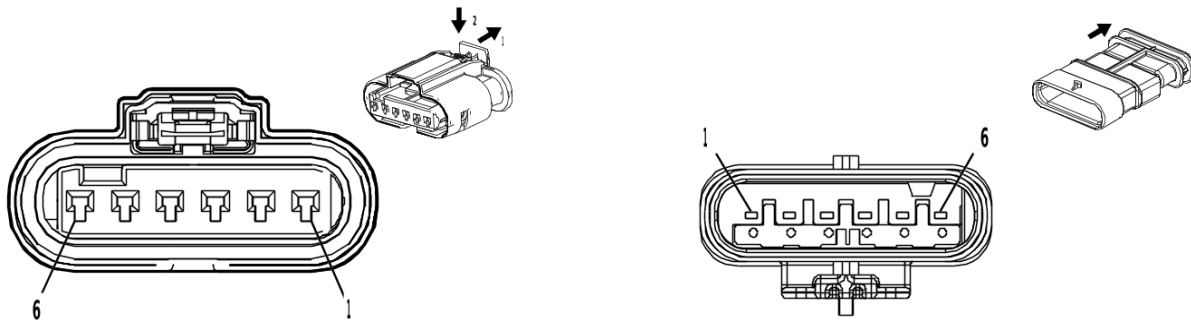

3960142

4561098

**Connector Part Information**

Harness Type: Body Rear Wiring Harness  
 OEM Connector: 34900-6219  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 6-Way F 1.2 MCON-LL Series, Sealed( BK)

**Connector Part Information**

Harness Type: Chassis Wiring Harness  
 OEM Connector: 34899-6120  
 Service Connector: 86526152  
 Description: 6-Way M 1.2 MCON Series, Sealed( YE)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required
II	Not required	J-35616-17 (L-GN)	No Tool Required

**X820 Body Rear Wiring Harness to Chassis Wiring Harness (KC9 / KCA)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.5	BK	850	I	—	Ground	1	0.5	BK	850	II	—
2	0.5	VT / RD	4049	I	—	AC Power Outlet Sensor High Reference	2	0.5	VT / RD	4049	II	—
3	0.5	GN / BN	2266	I	—	DC/AC Inverter Control 2	3	0.5	GN / BN	2266	II	—
4	0.75	BK	10119	I	—	AC Outlet 2 Low Reference	4	0.75	WH	10119	II	—
5	0.75	BK / WH	10120	I	—	AC Outlet 2 Phase A Control	5	0.75	BK / WH	10120	II	—
6	0.75	RD / WH	10121	I	—	AC Outlet 2 Phase B Control	6	0.75	RD / WH	10121	II	—

**X904A Chassis Rear Wiring Harness Extension Harness to Chassis Wiring Harness**

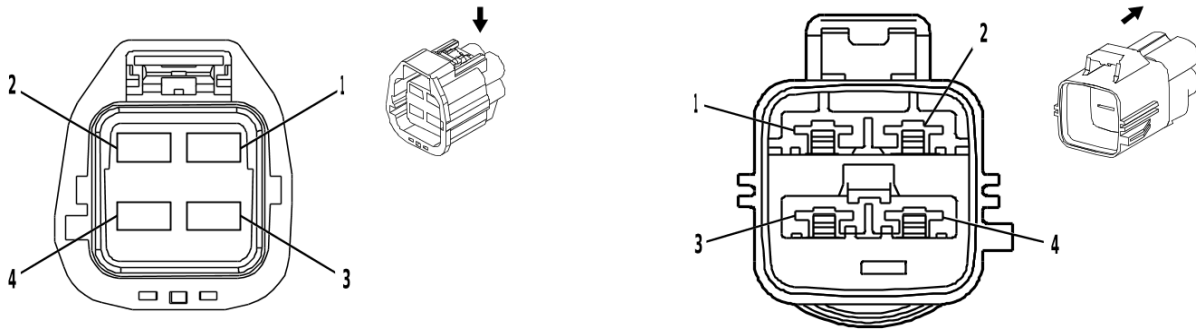

2852121

1853524

**Connector Part Information**

Harness Type: Chassis Rear Wiring Harness Extension Harness  
 OEM Connector: 7283-3601-10  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 4-Way F 6.3 Series, Sealed( GY)

**Connector Part Information**

Harness Type: Chassis Wiring Harness  
 OEM Connector: 7288-3029-10  
 Service Connector: 19371198  
 Description: 4-Way M 6.3 Series, Sealed( GY)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-42 (RD)	No Tool Required
II	Not required	J-35616-43 (RD)	No Tool Required

**X904A Chassis Rear Wiring Harness Extension Harness to Chassis Wiring Harness**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	2.5	WH	2001	I	—	Left Park Brake Motor Apply Control	1	5	WH	2001	II	—
2	2.5	GY / BK	4369	I	—	Left Park Brake Motor Low Reference	2	5	GY / BK	4369	II	—
3	2.5	GN / VT	1988	I	—	Right Park Brake Motor Apply Control	3	5	GN / VT	1988	II	—
4	2.5	GY	4368	I	—	Right Park Brake Motor Low Reference	4	5	GY	4368	II	—


**X933 Chassis Wiring Harness to Rear Object Alarm Sensor Wiring Harness**

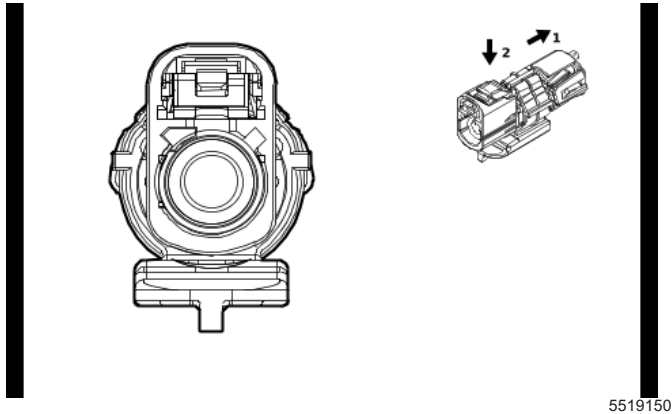

5519150

**Connector Part Information**

Harness Type: Chassis Wiring Harness COAX  
 OEM Connector: 13529796  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 1-Way F Coax Type, Sealed( BK)

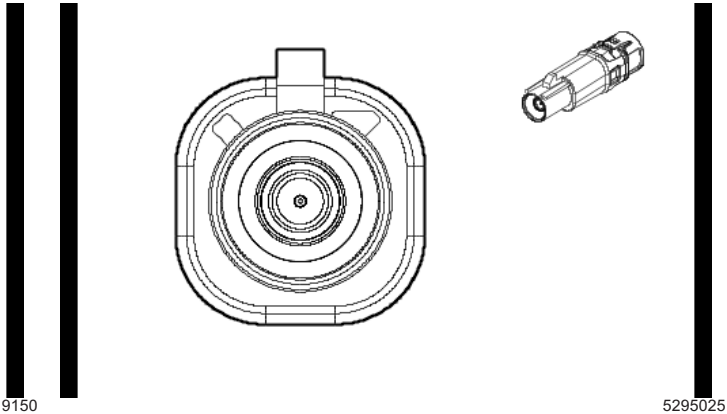

5295025

**Connector Part Information**

Harness Type: Rear Object Alarm Sensor Wiring Harness COAX  
 OEM Connector: 13517379  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 1-Way M Coax Type( BK)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

**X933 Chassis Wiring Harness to Rear Object Alarm Sensor Wiring Harness**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
—	—	Coax Cable	—	I	—	Rear Vision Camera Co-axial Video Signal	—	—	Coax Cable	—	I	—

**X950 Liftgate Jumper Wiring Harness to Rear Object Alarm Sensor Wiring Harness**

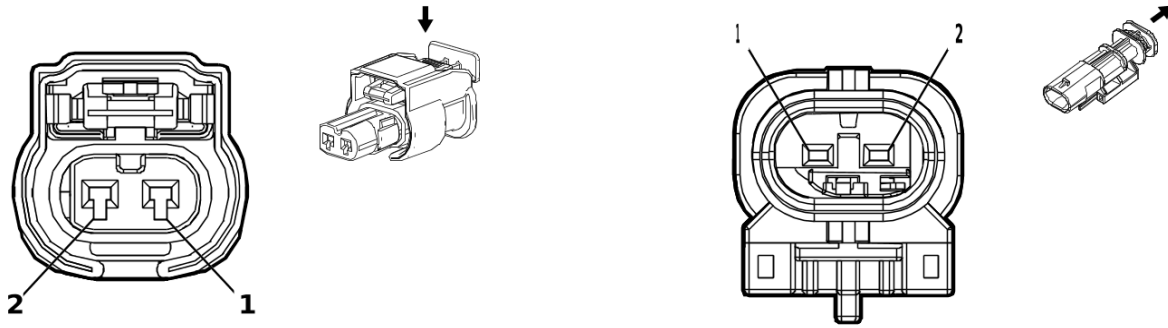

5210916

4994410

**Connector Part Information**

Harness Type: Liftgate Jumper Wiring Harness  
 OEM Connector: 34900-2121  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way F 1.2 MCON Series, Sealed( BK)

**Connector Part Information**

Harness Type: Rear Object Alarm Sensor Wiring Harness  
 OEM Connector: 34899-2081  
 Service Connector: Service by Harness - See Part Catalog  
 Description: 2-Way M 1.2 MCON Series, Sealed( GY)


**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required
II	Not required	J-35616-17 (L-GN)	No Tool Required

**X950 Liftgate Jumper Wiring Harness to Rear Object Alarm Sensor Wiring Harness**


Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.5	GY / VT	2691	I	—	Rear Closure Actuator Lock Control	1	0.5	GY / VT	2691	II	—
2	0.5	GY / BK	2680	I	—	Lock Actuators Unlock Control 2	2	0.5	GY / BK	2680	II	—

**X955 Rear Object Alarm Sensor Wiring Harness to Liftgate Jumper Wiring Harness**

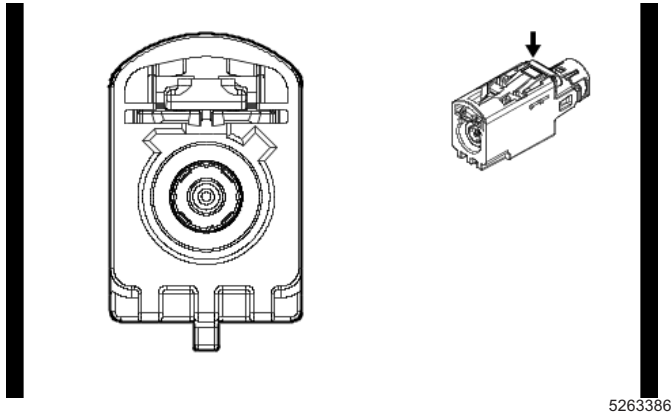

**Connector Part Information**

Harness Type: Rear Object Alarm Sensor Wiring  
 Harness COAX  
 OEM Connector: 13517364  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 1-Way F Coax Type( BK)

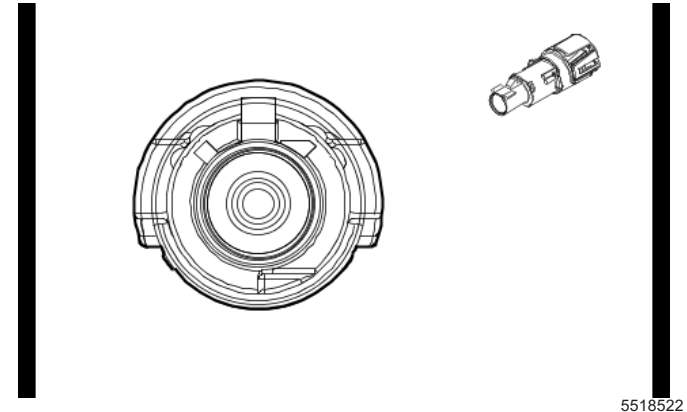

**Connector Part Information**

Harness Type: Liftgate Jumper Wiring Harness COAX  
 OEM Connector: 13516806  
 Service Connector: Service by Cable Assembly — See Part Catalog  
 Description: 1-Way M Coax Type, Sealed( BK)

**Terminal Part Information**

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required


**X955 Rear Object Alarm Sensor Wiring Harness to Liftgate Jumper Wiring Harness**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
—	—	Coax Cable	—	I	—	Rear Vision Camera Co-axial Video Signal	—	—	Coax Cable	—	I	—

# Electrical Component Locator and Harness Routing Views

## Schematic and Routing Diagrams

### Harness Routing Views (Forward Lamp Harness Routing - Front Fascia)

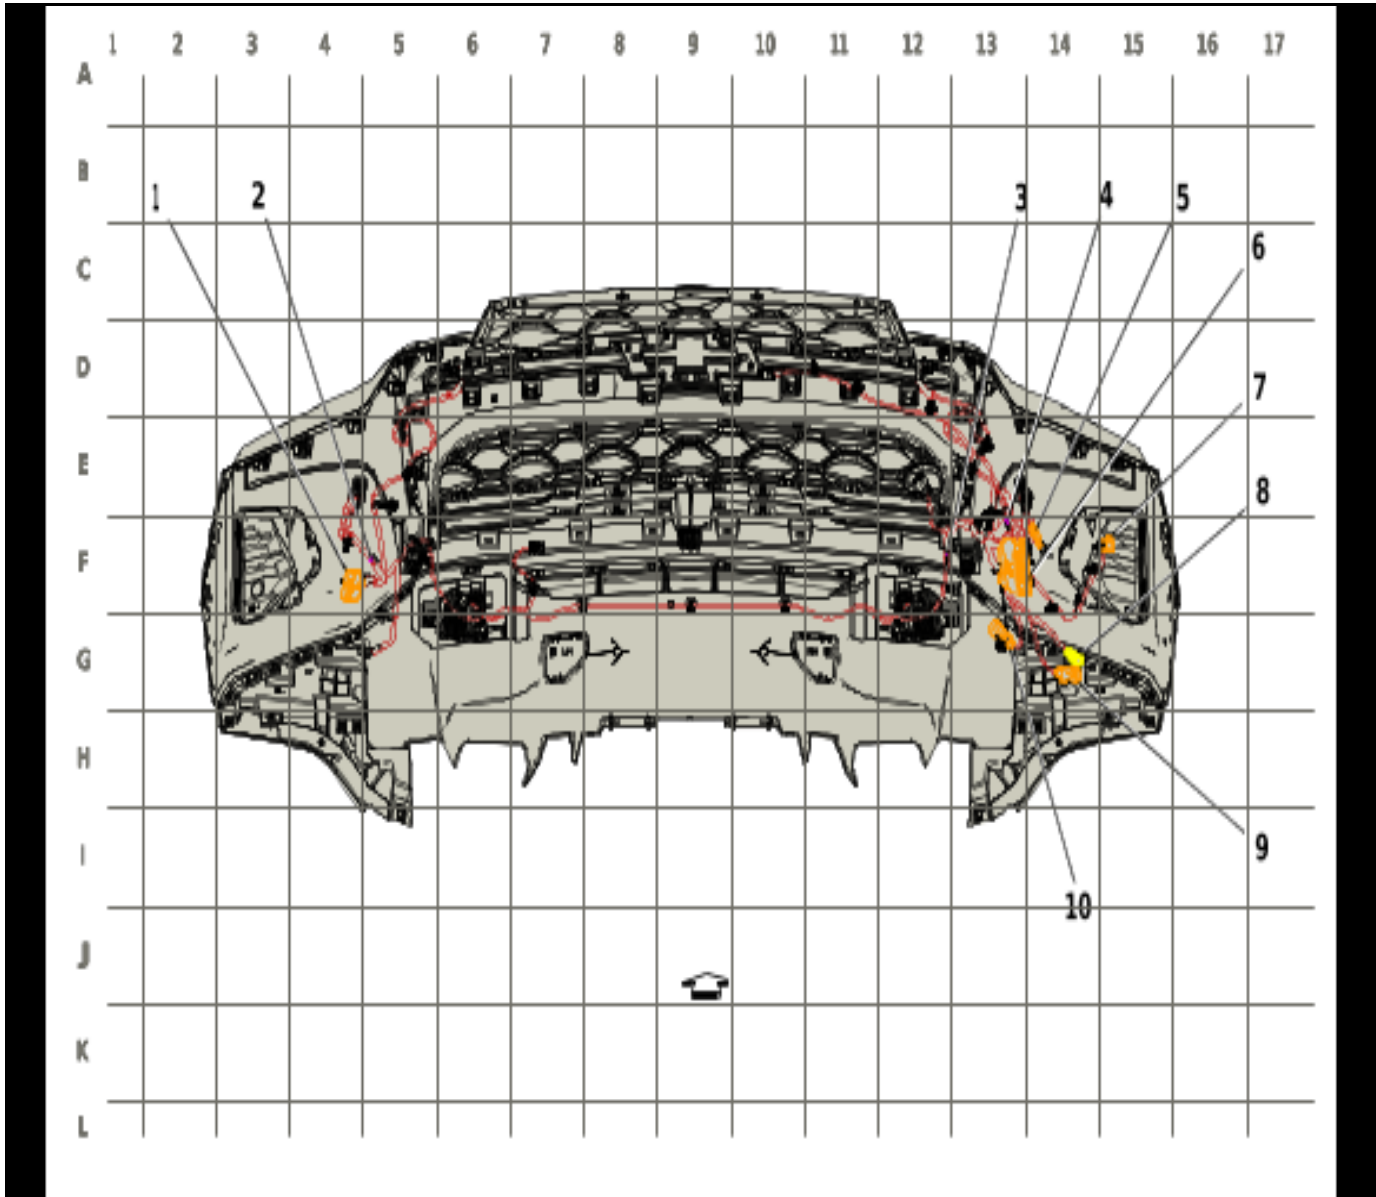


6180243

**Items**

- |  |   |
|--|---|
| <ul style="list-style-type: none"> <li>(1) X150 Body Wiring Harness to Forward Lamp Wiring Harness</li> <li>(2) J102 Forward Lamp Wiring Harness</li> <li>(3) J103 Forward Lamp Wiring Harness</li> <li>(4) J104 Forward Lamp Wiring Harness</li> <li>(5) X156 Body Wiring Harness to Forward Lamp Wiring Harness (UV2/UXA)</li> <li>(6) X250R Body Wiring Harness to Forward Lamp Wiring Harness</li> </ul> | <ul style="list-style-type: none"> <li>(7) X250J Windshield Washer Pump Extension Wiring Harness to Forward Lamp Wiring Harness</li> <li>(8) X195 Forward Lamp Wiring Harness to Front View Camera Switch Wiring Harness</li> <li>(9) X260 Front Object Alarm Sensor Wiring Harness to Forward Lamp Wiring Harness</li> <li>(10) X250A Radiator Extension Harness to Forward Lamp Wiring Harness</li> </ul> |
|--|---|



Harness Routing Views (Front Fascia Harness Routing)

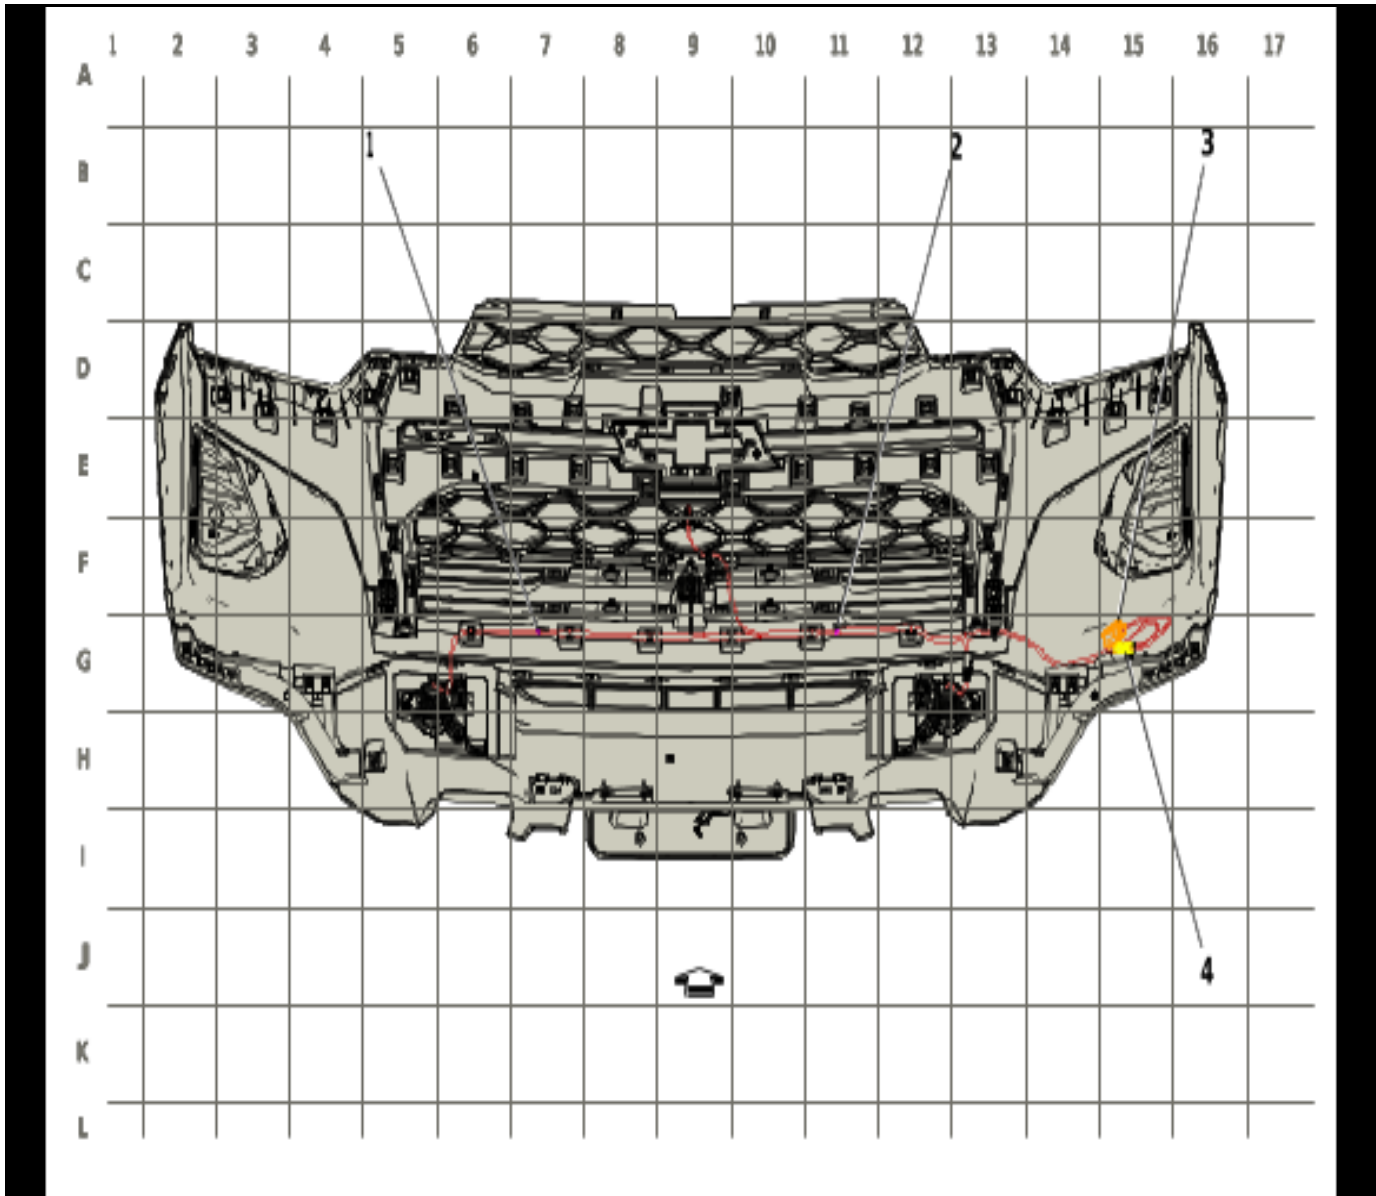


6180244

**Items**

- |   |  |
|---|--|
| <p>(1) J101 Front Object Alarm Sensor Wiring Harness</p> <p>(2) J100 Front Object Alarm Sensor Wiring Harness (T40)</p> | <p>(3) X260 Front Object Alarm Sensor Wiring Harness to Forward Lamp Wiring Harness</p> <p>(4) X195 Forward Lamp Wiring Harness to Front View Camera Switch Wiring Harness</p> |
|---|--|

Harness Routing Views (Body Harness Routing - Left Side of Engine Compartment)

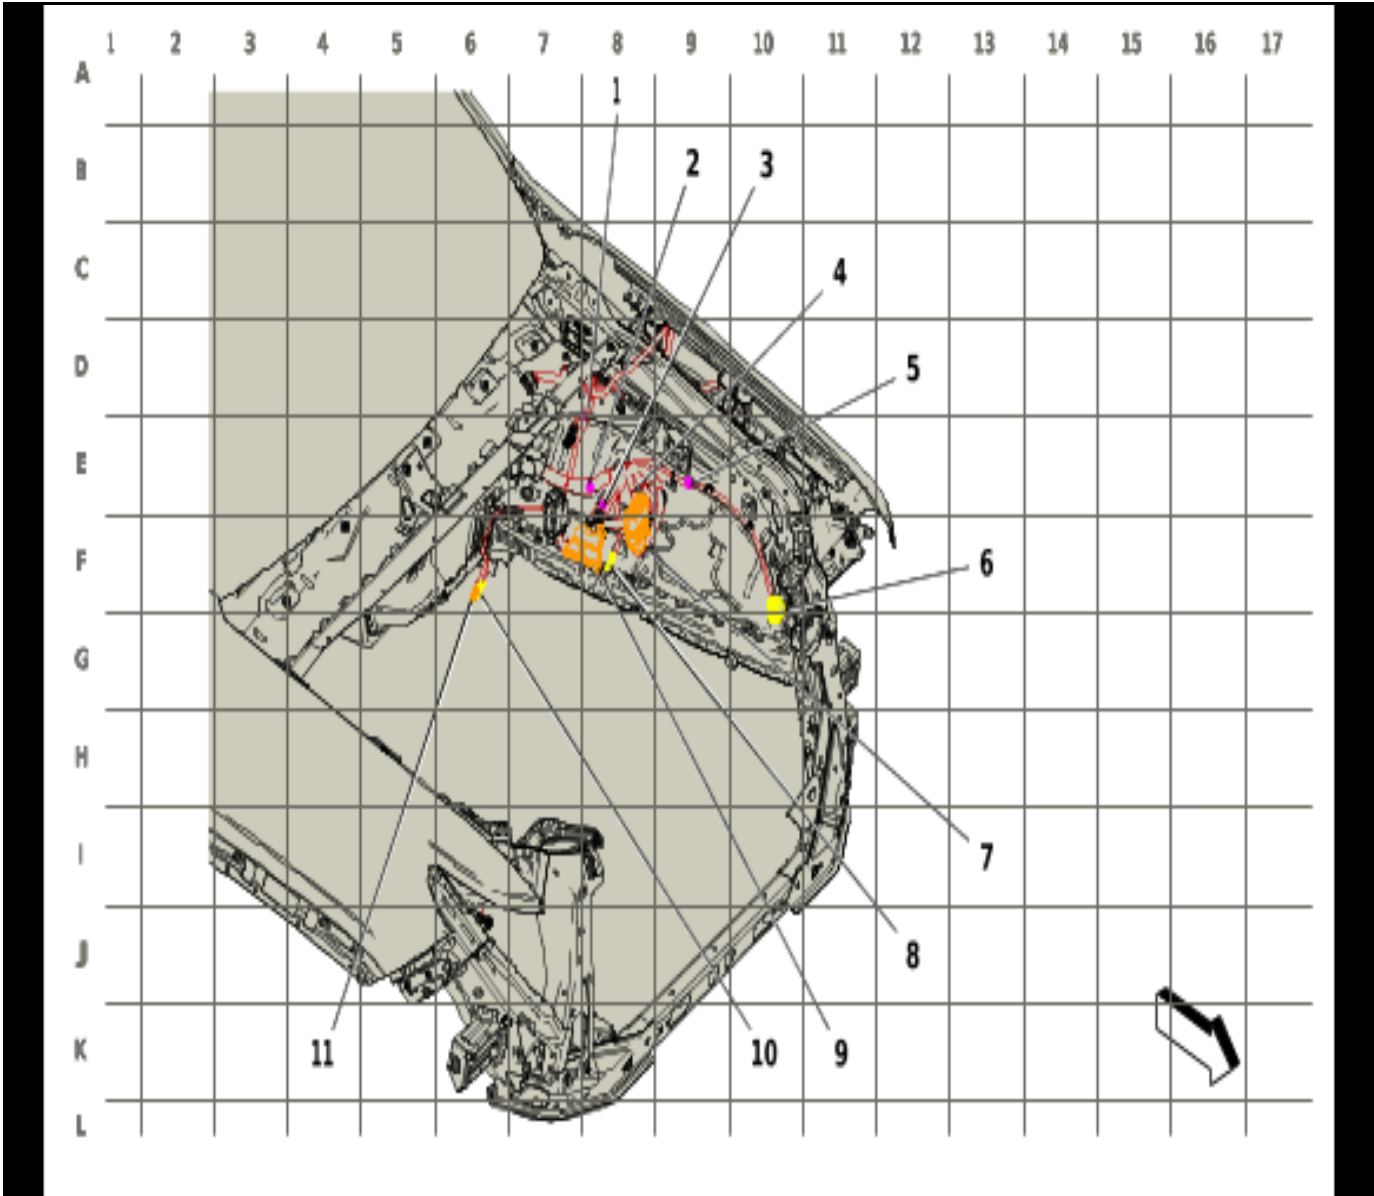


6180245

**Items**

- |     |   |      |   |
|-----|---|------|---|
| (1) | J114 Body Wiring Harness                                | (8)  | X199 Chassis Wiring Harness to Body Wiring Harness                      |
| (2) | J113 Body Wiring Harness                                | (9)  | X101 Body Wiring Harness to Chassis Wiring Harness                      |
| (3) | J112 Body Wiring Harness                                | (10) | X384 Rearview Camera Wiring Harness Jumper to Body Wiring Harness (UXA) |
| (4) | J110 Body Wiring Harness                                | (11) | X383 Rearview Camera Wiring Harness Jumper to Body Wiring Harness (UXA) |
| (5) | J111 Body Wiring Harness                                |      |   |
| (6) | X150 Body Wiring Harness to Forward Lamp Wiring Harness |      |   |
| (7) | X100 Chassis Wiring Harness to Body Wiring Harness      |      |   |

Harness Routing Views (Body Harness Routing - Right Side of Engine Compartment)

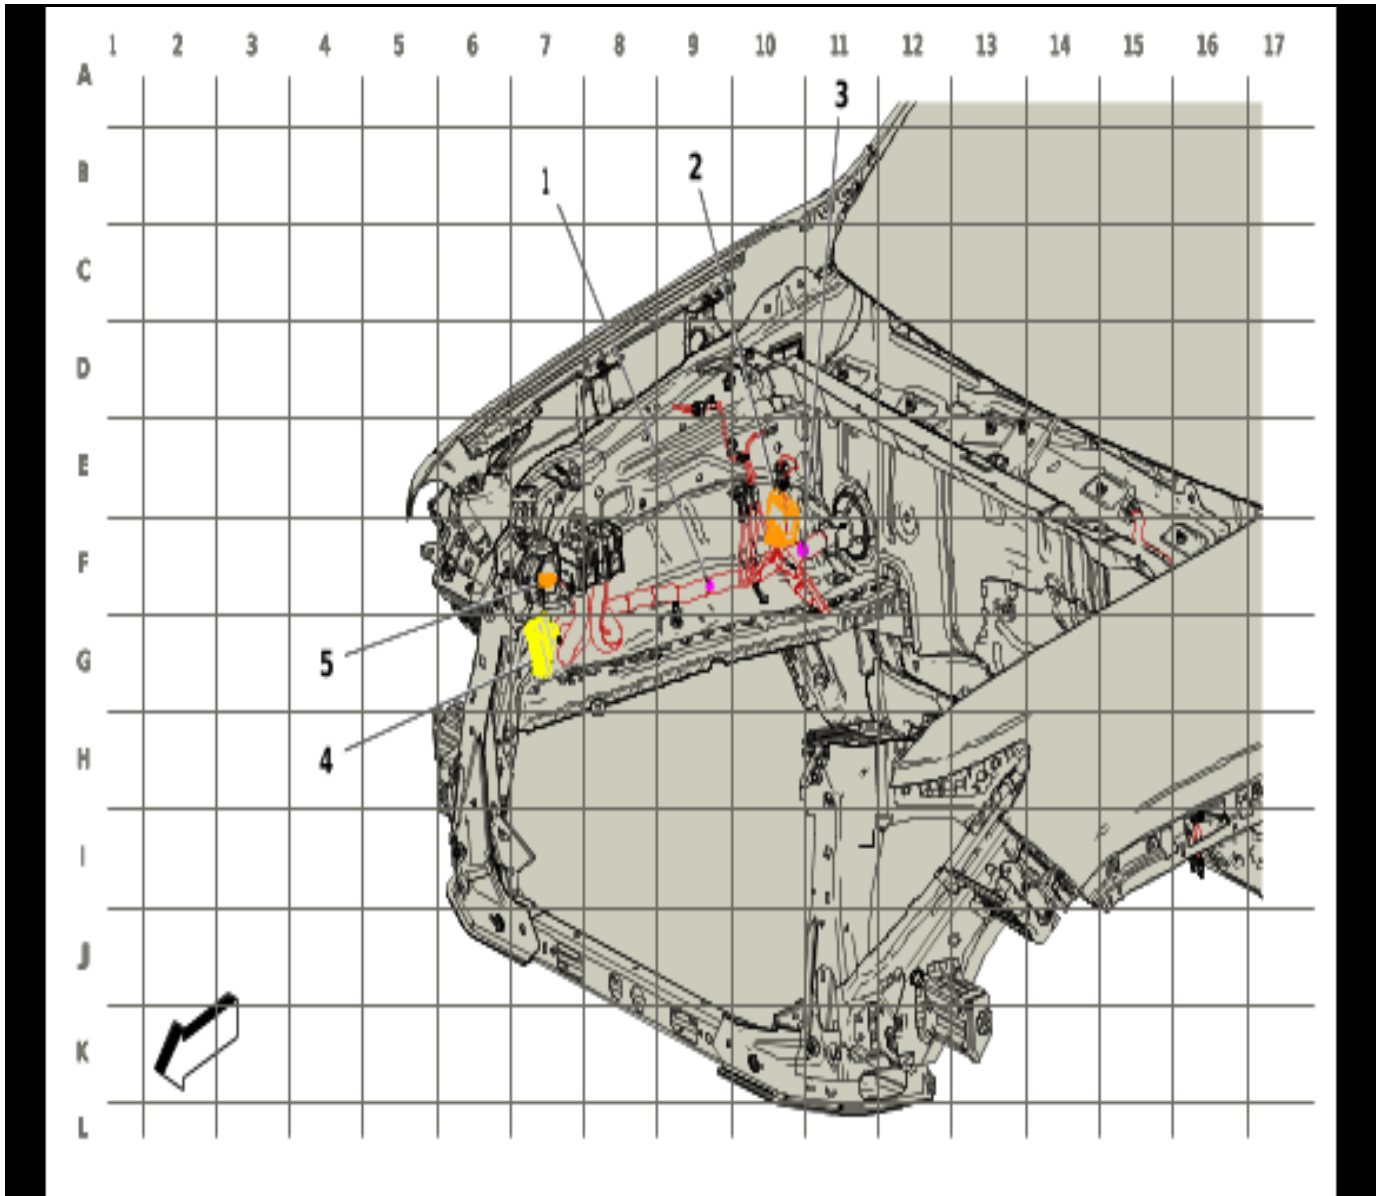


6180246

**Items**

- |   |   |
|---|---|
| <ul style="list-style-type: none"> <li>(1) J106 Body Wiring Harness</li> <li>(2) X201 Engine Wiring Harness to Body Wiring Harness</li> <li>(3) J105 Body Wiring Harness</li> </ul> | <ul style="list-style-type: none"> <li>(4) X250R Body Wiring Harness to Forward Lamp Wiring Harness</li> <li>(5) X156 Body Wiring Harness to Forward Lamp Wiring Harness (UV2/UXA)</li> </ul> |
|---|---|

Harness Routing Views (Chassis Harness Routing - Front)

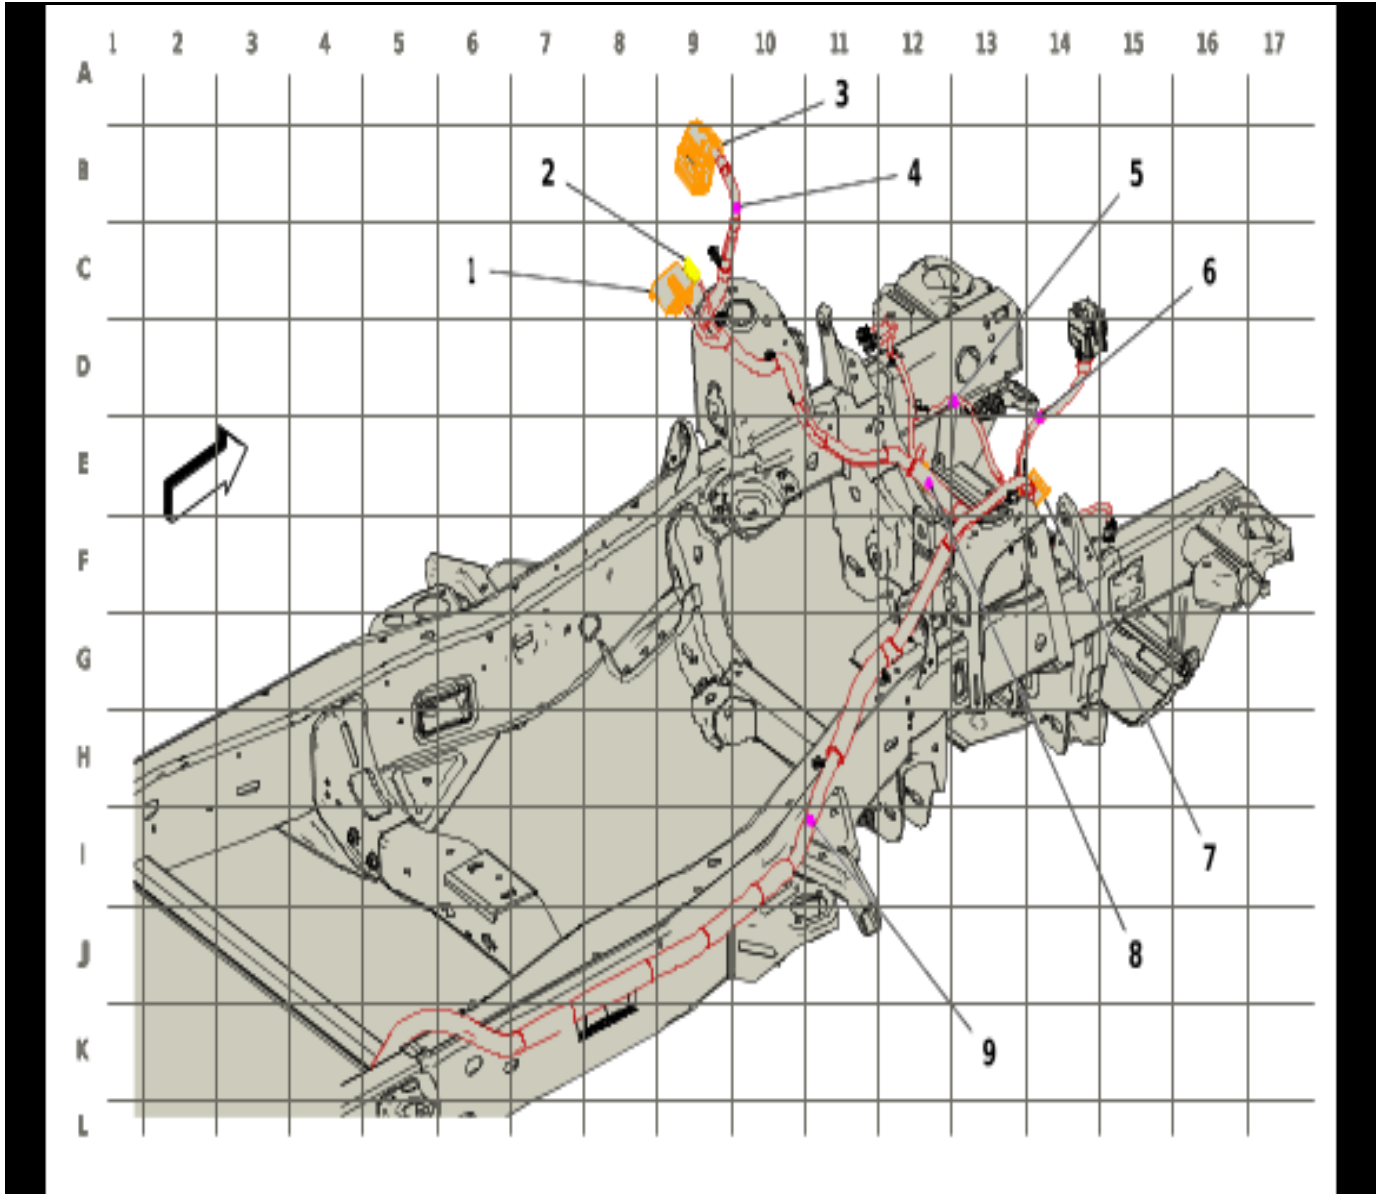


6180247

**Items**

- |  |  |
|--|--|
| <ul style="list-style-type: none"> <li>(1) X101 Body Wiring Harness to Chassis Wiring Harness</li> <li>(2) X199 Chassis Wiring Harness to Body Wiring Harness</li> <li>(3) X100 Chassis Wiring Harness to Body Wiring Harness</li> <li>(4) J109 Chassis Wiring Harness</li> <li>(5) J108 Chassis Wiring Harness</li> </ul> | <ul style="list-style-type: none"> <li>(6) J115 Chassis Wiring Harness</li> <li>(7) X204 Engine Wiring Harness to Chassis Wiring Harness</li> <li>(8) X107 Chassis Wiring Harness to Power Steering Wiring Harness</li> <li>(9) J116 Chassis Wiring Harness</li> </ul> |
|--|--|

Harness Routing Views (Engine Harness Routing - Left)

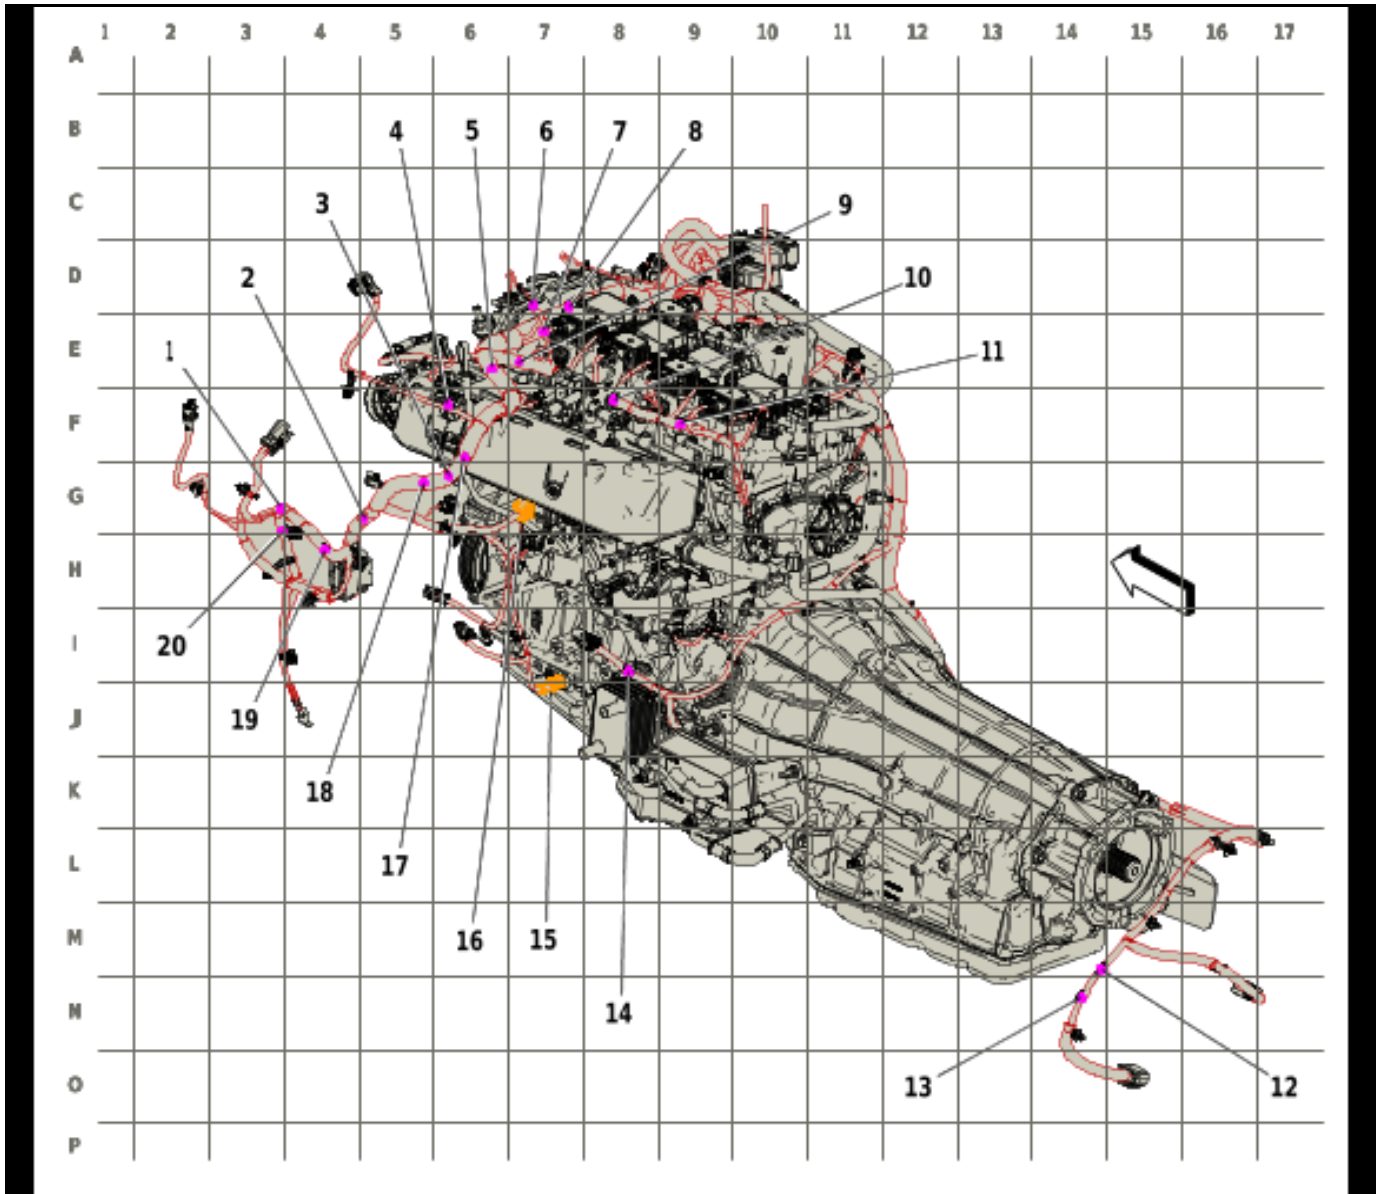


6180248

**Items**

- |      |                            |      |   |
|------|----------------------------|------|---|
| (1)  | J151 Engine Wiring Harness | (13) | J146 Engine Wiring Harness  |
| (2)  | J149 Engine Wiring Harness | (14) | J139 Engine Wiring Harness  |
| (3)  | J147 Engine Wiring Harness | (15) | X144 Engine Wiring Harness to Oil Pump<br>Flow Control Solenoid Valve Harness |
| (4)  | J142 Engine Wiring Harness | (16) | X160 Engine Wiring Harness to Fuel Injector<br>Wiring Harness                 |
| (5)  | J141 Engine Wiring Harness | (17) | J144 Engine Wiring Harness  |
| (6)  | J136 Engine Wiring Harness | (18) | J148 Engine Wiring Harness  |
| (7)  | J135 Engine Wiring Harness | (19) | J150 Engine Wiring Harness  |
| (8)  | J132 Engine Wiring Harness | (20) | J152 Engine Wiring Harness  |
| (9)  | J138 Engine Wiring Harness |      |   |
| (10) | J140 Engine Wiring Harness |      |   |
| (11) | J143 Engine Wiring Harness |      |   |
| (12) | J145 Engine Wiring Harness |      |   |

Harness Routing Views (Engine Harness Routing - Right Front)

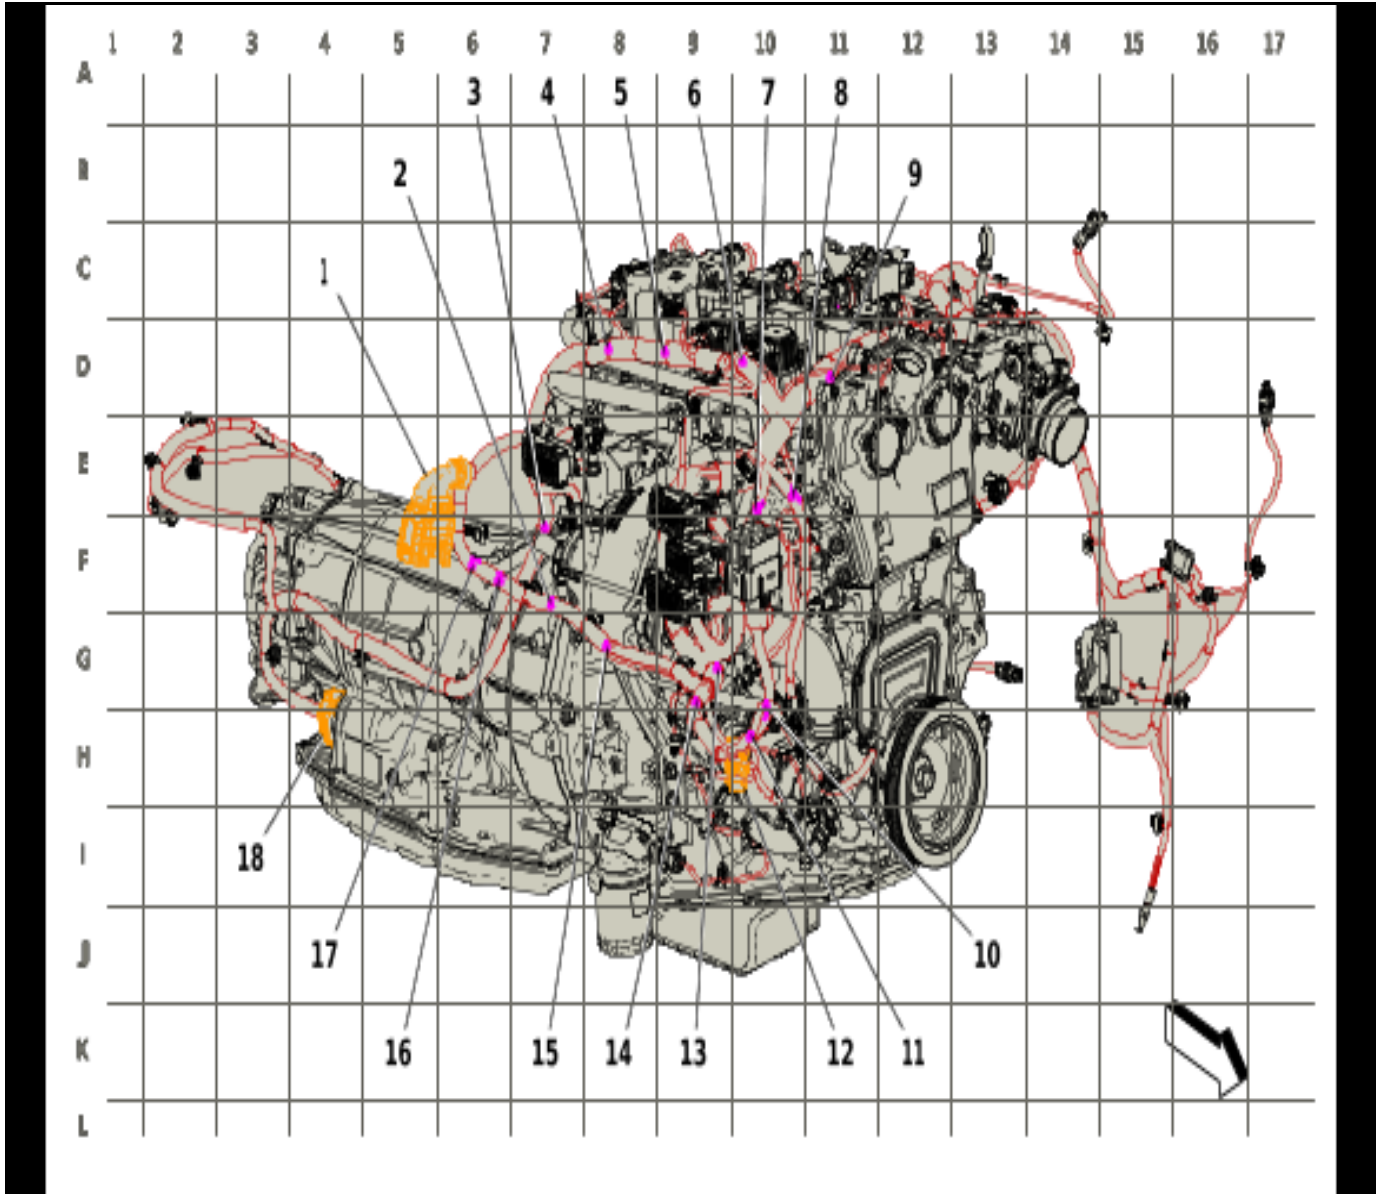


6180249

**Items**

- |      |   |      |   |
|------|---|------|---|
| (1)  | X201 Engine Wiring Harness to Body Wiring Harness | (11) | J121 Engine Wiring Harness  |
| (2)  | J123 Engine Wiring Harness                        | (12) | X204 Engine Wiring Harness to Chassis Wiring Harness                |
| (3)  | J137 Engine Wiring Harness                        | (13) | J127 Engine Wiring Harness  |
| (4)  | J134 Engine Wiring Harness                        | (14) | J122 Engine Wiring Harness  |
| (5)  | J133 Engine Wiring Harness                        | (15) | J126 Engine Wiring Harness  |
| (6)  | J130 Engine Wiring Harness                        | (16) | J124 Engine Wiring Harness  |
| (7)  | J128 Engine Wiring Harness                        | (17) | J125 Engine Wiring Harness  |
| (8)  | J129 Engine Wiring Harness                        | (18) | X175 Engine Wiring Harness to Automatic Transmission Wiring Harness |
| (9)  | J131 Engine Wiring Harness                        |      |   |
| (10) | J120 Engine Wiring Harness                        |      |   |

Harness Routing Views (Instrument Panel Harness Routing)

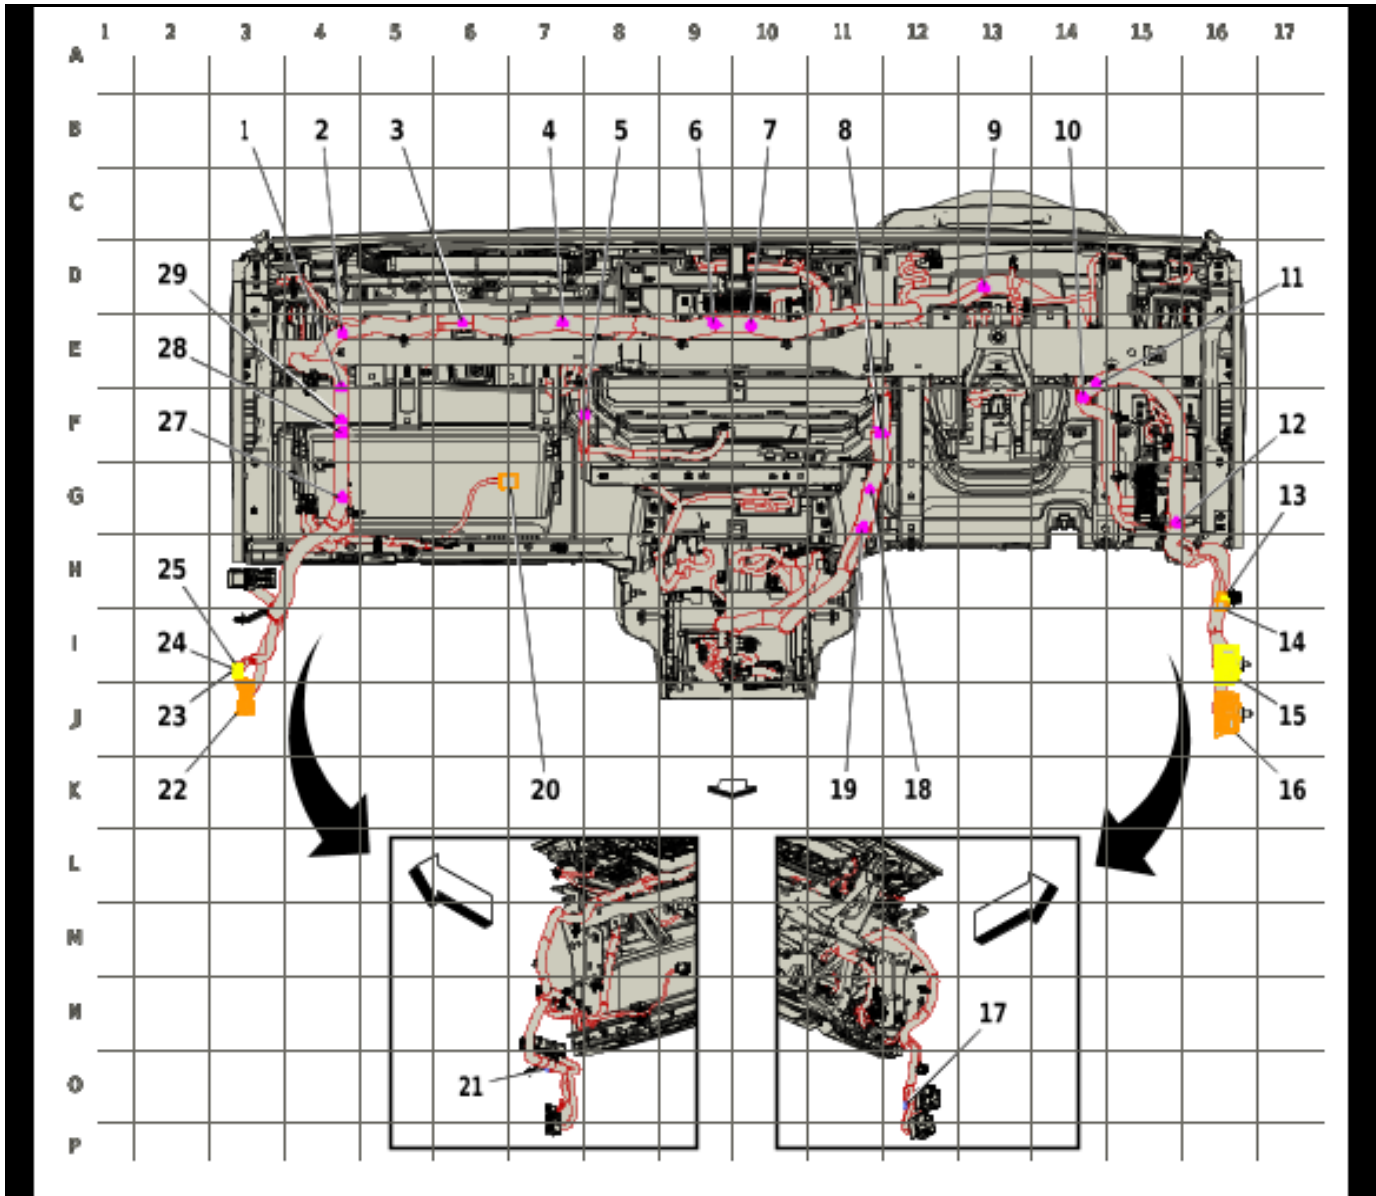

6180250


**Items**

- |      |   |      |   |
|------|---|------|---|
| (1)  | J227 Instrument Panel Wiring Harness                                      | (14) | X399 Instrument Panel Wiring Harness to Body Wiring Harness (UVB-UV2)   |
| (2)  | J228 Instrument Panel Wiring Harness                                      | (15) | X300 Body Wiring Harness to Instrument Panel Wiring Harness             |
| (3)  | J225 Instrument Panel Wiring Harness                                      | (16) | X301 Body Wiring Harness to Instrument Panel Wiring Harness             |
| (4)  | J224 Instrument Panel Wiring Harness                                      | (17) | W24 Blunt Cut - Trailer Brakes Provision                                |
| (5)  | J223 Instrument Panel Wiring Harness                                      | (18) | J213 Instrument Panel Wiring Harness                                    |
| (6)  | J222 Instrument Panel Wiring Harness                                      | (19) | J212 Instrument Panel Wiring Harness                                    |
| (7)  | J219 Instrument Panel Wiring Harness                                      | (20) | X315 Instrument Panel Wiring Harness to Air Conditioning Wiring Harness |
| (8)  | J214 Instrument Panel Wiring Harness                                      | (21) | W25 Blunt Cut - Configurable/Accessory Relay                            |
| (9)  | J211 Instrument Panel Wiring Harness                                      | (22) | X400 Instrument Panel Wiring Harness to Body Wiring Harness             |
| (10) | J210 Instrument Panel Wiring Harness                                      | (23) | X499C Body Wiring Harness to Instrument Panel Wiring Harness (U2K)      |
| (11) | J209 Instrument Panel Wiring Harness                                      |      |   |
| (12) | J208 Instrument Panel Wiring Harness                                      |      |   |
| (13) | X380 Instrument Panel Wiring Harness to Body Wiring Harness (UV2/UXA-UVB) |      |   |

## 6-520 Electrical Component Locator and Harness Routing Views

- |      |   |      |                                      |
|------|---|------|--------------------------------------|
| (24) | X499A Body Wiring Harness to Instrument Panel Wiring Harness (-U2K) | (28) | J229 Instrument Panel Wiring Harness |
| (25) | X499B   | (29) | J226 Instrument Panel Wiring Harness |
| (27) | J230 Instrument Panel Wiring Harness                                |      |                                      |

### Harness Routing Views (Headliner Harness Routing (- CAC))

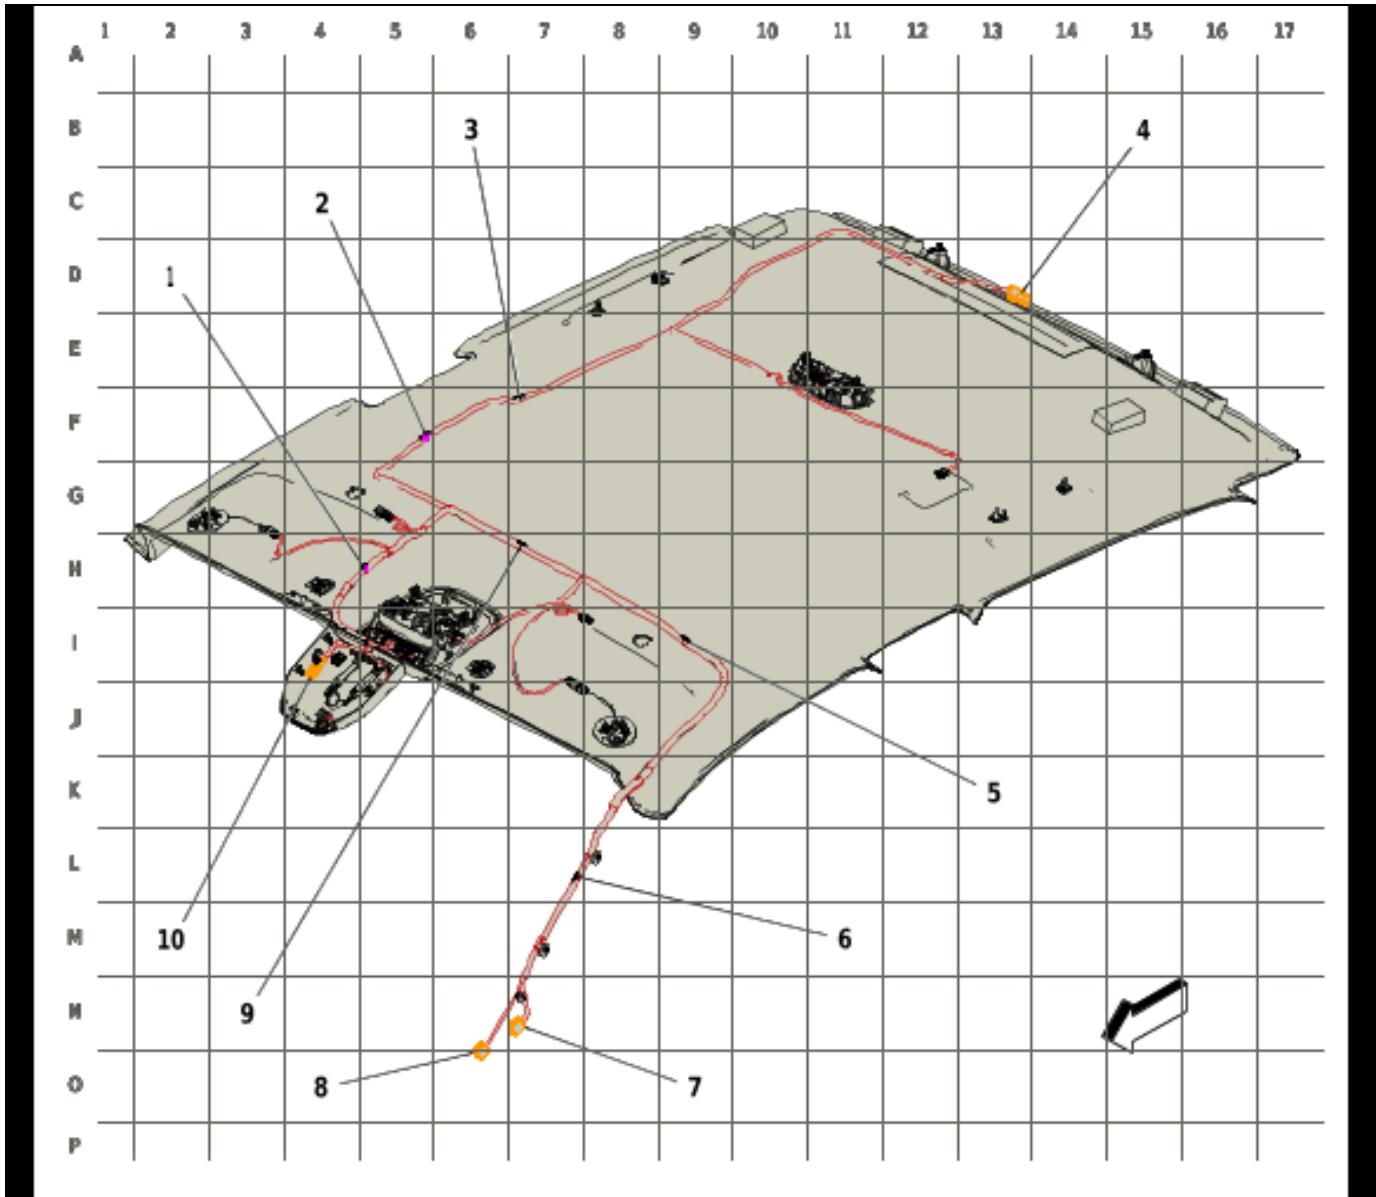


6180251

#### Items

- |     |   |      |   |
|-----|---|------|---|
| (1) | J363 Headlining Wiring Harness                  | (7)  | X402C Roof Wiring Harness to Body Wiring Harness  |
| (2) | J364 Headlining Wiring Harness                  | (8)  | X401 Roof Wiring Harness to Body Wiring Harness   |
| (3) | J365 Headlining Wiring Harness                  | (9)  | J362 Headlining Wiring Harness  |
| (4) | X500 Roof Wiring Harness to Body Wiring Harness | (10) | X402D Inside Air Moisture and Windshield Temperature Sensor Jumper to Roof Wiring Harness (CJ2) |
| (5) | J361 Headlining Wiring Harness                  |      |   |
| (6) | J360 Headlining Wiring Harness                  |      |   |



Harness Routing Views (Headliner Harness Routing (CAC))

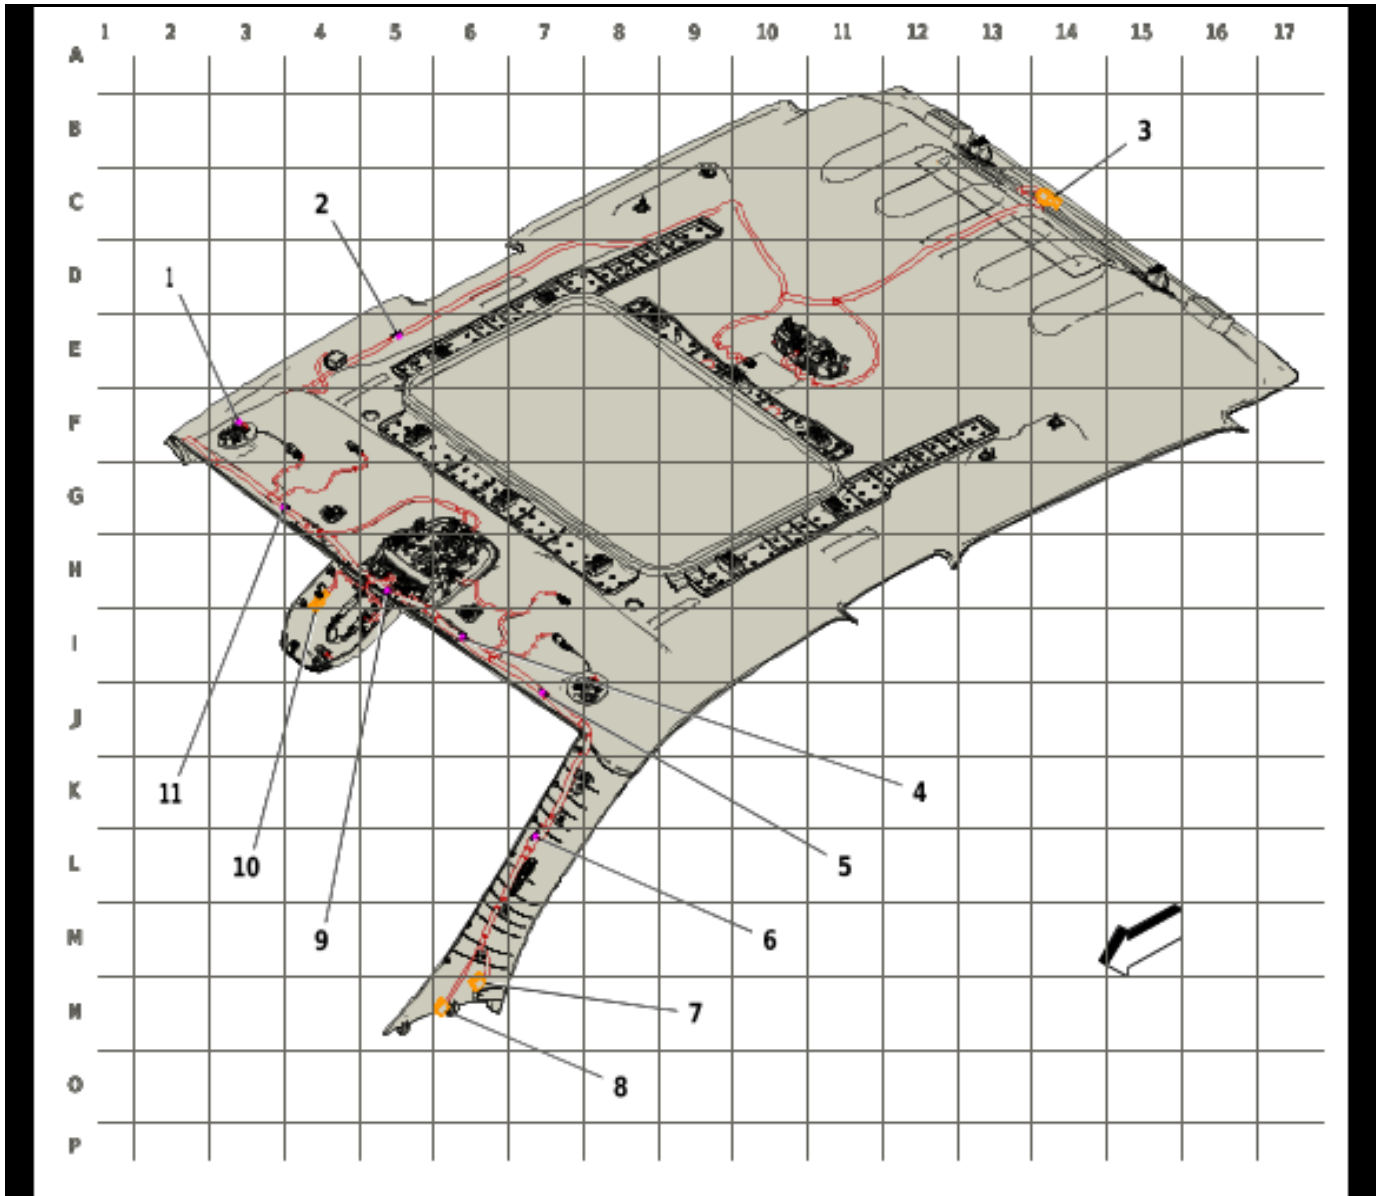


6180252

**Items**

- |  |  |
|--|--|
| (1) J362 Headlining Wiring Harness                   | (8) X401 Roof Wiring Harness to Body Wiring Harness  |
| (2) J364 Headlining Wiring Harness                   | (9) J363 Headlining Wiring Harness   |
| (3) X500 Roof Wiring Harness to Body Wiring Harness  | (10) X402D Inside Air Moisture and Windshield Temperature Sensor Jumper to Roof Wiring Harness (CJ2) |
| (4) J366 Headlining Wiring Harness (CAC)             | (11) J361 Headlining Wiring Harness  |
| (5) J365 Headlining Wiring Harness                   |  |
| (6) J360 Headlining Wiring Harness                   |  |
| (7) X402C Roof Wiring Harness to Body Wiring Harness |  |

Harness Routing Views (Floor Console Harness Routing)

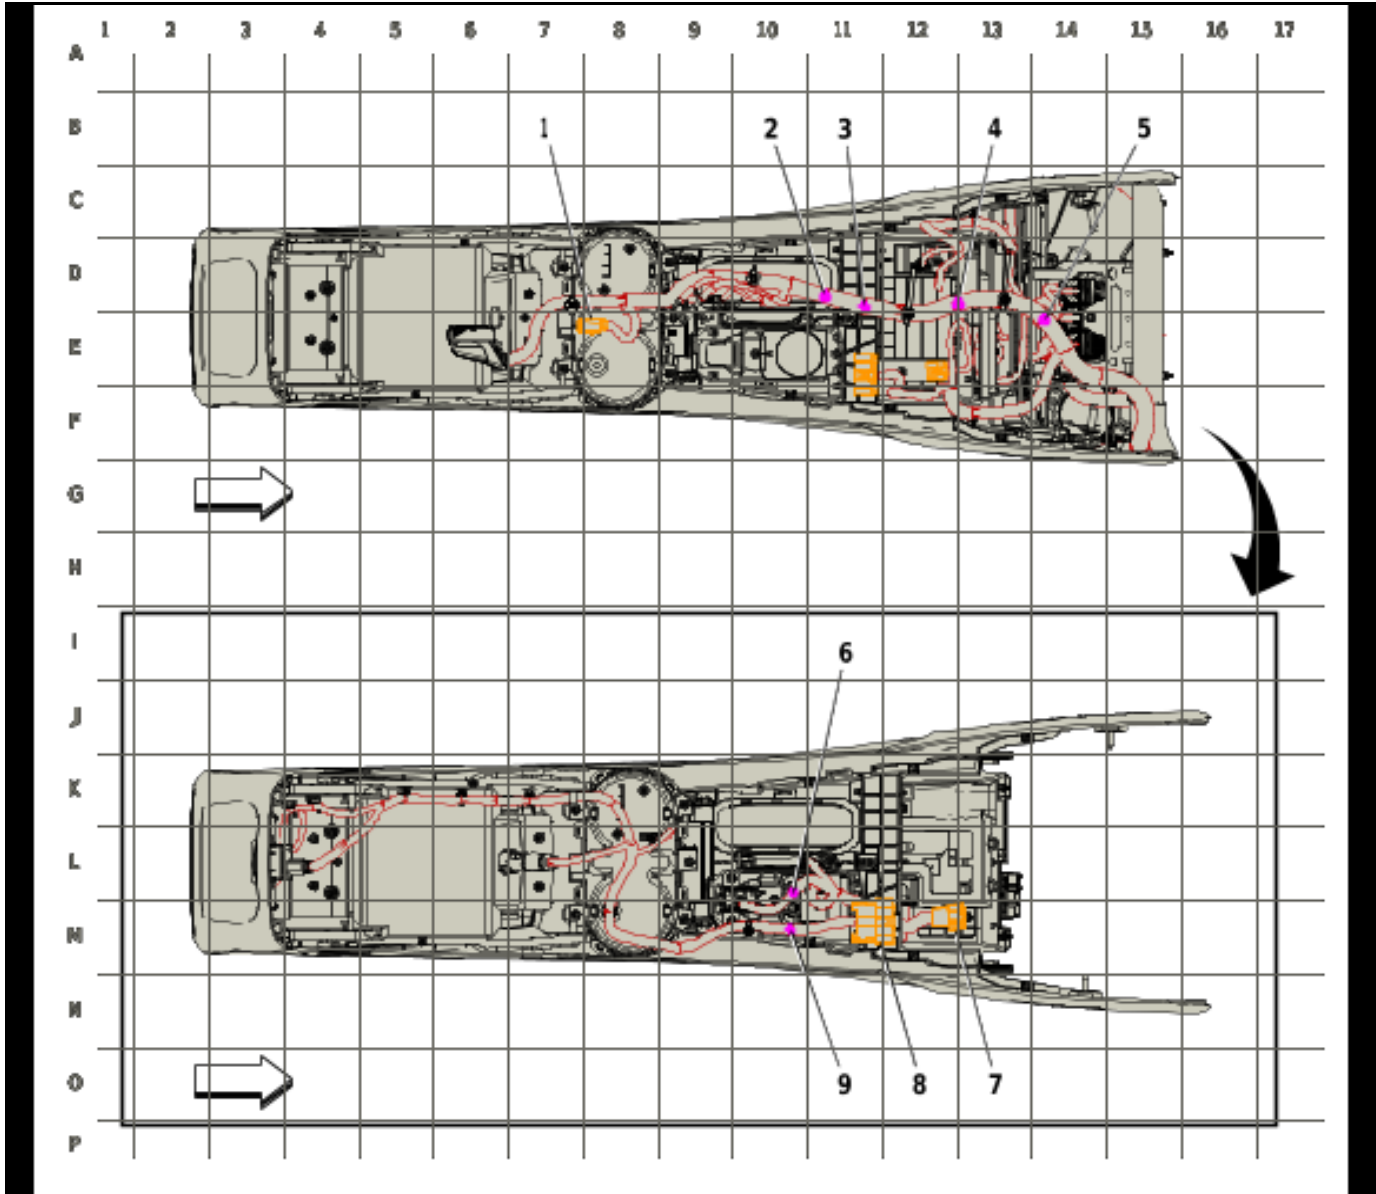


6180253

**Items**

- |  |   |
|--|---|
| <ul style="list-style-type: none"> <li>(1) X367 Instrument Panel Wiring Harness to Body Wiring Harness</li> <li>(2) J218 Instrument Panel Wiring Harness</li> <li>(3) J217 Instrument Panel Wiring Harness</li> <li>(4) J216 Instrument Panel Wiring Harness</li> <li>(5) J215 Instrument Panel Wiring Harness</li> <li>(6) J331 Front Floor Console Wiring Harness</li> </ul> | <ul style="list-style-type: none"> <li>(7) X304 Instrument Panel Wiring Harness to Front Floor Console Wiring Harness Extension Harness</li> <li>(8) X305 Instrument Panel Wiring Harness to Front Floor Console Wiring Harness</li> <li>(9) J330 Front Floor Console Wiring Harness</li> </ul> |
|--|---|

Harness Routing Views (Body Harness Routing - Left Front of Passenger Compartment)

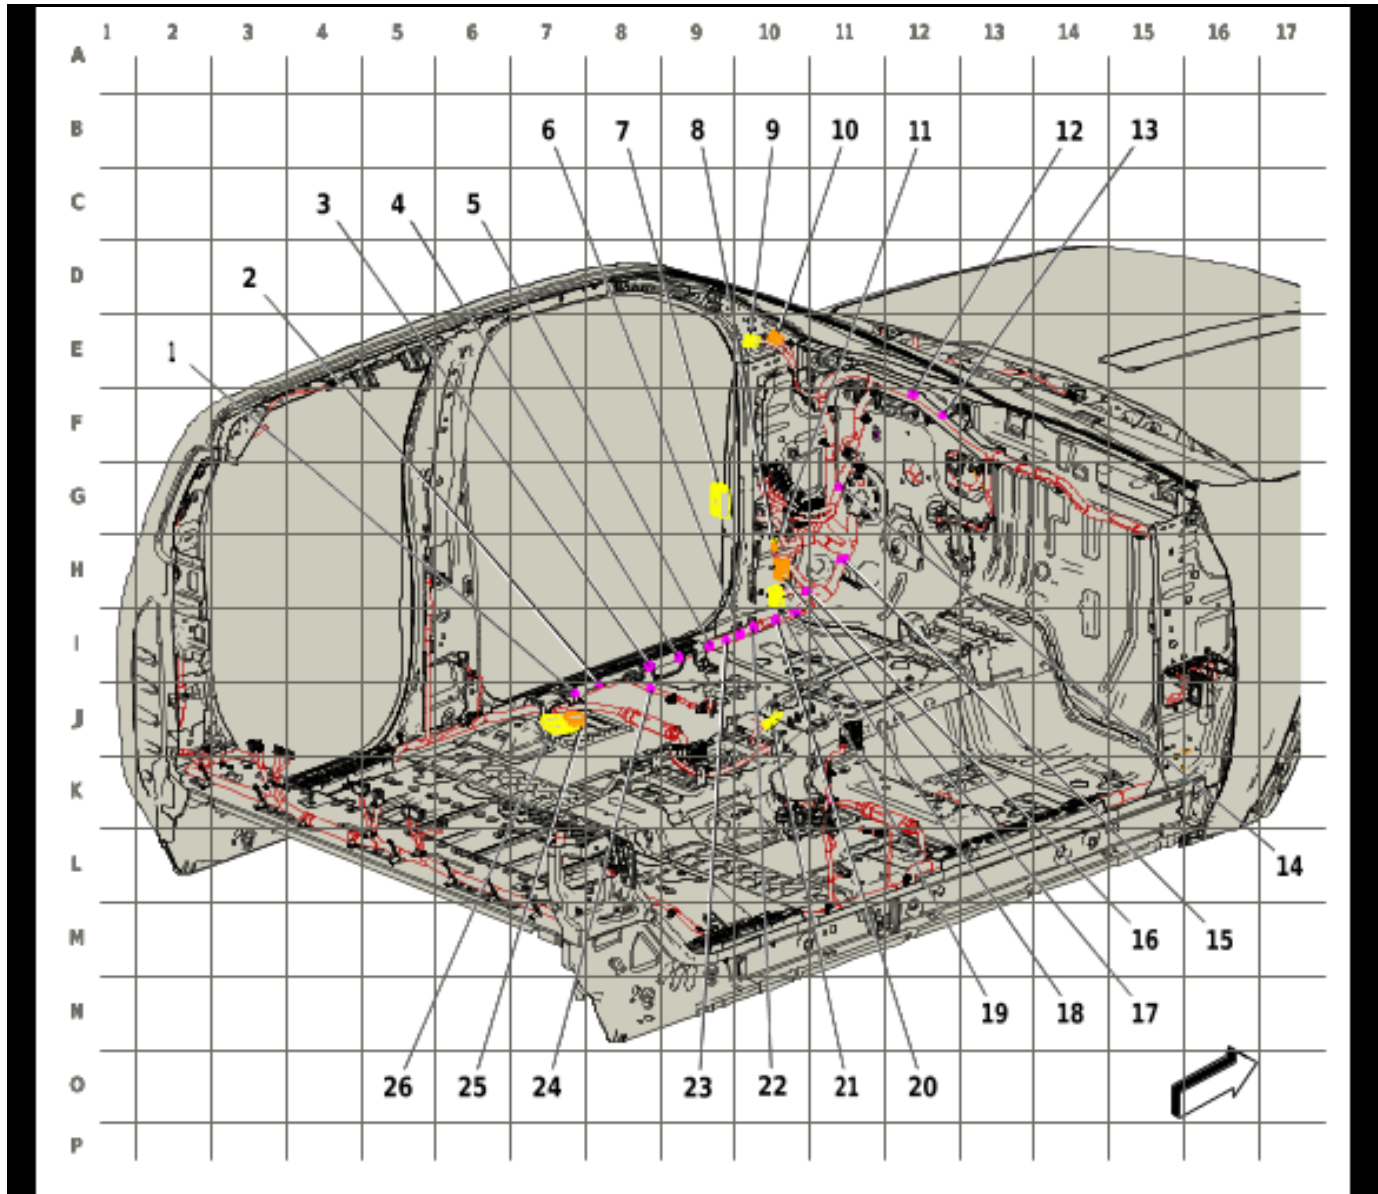

6180254

**Items**


- |      |   |      |   |
|------|---|------|---|
| (1)  | J312 Body Wiring Harness  | (12) | J201 Body Wiring Harness                                    |
| (2)  | J311 Body Wiring Harness  | (13) | J202 Body Wiring Harness                                    |
| (3)  | J309 Body Wiring Harness  | (14) | J300 Body Wiring Harness                                    |
| (4)  | J308 Body Wiring Harness  | (15) | J207 Body Wiring Harness                                    |
| (5)  | J307 Body Wiring Harness  | (16) | J301 Body Wiring Harness                                    |
| (6)  | J305 Body Wiring Harness  | (17) | X300 Body Wiring Harness to Instrument Panel Wiring Harness |
| (7)  | X303 Body Wiring Harness to Front Side Door Door Wiring Harness - Driver  | (18) | J302 Body Wiring Harness                                    |
| (8)  | X399 Instrument Panel Wiring Harness to Body Wiring Harness (UVB-UV2)     | (19) | X301 Body Wiring Harness to Instrument Panel Wiring Harness |
| (9)  | X402C Roof Wiring Harness to Body Wiring Harness                          | (20) | J303 Body Wiring Harness                                    |
| (10) | X401 Roof Wiring Harness to Body Wiring Harness                           | (21) | X367 Instrument Panel Wiring Harness to Body Wiring Harness |
| (11) | X380 Instrument Panel Wiring Harness to Body Wiring Harness (UV2/UXA-UVB) | (22) | J304 Body Wiring Harness                                    |
|      |   | (23) | J306 Body Wiring Harness                                    |

## 6-524 Electrical Component Locator and Harness Routing Views

- (24) J310 Body Wiring Harness
- (25) X302A Front Seat Wiring Harness - Driver to Body Wiring Harness

- (26) X302B Front Seat Wiring Harness - Driver to Body Wiring Harness

### Harness Routing Views (Body Harness Routing - Right Front of Passenger Compartment)

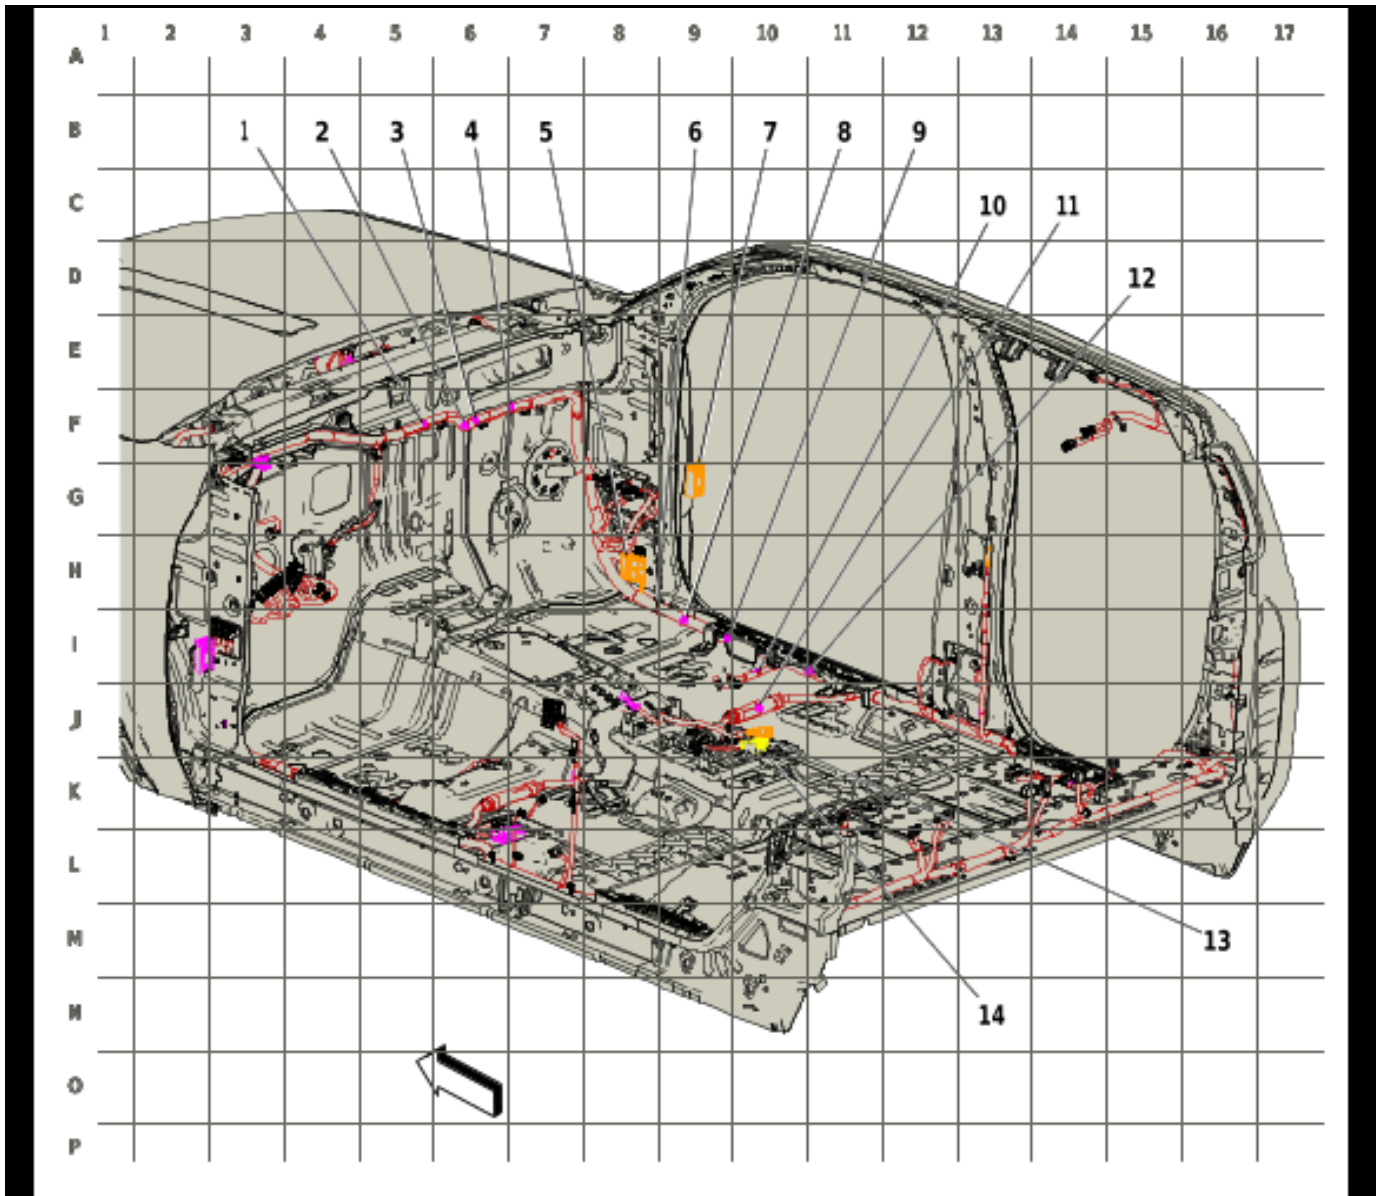


6180255

#### Items

- |   |   |
|---|---|
| (1) J203 Body Wiring Harness  | (8) J321 Body Wiring Harness  |
| (2) J204 Body Wiring Harness  | (9) J322 Body Wiring Harness  |
| (3) J205 Body Wiring Harness  | (10) J324 Body Wiring Harness   |
| (4) J206 Body Wiring Harness  | (11) J325 Body Wiring Harness   |
| (5) X400 Instrument Panel Wiring Harness to Body Wiring Harness   | (12) J323 Body Wiring Harness   |
| (6) J320 Body Wiring Harness  | (13) X402A Front Seat Wiring Harness - Passenger to Body Wiring Harness |
| (7) X404 Front Side Door Door Wiring Harness - Passenger to Front Side Door Door Wiring Harness - Passenger | (14) X402B Front Seat Wiring Harness - Passenger to Body Wiring Harness |

Harness Routing Views (Front Seat Wiring Harness - Driver Routing)

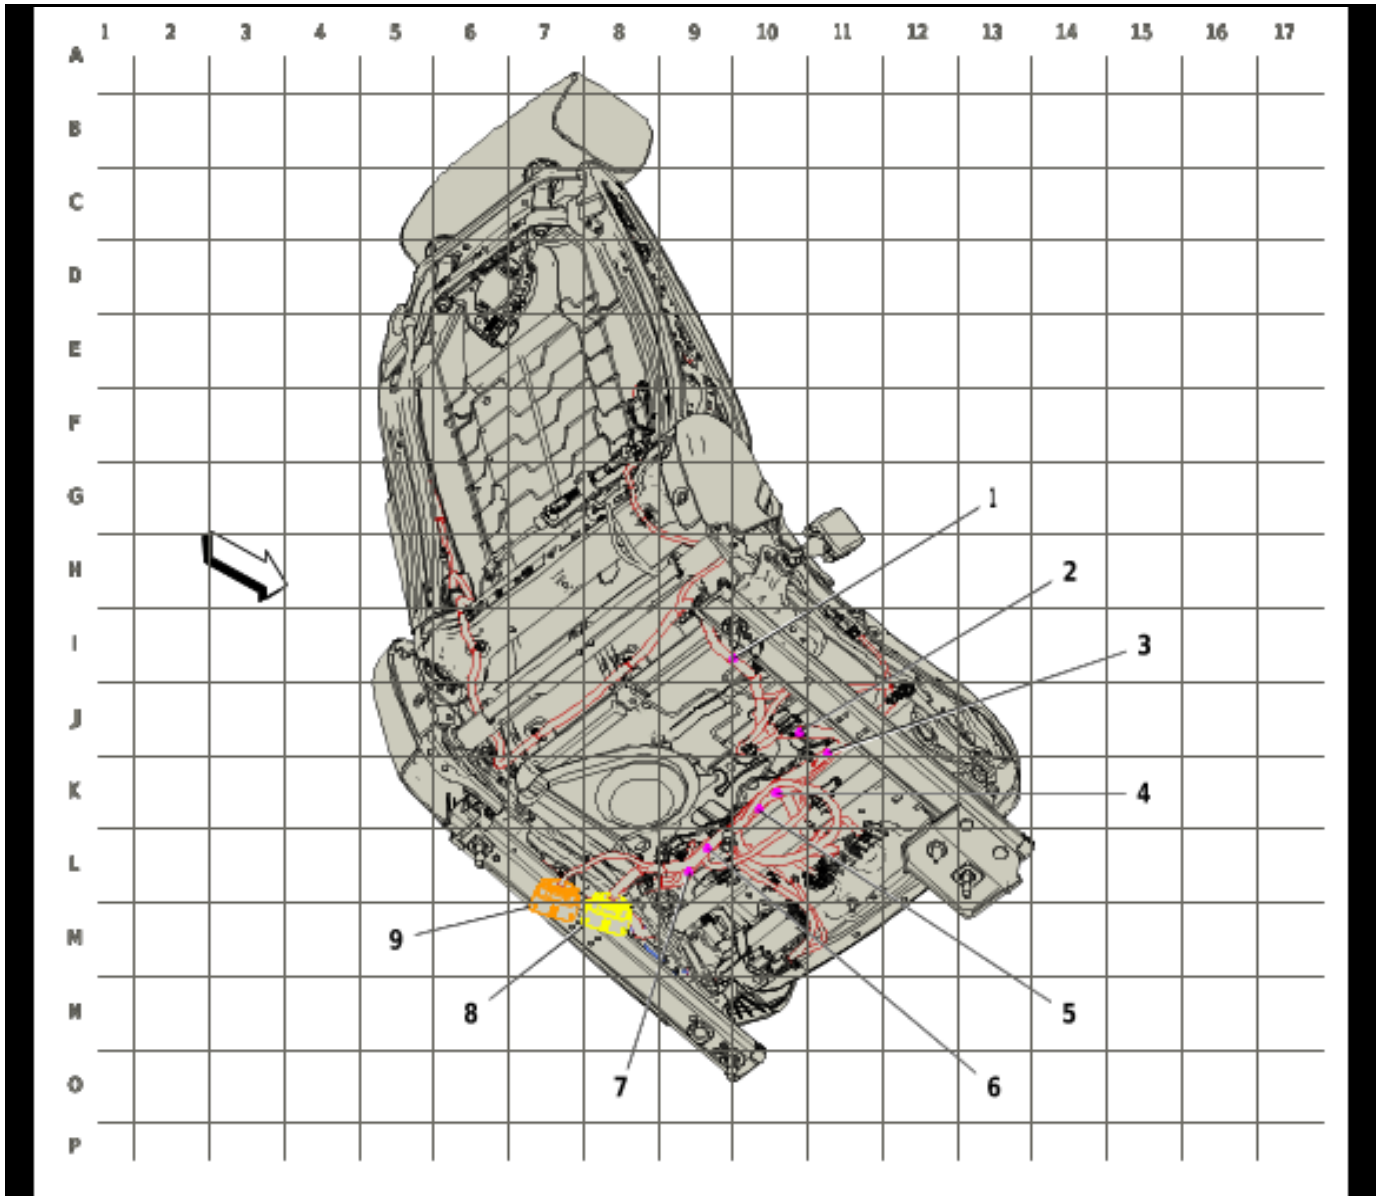


6180256

**Items**

- |   |   |
|---|---|
| (1) J345 Front Seat Wiring Harness - Driver | (7) J340 Front Seat Wiring Harness - Driver                         |
| (2) J346 Front Seat Wiring Harness - Driver | (8) X302A Front Seat Wiring Harness - Driver to Body Wiring Harness |
| (3) J344 Front Seat Wiring Harness - Driver | (9) X302B Front Seat Wiring Harness - Driver to Body Wiring Harness |
| (4) J343 Front Seat Wiring Harness - Driver |   |
| (5) J342 Front Seat Wiring Harness - Driver |   |
| (6) J341 Front Seat Wiring Harness - Driver |   |

Harness Routing Views (Front Seat Wiring Harness - Passenger Routing)

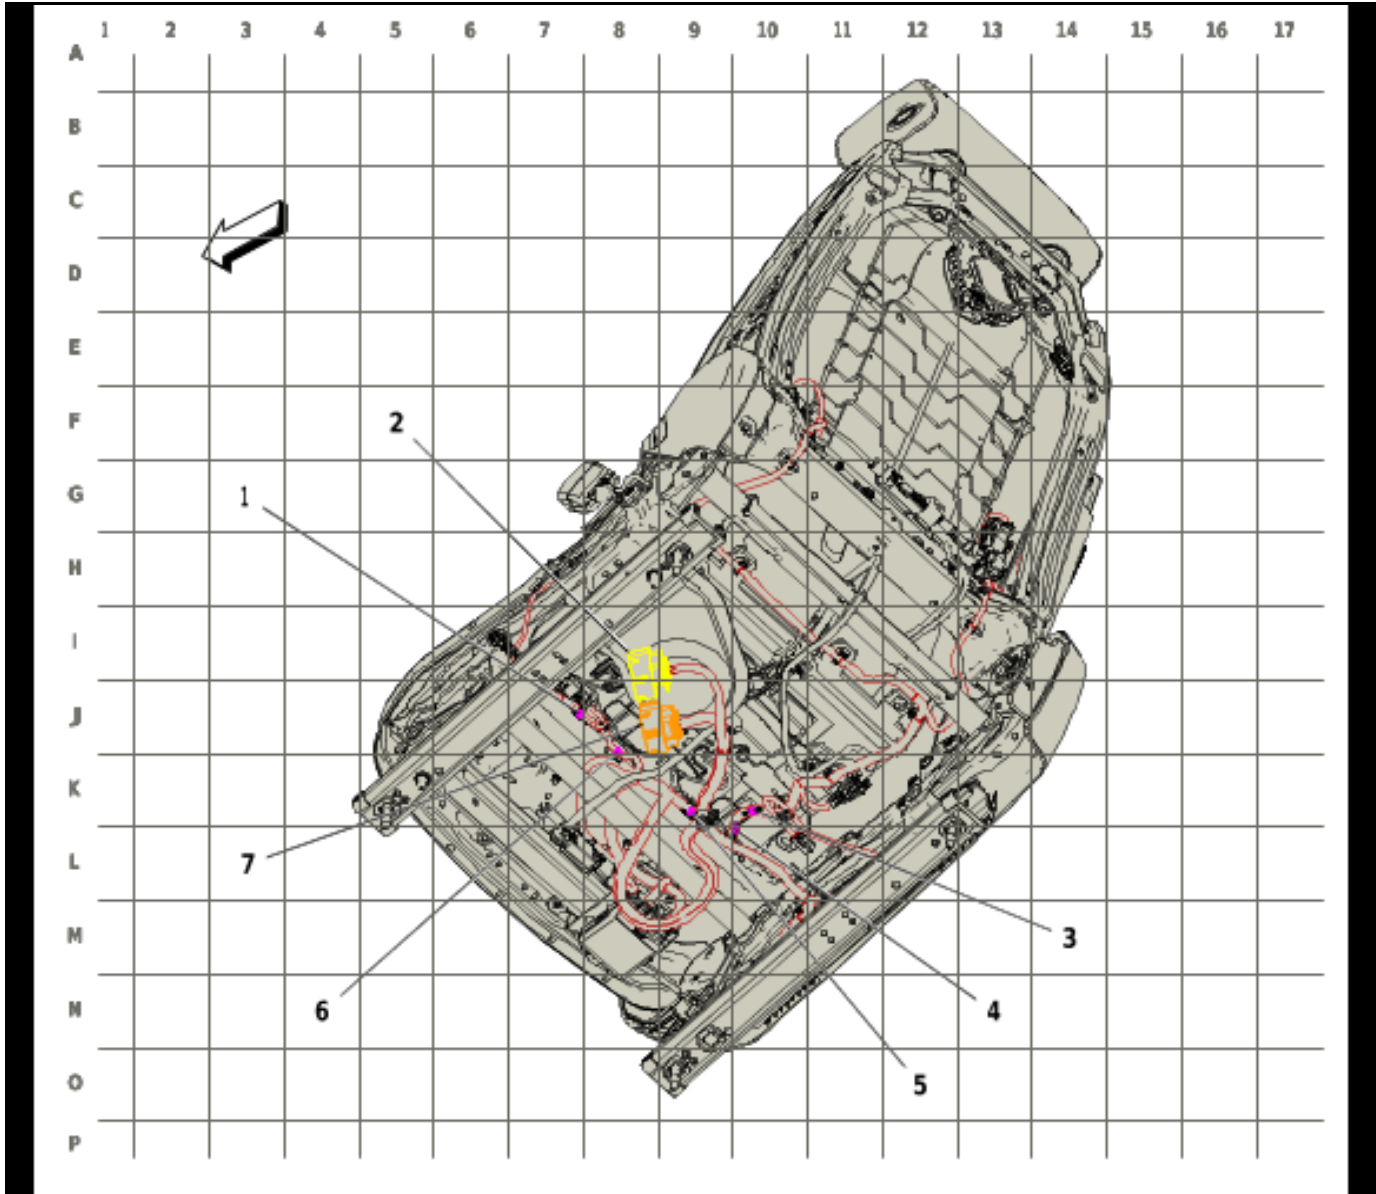


6180257

**Items**

- |     |  |     |  |
|-----|--|-----|--|
| (1) | J348 Front Seat Wiring Harness - Passenger                         | (5) | J350 Front Seat Wiring Harness - Passenger                         |
| (2) | X402B Front Seat Wiring Harness - Passenger to Body Wiring Harness | (6) | J347 Front Seat Wiring Harness - Passenger                         |
| (3) | J349 Front Seat Wiring Harness - Passenger                         | (7) | X402A Front Seat Wiring Harness - Passenger to Body Wiring Harness |
| (4) | J351 Front Seat Wiring Harness - Passenger                         |     |  |

Harness Routing Views (Driver Door Harness Routing (UQ3))

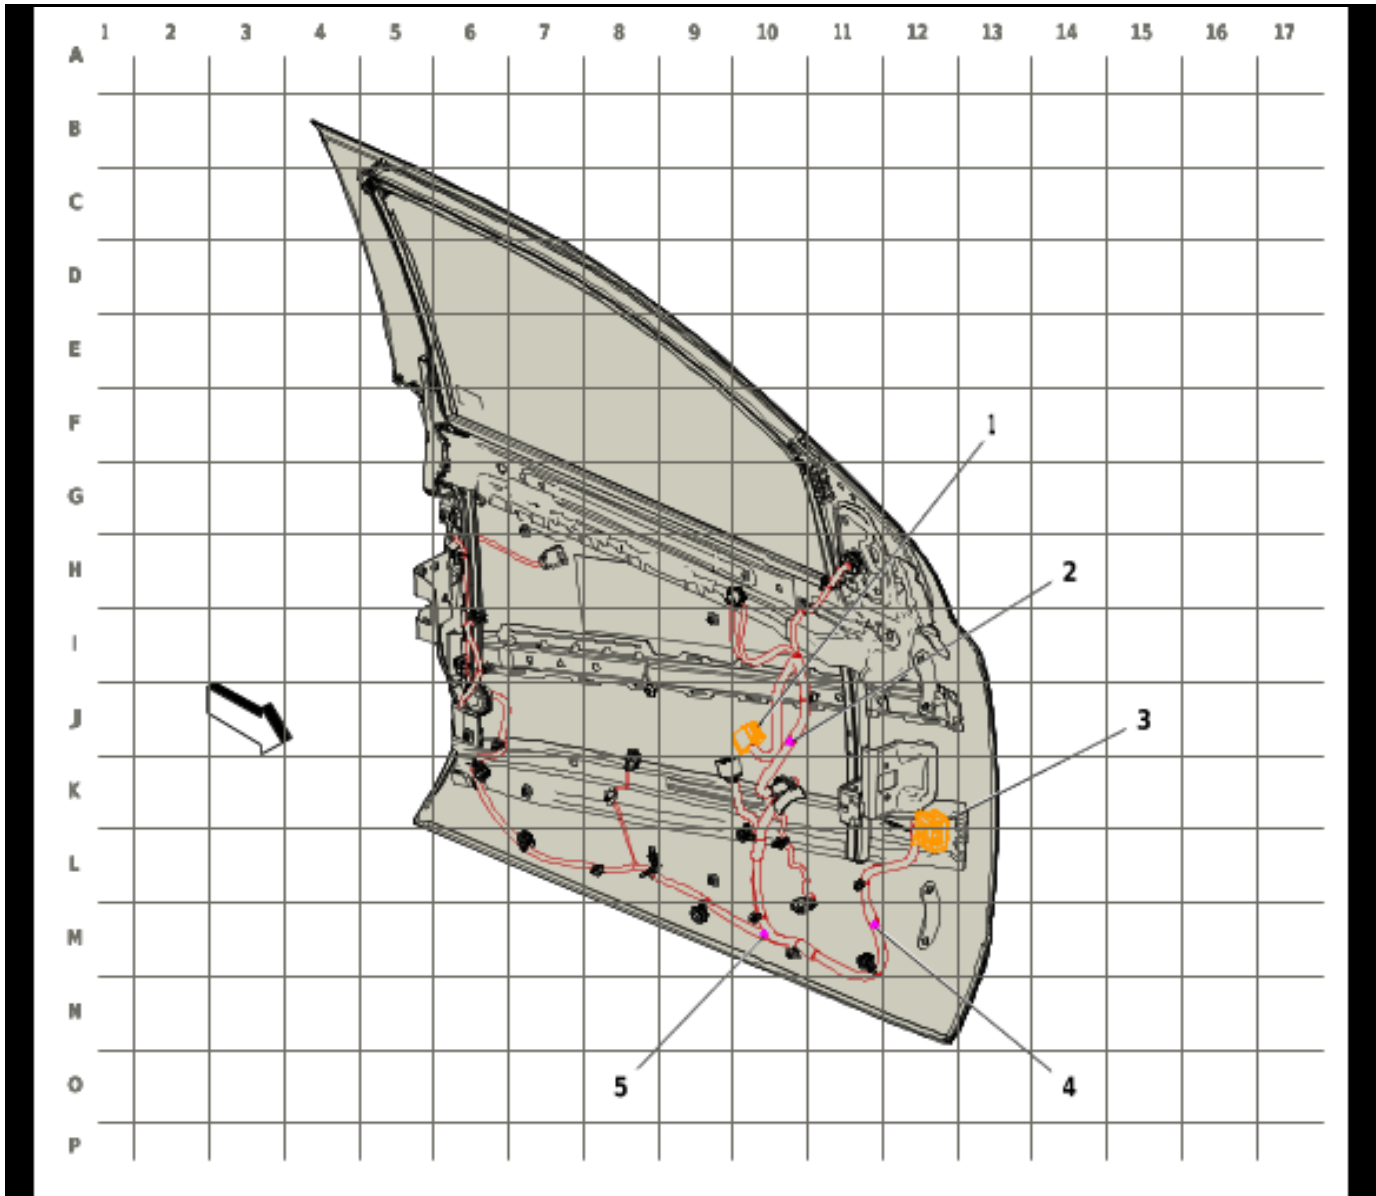


6180258

**Items**

- |   |   |
|---|---|
| <p>(1) X393 Front Side Door Door Wiring Harness - Driver to Front Side Door Door Lock Door Wiring Harness - Driver</p> <p>(2) J500 Front Side Door Door Wiring Harness - Driver</p> <p>(3) X303 Body Wiring Harness to Front Side Door Door Wiring Harness - Driver</p> | <p>(4) J501 Front Side Door Door Wiring Harness - Driver</p> <p>(5) J502 Front Side Door Door Wiring Harness - Driver</p> |
|---|---|

Harness Routing Views (Driver Door Harness Routing (UQA))

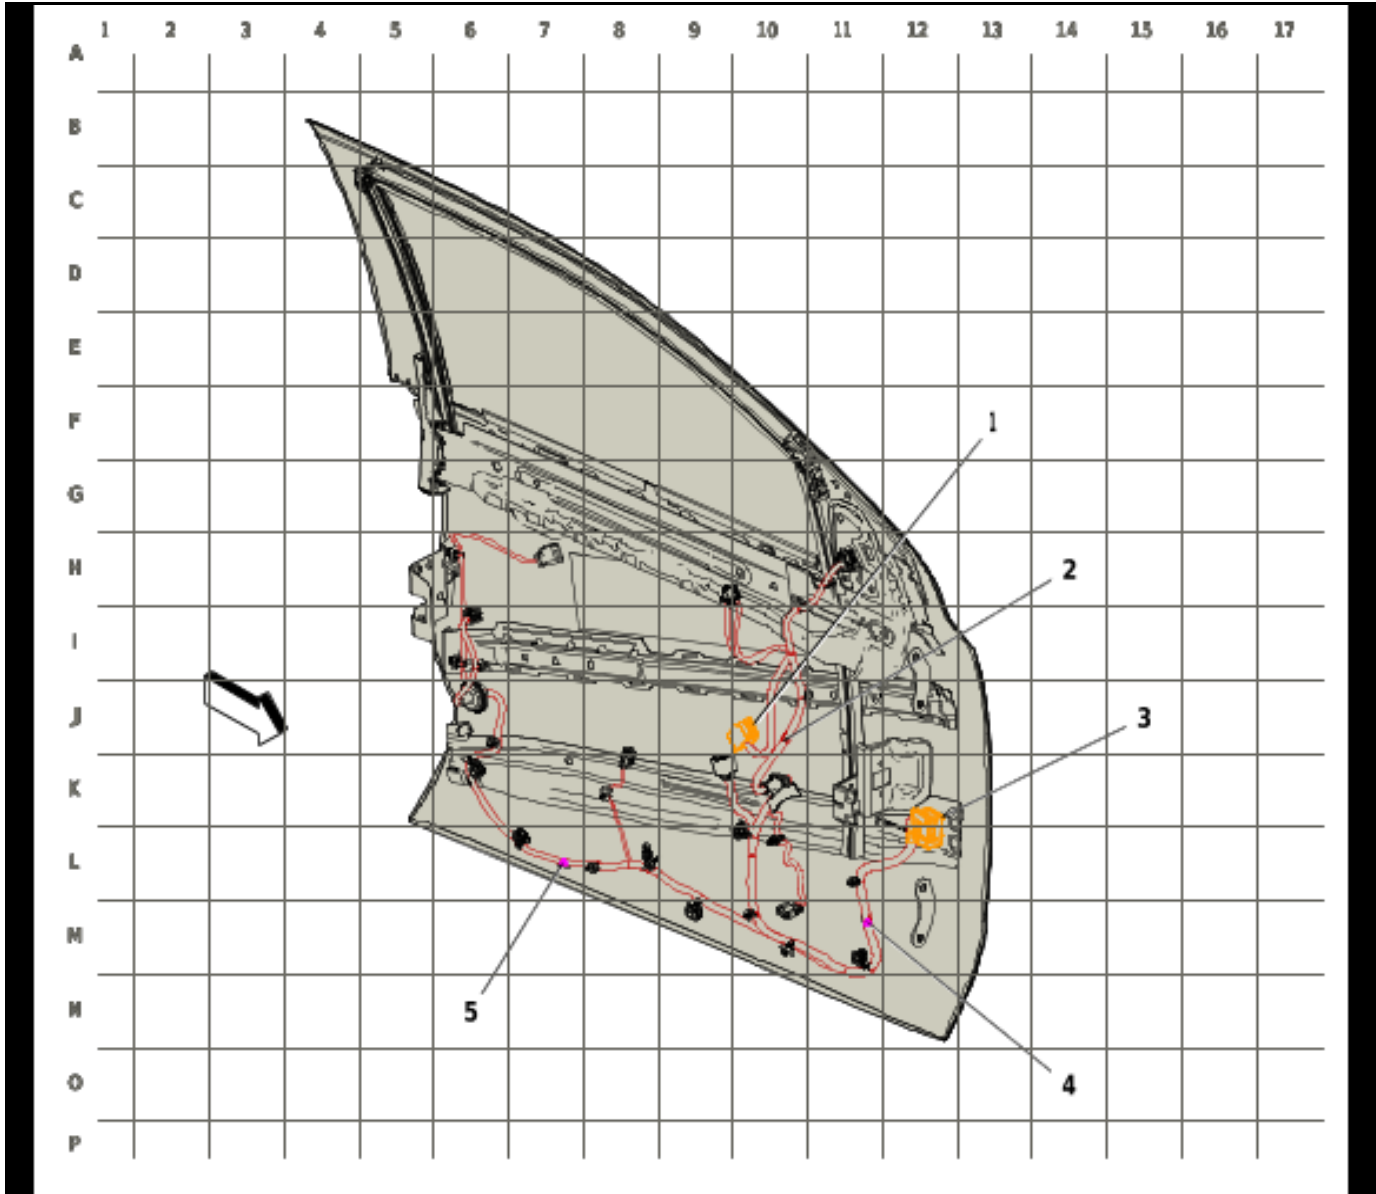


6180259

**Items**

- |  |  |
|--|--|
| <ul style="list-style-type: none"> <li>(1) X393 Front Side Door Door Wiring Harness - Driver to Front Side Door Door Lock Door Wiring Harness - Driver</li> <li>(2) J500 Front Side Door Door Wiring Harness - Driver</li> <li>(3) X303 Body Wiring Harness to Front Side Door Door Wiring Harness - Driver</li> </ul> | <ul style="list-style-type: none"> <li>(4) J501 Front Side Door Door Wiring Harness - Driver</li> <li>(5) J502 Front Side Door Door Wiring Harness - Driver</li> </ul> |
|--|--|



Harness Routing Views (Driver Door Trim Harness Routing)

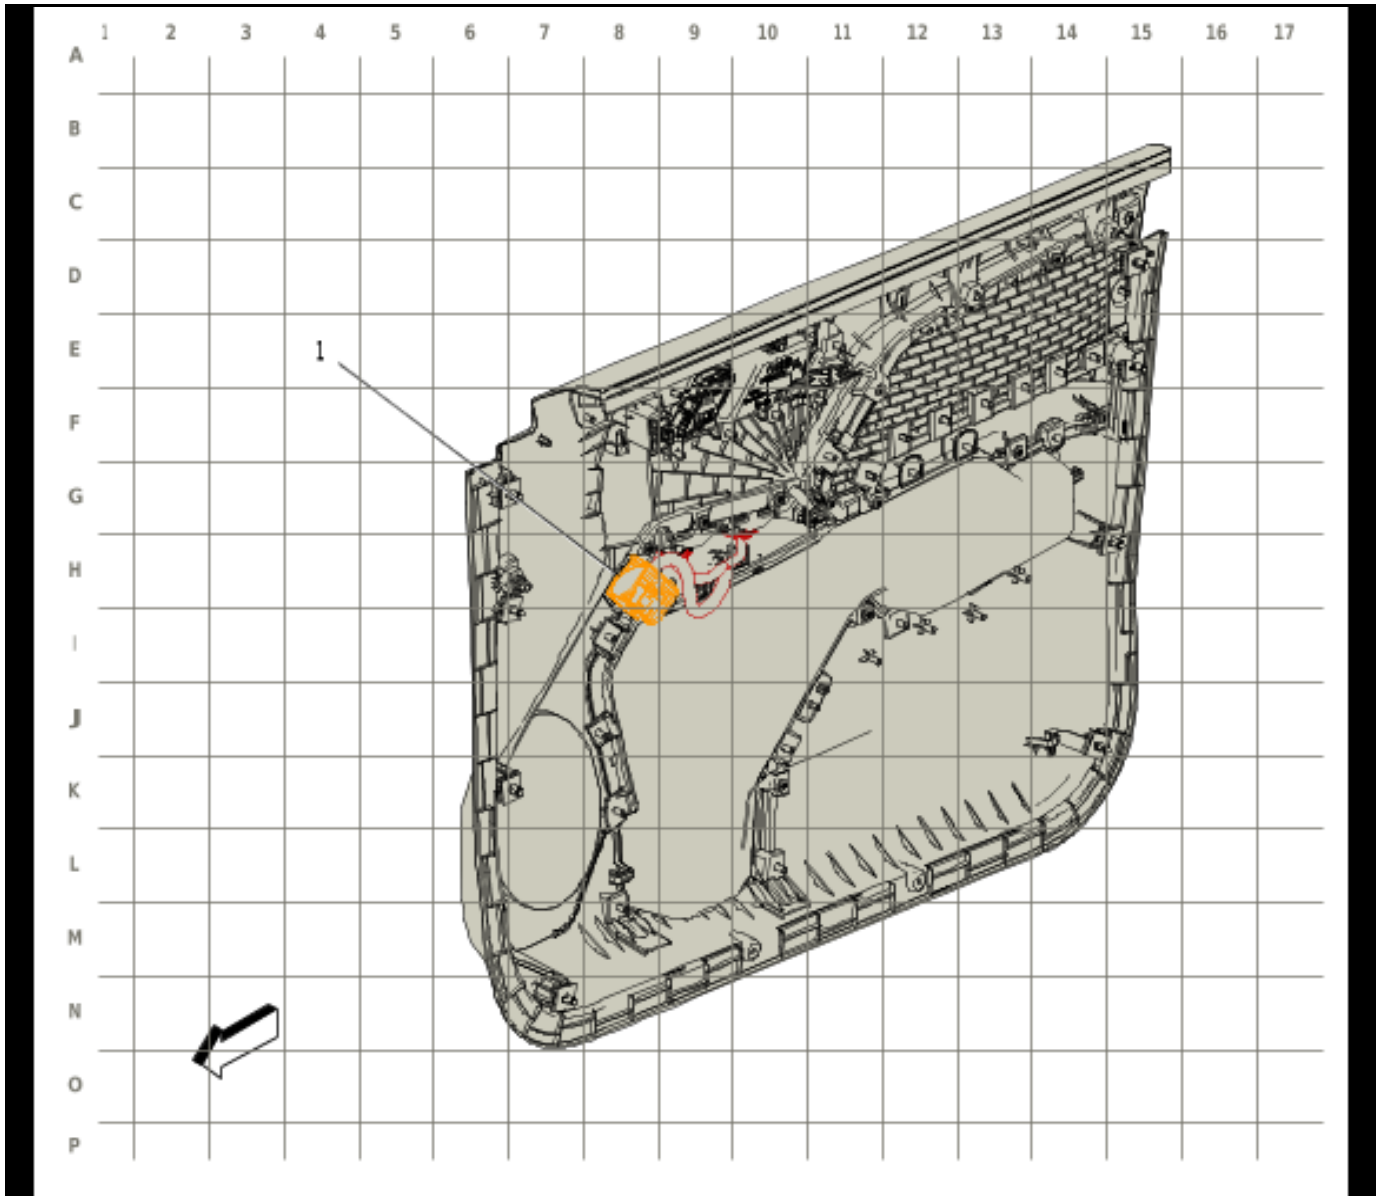


6180260

**Items**

- (1) X393 Front Side Door Door Wiring Harness - Driver to Front Side Door Door Lock Door Wiring Harness - Driver

Harness Routing Views (Passenger Door Harness Routing (UQ3))

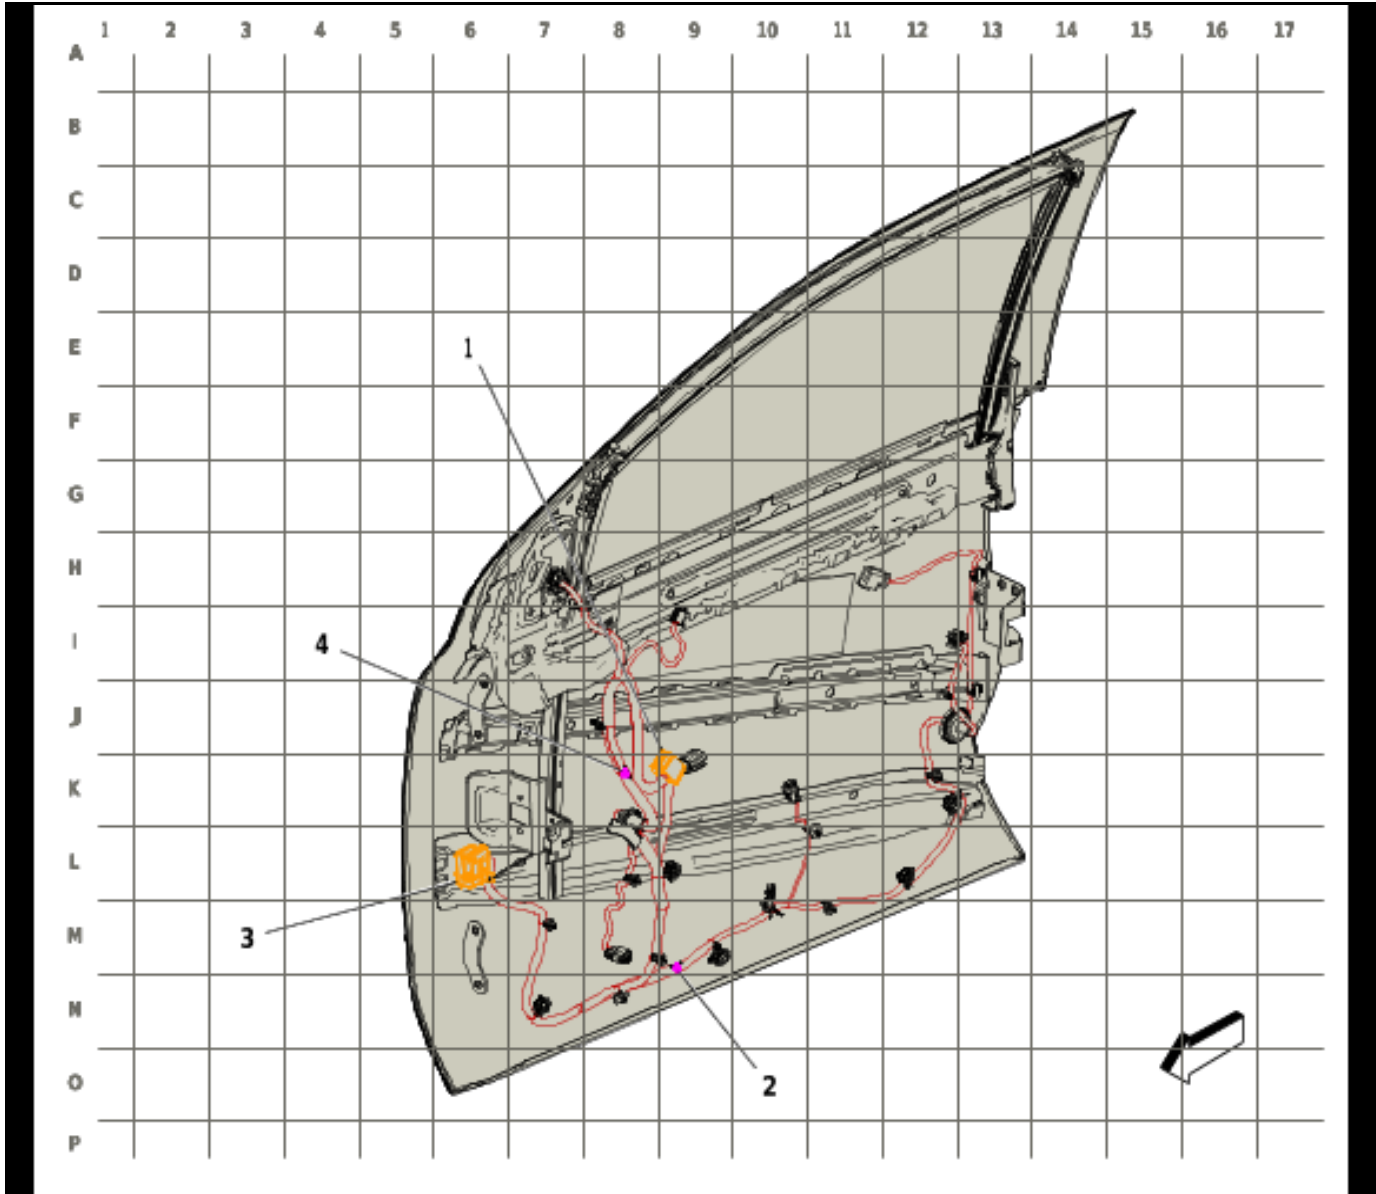


6180261

**Items**

- |  |  |
|--|--|
| <p>(1) X494 Front Side Door Door Wiring Harness - Passenger to Front Side Door Door Lock<br/>Door Wiring Harness - Passenger</p> <p>(2) J601 Front Side Door Door Wiring Harness - Passenger</p> | <p>(3) X404 Front Side Door Door Wiring Harness - Passenger to Front Side Door Door Wiring Harness - Passenger</p> <p>(4) J600 Front Side Door Door Wiring Harness - Passenger</p> |
|--|--|

Harness Routing Views (Passenger Door Harness Routing (UQA))

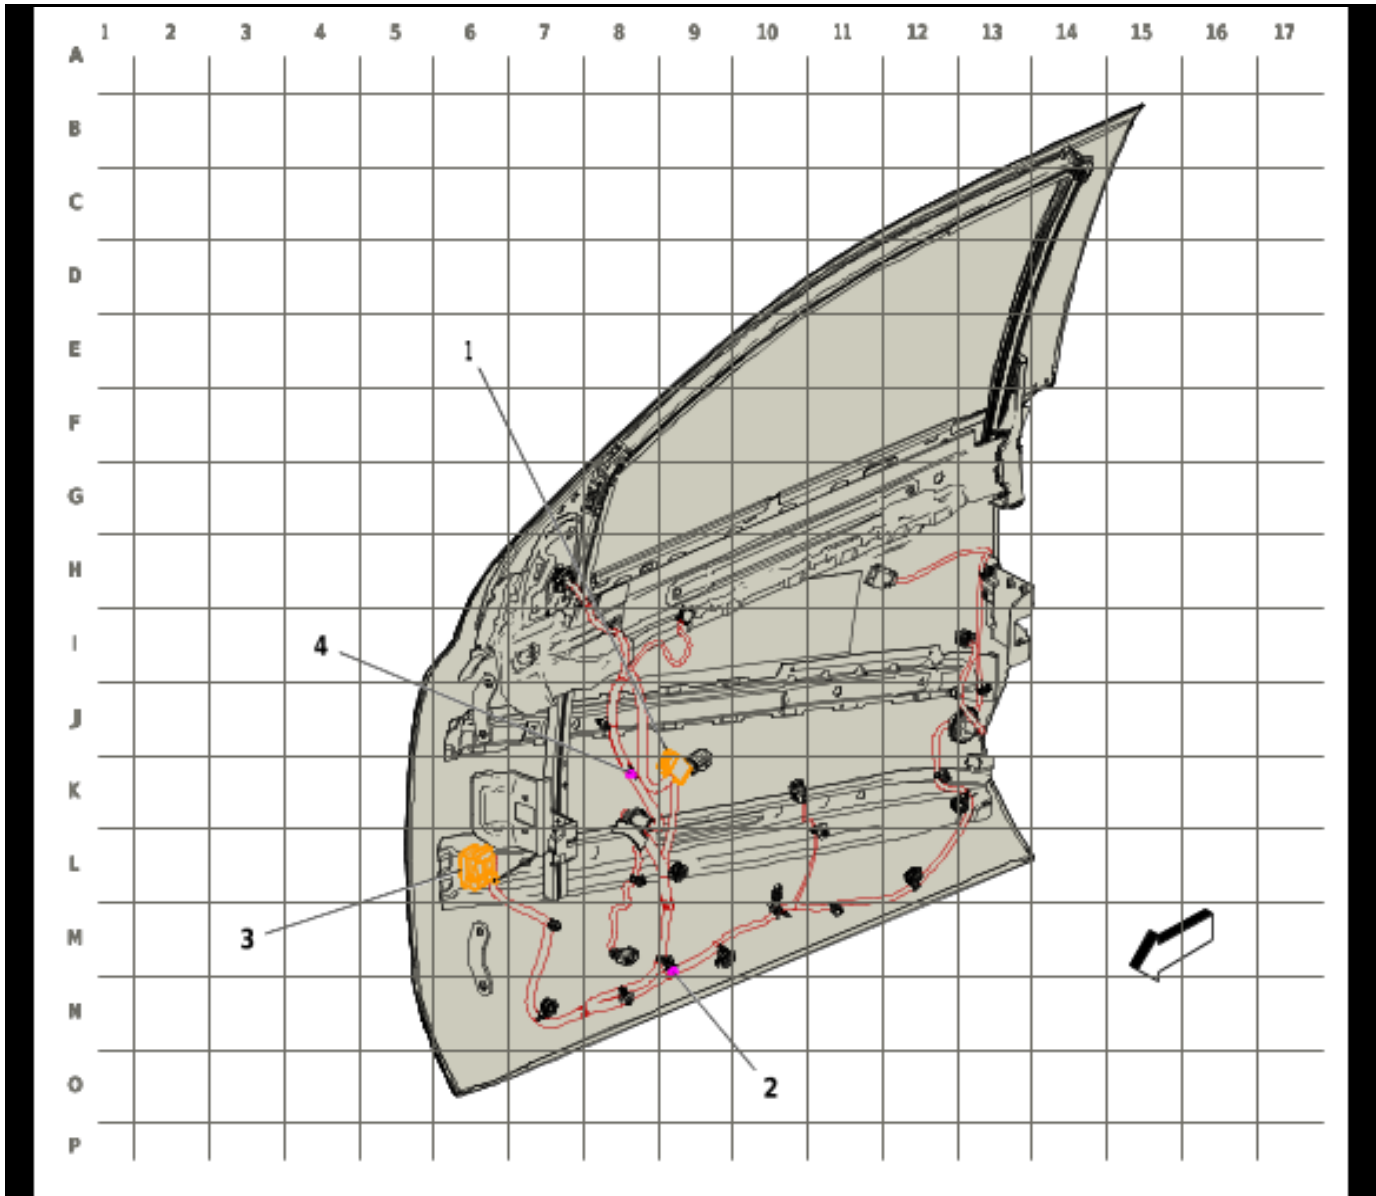


6180262

**Items**

- |  |  |
|--|--|
| <p>(1) X494 Front Side Door Door Wiring Harness - Passenger to Front Side Door Door Lock Door Wiring Harness - Passenger</p> <p>(2) J601 Front Side Door Door Wiring Harness - Passenger</p> | <p>(3) X404 Front Side Door Door Wiring Harness - Passenger to Front Side Door Door Wiring Harness - Passenger</p> <p>(4) J600 Front Side Door Door Wiring Harness - Passenger</p> |
|--|--|

Harness Routing Views (Passenger Door Trim Harness Routing)

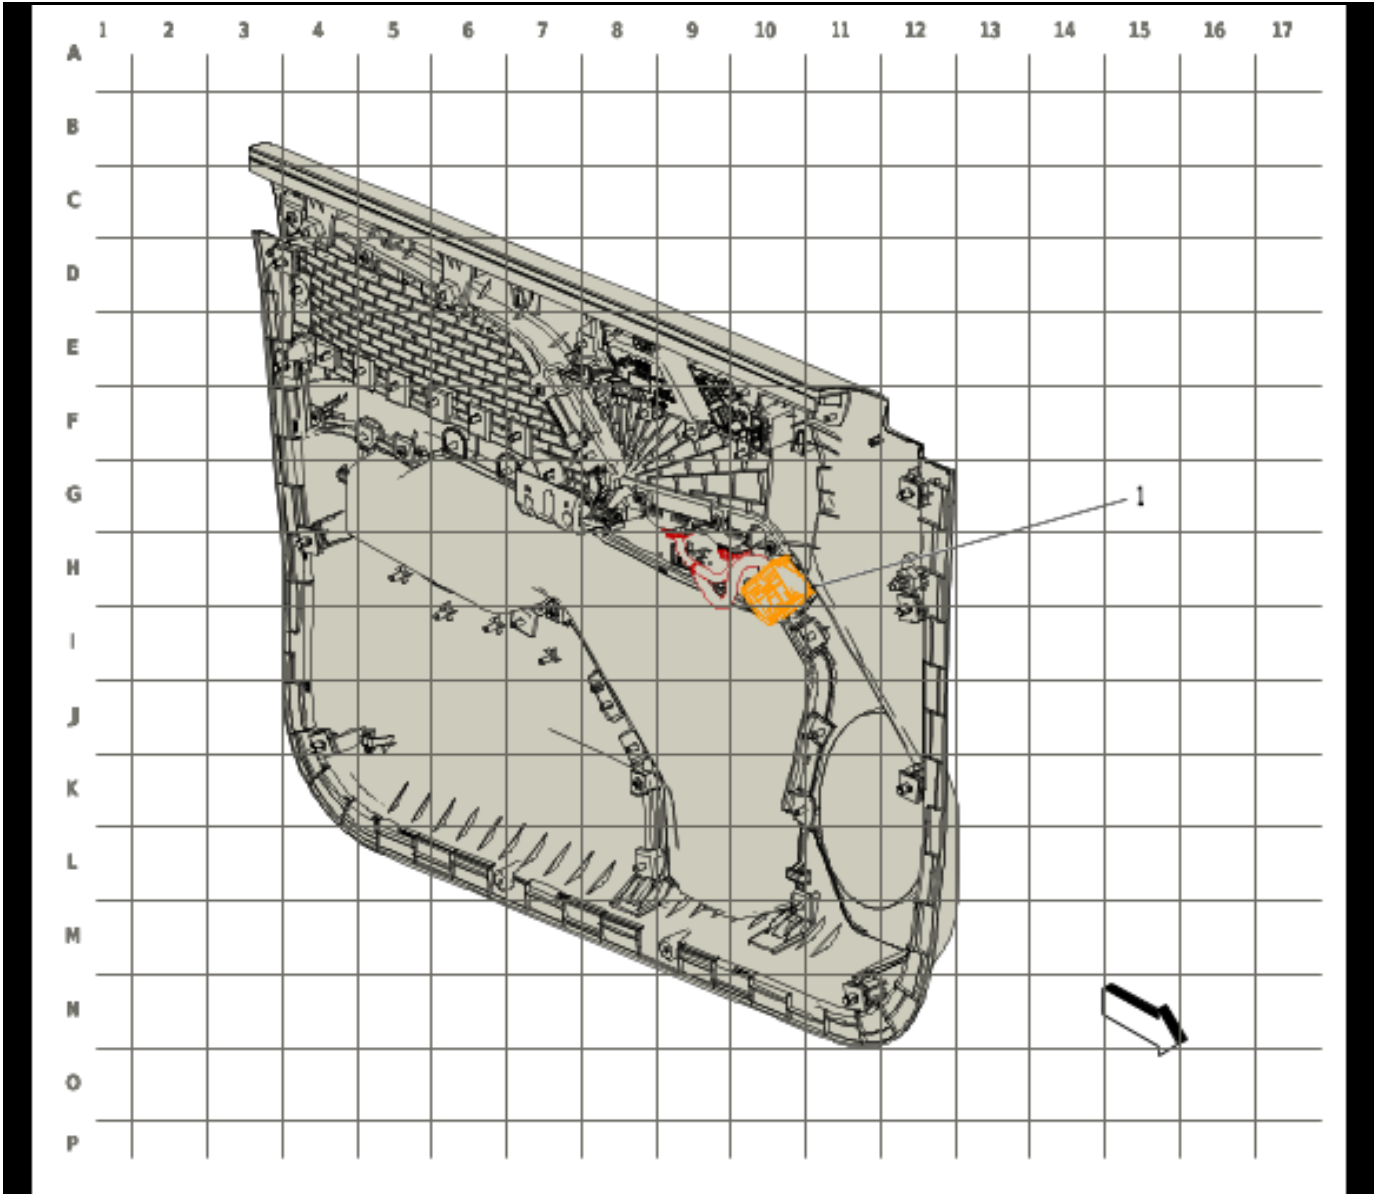


6180263

**Items**

- (1) X494 Front Side Door Door Wiring Harness - Passenger to Front Side Door Door Lock  
Door Wiring Harness - Passenger

Harness Routing Views (Body Harness Routing - Left Rear of Passenger Compartment)

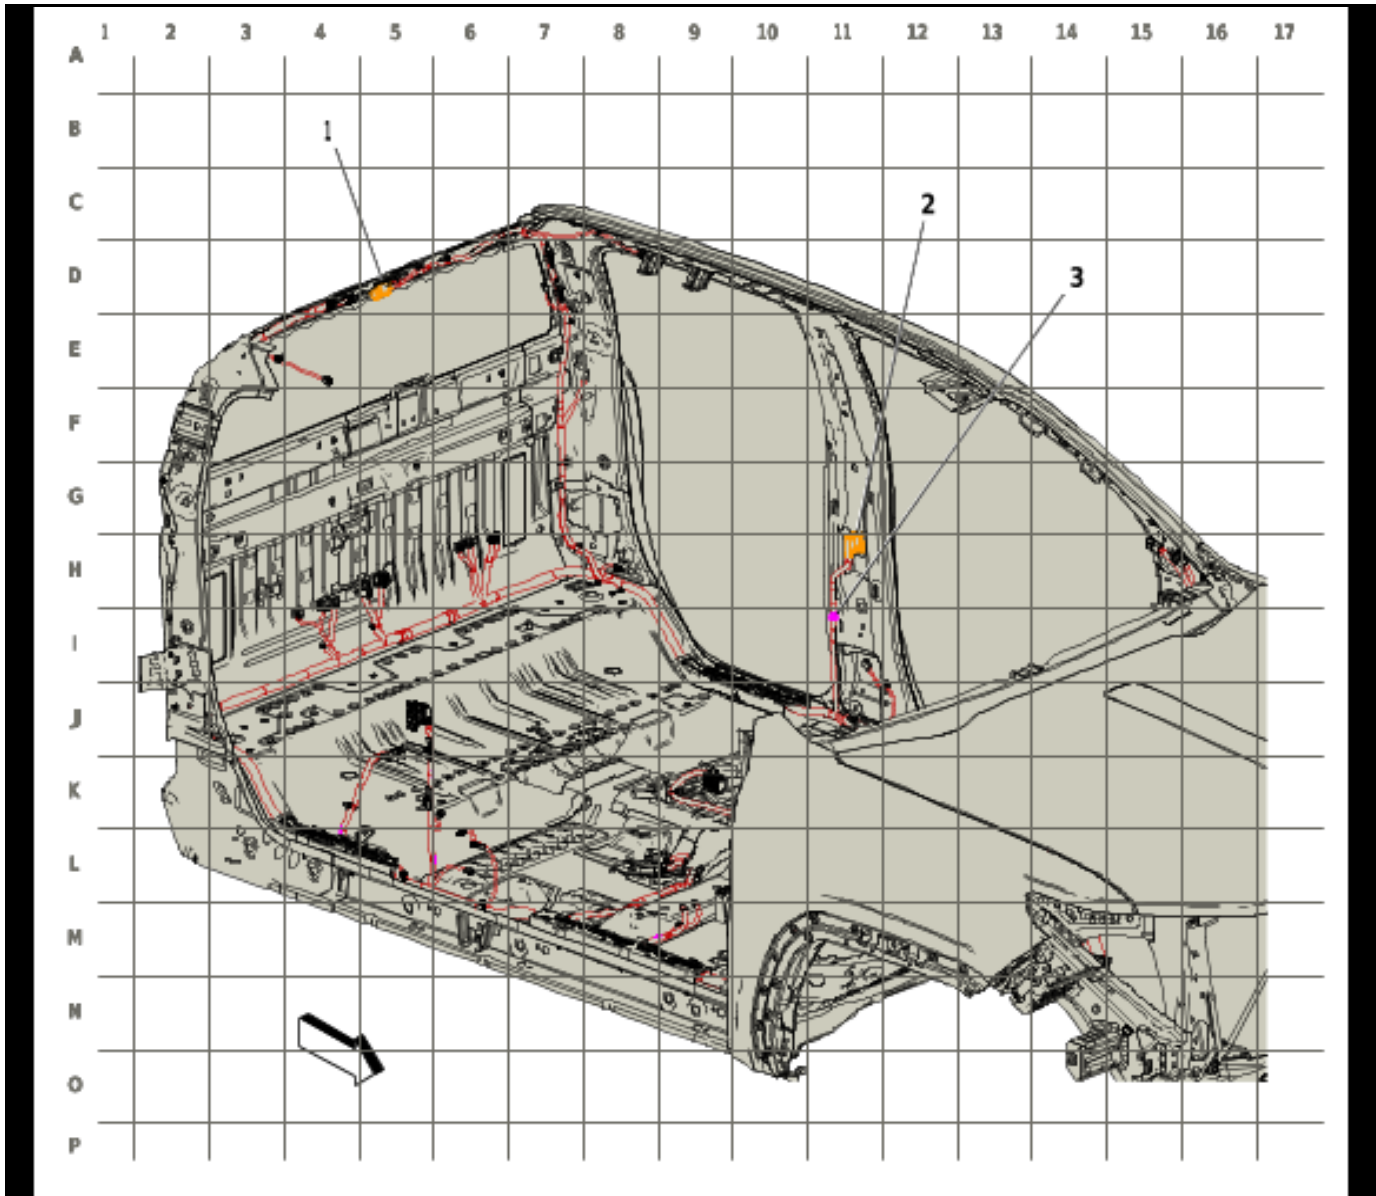


6180264

**Items**

- |  |  |
|--|--|
| <ul style="list-style-type: none"> <li>(1) X500 Roof Wiring Harness to Body Wiring Harness</li> <li>(2) X503 Rear Side Door Door Wiring Harness - Left to Body Wiring Harness</li> </ul> | <ul style="list-style-type: none"> <li>(3) J313 Body Wiring Harness</li> </ul> |
|--|--|

Harness Routing Views (Body Harness Routing - Center and Right of Passenger Compartment)

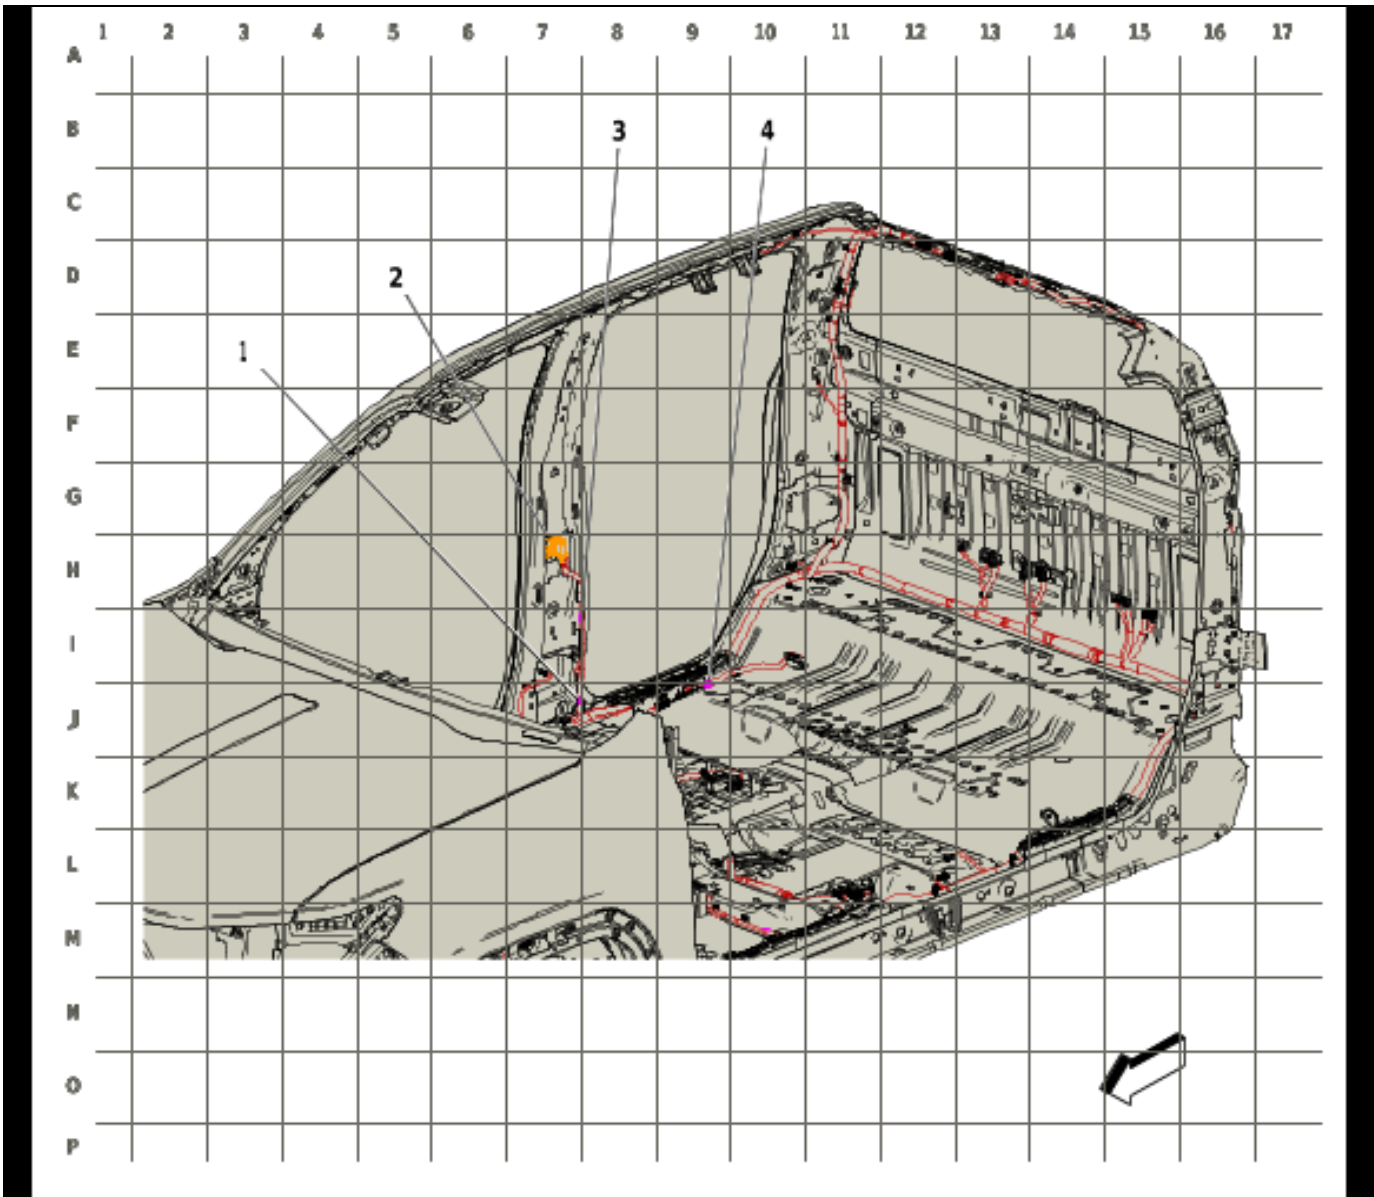


6180265

**Items**

- |  |  |
|--|--|
| <ul style="list-style-type: none"> <li>(1) J326 Body Wiring Harness</li> <li>(2) X604 Rear Side Door Door Wiring Harness - Right to Body Wiring Harness</li> <li>(3) J327 Body Wiring Harness</li> </ul> | <ul style="list-style-type: none"> <li>(4) J328 Body Wiring Harness</li> </ul> |
|--|--|

Harness Routing Views (Left Rear Door Harness Routing)

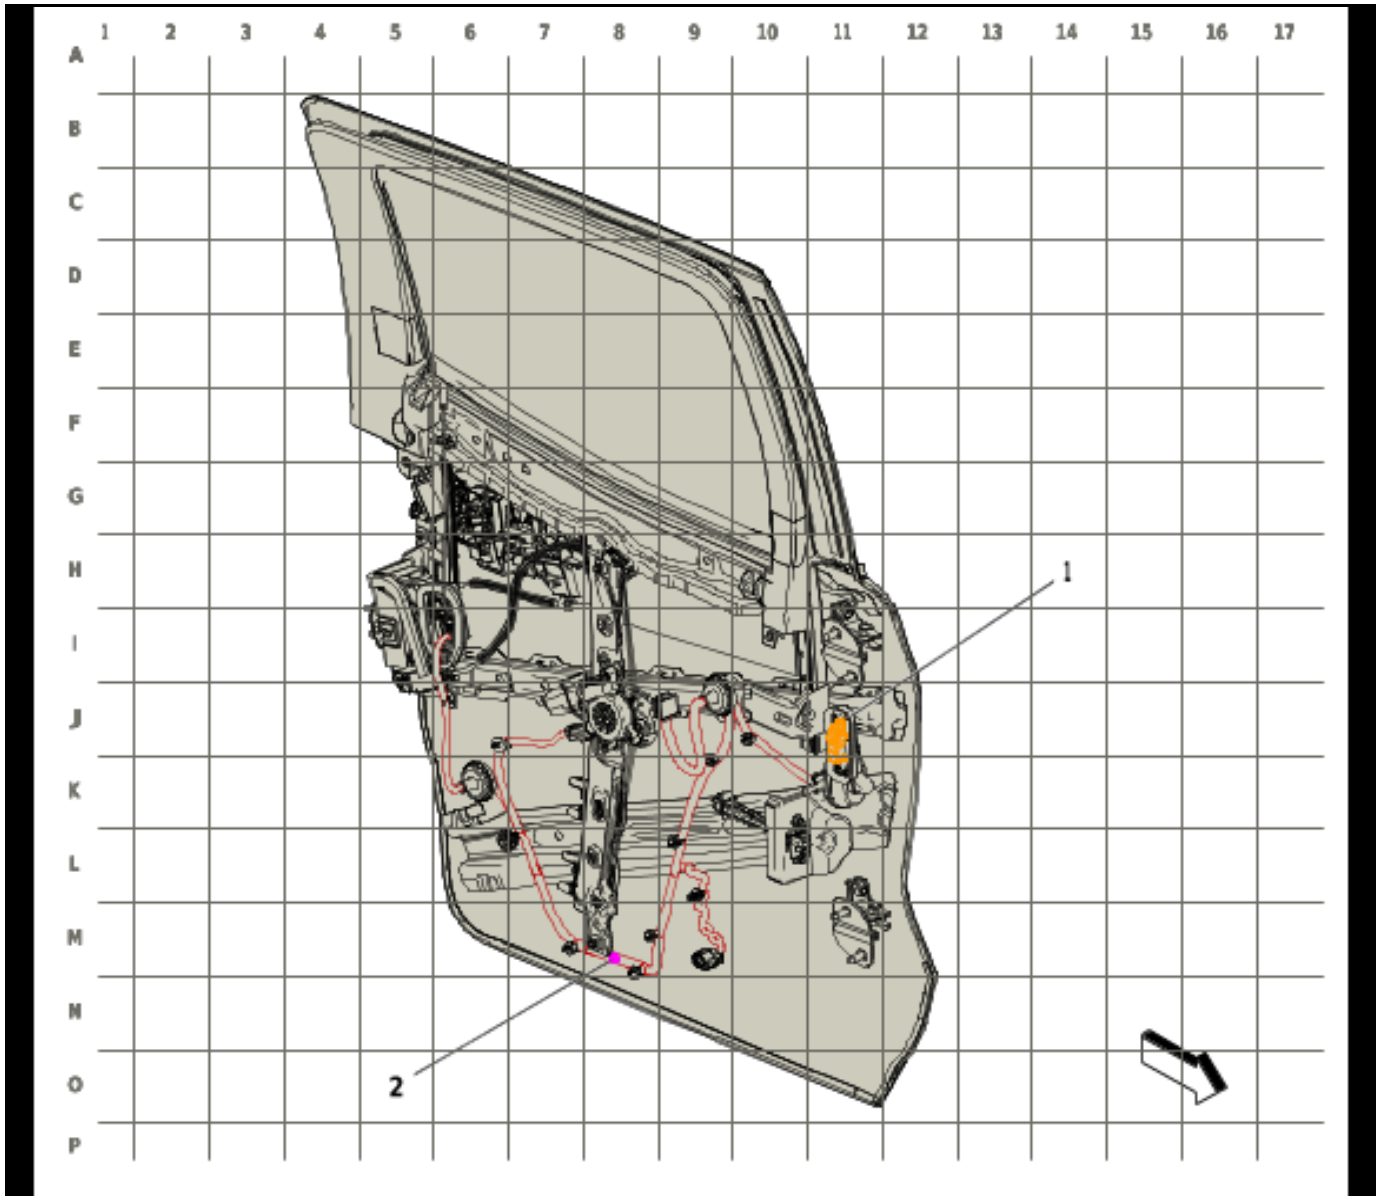


6180266

**Items**

(1) X503 Rear Side Door Door Wiring Harness - Left to Body Wiring Harness

(2) J700 Rear Side Door Door Wiring Harness - Left

Harness Routing Views (Right Rear Door Harness Routing)

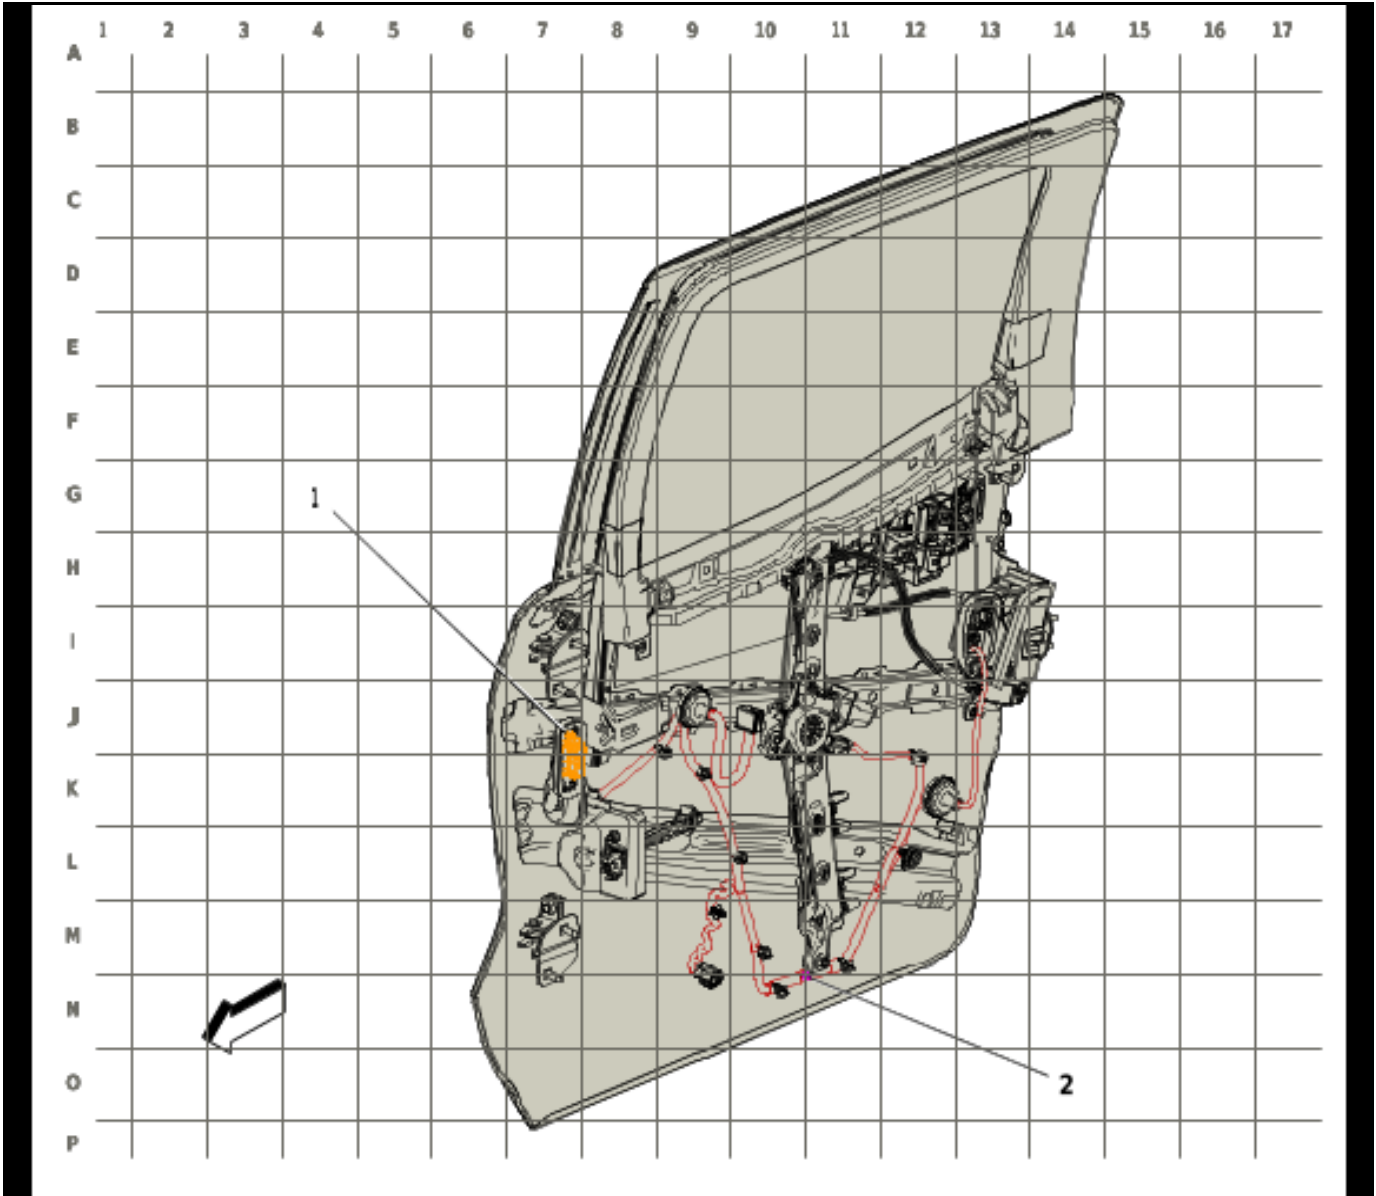

6180267


**Items**

(1) X604 Rear Side Door Door Wiring Harness - Right to Body Wiring Harness

(2) J800 Rear Side Door Door Wiring Harness - Right



Harness Routing Views (Vehicle Underbody Camera Harness Routing (UXA))

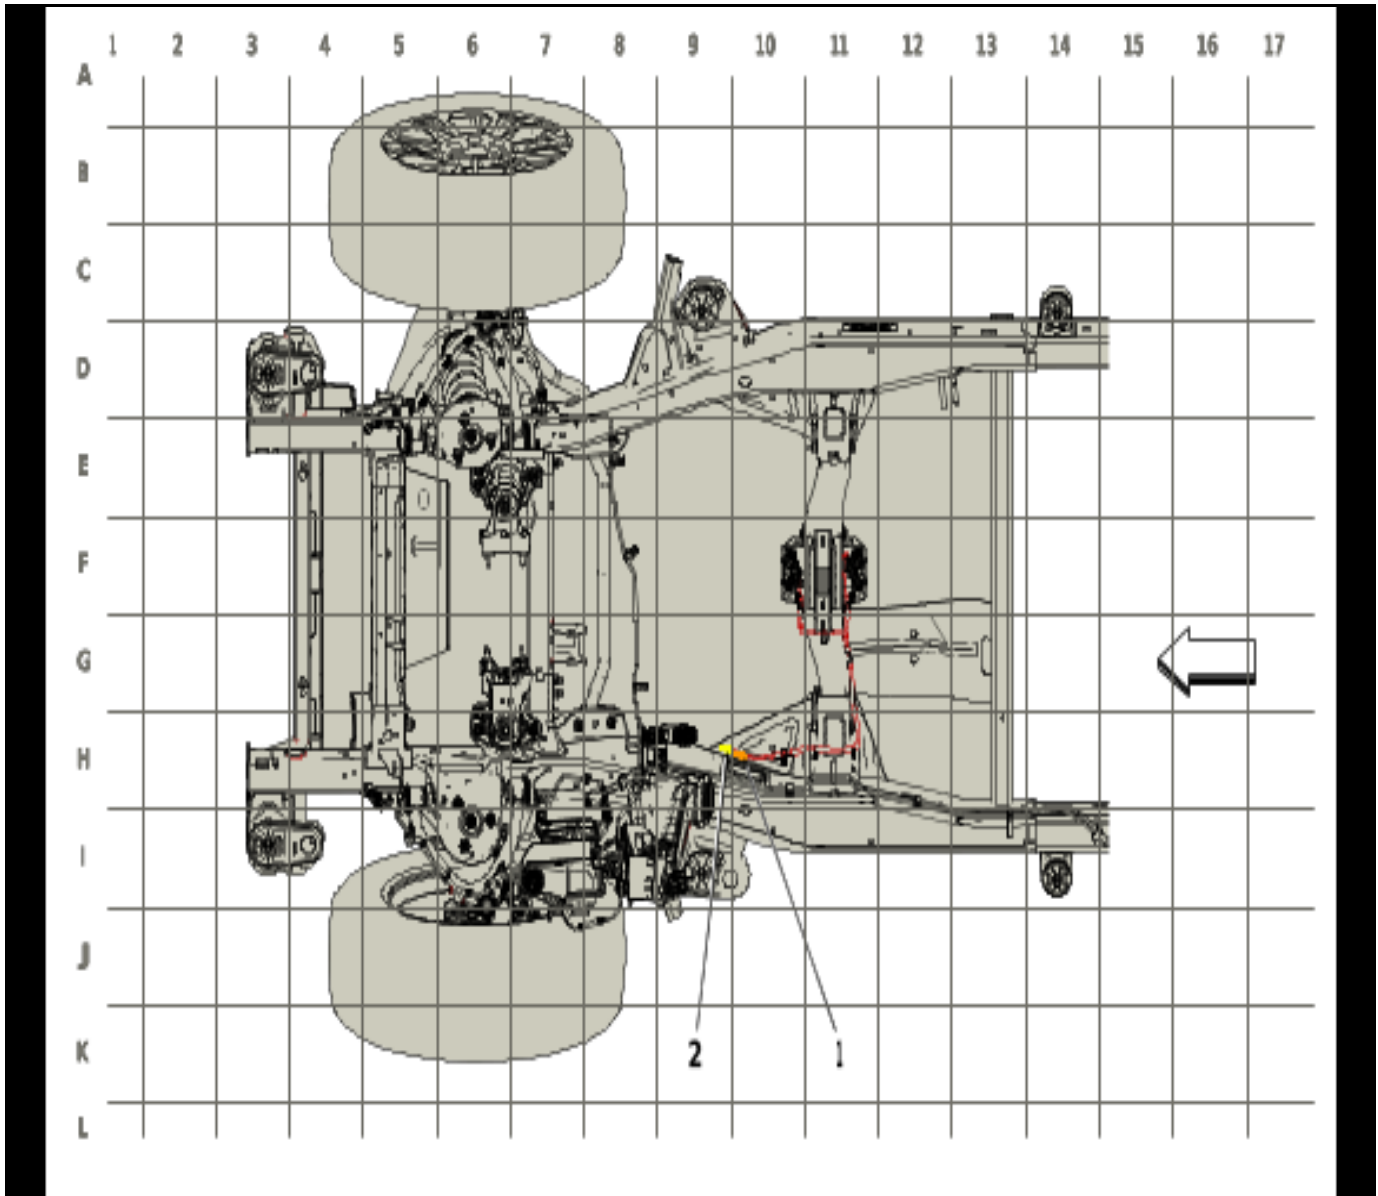


6180268

**Items**

(1) X372 Rearview Camera Wiring Harness Jumper to Rearview Camera Wiring Harness (UXA)

(2) X371 Rearview Camera Wiring Harness Jumper to Rearview Camera Wiring Harness (UXA)

Harness Routing Views (Chassis Harness Routing - Rear)

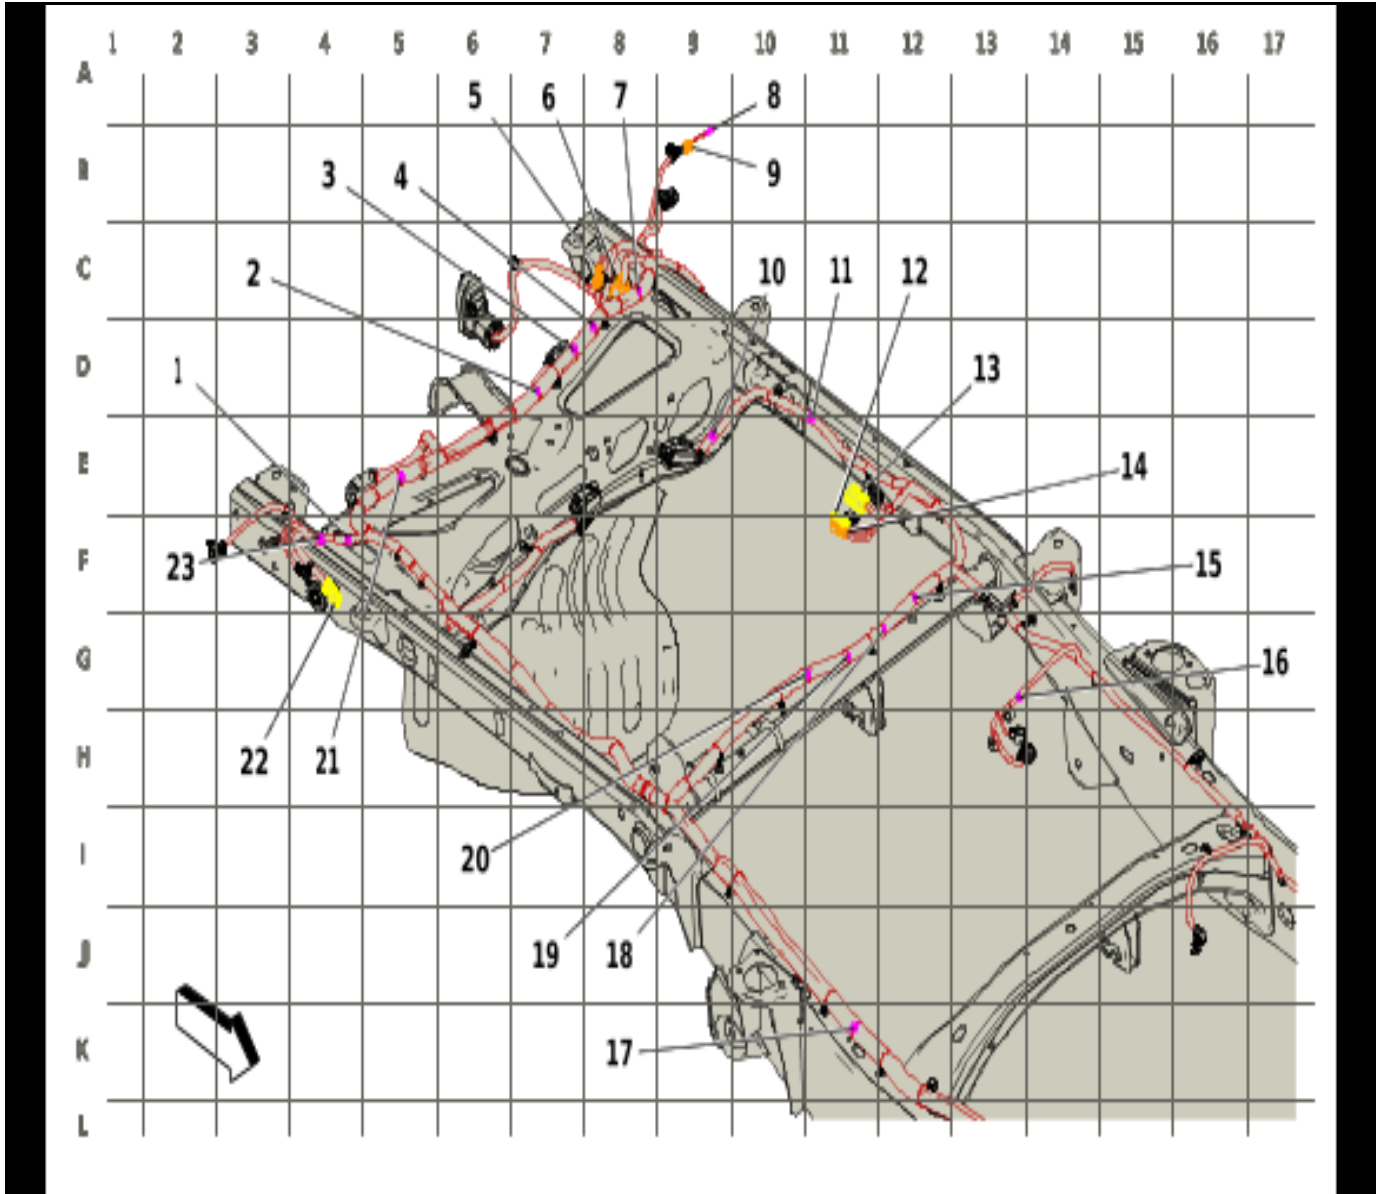


6180269

**Items**

- |      |  |      |   |
|------|--|------|---|
| (1)  | J408 Chassis Wiring Harness  | (12) | X777 Chassis Rear Wiring Harness Extension Harness to Chassis Wiring Harness (-G94) |
| (2)  | J411 Chassis Wiring Harness  | (13) | X904A Chassis Rear Wiring Harness Extension Harness to Chassis Wiring Harness       |
| (3)  | J412 Chassis Wiring Harness  | (14) | X788 Chassis Wiring Harness to Chassis Rear Wiring Harness Extension Harness (G94)  |
| (4)  | J414 Chassis Wiring Harness  | (15) | J404 Chassis Wiring Harness   |
| (5)  | X933 Chassis Wiring Harness to Rear Object Alarm Sensor Wiring Harness | (16) | J416 Chassis Wiring Harness   |
| (6)  | X700 Rear Object Alarm Sensor Wiring Harness to Chassis Wiring Harness | (17) | J400 Chassis Wiring Harness   |
| (7)  | J415 Chassis Wiring Harness  | (18) | J403 Chassis Wiring Harness   |
| (8)  | W26 Blunt Cut - Cargo Lamps Provision                                  | (19) | J402 Chassis Wiring Harness   |
| (9)  | X382 Chassis Wiring Harness to Chassis Wiring Harness (S0Y)            | (20) | J401 Chassis Wiring Harness   |
| (10) | J410 Chassis Wiring Harness  | (21) | J407 Chassis Wiring Harness   |
| (11) | J409 Chassis Wiring Harness  |      |   |

- (22) X820 Body Rear Wiring Harness to Chassis Wiring Harness (KC9/KCA)
- (23) J413 Chassis Wiring Harness

**Harness Routing Views (Endgate Harness Routing (A91 / UVB))**

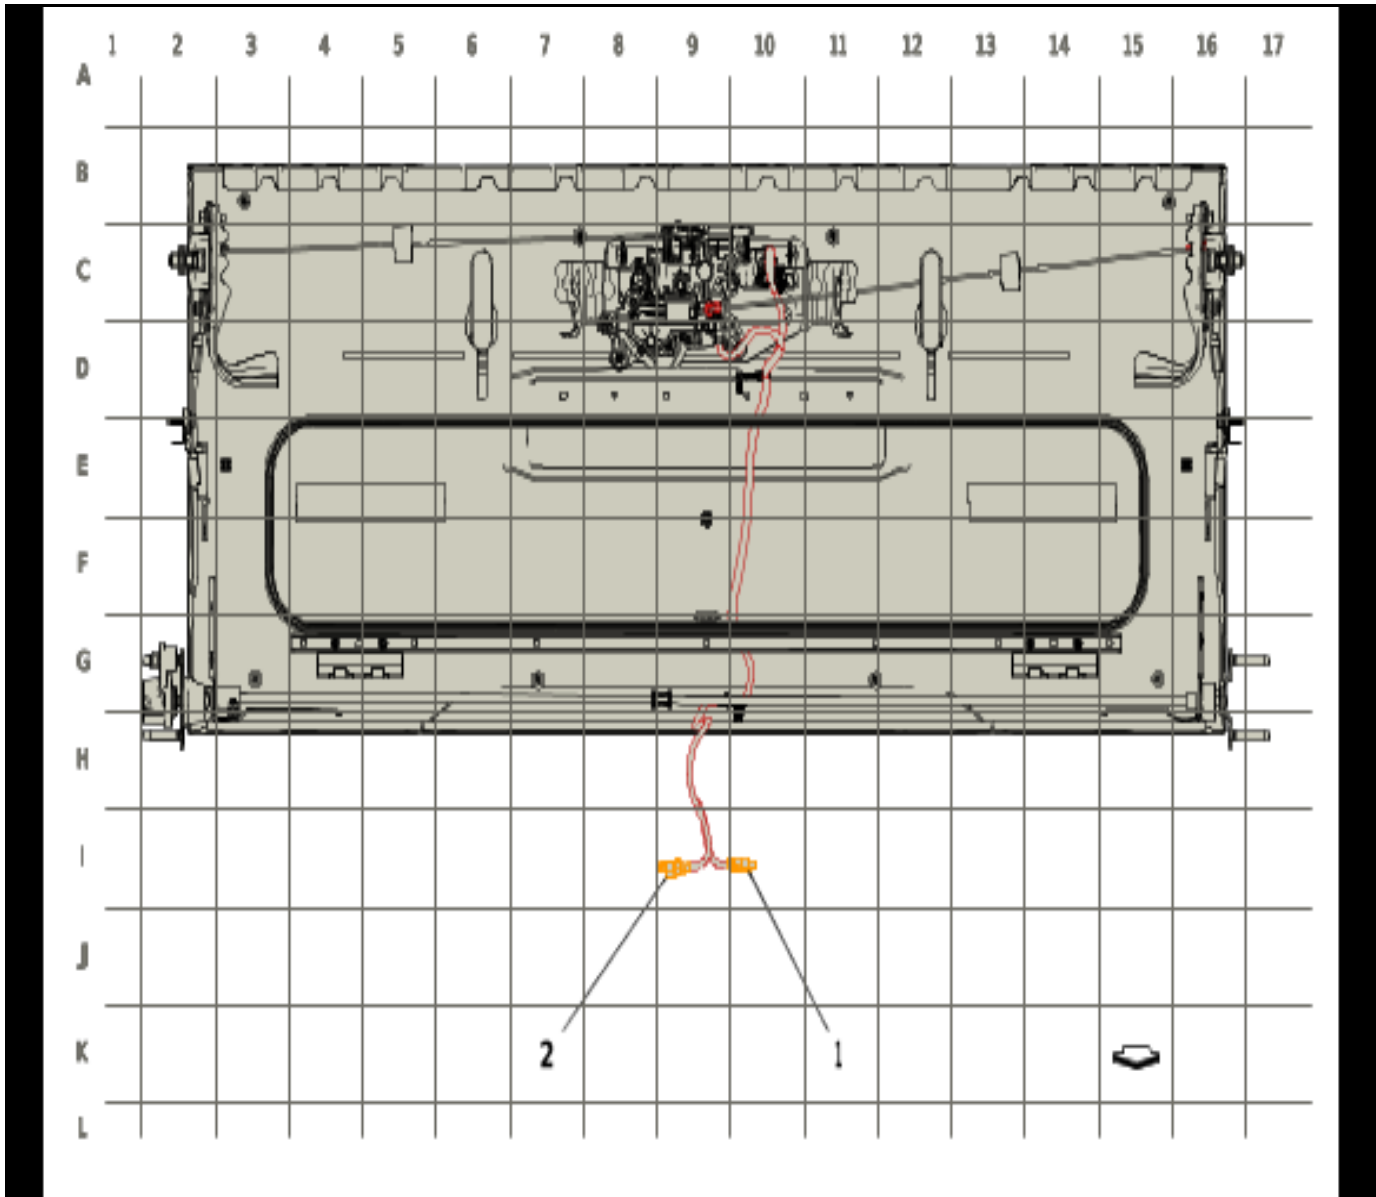


6180270

**Items**

- (1) X955 Liftgate Jumper Wiring Harness to Rear Object Alarm Sensor Wiring Harness
- (2) X950 Liftgate Jumper Wiring Harness to Rear Object Alarm Sensor Wiring Harness

Harness Routing Views (Rear Fascia Harness Routing)

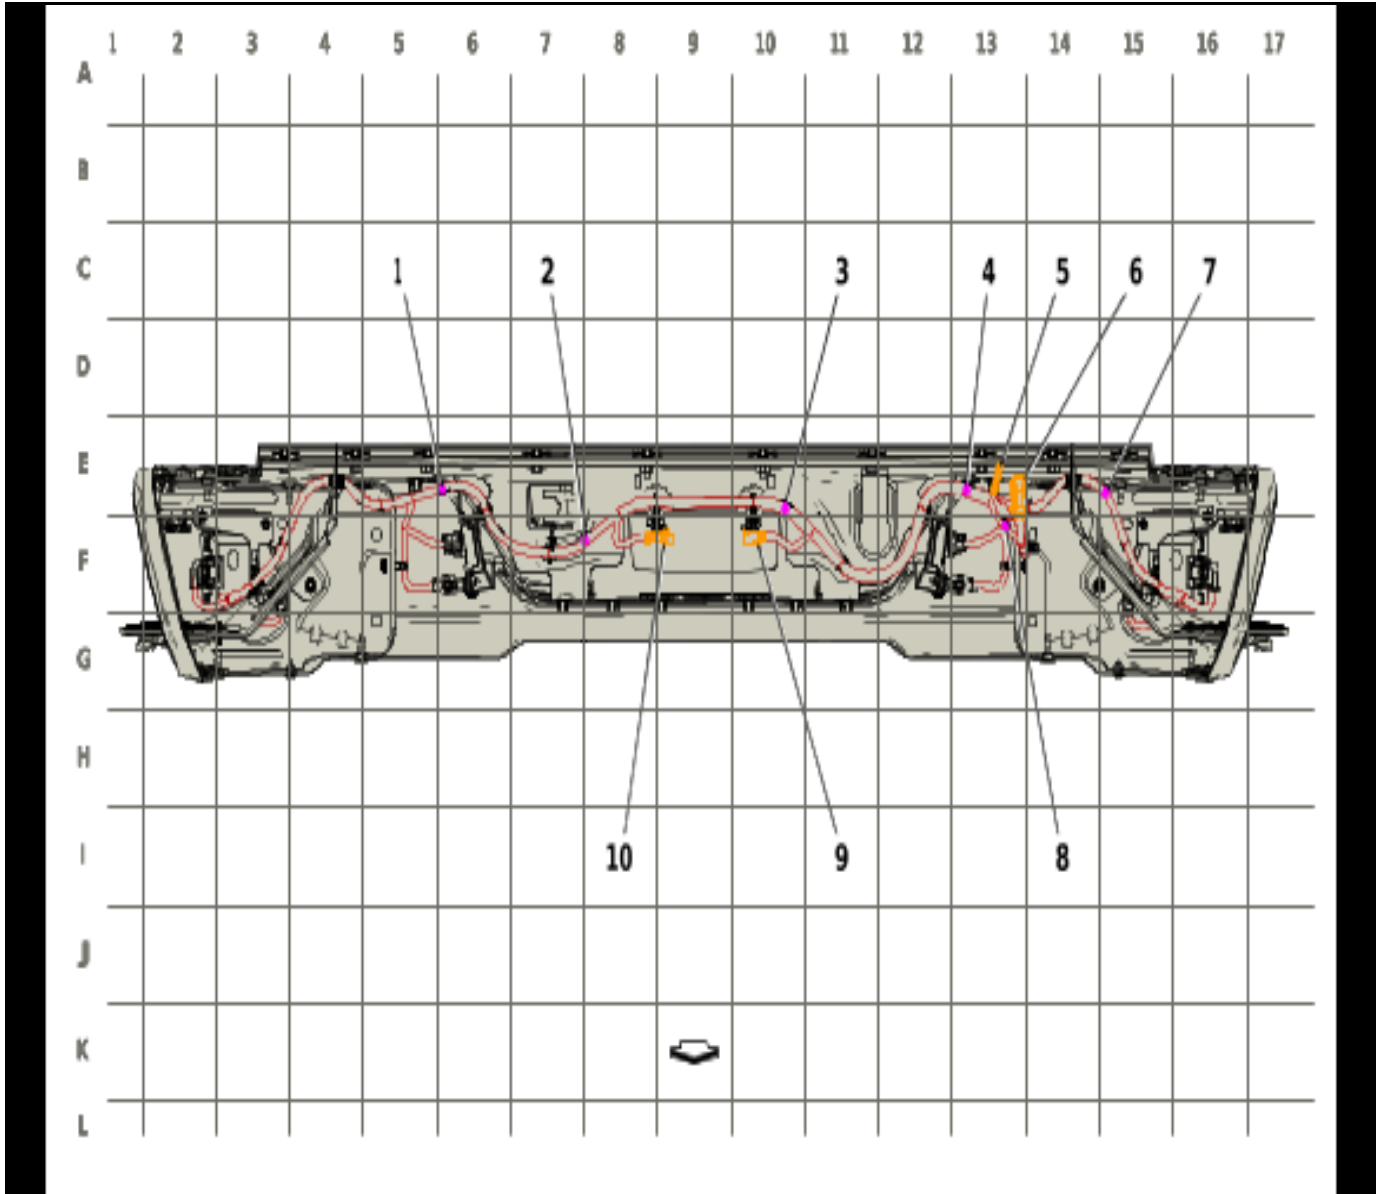

6180271



**Items**

- |  |   |
|--|---|
| <ul style="list-style-type: none"> <li>(1) J900 Rear Object Alarm Sensor Wiring Harness</li> <li>(2) J901 Rear Object Alarm Sensor Wiring Harness</li> <li>(3) J902 Rear Object Alarm Sensor Wiring Harness</li> <li>(4) J903 Rear Object Alarm Sensor Wiring Harness</li> <li>(5) X933 Chassis Wiring Harness to Rear Object Alarm Sensor Wiring Harness</li> </ul> | <ul style="list-style-type: none"> <li>(6) X700 Rear Object Alarm Sensor Wiring Harness to Chassis Wiring Harness</li> <li>(7) J905 Rear Object Alarm Sensor Wiring Harness</li> <li>(8) J904 Rear Object Alarm Sensor Wiring Harness</li> <li>(9) X955 Liftgate Jumper Wiring Harness to Rear Object Alarm Sensor Wiring Harness</li> <li>(10) X950 Liftgate Jumper Wiring Harness to Rear Object Alarm Sensor Wiring Harness</li> </ul> |
|--|---|


# Power Outlets

## Schematic and Routing Diagrams

Cigar Lighter/Power Outlet Schematics (Power and Charge Receptacles)

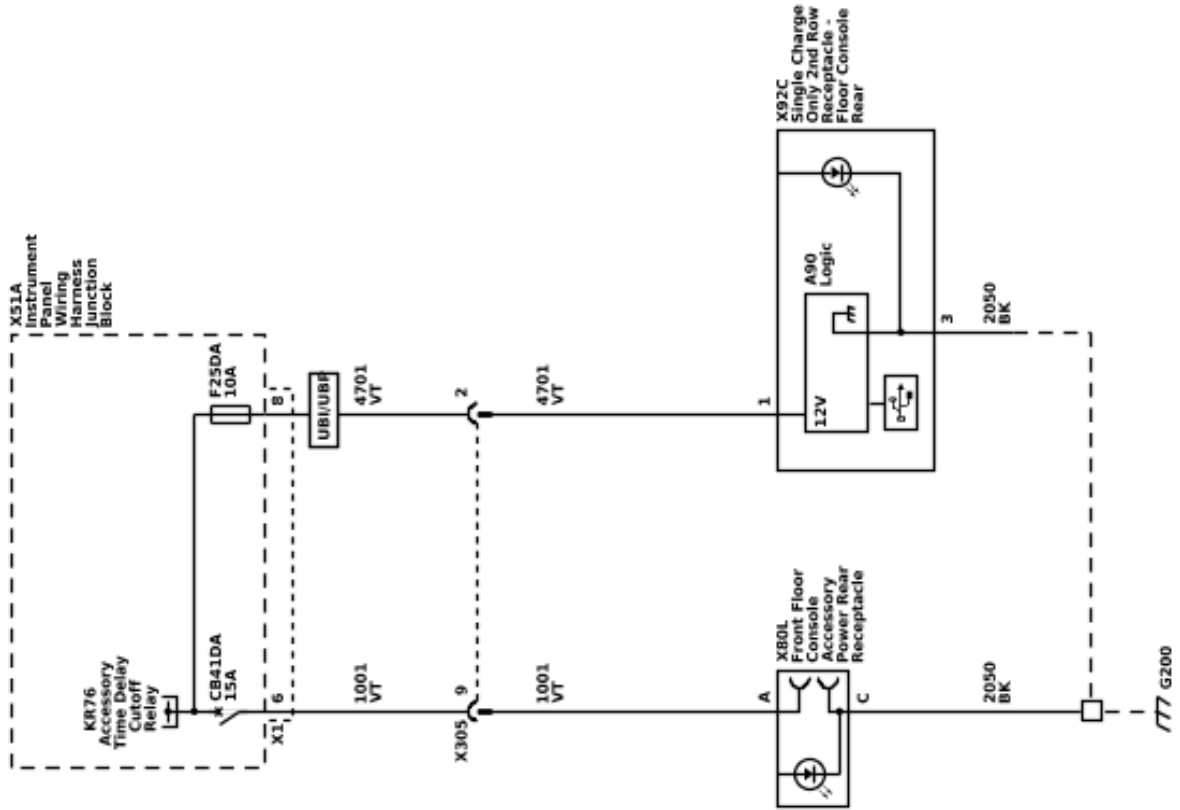


Cigar Lighter/Power Outlet Schematics (Inverter Module Power, Ground, and Serial Data (KI6/ KI7 / KCA / KC9))

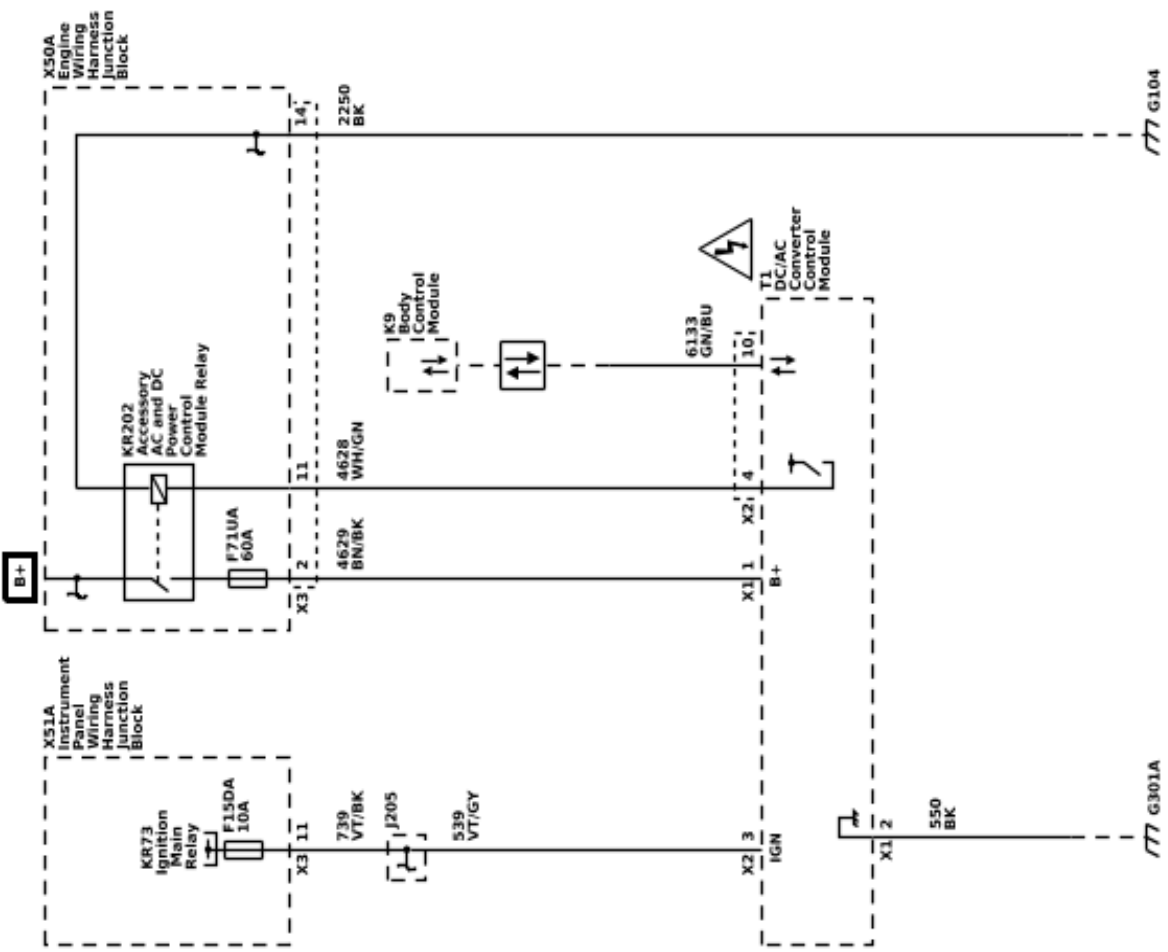


6332017

Cigar Lighter/Power Outlet Schematics (110V AC Accessory Power Receptacle - Front Floor Console Rear Receptacle (KI6 / KC9))

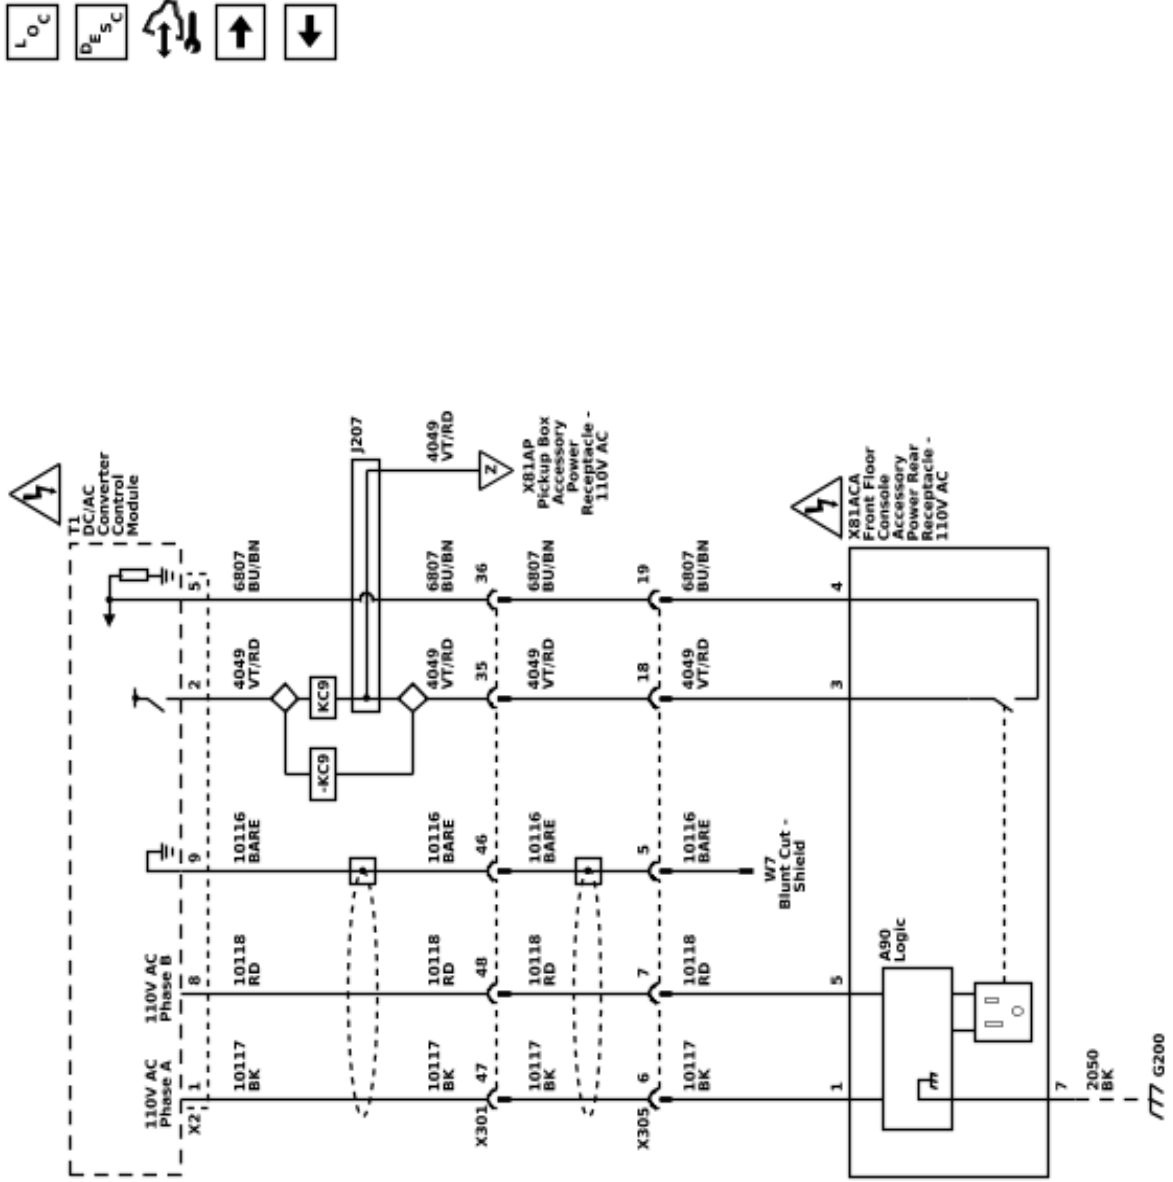




Cigar Lighter/Power Outlet Schematics (220V AC Accessory Power Receptacle - Front Floor Console Rear Receptacle (KI7 / KCA))

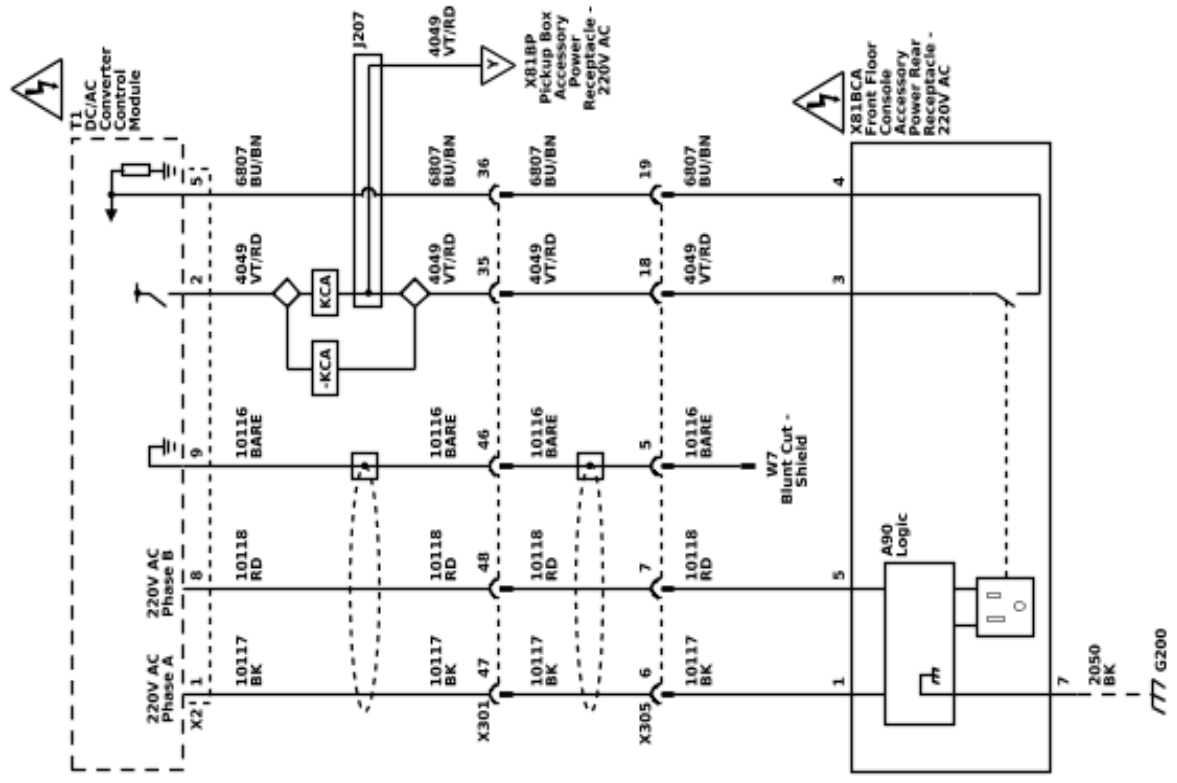


6332019

Cigar Lighter/Power Outlet Schematics (110V AC Accessory Power Receptacle - Pickup Box (KC9))

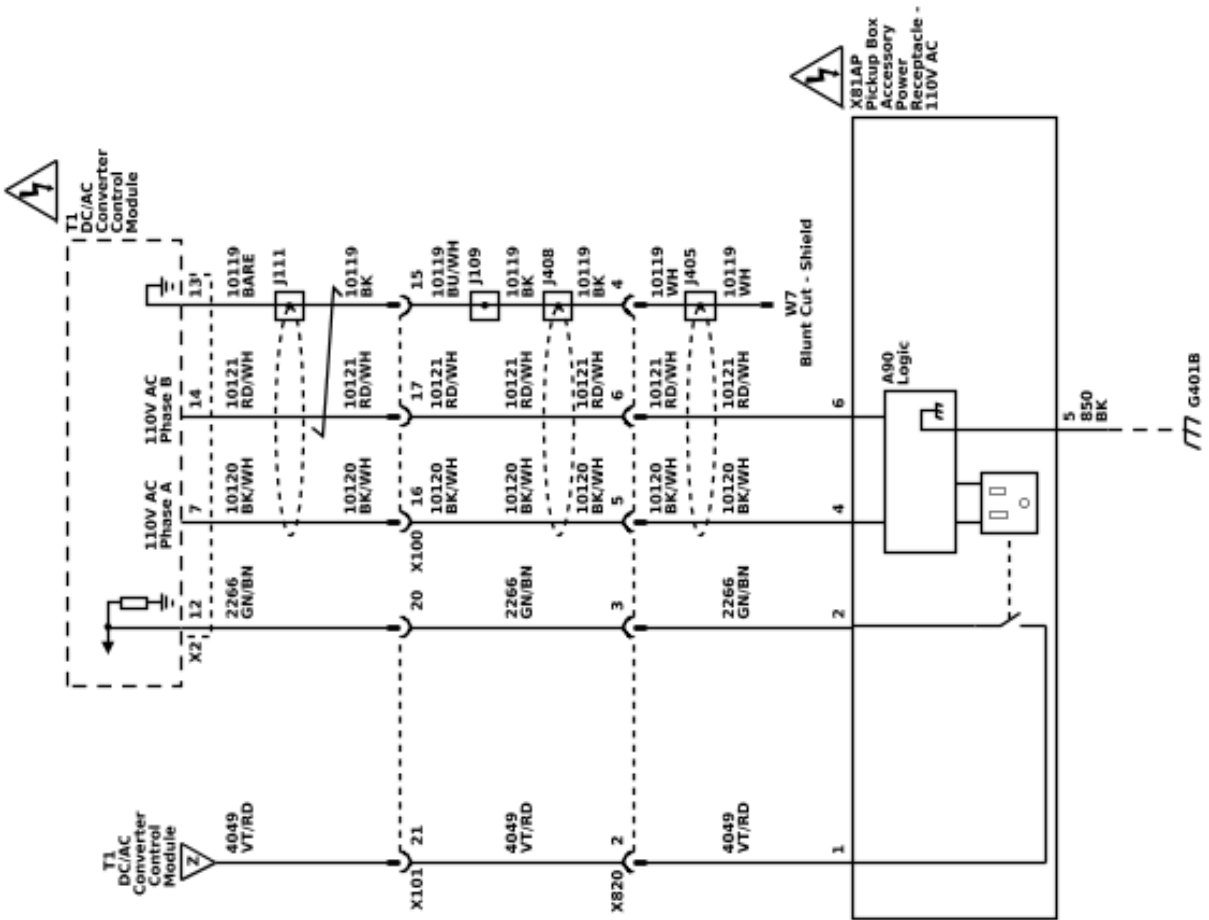


6332020

Cigar Lighter/Power Outlet Schematics (220V AC Accessory Power Receptacle - Pickup Box (KCA))

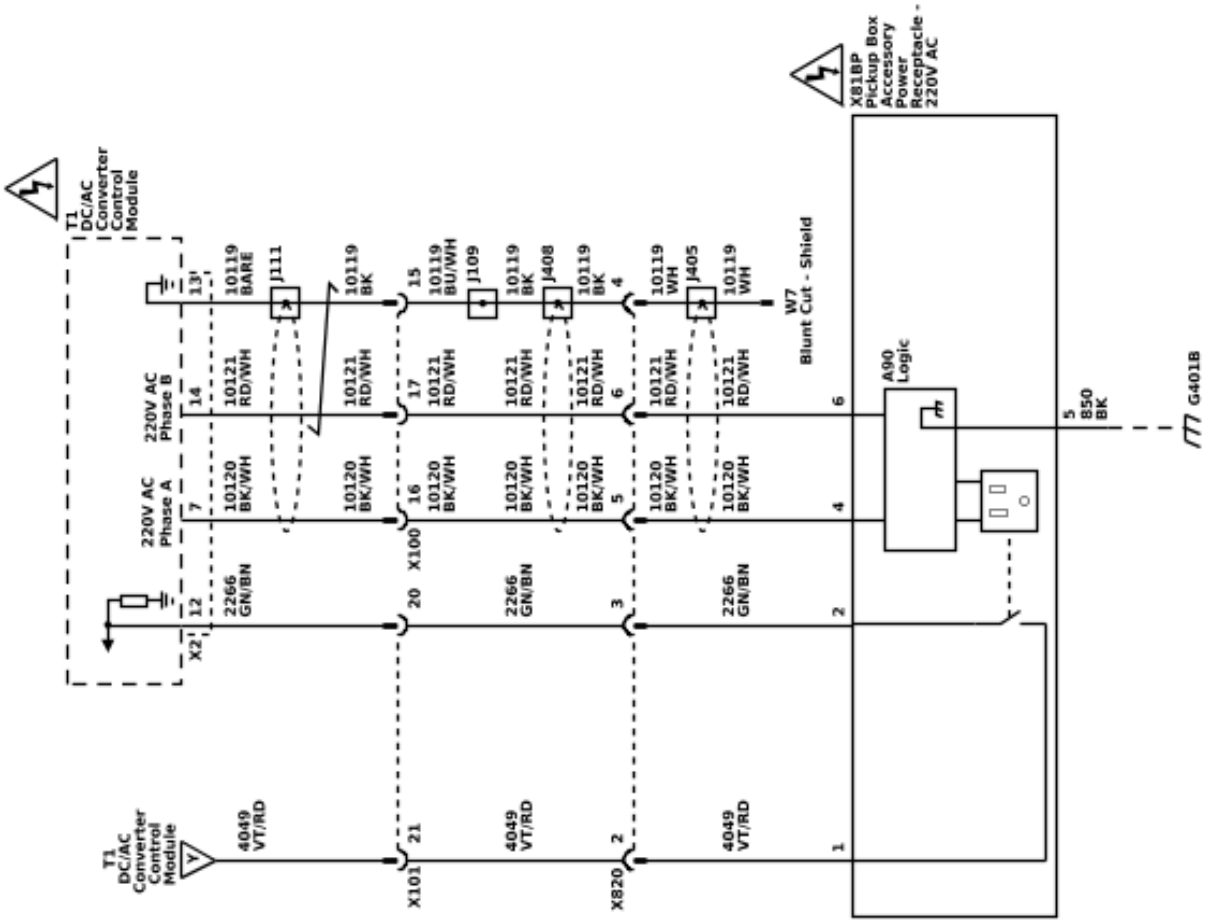

Cigar Lighter/Power Outlet Schematics (Wireless Charging (K4C))

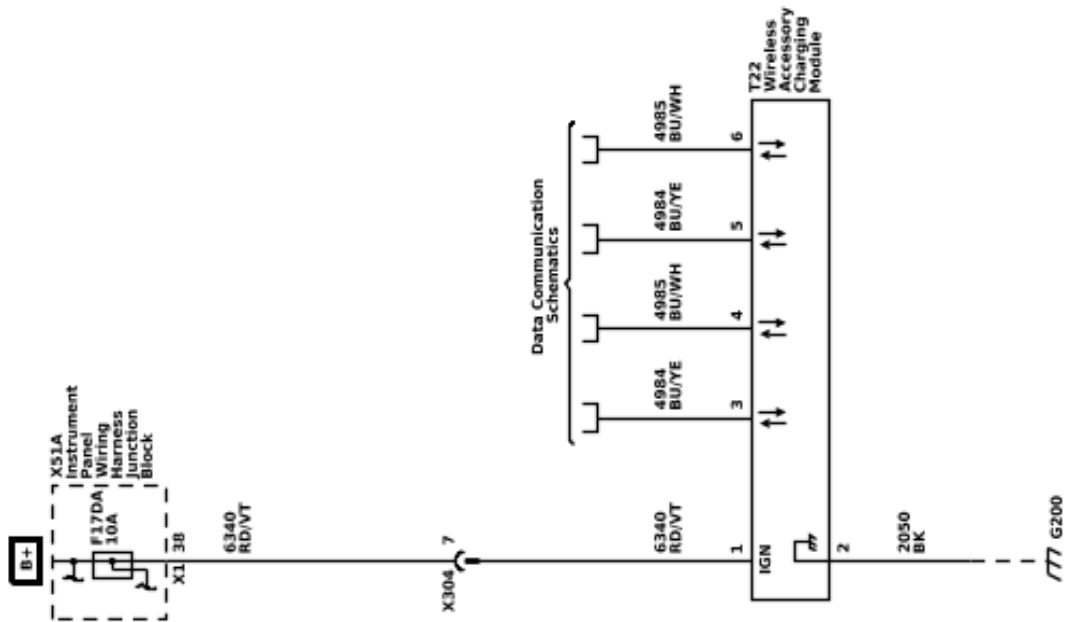

## Description and Operation

### Mobile Device Wireless Charger

### Description and Operation

### Mobile Device Wireless Charging System

The Mobile Device Wireless Charging System (WCS) is an system for wirelessly charging mobile devices. It is capable of charging the batteries of compatible mobile devices. A compatible device is one that is compliant with Power Matters Alliance (PMA), Wireless Power Consortium (WPC) Standard, or Alliance for Wireless Power (A4WP), meaning that it is equipped with a PMA, WPC, or A4WP wireless charge “receiver” that will work with the charge “transmitter” installed in the vehicle. The devices may utilize built-in charging circuitry or an adapter (external plug-in device which contains the charging circuitry). To check for phone or other device compatibility, refer to GM Total Connect.

**Warning: Remove all objects from the charging pad before charging your mobile device. Objects, such as coins, keys, rings, paper clips, or cards, between the phone and charging pad will become very hot. On the rare occasion that the charging system does not detect an object, and the object gets wedged between the phone and charger, remove the phone and allow the object to cool before removing it from the charging pad, to prevent burns.**

### Charging

To charge a device, place it on the charging surface in the vehicle. There is a charging coil located in the center of the charging surface. The device has a charging coil typically near the center of the device. These coils must be lined up in order for charging to proceed. When the interruptible retained accessory power (IRAP) relay is closed (this is true typically when vehicle ignition is in Run or Accessory position), the WCS will detect the device, establish communications with the device to confirm it is a compatible device, and then deliver charging power to the device via wireless interface. The WCS will be able to deliver 5W to 15W of power as requested by the compatible device. It shall only enter a charging state if communication is established and a compatible device is identified.

The WCS shall not enter a charging state if there is no communication established with a compatible device. Due to differences in objects, a foreign object detection protocol is employed to detect a non-compliant device and hold power transfer initiation until the non-compliant object has been removed and a compliant object has been detected. The charger monitors its internal temperature and will shut down if the charger temperature exceeds 185F (85C).

### Indicator

The body control module will detect the device battery is charging and send a serial data message on the GMLAN bus to the radio display. The radio display will indicate a device is currently charging by displaying a lightning bolt over the phone icon. When the indicator is

toggleing on and off this indicates a thermal limit has been reached and the device will not charge. For more information refer to the owners manual.

### Cooling

The wireless charger is kept cool using the HVAC system. There is a dedicated HVAC duct that connects to the Wireless Charging Module bracket (which holds the module and the mat).

## Power Outlets Description and Operation

### 12 Volt Power Outlet Receptacle


### Description and Operation

The 12 V accessory power receptacles are supplied with power by the accessory relay.

The vehicle is fitted with a cigarette lighter and/or with a 12 V accessory power receptacle. The cigarette lighter and accessory power outlets are controlled by an ignition operated relay. The accessory power receptacle and cigarette lighter are operational when the ignition is turned to either the On or the Accessories positions. To operate the cigarette lighter, press in the lighter knob. When the element is hot, the lighter automatically pops out and is ready for use.

## 110 Volt Power Outlet Receptacle System Description

### Power Outlets Block Diagram

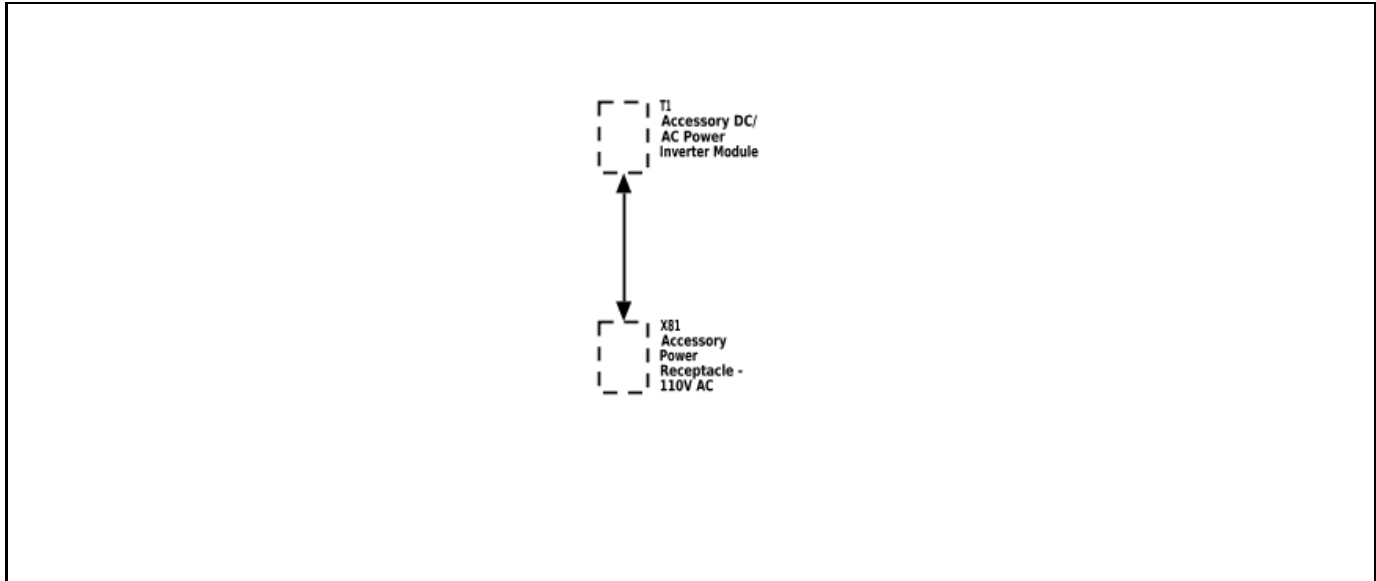

3403851

The alternating current (AC) accessory power outlet system consists of the accessory DC/AC power inverter module and the accessory power receptacle – 110 V AC. The accessory DC/AC power inverter module converts 12 V direct current (DC) battery power to 110 V at 60 Hertz (Hz) AC power to operate AC powered devices. The accessory DC/AC power inverter module provides up to 150 watts of power. The accessory power receptacle – 110 V AC provides the usual connection for AC powered devices.

### 110 Volt Power Outlet Receptacle System Operation

The accessory DC/AC power inverter module receives fuse protected battery voltage and is connected to the 12 V electrical system ground. The accessory power receptacle – 110 V AC has an internal switch, that detects when an AC powered device is plugged into the outlet. When the ignition is ON, and an AC powered device is plugged into the accessory power receptacle – 110 V AC, the normally open switch in the accessory power receptacle – 110 V AC, closes. When the accessory DC/AC power inverter module detects the voltage from the accessory power receptacle – 110 V AC switch, the inverter module begins to supply 110 V AC to the accessory power receptacle – 110 V AC after a 1.5 s delay. The accessory AC power system is protected against circuit overload and circuit shorts to ground.

### 110 Volt Power Outlet Receptacle Isolation Fault Protection

The accessory DC/AC power inverter module contains a ground fault circuit interrupter (GFCI). GFCI monitors the 110 V circuit for a short to vehicle chassis ground. If a 110 V AC short to ground is detected, the accessory DC/AC power inverter module will turn OFF. The

module remains OFF, until the AC powered device is unplugged from the outlet, and then plugged into the outlet after a 3 s delay.

### 110 Volt Power Outlet Receptacle Overload Shutdown


The accessory DC/AC power inverter module will turn OFF if the current in the 110 V circuit is greater than 3.8 A for 1 s, or 2.5 A for 10 s. The module will turn ON again, when the AC powered device is unplugged from the outlet, and then plugged into the outlet after a 3 s delay.

### 110 Volt Power Outlet Receptacle Internal Shutdown

The accessory DC/AC power inverter module will turn OFF if the B+ supply voltage is greater than 16.5 V or less than 11 V. The module will also turn OFF if the device temperature is greater than 85°C (185°F). The module will turn ON again, after the shutdown condition is corrected, and the AC powered device is unplugged from the outlet, and then plugged into the outlet.

## 230 Volt Power Outlet Receptacle System Description

### Power Outlets Block Diagram

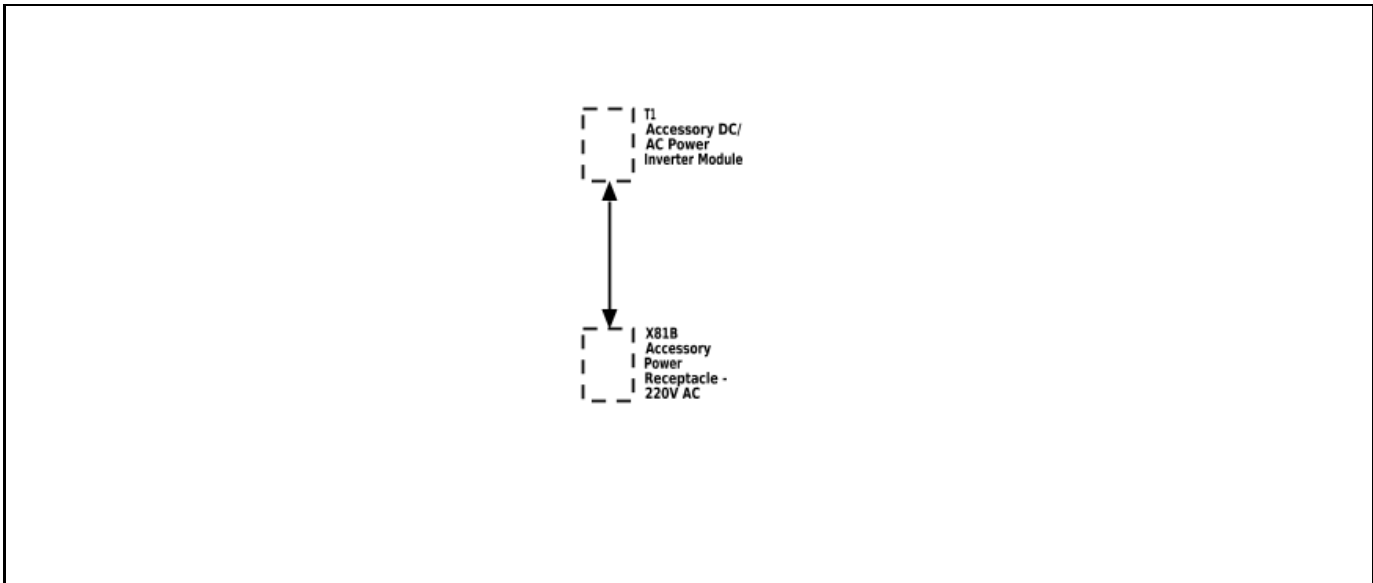

3403853

The alternating current (AC) accessory power outlet system consists of the accessory DC/AC power inverter module and the accessory power receptacle – 220V AC. The accessory DC/AC power inverter module converts 12 V direct current (DC) battery power to 220–230 V at 50 Hertz (Hz) AC power to operate AC powered devices. The accessory DC/AC power inverter module provides up to 150 watts of power. The accessory power receptacle – 220V AC provides the usual connection for AC powered devices.

### 230 Volt Power Outlet Receptacle System Operation

The accessory DC/AC power inverter module receives fuse protected battery voltage and is connected to the 12 V electrical system ground. The accessory power receptacle – 220V AC has an internal switch, that detects when an AC powered device is plugged into the outlet. When the ignition is ON, and an AC powered device is plugged into the accessory power receptacle – 220V AC, the normally open switch in the accessory power receptacle – 220V AC, closes. When the accessory DC/AC power inverter module detects the voltage from the accessory power receptacle – 220V AC switch, the inverter module begins to supply 220–230 V AC to the accessory power receptacle – 220V AC after a 1.5 second delay. The accessory AC power system is protected against circuit overload and circuit shorts to ground.

### 230 Volt Power Outlet Receptacle Isolation Fault Protection

The accessory DC/AC power inverter module contains a ground fault circuit interrupter (GFCI). GFCI monitors the 230 V circuit for a short to vehicle chassis ground. If a 230 V AC short to ground is detected, the accessory DC/AC power inverter module will turn OFF. The

module remains OFF, until the AC powered device is unplugged from the outlet, and then plugged into the outlet after a 3 s delay.

### 230 Volt Power Outlet Receptacle Overload Shutdown

The accessory AC/DC power control module will turn OFF if the current in the 230 V circuit is greater than 3.8 A for 1 second, or 2.5 A for 10 seconds. The module will turn ON again, when the AC powered device is unplugged from the outlet, and then plugged into the outlet after a 3 second delay.

### 230 Volt Power Outlet Receptacle Internal Shutdown

The accessory DC/AC power inverter module will turn OFF if the B+ supply voltage is greater than 16.5 V or less than 11 V. The module will also turn OFF if the device temperature is greater than 85°C (185°F). The module will turn ON again, after the shutdown condition is corrected, and the AC powered device is unplugged from the accessory power receptacle – 220V AC, and then plugged into the accessory power receptacle – 220V AC.

### USB Receptacle Description and Operation (USS)

The vehicle is fitted with USB charge port receptacles at the rear of the floor console. These USB receptacles are for charging devices only. The USB receptacles are controlled by an ignition operated relay and are operational when the ignition is turned to either the On or the Accessories positions.

# Wiring Systems and Power Management

## Description and Operation

### Power Mode Description and Operation

#### Serial Data Power Mode Master

The K9 Body Control Module (BCM) is the Power Mode Master and the K56 Serial Data Gateway Module is the Back-Up Power Mode Master.

The Power Mode Master uses various vehicle status conditions and inputs to determine the desired vehicle power mode state. The Power Mode (Off, Accessory, Run, Propulsion, Start) is communicated to other modules via Serial Data and other electrical signals in order to provide the proper feature operation for the appropriate power mode.

If the Power Mode Master cannot control or determine the correct Power Mode, the Backup Power Mode Master will take over and become the vehicle Power Mode Master and place the vehicle into the proper

Power Mode by communicating with other modules via Serial Data to provide the proper electrical signals to provide the proper feature operation for the appropriate power mode.

#### S38 On/Off Vehicle Switch

There are 5 power modes to convey driver intent:

- OFF – A low power mode that allows maximum stand time until next start
- ACCY – Allows use of certain features that require operator authorization (Power windows for example). Propulsion is specifically disallowed.
- RUN – All features enabled except propulsion (motive force)
- PROPULSION – All features enabled
- START - This will transition to PROPULSION, including turning off non-essential loads to provide additional power for starting.



**Power Mode States**

Customer Action	Expected Vehicle Power Mode	S38 Vehicle On/Off Switch BCM Scan Tool Parameter	S38 Vehicle On/Off Switch Voltages
Vehicle OFF, S38 On/Off Vehicle Switch not pressed, Transmitter in Range	Vehicle Off Mode	Inactive	1.4 – 3.0 V (Switch Pressed) 3.35 – 4.26 V (Switch Released) 4.5 — 5.0 V (Switch Disconnected)
Vehicle OFF, S38 On/Off Vehicle Switch not pressed, Transmitter out of Range/ Away from vehicle	Vehicle Off Mode	Inactive	
Vehicle in any Power Mode EXCEPT OFF, then Press the S38 On/Off Vehicle Switch Foot On or Off the Brake Pedal, Transmitter in Vehicle	Vehicle Off Mode	Active (pushed) / Inactive (not pushed)	
Vehicle in Propulsion Mode, momentarily Press and Release the S38 On/Off Vehicle Switch Foot On or Off the Brake Pedal, Transmitter out of Range/Away from vehicle	Run Mode, With DIC Message No Remote Detected Press Brake to Restart	Active (pushed) Inactive (not pushed)	
Vehicle Off Power Mode, then Press the S38 On/Off Vehicle Switch for less than 5 s with foot Off the Brake Pedal; Transmitter in Vehicle	Vehicle Accessory Mode	Active (pushed) / Inactive (not pushed)	
Vehicle Off Power Mode, then S38 On/Off Vehicle Switch with foot On the Brake Pedal; Transmitter in Vehicle	Vehicle Start/Propulsion Mode (vehicle cranks then engine running (for Internal Combustion Engine) or Propulsion System Active for EV) power mode timeout is enabled	Active (pushed) / Inactive (not pushed)	
Vehicle Off Power Mode, then S38 On/Off Vehicle Switch with foot On the Brake Pedal for 5 to 10 s; Transmitter in Vehicle	Vehicle Start/Propulsion Mode (vehicle cranks then Propulsion Mode Active) power mode timeout will be disabled.	Active (pushed) / Inactive (not pushed)	
Vehicle OFF Power Mode, then Press and Hold the S38 On/Off Vehicle Switch for 5 s with foot Off the Brake Pedal; Transmitter in Vehicle	Vehicle Run Mode (Ignition ON without the Propulsion system Active)	Active (pushed) / Inactive (not pushed)	
Vehicle OFF Power Mode, then Press and Hold the S38 On/Off Vehicle Switch for 5 s with foot Off the Brake Pedal; Transmitter in Vehicle	Vehicle Start/Propulsion Mode (vehicle cranks then Propulsion Active) power mode timeout is disabled	Active (pushed) / Inactive (not pushed)	
Vehicle Propulsion Mode with vehicle speed detected above 4 km/h (2.5 MPH) press and hold S38 On/Off Vehicle Switch for 2 s or press and release it 2 times within 5 S.	Vehicle will transition from Propulsion Mode to Run Mode (Ignition On Propulsion system Inactive).	Active (pushed) / Inactive (not pushed)	
<b>NOTE: If the transmitter is not moved for more than 1 hour it will become inactive.</b>			

### Service Mode

Service Mode is the Run Power Mode with power mode timeout disabled. This can only be done with the Service Tool.

### Automatic Power Mode Timeouts

**Note:** If the Transmitter/Fob remains stationary and is not moved for one hour, it will go to sleep and may create a fob not in range condition.

This system is designed to prevent batteries from going dead in the event the ignition is left on while unattended, it is also designed to shut the vehicle off if left running unattended. After a Power Mode timeout, the Power Mode Master is responsible for shutting down the or transitioning the vehicle into the low parasitic sleep state "OFF" Power Mode. This Power Mode timeout strategy uses Vehicle Speed, Vehicle Power Mode, Parked Status and other Vehicle Conditions to make the timeout determination.

### Accessory Power Mode

The Accessory Power Mode will timeout after approximately 5 minutes. The timer will Start once the system has determined it is in the Accessory Power Mode status. After the timer expires the Power Mode will change to the OFF Power Mode.

### Run Power Mode

if the conditions listed below are met the Run Power Mode will timeout after approximately 40 minutes if the transmitter is in range, or 20 minutes if the transmitter is out of range. The timer will Start once the system has determined it is in the Run Power Mode status and all of the following conditions are met. After the timer expires the Power mode will change to OFF Power Mode.

If any of the following conditions are not met and/or if there is a change in the Brake Pedal or Clutch Pedal status, the Run Mode timeout timer will be disabled, and the timer will restart after all of the conditions are met again.

- Vehicle in Run Mode (Vehicle powered up S38 On/Off Vehicle Switch Green indicator on Propulsion Mode Inactive)
- Propulsion is Inactive
- Vehicle in Park.
- Vehicle Speed is 0 KM/MPH.
- Fast Idle is inactive (If Equipped).
- PTO Remote Start Status is inactive (If Equipped).
- Particulate Filter Cleaning Status is Inactive (if Equipped)
- S38 Vehicle On/Off switch was held for more than 5 to 10 seconds while starting the vehicle the actual time may vary based on model and/or year.

### Propulsion Power Mode

If the following conditions listed below are met the Propulsion Power Mode will timeout after approximately 30 minutes if the transmitter is in range, or 15 minutes if the transmitter is out of range. The timer will Start once the system has determined it is in the Propulsion Power

Mode status and all of the following conditions are met. After the timer expires the Power mode will change to the OFF Power Mode.

The Propulsion Power Mode timeout can be disabled with the vehicle in Off Power Mode, apply and continue to hold the brake pedal, then press and hold the S38 Vehicle On/Off switch for 5 to 10 seconds (the actual time may vary based on model and/or year). A DIC message will be displayed when Power Mode timeout is disabled.

If any of the following conditions are not met and/or if there is a change in the Brake Pedal or Clutch Pedal status, the Propulsion Mode timeout timer will be disabled, and the timer will restart after all of the conditions are met again.

- Vehicle in Propulsion Mode (Propulsion Active).
- Vehicle in Park.
- Vehicle Speed is 0 KM/MPH.
- Fast Idle is Inactive (If Equipped).
- PTO Remote Start Status is inactive (If Equipped).
- Particulate Filter Cleaning Status is Inactive (if Equipped)
- S38 Vehicle On/Off switch was held for more than 5 to 10 seconds while starting the vehicle the actual time may vary based on model and/or year.

### Relay Controlled Power Mode

The BCM uses discrete push button switch inputs, transmitter in range status, current power mode state, and brake pedal position state to distinguish the correct power mode (Off, Accessory Mode, Run Mode, Start/Propulsion Mode). The BCM, after determining the desired power mode, will activate the appropriate relays for that power mode.

The retained accessory power relay remains on for a timed period after the Ignition Mode is OFF. Refer to [Retained Accessory Power Description and Operation on page 6-556](#) for more information on the retained accessory power function.

### Push Button Start

The ignition mode switch has 2 LEDs that indicate the vehicle power mode Amber for Accessory Mode and Green for Run or Start/Propulsion Modes. When the vehicle is in the OFF mode, both LED's will be OFF. Momentarily pressing the S38 On/Off Vehicle Switch button once, brake pedal not applied, the vehicle will enter into the Accessory Mode and the Amber LED will illuminate. The Accessory Mode will timeout after approximately 5 min to help reduce battery drain. With the ignition OFF, brake pedal not pressed, then pressing and holding the S38 On/Off Vehicle Switch for 5 s will place the vehicle in Run Mode (Ignition ON without the Propulsion Mode Active). The vehicle will stay powered up for approximately 40 minutes if the transmitter is in range, or 20 minutes if the transmitter is out of range, and the Green LED will illuminate.

With the ignition OFF brake pedal pressed, then press and release the S38 On/Off Vehicle Switch, the vehicle will enter Start/Propulsion Mode and the Green LED will illuminate, the engine will crank and the engine will be running for Internal combustion engines (ICE), or Propulsion mode will go Active on Electric Vehicles (EV). The Propulsion Mode will timeout after

approximately 30 minutes if the transmitter is in range, or 15 minutes if the transmitter is out of range. The timer will stop when the vehicle is shifted out of PARK or the brake pedal is pressed and released, the timer will reset after the vehicle is placed back in PARK with the Propulsion Mode Active.

Both LED's have the voltage supplied from the body control module (BCM). The ignition mode switch sends the ignition mode switch status to the passive entry passive start module (PEPS) and to the BCM. The PEPS module sends a redundant signal to the BCM with the ignition mode switch status.

## Transport Mode

Transport Mode is designed to reduce the parasitic load of some modules during shipping and/or during vehicle storage. Some features may be disabled or have reduced functionality while Transport Mode is ON. Transport Mode is enabled and disabled by either of the following methods:

- With the Scan Tool Diagnostics > Body Control Module > Control Functions > Power Mode.
- Turning the hazard flashers ON, apply and hold the brake pedal, then press and hold the ignition mode switch for greater than 15 s. For vehicles equipped with a DIC a message Transport Mode On when it is enabled and Transport Mode Off when it is disabled will be displayed for a predetermined amount of time. For vehicles equipped without a DIC, the battery indicator light will constantly flash on the Instrument Cluster when Transport Mode is enabled.

## Battery Saver Mode

There are 7 different Battery Saver Modes. Battery Saver Modes 1 to 3 occur in Accessory and Run Power Modes (vehicle on propulsion system Inactive) if the battery voltage drops below approximately 11.5 V. Battery Saver Modes 4 to 7 occur in the Off Power Mode only. Battery Saver Modes 4 to 7 may set DTC's.

- Battery Saver Mode 1: DIC message "Battery Low, Start Vehicle", 4 chimes
- Battery Saver Mode 2: DIC message "Battery Low, Start Vehicle", Load Shed Level 3 is activated
- Battery Saver Mode 3: DIC message "Battery Low, Start Vehicle", Radio/Infotainment shut off, Load Shed Level 3 active
- Battery Saver Mode 4: Battery Saver Mode Ignition Off – Parasitic Current draw of 100 mA or greater
- Battery Saver Mode 5: Battery Saver Mode Ignition Off – Parasitic Current draw of 1 A or greater
- Battery Saver Mode 6: Battery Saver Mode Ignition Off – Battery Voltage less than 12.0 V
- Battery Saver Mode 7: Battery Saver Mode Ignition Off – Battery Voltage less than 11.6 V

## Load Shedding

Prior to Load shedding Idle Boost will occur, the idle speeds will be increased by 25 to 300 RPM to help maintain a normal battery voltage. Idle Boost may be noticeable to the driver. If the battery voltage continues to drop below a normal state then load shedding will go

active and it will start to reduce electric loads for components that will not impact the safe operation of vehicle. At load shed levels 2 and 3 a DIC message will be displayed "Reducing Features To Save Battery". When load shedding is active the customer may begin to notice features starting to have reduced functions or may become inoperative. Examples of affected loads are radio, HVAC blower(s) front and rear (if equipped), heated/ventilated seats, heated mirrors, rear defogger and other devices with heavy electrical draws. Idle Boost and load shed levels can be observed with the scan tool.

### Idle Boost 1

Idle is increased by 25-100 RPM and generally is not noticeable to most drivers.

### Idle Boost 2

Idle is increased by 50–200 RPM and generally is not noticeable to most drivers.

### Idle Boost 3

Idle is increased by 100–300 RPM and may be noticeable to most drivers.

### Load Shed Level 1

Reduces load current by 25%.

### Load Shed Level 2

Reduces load current by 50%.

### Load Shed Level 3

Electric loads for components that will not impact the safe operation of vehicle will be turned Off.

## BCM Awake/Sleep States

The BCM is able to control or perform all of the BCM functions in the awake state. The BCM enters the sleep state when active control or normal monitoring of system functions has stopped and a time limit has passed. The BCM must detect certain wake-up inputs before entering the awake state. The BCM monitors for these inputs during the sleep state.

The BCM will enter the awake state if any of the following wake-up inputs are detected:

- Activity on the serial data line
- Detection of a battery reconnect
- Any door open signal
- Headlamps ON
- Ignition ON
- Park lamps ON
- Keyless entry or remote start message

The BCM will enter a sleep state when all of the following conditions exist:

- Ignition OFF, transmitter is out of range
- No activity exists on the serial data line.
- No outputs are commanded.
- No delay timers are actively counting.
- No wake-up inputs are present.

If all these conditions are met, the BCM will enter a low power or sleep condition.

## Retained Accessory Power Description and Operation

### Retained Accessory Power

The Retained Accessory Power (RAP) & Interruptible RAP (IRAP) Circuits are controlled by the K9 Body Control Module (BCM). The BCM is the Power Mode Master, it utilizes various Vehicle inputs to determine the Vehicle Power Mode and sends this information via Serial Data and providing associated electrical signals to the entire vehicle for proper feature operation.

The BCM monitors the vehicles power modes, and door ajar/open switch status to determine whether the retained accessory power should be initiated and remain active or be terminated. The RAP output is optional based on the vehicles option contents. When utilized, the RAP Output control can be used to control a RAP Relay, it may provide direct power, or a serial data message to vehicle devices/modules from the BCM.

### Retained Accessory Power Relay Coil Control Circuit (If Equipped)

The BCM keeps the device or relay (if equipped) energized during all power modes, except Off-Awake and Crank. The device(s) remain active for approximately 10 min after the Vehicle is placed into the OFF Power Mode, provided none of the doors are opened.

Retained accessory power will end when one of the following conditions are met:

- The BCM receives an input from any door ajar switch indicating the opening of the door after the OFF Power Mode is achieved.

**Note:** If the BCM receives a door open/ajar active signal when the vehicle is placed into the OFF Power Mode, the retained accessory power will not initiate.

- The BCM internal timer for the retained accessory power expires after approximately 10 min.

Systems powered by the retained accessory power control circuit during the retained accessory power mode are as follows:

**Note:** The vehicle may not be equipped with all components as listed below.

- 12 V Accessory Power Receptacle
- Cigarette Lighter Receptacle
- Window Switches
- Sunroof Control Module (If Equipped)
- Sunroof Switch (If Equipped)
- Mobile Device Wireless Charger Module
- Mobile Telephone Control Module (If Equipped)
- Traffic Data Receiver (If Equipped)
- Transmission Shift Lever Position Indicator (w/ floor mounted console gear shift)

### Serial Data Controlled Retained Accessory Power

Retained accessory power systems controlled by serial data are as follows:

### Radio

Radio retained accessory power activation/termination is the same as relay operation with one exception; the only door that will turn the radio off during retained accessory power is the driver door open/ajar switch. The USB Ports will function the same as the radio.

### Vehicle Communication Interface Module (VCIM) (Onstar®) (If Equipped)

VCIM RAP activation/termination is the same as radio operation with 1 exception; if there is an active call and the vehicle is placed in the OFF Power Mode, the VCIM will remain in RAP mode, and keep the radio in RAP mode until the call is terminated.

### Interruptible Retained Accessory Power

The Power Mode Master (PMM) Controls components as needed. If equipped with a RAP relay, the BCM controls the Retained Accessory Power with an exception, Interruptible Retained Accessory Power (IRAP) is deactivated during transmitter authentication. During Transmitter Authentication the PMM will deactivate components including IRAP to prevent Radio Frequency (RF) Interference (RFI) that may cause a "NO REMOTE DETECTED" message to be displayed on the drivers information center.

**Note:** If transmitter Authentication occurs while in Run or Propulsion Modes, it is normal for IRAP to be interrupted momentarily (i.e. items connected to auxiliary power ports or chargers may momentarily go off then come back on).

If a remote transmitter was not been previously detected, Transmitter Authentication can occur under any of the following conditions:

- The drivers side front door is opened.
- The drivers side rear door is opened.
- The S38 Vehicle On/Off Switch is pressed.

## Section 7

# Transmission


<b>Shift Lock Control</b> .....	<a href="#">7-3</a>
<b>Schematic and Routing Diagrams</b> .....	<a href="#">7-3</a>
Shift Lock Control Schematics .....	<a href="#">7-4</a>
<b>Description and Operation</b> .....	<a href="#">7-5</a>
Automatic Transmission Shift Lock Control	
Description and Operation .....	<a href="#">7-5</a>

**BLANK**

# Shift Lock Control

## Schematic and Routing Diagrams

Shift Lock Control Schematics (Shift Lock Control)

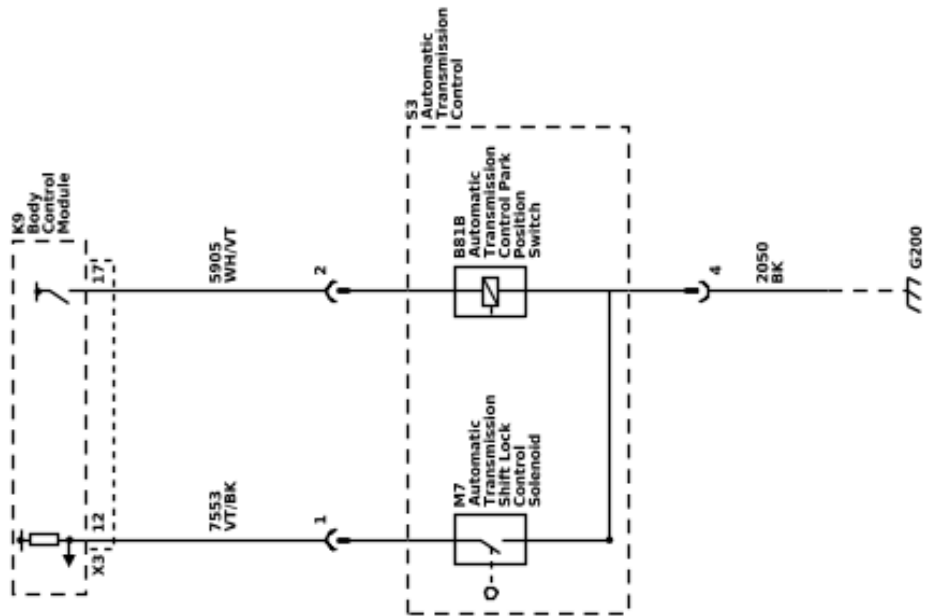



## Description and Operation

### Automatic Transmission Shift Lock Control Description and Operation

The Automatic Transmission Shift Lock Control System is a safety device that prevents an inadvertent shift out of PARK when the engine is running. The driver must press the brake pedal before moving the shift lever out of the PARK position. The system consists of the following components:

- The Automatic Transmission Shift Lock Solenoid (serviced as the Automatic Transmission Shift Lock Actuator)
- The Body Control Module (BCM)
- The Engine Control Module (ECM)

The BCM controls the voltage to the shift lock control solenoid through the shift lock control solenoid controlled voltage circuit. The following conditions must be met before the BCM will supply voltage to the shift lock control solenoid:

- The ignition is in the ON position.
- The ECM sends an input via GMLAN serial data to the BCM when the Transmission Control Module (TCM) indicates the transmission is in the PARK position.
- The BCM receives a brake applied input from the stop lamp switch.

Since the shift lock control solenoid is permanently grounded, the BCM supplies voltage to the automatic transmission shift lock control solenoid, releasing the mechanical lock on the shift lever as the solenoid energizes. The energized solenoid allows the driver to move the shift lever out of the PARK position. When the brake pedal is not applied, the BCM turns the control voltage output of the shift lock control solenoid OFF, de-energizing the shift lock control solenoid. When the transmission is in the PARK position, the de-energized shift lock control solenoid will prevent shifting as the lever is mechanically locked in the PARK position.

During remote start operation the BCM will de-energize the automatic transmission shift lock control circuit, locking the shift lever in the PARK position.

**BLANK**

<b>A</b>	<b>P</b>
Automatic Day-Night Mirror Description and Operation ..... <a href="#">2-42</a>	Power Door Locks Description and Operation ..... <a href="#">2-63</a>
Automatic HVAC Description and Operation ..... <a href="#">5-10</a>	Power Mode Description and Operation ..... <a href="#">6-552</a>
<b>B</b>	Power Outlets Description and Operation ..... <a href="#">6-549</a>
Battery Description and Operation ..... <a href="#">4-7</a>	Power Windows Description and Operation ..... <a href="#">2-10</a>
<b>C</b>	<b>R</b>
Charging System Description and Operation ..... <a href="#">4-7</a>	Rear Vision Camera Description and Operation ..... <a href="#">3-6</a>
Component Connector End Views ..... <a href="#">6-63</a>	Rear Window Defogger Description and Operation ..... <a href="#">2-10</a>
<b>D</b>	Rearview Camera Camera Full Display Mirror Description and Operation ..... <a href="#">3-6</a>
Data Link Communications Description and Operation ..... <a href="#">6-23</a>	Retained Accessory Power Description and Operation ..... <a href="#">6-555</a>
Door Ajar Indicator Description and Operation ..... <a href="#">2-62</a>	RPO Code List ..... <a href="#">1-7</a>
<b>E</b>	<b>S</b>
Electrical Center Identification Views ..... <a href="#">6-26</a>	Schematics
Electrical Power Management Description and Operation ..... <a href="#">4-10</a>	Body Control Systems ..... <a href="#">6-20</a>
Endgate Description and Operation ..... <a href="#">2-62</a>	Cigar Lighter/Power Outlet ..... <a href="#">6-542</a>
Exterior Lighting Systems Description and Operation ..... <a href="#">2-33</a>	Data Communications ..... <a href="#">6-4</a>
<b>H</b>	Defogger ..... <a href="#">2-9</a>
Harness Routing Views ..... <a href="#">6-512</a>	Door Lock/Indicator ..... <a href="#">2-56</a>
Heater and Air Conditioning System Description and Operation ..... <a href="#">5-3</a>	Exterior Lamps ..... <a href="#">2-19</a>
Hood Ajar Indicator Description and Operation ..... <a href="#">2-62</a>	Fog Lamps ..... <a href="#">2-18</a>
Horn System Description and Operation ..... <a href="#">2-13</a>	Headlamps/Daytime Running Lamps ..... <a href="#">2-15</a>
<b>I</b>	Hood Latch ..... <a href="#">2-61</a>
Inline Harness Connector End Views ..... <a href="#">6-413</a>	Horns ..... <a href="#">2-12</a>
Interior Lighting System Description and Operation ..... <a href="#">2-35</a>	HVAC Systems - Automatic ..... <a href="#">5-5</a>
<b>M</b>	HVAC Systems - Manual ..... <a href="#">5-15</a>
Manual HVAC Description and Operation ..... <a href="#">5-20</a>	Image Display Cameras ..... <a href="#">3-4</a>
Mobile Device Wireless Charger Description and Operation ..... <a href="#">6-549</a>	Inside Rearview Mirror ..... <a href="#">2-38</a>
<b>O</b>	Interior Lamps ..... <a href="#">2-28</a>
Outside Mirror Description and Operation ..... <a href="#">2-42</a>	Interior Lamps Dimming ..... <a href="#">2-30</a>
	Moveable Window ..... <a href="#">2-4</a>
	Outside Rearview Mirror ..... <a href="#">2-39</a>
	Shift Lock Control ..... <a href="#">7-4</a>
	Starting and Charging ..... <a href="#">4-4</a>
	Trailer Systems ..... <a href="#">2-45</a>
	Wiper and Washer Systems ..... <a href="#">2-65</a>
	Shift Lock Control Description and Operation ..... <a href="#">7-5</a>
	Starting System Description and Operation ..... <a href="#">4-12</a>
	Stop/Start System Description and Operation ..... <a href="#">4-13</a>
	Surround Vision Camera Description and Operation ..... <a href="#">3-6, 3-7</a>

**T**

Trailing Description and Operation ..... [2-49](#)  
Trailing Systems Schematics ..... [2-45](#)  
Training ..... [1-3](#)

**V**

Vehicle Certification, Tire Placard, and Anti-Theft  
Label ..... [1-5](#)  
Vehicle, Engine and Transmission ID and VIN  
Location, Derivative and Usage ..... [1-4](#)

**W**

Wiper/Washer  
System Description and Operation ..... [2-68](#)