


General Motors Upfitter Integration

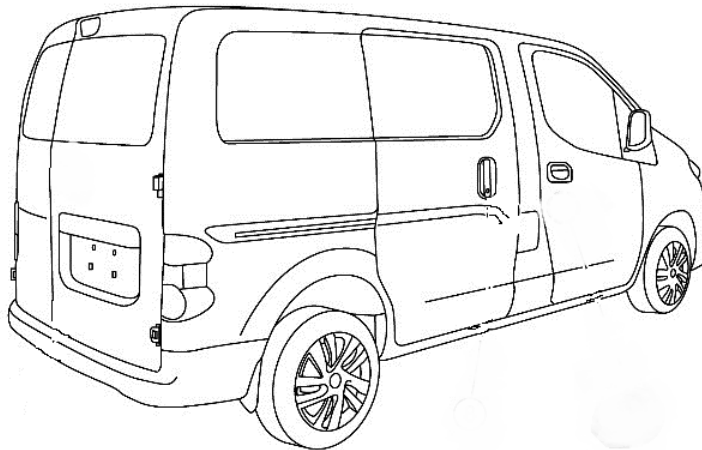

BODY BUILDER MANUAL

FOR

2015-2018 CHEVROLET CITY

EXPRESS

ELECTRICAL SECTION

Note to User:

As part of our mission to provide an up-to-date website that includes detailed Body Builder Manuals, Technical Bulletins, and Best Practice Manuals, we are now using sectional excerpts directly from the General Motors Service Information publications for our Electrical Body Builder Manuals.

You will note that the section numbers are non-sequential as we have provided only those that are believed to be the most pertinent to the Upfitter community and best suited to their needs.*

This new usage of the Service Information provides the opportunity for us to remain consistent with the changes that take place throughout the model year and to provide you updated information in a more timely fashion.

**** If you would like to have access to all of the electrical Service Information, please apply for a subscription from ACDelco at http://acdelcotechconnect.com/html/tss_tech_esi.jsp***

Table of Contents

General Information	1-1	HVAC	5-1
General Information	1-3	Heating, Ventilation, and Air Conditioning	5-3
Body Systems	2-1	HVAC - Manual	5-5
Fixed and Moveable Windows	2-3	Power and Signal Distribution	6-1
Horns and Pedestrian Alerts	2-7	Data Communications	6-3
Lighting	2-9	Power Outlets	6-13
Mirrors	2-26	Wiring Systems and Power Management	6-16
Vehicle Access	2-29	Safety and Security	7-1
Wipers and Washers	2-34	Immobilizer	7-3
Driver Information and Entertainment	3-1	Remote Functions	7-6
Cellular, Entertainment, and Navigation	3-3	Seat Belts	7-9
Secondary and Configurable Customer Controls	3-15	Supplemental Restraints	7-11
Engine/Propulsion	4-1	Transmission	8-1
12 V Starting and Charging	4-3	Shift Lock Control	8-3
		INDEX	INDEX-1

BLANK

Section 1

General Information


General Information	1-3
Introduction	1-3
Vehicle, Engine and Transmission ID and VIN Location, Derivative and Usage	1-3
Vehicle Certification, Tire Placard, Anti-Theft, and Service Parts ID Label	1-4
RPO Code List	1-5

BLANK

General Information

Introduction

Vehicle, Engine and Transmission ID and VIN Location, Derivative and Usage

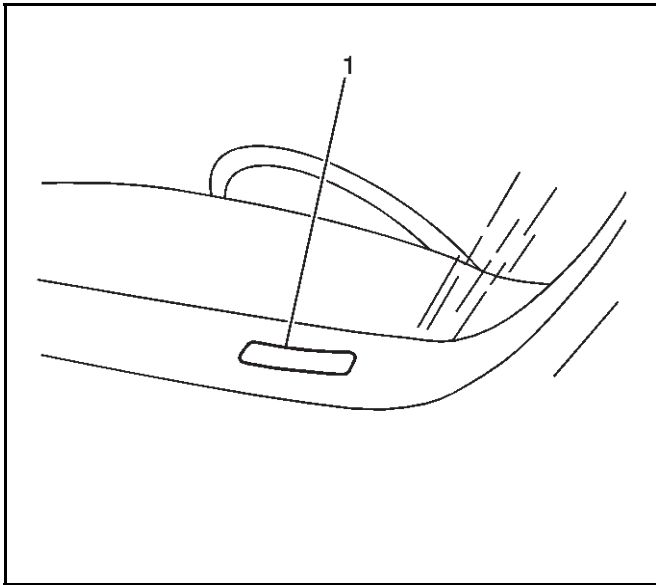

65474

The VIN plate is the legal identifier of the vehicle. The VIN plate (1) is located on the upper left corner of the instrument panel (I/P) and can be seen through the windshield from the outside of the vehicle:

Vehicle Identification Number (VIN) System

Position	Definition	Character	Description
1	WMI	3	3 = Built in Mexico
2		N	N = Manufactured by Nissan for General Motors
3		6	6 = Truck
4	Make/Engine	3	Chevrolet with L0A engine
5	Series	M	L0A - Engine Gas, 4 Cyl, 2.0L
6		0	
7	Trim Level/Vehicle Type	Y/Z	Y = LS, Cargo Van Z = LT, Cargo Van
8	GVWR/Body Style/Restraints	N	GVWR = Class C 4,000 - 5,000 Body Style = "60" Restraints = Active Manual Belts, Airbags - Driver & Passenger Front, Front Seat Side, Roof Side
9	Check Digit	X	(0 to 9 or X) The code for the check digit is determined by a mathematical computation.
10	Model Year	H	2017 Model Year
11	Plant Location	K	NME – Cuernavaca Mexico
12-17	Plant Sequence Number	—	Plant Sequence Number

Engine Identification Plate


Refer to *Engine Identification*

Transmission Identification Plate

Refer to *Transmission Identification Information*

1-4 General Information

Vehicle Certification, Tire Placard, Anti-Theft, and Service Parts ID Label

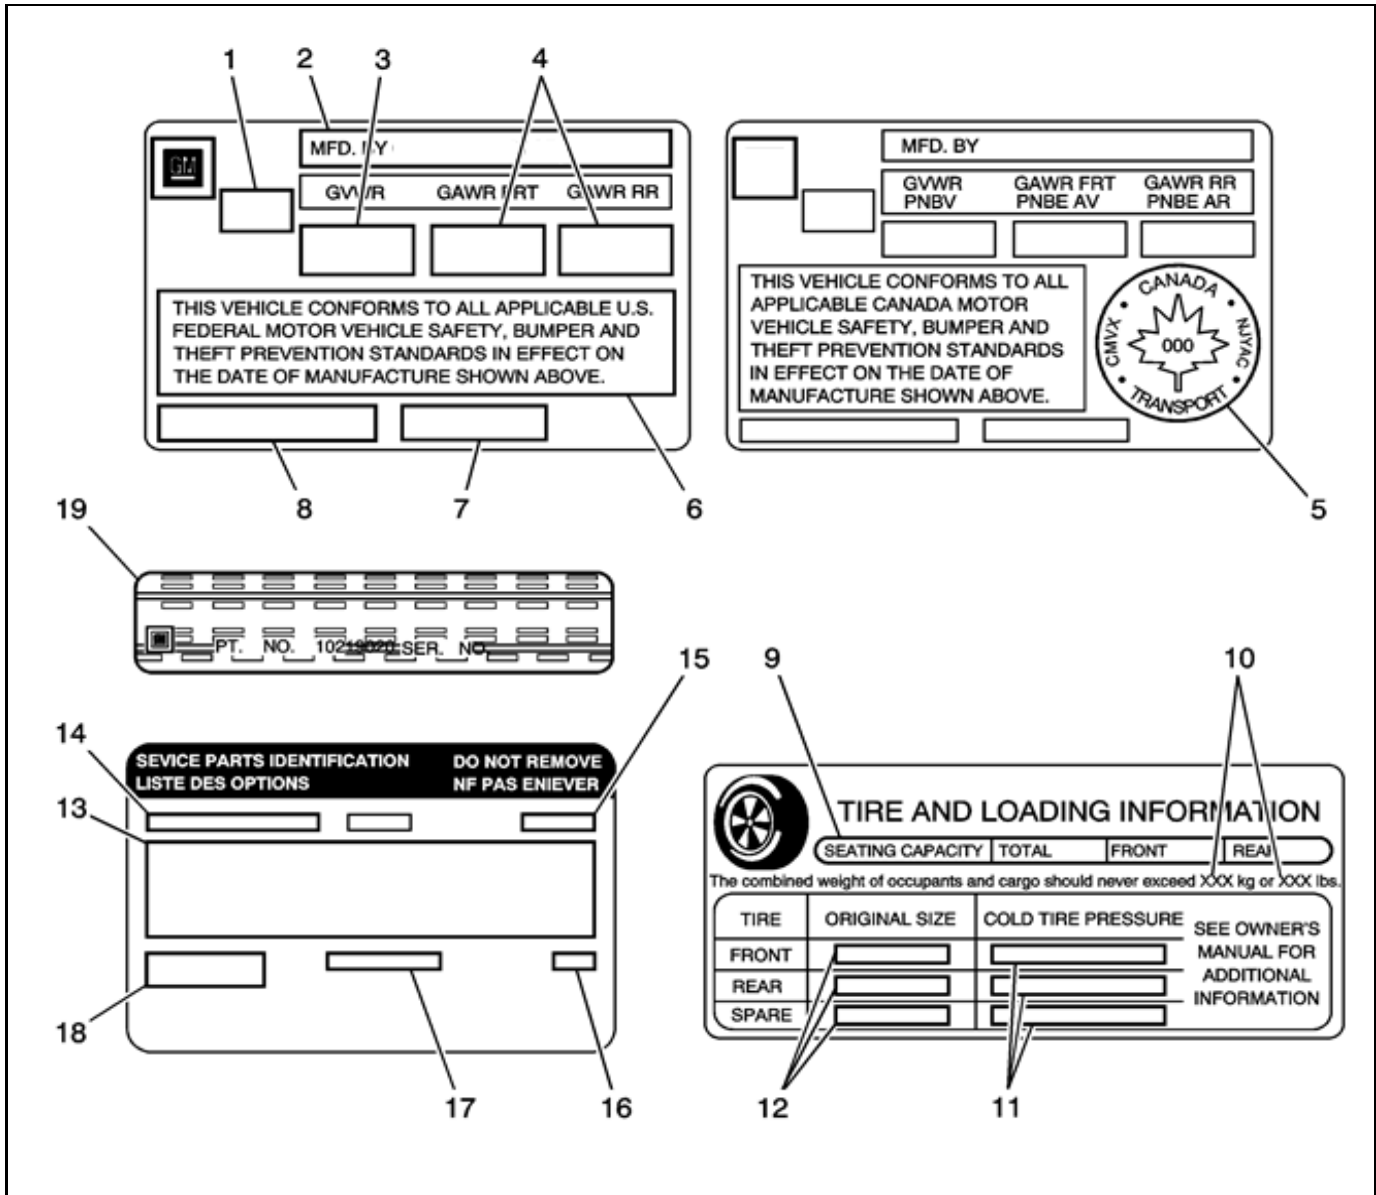

3945356

Vehicle Certification, Tire Placard, Anti-Theft, and Service Parts ID Label

Callout	Description
Vehicle Certification Label	
The vehicle certification label is located on the driver door and displays the following assessments:	
<ul style="list-style-type: none"> • Gross Vehicle Weight Rating (GVWR) • Gross Axle Weight Rating (GAWR), front and rear • The gross vehicle weight (GVW) is the weight of the vehicle and everything it carries. The GVW must not exceed the GVWR. Include the following items when figuring the GVW: <ul style="list-style-type: none"> – The base vehicle weight (factory weight) – The weight of all vehicle accessories – The weight of the driver and the passengers – The weight of the cargo 	
1	Date of Manufacture (Mo/Yr)
2	Name of Manufacturer
3	Gross Vehicle Weight Rating
4	Gross Axle Weight Rating (Front, Rear)

Vehicle Certification, Tire Placard, Anti-Theft, and Service Parts ID Label (cont'd)

Callout	Description
5	Canadian Safety Mark (w/RPO Z49)
6	Certification Statement
7	Vehicle Class Type (Pass Car, etc.)
8	Vehicle Identification Number
Tire Placard	
The tire placard label is located on the driver side B pillar and displays the following assessments:	
9	Specified Occupant Seating Positions
10	Maximum Vehicle Capacity Weight
11	Tire Pressure, Front, Rear, and Spare (Cold)
12	Original Equipment Tire Size
Service Parts ID Label	
The vehicle service parts identification label is located on the rear compartment floor. The label is use to help identify the vehicle original parts and options.	
13	Vehicle Option Content
14	Vehicle Identification Number
15	Engineering Model Number (Vehicle Division, Line and Body Style)
16	Interior Trim Level and Decor
17	Exterior (Paint Color) WA Number
18	Paint Technology
Anti-Theft Label	
19	<p>The Federal law requires that General Motors label certain body parts on this vehicle with the VIN. The purpose of the law is to reduce the number of motor vehicle thefts by helping in the tracing and recovery of parts from stolen vehicles.</p> <p>Labels are permanently affixed to an interior surface of the part. The label on the replacement part contains the letter R, the manufacturer's logo, and the DOT symbol.</p> <p>The anti-theft label must be covered before any painting, and rustproofing procedures, and uncovered after the procedures. Failure to follow the precautionary steps may result in liability for violation of the Federal Vehicle Theft Prevention Standard and possible suspicion to the owner that the part was stolen.</p>

RPO Code List

The following table provides the description of the RPO codes that are available on the vehicle. The vehicles RPO list is printed on the Service Parts Identification Label.

RPO Code List

RPO	Description
1LS	Package
1LT	Package, With LT Badge
2QU	Primary Color - Exterior, Black
5AZ	Accessory - Universal Safety Kit
9C6	GVW Rating - 4,751 LBS
A31	Windows - Power
ACO	Identification - Accessory Catalog Offering
AG6	Seat - 4-Way Passenger Seat (Slide and Recline)
AH4	Seat - 6-Way Driver Seat (Slide, Recline, and Height)

RPO Code List (cont'd)

RPO	Description
AK5	Restraint System - Seat, Inflatable, Driver & Passenger Front
AS5	Seat - Front Bucket Deluxe
ASF	Airbag - 1st Row Front Side and Curtain Airbag
ATG	Remote Keyless Entry, Standard Range
AU3	Door Locks - Power
AXK	Vehicle Type - Truck
B31	Vinyl Flooring - 1st Row
C49	Electronic Rear Defogger (60% Rear Door Only)
C60	Air Conditioning (Manual Control)
CWM	Technology Package
D31	Mirror Inside Rear View
D72	Outside Door Handles - Black
D75	Outside Door Handles - Body Color
DAP	Mirror - Outside Black - Manual

1-6 General Information

RPO Code List (cont'd)

RPO	Description
DE2	Mirror - Outside - Manual, Folding - Body Color
DE5	Mirror - Outside, Remote Control, Electric, Heated, Folding - Body Color
DR6	Mirror - Outside, Remote Control, Electric, Black
EF7	Country United States America (USA)
FE9	Federal Emission Certification
FHO	Vehicle fuel Gasoline E10
FX3	Ride and Handling Automatic - Electronic Controlled
GQX	White
GR1	Blue
GTP	Yellow
I17	Engineering Year 2017
J0U	Red
JE5	Antilock Brakes (ABS) Front and Rear Wheel
JFA	Parking Brake (Foot)
JHD	Control - Hill Descent Gear Hold
JL4	Control Active Brake
K0U	Silver
K34	Electronic Cruise Control
KG4	GENERATOR - 150 AMP
L0A	Engine - Gas 4 cyl, 2.0L, I4, City Express Only
MAH	MARKETING AREA-US, PUERTO RICO/USVI
MBC	MARKETING AREA-CANADA
MRA	Transmission - CVT - Front Wheel Drive
NB5	Exhaust System - Single
NB8	California Emission Override
NB9	Emission Override - Emissions Override, State Specific
NC7	Federal Emission Override
NE1	Geographically Restricted Registration Emission for Vehicles up to 14,000 lbs GVW
NK5	Steering Wheel - Standard
NME	Plant Code - Curenevaca
NT7	Federal Emission Certification, Tier 2
NUA	California Emission Override 150K LEV 2
PB1	15" Wheel Covers
QTY	Tire ALL - 185/60R15C 94/92T TL
RBI	Tire Spare - 185/60R15C 94/92T TL
RRG	15" Aluminum Wheel
RRJ	15" Steel Wheel
RWU	Accessory - Cargo Area Organizer - Collapsible
RYT	Accessory - First Aid Kit
T4A	Front Headlamp - Halogen

RPO Code List (cont'd)

RPO	Description
T61	Daytime Running Lamps
TD0	Window Security Screens - Side Door
TDZ	Window Security Screens - Rear
TGA	Language Control - English, French, Spanish
TL8	Grille - Dark Silver with Black Accents
U19	Speedometer, Miles/Kilo
U1B	Radio - AM/FM CD Player
U2J	XM Radio Delete
U2K	XM Radio
U73	Fixed Radio Antenna
UD7	Rear Park Assist
UE0	OnStar® Delete
UF2	Lamp - Dome & Cargo (different than Aries base)
UFA	Outside Temperature Display
UHV	Radio - AM/FM Touchscreen, Nav, HD, CD, Aux Jack, USB Port
UJM	Tire Pressure Monitoring, Manual Learn
UP9	Wireless Interface - Short Range, Voice Recognition, Music Navigator, Audio Streaming
UPF	Wireless Interface - Short Range, Voice Recognition
USR	USB Receptacle
UVC	Rear Vision Camera
V22	Grille - Chrome with Black Accents
V34	Bumpers - Front and Rear, Black
V35	Bumpers - Front and Rear, Body Color
V8D	Vehicle Statement - US
V8E	Vehicle Statement - Canada
VAV	ACCESSORY-FLOOR MATS - ALL WEATHER
VK3	Front License Plate Bracket- w/Front Mounting Pkg
VT7	Owners Manual - English, French Language
WBP	Appearance Package
WMH	VIN Model Year 2017
X88	Market Brand - Chevrolet
YA2	Door - Sliding RH and LH 2nd Row (no delete - manual only)
YF5	California Emission Certification
YM8	Identification - Limited Personalization Option (LPO)
Z49	Canada
ZW2	Window Pkg, RR Doors
ZW3	Window Package - Rear Doors, Side Rear Door
ZW6	Window Package - RH & LH Side Doors
ZW9	Body Equipment - Chassis Body

RPO Code List (cont'd)

RPO	Description
ZY1	Solid Color

BLANK

Section 2

Body Systems


<p>Fixed and Moveable Windows 2-3</p> <p> Schematic and Routing Diagrams 2-3</p> <p> Moveable Window Schematics 2-4</p> <p> Defogger Schematics 2-5</p> <p> Description and Operation 2-6</p> <p> Power Windows Description and Operation 2-6</p> <p> Rear Window Defogger Description and Operation 2-6</p> <p>Horns and Pedestrian Alerts 2-7</p> <p> Schematic and Routing Diagrams 2-7</p> <p> Horn Schematics 2-8</p> <p>Lighting 2-9</p> <p> Headlights/Daytime Running Lights (DRL) Schematics 2-10</p> <p> Exterior Lights Schematics 2-13</p> <p> Interior Lights Schematics 2-18</p> <p> Interior Lights Dimming Schematics 2-20</p> <p> Description and Operation 2-22</p> <p> Exterior Lighting Systems Description and Operation 2-22</p> <p> Interior Lighting Systems Description and Operation 2-24</p>	<p>Mirrors 2-26</p> <p> Schematic and Routing Diagrams 2-26</p> <p> Outside Rearview Mirror Schematics 2-27</p> <p> Description and Operation 2-28</p> <p> Outside Mirror Description and Operation 2-28</p> <p>Vehicle Access 2-29</p> <p> Schematic and Routing Diagrams 2-29</p> <p> Door Lock/Indicator Schematics 2-30</p> <p> Description and Operation 2-33</p> <p> Door Ajar Indicator Description and Operation 2-33</p> <p> Power Door Locks Description and Operation 2-33</p> <p>Wipers and Washers 2-34</p> <p> Schematic and Routing Diagrams 2-34</p> <p> Wiper/Washer Schematics 2-35</p> <p> Description and Operation 2-36</p> <p> Wiper/Washer System Description and Operation 2-36</p>
---	---

BLANK


Fixed and Moveable Windows

Schematic and Routing Diagrams

Moveable Window Schematics (Power Window)

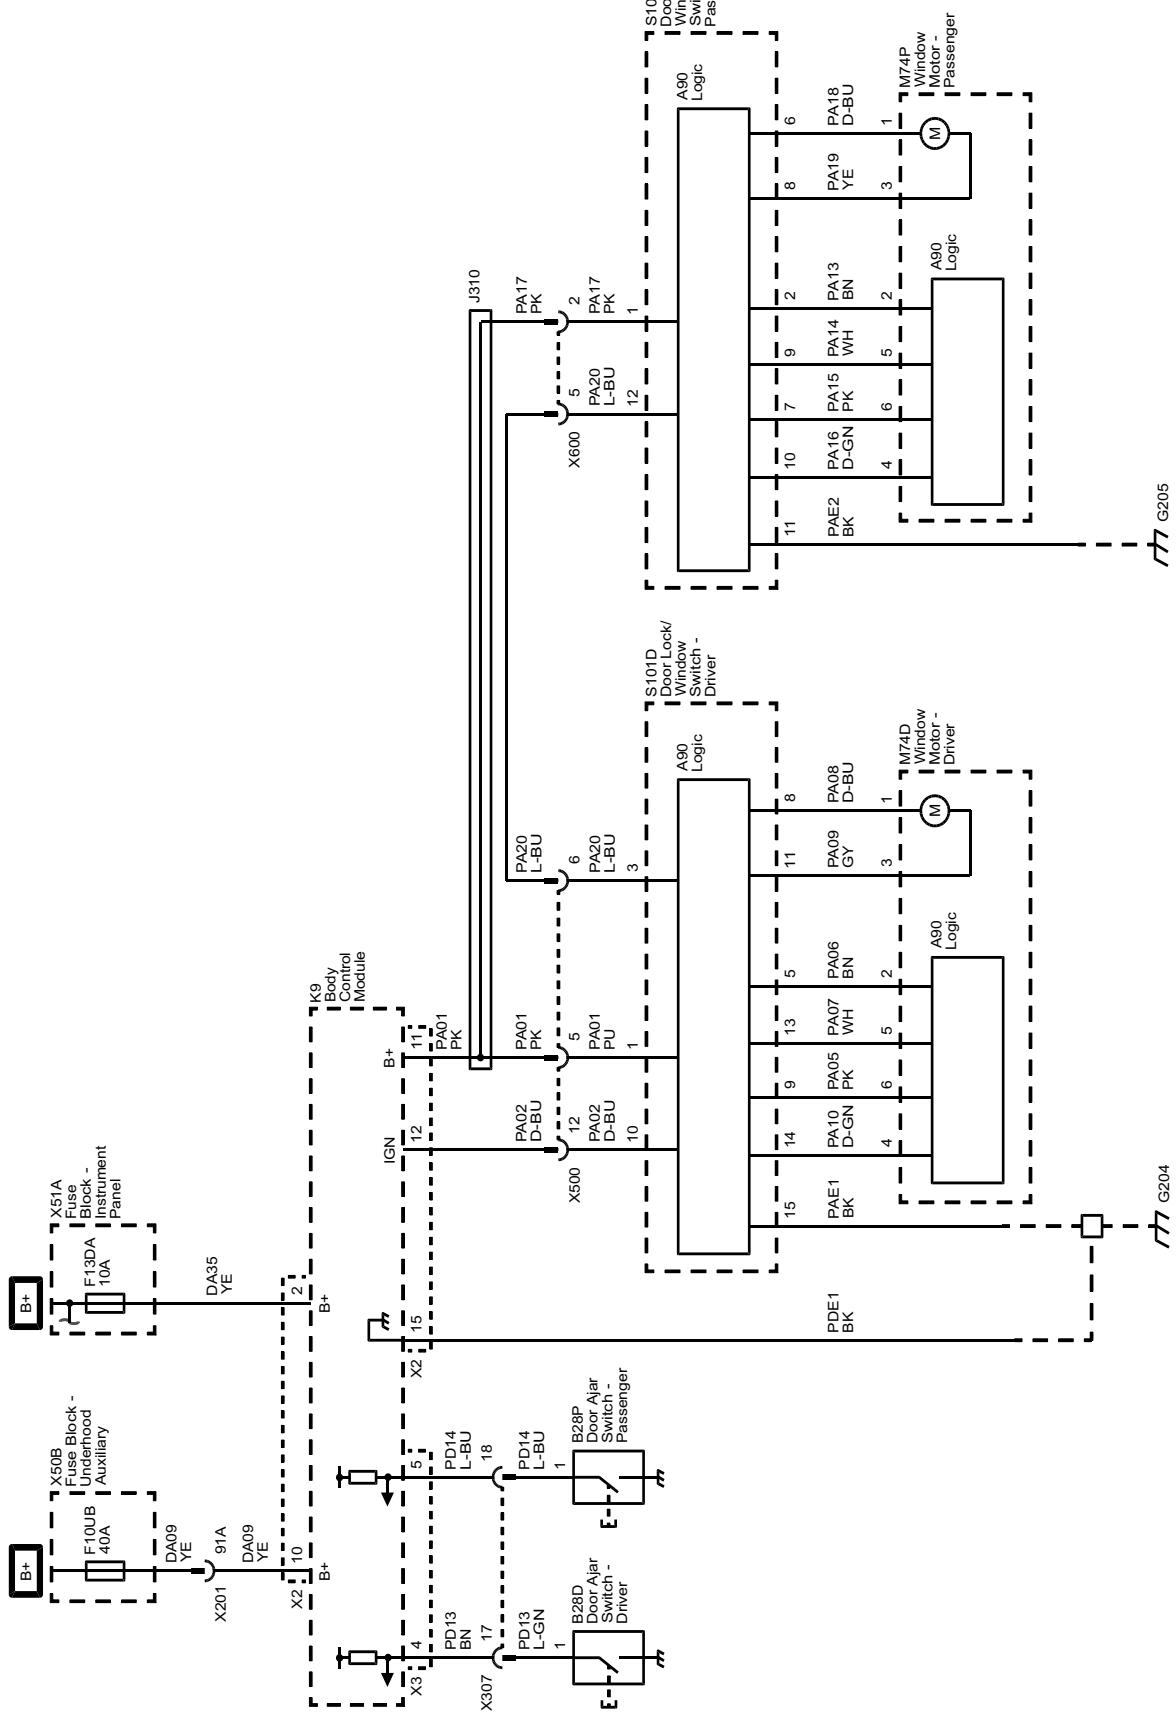

Defogger Schematics (Outside Rearview Mirror and Rear Defogger)

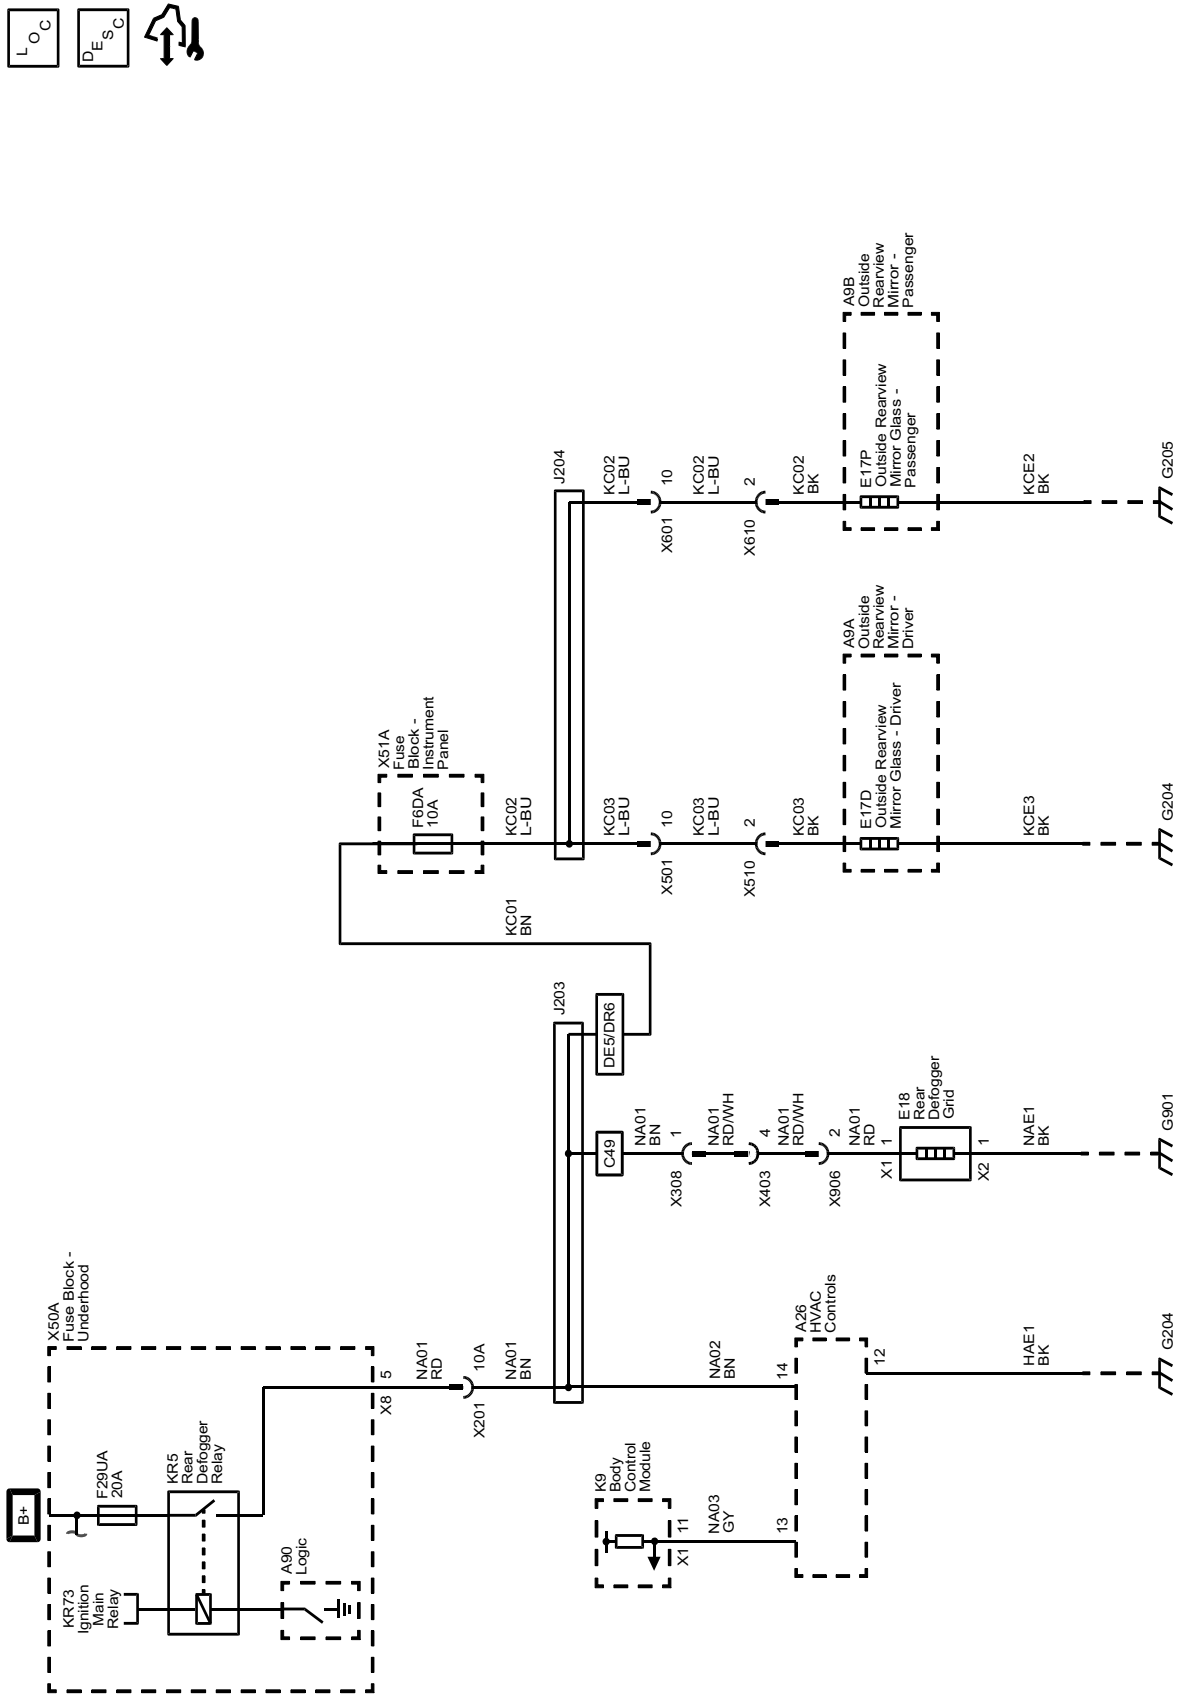

Description and Operation

Power Windows Description and Operation

Power Window System Components

The power window system consists of the following components:

- Driver window switch
- Front passenger window switch
- Window regulator motors in each of the doors

Power Window System Controls

The power window system can be controlled by a power window up or down switch activation.

Window Operation and the Driver Window Switch

The driver power window switch contains individual window switches for each of the power windows. All windows may be controlled up and down from the driver power window switch. The passenger power window switch (or rear window switches if equipped) will only control the up and down operation of their respective power window. The passenger power window contains a reversible power window motor. The direction the window travels is dependent upon the polarity of the control circuits. By reversing polarity of the control circuits the window motor will move up or down. The passenger power window motor is internally circuit breaker protected.

Driver Express Up and Express Down Power Window Motor

The driver power window is controlled by the driver door lock/window switch using inputs from the driver door lock/window switch. The window switch circuits are grounded in the driver door lock/window switch and when active a control circuit is switched to B+. The driver door lock/window switch also uses inputs from 2 Hall effect sensors located within the motor. The Hall effect sensors enable the driver door lock/window switch to monitor the window position and motor speed for use as an anti-pinch safety feature.

Passenger Express Up and Express Down Power Window Motor

The passenger power window is controlled by the passenger window switch. The window switch circuits are grounded in the passenger window switch and

when active a control circuit is switched to B+. The passenger window switch also uses inputs from 2 Hall effect sensors located within the motor. The Hall effect sensors enable the passenger window switch to monitor the window position and motor speed for use as an anti-pinch safety feature.

Rear Window Defogger Description and Operation

Rear Window Defogger System Components

The rear window defogger system consist of the following components:

- HVAC controls switch assembly
- Body control module (BCM)
- Rear defogger relay
- Rear window grid
- Driver outside rearview mirror
- Passenger outside rearview mirror
- Underhood fuse block

Rear Window Defogger Operation


Battery positive voltage is supplied through the F29UA fuse, in the underhood fuse block, to the rear defogger relay switched input. Control and ground for the rear defogger relay is provided by underhood fuse block. The BCM supplies 12 volts to the rear window defogger switch signal circuit to the HVAC controls switch assembly. When you depress the rear window defogger switch, the rear window defogger switch pulls the signal circuit low. The BCM will detect the voltage drop in the signal circuit and will then send a serial data message to the underhood fuse block to energize the rear defogger relay. The contacts within the rear defogger relay will close providing B+ voltage to the rear defogger indicator, the rear defogger grid and if equipped, to the driver and passenger heated outside rearview mirrors.

When you start the engine and press the rear window defogger switch for the first time, the defogger cycle lasts for 15 minutes. Further operation results in 7.5 minute defogger cycles. The rear defogger feature will not time out if vehicle speed is above 80 km/h (50 mph). The defogger cycle resets to 15 minutes when you cycle the ignition to the OFF position and then to the ON position.

Horns and Pedestrian Alerts

Schematic and Routing Diagrams



Horn Schematics (Horn)

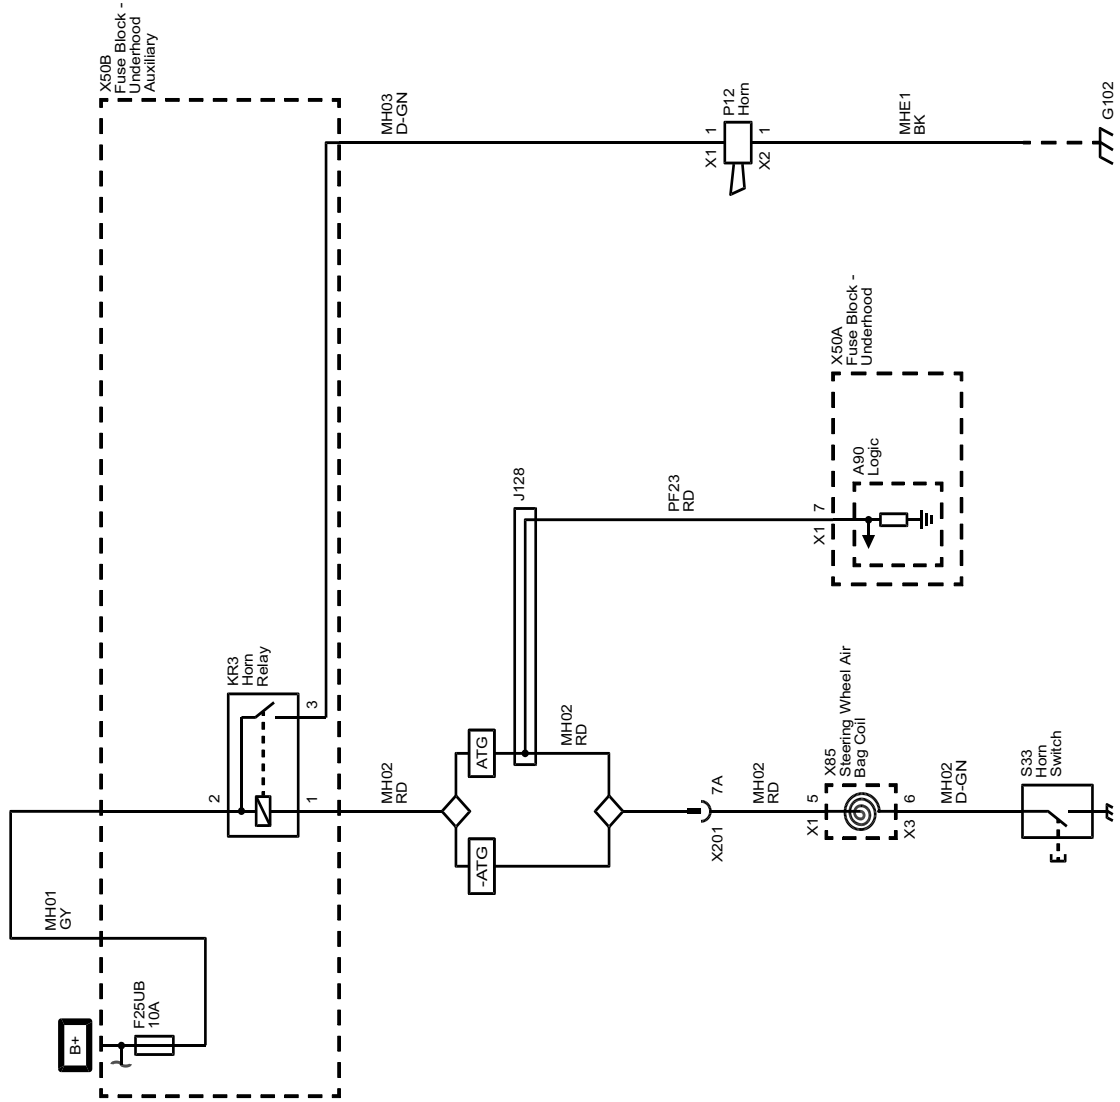


Lighting

Schematic and Routing Diagrams


Headlights/Daytime Running Lights (DRL) Schematics (Controls and Indicators)

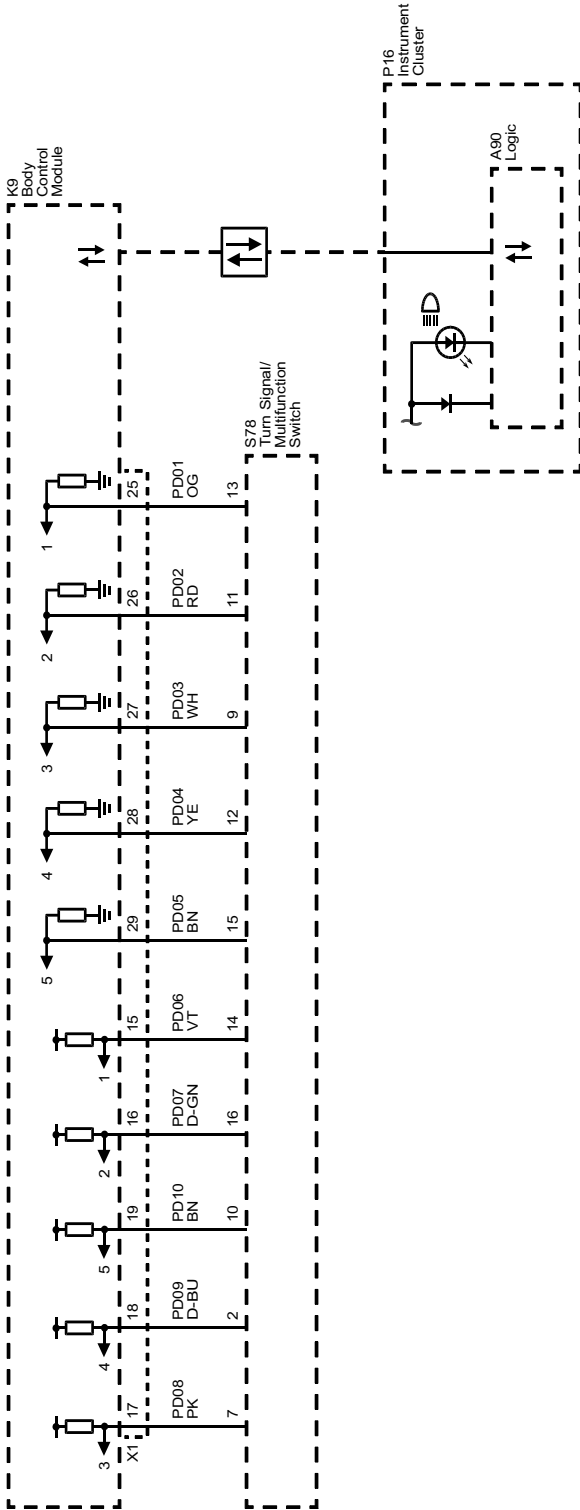

Headlights/Daytime Running Lights (DRL) Schematics (DRL - USA)




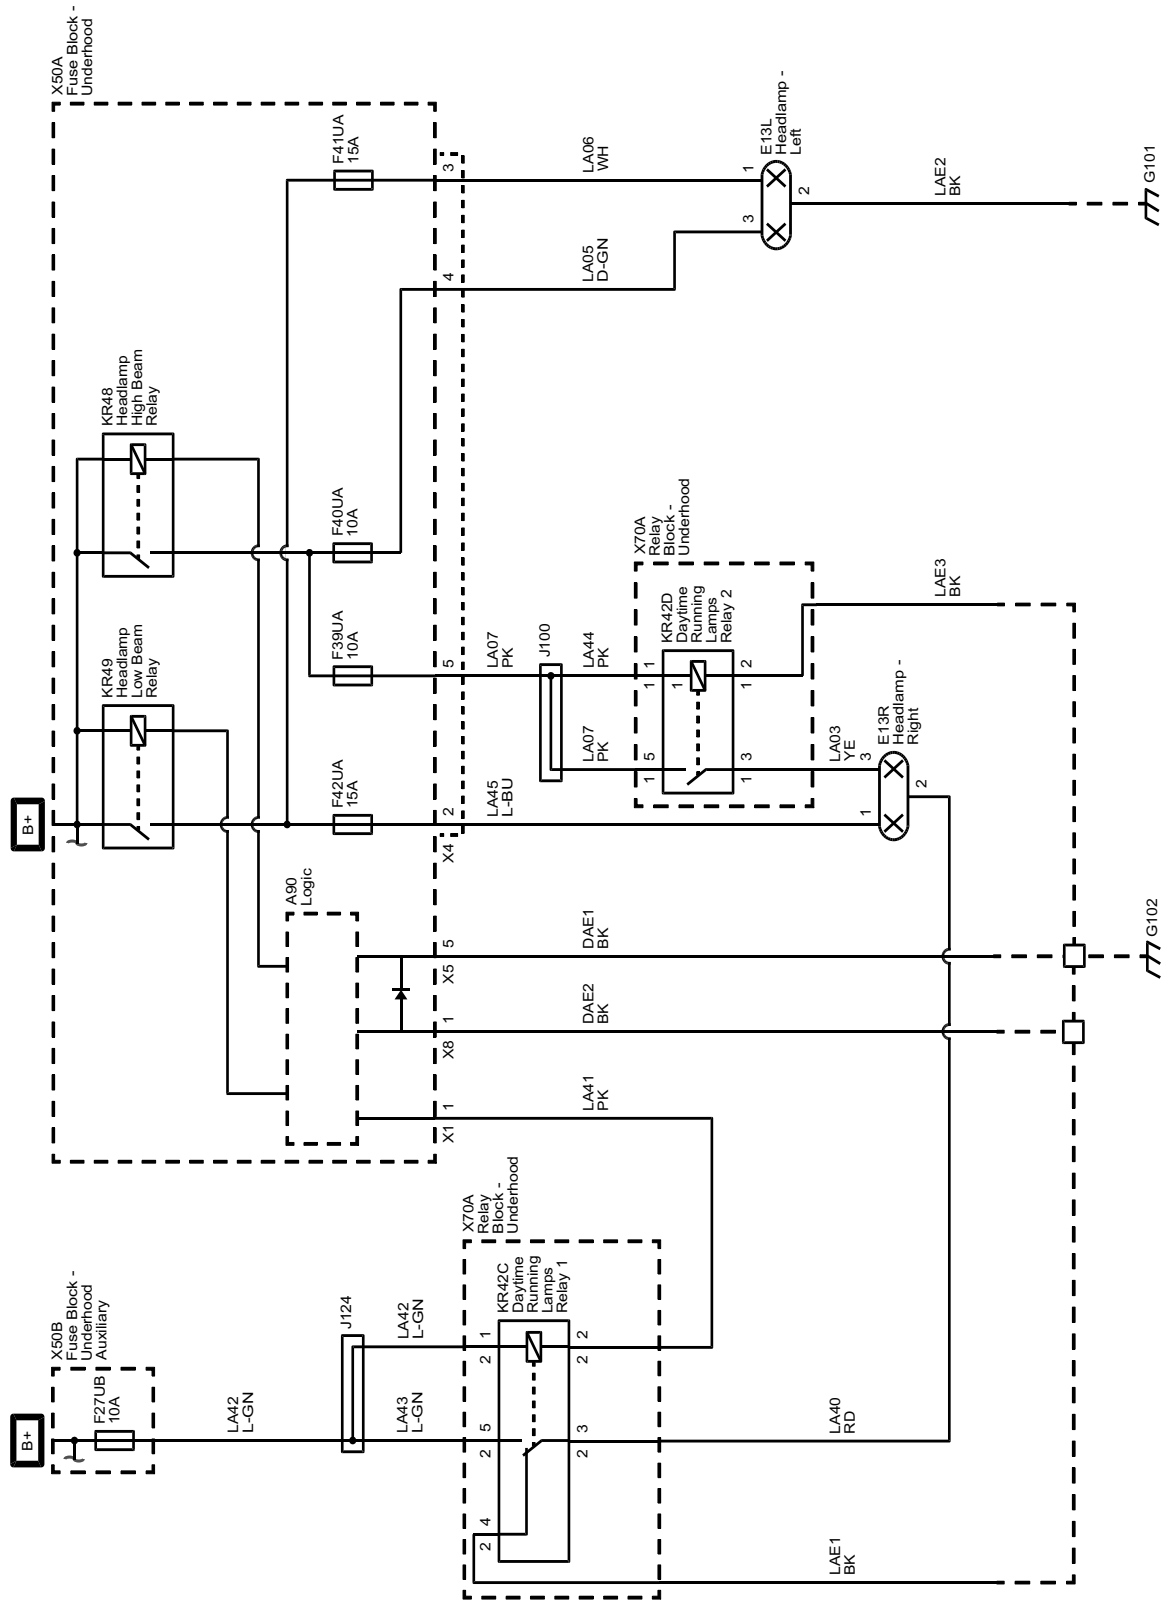


Headlights/Daytime Running Lights (DRL) Schematics (DRL - Canada)

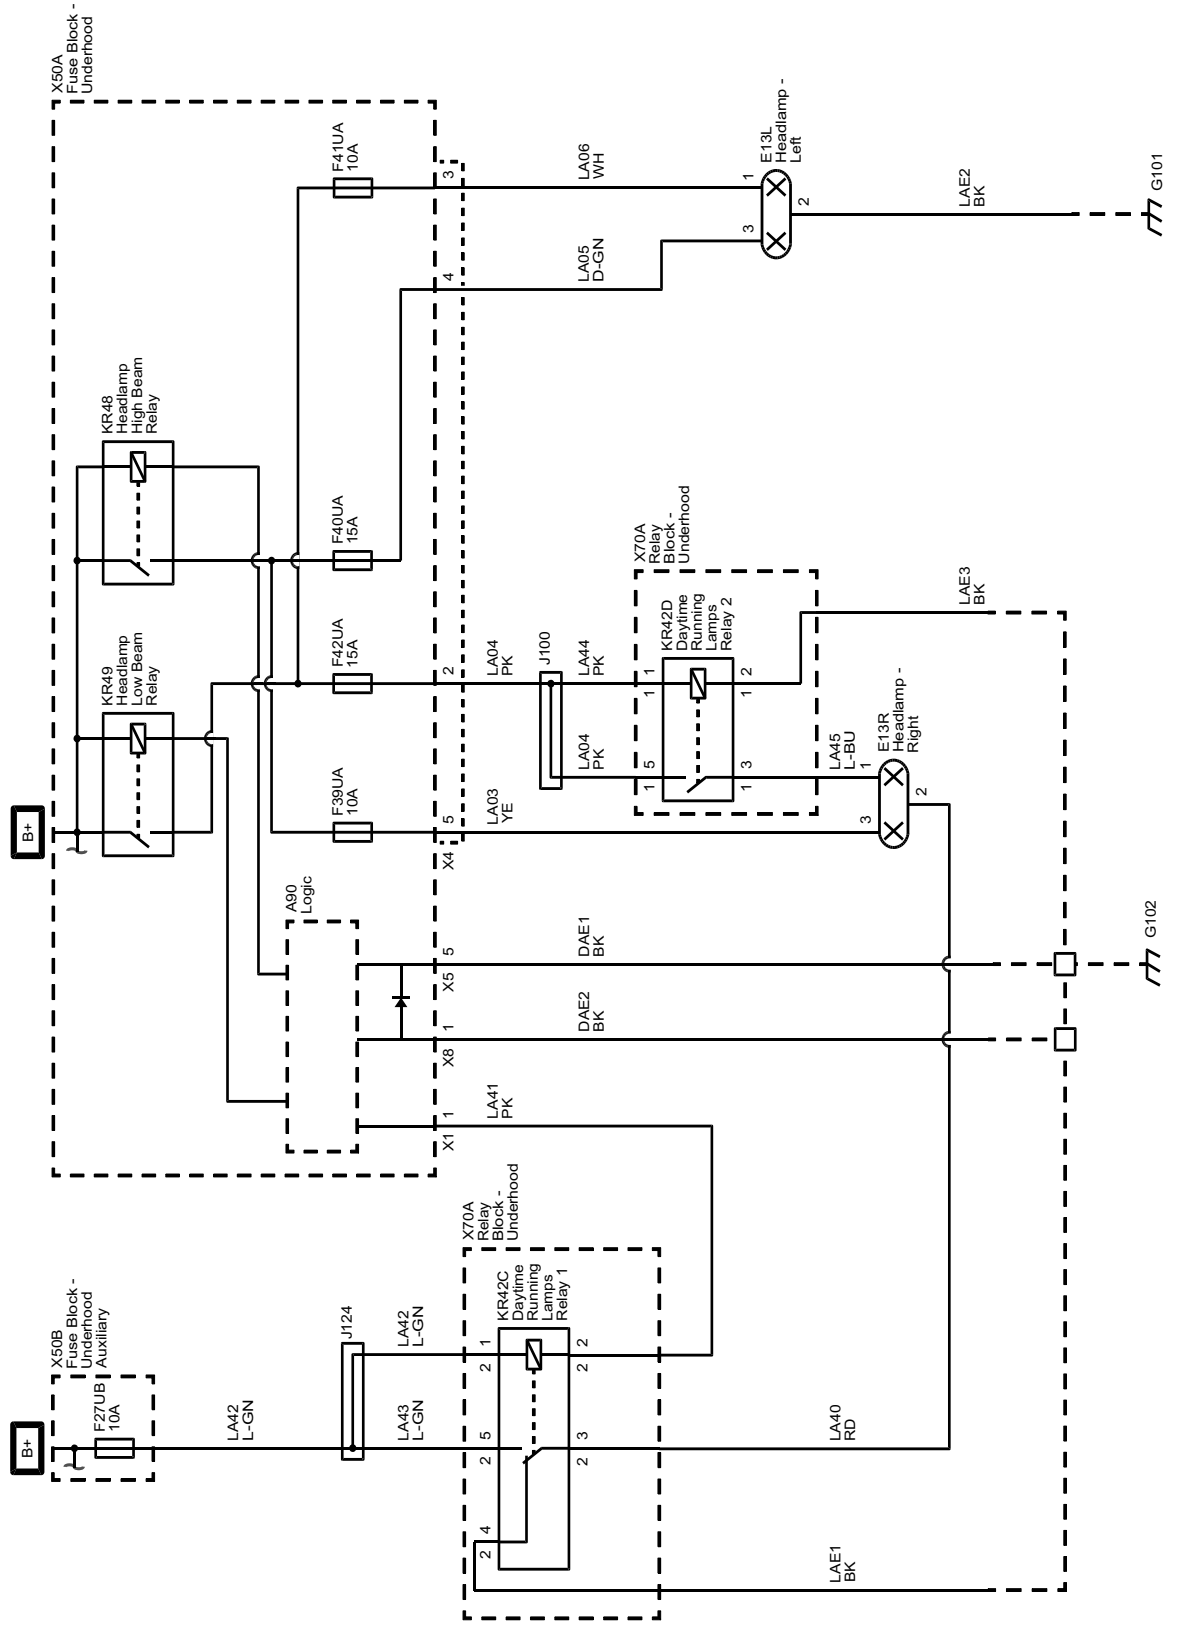


4509901

Exterior Lights Schematics (Controls and Indicators)

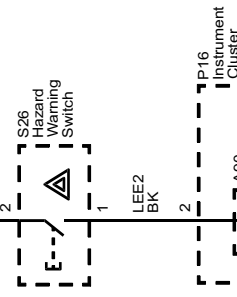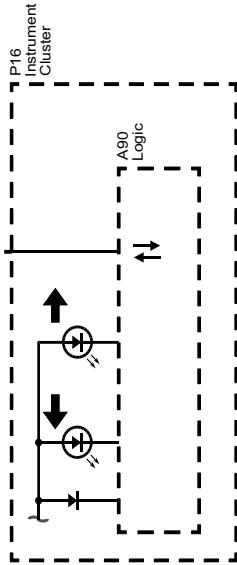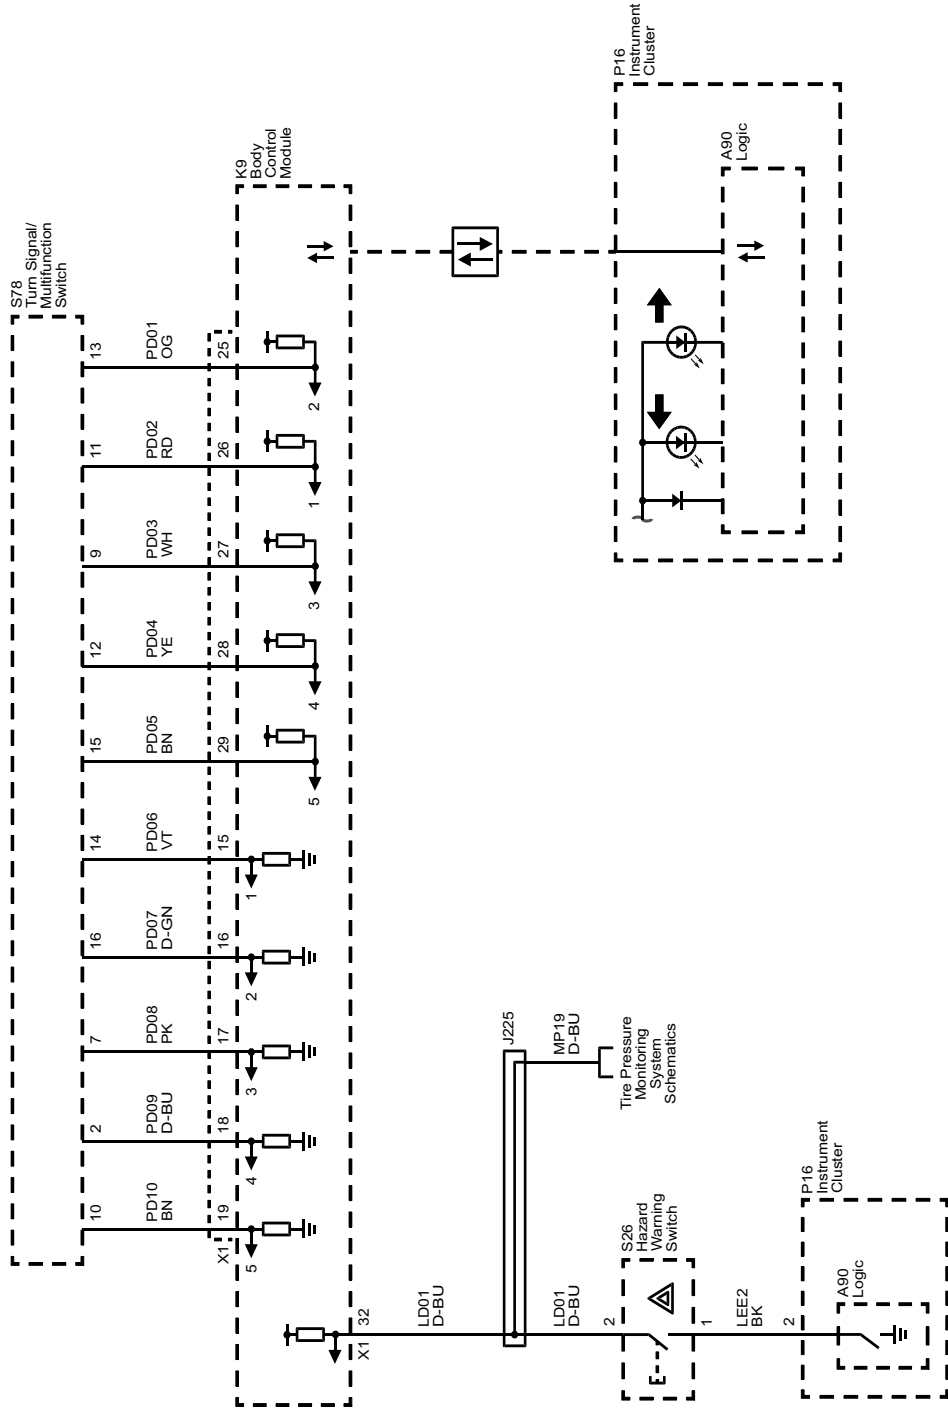


Exterior Lights Schematics (Park Lamps)

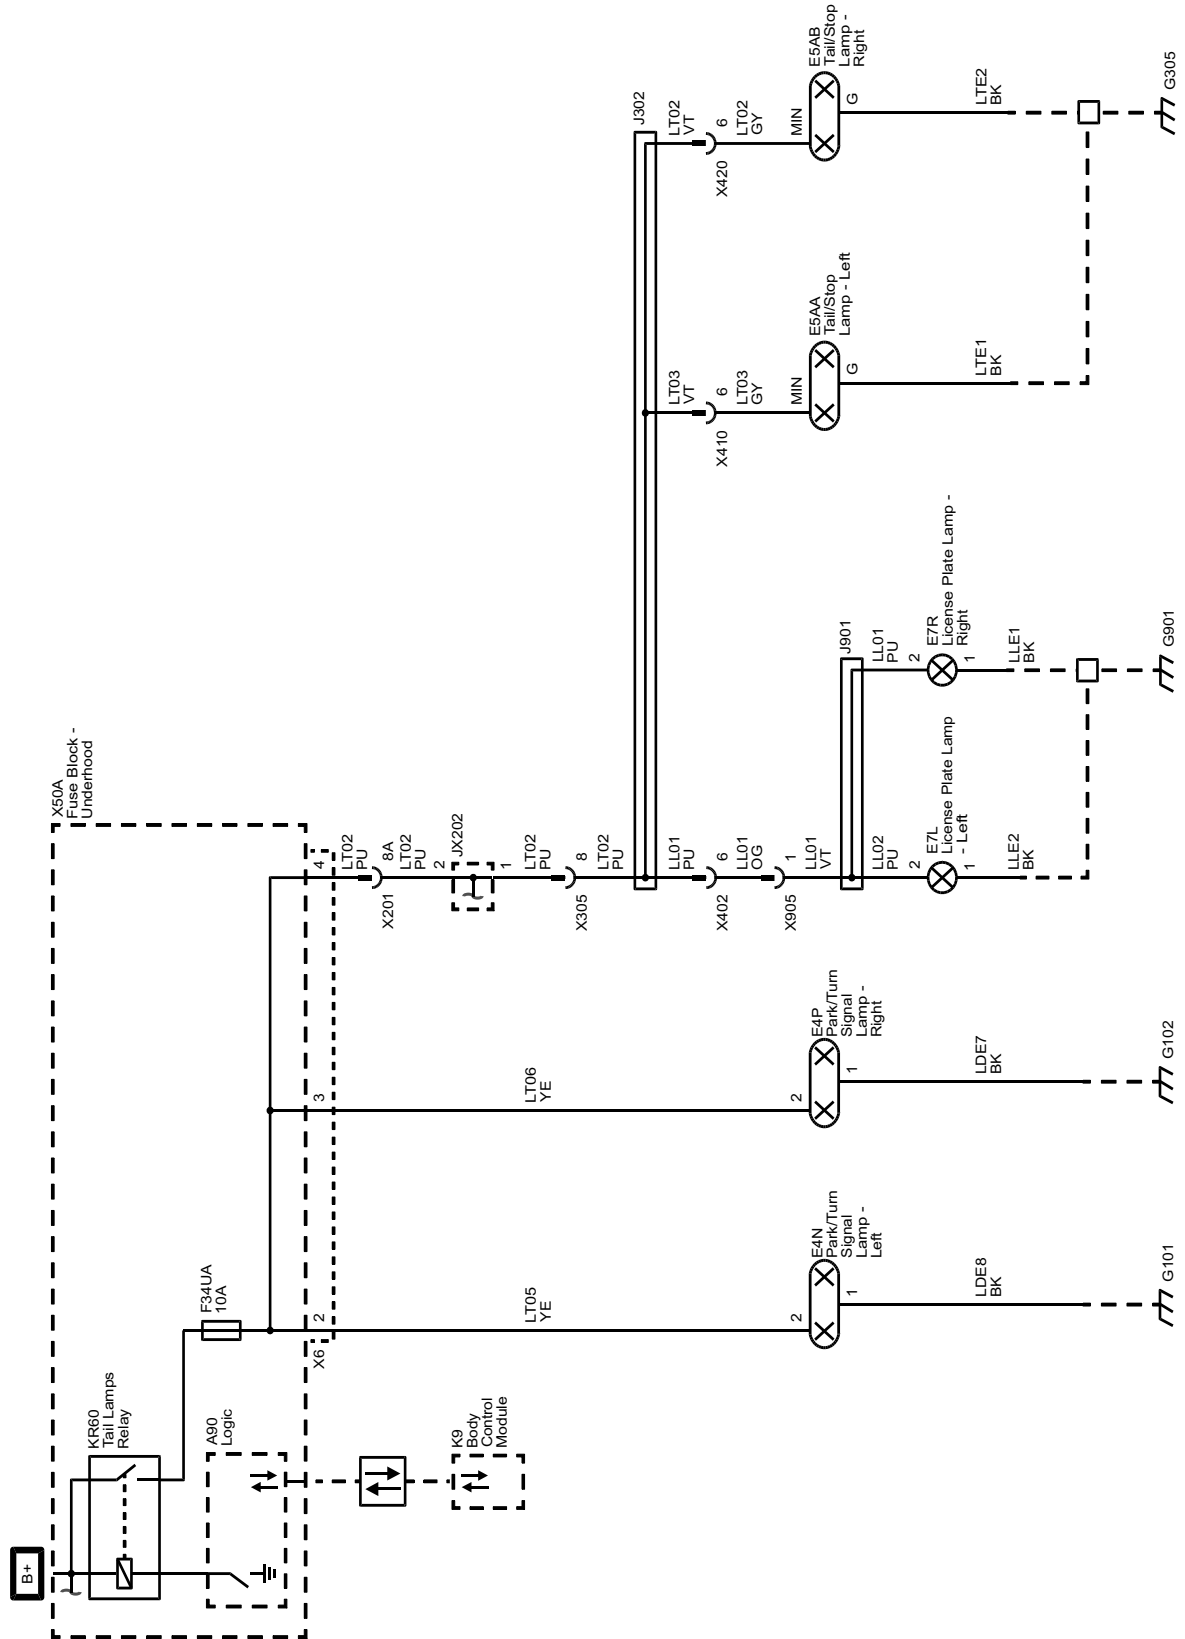


4509904


Exterior Lights Schematics (Turn Lamps)

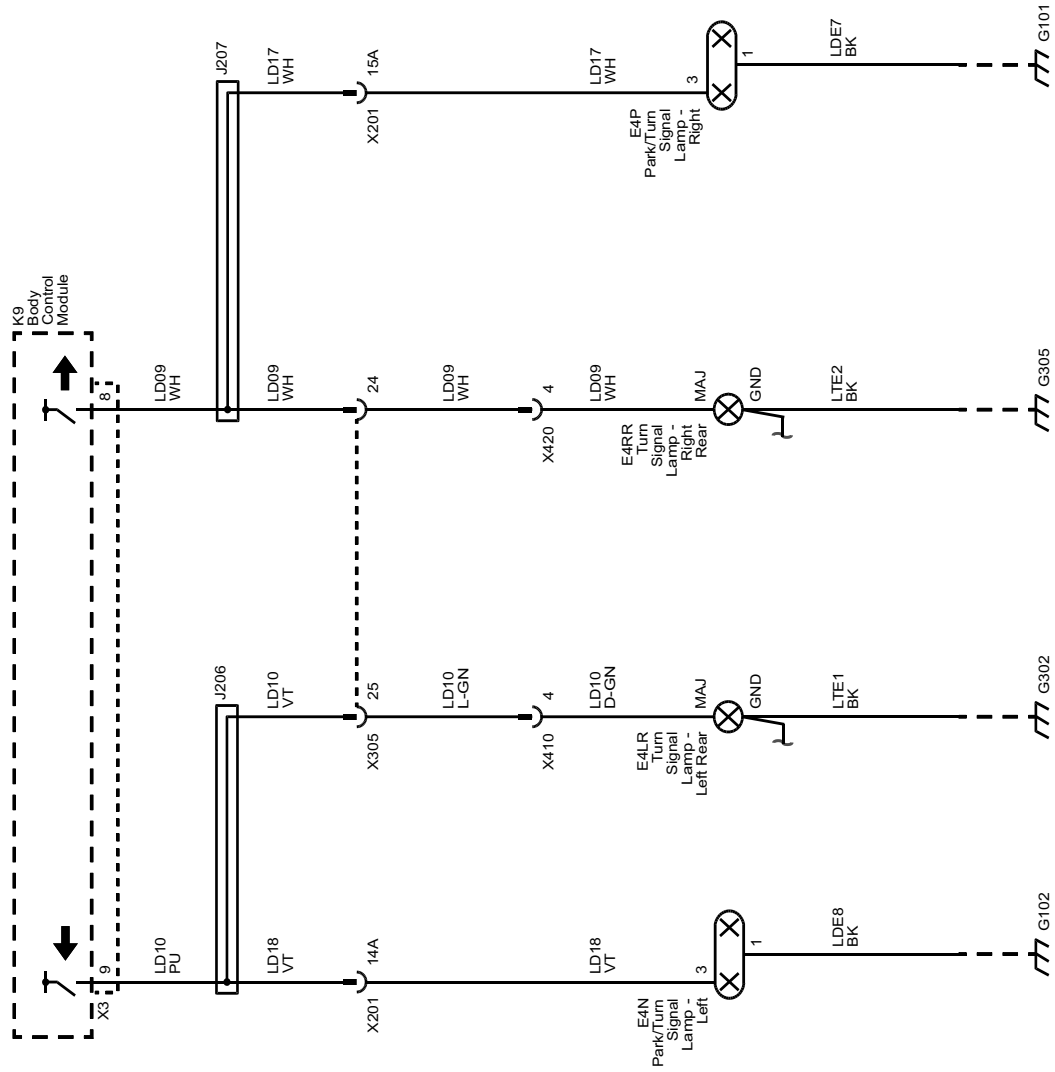



Exterior Lights Schematics (Stop Lamps)

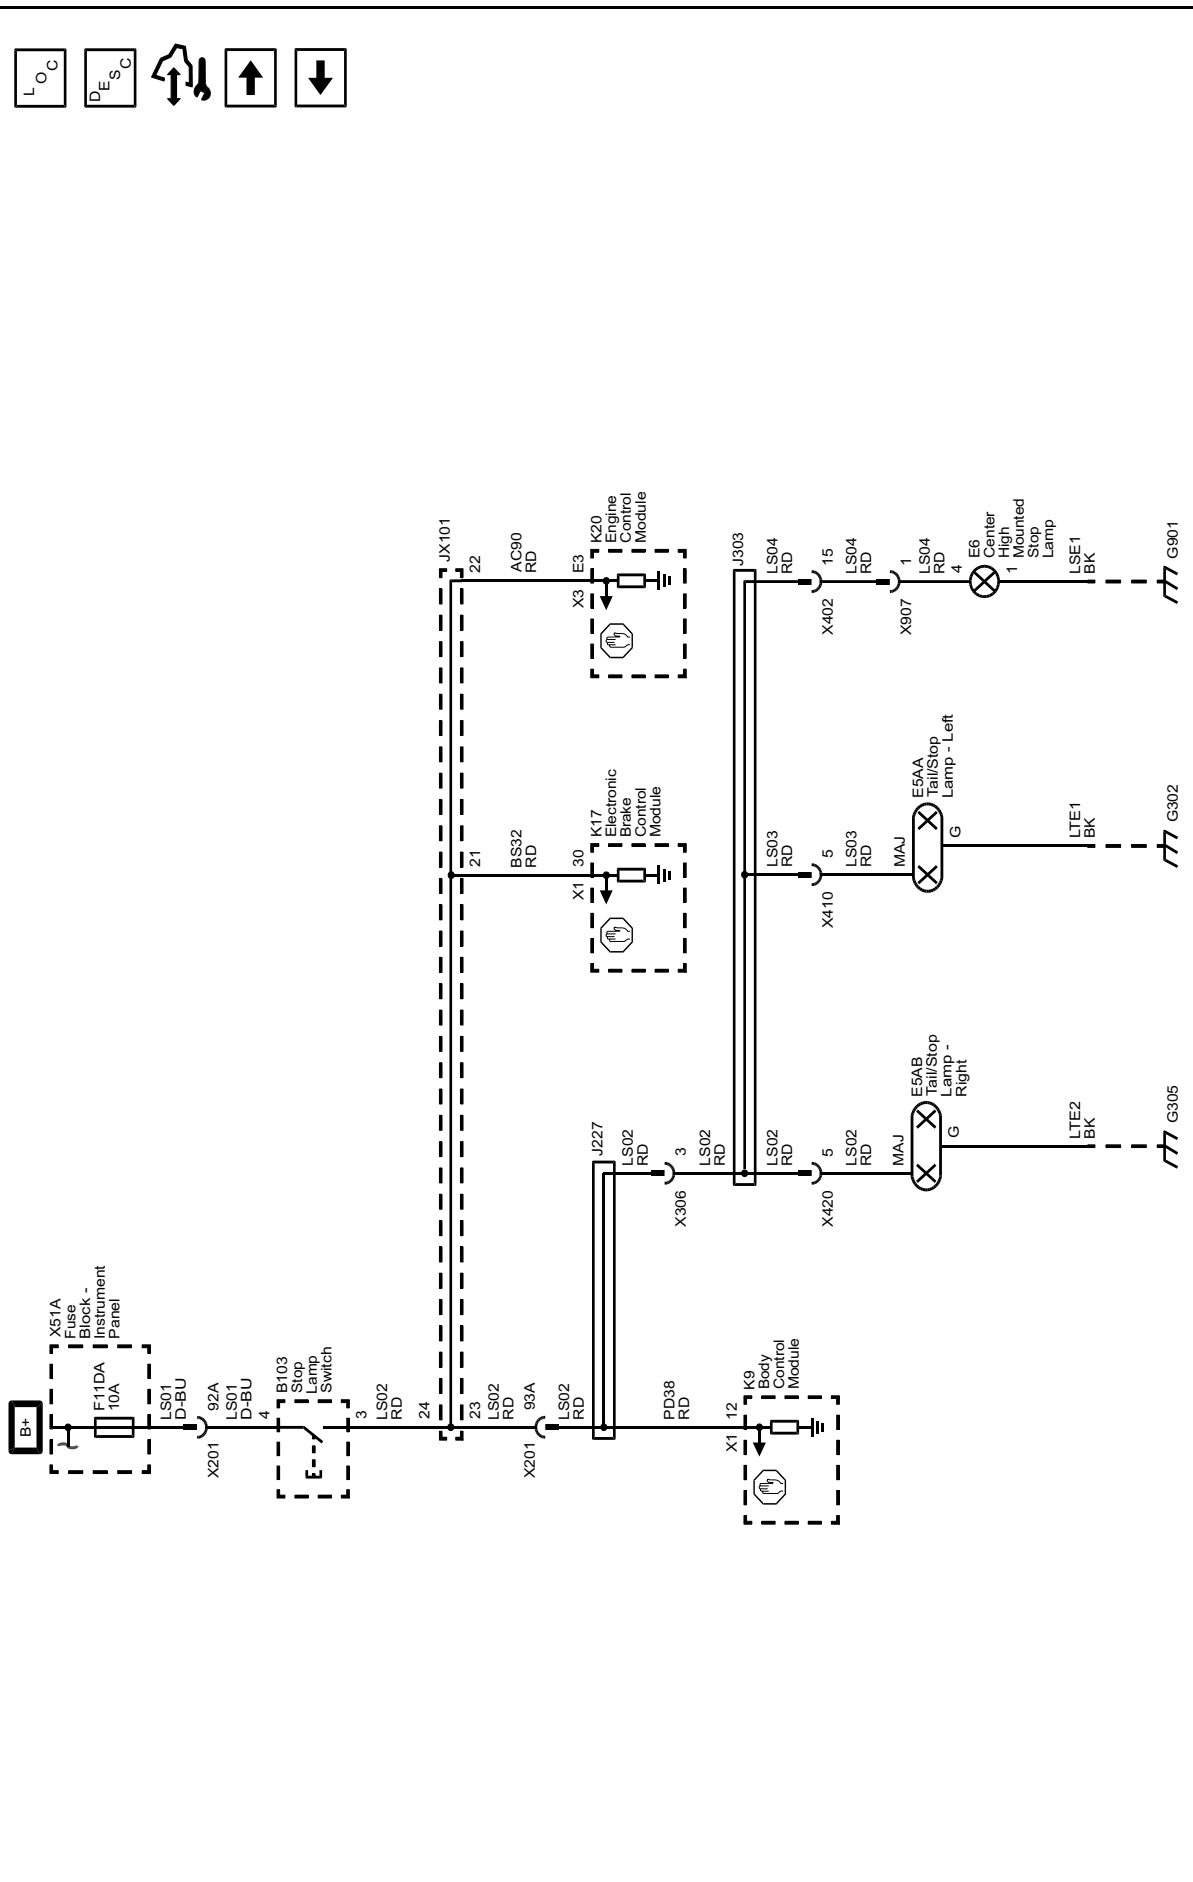


Exterior Lights Schematics (Backup Lamps)

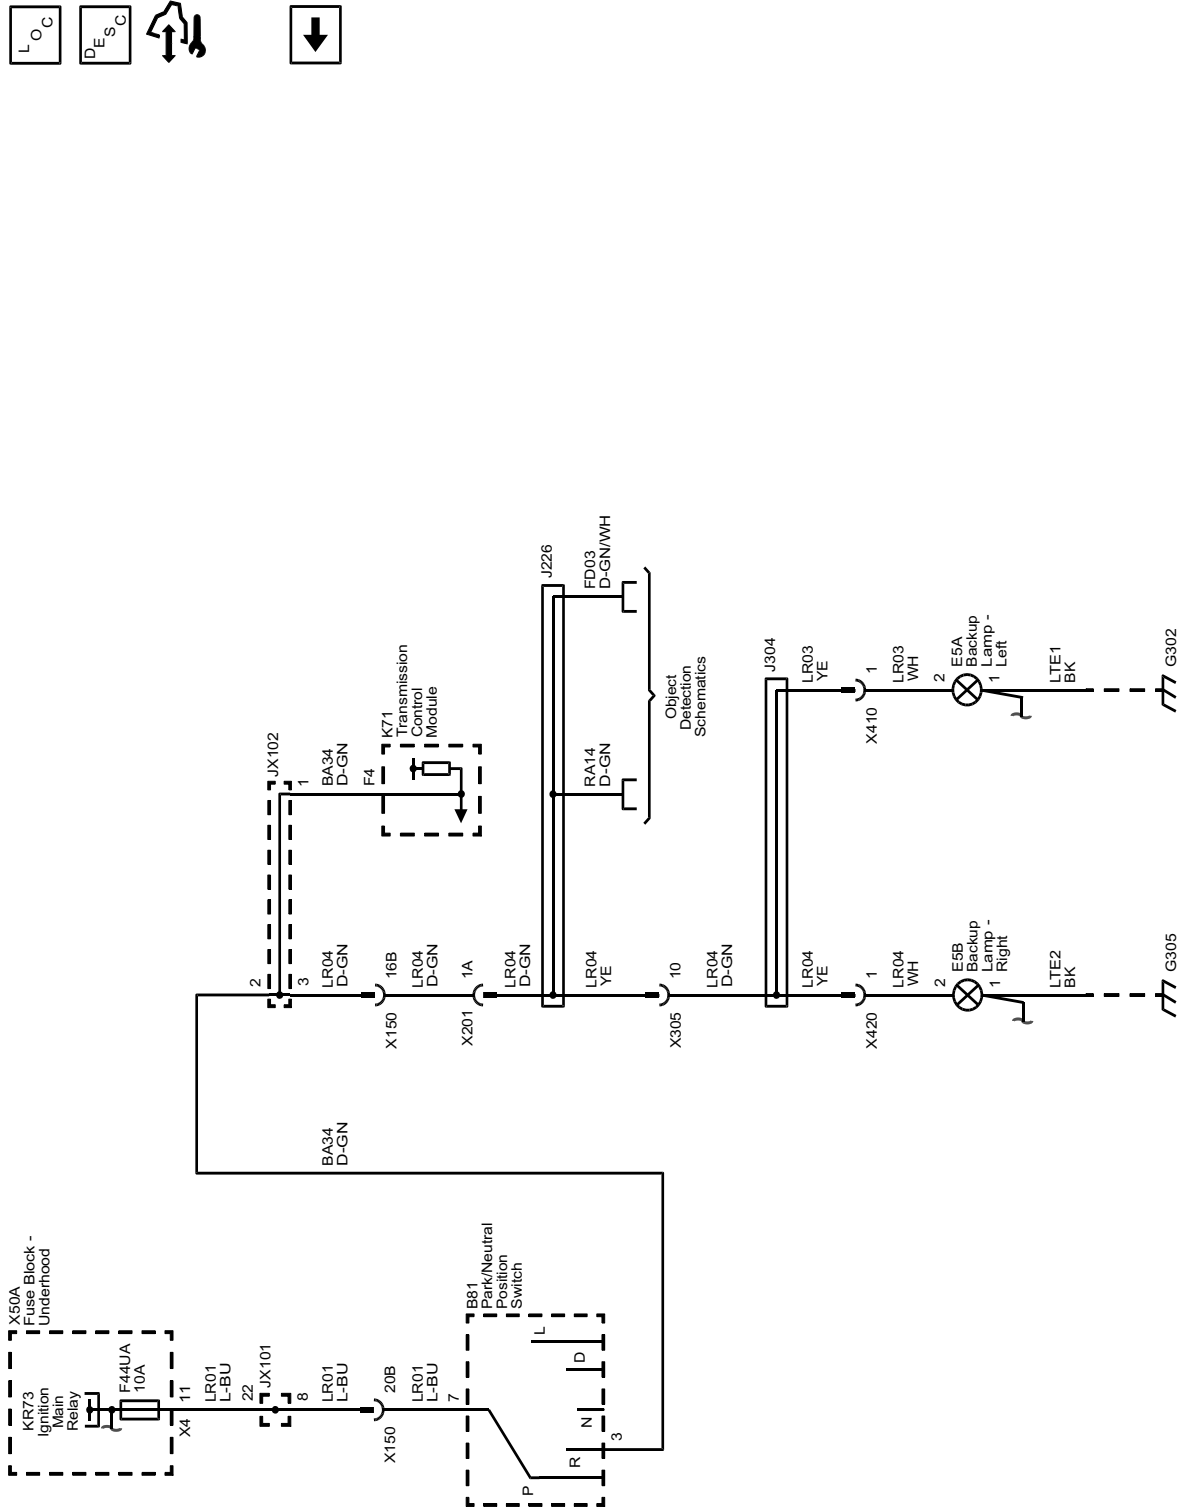


Interior Lights Schematics (Door Switch Controls)

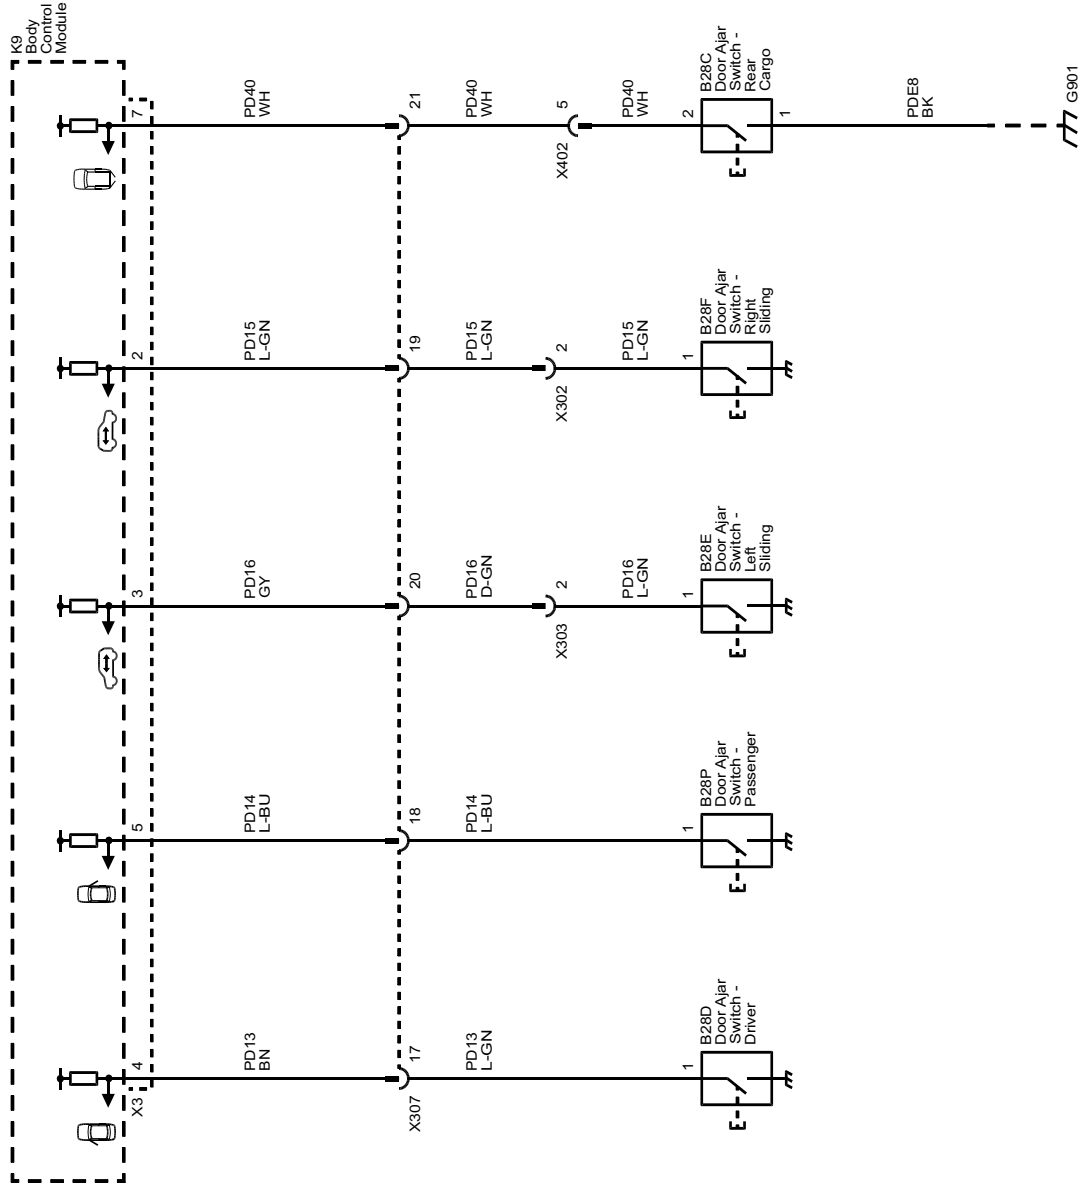

Interior Lights Schematics (Controls and Courtesy Lamps)

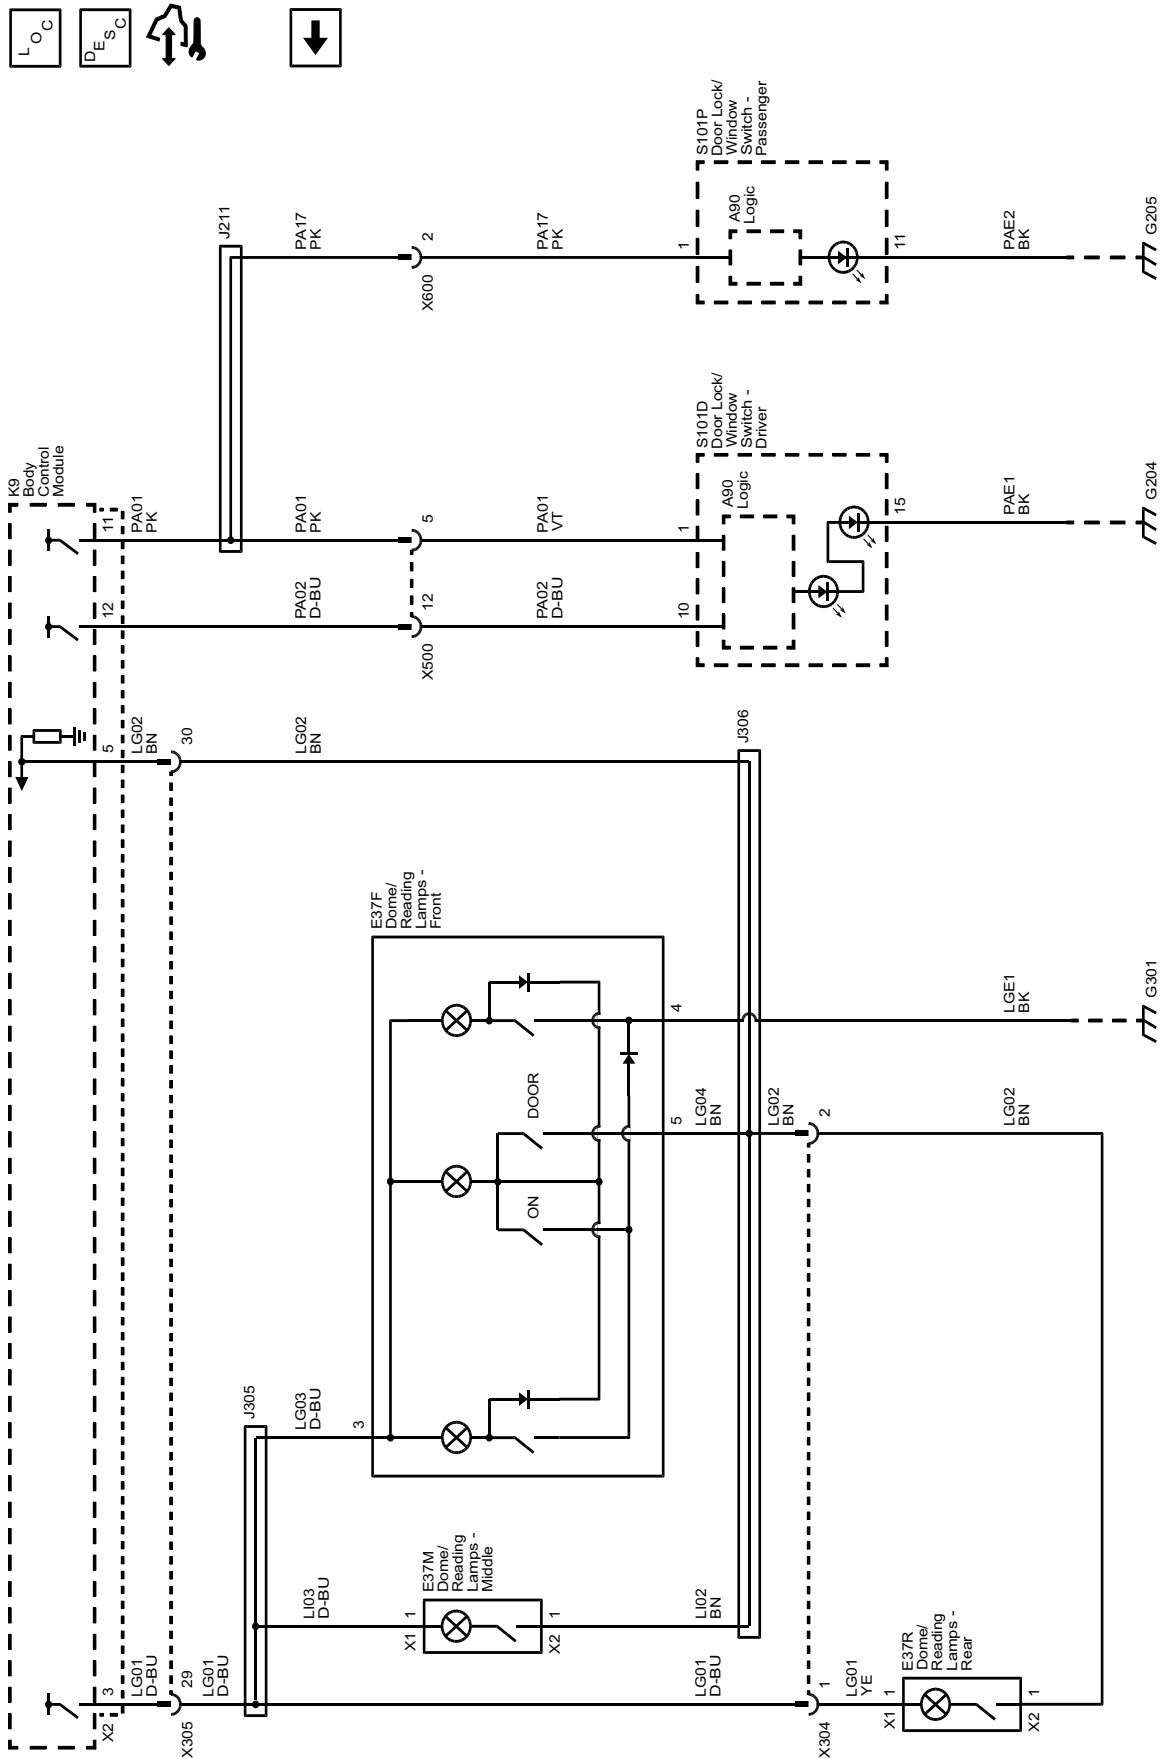


Interior Lights Dimming Schematics (Illumination Controls)

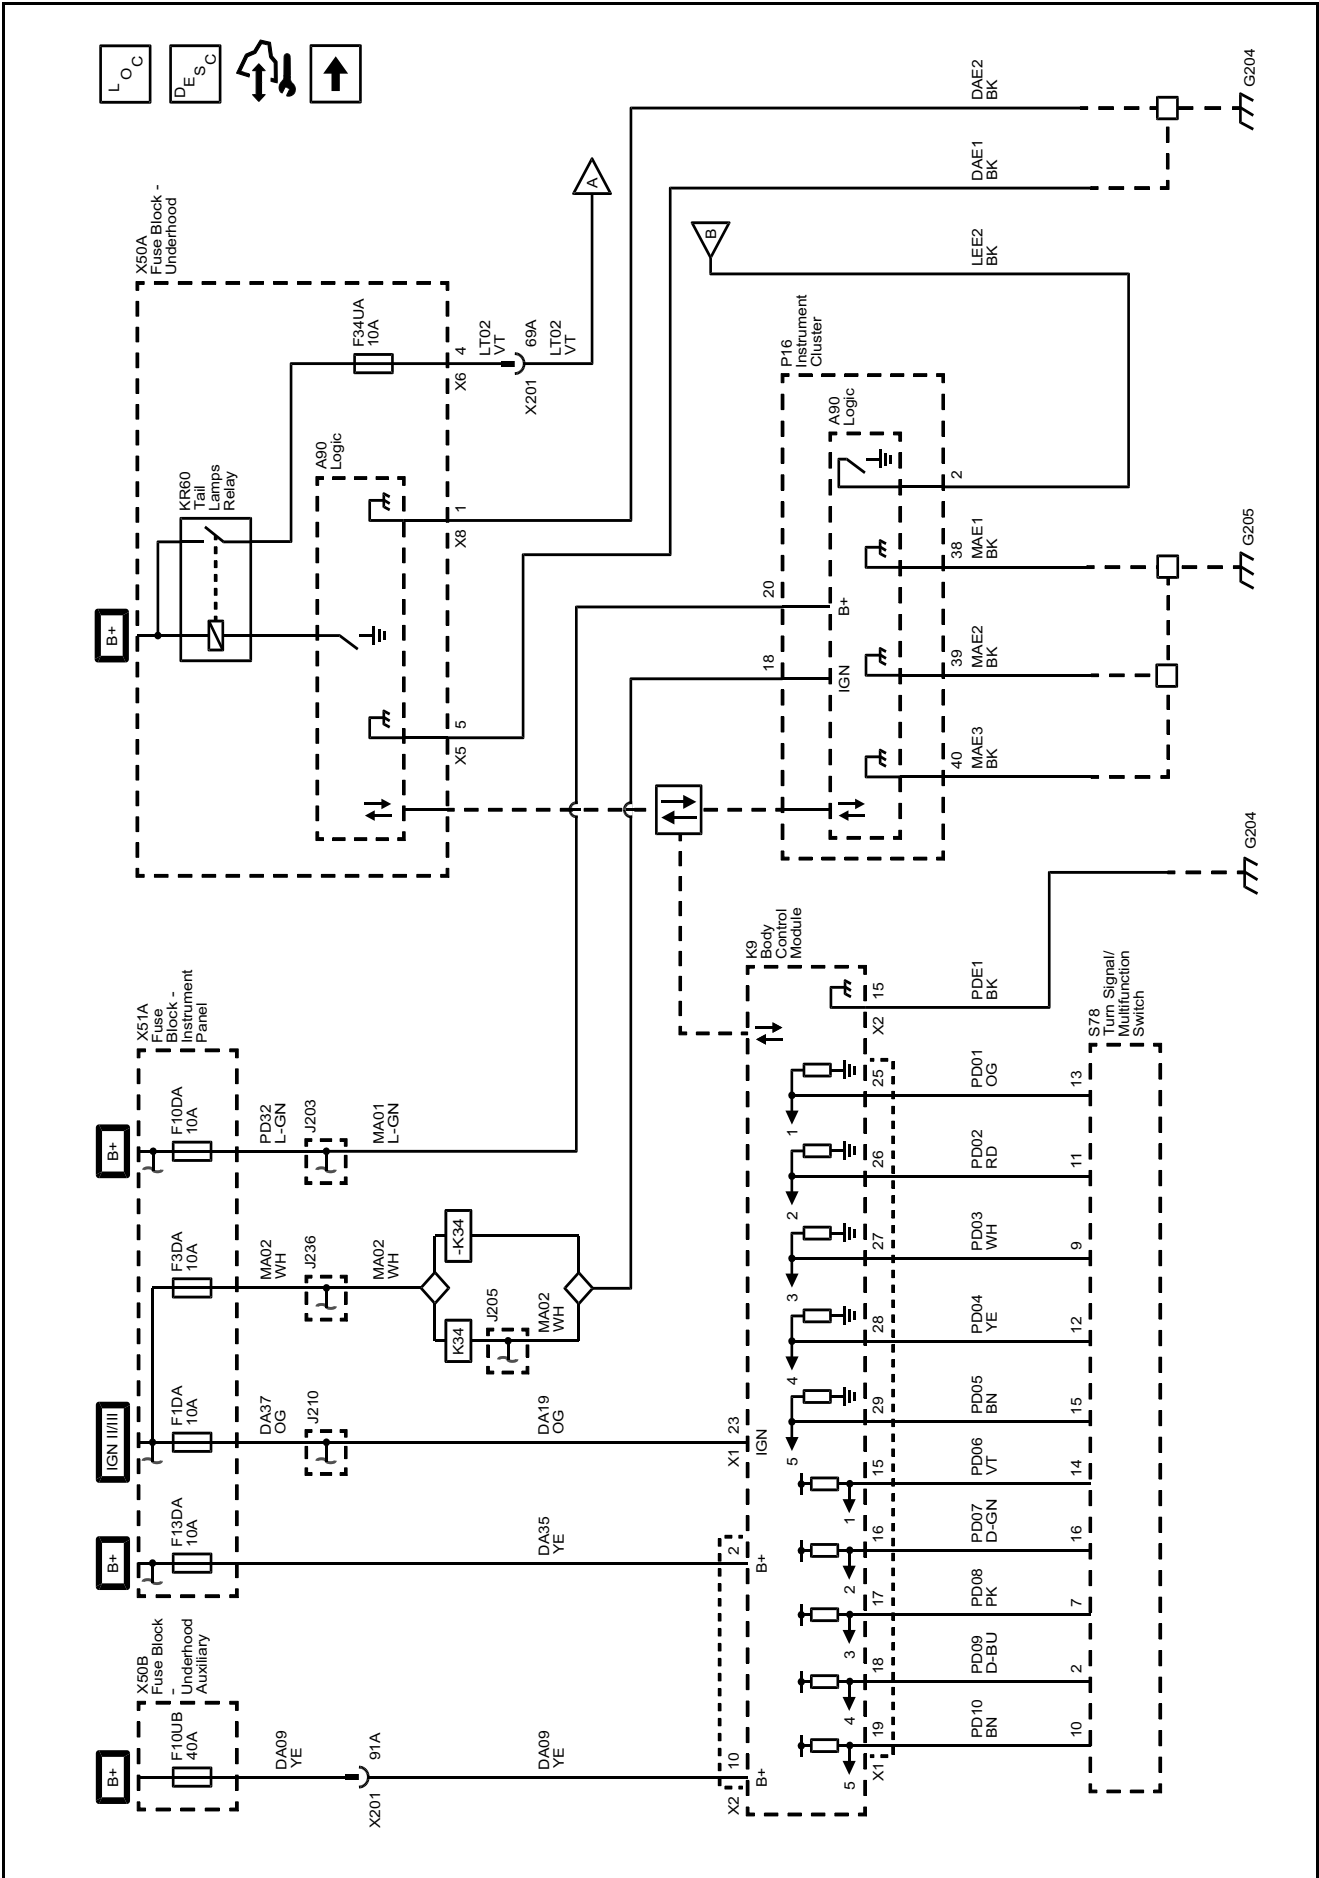

4509917

Interior Lights Dimming Schematics (Illumination)

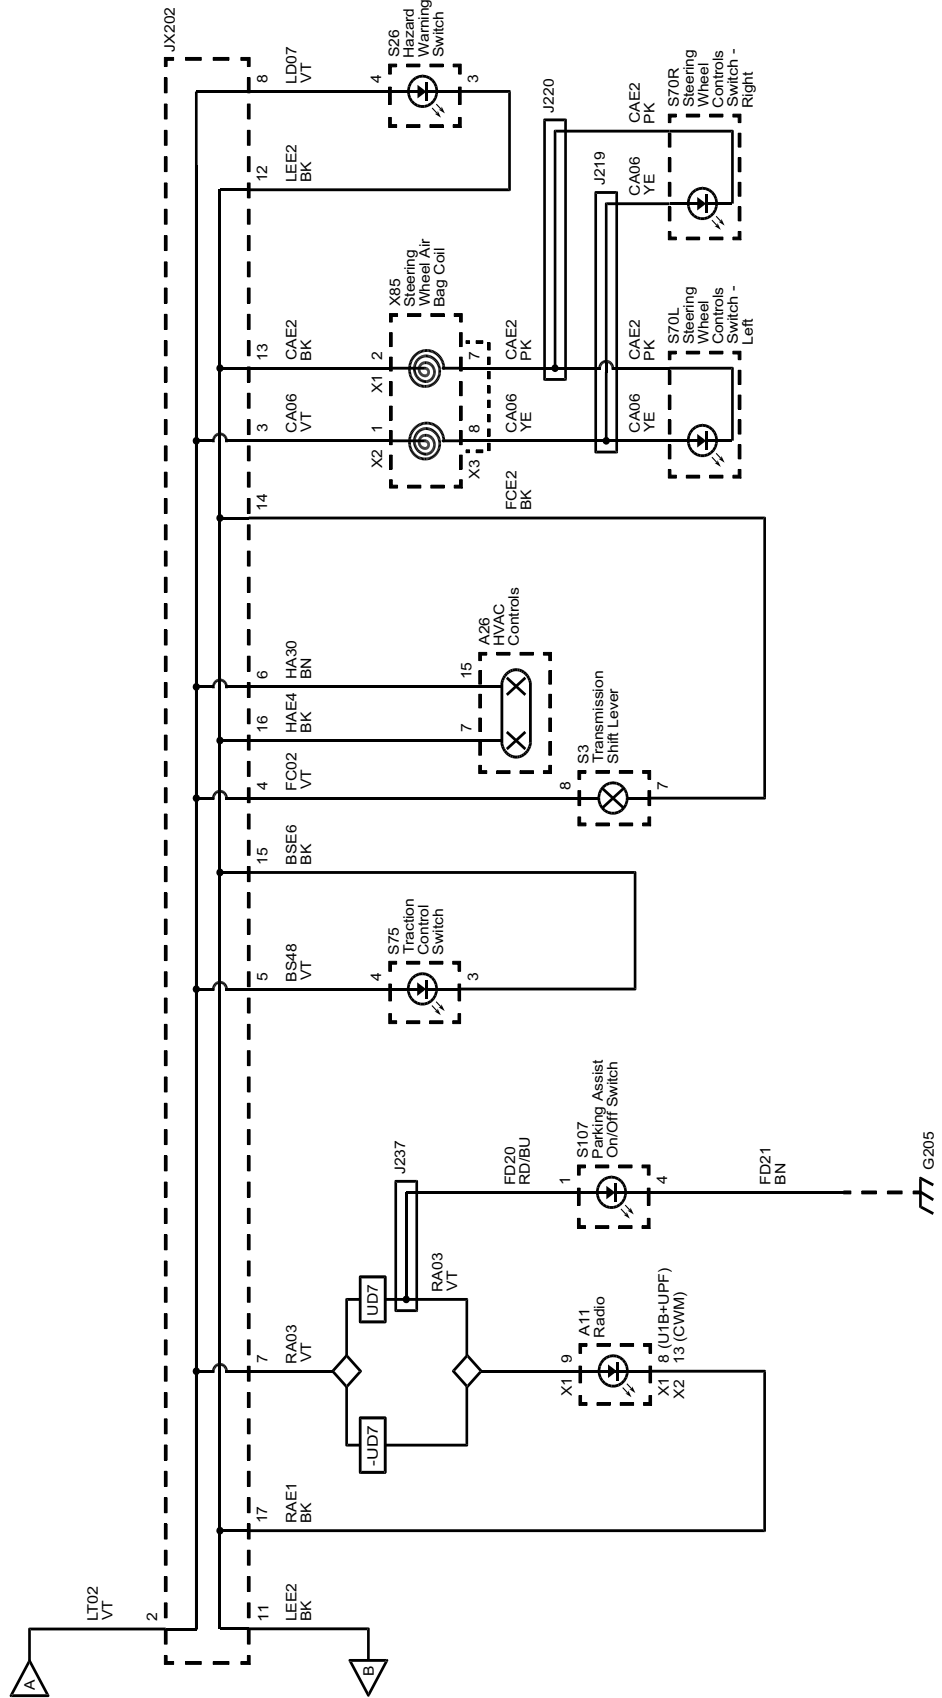

Description and Operation

Exterior Lighting Systems

Description and Operation

The exterior lighting system consist of the following lamps:

- Backup lamps
- Daytime running lamps
- Hazard warning lamps
- Headlamps
- Park, tail, and license lamps
- Stop lamps
- Turn signal lamps

Low Beam Headlamps – USA

For headlamp operation, the body control module (BCM) monitors two signal circuits from the turn signal/multifunction switch. When the turn signal/multifunction switch is placed in the OFF position, the turn signal/multifunction switch headlamps OFF signal circuit is grounded, indicating to the BCM that the exterior lamps should be turned OFF. With the turn signal/multifunction switch in the PARK LAMPS position, the turn signal/multifunction switch park lamps ON signal circuit is grounded, indicating that the park lamps have been requested. When the turn signal/multifunction switch is in the HEADLAMP position, both the turn signal/multifunction switch park lamps ON signal circuit and the turn signal/multifunction switch headlamps ON signal circuit are grounded. The BCM responds to the low beam request by sending a serial data message to the underhood fuse block internal logic module requesting the low beams be applied. The underhood fuse block logic module responds by applying ground to the low beam relay control circuit which energizes the low beam relay. With the low beam relay energized, the switch contacts close allowing battery voltage to flow through the low beam fuses. The right low beam control circuit supplies voltage to the daytime running lamps relay 2 coil energizing the relay coil. With the relay coil energized, the relay switch contacts close allowing voltage to flow through to the right low beam headlamp. With the left and right low beam headlamps supplied with voltage, the low beam headlamps illuminate.

Low Beam Headlamps – Canada

For headlamp operation, the body control module (BCM) monitors two signal circuits from the turn signal/multifunction switch. When the turn signal/multifunction switch is placed in the OFF position, the turn signal/multifunction switch headlamps OFF signal circuit is grounded, indicating to the BCM that the exterior lamps should be turned OFF. With the turn signal/multifunction switch in the PARK LAMPS position, the turn signal/multifunction switch park lamps ON signal circuit is grounded, indicating that the park lamps have been requested. When the turn signal/multifunction switch is in the HEADLAMP position, both the turn signal/multifunction switch park lamps ON signal circuit and the turn signal/multifunction switch headlamps ON signal circuit are grounded. The BCM responds to the low beam request by sending a serial data message to the underhood fuse block internal logic module requesting the low beams be applied. The underhood

fuse block logic module responds by applying ground to the low beam relay control circuit which energizes the low beam relay. With the low beam relay energized, the switch contacts close allowing battery voltage to flow through the low beam fuses. Battery voltage is then applied from the fuses, through the low beam control circuits illuminating the low beam headlamps.

High Beam Headlamps – USA

The high beam and flash to pass functions are contained within the turn signal/multifunction switch. The BCM provides the turn signal/multifunction switch with two signal circuits, the high beam signal circuit and the flash to pass signal circuit. When the low beam headlamps are ON and the turn signal/multifunction switch is placed in the high beam position, ground is applied to the BCM through the high beam signal circuit. The BCM responds to the high beam request by sending a serial data message to the underhood fuse block internal logic module requesting the high beams be applied. The underhood fuse block logic module responds to the high beam request by applying ground to the high beam relay control circuit which energizes the high beam relay. With the high beam relay energized, the switch contacts close allowing battery voltage to flow through the high beam fuses to the high beam control circuits illuminating the high beam headlamps.

High Beam Headlamps – Canada

The high beam and flash to pass functions are contained within the turn signal/multifunction switch. The BCM provides the turn signal/multifunction switch with two signal circuits, the high beam signal circuit and the flash to pass signal circuit. When the low beam headlamps are ON and the turn signal/multifunction switch is placed in the high beam position, ground is applied to the BCM through the high beam signal circuit. The BCM responds to the high beam request by sending a serial data message to the underhood fuse block internal logic module requesting the high beams be applied. The underhood fuse block logic module responds to the high beam request by applying ground to the high beam relay control circuit which energizes the high beam relay. With the high beam relay energized, the switch contacts close allowing battery voltage to flow through the high beam fuses to the high beam control circuits. The right high beam control circuit supplies voltage to the daytime running lamps relay 2 coil energizing the relay coil. With the relay coil energized, the relay switch contacts close allowing voltage to flow through to the right high beam headlamp. With the left and right high beam headlamps supplied with voltage, the high beam headlamps illuminate.

Daytime Running Lamps – USA

When the turn signal/multifunction switch is placed in the OFF position, the turn signal/multifunction switch headlamps OFF signal circuit is grounded, indicating to the body control module (BCM) that the exterior lamps should be turned OFF. The BCM responds to the exterior lamps OFF request by sending a serial data message to the underhood fuse block internal logic module requesting all exterior lamps be turned OFF. The underhood fuse block logic module responds by

turning OFF all exterior lamps and at the same time applying ground to the daytime running lamps relay 1 control circuit energizing the relay. With the daytime running lamps relay 1 energized, the switch contacts close allowing battery voltage to back feed through the right high beam ground circuit to the right high beam headlamp. The voltage continues through the right high beam to the left and right high beam fuses which supply the left high beam. The left high beam provides the ground path that completes the circuit which causes the left and right high beam headlamps to illuminate for daytime running lamp operation.

When the turn signal/multifunction switch is placed in the PARK or HEAD positions, the underhood fuse block logic module removes ground from the daytime running lamps relay 1 control circuit which de-energizes the relay. With the daytime running lamps relay 1 de-energized, the switch contacts open. With the switch contacts in the open position the circuit becomes the ground path for the right headlamp for normal low/high beam operation.

Daytime Running Lamps – Canada

When the turn signal/multifunction switch is placed in the OFF position, the turn signal/multifunction switch headlamps OFF signal circuit is grounded, indicating to the body control module (BCM) that the exterior lamps should be turned OFF. The BCM responds to the exterior lamps OFF request by sending a serial data message to the underhood fuse block internal logic module requesting all exterior lamps be turned OFF. The underhood fuse block logic module responds by turning OFF all exterior lamps and at the same time applying ground to the daytime running lamps relay 1 control circuit energizing the relay. With the daytime running lamps relay 1 energized, the switch contacts close allowing battery voltage to back feed through the right low beam ground circuit to the right low beam headlamp. The voltage continues through the right low beam to the left and right low beam fuses which supply the left low beam. The left low beam provides the ground path that completes the circuit which causes the left and right low beam headlamps to illuminate for daytime running lamp operation.

When the turn signal/multifunction switch is placed in the PARK or HEAD positions, the underhood fuse block logic module removes ground from the daytime running lamps relay 1 control circuit which de-energizes the relay. With the daytime running lamps relay 1 de-energized, the switch contacts open. With the switch contacts in the open position the circuit becomes the ground path for the right headlamp for normal low/high beam operation.

Flash to Pass

When the turn signal/multifunction switch is momentarily placed in the flash to pass position, ground is applied to the BCM through the flash to pass signal circuit. The BCM responds to the flash request by sending a serial data message to the underhood fuse block internal logic module requesting the high beams be applied. The underhood fuse block logic module responds to the flash to pass request by applying ground to the high beam relay control circuit

which energizes the high beam relay illuminating the high beams for a brief moment or until the flash to pass switch is released.

Hazard Lamps

The hazard flashers may be activated in any power mode. The hazard warning switch signal circuit is momentarily grounded when the hazard warning switch is pressed. The body control module (BCM) responds to the hazard warning switch signal input by sending a serial data message to the internal logic module of the underhood fuse block. The internal logic at the underhood fuse block responds by supplying battery voltage to all four turn signal lamps in an ON and OFF duty cycle. When the hazard warning switch is activated, the BCM sends a serial data message to the instrument cluster requesting both turn signal indicators to be cycled ON and OFF.

Park, Tail, and License Lamps

With the park lamps ON, the Body Control Module (BCM) sends a serial data message to the underhood fuse block internal logic module requesting the park lamps be commanded on. The underhood fuse block internal logic module responds to the request by applying ground to the tail lamps relay coil energizing the coil. With the tail lamps relay coil energized, the relay switch contacts close allowing battery voltage to flow through the relay switch contacts to the F34 UA fuse on to the front and rear parks lamps as well as the interior components that have backlighting.

Stop Lamps

The stop lamp switch is used to sense the action of the driver application of the brake pedal. Battery voltage is supplied to the stop lamp switch at all times through the F11 DA fuse located in the instrument panel fuse block. When the brakes are applied, the stop lamp switch contacts close allowing battery voltage to flow through the left and right stop lamp control circuits as well as the center high mounted stop lamp control circuit illuminating the left and right stop lamps and the center high mounted stop lamp. Once the driver releases the brake pedal, the stop lamp switch contacts open and battery voltage is removed from the stop lamps control circuit.

Turn Signal Lamps

Ground is applied at all times to the turn signal/multifunction switch. The turn signal lamps may only be activated with the ignition switch in the ON or START positions. When the turn signal/multifunction switch is placed in either the TURN RIGHT or TURN LEFT position, ground is applied to the body control module (BCM) through either the right turn or left turn signal switch signal circuit. The BCM responds to the turn signal switch input by applying a pulsating voltage to the front and rear turn signal lamps through their respective control circuits. When a turn signal request is received by the BCM, a serial data message is sent to the instrument panel requesting the respective turn signal indicator be pulsed ON and OFF.

Backup Lamps

With the ignition ON, battery voltage is supplied to the backup lamp switch through the F44 UA fuse located in the underhood fuse block. With the ignition ON and the transmission in the reverse position, the backup lamp switch contacts close allowing battery voltage to flow through the backup lamps control circuit illuminating the backup lamps. Once the driver moves the gear selector out of the reverse position, the backup lamp switch contacts open and battery voltage is removed from the backup lamps control circuit. The engine must be running for the backup lamps to operate.

Battery Run Down Protection/ Inadvertent Power

To provide battery run down protection, the exterior lamps will be deactivated automatically under certain conditions. The BCM monitors the state of the turn signal/multifunction switch. If the park or headlamp switch is ON when the ignition switch is placed in either the CRANK or RUN position and then placed in the OFF position, the BCM initiates a 5 minute timer. At the end of the 5 minutes, the BCM will turn off the control power output to the park lamp controls as well as the headlamp relay coils, deactivating the exterior lamps. This feature will be cancelled if any power mode other than OFF becomes active or the turn signal/multifunction switch status changes.

Interior Lighting Systems Description and Operation

Interior Courtesy Lamps

The interior courtesy lighting system consist of following components:

- Dome lamps
- Reading lamps
- Rear compartment courtesy lamp

Dome Lamps

The dome lamp switch has 3 positions: DOOR, OFF, and ON. The ON position provides a ground for continuous operation and the dome lamps will remain illuminated until the switch is placed in either the DOOR or OFF position. When in the DOOR position, the dome lamps operation is controlled by the body control module (BCM). When any door is opened, the door ajar switch contacts close and the BCM receives a door-open input. The BCM illuminates the dome lamps when any door is opened or a door lock/unlock request is activated with the key fob. After all doors have been closed, the dome lamps will remain illuminated approximately 3 seconds after the last door closes. When the driver places the dome lamp switch in the OFF position, the dome lamps will be disabled. In the event that the dome lamps were to remain illuminated for more than 10 minutes with the vehicle ON/OFF switch in the OFF position, the BCM will deactivate the dome lamps control circuit to prevent total battery discharge.

Reading Lamps

The body control module (BCM) supplies battery voltage to the front reading lamp via the courtesy lamp control circuit. The front reading lamps are controlled by individual switches that are activated by the operator when additional cabin lighting is required. In the event that any of these courtesy lamps were to remain illuminated for more than 10 minutes with the ignition switch in the OFF position, the BCM will deactivate the courtesy lamp control circuit to prevent total battery discharge.

Rear Compartment Courtesy Lamp

When the rear compartment is opened, the rear compartment lid latch opens providing a rear compartment open input signal to the BCM. The BCM responds by applying battery voltage to the rear compartment courtesy lamp control circuit illuminating the rear compartment courtesy lamp.

Keyless Entry Interior Illumination

When the operator uses the keyless entry transmitter in order to unlock the doors, the BCM receives a door-unlock signal. The BCM must receive inputs from various systems that indicate that the ignition switch is OFF, the courtesy lamp switch is OFF, and all doors are closed before the BCM will activate the interior lamps. After all doors have been closed, the courtesy lamps will turn OFF immediately if the ignition switch is turned to the ON position, the door locks are LOCKED, or approximately 20 seconds after the last door closes. The BCM will turn off the courtesy lamps through the theater dimming feature.

Interior Component Backlighting

The interior component backlighting system consist of following components:

- Hazard switch
- HVAC control switch assembly
- Instrument cluster
- Radio
- Steering wheel control switch – left
- Steering wheel control switch – right
- Traction control switch
- Transmission shift lever

With the park lamps ON, the Body Control Module (BCM) sends a serial data message to the underhood fuse block internal logic module requesting the park lamps be commanded on. The underhood fuse block internal logic module responds to the request by applying ground to the tail lamps relay coil energizing the coil. With the tail lamps relay coil energized, the relay switch contacts close allowing battery voltage to flow through the relay switch contacts to the F34 UA fuse on to the front and rear parks lamps as well as the interior components that have backlighting. The instrument cluster receives the park lamps request via serial data from the underhood fuse block internal logic module and responds by applying ground to the interior backlighting control circuit. With ground applied to the interior backlighting control circuit all components with backlighting on the circuit illuminate.

**Battery Rundown Protection/
Inadvertent Power**


To provide battery run down protection, the interior lamps will be deactivated automatically under certain conditions. In the event that any of these lamps were to remain illuminated for a period of more than 10 minutes

with the ignition switch in the OFF position, the BCM will deactivate the inadvertent power supply voltage circuit to prevent total battery discharge. If the ignition switch is turned to any position other than OFF, or if a lamp switch is activated during this 10 minute period, the timer resets for another 10 minutes.

Mirrors

Schematic and Routing Diagrams

Outside Rearview Mirror Schematics (Power, Ground, Power Mirror Switches and Motors)

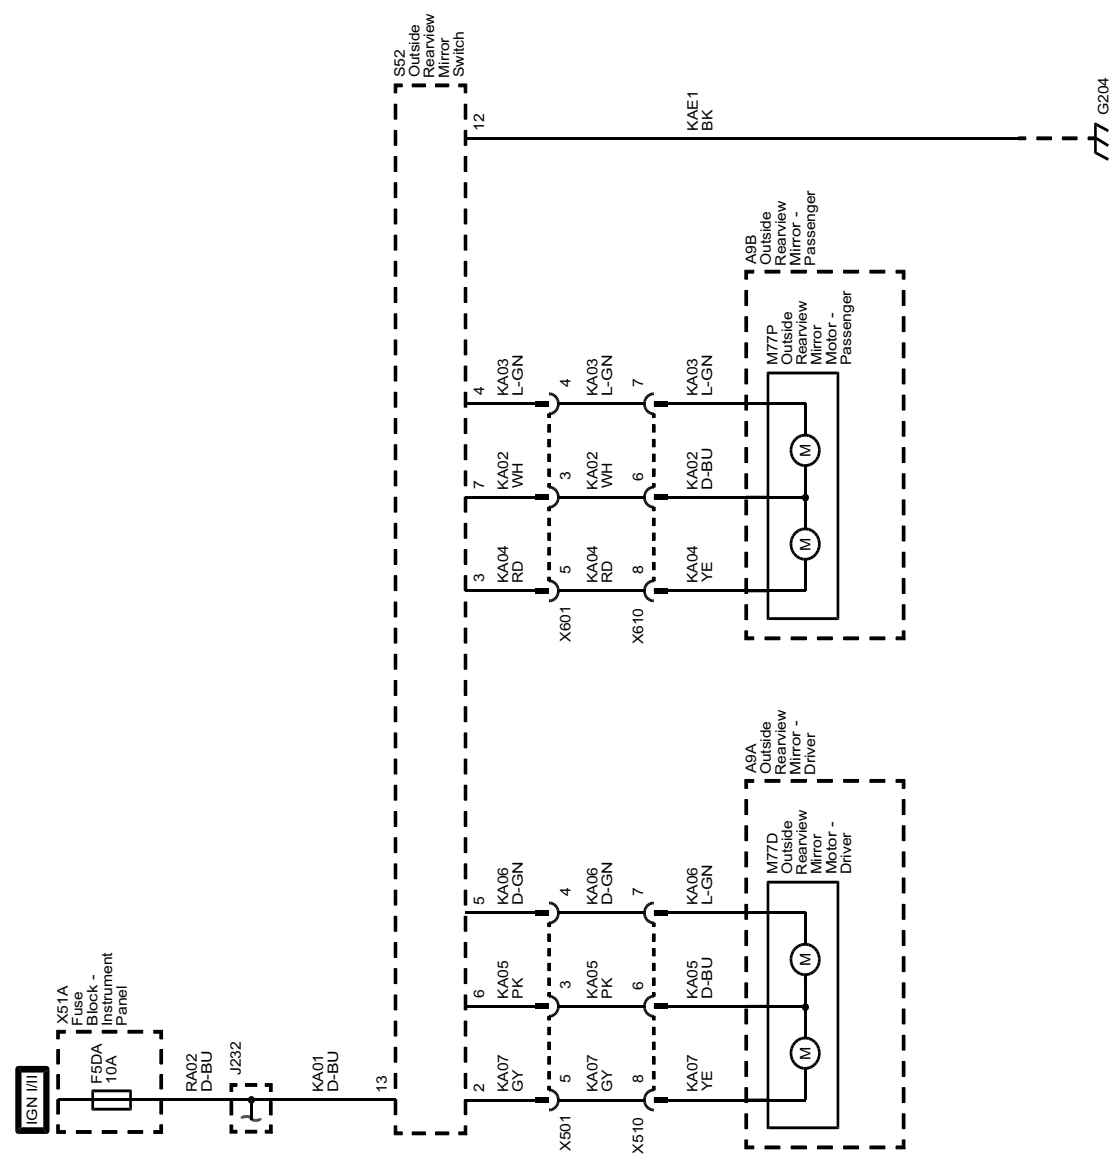

Description and Operation

Outside Mirror Description and Operation


Power Mirror System Components

The power mirror system consists of the following components:

- Outside rearview mirror switch
- Mirror selector switch
- Driver outside rearview mirror
- Passenger outside rearview mirror

Each of the outside rearview mirror contains two motors. The vertical motor operates the mirror in the up and down directions, and the horizontal motor operates the mirror in the left and right directions.

Power Mirrors Without A45 Block Diagram

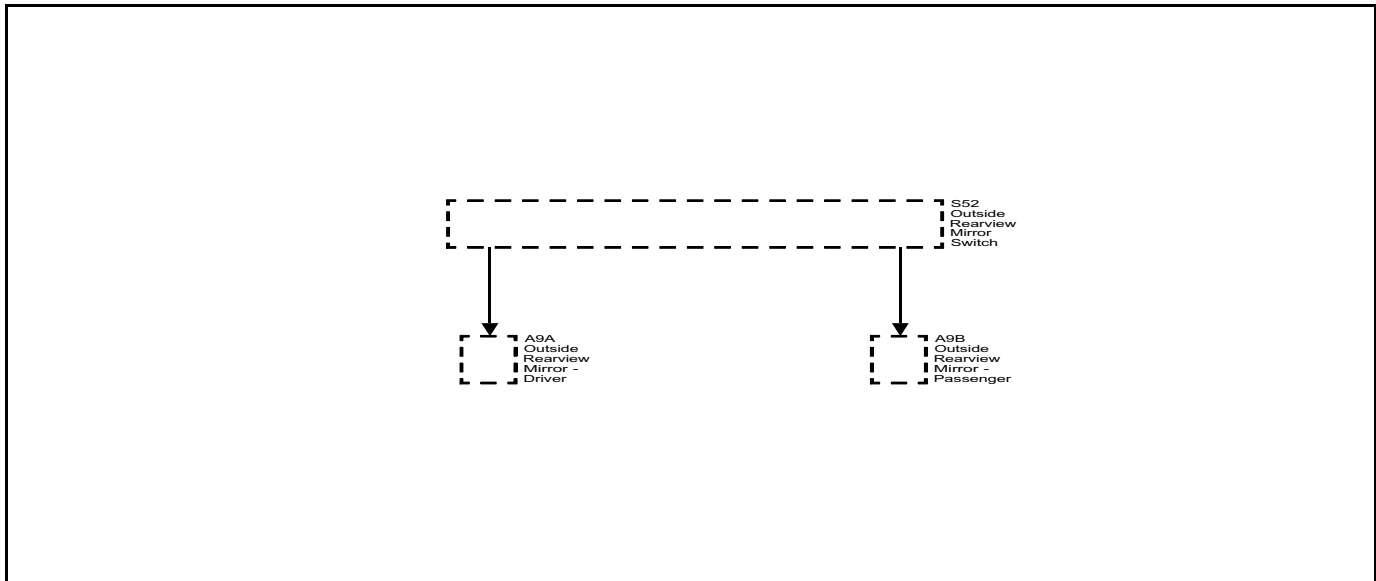

3270441

Power Mirror System Controls

The outside rearview mirror switch is a four position directional switch: Up, Down, Left and Right.

The mirror select switch is a three position switch: left, neutral/fold, and right.

Power Mirror System Operation

The outside rearview mirror switch receives battery voltage from the underhood fuse block. The power mirror switch also receives a constant ground.

The four positions of the direction switch have dual switch contacts. Each of the contacts are connected to opposing sides of the appropriate power mirror motors through the selector switch. The selector switch completes these circuits depending on the position of the selector switch, L or R.

If the selector switch is placed in the L position and the up switch is pressed, battery voltage will be supplied to the left outside rearview mirror vertical motor through

the left mirror motor vertical control circuit and ground through the left mirror motor common control circuit. If the down switch is pressed, battery voltage will be supplied to the left outside rearview mirror vertical motor through the left mirror motor common control circuit and ground through the left mirror motor vertical control circuit.

The remainder of the mirror functions operate in the same manner as described above. Placing the power mirror switch in opposing positions, left/right or up/down, will reverse the polarity to the mirror motor, reversing the direction of movement.



Heated Mirrors (If Equipped)

The heated mirrors are controlled through the rear defog relay. Whenever the rear window defogger is turned on battery voltage is supplied to the mirror heater elements through the left and right mirror heater element control circuits.


Vehicle Access

Schematic and Routing Diagrams


Door Lock/Indicator Schematics (Door Lock Switches)

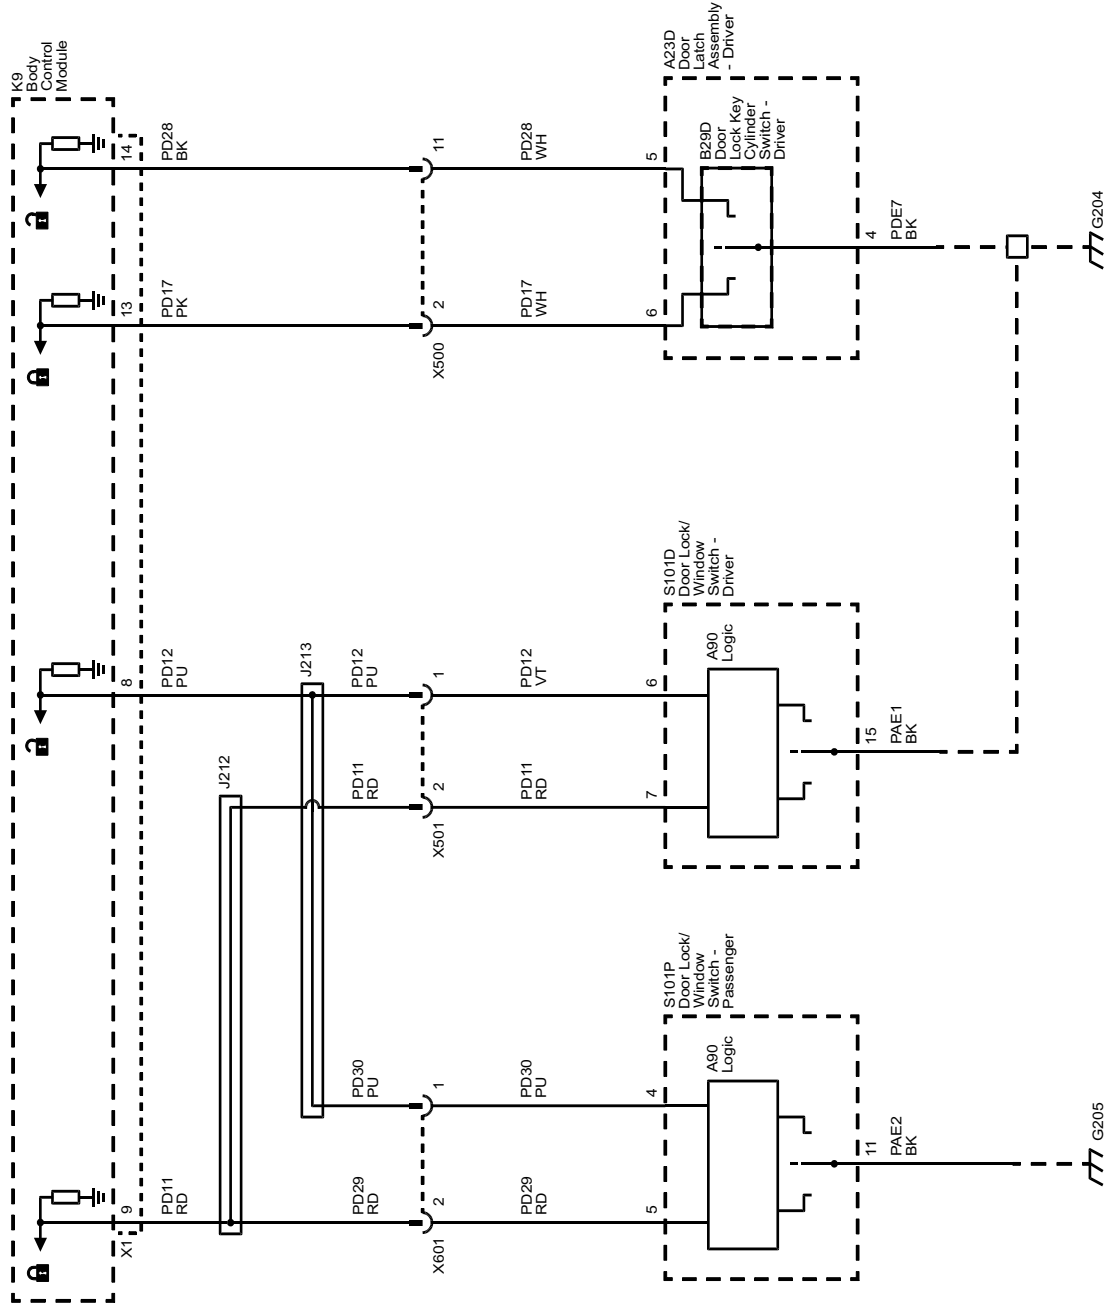

Door Lock/Indicator Schematics (Actuators)

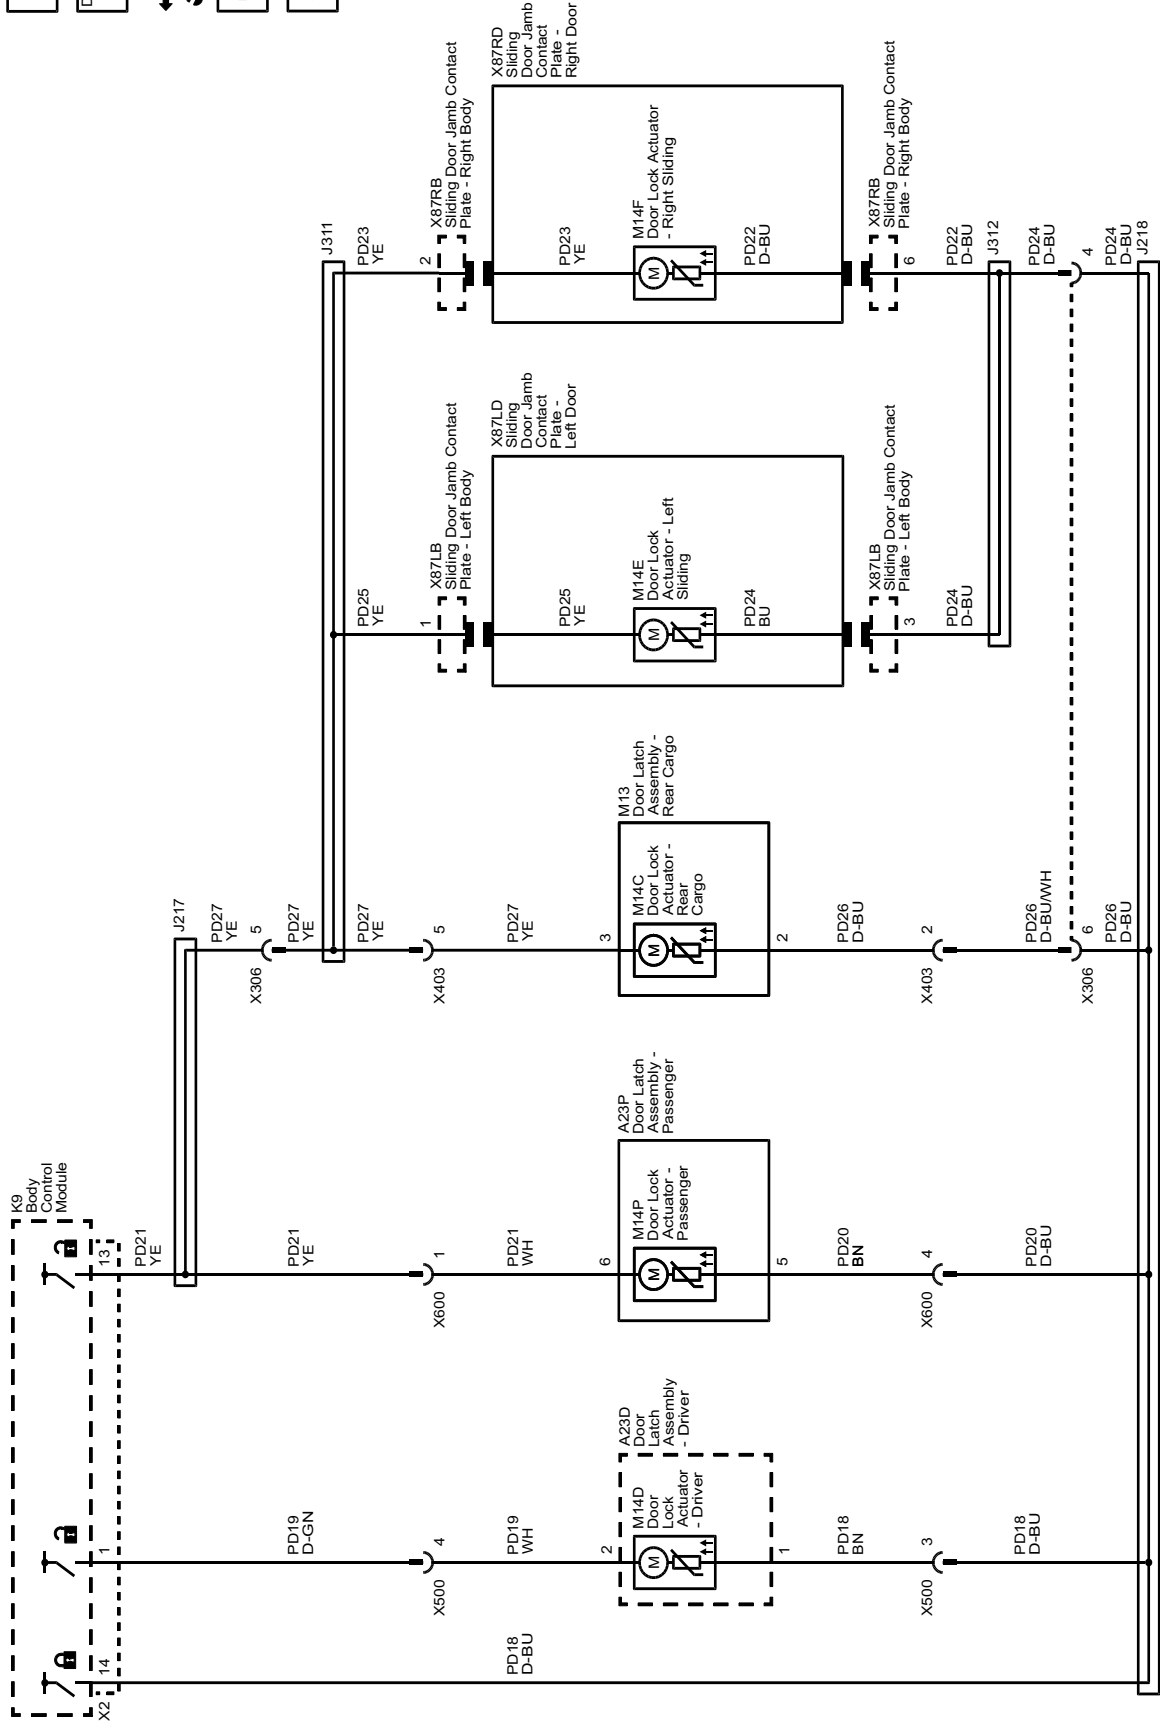

Door Lock/Indicator Schematics (Door Switch Controls)

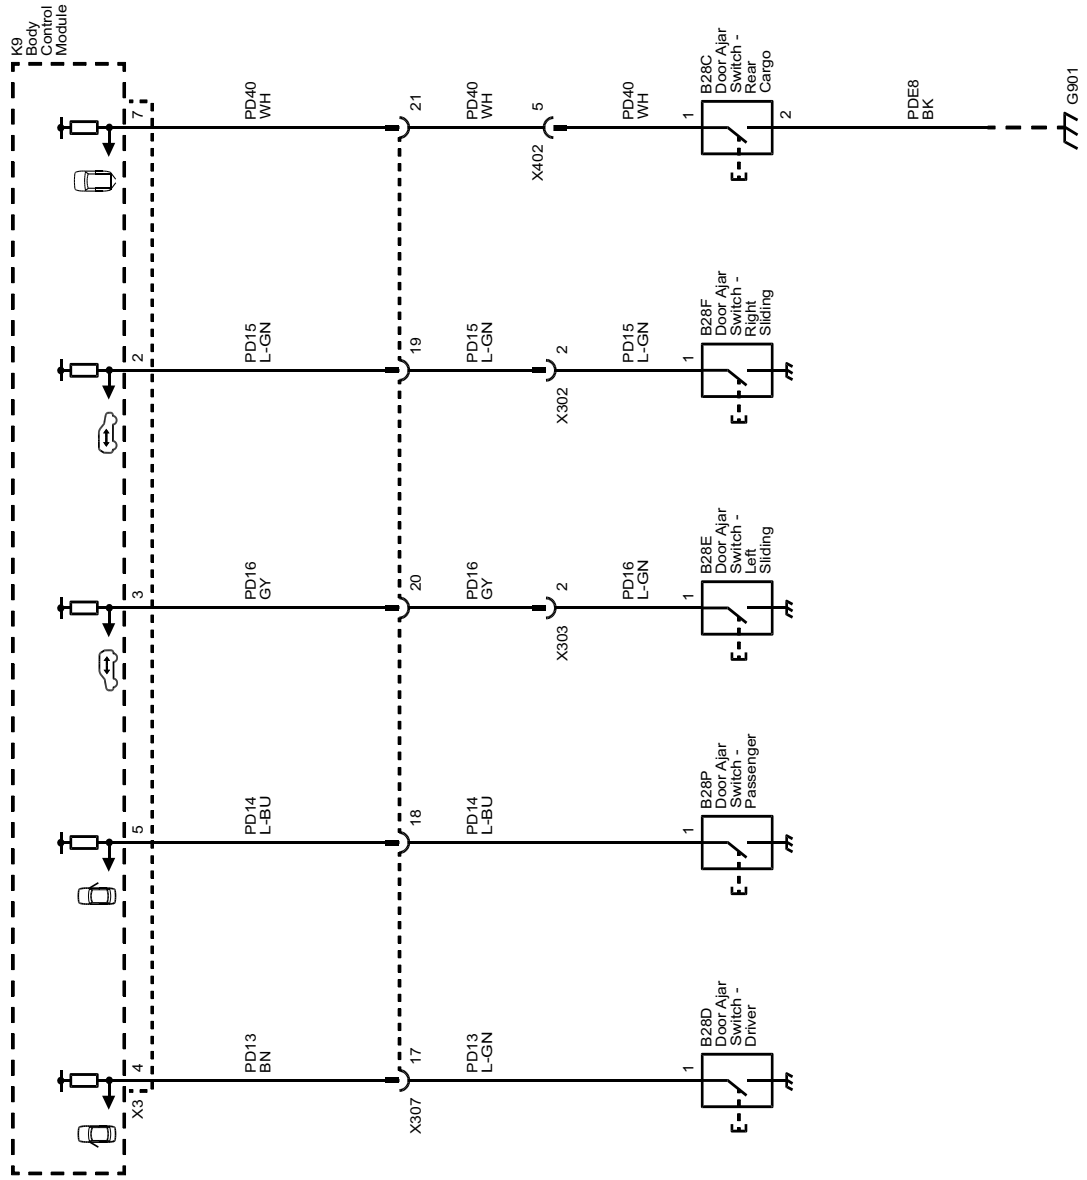

Description and Operation

Door Ajar Indicator Description and Operation

Door Ajar Indicator System Components

The door ajar indicator system consists of the following components:

- The body control module (BCM)
- The instrument panel cluster (IPC)
- The driver information center (DIC)
- The door ajar switch

Door Ajar Operation

The body control module (BCM) receives a discrete input from the door ajar switch to indicate the status of the door. The BCM then communicates this status to the instrument panel cluster (IPC) via GMLAN serial data. The IPC, upon receipt of this message, will illuminate the door ajar message in the driver information center (DIC) and also send a GMLAN serial data message to the radio to activate the door ajar audible warning when the following conditions are met:

- The transmission is shifted out of PARK.
- The vehicle speed is greater than 8 km/h (5 mph).

Power Door Locks Description and Operation

Door Lock System Components

The power door lock system consists of the following components:

- Driver door lock switch
- Passenger door lock switch

- Key cylinder switch
- Body control module (BCM)
- Driver door latch assembly
- Passenger door lock actuator
- Left sliding door lock actuator
- Right sliding door lock actuator
- Rear cargo door lock actuator

Door Lock and Unlock Operation

The BCM supplies a 1.5 V signal to each of the door lock and door unlock signal circuits. When the door lock switches are in the open position, the voltage level in the signal circuit will be near 1.5 V. When any door lock switch is pressed to the lock or unlock position, the voltage level in the appropriate signal circuit will drop to 0 V and the BCM will detect the voltage drop and command the door lock actuators to perform the requested lock or unlock command.

The BCM powers the reversible door lock actuators by providing battery positive voltage and ground to the appropriate lock and unlock control circuits of the door lock actuators. The lock and unlock control circuits of the rear cargo door, the sliding door and passenger door lock actuators are all connected together. Transitioning of the lock actuators to the lock or unlocked position depends upon which control circuits receive voltage and which control circuits receive ground.

The following three circuits are used to operate the lock and unlock control system:


- Driver door unlock
- Passenger/side/rear door unlock
- All door lock

The driver door lock actuator is isolated so it can be unlocked by itself using the keyless entry transmitter.

Wipers and Washers

Schematic and Routing Diagrams

Wiper/Washer Schematics (Wiper and Washer Motor Controls)

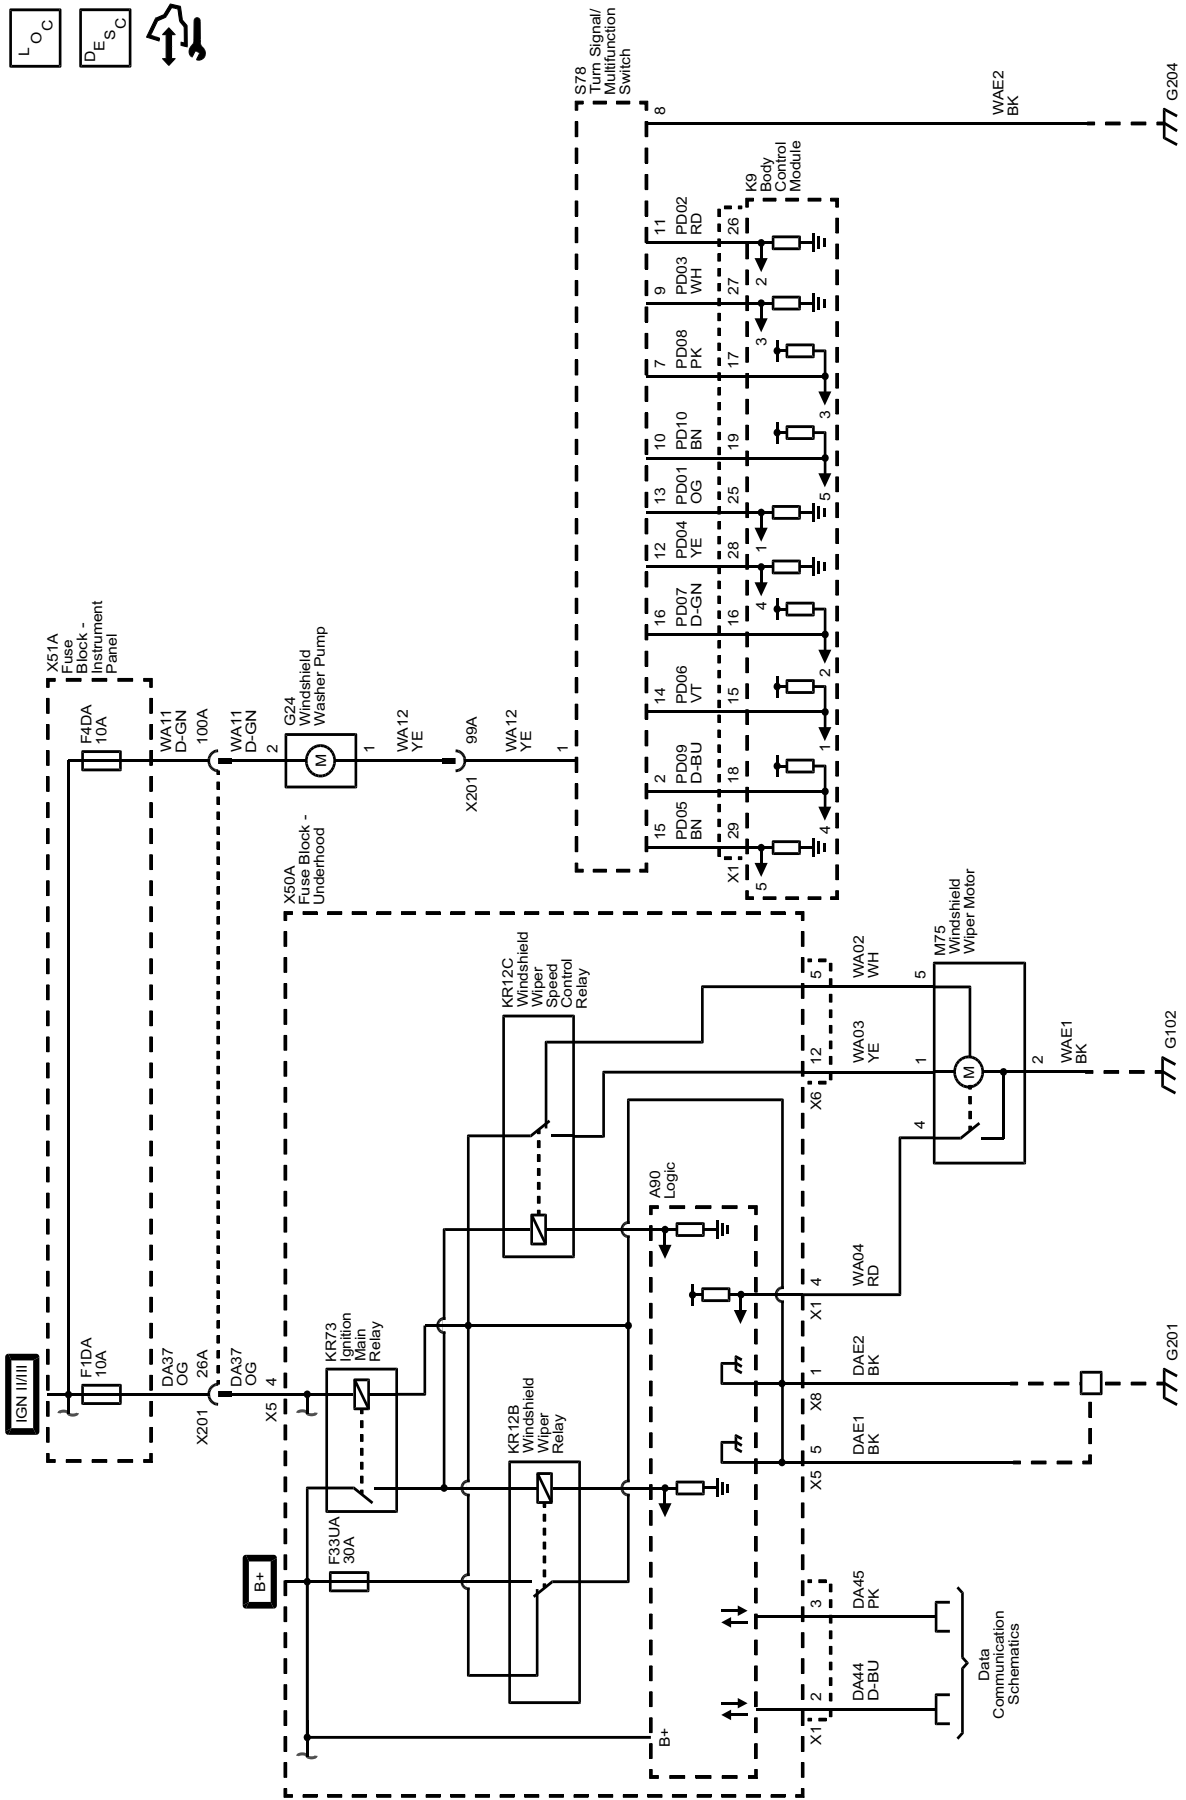

Description and Operation

Wiper/Washer System Description and Operation

Wiper/Washer System Components

The wiper/washer system consists of the following electrical components:

- Windshield Wiper Relay
- Windshield Wiper Speed Control Relay
- Windshield Washer Pump
- Windshield Wiper Motor
- Windshield Wiper/Washer Switch
- Body Control Module (BCM)
- Windshield Washer Fluid Level Switch
- Instrument Cluster
- Underhood Fuse Block (Contains Windshield Washer Pump PCB Relay)

Modes of Operation

The normal wiper system function positions are as follows:

- INTERMITTENT
- LOW
- HIGH
- WASH

Windshield Wiper System

The body control module (BCM) controls the wiper motor via printed circuit board (PCB) relays (Windshield Wiper Relay and Windshield Wiper Speed Control Relay). The BCM determines the wipe/wash system mode of operation by monitoring several signals from the Windshield Wiper/Washer Switch.

The Windshield Wiper operates through the BCM.

1. BCM reads the combination switch position and transmits the front wiper request signal (LO/High/Intermittent/Park) to underhood fuse block using CAN communication.
2. BCM transmits the front wiper request signal (LO/High/Intermittent/Park) to underhood fuse block using CAN communication
3. Underhood fuse block turns ON the front wiper relay
4. The front wiper operates as LO/High/Intermittent/Park based on the wiper switch request.

High Speed Wiper Operation

1. BCM reads the combination switch position (front wiper switch in HI) and transmits the front wiper request signal High to underhood fuse block using CAN communication.
2. BCM transmits the front wiper request signal High to underhood fuse block using CAN communication
3. Underhood fuse block turns ON the front wiper speed relay and the front wiper high relay

Low Speed Wiper Operation

1. BCM reads the combination switch position (front wiper switch in LO) and transmits the front wiper request signal Low to underhood fuse block using CAN communication.
2. BCM transmits the front wiper request signal Low to underhood fuse block using CAN communication
3. Underhood fuse block turns ON the front wiper relay and the front wiper relay and the front wiper Low speed.


Intermittent Wiper Operation

1. BCM reads the combination switch position (front switch is turned INT) and transmits the front wiper request signal intermittent to underhood fuse block using CAN communication.
2. BCM transmits the front wiper request signal intermittent to underhood fuse block using CAN communication
3. Underhood fuse block turns ON the front wiper relay only once.
4. BCM detects stop position of the front wiper motor based on the front wiper stop position signal received from Underhood fuse block
5. BCM transmits the front wiper request signal (INT) again after the delay interval

Wiper Park Operation

1. BCM reads the combination switch position (front wiper switch in OFF) and transmits the front wiper request signal intermittent to underhood fuse block using CAN communication.
2. BCM monitors wiper switch position by combination switch reading position function
3. BCM stops transmitting the front wiper request signal to the Underhood fuse block
4. Underhood fuse block detects the front wiper auto stop signal from the position of the front wiper motor.
5. When the front wiper request signal is stopped, Underhood fuse block turns ON the front wiper relay until the front wiper motor returns to the stop position.
6. Underhood fuse block turns the front wiper relay OFF when the front wiper motor has reached the stop position.

Wiper Block Diagram

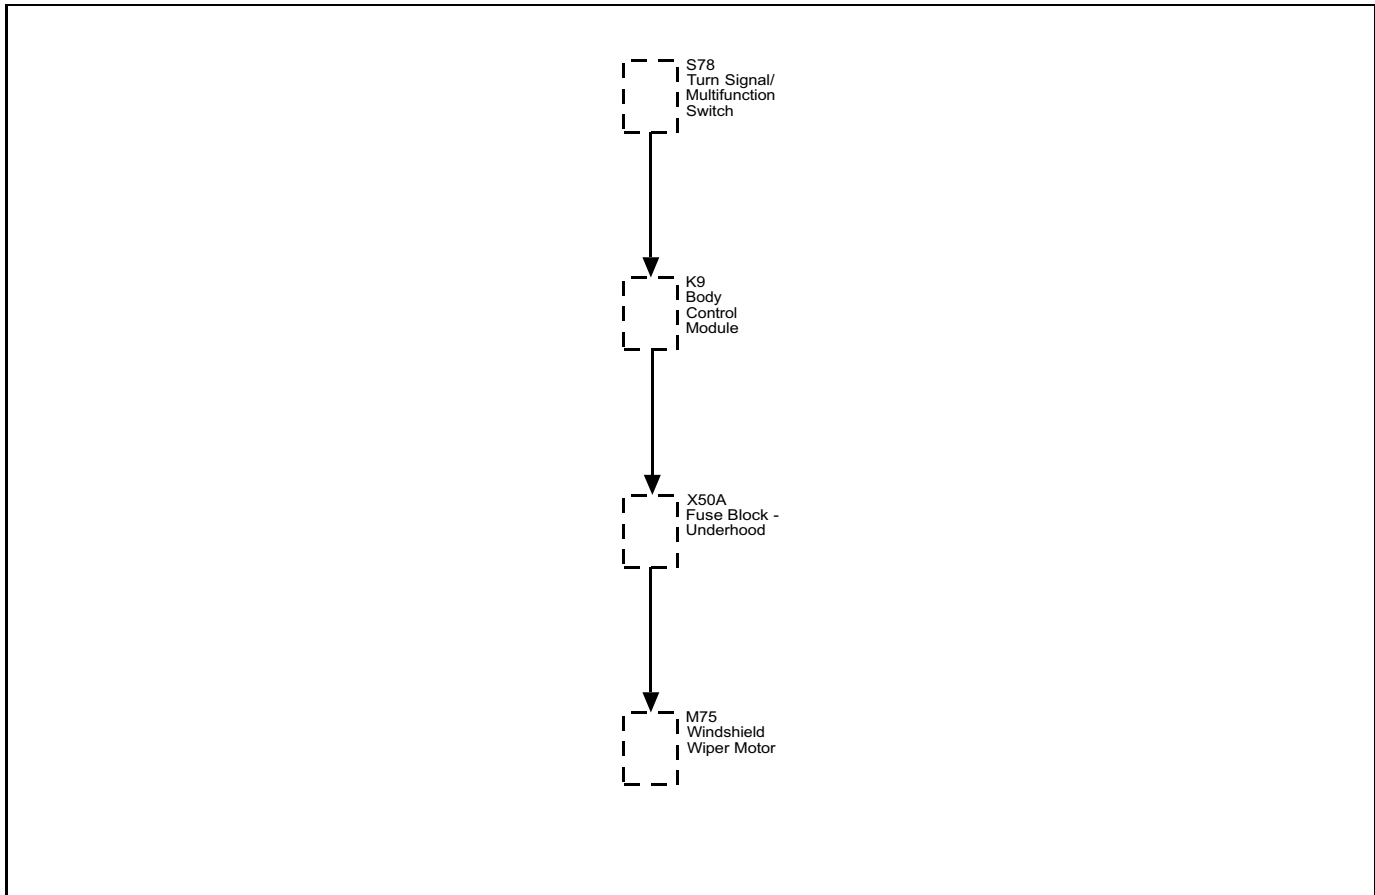

3968170

Windshield Washer System

The windshield washer pump is not controlled by the BCM, it is only controlled the turn signal multifunction switch. The BCM receives the washer switch signal, but only to send the underhood fuse block a message to control the wipers during the wash.

The body control module (BCM) monitors the switch signal request during the wash request in order to operate the wiper.

When Ignition is on, Battery voltage is supplied. the B+ supply voltage to the windshield washer pump through a 10 A circuit breaker located in the instrument panel fuse block. When the washer switch is pressed, battery voltage is applied through the switch contacts the windshield washer pump control circuit to operate the wash. When the washer switch is in a inactive state, the switch contacts are opened to the switch ground circuit.

Diagnostic Aids


Note: The windshield washer pump uses washer fluid as a coolant and lubricant, do not activate washer pump for long periods without washer fluid in the windshield washer bottle as the washer pump will overheat and become damaged.

If the windshield washer pump activates but does not spray fluid, inspect for the following:

- Disconnected washer hose
- Cut or perforated washer hose
- Obstructed washer hose

- Dirt or debris in washer bottle obstructing washer pump inlet
- Obstructed washer nozzles

Washer Block Diagram

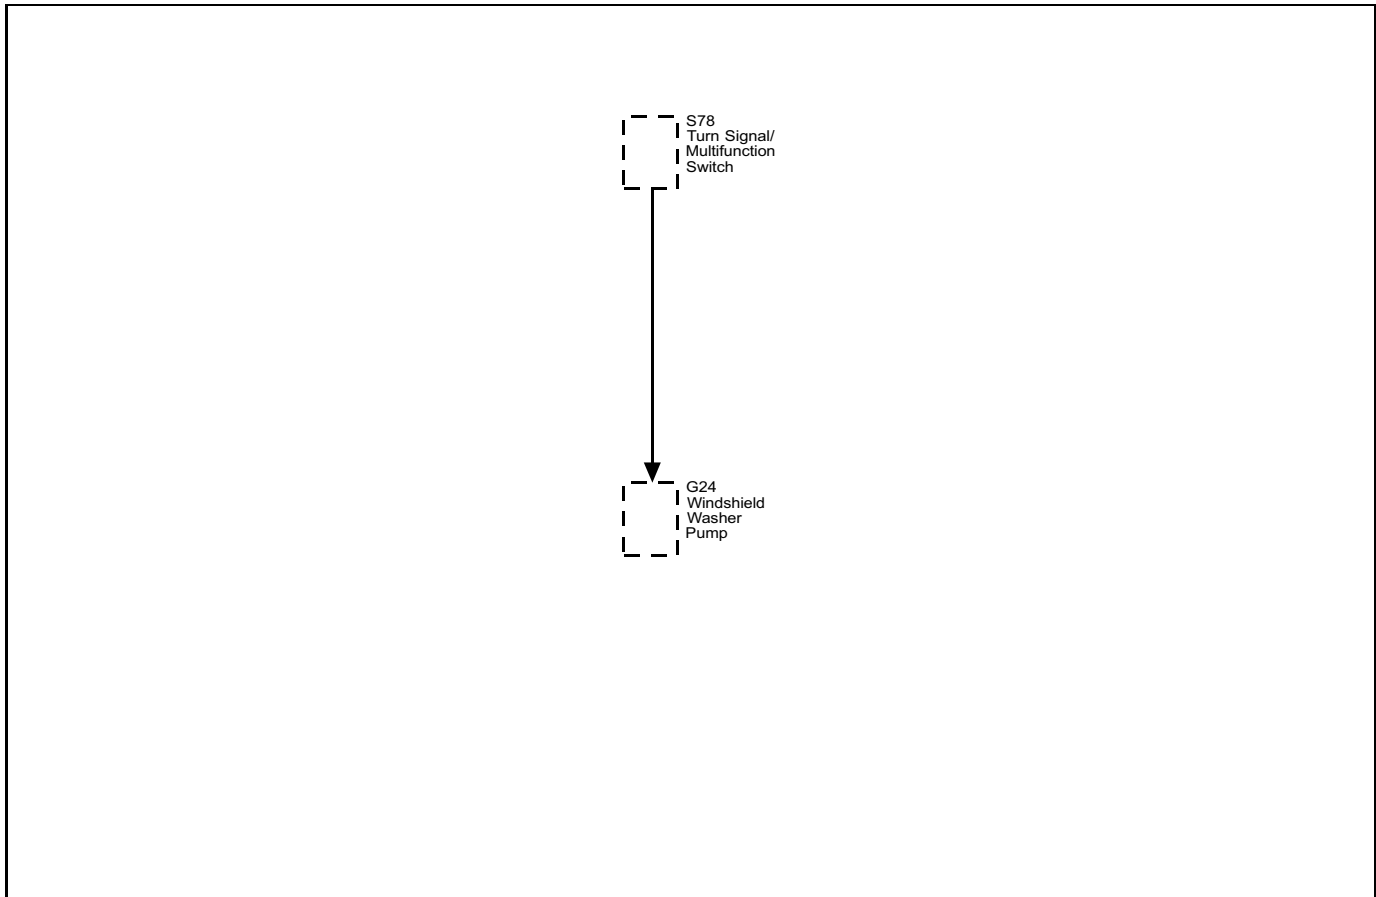


3968171

Washer Fluid Level Indicator

The check washer fluid message is controlled by the instrument cluster using signal from the Windshield Washer Fluid level Sensor. The washer fluid level signal circuit is supplied voltage through a resistor then monitored within the instrument cluster. The Windshield Washer Fluid level Sensor is normally close so the instrument cluster detects voltage on the Windshield Washer Fluid level Sensor signal circuit whenever the washer fluid level sensor is not low. When the washer fluid reaches the point where the driver should be informed that the washer fluid is low, the washer fluid level sensor opens. When the washer fluid level sensor is closed the washer fluid level signal circuit voltage is pulled low, and the instrument cluster displays the LOW WASHER FLUID INDICATOR message on the driver information center. In order to prevent the LOW WASHER FLUID INDICATOR message from being displayed while sloshing is occurring in the washer fluid container, the instrument cluster is programmed with a 1 min delay before changing states of the check washer fluid message during an ignition cycle.

Washer Fluid Level Block Diagram

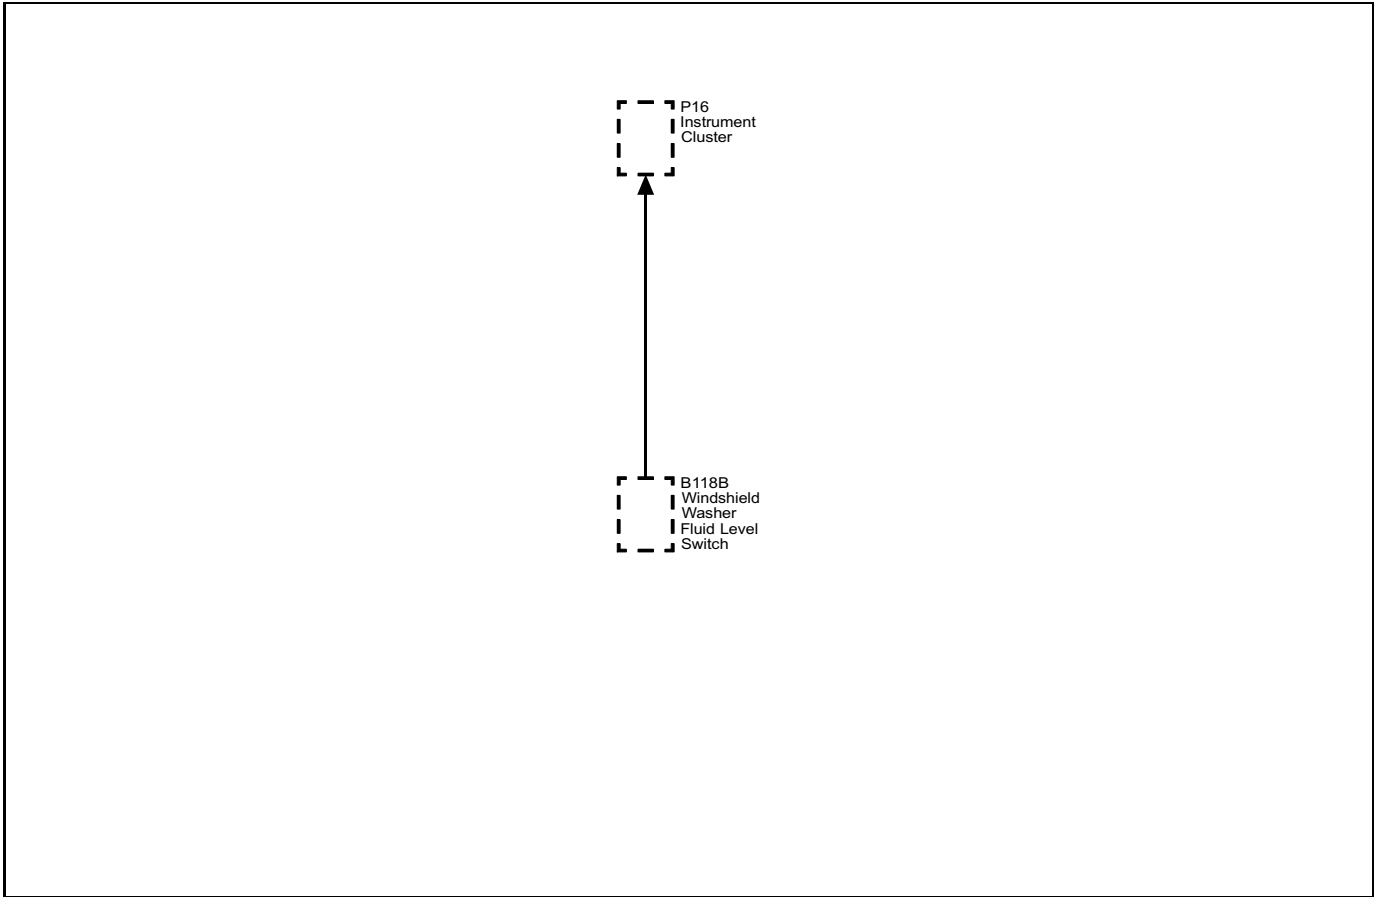

3639958

BLANK

Section 3

Driver Information and Entertainment


Cellular, Entertainment, and Navigation	3-3	Secondary and Configurable Customer	
Schematic and Routing Diagrams	3-3	Controls	3-15
Radio/Navigation System Schematics	3-4	Schematic and Routing Diagrams	3-15
Cellular Telephone Schematics	3-8	Steering Wheel Secondary/Configurable Control	
Description and Operation	3-11	Schematics	3-16
Radio/Audio System Description and Operation			
(without Navigation System)	3-11		
Radio/Audio System Description and Operation			
(with Navigation System)	3-12		

BLANK

Cellular, Entertainment, and Navigation


Schematic and Routing Diagrams

Radio/Navigation System Schematics (Radio (U1B without UPF))

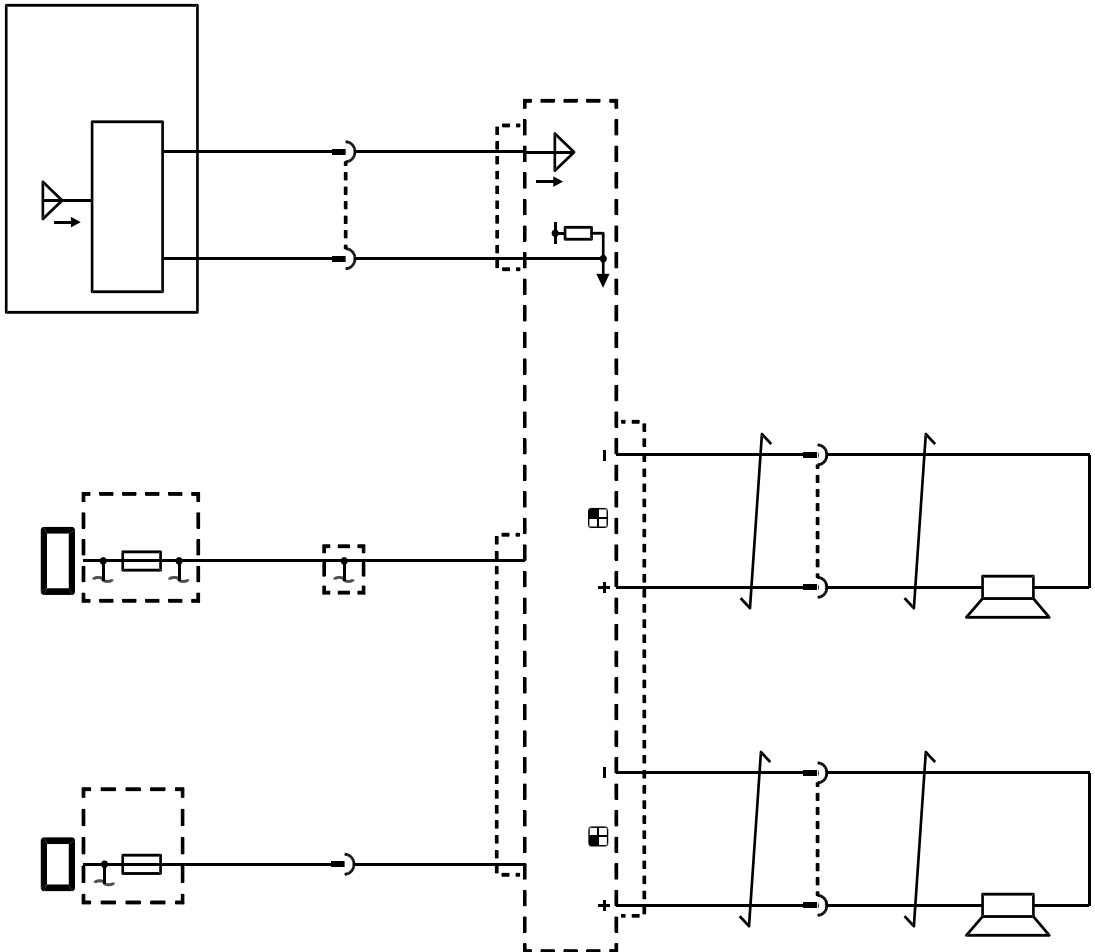


4509934


Radio/Navigation System Schematics (Radio (U1B with UPF))

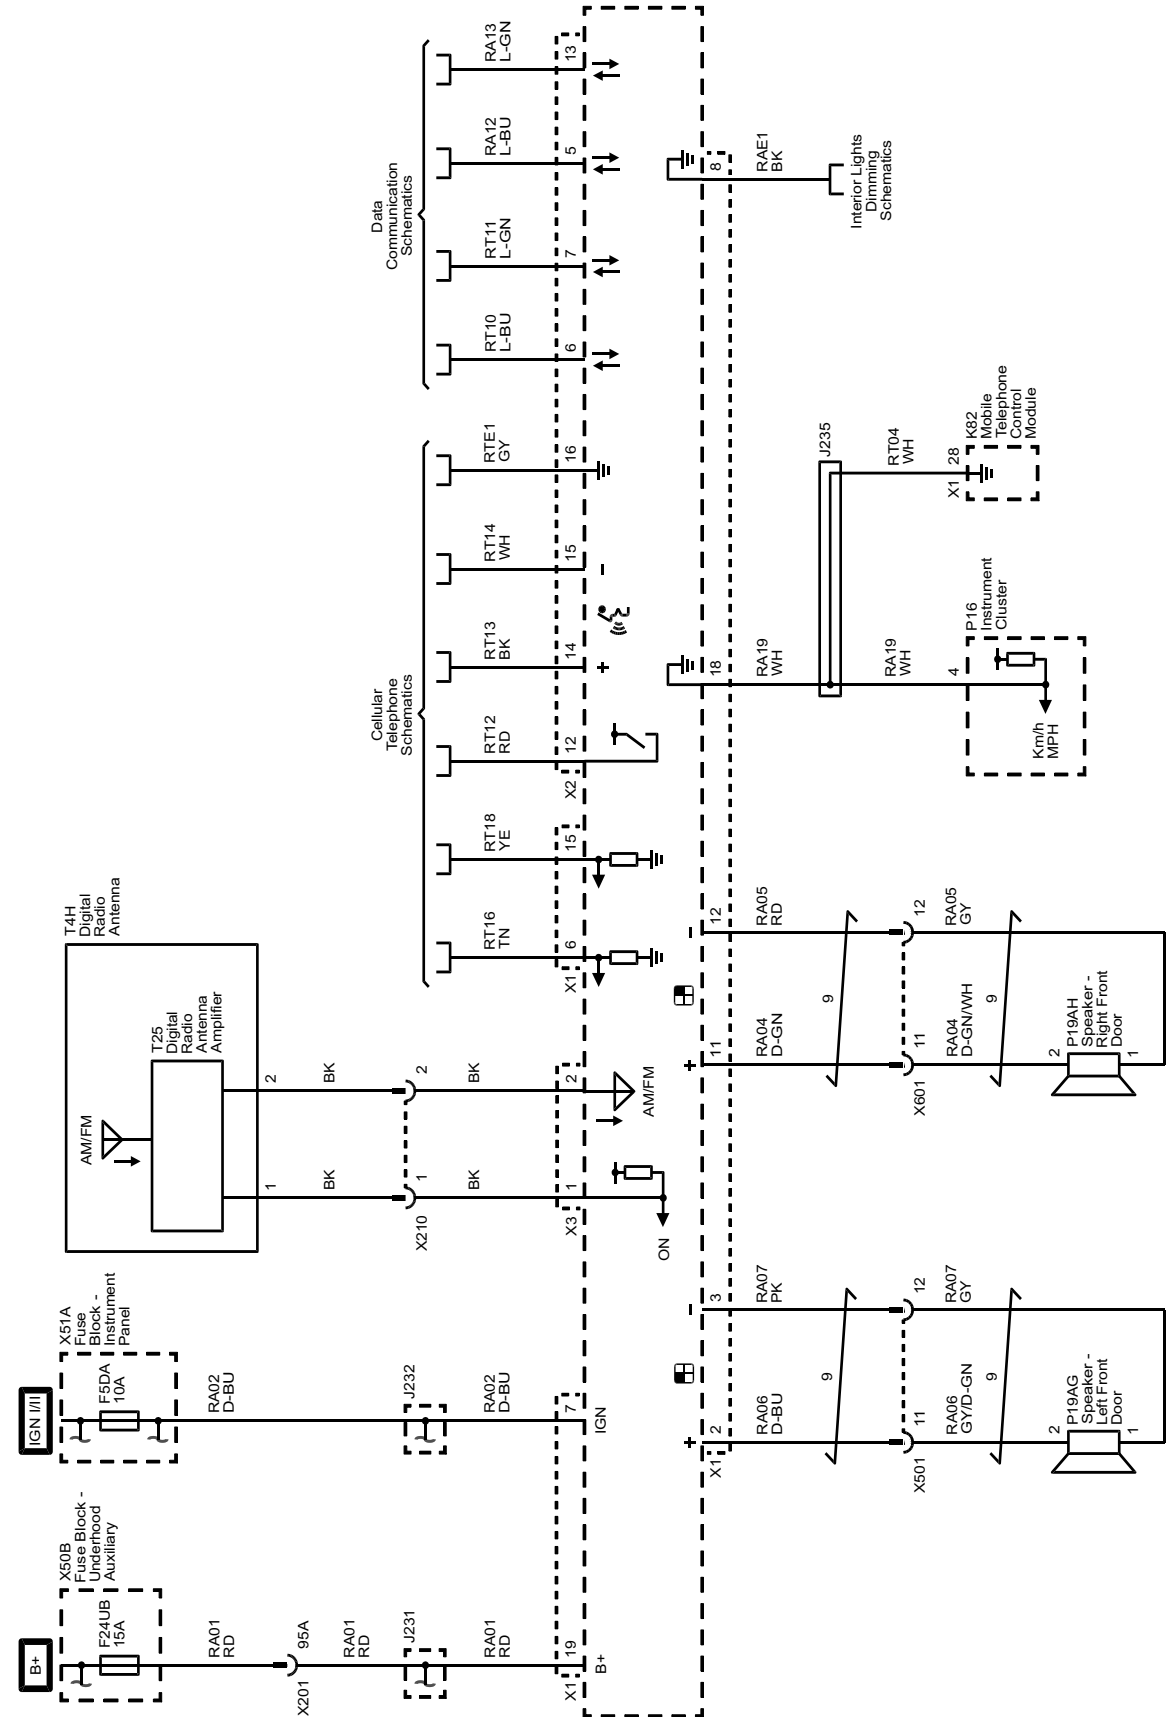

Radio/Navigation System Schematics (Power, Ground, Serial Data, Antennas, Auxiliary Outlets, Speed Signal, and Speakers (CWM))

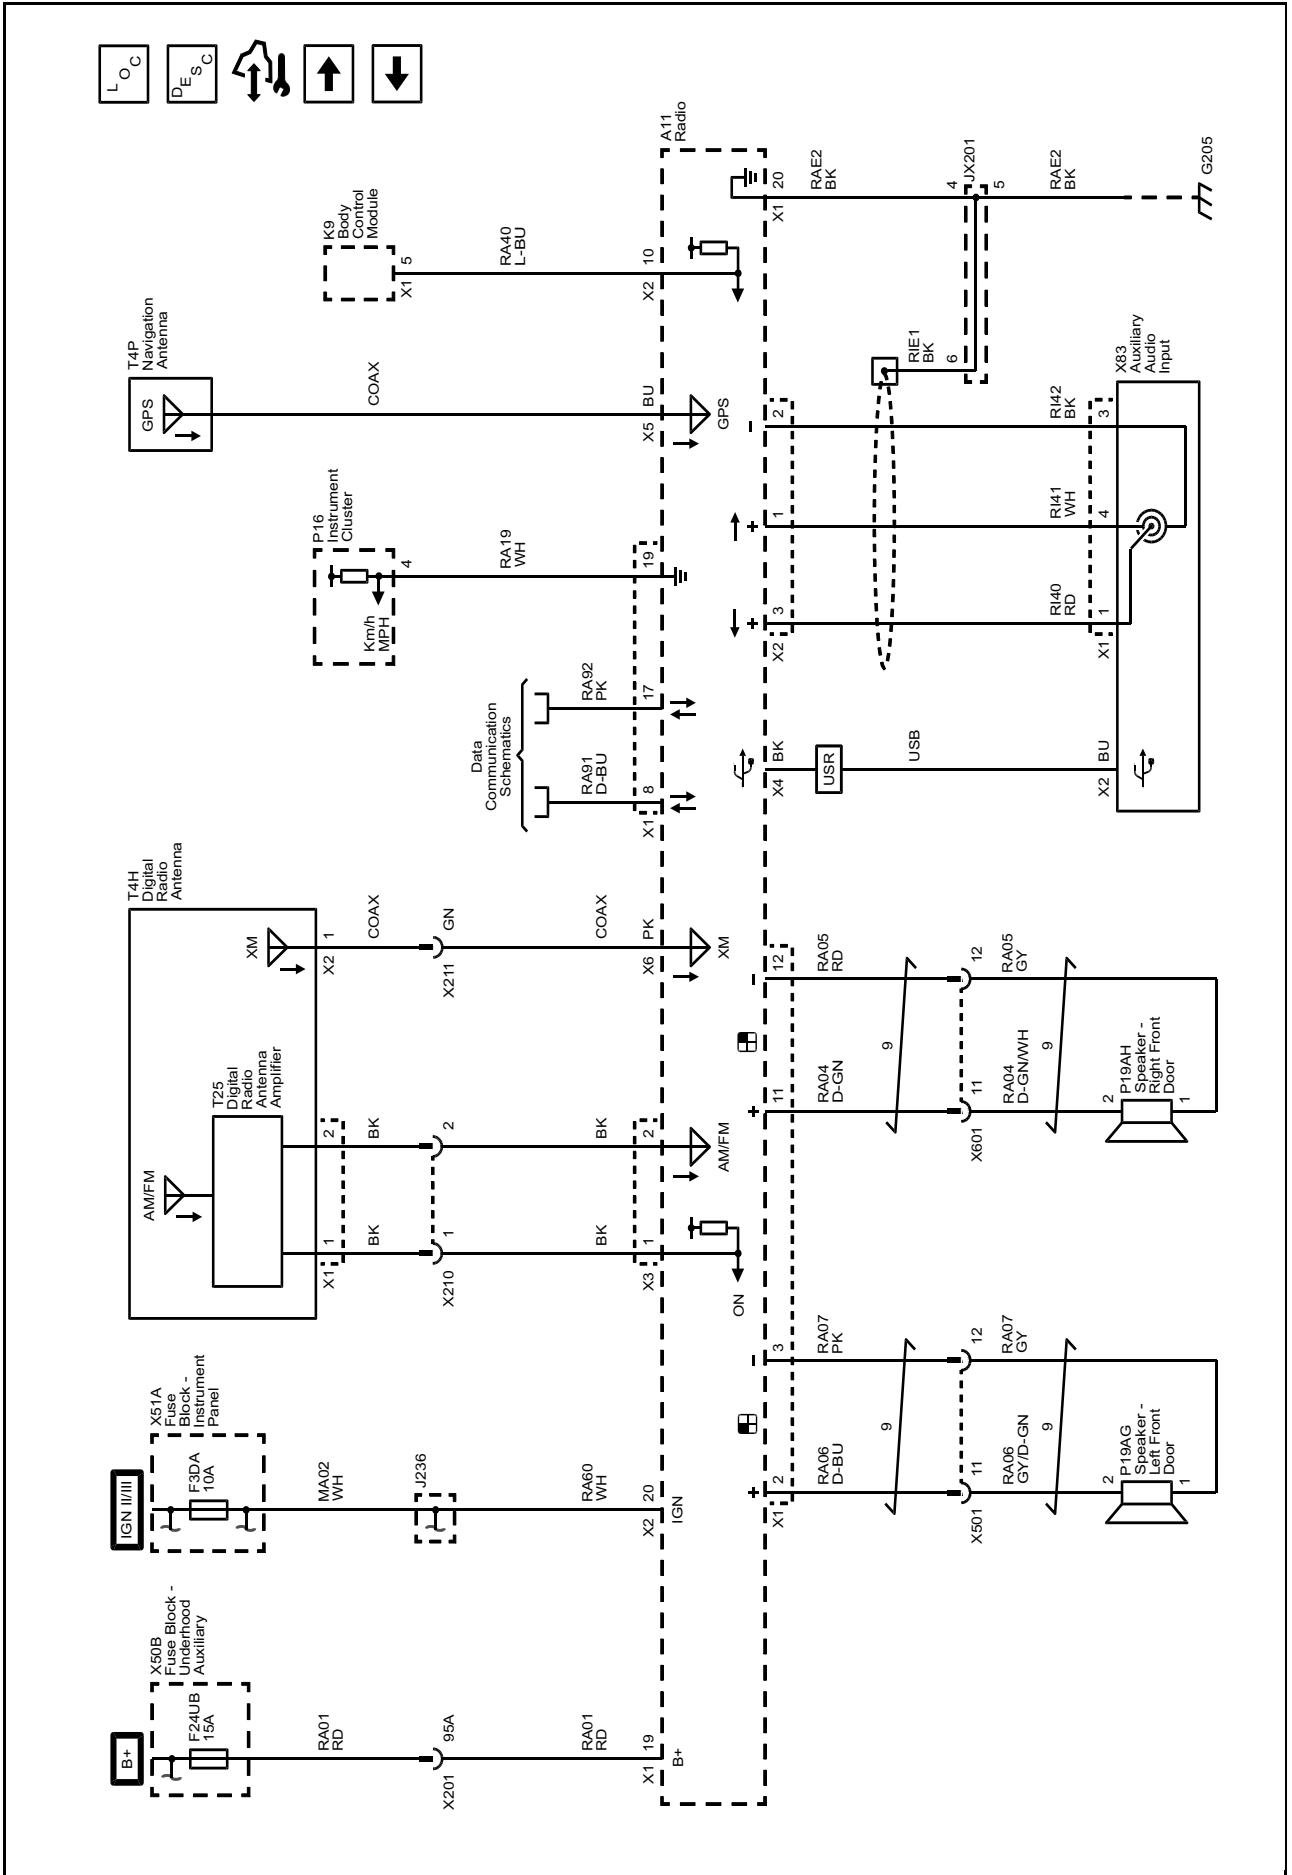


Radio/Navigation System Schematics (Audio Steering Wheel Switch Controls and Cellular Phone Microphone (CWM))

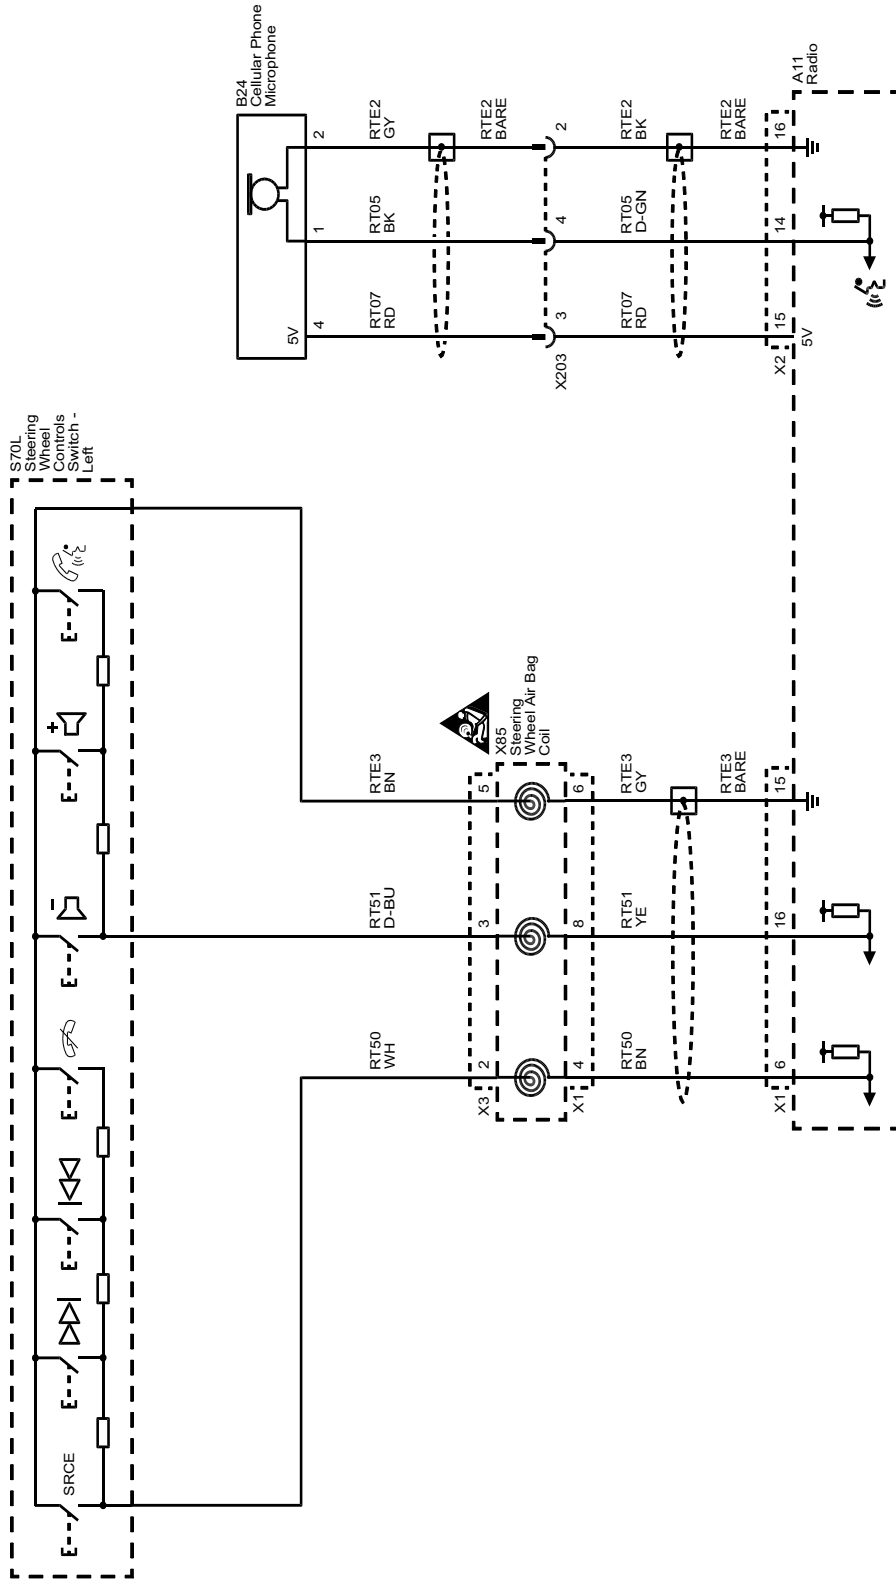


4509940

Cellular Telephone Schematics (Power, Ground, Serial Data, Antenna, and Vehicle Speed (U1B+UPF))

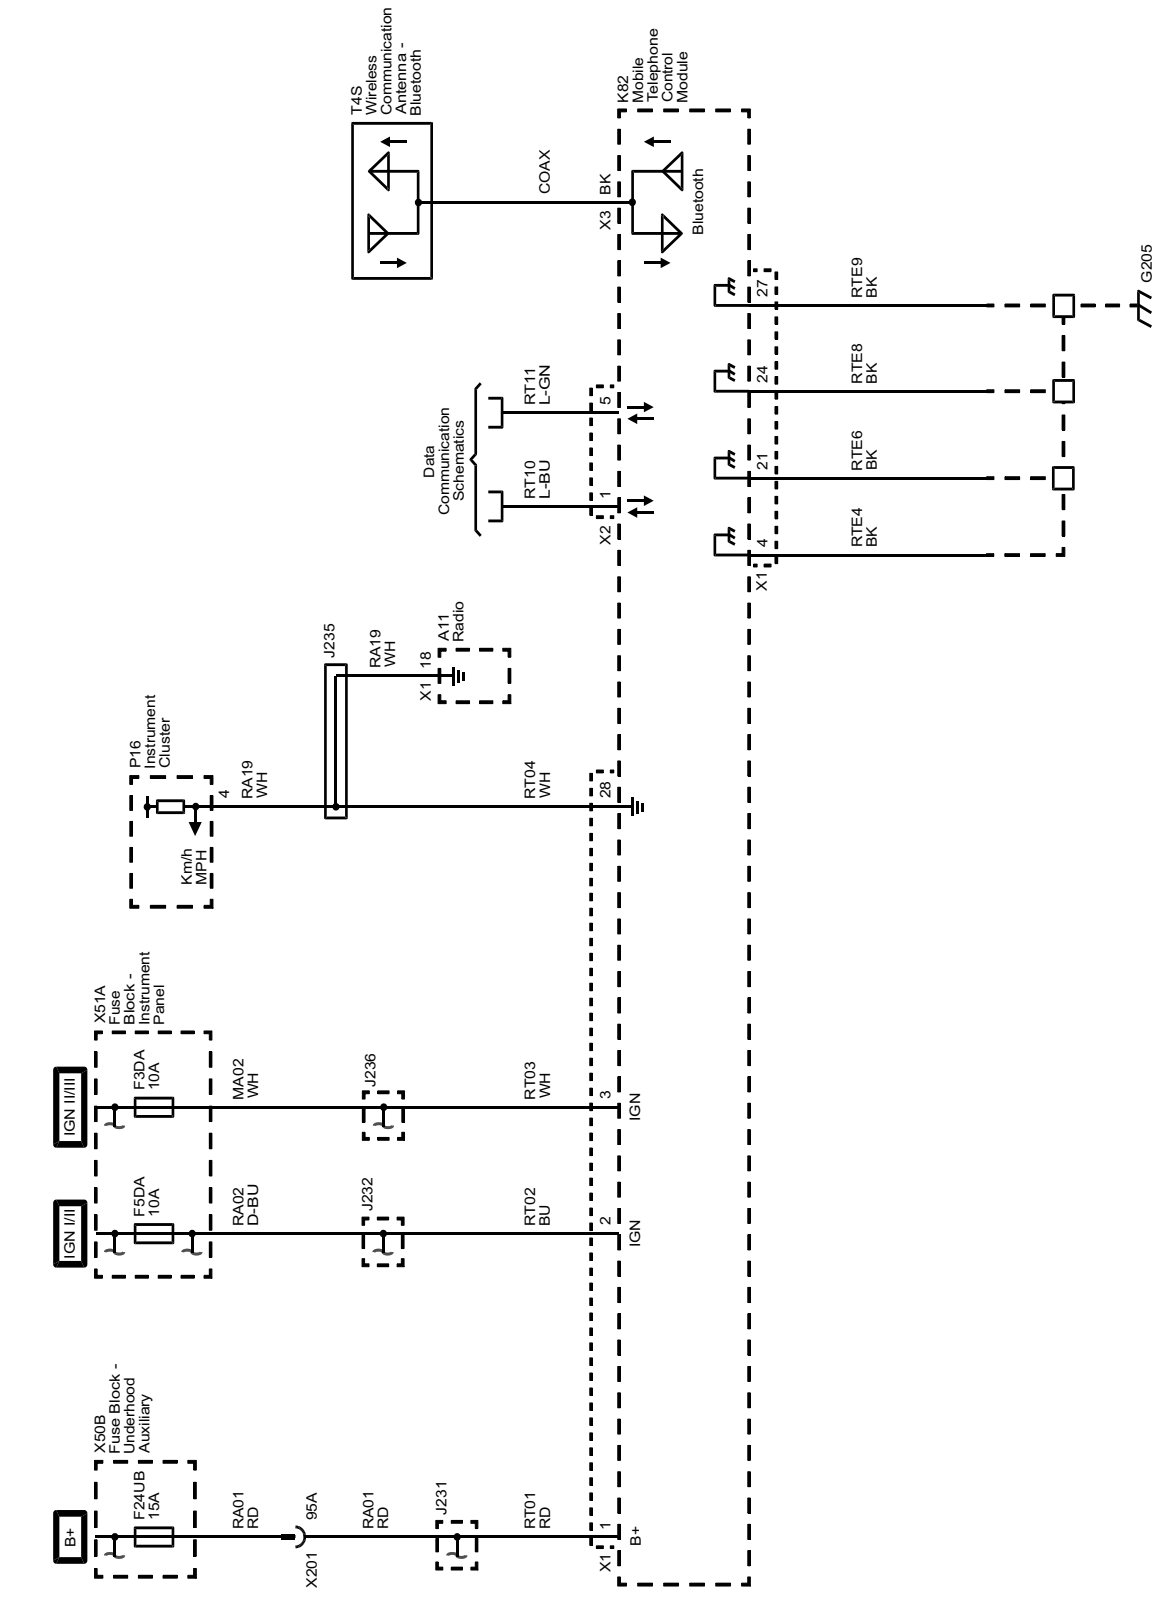


Cellular Telephone Schematics (Cellular Steering Wheel Switches, Cellular Phone Microphone, and Radio Communications (U1B+UPF))

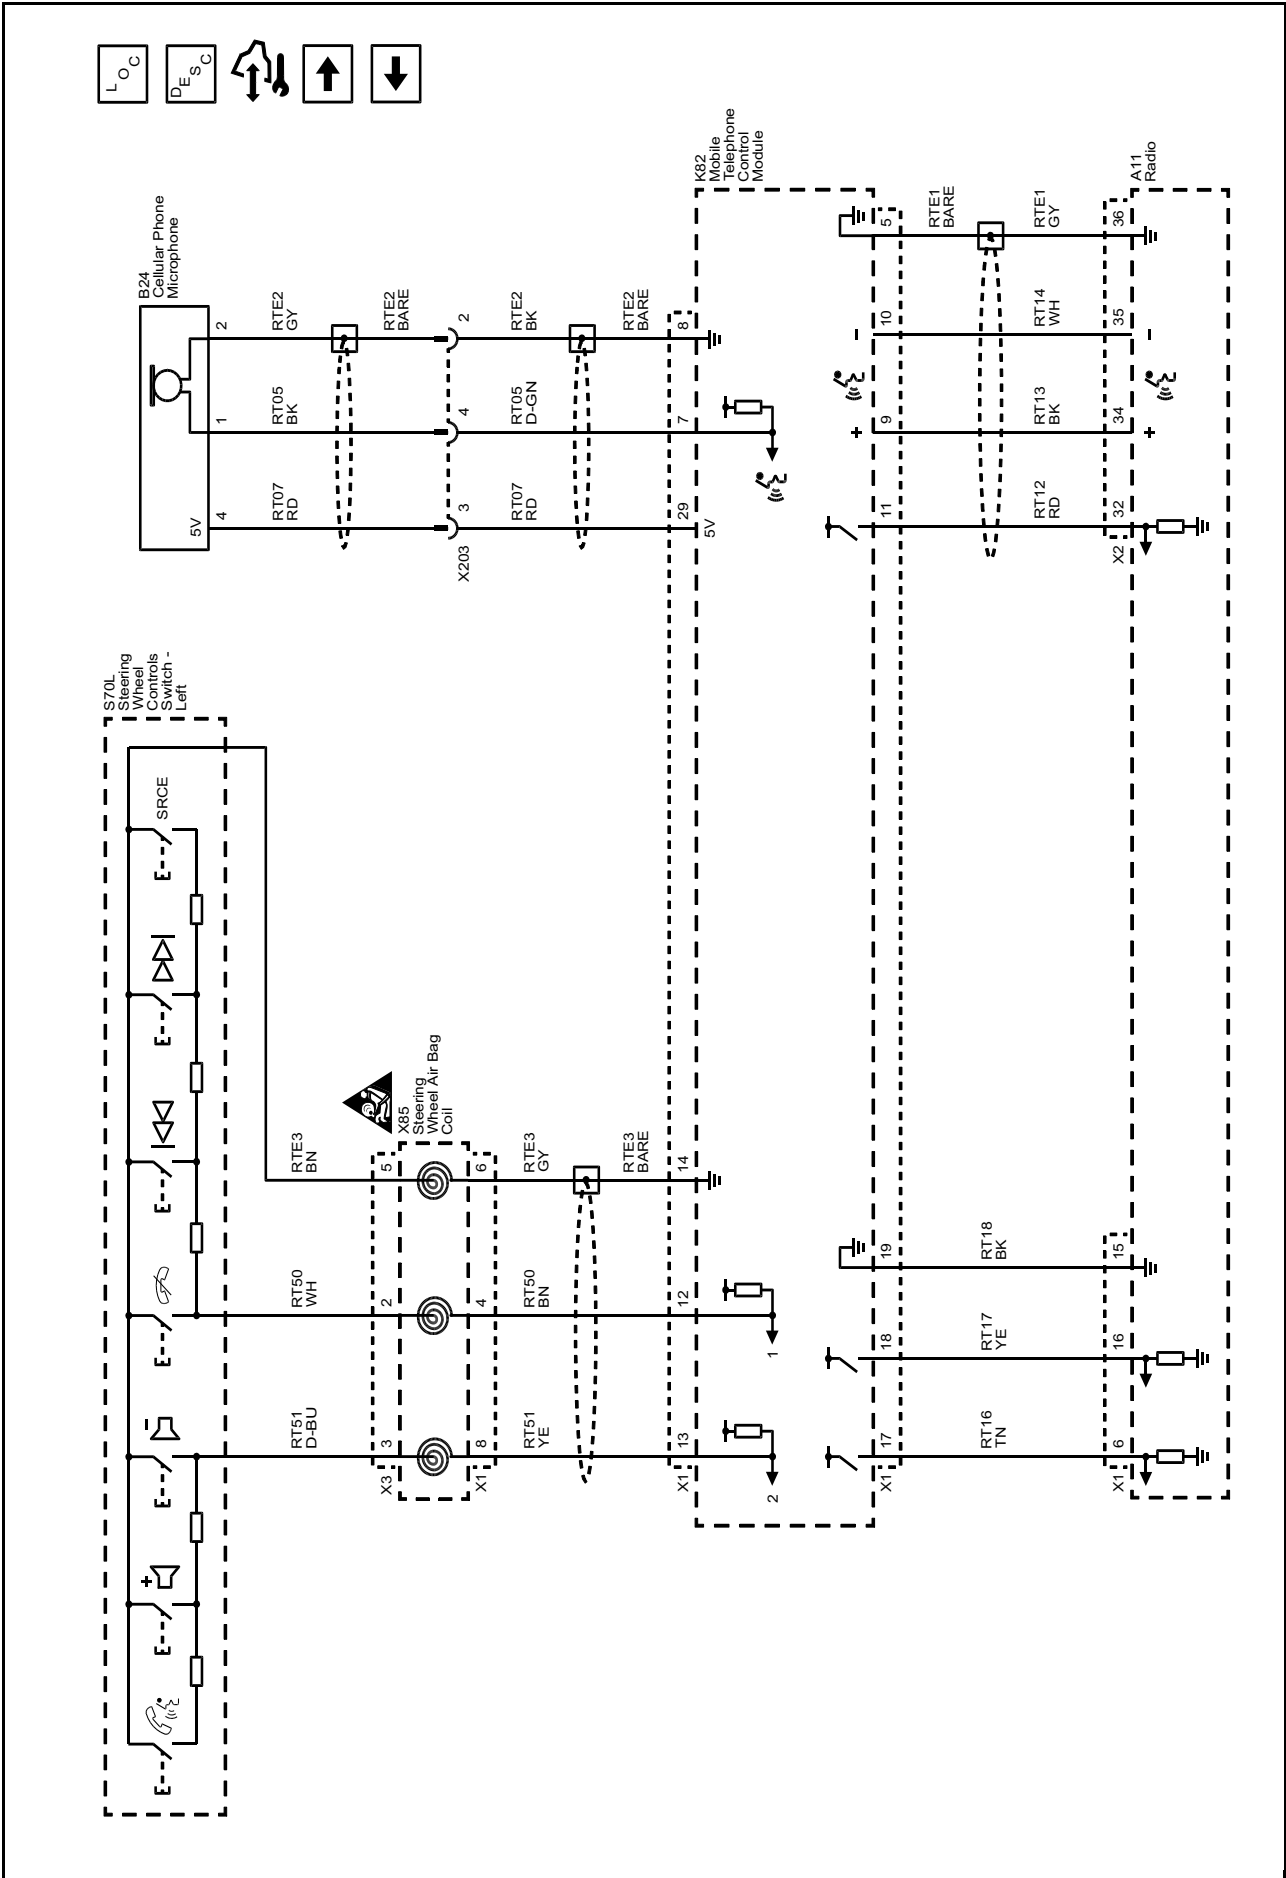

4509942

Cellular Telephone Schematics (Cellular Phone Microphone (CWM))

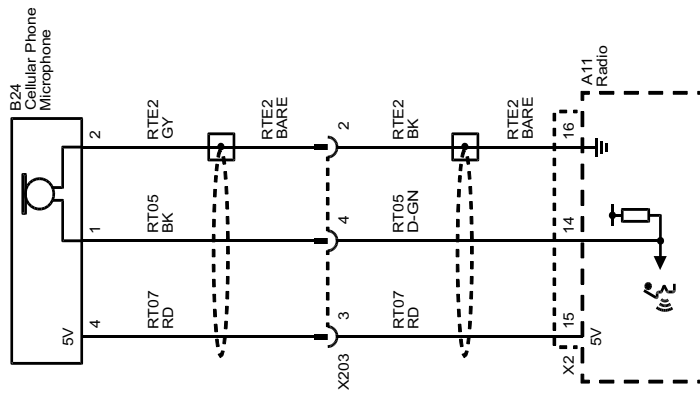

Description and Operation

Radio/Audio System Description and Operation (without Navigation System)

Radio System Components

The entertainment system on this vehicle may have several different configurations available to it. To determine the specific configuration of the vehicle, please see the Service Parts ID Label, and refer to *RPO Code List on page 1-5*.

Refer to Owner's Manual for system operating instructions.

Each item in the list below represents topics covered in detail below.

- Radio Circuit Operation
- Antenna System
- Radio Reception
- CD Player
- Speaker Operation
- Speed Sensitive Volume
- Steering Wheel Controls
- Bluetooth[®] System

Radio Circuit Operation

Radio Power

The radio is supplied with power by a fused B+ circuit. The radio uses a discrete ignition feed circuit for power moding.

Radio Grounds

The vehicle harness provides a ground for the radio circuits. The radio may also be case grounded.

Radio Outputs

Each of the audio output channel circuits (+) and (-), at the radio have a DC bias voltage that is approximately one half of battery voltage. The audio being played on the system is produced by a varying AC voltage that is centered around the DC bias voltage on the same circuit. The AC voltage is what causes the speaker cone to move and produce sound. The frequency (Hz) of the AC voltage signal is directly related to the frequency of the input (audio source playing) to the audio system. Both the DC bias voltage and the AC voltage signals are needed for the audio system to properly produce sound.

Antenna System

The multi-band antenna is located on the roof of the vehicle. The radio provides battery voltage to the antenna amplifier in the antenna base enabled when the radio is turned on. When the antenna amplifier is enabled, both AM and FM signals are amplified. The amplified signals are sent to the radio via a separate signal circuit.

Radio Reception

AM/FM Radio Signal

The radio signal is sent from a broadcast station and is then received by an antenna. The strength of the signal received depends on the following:

- The power output (wattage) of the broadcasting station
- The location of the vehicle (or receiver) relative to the broadcast tower.
- Height of the broadcast antenna
- Height of the receiving antenna
- Obstacles between the tower and the receiver
- Atmospheric conditions
- What band (AM or FM) the station is broadcasting
- Type of antenna and the ground plane

Radio Data System (RDS)

The RDS feature is available only on FM stations that broadcast RDS information. This system relies upon receiving specific information from these stations and only works when the information is available. While the radio is tuned to an FM-RDS station, the station name or call letters display. RDS data is carried in what is known as a "subcarrier". A subcarrier is a frequency that the FM broadcaster is authorized to use to send data that is not audible in the main audio program.

RDS functions will only work with FM broadcast stations that are broadcasting RDS data. Not all FM Broadcast stations broadcast RDS data or offer all of the RDS services.

The information displayed is dependent upon the information broadcast by the particular station. The information may vary greatly between stations. RDS functions may not work properly when reception is weak, reception is of poor quality, or RDS is not implemented properly by the FM Broadcaster. In some cases, a radio station broadcasting incorrect information may cause the RDS features of the radio to appear to work improperly.

With RDS, the radio can do the following:

- Display text information such as: station identification, type of programming, and general information (artist and song title, station messages, call in phone numbers, etc.).
- Seek to stations broadcasting the selected type of programming
- Receive announcements concerning local and national emergencies
- Receive alert warnings of local or national emergencies. When an alert announcement comes on the current radio station, ALERT! displays. You will hear the announcement, even if the volume is low or a CD is playing. If a CD is playing, play stops during the announcement. Alert announcements cannot be turned off. ALERT! is not affected by tests of the emergency broadcast system. This feature is not supported by all RDS stations.

CD Player

The CD player is internal to the radio. The player will play standard audio CDs, and MP3/WMA files that were recorded on a CD-R or CD-RW disc.

Speaker Operation

Speakers turn electrical energy into mechanical energy to move air, using a permanent magnet and an electromagnet. The electromagnet is energized when the radio or amplifier (if equipped) delivers current to the voice coil on the speaker. The voice coil will form a north and south pole that will cause the voice coil and the speaker cone to move in relation to the permanent magnet. The current delivered to the speaker is rapidly changing alternating current (A/C). This causes the speaker cone to move in two directions producing sound. When the speaker is at rest, such as when the volume at a minimum value, the voltage applied to each side of the speaker is half ignition system voltage. This way, the speaker cone can be moved in either direction.

Speed Sensitive Volume

The volume level of this system is capable of adjusting automatically in proportion to the vehicle speed. The control level can be selected by the customer. Refer to the Owner's Manual for operating instructions.

Steering Wheel Controls

Some audio functions are available using the steering wheel controls. The steering wheel controls duplicate the function of the primary controls available on the radio.

For additional information on steering wheel controls, refer to *Steering Wheel Controls Description and Operation*.

Bluetooth[®] System

Bluetooth[®] wireless technology is a short-range communications technology intended to replace the cables connecting portable and/or fixed devices while maintaining high levels of security. The operating range of the signal is approximately 30 feet.

The available features and functions are determined by the type of device and the software within the devices being used. For a feature or function to operate, it must be supported in both devices.

The device must be paired to the system to use the available Bluetooth[®] feature(s).

The Bluetooth[®] control unit is a separate component from the radio. A microphone, Bluetooth[®] antenna, and steering wheel switches are connected to the control unit. The control unit communicates with the radio and sends audio outputs to the radio via the vehicle wiring harness.

Refer to the Owners Manual for operating instructions of the Bluetooth[®] system.

Radio/Audio System Description and Operation (with Navigation System)

Radio System Components

The entertainment system on this vehicle may have several different configurations available to it. To determine the specific configuration of the vehicle, please see the Service Parts ID Label, and refer to *RPO Code List on page 1-5*.

Refer to Owner's Manual for system operating instructions.

Each item in the list below represents topics covered in detail below.

- Radio Circuit Operation
- Antenna System
- Radio Reception
- CD Player
- Speaker Operation
- Auxiliary Audio Input Jack
- USB Port
- Navigation System Components and Features
- Bluetooth[®] System
- Speed Sensitive Volume
- Steering Wheel Controls

Radio Circuit Operation

Radio Power

The radio is supplied with power by a fused B+ circuit. The radio uses a discrete ignition feed circuit for power moding.

Radio Grounds

The vehicle harness provides a ground for the radio circuits. The radio may also be case grounded.

Radio Outputs

Each of the audio output channel circuits (+) and (-), at the radio have a DC bias voltage that is approximately one half of battery voltage. The audio being played on the system is produced by a varying AC voltage that is centered around the DC bias voltage on the same circuit. The AC voltage is what causes the speaker cone to move and produce sound. The frequency (Hz) of the AC voltage signal is directly related to the frequency of the input (audio source playing) to the audio system. Both the DC bias voltage and the AC voltage signals are needed for the audio system to properly produce sound.

Antenna System

The multi-band antenna is located on the roof of the vehicle. The radio provides battery voltage to the antenna amplifier in the antenna base enabled when the radio is turned on. When the antenna amplifier is enabled, both AM and FM signals are amplified. The amplified signals are sent to the radio via a separate signal circuit.

Radio Reception

AM/FM Radio Signal

The radio signal is sent from a broadcast station and is then received by an antenna. The strength of the signal received depends on the following:

- The power output (wattage) of the broadcasting station
- The location of the vehicle (or receiver) relative to the broadcast tower.
- Height of the broadcast antenna
- Height of the receiving antenna
- Obstacles between the tower and the receiver
- Atmospheric conditions
- What band (AM or FM) the station is broadcasting
- Type of antenna and the ground plane

Digital Radio Receiver (If equipped)

The XM satellite receiver is integrated into the radio. XM satellite radio provides digital radio reception. The XM signal is broadcast from two satellites and, where necessary, terrestrial repeaters. The high power satellites allow the antenna to receive the XM signal even when foliage and other partial obstructions block the antennas view of the satellite. Terrestrial repeaters are used in dense urban areas. These repeaters will receive the satellite signal and re-broadcast them at much higher power levels in order to ensure reception in areas with densely packed tall buildings. A service fee is required in order to receive the XM service.

Radio Data System (RDS)

The RDS feature is available only on FM stations that broadcast RDS information. This system relies upon receiving specific information from these stations and only works when the information is available. While the radio is tuned to an FM-RDS station, the station name or call letters display. RDS data is carried in what is known as a "subcarrier". A subcarrier is a frequency that the FM broadcaster is authorized to use to send data that is not audible in the main audio program.

RDS functions will only work with FM broadcast stations that are broadcasting RDS data. Not all FM Broadcast stations broadcast RDS data or offer all of the RDS services.

The information displayed is dependent upon the information broadcast by the particular station. The information may vary greatly between stations. RDS functions may not work properly when reception is weak, reception is of poor quality, or RDS is not implemented properly by the FM Broadcaster. In some cases, a radio station broadcasting incorrect information may cause the RDS features of the radio to appear to work improperly.

With RDS, the radio can do the following:

- Display text information such as: station identification, type of programming, and general information (artist and song title, station messages, call in phone numbers, etc.).
- Seek to stations broadcasting the selected type of programming

- Receive announcements concerning local and national emergencies
- Receive alert warnings of local or national emergencies. When an alert announcement comes on the current radio station, ALERT! displays. You will hear the announcement, even if the volume is low or a CD is playing. If a CD is playing, play stops during the announcement. Alert announcements cannot be turned off. ALERT! is not affected by tests of the emergency broadcast system. This feature is not supported by all RDS stations.

CD Player

The CD player is internal to the radio. The player will play standard audio CDs, and MP3/WMA files that were recorded on a CD-R or CD-RW disc.

Speaker Operation

Speakers turn electrical energy into mechanical energy to move air, using a permanent magnet and an electromagnet. The electromagnet is energized when the radio or amplifier (if equipped) delivers current to the voice coil on the speaker. The voice coil will form a north and south pole that will cause the voice coil and the speaker cone to move in relation to the permanent magnet. The current delivered to the speaker is rapidly changing alternating current (A/C). This causes the speaker cone to move in two directions producing sound. When the speaker is at rest, such as when the volume at a minimum value, the voltage applied to each side of the speaker is half ignition system voltage. This way, the speaker cone can be moved in either direction.

Auxiliary Audio Input Jack

The infotainment system may have a 3.5mm (1/8 in.) auxiliary audio input jack located in the center console. The auxiliary audio input jack interfaces directly with the radio via the vehicle wiring harness. When a portable audio playback device is connected to the auxiliary jack, AUX becomes available as an audio source. Audio signals from the device are sent to the radio from the auxiliary input jack via the left, right, and common audio signal circuits.

- Playback of an audio device that is connected to the 3.5mm jack can only be controlled using the controls on the device.
- The volume control on the device may need to be adjusted to ensure sufficient playback volume through the infotainment system.

USB Port

The USB port is located in the center console. The USB port is connected directly to the radio via the USB interface harness.

The USB port allows connectivity to the infotainment system from portable media players or a USB storage device (memory stick/ flash drive). When a device is connected to the USB port, the system detects the device and switches to USB as the audio source. Once connected, the device can be controlled from the radio controls.

Not all portable media player devices or file types are compatible. Connection to USB HUB devices is not supported.

3-14 Cellular, Entertainment, and Navigation

Refer to the owner's manual for information on USB devices, control, and operation.

Navigation System Components and Features

The navigation system, provides the following:

- Connection to the global positioning system (GPS) antenna, which provides the vehicle position information.
- Map data for navigation and map route guidance, stored on an SD card.
- Route guidance with verbal prompts to the operator.

Global Positioning System (GPS) Antenna

The GPS antenna is located in the upper center of the I/P, and is connected directly to the radio via a coaxial cable. The GPS antenna is used to collect the signals of the orbiting GPS satellites for vehicle position information. The GPS antenna is powered through the same coaxial cable used to send the signals to the radio. Interference to the system may occur if any of the following exist:

- Signals are obstructed by objects such as, tall buildings or trees.
- Metallic objects located on the dashboard
- Aftermarket glass tinting has been applied to the vehicles windshield.

SD Card Reader

The system uses the SD Card to store map information. The map database SD card must be inserted in the SD card reader slot on the radio for the navigation system to function. If the map database SD card cannot be accessed, navigation related selections will not be available to the infotainment system. The SD card reader is dedicated for map data only, no other file types are supported.

Route Guidance

The map will display the route to the selected destination. Voice prompts alert the operator of upcoming events (turns) and arrivals at the destination. The navigation system will automatically recalculate if the route is not followed. The navigation radio uses data received from the global positioning system (GPS)

satellites, the vehicle speed signal, and serial data information to accurately display the current position of the vehicle.

Points of Interest

The map database provides point of interest information. Points of interest are locations that are frequently visited. Points of interest can be displayed on the map or set as a destination. The following are some of the available Points of interests:

- Gas Station
- Restaurant
- College
- Police Station

Bluetooth® System

Bluetooth® wireless technology is a short-range communications technology intended to replace the cables connecting portable and/or fixed devices while maintaining high levels of security. The operating range of the signal is approximately 30 feet.

The available features and functions are determined by the type of device and the software within the devices being used. For a feature or function to operate, it must be supported in both devices.

The device must be paired to the system to use the available Bluetooth® feature(s).

The Bluetooth® hardware is internal to the radio. The radio supports interfacing with cellular phones for hands-free features.

Refer to the Owners Manual for operating instructions of the Bluetooth® system.

Speed Sensitive Volume

The volume level of this system is capable of adjusting automatically in proportion to the vehicle speed. The control level can be selected by the customer. Refer to the Owner's Manual for operating instructions.

Steering Wheel Controls


Some audio functions are available using the steering wheel controls. The steering wheel controls duplicate the function of the primary controls available on the radio.

For additional information on steering wheel controls, refer to *Steering Wheel Controls Description and Operation*.


Secondary and Configurable Customer Controls

Schematic and Routing Diagrams

Steering Wheel Secondary/Configurable Control Schematics (UPF)

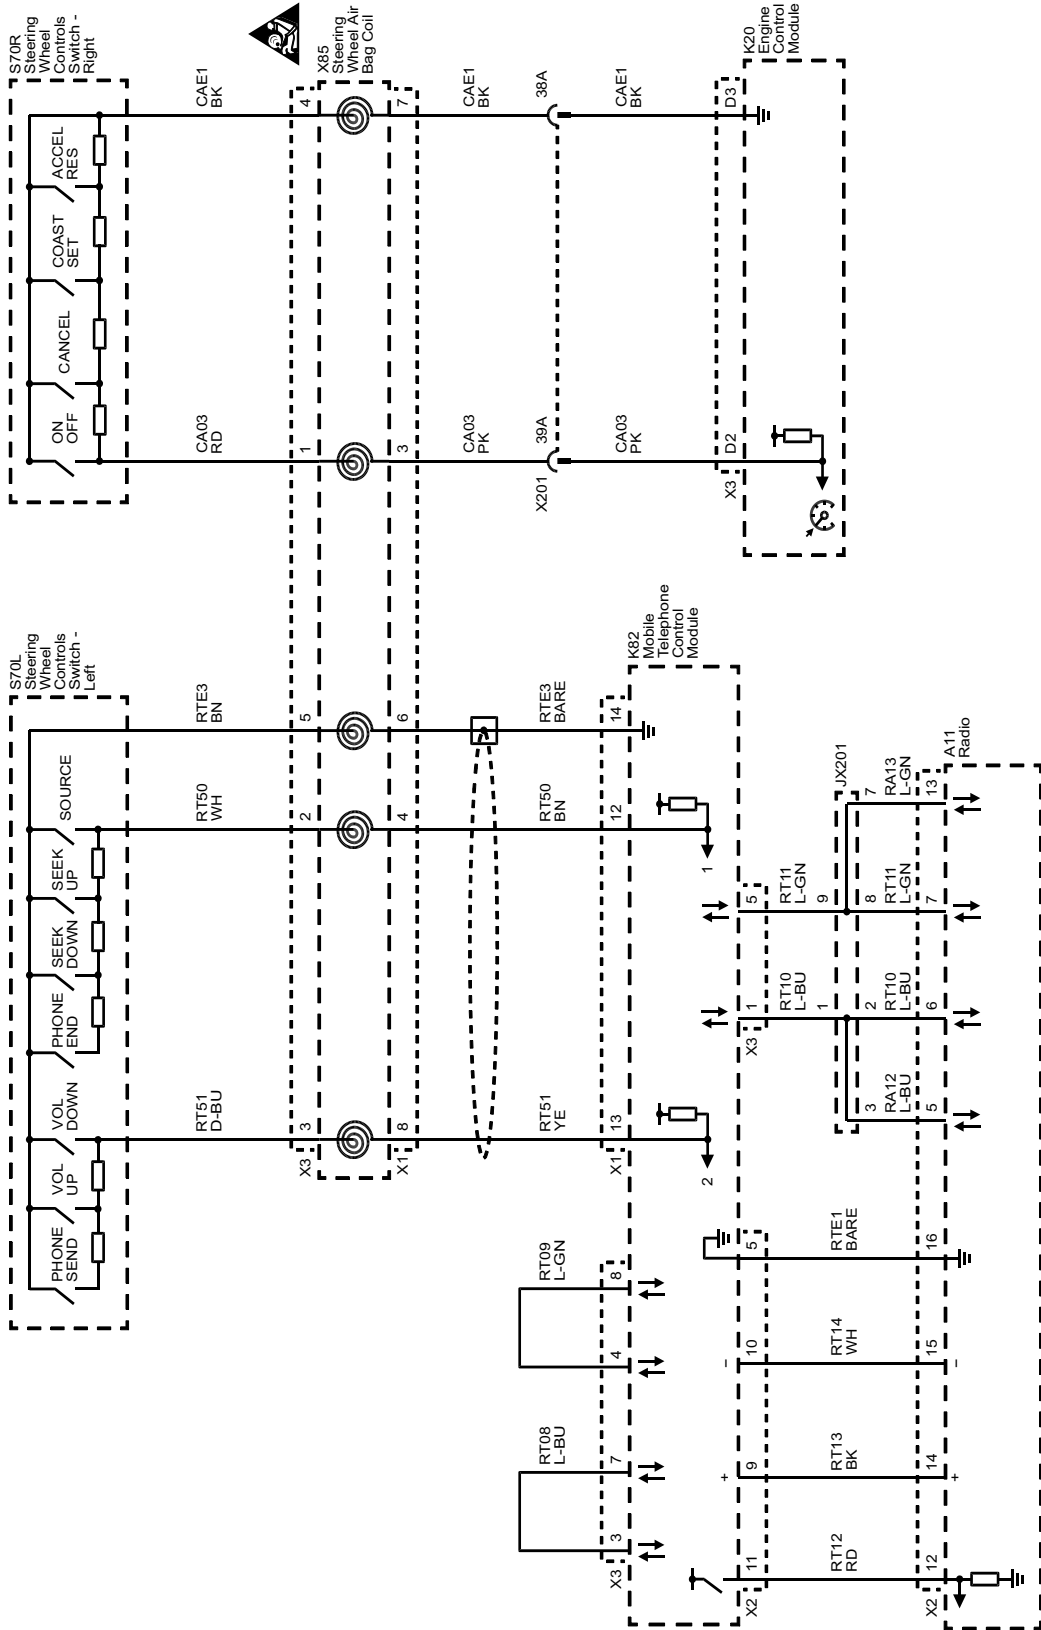

Steering Wheel Secondary/Configurable Control Schematics (CWM)

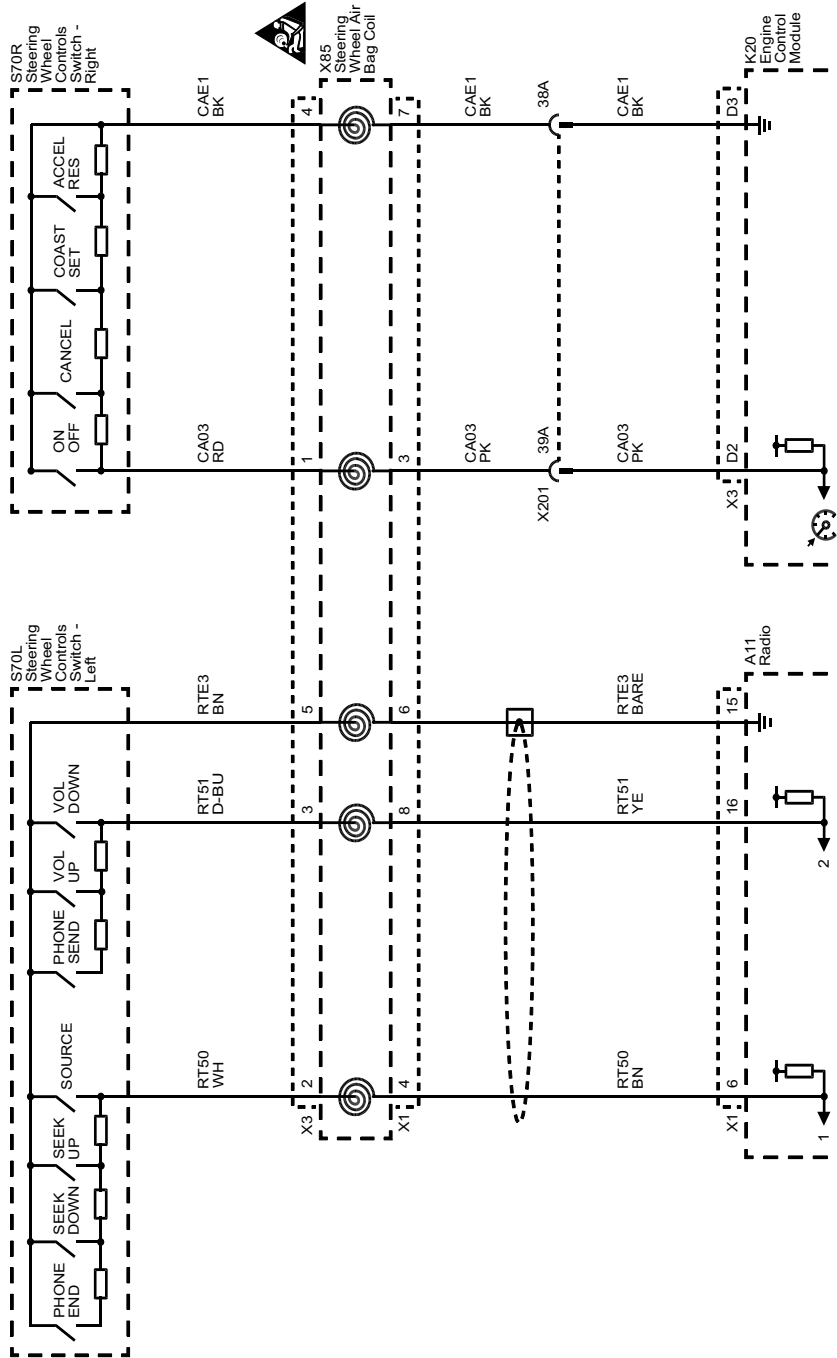

Section 4

Engine/Propulsion


12 V Starting and Charging	4-3	Description and Operation	4-6
Schematic and Routing Diagrams	4-3	Battery Description and Operation	4-6
Starting and Charging Schematics	4-4	Charging System Description and Operation	4-6
		Starting System Description and Operation	4-8

BLANK


12 V Starting and Charging

Schematic and Routing Diagrams

Starting and Charging Schematics (Starting)

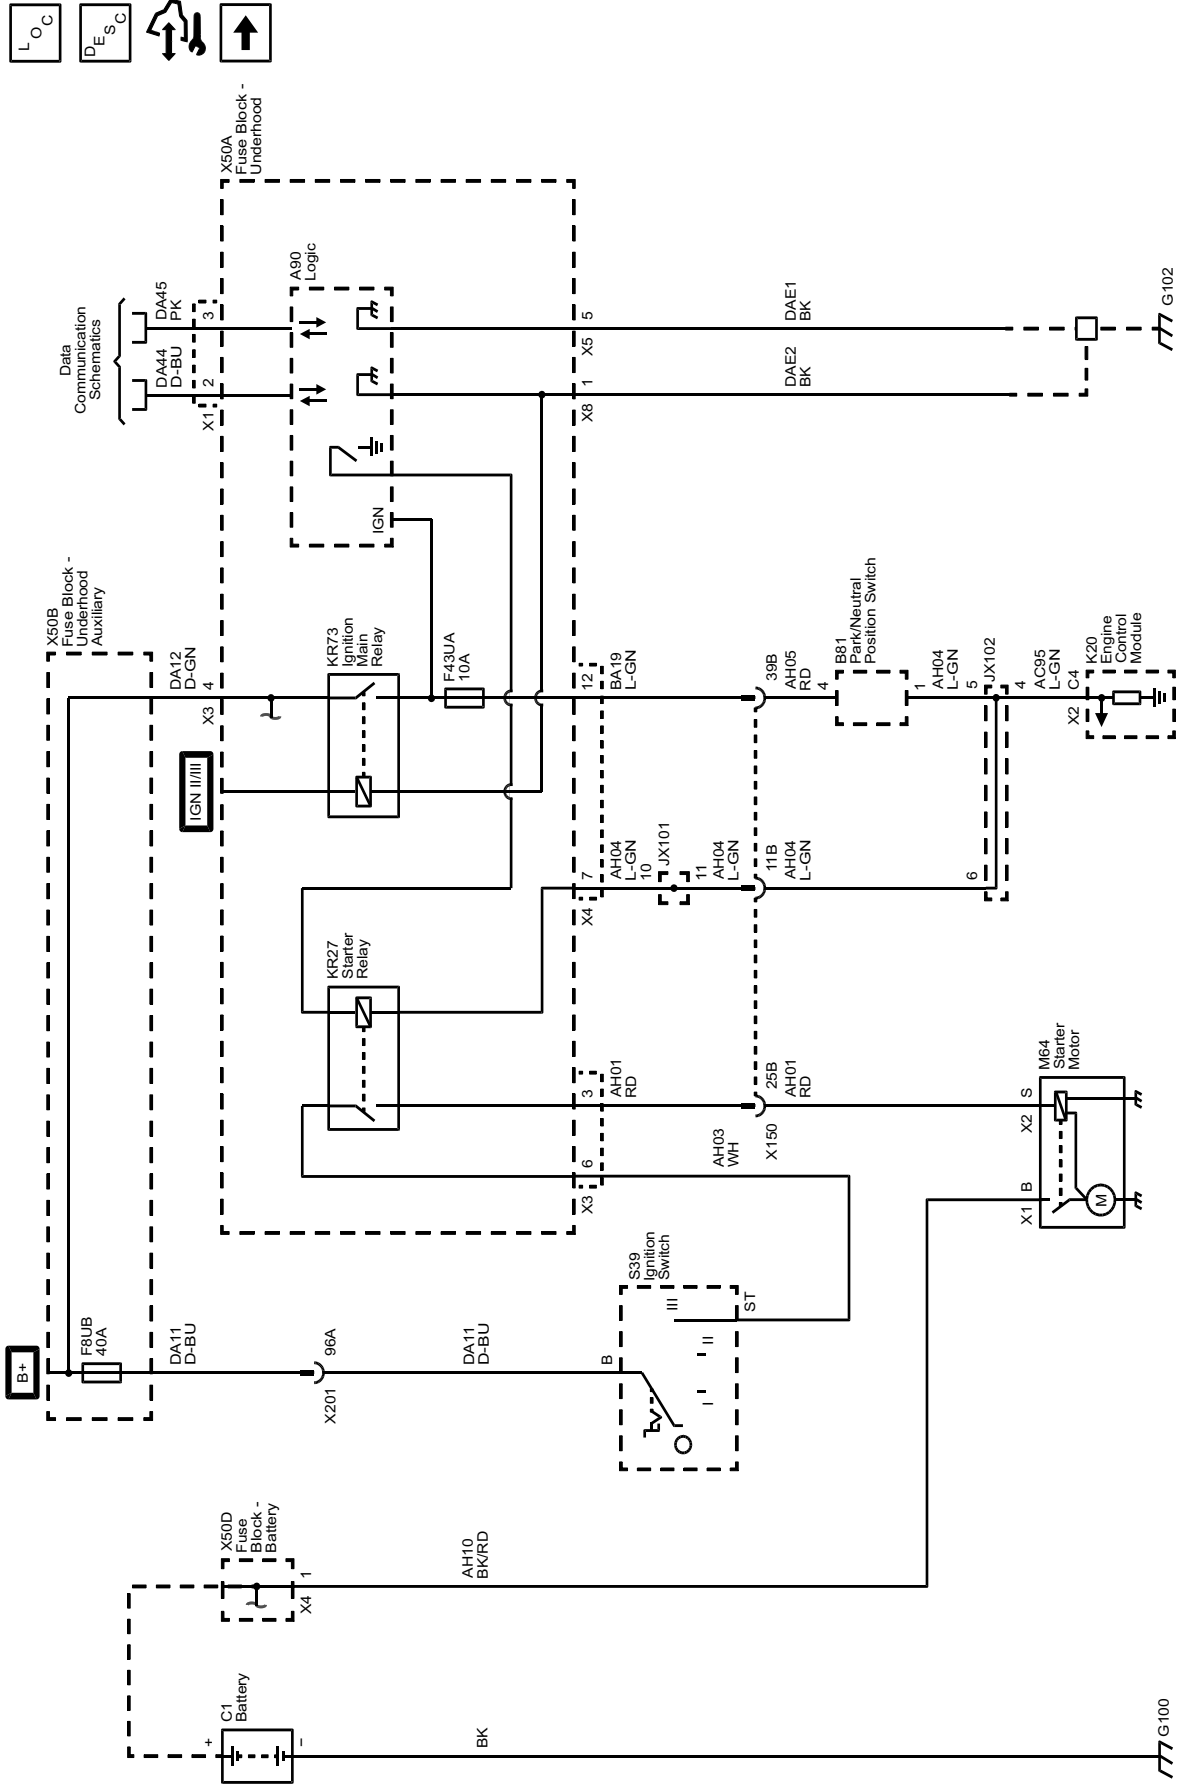

Starting and Charging Schematics (Charging)

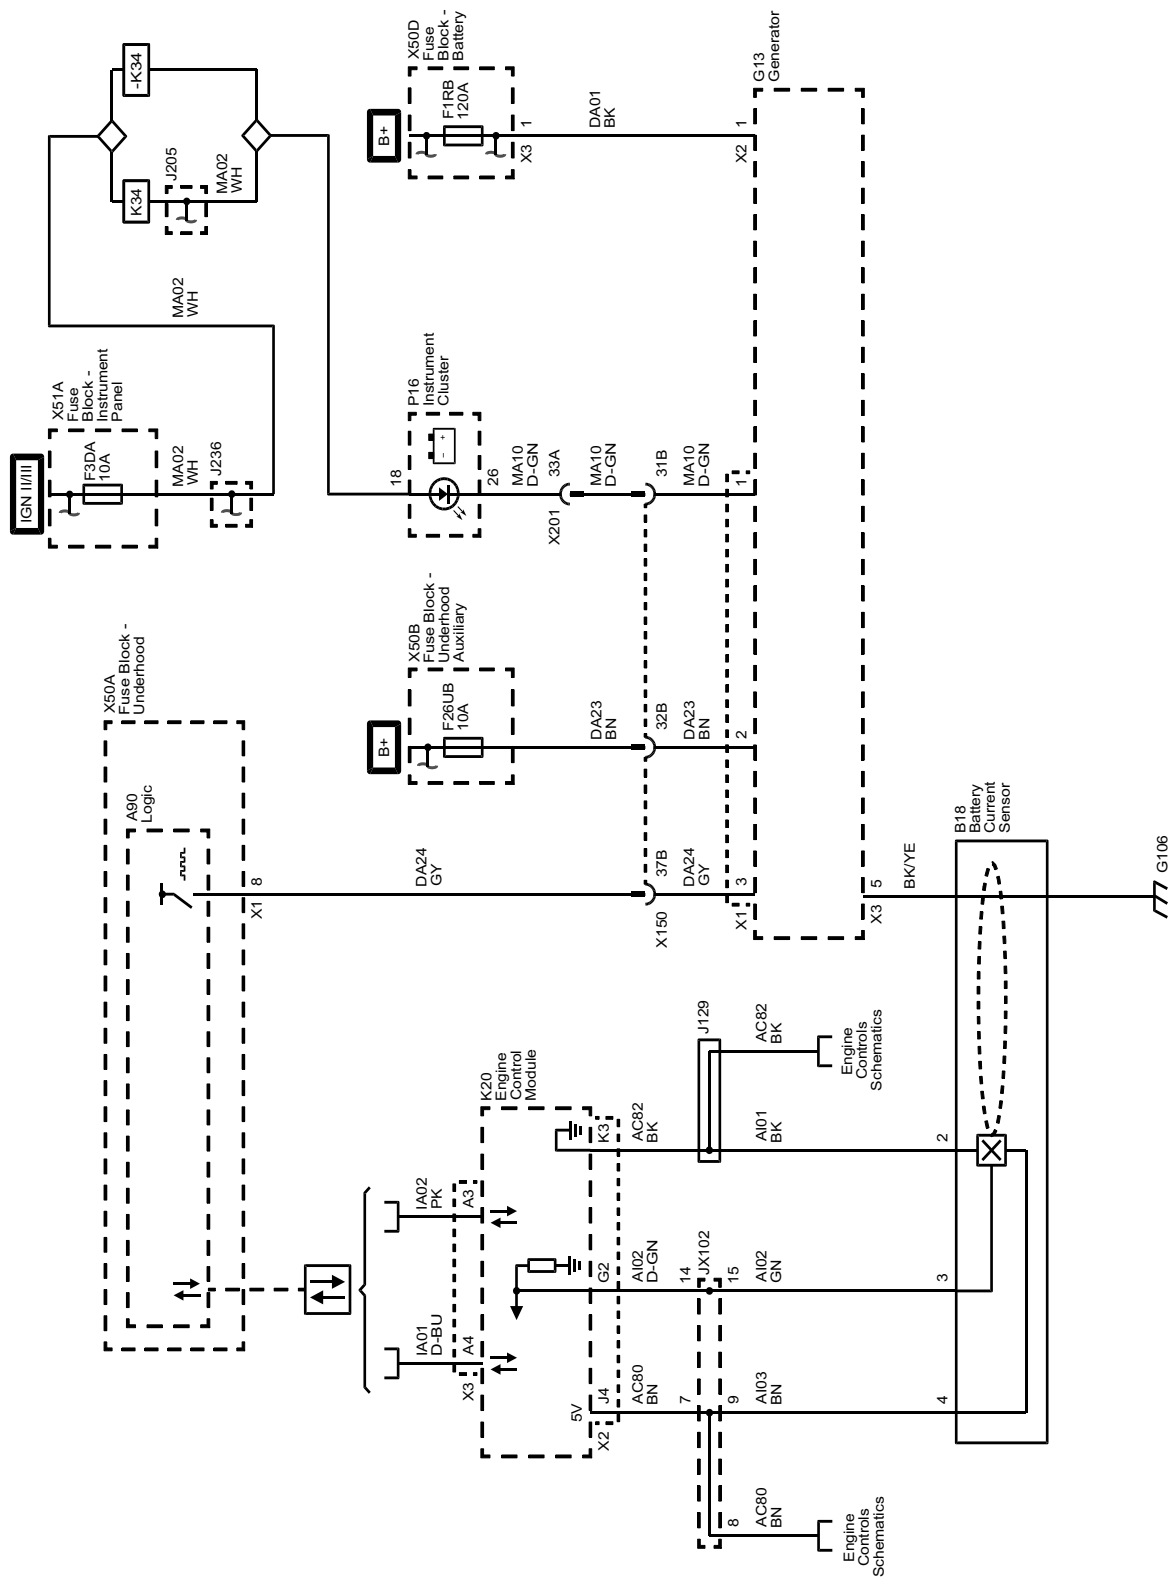

Description and Operation

Battery Description and Operation

Warning: Batteries produce explosive gases, contain corrosive acid, and supply levels of electrical current high enough to cause burns. Therefore, to reduce the risk of personal injury when working near a battery:

- Always shield your eyes and avoid leaning over the battery whenever possible.
- Do not expose the battery to open flames or sparks.
- Do not allow the battery electrolyte to contact the eyes or the skin. Flush immediately and thoroughly any contacted areas with water and get medical help.
- Follow each step of the jump starting procedure in order.
- Treat both the booster and the discharged batteries carefully when using the jumper cables.

Batteries that are no longer wanted must be disposed of by an approved battery recycler and must never be thrown in the trash or sent to a landfill.

Batteries that are not part of the vehicle itself, not the battery under the hood, must only be transported on public streets for business purposes via approved hazardous material transportation procedures.

Battery storage, charging and testing facilities in repair shops must meet various requirements for ventilation, safety equipment, material segregation, etc.

The maintenance free battery is standard. There are no vent plugs in the cover. The battery is completely sealed except for 2 small vent holes in the side. These vent holes allow the small amount of gas that is produced in the battery to escape.

The battery has 3 functions as a major source of energy:

- Engine cranking
- Voltage stabilizer
- Alternate source of energy with generator overload

Battery Low Start Vehicle Message

The body control module (BCM) monitors battery positive voltage to determine battery state of charge. If one or more of the BCM battery positive voltage terminals measure less than approximately 11.6V compared to the BCM ground circuits, this message will display and four chimes may sound. Start the vehicle immediately. If the vehicle is not started and the battery continues to discharge, the climate controls, heated seats, and audio systems will shut off and the vehicle may require a jump start. These systems will function again after the vehicle is started.

Battery Ratings

A battery has 2 ratings:

- Cold cranking amperage
- Amperage hours

When a battery is replaced use a battery with similar ratings. See battery specification label on the original battery.

Amperage Hours

The amperage hour rating tells you how much amperage is available when discharged evenly over a 20 hour period. The amperage hour rating is cumulative, so in order to know how many constant amperage the battery will output for 20 h, you have to divide the amperage hour rating by 20. Example: If a battery has an amperage hour rating of 74, dividing by 20 = 3.75. Such a battery can carry a 3.75 A load for 20 hours before dropping to 10.5 V. (10.5 V is the fully discharged level, at which point the battery needs to be recharged.) A battery with an amperage hour rating of 55 will carry a 2.75 A load for 20 hours before dropping to 10.5 V.

Cold Cranking Amperage

The cold cranking amperage is an indication of the ability of the battery to crank the engine at cold temperatures. The cold cranking amperage rating is the minimum amperage the battery must maintain for 30 seconds at -18°C (0°F) while maintaining at least 7.2 V. See battery label for the cold cranking amperage rating of this battery.

Charging System Description and Operation

Electrical Power Management Overview

The electrical power management system is designed to monitor and control the charging system and send diagnostic messages to alert the driver of possible problems with the battery and generator. This electrical power management system primarily utilizes existing on-board computer capability to maximize the effectiveness of the generator, to manage the load, improve battery state-of-charge and life, and minimize the system's impact on fuel economy. The electrical power management system performs 3 functions:

- It monitors the battery voltage and estimates the battery condition.
- It takes corrective actions by boosting idle speeds, and adjusting the regulated voltage.
- It performs diagnostics and driver notification.

The battery condition is estimated during ignition-off and during ignition-on. During ignition-off the state-of-charge of the battery is determined by measuring the open-circuit voltage. The state-of-charge is a function of the acid concentration and the internal resistance of the battery, and is estimated by reading the battery open circuit voltage when the battery has been at rest for several hours.

The state-of-charge can be used as a diagnostic tool to tell the customer or the dealer the condition of the battery. Throughout ignition-on, the algorithm continuously estimates state-of-charge based on adjusted net amp hours, battery capacity, initial state-of-charge, and temperature.

While running, the battery degree of discharge is primarily determined by a battery current sensor, which is integrated to obtain net amp hours.

In addition, the electrical power management function is designed to perform regulated voltage control to improve battery state-of-charge, battery life, and fuel economy. This is accomplished by using knowledge of the battery state-of-charge and temperature to set the charging voltage to an optimum battery voltage level for recharging without detriment to battery life.

The Charging System Description and Operation is divided into 3 sections. The first section describes the charging system components and their integration into the electrical power management. The second section describes charging system operation. The third section describes the instrument panel cluster operation of the charge indicator, driver information center messages, and voltmeter operation.

Charging System Components

Generator (IC Regulator)

The generator is a serviceable component. If there is a diagnosed failure of the generator it must be replaced as an assembly. The engine drive belt drives the generator. When the rotor is spun it induces an alternating current (AC) into the stator windings. The AC voltage is then sent through a series of diodes for rectification. The rectified voltage is converted into a direct current (DC) for use by the vehicles electrical system to maintain electrical loads and the battery charge. The voltage regulator is integral to the generator and controls the power generation voltage by the target power generation voltage based on the received PWM command signal. When there is no power generation command signal, the generator performs the normal power generation according to the characteristic of the IC regulator.

Combination meter (Charge Warning Lamp)

On the instrument cluster, a charge warning lamp illuminates if it detects any of the following symptoms while the generator is operating: excessive voltage is produced or no voltage is produced.

Battery current sensor

The battery current sensor is located on the negative battery cable terminal. The battery current sensor detects the charging/discharging current of the battery and converts this into a voltage signal. According to the current value detected, an appropriate voltage signal is sent to the ECM.


ECM

The charging/discharging current of the battery is detected by the battery current sensor. This information is used by the ECM to determine the battery condition. If the battery requires charging, the ECM requests more output through the power generation voltage variable control. The ECM sends the calculated value to the IPDM E/R through the power generator command.

Intelligent Power Distribution Module Engine Room (IPDM E/R) / X50A Fuse Block

The IPDM E/R uses the received power generation command value to send an appropriate pulse width modulated (PWM) command signal to the IC regulator.

Charging System Description and Operation

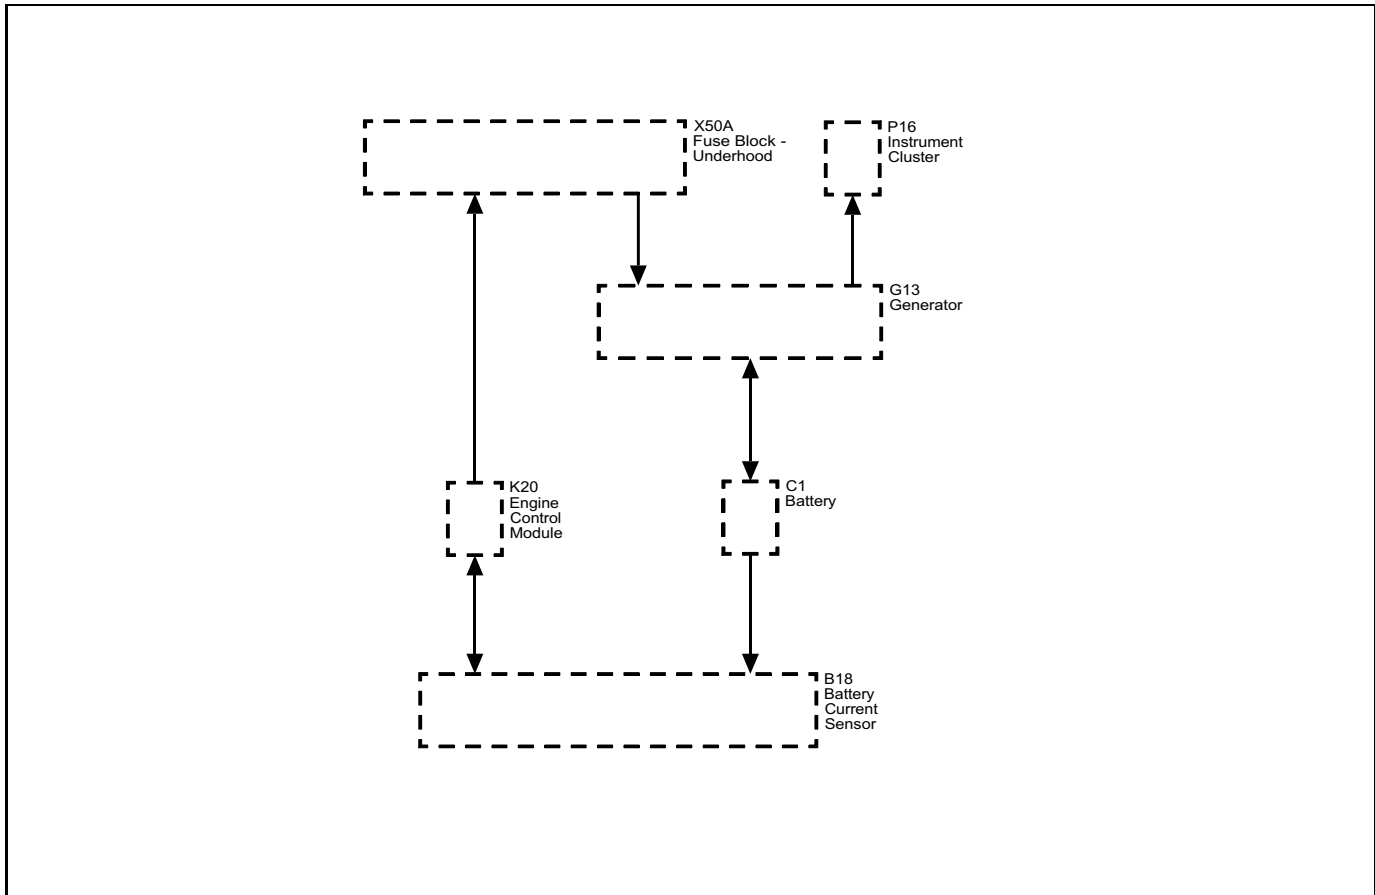

4056520

Charging System Operation

The purpose of the charging system is to maintain the battery charge and vehicle loads. The generator provides DC voltage to operate the vehicle's electrical system and to keep the battery charged. The voltage output is controlled by the IC regulator.

Starting System Description and Operation

The starter motors are non-repairable starter motors. They have pole pieces that are arranged around the armature. Both solenoid windings are energized. The pull-in winding circuit is completed to the ground through the starter motor. The windings work together magnetically to pull and hold in the plunger. The plunger moves the shift lever. This action causes the starter drive assembly to rotate on the armature shaft spline as it engages with the flywheel ring gear on the engine. Moving at the same time, the plunger also closes the solenoid switch contacts in the starter solenoid. Full battery voltage is applied directly to the starter motor and it cranks the engine.

As soon as the solenoid switch contacts close, current stops flowing through the pull-in winding because battery voltage is applied to both ends of the windings. The hold-in winding remains energized. Its magnetic field is strong enough to hold the plunger, shift lever, starter drive assembly, and solenoid switch contacts in

place to continue cranking the engine. When the engine starts, pinion overrun protects the armature from excessive speed until the switch is opened.

When the ignition switch is released from the START position, the START relay opens and battery voltage is removed from the starter solenoid S terminal. Current flows from the motor contacts through both windings to the ground at the end of the hold-in winding. However, the direction of the current flow through the pull-in winding is now opposite the direction of the current flow when the winding was first energized.

The magnetic fields of the pull-in and hold-in windings now oppose one another. This action of the windings, along with the help of the return spring, causes the starter drive assembly to disengage and the solenoid switch contacts to open simultaneously. As soon as the contacts open, the starter circuit is turned off.

Starting System Components

Starter Motor

The starter motor is used to crank the engine. When the S terminal is supplied with electric power, the starter motor plunger closes and the motor is supplied with battery power. The starter motor is grounded to the cylinder block. With power and ground supplied, the starter motor operates.

Transmission Range Switch

Transmission range switch supplies power to the starter relay inside the IPDM E/R when the shift selector is placed in the P or N position.


Engine Control Module (ECM)

ECM controls the starter relay inside IPDM E/R.

Intelligent Power Distribution Module Engine Room (IPDM E/R)

When the ignition switch is in the start position the CPU inside IPDM E/R is used to operate the starter relay.

Starting System Description and Operation

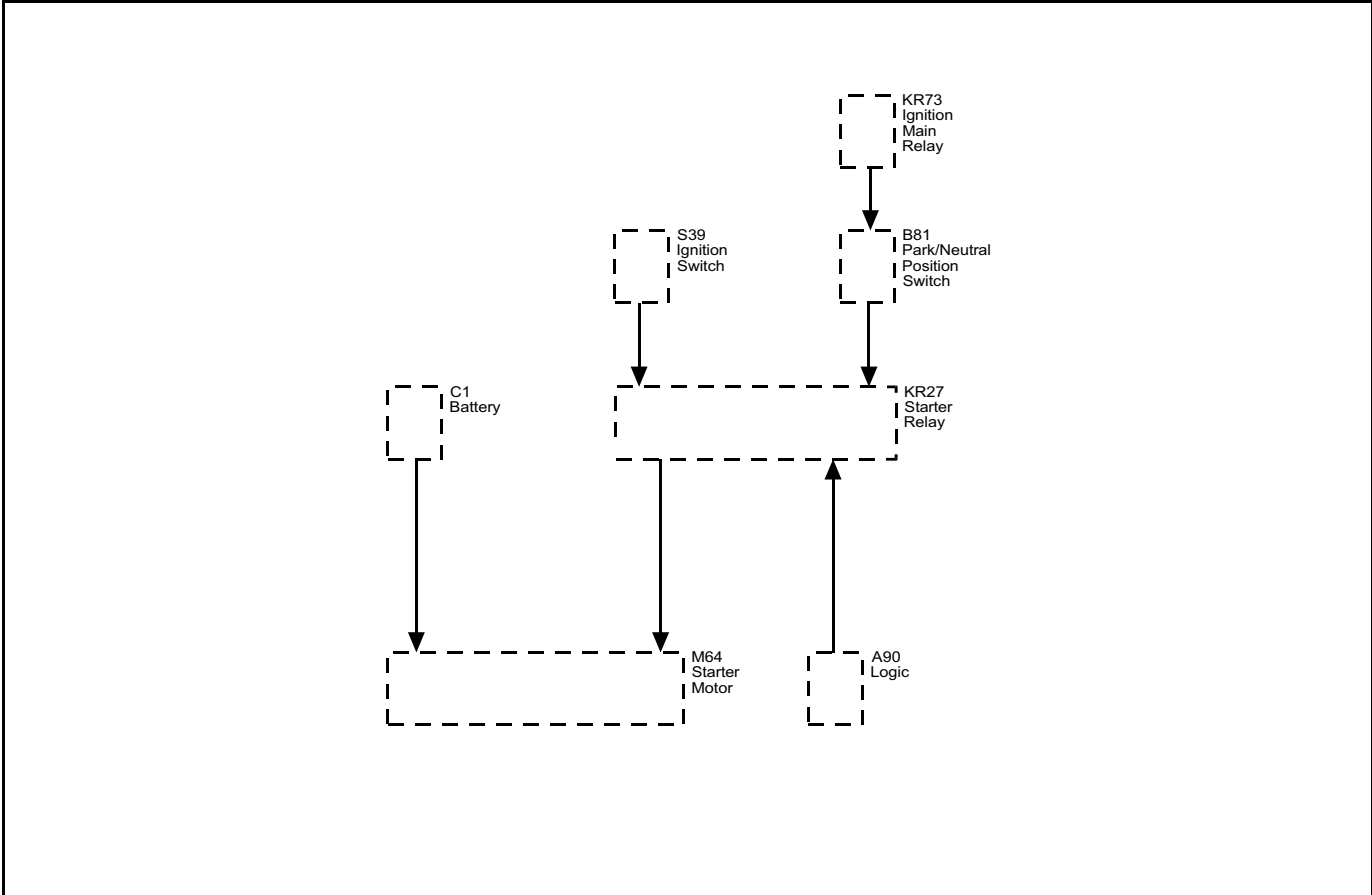

4056515

BLANK

Section 5

HVAC


Heating, Ventilation, and Air			
Conditioning	5-3	HVAC - Manual	5-5
Description and Operation	5-3	Schematic and Routing Diagrams	5-5
Heating and Air Conditioning System Description		HVAC Schematics	5-6
and Operation	5-3	Description and Operation	5-8
		Manual HVAC Description and Operation	5-8

BLANK

Heating, Ventilation, and Air Conditioning

Description and Operation

Heating and Air Conditioning System Description and Operation Ventilation System Description

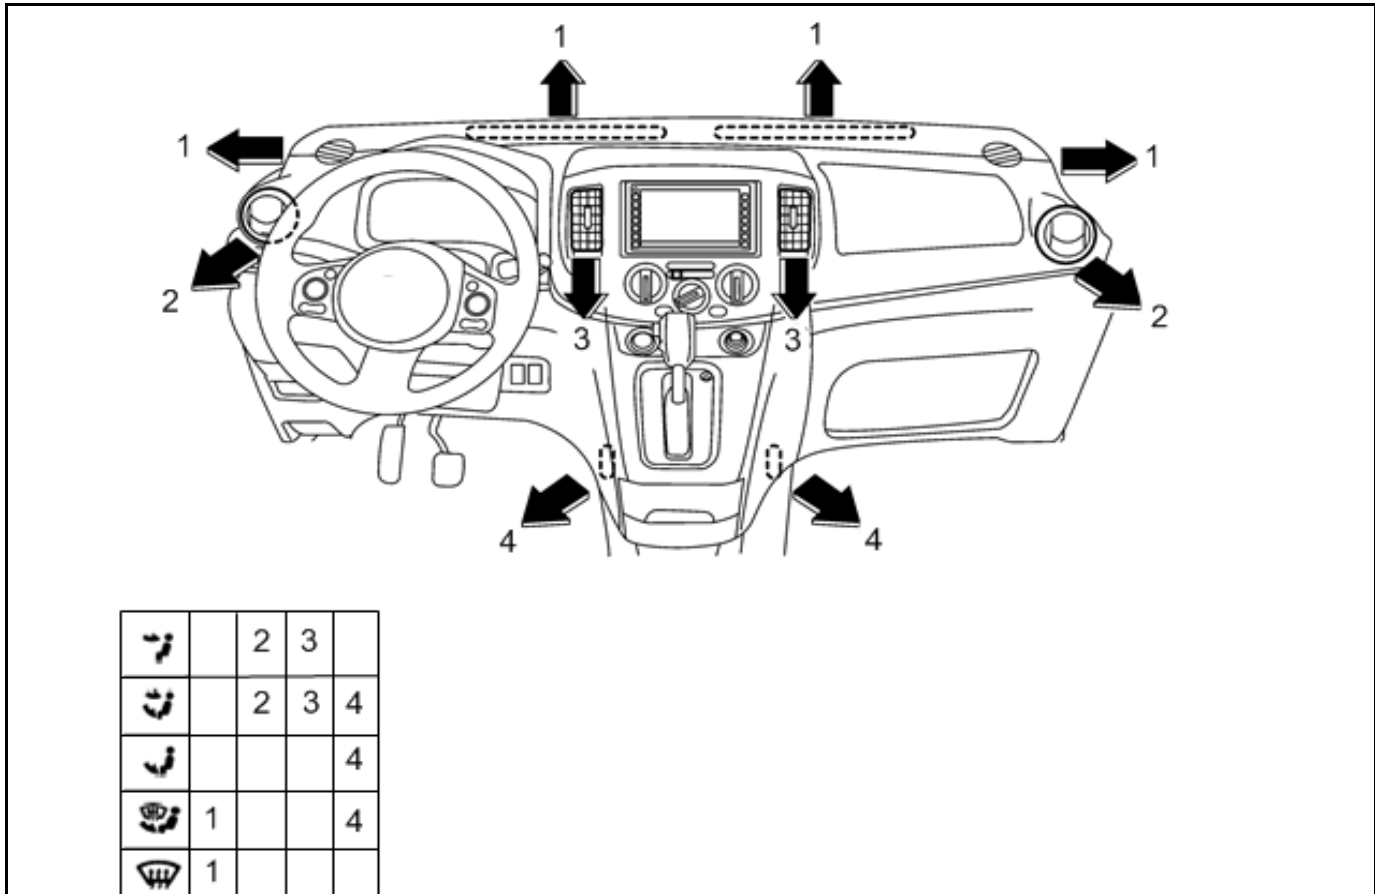

3953981

1. Windshield Defroster Duct
2. Instrument Panel Outer Air Outlet Duct
3. Instrument Panel Center Air Outlet Duct
4. Floor Air Outlet Duct

Engine Coolant

Engine coolant is the key element of the heating system. The engine thermostat controls the normal engine operating coolant temperature. Coolant pumped out of the engine enters the heater core through the inlet heater hose. The air flowing through the HVAC module absorbs the heat of the coolant flowing through the heater core. The coolant then exits the heater core through the heater outlet hose and returns back to the engine block.

A/C Cycle

Refrigerant is the key element in an air conditioning system. R-134a is a very low temperature gas that can transfer the undesirable heat from the passenger compartment to the outside air.

The A/C compressor is belt driven and operates when the magnetic clutch is engaged. The compressor builds pressure in the A/C system. Compressing the refrigerant also adds heat to the refrigerant. The refrigerant is discharged from the compressor through the discharge hose, and forced to flow to the condenser and then through the balance of the A/C system. The A/C system is mechanically protected with the use of a high pressure relief valve. If the high pressure A/C switch were to fail or if the refrigerant system becomes restricted and refrigerant pressure continued to rise, the high pressure relief will pop open and release refrigerant from the system.

Compressed refrigerant enters the condenser in a high temperature, high pressure vapor state. As the refrigerant flows through the condenser, the heat of the refrigerant is transferred to the ambient air passing through the condenser. Cooling the refrigerant causes the refrigerant to condense and change from a vapor to a liquid state.

The condenser is located in front of the radiator for maximum heat transfer. The condenser is made of aluminum tubing and aluminum cooling fins, which allows rapid heat transfer for the refrigerant. The

5-4 Heating, Ventilation, and Air Conditioning

semi-cooled liquid refrigerant exits the condenser and flows through the liquid line, to the thermal expansion valve.

The thermal expansion valve is located at the evaporator inlet. The thermal expansion valve is the dividing point for the high and the low pressure sides of the A/C system. As the refrigerant passes through the thermal expansion valve, the refrigerant is lowered. Due to the pressure differential on the liquid refrigerant, the refrigerant will begin to boil at the thermal expansion valve. The thermal expansion valve also meters the amount of liquid refrigerant that can flow into the evaporator.

Refrigerant exiting the thermal expansion valve flows into the evaporator core in a low pressure, liquid state. Ambient air is drawn through the HVAC module and

passes through the evaporator core. Warm and moist air will cause the liquid refrigerant to boil inside the evaporator core.



The boiling refrigerant absorbs heat from the ambient air and draws moisture onto the evaporator. The refrigerant exits the evaporator through the suction line and back to the compressor, in a vapor state. This completes the A/C cycle of heat removal. At the compressor, the refrigerant is compressed again and the cycle of heat removal is repeated.

The conditioned air is distributed through the HVAC module for passenger comfort. The moisture removed from the passenger compartment will also change form, or condense, and is discharged from the HVAC module as water.


HVAC - Manual

Schematic and Routing Diagrams

HVAC Schematics (Blower Controls)

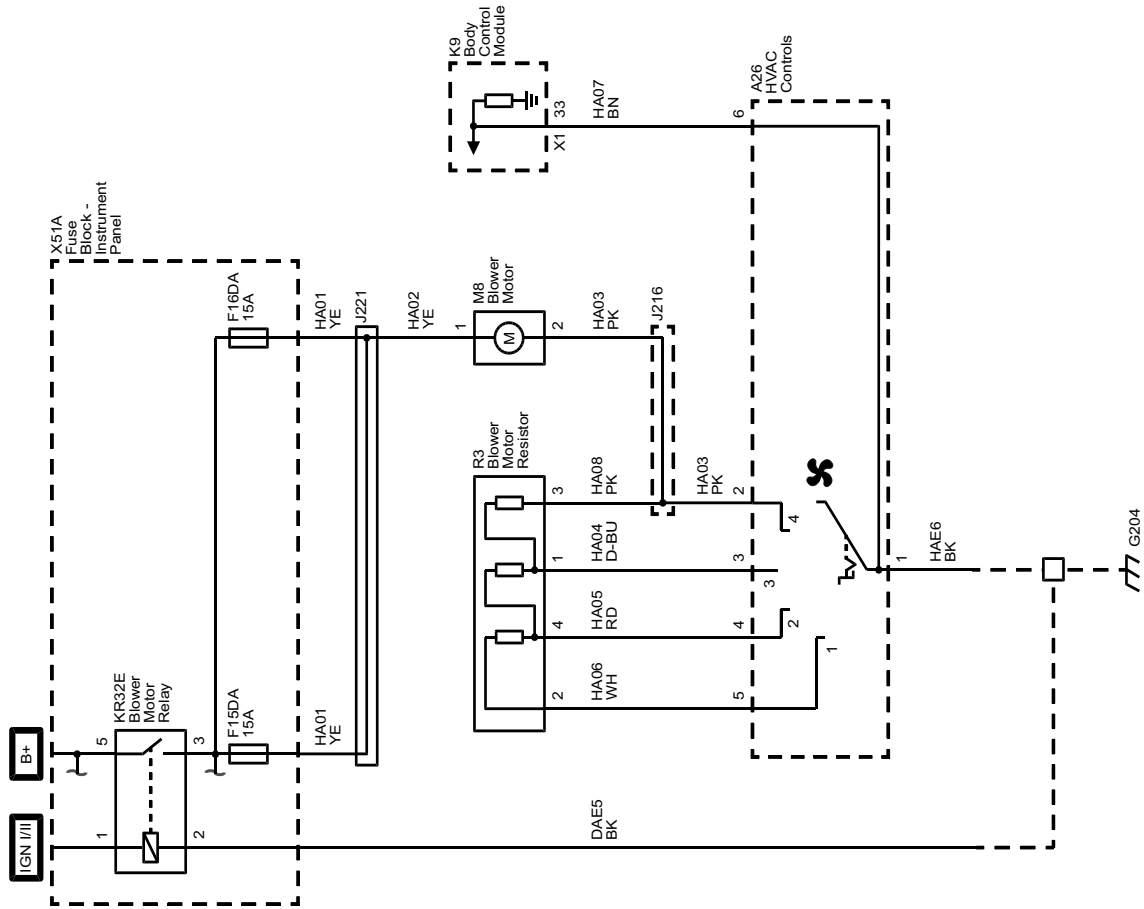

HVAC Schematics (Compressor Controls)

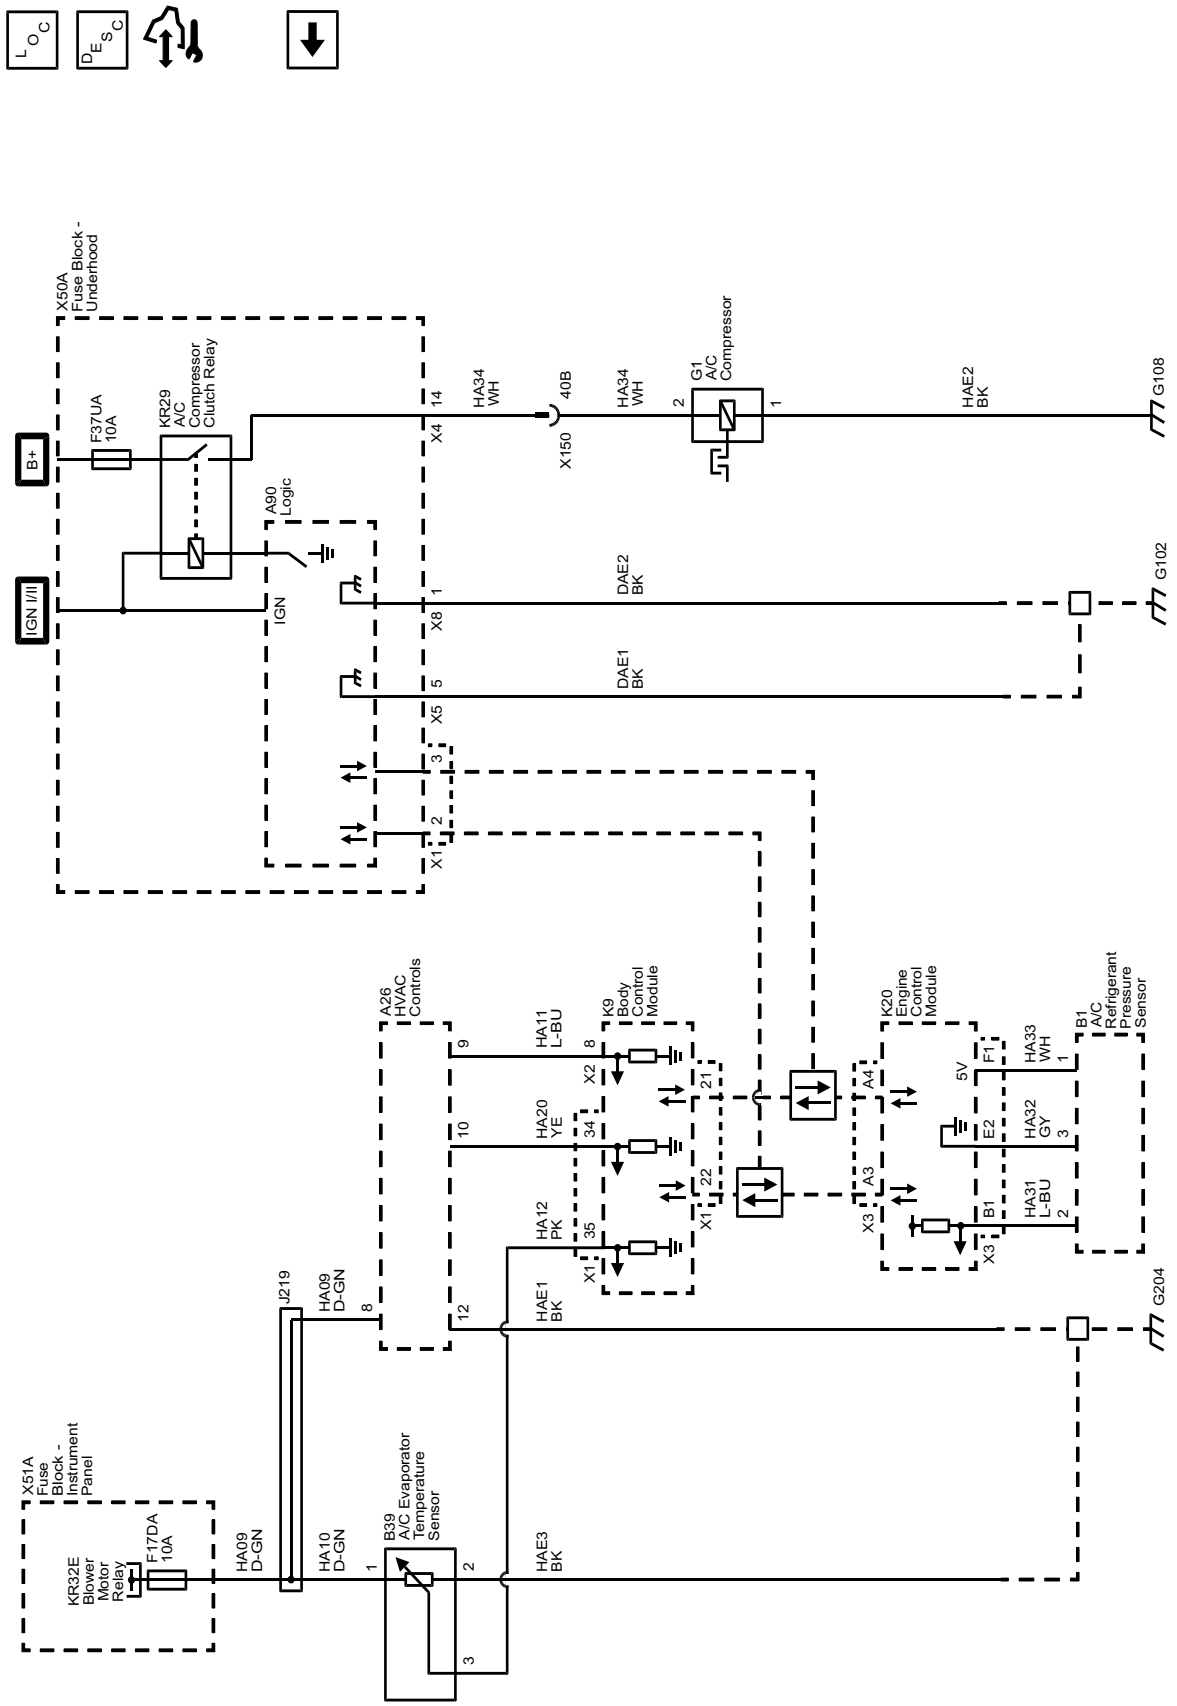

Description and Operation

Manual HVAC Description and Operation

The heater system is designed to provide heating, ventilation, windshield defrosting, side window defogging, and on some vehicles, heating directly to the rear seat area.

The heater and fan assembly blower regulates the airflow from the air inlet for further processing and distribution.

The heater core transfers the heat from the engine coolant to the inlet air.

The temperature door regulates the amount of the air that passes through the heater core. The temperature door also controls the temperature of the air by controlling the mix of the heated air and the ambient air.

The mode door regulates the flow and the distribution of the processed air to the heater ducts and to the defroster ducts.

Console-Mounted Heating and Ventilation Panel

Rotary Temperature Control Knob

- Actuates by cable
- Raises the temperature of the air entering the vehicle by rotation toward the right, or the red portion of the knob

Rotary Blower Control Knob

- Note there may be up to a 5 second delay when changing the blower motor speed from the off position to any of the on position speed settings. This is normal operation and due to the blower motor performing critical functions prior to operation.
- Turns ON to operate the blower motor at 4 speeds through a series of resistors.

- Turns OFF to stop the blower
- Operates completely independently both from the mode control that regulates the defroster door and from the temperature control knob
- Changes the fan speed in any mode and at any temperature setting

Rotary Mode Control Knob

- Actuates by cable
- Regulates the air distribution between the windshield, the instrument panel, and the floor vents

Rear Window Defogger Push Knob, if the Vehicle is Equipped with Rear Window Defogger

- Controls the rear window defogger
- Turns ON the rear window defogger when the push knob is pressed and the indicator lamp is illuminated

A/C Push Knob

- Controls the air conditioning (A/C)
- Turns the A/C ON when the push knob is down— However, if the blower control knob is OFF, the A/C system is OFF, regardless of the position of the A/C knob.

Fresh Air Control Level

- Operates by cable
- Switches between recirculating passenger compartment air and bringing outside air into the passenger compartment
- Draws in outside air when the lever is moved to the left
- Recirculates inside air when the lever is moved to the right

Section 6

Power and Signal Distribution



Data Communications	6-3	Component Locator	6-46
Schematic and Routing Diagrams	6-3	Master Electrical Component List	6-46
Data Communication Schematics	6-4	Front of Vehicle/Engine Compartment	
Body Control System Schematics	6-8	Component Views	6-71
Description and Operation	6-11	Powertrain Component Views	6-74
Body Control System Description and		Instrument Panel/Center Console Component	
Operation	6-11	Views	6-78
Data Link Communications Description and		Passenger Compartment/Roof Component	
Operation	6-11	Views	6-81
Power Outlets	6-13	Door Component Views	6-87
Schematic and Routing Diagrams	6-13	Luggage Compartment/Rear of Vehicle	
Cigar Lighter/Power Outlet Schematics	6-14	Component Views	6-92
Description and Operation	6-15	Wheels/Vehicle Underbody Component	
Power Outlets Description and Operation	6-15	Views	6-93
Wiring Systems and Power		Ground Views	6-96
Management	6-16	Electrical Center Identification Views	6-103
Schematic and Routing Diagrams	6-16	Component Connector End Views	6-135
Harness Routing Views	6-16	Splice Pack Connector End Views	6-321
Vehicle Zoning Strategy	6-24	Inline Harness Connector End Views	6-329
Schematics RPO Code List	6-26	Description and Operation	6-378
Power Distribution Schematics	6-27	Power Mode Description and Operation	6-378
Power Moding Schematics	6-38		
Ground Distribution Schematics	6-40		

BLANK


Data Communications

Schematic and Routing Diagrams


Data Communication Schematics (Power, Ground, ISO Bus, and LIN Buses)

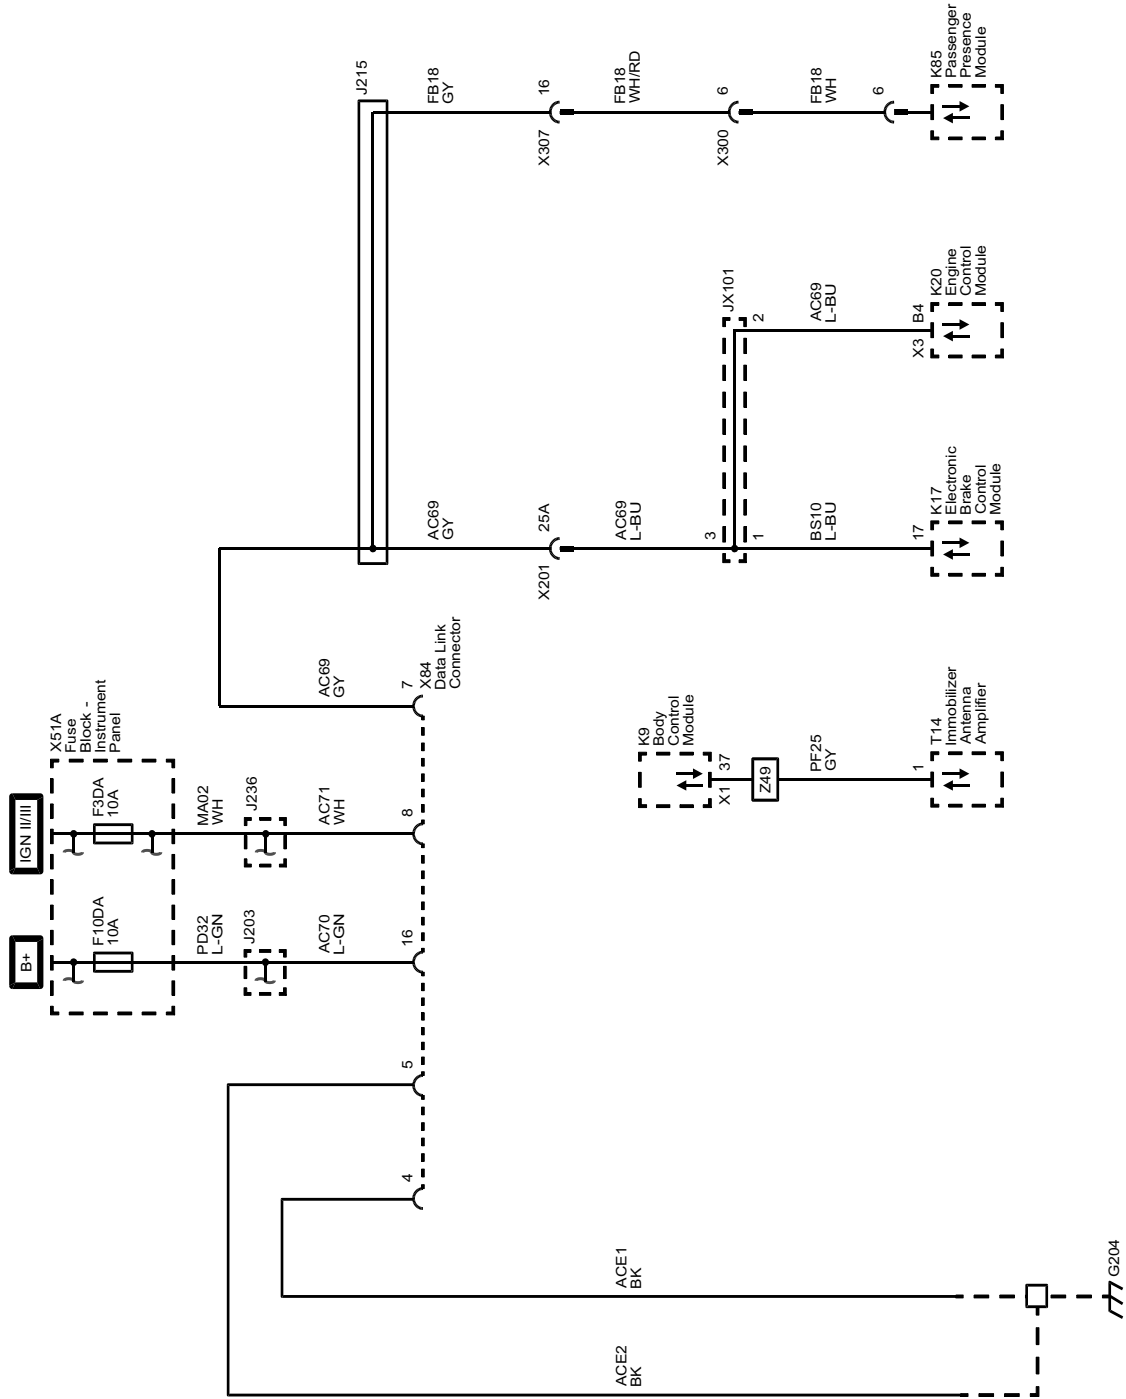


Data Communication Schematics (High Speed CAN (1 of 2))

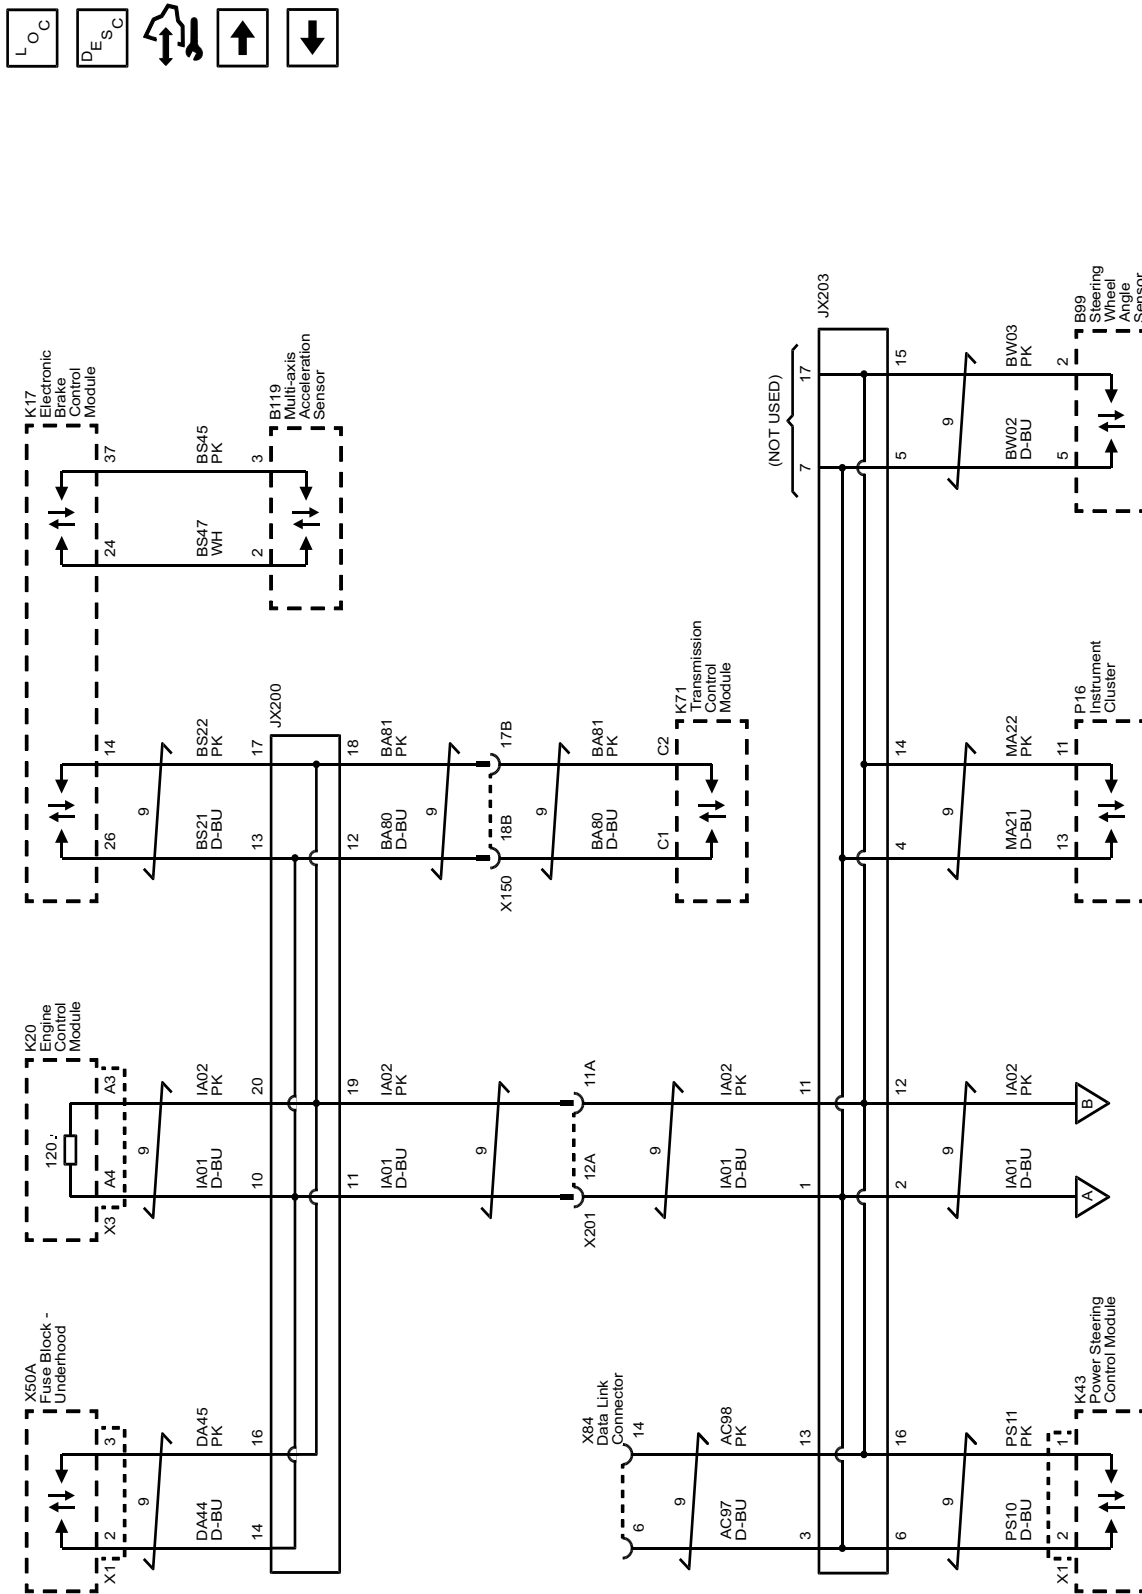



Data Communication Schematics (High Speed CAN (2 of 2))

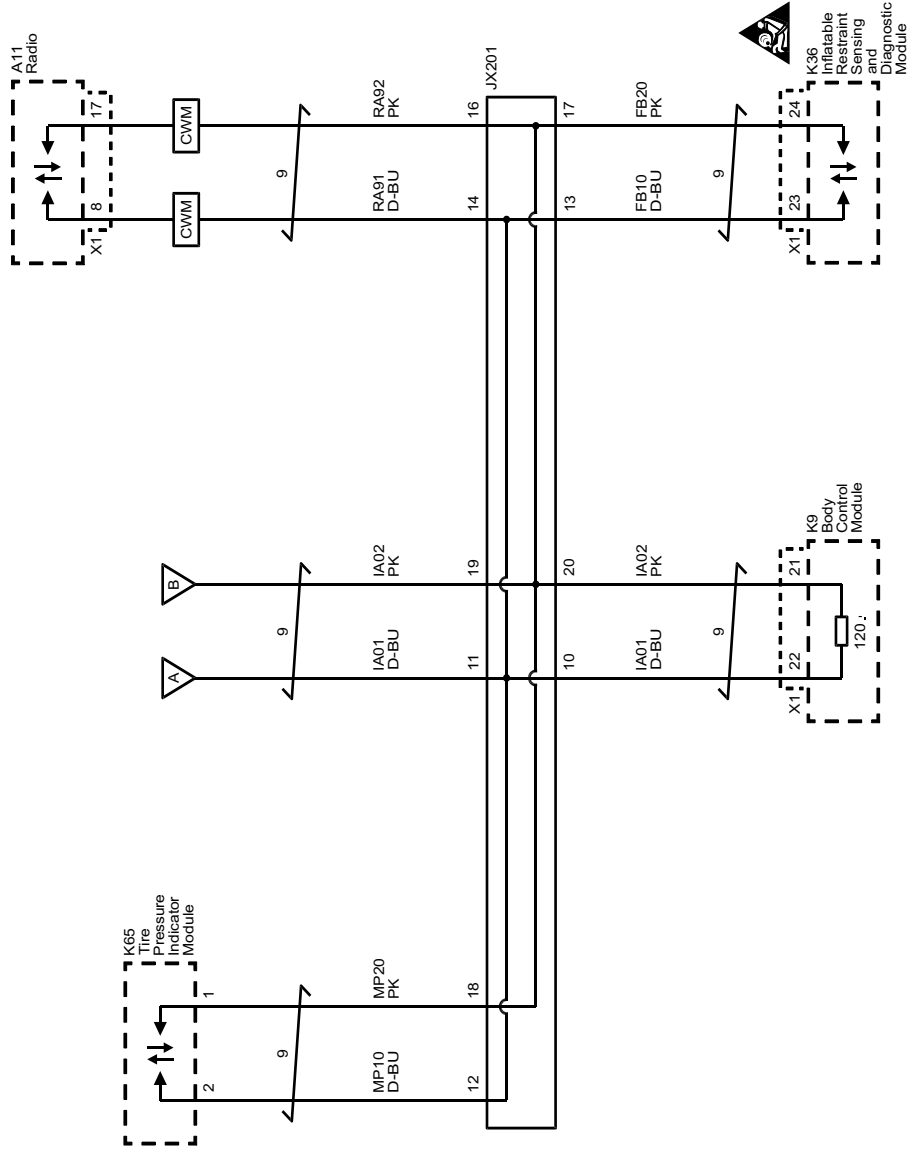


Data Communication Schematics (Medium Speed CAN (U1B with UPF))

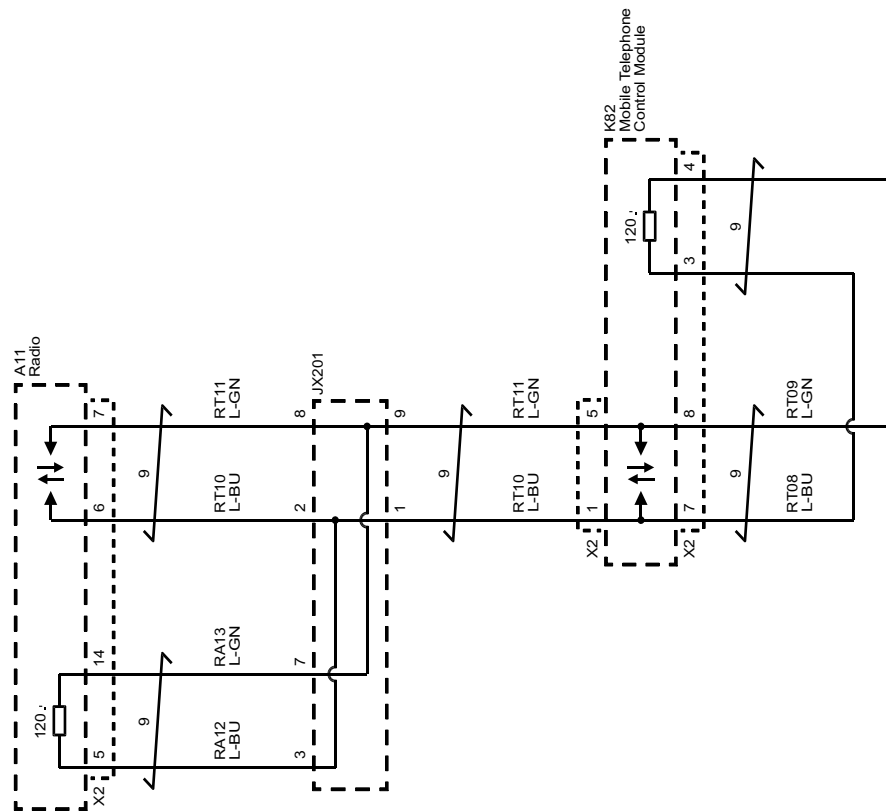


Body Control System Schematics (Power and Ground (1 of 3))

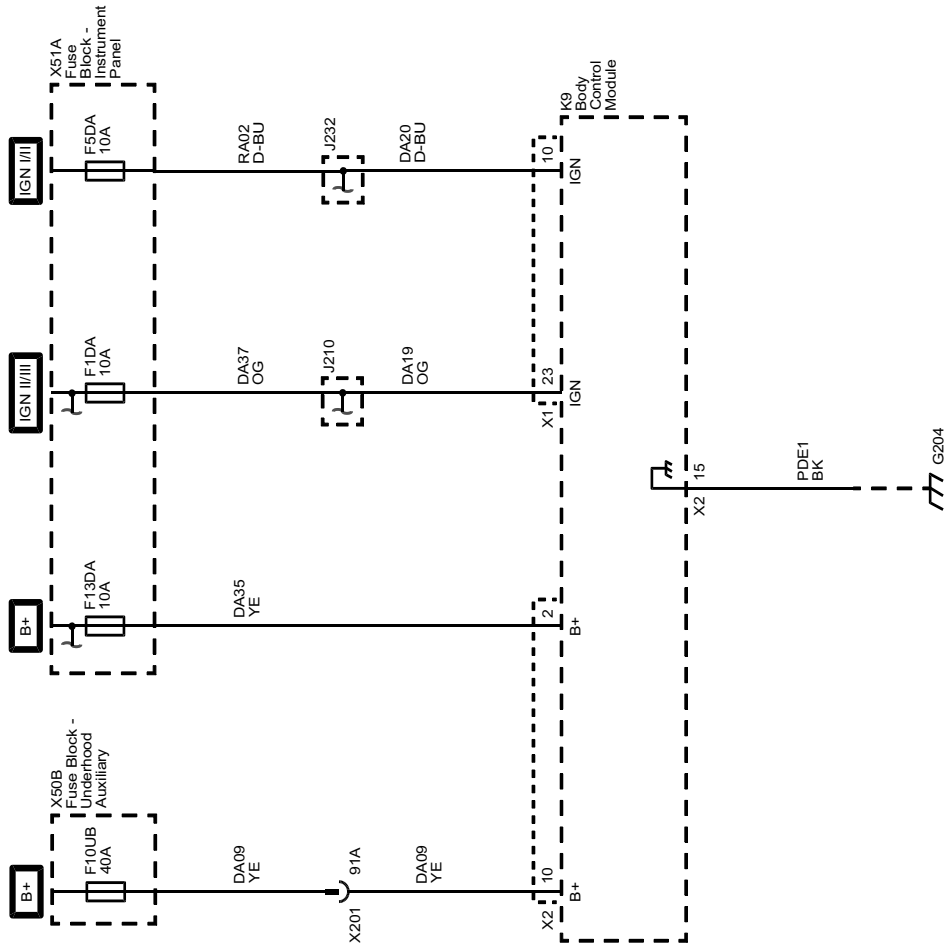

Body Control System Schematics (Subsystem References (2 of 3))

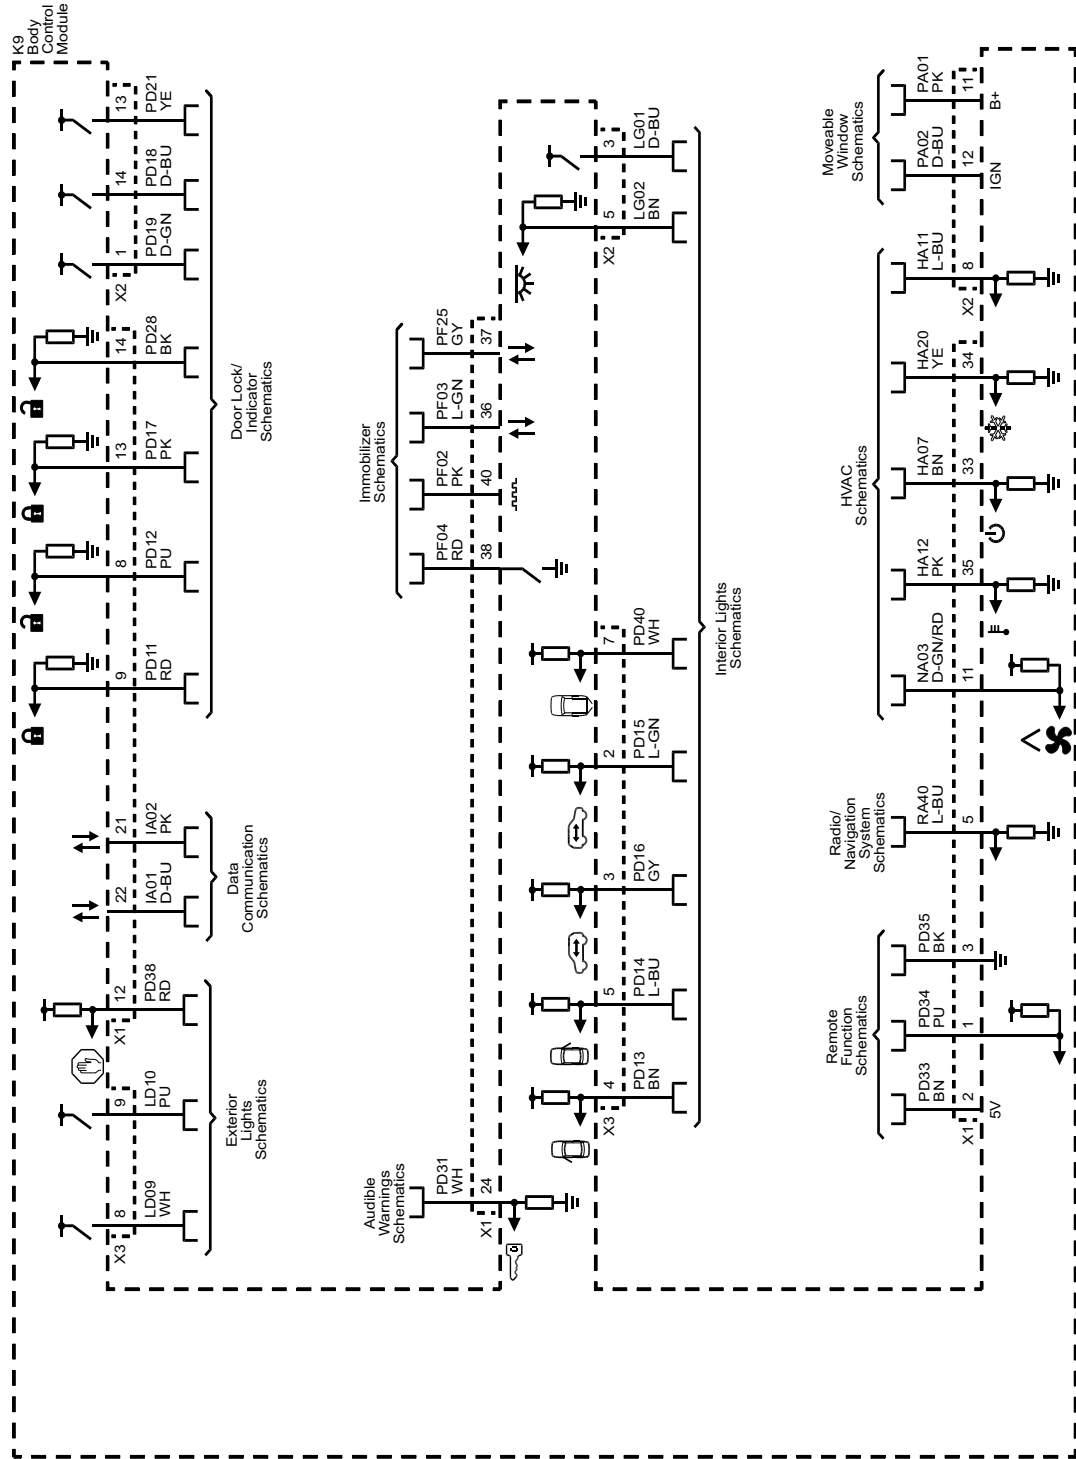

Body Control System Schematics (Subsystem References (3 of 3))

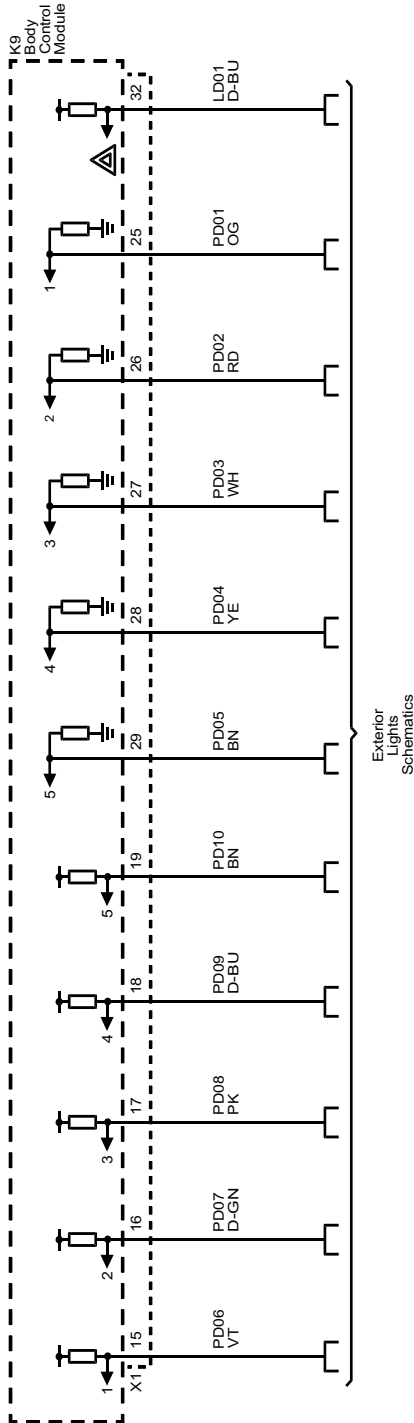

Description and Operation

Body Control System Description and Operation

The body control system consists of the Body Control Module (BCM), communications, and various input and outputs. Some inputs, outputs and messages require other modules to interact with the BCM. The BCM also has discrete input and output terminals to control the vehicle's body functions. The BCM is wired to the high speed CAN serial data bus and multiple LIN buses and acts as a gateway between them.

Power Mode Master

This vehicle body control module functions as the power mode master (PMM). The ignition switch is a low current switch with multiple discrete ignition switch signals to the PMM for determining the power mode that will be sent over the serial data circuits to the other modules that need this information; the PMM will activate relays and other direct outputs of the PMM as needed. Refer to *Power Mode Description and Operation* on page 6-378 for a complete description of power mode functions.

Gateway

The BCM in this vehicle functions as a gateway or translator. The purpose of the gateway is to translate serial data messages between the CAN high speed bus and multiple LIN buses for communication between the various modules. The gateway will interact with each network according to that network's transmission protocol.

All communication between the BCM and a scan tool is on the high speed CAN serial data circuits. A lost communication DTC typically is set in modules other than the module with a communication failure.

Body Control

The various BCM input and output circuits are illustrated in the corresponding functional areas on the BCM electrical schematics. Refer to the *Body Control System Schematics* on page 6-8 for more detailed information.

Data Link Communications

Description and Operation

Note: This is an overview of different serial data buses used by GM devices to communicate with each others. Use *Data Communication Schematics* on page 6-4 to find out which serial data buses are configured for a specific vehicle.

Circuit Description

There are many components in a vehicle that rely on information from other sources, transmit information to other sources, or both. Serial data communication networks provide a reliable, cost effective, way for various components of the vehicle to "talk" to one another and share information.

GM uses a number of different communication buses to insure the timely and efficient exchange of information between devices. When compared to each other, some of these buses are different in nature as far as speed, signal characteristics, and behavior.

The majority of information that exists within a given network generally stays local; however some information will have to be shared on other networks. Control modules designated as Gateway's perform the function of transferring information between the various buses. A Gateway module is connected to at least 2 buses and will interact with each network according to its message strategy and transmission models.

Controller Area Network (CAN) provides the capability for a receiving device to monitor message transmissions from other devices in order to determine if messages of interest are not being received. The primary purpose is to allow reasonable default values to be substituted for the information no longer being received. Additionally, a device may set a Diagnostic Trouble Code (DTC) to indicate that the device it is expecting information from is no longer communicating.

High Speed CAN Circuit Description

A High Speed CAN Bus is used where data needs to be exchanged at a high enough rate to minimize the delay between the occurrence of a change in sensor value and the reception of this information by a control device using the information to adjust vehicle system performance.

The High Speed CAN serial data network consists of two twisted wires. One signal circuit is identified as CAN-High and the other signal circuit is identified as CAN-Low. At each end of the data bus there is a 120 Ω termination resistor between the CAN-High and CAN-Low circuits.

Data symbols (1's and 0's) are transmitted sequentially at a rate of 500 Kbit/s. The data to be transmitted over the bus is represented by the voltage difference between the CAN-High signal voltage and the CAN-Low signal voltage.

When the two wire bus is at rest the CAN-High and CAN-Low signal circuits are not being driven and this represents a logic "1". In this state both signal circuits are at the same voltage of 2.5 V. The differential voltage is approximately 0 V.

When a logic "0" is to be transmitted, the CAN-High signal circuit is driven higher to about 3.5 V and the CAN-Low circuit is driven lower to about 1.5 V. The differential voltage becomes approximately 2.0 (+/- 0.5) V.

Local Interconnect Network (LIN)

Circuit Description

The Local Interconnect Network (LIN) Bus consists of a single wire with a transmission rate of 10.417 Kbit/s. This bus is used to exchange information between a master control module and other smart devices which provide supporting functionality. This type of configuration does not require the capacity or speed of either a High Speed CAN Bus or Mid Speed CAN Bus and is thus relatively simpler.

6-12 Data Communications

The data symbols (1's and 0's) to be transmitted are represented by different voltage levels on the communication bus. When the LIN Bus is at rest and is not being driven, the signal is in a high voltage state of approximately V_{batt} . This represents a logic "1". When a logic "0" is to be transmitted, the signal voltage is driven low to about ground (0.0 V).

Data Link Connector (DLC)

The X84 Data Link Connector (DLC) is a standardized 16-cavity connector. Connector design and location is dictated by an industry wide standard, and is required to provide the following:

- Terminal 4 Scan tool power ground terminal
- Terminal 5 Common signal ground terminal
- Terminal 6 High speed CAN serial data bus (+) terminal
- Terminal 7 Keyword communications terminal

- Terminal 8 Scan tool power, ignition terminal
- Terminal 14 High speed CAN serial data bus (-) terminal
- Terminal 16 Scan tool power, battery positive voltage terminal


Serial Data Reference

The scan tool communicates over the various buses on the vehicle. When a scan tool is installed on a vehicle, the scan tool will try to communicate with every device that could be optioned into the vehicle. If an option is not installed on the vehicle, the scan tool will display No Comm (or Not Connected) for that optional device. In order to avert misdiagnoses of No Communication with a specific device, refer to *Data Link References* for a list of devices, the buses they communicate with, and the RPO codes for a specific device.

Power Outlets

Schematic and Routing Diagrams

Cigar Lighter/Power Outlet Schematics (Cigar Lighter/Power Outlet)

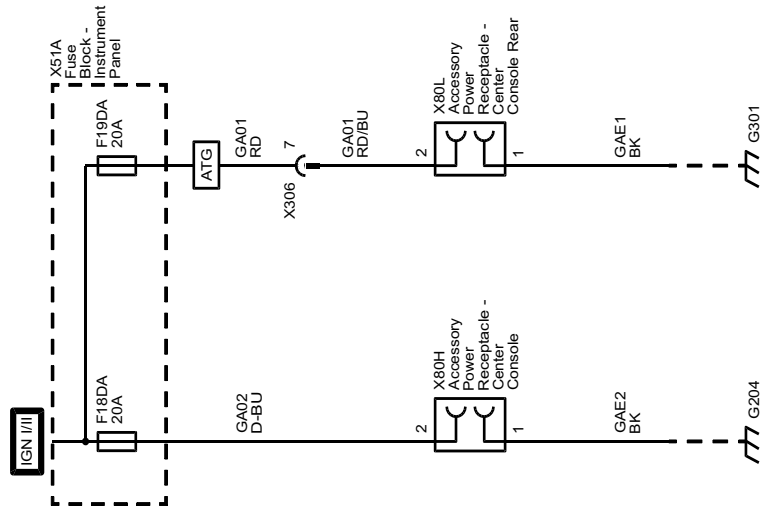

Description and Operation

Power Outlets Description and Operation

System Description


The vehicle is fitted with a cigarette lighter and/or with a 12 V accessory power receptacle. The cigarette lighter and accessory power outlets are controlled by an

ignition operated relay. The accessory power receptacle and cigarette lighter are operational when the ignition is turned to either the On or the Accessories positions. To operate the cigarette lighter, press in the lighter knob. When the element is hot, the lighter automatically pops out and is ready for use.

Wiring Systems and Power Management

Schematic and Routing Diagrams

Harness Routing Views (Engine Compartment Harness Routing View - Engine Compartment Side)

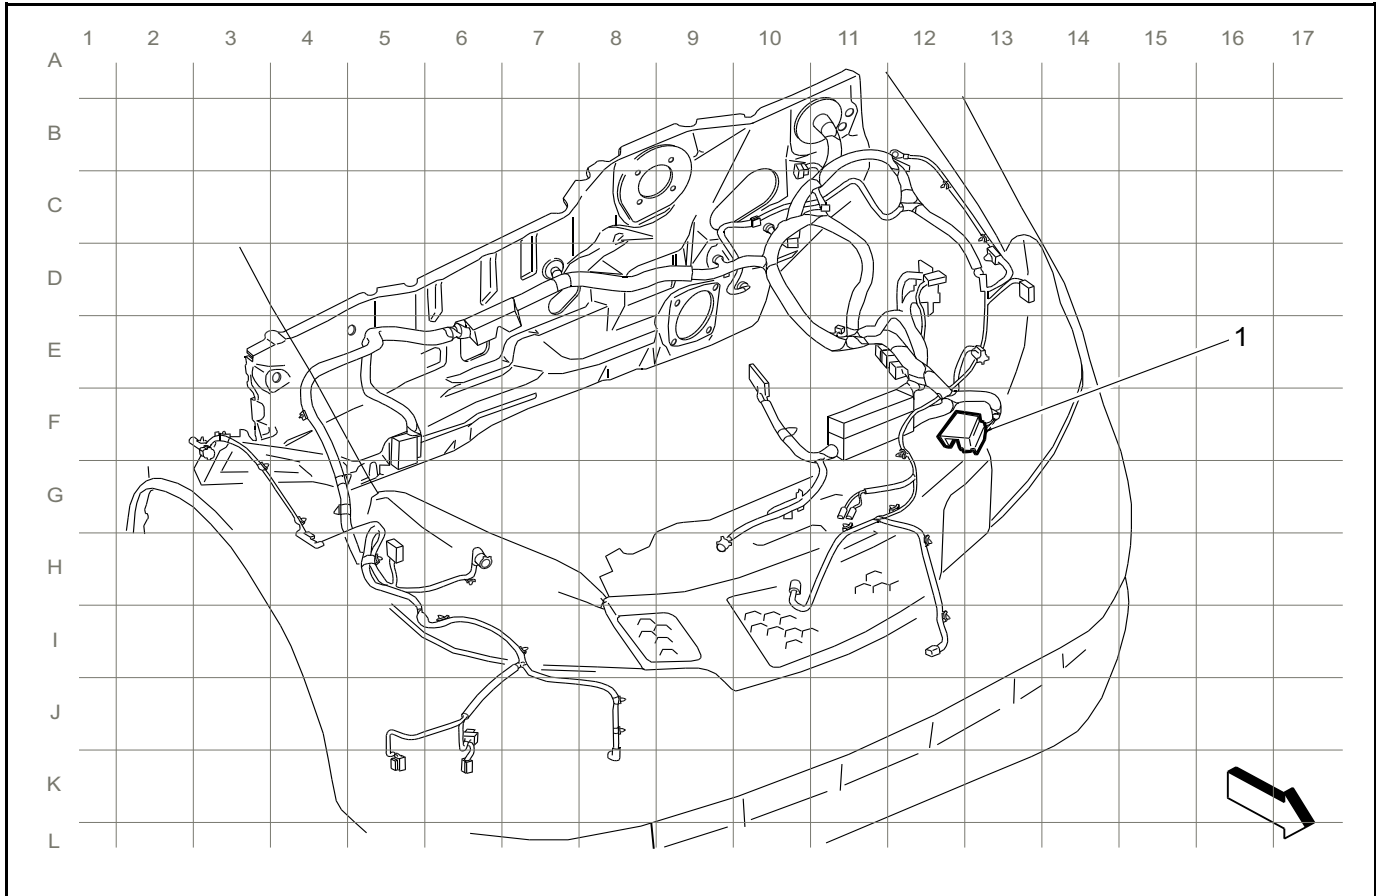


3945327

Items

- (1) X150

Harness Routing Views (Engine Harness Routing View)

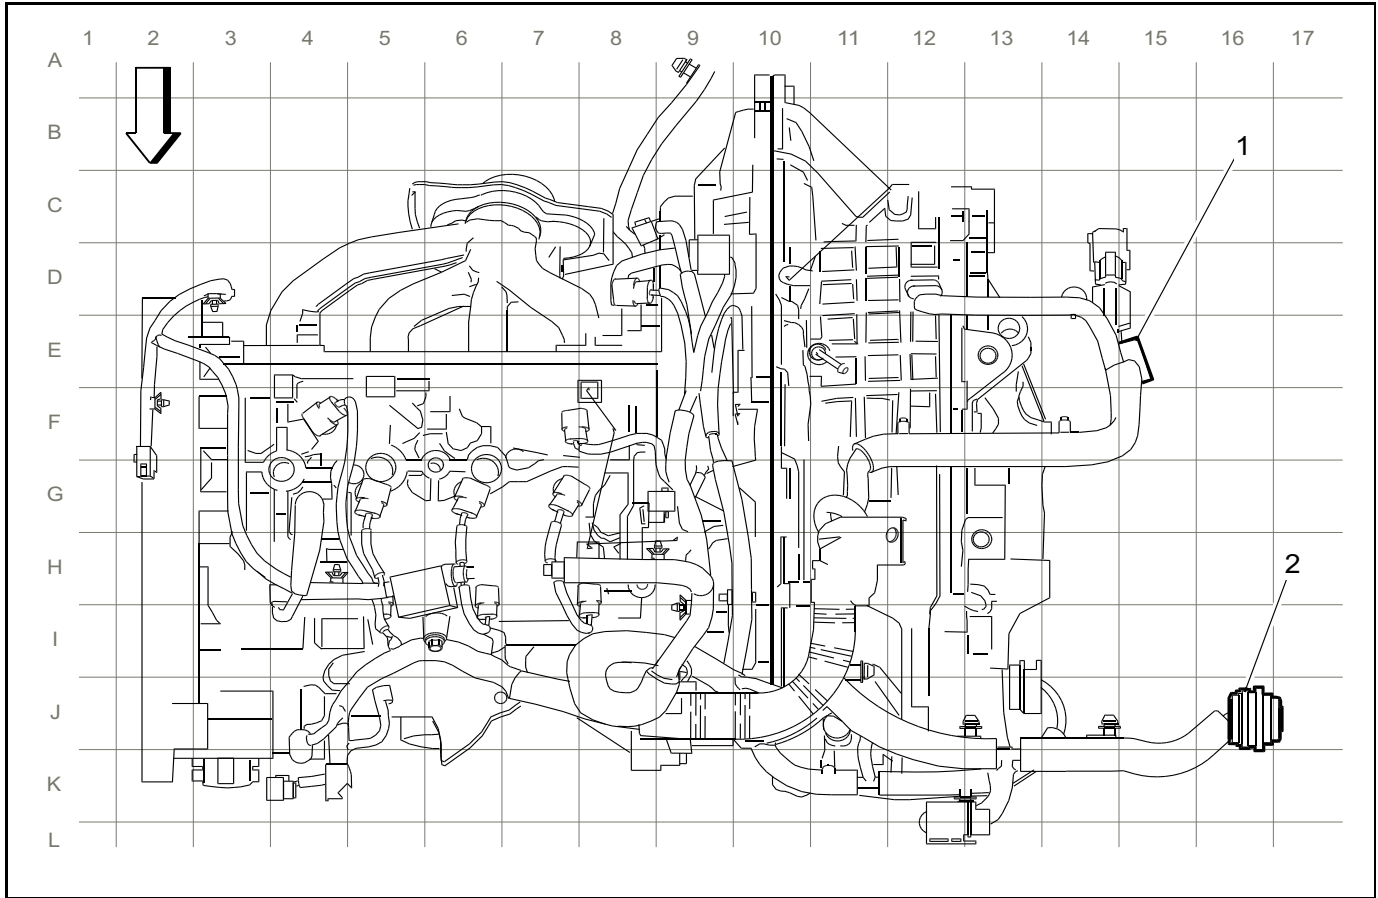


3945191

Items

- (1) JX102
- (2) X150

Harness Routing Views (Automatic Transmission Harness Routing View)

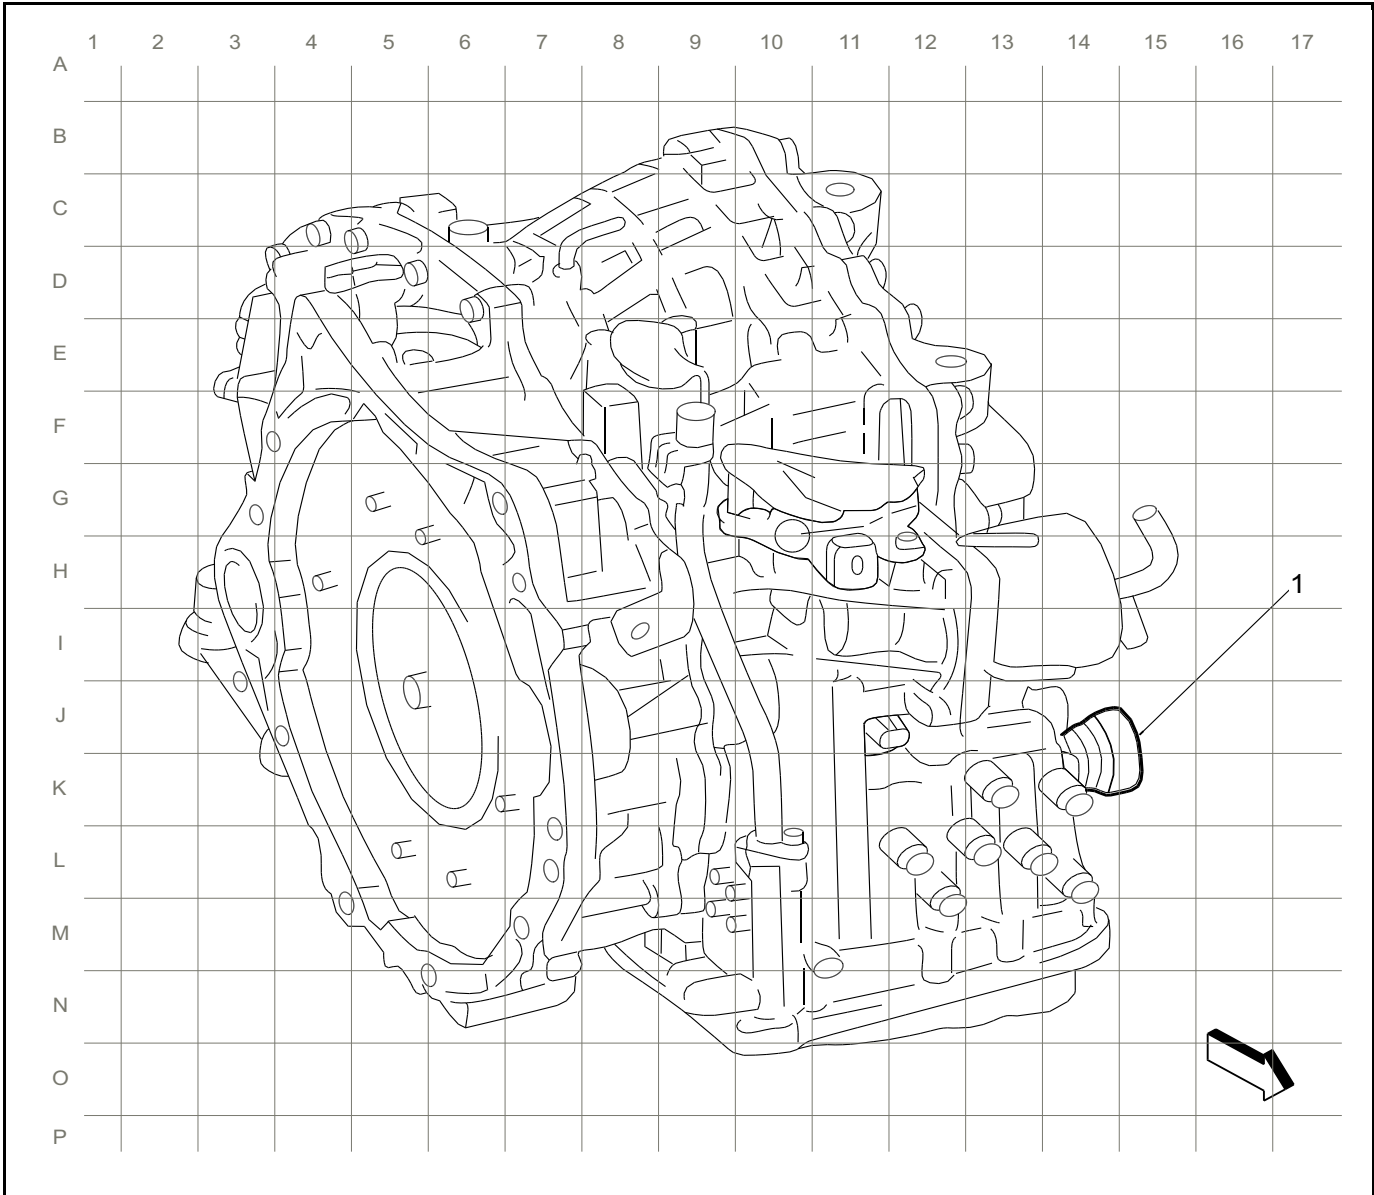


4256442

Items

- (1) X175

Harness Routing Views (Engine Compartment Harness Routing View - Instrument Panel Side)

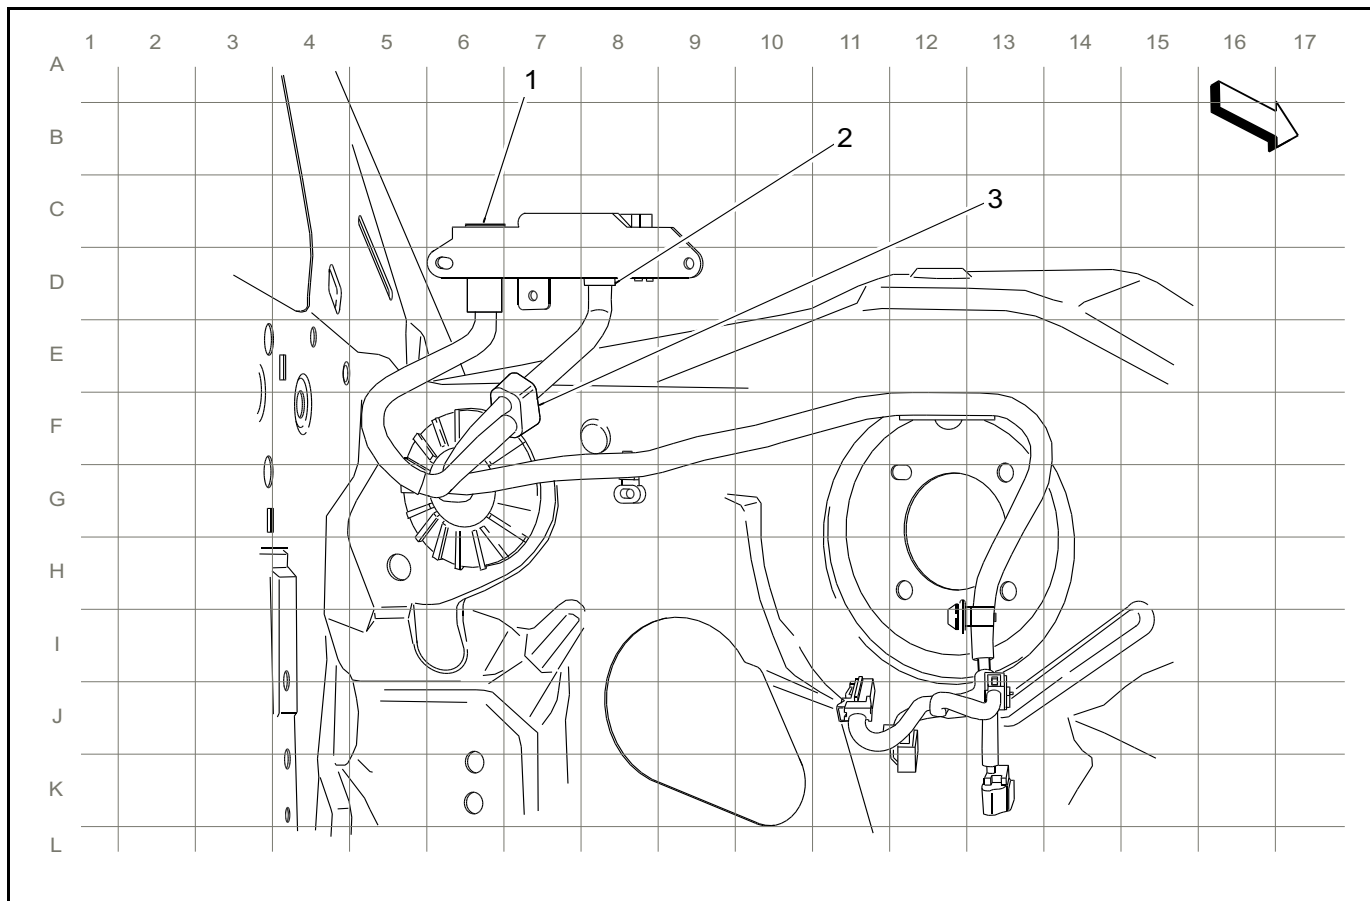


3945329

Items

- (1) X202
- (2) X201

- (3) JX200

Harness Routing Views (Instrument Panel Harness Routing View)

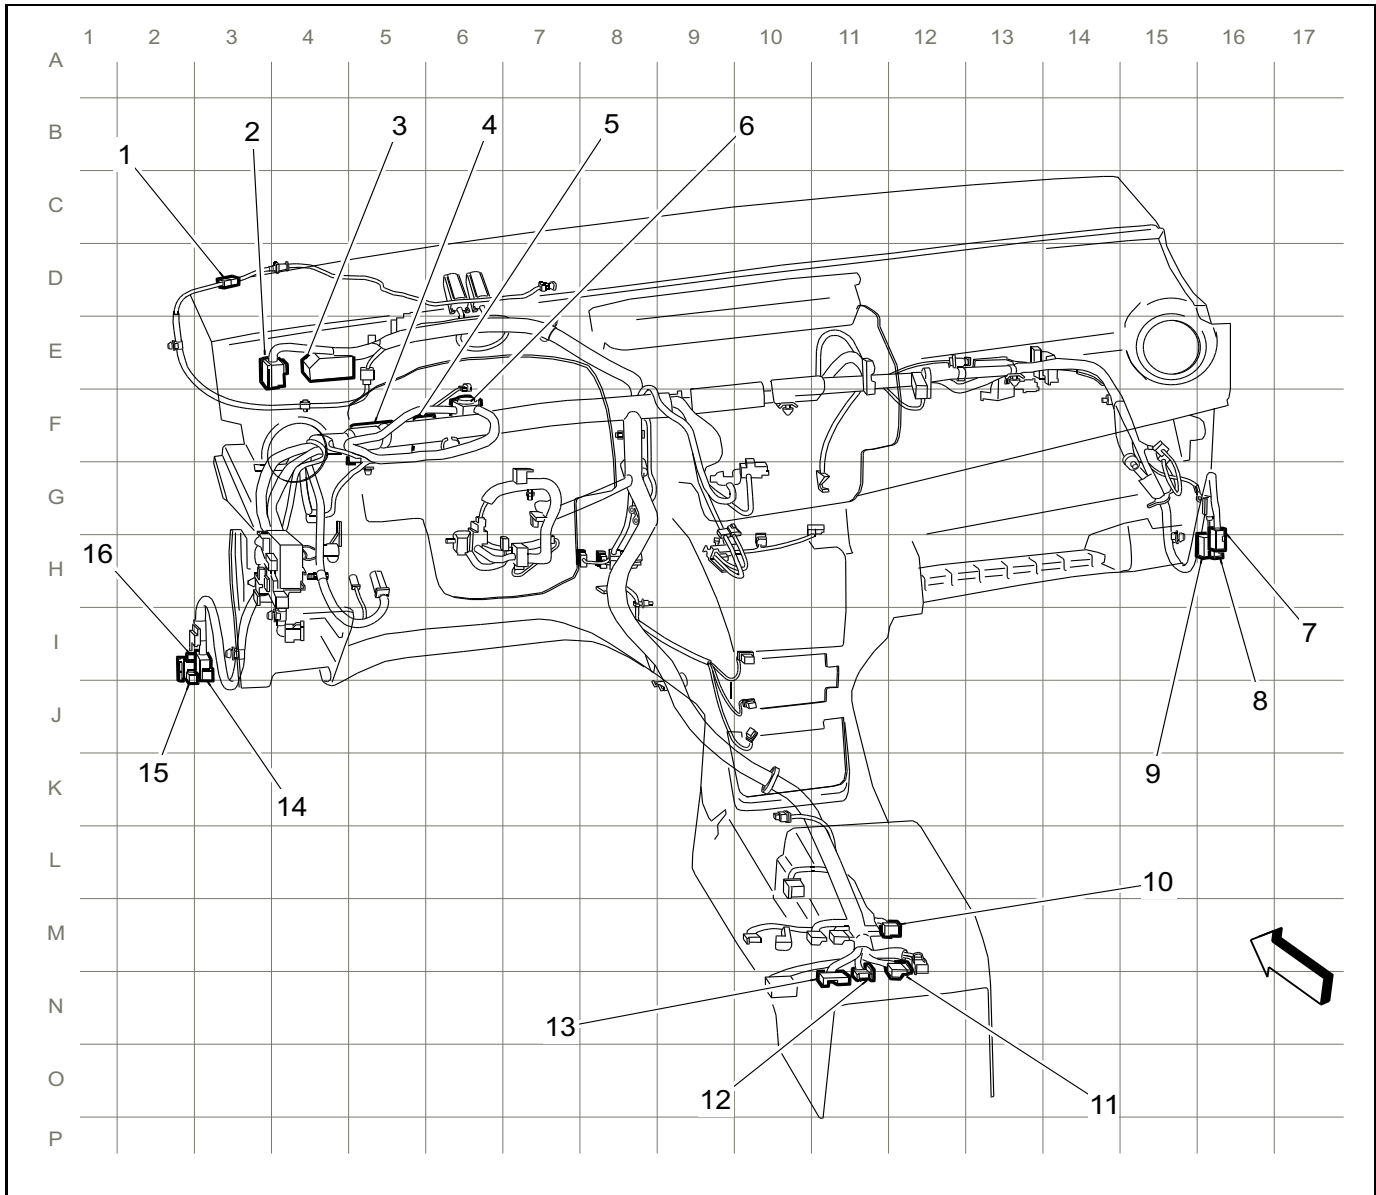


3945192

Items

- | | | | |
|-----|-------------------|------|------|
| (1) | X203 (CWM or UPF) | (10) | X308 |
| (2) | X202 | (11) | X307 |
| (3) | X201 | (12) | X306 |
| (4) | JX202 | (13) | X305 |
| (5) | JX203 | (14) | X502 |
| (6) | JX201 | (15) | X500 |
| (7) | X602 | (16) | X501 |
| (8) | X601 | | |
| (9) | X600 | | |

Harness Routing Views (Body Harness Routing View)

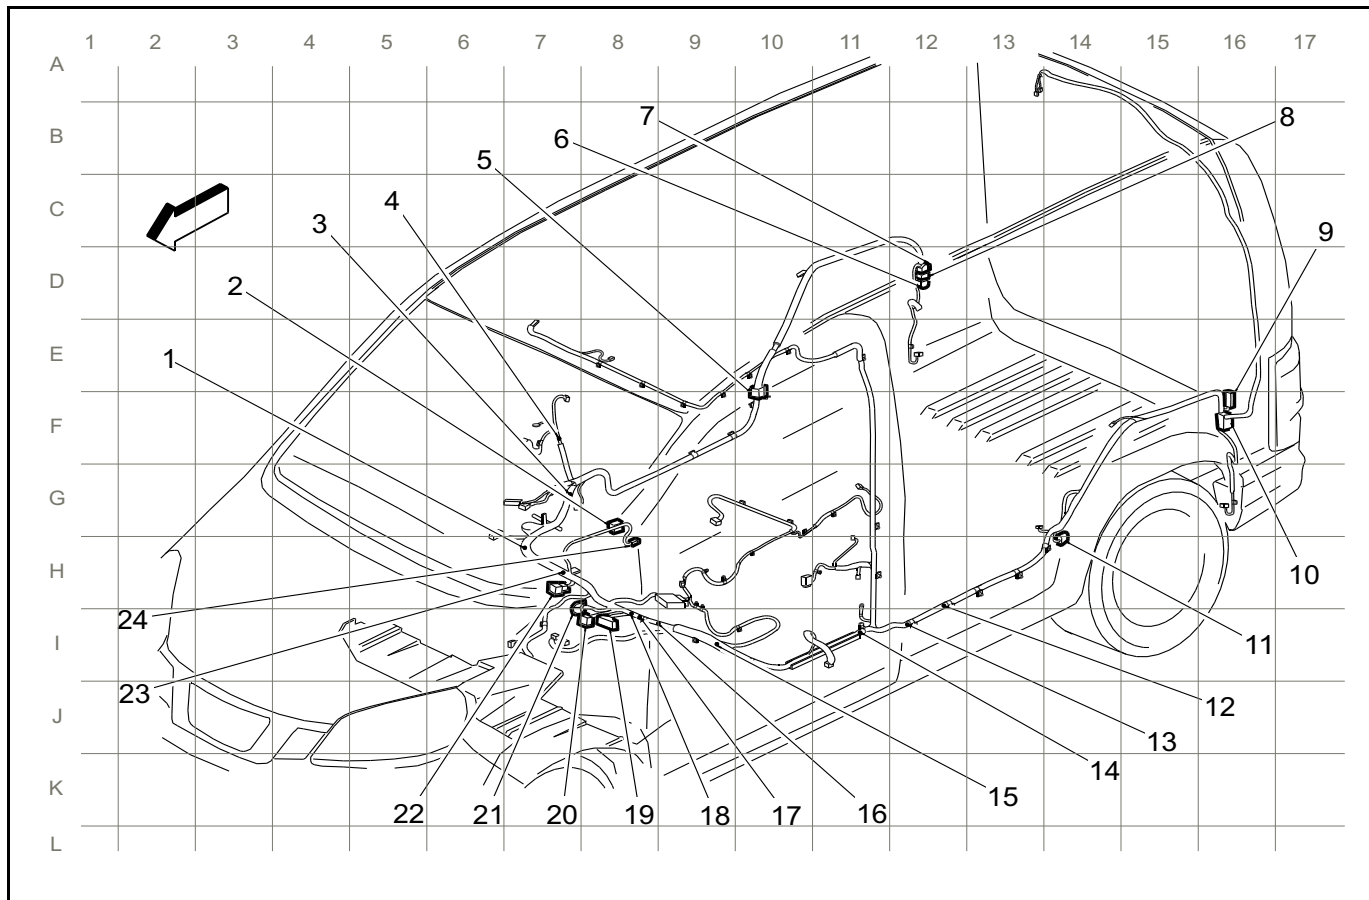


3945158

Items

- | | | | |
|------|------|------|------|
| (1) | J303 | (14) | J313 |
| (2) | X300 | (15) | J307 |
| (3) | J311 | (16) | J301 |
| (4) | J314 | (17) | J308 |
| (5) | X302 | (18) | J304 |
| (6) | X420 | (19) | X306 |
| (7) | X403 | (20) | X308 |
| (8) | X402 | (21) | X305 |
| (9) | X304 | (22) | X307 |
| (10) | X410 | (23) | J312 |
| (11) | X303 | (24) | X301 |
| (12) | J305 | | |
| (13) | J306 | | |

Harness Routing Views (Driver Door Harness Routing View)

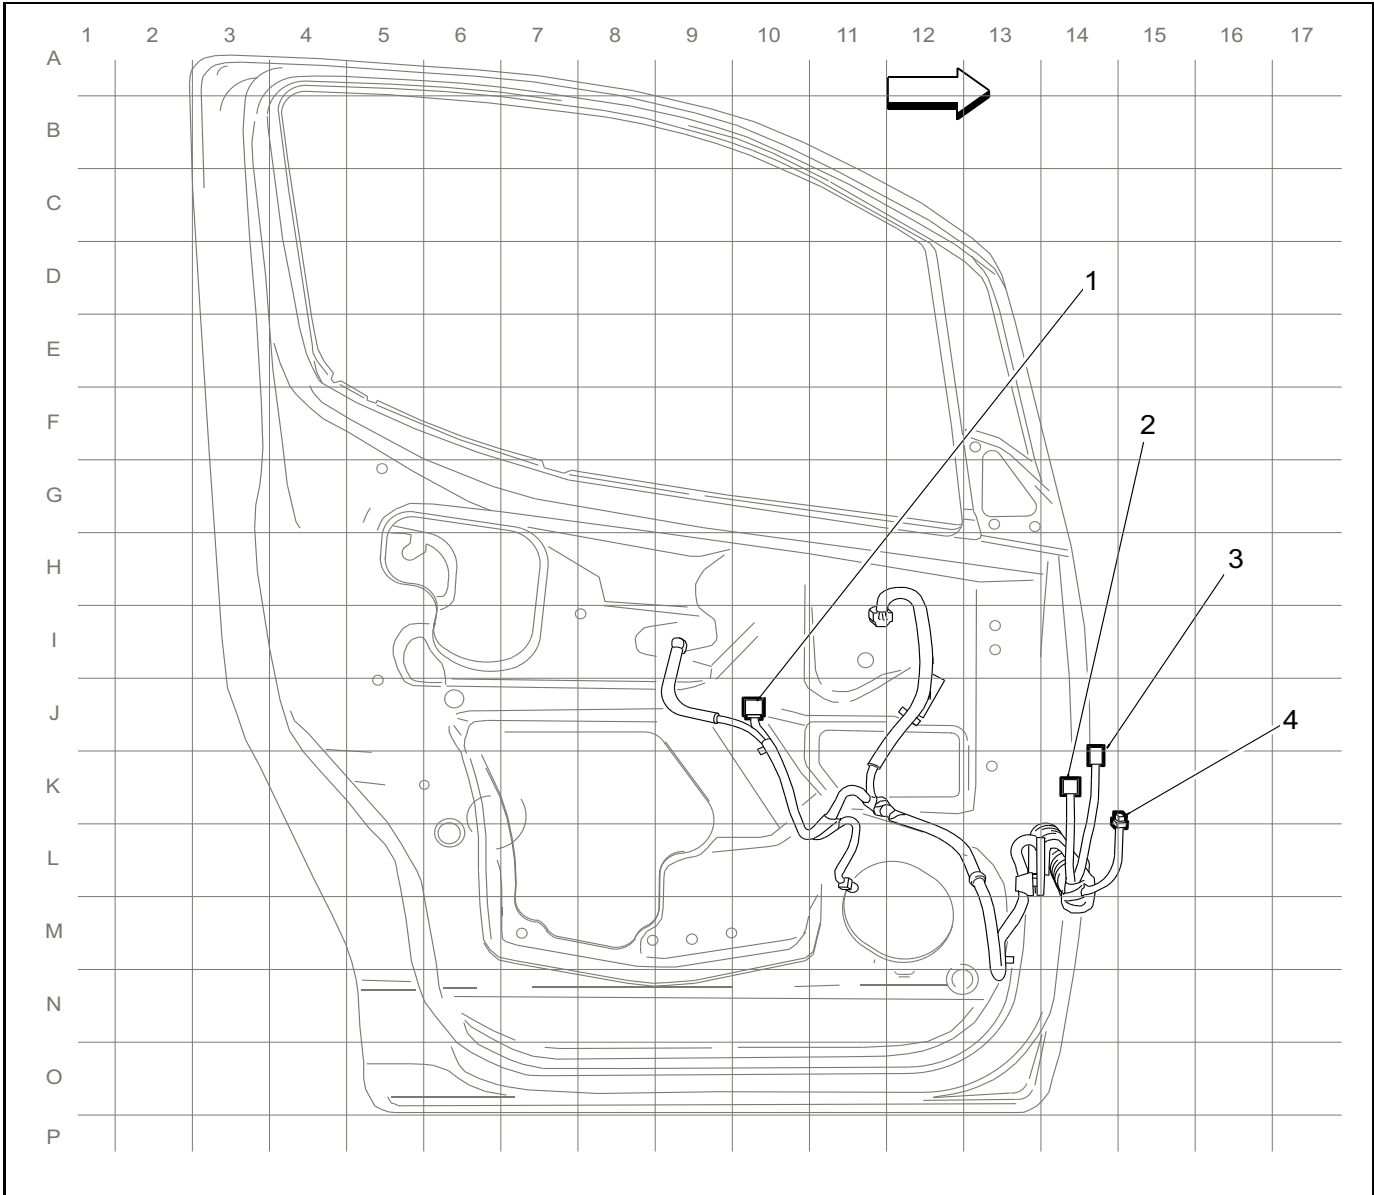


3945319

Items

- (1) X510
- (2) X500
- (3) X501

- (4) X502

Harness Routing Views (Passenger Door Harness Routing View)

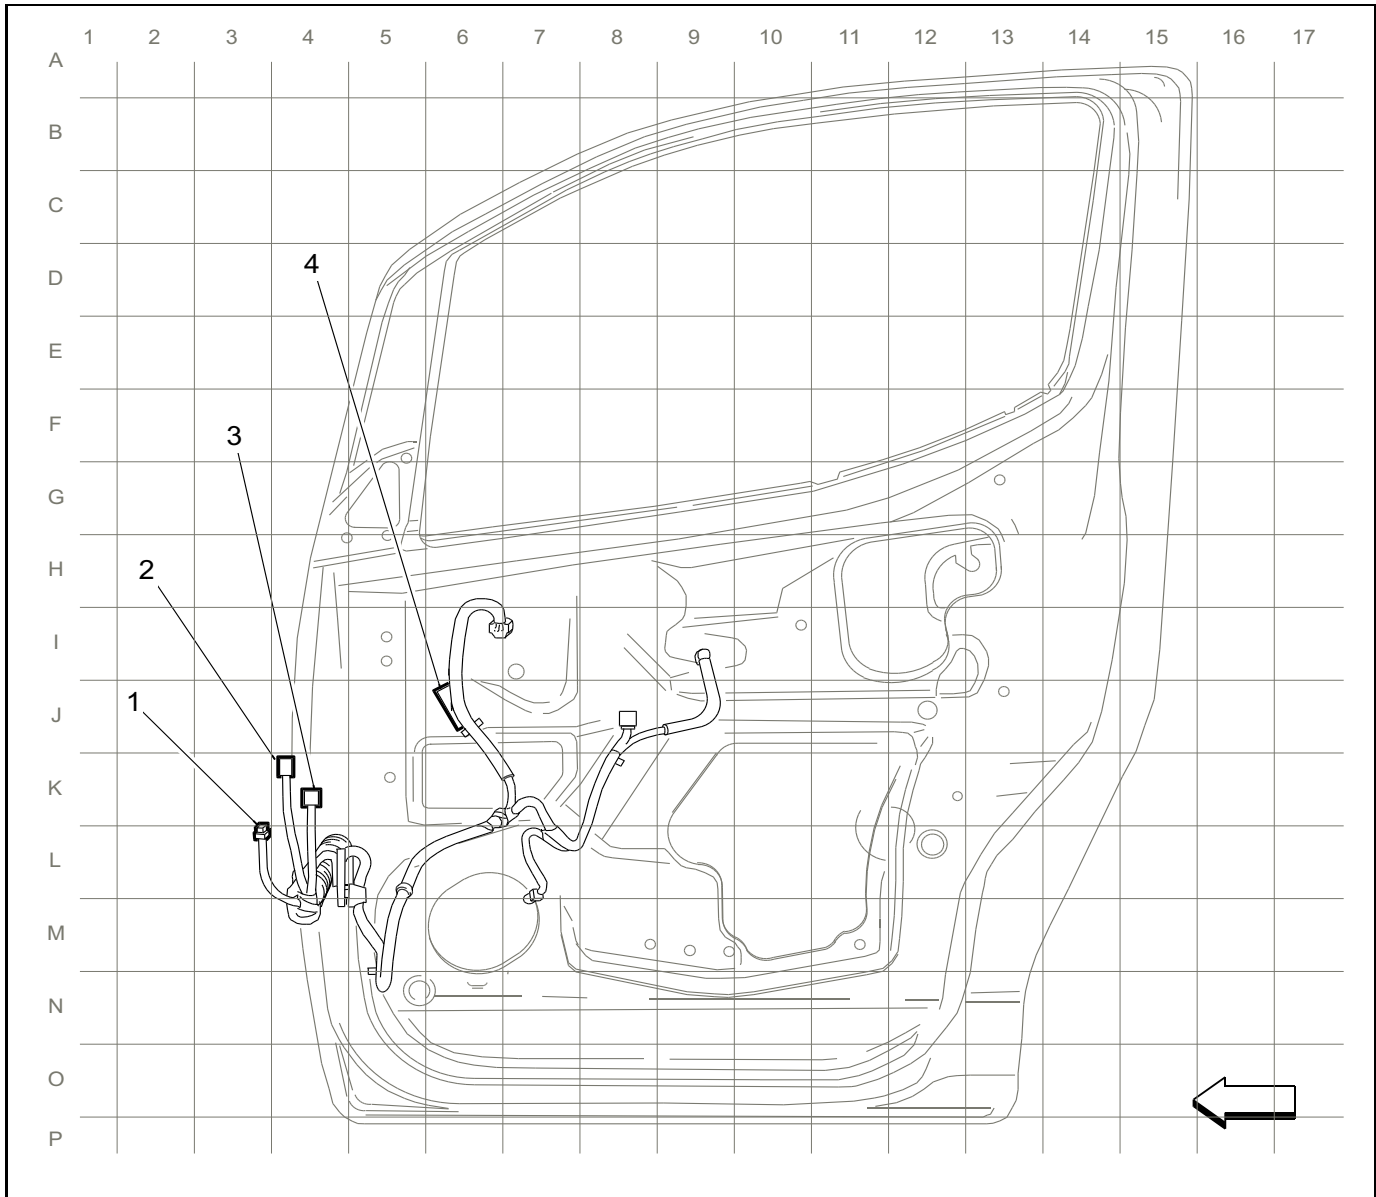


3945310

Items

- (1) X601
- (2) X602
- (3) X600

(4) X610

Harness Routing Views (Rear Door Harness Routing View)

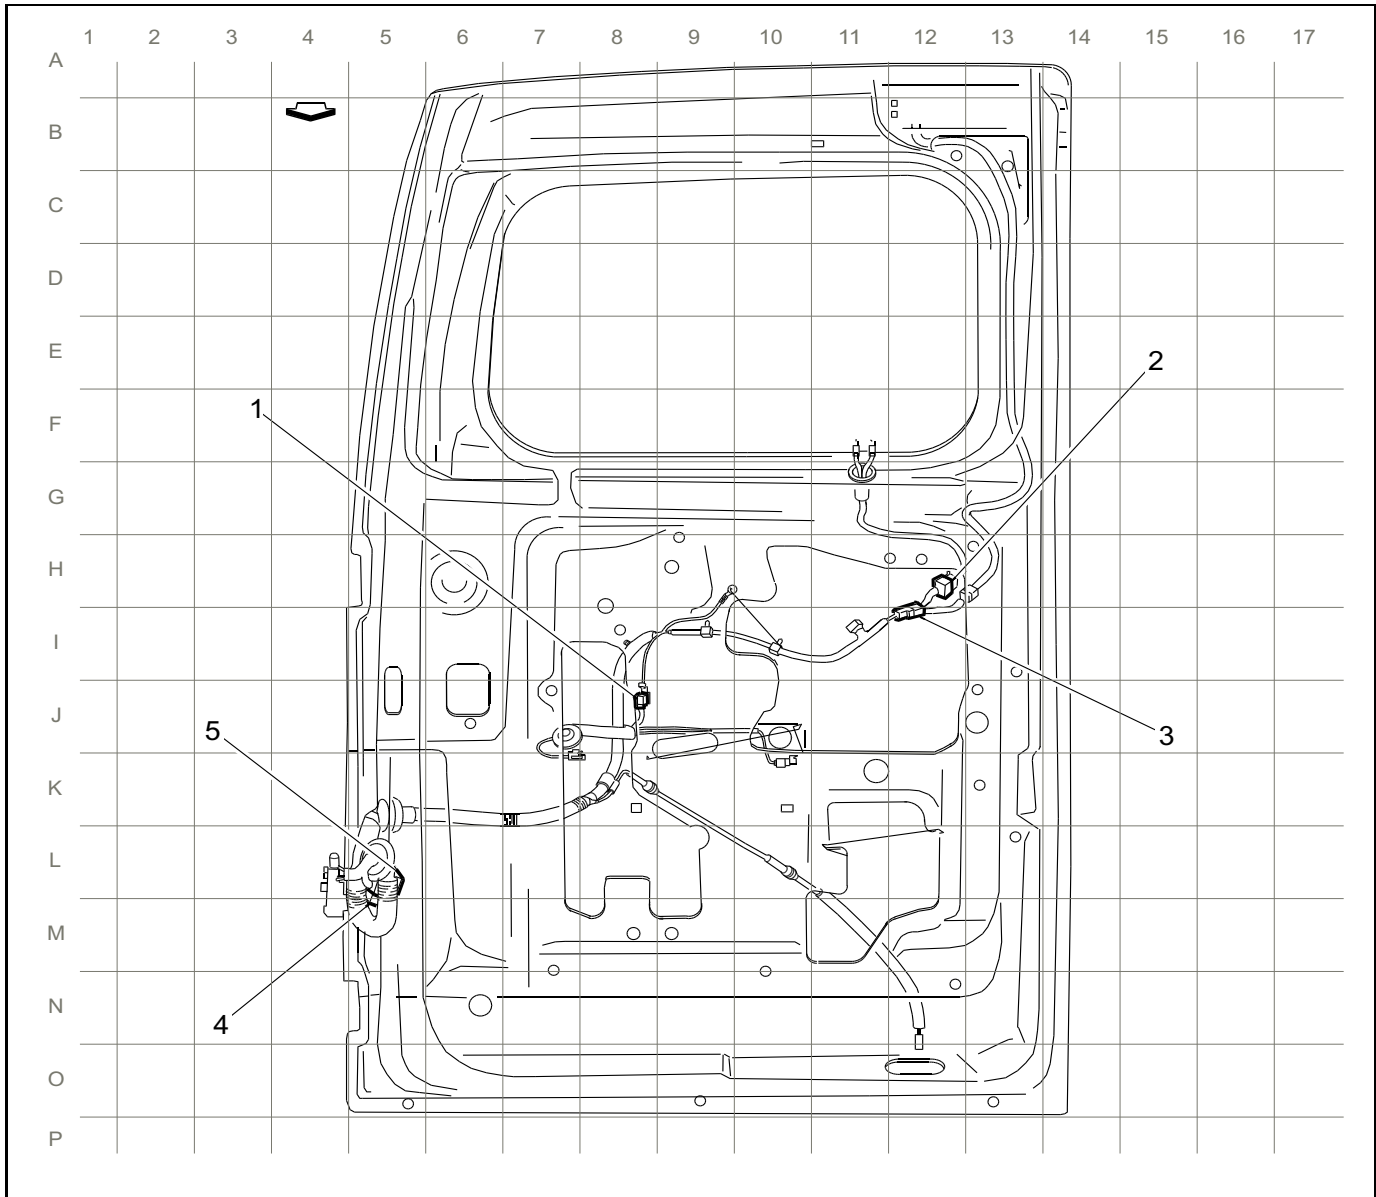

3945195


Items

- (1) X905
- (2) X907
- (3) X906

- (4) X403
- (5) X402

Vehicle Zoning Strategy

All grounds, in-line connectors, and splices have identifying numbers that correspond to where they are located in the vehicle. The following table explains the numbering system.

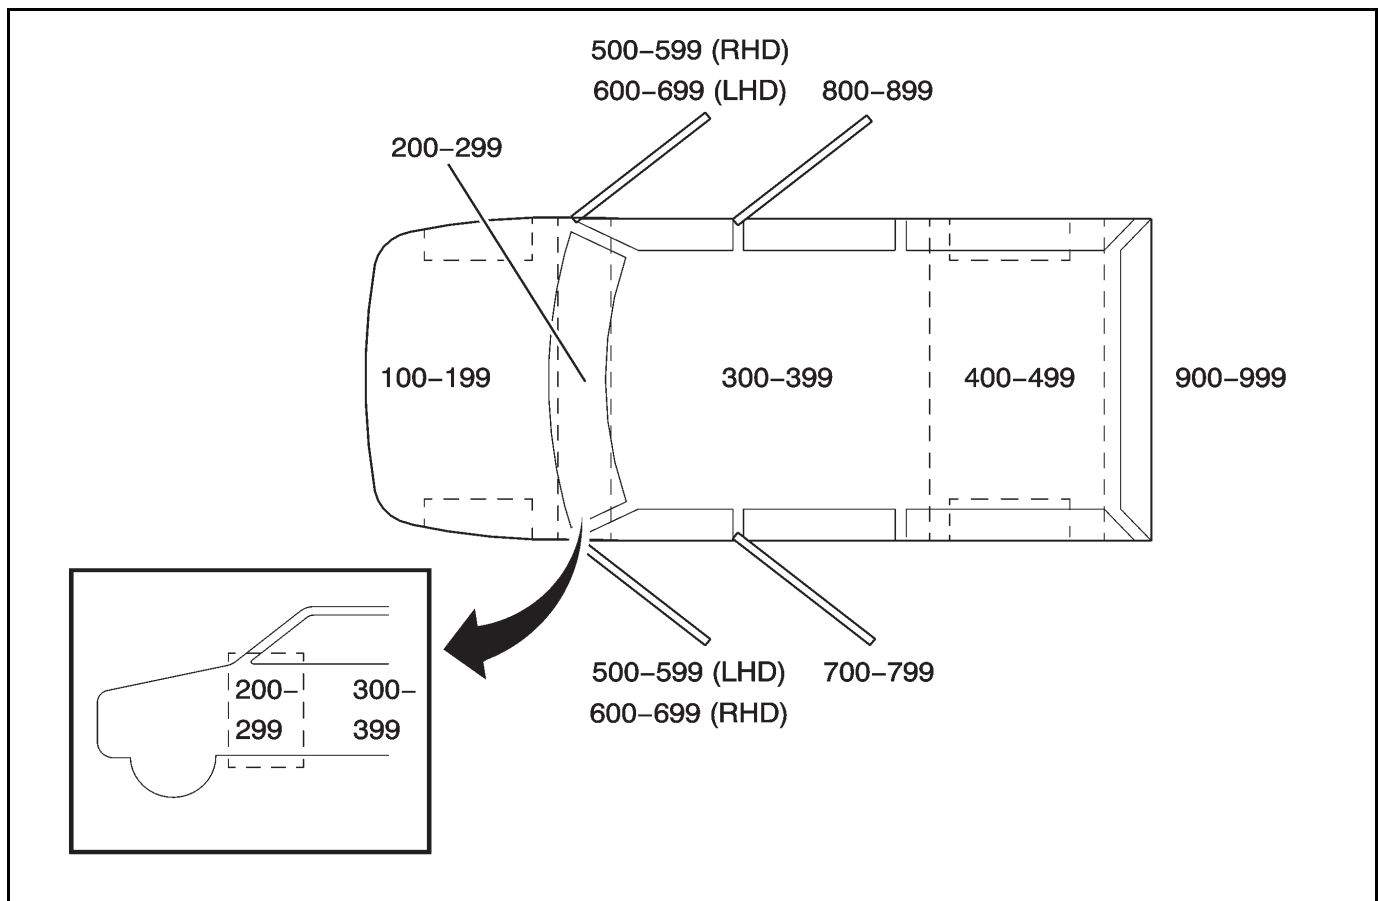

160996


Vehicle Zoning Strategy

Callout Numbers	Zone Description
100-199	Engine compartment (all forward of the instrument panel)
200-299	Within the instrument panel area (between the bulkhead and the front plane of the instrument panel)
300-399	Passenger compartment (from instrument panel to the back of the 2nd row seats)
400-499	Luggage compartment (from the back of the 2nd row seats to the rear of the vehicle, including any additional rows of seating rear of the 2nd row seats)
500-599	Inline harness connectors to or within the driver door
600-699	Inline harness connectors to or within the front passenger door
700-799	Inline harness connectors to or within the left rear door
800-899	Inline harness connectors to or within the right rear door
900-999	Inline harness connectors to or within the liftgate, lift window, endgate, or rear doors

Schematics RPO Code List


RPO	Option Name	Country Group
ATG	Remote Keyless Entry	U.S.A., PR&USVI (MAH), Canada (MBC)
AU3	Door Locks - Power	U.S.A., PR&USVI (MAH), Canada (MBC)
C49	Electronic RR Defogger (60% Rear door only)	U.S.A., PR&USVI (MAH), Canada (MBC)
CWM	Technology Package	U.S.A., PR&USVI (MAH), Canada (MBC)
DE5	Mirror - Body Color	U.S.A., PR&USVI (MAH), Canada (MBC)
DR6	Mirror - Outside Heated w/Power	U.S.A., PR&USVI (MAH), Canada (MBC)
EF7	Country United States America (USA)	U.S.A., PR&USVI (MAH), Canada (MBC)
K34	Electronic Cruise Control	U.S.A., PR&USVI (MAH), Canada (MBC)
U1B	Radio-AM/FM CD Player	U.S.A., PR&USVI (MAH), Canada (MBC)
U2K	XM Radio	U.S.A., PR&USVI (MAH), Canada (MBC)
UD7	Rear Park Assist	U.S.A., PR&USVI (MAH), Canada (MBC)
UHV	Radio-AM/FM Nav, DVD-Rom	U.S.A., PR&USVI (MAH), Canada (MBC)
UP9	Bluetooth w/Steering Wheel Controls	U.S.A., PR&USVI (MAH), Canada (MBC)
UPF	Bluetooth w/Steering Wheel Controls	U.S.A., PR&USVI (MAH), Canada (MBC)
USR	USB Receptacle	U.S.A., PR&USVI (MAH), Canada (MBC)
UVC	Rear Vision Camera	U.S.A., PR&USVI (MAH), Canada (MBC)
Z49	Canada	U.S.A., PR&USVI (MAH), Canada (MBC)

Power Distribution Schematics (B+ Bussing (1 of 2))

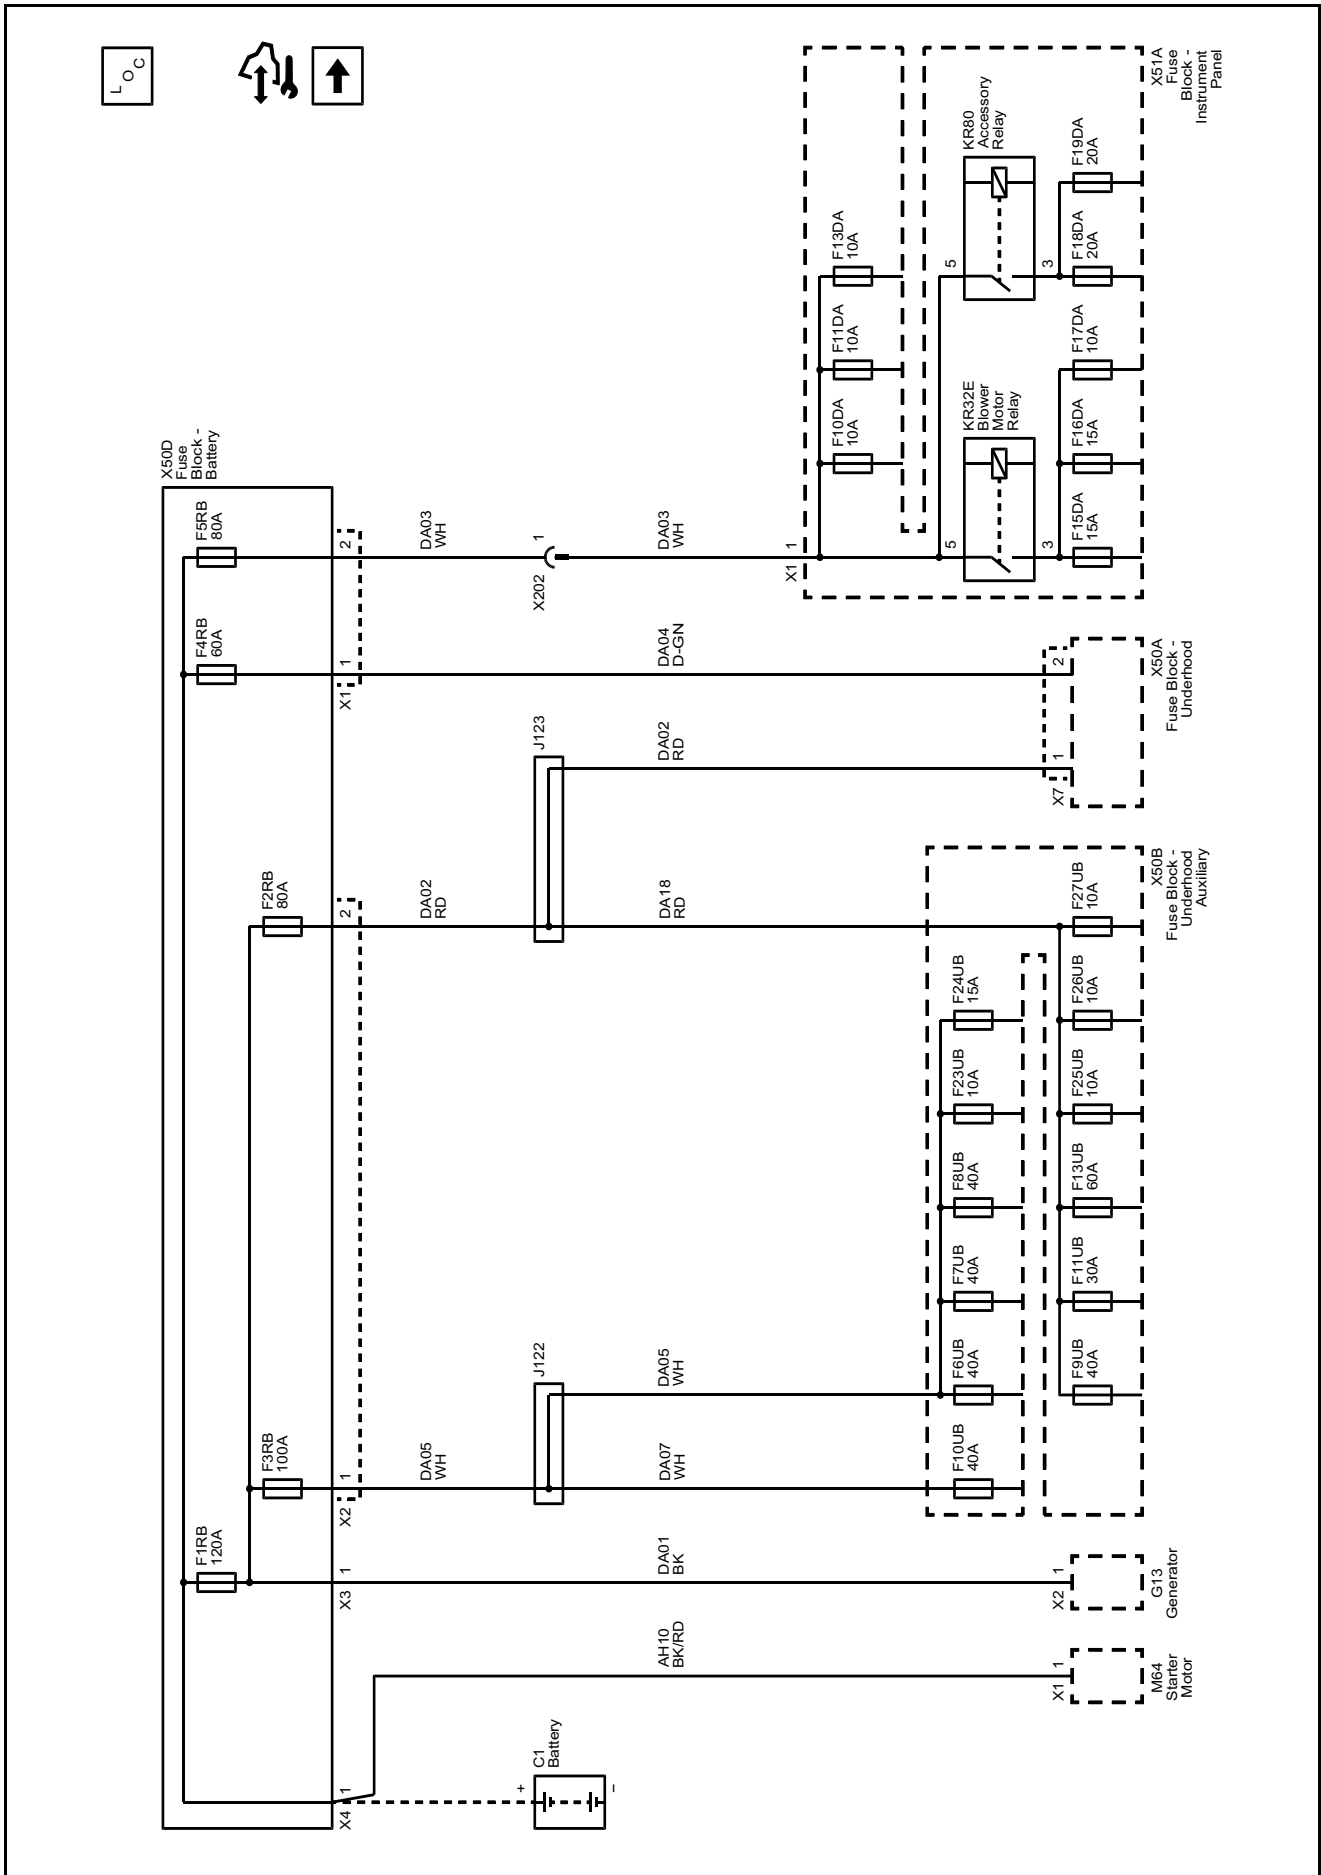


4510017

Power Distribution Schematics (B+ Bussing (2 of 2))

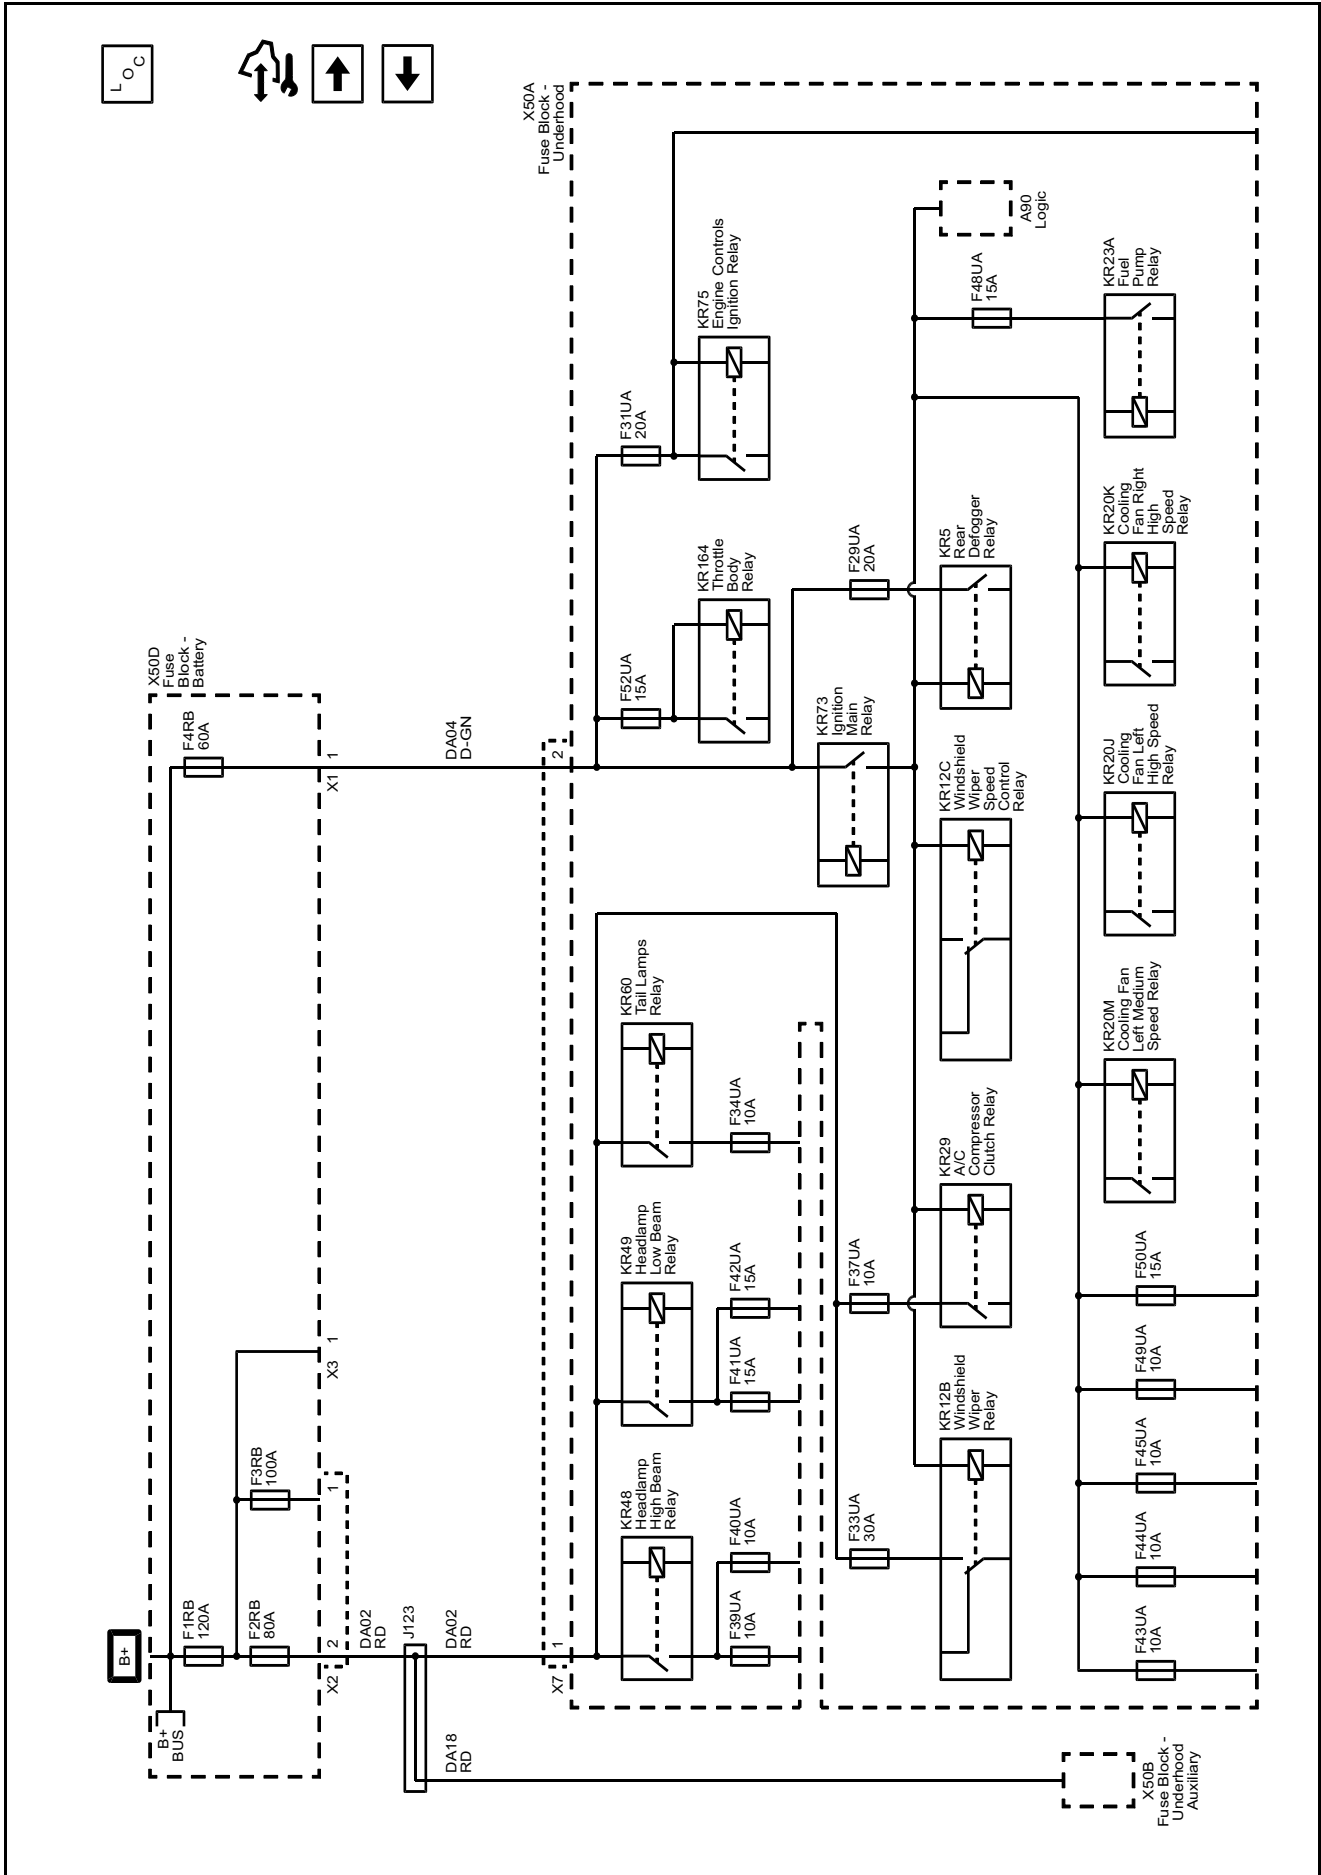


4510019

Power Distribution Schematics (F6UB, F7UB, F8UB, F10UB, F23UB and F24UB Fuses)

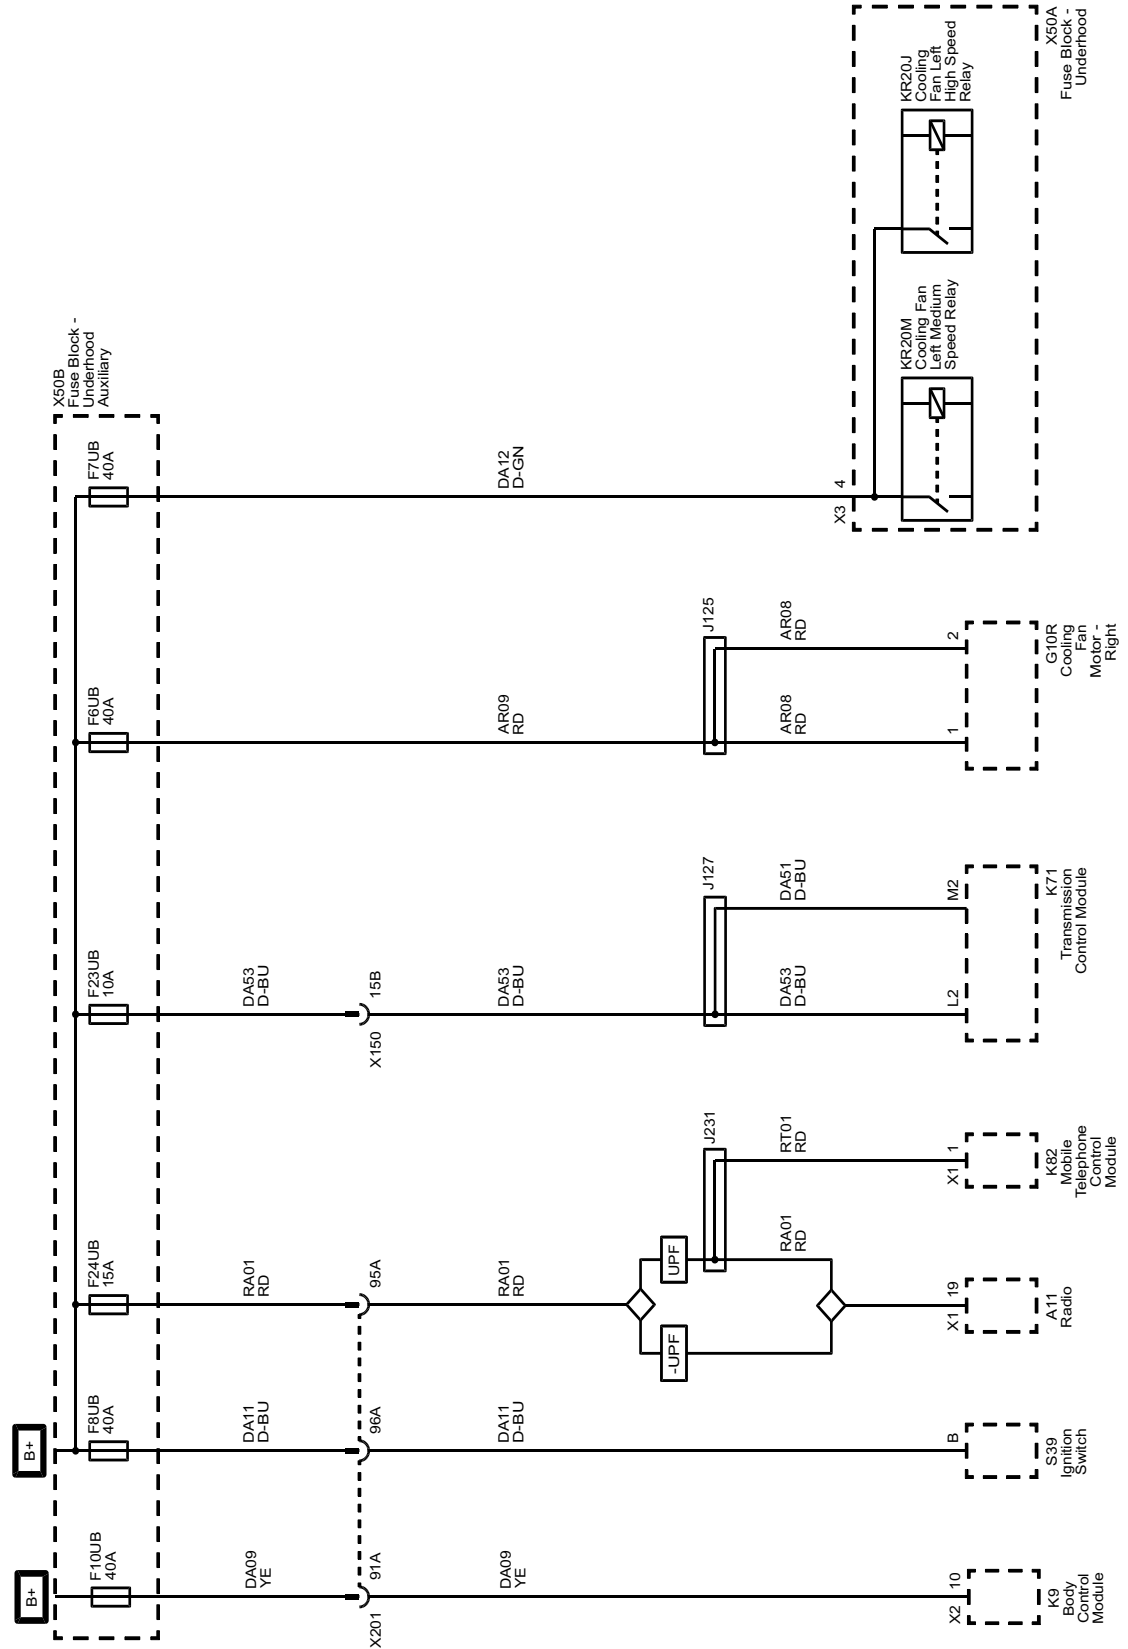


Power Distribution Schematics (F9UB, F11UB, F13UB, F25UB, F26UB, F27UB and F27UB Fuses)

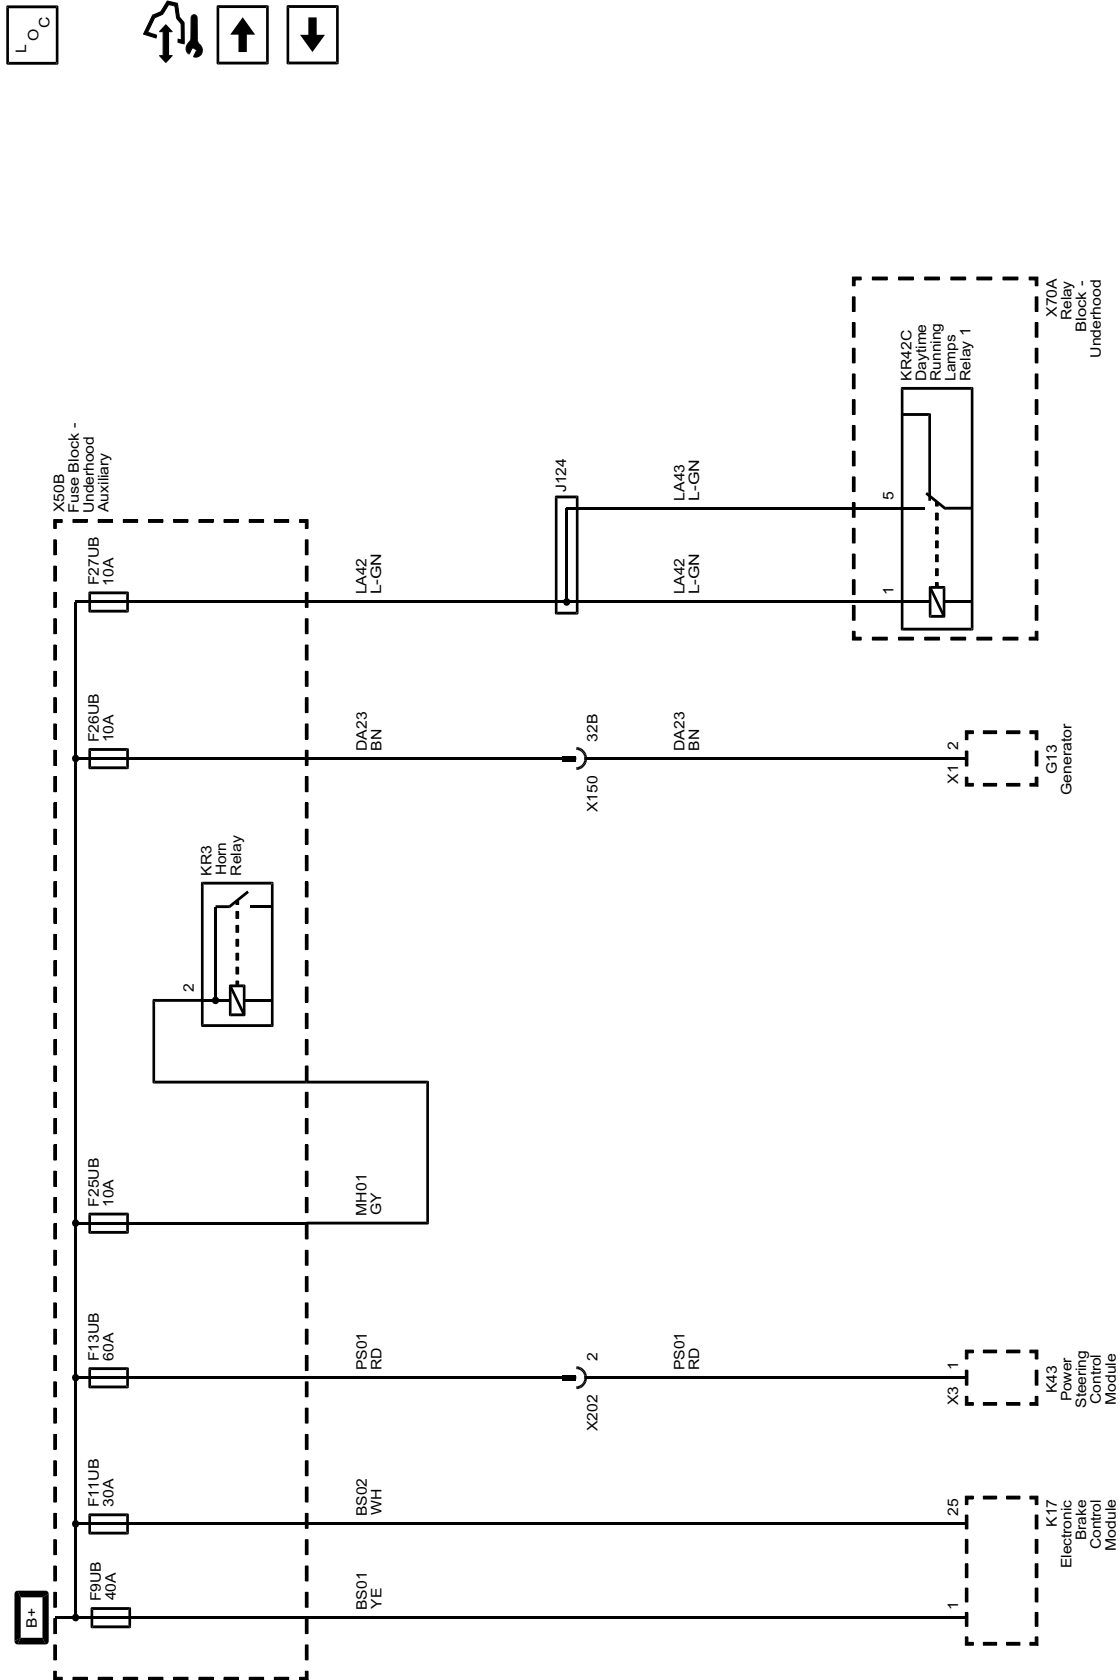


4510022

Power Distribution Schematics (F34UA, F39UA, F40UA, F41UA and F42UA Fuses)

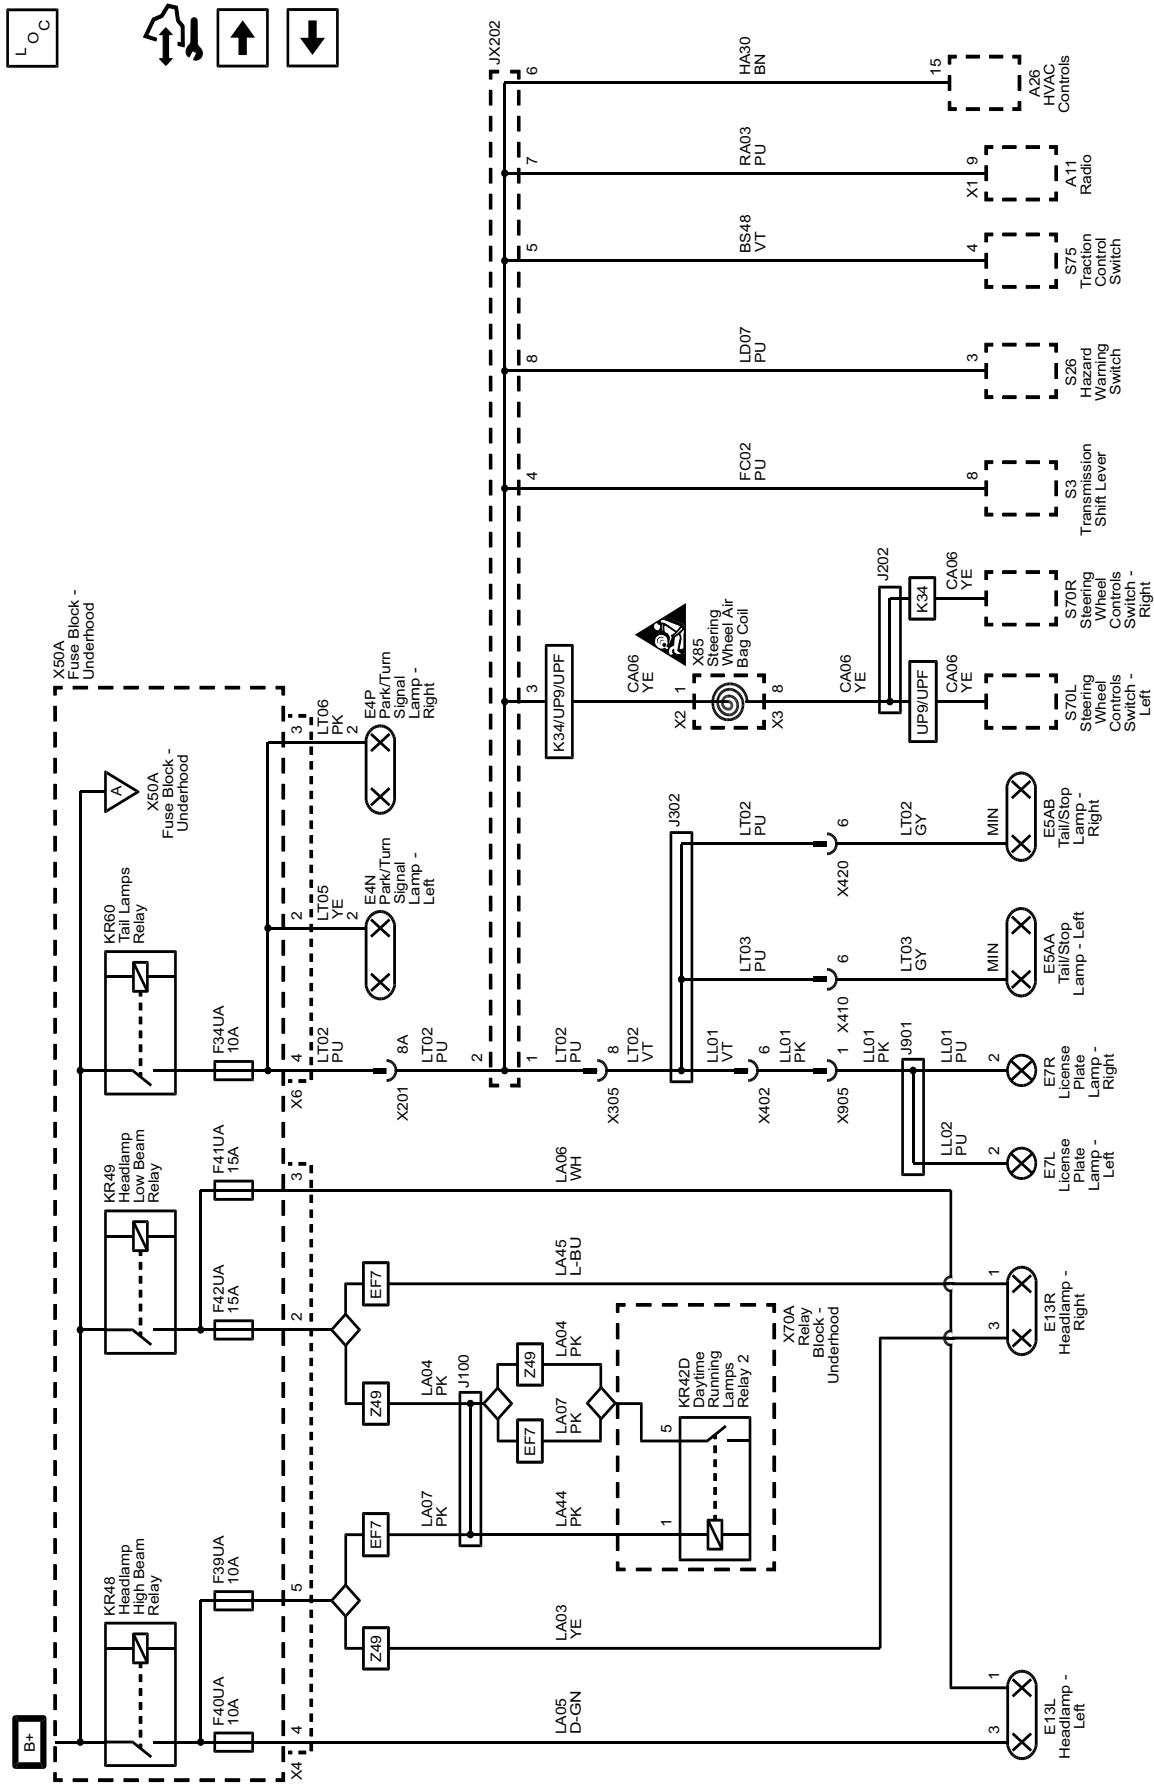


Power Distribution Schematics (F29UA, F31UA, F33UA, F37UA, F48UA, F49UA, F50UA, F52UA and F52UA Fuses)

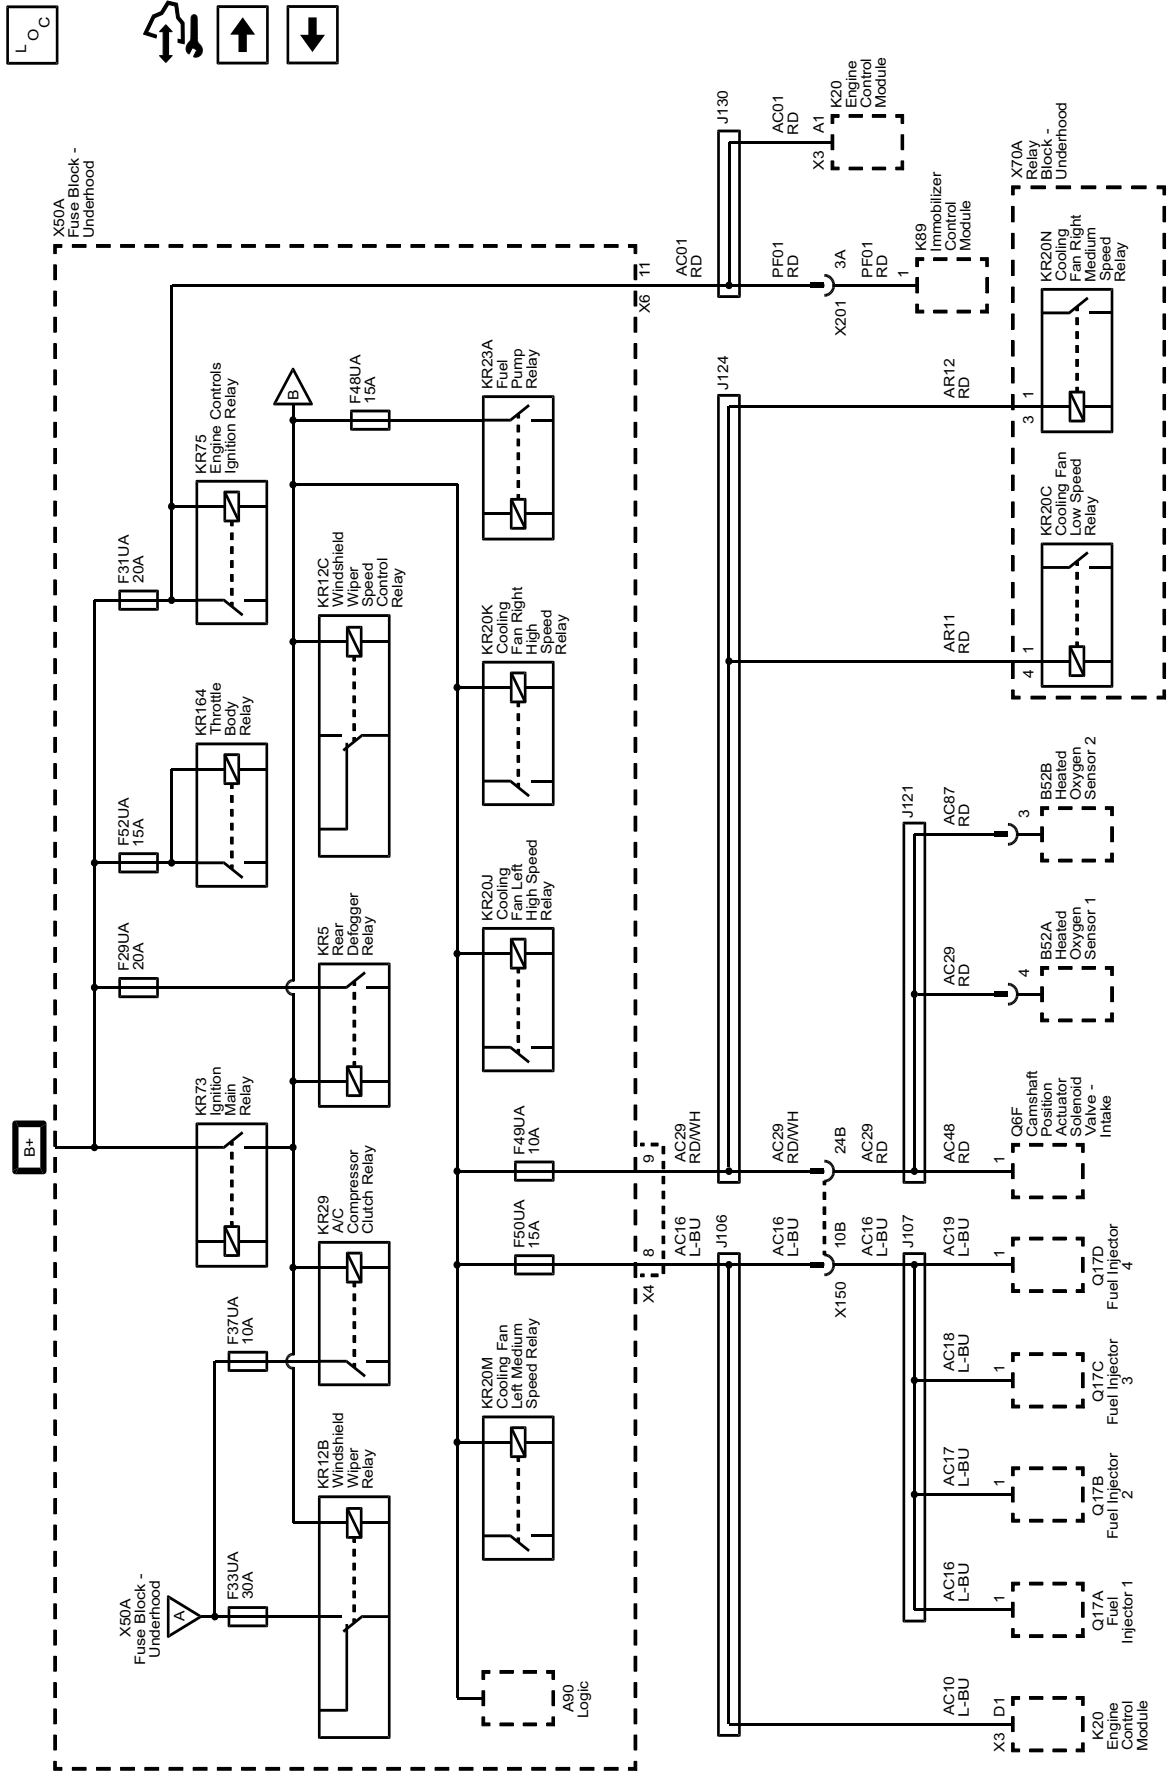


4510026


Power Distribution Schematics (F43UA, F44UA and F45UA Fuses)

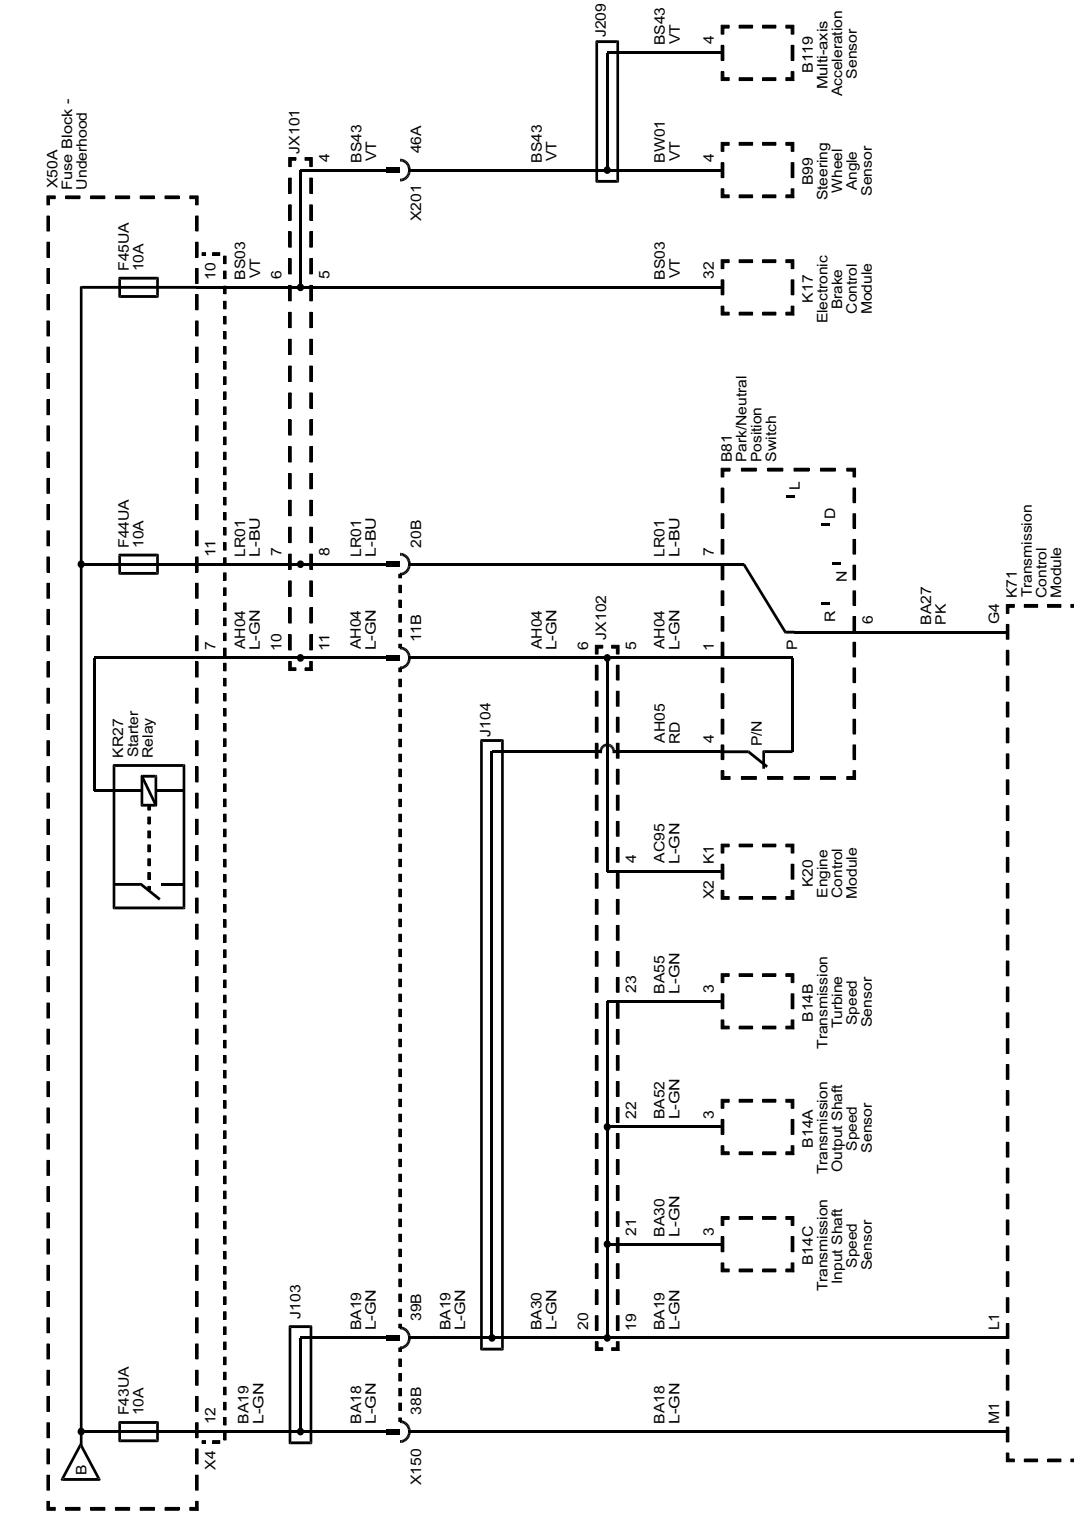


Power Distribution Schematics (F10DA, F11DA, F13DA, F15DA, F16DA, F17DA, F18DA, F19DA, F19DA and F19DA Fuses)

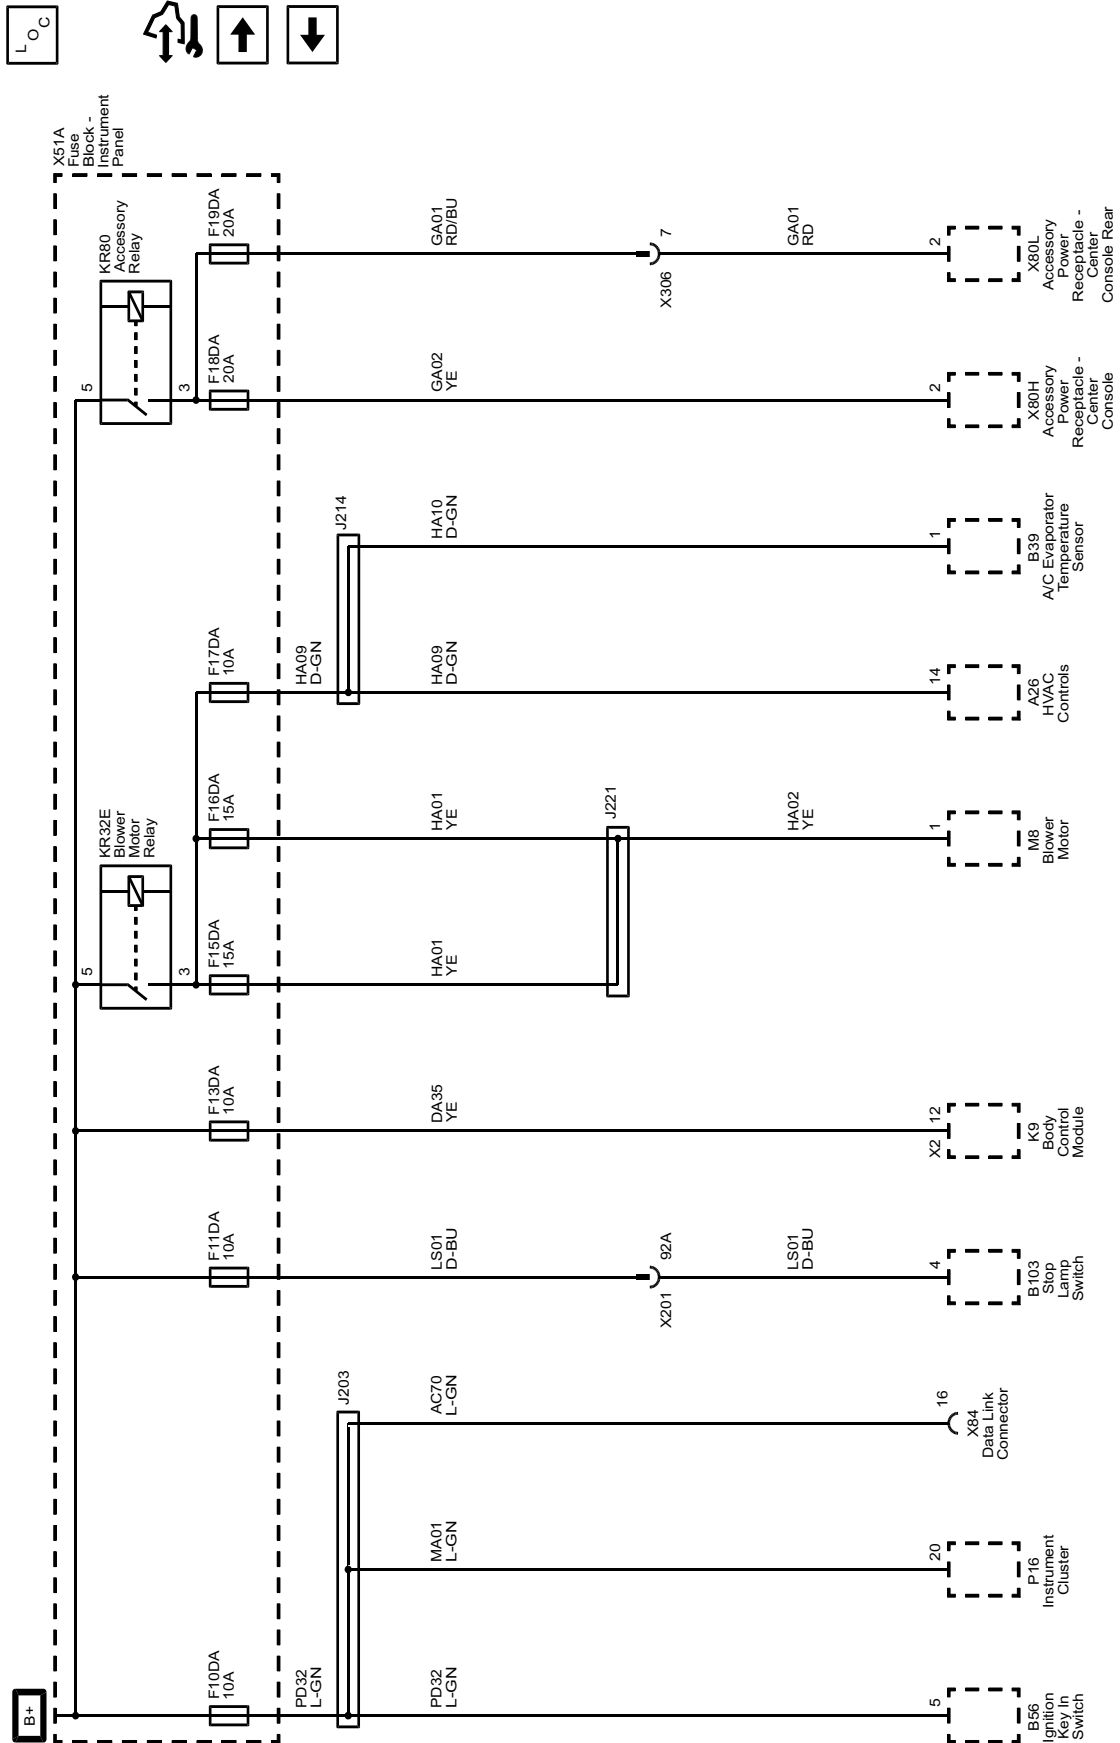

Power Distribution Schematics (F1DA, F2DA and F4DA Fuses)

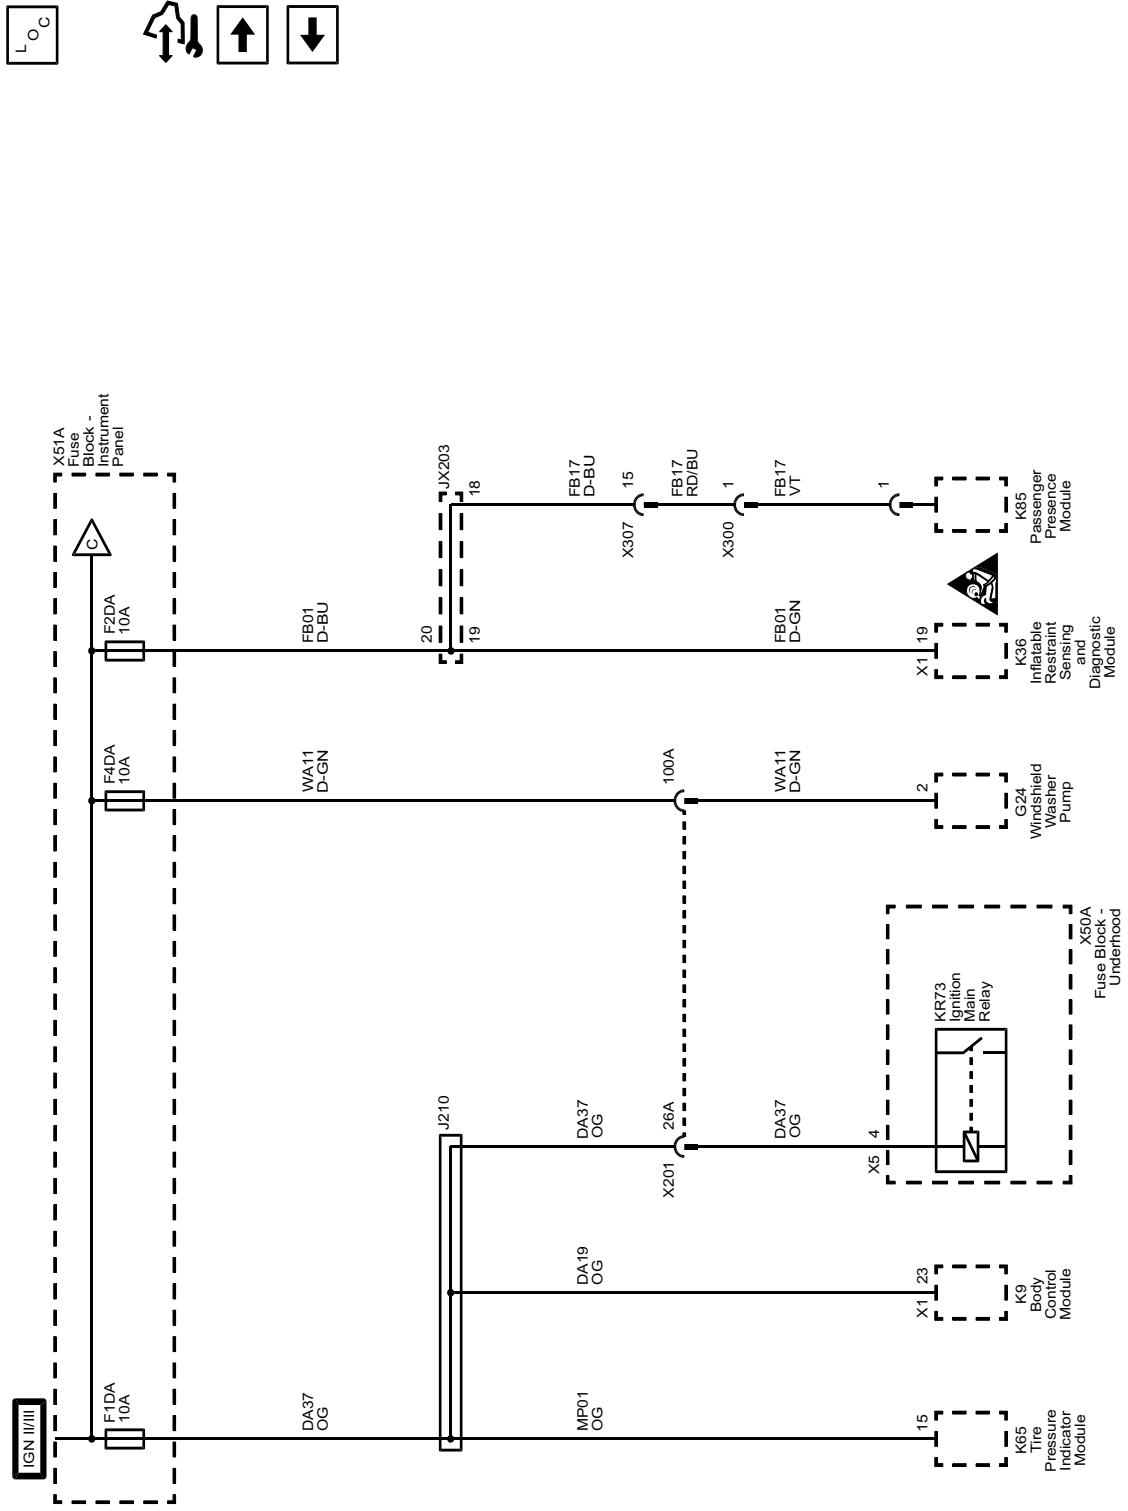


Power Distribution Schematics (F3DA and F5DA Fuses)


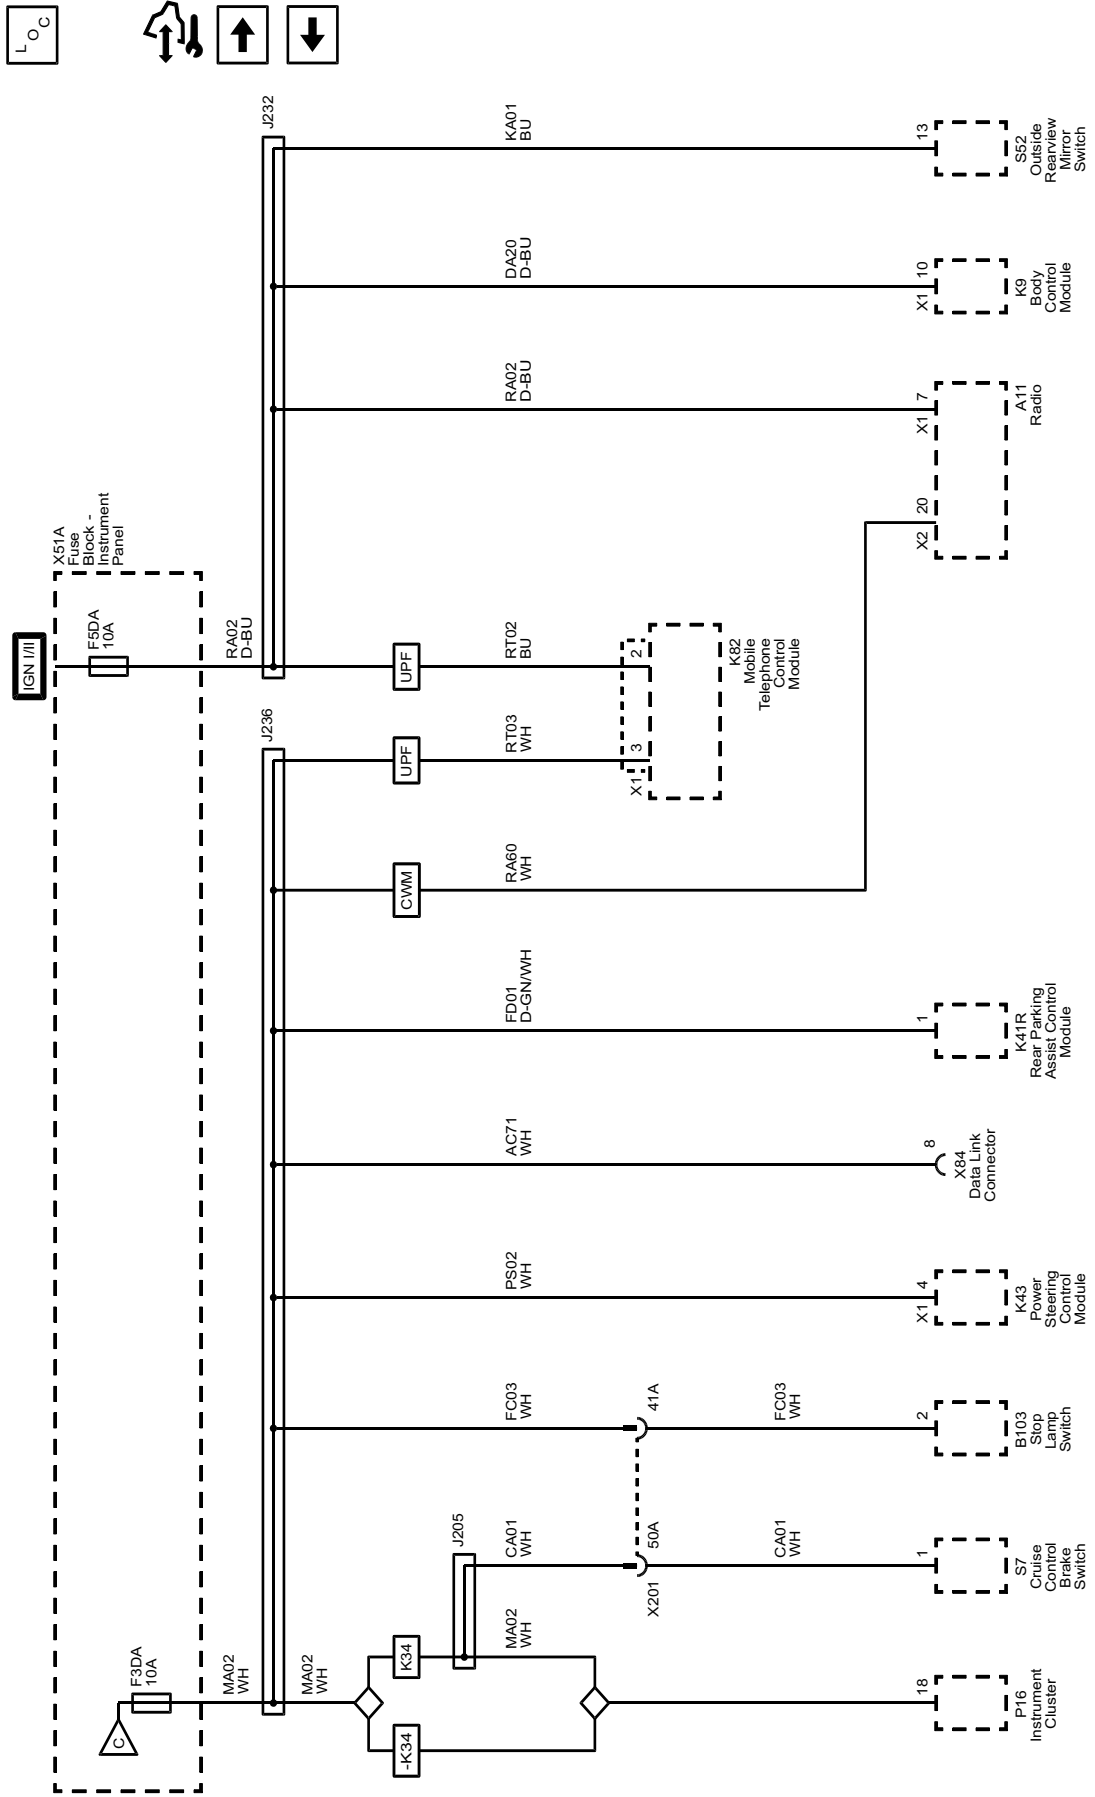


4510032


Power Distribution Schematics (F6DA Fuse)

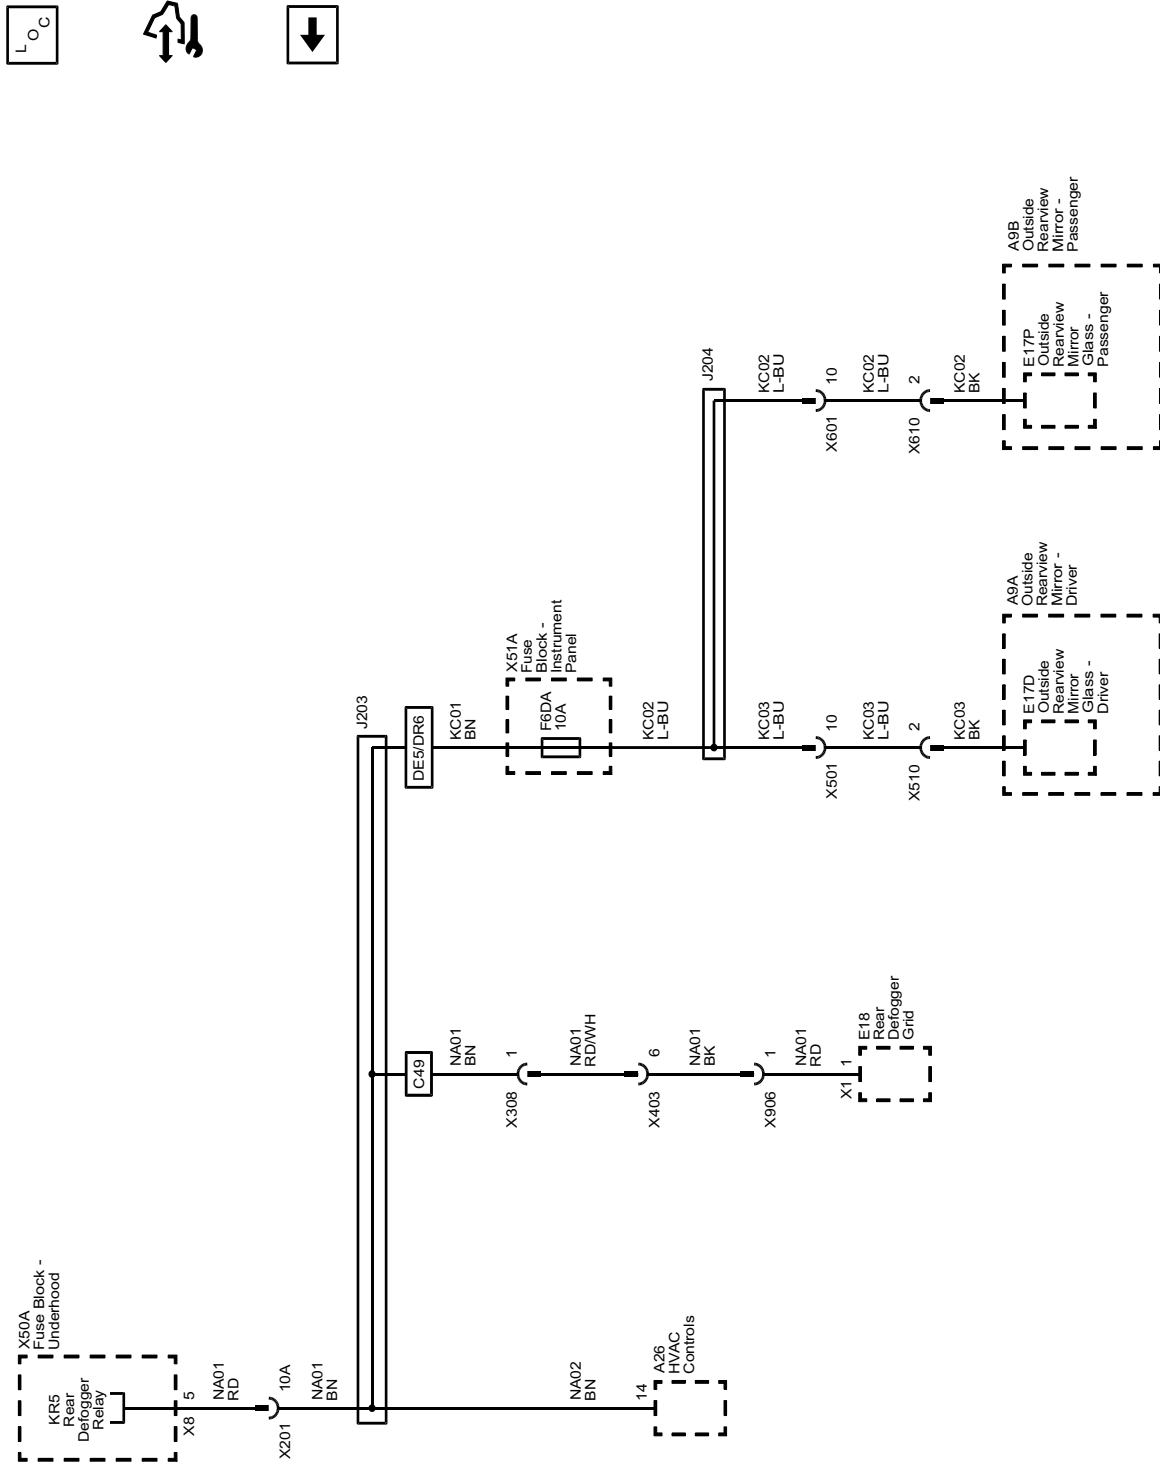

Power Moding Schematics (Ignition Switch)

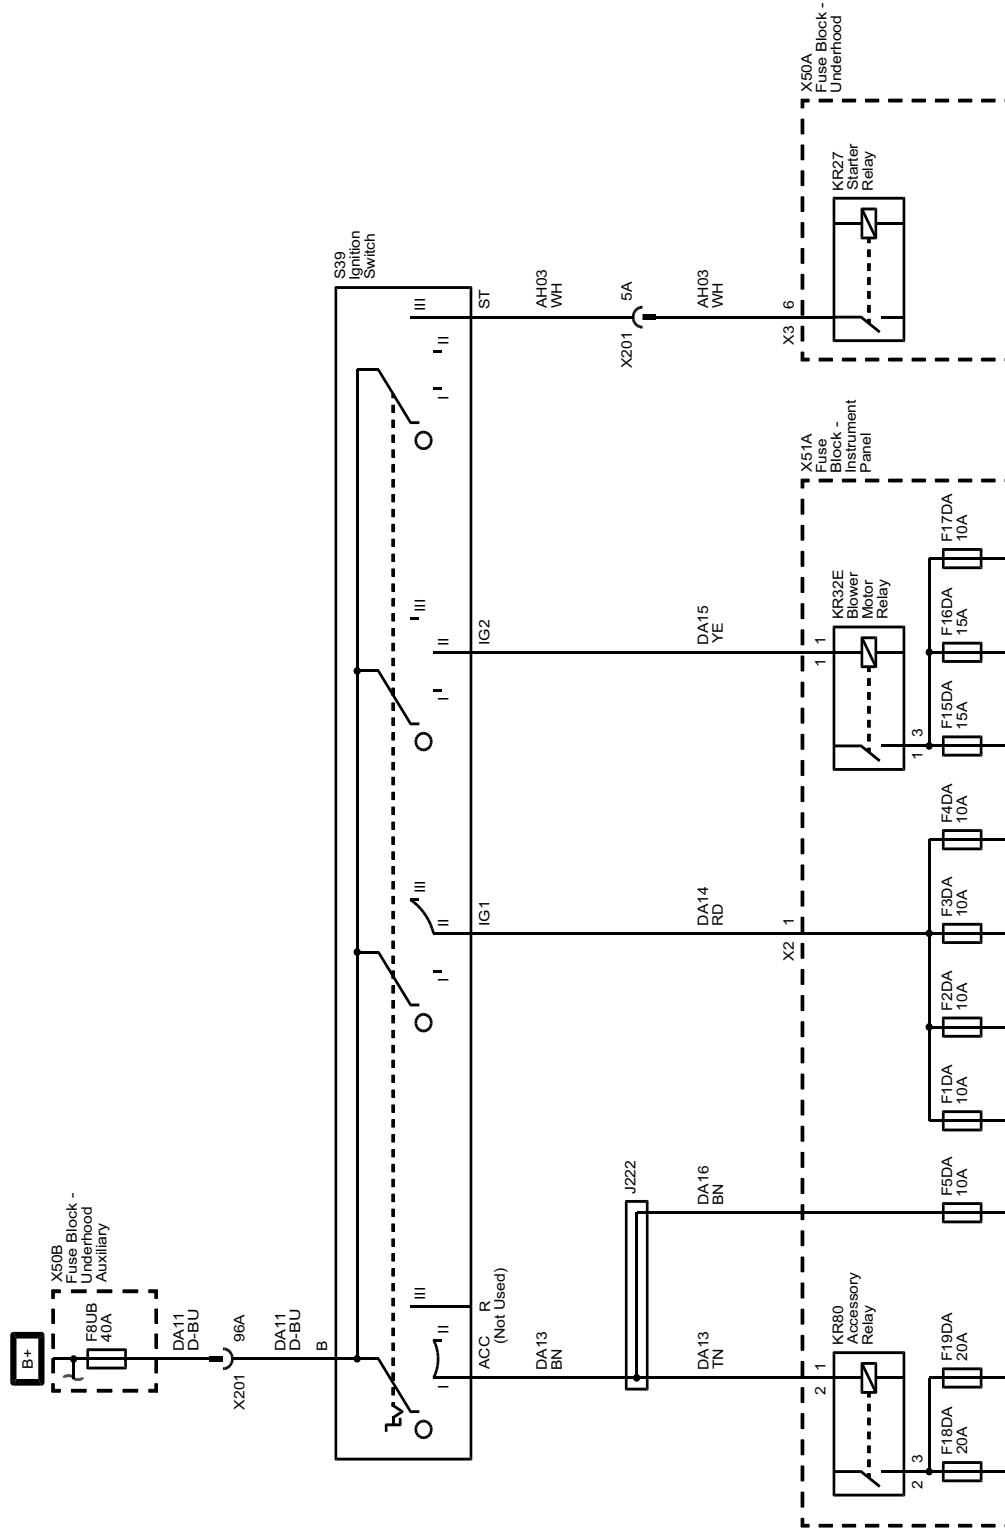


Power Moding Schematics (Ignition Main Relay)

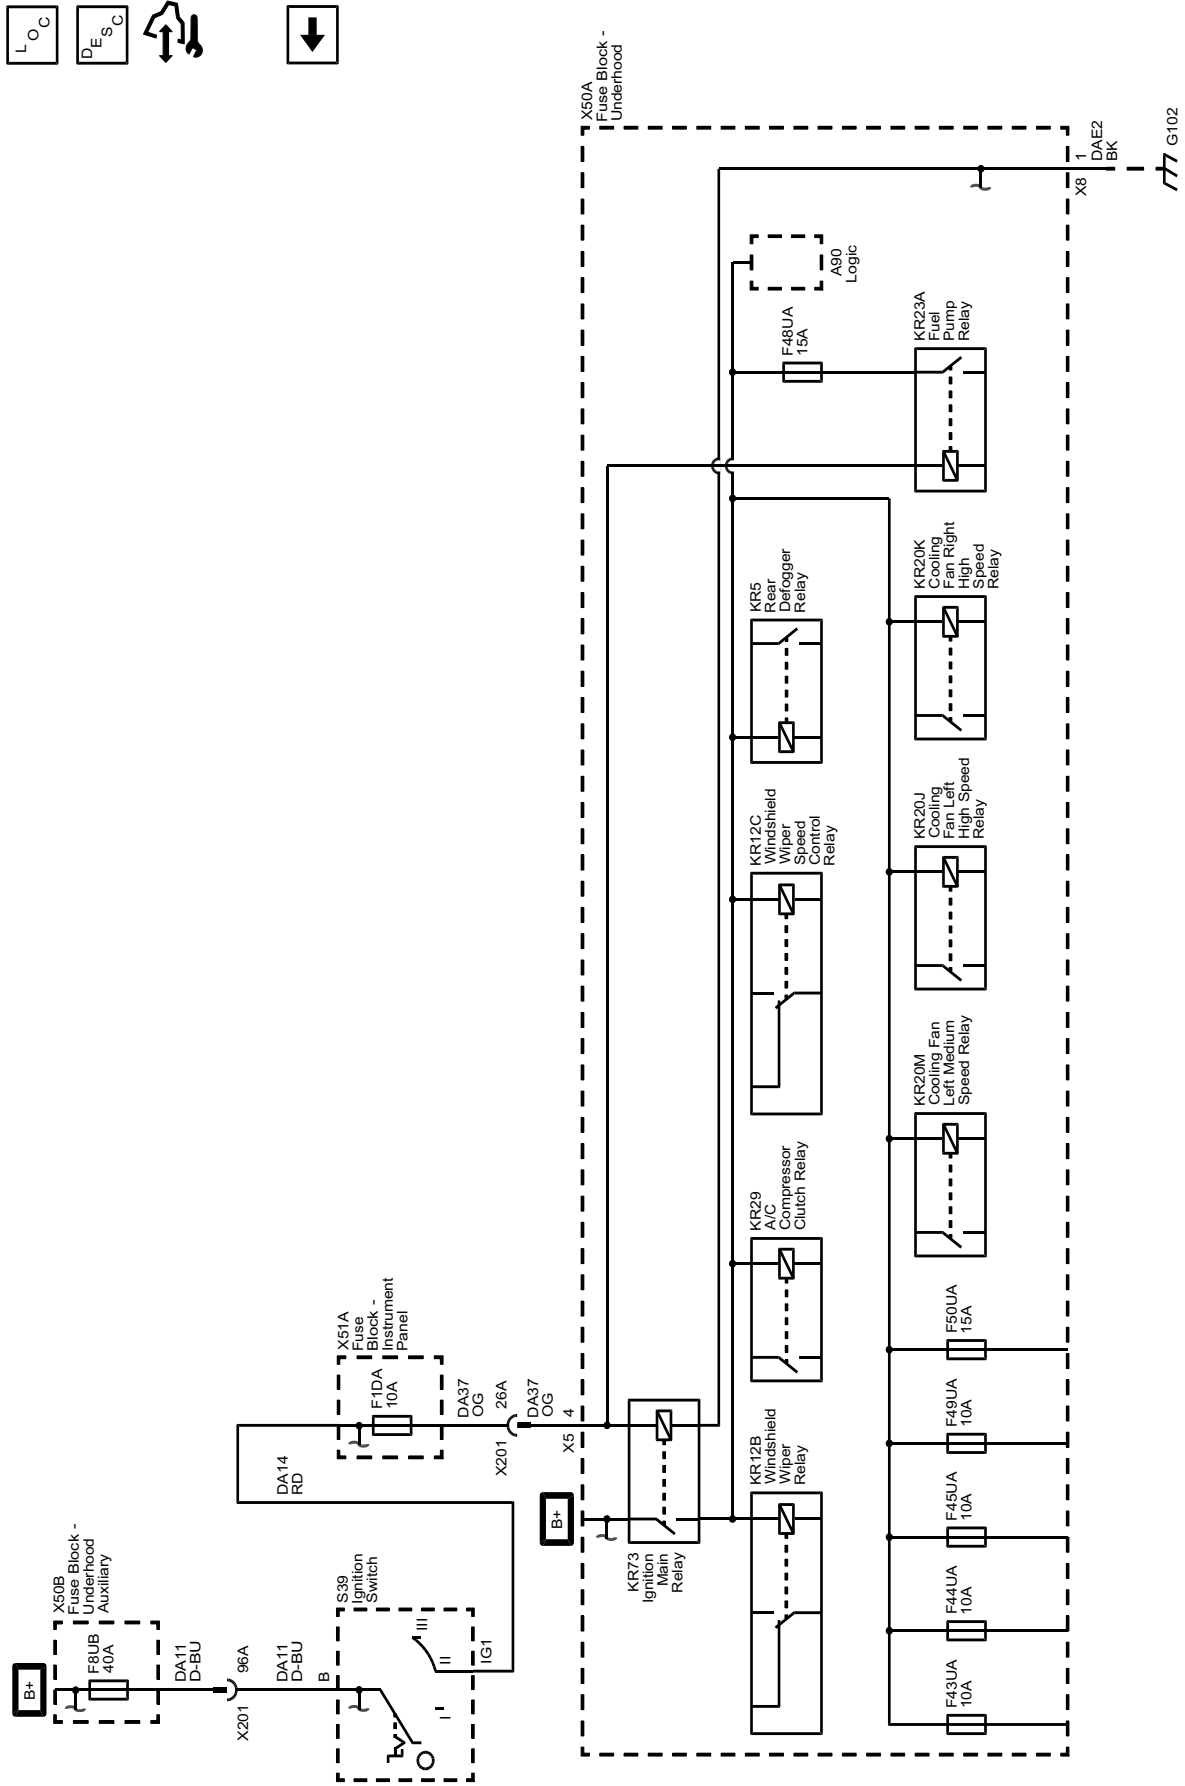


4510036

Ground Distribution Schematics (G100, G101, and G102)

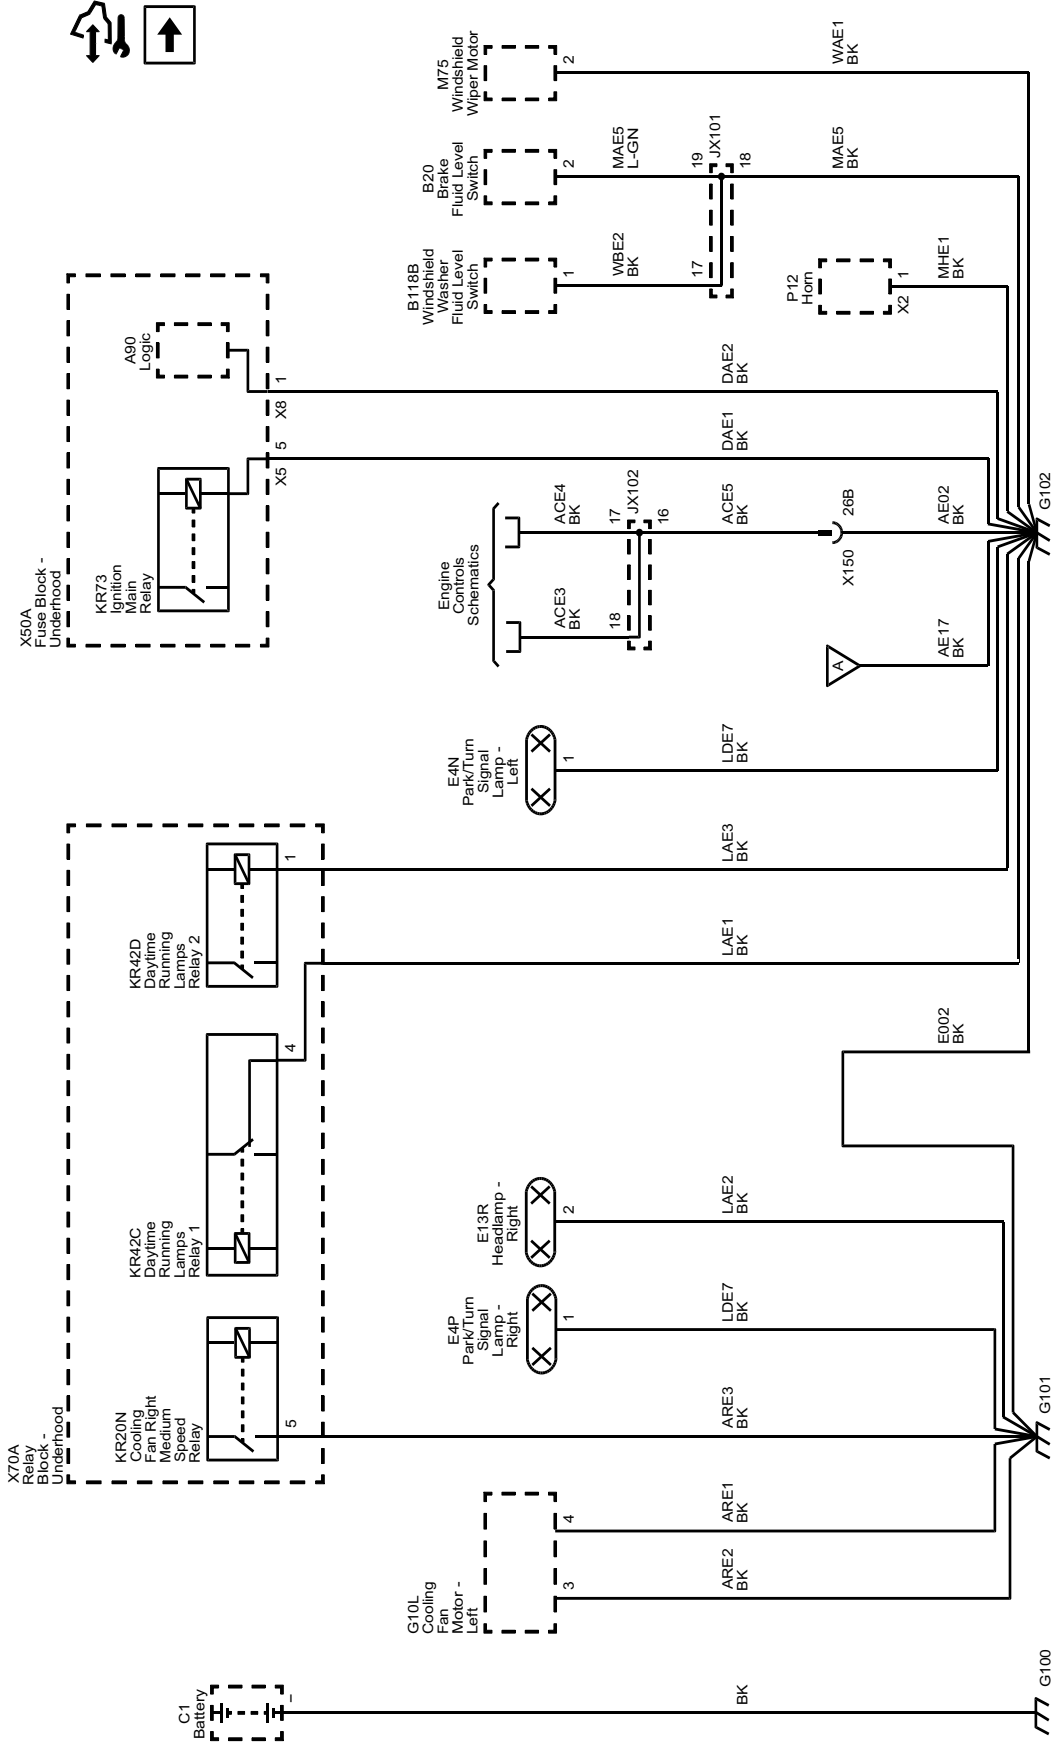


4510038

Ground Distribution Schematics (G103, G104, G105, G106, G107 and G108)

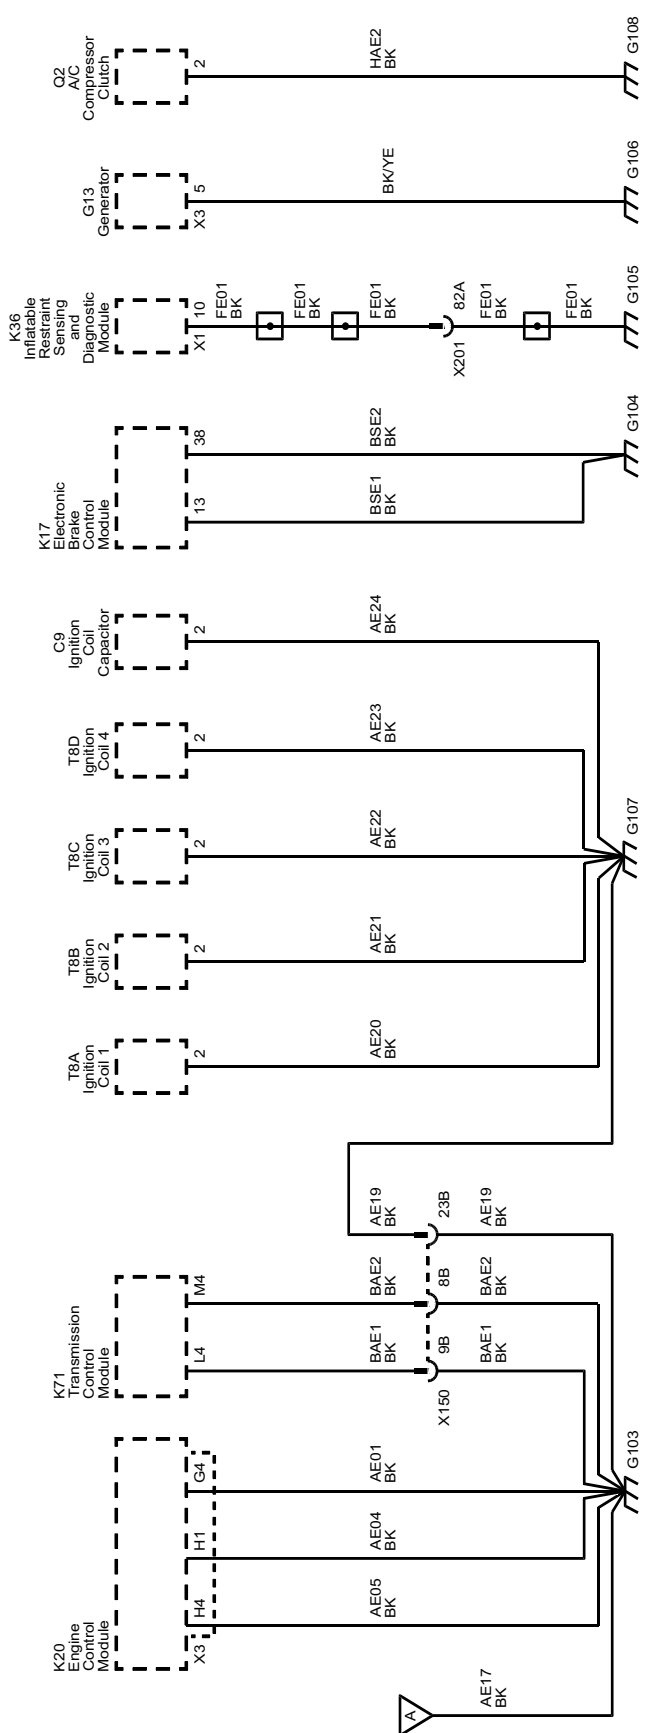


Ground Distribution Schematics (G201, G202, G203, and G204)

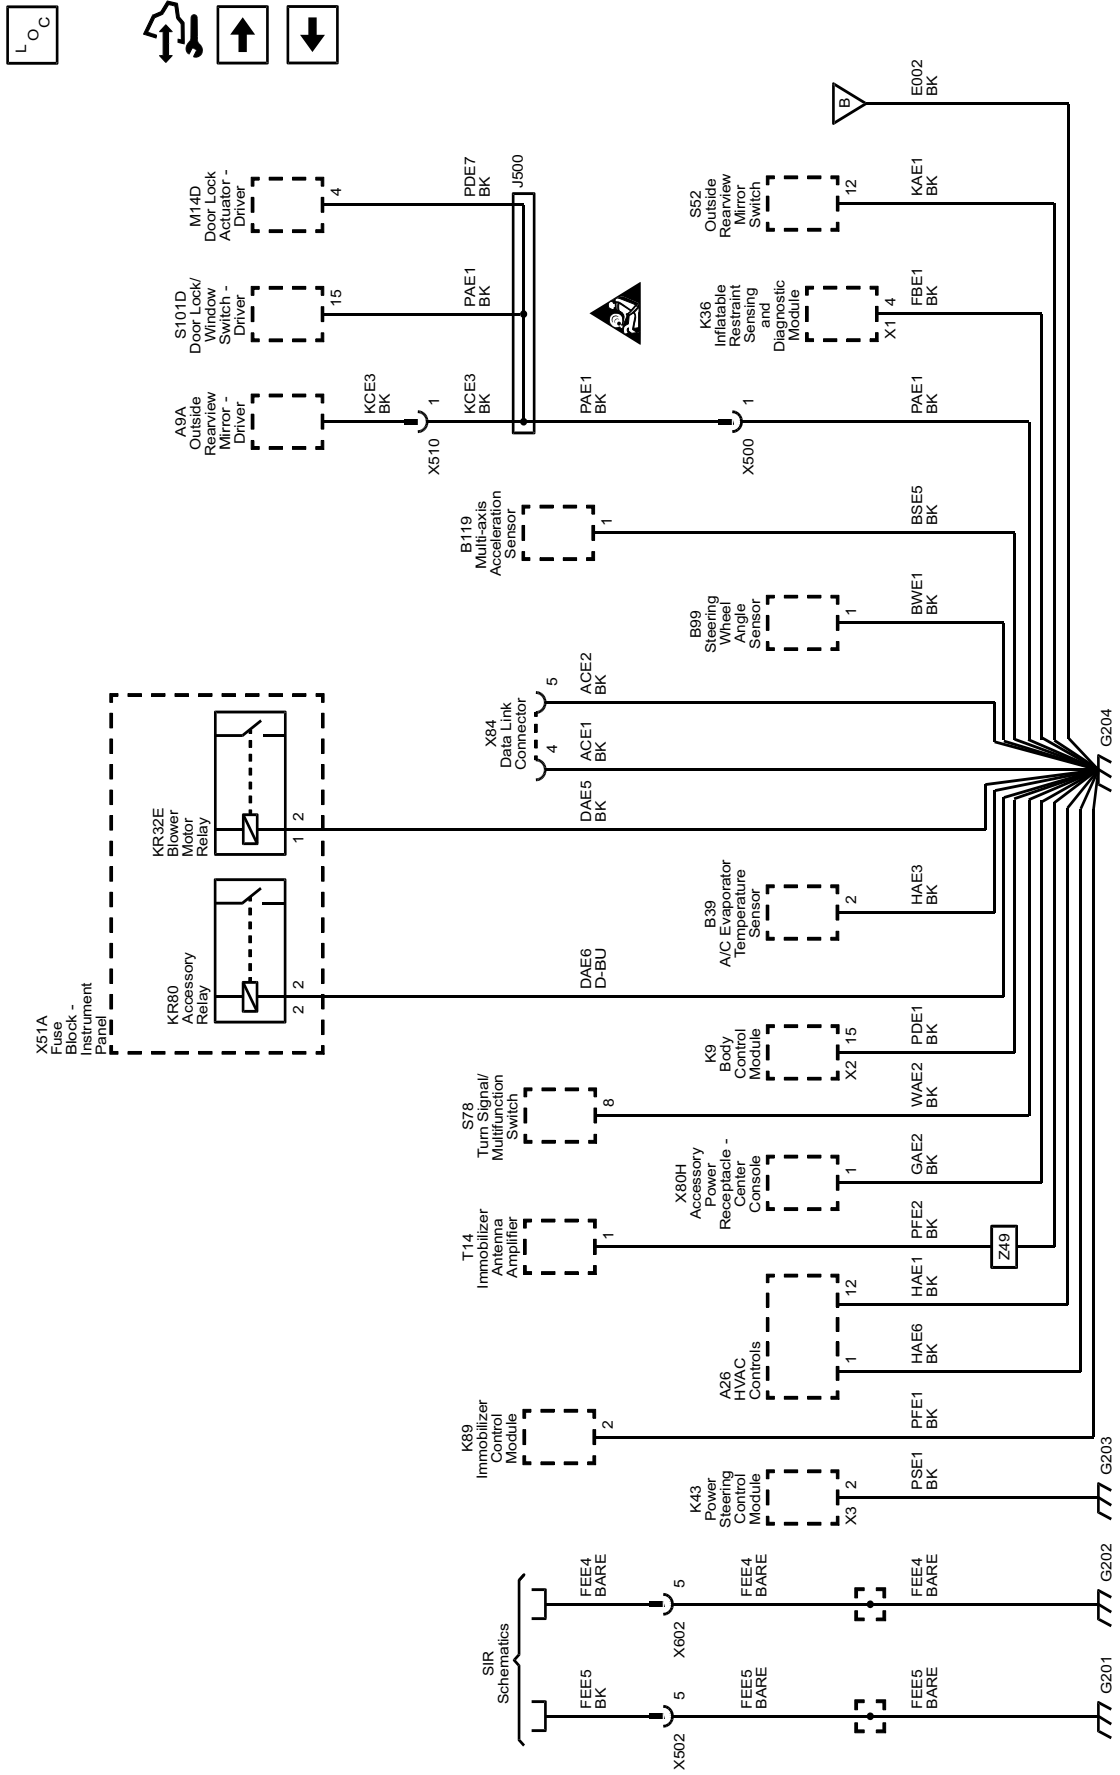


4510041


Ground Distribution Schematics (G205)

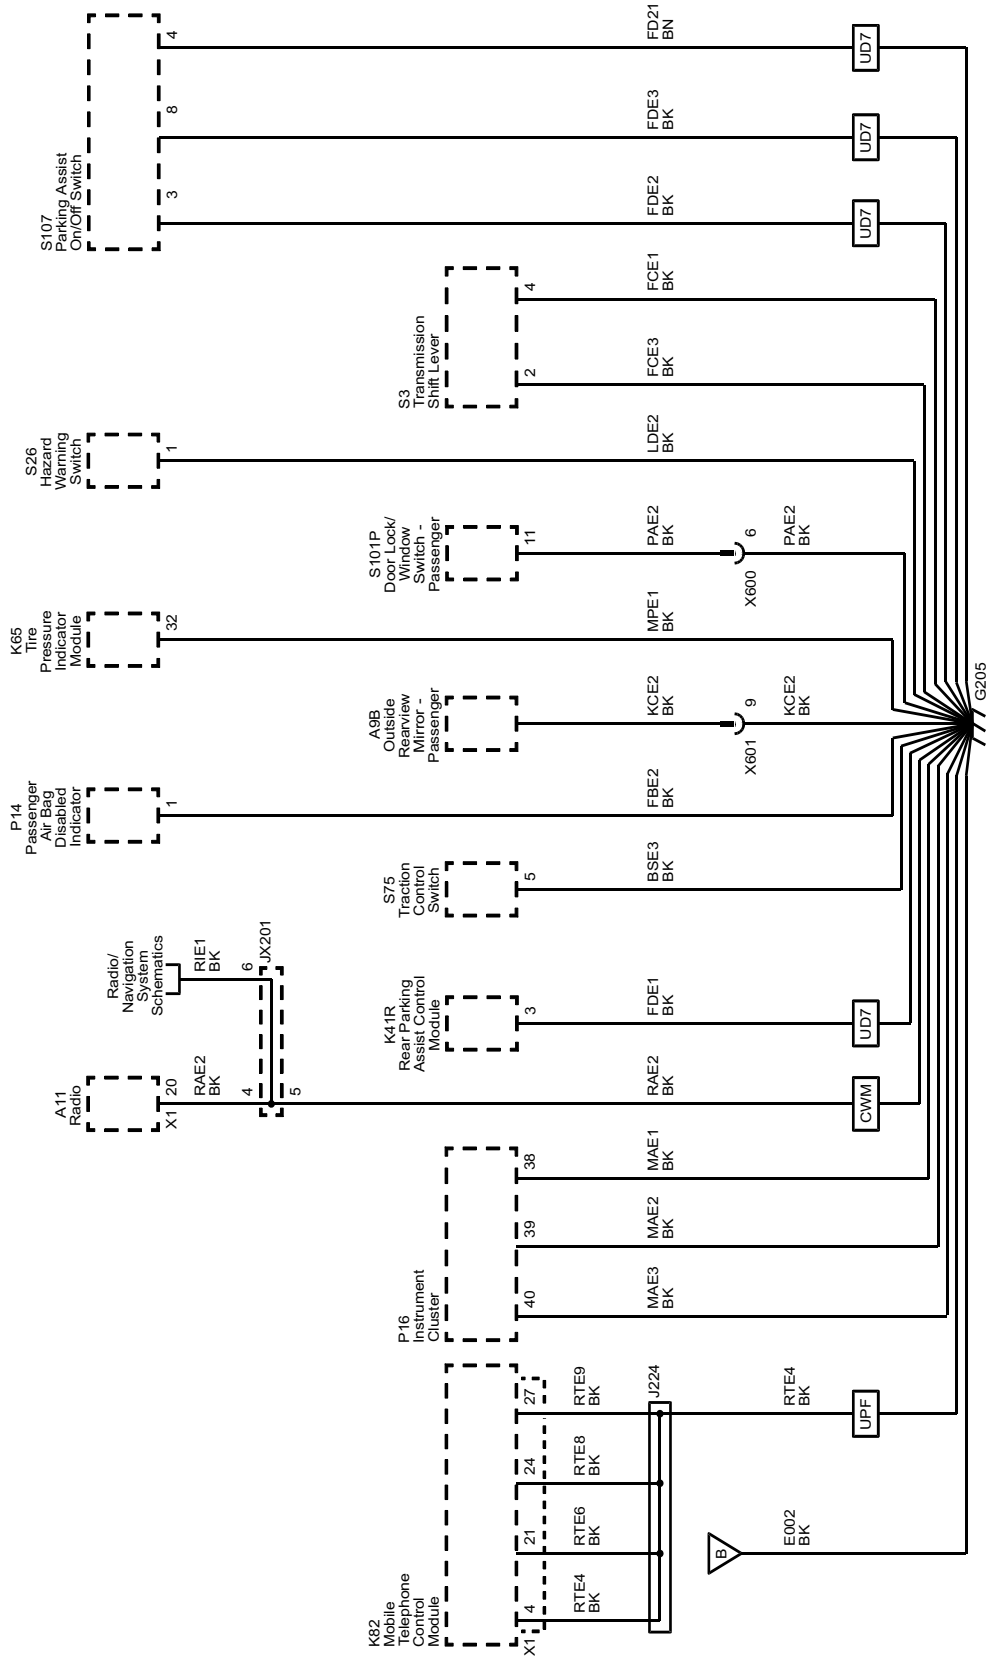

Ground Distribution Schematics (G301, G302, and G303)

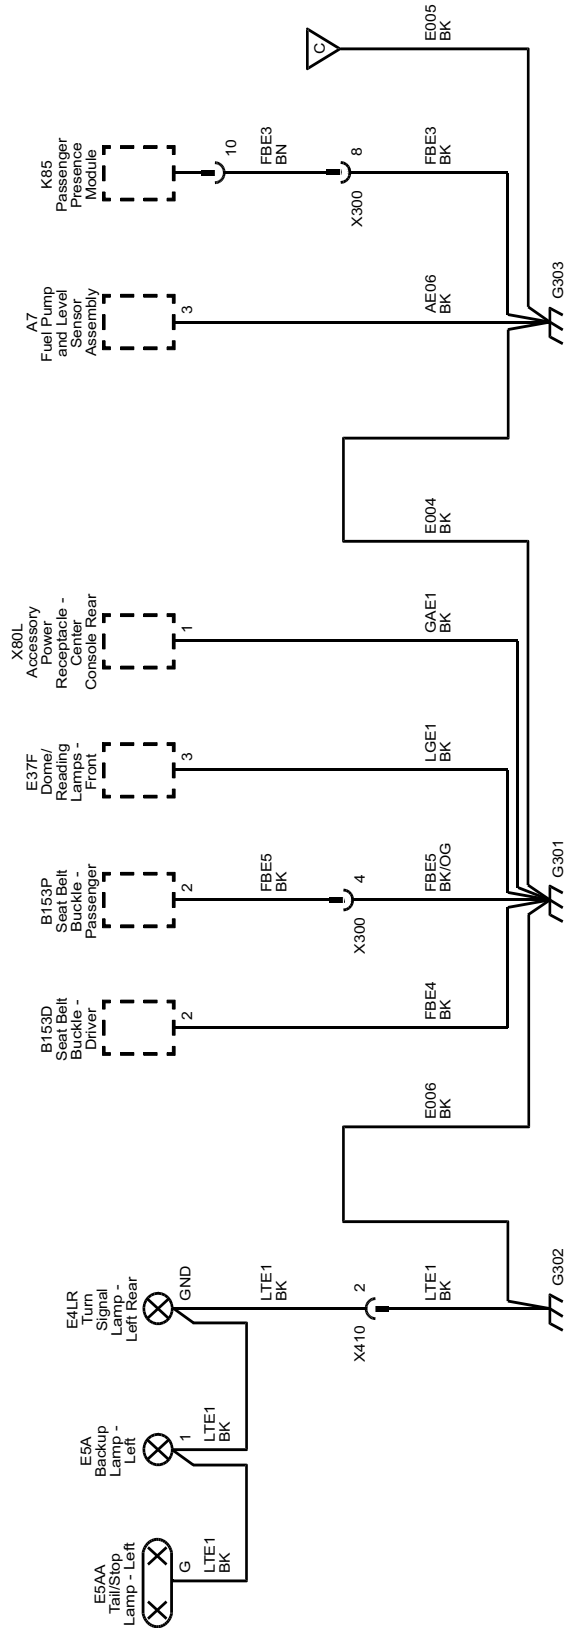

Ground Distribution Schematics (G304, G305, G307, and G901)

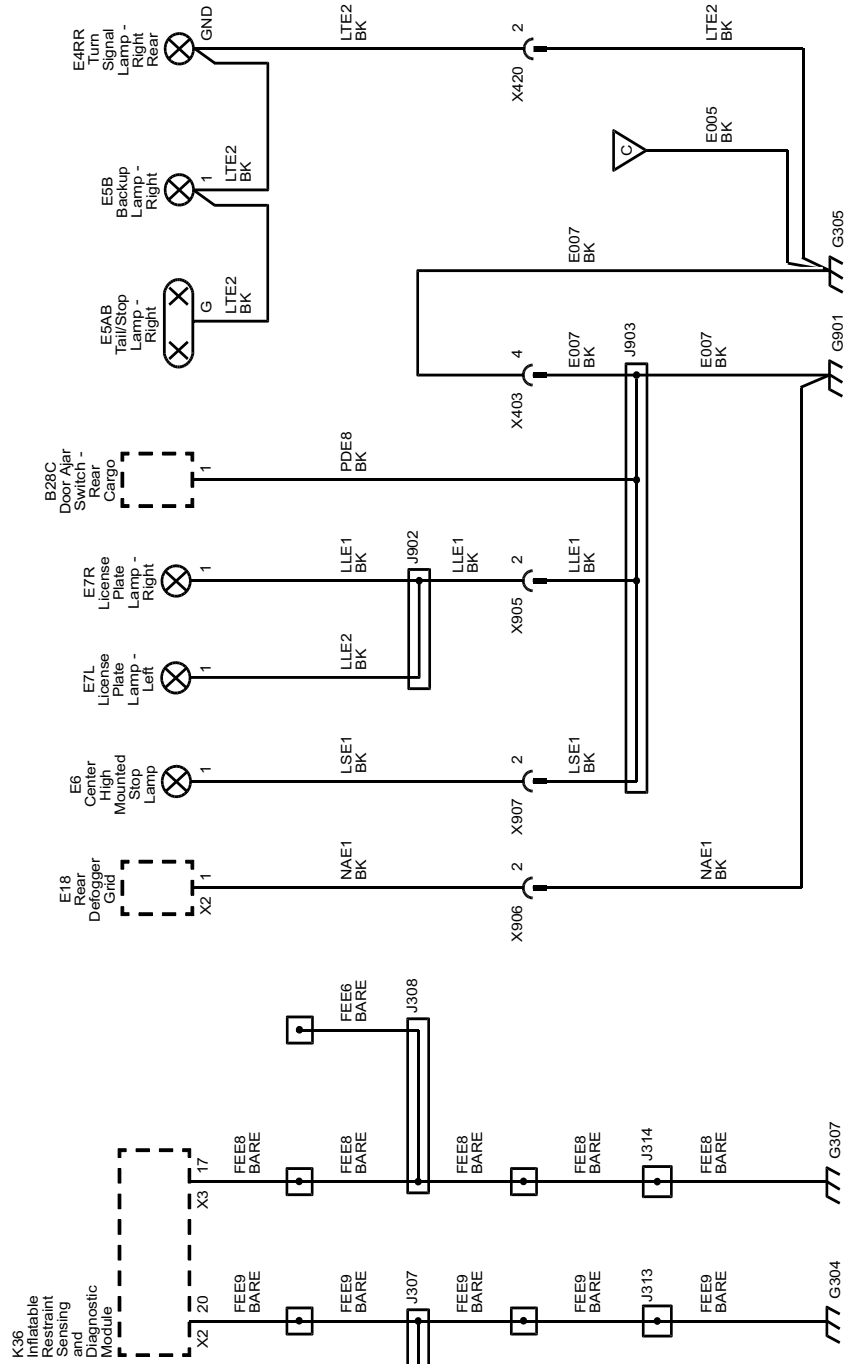

Component Locator

Master Electrical Component List

Code	Name	Option	Location	Locator View	Connector End View
A2LF	Tire Pressure Receiver - Left Front	—	On the vehicle exterior, left front, in the wheel well, rear of the tire, behind the liner	—	A2LF Tire Pressure Receiver - Left Front
A2LR	Tire Pressure Receiver - Left Rear	—	On the vehicle exterior, left front, in the wheel well, rear of the tire, behind the liner	—	A2LR Tire Pressure Receiver - Left Rear
A2RF	Tire Pressure Receiver - Right Front	—	On the vehicle exterior, left front, in the wheel well, rear of the tire, behind the liner	—	A2RF Tire Pressure Receiver - Right Front
A2RR	Tire Pressure Receiver - Right Rear	—	On the vehicle exterior, left front, in the wheel well, rear of the tire, behind the liner	—	A2RR Tire Pressure Receiver - Right Rear
A7	Fuel Pump and Level Sensor Assembly	—	On the vehicle underbody, inside the fuel tank	Fuel Tank Components on page 6-95	A7 Fuel Pump and Level Sensor Assembly
A9A	Outside Rearview Mirror - Driver	—	On the vehicle exterior, on the driver door, forward of the window opening	Driver Door Components on page 6-87	—
A9B	Outside Rearview Mirror - Passenger	—	On the vehicle exterior, on the passenger door, forward of the window opening	<ul style="list-style-type: none"> Passenger Door Components on page 6-88 Front of Vehicle Components on page 6-71 	—
A11	Radio	—	In the passenger compartment, in the middle of the instrument panel	Instrument Panel on page 6-78	<ul style="list-style-type: none"> A11 Radio X1 A11 Radio X2 (U1B with UPF) A11 Radio X2 (CWM) A11 Radio X3 A11 Radio X4 (CWM) A11 Radio X5 (CWM) A11 Radio X6 (CWM)
A23D	Door Latch Assembly - Driver	—	In the passenger compartment, inside the driver door, at the rear middle of the door	Driver Door Components on page 6-87	A23D Door Latch Assembly - Driver
A23P	Door Latch Assembly - Passenger	—	In the passenger compartment, inside the passenger door, at the rear middle of the door	—	A23P Door Latch Assembly - Passenger
A26	HVAC Controls	—	In the passenger compartment, middle of the instrument panel	Instrument Panel on page 6-78	A26 HVAC Controls
B1	A/C Refrigerant Pressure Sensor	—	On the vehicle exterior, at the front of the vehicle, on the right side of the A/C condenser, behind the fascia	Engine Compartment Components on page 6-73	B1 A/C Refrigerant Pressure Sensor
B5LF	Wheel Speed Sensor - Left Front	—	On the vehicle underbody, near the left front wheel, on the hub	Front Wheel Well Components on page 6-93	B5LF Wheel Speed Sensor - Left Front

Master Electrical Component List (cont'd)

Code	Name	Option	Location	Locator View	Connector End View
B5LR	Wheel Speed Sensor - Left Rear	—	On the vehicle underbody, near the left rear wheel, on the hub	<i>Rear Wheel Well Components on page 6-94</i>	<i>B5LR Wheel Speed Sensor - Left Rear</i>
B5RF	Wheel Speed Sensor - Right Front	—	On the vehicle underbody, near the right front wheel, on the hub	—	<i>B5RF Wheel Speed Sensor - Right Front</i>
B5RR	Wheel Speed Sensor - Right Rear	—	On the vehicle underbody, near the right rear wheel, on the hub	<i>Rear Wheel Well Components on page 6-94</i>	<i>B5RR Wheel Speed Sensor - Right Rear</i>
B9	Ambient Air Temperature Sensor	—	On the vehicle exterior, at the front of the vehicle, on the left side of the lower grille	—	<i>B9 Ambient Air Temperature Sensor</i>
B13	Transmission Fluid Temperature Sensor	—	In the engine compartment, inside the automatic transmission, part of the control solenoid valve assembly	—	—
B14A	Transmission Output Shaft Speed Sensor	—	In the engine compartment, rear, on the back side of the automatic transmission	<i>Automatic Transmission Electronic Components on page 6-77</i>	<i>B14A Transmission Output Speed Sensor</i>
B14B	Transmission Turbine Speed Sensor	—	In the engine compartment, on the side cover of the automatic transmission	—	<i>B14B Transmission Turbine Speed Sensor</i>
B14C	Transmission Input Shaft Speed Sensor	—	In the engine compartment, front, on the automatic transmission	<i>Automatic Transmission Electronic Components on page 6-77</i>	<i>B14C Transmission Input Speed Sensor</i>
B18	Battery Current Sensor	—	In the engine compartment, left rear, on the negative battery cable end	—	<i>B18 Battery Current Sensor</i>
B20	Brake Fluid Level Switch	—	In the engine compartment, left rear, on the brake fluid reservoir	—	<i>B20 Brake Fluid Level Switch</i>
B23	Camshaft Position Sensor	—	In the engine compartment, on the engine, on the top left side of the engine, on the camshaft cover	<ul style="list-style-type: none"> • <i>Top of the Engine Components on page 6-74</i> • <i>Left Front of the Engine Components on page 6-76</i> 	<i>B23 Camshaft Position Sensor</i>
B24	Cellular Phone Microphone	CWM or UPF	In the passenger compartment, in the headliner, near the driver's sunvisor	—	<i>B24 Cellular Phone Microphone (UPF)</i>
B26	Crankshaft Position Sensor	—	In the engine compartment, front of the engine block, near the starter motor	<i>Left Front of the Engine Components on page 6-76</i>	<i>B26 Crankshaft Position Sensor</i>
B28C	Door Ajar Switch - Rear Cargo	—	In the passenger compartment, inside the rear right cargo door	<i>Door Ajar Switches on page 6-86</i>	<i>B28C Door Ajar Switch - Rear Cargo</i>
B28D	Door Ajar Switch - Driver	—	In the passenger compartment, in the left B-pillar, below the door striker	<i>Door Ajar Switches on page 6-86</i>	<i>B28D Door Ajar Switch - Driver</i>

Master Electrical Component List (cont'd)

Code	Name	Option	Location	Locator View	Connector End View
B28E	Door Ajar Switch - Left Sliding	—	In the passenger compartment, in the left C-pillar, below the door striker	<ul style="list-style-type: none"> • <i>Left Sliding Door Components on page 6-89</i> • <i>Right Sliding Door Components on page 6-90</i> • <i>Door Ajar Switches on page 6-86</i> 	<i>B28E Door Ajar Switch - Left Sliding</i>
B28F	Door Ajar Switch - Right Sliding	—	In the passenger compartment, in the right C-pillar, below the door striker	<i>Door Ajar Switches on page 6-86</i>	<i>B28F Door Ajar Switch - Right Sliding</i>
B28P	Door Ajar Switch - Passenger	—	In the passenger compartment, in the right B-pillar, below the door striker	<ul style="list-style-type: none"> • <i>Door Ajar Switches on page 6-86</i> • <i>Passenger Door Components on page 6-88</i> 	<i>B28P Door Ajar Switch - Passenger</i>
B29D	Door Lock Key Cylinder Switch - Driver	—	In the passenger compartment, inside the driver door, part of A23D Door Latch Assembly-Driver	—	—
B34	Engine Coolant Temperature Sensor	—	In the engine compartment, on the rear of the engine, on the thermostat housing	<i>Top of the Engine Components on page 6-74</i>	<i>B34 Engine Coolant Temperature Sensor</i>
B36	Engine Oil Temperature Sensor	—	In the engine compartment, in the oil pan	<i>Left Front of the Engine Components on page 6-76</i>	<i>B36 Engine Oil Temperature Sensor</i>
B37B	Engine Oil Pressure Sensor	—	In the engine compartment, on the right rear side of the engine block	<i>Left Front of the Engine Components on page 6-76</i>	<i>B37B Engine Oil Pressure Sensor</i>
B39	A/C Evaporator Temperature Sensor	—	In the passenger compartment, on the HVAC unit assembly, right center of the dash	—	<i>B39 A/C Evaporator Temperature Sensor</i>
B46	Fuel Level Sensor	—	On the vehicle underbody, inside the fuel tank, part of A7 Fuel Pump and Level Sensor Assembly	—	—
B48	Fuel Temperature Sensor	—	On the vehicle underbody, inside the fuel tank, part of A7 Fuel Pump and Level Sensor Assembly	—	—
B52A	Heated Oxygen Sensor 1	—	In the engine compartment, on the engine exhaust manifold	<i>Bottom of the Engine Components on page 6-75</i>	<i>B52A Heated Oxygen Sensor 1</i>
B52B	Heated Oxygen Sensor 2	—	On the vehicle underbody, on the exhaust system after the catalytic converter	<i>Bottom of the Engine Components on page 6-75</i>	<i>B52B Heated Oxygen Sensor 2</i>
B56	Ignition Key In Switch	—	In the passenger compartment, on the right side of the steering column, inside ignition lock cylinder housing	—	<i>B56 Ignition Key In Switch</i>
B59	Front Impact Sensor	—	On the vehicle exterior, at the front of the vehicle, below the hood latch	—	<i>B59 Front Impact Sensor</i>

Master Electrical Component List (cont'd)

Code	Name	Option	Location	Locator View	Connector End View
B62P	Seat Position Sensor - Passenger	—	<ul style="list-style-type: none"> () In the passenger compartment, under the passenger seat, front of the left seat track. () In the passenger compartment, under the passenger seat, rear of the left seat track. 	—	<ul style="list-style-type: none"> B62P Seat Position Sensor - Passenger (1) B62P Seat Position Sensor - Passenger (2)
B63LF	Side Impact Sensor - Left Front	—	In the passenger compartment, inside the driver door	—	B63LF Side Impact Sensor - Left Front
B63LM	Side Impact Sensor - Left Middle	—	In the passenger compartment, at the bottom of the left B-pillar	B-Pillar Components on page 6-81	B63LM Side Impact Sensor - Left Middle
B63RF	Side Impact Sensor - Right Front	—	In the passenger compartment, inside the passenger door	—	B63RF Side Impact Sensor - Right Front
B63RM	Side Impact Sensor - Right Middle	—	In the passenger compartment, at the bottom of the right B-pillar	B-Pillar Components on page 6-81	B63RM Side Impact Sensor - Right Middle
B68	Knock Sensor	—	In the engine compartment, on the front side of the engine, below the cylinder head, center	Left Front of the Engine Components on page 6-76	B68 Knock Sensor
B75	Mass Air Flow Sensor	—	In the engine compartment, on the intake air cleaner assembly	Top of the Engine Components on page 6-74	B75 Mass Air Flow Sensor
B78E	Rear Object Sensor - Left Middle	UD7	On the vehicle exterior, rear of the vehicle, part of the rear bumper assembly	Rear Exterior Components	B78E Rear Object Sensor - Left Middle (UD7)
B78F	Rear Object Sensor - Right Middle	UD7	On the vehicle exterior, rear of the vehicle, part of the rear bumper assembly	Rear Exterior Components	B78F Rear Object Sensor - Right Middle (UD7)
B78G	Rear Object Sensor - Left Outer	UD7	On the vehicle exterior, rear of the vehicle, part of the rear bumper assembly	Rear Exterior Components	B78G Rear Object Sensor - Left Outer (UD7)
B78H	Rear Object Sensor - Right Outer	UD7	On the vehicle exterior, rear of the vehicle, part of the rear bumper assembly	Rear Exterior Components	B78H Rear Object Sensor - Right Outer (UD7)
B80	Park Brake Switch	—	In the passenger compartment, inside the center console, at the bottom of the parking brake lever assembly	—	B80 Park Brake Switch
B81	Park/Neutral Position Switch	—	In the engine compartment, on top of the automatic transmission case at the shift linkage	Automatic Transmission Electronic Components on page 6-77	B81 Park/Neutral Position Switch
B81B	Park Position Switch	—	In the passenger compartment, part of the transmission shift lever assembly	—	—
B87	Rearview Camera	UVC	On the vehicle exterior, rear of the vehicle, above the license plate	—	B87 Rearview Camera (UVC)
B88D	Seat Belt Switch - Driver	—	In the passenger compartment, on the right side of the driver seat, part of B153D Seat Belt Buckle-Driver	Driver Seat Components on page 6-84	—

Master Electrical Component List (cont'd)

Code	Name	Option	Location	Locator View	Connector End View
B88P	Seat Belt Switch - Passenger	—	In the passenger compartment, on the left side of the passenger seat, part of B153P Seat Belt Buckle-Passenger	<i>Passenger Seat Components on page 6-85</i>	—
B99	Steering Wheel Angle Sensor	—	In the passenger compartment, on the lower center of the steering column	—	<i>B99 Steering Wheel Angle Sensor</i>
B103	Stop Lamp Switch	—	In the passenger compartment, part of the brake pedal assembly	—	<i>B103 Stop Lamp Switch</i>
B107	Accelerator Pedal Position Sensor	—	In the passenger compartment, part of the accelerator pedal assembly	—	<i>B107 Accelerator Pedal Position Sensor</i>
B118B	Windshield Washer Fluid Level Switch	—	On the vehicle exterior, behind the right side of the front fascia, mounted on the washer fluid reservoir	—	<i>B118B Windshield Washer Fluid Level Switch</i>
B119	Multi-axis Acceleration Sensor	—	In the passenger compartment, below the center console, mounted to the floor	—	<i>B119 Multi-axis Acceleration Sensor</i>
B137	Power Steering Shaft Torque Sensor	—	In the passenger compartment, below the left side of the instrument panel, mounted left of the steering shaft	—	—
B150	Fuel Tank Pressure Sensor	—	On the vehicle underbody, right side, on the EVAP canister	—	<i>B150 Fuel Tank Pressure Sensor</i>
B153D	Seat Belt Buckle - Driver	—	In the passenger compartment, on the right side of the driver seat	<i>Driver Seat Components on page 6-84</i>	<i>B153D Seat Belt Buckle - Driver</i>
B153P	Seat Belt Buckle - Passenger	—	In the passenger compartment, on the left side of the passenger seat	<i>Passenger Seat Components on page 6-85</i>	<i>B153P Seat Belt Buckle - Passenger</i>
C1	Battery	—	In the engine compartment, left rear	<i>Engine Compartment Components on page 6-73</i>	—
C9	Ignition Coil Capacitor	—	In the engine compartment, on top of the engine	—	<i>C9 Ignition Coil Capacitor</i>
E4LR	Turn Signal Lamp - Left Rear	—	On the vehicle exterior, at the rear of the vehicle, in the left tail lamp assembly	—	<i>E4LR Turn Signal Lamp - Left Rear</i>
E4N	Park/Turn Signal Lamp - Left	—	On the vehicle exterior, at the front of the vehicle, in the left headlamp assembly	<i>Front of Vehicle Components on page 6-71</i>	<i>E4N Park/Turn Signal Lamp - Left</i>
E4P	Park/Turn Signal Lamp - Right	—	On the vehicle exterior, at the front of the vehicle, in the right headlamp assembly	—	<i>E4P Park/Turn Signal Lamp - Right</i>
E4RR	Turn Signal Lamp - Right Rear	—	On the vehicle exterior, at the rear of the vehicle, in the right tail lamp assembly	—	<i>E4RR Turn Signal Lamp - Right Rear</i>
E5A	Backup Lamp - Left	—	On the vehicle exterior, at the rear of the vehicle, in the left tail lamp assembly	—	<i>E5A Backup Lamp - Left</i>
E5AA	Tail/Stop Lamp - Left	—	On the vehicle exterior, at the rear of the vehicle, in the left tail lamp assembly	—	<i>E5AA Tail/Stop Lamp - Left</i>

Master Electrical Component List (cont'd)

Code	Name	Option	Location	Locator View	Connector End View
E5AB	Tail/Stop Lamp - Right	—	On the vehicle exterior, at the rear of the vehicle, in the right tail lamp assembly	—	<i>E5AB Tail/Stop Lamp - Right</i>
E5B	Backup Lamp - Right	—	On the vehicle exterior, at the rear of the vehicle, in the right tail lamp assembly	—	<i>E5B Backup Lamp - Right</i>
E6	Center High Mounted Stop Lamp	—	On the vehicle exterior, at the rear of the vehicle, on top of the right cargo door	<i>Rear Exterior Components</i>	<i>E6 Center High Mounted Stop Lamp</i>
E7L	License Plate Lamp - Left	—	On the vehicle exterior, at the rear of the vehicle, middle of the right cargo door	<i>Rear Exterior Components</i>	<i>E7L License Plate Lamp - Left</i>
E7R	License Plate Lamp - Right	—	On the vehicle exterior, at the rear of the vehicle, middle of the right cargo door	<i>Rear Exterior Components</i>	<i>E7R License Plate Lamp - Right</i>
E13L	Headlamp - Left	—	On the vehicle exterior, at the front of the vehicle, within the left headlamp assembly	<i>Front of Vehicle Components on page 6-71</i>	<i>E13L Headlamp - Left</i>
E13R	Headlamp - Right	—	On the vehicle exterior, at the front of the vehicle, within the right headlamp assembly	—	<i>E13R Headlamp - Right</i>
E17D	Outside Rearview Mirror Glass - Driver	DE5 or DR6	On the vehicle exterior, on the driver door, front middle, part of A9A Outside Rearview-Driver	<i>Driver Door Components on page 6-87</i>	—
E17P	Outside Rearview Mirror Glass - Passenger	DE5 or DR6	On the vehicle exterior, on the passenger door, front middle, part of A9B Outside Rearview-Passenger	<i>Passenger Door Components on page 6-88</i>	—
E18	Rear Defogger Grid	C49	In the passenger compartment, at the rear of the vehicle, part of the right cargo door glass	<ul style="list-style-type: none"> • <i>Cargo Door Components on page 6-91</i> • <i>Rear Exterior Components</i> 	<ul style="list-style-type: none"> • <i>E18 Rear Defogger Grid X1 (C49)</i> • <i>E18 Rear Defogger Grid X2 (C49)</i>
E37F	Dome/Reading Lamps - Front	—	In the passenger compartment, front center, at the inside rearview mirror	<i>Front of Roof Components on page 6-83</i>	<i>E37F Dome/Reading Lamps - Front</i>
E37M	Dome/Reading Lamps - Middle	—	In the passenger compartment, center, in the headliner behind the seats	—	<ul style="list-style-type: none"> • <i>E37M Dome/Reading Lamps - Middle X1</i> • <i>E37M Dome/Reading Lamps - Middle X2</i>
E37R	Dome/Reading Lamps - Rear	—	In the passenger compartment, rear, above the cargo door opening	—	<ul style="list-style-type: none"> • <i>E37R Dome/Reading Lamps - Rear X1</i> • <i>E37R Dome/Reading Lamps - Rear X2</i>
F101	Passenger Instrument Panel Air Bag	—	In the passenger compartment, right front, within the instrument panel	<i>Instrument Panel on page 6-78</i>	<ul style="list-style-type: none"> • <i>F101 Passenger Instrument Panel Air Bag X1</i> • <i>F101 Passenger Instrument Panel Air Bag X2</i>

Master Electrical Component List (cont'd)

Code	Name	Option	Location	Locator View	Connector End View
F105L	Roof Rail Air Bag - Left	—	In the passenger compartment, left middle, mounted to the roof above left door opening	<i>Roof Rail Air Bags on page 6-82</i>	<i>F105L Roof Rail Air Bag - Left</i>
F105R	Roof Rail Air Bag - Right	—	In the passenger compartment, right middle, mounted to the roof above right door opening	<i>Roof Rail Air Bags on page 6-82</i>	<i>F105R Roof Rail Air Bag - Right</i>
F106D	Seat Side Air Bag - Driver	—	In the passenger compartment, mounted to the outboard side of driver seat back frame	<i>Driver Seat Components on page 6-84</i>	<i>F106D Seat Air Bag - Driver</i>
F106P	Seat Side Air Bag - Passenger	—	In the passenger compartment, mounted to the outboard side of passenger seat back frame	<i>Passenger Seat Components on page 6-85</i>	<i>F106P Seat Air Bag - Passenger</i>
F107	Steering Wheel Air Bag	—	In the passenger compartment, left front, mounted to the center of the steering wheel	<i>Instrument Panel on page 6-78</i>	<ul style="list-style-type: none"> • <i>F107 Steering Wheel Air Bag X1</i> • <i>F107 Steering Wheel Air Bag X2</i>
F112D	Seat Belt Retractor Pretensioner - Driver	—	In the passenger compartment, left side middle, mounted to the base of the B-pillar	<i>B-Pillar Components on page 6-81</i>	<i>F112D Seat Belt Retractor Pretensioner - Driver</i>
F112P	Seat Belt Retractor Pretensioner - Passenger	—	In the passenger compartment, right side middle, mounted to the base of the B-pillar	<i>B-Pillar Components on page 6-81</i>	<i>F112P Seat Belt Retractor Pretensioner - Passenger</i>
G10L	Cooling Fan Motor - Left	—	In the engine compartment, front left of center, mounted to the radiator shroud, behind the radiator	<ul style="list-style-type: none"> • <i>Cooling Fans on page 6-72</i> • <i>Engine Compartment Components on page 6-73</i> 	<i>G10L Cooling Fan Motor - Left</i>
G10R	Cooling Fan Motor - Right	—	In the engine compartment, front right of center, mounted to the radiator shroud, behind the radiator	<ul style="list-style-type: none"> • <i>Engine Compartment Components on page 6-73</i> • <i>Cooling Fans on page 6-72</i> 	<i>G10R Cooling Fan Motor - Right</i>
G12	Fuel Pump	—	On the vehicle underbody, inside the fuel tank, part of A7 Fuel Pump and Level Sensor Assembly	—	—
G13	Generator	—	In the engine compartment, front right of the engine, mounted to the engine block	<i>Engine Compartment Components on page 6-73</i>	<ul style="list-style-type: none"> • <i>G13 Generator X1</i> • <i>G13 Generator X2</i>
G24	Windshield Washer Pump	—	On the vehicle exterior, behind the right side of the front fascia, mounted on the bottom of the washer fluid reservoir	—	<i>G24 Windshield Washer Pump</i>
K9	Body Control Module	—	In the passenger compartment, right front, behind the instrument panel, below the passenger instrument panel air bag	<i>Instrument Panel on page 6-78</i>	<ul style="list-style-type: none"> • <i>K9 Body Control Module X1</i> • <i>K9 Body Control Module X2</i> • <i>K9 Body Control Module X3</i>

Master Electrical Component List (cont'd)

Code	Name	Option	Location	Locator View	Connector End View
K17	Electronic Brake Control Module	—	In the engine compartment, right rear of the engine, mounted to the bulkhead	<i>Engine Compartment Components on page 6-73</i>	<i>K17 Electronic Brake Control Module</i>
K20	Engine Control Module	—	In the engine compartment, right rear, behind the battery	<i>Engine Compartment Components on page 6-73</i>	<ul style="list-style-type: none"> • <i>K20 Engine Control Module X1</i> • <i>K20 Engine Control Module X2</i> • <i>K20 Engine Control Module X3</i>
K36	Inflatable Restraint Sensing and Diagnostic Module	—	In the passenger compartment, below the center console, mounted to the floor	<i>Center Console on page 6-80</i>	<ul style="list-style-type: none"> • <i>K36 Inflatable Restraint Sensing and Diagnostic Module X1</i> • <i>K36 Inflatable Restraint Sensing and Diagnostic Module X2</i> • <i>K36 Inflatable Restraint Sensing and Diagnostic Module X3</i>
K41R	Rear Parking Assist Control Module	UD7	In the passenger compartment, right front, behind the instrument panel, lower left of the glove box	—	<i>K41R Rear Parking Assist Control Module (UD7)</i>
K43	Power Steering Control Module	—	In the passenger compartment, behind the instrument panel to the left of the steering column	<i>Instrument Panel on page 6-78</i>	<ul style="list-style-type: none"> • <i>K43 Power Steering Control Module X1</i> • <i>K43 Power Steering Control Module X2</i> • <i>K43 Power Steering Control Module X3</i> • <i>K43 Power Steering Control Module X4</i>
K65	Tire Pressure Indicator Module	—	In the passenger compartment, right front, behind the instrument panel, behind the glove box	—	—
K71	Transmission Control Module	—	In the engine compartment, right side, in front of the battery	<ul style="list-style-type: none"> • <i>Automatic Transmission Electronic Components on page 6-77</i> • <i>Engine Compartment Components on page 6-73</i> 	<i>K71 Transmission Control Module</i>
K77	Remote Control Door Lock Receiver	—	In the passenger compartment, right front, behind the instrument panel, to the upper left of the glove box	<i>Instrument Panel on page 6-78</i>	<i>K77 Remote Control Door Lock Receiver</i>

Master Electrical Component List (cont'd)

Code	Name	Option	Location	Locator View	Connector End View
K82	Mobile Telephone Control Module	UPF	In the passenger compartment, right front, behind the instrument panel, to the right of the glove box	—	<ul style="list-style-type: none"> • K82 Mobile Telephone Control Module X1 • K82 Mobile Telephone Control Module X2 • K82 Mobile Telephone Control Module X3
K85	Passenger Presence Module	—	In the passenger compartment, right side, under passenger seat, attached to passenger seat frame	<i>Passenger Seat Components on page 6-85</i>	<i>K85 Passenger Presence Detection Module</i>
K89	Immobilizer Control Module	—	In the passenger compartment, left front, within steering column, near ignition lock cylinder housing	—	<i>K89 Immobilizer Control Module</i>
M7	Transmission Shift Lock Control Solenoid Actuator	—	In the passenger compartment, part of the transmission shift lever assembly	—	—
M8	Blower Motor	—	In the passenger compartment, right front, under the instrument panel, mounted on left side of the HVAC unit assembly	<i>HVAC Under Instrument Panel on page 6-79</i>	<i>M8 Blower Motor</i>
M13	Door Latch Assembly - Rear Cargo	—	In the passenger compartment, inside the right rear cargo door	—	<i>M13 Door Latch Assembly - Rear Cargo</i>
M14C	Door Lock Actuator - Rear Cargo	—	In the passenger compartment, inside the right rear cargo door, part of M13 Door Latch Assembly-Rear Cargo	—	—
M14D	Door Lock Actuator - Driver	—	In the passenger compartment, inside the driver door, part of A23D Door Latch Assembly-Driver	—	—
M14E	Door Lock Actuator - Left Sliding	—	In the passenger compartment, inside the left sliding door, at the rear of the door, part of X87LD Sliding Door Contact Plate - Left Door	—	—
M14F	Door Lock Actuator - Right Sliding	—	In the passenger compartment, inside the right sliding door, at the rear of the door, part of X87RD Sliding Door Contact Plate - Right Door	—	—
M14P	Door Lock Actuator - Passenger	—	In the passenger compartment, inside the passenger door, part of A23P Door Latch Assembly-Passenger	—	—
M38	Power Steering Motor	—	In the passenger compartment, left front, behind the instrument panel, above the steering column	—	—
M64	Starter Motor	—	In the engine compartment, left front of the engine, mounted to the transmission bell housing	—	<ul style="list-style-type: none"> • M64 Starter Motor X1 • M64 Starter Motor X2

Master Electrical Component List (cont'd)

Code	Name	Option	Location	Locator View	Connector End View
M74D	Window Motor - Driver	—	In the passenger compartment, inside the driver door, at the middle of the door	—	M74D Window Motor - Driver
M74P	Window Motor - Passenger	—	In the passenger compartment, inside the passenger door, at the middle of the door	—	M74P Window Motor - Passenger
M75	Windshield Wiper Motor	—	In the engine compartment, left side, near the brake master cylinder	—	M75 Windshield Wiper Motor
M77D	Outside Rearview Mirror Motor - Driver	—	On the vehicle exterior, on the driver door, front middle, within the driver outside rearview mirror	—	—
M77P	Outside Rearview Mirror Motor - Passenger	—	On the vehicle exterior, on the passenger door, front middle, within the passenger outside rearview mirror	—	—
P12	Horn	—	On the vehicle exterior, at the front of the vehicle, behind the grille, left of the hood latch assembly	Engine Compartment Components on page 6-73	<ul style="list-style-type: none"> • P12 Horn X1 • P12 Horn X2
P14	Passenger Air Bag Disabled Indicator	—	In the passenger compartment, lower middle of the instrument panel, in the transmission shifter bezel, right side top	—	P14 Passenger Air Bag Disabled Indicator
P16	Instrument Cluster	—	In the passenger compartment, left front, in the instrument panel, above the steering column	Instrument Panel on page 6-78	P16 Instrument Cluster
P19AG	Speaker - Left Front Door	—	In the passenger compartment, inside the driver door, at the lower front of the door, behind the trim panel	Driver Door Components on page 6-87	P19AG Speaker - Left Front Door
P19AH	Speaker - Right Front Door	—	In the passenger compartment, inside the passenger door, at the lower front of the door, behind the trim panel	Passenger Door Components on page 6-88	P19AH Speaker - Right Front Door
P28	Speaker - Parking Assist	UD7	In the passenger compartment, behind the left of the instrument panel, to the right of the instrument cluster	—	P28 Speaker - Parking Assist
Q2	A/C Compressor Clutch	—	In the engine compartment, front lower right of the engine, mounted to the engine block	—	—
Q6F	Camshaft Position Actuator Solenoid Valve - Intake	—	In the engine compartment, top right of the engine, mounted to the cylinder head, below the camshaft	<ul style="list-style-type: none"> • Top of the Engine Components on page 6-74 • Left Front of the Engine Components on page 6-76 	Q6F Camshaft Position Actuator Solenoid Valve - Intake

Master Electrical Component List (cont'd)

Code	Name	Option	Location	Locator View	Connector End View
Q8	Control Solenoid Valve Assembly	—	In the engine compartment, inside the automatic transmission, underneath the transmission fluid pan	<i>Automatic Transmission Electronic Components on page 6-77</i>	—
Q12	Evaporative Emission Purge Solenoid Valve	—	In the engine compartment, rear of the engine, at the throttle body	<i>Top of the Engine Components on page 6-74</i>	Q12 Evaporative Emission Purge Solenoid Valve
Q13	Evaporative Emission Vent Solenoid Valve	—	On the vehicle underbody, rear the right front wheel, on the EVAP canister	—	Q13 Evaporative Emission Vent Solenoid Valve
Q17A	Fuel Injector 1	—	In the engine compartment, top of the engine, at #1 cylinder of the cylinder head	<ul style="list-style-type: none"> • <i>Left Front of the Engine Components on page 6-76</i> • <i>Top of the Engine Components on page 6-74</i> 	Q17A Fuel Injector 1
Q17B	Fuel Injector 2	—	In the engine compartment, top of the engine, at #2 cylinder of the cylinder head	<ul style="list-style-type: none"> • <i>Top of the Engine Components on page 6-74</i> • <i>Left Front of the Engine Components on page 6-76</i> 	Q17B Fuel Injector 2
Q17C	Fuel Injector 3	—	In the engine compartment, top of the engine, at #3 cylinder of the cylinder head	<ul style="list-style-type: none"> • <i>Top of the Engine Components on page 6-74</i> • <i>Left Front of the Engine Components on page 6-76</i> 	Q17C Fuel Injector 3
Q17D	Fuel Injector 4	—	In the engine compartment, top of the engine, at #4 cylinder of the cylinder head	<ul style="list-style-type: none"> • <i>Top of the Engine Components on page 6-74</i> • <i>Left Front of the Engine Components on page 6-76</i> 	Q17D Fuel Injector 4
Q23	Line Pressure Control Solenoid Valve	—	—	—	—
Q27A	Pressure Control Solenoid Valve 1	—	—	—	—
Q27B	Pressure Control Solenoid Valve 2	—	In the engine compartment, inside the automatic transmission, part of the control solenoid valve assembly	—	—
Q38	Throttle Body	—	In the engine compartment, left rear of the engine	<i>Top of the Engine Components on page 6-74</i>	Q38 Throttle Body
Q39A	Torque Converter Clutch Pressure Control Solenoid Valve	—	—	—	—
Q39B	Torque Converter Clutch Enable Solenoid Valve	—	In the engine compartment, inside the automatic transmission, part of the control solenoid valve assembly	—	—

Master Electrical Component List (cont'd)

Code	Name	Option	Location	Locator View	Connector End View
R3	Blower Motor Resistor	—	In the passenger compartment, left front footwell area, on the HVAC case, near the accelerator pedal	<i>HVAC Under Instrument Panel on page 6-79</i>	<i>R3 Blower Motor Resistor</i>
S3	Transmission Shift Lever	—	In the passenger compartment, bottom middle of the instrument panel, forward of the center console	<i>Instrument Panel on page 6-78</i>	<i>S3 Transmission Shift Lever</i>
S7	Cruise Control Brake Switch	K34	In the passenger compartment, on the brake pedal assembly bracket	—	<i>S7 Cruise Control Brake Switch (K34)</i>
S26	Hazard Warning Switch	—	In the passenger compartment, lower middle, in the shift plate bezel, top left of the shifter	—	<i>S26 Hazard Warning Switch</i>
S33	Horn Switch	—	In the passenger compartment, left front, within the steering wheel, forward of the driver air bag	—	—
S39	Ignition Switch	—	In the passenger compartment, left front, within the right side of the steering column, mounted to lock cylinder housing	—	<i>S39 Ignition Switch</i>
S52	Outside Rearview Mirror Switch	—	In the passenger compartment, left front, on the left side of the instrument panel	—	<i>S52 Outside Rearview Mirror Switch</i>
S70L	Steering Wheel Controls Switch - Left	—	In the passenger compartment, left front, on the left side of the steering wheel	<i>Instrument Panel on page 6-78</i>	—
S70R	Steering Wheel Controls Switch - Right	—	In the passenger compartment, left front, on the right side of the steering wheel	<i>Instrument Panel on page 6-78</i>	—
S75	Traction Control Switch	—	In the passenger compartment, left front, left side of the instrument panel at the S52 Outside Rearview Mirror Switch	—	<i>S75 Traction Control Switch</i>
S78	Turn Signal/Multi-function Switch	—	In the passenger compartment, left front, within the steering column, forward of the steering wheel, on left side	—	<i>S78 Turn Signal/Multifunction Switch</i>
S101D	Door Lock/Window Switch - Driver	—	In the passenger compartment, in the driver door trim panel, mounted to the driver door trim plate, below the release handle	<i>Driver Door Components on page 6-87</i>	<i>S101D Door Lock/Window Switch - Driver</i>
S101P	Door Lock/Window Switch - Passenger	—	In the passenger compartment, in the passenger door trim panel, mounted to the passenger door trim plate, below the release handle	<i>Passenger Door Components on page 6-88</i>	<i>S101P Door Lock/Window Switch - Passenger</i>
S107	Parking Assist On/Off Switch	UD7	In the passenger compartment, in the front of the center console, below the transmission shift lever	—	<i>S107 Object Alarm Switch (UD7)</i>

Master Electrical Component List (cont'd)

Code	Name	Option	Location	Locator View	Connector End View
T4H	Digital Radio Antenna	—	On the vehicle exterior, front, mounted on the roof, above the windshield	Front of Roof Components on page 6-83	<ul style="list-style-type: none"> • T4H Digital Radio Antenna (U1B) • T4H Digital Radio Antenna X1 (CWM) • T4H Digital Radio Antenna X2 (CWM)
T4P	Navigation Antenna	CWM	In the passenger compartment, front center, on top of the instrument panel, under the defroster deflector, center of the instrument panel	—	—
T4S	Wireless Communication Antenna - Bluetooth	UPF	In the passenger compartment, right front, behind the instrument panel, to the right of the glove box	—	—
T8A	Ignition Coil 1	—	In the engine compartment, on the engine, at #1 cylinder of the cylinder head	<ul style="list-style-type: none"> • Top of the Engine Components on page 6-74 • Left Front of the Engine Components on page 6-76 	T8A Ignition Coil 1
T8B	Ignition Coil 2	—	In the engine compartment, on the engine, at #2 cylinder of the cylinder head	<ul style="list-style-type: none"> • Top of the Engine Components on page 6-74 • Left Front of the Engine Components on page 6-76 	T8B Ignition Coil 2
T8C	Ignition Coil 3	—	In the engine compartment, on the engine, at #3 cylinder of the cylinder head	<ul style="list-style-type: none"> • Top of the Engine Components on page 6-74 • Left Front of the Engine Components on page 6-76 	T8C Ignition Coil 3
T8D	Ignition Coil 4	—	In the engine compartment, on the engine, at #4 cylinder of the cylinder head	<ul style="list-style-type: none"> • Top of the Engine Components on page 6-74 • Left Front of the Engine Components on page 6-76 	T8D Ignition Coil 4
T12	Automatic Transmission Assembly	—	In the engine compartment, left side	—	—
T14	Immobilizer Antenna Amplifier	Z49	In the passenger compartment, left front, on ignition key cylinder, part of K89 Immobilizer Control Module	—	T14 Immobilizer Antenna Amplifier (Z49)
T25	Digital Radio Antenna Amplifier	—	On the vehicle exterior, front, mounted on the roof, above the windshield, part of T4H Digital Radio Antenna	—	—
X50A	Fuse Block - Underhood	—	In the engine compartment, left rear, next to the battery	Engine Compartment Components on page 6-73	Electrical Center Identification Views on page 6-103

Master Electrical Component List (cont'd)

Code	Name	Option	Location	Locator View	Connector End View
X50B	Fuse Block - Underhood Auxiliary	—	In the engine compartment, left rear, in front of the battery	<i>Engine Compartment Components on page 6-73</i>	<i>Electrical Center Identification Views on page 6-103</i>
X50D	Fuse Block - Battery	—	In the engine compartment, at the battery positive terminal	—	<i>Electrical Center Identification Views on page 6-103</i>
X51A	Fuse Block - Instrument Panel	—	In the passenger compartment, left side of the instrument panel	—	<i>Electrical Center Identification Views on page 6-103</i>
X70A	Relay Block - Underhood	—	In the engine compartment, left rear, next to the battery	<i>Engine Compartment Components on page 6-73</i>	<i>Electrical Center Identification Views on page 6-103</i>
X80H	Accessory Power Receptacle - Center Console	—	In the passenger compartment, in the front of the center console, below the transmission shift lever	<i>Instrument Panel on page 6-78</i>	<i>X80H Accessory Power Receptacle - Center Console</i>
X80L	Accessory Power Receptacle - Center Console Rear	—	In the passenger compartment, in the back of the center console	<i>Center Console on page 6-80</i>	<i>X80L Accessory Power Receptacle - Center Console Rear</i>
X83	Auxiliary Audio Input	—	In the passenger compartment, in the front of the center console, below the transmission shift lever	<ul style="list-style-type: none"> • <i>Instrument Panel on page 6-78</i> • <i>Instrument Panel on page 6-78</i> 	<ul style="list-style-type: none"> • <i>X83 Auxiliary Audio Input (U1B)</i> • <i>X83 Auxiliary Audio Input X1 (CWM)</i> • <i>X83 Auxiliary Audio Input X2 (CWM)</i>
X84	Data Link Connector	—	In the passenger compartment, left front, at the bottom of the instrument panel	—	<i>X84 Data Link Connector</i>
X85	Steering Wheel Air Bag Coil	—	In the passenger compartment, left front, within the steering column, behind the steering wheel	—	<ul style="list-style-type: none"> • <i>X85 Steering Wheel Air Bag Coil X1</i> • <i>X85 Steering Wheel Air Bag Coil X2</i> • <i>X85 Steering Wheel Air Bag Coil X3</i>
X87LB	Sliding Door Jamb Contact Plate - Left Body	—	Within the left sliding door opening, attached to the rear of the left B-pillar	—	<i>X87LB Sliding Door Jamb Contact Plate - Left Body</i>
X87LD	Sliding Door Jamb Contact Plate - Left Door	—	Within the left sliding door opening, attached to the front of the door	<i>Left Sliding Door Components on page 6-89</i>	—
X87RB	Sliding Door Jamb Contact Plate - Right Body	—	Within the right sliding door opening, attached to the rear of the right B-pillar	—	<i>X87RB Sliding Door Jamb Contact Plate - Right Body</i>
X87RD	Sliding Door Jamb Contact Plate - Right Door	—	Within the right sliding door opening, attached to the front of the door	<i>Right Sliding Door Components on page 6-90</i>	—

Master Electrical Component List (cont'd)

Code	Name	Option	Location	Locator View	Connector End View
X150	Engine Harness to Engine Compartment Harness (48 Cavities)	—	In the engine compartment, left front, below the headlamp	<ul style="list-style-type: none"> • Engine Compartment Harness Routing View - Engine Compartment Side on page 6-16 • Engine Harness Routing View on page 6-17 	X150 Engine Harness to Engine Compartment Harness
X175	Engine Harness to Transmission Assembly Harness (22 Cavities)	—	In the engine compartment, on the transmission assembly	Automatic Transmission Harness Routing View on page 6-18	X175 Engine Harness to Transmission Assembly Harness
X201	Instrument Panel Harness to Engine Compartment Harness (100 Cavities)	—	In the passenger compartment, behind the left side of the instrument panel, near the bulkhead grommet	<ul style="list-style-type: none"> • Engine Compartment Harness Routing View - Instrument Panel Side on page 6-19 • Instrument Panel Harness Routing View on page 6-20 	X201 Instrument Panel Harness to Engine Compartment Harness
X202	Instrument Panel Harness to Engine Compartment Harness (2 Cavities)	—	In the passenger compartment, behind the left side of the instrument panel, near the bulkhead grommet	<ul style="list-style-type: none"> • Engine Compartment Harness Routing View - Instrument Panel Side on page 6-19 • Instrument Panel Harness Routing View on page 6-20 	X202 Instrument Panel Harness to Engine Compartment Harness
X203	Instrument Panel Harness to Cellular Phone Microphone Harness (4 Cavities)	CWM or UPF	In the passenger compartment, behind the left side of the instrument panel, near the bulkhead grommet	Instrument Panel Harness Routing View on page 6-20	X203 Instrument Panel Harness to Cellular Phone Microphone Harness
X204	Instrument Panel Harness to Passenger Instrument Panel Airbag Jumper Harness (4 Cavities)	—	In the passenger compartment, right front, within the instrument panel, below the instrument panel air bag	—	X204 Instrument Panel Harness to Passenger Instrument Panel Airbag Jumper Harness
X210	—	—	—	—	X210 Instrument Panel Harness to Digital Radio Antenna Jumper Harness
X211	Instrument Panel Harness Coax to Satellite Antenna Harness Coax (1 Cavity)	CWM	In the passenger compartment, on the right A-pillar, next to X210	—	X211 Instrument Panel Harness to Digital Radio Antenna Jumper Harness (CWM)
X300	Body Harness to Passenger Seat Harness (8 Cavities)	—	In the passenger compartment, under the passenger seat, next X301	Body Harness Routing View on page 6-21	X300 Body Harness to Driver Seat Harness

Master Electrical Component List (cont'd)

Code	Name	Option	Location	Locator View	Connector End View
X301	Body Harness to Passenger Seat Side Air Bag Harness (2 Cavities)	—	In the passenger compartment, under passenger seat	<i>Body Harness Routing View on page 6-21</i>	<i>X301 Body Harness to Passenger Seat Side Air Bag Harness</i>
X302	Right Sliding Door Harness to Body Harness (4 Cavities)	—	In the passenger compartment, left side, interior bottom of the C-pillar	<i>Body Harness Routing View on page 6-21</i>	<i>X302 Right Sliding Door Harness to Body Harness</i>
X303	Left Sliding Door Harness to Body Harness (4 Cavities)	—	In the passenger compartment, right side, interior bottom of the C-pillar	<i>Body Harness Routing View on page 6-21</i>	<i>X303 Left Sliding Door Harness to Body Harness</i>
X304	Headliner Harness to Body Harness (4 Cavities)	—	In the passenger compartment, left rear, behind the air stabilizer vent	<i>Body Harness Routing View on page 6-21</i>	<i>X304 Headliner Harness to Body Harness</i>
X305	Instrument Panel Harness to Body Harness (32 Cavities)	—	In the passenger compartment, front center, under the center console	<ul style="list-style-type: none"> • <i>Instrument Panel Harness Routing View on page 6-20</i> • <i>Body Harness Routing View on page 6-21</i> 	<i>X305 Instrument Panel Harness to Body Harness</i>
X306	Instrument Panel Harness to Body Harness (8 Cavities)	—	In the passenger compartment, front center, under the center console	<ul style="list-style-type: none"> • <i>Instrument Panel Harness Routing View on page 6-20</i> • <i>Body Harness Routing View on page 6-21</i> 	<i>X306 Instrument Panel Harness to Body Harness</i>
X307	Instrument Panel Harness to Body Harness (24 Cavities)	—	In the passenger compartment, front center, under the center console	<ul style="list-style-type: none"> • <i>Instrument Panel Harness Routing View on page 6-20</i> • <i>Body Harness Routing View on page 6-21</i> 	<i>X307 Instrument Panel Harness to Body Harness</i>
X308	Instrument Panel Harness to Body Harness (4 Cavities)	—	In the passenger compartment, front center, under the center console	<ul style="list-style-type: none"> • <i>Instrument Panel Harness Routing View on page 6-20</i> • <i>Body Harness Routing View on page 6-21</i> 	<i>X308 Instrument Panel Harness to Body Harness</i>
X400	Rear Bumper Harness to Body Harness (8 Cavities)	UD7	Under rear of vehicle, rear of the fuel tank, on the cross rail frame	—	<i>X400 Rear Jumper Harness to Body Harness (UD7)</i>
X401	Rear Bumper Harness to Rear Jumper Harness (8 Cavities)	UD7	Under vehicle right rear bumper bar	—	<i>X401 Rear Bumper Harness to Rear Jumper Harness (UD7)</i>
X402	Rear Door Harness to Body Harness (16 Cavities)	—	In the passenger compartment, at right rear of vehicle, behind the right rear air stabilizer vent at X420	<ul style="list-style-type: none"> • <i>Rear Door Harness Routing View on page 6-24</i> • <i>Body Harness Routing View on page 6-21</i> 	<i>X402 Back Door Harness to Body Harness</i>

Master Electrical Component List (cont'd)

Code	Name	Option	Location	Locator View	Connector End View
X403	Rear Door Harness to Body Harness (6 Cavities)	—	In the passenger compartment, at right rear of vehicle, behind the right rear air stabilizer vent at X420	<ul style="list-style-type: none"> • <i>Rear Door Harness Routing View on page 6-24</i> • <i>Body Harness Routing View on page 6-21</i> 	<i>X403 Back Door Harness to Body Harness</i>
X410	Left Tail Lamp Assembly Harness to Body Harness (6 Cavities)	—	In the passenger compartment, at left rear of vehicle, behind the left rear air stabilizer vent	<i>Body Harness Routing View on page 6-21</i>	<i>X410 Left Tail Lamp Assembly Harness to Body Harness</i>
X420	Right Tail Lamp Assembly Harness to Body Harness (6 Cavities)	—	In the passenger compartment, at right rear of vehicle, behind the right rear air stabilizer vent	<i>Body Harness Routing View on page 6-21</i>	<i>X420 Right Tail Lamp Assembly Harness to Body Harness</i>
X500	Driver Door Harness to Instrument Panel Harness (12 Cavities)	—	In the passenger compartment, left front footwell, in the body behind the kick panel	<ul style="list-style-type: none"> • <i>Instrument Panel Harness Routing View on page 6-20</i> • <i>Driver Door Harness Routing View on page 6-22</i> • <i>Engine Compartment Components on page 6-73</i> 	<i>X500 Driver Door Harness to Instrument Panel Harness</i>
X501	Driver Door Harness to Instrument Panel Harness (12 Cavities)	—	In the passenger compartment, left front footwell, in the body behind the kick panel	<ul style="list-style-type: none"> • <i>Instrument Panel Harness Routing View on page 6-20</i> • <i>Driver Door Harness Routing View on page 6-22</i> 	<i>X501 Driver Door Harness to Instrument Panel Harness</i>
X502	Driver Door Harness to Instrument Panel Harness (6 Cavities)	—	In the passenger compartment, left front footwell, in the body behind the kick panel	<ul style="list-style-type: none"> • <i>Instrument Panel Harness Routing View on page 6-20</i> • <i>Driver Door Harness Routing View on page 6-22</i> 	<i>X502 Driver Door Harness to Instrument Panel Harness</i>
X510	X510 Driver Door Harness to Driver Outside Rearview Mirror Extension	—	In the passenger compartment, inside the driver door, behind the trim panel	<i>Driver Door Harness Routing View on page 6-22</i>	<i>X510 Driver Door Harness to Driver Outside Rearview Mirror Extension</i>
X600	Passenger Door Harness to Instrument Panel Harness (6 Cavities)	—	In the passenger compartment, right front footwell, in the body behind the kick panel	<ul style="list-style-type: none"> • <i>Passenger Door Harness Routing View on page 6-23</i> • <i>Instrument Panel Harness Routing View on page 6-20</i> 	<i>X600 Passenger Door Harness to Instrument Panel Harness</i>

Master Electrical Component List (cont'd)

Code	Name	Option	Location	Locator View	Connector End View
X601	Passenger Door Harness to Instrument Panel Harness (12 Cavities)	—	In the passenger compartment, right front footwell, in the body behind the kick panel	<ul style="list-style-type: none"> • <i>Passenger Door Harness Routing View on page 6-23</i> • <i>Instrument Panel Harness Routing View on page 6-20</i> 	<i>X601 Passenger Door Harness to Instrument Panel Harness</i>
X602	Passenger Door Harness to Instrument Panel Harness (6 Cavities)	—	In the passenger compartment, right front footwell, in the body behind the kick panel	<ul style="list-style-type: none"> • <i>Passenger Door Harness Routing View on page 6-23</i> • <i>Instrument Panel Harness Routing View on page 6-20</i> 	<i>X602 Passenger Door Harness to Instrument Panel Harness</i>
X610	Passenger Door Harness to Passenger Outside Rearview Mirror Extension	—	In the passenger compartment, inside the passenger door, behind the trim panel	<i>Passenger Door Harness Routing View on page 6-23</i>	<i>X610 Passenger Door Harness to Passenger Outside Rearview Mirror Extension</i>
X905	License Plate Harness to Rear Door Harness (2 Cavities)	—	In the passenger compartment, right rear, cargo door center	<i>Rear Door Harness Routing View on page 6-24</i>	<i>X905 License Plate Harness to Back Door Harness</i>
X906	Rear Defogger Harness to Rear Door Harness (2 Cavities)	—	In the passenger compartment, right rear, cargo door top right, on lock at X905	<i>Rear Door Harness Routing View on page 6-24</i>	<i>X906 Rear Defogger Harness to Back Door Harness</i>
X907	Rear Door Extension Harness to Rear Door Harness (2 Cavities)	—	In the passenger compartment, right rear, cargo door top right, on lock at X906	<i>Rear Door Harness Routing View on page 6-24</i>	<i>X907 Back Door Extension Harness to Back Door Harness</i>
G100	Battery Harness	—	In the engine compartment, below the battery	—	—
G101	Engine Compartment Harness	—	In the engine compartment, right front, near the coolant reservoir tank	<i>G101, G102 on page 6-96</i>	—
G102	Engine Compartment Harness	—	In the engine compartment, left, between the front of the left strut tower and the underhood fuse block	<i>G101, G102 on page 6-96</i>	—
G103	Engine Compartment Harness	—	In the engine compartment, left, mounted left of the underhood fuse block	<i>G103, G104, G105 on page 6-97</i>	—
G104	Engine Compartment Harness	—	In the engine compartment, right rear, on the right strut tower, near the electronic brake control module	<i>G103, G104, G105 on page 6-97</i>	—
G105	Engine Compartment Harness	—	In the engine compartment, left, in front of the underhood fuse block	<i>G103, G104, G105 on page 6-97</i>	—
G106	Engine Harness	—	In the engine compartment, right, below the a/c service port	<i>G106, G107 on page 6-98</i>	—
G107	Engine Harness	—	In the engine compartment, right front, front of the engine, near the generator	<i>G106, G107 on page 6-98</i>	—

Master Electrical Component List (cont'd)

Code	Name	Option	Location	Locator View	Connector End View
G108	Generator Harness	—	In the engine compartment, right front, front of the engine, under the upper radiator hose	—	—
G201	Instrument Panel Harness	—	In the passenger compartment, left side, under the instrument panel	G201, G202, G203, G204 on page 6-99	—
G202	Instrument Panel Harness	—	In the passenger compartment, right middle, under the instrument panel	G201, G202, G203, G204 on page 6-99	—
G203	Instrument Panel Harness	—	In the passenger compartment, left side, under the instrument panel	G201, G202, G203, G204 on page 6-99	—
G204	Instrument Panel Harness	—	In the passenger compartment, left side, under the instrument panel	G201, G202, G203, G204 on page 6-99	—
G205	Instrument Panel Harness	—	In the passenger compartment, right side, under the instrument panel	G205 on page 6-100	—
G301	Body Harness	—	In the passenger compartment, at the bottom of the left B-pillar	G301, G302, G303, G304 on page 6-101	—
G302	Body Harness	—	In the passenger compartment, left rear, near the wheel well	G301, G302, G303, G304 on page 6-101	—
G303	Body Harness	—	In the passenger compartment, at the bottom of the right B-pillar	G301, G302, G303, G304 on page 6-101	—
G304	Body Harness	—	In the passenger compartment, at the bottom of the left B-pillar	G301, G302, G303, G304 on page 6-101	—
G305	Body Harness	—	In the passenger compartment, right rear, near the wheel well	G305, G307, G901 on page 6-102	—
G307	Body Harness	—	In the passenger compartment, at the bottom of the right B-pillar	G305, G307, G901 on page 6-102	—
G901	Back Door Harness	—	In the passenger compartment, rear, inside the right cargo door, near the breakout for the rearview camera	G305, G307, G901 on page 6-102	—
J100	Engine Harness	—	In the engine compartment, between the underhood fuse block and the underhood relay block	—	—
J103	Engine Compartment Harness	—	In the engine compartment, behind the engine, between the engine control module and the X150 inline connector	—	—
J104	Engine Harness	—	In the engine compartment, between the X150 inline connector and the transmission control module, near the park/neutral position switch	—	—
J105	Engine Compartment Harness	—	In the engine compartment, between the underhood fuse block and the X150 inline connector	—	—

Master Electrical Component List (cont'd)

Code	Name	Option	Location	Locator View	Connector End View
J106	Engine Compartment Harness	—	In the engine compartment, between the underhood fuse block and the engine control module	—	—
J107	Engine Harness	—	In the engine compartment, near the fuel injectors	—	—
J108	Engine Harness	—	In the engine compartment, between the X150 inline connector and the ignition coils	—	—
J109	Engine Compartment Harness	—	In the engine compartment, between the underhood fuse block and the X201 inline connector	—	—
J121	Engine Harness	—	In the engine compartment, between the X150 inline connector and the heated oxygen sensors	—	—
J122	Engine Compartment Harness	—	In the engine compartment, between the underhood fuse block, the left cooling fan, and the underhood relay block	—	—
J123	Engine Compartment Harness	—	In the engine compartment, between the underhood fuse block, the right cooling fan, and the underhood relay block	—	—
J124	Engine Compartment Harness	—	In the engine compartment, between the underhood auxiliary fuse block and the right cooling fan	—	—
J125	Engine Compartment Harness	—	In the engine compartment, between the underhood fuse block, the right cooling fan, and the underhood relay block	—	—
J126	Engine Harness	—	In the engine compartment, between the transmission control module, the X175 inline transmission connector, and the speed sensors	—	—
J127	Engine Harness	—	In the engine compartment, between the transmission control module and the X150 inline connector	—	—
J128	Engine Compartment Harness	ATG	In the engine compartment, between the underhood fuse block, the underhood auxiliary fuse block, and the X201 inline connector	—	—
J129	Engine Harness	—	In the engine compartment, between the K20 Engine Control Module, the battery current sensor, and the X150 inline connector	—	—
J130	Engine Harness	—	In the engine compartment, between the K20 Engine Control Module and the underhood fuse block	—	—

Master Electrical Component List (cont'd)

Code	Name	Option	Location	Locator View	Connector End View
J202	Steering Wheel Harness	—	In the passenger compartment, before the steering wheel, between the air bag coil and the steering wheel control switches	—	—
J203	Instrument Panel Harness	—	In the passenger compartment, in the instrument panel, between the instrument panel fuse block and the data link connector, the instrument cluster, and the ignition key in switch	—	—
J204	Instrument Panel Harness	DR6	In the passenger compartment, in the instrument panel, between the instrument panel fuse block and the X501 and X601 door inline connectors	—	—
J205	Instrument Panel Harness	K34	In the passenger compartment, in the instrument panel, between the instrument panel fuse block, the instrument cluster, and the X201 inline connector	—	—
J206	Instrument Panel Harness	—	In the passenger compartment, in the instrument panel, between the body control module and the X201 and X305 inline connectors	—	—
J207	Instrument Panel Harness	—	In the passenger compartment, in the instrument panel, between the body control module and the X201 and X305 inline connectors	—	—
J209	Instrument Panel Harness	—	In the passenger compartment, in the instrument panel, between the steering wheel angle sensor, the multi-axis acceleration sensor, and the X201 inline connector	—	—
J210	Instrument Panel Harness	—	In the passenger compartment, in the instrument panel, between the instrument panel fuse block, the tire pressure indicator module, the body control module, and the X201 inline connector	—	—
J211	Instrument Panel Harness	—	In the passenger compartment, in the instrument panel, between the body control module and the X500 and X600 door inline connectors	—	—
J212	Instrument Panel Harness	—	In the passenger compartment, in the instrument panel, between the body control module and the X501 and X601 door inline connectors	—	—

Master Electrical Component List (cont'd)

Code	Name	Option	Location	Locator View	Connector End View
J213	Instrument Panel Harness	—	In the passenger compartment, in the instrument panel, between the body control module and the X501 and X601 door inline connectors	—	—
J214	Instrument Panel Harness	—	In the passenger compartment, in the instrument panel, between the instrument panel fuse block, the evaporator temperature sensor, and the HVAC controls	—	—
J215	Instrument Panel Harness	—	In the passenger compartment, in the instrument panel, between the data link connector and the X201 and X307 inline connectors	—	—
J216	Instrument Panel Harness	—	In the passenger compartment, in the instrument panel, between the blower motor, the blower motor resistor	—	—
J217	Instrument Panel Harness	—	In the passenger compartment, in the instrument panel, between the body control module and the X306 and X600 inline connectors	—	—
J218	Instrument Panel Harness	—	In the passenger compartment, in the instrument panel, between the body control module and X306 inline connector	—	—
J219	Steering Wheel Harness	—	In the passenger compartment, before the steering wheel, between the air bag coil and the steering wheel control switches	—	—
J220	Steering Wheel Harness	—	In the passenger compartment, before the steering wheel, between the air bag coil and the steering wheel control switches	—	—
J221	Instrument Panel Harness	—	In the passenger compartment, in the instrument panel, between the instrument panel fuse block and the blower motor	—	—
J222	Instrument Panel Harness	—	In the passenger compartment, in the instrument panel, between the ignition switch and the instrument panel fuse block	—	—
J224	Instrument Panel Harness	UPF	In the passenger compartment, in the instrument panel, near the mobile telephone control module	—	—

Master Electrical Component List (cont'd)

Code	Name	Option	Location	Locator View	Connector End View
J225	Instrument Panel Harness	—	In the passenger compartment, in the instrument panel, between the body control module, the hazard warning switch, and the tire pressure indicator module	—	—
J226	Instrument Panel Harness	—	In the passenger compartment, in the instrument panel, between the radio and the X201 and X306 inline connectors	—	—
J227	Instrument Panel Harness	—	In the passenger compartment, in the instrument panel, between the body control module and the X201 and X305 inline connectors	—	—
J231	Instrument Panel Harness	UPF	In the passenger compartment, in the instrument panel, between the radio, the mobile telephone control mobile, and the X201 inline connector	—	—
J232	Instrument Panel Harness	—	In the passenger compartment, in the instrument panel, between the instrument panel fuse block, the instrument cluster, and the X201 inline connector	—	—
J235	Instrument Panel Harness	UPF	In the passenger compartment, in the instrument panel, between the radio, the mobile telephone control mobile, and the instrument cluster	—	—
J236	Instrument Panel Harness	—	In the passenger compartment, in the instrument panel, between the instrument panel fuse block, and the instrument cluster	—	—
J237	Instrument Panel Harness	UD7	In the passenger compartment, in the instrument panel, between JX202 and the S107 Parking Assist On/Off Switch	—	—
J301	Body Harness	—	In the passenger compartment, between the inflatable restraint sensing and diagnostic module, the driver seat belt buckle, and the X305 inline connector	<i>Body Harness Routing View on page 6-21</i>	—
J302	Body Harness	—	In the passenger compartment, rear, between the tail lamp assemblies, JX202, and the X900 inline connector	—	—
J303	Body Harness	—	In the passenger compartment, rear, between the tail lamp assemblies and the X306 and X900 inline connectors	<i>Body Harness Routing View on page 6-21</i>	—

Master Electrical Component List (cont'd)


Code	Name	Option	Location	Locator View	Connector End View
J304	Body Harness	—	In the passenger compartment, rear, between the tail lamp assemblies, the rear parking assist control module, and the X201 inline connector	<i>Body Harness Routing View on page 6-21</i>	—
J305	Body Harness	—	In the passenger compartment, between the overhead console dome/reading lamp, and the X304 and X305 inline connectors	<i>Body Harness Routing View on page 6-21</i>	—
J306	Body Harness	—	In the passenger compartment, between the overhead console dome/reading lamp, and the X304 and X305 inline connectors	<i>Body Harness Routing View on page 6-21</i>	—
J307	Body Harness	—	In the passenger compartment, between the inflatable restraint sensing and diagnostic module, the left middle side impact sensor and the left roof rail air bag	<i>Body Harness Routing View on page 6-21</i>	—
J308	Body Harness	—	In the passenger compartment, between the inflatable restraint sensing and diagnostic module, the right middle side impact sensor and the right roof rail air bag	<i>Body Harness Routing View on page 6-21</i>	—
J310	Body Harness	—	In the passenger compartment, between the body control module and the X500 and X600 door inline connectors	—	—
J311	Body Harness	—	In the passenger compartment, between the sliding door contact plates and the X901 and X306 inline connectors	<i>Body Harness Routing View on page 6-21</i>	—
J312	Body Harness	—	In the passenger compartment, between the sliding door contact plates and the X306 inline connector	<i>Body Harness Routing View on page 6-21</i>	—
J400	Rear Bumper Harness	UD7	Vehicle exterior, rear, between the rear object sensors and the X401 inline connector	—	—
J401	Rear Bumper Harness	UD7	Vehicle exterior, rear, between the rear object sensors and the X401 inline connector	—	—
J500	Driver Door Harness	—	In the passenger compartment, left, inside the driver door	—	—
J901	License Plate Harness	—	Vehicle exterior, in the rear cargo door, between the license plate lamps and the X905 inline connector	—	—
J902	License Plate Harness	—	Vehicle exterior, in the rear cargo door, between the license plate lamps and the X905 inline connector	—	—

Master Electrical Component List (cont'd)

Code	Name	Option	Location	Locator View	Connector End View
J903	Rear Door Harness	—	In the passenger compartment, right rear, inside the right cargo door	—	—
JX101	Engine Compartment Harness	—	In the engine compartment, rear center, taped to the harness	—	<i>JX101 Engine Compartment Harness</i>
JX102	Engine Harness	—	In the engine compartment, at the breakout for the engine control module, taped to the harness	<i>Engine Harness Routing View on page 6-17</i>	<i>JX102 Engine Harness</i>
JX200	Engine Compartment Harness	—	In the passenger compartment, under the left side of the instrument panel, near the bulkhead grommet, taped to the harness at X201	<i>Engine Compartment Harness Routing View - Instrument Panel Side on page 6-19</i>	<i>JX200 Engine Compartment Harness</i>
JX201	Instrument Panel Harness	—	In the passenger compartment, under the left side of the instrument panel, behind the instrument cluster, taped to the harness next to JX202 and JX203	<i>Instrument Panel Harness Routing View on page 6-20</i>	<i>JX201 Instrument Panel Harness</i>
JX202	Instrument Panel Harness	—	In the passenger compartment, under the left side of the instrument panel, behind the instrument cluster, taped to the harness next to JX201 and JX203	<i>Instrument Panel Harness Routing View on page 6-20</i>	<i>JX202 Instrument Panel Harness</i>
JX203	Instrument Panel Harness	—	In the passenger compartment, under the left side of the instrument panel, behind the instrument cluster, taped to the harness next to JX201 and JX202	<i>Instrument Panel Harness Routing View on page 6-20</i>	<i>JX203 Instrument Panel Harness</i>

Front of Vehicle/Engine Compartment Component Views

Front of Vehicle Components

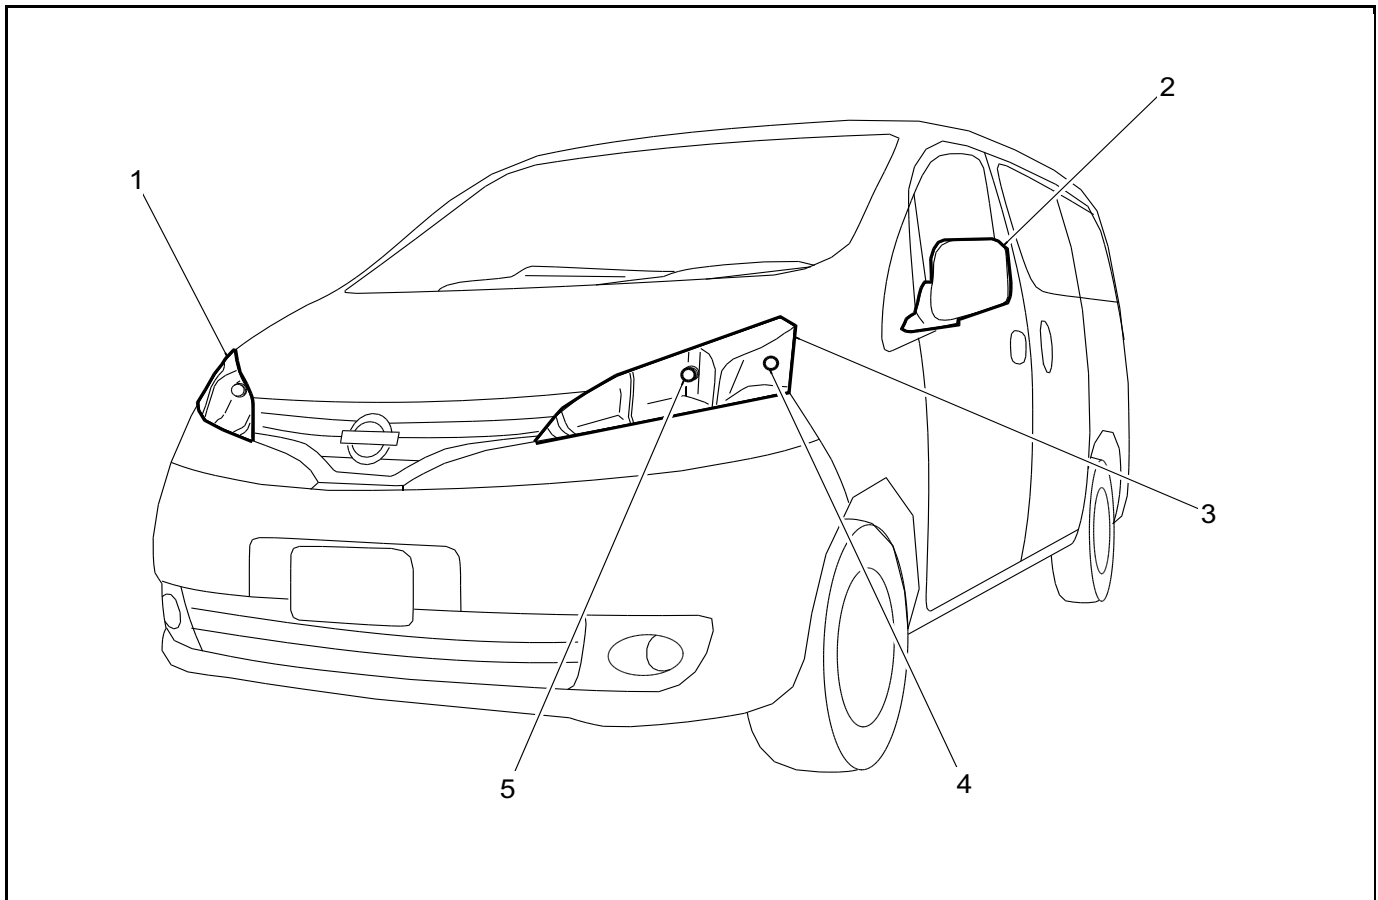


3946469

Items

- | | |
|---|--------------------------------------|
| (1) E13RA Headlamp Assembly - Right | (4) E4N Park/Turn Signal Lamp - Left |
| (2) A9B Outside Rearview Mirror - Passenger | (5) E13L Headlamp - Left |
| (3) E13LA Headlamp Assembly - Left | |

Cooling Fans

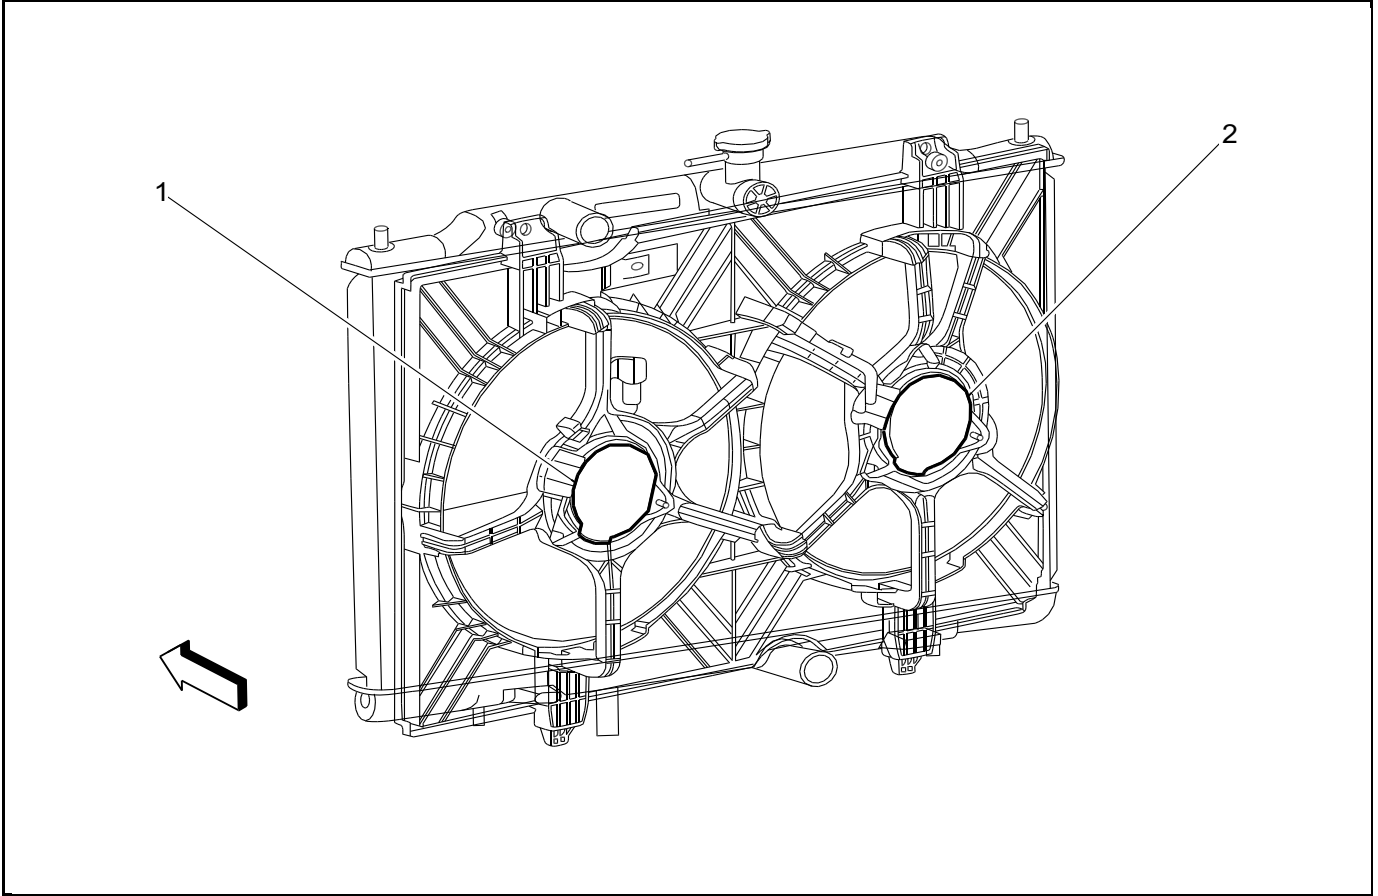


3946470

Items

- (1) G10L Cooling Fan Motor - Left
- (2) G10R Cooling Fan Motor - Right

Engine Compartment Components

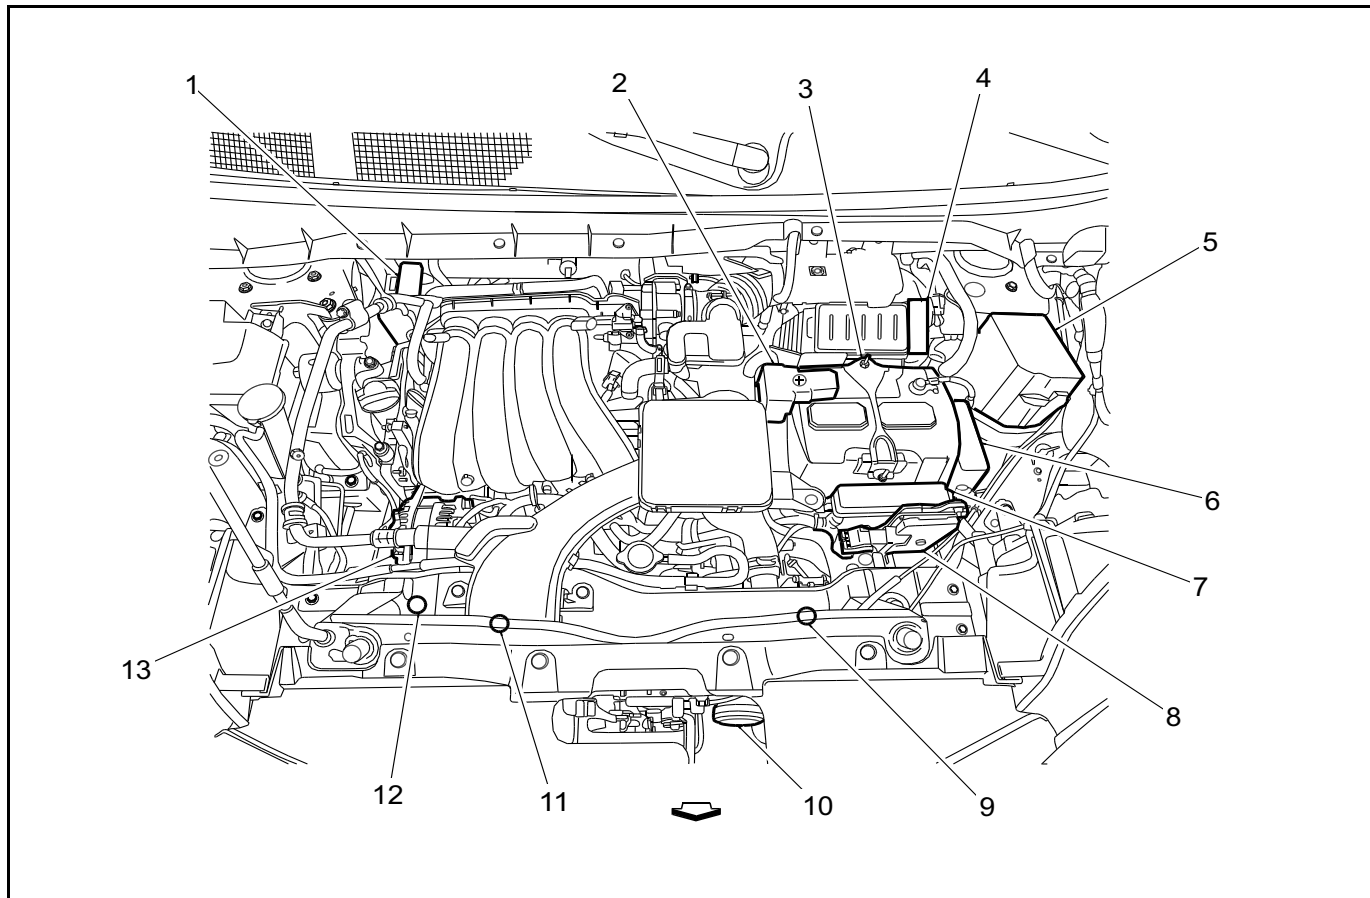


3946471

Items

- | | |
|---|---|
| (1) K17 Electronic Brake Control Module | (8) K71 Transmission Control Module |
| (2) X500 | (9) G10L Cooling Fan Motor - Left |
| (3) C1 Battery | (10) P12 Horn |
| (4) K20 Engine Control Module | (11) G10R Cooling Fan Motor - Right |
| (5) X50A Fuse Block - Underhood | (12) B1 A/C Refrigerant Pressure Sensor |
| (6) X70A Relay Block - Underhood | (13) G13 Generator |
| (7) X50B Fuse Block - Underhood Auxiliary | |

Powertrain Component Views
Top of the Engine Components

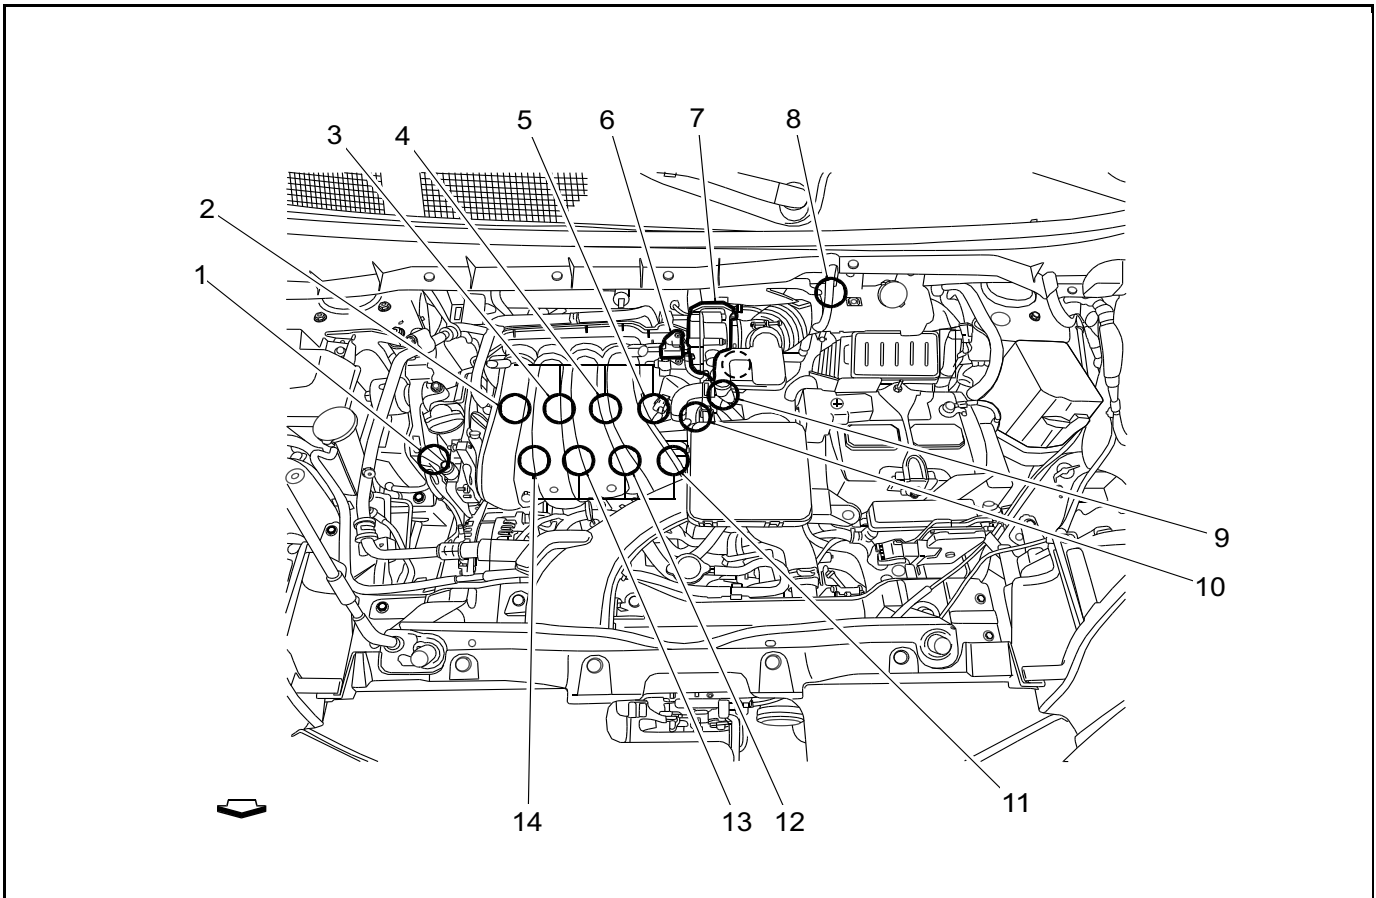


3946450

Items

- | | |
|--|---|
| (1) Q6F Camshaft Position Actuator Solenoid Valve - Intake | (8) B75 Mass Air Flow Sensor |
| (2) T8A Ignition Coil 1 | (9) B34 Engine Coolant Temperature Sensor |
| (3) T8B Ignition Coil 2 | (10) B23 Camshaft Position Sensor |
| (4) T8C Ignition Coil 3 | (11) Q17D Fuel Injector 4 |
| (5) T8D Ignition Coil 4 | (12) Q17C Fuel Injector 3 |
| (6) Q12 Evaporative Emission Purge Solenoid Valve | (13) Q17B Fuel Injector 2 |
| (7) Q38 Throttle Body | (14) Q17A Fuel Injector 1 |

Bottom of the Engine Components

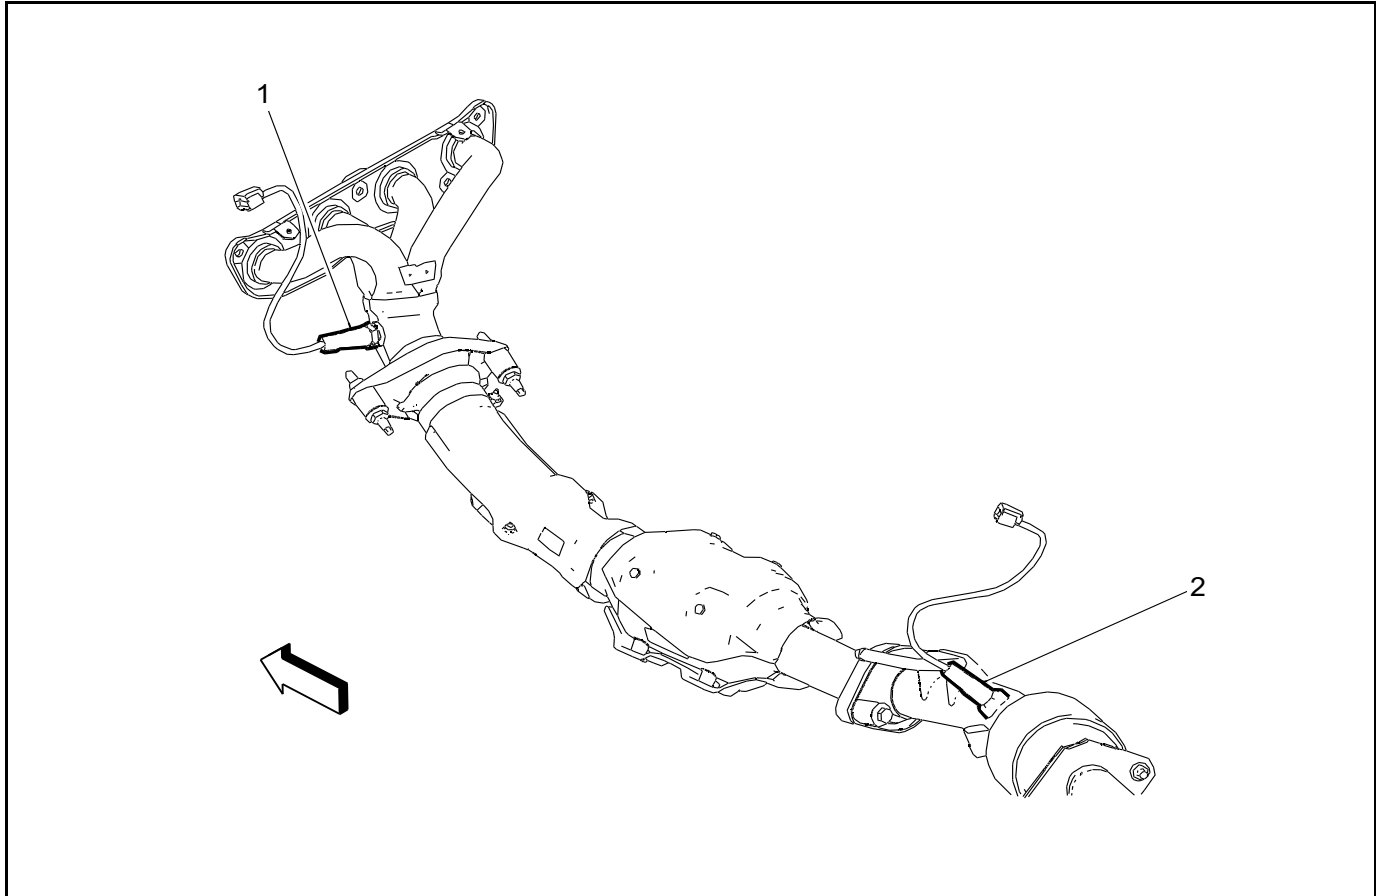


3946451

Items

- (1) B52A Heated Oxygen Sensor 1
- (2) B52B Heated Oxygen Sensor 2

Left Front of the Engine Components

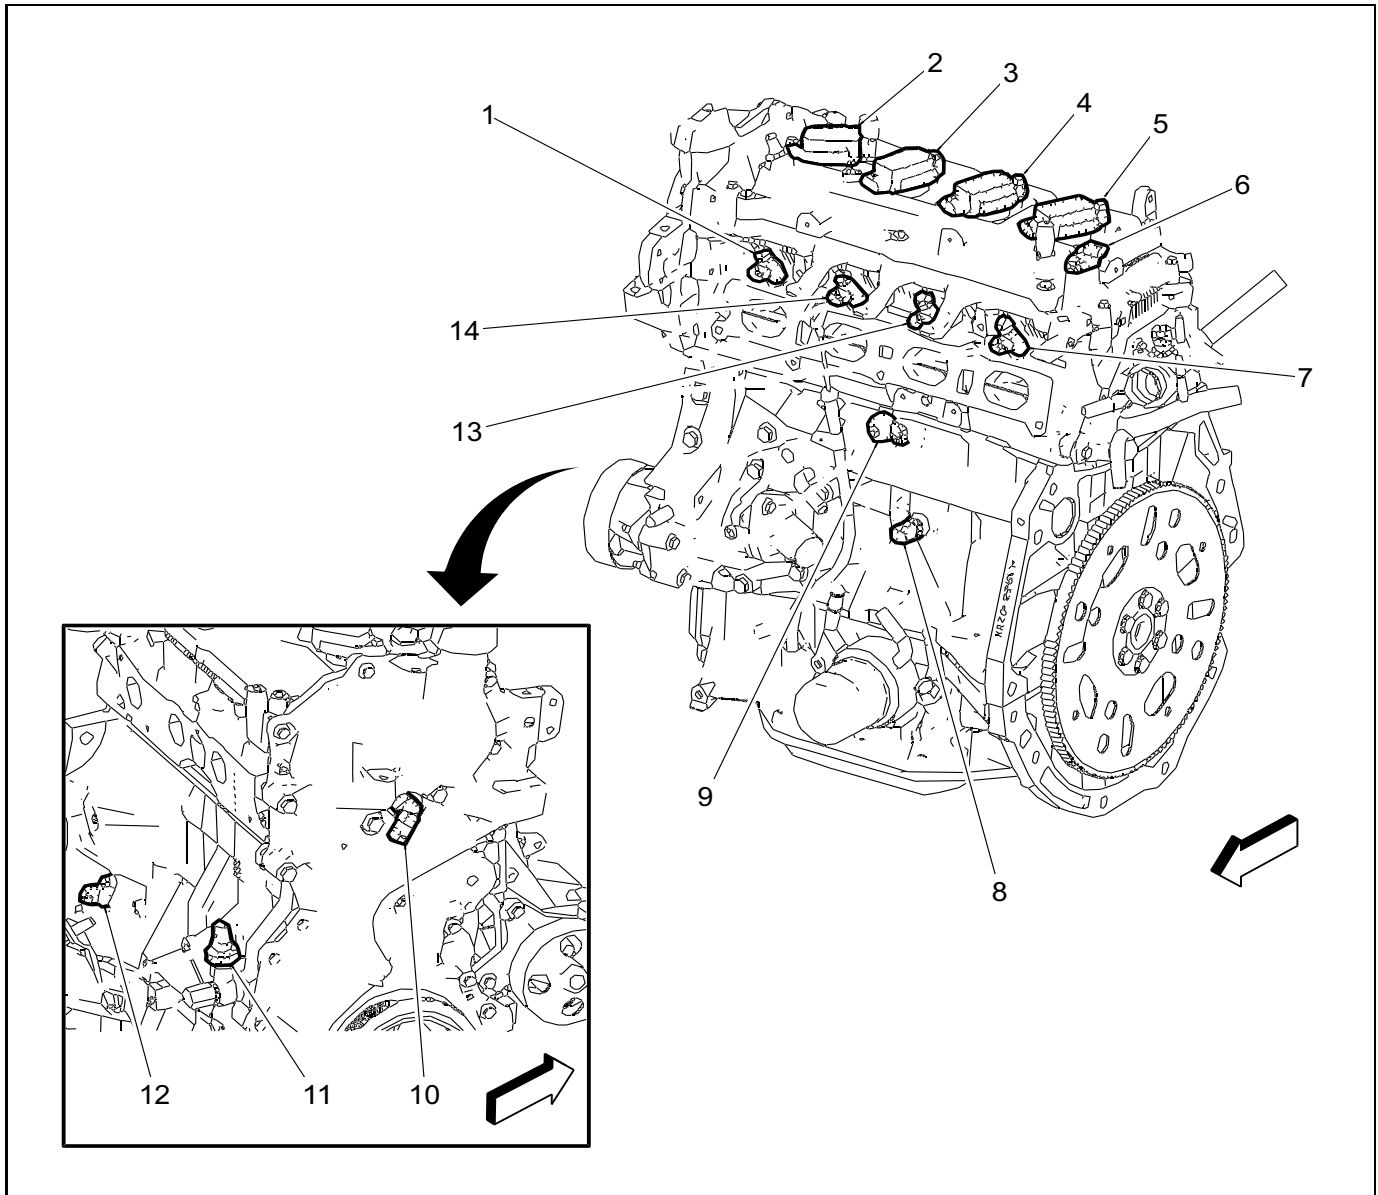


3946452

Items

- | | | | |
|-----|-----------------------------------|------|--|
| (1) | Q17A Fuel Injector 1 | (9) | B68 Knock Sensor |
| (2) | T8A Ignition Coil 1 | (10) | Q6F Camshaft Position Actuator Solenoid Valve - Intake |
| (3) | T8B Ignition Coil 2 | (11) | B37B Engine Oil Pressure Sensor |
| (4) | T8C Ignition Coil 3 | (12) | B26 Crankshaft Position Sensor |
| (5) | T8D Ignition Coil 4 | (13) | Q17C Fuel Injector 3 |
| (6) | B23 Camshaft Position Sensor | (14) | Q17B Fuel Injector 2 |
| (7) | Q17D Fuel Injector 4 | | |
| (8) | B36 Engine Oil Temperature Sensor | | |

Automatic Transmission Electronic Components

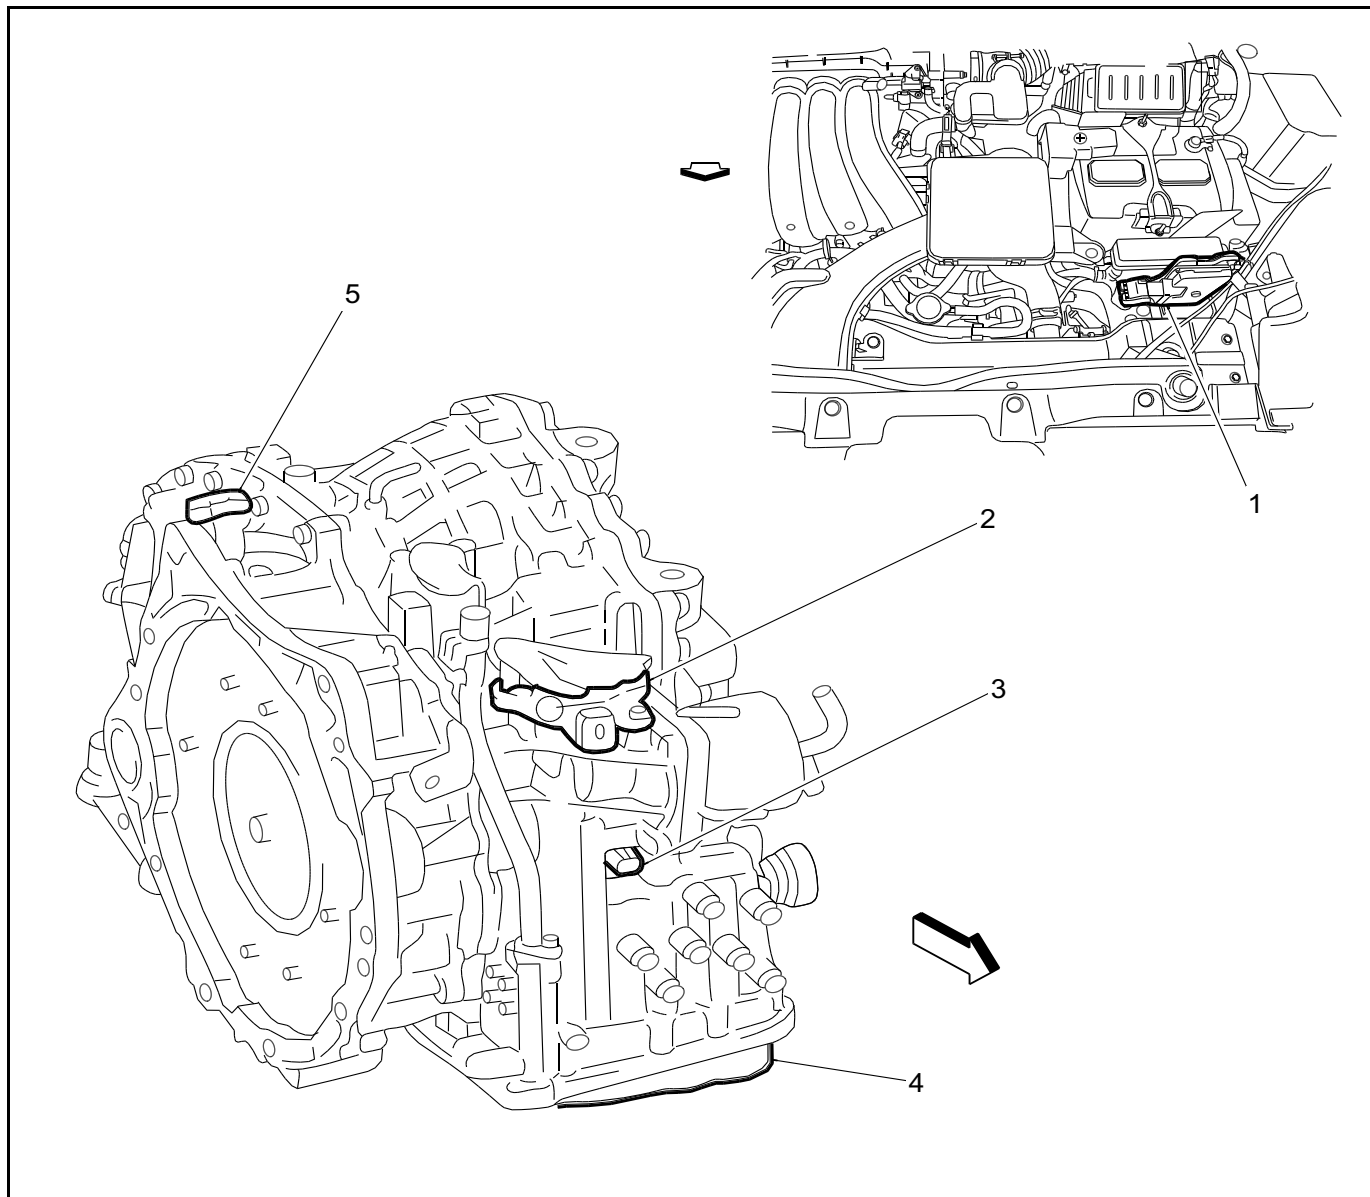


3946453

Items

- | | |
|---|---|
| <ul style="list-style-type: none"> (1) K71 Transmission Control Module (2) B81 Park/Neutral Position Switch (3) B14C Transmission Input Shaft Speed Sensor | <ul style="list-style-type: none"> (4) Q8 Control Solenoid Valve Assembly (5) B14A Transmission Output Shaft Speed Sensor |
|---|---|

Instrument Panel/Center Console Component Views

Instrument Panel

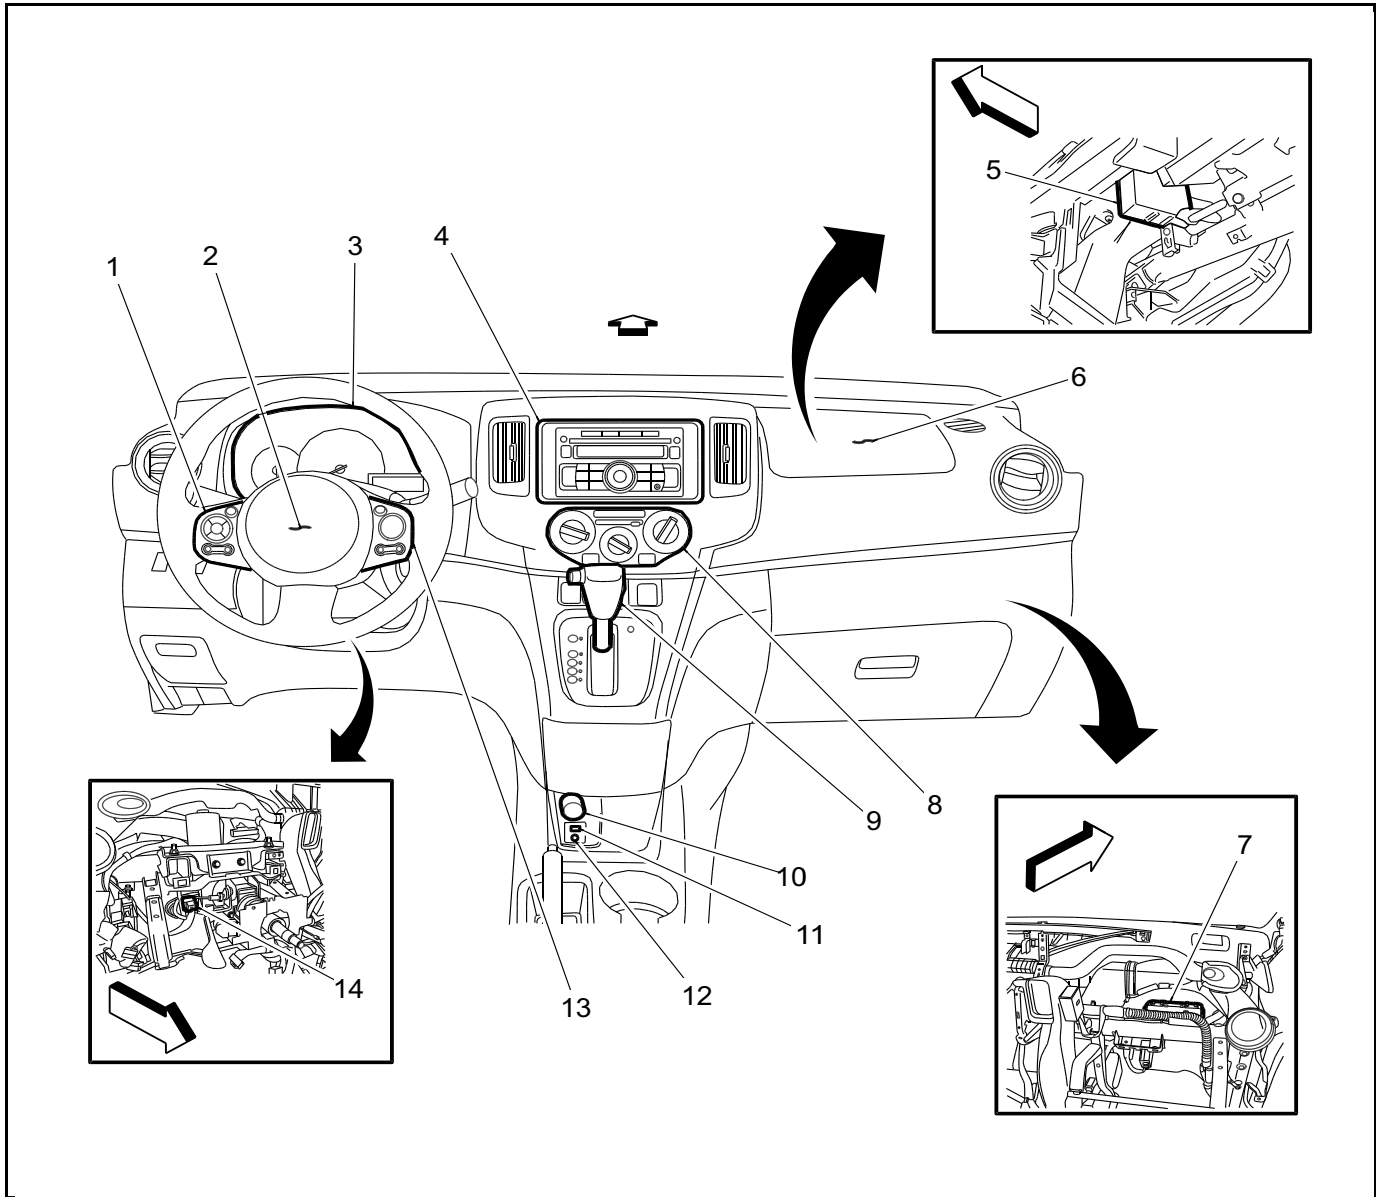


3946455

Items

- | | |
|--|---|
| (1) S70L Steering Wheel Controls Switch - Left | (9) S3 Transmission Shift Lever |
| (2) F107 Steering Wheel Air Bag | (10) X80H Accessory Power Receptacle - Center Console |
| (3) P16 Instrument Cluster | (11) X83 Auxiliary Audio Input |
| (4) A11 Radio | (12) X83 Auxiliary Audio Input |
| (5) K77 Remote Control Door Lock Receiver | (13) S70R Steering Wheel Controls Switch - Right |
| (6) F101 Passenger Instrument Panel Air Bag | (14) K43 Power Steering Control Module |
| (7) K9 Body Control Module | |
| (8) A26 HVAC Controls | |

HVAC Under Instrument Panel

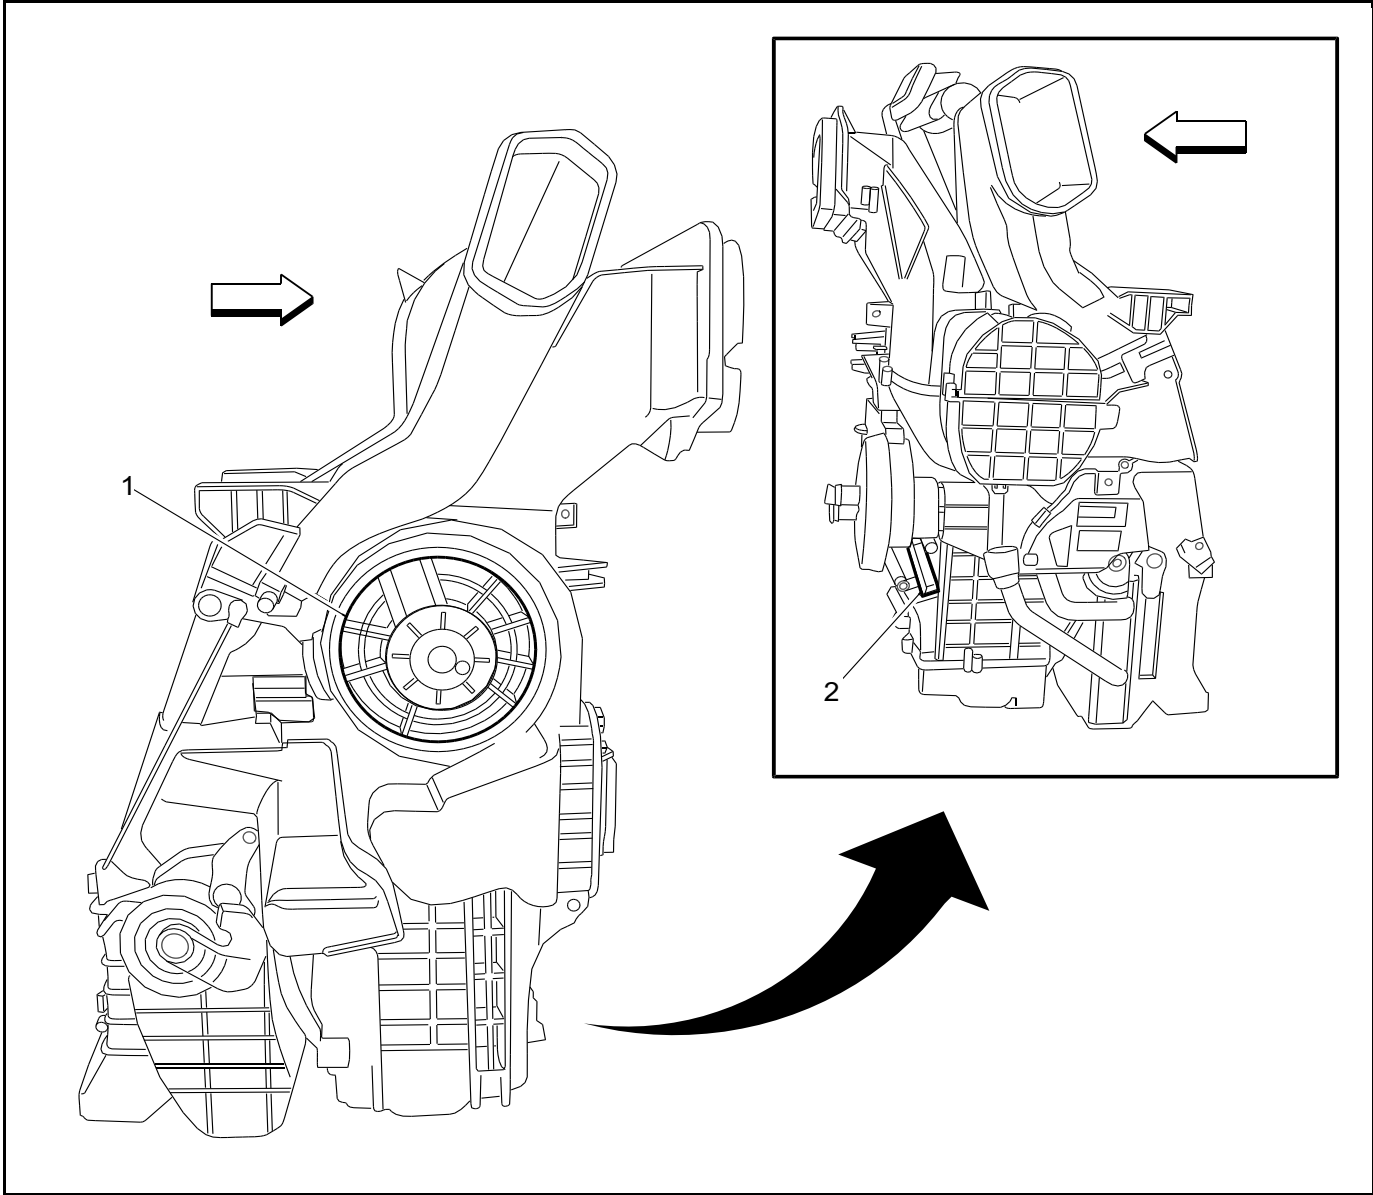


3946456

Items

- (1) M8 Blower Motor
- (2) R3 Blower Motor Resistor

Center Console

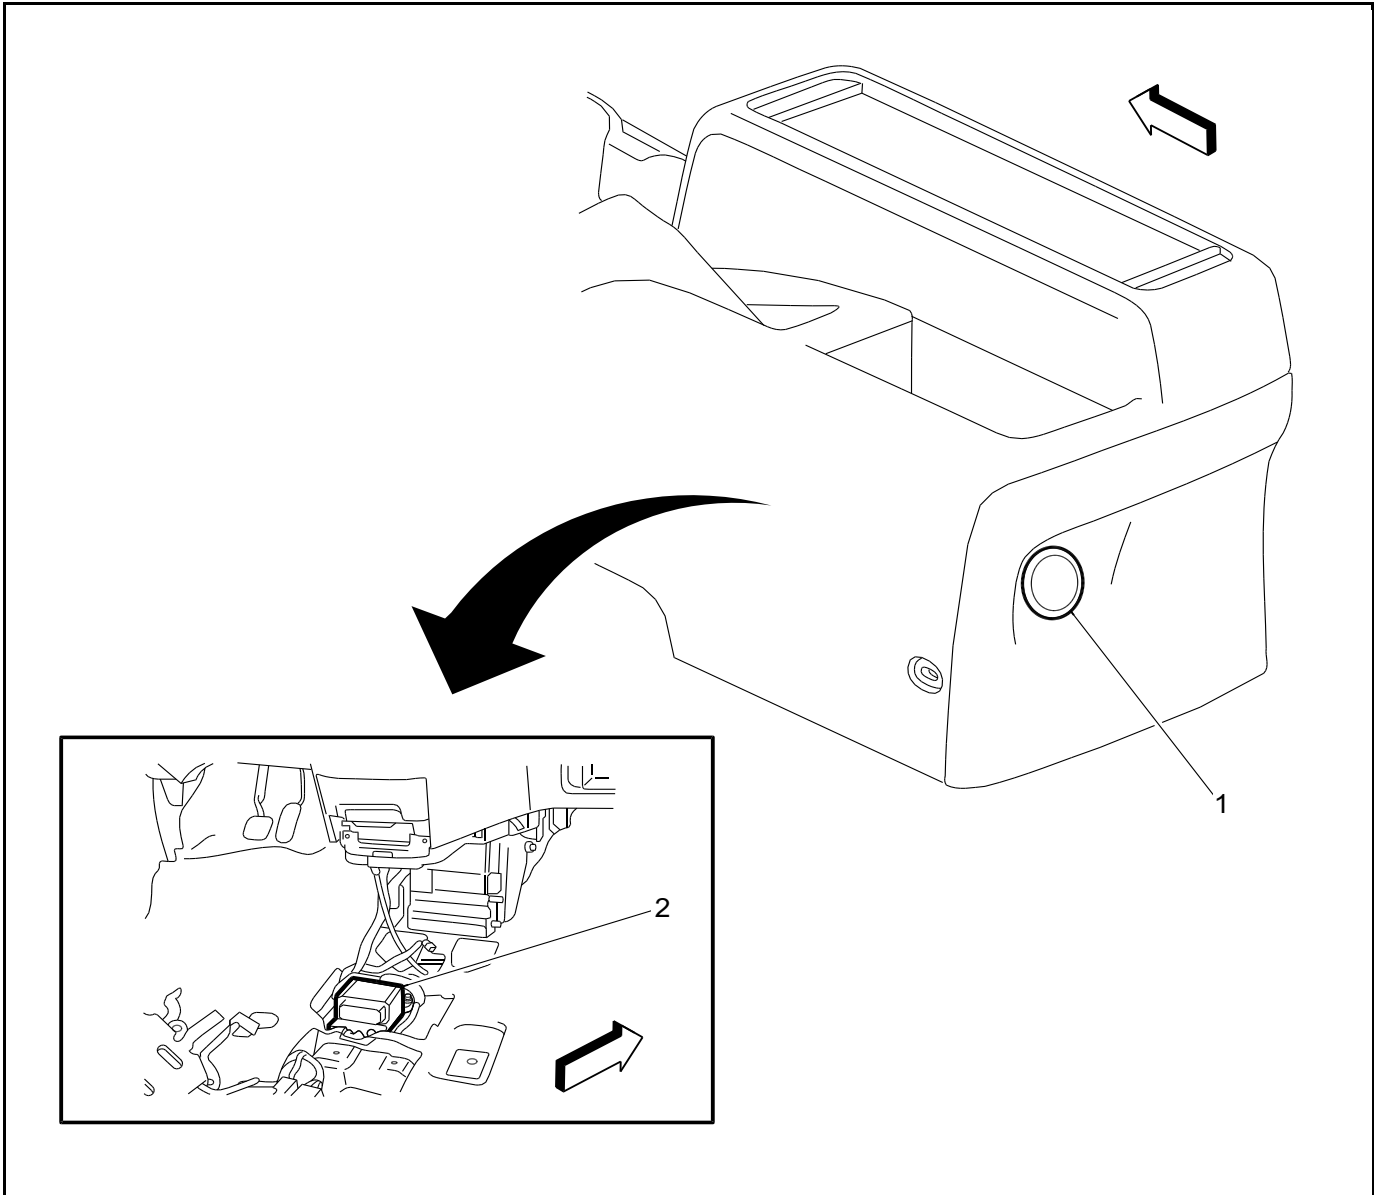



3946457

Items

(1) X80L Accessory Power Receptacle - Center Console Rear

(2) K36 Inflatable Restraint Sensing and Diagnostic Module

Passenger Compartment/Roof Component Views
B-Pillar Components

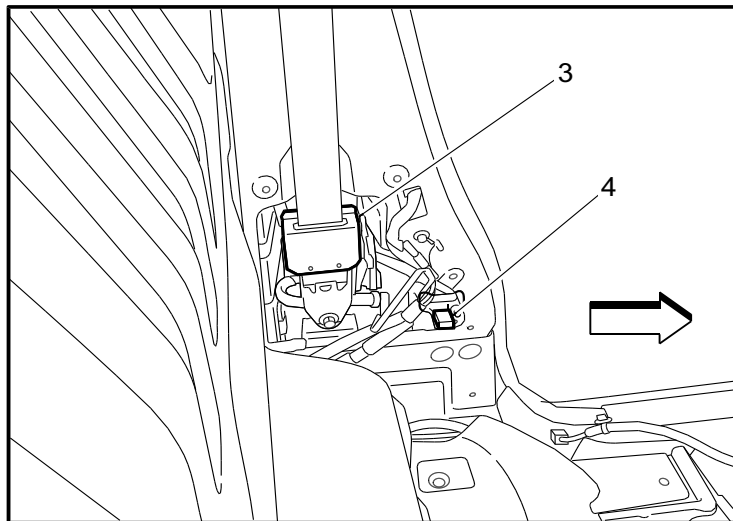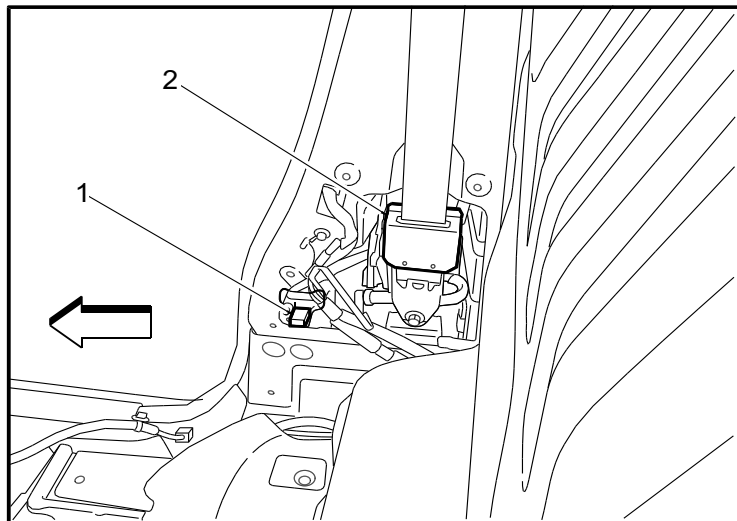


3946266

Items

- | | |
|---|---|
| <ul style="list-style-type: none"> (1) B63RM Side Impact Sensor - Right Middle (2) F112P Seat Belt Retractor Pretensioner - Passenger | <ul style="list-style-type: none"> (3) F112D Seat Belt Retractor Pretensioner - Driver (4) B63LM Side Impact Sensor - Left Middle |
|---|---|

Roof Rail Air Bags

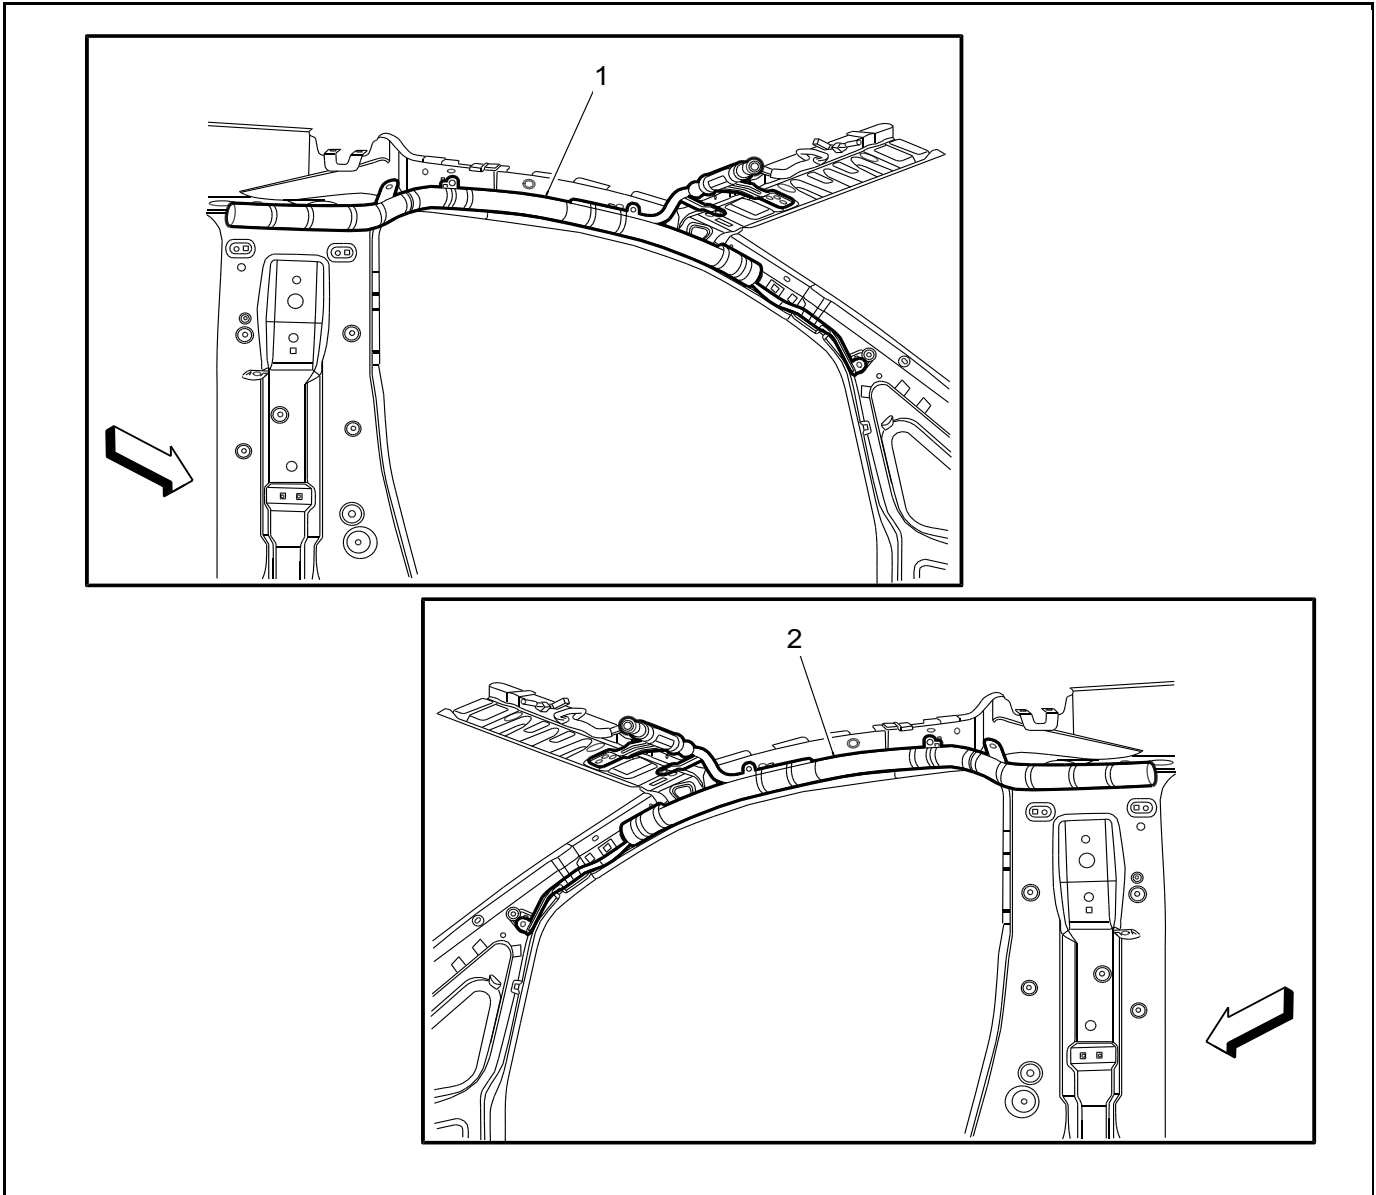


3946287

Items

- (1) F105L Roof Rail Air Bag - Left
- (2) F105R Roof Rail Air Bag - Right

Front of Roof Components

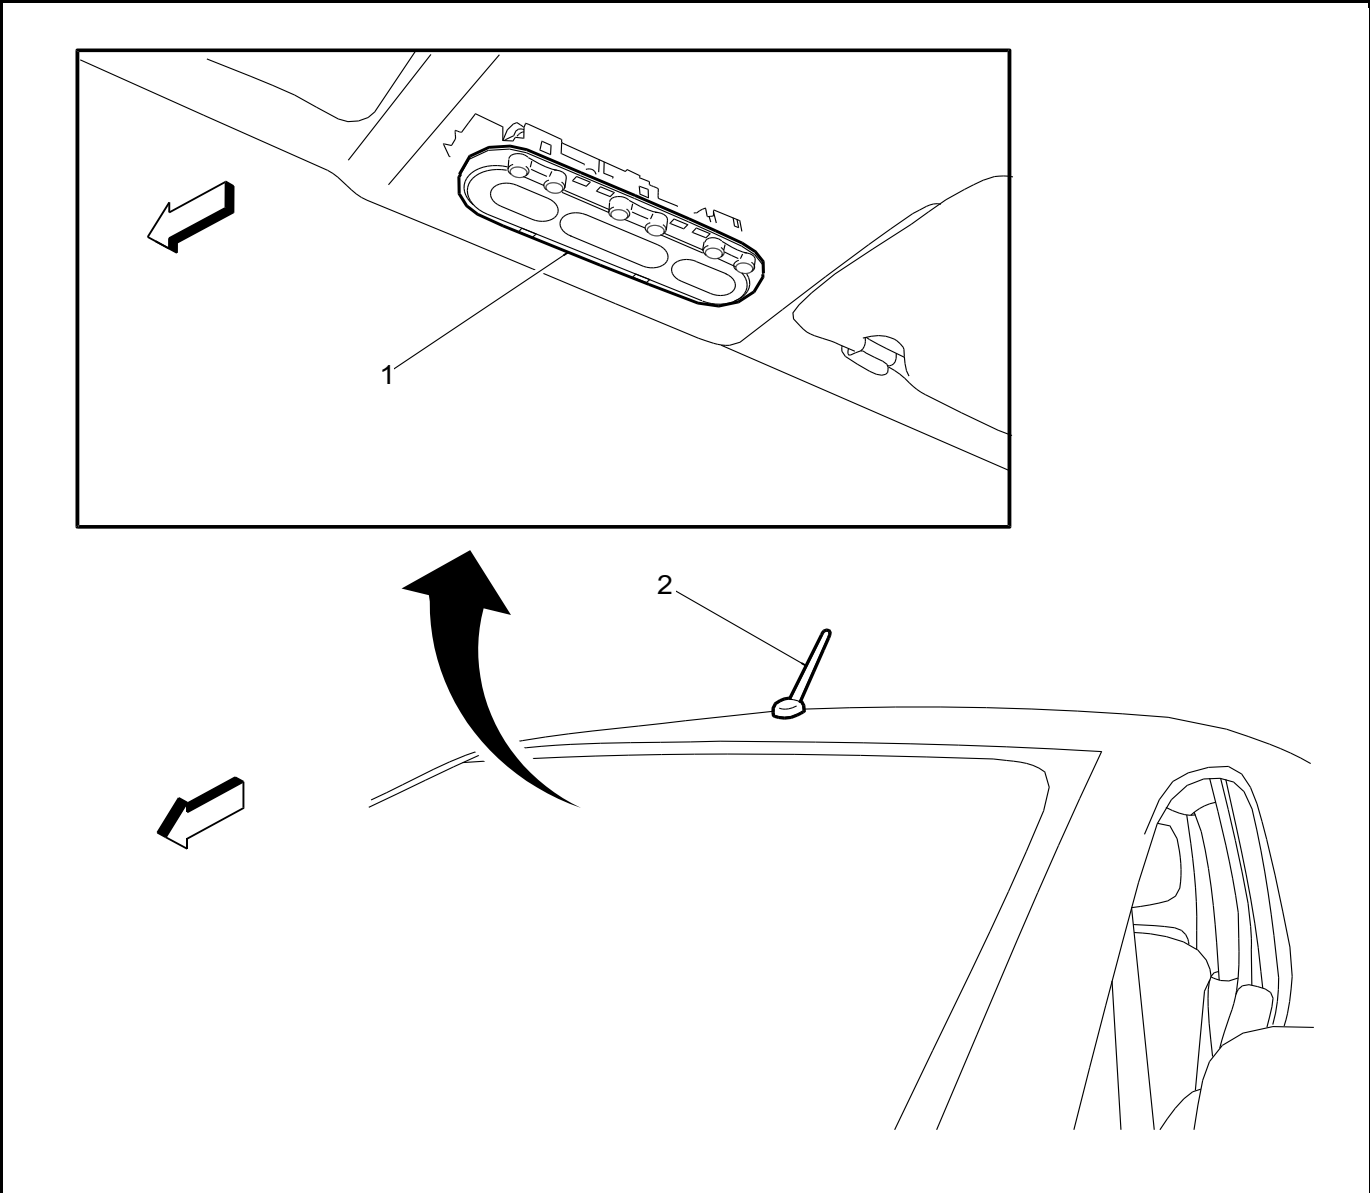


3946325

Items

- (1) E37F Dome/Reading Lamps - Front
- (2) T4H Digital Radio Antenna

Driver Seat Components

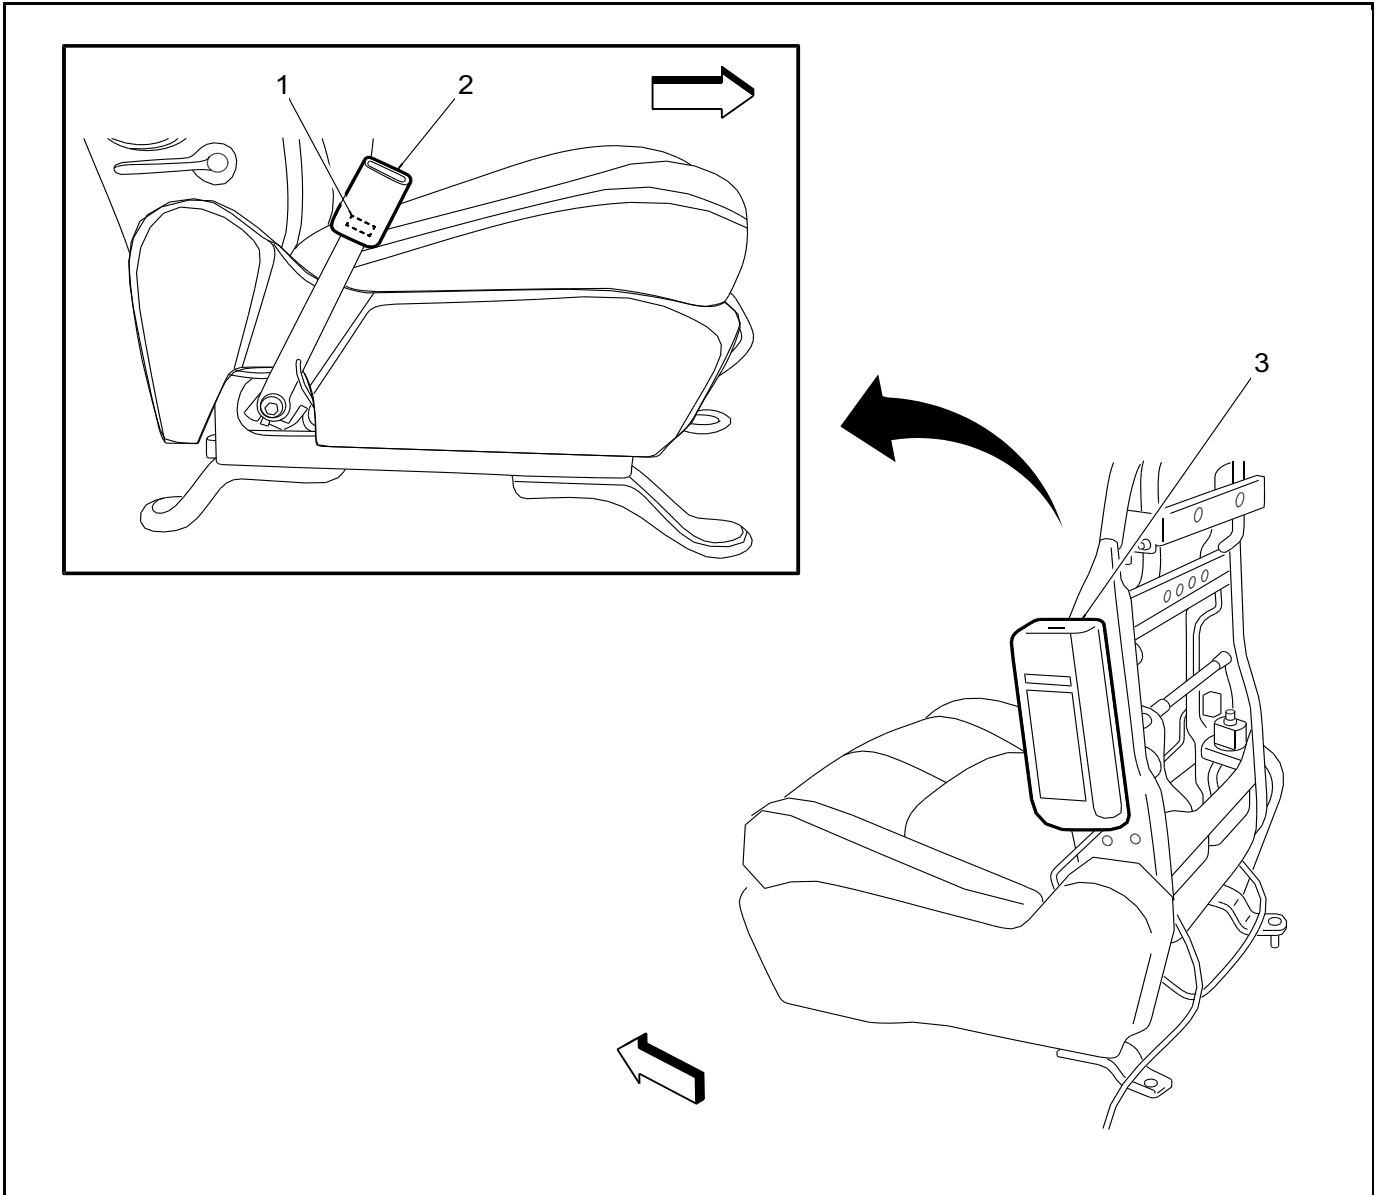


3946335

Items

- (1) B88D Seat Belt Switch - Driver
- (2) B153D Seat Belt Buckle - Driver

- (3) F106D Seat Side Air Bag - Driver

Passenger Seat Components

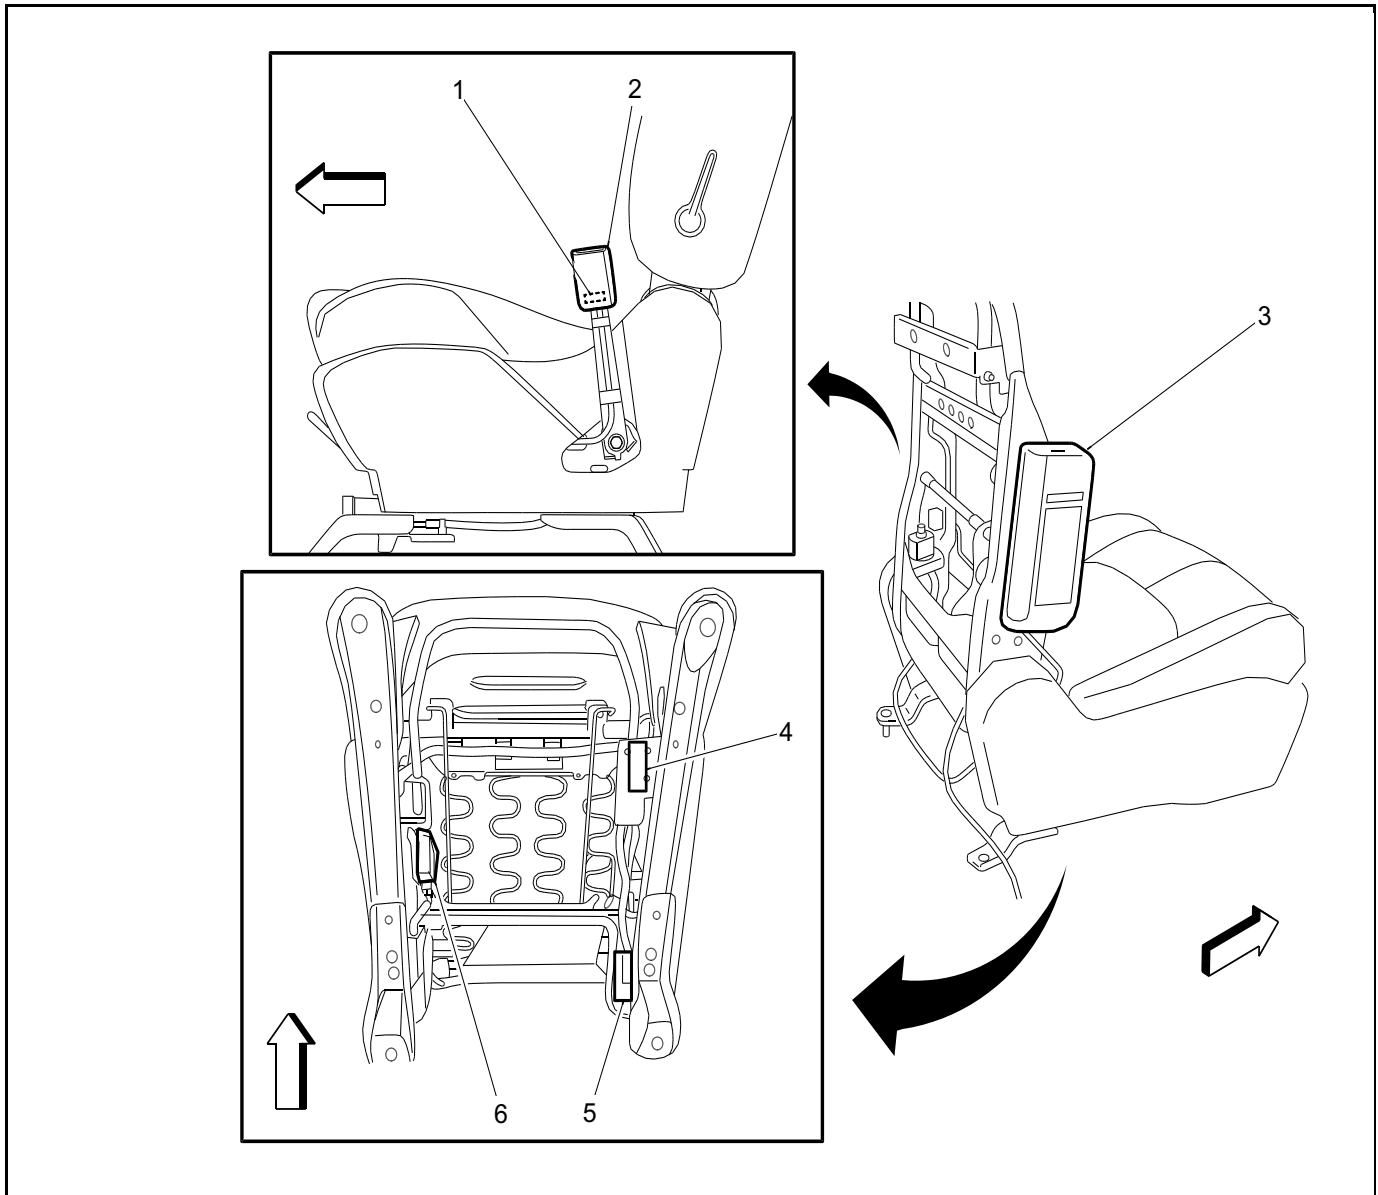


3946336

Items

- | | |
|---|---|
| (1) B88P Seat Belt Switch - Passenger | (5) B62P Seat Position Sensor - Passenger (2) |
| (2) B153P Seat Belt Buckle - Passenger | (6) K85 Passenger Presence Module |
| (3) F106P Seat Side Air Bag - Passenger | |
| (4) B62P Seat Position Sensor - Passenger (1) | |

Door Ajar Switches

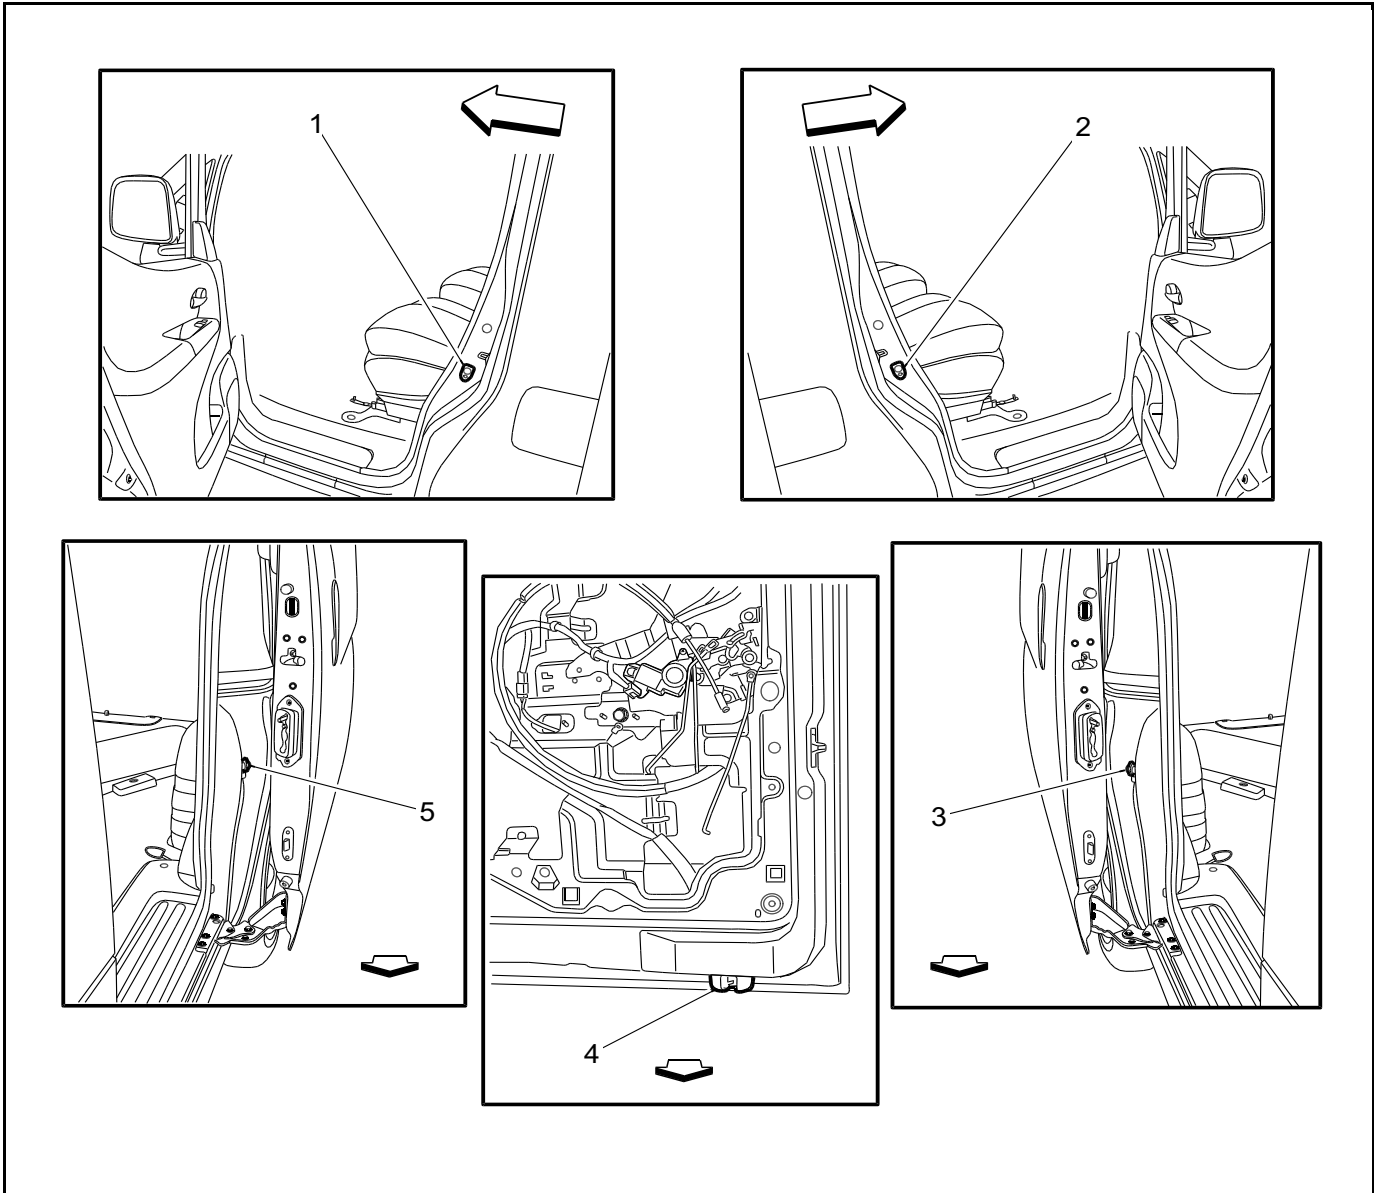


3946337

Items

- (1) B28D Door Ajar Switch - Driver
- (2) B28P Door Ajar Switch - Passenger
- (3) B28F Door Ajar Switch - Right Sliding
- (4) B28C Door Ajar Switch - Rear Cargo
- (5) B28E Door Ajar Switch - Left Sliding

Door Component Views
Driver Door Components

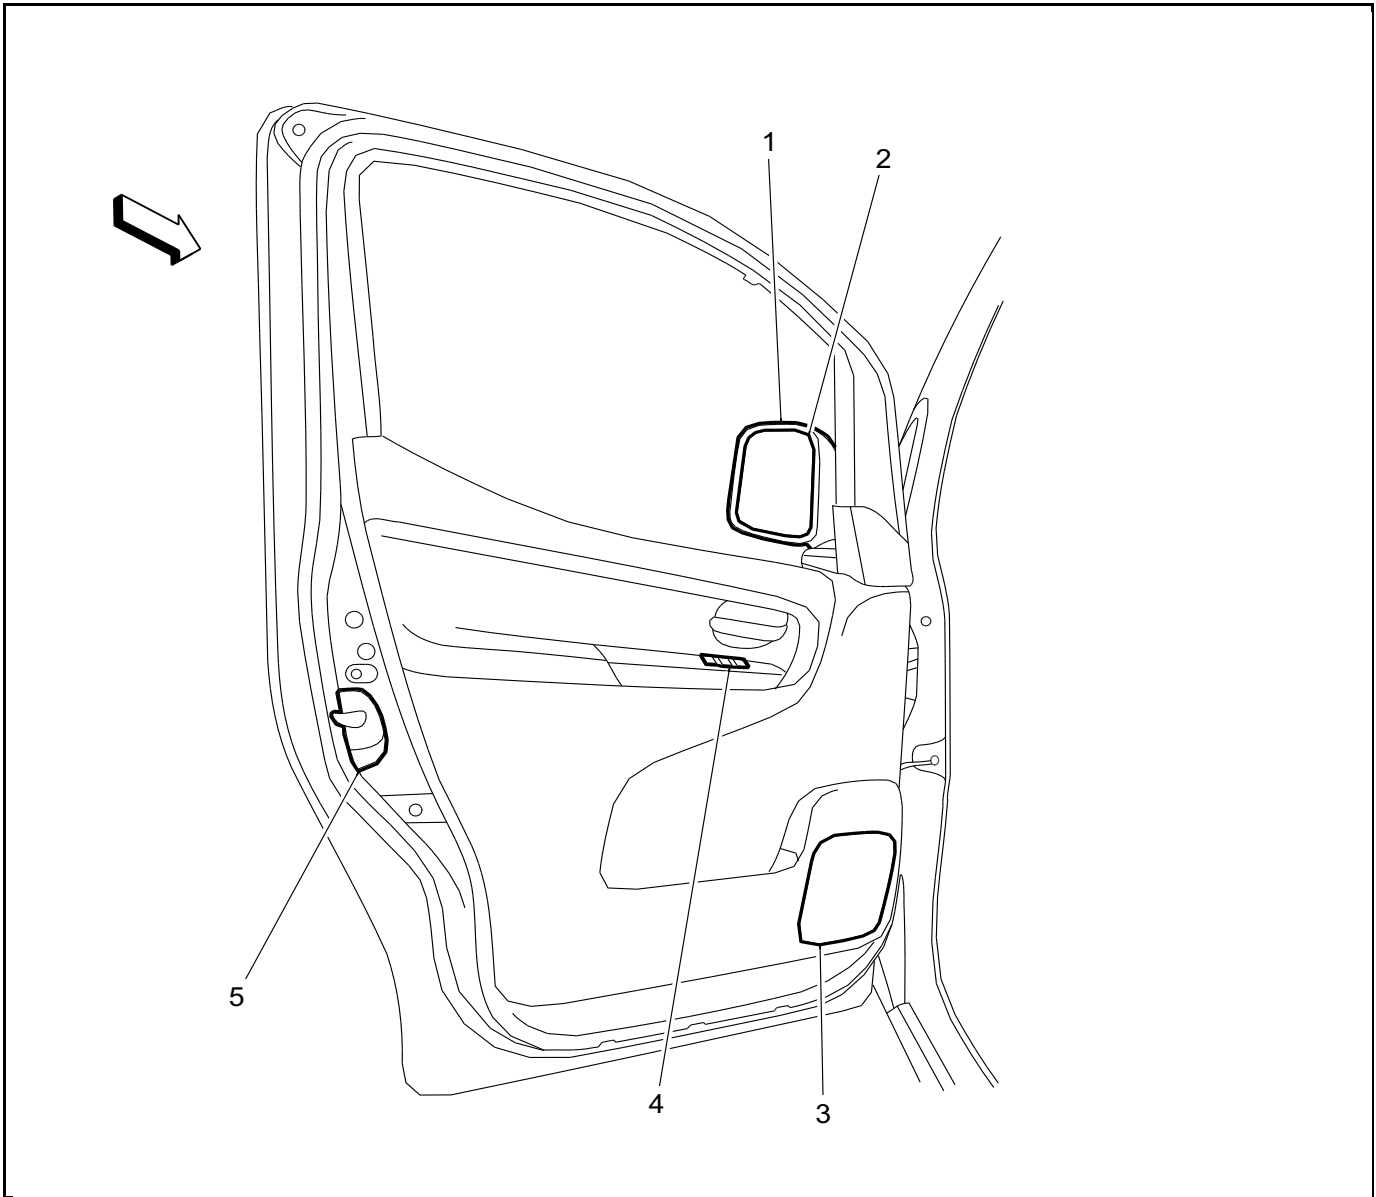


3946487

Items

- | | |
|---|--|
| (1) A9A Outside Rearview Mirror - Driver | (4) S101D Door Lock/Window Switch - Driver |
| (2) E17D Outside Rearview Mirror Glass - Driver
(DE5 or DR6) | (5) A23D Door Latch Assembly - Driver |
| (3) P19AG Speaker - Left Front Door | |

Passenger Door Components

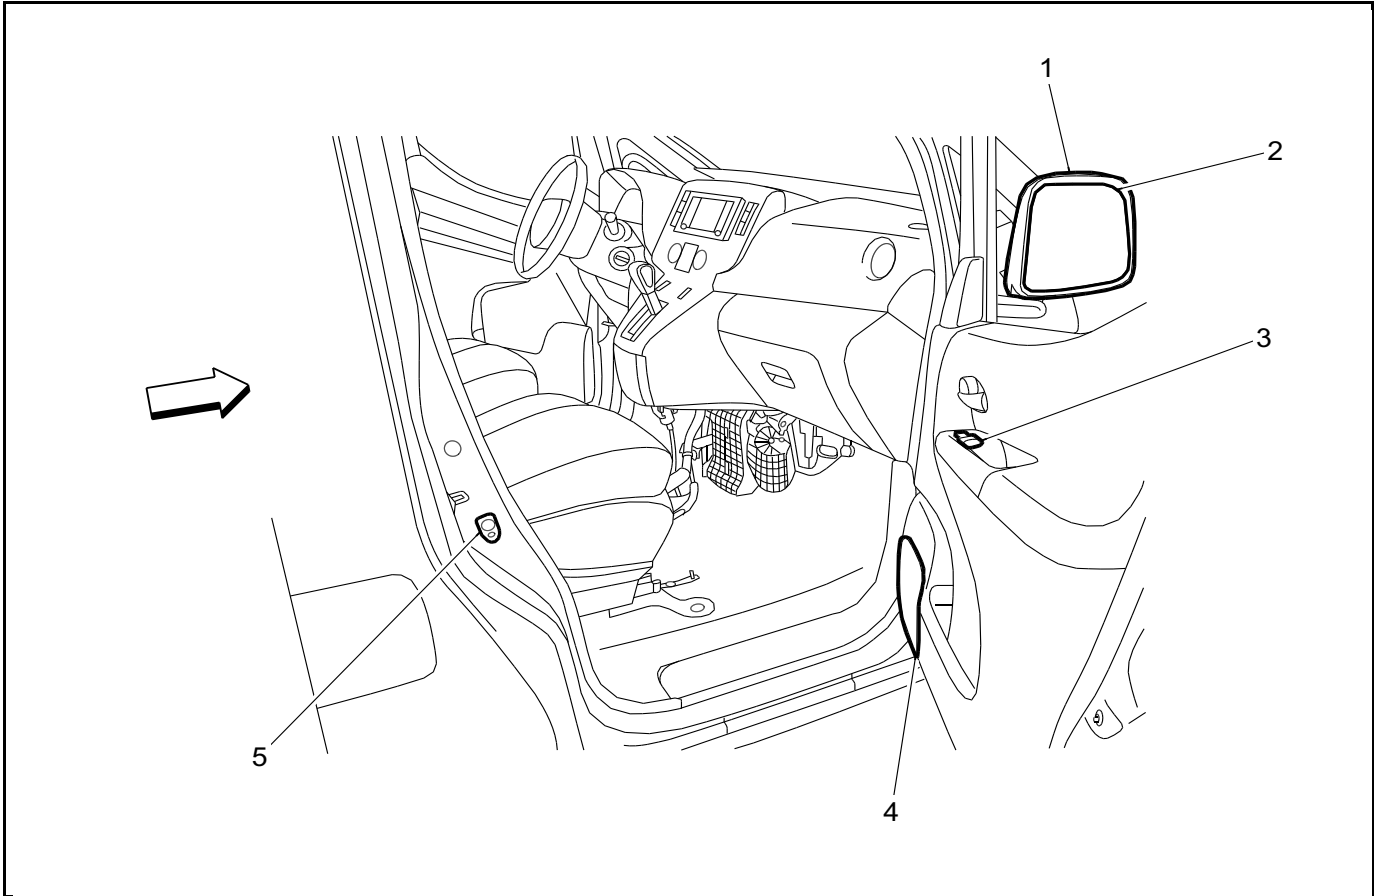


3946483

Items

- | | |
|---|---------------------------------------|
| (1) A9B Outside Rearview Mirror - Passenger | (4) P19AH Speaker - Right Front Door |
| (2) E17P Outside Rearview Mirror Glass - Passenger (DE5 or DR6) | (5) B28P Door Ajar Switch - Passenger |
| (3) S101P Door Lock/Window Switch - Passenger | |

Left Sliding Door Components

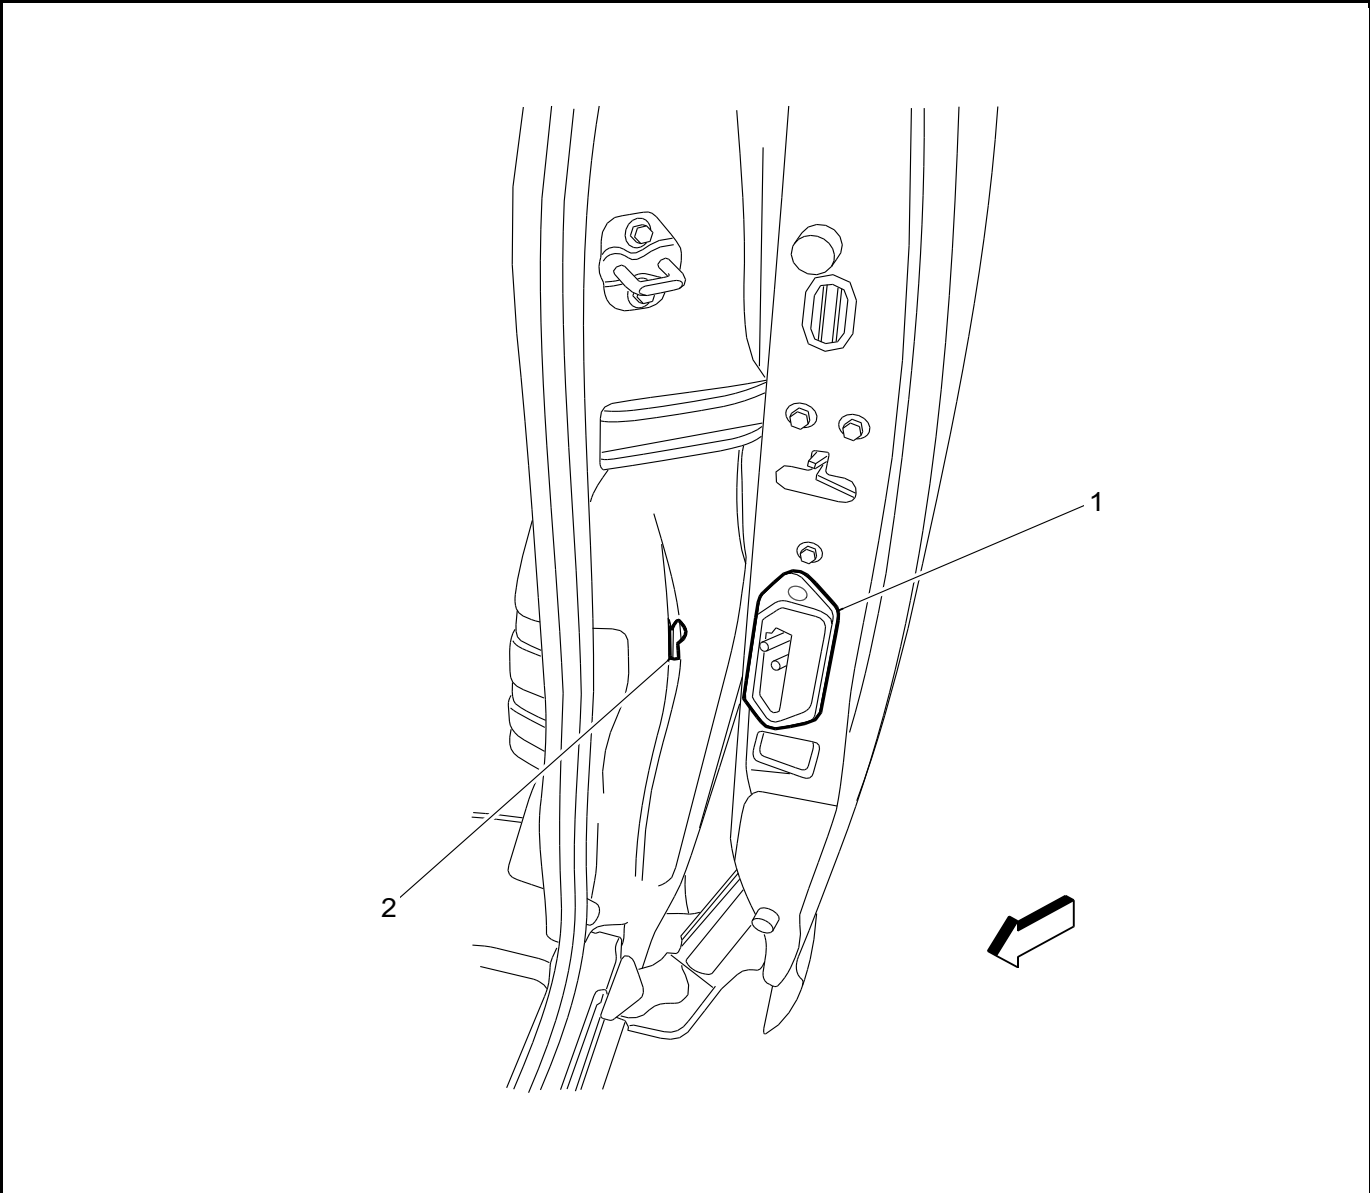


3946488

Items

- (1) X87LD Sliding Door Jamb Contact Plate - Left Door
- (2) B28E Door Ajar Switch - Left Sliding

Right Sliding Door Components

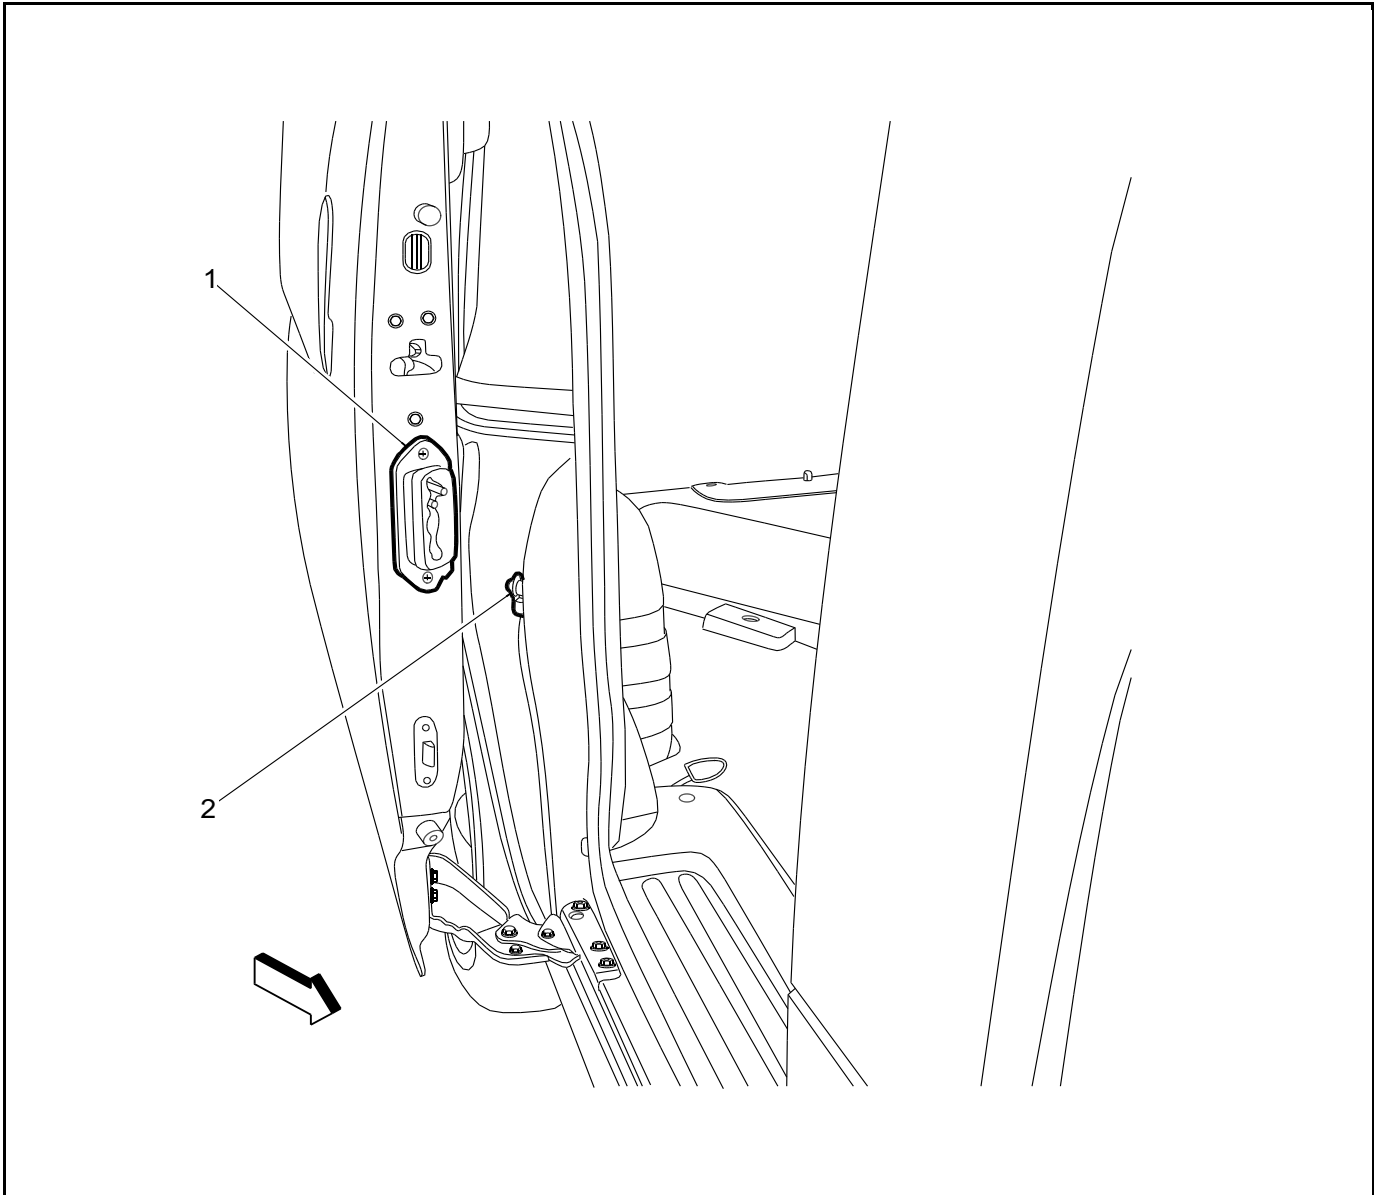


3946490

Items

- (1) X87RD Sliding Door Jamb Contact Plate - Right Door
- (2) B28E Door Ajar Switch - Left Sliding

Cargo Door Components

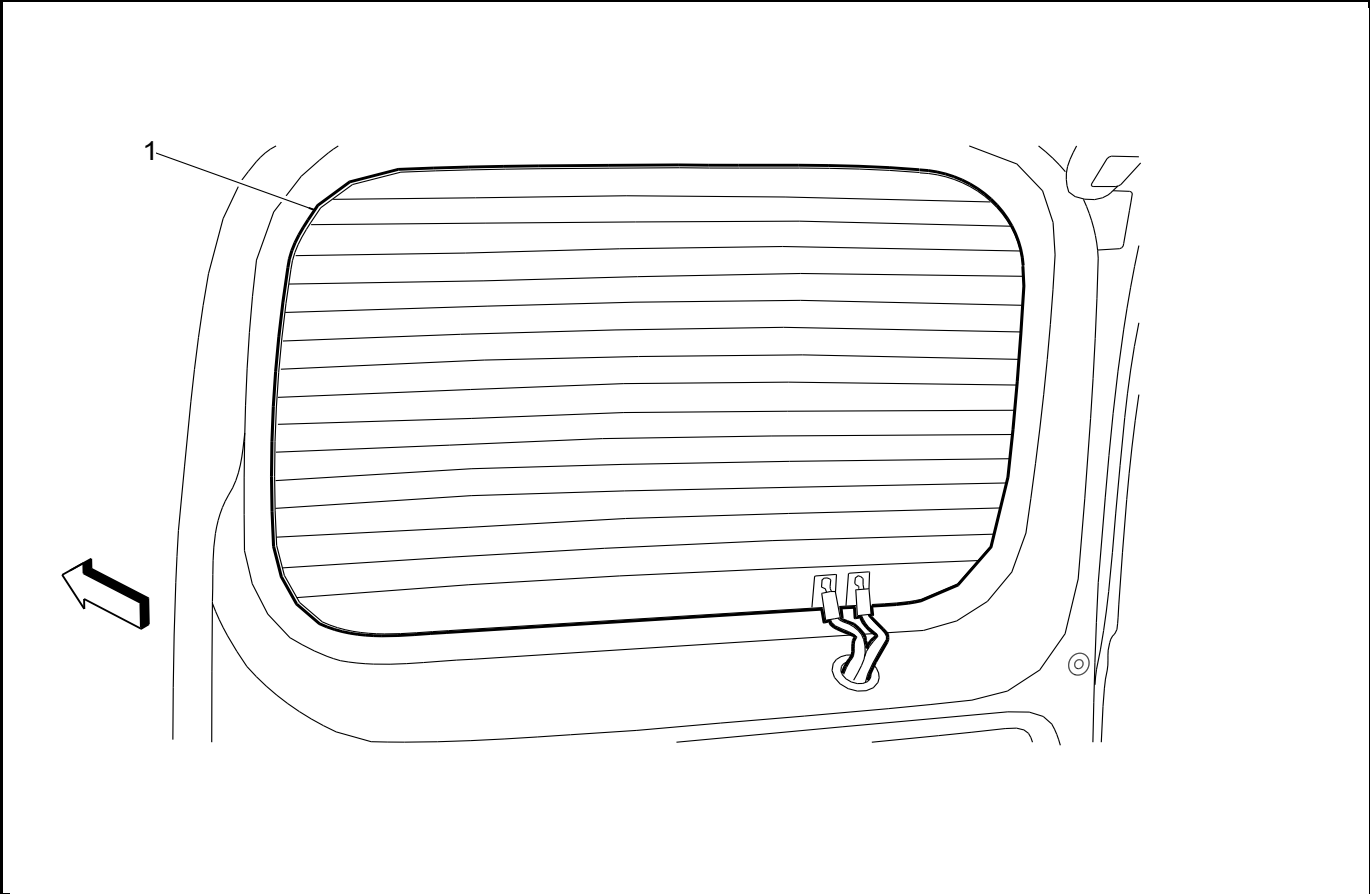


3946493

Items

- (1) E18 Rear Defogger Grid (C49)

Luggage Compartment/Rear of Vehicle Component Views Rear Exterior Components

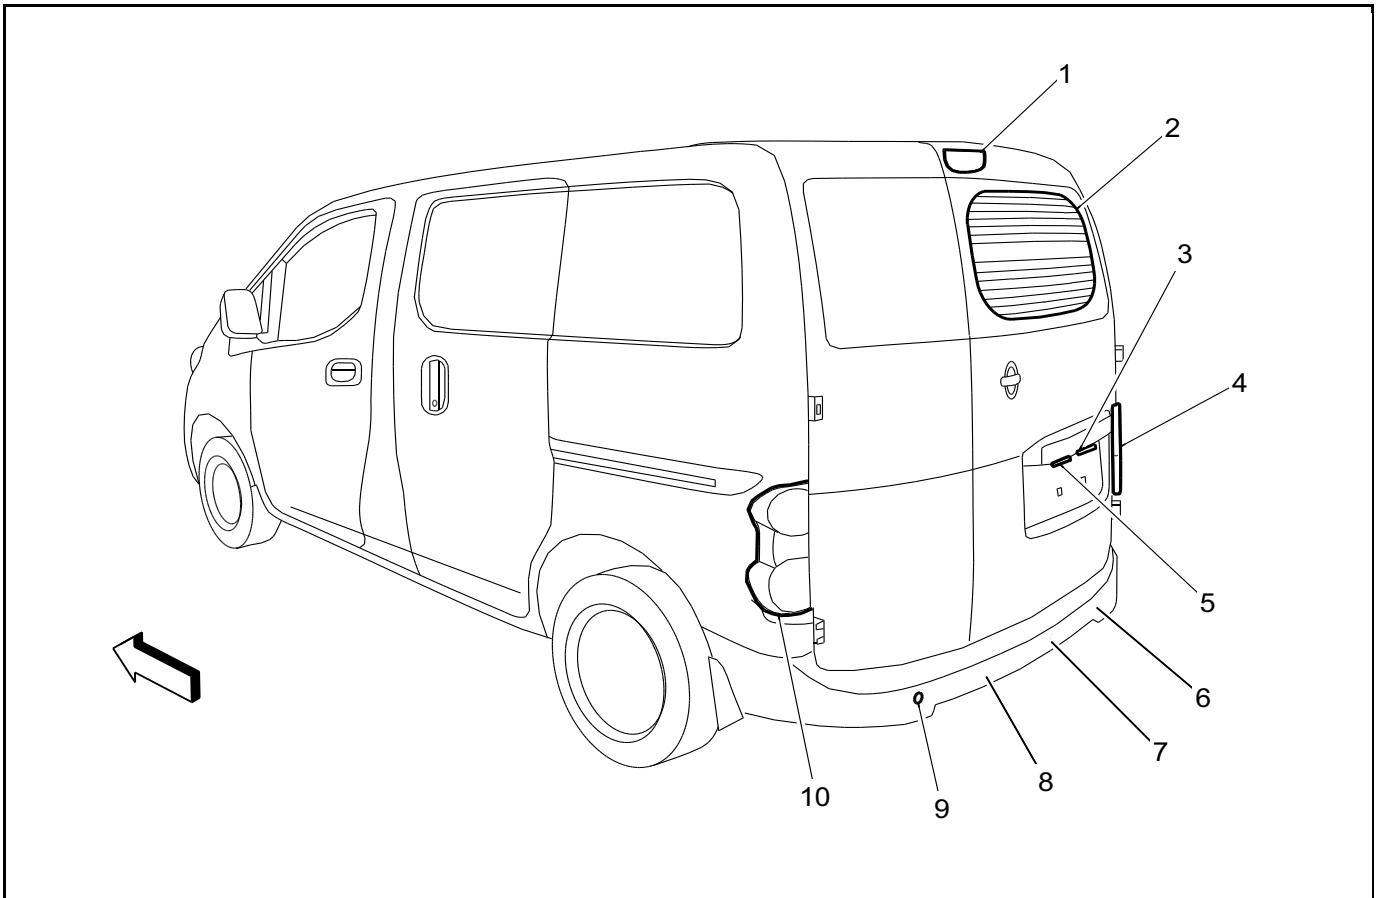


3946459

Items

- | | |
|---|--|
| (1) E6 Center High Mounted Stop Lamp | (7) B78F Rear Object Sensor - Right Middle (UD7) |
| (2) E18 Rear Defogger Grid (C49) | (8) B78E Rear Object Sensor - Left Middle (UD7) |
| (3) E7R License Plate Lamp - Right | (9) B78G Rear Object Sensor - Left Outer (UD7) |
| (4) E42R Tail Lamp Assembly - Right | (10) E42L Tail Lamp Assembly - Left |
| (5) E7L License Plate Lamp - Left | |
| (6) B78H Rear Object Sensor - Right Outer (UD7) | |

Wheels/Vehicle Underbody Component Views
Front Wheel Well Components

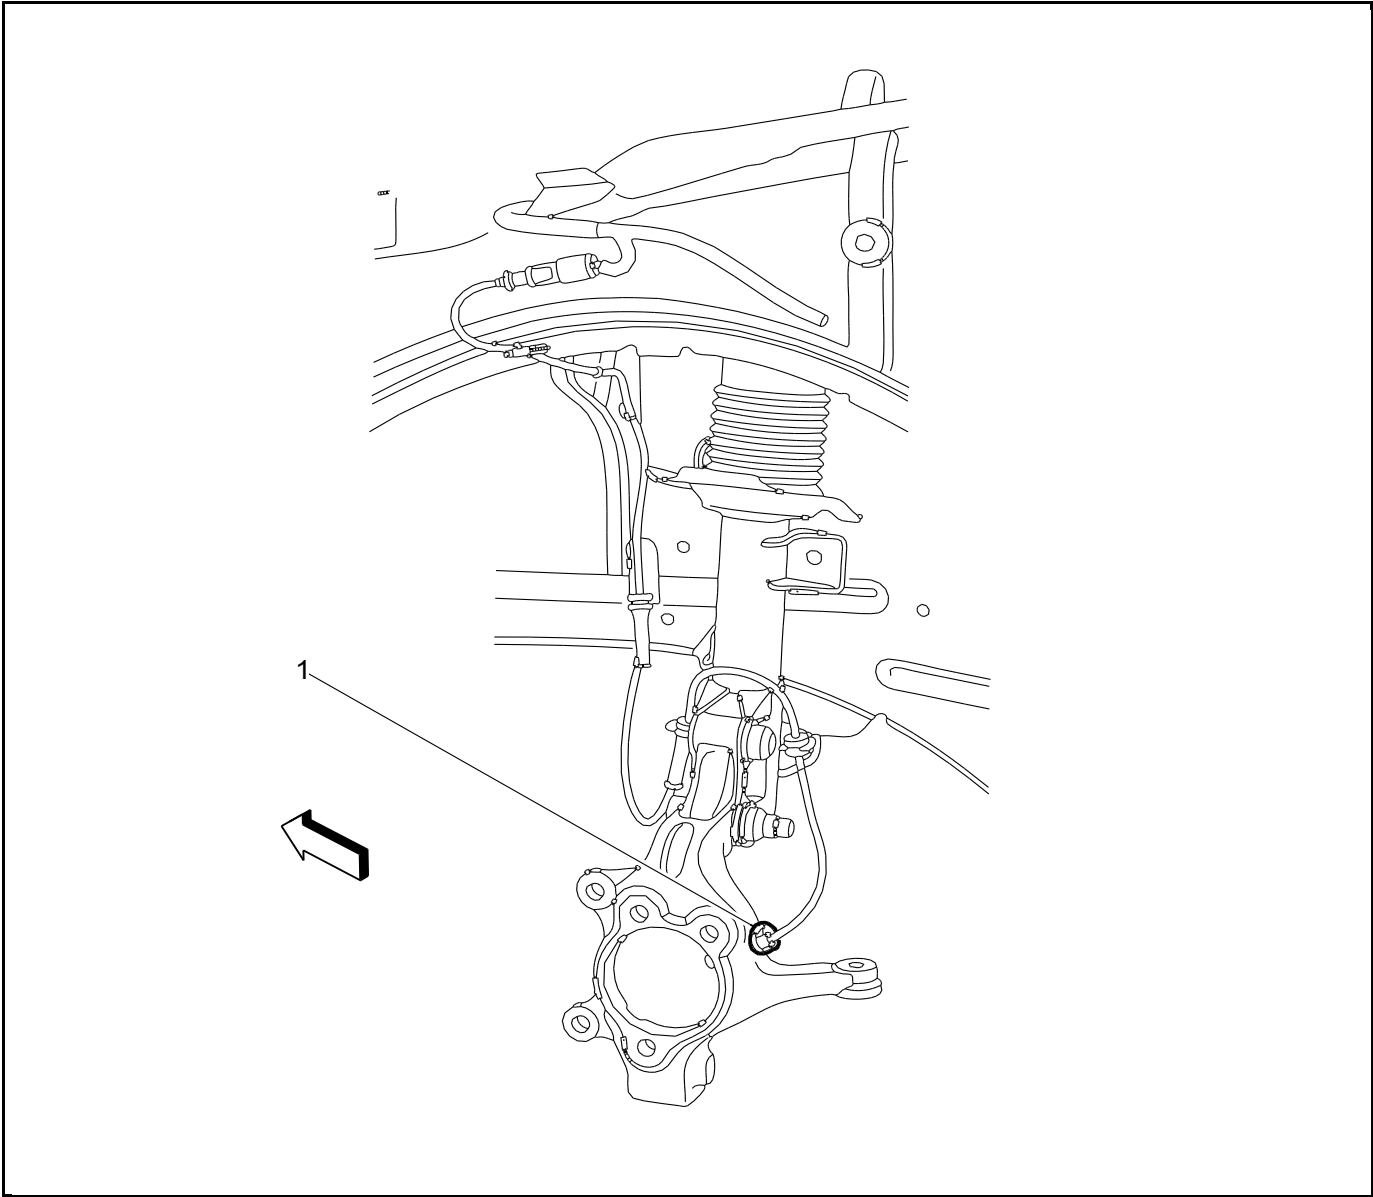


3946402

Items

- (1) B5LF Wheel Speed Sensor - Left Front

Rear Wheel Well Components

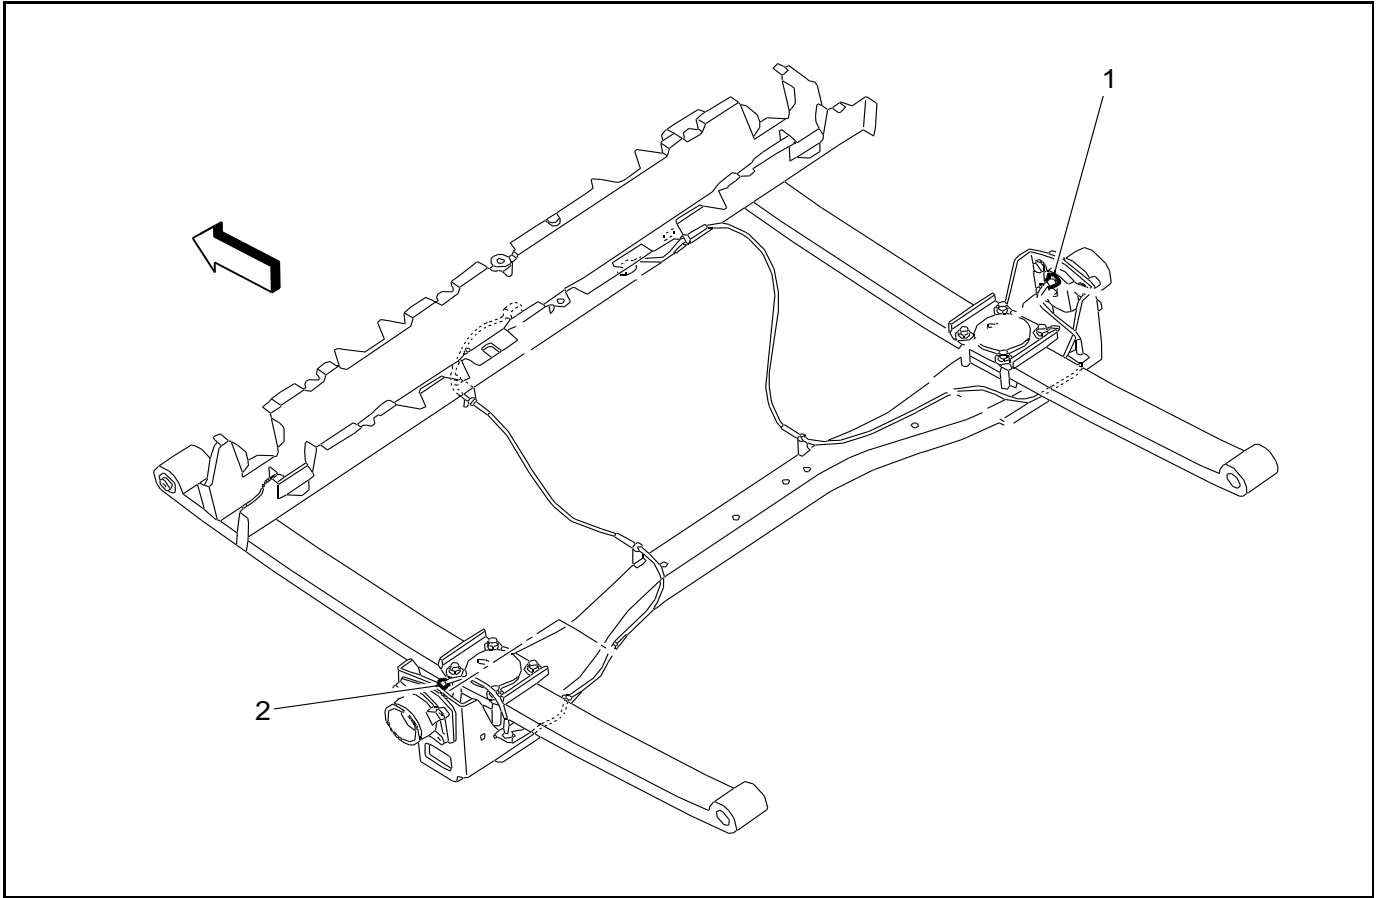


3946396

Items

- (1) B5RR Wheel Speed Sensor - Right Rear
- (2) B5LR Wheel Speed Sensor - Left Rear

Fuel Tank Components

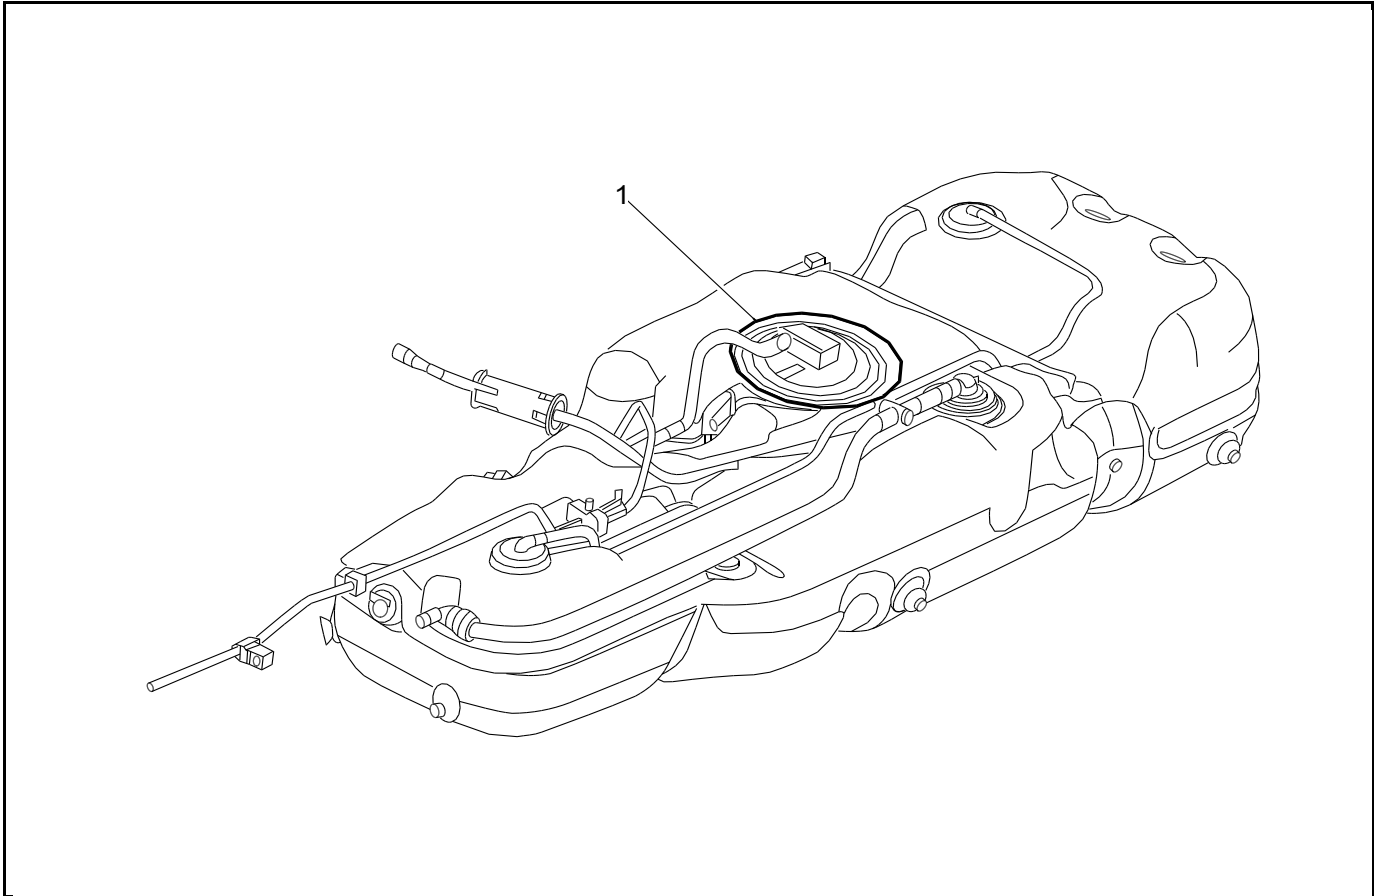


3946401

Items

- (1) A7 Fuel Pump and Level Sensor Assembly

Ground Views

G101, G102

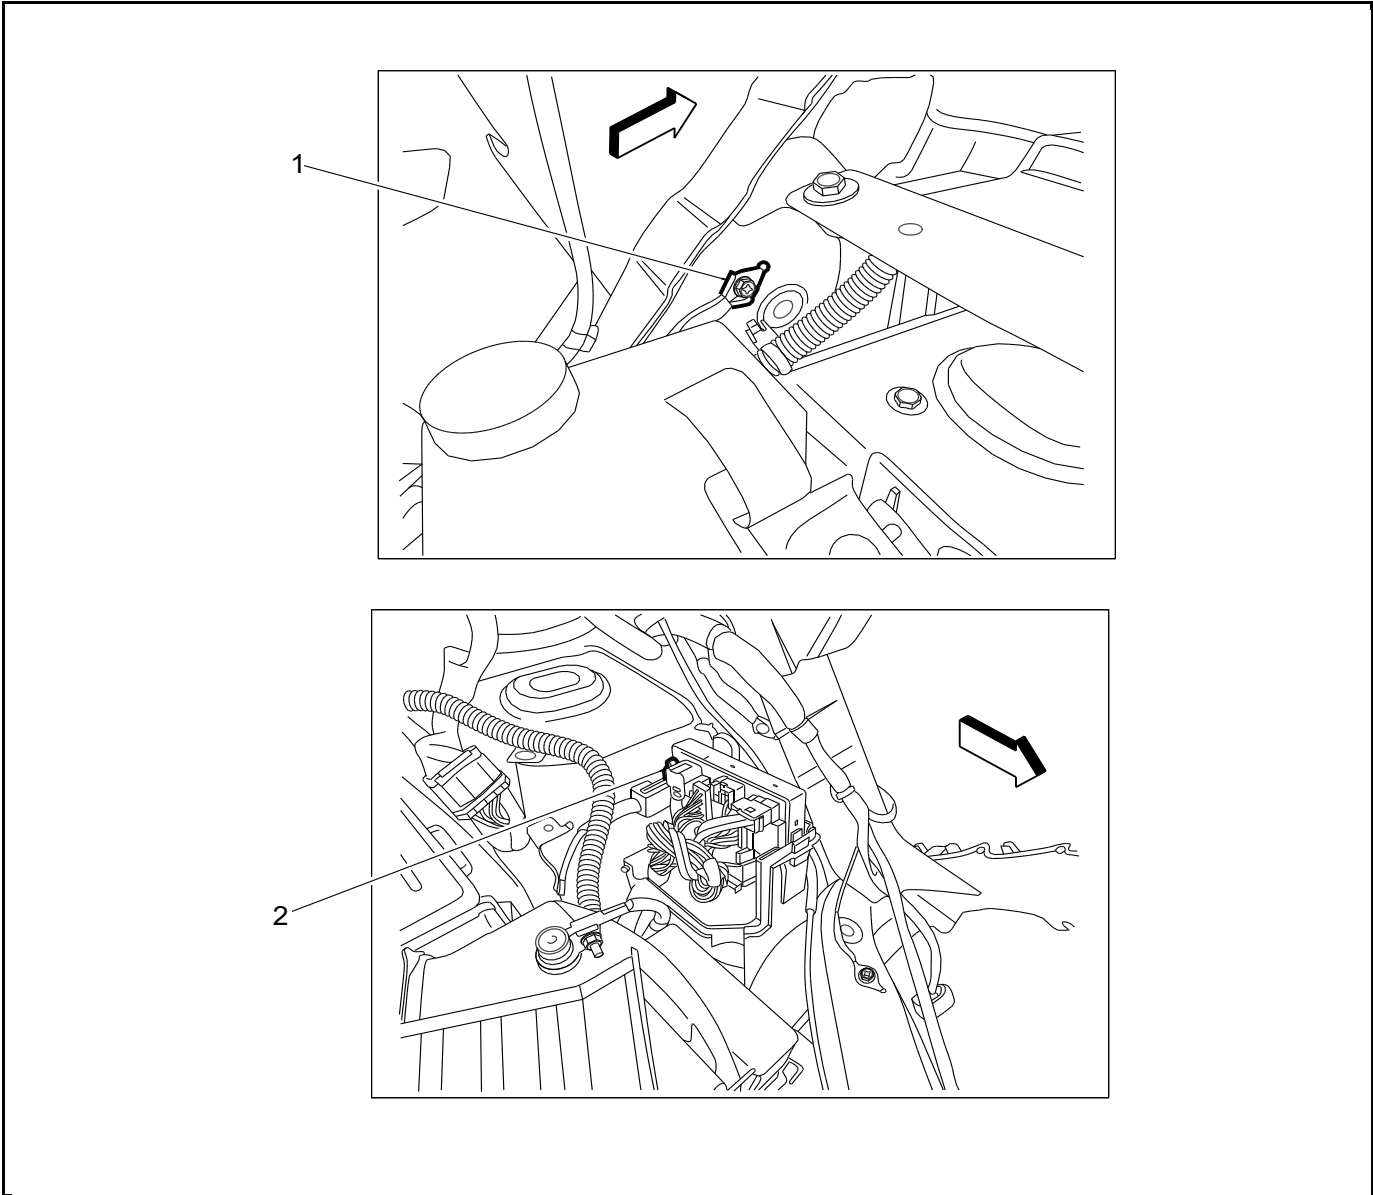


3944962

Items

- (1) G101
- (2) G102

G103, G104, G105

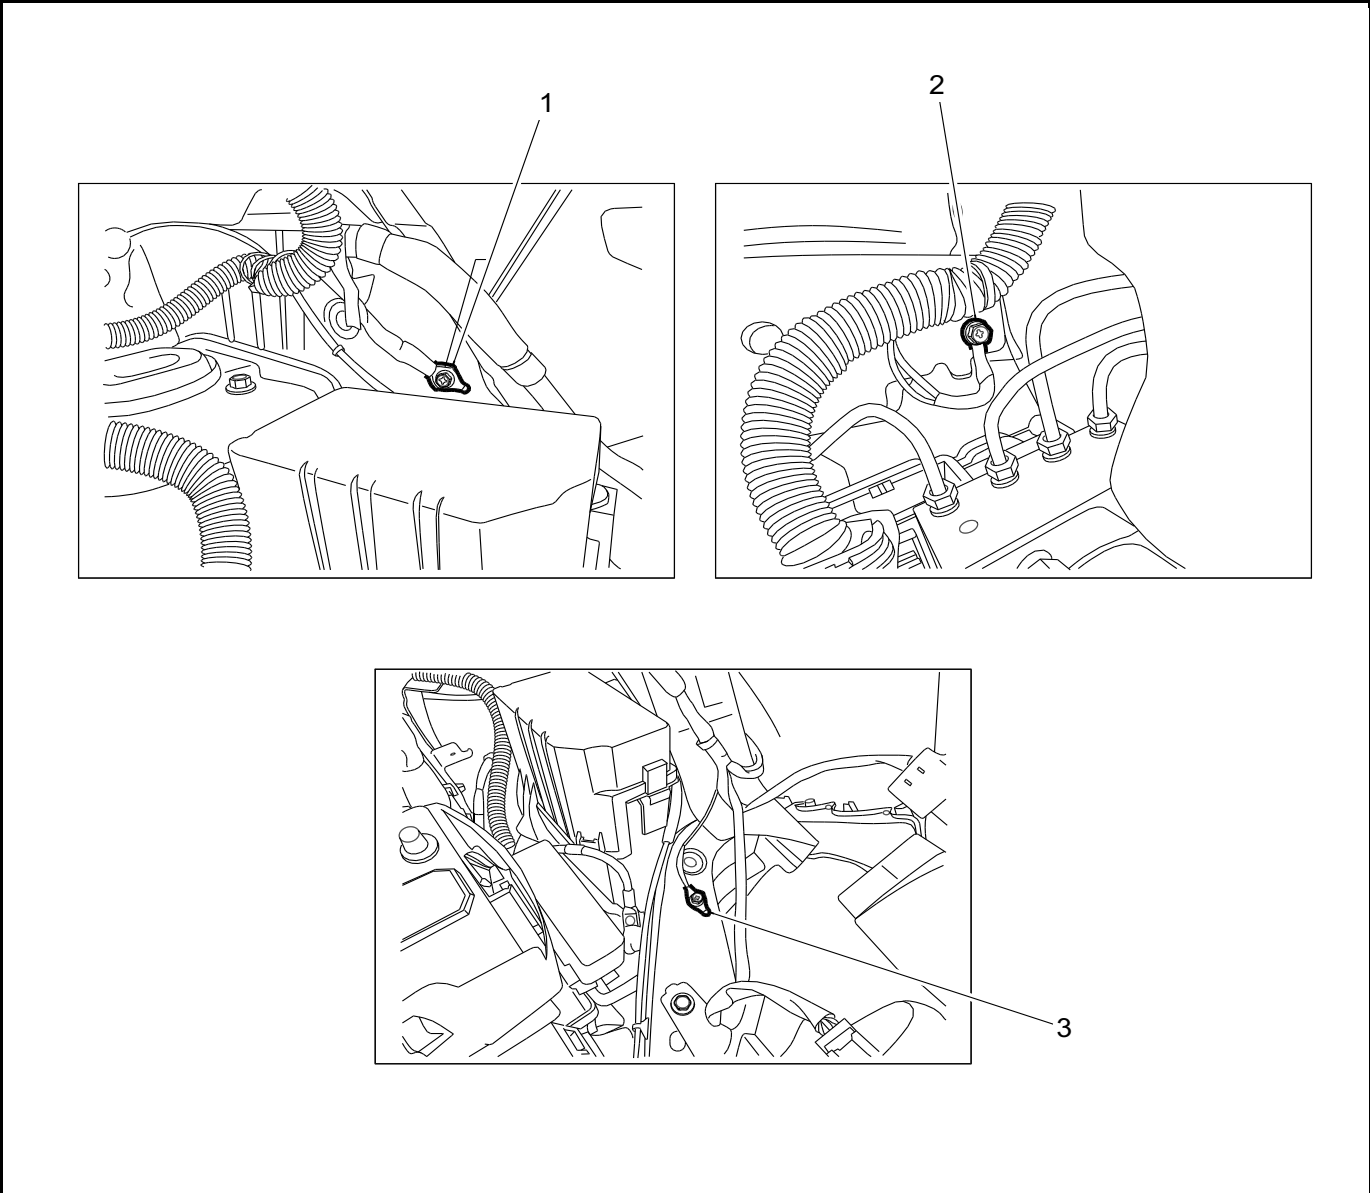



3944963

Items

- (1) G103
- (2) G104

- (3) G105

G106, G107

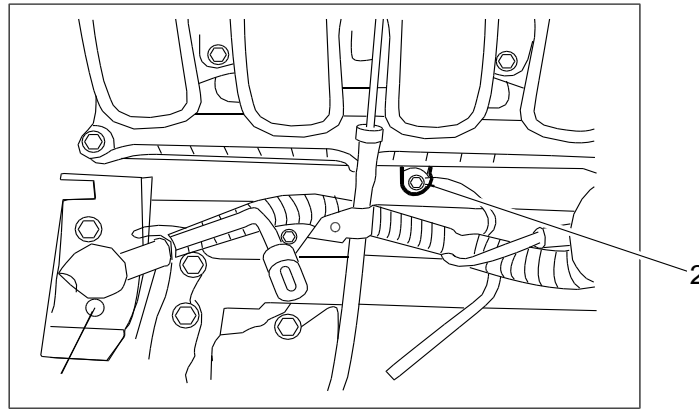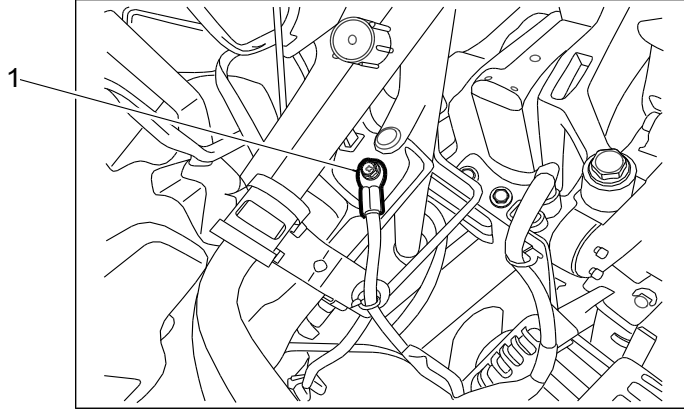


3944970

Items

- (1) G106
- (2) G107

G201, G202, G203, G204

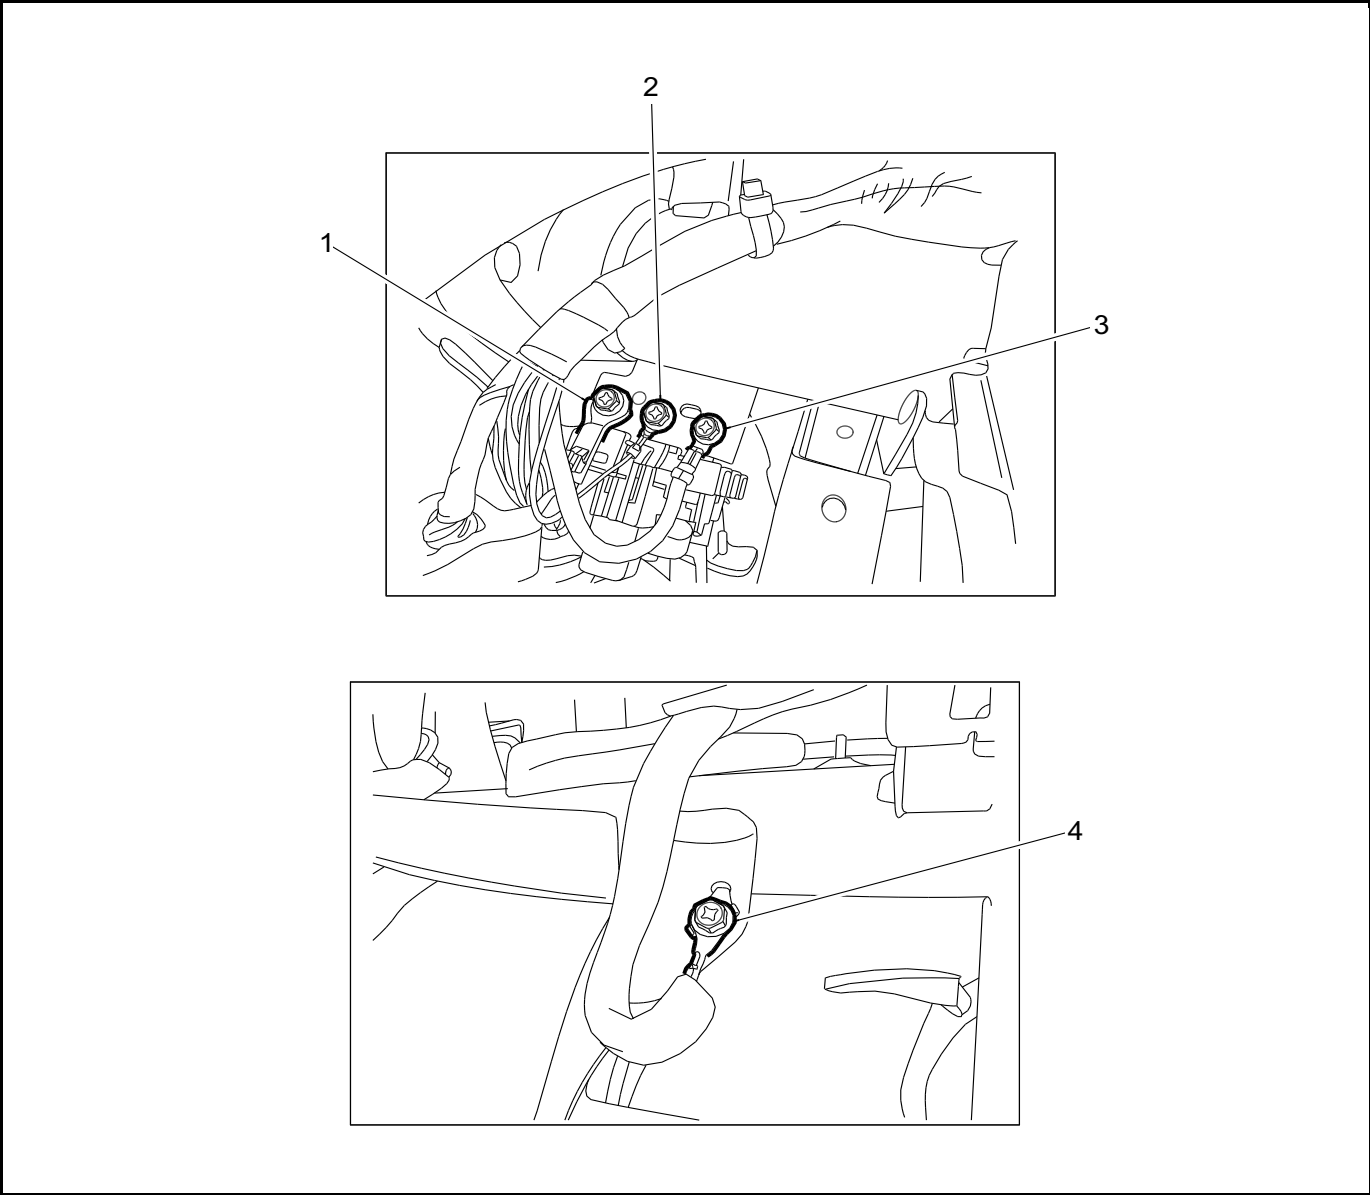


3944973

Items

- (1) G204
- (2) G201
- (3) G203

- (4) G202

G205

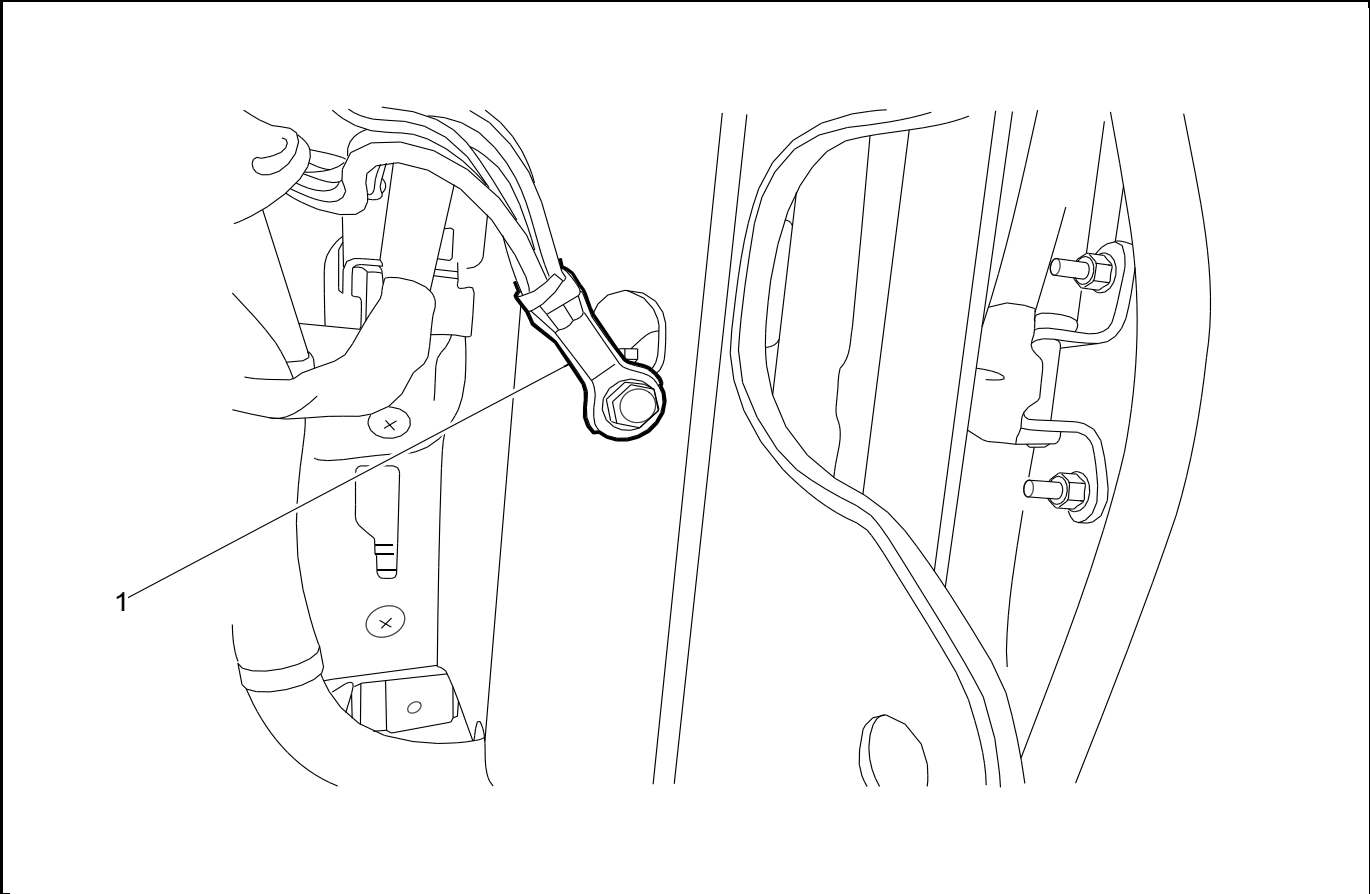


3945023

Items

- (1) G205

G301, G302, G303, G304

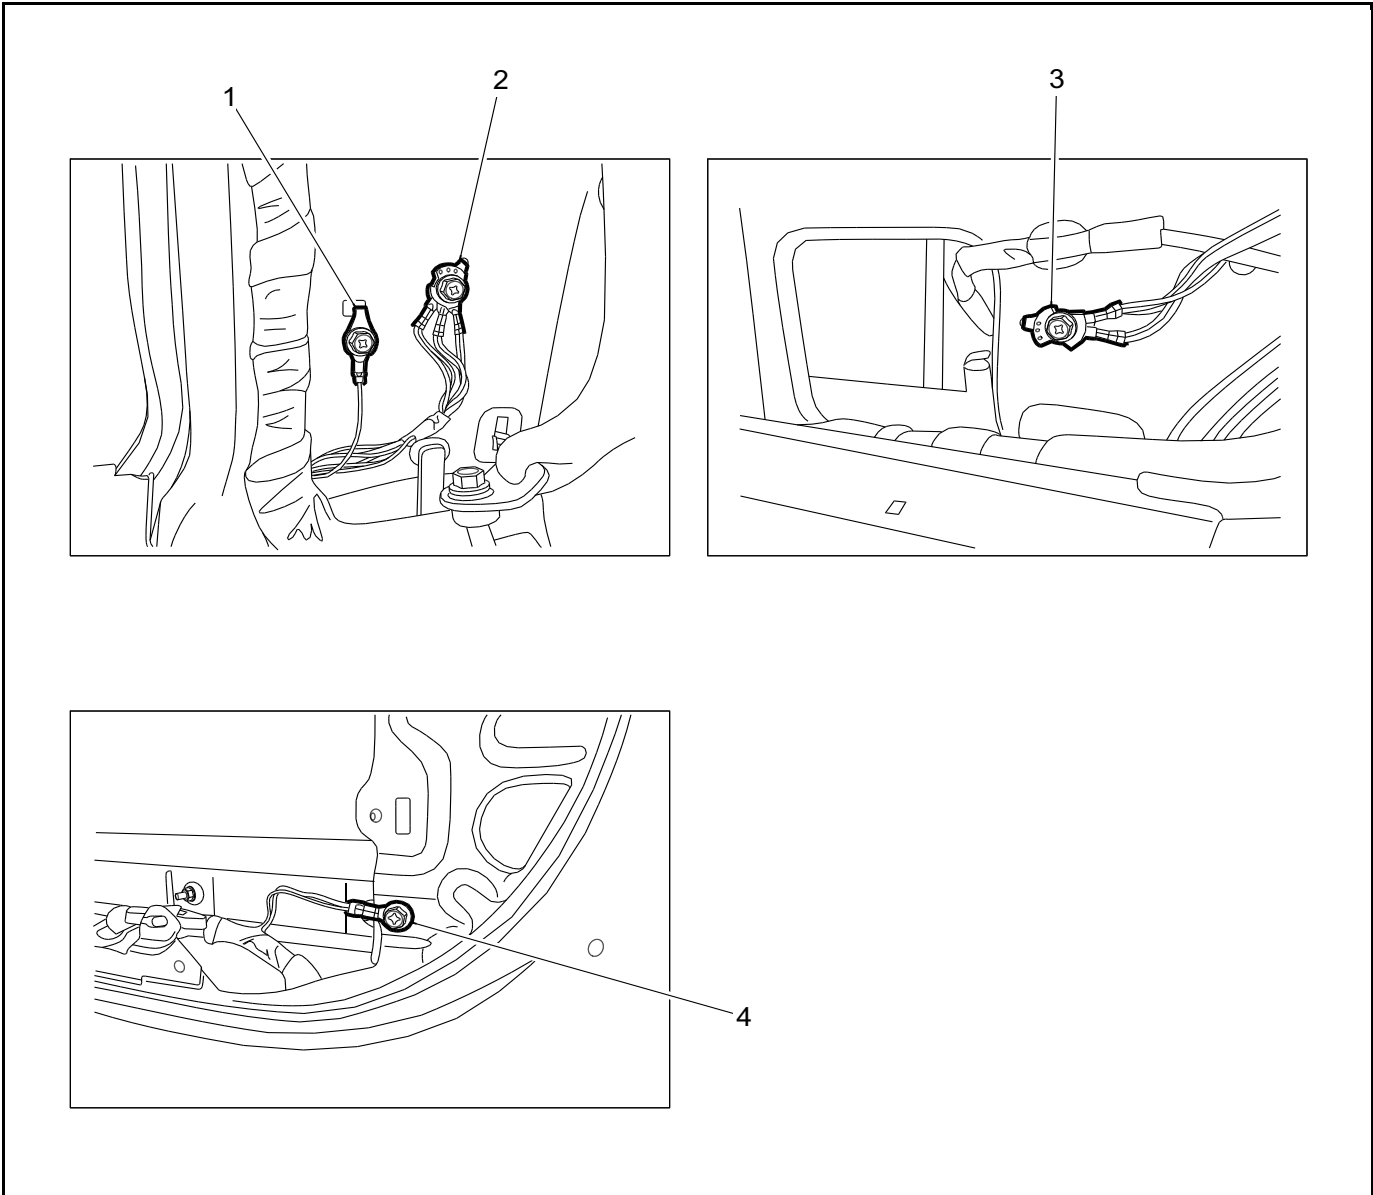


3945031

Items

- (1) G304
- (2) G301
- (3) G303

- (4) G302

G305, G307, G901

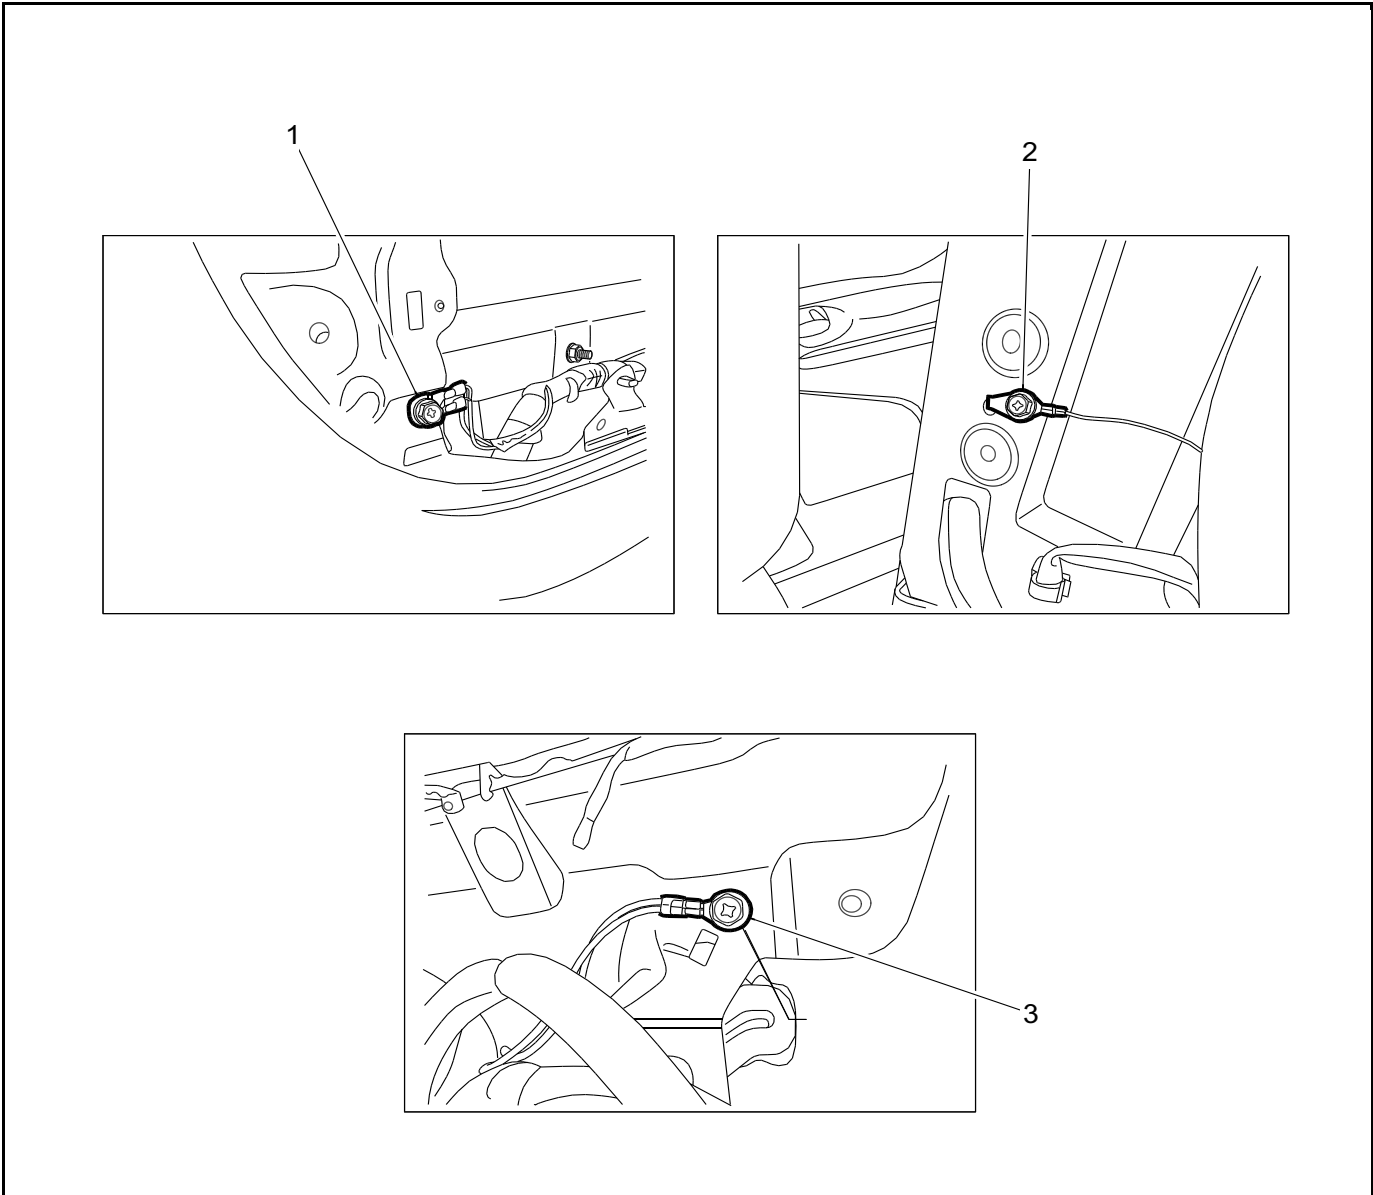


3945045

Items

- (1) G305
- (2) G307


- (3) G901

Electrical Center Identification Views
X50B Fuse Block - Underhood Auxiliary
Label

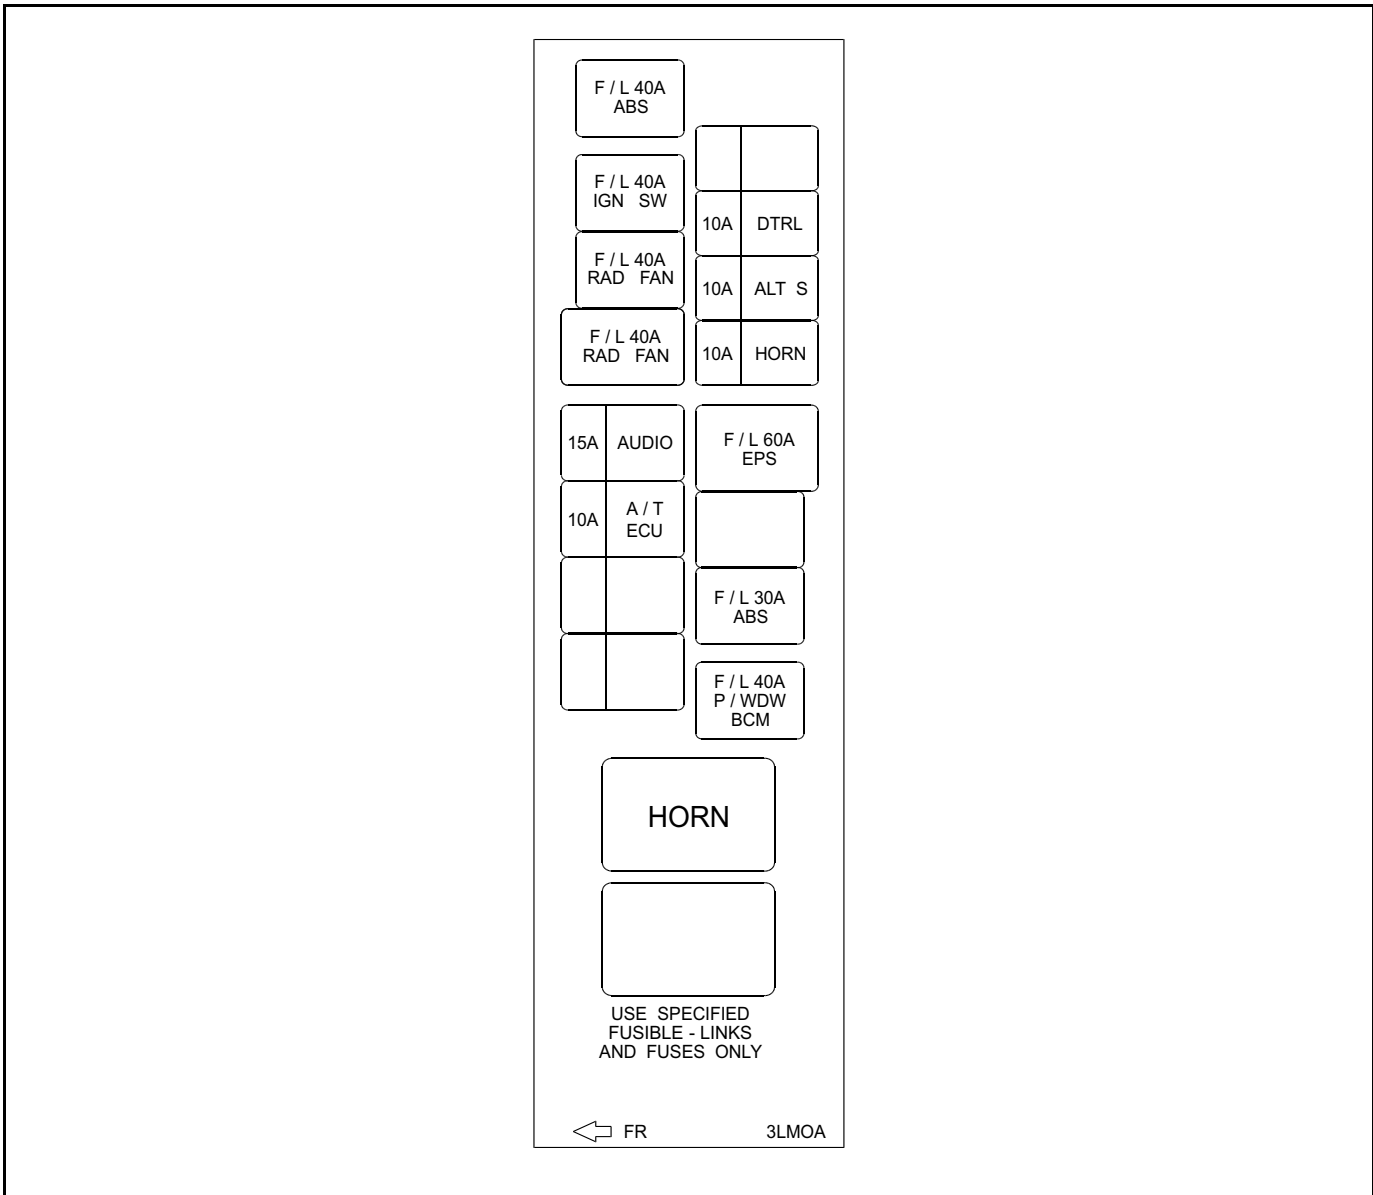

4232640

X50B Fuse Block - Underhood Auxiliary Top View

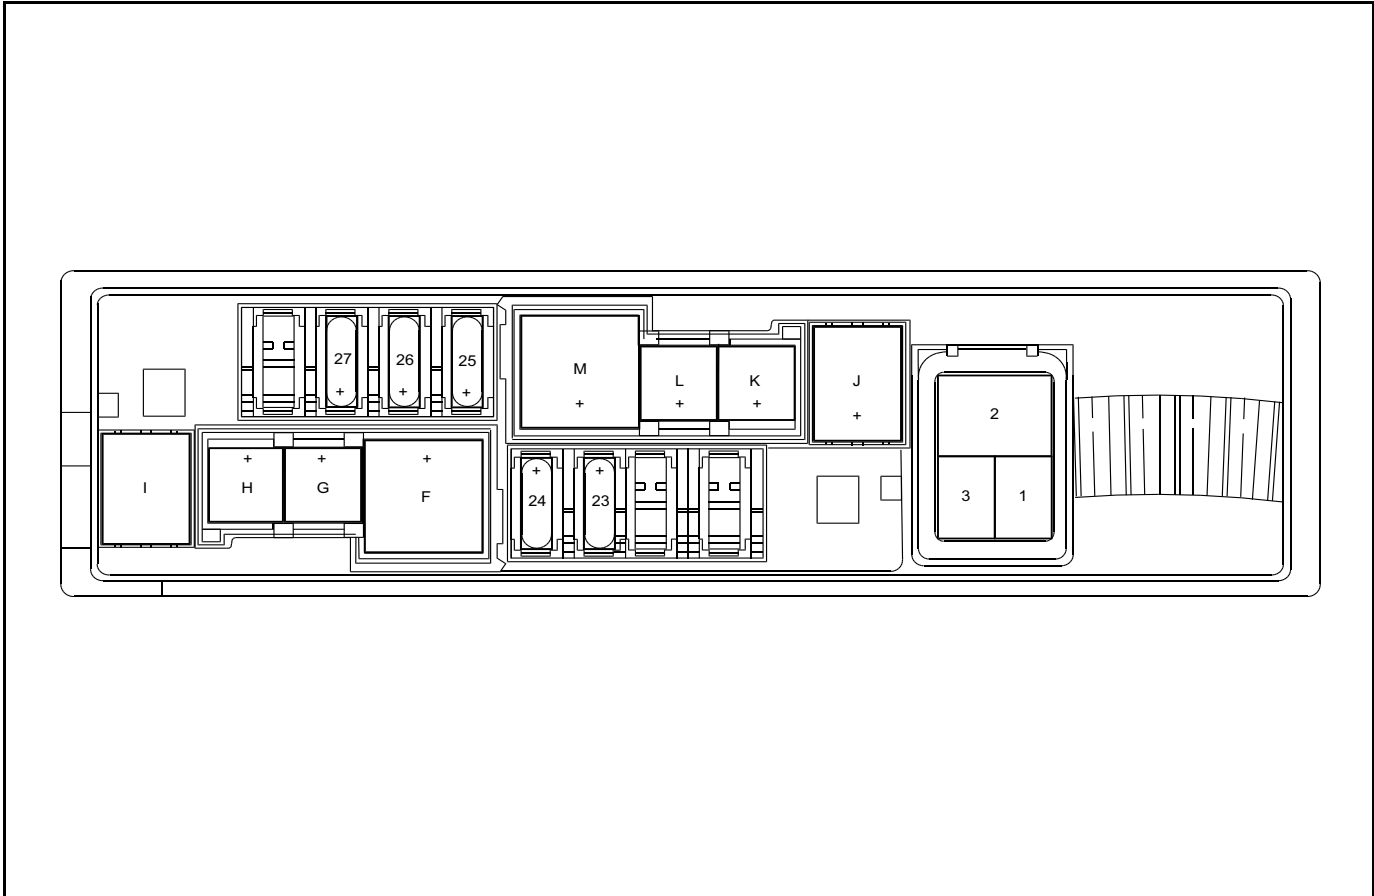

3943456

X50B Fuse Block – Underhood Auxiliary Usage

No.	Device Label Name	Device Assigned Name	Rating	Description
Fuses				
21	—	F21UB	—	• Not Used
22	—	F22UB	—	• Not Used
23	A/T ECU	F23UB	10A	• K71 Transmission Control Module
24	AUDIO	F24UB	15A	• A11 Radio • K82 Mobile Telephone Control Module (UPF)
25	HORN	F25UB	10A	• KR3 Horn Relay
26	ALT S	F26UB	10A	• G13 Generator
27	DTRL	F27UB	10A	• KR42C Daytime Running Lamps Relay 1
28	—	F28UB	—	• Not Used
F	RAD FAN	F6UB	40A	• G10R Cooling Fan Motor - Right
G	RAD FAN	F7UB	40A	• KR20J Cooling Fan Left High Speed Relay • KR20M Cooling Fan Left Medium Speed Relay
H	IGN SW	F8UB	40A	• S39 Ignition Switch
I	ABS	F9UB	40A	• K17 Electronic Brake Control Module
J	P/WDW BCM	F10UB	40A	• K9 Body Control Module
K	ABS	F11UB	30A	• K17 Electronic Brake Control Module
L	—	F12UB	—	• Not Used
M	EPS	F13UB	60A	• K43 Power Steering Control Module

X50B Fuse Block – Underhood Auxiliary Usage (cont'd)

No.	Device Label Name	Device Assigned Name	Rating	Description
Relays				
—	HORN	KR3 Horn Relay	—	• P12 Horn

X50B Fuse Block - Underhood Auxiliary Wire Entry

Connector Part Information

Harness Type: Engine Compartment
 OEM Connector: 24381-C9900
 Service Connector: Service by Component Assembly - See Part Catalog
 Description: Wire Entry Fuse Block


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Not Available	Not Available	Not Available	Not Available

X50B Fuse Block - Underhood Auxiliary Wire Entry


Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
21-22	—	—	—	Not Used	—	—
23	—	D-BU	DA53	Battery Positive Voltage	I	—
24	—	RD	RA01	Battery Positive Voltage	I	—
25	—	GY	MH01	Battery Positive Voltage	I	—
26	—	BN	DA23	Battery Positive Voltage	I	—
27	—	L-GN	LA42	Battery Positive Voltage	I	—
28	—	—	—	Not Used	—	—
F	—	RD	AR09	Battery Positive Voltage	I	—
G	—	GN	DA12	Battery Positive Voltage	I	—
H	—	D-BU	DA11	Battery Positive Voltage	I	—
I	—	YE	BS01	Battery Positive Voltage	I	—
J	—	YE	DA09	Battery Positive Voltage	I	—
K	—	WH	BS02	Battery Positive Voltage	I	—
L	—	—	—	Not Used	—	—
M	—	RD	PS01	Battery Positive Voltage	I	—

X70A Relay Block - Underhood Label

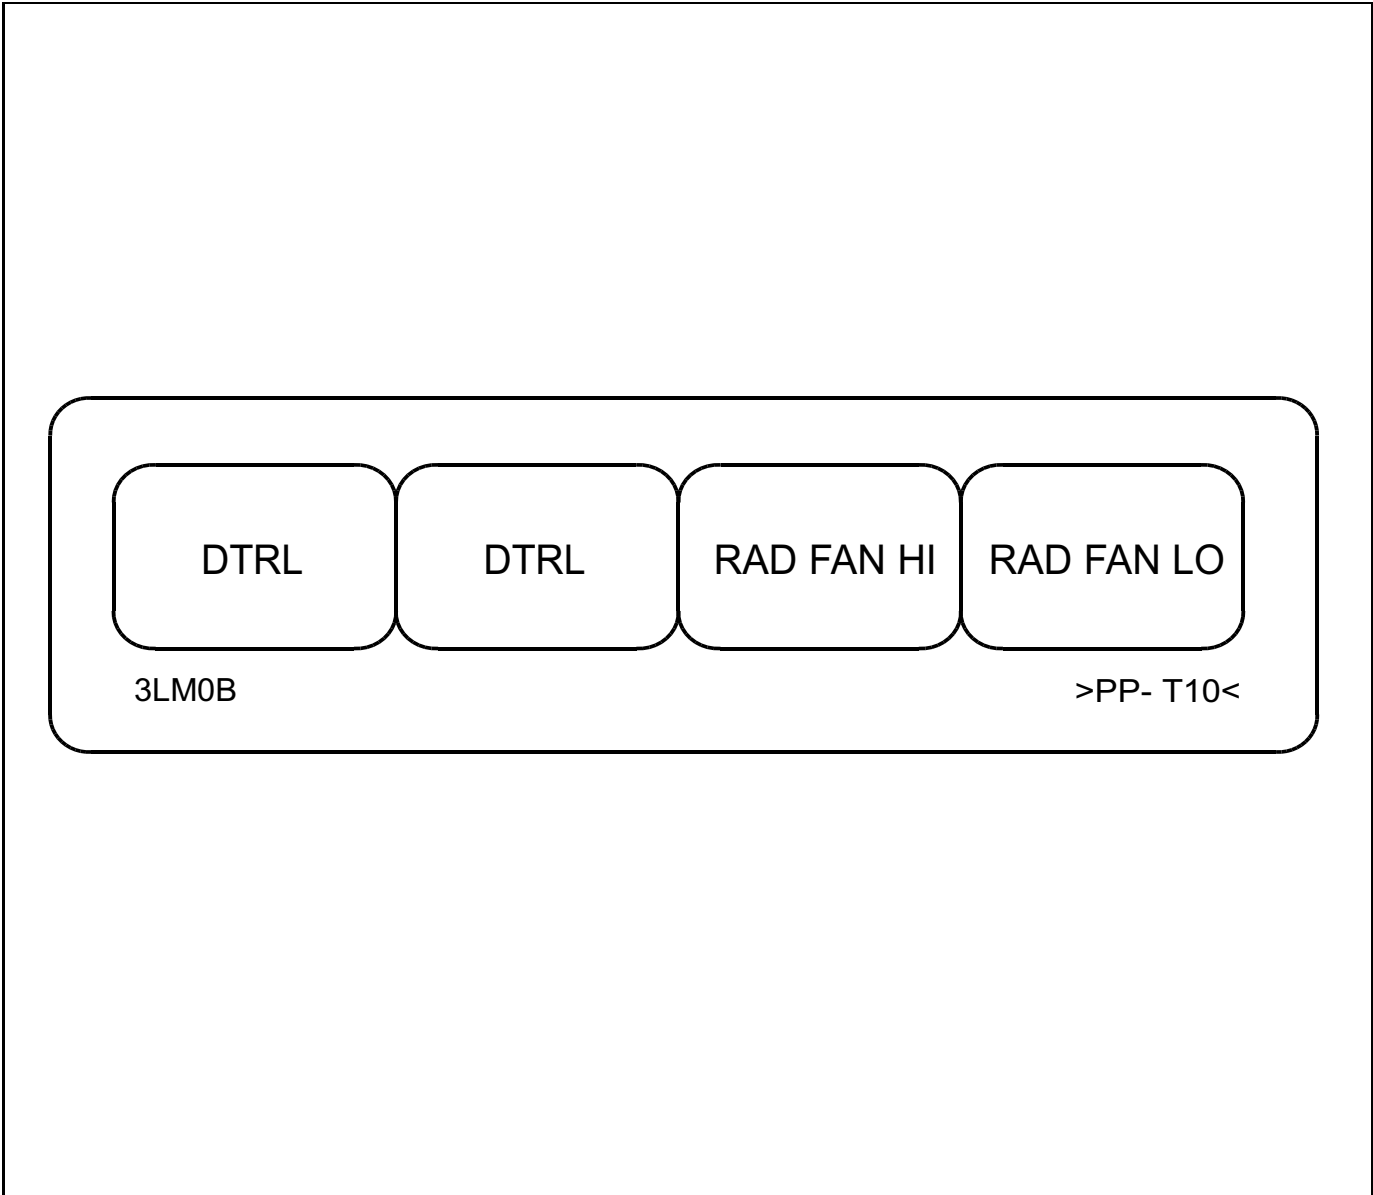

4232653

X70A Relay Block - Underhood Top View

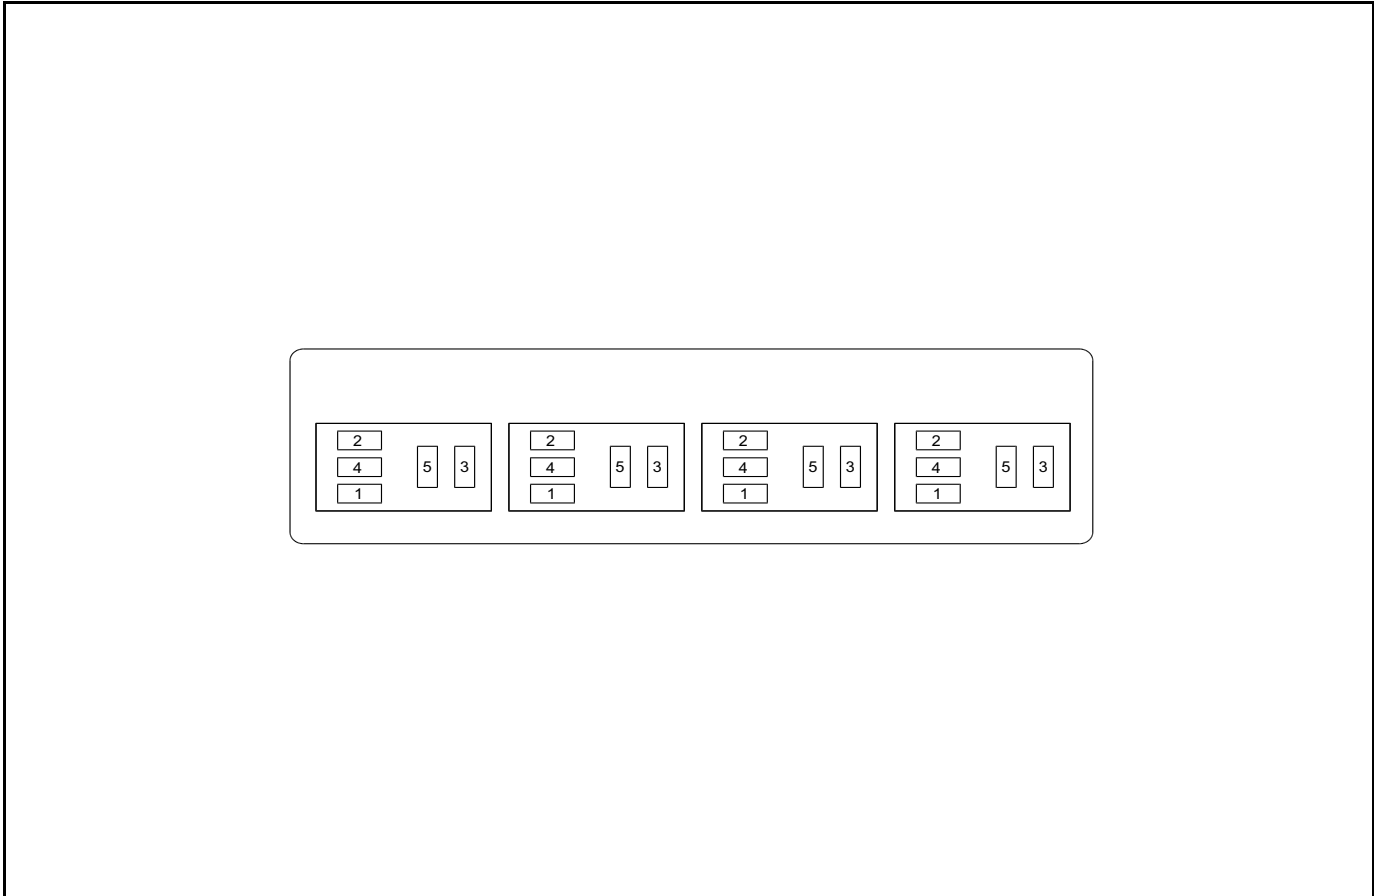

3943458

X70A Relay Block – Underhood Usage

No.	Device Label Name	Device Assigned Name	Rating	Description
Relays				
1	DTRL	KR42D Daytime Running Lamps Relay 2	—	<ul style="list-style-type: none"> E13L Headlamp - Left E13R Headlamp - Right
2	DTRL	KR42C Daytime Running Lamps Relay 1	—	<ul style="list-style-type: none"> E13L Headlamp - Left E13R Headlamp - Right
3	RAD FAN HI	KR20N Cooling Fan Right Medium Speed Relay	—	<ul style="list-style-type: none"> G10R Cooling Fan Motor - Right
4	RAD FAN LO	KR20C Cooling Fan Low Speed Relay	—	<ul style="list-style-type: none"> G10L Cooling Fan Motor - Left G10R Cooling Fan Motor - Right

X70A Relay Block - Underhood Wire Entry

Connector Part Information

Harness Type: Engine Compartment
 OEM Connector: 24388-40F00
 Service Connector: Service by Component Assembly - See Parts Catalog
 Description: Wire Entry Fuse Block


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
Not Available	Not Available	Not Available	Not Available	Service by Component Assembly - See Parts Catalog	Not Available	Not Available	Not Available

X70A Relay Block - Underhood Wire Entry

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1_1	—	PK	LA44	Headlamp High Beam Relay Supply Voltage Headlamp Low Beam Relay Supply Voltage		EF7 Z49
1_2	—	BK	LAE3	Ground		-
1_3	—	L-BU YE	LA45 LA03	Headlamp Low Beam Relay Supply Voltage Headlamp High Beam Relay Supply Voltage		EF7 Z49
1_4	—	—	—	Not Used	—	—
1_5	—	PK	LA07 LA04	Headlamp High Beam Relay Supply Voltage Headlamp Low Beam Relay Supply Voltage		EF7 Z49
2_1	—	L-GN	LA42	Battery Positive Voltage		—
2_2	—	PK	LA41	Daytime Running Lamps Relay 1 Control		—
2_3	—	RD	LA40	Daytime Running Lamps Relay 1 Supply Voltage		—
2_4	—	BK	LAE1	Ground		—
2_5	—	L-GN	LA43	Battery Positive Voltage		—
3_1	—	RD	AR12	Ignition Main Relay Supply Voltage		—
3_2	—	D-GN	AR05	Left High Speed Cooling Fan Relay Supply Voltage		—
3_3	—	GY	AR07	Right Cooling Fan Motor Medium Speed Control		—
3_4	—	—	—	Not Used	—	—
3_5	—	BK	ARE3	Ground		—
4_1	—	RD	AR11	Ignition Main Relay Supply Voltage		—
4_2	—	VT	AR04	Low Speed Cooling Fan Relay Control		—
4_3	—	PK	AR06	Right Cooling Fan Motor High/Low Speed Control		—
4_4	—	—	—	Not Used	—	—
4_5	—	D-GN	AR03	Left Cooling Fan Motor High/Low Speed Control		—

X50D Fuse Block - Battery Top View

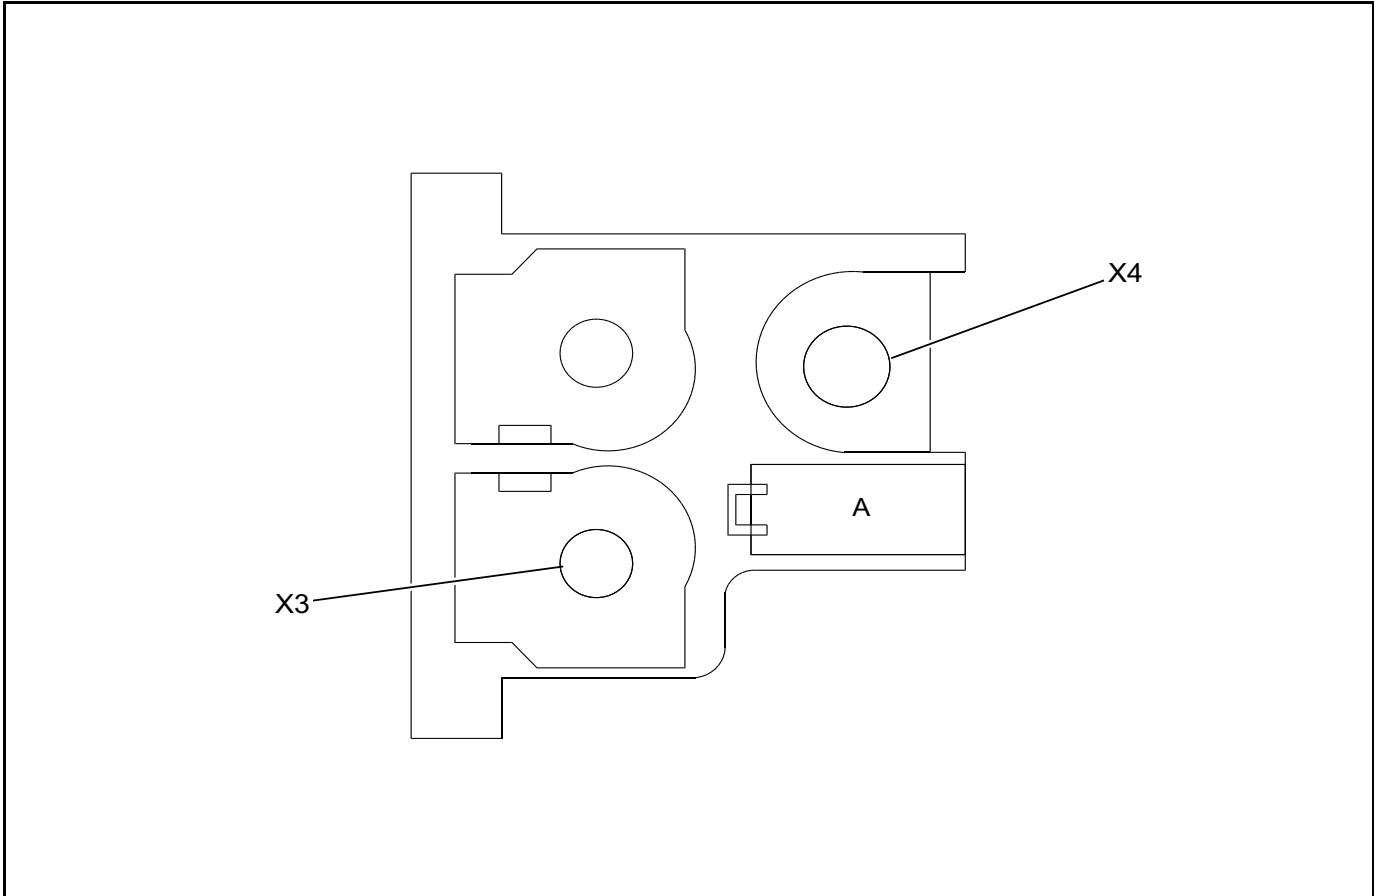


3943459

X50D Fuse Block – Battery Usage

No.	Device Label Name	Device Assigned Name	Rating	Description
Fuses				
A	—	F1RB	120A	<ul style="list-style-type: none"> • F2RB • F3RB • G13 Generator

X50D Fuse Block - Battery X1

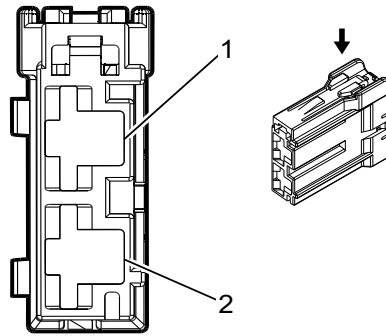

3413018

Connector Part Information

Harness Type: Engine Compartment
 OEM Connector: L02FGY-MC
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F (GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
Not Available	Not Available	Not Available	Not Available	Not Available	Not Available	Not Available	Not Available

X50D Fuse Block - Battery X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	-	GN	DA04	Battery Positive Voltage	-	-
2	-	WH	DA03	Battery Positive Voltage	-	-

X50D Fuse Block - Battery X2

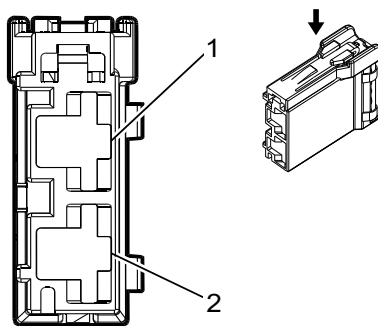

3413019

Connector Part Information

Harness Type: Engine Compartment
 OEM Connector: L02FBR-MC
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F (BN)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
Not Available	Not Available	Not Available	Not Available	Not Available	Not Available	Not Available	Not Available

X50D Fuse Block - Battery X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	-	WH	DA05	Battery Positive Voltage	-	-
2	-	RD	DA02	Battery Positive Voltage	-	-

X50D Fuse Block - Battery X3

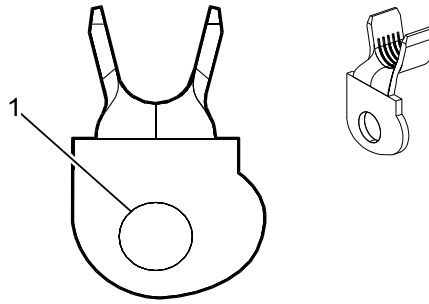

4097920

Connector Part Information

Harness Type: Engine
 OEM Connector: 24340_79906
 Service Connector: Service by Cable Assembly - See Parts Catalog
 Description: Ring Terminal


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
Not Available	Not Available	Not Available	Not Available	Not Available	Not Available	Not Available	Not Available

X50D Fuse Block - Battery X3

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	-	BK/RD	DA01	Battery Positive Voltage	-	-

X50D Fuse Block - Battery X4

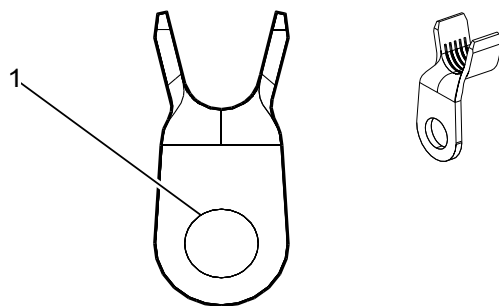

4097943

Connector Part Information

Harness Type: Engine
 OEM Connector: 24340_79907
 Service Connector: Service by Cable Assembly - See Parts Catalog
 Description: Ring Terminal

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
Not Available	Not Available	Not Available	Not Available	Not Available	Not Available	Not Available	Not Available

X50D Fuse Block - Battery X4


Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	-	BK/RD	AH10	Unfused Battery Positive Voltage	-	-

X50A Fuse Block - Underhood Label

FUSE		
F1	RR DEF	20A
F2		
F3	EGI	20A
F4		
F5	FR WIPER	30A
F6	POS LAMPS	10A
F7		
F8		
F9	A/C CLUTCH	10A
F10	FR FOD LAMP	15A
F11	H/L LAMP HI RH	10A
F12	H/L LAMP HI LH	10A
F13	H/L LAMP LO LH	15A
F14	H/L LAMP LO RH	15A
F15	A/T ECU IGN	10A
F16	REV LAMP IGN	10A
F17	ABS ECU IGN	10A
F18		
F19		
F20	FUEL PUMP	15A
F21	O2 SENSOR	15A
F22	INJECTION IGN	15A
F23		
F24	ETC	15A

4232658

X50A Fuse Block - Underhood Top View

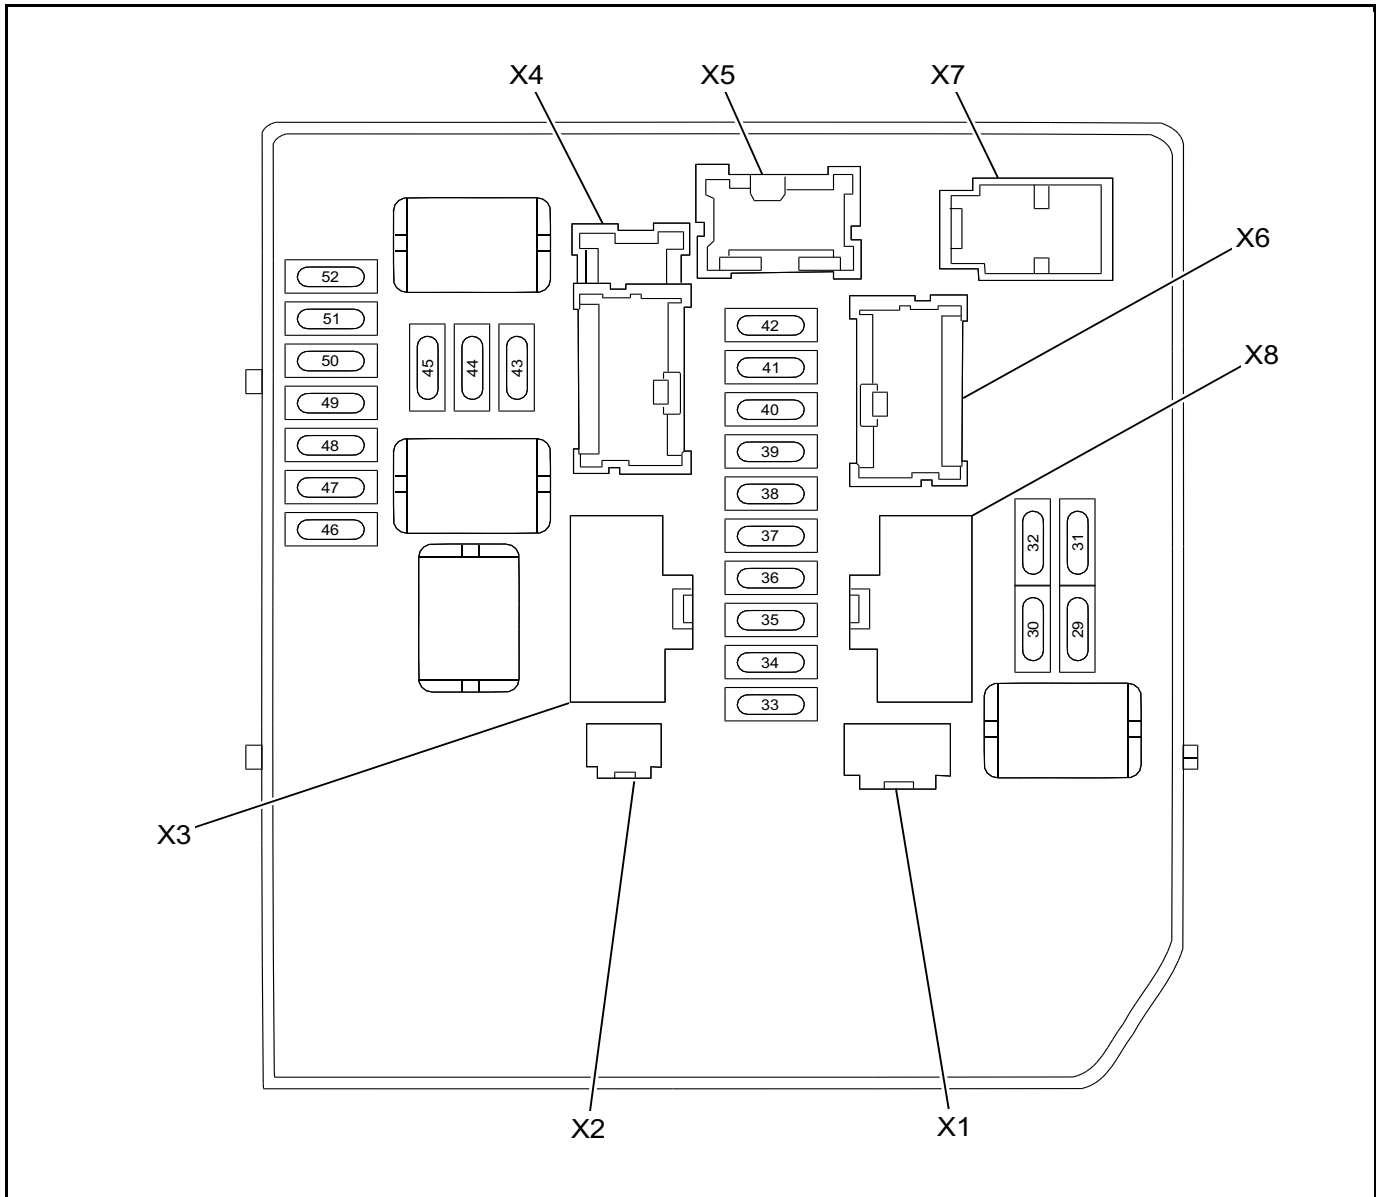

3943461

X50A Fuse Block – Underhood Usage

No.	Device Label Name	Device Assigned Name	Rating	Description
Fuses				
F1	RR DEF	F29UA	20A	• KR5 Rear Defogger Relay
F2	—	F30UA	—	• Not Used
F3	EGI	F31UA	20A	• K20 Engine Control Module • KR75 Engine Controls Ignition Relay
F4	—	F32UA	—	• Not Used
F5	FR WIPER	F33UA	30A	• KR12B Windshield Wiper Relay
F6	POS LAMPS	F34UA	10A	• A11 Radio • E4N Park/Turn Signal Lamp - Left • E4P Park/Turn Signal Lamp - Right • E5AA Tail/Stop Lamp - Left • E5AB Tail/Stop Lamp - Right • E7L License Plate Lamp - Left

X50A Fuse Block – Underhood Usage (cont'd)

No.	Device Label Name	Device Assigned Name	Rating	Description
				<ul style="list-style-type: none"> • E7R License Plate Lamp - Right • S3 Transmission Shift Lever • S26 Hazard Warning Switch • S34 HVAC Controls Switch Assembly • S70L Steering Wheel Controls Switch - Left (UP9 or UPF) • S70R Steering Wheel Controls Switch - Right (K34) • S75 Traction Control Switch
F7	—	F35UA	—	• Not Used
F8	—	F36UA	—	• Not Used
F9	A/C CLUTCH	F37UA	10A	• KR29 A/C Compressor Clutch Relay
F10	FR FOG LAMP	F38UA	15A	• Not Used
F11	H/LAMP HI RH	F39UA	10A	<ul style="list-style-type: none"> • E13R Headlamp - Right (Z49) • KR42D Daytime Running Lamps Relay 2 (EF7)
F12	H/LAMP HI LH	F40UA	10A	• E13L Headlamp - Left
F13	H/LAMP LO LH	F41UA	15A	• E13L Headlamp - Left
F14	H/LAMP LO RH	F42UA	15A	<ul style="list-style-type: none"> • E13R Headlamp - Right (EF7) • KR42D Daytime Running Lamps Relay 2 (Z49)
F15	A/T ECU IGN	F43UA	10A	<ul style="list-style-type: none"> • B14A Transmission Output Shaft Speed Sensor • B14B Transmission Turbine Speed Sensor • B14C Transmission Input Shaft Speed Sensor • B81 Park/Neutral Position Switch • K71 Transmission Control Module,
F16	REV LAMP IGN	F44UA	10A	• B81 Park/Neutral Position Switch
F17	ABS ECU IGN	F45UA	10A	<ul style="list-style-type: none"> • B99 Steering Wheel Angle Sensor • B119 Multi-axis Acceleration Sensor • K17 Electronic Brake Control Module
F18	—	F46UA	—	• Not Used
F19	—	F47UA	—	• Not Used
F20	FUEL PUMP	F48UA	15A	• KR23A Fuel Pump Relay
F21	IGN COIL	F49UA	15A	<ul style="list-style-type: none"> • B52A Heated Oxygen Sensor 1 • B52B Heated Oxygen Sensor 2 • KR20C Cooling Fan Low Speed Relay • KR20N Cooling Fan Right Medium Speed Relay • Q6F Camshaft Position Actuator Solenoid Valve - Intake
F22	INJECTOR IGN	F50UA	15A	<ul style="list-style-type: none"> • K20 Engine Control Module • Q17A Fuel Injector 1 • Q17B Fuel Injector 2 • Q17C Fuel Injector 3 • Q17D Fuel Injector 4
F23	—	F51UA	—	• Not Used
F24	ETC	F52UA	15A	• KR75 Engine Controls Ignition Relay
Relays				
Note: Relays listed below are non-serviceable Printed Circuit Board (PCB) relays and are internal to the block.				
—	—	KR5 Rear Defogger Relay	—	<ul style="list-style-type: none"> • E17D Outside Rearview Mirror Glass - Driver (DR6) • E17P Outside Rearview Mirror Glass - Passenger (DR6)


X50A Fuse Block – Underhood Usage (cont'd)

No.	Device Label Name	Device Assigned Name	Rating	Description
				<ul style="list-style-type: none"> E18 Rear Defogger Grid (C49) S34 HVAC Controls Switch Assembly
—	—	KR12B Windshield Wiper Relay	—	<ul style="list-style-type: none"> KR12C Windshield Wiper Speed Control Relay
—	—	KR12C Windshield Wiper Speed Control Relay	—	<ul style="list-style-type: none"> M75 Windshield Wiper Motor
—	—	KR20C Cooling Fan Low Speed Relay	—	<ul style="list-style-type: none"> G10L Cooling Fan Motor - Left
—	—	KR20J Cooling Fan Left High Speed Relay	—	<ul style="list-style-type: none"> G10L Cooling Fan Motor - Left
—	—	KR20K Cooling Fan Right High Speed Relay	—	<ul style="list-style-type: none"> G10R Cooling Fan Motor - Right
—	—	KR20M Cooling Fan Left Medium Speed Relay	—	<ul style="list-style-type: none"> G10L Cooling Fan Motor - Left
—	—	KR20N Cooling Fan Right Medium Speed Relay	—	<ul style="list-style-type: none"> G10R Cooling Fan Motor - Right
—	—	KR23A Fuel Pump Relay	—	<ul style="list-style-type: none"> G12 Fuel Pump
—	—	KR27 Starter Relay	—	<ul style="list-style-type: none"> M64 Starter Motor
—	—	KR29 A/C Compressor Clutch Relay	—	<ul style="list-style-type: none"> Q2 A/C Compressor Clutch
—	—	KR48 Headlamp High Beam Relay	—	<ul style="list-style-type: none"> E13L Headlamp - Left E13R Headlamp - Right (Z49) KR42D Daytime Running Lamps Relay 2 (EF7)
—	—	KR49 Headlamp Low Beam Relay	—	<ul style="list-style-type: none"> E13L Headlamp - Left E13R Headlamp - Right (EF7) KR42D Daytime Running Lamps Relay 2 (Z49)
—	—	KR60 Tail Lamps Relay	—	<ul style="list-style-type: none"> E4LR Turn Signal Lamp - Left Rear E4RR Turn Signal Lamp - Right Rear E4N Park/Turn Signal Lamp - Left E4P Park/Turn Signal Lamp - Right E7L License Plate Lamp - Left E7R License Plate Lamp - Right
—	—	KR73 Ignition Main Relay	—	<ul style="list-style-type: none"> A90 Logic B52A Heated Oxygen Sensor 1 B52B Heated Oxygen Sensor 2 K20 Engine Control Module KR5 Rear Defogger Relay KR12B Windshield Wiper Relay KR12C Windshield Wiper Speed Control Relay KR20C Cooling Fan Low Speed Relay KR20J Cooling Fan Left High Speed Relay KR20K Cooling Fan Right High Speed Relay KR20M Cooling Fan Left Medium Speed Relay KR20N Cooling Fan Right Medium Speed Relay KR23A Fuel Pump Relay KR29 A/C Compressor Clutch Relay

X50A Fuse Block – Underhood Usage (cont'd)

No.	Device Label Name	Device Assigned Name	Rating	Description
				<ul style="list-style-type: none"> • Q6F Camshaft Position Actuator Solenoid Valve - Intake • Q17A Fuel Injector 1 • Q17B Fuel Injector 2 • Q17C Fuel Injector 3 • Q17D Fuel Injector 4
—	—	KR75 Engine Controls Ignition Relay	—	<ul style="list-style-type: none"> • B75 Mass Air Flow Sensor • C9 Ignition Coil Capacitor • K20 Engine Control Module • Q12 Evaporative Emission Purge Solenoid Valve • Q13 Evaporative Emission Vent Solenoid Valve • T8A Ignition Coil 1 • T8B Ignition Coil 2 • T8C Ignition Coil 3 • T8D Ignition Coil 4,
—	—	KR164 Throttle Body Relay	—	<ul style="list-style-type: none"> • K20 Engine Control Module

X50A Fuse Block - Underhood X1

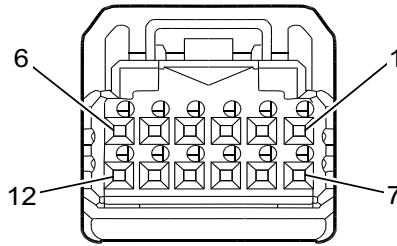

4063822

Connector Part Information

Harness Type: Engine Compartment
 OEM Connector: TH12FW-NH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 12-Way F 025 Series (NA)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
Not Available	Not Available	Not Available	Not Available	Not Available	Not Available	Not Available	Not Available

X50A Fuse Block - Underhood X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	-	PK	LA41	Daytime Running Lamps Relay 1 Control	-	-
2	-	BU	DA44	CAN Bus High Serial Data (+)	-	-
3	-	PK	DA45	CAN Bus High Serial Data (-)	-	-
4	-	OG	WA04	Windshield Wiper Motor Park Switch Signal	-	-
5-6	-	-	-	Not Occupied	-	-
7	-	RD	PF23	Horn Relay Control Signal	-	-
8	-	GY	DA24	Power Generation Command Signal	-	-
9	-	-	-	Not Occupied	-	-
10	-	GY	AC21	Fuel Pump Relay Control	-	-
11-12	-	-	-	Not Occupied	-	-

X50A Fuse Block - Underhood X2

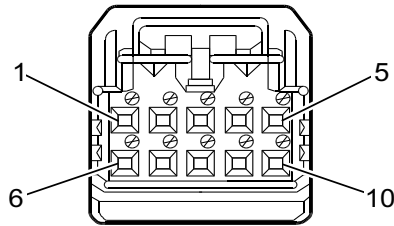

4097944

Connector Part Information

Harness Type: Engine Compartment
 OEM Connector: TH10FB-NH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 10-Way F (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
Not Available	Not Available	Not Available	Not Available	Not Available	Not Available	Not Available	Not Available

X50A Fuse Block - Underhood X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	-	GN	AR05	Left High Speed Cooling Fan Relay Supply Voltage	-	-
2-4	-	-	-	Not Occupied	-	-
5	-	VT	AR04	Low Speed Cooling Fan Relay Control	-	-
6-10	-	-	-	Not Occupied	-	-

X50A Fuse Block - Underhood X3

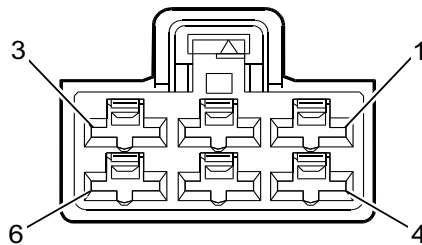

4065439

Connector Part Information

Harness Type: Engine Compartment
 OEM Connector: M06FW-LC
 Service Connector: Service by Harness - See Parts Catalog
 Description: 6-Way F 250 Series (NA)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
Not Available	Not Available	Not Available	Not Available	Not Available	Not Available	Not Available	Not Available

X50A Fuse Block - Underhood X3

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	-	WH	AR01	Left Medium Speed Cooling Fan Relay Supply Voltage	-	-
2	-	-	-	Not Occupied	-	-
3	-	RD	AH01	Starter Relay Supply Voltage	-	-
4	-	GN	DA12	Battery Positive Voltage	-	-
5	-	GN	AR03	Left Cooling Fan Motor High/Low Speed Control	-	-
6	-	WH	AH03	Crank Ignition Voltage	-	-

X50A Fuse Block - Underhood X4

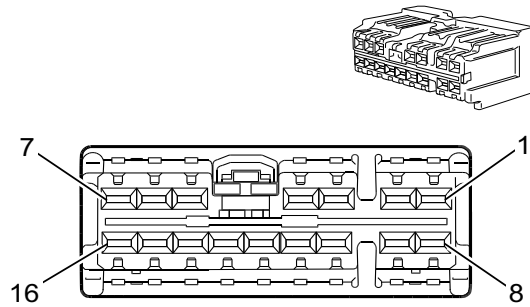

4065463

Connector Part Information

Harness Type: Engine Compartment
 OEM Connector: NS16FW-CS
 Service Connector: Service by Harness - See Parts Catalog
 Description: 16-Way F 090 Series (NA)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
Not Available	Not Available	Not Available	Not Available	Not Available	Not Available	Not Available	Not Available

X50A Fuse Block - Underhood X4

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	-	-	-	Not Occupied	-	-
2	-	• L-BU • PK	• LA45 • LA04	• Right Headlamp Low Beam Supply Voltage • Daytime Running Lamps Relay 2 Control	-	• EF7 • Z49
3	-	WH	LA06	Left Headlamp Low Beam Supply Voltage	-	-
4	-	GN	LA05	Left Headlamp High Beam Supply Voltage	-	-
5	-	• PK • YE	• LA07 • LA03	• Daytime Running Lamps Relay 2 Control • Right Headlamp High Beam Supply Voltage	-	• EF7 • Z49
6	-	-	-	Not Occupied	-	-
7	-	L-GN	AH04	Neutral Safety Switch Park/Neutral Signal	-	-
8	-	L-BU	AC16	Ignition Main Relay Supply Voltage	-	-
9	-	RD/WH	AC29	Ignition Main Relay Supply Voltage	-	-
10	-	VT	BS03	Ignition Main Relay Supply Voltage	-	-
11	-	L-BU	LR01	Ignition Main Relay Supply Voltage	-	-
12	-	L-GN	BA19	Ignition Main Relay Supply Voltage	-	-
13	-	YE	AC23	Throttle Body Relay Supply Voltage	-	-
14	-	WH	HA34	A/C Compressor Clutch Supply Voltage	-	-
15	-	GN	AC20	Fuel Pump Relay Supply Voltage	-	-
16	-	L-GN	AC24	Throttle Body Relay Control	-	-

X50A Fuse Block - Underhood X5

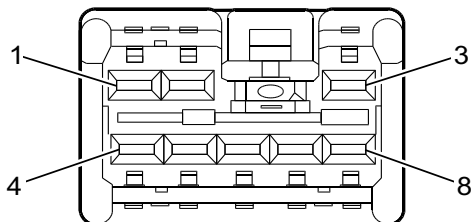

4097949

Connector Part Information

Harness Type: Engine Compartment
 OEM Connector: NS08FBR-CS
 Service Connector: Service by Harness - See Parts Catalog
 Description: 8-Way F (BN)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
Not Available	Not Available	Not Available	Not Available	Not Available	Not Available	Not Available	Not Available

X50A Fuse Block - Underhood X5

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1-3	-	-	-	Not Occupied	-	-
4	-	OG	DA37	Run/Crank Ignition Voltage	-	-
5	-	BK	DAE1	Ground	-	-
6-8	-	-	-	Not Occupied	-	-

X50A Fuse Block - Underhood X6

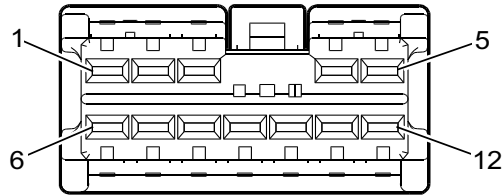

4097946

Connector Part Information

Harness Type: Engine Compartment
 OEM Connector: NS12FBR-CS
 Service Connector: Service by Harness - See Parts Catalog
 Description: 12-Way F 2.3 Series (BN)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
Not Available	Not Available	Not Available	Not Available	Not Available	Not Available	Not Available	Not Available

X50A Fuse Block - Underhood X6

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	-	-	-	Not Occupied	-	-
2	-	YE	LT05	Tail Lamps Relay Supply Voltage	-	-
3	-	PK	LT06	Tail Lamps Relay Supply Voltage	-	-
4	-	VT	LT02	Tail Lamps Relay Supply Voltage	-	-
5	-	WH	WA02	Windshield Wiper Motor High Speed Control	-	-
6	-	BU	AC04	Engine Controls Ignition Relay Control	-	-
7-8	-	-	-	Not Occupied	-	-
9	-	GN	AC02	Engine Controls Ignition Relay Supply Voltage	-	-
10	-	YE	AC50	Engine Controls Ignition Relay Supply Voltage	-	-
11	-	RD	AC01	Battery Positive Voltage	-	-
12	-	YE	WA03	Windshield Wiper Motor Low Speed Control	-	-

X50A Fuse Block - Underhood X7

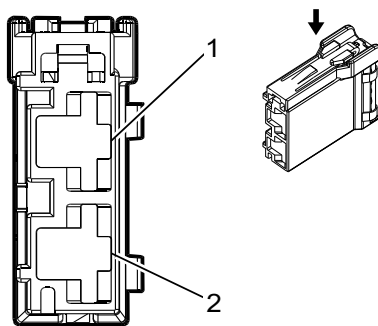

3413019

Connector Part Information

Harness Type: Engine Compartment
 OEM Connector: L02FBR-MC
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F 9.5 Series (BN)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
Not Available	Not Available	Not Available	Not Available	Not Available	Not Available	Not Available	Not Available

X50A Fuse Block - Underhood X7

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	-	RD	DA02	Battery Positive Voltage	-	-
2	-	GN	DA04	Battery Positive Voltage	-	-

X50A Fuse Block - Underhood X8

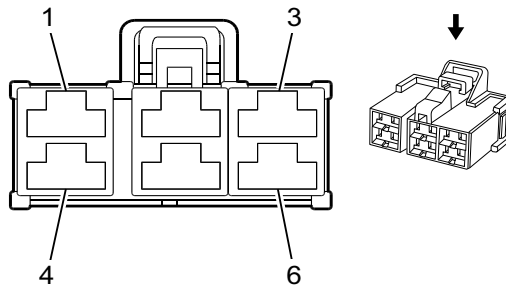

2455685

Connector Part Information

Harness Type: Engine Compartment
 OEM Connector: M06FB-LC
 Service Connector: Service by Harness - See Parts Catalog
 Description: 6-Way F 9.35 Series (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
Not Available	Not Available	Not Available	Not Available	Not Available	Not Available	Not Available	Not Available


X50A Fuse Block - Underhood X8

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	-	BK	DAE2	Ground	-	-
2	-	PK	AR02	Right Cooling Fan Motor High/Low Speed Control	-	-
3-4	-	-	-	Not Occupied	-	-
5	-	RD	NA01	Rear Defogger Relay Supply Voltage	-	-
6	-	-	-	Not Occupied	-	-

X51A Fuse Block - Instrument Panel Label

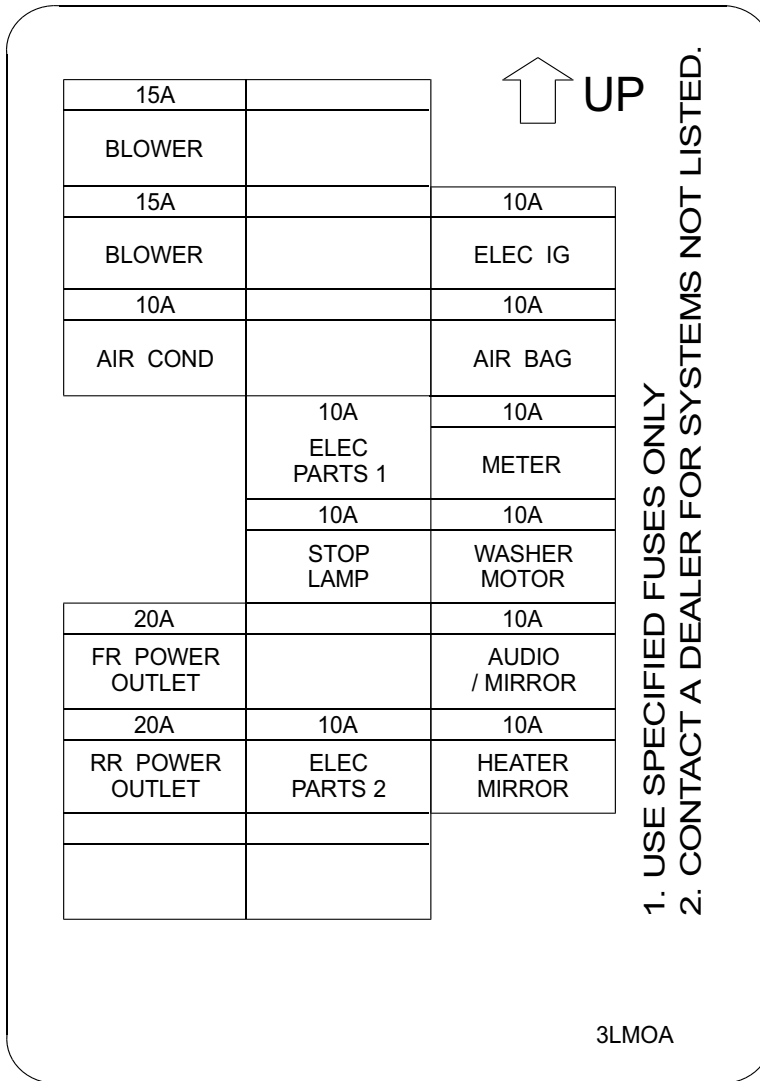

X51A Fuse Block - Instrument Panel Top View

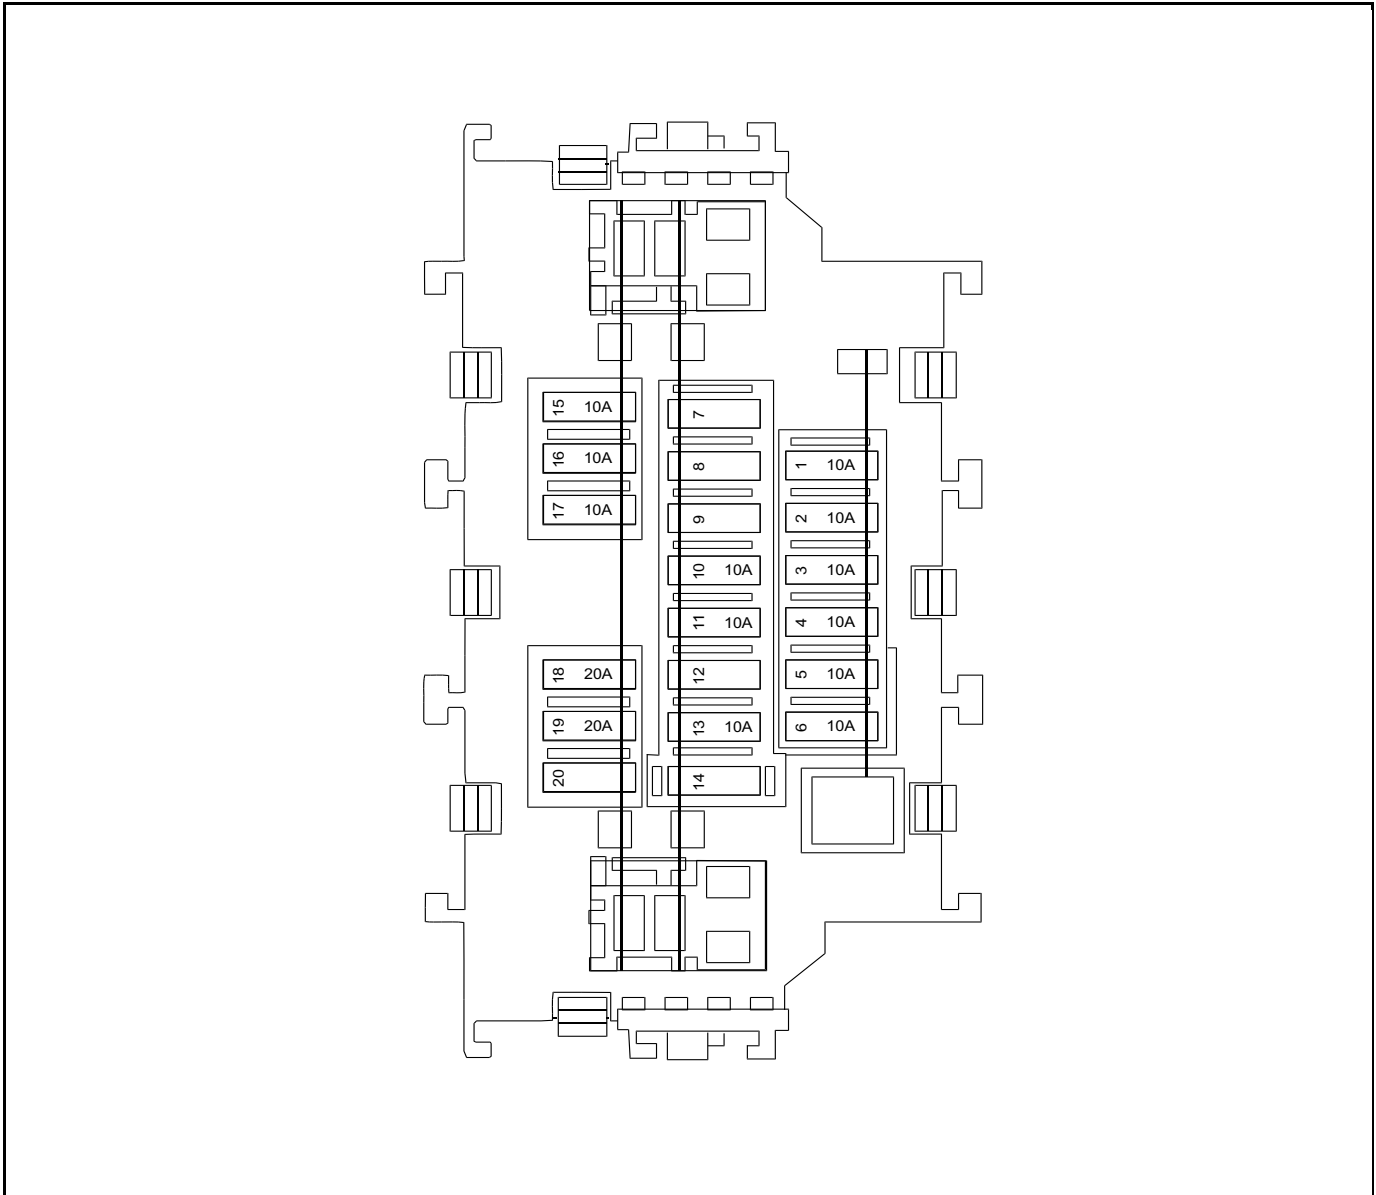

3943462


X51A Fuse Block – Instrument Panel Label Usage

No.	Device Label Name	Device Assigned Name	Rating	Description
Fuses				
1	ELEC IGN	F1DA	10A	<ul style="list-style-type: none"> • K9 Body Control Module • K65 Tire Pressure Indicator Module • KR73 Ignition Main Relay
2	AIR BAG	F2DA	10A	<ul style="list-style-type: none"> • K36 Inflatable Restraint Sensing and Diagnostic Module • K85 Passenger Presence Module
3	METER	F3DA	10A	<ul style="list-style-type: none"> • B103 Stop Lamp Switch • K43 Power Steering Control Module • P16 Instrument Cluster • S7 Cruise Control Brake Switch (K34) • K82 Mobile Telephone Control Module (UPF) • X84 Data Link Connector

X51A Fuse Block – Instrument Panel Label Usage (cont'd)

No.	Device Label Name	Device Assigned Name	Rating	Description
4	WASHER MOTOR	F4DA	10A	<ul style="list-style-type: none"> • G24 Windshield Washer Pump • S78 Turn Signal/Multifunction Switch
5	AUDIO/MIRROR	F5DA	10A	<ul style="list-style-type: none"> • A11 Radio • K9 • K82 Mobile Telephone Control Module (UPF) • S52 Outside Rearview Mirror Switch (DR6)
6	HEATER MIRROR	F6DA	10A	<ul style="list-style-type: none"> • E17D Outside Rearview Mirror Glass - Driver (DR6) • E17P Outside Rearview Mirror Glass - Passenger (DR6)
7	—	F7DA	—	• Not Used
8	—	F8DA	—	• Not Used
9	—	F9DA	—	• Not Used
10	ELEC PARTS1	F10DA	10A	<ul style="list-style-type: none"> • B56 Ignition Key In Switch • P16 Instrument Cluster • X84 Data Link Connector
11	STOP LAMP	F11DA	10A	• B103 Stop Lamp Switch
12	—	F12DA	—	• Not Used
13	ELEC PARTS2	F13DA	10A	• K9 Body Control Module
14	—	F14DA	—	• Not Used
15	BLOWER	F15DA	10A	• M8 Blower Motor
16	BLOWER	F16DA	10A	• M8 Blower Motor
17	AIR COND	F17DA	10A	<ul style="list-style-type: none"> • B39 A/C Evaporator Temperature Sensor • S34 HVAC Controls Switch Assembly
18	FR POWER OUTLET	F18DA	10A	• X80H Accessory Power Receptacle - Center Console
19	RR POWER OUTLET	F19DA	20A	• X80L Accessory Power Receptacle - Rear Console
20	—	F20DA	—	• Not Used
Relays				
—	—	KR32E Blower Motor Relay	—	<ul style="list-style-type: none"> • F15DA • F16DA • F17DA
—	—	KR80 Accessory Relay	—	<ul style="list-style-type: none"> • F18DA • F19DA

X51A Fuse Block - Instrument Panel Bottom View

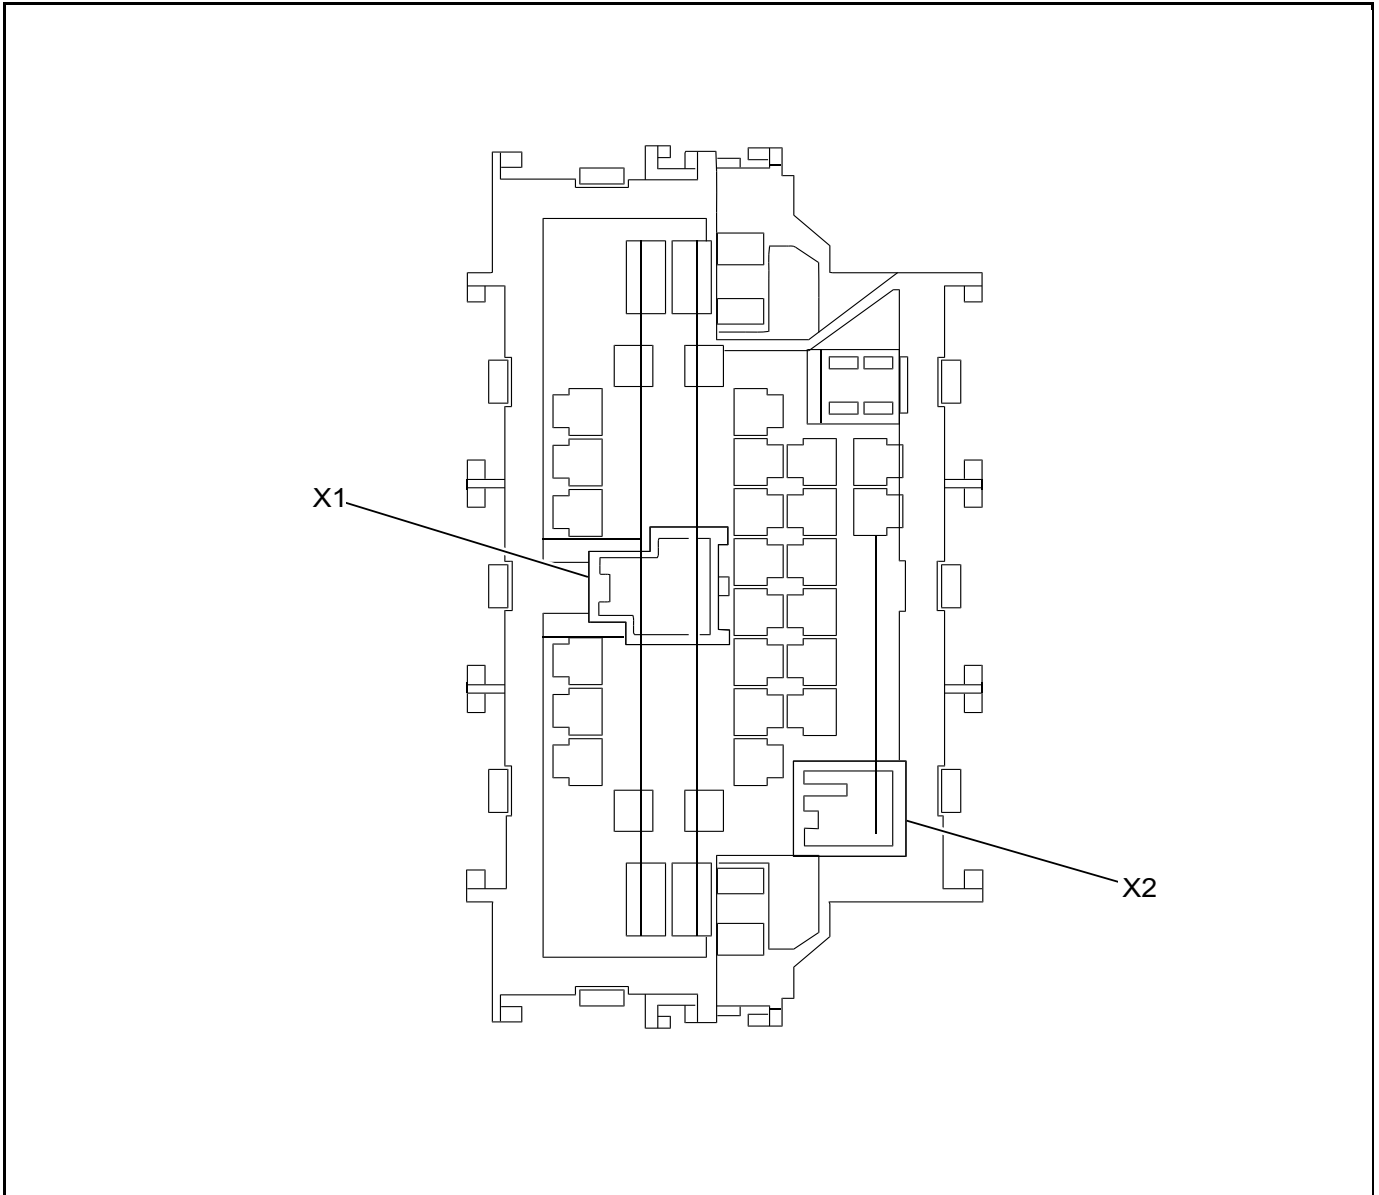

3943463

X51A Fuse Block - Instrument Panel Wire Entry

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: 24311_3UB0A
 Service Connector: Service by Component Assembly - See Parts Catalog
 Description: Wire Entry Fuse Block

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
Not Available	Not Available	Not Available	Not Available	Not Available	Not Available	Not Available	Not Available

X51A Fuse Block - Instrument Panel Wire Entry

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
Fuses						
1	—	OG	DA37	Run/Crank Ignition Voltage	I	—
2	—	D-BU	FB01	Run/Crank Ignition Voltage	I	—
3	—	WH	MA02	Run/Crank Ignition Voltage	I	—
4	—	D-GN	WA11	Run/Crank Ignition Voltage	I	—
5	—	D-BU	RA02	Accessory/Run Ignition Voltage	I	—
6	—	L-BU	KC02	Mirror Heating Element Supply Voltage	I	DE5 or DR6
7-9	—	—	—	Not Used	—	—
10	—	L-GN	PD32	Battery Positive Voltage	I	—
11	—	D-BU	LS01	Battery Positive Voltage	I	—
12	—	—	—	Not Used	—	—
13	—	YE	DA35	Battery Positive Voltage	I	—
14	-	-	-	Not Used	—	—
15	—	YE	HA01	Blower Motor Relay Supply Voltage	I	—
16	—	YE	HA01	Blower Motor Relay Supply Voltage	I	—
17	—	D-GN	HA09	Blower Motor Relay Supply Voltage	I	—
18	—	D-BU	GA02	Accessory Relay Supply Voltage	I	—
19	—	RD	GA01	Accessory Relay Supply Voltage	I	ATG
20	—	—	—	Not Used	—	—
Relays						
1_1	—	YE	DA15	Run Ignition Voltage	I	—
1_2	—	BK	DAE5	Ground	I	—
1_3	—	-	-	Blower Motor Relay Supply Voltage	I	—
1_4	—	—	—	Not Used	—	—
1_5	—	—	—	Battery Positive Voltage	I	—
2_1	—	TN	DA13	Accessory/Run Ignition Voltage	I	—
2_2	—	D-BU	DAE6	Ground	I	—
2_3	—	—	—	Accessory Relay Supply Voltage	I	—
2_4	—	—	—	Not Used	—	—
2_5	—	—	DA03	Battery Positive Voltage	I	—

X51A Fuse Block - Instrument Panel X1

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: L01FW-MC
 Service Connector: Service by Harness - See Parts Catalog
 Description: Ring Terminal

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
Not Available	Not Available	Not Available	Not Available	Not Available	Not Available	Not Available	Not Available

X51A Fuse Block - Instrument Panel X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	-	WH	DA03	Battery Positive Voltage	-	-

X51A Fuse Block - Instrument Panel X2

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: M01FW-LC
 Service Connector: Service by Harness - See Parts Catalog
 Description: Ring Terminal


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
Not Available	Not Available	Not Available	Not Available	Not Available	Not Available	Not Available	Not Available

X51A Fuse Block - Instrument Panel X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	-	RD	DA14	Run/Crank Ignition Voltage	-	-

Component Connector End Views A2LF Tire Pressure Receiver - Left Front

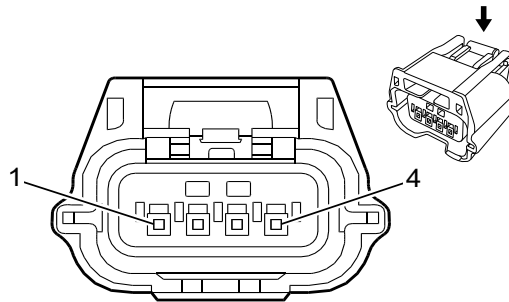

2455680

Connector Part Information

Harness Type: Engine Compartment
 OEM Connector: RH04FB
 Service Connector: Service by Harness - See Parts Catalog
 Description: 4-Way F 0.64 Series, Sealed (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

A2LF Tire Pressure Receiver - Left Front

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BN	MP05	Left Front Tire Pressure Receiver Low Reference	I	—
2	—	WH	MP02	Left Front Tire Pressure Receiver Serial Data	I	—
3	—	RD	MP03	Left Front Tire Pressure Receiver Signal	I	—
4	—	L-GN	MP04	Left Front Tire Pressure Receiver Supply Voltage	I	—

A2LR Tire Pressure Receiver - Left Rear

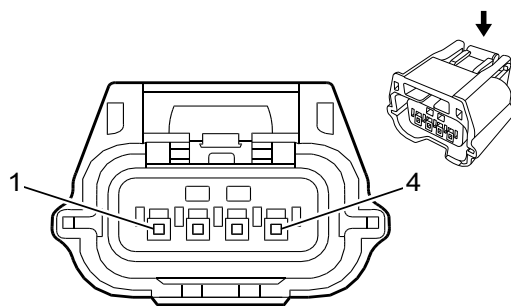

2455680

Connector Part Information

Harness Type: Body
 OEM Connector: RH04FB
 Service Connector: Service by Harness - See Parts Catalog
 Description: 4-Way F 0.64 Series, Sealed (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

A2LR Tire Pressure Receiver - Left Rear

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	GY	MP17	Left Rear Tire Pressure Receiver Supply Voltage	I	—
2	—	PK	MP16	Left Rear Tire Pressure Receiver Signal	I	—
3	—	BU	MP15	Left Rear Tire Pressure Receiver Serial Data	I	—
4	—	VT	MP18	Left Rear Tire Pressure Receiver Low Reference	I	—

A2RF Tire Pressure Receiver - Right Front

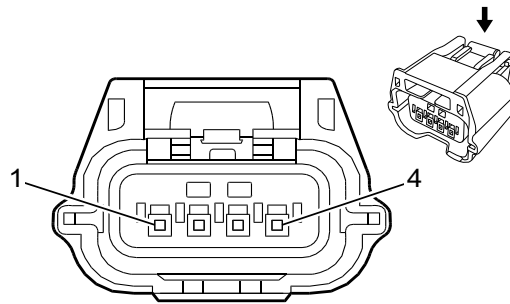

2455680

Connector Part Information

Harness Type: Engine Compartment
 OEM Connector: RH04FB
 Service Connector: Service by Harness - See Parts Catalog
 Description: 4-Way F 0.64 Series, Sealed (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

A2RF Tire Pressure Receiver - Right Front

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	VT	MP08	Right Front Tire Pressure Receiver Supply Voltage	I	—
2	—	GN	MP07	Right Front Tire Pressure Receiver Signal	I	—
3	—	BN	MP06	Right Front Tire Pressure Receiver Serial Data	I	—
4	—	GY	MP09	Right Front Tire Pressure Receiver Low Reference	I	—

A2RR Tire Pressure Receiver - Right Rear

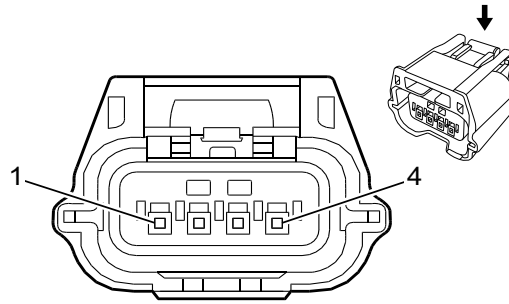

2455680

Connector Part Information

Harness Type: Body
 OEM Connector: RH04FB
 Service Connector: Service by Harness - See Parts Catalog
 Description: 4-Way F 0.64 Series, Sealed (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

A2RR Tire Pressure Receiver - Right Rear

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	L-BU	MP13	Right Rear Tire Pressure Receiver Supply Voltage	I	—
2	—	BU	MP12	Right Rear Tire Pressure Receiver Signal	I	—
3	—	GN	MP11	Right Rear Tire Pressure Receiver Serial Data	I	—
4	—	L-GN	MP14	Right Rear Tire Pressure Receiver Low Reference	I	—

A7 Fuel Pump and Level Sensor Assembly

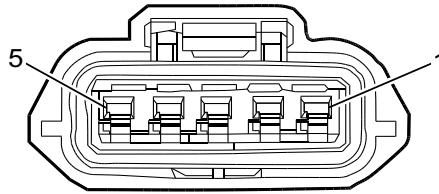

4065426

Connector Part Information

Harness Type: Body
 OEM Connector: E05FGY-RS
 Service Connector: Service by Harness - See Parts Catalog
 Description: 5-Way F 090 Series, Sealed (GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

A7 Fuel Pump and Level Sensor Assembly

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	GN	AC20	Fuel Pump Relay Supply Voltage	I	—
2	—	BN	MA05	Fuel Level Sensor Signal	I	—
3	—	BK	AE06	Ground	I	—
4	—	BU	AB43	Fuel Temperature Sensor 5 Volt Reference	I	—
5	—	GY	MA16	Fuel Temperature Sensor Signal	I	—

A11 Radio X1

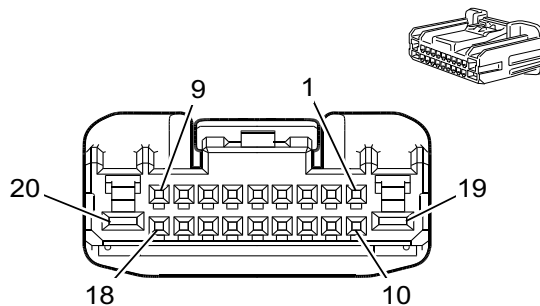

4084248

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: TH18FW-CS2
 Service Connector: Service by Harness - See Parts Catalog
 Description: 20-Way F 0.64, 2.3 Series (WH)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available


A11 Radio X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	—	Not Occupied	—	—
2	—	D-BU	RA06	Left Front Speaker (+)	I	—
3	—	PK	RA07	Left Front Speaker (-)	I	—
4	—	—	RA10	Not Used	—	—
5	—	—	RA11	Not Used	—	—
6	—	TN WH	RT16 RT50	Steering Wheel Resistor Ladder Output Signal (1)	I	CWM U1B with UPF
7	—	D-BU	RA02	Accessory/Run Ignition Voltage	I	—
8	—	BK D-BU	RAE1 RA91	Ground CAN Bus High Serial Data (+)	I	U1B with UPF CWM
9	—	VT	RA03	Tail Lamps Relay Supply Voltage	I	—
10	—	—	—	Not Occupied	—	—
11	—	D-GN	RA04	Right Front Speaker (+)	I	—
12	—	RD	RA05	Right Front Speaker (-)	I	—
13-14	—	—	—	Not Occupied	—	—
15	—	BK	RT18 RTE3	Steering Wheel Resistor Ladder Output Low Reference Ground	I	U1B with UPF CWM
16	—	YE BU	RT17 RT51	Steering Wheel Resistor Ladder Output Signal (2) Steering Wheel Resistor Ladder Input Signal (2)	I	U1B with UPF CWM
17	—	PK	RA92	CAN Bus High Serial Data (-)	I	CWM

A11 Radio X1 (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
18	—	WH	RA19	Vehicle Speed Signal	I	—
19	—	RD	RA01	Battery Positive Voltage	I	—
20	—	BK	RAE2	Ground	I	CWM

A11 Radio X2 (U1B with UPF)

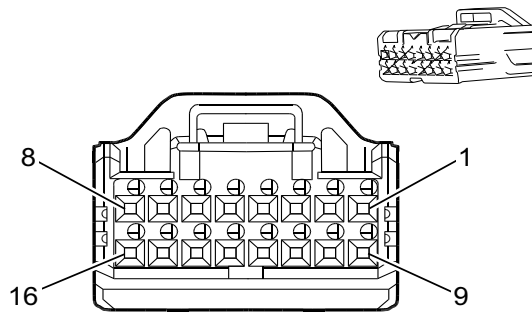

4063846

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: TH16FW-NH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 16-Way F 025 Series (NA)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

A11 Radio X2 (U1B with UPF)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1-4	—	—	—	Not Occupied	—	—
5	—	L-BU	RA12	CAN Bus Medium Serial Data (+)	I	—
6	—	L-BU	RT10	CAN Bus Medium Serial Data (+)	I	—
7	—	L-GN	RT11	CAN Bus Medium Serial Data (-)	I	—
8-11	—	—	—	Not Occupied	—	—
12	—	RD	RT12	Cellular Telephone Mute Control	I	—
13	—	L-GN	RA13	CAN Bus Medium Serial Data (-)	I	—
14	—	BK	RT13	CAN Bus Medium Serial Data (-)	I	—
15	—	WH	RT14	Mobile Phone Audio Output Minus Signal	I	—
16	—	BK	RTE1	Ground	I	—

A11 Radio X2 (CWM)

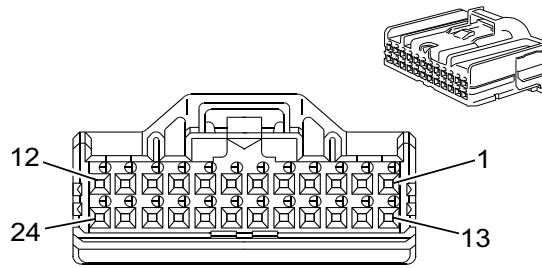

4089952

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: TH24FW-NH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 24 Way F 025 Series (NA)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

A11 Radio X2 (CWM)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	WH	RI41	Right Auxiliary Audio Signal	I	—
2	—	BK	RI42	Auxiliary Audio Common Signal	I	—
3	—	RD	RI40	Left Auxiliary Audio Signal	I	—
4	-	-	-	Not Occupied	-	—
5	—	D-GN	RA14	Backup Lamp Supply Voltage Signal	I	—
6-9	—	—	—	Not Occupied	—	—
10	—	L-BU	RA40	Multi Remote Entry Signal	I	—
11-12	—	—	—	Not Occupied	—	—
13	—	BK	RAE1	Ground	I	—
14	—	D-GN	RT05	Cellular Telephone Microphone Signal	I	—
15	—	RD	RT07	Cellular Telephone Microphone Supply Voltage	I	—
16	—	BK	RTE2	Ground	I	—
17-19	—	—	—	Not Occupied	—	—
20	—	WH	RA60	Run/Crank Ignition Voltage	I	—
21	—	D-BU	RG06	Camera Signal (+)	I	—
22	—	BK	RGE1	Ground	I	—
23	—	D-GN	RG04	Camera 6 Volt Supply Volt	I	—
24	—	YE	RG05	Camera Signal (-)	I	—

A11 Radio X3

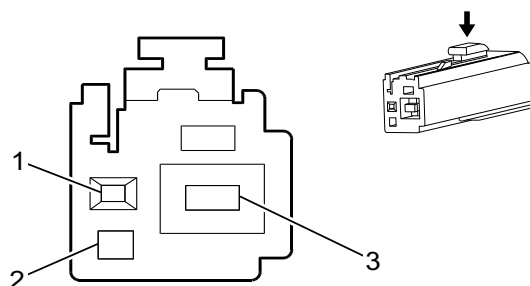

4144412

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: Not Available
 Service Connector: Service by Harness - See Parts Catalog
 Description: 3-Way F (GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

A11 Radio X3

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BK	—	Antenna Amplifier ON Signal	I	—
2	—	BK	—	AM/FM Antenna Signal	I	—
3	—	—	—	Not Occupied	—	—

A11 Radio X4 (CWM)

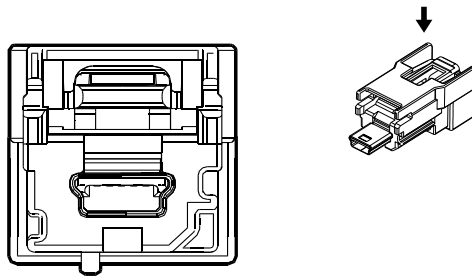

2830945

Connector Part Information

Harness Type: Instrument Panel LVDS
 OEM Connector: 111014-9000
 Service Connector: Service by Cable Assembly - See Parts Catalog
 Description: 5-Way M 2.0 Mini B USB Type (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Cable Assembly - See Parts Catalog	Not Available	Not Available	Not Available

A11 Radio X4 (CWM)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	LVDS	—	Navigation Display Signal	I	—

A11 Radio X5 (CWM)

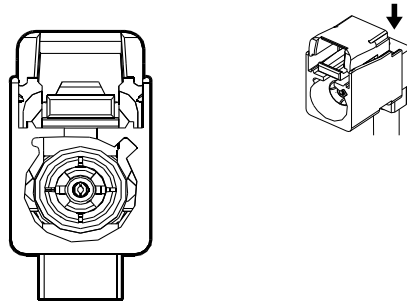

3028806

Connector Part Information

Harness Type: Instrument Panel COAX
 OEM Connector: Not Available
 Service Connector: Service by Cable Assembly - See Part Catalog
 Description: 1-Way F Coax Type (BU)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Cable Assembly - See Part Catalog	Not Available	Not Available	Not Available

A11 Radio X5 (CWM)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	Coax	—	Coaxial Antenna GPS Signal	I	—

A11 Radio X6 (CWM)

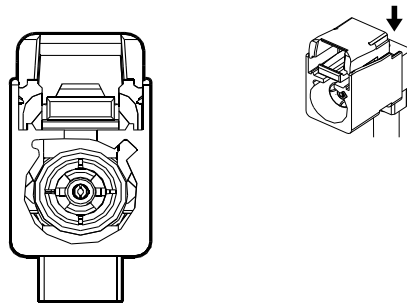

3028806

Connector Part Information

Harness Type: Instrument Panel COAX
 OEM Connector: Not Available
 Service Connector: Service by Cable Assembly - See Part Catalog
 Description: 1-Way F Coax Type (PK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Cable Assembly - See Part Catalog	Not Available	Not Available	Not Available

A11 Radio X6 (CWM)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	Coax	—	Coaxial Antenna XM Signal	I	—

A23D Door Latch Assembly - Driver

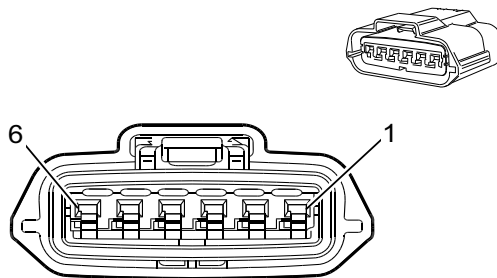

4065430

Connector Part Information

Harness Type: Driver Door
 OEM Connector: E06FGY-RS
 Service Connector: Service by Harness - See Parts Catalog
 Description: 6-Way F 090 Series, Sealed (GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

A23D Door Latch Assembly - Driver

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BN	PD18	Door Lock Motor Lock Control	I	—
2	—	WH	PD19	Driver Door Lock Motor Unlock Control	I	—
3	—	—	—	Not Occupied	—	—
4	—	BK	PDE7	Ground	I	—
5	—	WH	PD28	Door Lock Key Switch Unlock Signal	I	—
6	—	WH	PD17	Door Lock Key Switch Lock Signal	I	—

A23P Door Latch Assembly - Passenger

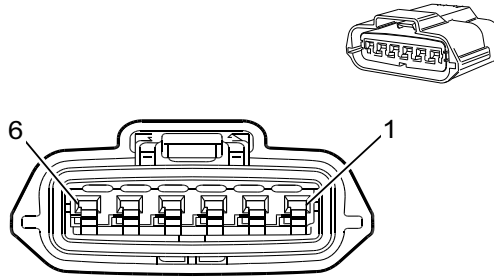

4065430

Connector Part Information

Harness Type: Passenger Door
 OEM Connector: E06FGY-RS
 Service Connector: Service by Harness - See Parts Catalog
 Description: 6-Way F 090 Series, Sealed (GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

A23P Door Latch Assembly - Passenger

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1-4	—	—	—	Not Occupied	—	—
5	—	BN	PD20	Passenger Door Lock Motor Lock Control	I	—
6	—	WH	PD21	Passenger Door Lock Motor Unlock Control	I	—

A26 HVAC Controls

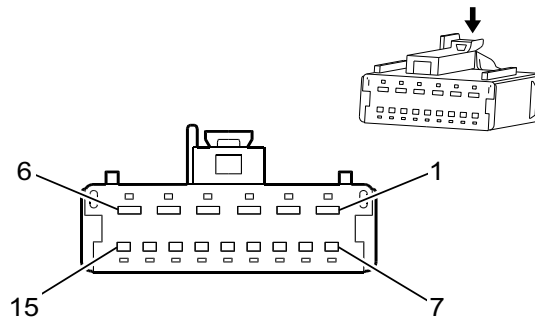

4083980

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: SEA09FB-SHA6
 Service Connector: Service by Harness - See Parts Catalog
 Description: 15-Way F 060, 2.8 Series (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

A26 HVAC Controls

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BK	HAE6	Ground	I	—
2	—	PK	HA03	Blower Motor High Speed Control	I	—
3	—	D-BU	HA04	Blower Motor Medium High Speed Control	I	—
4	—	RD	HA05	Blower Motor Medium Low Speed Control	I	—
5	—	WH	HA06	Blower Motor Low Speed Control	I	—
6	—	BN	HA07	Blower Motor On/Off Switch Signal	I	—
7	—	BK	HAE4	Ground	I	—
8	—	D-GN	HA09	Blower Motor Relay Supply Voltage	I	—
9	—	L-BU	HA11	A/C Request Indicator Signal	I	—
10	—	YE	HA20	A/C Request Switch Signal	I	—
11	—	—	—	Not Occupied	—	—
12	—	BK	HAE1	Ground	I	—
13	—	GY	NA03	Rear Defog Switch Signal	I	—
14	—	BN	NA02	Rear Defogger Relay Supply Voltage	I	—
15	—	BN	HA30	Tail Lamps Relay Supply Voltage	I	—

B1 A/C Refrigerant Pressure Sensor

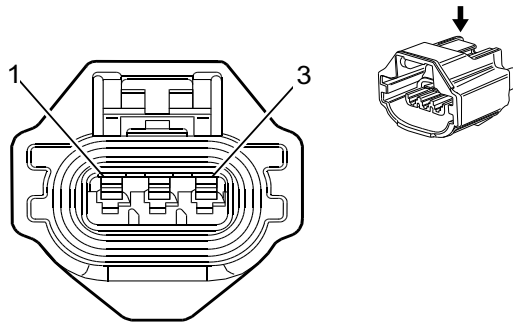

3420254

Connector Part Information

Harness Type: Engine Compartment
 OEM Connector: RK03FB
 Service Connector: Service by Harness - See Parts Catalog
 Description: 3-Way F 090 Series, Sealed (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B1 A/C Refrigerant Pressure Sensor

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	WH	HA33	A/C Refrigerant Pressure Sensor 5 Volt Reference	I	—
2	—	L-BU	HA31	A/C Refrigerant Pressure Sensor Signal	I	—
3	—	GY	HA32	A/C Refrigerant Pressure Sensor Low Reference	I	—

B5LF Wheel Speed Sensor - Left Front

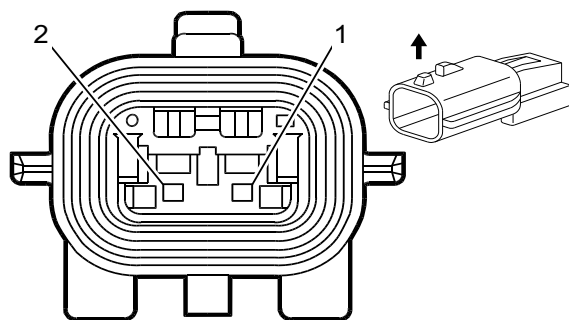

2215914

Connector Part Information

Harness Type: Engine Compartment
 OEM Connector: RH02MB
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way M 064 RH Series, Sealed (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B5LF Wheel Speed Sensor - Left Front

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BN	BS27	Wheel Speed Sensor Low Reference Left Front	I	—
2	—	YE	BS26	Wheel Speed Sensor Signal Left Front	I	—

B5LR Wheel Speed Sensor - Left Rear

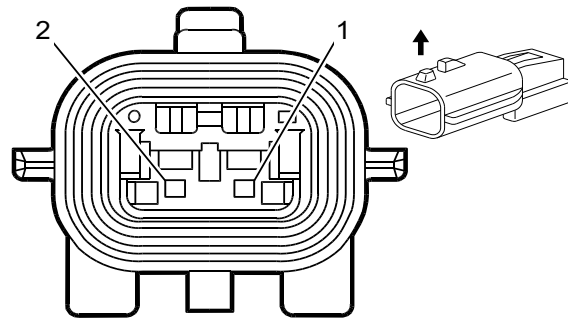

2215914

Connector Part Information

Harness Type: Body
 OEM Connector: RH02MGY
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way M 064 RH Series, Sealed (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B5LR Wheel Speed Sensor - Left Rear

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	RD	BS31	Wheel Speed Sensor Signal Left Rear	I	—
2	—	WH	BS30	Wheel Speed Sensor Low Reference Left Rear	I	—

B5RF Wheel Speed Sensor - Right Front

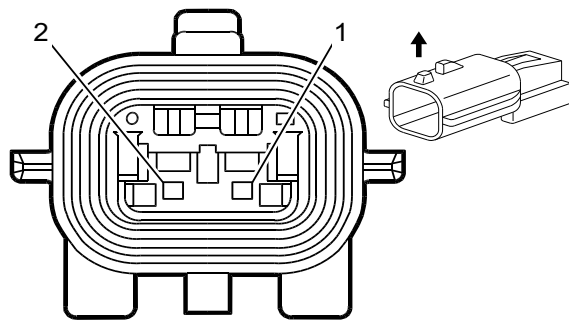

2215914

Connector Part Information

Harness Type: Engine Compartment
 OEM Connector: RH02MB
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way M 064 RH Series, Sealed (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B5RF Wheel Speed Sensor - Right Front

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	GN	BS25	Wheel Speed Sensor Low Reference Right Front	I	—
2	—	RD	BS24	Wheel Speed Sensor Signal Right Front	I	—

B5RR Wheel Speed Sensor - Right Rear

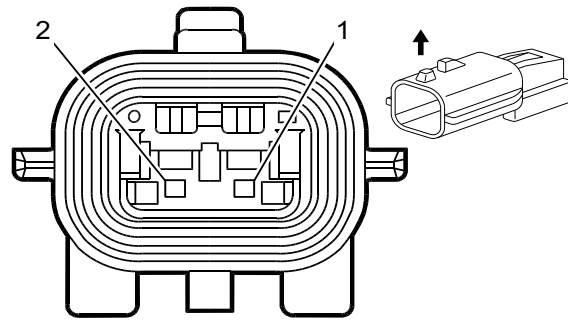

2215914

Connector Part Information

Harness Type: Body
 OEM Connector: RH02MGY
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way M 064 RH Series, Sealed (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B5RR Wheel Speed Sensor - Right Rear

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	PU	BS29	Wheel Speed Sensor Signal Right Rear	I	—
2	—	BU	BS28	Wheel Speed Sensor Low Reference Right Rear	I	—

B9 Ambient Air Temperature Sensor

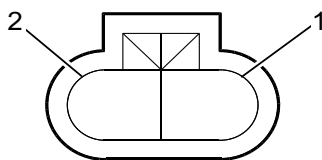

4083622

Connector Part Information

Harness Type: Engine Compartment

OEM Connector: RS02FB

Service Connector: Service by Harness - See Parts Catalog

Description: 2-Way F 040 Series, Sealed (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B9 Ambient Air Temperature Sensor

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	L-GN	MA62	Outside Ambient Temperature Sensor Low Reference	I	—
2	—	VT	MA61	Outside Ambient Air Temperature Sensor Signal	I	—

B14A Transmission Output Shaft Speed Sensor

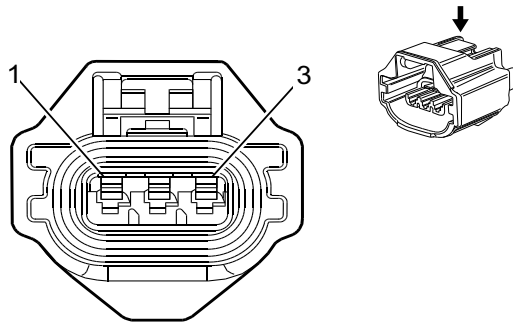

3420254

Connector Part Information

Harness Type: Engine
 OEM Connector: RK03FB
 Service Connector: Service by Harness - See Parts Catalog
 Description: 3-Way F 090 Series, Sealed (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B14A Transmission Output Shaft Speed Sensor

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	YE	BA51	Sensor Low Reference	I	—
2	—	RD	BA31	Transmission Output Speed Sensor Signal	I	—
3	—	L-GN	BA52	Ignition Main Relay Supply Voltage	I	—

B14B Transmission Turbine Speed Sensor

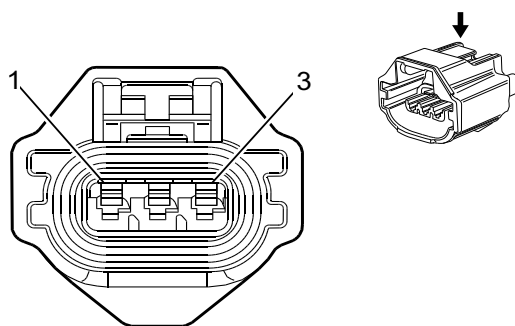

3420254

Connector Part Information

Harness Type: Engine
 OEM Connector: RK03FB
 Service Connector: Service by Harness - See Parts Catalog
 Description: 3-Way F 090 Series, Sealed (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B14B Transmission Turbine Speed Sensor

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	YE	BA53	Sensor Low Reference	I	—
2	—	L-BU	BA54	Transmission Turbine Speed Sensor Signal	I	—
3	—	L-GN	BA55	Ignition Main Relay Supply Voltage	I	—

B14C Transmission Input Speed Sensor

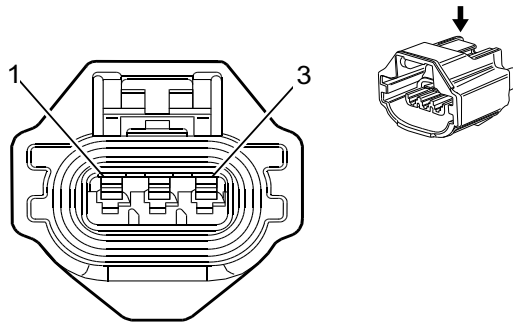

3420254

Connector Part Information

Harness Type: Engine
 OEM Connector: RK03FB
 Service Connector: Service by Harness - See Parts Catalog
 Description: 3-Way F 090 Series, Sealed (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B14C Transmission Input Speed Sensor

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	YE	BA50	Sensor Low Reference	I	—
2	—	OG	BA29	Transmission Input Speed Sensor Signal	I	—
3	—	L-GN	BA30	Ignition Main Relay Supply Voltage	I	—

B18 Battery Current Sensor

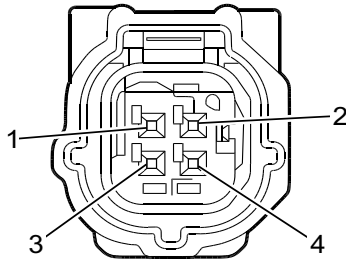

4083947

Connector Part Information

Harness Type: Engine
 OEM Connector: SAZ04FGY
 Service Connector: Service by Harness - See Parts Catalog
 Description: 4-Way F 0.64 Series (GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B18 Battery Current Sensor

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	—	Not Occupied	—	—
2	—	BK	AI01	Sensor Low Reference	I	—
3	—	GN	AI02	Current Sensor Signal	I	—
4	—	BN	AI03	Sensor 5 Volt Reference	I	—

B20 Brake Fluid Level Switch

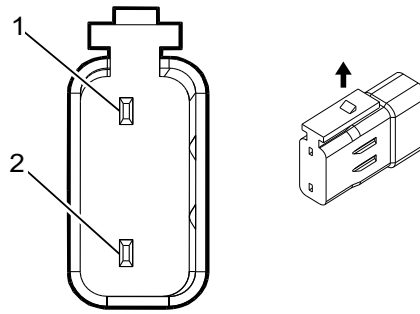

2684354

Connector Part Information

Harness Type: Engine Compartment
 OEM Connector: YV02FGY
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F (GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B20 Brake Fluid Level Switch

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BN	MA06	Brake Fluid Level Sensor Signal	I	—
2	—	L-GN	MAE5	Ground	I	—

B23 Camshaft Position Sensor

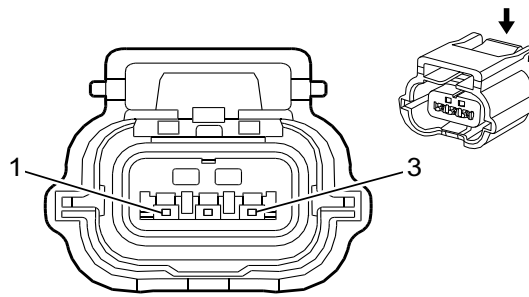

2434557

Connector Part Information

Harness Type: Engine
 OEM Connector: RH03FB
 Service Connector: Service by Harness - See Parts Catalog
 Description: 3-Way F 0.64 Series, Sealed (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B23 Camshaft Position Sensor

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BU	AC44	Camshaft Position Sensor 5 Volt Reference	I	—
2	—	BK	AC38	Camshaft Position Sensor Low Reference	I	—
3	—	RD	AC37	Camshaft Position Sensor Signal	I	—

B24 Cellular Phone Microphone (CWM or UPF)

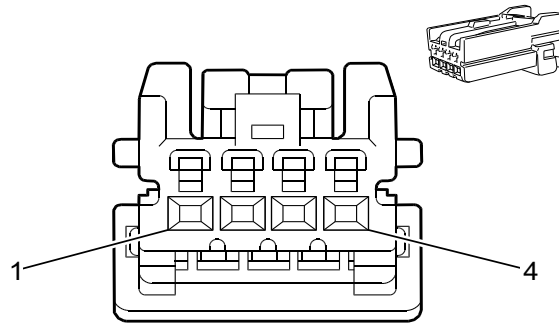

2011728

Connector Part Information

Harness Type: Headliner
 OEM Connector: TK04FW
 Service Connector: Service by Harness - See Parts Catalog
 Description: 4-Way F040 III Series (NA)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B24 Cellular Phone Microphone (CWM or UPF)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BK	RT05	Cellular Telephone Microphone Signal	I	—
2	—	Bare	RTE2	Cellular Telephone Microphone Low Reference	I	—
3	—	—	—	Not Occupied	—	—
4	—	RD	RT07	Cellular Telephone Microphone Supply Voltage	I	—

B26 Crankshaft Position Sensor

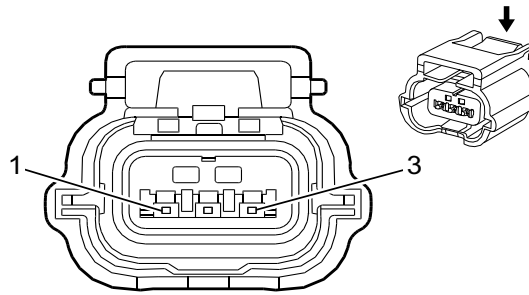

2434557

Connector Part Information

Harness Type: Engine
 OEM Connector: RH03FB
 Service Connector: Service by Harness - See Parts Catalog
 Description: 3-Way F 0.64 Series, Sealed (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B26 Crankshaft Position Sensor

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	WH	AC35	Crankshaft Position Sensor Signal	I	—
2	—	RD	AC36	Crankshaft Position Sensor Low Reference	I	—
3	—	BK	AC45	Crankshaft Position Sensor 5 Volt Reference	I	—

B28C Door Ajar Switch - Rear Cargo

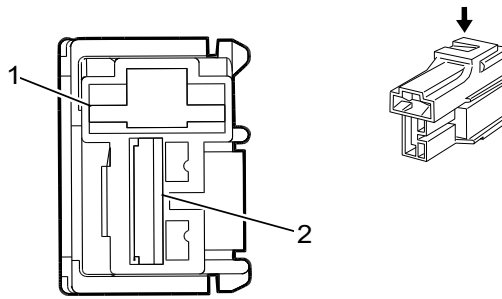

4062174

Connector Part Information

Harness Type: Back Door
 OEM Connector: P02FB-Z
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F 250 Series (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B28C Door Ajar Switch - Rear Cargo

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	WH	PD40	Rear Cargo Door Ajar Switch Signal	I	—
2	—	BK	PDE8	Ground	I	—

B28D Door Ajar Switch - Driver

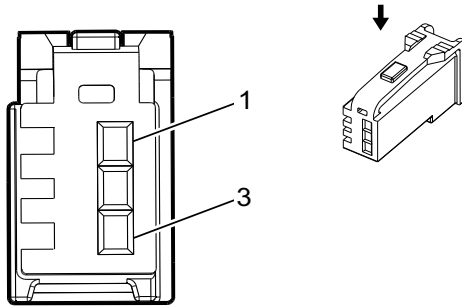

2684363

Connector Part Information

Harness Type: Body
 OEM Connector: A03FW
 Service Connector: Service by Harness - See Parts Catalog
 Description: 3-Way F 030 Series (NA)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B28D Door Ajar Switch - Driver

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	L-GN	PD13	Driver Door Ajar Switch Signal	I	—
2-3	—	—	—	Not Occupied	—	—

B28E Door Ajar Switch - Left Sliding

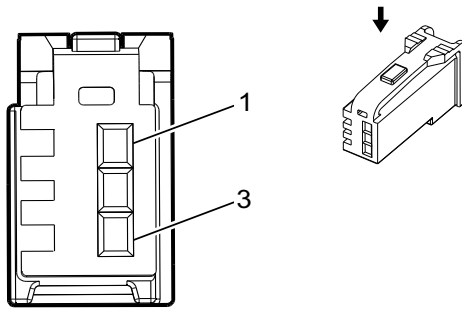

2684363

Connector Part Information

Harness Type: Body
 OEM Connector: A03FW
 Service Connector: Service by Harness - See Parts Catalog
 Description: 3-Way F 030 Series (NA)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B28E Door Ajar Switch - Left Sliding

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	L-GN	PD16	Left Sliding Door Ajar Switch Signal	I	—
2-3	—	—	—	Not Occupied	—	—

B28F Door Ajar Switch - Right Sliding

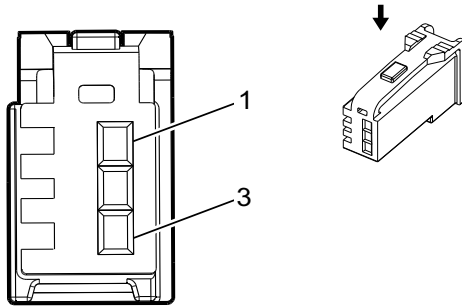

2684363

Connector Part Information

Harness Type: Body
 OEM Connector: A03FW
 Service Connector: Service by Harness - See Parts Catalog
 Description: 3-Way F 090 Series, Sealed (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B28F Door Ajar Switch - Right Sliding

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	L-GN	PD15	Right Sliding Door Ajar Switch Signal	I	—
2-3	—	—	—	Not Occupied	—	—

B28P Door Ajar Switch - Passenger

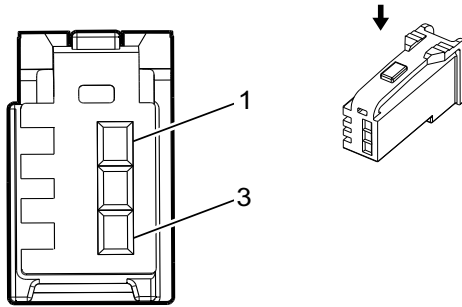

2684363

Connector Part Information

Harness Type: Body
 OEM Connector: A03FW
 Service Connector: Service by Harness - See Parts Catalog
 Description: 3-Way F 030 Series (NA)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B28P Door Ajar Switch - Passenger

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	L-BU	PD14	Passenger Door Ajar Switch Signal	I	—
2-3	—	—	—	Not Occupied	—	—

B34 Engine Coolant Temperature Sensor

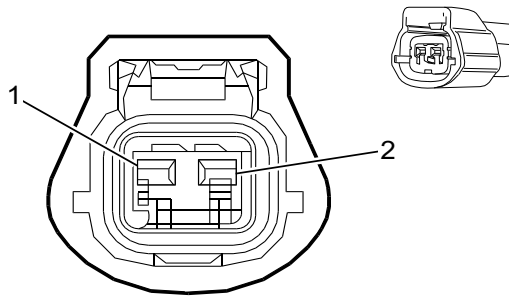

2684330

Connector Part Information

Harness Type: Engine
 OEM Connector: E02FGY-RS
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F Sealed (GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B34 Engine Coolant Temperature Sensor

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BK	AC41	Coolant Temperature Sensor Low Reference	I	—
2	—	PK	AC39	Engine Coolant Temperature Sensor Signal	I	—

B36 Engine Oil Temperature Sensor

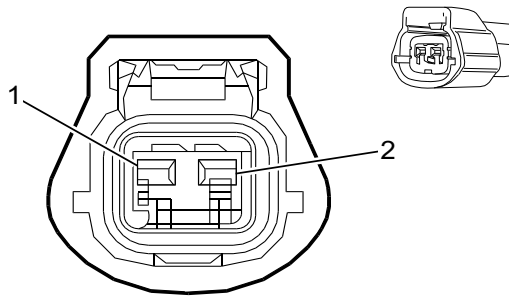

2684330

Connector Part Information

Harness Type: Engine
 OEM Connector: E02FGY-RS
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F Sealed (GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B36 Engine Oil Temperature Sensor

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	YE	AB31	Oil Temperature Sensor Signal	I	—
2	—	OG	AB32	Oil Temperature Sensor Low Reference	I	—

B37B Engine Oil Pressure Sensor

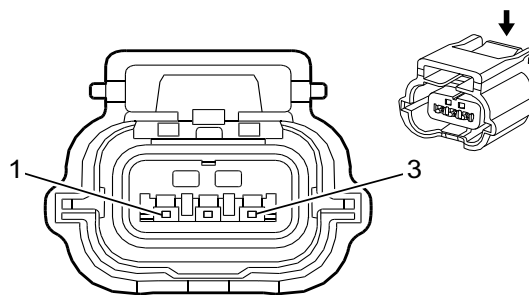

2434557

Connector Part Information

Harness Type: Engine
 OEM Connector: RH03FB
 Service Connector: Service by Harness - See Parts Catalog
 Description: 3-Way F 0.64 Series, Sealed (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B37B Engine Oil Pressure Sensor

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	RD	AA49	Oil Pressure Sensor 5 Volt Reference	I	—
2	—	WH	AA50	Oil Pressure Sensor Low Reference	I	—
3	—	GN	AA51	Oil Pressure Sensor Signal	I	—

B39 A/C Evaporator Temperature Sensor

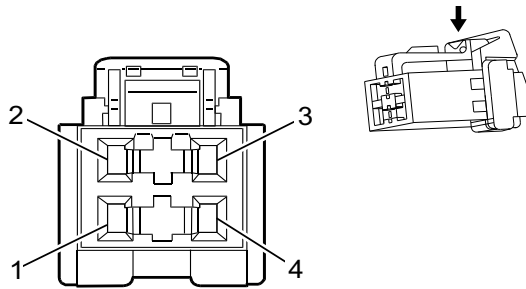

4077142

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: C04FBR
 Service Connector: Service by Harness - See Parts Catalog
 Description: 4-Way F (BN)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B39 A/C Evaporator Temperature Sensor

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	D-GN	HA10	Blower Motor Relay Supply Voltage	I	—
2	—	BK	HAE3	Ground	I	—
3	—	PK	HA12	EVAP Core Temperature Sensor Signal	I	—
4	—	-	-	Not Occupied	I	—

B52A Heated Oxygen Sensor 1

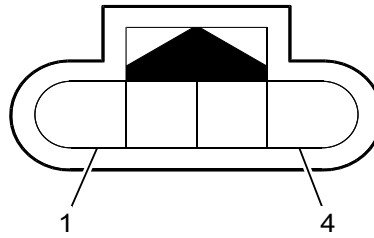

4083255

Connector Part Information

|
 Harness Type: Engine
 OEM Connector: RH04MDGY-BR
 Service Connector: Service by Harness - See Parts Catalog
 Description: 4-Way M, Sealed (BN)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B52A Heated Oxygen Sensor 1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	D-BU	AC27	Heated Oxygen Sensor Heater Low Control Bank 1 Sensor (1)		—
2	—	PK	AC30	Heated Oxygen Sensor High Signal Bank 1 Sensor (1)		—
3	—	D-GN	AC28	Heated Oxygen Sensor Low Signal Bank 1 Sensor (1)		—
4	—	RD	AC29	Ignition Main Relay Supply Voltage		—

B52B Heated Oxygen Sensor 2

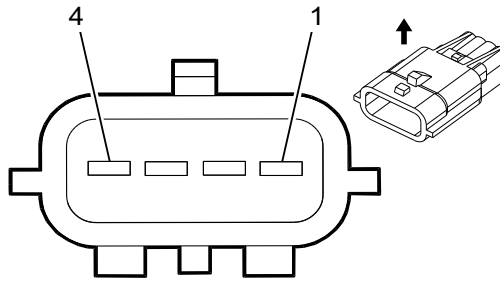

2684355

Connector Part Information

Harness Type: Engine
 OEM Connector: RH04MB
 Service Connector: Service by Harness - See Parts Catalog
 Description: 4-Way M 0.64 Series, Sealed (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B52B Heated Oxygen Sensor 2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	D-BU	AC89	Heated Oxygen Sensor Heater Low Control Bank 1 Sensor (2)	I	—
2	—	D-GN	AC88	Heated Oxygen Sensor Low Signal Bank 1 Sensor (2)	I	—
3	—	RD	AC87	Ignition Main Relay Supply Voltage	I	—
4	—	WH	AC86	Heated Oxygen Sensor High Signal Bank 1 Sensor (2)	I	—

B56 Ignition Key In Switch

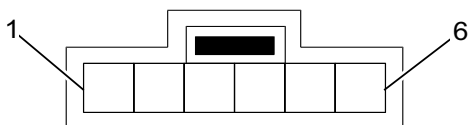

4108594

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: TK06MGY
 Service Connector: Service by Harness - See Parts Catalog
 Description: 6-Way M 040 Series (GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B56 Ignition Key In Switch

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1-4	—	—	—	Not Occupied	—	—
5	—	L-GN	PD32	Battery Positive Voltage	I	—
6	—	WH	PD31	Key In Ignition Switch Signal	I	—

B59 Front Impact Sensor

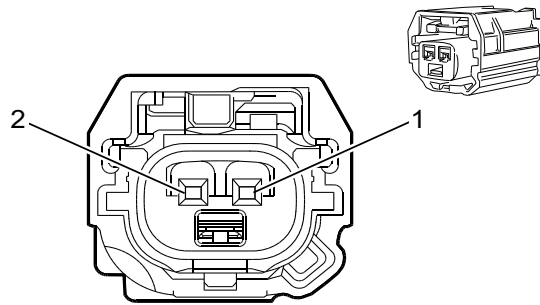

4065461

Connector Part Information

Harness Type: Engine Compartment
 OEM Connector: HK02FY-1V-EX-LC
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F040 Series, Sealed (YE)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B59 Front Impact Sensor

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	WH	FB04	Middle Front Impact Sensing Module Signal	I	—
2	—	BK	FB05	Middle Front Impact Sensing Module Low Reference	I	—

B62P Seat Position Sensor - Passenger (1)

Connector Part Information

Harness Type: Passenger Seat Position Sensor
 OEM Connector: Not Available
 Service Connector: Service by Harness - See Parts Catalog
 Description: 3-Way F (BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B62P Seat Position Sensor - Passenger (1)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	GY	—	Passenger Seat Position Sensor 1 Low Reference	I	—
2	—	L-GN	—	Passenger Seat Position Sensor 1 Signal	I	—
3	—	RD	—	Passenger Seat Position Sensor 1 12V Supply	I	—

B62P Seat Position Sensor - Passenger (2)

Connector Part Information

Harness Type: Passenger Seat Position Sensor
 OEM Connector: Not Available
 Service Connector: Service by Harness - See Parts Catalog
 Description: 3-Way F (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B62P Seat Position Sensor - Passenger (2)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	PK	—	Passenger Seat Position Sensor 2 Low Reference	I	—
2	—	L-BU	—	Passenger Seat Position Sensor 2 Signal	I	—
3	—	YE	—	Passenger Seat Position Sensor 2 12V Supply	I	—

B63LF Side Impact Sensor - Left Front

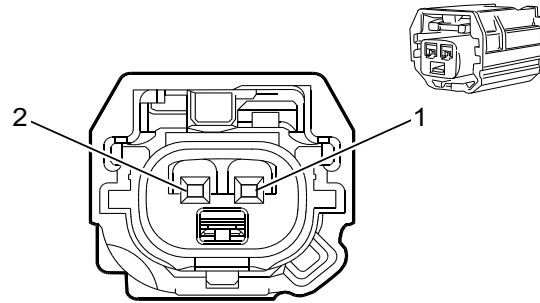

4065461

Connector Part Information

Harness Type: Driver Door
 OEM Connector: HK02FYU-1V-EX-LC
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F 040 Series, Sealed (YE)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B63LF Side Impact Sensor - Left Front

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	WH	FB53	Left Front Side Impact Sensing Module Low Reference	I	—
2	—	OG	FB54	Left Front Side Impact Sensing Module Signal	I	—

B63LM Side Impact Sensor - Left Middle

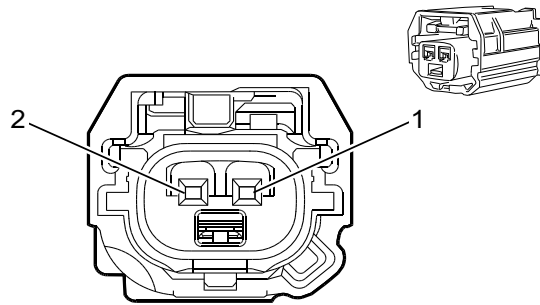

4065461

Connector Part Information

Harness Type: Body
 OEM Connector: HK02FY-1V-EX-LC
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F040 Series, Sealed (YE)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B63LM Side Impact Sensor - Left Middle

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	PK/BU	FB42	Left Middle Side Impact Sensing Module Signal	I	—
2	—	D-BU	FB43	Left Middle Side Impact Sensing Low Reference	I	—

B63RF Side Impact Sensor - Right Front

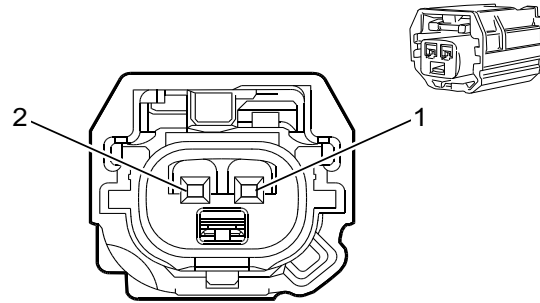

4065461

Connector Part Information

Harness Type: Passenger Door
 OEM Connector: HK02FY-1V-EX-LC
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F040 Series, Sealed (YE)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B63RF Side Impact Sensor - Right Front

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	RD	FB51	Right Front Side Impact Sensing Module Signal	I	—
2	—	D-GN	FB52	Right Front Side Impact Sensing Module Low Reference	I	—

B63RM Side Impact Sensor - Right Middle

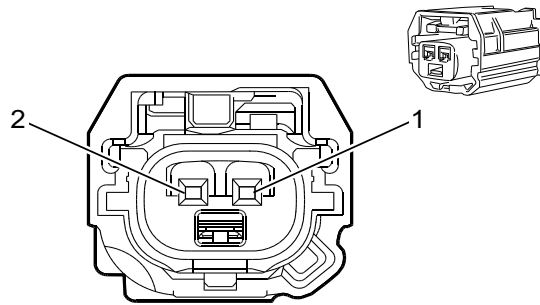

4065461

Connector Part Information

Harness Type: Body
 OEM Connector: HK02FY-1V-EX-LC
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F 040 Series, Sealed (YE)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B63RM Side Impact Sensor - Right Middle

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	RD	FB41	Right Middle Side Impact Sensing Module Low Reference	I	—
2	—	WH	FB50	Right Middle Side Impact Sensing Module Signal	I	—

B68 Knock Sensor

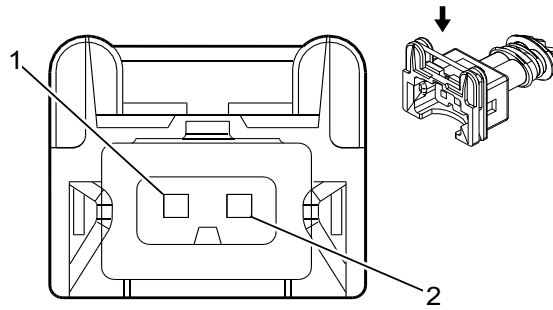

2447141

Connector Part Information

Harness Type: Engine
 OEM Connector: BS02FB-AHY-S
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F 2.8 Timer Series, Sealed (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B68 Knock Sensor

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	Bare	ABE5	Knock Sensor Low Reference	I	—
2	—	BK	AA60	Knock Sensor Signal	I	—

B75 Mass Air Flow Sensor

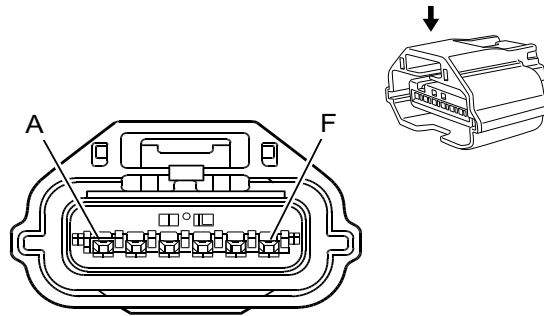

1825564

Connector Part Information

Harness Type: Engine
 OEM Connector: RH06FB
 Service Connector: Service by Harness - See Parts Catalog
 Description: 6-Way F 0.64 Series, Sealed (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B75 Mass Air Flow Sensor

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	—	—	—	Not Occupied	—	—
B	—	BN	AC96	Engine Controls Ignition Relay Supply Voltage	I	—
C	—	L-GN	AC40	Mass Air Flow Sensor Low Reference	I	—
D	—	D-GN	AC34	Mass Air Flow Sensor Signal	I	—
E	—	PU	AC72	Intake Air Temperature Sensor Low Reference	I	—
F	—	L-GN	AC47	Intake Air Temperature Sensor Signal	I	—

B78E Rear Object Sensor - Left Middle (UD7)

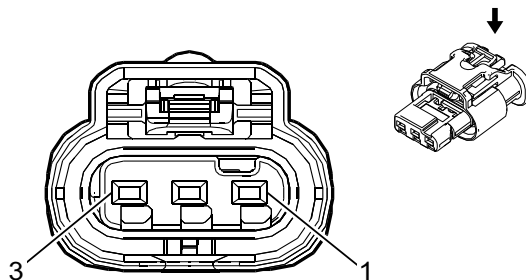

2889711

Connector Part Information

Harness Type: Rear Bumper
 OEM Connector: ADZ03FB
 Service Connector: Service by Harness - See Parts Catalog
 Description: 3-Way F 1.2 Multiple Contact Point Series, Sealed (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B78E Rear Object Sensor - Left Middle (UD7)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	L-GN/BN	FD11	Object Sensor Supply Voltage	I	—
2	—	OG	FD13	Left Rear Middle Object Sensor Signal	I	—
3	—	YE	FD12	Object Sensor Low Reference	I	—

B78F Rear Object Sensor - Right Middle (UD7)

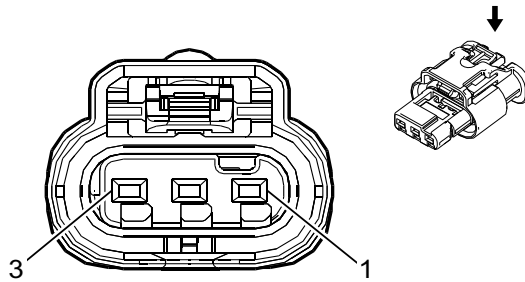

2889711

Connector Part Information

Harness Type: Rear Bumper
 OEM Connector: ADZ03FB
 Service Connector: Service by Harness - See Parts Catalog
 Description: 3-Way F 1.2 Multiple Contact Point Series, Sealed (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B78F Rear Object Sensor - Right Middle (UD7)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	L-GN/BN	FD14	Object Sensor Supply Voltage	I	—
2	—	L-GN	FD16	Right Rear Middle Object Sensor Signal	I	—
3	—	YE	FD15	Object Sensor Low Reference	I	—

B78G Rear Object Sensor - Left Outer (UD7)

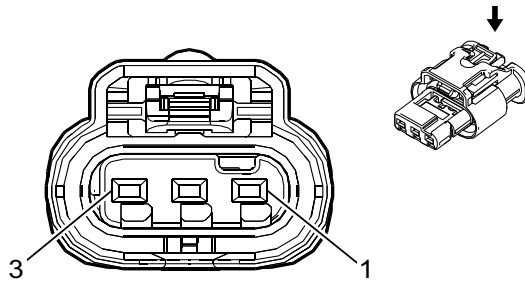

2889711

Connector Part Information

Harness Type: Rear Bumper
 OEM Connector: ADZ03FB
 Service Connector: Service by Harness - See Parts Catalog
 Description: 3-Way F 1.2 Multiple Contact Point Series, Sealed (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B78G Rear Object Sensor - Left Outer (UD7)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	L-GN/BN	FD08	Object Sensor Supply Voltage	I	—
2	—	PK	FD10	Left Rear Corner Object Sensor Signal	I	—
3	—	YE	FD09	Object Sensor Low Reference	I	—

B78H Rear Object Sensor - Right Outer (UD7)

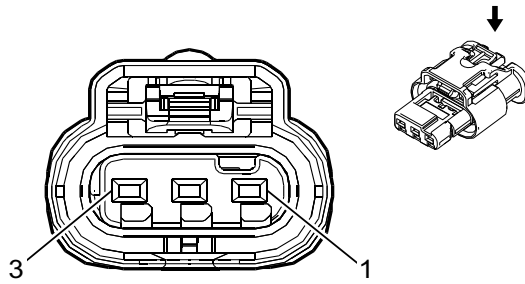

2889711

Connector Part Information

Harness Type: Rear Bumper

OEM Connector: ADZ03FB

Service Connector: Service by Harness - See Parts Catalog

Description: 3-Way F 1.2 Multiple Contact Point Series, Sealed (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B78H Rear Object Sensor - Right Outer (UD7)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	L-GN/BN	FD17	Object Sensor Supply Voltage	I	—
2	—	L-GN	FD19	Right Rear Corner Object Sensor Signal	I	—
3	—	YE	FD18	Object Sensor Low Reference	I	—

B80 Park Brake Switch

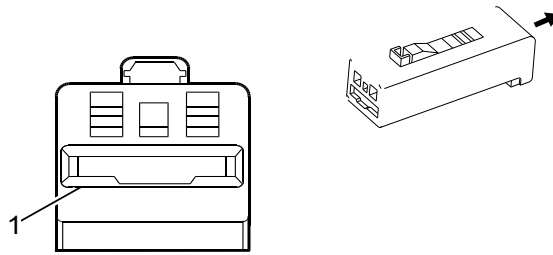

2178166

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: P01FB-A
 Service Connector: Service by Harness - See Parts Catalog
 Description: 1-Way F 250 Series (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B80 Park Brake Switch

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	L-BU	MA07	Park Brake Switch Signal	I	—

B81 Park/Neutral Position Switch

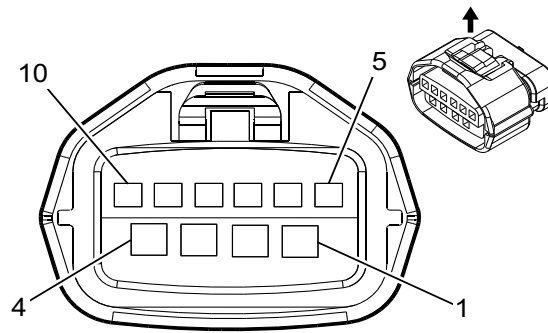

3420253

Connector Part Information

Harness Type: Engine
 OEM Connector: YDX06FB-HS4
 Service Connector: Service by Harness - See Parts Catalog
 Description: 10-Way F, Sealed (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B81 Park/Neutral Position Switch

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	L-GN	AH04	Neutral Safety Switch Park/Neutral Signal	I	—
2	—	YE	BA35	Park/Neutral Position Switch Range Signal (N)	I	—
3	—	D-GN	BA34	Park/Neutral Position Switch Range Signal (R)	I	—
4	—	RD	AH05	Ignition Main Relay Supply Voltage	I	—
5	—	VT	BA33	Park/Neutral Position Switch Range Signal (L)	I	—
6	—	PK	BA27	Park/Neutral Position Switch Range Signal (P)	I	—
7	—	L-BU	LR01	Ignition Main Relay Supply Voltage	I	—
8	—	—	—	Not Occupied	—	—
9	—	WH	BA36	Park/Neutral Position Switch Range Signal (D)	I	—
10	—	—	—	Not Occupied	—	—

B87 Rearview Camera (UVC)

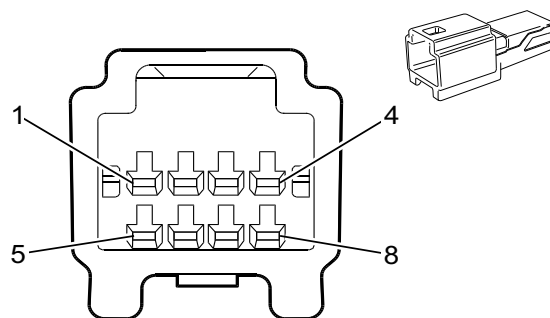

4062948

Connector Part Information

Harness Type: Back Door
 OEM Connector: TH08MW-NH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 8-Way M 025 Series (NA)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B87 Rearview Camera (UVC)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	D-GN	RG04	Camera 6 Volt Supply Voltage	I	—
2	—	YE	RG05	Camera Signal (-)	I	—
3	—	D-BU	RG06	Camera Signal (+)	I	—
4	—	Bare	RGE1	Camera Shield Extension	I	—
5-8	—	—	—	Not Occupied	—	—

B99 Steering Wheel Angle Sensor

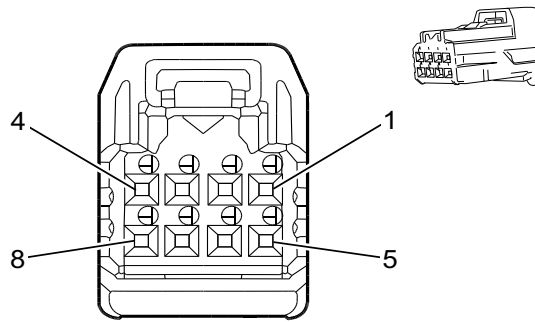

4062624

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: TH08FW-NH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 8-Way F 025 Series (NA)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B99 Steering Wheel Angle Sensor

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BK	BWE1	Ground	I	—
2	—	PK	BW03	CAN Bus High Serial Data (-)	I	—
3	—	—	—	Not Occupied	—	—
4	—	VT	BW01	Ignition Main Relay Supply Voltage	I	—
5	—	BU	BW02	CAN Bus High Serial Data (+)	I	—
6-8	—	—	—	Not Occupied	—	—

B103 Stop Lamp Switch

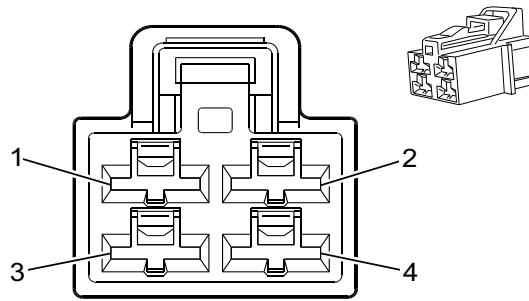

2684335

Connector Part Information

Harness Type: Engine Compartment
 OEM Connector: M04FW-LC
 Service Connector: Service by Harness - See Parts Catalog
 Description: 4-Way F 250 Series (NA)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B103 Stop Lamp Switch

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	D-GN	FC04	Stop Lamp Switch Signal	I	—
2	—	WH	FC03	Run/Crank Ignition Voltage	I	—
3	—	RD	LS02	Stop Lamp Supply Voltage	I	—
4	—	D-BU	LS01	Battery Positive Voltage	I	—

B107 Accelerator Pedal Position Sensor

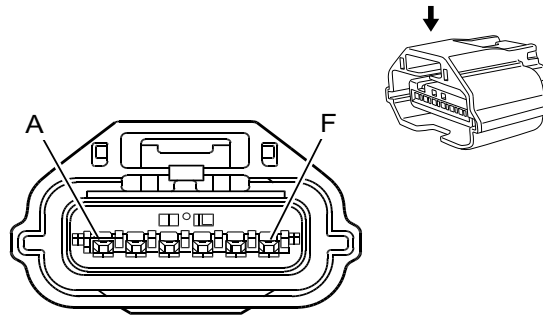

1825564

Connector Part Information

Harness Type: Engine Compartment
 OEM Connector: RH06FB
 Service Connector: Service by Harness - See Parts Catalog
 Description: 6-Way F 0.64 Series, Sealed (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B107 Accelerator Pedal Position Sensor

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	—	WH	AC63	Accelerator Pedal Position Signal (2)	I	—
B	—	BN	AC64	Accelerator Pedal Position Low Reference (2)	I	—
C	—	PU	AC61	Accelerator Pedal Position Low Reference (1)	I	—
D	—	L-BU	AC60	Accelerator Pedal Position Signal (1)	I	—
E	—	GY	AC62	Accelerator Pedal Position 5 Volt Reference (1)	I	—
F	—	RD	AC65	Accelerator Pedal Position 5 Volt Reference (2)	I	—

B118B Windshield Washer Fluid Level Switch

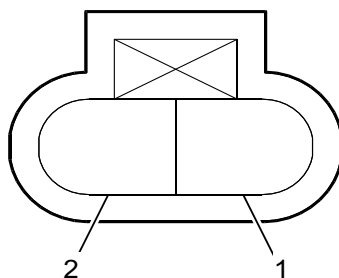

4078501

Connector Part Information

Harness Type: Engine Compartment
 OEM Connector: HS02FW
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F, Sealed (WH)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B118B Windshield Washer Fluid Level Switch

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	D-GN	WB01	Windshield Washer Fluid Level Sensor Signal	I	—
2	—	BK	WBE2	Ground	I	—

B119 Multi-axis Acceleration Sensor

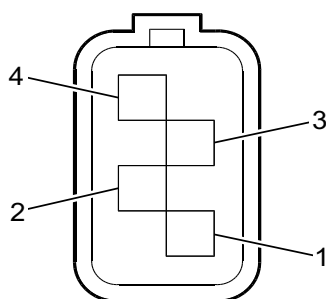

4073139

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: AAZ04FB
 Service Connector: Service by Harness - See Parts Catalog
 Description: 4-Way F, Sealed (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B119 Multi-axis Acceleration Sensor

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BK	BSE5	Ground	I	—
2	—	WH	BS47	CAN Bus High Serial Data (+)	I	—
3	—	PK	BS45	CAN Bus High Serial Data (-)	I	—
4	—	PU	BS43	Ignition Main Relay Supply Voltage	I	—

B150 Fuel Tank Pressure Sensor

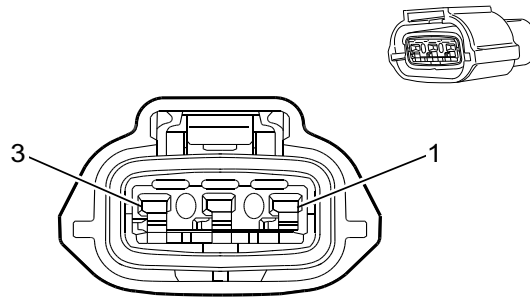

4065422

Connector Part Information

Harness Type: Body
 OEM Connector: E03FGY-RS
 Service Connector: Service by Harness - See Parts Catalog
 Description: 3-Way F 090 Series, Sealed (GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B150 Fuel Tank Pressure Sensor

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BN	AC80	Sensor 5 Volt Reference	I	—
2	—	L-GN	AC81	Fuel Tank Pressure Sensor Signal	I	—
3	—	BK	AC82	Sensor Low Reference	I	—

B153D Seat Belt Buckle - Driver

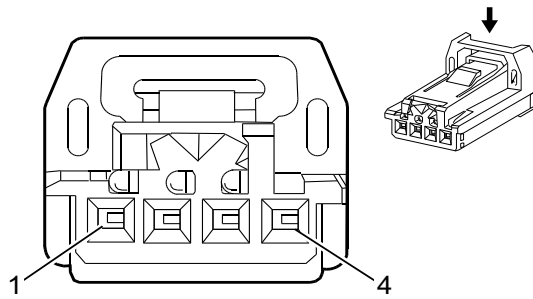

2294317

Connector Part Information

Harness Type: Body
 OEM Connector: TH04FW-NH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 4-Way F 1.5 Series, Sealed (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B153D Seat Belt Buckle - Driver

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	D-BU	FB06	Battery Positive Voltage	I	—
2	—	BK	FBE4	Ground	I	—
3-4	—	—	—	Not Occupied	—	—

B153P Seat Belt Buckle - Passenger

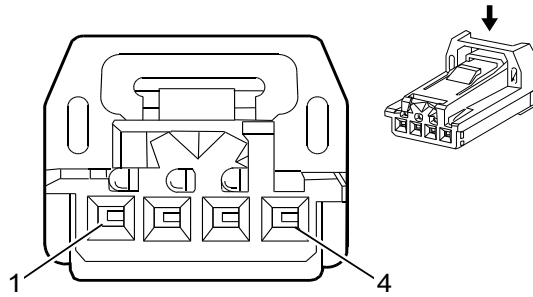

2294317

Connector Part Information

Harness Type: Body
 OEM Connector: TH04FW-NH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 4-Way F 1.5 Series, Sealed (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

B153P Seat Belt Buckle - Passenger

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	YE	FB07	Passenger Seat Belt Switch Signal	I	—
2	—	BK	FBE5	Ground	I	—
3-4	—	—	—	Not Occupied	—	—

C9 Ignition Coil Capacitor

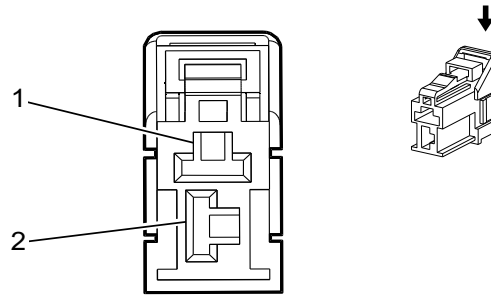

2268736

Connector Part Information

Harness Type: Engine
 OEM Connector: M02FW-LC
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F 250 Series (NA)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

C9 Ignition Coil Capacitor

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	VT	AC54	Engine Controls Ignition Relay Supply Voltage	I	—
2	—	BK	AE24	Ground	I	-

E4LR Turn Signal Lamp - Left Rear

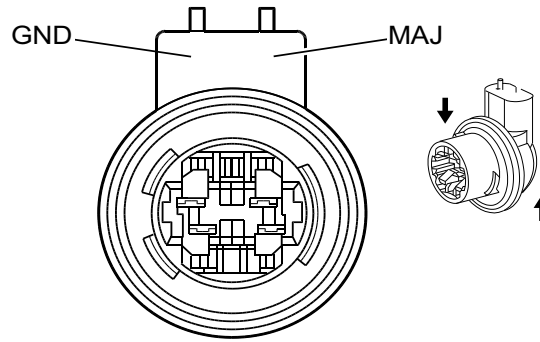

1290411

Connector Part Information

Harness Type: Left Tail Lamp Assembly
 OEM Connector: Not Available
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F, Sealed (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

E4LR Turn Signal Lamp - Left Rear

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
GND	—	BK	LTE1	Ground	I	—
	—	BK	LTE1	Ground	I	—
MAJ	—	D-GN	LD10	Left Turn Signal Lamp Supply Voltage	I	—

E4RR Turn Signal Lamp - Right Rear

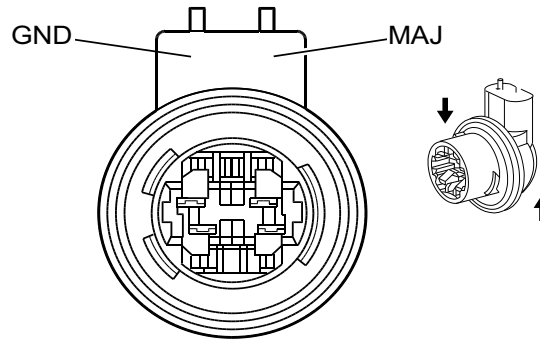

1290411

Connector Part Information

Harness Type: Right Tail Lamp Assembly
 OEM Connector: Not Available
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F, Sealed (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

E4RR Turn Signal Lamp - Right Rear

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
GND	—	BK	LTE2	Ground	I	—
	—	BK	LTE2	Ground	I	—
MAJ	—	D-GN	LD09	Right Turn Signal Lamp Supply Voltage	I	—

E4N Park/Turn Signal Lamp - Left

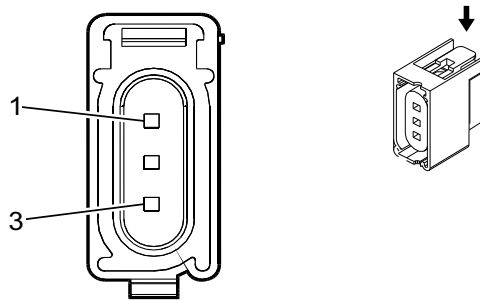

1639195

Connector Part Information

Harness Type: Engine Compartment
 OEM Connector: ZFJ-00703-UA
 Service Connector: Service by Harness - See Parts Catalog
 Description: 3-Way F Axial 3-Wire Connector Assembly, Sealed (BN)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

E4N Park/Turn Signal Lamp - Left

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BK	LDE8	Ground	I	—
2	—	YE	LT05	Tail Lamps Relay Supply Voltage	I	—
3	—	VT	LD18	Left Turn Signal Lamp Supply Voltage	I	—

E4P Park/Turn Signal Lamp - Right

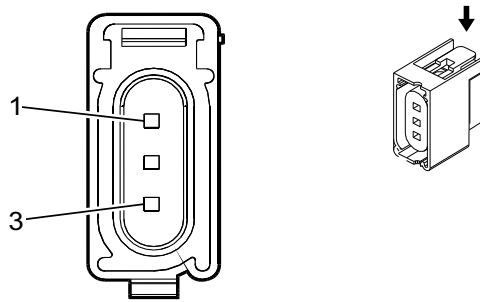

1639195

Connector Part Information

Harness Type: Engine Compartment
 OEM Connector: ZFJ-00703-UA
 Service Connector: Service by Harness - See Parts Catalog
 Description: 3-Way F Axial 3-Wire Connector Assembly, Sealed (BN)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

E4P Park/Turn Signal Lamp - Right

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BK	LDE7	Ground	I	—
2	—	PK	LT06	Tail Lamps Relay Supply Voltage	I	—
3	—	WH	LD17	Right Turn Signal Lamp Supply Voltage	I	—

E5A Backup Lamp - Left

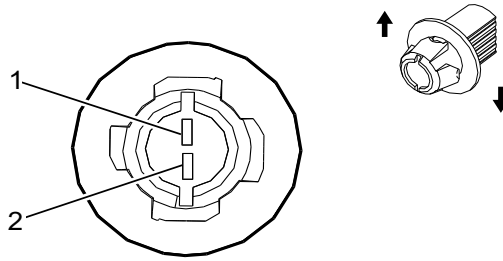

3623890

Connector Part Information

Harness Type: Left Tail Lamp Assembly
 OEM Connector: Not Available
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F Lampsocket, Sealed (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

E5A Backup Lamp - Left

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BK	LTE1	Ground	I	—
	—	BK	LTE1	Ground	I	—
2	—	WH	LR03	Backup Lamp Supply Voltage Signal	I	—

E5AA Tail/Stop Lamp - Left

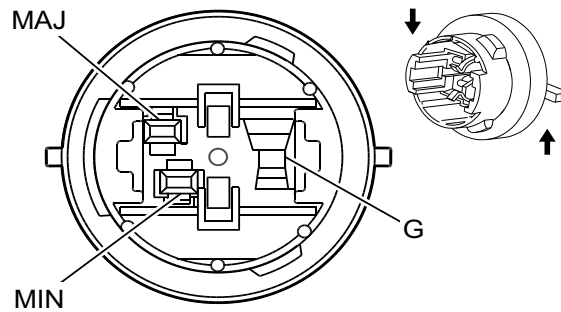

1914601

Connector Part Information

Harness Type: Left Tail Lamp Assembly
 OEM Connector: Not Available
 Service Connector: Service by Harness - See Parts Catalog
 Description: 3-Way F, Sealed (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

E5AA Tail/Stop Lamp - Left

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
G	—	BK	LTE1	Ground	I	—
MIN	—	GY	LT03	Tail Lamps Relay Supply Voltage	I	—
MAJ	—	RD	LS03	Stop Lamp Supply Voltage	I	—

E5AB Tail/Stop Lamp - Right

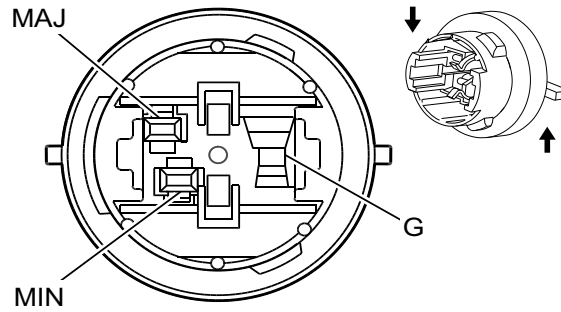

1914601

Connector Part Information

Harness Type: Right Tail Lamp Assembly
 OEM Connector: Not Available
 Service Connector: Service by Harness - See Parts Catalog
 Description: 3-Way F, Sealed (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

E5AB Tail/Stop Lamp - Right

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
G	—	BK	LTE2	Ground	I	—
MIN	—	GY	LT02	Tail Lamps Relay Supply Voltage	I	—
MAJ	—	RD	LS02	Stop Lamp Supply Voltage	I	—

E5B Backup Lamp - Right

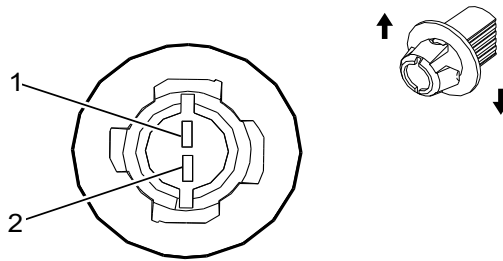

3623890

Connector Part Information

Harness Type: Right Tail Lamp Assembly
 OEM Connector: Not Available
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F Lampsocket, Sealed (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

E5B Backup Lamp - Right

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BK	LTE2	Ground	I	—
	—	BK	LTE2	Ground	I	—
2	—	WH	LR04	Backup Lamp Supply Voltage Signal	I	—

E6 Center High Mounted Stop Lamp

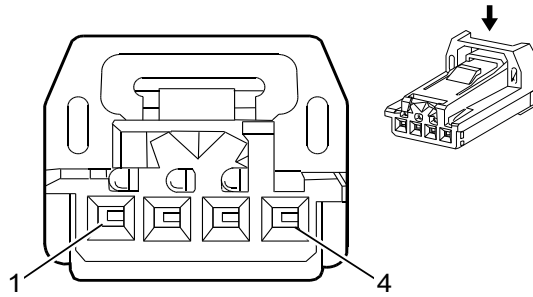

2294317

Connector Part Information

Harness Type: Back Door Extension
 OEM Connector: TH04FW-NH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 4-Way F 1.5 Series, Sealed (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

E6 Center High Mounted Stop Lamp

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BK	LSE1	Ground	I	—
2-3	—	—	—	Not Occupied	—	—
4	—	RD	LS04	Stop Lamp Supply Voltage	I	—

E7L License Plate Lamp - Left

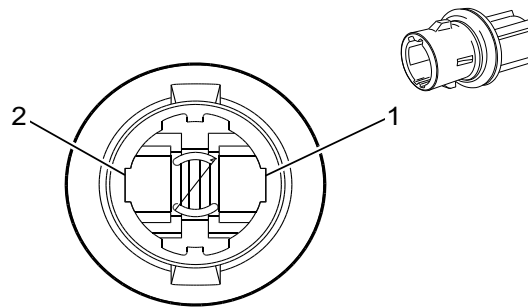

4065427

Connector Part Information

Harness Type: License Plate
 OEM Connector: STL02FW
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F Sealed (NA)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

E7L License Plate Lamp - Left

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	PU	LL02	Tail Lamps Relay Supply Voltage	I	—
2	—	BK	LLE2	Ground	I	—

E7R License Plate Lamp - Right

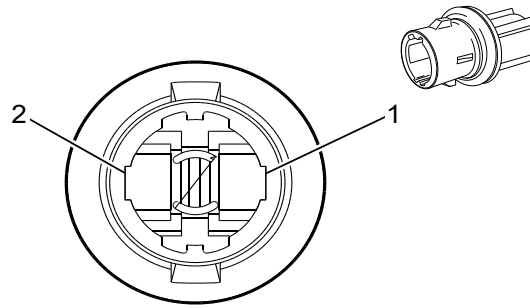

4065427

Connector Part Information

Harness Type: License Plate
 OEM Connector: STL02FW
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F Sealed (NA)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

E7R License Plate Lamp - Right

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	PU	LL01	Tail Lamps Relay Supply Voltage	I	—
2	—	BK	LLE1	Ground	I	—

E13L Headlamp - Left

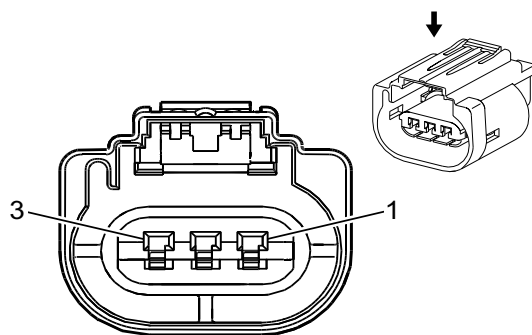

1591675

Connector Part Information

Harness Type: Engine Compartment
 OEM Connector: ZFJ-07091-UO
 Service Connector: Service by Harness - See Parts Catalog
 Description: 3-Way F 1.5 Series, Sealed (WH)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

E13L Headlamp - Left

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	WH	LA06	Headlamp Low Beam Relay Supply Voltage	I	—
2	—	BK	LAE3	Ground	I	—
3	—	D-GN	LA05	Headlamp High Beam Relay Supply Voltage	I	—

E13R Headlamp - Right

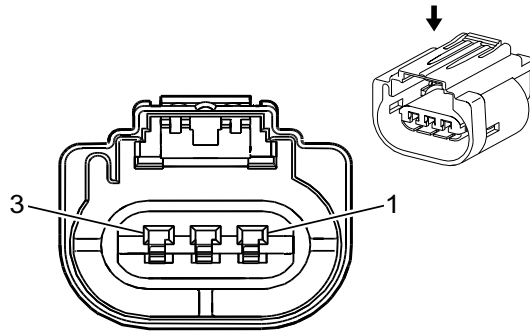

1591675

Connector Part Information

Harness Type: Engine Compartment
 OEM Connector: ZFJ-07091-UO
 Service Connector: Service by Harness - See Parts Catalog
 Description: 3-Way F 1.5 Series, Sealed (WH)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

E13R Headlamp - Right

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	L-BU	LA45	Headlamp Low Beam Relay Supply Voltage Daytime Running Lamps Relay 2 Supply Voltage	I	EF7 Z49
2	—	RD	LA40	Daytime Running Lamps Relay 1 Supply Voltage	I	—
3	—	YE	LA03	Headlamp High Beam Relay Supply Voltage	I	—

E18 Rear Defogger Grid X1 (C49)

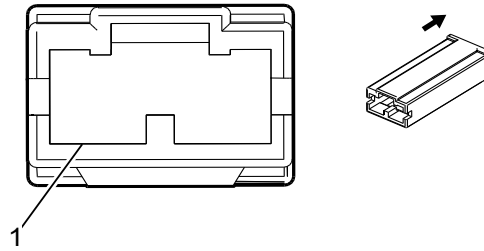

2593994

Connector Part Information

Harness Type: Rear Defogger
 OEM Connector: P01FB-A
 Service Connector: Service by Harness - See Parts Catalog
 Description: 1-Way F 250 Series (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

E18 Rear Defogger Grid X1 (C49)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	RD	NA01	Rear Defogger Relay Supply Voltage	I	—

E18 Rear Defogger Grid X2 (C49)

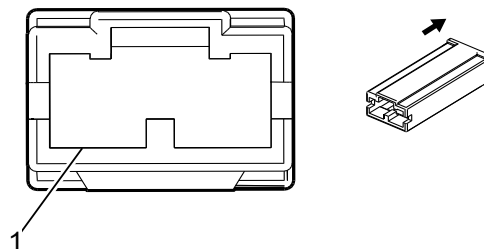

2593994

Connector Part Information

Harness Type: Rear Defogger
 OEM Connector: P01FB-A
 Service Connector: Service by Harness - See Parts Catalog
 Description: 1-Way F 250 Series (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

E18 Rear Defogger Grid X2 (C49)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BK	NAE1	Ground	I	—

E37F Dome/Reading Lamps - Front

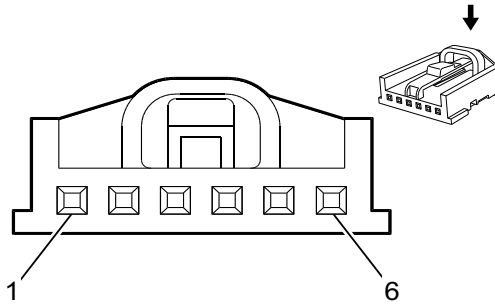

2451958

Connector Part Information

Harness Type: Body
 OEM Connector: GAA06FW
 Service Connector: Service by Harness - See Parts Catalog
 Description: 6-Way F 0.635 Series (WH)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

E37F Dome/Reading Lamps - Front

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	—	Not Occupied	—	—
2	—	D-BU	LG03	Interior Lamp Wake Up Signal	I	—
3	—	BK	LGE1	Ground	I	—
4	—	BN	LG04	Interior Lamp Output Signal	I	—
5-6	—	—	—	Not Occupied	—	—

E37M Dome/Reading Lamps - Middle X1

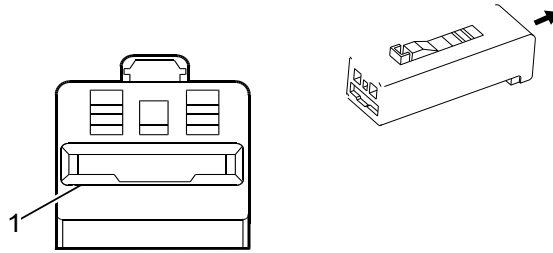

2178166

Connector Part Information

Harness Type: Body
 OEM Connector: P01FB-A
 Service Connector: Service by Harness - See Parts Catalog
 Description: 1-Way F 250 Series (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

E37M Dome/Reading Lamps - Middle X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	YE	LI03	Interior Lamp Wake Up Signal	I	—

E37M Dome/Reading Lamps - Middle X2

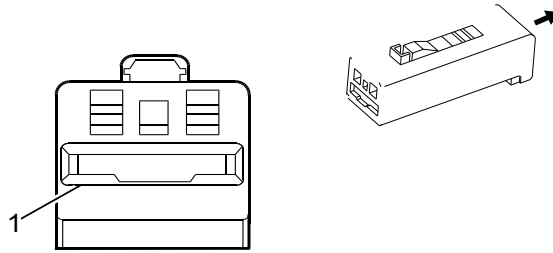

2178166

Connector Part Information

Harness Type: Body
 OEM Connector: P01FB-A
 Service Connector: Service by Harness - See Parts Catalog
 Description: 1-Way F 250 Series (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

E37M Dome/Reading Lamps - Middle X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BN	LI02	Interior Lamp Output Signal	I	—

E37R Dome/Reading Lamps - Rear X1

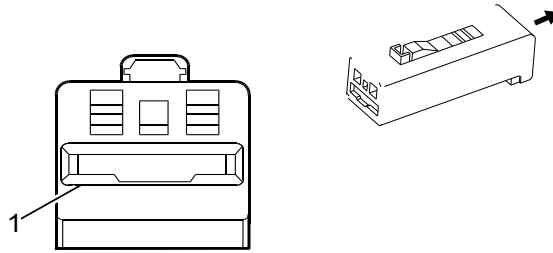

2178166

Connector Part Information

Harness Type: Body
 OEM Connector: P01FB-A
 Service Connector: Service by Harness - See Parts Catalog
 Description: 1-Way F 250 Series (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

E37R Dome/Reading Lamps - Rear X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	YE	LG01	Interior Lamp Wake Up Signal	I	—

E37R Dome/Reading Lamps - Rear X2

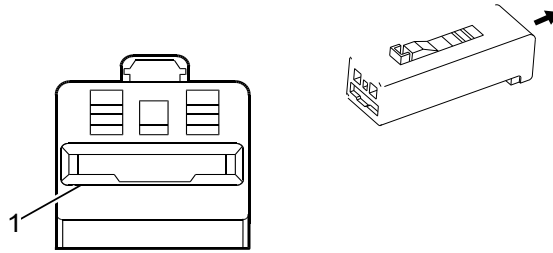

2178166

Connector Part Information

Harness Type: Body

OEM Connector: P01FB-A

Service Connector: Service by Harness - See Parts Catalog

Description: 1-Way F 250 Series (BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

E37R Dome/Reading Lamps - Rear X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BN	LG02	Interior Lamp Output Signal	I	—

F101 Passenger Instrument Panel Air Bag X1

Connector Part Information

Harness Type: Instrument Panel Air Bag Jumper
 OEM Connector: Not Available
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F (BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

F101 Passenger Instrument Panel Air Bag X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	RD	FB23	Passenger IP Module Stage 1 High Control	I	—
2	—	RD	FB24	Passenger IP Module Stage 1 Low Control	I	—

F101 Passenger Instrument Panel Air Bag X2

Connector Part Information

Harness Type: Instrument Panel Air Bag Jumper
 OEM Connector: Not Available
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F (OG)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

F101 Passenger Instrument Panel Air Bag X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	YE	FB25	Passenger IP Module Stage 2 High Control	I	—
2	—	YE	FB26	Passenger IP Module Stage 2 Low Control	I	—

F105L Roof Rail Air Bag - Left

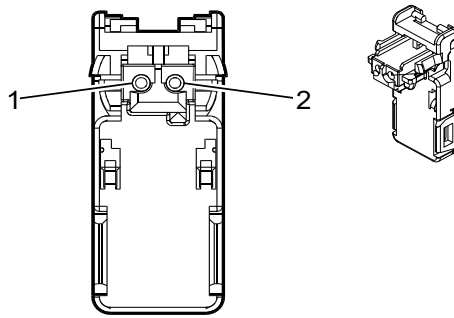

4072360

Connector Part Information

Harness Type: Body
 OEM Connector: ACA02FOR
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F 11DIA Squib (OG)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

F105L Roof Rail Air Bag - Left

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	YE	FB39	Left Front Head Curtain Module High Control	I	—
2	—	YE/RD	FB40	Left Front Head Curtain Module Low Control	I	—

F105R Roof Rail Air Bag - Right

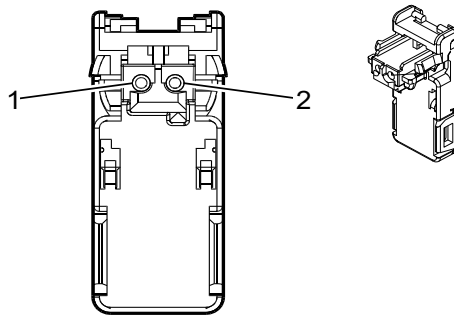

4072360

Connector Part Information

Harness Type: Body
 OEM Connector: ACA02FY-2V
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F 11DIA Squib (YE)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

F105R Roof Rail Air Bag - Right

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	YE	FB37	Right Front Head Curtain Module High Control	I	—
2	—	OG	FB38	Right Front Head Curtain Module Low Control	I	—

F106D Seat Air Bag - Driver

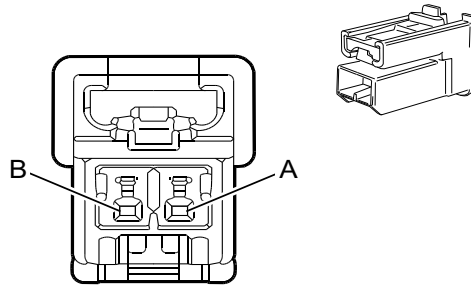

4065462

Connector Part Information

Harness Type: Body
 OEM Connector: TK02FY-EX-1V
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F 040 Series (YE)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

F106D Seat Air Bag - Driver

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	—	GY	FB31	Driver Side Impact Module High Control	I	—
B	—	D-BU	FB32	Driver Side Impact Module Low Control	I	—

F106P Seat Air Bag - Passenger

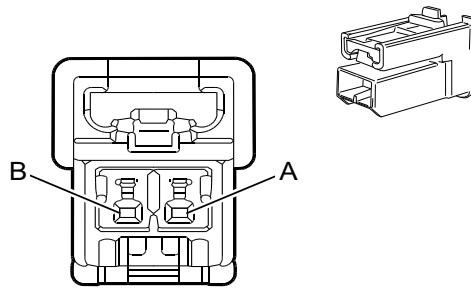

4065462

Connector Part Information

Harness Type: Passenger Seat
 OEM Connector: TH02FY-EX-1V
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F 040 Series (YE)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

F106P Seat Air Bag - Passenger

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	—	YE/BK	FB29	Passenger Side Impact Module High Control	I	—
B	—	YE	FB30	Passenger Side Impact Module Low Control	I	—

F107 Steering Wheel Air Bag X1

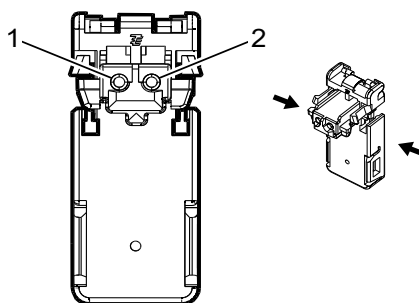

2684104

Connector Part Information

Harness Type: Steering Wheel Air Bag Coil
 OEM Connector: Not Available
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F (YE)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

F107 Steering Wheel Air Bag X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BK	FB19	Steering Wheel Module Stage 1 High Control	I	—
2	—	WH	FB21	Steering Wheel Module - Low Control	I	—

F107 Steering Wheel Air Bag X2

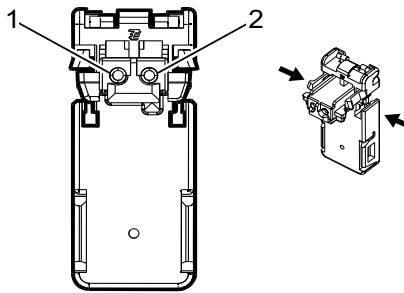

2684094

Connector Part Information

Harness Type: Steering Wheel Air Bag Coil
 OEM Connector: Not Available
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F (OG)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

F107 Steering Wheel Air Bag X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	RD	FB22	Steering Wheel Module Stage 2 High Control	I	—
2	—	D-GN	FB21	Steering Wheel Module - Low Control	I	—

F112D Seat Belt Retractor Pretensioner - Driver

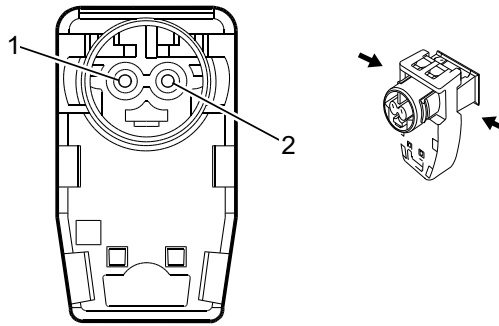

2368877

Connector Part Information

Harness Type: Body
 OEM Connector: ACB02FY
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F (YE)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

F112D Seat Belt Retractor Pretensioner - Driver

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	PK/BK	FA03	Driver Seat Belt Retractor Pretensioner High Control	I	—
2	—	VT	FA04	Driver Seat Belt Retractor Pretensioner Low Control	I	—

F112P Seat Belt Retractor Pretensioner - Passenger

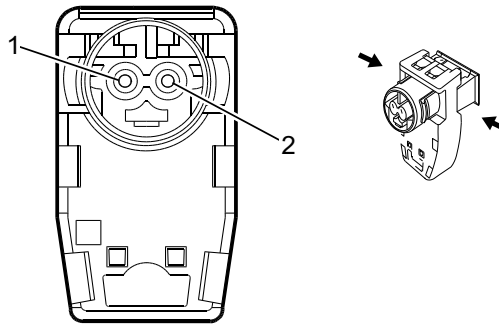

2368877

Connector Part Information

Harness Type: Body
 OEM Connector: ACB02FY
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F (YE)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

F112P Seat Belt Retractor Pretensioner - Passenger

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	YE	FA01	Passenger Seat Belt Retractor Pretensioner High Control	I	—
2	—	D-GN	FA02	Passenger Seat Belt Retractor Pretensioner Low Control	I	—

Q2 A/C Compressor Clutch

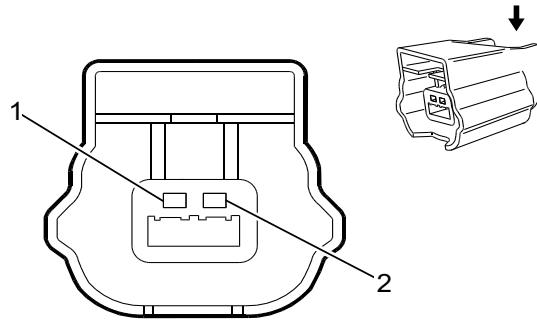

2455679

Connector Part Information

Harness Type: Engine
 OEM Connector: RH02FB
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F 0.64 Series, Sealed (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

Q2 A/C Compressor Clutch

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BK	HAE2	Ground	I	—
2	—	WH	HA34	A/C Compressor Clutch Supply Voltage	I	—

G10L Cooling Fan Motor - Left

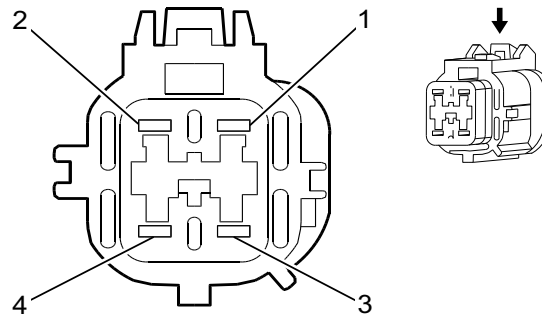

4083677

Connector Part Information

Harness Type: Engine Compartment
 OEM Connector: RS04FGY-PR-H-SW
 Service Connector: Service by Harness - See Parts Catalog
 Description: 4-Way F (GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

G10L Cooling Fan Motor - Left

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	D-GN	AR10	Left Cooling Fan Motor High/Low Speed Control	I	—
2	—	WH	AR01	Left Medium Speed Cooling Fan Relay Supply Voltage	I	—
3	—	BK	ARE1	Ground	I	—
4	—	BK	ARE2	Ground	I	—

G10R Cooling Fan Motor - Right

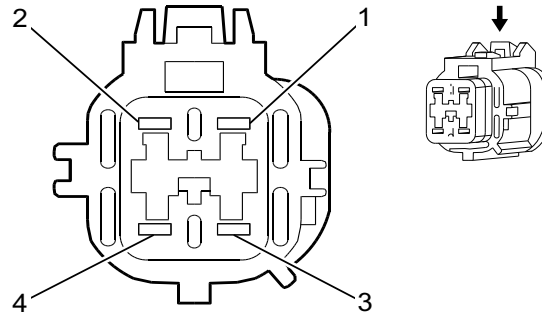

4083677

Connector Part Information

Harness Type: Engine Compartment
 OEM Connector: RS04FGY-PR-H-SW
 Service Connector: Service by Harness - See Parts Catalog
 Description: 4-Way F (GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

G10R Cooling Fan Motor - Right

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	RD	AR08	Battery Positive Voltage	I	—
2	—	RD	AR08	Battery Positive Voltage	I	—
3	—	GY	AR07	Right Cooling Fan Motor Medium Speed Control	I	—
4	—	PK	AR02	Right Cooling Fan Motor High/Low Speed Control	I	—

G13 Generator X1

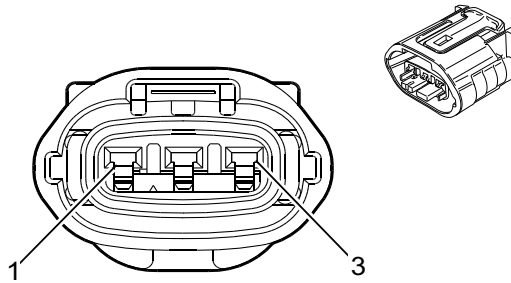

4079925

Connector Part Information

Harness Type: Engine
 OEM Connector: HS03FB
 Service Connector: Service by Harness - See Parts Catalog
 Description: 3-Way F 090 II Series, Sealed (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

G13 Generator X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	D-GN	MA10	Charge Indicator Control	I	—
2	—	BN	DA23	Battery Positive Voltage	I	—
3	—	GY	DA24	Power Generation Command Signal	I	—

G13 Generator X2

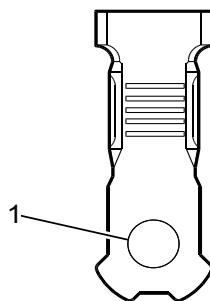

4072146

Connector Part Information

Harness Type: Engine
 OEM Connector: 24340_65F42
 Service Connector: Service by Harness - See Parts Catalog
 Description: Ring Terminal


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

G13 Generator X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BN/RD	DA01	Battery Positive Voltage	I	—

G24 Windshield Washer Pump

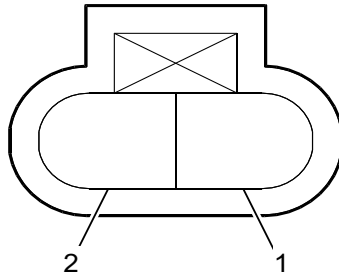

4078501

Connector Part Information

Harness Type: Engine Compartment
 OEM Connector: HS02FB-4V
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

G24 Windshield Washer Pump

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	YE	WA12	Windshield Washer Pump Control	I	—
2	—	D-GN	WA11	Run/Crank Ignition Voltage	I	—

K9 Body Control Module X1

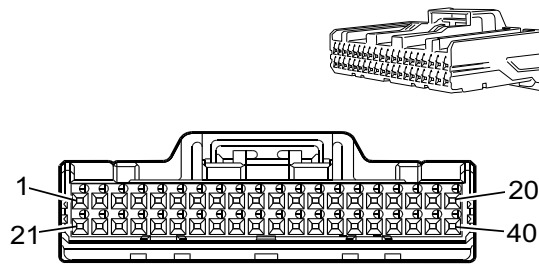

4092039

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: TH40FW-NH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 40-Way F 025 Series (NA)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available


K9 Body Control Module X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	PU	PD34	Remote Function Actuator Receive Signal	I	ATG
2	—	BN	PD33	Remote Function Actuator Supply Voltage	I	ATG
3	—	BK	PD35	Remote Function Actuator Return	I	ATG
4	—	—	—	Not Occupied	—	—
5	—	L-BU	RA40	Multi Remote Entry Signal	I	CWM
6-7	—	—	—	Not Occupied	—	—
8	—	PU	PD12	Driver Door Lock Switch Unlock Signal	I	—
9	—	RD	PD11	Driver Door Lock Switch Lock Signal	I	—
10	—	D-BU	DA20	Accessory/Run Ignition Voltage	I	—
11	—	D-GN/RD	NA03	Rear Defog Switch Signal	I	—
12	—	RD	PD38	Stop Lamp Supply Voltage	I	—
13	—	PK	PD17	Door Lock Key Switch Lock Signal	I	—
14	—	BK	PD28	Door Lock Key Switch Unlock Signal	I	—
15	—	PU	PD06	Turn Signal/Multifunction Switch Input Signal (1)	I	—
16	—	D-GN	PD07	Turn Signal/Multifunction Switch Input Signal (2)	I	—
17	—	PK	PD08	Turn Signal/Multifunction Switch Input Signal (3)	I	—
18	—	D-BU	PD09	Turn Signal/Multifunction Switch Input Signal (4)	I	—
19	—	BN	PD10	Turn Signal/Multifunction Switch Input Signal (5)	I	—
20	—	—	—	Not Occupied	—	—
21	—	PK	IA02	CAN Bus High Serial Data (-)	I	—
22	—	D-BU	IA01	CAN Bus High Serial Data (+)	I	—

K9 Body Control Module X1 (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
23	—	OG	DA19	Run/Crank Ignition Voltage	I	—
24	—	WH	PD31	Key In Ignition Switch Signal	I	—
25	—	OG	PD01	Turn Signal/Multifunction Switch Output Signal (1)	I	—
26	—	RD	PD02	Turn Signal/Multifunction Switch Output Signal (2)	I	—
27	—	WH	PD03	Turn Signal/Multifunction Switch Output Signal (3)	I	—
28	—	YE	PD04	Turn Signal/Multifunction Switch Output Signal (4)	I	—
29	—	BN	PD05	Turn Signal/Multifunction Switch Output Signal (5)	I	—
30-31	—	—	—	Not Occupied	—	—
32	—	D-BU	LD01	Hazard Switch Signal	I	—
33	—	BN	HA07	Blower Motor On/Off Switch Signal	I	—
34	—	YE	HA20	A/C Request Switch Signal	I	—
35	—	PK	HA12	EVAP Core Temperature Sensor Signal	I	—
36	—	L-GN	PF03	Immobilizer Transmit	I	—
37	—	GY	PF25	Linear Interconnect Network Bus	I	—
38	—	RD	PF04	Security Indicator Control	I	—
39	—	—	—	Not Occupied	—	—
40	—	PK	PF02	Immobilizer Receive	I	—

K9 Body Control Module X2

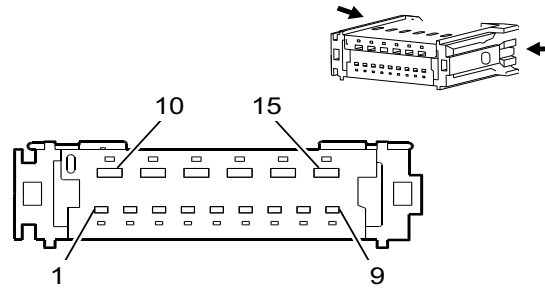

4078671

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: FEA09FW-FHA6-SA
 Service Connector: Service by Harness - See Parts Catalog
 Description: 15-Way F (WH)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

K9 Body Control Module X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	D-GN	PD19	Driver Door Lock Motor Unlock Control	I	—
2	—	YE	DA35	Battery Positive Voltage	I	—
3	—	D-BU	LG01	Interior Lamp Wake Up Signal	I	—
4	—	—	—	Not Occupied	—	—
5	—	BN	LG02	Interior Lamp Output Signal	I	—
6-7	—	—	—	Not Occupied	—	—
8	—	L-BU	HA11	A/C Request Indicator Signal	I	—
9	—	—	—	Not Occupied	—	—
10	—	YE	DA09	Battery Positive Voltage	I	—
11	—	PK	PA01	Power Window Supply Voltage	I	—
12	—	D-BU	PA02	Power Window Ignition Output	I	—
13	—	YE	PD21	Passenger Door Lock Motor Unlock Control	I	—
14	—	D-BU	PD18	Door Lock Motor Lock Control	I	—
15	—	BK	PDE1	Ground	I	—

K9 Body Control Module X3

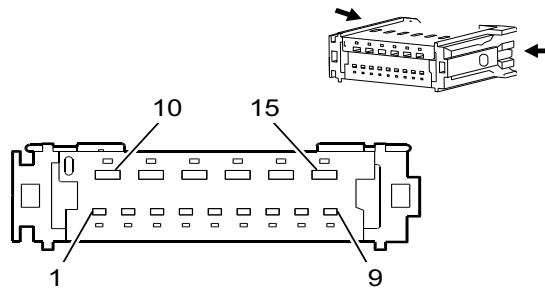

4078671

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: FEA09FB-FHA6-SA
 Service Connector: Service by Harness - See Parts Catalog
 Description: 15-Way F (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

K9 Body Control Module X3

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	—	Not Occupied	—	—
2	—	L-GN	PD15	Right Sliding Door Ajar Switch Signal	I	—
3	—	GY	PD16	Left Sliding Door Ajar Switch Signal	I	—
4	—	BN	PD13	Driver Door Ajar Switch Signal	I	—
5	—	L-BU	PD14	Passenger Door Ajar Switch Signal	I	—
6	—	—	—	Not Occupied	—	—
7	—	WH	PD40	Rear Cargo Door Ajar Switch Signal	I	—
8	—	WH	LD09	Right Turn Signal Lamp Supply Voltage	I	—
9	—	PU	LD10	Left Turn Signal Lamp Supply Voltage	I	—
10-15	—	—	—	Not Occupied	—	—

K17 Electronic Brake Control Module

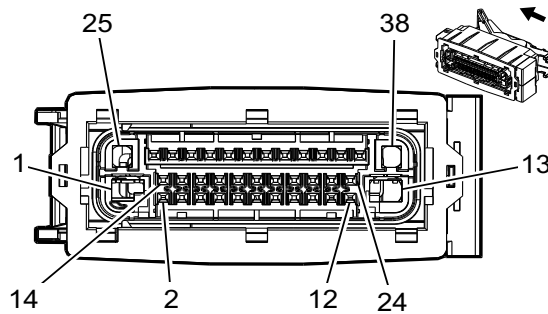

2268704

Connector Part Information

Harness Type: Engine Compartment
 OEM Connector: BEZ34FB-BHY2-BJZ2-LH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 38-Way F 0.64, 2.8, 5.8 Series, Sealed (BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available


K17 Electronic Brake Control Module

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	YE	BS01	Battery Positive Voltage	I	—
2-4	—	—	—	Not Occupied	—	—
5	—	D-GN	BS41	Traction Control Off Switch Signal	I	—
6	—	RD	BS24	Wheel Speed Sensor Signal Right Front	I	—
7-12	—	—	—	Not Occupied	—	—
13	—	BK	BSE1	Ground	I	—
14	—	PK	BS22	CAN Bus High Serial Data (-)	I	—
15-16	—	—	—	Not Occupied	—	—
17	—	L-BU	BS10	K-Line Diagnostic Serial Data	I	—
18	—	D-GN	BS25	Wheel Speed Sensor Low Reference Right Front	I	—
19	—	PU	BS29	Wheel Speed Sensor Signal Right Rear	I	—
20	—	WH	BS30	Wheel Speed Sensor Low Reference Left Rear	I	—
21	—	—	—	Not Occupied	—	—
22	—	YE	BS26	Wheel Speed Sensor Signal Left Front	I	—
23	—	—	—	Not Occupied	—	—
24	—	WH	BS47	CAN Bus High Serial Data (+)	I	—
25	—	WH	BS02	Battery Positive Voltage	I	—
26	—	D-BU	BS21	CAN Bus High Serial Data (+)	I	—
27-29	—	—	—	Not Occupied	—	—
30	—	RD	BS32	Stop Lamp Supply Voltage	I	—

K17 Electronic Brake Control Module (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
31	—	D-BU	BS28	Wheel Speed Sensor Low Reference Right Rear	I	—
32	—	VT	BS03	Ignition Main Relay Supply Voltage	I	—
33	—	RD	BS31	Wheel Speed Sensor Signal Left Rear	I	—
34	—	BN	BS27	Wheel Speed Sensor Low Reference Left Front	I	—
35-36	—	—	—	Not Occupied	—	—
37	—	PK	BS45	CAN Bus High Serial Data (-)	I	—
38	—	BK	BSE2	Ground	I	—

K20 Engine Control Module X1

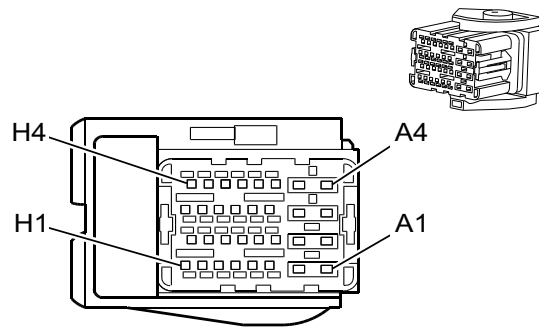

4083328

Connector Part Information

Harness Type: Engine
 OEM Connector: RH24FGY-RZ8-R-RH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 32-Way F, Sealed (GY)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available


K20 Engine Control Module X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A1	—	PK	AC04	Engine Controls Ignition Relay Control	I	—
A2	—	D-BU	AC12	Fuel Injector Control (1)	I	—
A3	—	RD	AC13	Fuel Injector Control (2)	I	—
A4	—	YE	AC14	Fuel Injector Control (3)	I	—
B1-B2	—	—	—	Not Occupied	—	—
B3	—	OG	AB41	EVAP Canister Vent Solenoid Control	I	—
B4	—	PU	AC15	Fuel Injector Control (4)	I	—
C1	—	—	—	Not Occupied	—	—
C2	—	D-BU	AC21	Fuel Pump Relay Control	I	—
C3	—	L-BU	AC57	Ignition Control (3)	I	—
C4	—	D-GN	AC58	Ignition Control (4)	I	—
D1-D2	—	—	—	Not Occupied	—	—
D3	—	L-BU	AC56	Ignition Control (2)	I	—
D4	—	RD	AC55	Ignition Control (1)	I	—
E1	—	—	—	Not Occupied	—	—
E2	—	YE	AC23	Throttle Body Relay Supply Voltage	I	—
E3-F3	—	—	—	Not Occupied	—	—
F4	—	PK	AC67	EVAP Canister Purge Solenoid Control	I	—
G1-G3	—	—	—	Not Occupied	—	—
G4	—	D-GN	AC87	Ignition Main Relay Supply Voltage	I	—
H1	—	PK	AC74	Throttle Actuator Control Close	I	—

K20 Engine Control Module X1 (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
H2	—	D-GN	AC28	Heated Oxygen Sensor Low Signal Bank 1 Sensor (1)	I	—
H3	—	L-BU	AC24	Throttle Body Relay Control	I	—
H4	—	D-BU	AC75	Throttle Actuator Control Open	I	—

K20 Engine Control Module X2

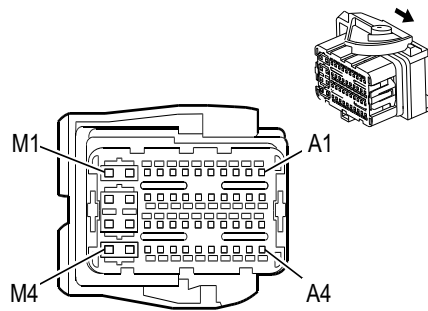

4083339

Connector Part Information

Harness Type: Engine
 OEM Connector: RH40FBR-RZ8-L-RH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 48-Way F, Sealed (BN)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available


K20 Engine Control Module X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A1	—	D-BU	AC77	Throttle Position Sensor Signal (1)	I	—
A2	—	BN	AC79	Throttle Position Sensor Signal (2)	I	—
A3	—	—	—	Not Occupied	—	—
A4	—	YE	AC76	Throttle Position Sensor Low Reference	I	—
B1	—	WH	AA60	Knock Sensor Signal	I	—
B2	—	PK	AC39	Engine Coolant Temperature Sensor Signal	I	—
B3	—	—	—	Not Occupied	—	—
B4	—	Bare	ABE5	Knock Sensor Low Reference	I	—
C1	—	—	—	Not Occupied	—	—
C2	—	D-BU	AB43	Fuel Temperature Sensor 5 Volt Reference	I	—
C3	—	L-GN	AC81	Fuel Tank Pressure Sensor Signal	I	—
C4	—	BK	AC41	Coolant Temperature Sensor Low Reference	I	—
D1	—	D-GN	AC34	Mass Air Flow Sensor Signal	I	—
D2	—	PU	AC72	Intake Air Temperature Sensor Low Reference	I	—
D3	—	WH	AA50	Oil Pressure Sensor Low Reference	I	—
D4	—	—	—	Not Occupied	—	—
E1	—	D-BU	AC27	Heated Oxygen Sensor Heater Low Control Bank 1 Sensor (1)	I	—
E2	—	WH	AC86	Heated Oxygen Sensor High Signal Bank 1 Sensor (2)	I	—
E3	—	—	—	Not Occupied	—	—

K20 Engine Control Module X2 (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
E4	—	L-GN	AC40	Mass Air Flow Sensor Low Reference	I	—
F1	—	PK	AC30	Heated Oxygen Sensor High Signal Bank 1 Sensor (1)	I	—
F2	—	OG	AB32	Oil Temperature Sensor Low Reference	I	—
F3	—	L-GN	AC47	Intake Air Temperature Sensor Signal	I	—
F4	—	—	—	Not Occupied	—	—
G1	—	YE	AB31	Oil Temperature Sensor Signal	I	—
G2	—	D-GN	AI02	Current Sensor Signal	I	—
G3	—	D-BU	AC89	Heated Oxygen Sensor Heater Low Control Bank 1 Sensor (2)	I	—
G4	—	D-GN	AA51	Oil Pressure Sensor Signal	I	—
H1	—	WH	AC35	Crankshaft Position Sensor Signal	I	—
H2	—	RD	AC36	Crankshaft Position Sensor Low Reference	I	—
H3	—	BK	AC38	Camshaft Position Sensor Low Reference	I	—
H4	—	—	—	Not Occupied	—	—
J1	—	RD	AC37	Camshaft Position Sensor Signal	I	-
J2-J3	—	—	—	Not Occupied	—	—
J4	—	BN	AC80	Sensor 5 Volt Reference	I	—
K1	—	L-GN	AC95	Transmission Park/Neutral Signal	I	—
K2	—	—	—	Not Occupied	—	—
K3	—	BK	AC82	Sensor Low Reference	I	—
K4	—	VT	AC78	Throttle Position Sensor 5 Volt Reference	I	—
L1	—	PK	AC49	Camshaft Phaser Intake Solenoid Control	I	—
L2	—	RD	AA49	Oil Pressure Sensor 5 Volt Reference	I	—
L3	—	BK	AC45	Crankshaft Position Sensor 5 Volt Reference	I	—
L4-M1	—	—	—	Not Occupied	—	—
M2	—	D-BU	AC44	Camshaft Position Sensor 5 Volt Reference	I	—
M3-M4	—	—	—	Not Occupied	—	—

K20 Engine Control Module X3

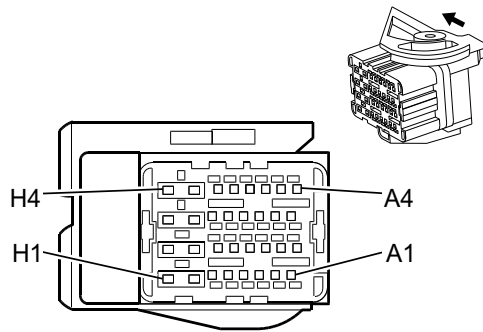

4083310

Connector Part Information

Harness Type: Engine Compartment
 OEM Connector: RH24FB-RZ8-L-RH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 32-Way F, Sealed (BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available


K20 Engine Control Module X3

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A1	—	RD	AC01	Battery Positive Voltage	I	—
A2	—	—	—	Not Occupied	—	—
A3	—	PK	IA02	CAN Bus High Serial Data (-)	I	—
A4	—	D-BU	IA01	CAN Bus High Serial Data (+)	I	—
B1	—	L-BU	HA31	A/C Refrigerant Pressure Sensor Signal	I	—
B2-B3	—	—	—	Not Occupied	—	—
B4	—	L-BU	AC69	K-Line Diagnostic Serial Data	I	—
C1-C4	—	—	—	Not Occupied	—	—
D1	—	L-BU	AC10	Ignition Main Relay Supply Voltage	I	—
D2	—	PK	CA03	Cruise Control Set/Coast/Resume/Accelerate Switch Signal	I	—
D3	—	BK	CAE1	Ground	I	—
D4-E1	—	—	—	Not Occupied	—	—
E2	—	GY	HA32	A/C Refrigerant Pressure Sensor Low Reference	I	—
E3	—	RD	AC90	Stop Lamp Supply Voltage	I	—
E4	—	L-BU	CA02	Brake Pedal Apply Signal	I	K34
F1	—	WH	HA33	A/C Refrigerant Pressure Sensor 5 Volt Reference	I	—
F2	—	BN	AC64	Accelerator Pedal Position Low Reference (2)	I	—
F3	—	WH	AC63	Accelerator Pedal Position Signal (2)	I	—
F4	—	RD	AC65	Accelerator Pedal Position 5 Volt Reference (2)	I	—

K20 Engine Control Module X3 (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
G1	—	D-GN	AC02	Engine Controls Ignition Relay Supply Voltage	I	—
G2	—	PU	AC61	Accelerator Pedal Position Low Reference (1)	I	-
G3	—	—	—	Not Occupied	—	—
G4	—	BK	AE01	Ground	I	—
H1	—	BK	AE04	Ground	I	—
H2	—	L-BU	AC60	Accelerator Pedal Position Signal (1)	I	—
H3	—	GY	AC62	Accelerator Pedal Position 5 Volt Reference (1)	I	—
H4	—	BK	AE05	Ground	I	—

K36 Inflatable Restraint Sensing and Diagnostic Module X1

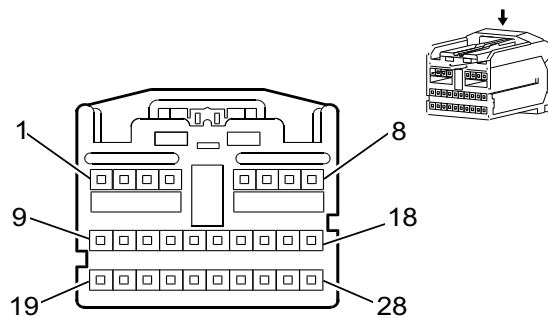

4081851

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: NH28FY-EX
 Service Connector: Service by Harness - See Parts Catalog
 Description: 28-Way F (YE)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available


K36 Inflatable Restraint Sensing and Diagnostic Module X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	YE	FB19	Steering Wheel Module Stage 1 High Control	I	—
2	—	YE/RD	FB21	Steering Wheel Module - Low Control	I	—
3	—	YE/GN	FB22	Steering Wheel Module Stage 2 High Control	I	—
4	—	BK	FBE1	Ground	I	—
5	—	YE/BU	FB23	Passenger IP Module Stage 1 High Control	I	—
6	—	YE/BK	FB24	Passenger IP Module Stage 1 Low Control	I	—
7	—	YE	FB26	Passenger IP Module Stage 2 Low Control	I	—
8	—	BK/YE	FB25	Passenger IP Module Stage 2 High Control	I	—
9	—	—	—	Not Occupied	—	—
10	—	BK	FE01	Ground	I	—
11	—	YE	FB27	Passenger Seat Belt Indicator	I	—
12-13	—	—	—	Not Occupied	—	—
14	—	YE/BU	FB28	SIR Indicator Control	I	—
15	—	RD	FB54	Left Front Side Impact Sensing Module Signal	I	—
16	—	—	—	Not Occupied	—	—
17	—	GN	FB52	Right Front Side Impact Sensing Module Low Reference	I	—
18	—	BK	FB05	Middle Front Impact Sensing Module Low Reference	I	—
19	—	D-GN	FB01	Run/Crank Ignition Voltage	I	—
20	—	—	—	Not Occupied	—	—

K36 Inflatable Restraint Sensing and Diagnostic Module X1 (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
21	—	—	RT24	Not Used	I	—
22	—	RD	FB03	Passenger Air Bag Off Indicator Control	I	—
23	—	D-BU	FB10	CAN Bus High Serial Data (+)	I	—
24	—	PK	FB20	CAN Bus High Serial Data (-)	I	—
25	—	RD	FB53	Left Front Side Impact Sensing Module Low Reference	I	—
26	—	—	—	Not Occupied	—	—
27	—	RD	FB51	Right Front Side Impact Sensing Module Signal	I	—
28	—	WH	FB04	Middle Front Impact Sensing Module Signal	I	—

K36 Inflatable Restraint Sensing and Diagnostic Module X2

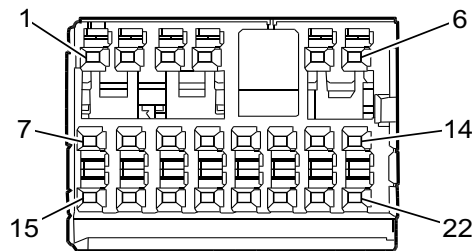

4062240

Connector Part Information

Harness Type: Body
 OEM Connector: NH22FY-2V-EX
 Service Connector: Service by Harness - See Parts Catalog
 Description: 22-Way F 025 Series (YE)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

K36 Inflatable Restraint Sensing and Diagnostic Module X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1-2	—	—	—	Not Occupied	—	—
3	—	GY	FB31	Driver Side Impact Module High Control	I	—
4	—	D-BU	FB32	Driver Side Impact Module Low Control	I	—
5	—	YE/RD	FB40	Left Front Head Curtain Module Low Control	I	—
6	—	YE	FB39	Left Front Head Curtain Module High Control	I	—
7-14	—	—	—	Not Occupied	—	—
15	—	PK/BK	FA03	Driver Seat Belt Retractor Pretensioner High Control	I	—
16	—	PU	FA04	Driver Seat Belt Retractor Pretensioner Low Control	I	—
17	—	OG	FB06	Driver Seat Belt Switch Signal	I	—
18	—	D-BU	FB43	Left Middle Side Impact Sensing Low Reference	I	—
19	—	PK/BU	FB42	Left Middle Side Impact Sensing Module Signal	I	—
20	—	BK	FEE9	Ground	I	-
21-22	—	—	—	Not Occupied	—	—

K36 Inflatable Restraint Sensing and Diagnostic Module X3

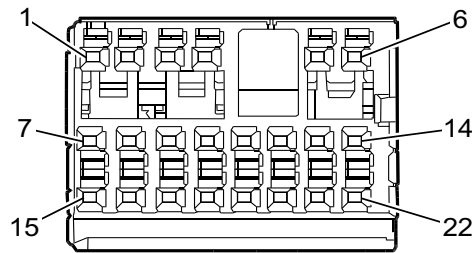

4062223

Connector Part Information

Harness Type: Body
 OEM Connector: NH22FY-1V-EX
 Service Connector: Service by Harness - See Parts Catalog
 Description: 22-Way F 025 Series (YE)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

K36 Inflatable Restraint Sensing and Diagnostic Module X3

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	YE	FB37	Right Front Head Curtain Module High Control	I	—
2	—	OG	FB38	Right Front Head Curtain Module Low Control	I	—
3	—	D-GN	FB29	Passenger Side Impact Module High Control	I	—
4	—	WH	FB30	Passenger Side Impact Module Low Control	I	—
5-8	—	—	—	Not Occupied	—	—
9	—	D-BU	FB02	Occupant Sensor Serial Data	I	—
10-16	—	—	—	Not Occupied	—	—
17	—	Bare	FEE8	Ground	I	—
18	—	WH	FB50	Right Middle Side Impact Sensing Module Signal	I	—
19	—	RD	FB41	Right Middle Side Impact Sensing Module Low Reference	I	—
20	—	GY	FB07	Passenger Seat Belt Switch Signal	I	—
21	—	L-GN	FA02	Passenger Seat Belt Retractor Pretensioner Low Control	I	—
22	—	YE	FA01	Passenger Seat Belt Retractor Pretensioner High Control	I	—

K41R Rear Parking Assist Control Module (UD7)

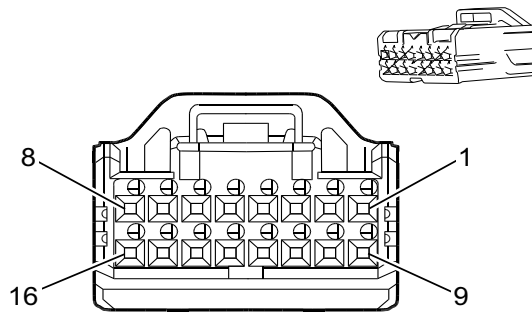

4063846

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: TH16FW-NH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 16-Way F 025 Series (NA)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

K41R Rear Parking Assist Control Module (UD7)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	D-GN/RD	FD01	Run/Crank Ignition Voltage	I	—
2	—	D-BU	FD04	Park Assist Alarm Signal	I	—
3	—	BK	FDE1	Ground	I	—
4	—	D-GN/WH	FD03	Backup Lamp Supply Voltage Signal	I	—
5	—	L-GN	FD07	Rear Park Assist LED Disable Signal	I	—
6	—	RD	FD05	Park Assist Alarm Low Reference	I	—
7-8	—	—	—	Not Occupied	—	—
9	—	L-GN/BK	FD08	Object Sensor Supply Voltage	I	—
10	—	YE	FD09	Object Sensor Low Reference	I	—
11	—	—	—	Not Occupied	—	—
12	—	PK	FD06	Rear Park Assist On/Off Switch Signal	I	—
13	—	L-GN	FD16	Right Rear Middle Object Sensor Signal	I	—
14	—	OG	FD13	Left Rear Middle Object Sensor Signal	I	—
15	—	PK	FD10	Left Rear Corner Object Sensor Signal	I	—
16	—	GY	FD19	Right Rear Corner Object Sensor Signal	I	—

K43 Power Steering Control Module X1

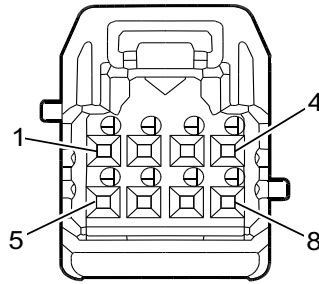

4084206

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: TH08FB-NH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 8-Way F 025 Series (BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

K43 Power Steering Control Module X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	PK	PS11	CAN Bus High Serial Data (-)	I	—
2	—	D-BU	PS10	CAN Bus High Serial Data (+)	I	—
3	—	—	—	Not Occupied	—	—
4	—	WH	PS02	Run/Crank Ignition Voltage	I	—
5-8	—	—	—	Not Occupied	—	—

K43 Power Steering Control Module X2

Connector Part Information

Harness Type: Power Steering Torque Sensor Pigtail
 OEM Connector: Not Available
 Service Connector: Service by Component Assembly - See Part Catalog
 Description: 8-Way F (GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Component Assembly - See Parts Catalog	Not Available	Not Available	Not Available

K43 Power Steering Control Module X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1-4	—	—	—	Not Occupied	—	—
5	—	RD	—	Steering Torque Sensor Supply Voltage	I	—
6	—	YE	—	Steering Torque Sensor Signal (2)	I	—
7	—	BK	—	Ground	I	—
8	—	WH	—	Steering Torque Sensor Signal (1)	I	—

K43 Power Steering Control Module X3

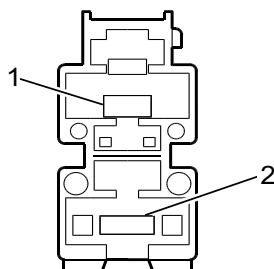

4081631

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: L02FB-MC
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F 375 Series (BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

K43 Power Steering Control Module X3

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	RD	PS01	Battery Positive Voltage	I	—
2	—	BK	PSE1	Ground	I	—

K43 Power Steering Control Module X4

Connector Part Information

Harness Type: Power Steering Control Motor Pigtail
 OEM Connector: Not Available
 Service Connector: Service by Component Assembly - See Part Catalog
 Description: 2-Way F (BU)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Component Assembly - See Parts Catalog	Not Available	Not Available	Not Available

K43 Power Steering Control Module X4

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	RD	PS01	Power Steering Control Motor Left Turn Control	I	—
2	—	BK	PSE1	Power Steering Control Motor Right Turn Control	I	—

K71 Transmission Control Module

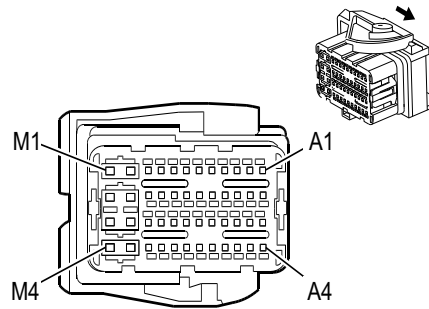

4083339

Connector Part Information

Harness Type: Engine
 OEM Connector: RH40FB-RZ8-L-LH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 48-Way F, Sealed (BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available


K71 Transmission Control Module

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A1-A2	—	—	—	Not Occupied	—	—
A3	—	OG	BA40	Sensor Low Reference	I	—
A4-B2	—	—	—	Not Occupied	—	—
B3	—	BN	BA47	Transmission Temperature Sensor Signal	I	—
B4	—	VT	BA33	Park/Neutral Position Switch Range Signal (L)	I	—
C1	—	D-BU	BA80	CAN Bus High Serial Data (+)	I	—
C2	—	PK	BA81	CAN Bus High Serial Data (-)	I	—
C3-C4	—	—	—	Not Occupied	—	—
D1	—	RD	BA31	Transmission Output Speed Sensor Signal	I	—
D2	—	L-BU	BA54	Transmission Turbine Speed Sensor Signal	I	—
D3	—	—	—	Not Occupied	—	—
D4	—	WH	BA36	Park/Neutral Position Switch Range Signal (D)	I	—
E1	—	OG	BA29	Transmission Input Speed Sensor Signal	I	—
E2-E3	—	—	—	Not Occupied	—	—
E4	—	YE	BA35	Park/Neutral Position Switch Range Signal (N)	I	-
F1	—	—	—	Not Occupied	—	—
F2	—	WH	BA46	Transmission Fluid Pressure Sensor 5 Volt Reference	I	—
F3	—	PK	BA37	Transmission Fluid Pressure Sensor Signal (1)	I	—
F4	—	D-GN	BA34	Park/Neutral Position Switch Range Signal (R)	I	—

K71 Transmission Control Module (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
G1	—	D-BU	BA04	Torque Converter Clutch Pressure Control Solenoid Control	-	—
G2	—	—	—	Not Occupied	—	—
G3	—	GY	BA38	Transmission Fluid Pressure Sensor Signal (2)		—
G4	—	PK	BA27	Park/Neutral Position Switch Range Signal (P)		—
H1	—	RD	BA11	Torque Converter Clutch Enable Solenoid Control		—
H2-H4	—	—	—	Not Occupied	—	—
J1	—	D-GN	BA03	Transmission Pressure Control Solenoid 2 Control		—
J2-J4	—	—	—	Not Occupied	—	—
K1	—	WH	BA02	Transmission Pressure Control Solenoid 1 Control		—
K2	—	YE	BA01	Transmission Mainline Pressure Solenoid Control		—
K3-K4	—	—	—	Not Occupied	—	—
L1	—	L-GN	BA19	Ignition Main Relay Supply Voltage		—
L2	—	D-BU	DA53	Battery Positive Voltage		—
L3	—	—	—	Not Occupied	—	—
L4	—	BK	BAE1	Ground		—
M1	—	L-GN	BA18	Ignition Main Relay Supply Voltage		—
M2	—	D-BU	DA51	Battery Positive Voltage		—
M3	—	—	—	Not Occupied	—	—
M4	—	BK	BAE2	Ground		—

K77 Remote Control Door Lock Receiver

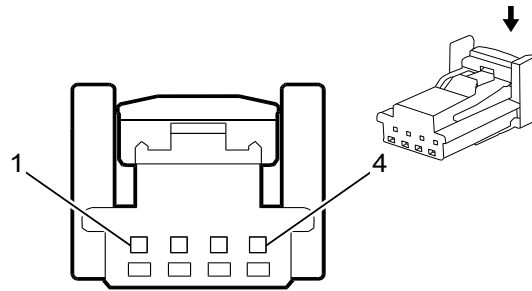

2451351

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: TH04FW
 Service Connector: Service by Harness - See Parts Catalog
 Description: 4-Way F 025 Series (NA)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

K77 Remote Control Door Lock Receiver

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BN	PD33	Remote Function Actuator Supply Voltage	I	—
2	—	—	—	Not Occupied	—	—
3	—	PU	PD34	Remote Function Actuator Receive Signal	I	—
4	—	BK	PD35	Remote Function Actuator Return	I	—

K82 Mobile Telephone Control Module X1 (UPF)

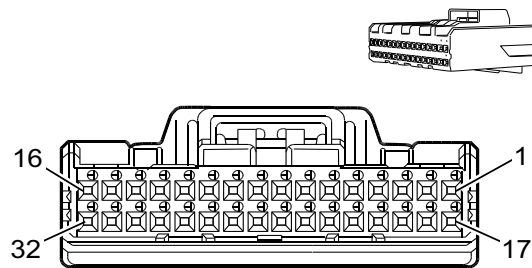

4092031

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: TH32FW-NH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 32-Way F 1.6 Series (NA)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available


K82 Mobile Telephone Control Module X1 (UPF)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	RD	RT01	Battery Positive Voltage	I	—
2	—	BU	RT02	Accessory/Run Ignition Voltage	I	—
3	—	WH	RT03	Run/Crank Ignition Voltage	I	—
4	—	BK	RTE4	Ground	I	—
5	—	BK	RTE1	Drain Wire	I	—
6	—	—	—	Not Occupied	—	—
7	—	GN	RT05	Cellular Telephone Microphone Signal	I	—
8	—	Bare	RTE2	Cellular Telephone Microphone Low Reference	I	—
9	—	BK	RT13	Mobile Phone Audio Output Plus Signal	I	—
10	—	WH	RT14	Mobile Phone Audio Output Minus Signal	I	—
11	—	RD	RT12	Cellular Telephone Mute Control	I	—
12	—	BN	RT50	Steering Wheel Resistor Ladder Input Signal (1)	I	—
13	—	YE	RT51	Steering Wheel Resistor Ladder Input Signal (2)	I	—
14	—	Bare	RTE3	Steering Wheel Resistor Ladder Input Low Reference	I	—
15-16	—	—	—	Not Occupied	—	—
17	—	L-GN	RT16	Steering Wheel Resistor Ladder Output Signal (1)	I	—
18	—	YE	RT17	Steering Wheel Resistor Ladder Output Signal (2)	I	—
19	—	BK	RT18	Steering Wheel Resistor Ladder Output Low Reference	I	—

K82 Mobile Telephone Control Module X1 (UPF) (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
20	—	—	—	Not Occupied	—	—
21	—	BK	RTE6	Ground	I	—
22-23	—	—	—	Not Occupied	—	—
24	—	BK	RTE8	Ground	I	—
25-26	—	—	—	Not Occupied	—	—
27	—	BK	RTE9	Ground	I	—
28	—	WH	RT04	Vehicle Speed Signal	I	—
29	—	RD	RT07	Cellular Telephone Microphone Supply Voltage	I	—
30-32	—	—	—	Not Occupied	—	—

K82 Mobile Telephone Control Module X2 (UPF)

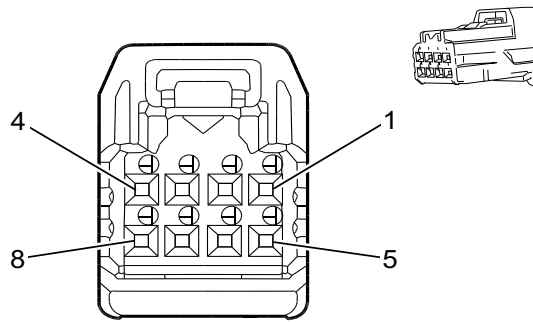

4062624

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: TH08FW-NH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 8-Way F 025 Series (NA)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

K82 Mobile Telephone Control Module X2 (UPF)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	L-BU	RT10	CAN Bus Medium Serial Data (+)	I	—
2	—	—	—	Not Occupied	—	—
3	—	L-BU	RT08	CAN Bus Medium Serial Data (+)	I	—
4	—	L-GN	RT09	CAN Bus Medium Serial Data (-)	I	—
5	—	L-GN	RT11	CAN Bus Medium Serial Data (-)	I	—
6	—	—	—	Not Occupied	—	—
7	—	L-BU	RT08	CAN Bus Medium Serial Data (+)	I	—
8	—	L-GN	RT09	CAN Bus Medium Serial Data (-)	I	—

K82 Mobile Telephone Control Module X3 (UPF)

Connector Part Information

Harness Type: Wireless Communication Antenna - Bluetooth
 OEM Connector: Not Available
 Service Connector: Service by Cable Assembly - See Parts Catalog
 Description: 1-Way F Coax Type

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Cable Assembly - See Parts Catalog	Not Available	Not Available	Not Available

K82 Mobile Telephone Control Module X3 (UPF)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	Coax	—	Coaxial Antenna Cell Signal	I	—

K85 Passenger Presence Detection Module (Early Build)**Connector Part Information**

Harness Type: Passenger Seat

OEM Connector: Not Available

Service Connector: Service by Harness - See Parts Catalog

Description: 20-Way F, Sealed (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

K85 Passenger Presence Detection Module (Early Build)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	VT	FB17	Run/Crank Ignition Voltage	I	—
2	—	—	—	Not Occupied	—	—
3	—	WH	FB18	K-Line Diagnostic Serial Data	I	—
4-7	—	—	—	Not Occupied	—	—
8	—	GY	—	Passenger Seat Position Sensor 1 Low Reference	I	—
9	—	L-GN	—	Passenger Seat Position Sensor 1 Signal	I	—
10	—	BK	FBE3	Ground	I	—
11	—	YE	—	Passenger Seat Position Sensor 2 12V Supply	I	—
12-14	—	—	—	Not Occupied	—	—
15	—	RD	—	Passenger Seat Position Sensor 1 12V Supply	I	—
16	—	L-BU	—	Passenger Seat Position Sensor 2 Signal	I	—
17	—	PK	—	Passenger Seat Position Sensor 2 Low Reference	I	—
18-19	—	—	—	Not Occupied	—	—
20	—	D-BU	FB02	Occupant Sensor Serial Data	I	—

K89 Immobilizer Control Module

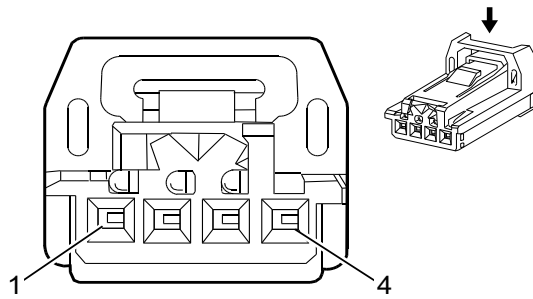

2294317

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: TH04FW-NH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 4-Way F 1.5 Series, (WH)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service Connector: Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

K89 Immobilizer Control Module

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	L-GN	PF03	Immobilizer Transmit	I	—
2	—	BK	PFE1	Ground	I	—
3	—	PK	PF02	Immobilizer Receive	I	—
4	—	RD	PF01	Battery Positive Voltage	I	—

M8 Blower Motor

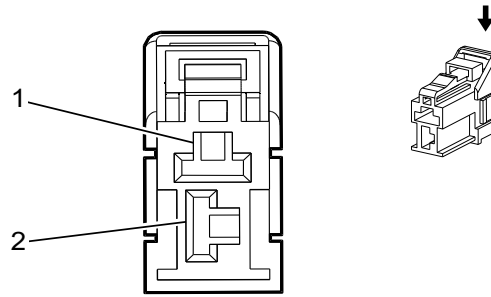

2268736

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: M02FW-LC
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F 250 Series (NA)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

M8 Blower Motor

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	YE	HA02	Blower Motor Relay Supply Voltage	I	—
2	—	PK	HA03	Blower Motor High Speed Control	I	—

M13 Door Latch Assembly - Rear Cargo

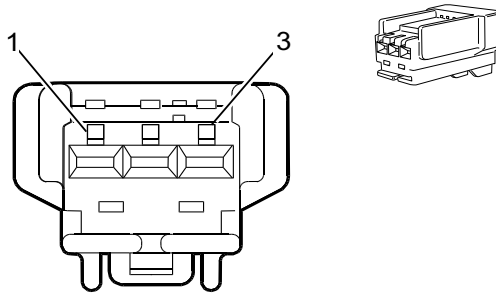

4065410

Connector Part Information

Harness Type: Back Door
 OEM Connector: NS03FW-CS
 Service Connector: Service by Harness - See Parts Catalog
 Description: 3-Way F 090 Series (NA)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

M13 Door Latch Assembly - Rear Cargo

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	—	Not Occupied	—	—
2	—	D-BU	PD26	Rear Cargo Door Lock Motor Lock Control	I	—
3	—	YE	PD27	Rear Cargo Door Lock Motor Unlock Control	I	—

M64 Starter Motor X1

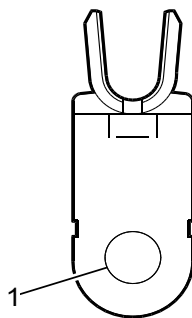

4072268

Connector Part Information

Harness Type: Engine
 OEM Connector: 8100-3483
 Service Connector: Service by Harness - See Parts Catalog
 Description: Ring Terminal


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

M64 Starter Motor X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BK/RD	AH10	Unfused Battery Positive Voltage	I	—

M64 Starter Motor X2

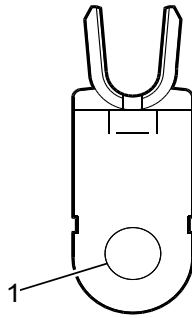

4072268

Connector Part Information

Harness Type: Engine
 OEM Connector: 2430_ED024
 Service Connector: Service by Harness - See Parts Catalog
 Description: Ring Terminal


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

M64 Starter Motor X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	RD	AH01	Starter Relay Supply Voltage	I	—

M74D Window Motor - Driver

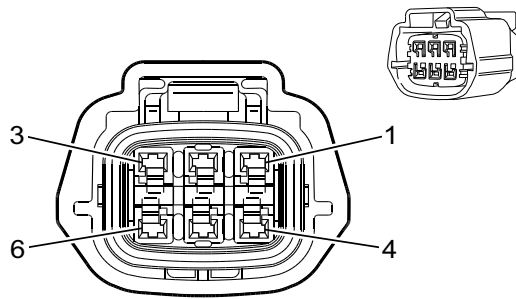

4065429

Connector Part Information

Harness Type: Driver Door
 OEM Connector: RS06FG-DGY
 Service Connector: Service by Harness - See Parts Catalog
 Description: 6-Way F Sealed (GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

M74D Window Motor - Driver

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	D-BU	PA08	Power Window Motor Driver Up Control	I	—
2	—	BN	PA06	Driver Power Window Switch Encoder Supply Voltage	I	—
3	—	GY	PA09	Power Window Motor Driver Down Control	I	—
4	—	D-GN	PA10	Driver Power Window Switch Encoder Low Reference	I	—
5	—	WH	PA07	Driver Power Window Switch Encoder Pulse A Signal	I	—
6	—	PK	PA05	Driver Power Window Switch Encoder Pulse B Signal	I	—

M74P Window Motor - Passenger

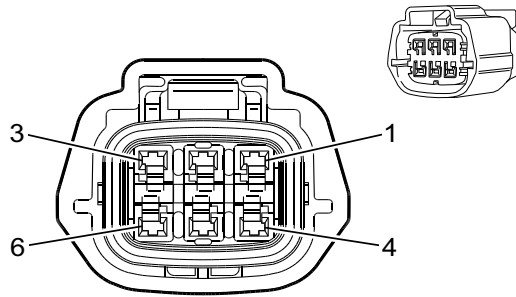

4065429

Connector Part Information

Harness Type: Passenger Door
 OEM Connector: RS06FG-DGY
 Service Connector: Service by Harness - See Parts Catalog
 Description: 6-Way F Sealed (GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

M74P Window Motor - Passenger

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	D-BU	PA18	Power Window Motor Passenger Up Control	I	—
2	—	BN	PA13	Passenger Power Window Switch Encoder Supply Voltage	I	—
3	—	YE	PA19	Power Window Motor Passenger Down Control	I	—
4	—	D-GN	PA16	Passenger Power Window Switch Encoder Low Reference	I	—
5	—	WH	PA14	Passenger Power Window Switch Encoder Pulse A Signal	I	—
6	—	PK	PA15	Passenger Power Window Switch Encoder Pulse B Signal	I	—

M75 Windshield Wiper Motor

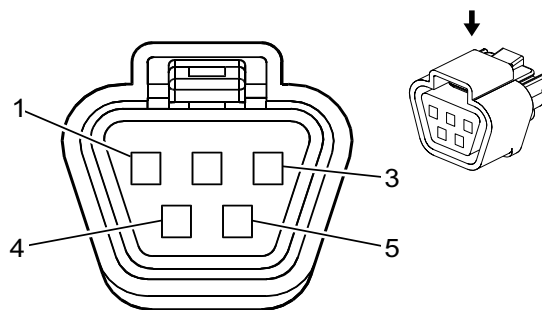

1715213

Connector Part Information

Harness Type: Engine Compartment
 OEM Connector: HS05FGY
 Service Connector: Service by Harness - See Parts Catalog
 Description: 5-Way F (GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

M75 Windshield Wiper Motor

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	YE	WA03	Windshield Wiper Motor Low Speed Control	I	—
2	—	BK	WAE1	Ground	I	—
3	—	—	—	Not Occupied	—	—
4	—	RD	WA04	Windshield Wiper Motor Park Switch Signal	I	—
5	—	WH	WA02	Windshield Wiper Motor High Speed Control	I	—

P12 Horn X1

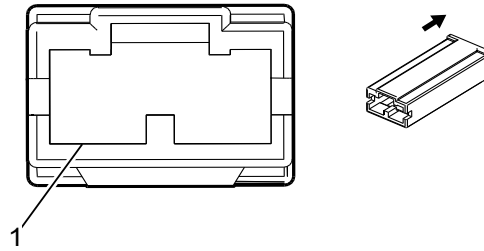

2593994

Connector Part Information

Harness Type: Engine Compartment
 OEM Connector: P01FB-A
 Service Connector: Service by Harness - See Parts Catalog
 Description: 1-Way F 250 Series (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

P12 Horn X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	D-GN	MH03	Horn Relay Supply Voltage	I	—

P12 Horn X2

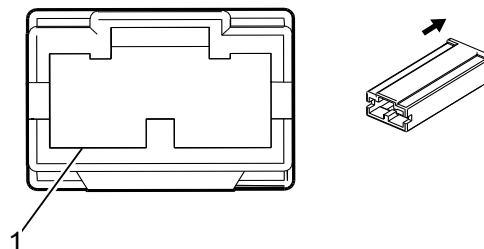

2593994

Connector Part Information

Harness Type: Engine Compartment
 OEM Connector: P01FB-A
 Service Connector: Service by Harness - See Parts Catalog
 Description: 1-Way F 250 Series (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

P12 Horn X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BK	MHE1	Ground	I	—

P14 Passenger Air Bag Disabled Indicator

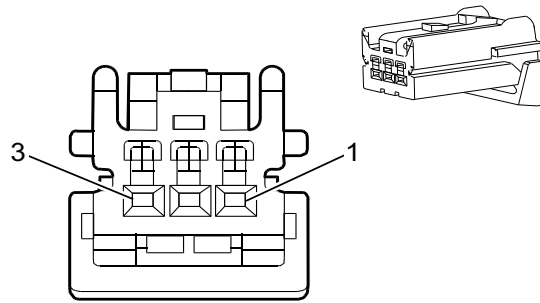

4110938

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: TK03FW
 Service Connector: Service by Harness - See Parts Catalog
 Description: 3-Way F 040 Series (NA)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

P14 Passenger Air Bag Disabled Indicator

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BK	FBE2	Ground	I	—
2	—	—	—	Not Occupied	I	—
3	—	RD	FB03	Passenger Air Bag Off Indicator Control	I	—

P16 Instrument Cluster

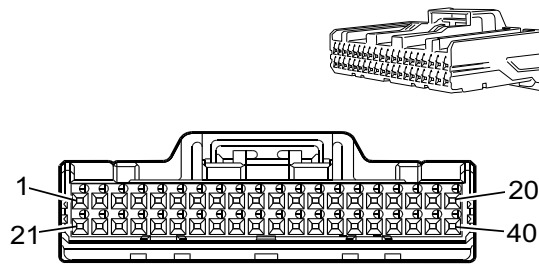

4092039

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: TH40FW-NH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 40-Way F 025 Series (NA)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

P16 Instrument Cluster

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	—	Not Occupied	—	—
2	—	BK	LEE2	Ground	I	—
3	—	—	—	Not Occupied	—	—
4	—	WH	RA19	Vehicle Speed Signal	I	—
5-9	—	—	—	Not Occupied	—	—
10	—	D-GN	WB01	Windshield Washer Fluid Level Sensor Signal	I	—
11	—	PK	MA22	CAN Bus High Serial Data (-)	I	—
12	—	—	—	Not Occupied	—	—
13	—	D-BU	MA21	CAN Bus High Serial Data (+)	I	—
14-16	—	—	—	Not Occupied	—	—
17	—	BN	MA05	Fuel Level Sensor Signal	I	—
18	—	WH	MA02	Run/Crank Ignition Voltage	I	—
19	—	—	—	Not Occupied	—	—
20	—	L-GN	MA01	Battery Positive Voltage	I	—
21-23	—	—	—	Not Occupied	—	—
24	—	L-BU	MA07	Park Brake Switch Signal	I	—
25	—	BN	MA06	Brake Fluid Level Sensor Signal	I	—
26	—	D-GN	MA10	Charge Indicator Control	I	—
27	—	OG	MA11	Driver Seat Belt Switch Signal	I	—
28	—	YE	FB27	Seat Belt Reminder Signal	I	—
29	—	YE/BU	FB28	SIR Indicator Control	I	—

P16 Instrument Cluster (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
30	—	RD	PF04	Security Indicator Control	I	—
31-32	—	—	—	Not Occupied	—	—
33	—	PK	FC01	Overdrive Defeat Switch Signal	I	—
34	—	GY	MA61	Outside Ambient Air Temperature Sensor Signal	I	—
35	—	GY	MA16	Fuel Temperature Sensor Signal	I	—
36	—	—	—	Not Occupied	—	—
37	—	L-GN	MA62	Outside Ambient Temperature Sensor Low Reference	I	—
38	—	BK	MAE1	Ground	I	—
39	—	BK	MAE2	Ground	I	—
40	—	BK	MAE3	Ground	I	—

P19AG Speaker - Left Front Door

Connector Part Information

Harness Type: Driver Door
 OEM Connector: NS02FW-CS
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F (WH)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

P19AG Speaker - Left Front Door

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	GY	RA07	Left Front Speaker (-)	I	—
2	—	GY/D-GN	RA06	Left Front Speaker (+)	I	—

P19AH Speaker - Right Front Door

Connector Part Information

Harness Type: Passenger Door
 OEM Connector: NS02FW-CS
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F (WH)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

P19AH Speaker - Right Front Door

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	GY	RA05	Right Front Speaker (-)	I	—
2	—	D-GN/WH	RA04	Right Front Speaker (+)	I	—

P28 Speaker - Parking Assist

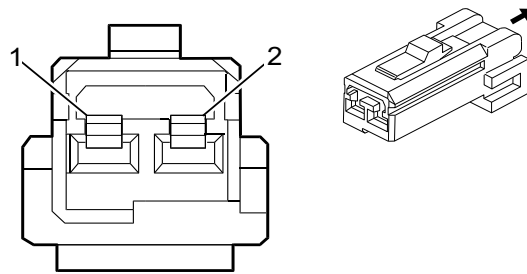

872554

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: 776127-2
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

P28 Speaker - Parking Assist

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	RD	FD05	Park Assist Alarm Low Reference	I	—
2	—	D-BU	FD04	Park Assist Alarm Signal	I	—

Q6F Camshaft Position Actuator Solenoid Valve – Intake

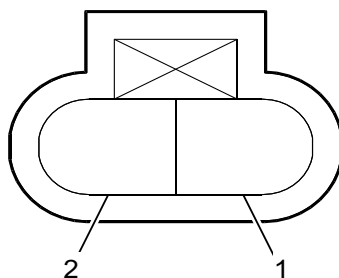

4078501

Connector Part Information

Harness Type: Engine
 OEM Connector: E02FG-RS-LGY
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F, Sealed (GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

Q6F Camshaft Position Actuator Solenoid Valve – Intake

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	PK	AC49	Camshaft Phaser Intake Solenoid Control	I	—
2	—	RD	AC48	Ignition Main Relay Supply Voltage	I	—

Q12 Evaporative Emission Purge Solenoid Valve

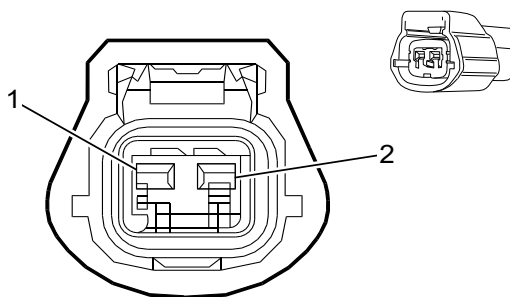

2684330

Connector Part Information

Harness Type: Engine
 OEM Connector: E02FL-RS-LGY
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F Sealed (GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

Q12 Evaporative Emission Purge Solenoid Valve

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	PK	AC67	EVAP Canister Purge Solenoid Control	I	—
2	—	D-GN	AC68	Engine Controls Ignition Relay Supply Voltage	I	—

Q13 Evaporative Emission Vent Solenoid Valve

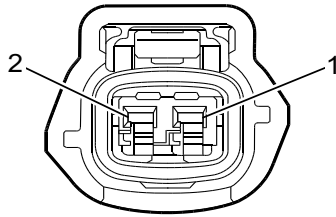

4065419

Connector Part Information

Harness Type: Body
 OEM Connector: E02FB-RS
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F 090 Series, Sealed (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

Q13 Evaporative Emission Vent Solenoid Valve

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	YE	AB40	Engine Controls Ignition Relay Supply Voltage	I	—
2	—	OG	AB41	EVAP Canister Vent Solenoid Control	I	—

Q17A Fuel Injector 1

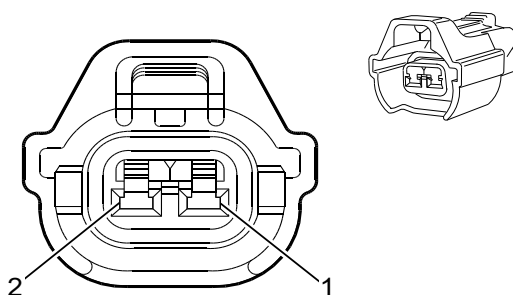

4079637

Connector Part Information

Harness Type: Engine
 OEM Connector: HS02FGY
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F 090 Series, Sealed (GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

Q17A Fuel Injector 1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	L-BU	AC16	Ignition Main Relay Supply Voltage	I	—
2	—	D-BU	AC12	Fuel Injector Control (1)	I	—

Q17B Fuel Injector 2

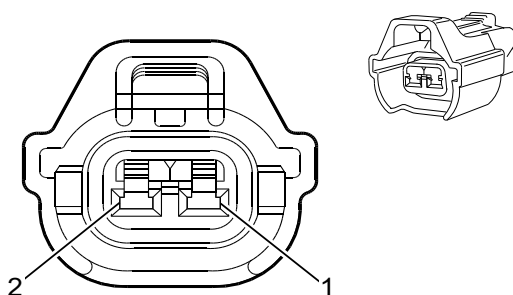

4079637

Connector Part Information

Harness Type: Engine
 OEM Connector: HS02FGY
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F 090 Series, Sealed (GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

Q17B Fuel Injector 2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	L-BU	AC17	Ignition Main Relay Supply Voltage	I	—
2	—	RD	AC13	Fuel Injector Control (2)	I	—

Q17C Fuel Injector 3

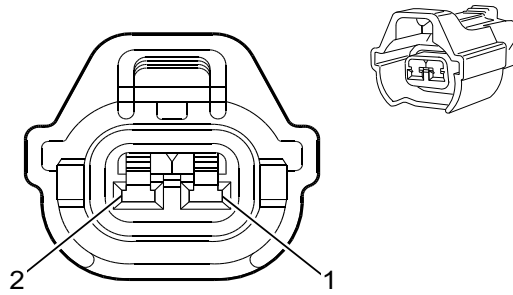

4079637

Connector Part Information

Harness Type: Engine
 OEM Connector: HS02FGY
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F 090 Series, Sealed (GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

Q17C Fuel Injector 3

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	L-BU	AC18	Ignition Main Relay Supply Voltage	I	—
2	—	YE	AC14	Fuel Injector Control (3)	I	—

Q17D Fuel Injector 4

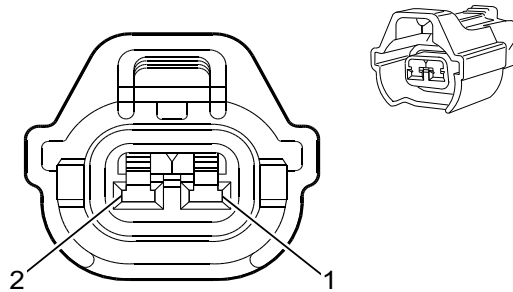

4079637

Connector Part Information

Harness Type: Engine
 OEM Connector: HS02FGY
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F 090 Series, Sealed (GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

Q17D Fuel Injector 4

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	L-BU	AC19	Ignition Main Relay Supply Voltage	I	—
2	—	PU	AC15	Fuel Injector Control (4)	I	—

Q38 Throttle Body

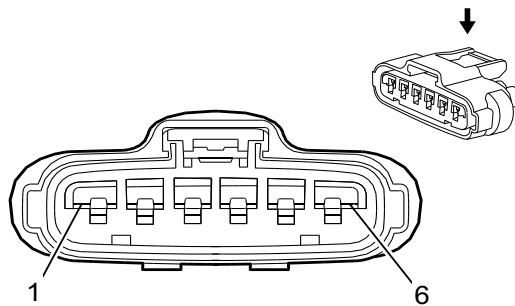

2455650

Connector Part Information

Harness Type: Engine
 OEM Connector: HS06FB
 Service Connector: Service by Harness - See Parts Catalog
 Description: 6-Way F 090 II Series, Sealed (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

Q38 Throttle Body

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	D-BU	AC75	Throttle Actuator Control Open	I	—
2	—	PK	AC74	Throttle Actuator Control Close	I	—
3	—	YE	AC76	Throttle Position Sensor Low Reference	I	—
4	—	BN	AC79	Throttle Position Sensor Signal (2)	I	—
5	—	PU	AC78	Throttle Position Sensor 5 Volt Reference	I	—
6	—	D-BU	AC77	Throttle Position Sensor Signal (1)	I	—

R3 Blower Motor Resistor

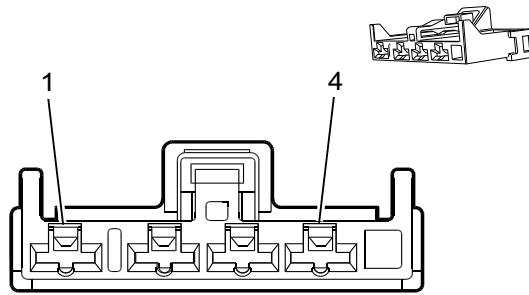

2684336

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: M04FBR-LC
 Service Connector: Service by Harness - See Parts Catalog
 Description: 4-Way F (BN)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

R3 Blower Motor Resistor

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	D-BU	HA04	Blower Motor Medium High Speed Control	I	—
2	—	WH	HA06	Blower Motor Low Speed Control	I	—
3	—	PK	HA08	Blower Motor Speed Signal	I	—
4	—	RD	HA05	Blower Motor Medium Low Speed Control	I	—

S3 Transmission Shift Lever

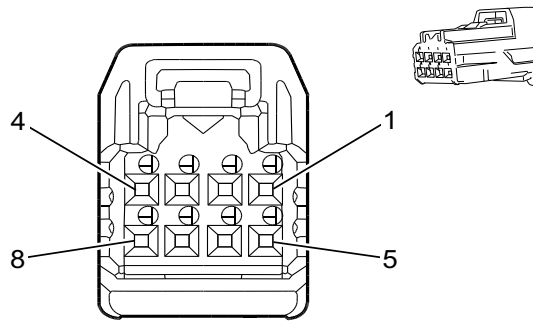

4062624

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: TH08FW-NH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 8-Way F 025 Series (NA)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

S3 Transmission Shift Lever

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	D-GN	FC04	Stop Lamp Switch Signal	I	—
2	—	BK	FCE3	Ground	I	—
3	—	PK	FC01	Overdrive Defeat Switch Signal	I	—
4	—	BK	FCE1	Ground	I	—
5-6	—	—	—	Not Occupied	—	—
7	—	BK	FCE2	Ground	I	—
8	—	VT	FC02	Tail Lamps Relay Supply Voltage	I	—

S7 Cruise Control Brake Switch (K34)

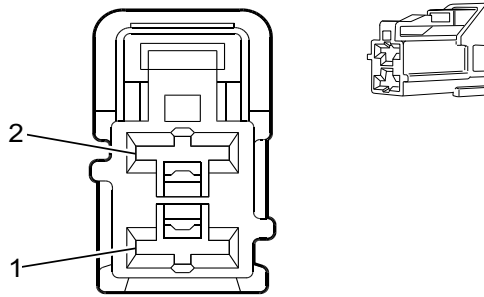

4081650

Connector Part Information

Harness Type: Engine Compartment
 OEM Connector: M02FBR-LC
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F (BN)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

S7 Cruise Control Brake Switch (K34)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	WH	CA01	Run/Crank Ignition Voltage	I	—
2	—	L-BU	CA02	Brake Pedal Apply Signal	I	—

S26 Hazard Warning Switch

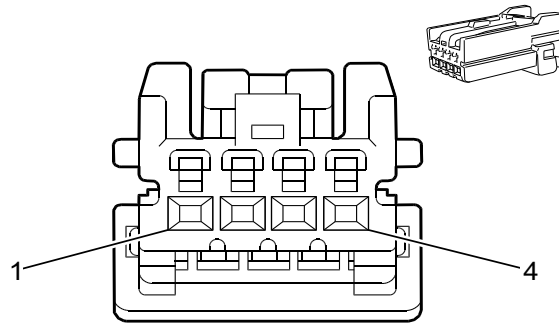

2011728

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: TK04FW
 Service Connector: Service by Harness - See Parts Catalog
 Description: 4-Way F 040 III Series (NA)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

S26 Hazard Warning Switch

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BK	LEE2	Ground	I	—
2	—	D-BU	LD01	Hazard Switch Signal	I	—
3	—	BK	LDE2	Ground	I	—
4	—	VT	LD07	Tail Lamps Relay Supply Voltage	I	—

S39 Ignition Switch

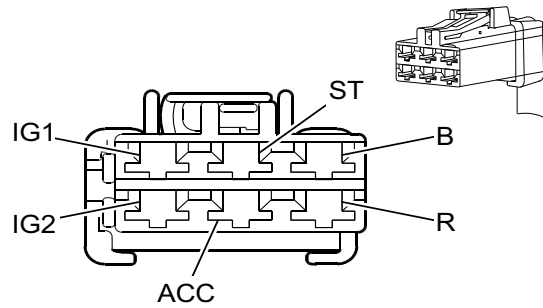

4081655

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: M06FW-US-DH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 6-Way F (WH)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

S39 Ignition Switch

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
ACC	—	BN	DA13	Accessory/Run Ignition Voltage	I	—
B	—	D-BU	DA11	Battery Positive Voltage	I	—
IG1	—	RD	DA14	Run/Crank Ignition Voltage	I	—
IG2	—	YE	DA15	Run Ignition Voltage	I	—
R	—	—	—	Not Occupied	—	—
ST	—	WH	AH03	Crank Ignition Voltage	I	—

S52 Outside Rearview Mirror Switch

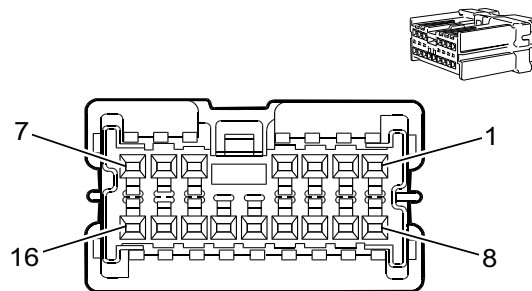

4092117

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: TK16FW
 Service Connector: Service by Harness - See Parts Catalog
 Description: 16-Way F 040 Series (NA)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

S52 Outside Rearview Mirror Switch

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	-	-	Not Occupied	I	—
2	—	GY	KA07	Driver Mirror Motor Up (+) Down (-) Control	I	—
3	—	RD	KA04	Co-Driver Mirror Motor Up (+) Down (-) Control	I	—
4	—	L-GN	KA03	Co-Driver Mirror Motor Right (+) Left (-) Control	I	—
5	—	D-GN	KA06	Driver Mirror Motor Right (-) Left (+) Control	I	—
6	—	PK	KA05	Driver Mirror Motor Common Control	I	—
7	—	WH	KA02	Co-Driver Mirror Motor Common Control	I	—
8-11	—	—	—	Not Occupied	—	—
12	—	BK	KAE1	Ground	I	—
13	—	D-BU	KA01	Accessory/Run Ignition Voltage	I	—
14-16	—	—	—	Not Occupied	—	—

S75 Traction Control Switch

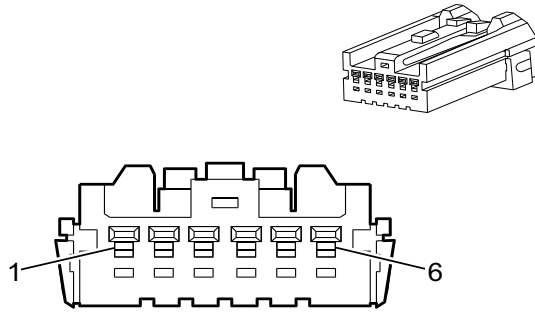

4108581

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: TK06FGY
 Service Connector: Service by Harness - See Parts Catalog
 Description: 6-Way F (GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

S75 Traction Control Switch

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1-2	—	—	—	Not Occupied	—	—
3	—	PU	BSE6	Ground	I	—
4	—	VT	BS48	Tail Lamps Relay Supply Voltage	I	—
5	—	BK	BSE3	Ground	I	—
6	—	GN	BS41	Traction Control Off Switch Signal	I	—

S78 Turn Signal/Multifunction Switch

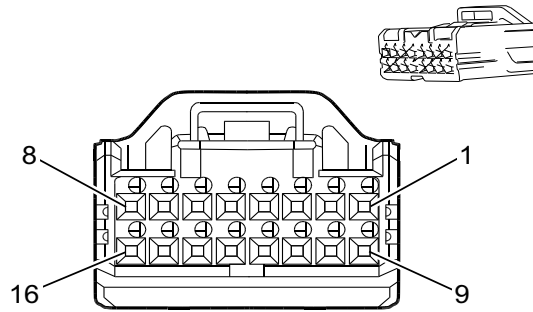

4063846

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: TH16FW-NH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 16-Way F 025 Series (NA)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

S78 Turn Signal/Multifunction Switch

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	YE	WA12	Windshield Washer Pump Control	I	—
2	—	D-BU	PD09	Turn Signal/Multifunction Switch Input Signal (4)	I	—
3-6	—	—	—	Not Occupied	—	—
7	—	PK	PD08	Turn Signal/Multifunction Switch Input Signal (3)	I	—
8	—	BK	WAE2	Ground	I	—
9	—	WH	PD03	Turn Signal/Multifunction Switch Output Signal (3)	I	—
10	—	BN	PD10	Turn Signal/Multifunction Switch Input Signal (5)	I	—
11	—	RD	PD02	Turn Signal/Multifunction Switch Output Signal (2)	I	—
12	—	YE	PD04	Turn Signal/Multifunction Switch Output Signal (4)	I	—
13	—	OG	PD01	Turn Signal/Multifunction Switch Output Signal (1)	I	—
14	—	VT	PD06	Turn Signal/Multifunction Switch Input Signal (1)	I	—
15	—	BN	PD05	Turn Signal/Multifunction Switch Output Signal (5)	I	—
16	—	D-GN	PD07	Turn Signal/Multifunction Switch Input Signal (2)	I	—

S101D Door Lock/Window Switch - Driver

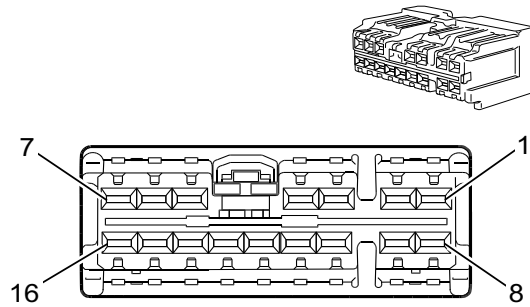

4065463

Connector Part Information

Harness Type: Driver Door
 OEM Connector: NS16FW-CS
 Service Connector: Service by Harness - See Parts Catalog
 Description: 16-Way F 090 Series (NA)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

S101D Door Lock/Window Switch - Driver

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	PU	PA01	Power Window Supply Voltage	I	-
2	—	—	—	Not Occupied	—	—
3	-	L-BU	PA20	Power Window Serial Data	I	—
4	—	—	—	Not Occupied	—	—
5	—	BN	PA06	Driver Power Window Switch Encoder Supply Voltage	I	—
6	—	PU	PD12	Driver Door Lock Switch Unlock Signal	I	—
7	—	RD	PD11	Driver Door Lock Switch Lock Signal	I	—
8	—	D-BU	PA08	Power Window Motor Driver Up Control	I	—
9	—	PK	PA05	Driver Power Window Switch Encoder Pulse B Signal	I	—
10	—	D-BU	PA02	Power Window Ignition Output	I	—
11	-	GY	PA09	Power Window Motor Driver Down Control	I	—
12	—	—	—	Not Occupied	I	—
13	—	WH	PA07	Driver Power Window Switch Encoder Pulse A Signal	I	—
14	—	D-GN	PA10	Driver Power Window Switch Encoder Low Reference	I	—
15	—	BK	PAE1	Ground	I	—
16	—	—	—	Not Occupied	I	—

S101P Door Lock/Window Switch - Passenger

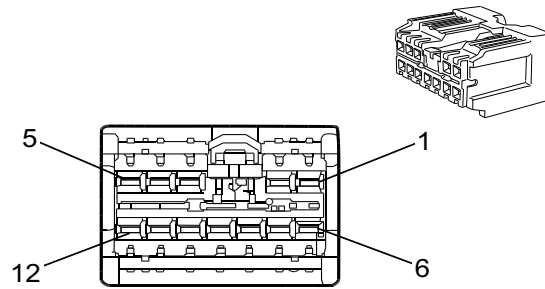

4065412

Connector Part Information

Harness Type: Passenger Door
 OEM Connector: NS12FW-CS
 Service Connector: Service by Harness - See Parts Catalog
 Description: 12-Way F 2.3 Series (WH)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

S101P Door Lock/Window Switch - Passenger

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	PK	PA17	Power Window Supply Voltage	I	—
2	—	BN	PA13	Passenger Power Window Switch Encoder Supply Voltage	I	—
3	—	—	—	Not Occupied	I	—
4	—	PU	PD30	Driver Door Lock Switch Unlock Signal	I	—
5	—	RD	PD29	Driver Door Lock Switch Lock Signal	I	—
6	—	D-BU	PA18	Driver Door Lock Switch Unlock Signal	I	—
7	—	PK	PA15	Passenger Power Window Switch Encoder Pulse B Signal	I	—
8	—	YE	PA19	Power Window Motor Passenger Down Control	I	—
9	—	WH	PA14	Passenger Power Window Switch Encoder Pulse A Signal	I	—
10	—	D-GN	PA16	Passenger Power Window Switch Encoder Low Reference	I	—
11	—	BK	PAE2	Ground	I	—
12	—	L-BU	PA20	Power Window Serial Data	I	—

S107 Parking Assist On/Off Switch (UD7)

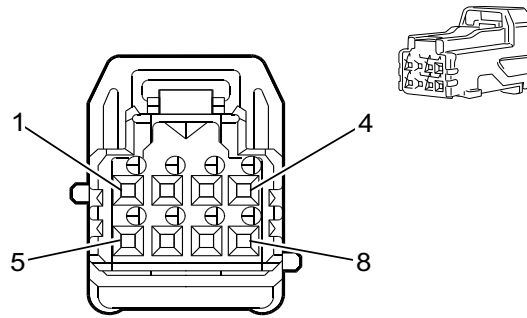

4094213

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: TH08FG-NH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 8-Way F (GN)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

S107 Parking Assist On/Off Switch (UD7)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	RD/BU	FD20	Tail Lamps Relay Supply Voltage	I	—
2	—	—	—	Not Occupied	—	—
3	—	BK	FDE2	Ground	I	—
4	—	BN	FD21	Ground	I	—
5	—	L-GN	FD07	Rear Park Assist LED Disable Signal	I	—
6	—	PK	FD06	Rear Park Assist On/Off Switch Signal	I	—
7	—	—	—	Not Occupied	—	—
8	—	BK	FDE3	Ground	I	—

T4H Digital Radio Antenna (U1B)

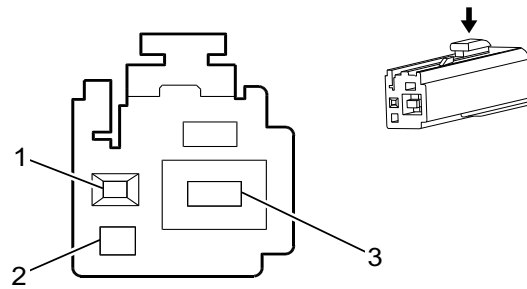

4144412

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: Not Available
 Service Connector: Service by Harness - See Parts Catalog
 Description: 3-Way F (GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

T4H Digital Radio Antenna (U1B)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BK	—	Antenna Amplifier ON Signal	I	—
2	—	BK	—	AM/FM Antenna Signal	I	—
3	—	—	—	Not Occupied	—	—

T4H Digital Radio Antenna X1 (CWM)

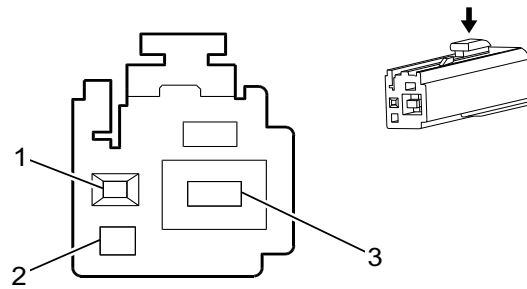

4144412

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: Not Available
 Service Connector: Service by Harness - See Parts Catalog
 Description: 3-Way F (GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

T4H Digital Radio Antenna X1 (CWM)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BK	—	Antenna Amplifier ON Signal	I	—
2	—	BK	—	AM/FM Antenna Signal	I	—
3	—	—	—	Not Occupied	—	—

T4H Digital Radio Antenna X2 (CWM)

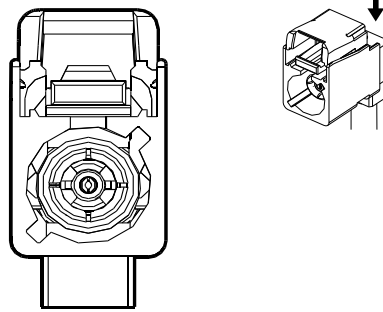

3028803

Connector Part Information

Harness Type: Instrument Panel COAX
 OEM Connector: Not Available
 Service Connector: Service by Cable Assembly - See Part Catalog
 Description: 1-Way F Coax Type (BN)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Cable Assembly - See Parts Catalog	Not Available	Not Available	Not Available

T4H Digital Radio Antenna X2 (CWM)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	Coax	—	Coaxial Antenna XM Signal	I	—

T8A Ignition Coil 1

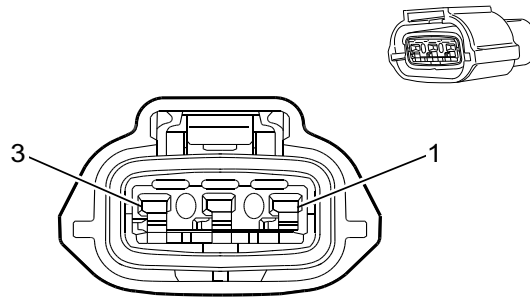

4065422

Connector Part Information

Harness Type: Engine
 OEM Connector: E03FGY-RS
 Service Connector: Service by Harness - See Parts Catalog
 Description: 3-Way F 090 Series, Sealed (GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

T8A Ignition Coil 1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	RD	AC55	Ignition Control (1)	I	—
2	—	BK	AE20	Ground	I	—
3	—	VT	AC50	Engine Controls Ignition Relay Supply Voltage	I	—

T8B Ignition Coil 2

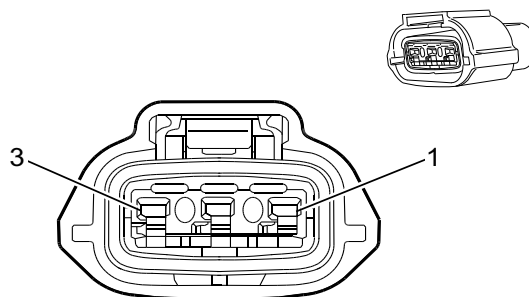

4065422

Connector Part Information

Harness Type: Engine

OEM Connector: E03FGY-RS

Service Connector: Service by Harness - See Parts Catalog

Description: 3-Way F 090 Series, Sealed (GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

T8B Ignition Coil 2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	L-GN	AC56	Ignition Control (2)	I	—
2	—	BK	AE21	Ground	I	—
3	—	VT	AC51	Engine Controls Ignition Relay Supply Voltage	I	—

T8C Ignition Coil 3

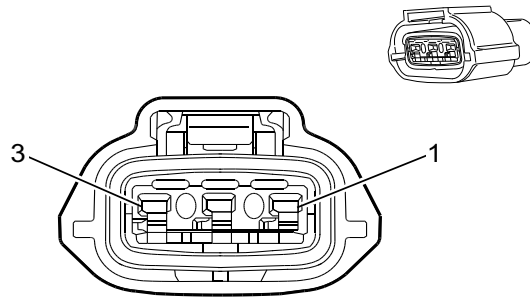

4065422

Connector Part Information

Harness Type: Engine
 OEM Connector: E03FGY-RS
 Service Connector: Service by Harness - See Parts Catalog
 Description: 3-Way F 090 Series, Sealed (GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

T8C Ignition Coil 3

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	L-BU	AC57	Ignition Control (3)	I	—
2	—	BK	AE22	Ground	I	—
3	—	VT	AC52	Engine Controls Ignition Relay Supply Voltage	I	—

T8D Ignition Coil 4

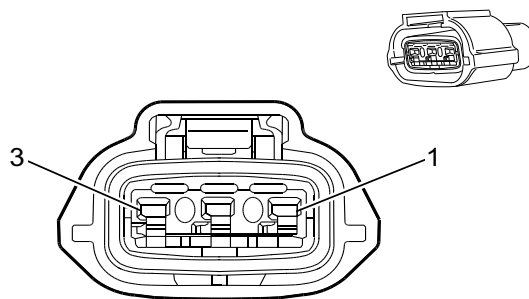

4065422

Connector Part Information

Harness Type: Engine
 OEM Connector: E03FGY-RS
 Service Connector: Service by Harness - See Parts Catalog
 Description: 3-Way F 090 Series, Sealed (GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

T8D Ignition Coil 4

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	D-GN	AC58	Ignition Control (4)	I	—
2	—	BK	AE23	Ground	I	—
3	—	VT	AC53	Engine Controls Ignition Relay Supply Voltage	I	—

T14 Immobilizer Antenna Amplifier (Z49)

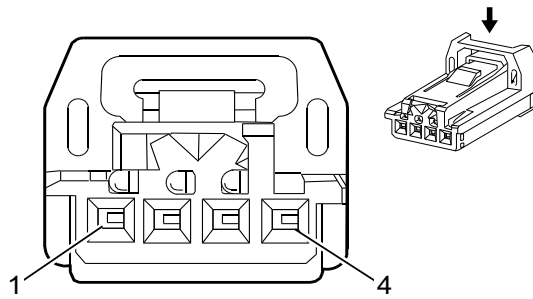

2294317

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: TH04FW-NH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 4-Way F 1.5 Series, (WH)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

T14 Immobilizer Antenna Amplifier (Z49)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	PK	PF25	Linear Interconnect Network Bus	I	—
2-3	—	—	—	Not Occupied	—	—
4	—	BK	PFE2	Ground	I	—

X80H Accessory Power Receptacle - Center Console

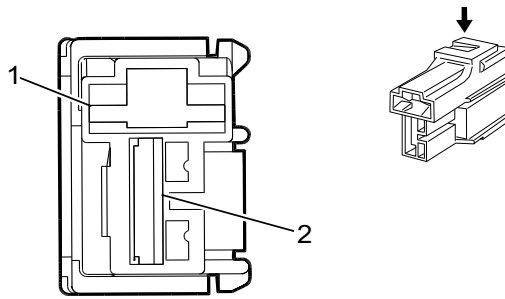

4062174

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: P02FB-Z
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F 250 Series (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

X80H Accessory Power Receptacle - Center Console

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BK	GAE2	Ground	I	—
2	—	D-BU	GA02	Accessory Relay Supply Voltage	I	—

X80L Accessory Power Receptacle - Center Console Rear

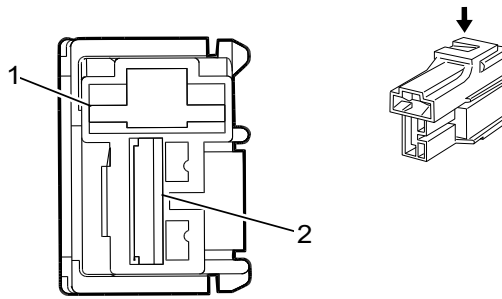

4062174

Connector Part Information

Harness Type: Body
 OEM Connector: P02FB-Z
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F 250 Series (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

X80L Accessory Power Receptacle - Center Console Rear

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BK	GAE1	Ground	I	—
2	—	RD/BU	GA01	Accessory Relay Supply Voltage	I	—

X83 Auxiliary Audio Input (U1B)

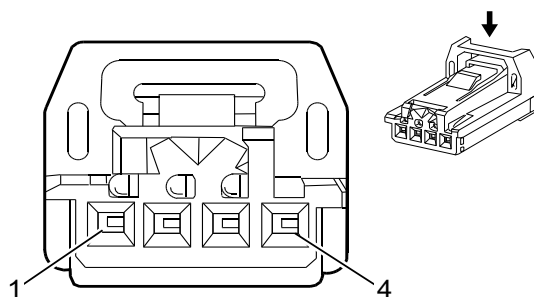

2294317

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: TH04FW-NH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 4-Way F 1.5 Series, Sealed (WH)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

X83 Auxiliary Audio Input (U1B)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	WH	RI41	Right Auxiliary Audio Signal	I	—
2	—	BK	RI42	Auxiliary Audio Common Signal	I	—
3	—	—	—	Not Occupied	—	—
4	—	RD	RI40	Left Auxiliary Audio Signal	I	—

X83 Auxiliary Audio Input X1 (CWM)

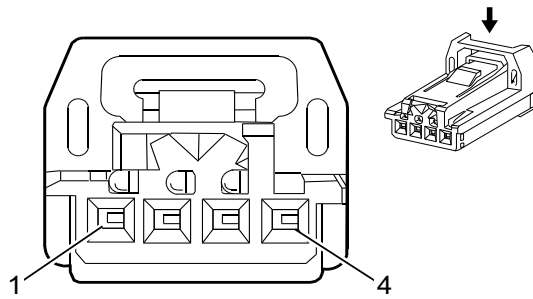

2294317

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: TH04FW-NH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 4-Way F 1.5 Series, Sealed (WH)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

X83 Auxiliary Audio Input X1 (CWM)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	WH	RI41	Right Auxiliary Audio Signal	I	—
2	—	BK	RI42	Auxiliary Audio Common Signal	I	—
3	—	—	—	Not Occupied	—	—
4	—	RD	RI40	Left Auxiliary Audio Signal	I	—

X83 Auxiliary Audio Input X2 (CWM)

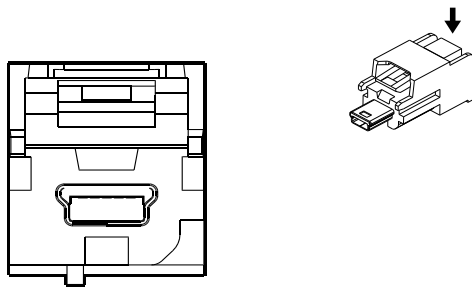

3028814

Connector Part Information

Harness Type: Instrument Panel USB
 OEM Connector: GT17H-4S-HU
 Service Connector: Service by Cable Assembly - See Parts Catalog
 Description: 5-Way F USB Type (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Cable Assembly - See Parts Catalog	Not Available	Not Available	Not Available

X83 Auxiliary Audio Input X2 (CWM)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	USB	—	USB Serial Data	I	—

X84 Data Link Connector

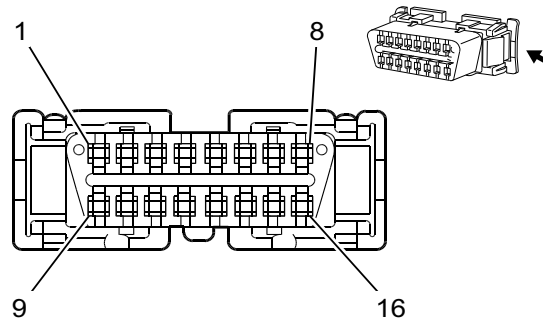

1962076

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: BD16FW
 Service Connector: Service by Harness - See Parts Catalog
 Description: 16-Way F Hinge Lock Housing (WH)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

X84 Data Link Connector

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1-3	—	—	—	Not Occupied	I	—
4	—	BK	ACE1	Ground	I	—
5	—	BK	ACE2	Ground	I	—
6	—	D-BU	AC97	CAN Bus High Serial Data (+)	I	—
7	—	GY	AC69	K-Line Diagnostic Serial Data	I	—
8	—	WH	AC71	Run/Crank Ignition Voltage	I	—
9-13	—	—	—	Not Occupied	I	—
14	—	PK	AC98	CAN Bus High Serial Data (-)	I	—
15	—	—	—	Not Occupied	—	—
16	—	L-GN	AC70	Battery Positive Voltage	I	—

X85 Steering Wheel Air Bag Coil X1

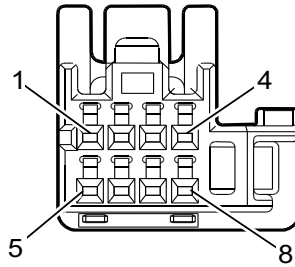

4092115

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: TK08FGY-1V
 Service Connector: Service by Harness - See Parts Catalog
 Description: 8-Way F 040 III Series (GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

X85 Steering Wheel Air Bag Coil X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	—	Not Occupied	—	—
2	—	BK	CAE2	Ground	I	—
3	—	PK	CA03	Cruise Control Set/Coast/Resume/Accelerate Switch Signal	I	—
4	—	BN	RT50	Steering Wheel Resistor Ladder Input Signal (1)	I	—
5	—	RD	MH02	Horn Relay Control	I	—
6	—	BK	RTE3	Ground	I	—
7	—	BK	CAE1	Ground	I	—
8	—	YE	RT51	Steering Wheel Resistor Ladder Input Signal (2)	I	—

X85 Steering Wheel Air Bag Coil X2

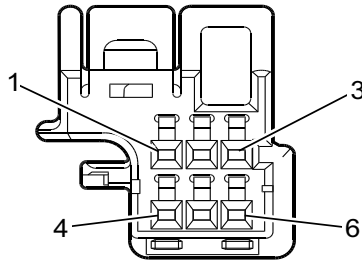

4092091

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: TK06FY-EX-1V
 Service Connector: Service by Harness - See Parts Catalog
 Description: 6-Way F 040 III Series (YE)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

X85 Steering Wheel Air Bag Coil X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	VT	CA06	Tail Lamps Relay Supply Voltage	I	—
2-3	—	—	—	Not Occupied	—	—
4	—	YE/RD	FB21	Steering Wheel Module - Low Control	I	—
5	—	YE/GN	FB22	Steering Wheel Module Stage 2 High Control	I	—
6	—	YE	FB19	Steering Wheel Module Stage 1 High Control	I	—

X85 Steering Wheel Air Bag Coil X3

Connector Part Information

Harness Type: Steering Wheel
 OEM Connector: Not Available
 Service Connector: Service by Harness - See Parts Catalog
 Description: 8-Way F (GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service Connector: Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

X85 Steering Wheel Air Bag Coil X3

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	RD	CA03	Cruise Control Set/Coast/Resume/Accelerate Switch Signal	I	—
2	—	WH	RT50	Steering Wheel Resistor Ladder Input Signal (1)	I	—
3	—	D-BU	RT51	Steering Wheel Resistor Ladder Input Signal (2)	I	—
4	—	BK	CAE1	Cruise Control Switch Low Reference	I	—
5	—	BN	RTE3	Steering Wheel Resistor Ladder Input Low Reference	I	—
6	—	D-GN	MH02	Horn Relay Control	I	—
7	—	PK	CAE2	Backlight Lamp Control	I	—
8	—	YE	CA06	Tail Lamps Relay Supply Voltage	I	—

X87LB Sliding Door Jamb Contact Plate - Left Body

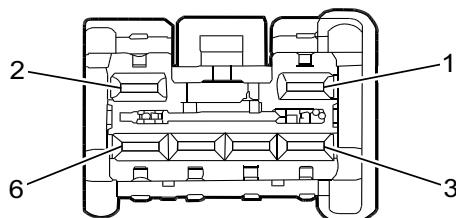

4065411

Connector Part Information

Harness Type: Body
 OEM Connector: NS06FW-CS
 Service Connector: Service by Harness - See Parts Catalog
 Description: 6-Way F, 2.3 Series (WH)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

X87LB Sliding Door Jamb Contact Plate - Left Body

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	YE	PD25	Left Sliding Door Lock Motor Unlock Control	I	—
2	—	—	—	Not Occupied	—	—
3	—	D-BU	PD24	Left Sliding Door Lock Motor Lock Control	I	—
4-6	—	—	—	Not Occupied	—	—

X87RB Sliding Door Jamb Contact Plate - Right Body

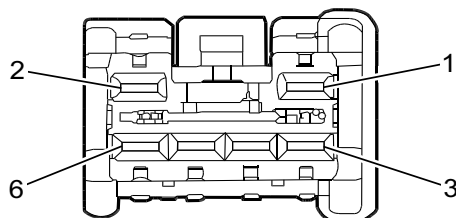

4065411

Connector Part Information

Harness Type: Body
 OEM Connector: NS06FW-CS
 Service Connector: Service by Harness - See Parts Catalog
 Description: 6-Way F 2.3 Series


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

X87RB Sliding Door Jamb Contact Plate - Right Body

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	—	Not Occupied	—	—
2	—	YE	PD23	Right Sliding Door Lock Motor Lock Control	I	—
3-5	—	—	—	Not Occupied	—	—
6	—	D-BU	PD22	Right Sliding Door Lock Motor Unlock Control	I	—

Splice Pack Connector End Views JX101 Engine Compartment Harness

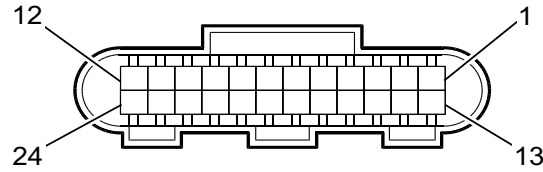

4083789

Connector Part Information

Harness Type: Engine Compartment
 OEM Connector: SAA24FB-J
 Service Connector: Service by Harness - See Parts Catalog
 Description: 24-Way F (BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available


JX101 Engine Compartment Harness

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	L-BU	BS10	K-Line Diagnostic Serial Data	I	—
2	—	L-BU	AC69	K-Line Diagnostic Serial Data	I	—
3	—	L-BU	AC69	K-Line Diagnostic Serial Data	I	—
4	—	VT	BS43	Ignition Main Relay Supply Voltage	I	—
5	—	VT	BS03	Ignition Main Relay Supply Voltage	I	—
6	—	VT	BS03	Ignition Main Relay Supply Voltage	I	—
7	—	L-BU	LR01	Ignition Main Relay Supply Voltage	I	—
8	—	L-BU	LR01	Ignition Main Relay Supply Voltage	I	—
9	—	—	—	Not Occupied	—	—
10	—	L-GN	AH04	Neutral Safety Switch Park/Neutral SignalS	I	—
11	—	L-GN	AH04	Neutral Safety Switch Park/Neutral Signal	I	—
12-16	—	—	—	Not Occupied	—	—
17	—	BK	WBE2	Ground	I	—
18	—	BK	MAE5	Ground	I	—
19	—	BK	MAE5	Ground	I	—
20	—	—	—	Not Occupied	—	—
21	—	RD	BS32	Stop Lamp Supply Voltage	I	—
22	—	RD	AC90	Stop Lamp Supply Voltage	I	—
23	—	RD	LS02	Stop Lamp Supply Voltage	I	—

6-322 Wiring Systems and Power Management**JX101 Engine Compartment Harness (cont'd)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
24	—	RD	LS02	Stop Lamp Supply Voltage	I	—

JX102 Engine Harness

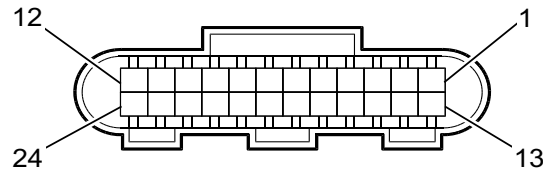

4083789

Connector Part Information

Harness Type: Engine
 OEM Connector: SAA24FB-J
 Service Connector: Service by Harness - See Parts Catalog
 Description: 24-Way F (BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available


JX102 Engine Harness

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	D-GN	BA34	Park/Neutral Position Switch Range Signal (R)	I	—
2	—	D-GN	BA34	Park/Neutral Position Switch Range Signal (R)	I	—
3	—	D-GN	LR04	Backup Lamp Supply Voltage Signal	I	—
4	—	L-GN	AC95	Transmission Park/Neutral Signal	I	—
5	—	L-GN	AH04	Neutral Safety Switch Park/Neutral Signal	I	—
6	—	L-GN	AH04	Neutral Safety Switch Park/Neutral Signal	I	—
7	—	BN	AC80	Sensor 5 Volt Reference	I	—
8	—	BN	AC80	Sensor 5 Volt Reference	I	—
9	—	BN	AI03	Sensor 5 Volt Reference	I	—
10	—	L-GN	AC81	Fuel Tank Pressure Sensor Signal	I	—
11	—	L-GN	AC81	Fuel Tank Pressure Sensor Signal	I	—
12-13	—	—	—	Not Occupied	—	—
14	—	D-GN	AI02	Current Sensor Signal	I	—
15	—	D-GN	AI02	Current Sensor Signal	I	—
16	—	BK	ACE5	Ground	I	—
17	—	BK	ACE4	Ground	I	—
18	—	BK	ACE3	Ground	I	—
19	—	L-GN	BA19	Ignition Main Relay Supply Voltage	I	—
20	—	L-GN	BA30	Ignition Main Relay Supply Voltage	I	—
21	—	L-GN	BA30	Ignition Main Relay Supply Voltage	I	—
22	—	L-GN	BA52	Ignition Main Relay Supply Voltage	I	—

6-324 Wiring Systems and Power Management**JX102 Engine Harness (cont'd)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
23	—	L-GN	BA55	Ignition Main Relay Supply Voltage	I	—
24	—	—	—	Not Occupied	—	—

JX200 Engine Compartment Harness

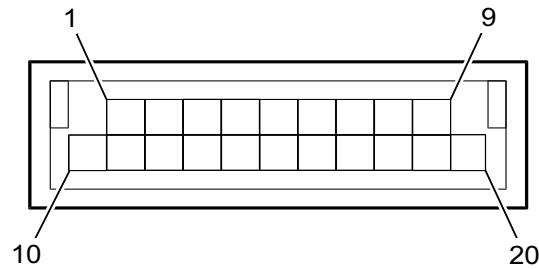

4081665

Connector Part Information

Harness Type: Engine Compartment
 OEM Connector: NH20HW-J
 Service Connector: Service by Harness - See Parts Catalog
 Description: 20-Way F (WH)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

JX200 Engine Compartment Harness

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1-9	—	—	—	Not Occupied	—	—
10	—	D-BU	IA01	CAN Bus High Serial Data (+)	I	—
11	—	D-BU	IA01	CAN Bus High Serial Data (+)	I	—
12	—	D-BU	BA80	CAN Bus High Serial Data (+)	I	—
13	—	D-BU	BS21	CAN Bus High Serial Data (+)	I	—
14	—	D-BU	DA44	CAN Bus High Serial Data (+)	I	—
15	—	—	—	Not Occupied	—	—
16	—	PK	DA45	CAN Bus High Serial Data (-)	I	—
17	—	PK	BS22	CAN Bus High Serial Data (-)	I	—
18	—	PK	BA81	CAN Bus High Serial Data (-)	I	—
19	—	PK	IA02	CAN Bus High Serial Data (-)	I	—
20	—	PK	IA02	CAN Bus High Serial Data (-)	I	—

JX201 Instrument Panel Harness

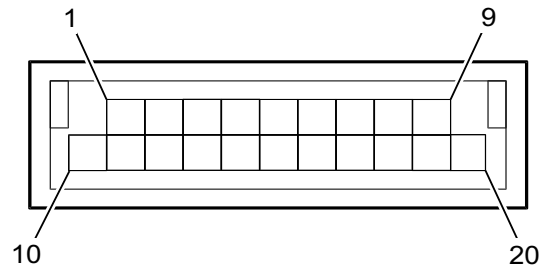

4081665

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: NH20FW-DC
 Service Connector: Service by Harness - See Parts Catalog
 Description: 20-Way F (WH)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

JX201 Instrument Panel Harness

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	L-BU	RT10	CAN Bus Medium Serial Data (+)	I	UPF
2	—	L-BU	RT10	CAN Bus Medium Serial Data (+)	I	UPF
3	—	L-BU	RA12	CAN Bus Medium Serial Data (+)	I	UPF
4	—	BK	RAE2	Ground	I	—
5	—	BK	RAE2	Ground	I	—
6	—	BK	RIE1	Ground	I	—
7	—	L-GN	RA13	CAN Bus Medium Serial Data (-)	I	UPF
8	—	L-GN	RT11	CAN Bus Medium Serial Data (-)	I	UPF
9	—	L-GN	RT11	CAN Bus Medium Serial Data (-)	I	UPF
10	—	D-BU	IA01	CAN Bus High Serial Data (+)	I	—
11	—	D-BU	IA01	CAN Bus High Serial Data (+)	I	—
12	—	D-BU	MP10	CAN Bus High Serial Data (+)	I	—
13	—	D-BU	FB10	CAN Bus High Serial Data (+)	I	—
14	—	D-BU	RA91	CAN Bus High Serial Data (+)	I	CWM
15	—	—	—	Not Occupied	—	—
16	—	PK	RA92	CAN Bus High Serial Data (-)	I	CWM
17	—	PK	FB20	CAN Bus High Serial Data (-)	I	—
18	—	PK	MP20	CAN Bus High Serial Data (-)	I	—
19	—	PK	IA02	CAN Bus High Serial Data (-)	I	—
20	—	PK	IA02	CAN Bus High Serial Data (-)	I	—

JX202 Instrument Panel Harness

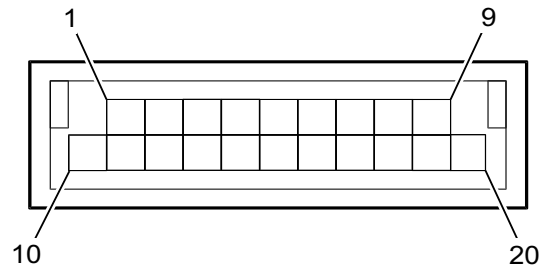

4081665

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: NH20FL-DC
 Service Connector: Service by Harness - See Parts Catalog
 Description: 20-Way F (WH)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

JX202 Instrument Panel Harness

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	PU	LT02	Tail Lamps Relay Supply Voltage	I	—
2	—	PU	LT02	Tail Lamps Relay Supply Voltage	I	—
3	—	VT	CA06	Tail Lamps Relay Supply Voltage	I	—
4	—	VT	FC02	Tail Lamps Relay Supply Voltage	I	—
5	—	VT	BS48	Tail Lamps Relay Supply Voltage	I	—
6	—	VT	HA30	Tail Lamps Relay Supply Voltage	I	—
7	—	VT	RA03	Tail Lamps Relay Supply Voltage	I	—
8	—	VT	LD07	Tail Lamps Relay Supply Voltage	I	—
9-10	—	—	—	Not Occupied	—	—
11	—	BK	LEE2	Backlight Lamp Control	I	—
12	—	BK	LEE2	Backlight Lamp Control	I	—
13	—	BK	CAE2	Backlight Lamp Control	I	—
14	—	BK	FCE2	Backlight Lamp Control	I	CWM
15	—	BK	BSE6	Backlight Lamp Control	I	—
16	—	BK	HAE4	Backlight Lamp Control	I	CWM
17	—	BK	RAE1	Backlight Lamp Control	I	—
18	—	—	RT22	Not Used	I	—
19	—	YE/BU	FB28	SIR Indicator Control	I	—
20	—	YE/BU	FB28	SIR Indicator Control	I	—

JX203 Instrument Panel Harness

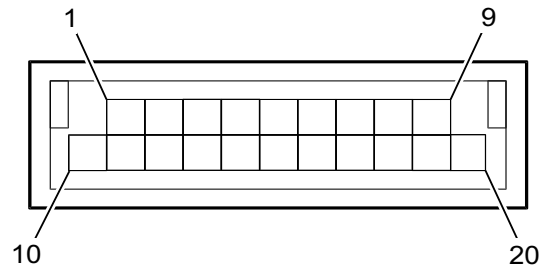

4081665

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: NH20FL-DC
 Service Connector: Service by Harness - See Parts Catalog
 Description: 20-Way F (WH)



Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

JX203 Instrument Panel Harness

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	D-BU	IA01	CAN Bus High Serial Data (+)	I	—
2	—	D-BU	IA01	CAN Bus High Serial Data (+)	I	—
3	—	D-BU	AC97	CAN Bus High Serial Data (+)	I	—
4	—	D-BU	MA21	CAN Bus High Serial Data (+)	I	—
5	—	D-BU	BW02	CAN Bus High Serial Data (+)	I	—
6	—	D-BU	PS10	CAN Bus High Serial Data (+)	I	—
7	—	—	RT25	Not Used	I	—
8-10	—	—	—	Not Occupied	—	—
11	—	PK	IA02	CAN Bus High Serial Data (-)	I	—
12	—	PK	IA02	CAN Bus High Serial Data (-)	I	—
13	—	PK	AC98	CAN Bus High Serial Data (-)	I	—
14	—	PK	MA22	CAN Bus High Serial Data (-)	I	CWM
15	—	PK	BW03	CAN Bus High Serial Data (-)	I	—
16	—	PK	PS11	CAN Bus High Serial Data (-)	I	CWM
17	—	—	RT26	Not Used	I	—
18	—	RD/BU	FB17	Run/Crank Ignition Voltage	I	—
19	—	D-GN	FB01	Run/Crank Ignition Voltage	I	—
20	—	D-BU	FB01	Run/Crank Ignition Voltage	I	—

Inline Harness Connector End Views X150 Engine Harness to Engine Compartment Harness

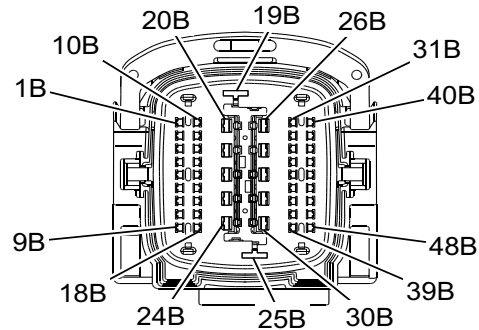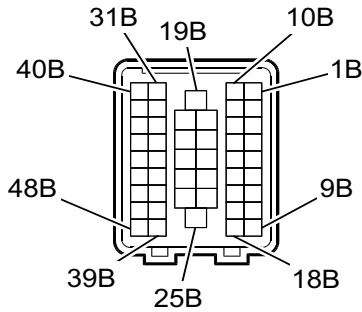

4094150

4094200

Connector Part Information

Harness Type: Engine
 OEM Connector: SAA36FB-RS10-SJZ2
 Service Connector: Service by Harness - See Parts Catalog
 Description: 48-Way F, Sealed (BK)

Connector Part Information

Harness Type: Engine Compartment
 OEM Connector: SAA36MB-RS10-SJZ2
 Service Connector: Service by Harness - See Parts Catalog
 Description: 48-Way M, Sealed (BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available
II	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

X150 Engine Harness to Engine Compartment Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1B-7B	—	—	—	—	—	Not Occupied	1B-7B	—	—	—	—	—
8B	—	BK	BAE2	I	—	Ground	8B	—	BK	BAE2	II	—
9B	—	BK	BAE1	I	—	Ground	9B	—	BK	BAE1	II	—
10-B	—	L-BU	AC16	I	—	Ignition Main Relay Supply Voltage	10-B	—	L-BU	AC16	II	—
11-B	—	L-GN	AH04	I	—	Neutral Safety Switch Park/ Neutral Signal	11B	—	L-GN	AH04	II	—
12-B	—	BK	AC82	I	—	Sensor Low Reference	12-B	—	BK	AC82	II	—
13-B	—	L-GN	AC81	I	—	EVAP Emission Pressure Sensor Signal	13-B	—	L-GN	AC81	II	—
14-B	—	BN	AC80	I	—	Sensor 5 Volt Reference	14-B	—	BN	AC80	II	—

6-330 Wiring Systems and Power Management


X150 Engine Harness to Engine Compartment Harness (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
15-B	—	D-BU	DA53	I	—	Battery Positive Voltage	15-B	—	D-BU	DA53	II	—
16-B	—	D-GN	LR04	I	—	Backup Lamp Supply Voltage Signal	16-B	—	D-GN	LR04	II	—
17-B	—	PK	BA81	I	—	CAN Bus High Serial Data (-)	17-B	—	PK	BA81	II	—
18-B	—	D-BU	BA80	I	—	CAN Bus High Serial Data (+)	18-B	—	D-BU	BA80	II	—
19-B	—	—	—	—	—	Not Occupied	19-B	—	—	—	—	—
20-B	—	L-BU	LR01	I	—	Ignition Main Relay Supply Voltage	20-B	—	L-BU	LR01	II	—
21-B	—	D-GN	AC68	I	—	Engine Controls Ignition Relay Supply Voltage	21-B	—	D-GN	AC68	II	—
22-B	—	—	—	—	—	Not Occupied	22-B	—	—	—	—	—
23-B	—	BK	AE19	I	—	Ground	23-B	—	BK	AE19	II	—
24-B	—	RD	AC29	I	—	Ignition Main Relay Supply Voltage	24-B	—	RD/WH	AC29	II	—
25-B	—	RD	AH01	I	—	Starter Relay Supply Voltage	25-B	—	RD	AH01	II	—
26-B	—	BK	AE02	I	—	Ground	26-B	—	BK	AE02	II	—
27-B	—	L-GN	AC24	I	—	Throttle Body Relay Control	27-B	—	L-GN	AC24	II	—
28-B	—	VT	AC50	I	—	Engine Controls Ignition Relay Supply Voltage	28-B	—	YE	AC50	II	—
29-B	—	OG	AB41	I	—	EVAP Canister Vent Solenoid Control	29-B	—	OG	AB41	II	—
30-B	—	BN	AC96	I	—	Engine Controls Ignition Relay Supply Voltage	30-B	—	D-GN	AC96	II	—
31-B	—	D-GN	MA10	I	—	Charge Indicator Control	31-B	—	D-GN	MA10	II	—
32-B	—	BN	DA23	I	—	Battery Positive Voltage	32-B	—	BN	DA23	II	—

X150 Engine Harness to Engine Compartment Harness (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
33-B	—	YE	AC23	I	—	Throttle Body Relay Supply Voltage	33-B	—	YE	AC23	II	—
34-B	—	GY	AC21	I	—	Fuel Pump Relay Control	34-B	—	GY	AC21	II	—
35-B	—	PK	AC04	I	—	Engine Controls Ignition Relay Control	35-B	—	D-BU	AC04	II	—
36-B	—	D-BU	AB43	I	—	Fuel Temperature Sensor 5 Volt Reference	36-B	—	D-BU	AB43	II	—
37-B	—	GY	DA24	I	—	Power Generation Command Signal	37-B	—	GY	DA24	II	—
38-B	—	L-GN	BA18	I	—	Ignition Main Relay Supply Voltage	38-B	—	L-GN	BA18	II	—
39-B	—	L-GN	BA19	I	—	Ignition Main Relay Supply Voltage	39-B	—	L-GN	BA19	II	—
40-B	—	WH	HA34	I	—	A/C Compressor Clutch Supply Voltage	40-B	—	WH	HA34	II	—
41-B-48-B	—	—	—	—	—	Not Occupied	41-B-48-B	—	—	—	—	—

X175 Engine Harness to Transmission Assembly Harness

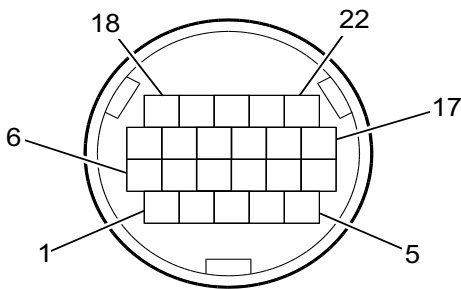

4083613

Connector Part Information

Harness Type: Engine
 OEM Connector: RK22FGY
 Service Connector: Service by Harness - See Parts Catalog
 Description: 22-Way F, Sealed (GY)

Connector Part Information

Harness Type: Transmission Assembly
 OEM Connector: Not Available
 Service Connector: Service by Harness - See Parts Catalog
 Description: 22-Way M, Sealed (GY)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available
II	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available


X175 Engine Harness to Transmission Assembly Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	—	YE	BA01	I	—	Transmission Mainline Pressure Solenoid Control	1	—	YE	BA01	II	—
2	—	WH	BA02	I	—	Transmission Pressure Control Solenoid 1 Control	2	—	WH	BA02	II	—
3	—	GN	BA03	I	—	Transmission Pressure Control Solenoid 2 Control	3	—	GN	BA03	II	—
4	—	BU	BA04	I	—	Torque Converter Clutch Pressure Control Solenoid Control	4	—	BU	BA04	II	—
5	—	RD	BA11	I	—	Torque Converter Clutch	5	—	RD	BA11	II	—


X175 Engine Harness to Transmission Assembly Harness (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
						Enable Solenoid Control						
6-11	—	—	—	—	—	Not Occupied	6-11	—	—	—	—	—
12	—	BN	BA47	I	—	Transmission Temperature Sensor Signal	12	—	BN	BA47	II	—
13	—	PK	BA37	I	—	Transmission Fluid Pressure Sensor Signal (1)	13	—	PK	BA37	II	—
14	—	GY	BA38	I	—	Transmission Fluid Pressure Sensor Signal (2)	14	—	GY	BA38	II	—
15-17	—	—	—	—	—	Not Occupied	15-17	—	—	—	—	—
18	—	YE	BA40	I	—	Sensor Low Reference	18	—	YE	BA40	II	—
19-21	—	—	—	—	—	Not Occupied	19-21	—	—	—	—	—
22	—	WH	BA46	I	—	Transmission Fluid Pressure Sensor 5 Volt Reference	22	—	WH	BA46	II	—

X201 Instrument Panel Harness to Engine Compartment Harness

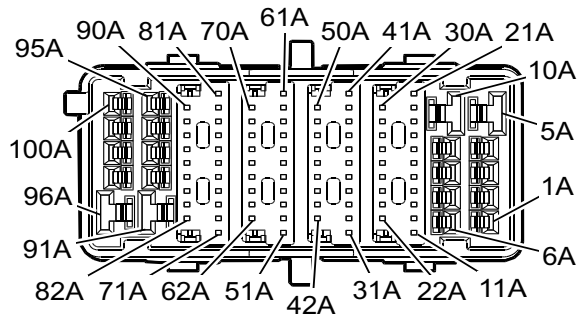

4095321

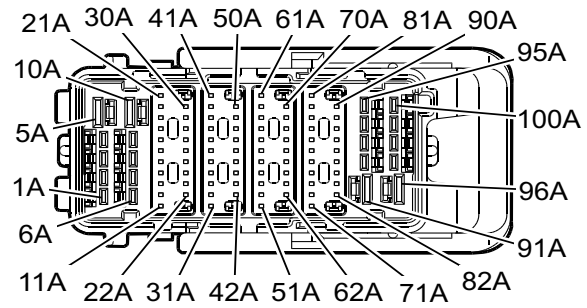

4095353

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: TH80FW-CS16-TM4
 Service Connector: Service by Harness - See Parts Catalog
 Description: 100-Way F (WH)

Connector Part Information

Harness Type: Engine Compartment
 OEM Connector: TH80MW-CS16-TM4
 Service Connector: Service by Harness - See Parts Catalog
 Description: 100-Way M (WH)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available
II	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

X201 Instrument Panel Harness to Engine Compartment Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1A	—	D-GN	LR04	I	—	Backup Lamp Supply Voltage Signal	1A	—	D-GN	LR04	II	—
2A	—	YE	AB40	I	—	Engine Controls Ignition Relay Supply Voltage	2A	—	YE	AB40	II	—
3A	—	RD	PF01	I	—	Battery Positive Voltage	3A	—	RD	PF01	II	—
4A	—	D-GN	AC20	I	—	Fuel Pump Relay Supply Voltage	4A	—	D-GN	AC20	II	—
5A	—	WH	AH03	I	—	Crank Ignition Voltage	5A	—	WH	AH03	II	—
6A	—	OG	AB41	I	-	EVAP Canister Vent Solenoid Control	6A	—	OG	AB41	II	—
7A	—	RD	MH02	I	-	Horn Relay Control	7A	—	RD	MH02	II	—

X201 Instrument Panel Harness to Engine Compartment Harness (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
8A	—	PU	LT02	I	—	Tail Lamps Relay Supply Voltage	8A	—	PU	LT02	II	—
9A	—	—	—	—	—	Not Occupied	9A	—	—	—	—	—
10-A	—	BN	NA01	I	—	Rear Defogger Relay Supply Voltage	10-A	—	RD	NA01	II	—
11-A	—	PK	IA02	I	—	CAN Bus High Serial Data (-)	11A	—	PK	IA02	II	—
12-A	—	D-BU	IA01	I	—	CAN Bus High Serial Data (+)	12-A	—	D-BU	IA01	II	—
13-A	—	—	—	—	—	Not Occupied	13-A	—	—	—	—	—
14-A	—	PU	LD18	I	—	Left Turn Signal Lamp Supply Voltage	14-A	—	PU	LD18	II	—
15-A	—	WH	LD17	I	—	Right Turn Signal Lamp Supply Voltage	15-A	—	WH	LD17	II	—
16-A	—	D-BU	AB43	I	—	Fuel Temperature Sensor 5 Volt Reference	16-A	—	D-BU	AB43	II	—
17-A	—	—	—	—	—	Not Occupied	17-A	—	—	—	—	—
18-A	—	BN	MP05	I	—	Left Front Tire Pressure Receiver Low Reference	18-A	—	BN	MP05	II	—
19-A	—	L-GN	MP04	I	—	Left Front Tire Pressure Receiver Supply Voltage	19-A	—	L-GN	MP04	II	—
20-A	—	RD	MP03	I	—	Left Front Tire Pressure Receiver Signal	20-A	—	RD	MP03	II	—
21-A	—	WH	MP02	I	—	Left Front Tire Pressure Receiver Serial Data	21-A	—	WH	MP02	II	—
22-A-23-A	—	—	—	—	—	Not Occupied	22-A-23-A	—	—	—	—	—
24-A	—	D-GN	WB01	I	—	Windshield Washer Fluid Level Sensor Signal	24-A	—	D-GN	WB01	II	—
25-A	—	GY	AC69	I	—	K-Line Diagnostic Serial Data	25-A	—	L-BU	AC69	II	—

6-336 Wiring Systems and Power Management

X201 Instrument Panel Harness to Engine Compartment Harness (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
26-A	—	OG	DA37	I	—	Run/Crank Ignition Voltage	26-A	—	OG	DA37	II	—
27-A	—	GY	MP09	I	—	Right Front Tire Pressure Receiver Low Reference	27-A	—	GY	MP09	II	—
28-A	—	VT	MP08	I	—	Right Front Tire Pressure Receiver Supply Voltage	28-A	—	VT	MP08	II	—
29-A	—	D-GN	MP07	I	—	Right Front Tire Pressure Receiver Signal	29-A	—	D-GN	MP07	II	—
30-A	—	BN	MP06	I	—	Right Front Tire Pressure Receiver Serial Data	30-A	—	BN	MP06	II	—
31-A	—	L-GN	MA62	I	—	Outside Ambient Temperature Sensor Low Reference	31-A	—	L-GN	MA62	II	—
32-A	—	GY	MA61	I	—	Outside Ambient Air Temperature Sensor Signal	32-A	—	VT	MA61	II	—
33-A	—	D-GN	MA10	I	—	Charge Indicator Control	33-A	—	D-GN	MA10	II	—
34-A	—	BN	MA06	I	—	Brake Fluid Level Sensor Signal	34-A	—	BN	MA06	II	—
35-A	—	BK	AC82	I	—	Sensor Low Reference	35-A	—	BK	AC82	II	—
36-A	—	L-GN	AC81	I	—	EVAP Emission Pressure Sensor Signal	36-A	—	L-GN	AC81	II	—
37-A	—	BN	AC80	I	—	Sensor 5 Volt Reference	37-A	—	BN	AC80	II	—
38-A	—	BK	CAE1	I	—	Cruise Control Switch Low Reference	38-A	—	BK	CAE1	II	—
39-A	—	PK	CA03	I	—	Cruise Control Set/Coast/Resume/Accelerate Switch Signal	39-A	—	PK	CA03	II	—
40-A	—	GN	FC04	I	—	Stop Lamp Switch Signal	40-A	—	GN	FC04	II	—

X201 Instrument Panel Harness to Engine Compartment Harness (cont'd)


Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
41-A	—	WH	FC03	I	—	Run/Crank Ignition Voltage	41-A	—	WH	FC03	II	—
42-A	—	RD	BS31	I	—	Wheel Speed Sensor Signal Left Rear	42-A	—	RD	BS31	II	—
43-A	—	WH	BS30	I	—	Wheel Speed Sensor Low Reference Left Rear	43-A	—	WH	BS30	II	—
44-A	—	GY	BS29	I	—	Wheel Speed Sensor Signal Right Rear	44-A	—	PU	BS29	II	—
45-A	—	D-BU	BS28	I	—	Wheel Speed Sensor Low Reference Right Rear-	45-A	—	BU	BS28	II	—
46-A	—	PU	BS43	I	—	Ignition Main Relay Supply Voltage	46-A	—	PU	BS43	II	—
47-A	—	D-GN	BS41	I	—	Traction Control Off Switch Signal	47-A	—	D-GN	BS41	II	—
48-A	—	WH	BS47	I	—	CAN Bus High Serial Data (+)	48-A	—	WH	BS47	II	—
49-A	—	PK	BS45	I	—	CAN Bus High Serial Data (-)	49-A	—	PK	BS45	II	—
50-A	—	WH	CA01	I	—	Run/Crank Ignition Voltage	50-A	—	WH	CA01	II	—
51-A-70-A	—	—	—	—	—	Not Occupied	51-A-70-A	—	—	—	—	—
71-A	—	WH	FB04	I	—	Middle Front Impact Sensing Module Signal	71-A	—	WH	FB04	II	—
72-A	—	BK	FB05	I	-	Middle Front Impact Sensing Module Low Reference	72-A	—	BK	FB05	II	—
73-A-81-A	—	—	—	—	—	Not Occupied	73-A-81-A	—	—	—	—	—
82-A	—	BK	FE01	I	—	Ground	82-A	—	BK	FE01	II	—
83-A-90-A	—	—	—	—	—	Not Occupied	83-A-90-A	—	—	—	—	—

6-338 Wiring Systems and Power Management

X201 Instrument Panel Harness to Engine Compartment Harness (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
91-A	—	YE	DA09	I	—	Battery Positive Voltage	91-A	—	YE	DA09	II	—
92-A	—	D-BU	LS01	I	—	Battery Positive Voltage	92-A	—	D-BU	LS01	II	—
93-A	—	RD	LS02	I	—	Stop Lamp Supply Voltage	93-A	—	RD	LS02	II	—
94-A	—	—	—	—	—	Not Occupied	94-A	—	—	—	—	—
95-A	—	RD	RA01	I	—	Battery Positive Voltage	95-A	—	RD	RA01	II	—
96-A	—	D-BU	DA11	I	—	Battery Positive Voltage	96-A	—	D-BU	DA11	II	—
97-A-98-A	—	—	—	—	—	Not Occupied	97-A-98-A	—	—	—	—	—
99-A	—	YE	WA12	I	—	Windshield Washer Pump Control	99-A	—	YE	WA12	II	—
10-0A	—	D-GN	WA11	I	—	Run/Crank Ignition Voltage	10-0A	—	D-GN	WA11	II	—

X202 Instrument Panel Harness to Engine Compartment Harness

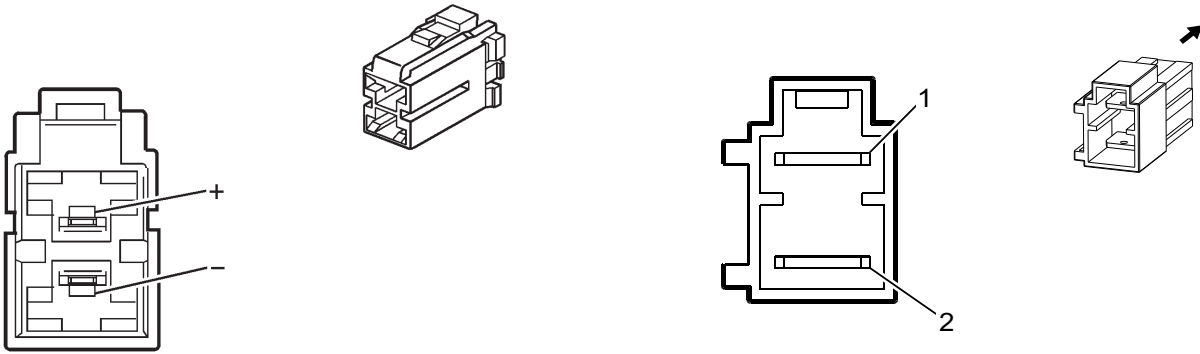

823278

1989490

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: L02FB-MC
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F 375 Series (BK)

Connector Part Information

Harness Type: Engine Compartment
 OEM Connector: L02MB-MC
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way M 375 Series (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available
II	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

X202 Instrument Panel Harness to Engine Compartment Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	—	WH	DA03	I	—	Battery Positive Voltage	1	—	WH	DA03	II	—
2	—	RD	PS01	I	—	Battery Positive Voltage	2	—	RD	PS01	II	—

X203 Instrument Panel Harness to Cellular Phone Microphone Harness

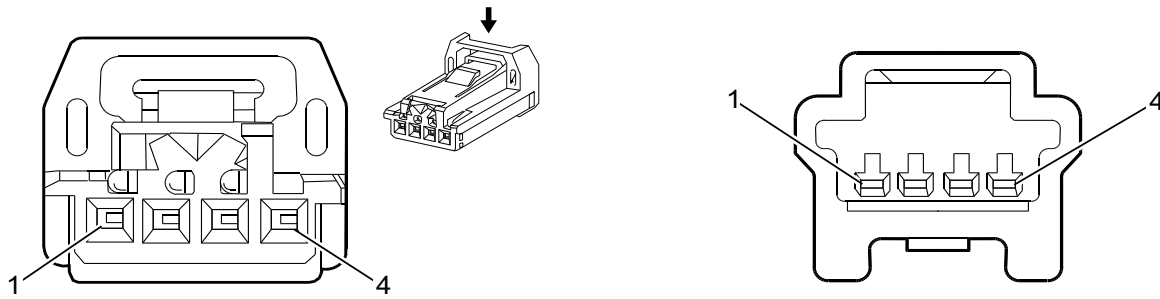

2294317

4065409

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: TH04FW-NH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 4-Way F 1.5 Series, Sealed (WH)

Connector Part Information

Harness Type: Cellular Phone Microphone
 OEM Connector: TH04MW-NH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 4-Way M 025 Series (NA)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available
II	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

X203 Instrument Panel Harness to Cellular Phone Microphone Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	—	—	—	—	—	Not Occupied	1	—	—	—	—	—
2	—	BK	RTE2	I	—	Cellular Telephone Microphone Low Reference	2	—	Bare	RTE2	II	—
3	—	RD	RT07	I	—	Cellular Telephone Microphone Supply Voltage	3	—	RD	RT07	II	—
4	—	D-GN	RT05	I	—	Cellular Telephone Microphone Signal	4	—	BK	RT05	II	—

X204 Instrument Panel Harness to Passenger Instrument Panel Airbag Jumper Harness

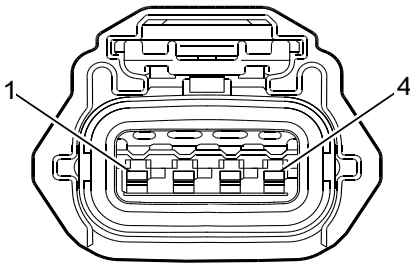

4083382

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: RK04FY-BD
 Service Connector: Service by Harness - See Parts Catalog
 Description: 4-Way F 090 Series, Sealed (YE)

Connector Part Information

Harness Type: Passenger Instrument Panel Airbag Jumper
 OEM Connector: Not Available
 Service Connector: Service by Harness - See Parts Catalog
 Description: 4-Way M (YE)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available
II	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

X204 Instrument Panel Harness to Passenger Instrument Panel Airbag Jumper Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	—	YE/BU	FB23	I	—	Passenger IP Module Stage 1 High Control	1	—	RD	FB23	II	—
2	—	YE/BK	FB24	I	—	Passenger IP Module Stage 1 Low Control	2	—	RD	FB24	II	—
3	—	BK/YE	FB25	I	—	Passenger IP Module Stage 2 High Control	3	—	YE	FB25	II	—
4	—	YE	FB26	I	—	Passenger IP Module Stage 2 Low Control	4	—	YE	FB26	II	—

X210 Instrument Panel Harness to Radio Antenna Harness

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: Not Available
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F

Connector Part Information

Harness Type: Digital Radio Antenna Jumper
 OEM Connector: Not Available
 Service Connector: Service by Cable Assembly - See Part Catalog
 Description: 2-Way M


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available
II	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

X210 Instrument Panel Harness to Radio Antenna Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	—	BK	—	I	—	Antenna Amplifier ON Signal	1	—	BK	—	II	—
2	—	BK	—	I	—	AM/FM Antenna Signal	2	—	BK	—	II	—

X211 Instrument Panel Harness Coax to Satellite Antenna Harness Coax (CWM)

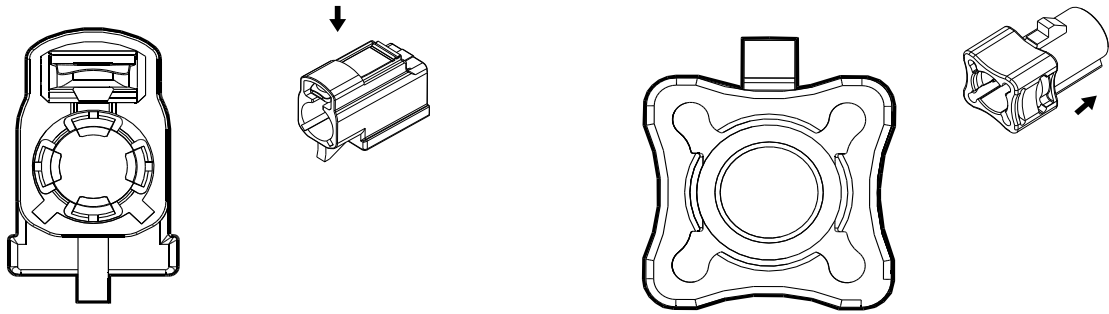

2840268

2829941

Connector Part Information

Harness Type: Instrument Panel COAX
 OEM Connector: Not Available
 Service Connector: Service by Cable Assembly - See Part Catalog
 Description: 1-Way F Coax Type

Connector Part Information

Harness Type: XM Radio Antenna Coax
 OEM Connector: Not Available
 Service Connector: Service by Cable Assembly - See Part Catalog
 Description: 1-Way M Coax Type


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available
II	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available


X211 Instrument Panel Harness Coax to Satellite Antenna Harness Coax (CWM)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
—	—	Coax	—	I	—	Coaxial Antenna XM Signal	—	—	Coax	—	II	—

X300 Body Harness to Passenger Seat Harness

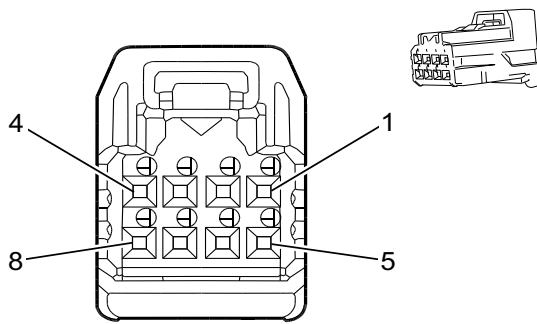

4062624

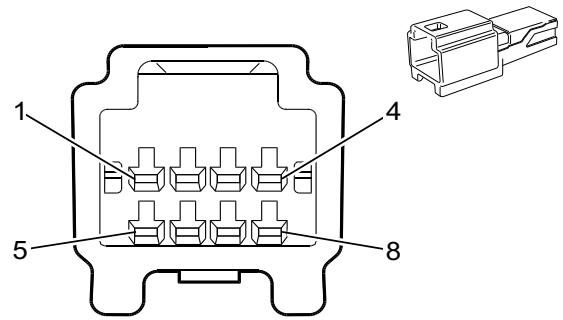

4062948

Connector Part Information

Harness Type: Body
 OEM Connector: TH08FW-NH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 8-Way F 025 Series (NA)

Connector Part Information

Harness Type: Passenger Seat
 OEM Connector: TH08MW-NH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 8-Way M 025 Series (NA)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available
II	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

X300 Body Harness to Passenger Seat Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	—	RD/BU	FB17	I	-	Run/Crank Ignition Voltage	1	—	VT	FB17	II	—
2	—	—	—	—	—	Not Occupied	2	—	—	—	—	—
3	—	D-BU	FB02	I	—	Occupant Sensor Serial Data	3	—	D-BU	FB02	II	—
4	—	BK/OG	FBE5	I	—	Ground	4	—	BK	FBE5	II	—
5	—	—	—	—	—	Not Occupied	5	—	—	—	—	—
6	—	WH/RD	FB18	I	—	K-Line Diagnostic Serial Data	6	—	WH	FB18	II	—
7	—	WH/GN	FB07	I	—	Passenger Seat Belt Switch Signal	7	—	YE	FB07	II	—
8	—	BK	FBE3	I	—	Ground	8	—	BN	FBE3	II	—

X301 Body Harness to Passenger Seat Side Air Bag Harness

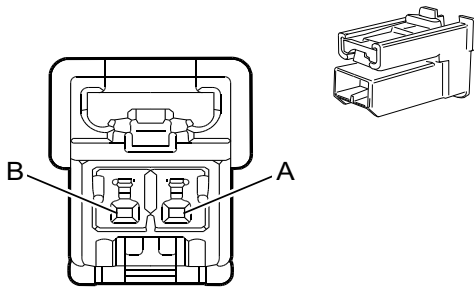

4065462

Connector Part Information

Harness Type: Body
 OEM Connector: TH02FY-1V-BD
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F, 040 Series (YE)

Connector Part Information

Harness Type: Passenger Seat Side Air Bag
 OEM Connector: Not Available
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way M (YE)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available
II	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

X301 Body Harness to Passenger Seat Side Air Bag Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
A	—	WH	FB30	I	—	Passenger Side Impact Module Low Control	A	—	YE	FB30	II	—
B	—	D-GN	FB29	I	—	Passenger Side Impact Module High Control	B	—	YE/BK	FB29	II	—

X302 Right Sliding Door Harness to Body Harness

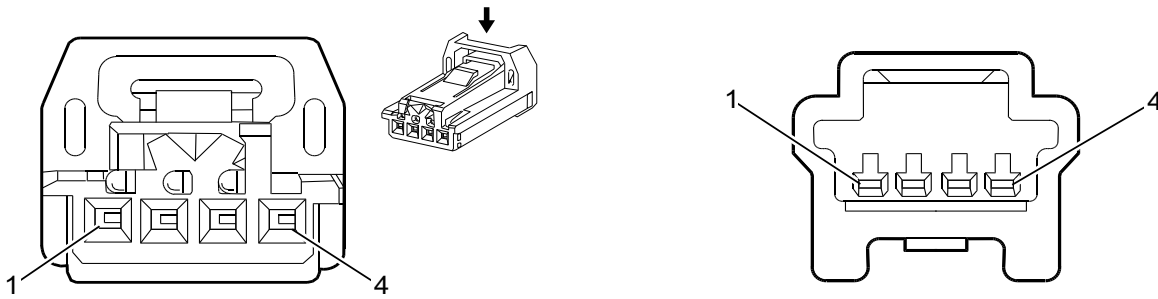

2294317

4065409

Connector Part Information

Harness Type: Right Sliding Door
 OEM Connector: TH04FW-NH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 4-Way F 1.5 Series, Sealed (WH)

Connector Part Information

Harness Type: Body
 OEM Connector: TH04MW-NH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 4-Way M 025 Series (NA)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available
II	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

X302 Right Sliding Door Harness to Body Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	—	—	—	—	—	Not Occupied	1	—	—	—	—	—
2	—	L-GN	PD15	I	-	Right Sliding Door Ajar Switch Signal	2	—	L-GN	PD15	II	—
3-4	—	—	—	—	—	Not Occupied	3-4	—	—	—	—	—

X303 Left Sliding Door Harness to Body Harness

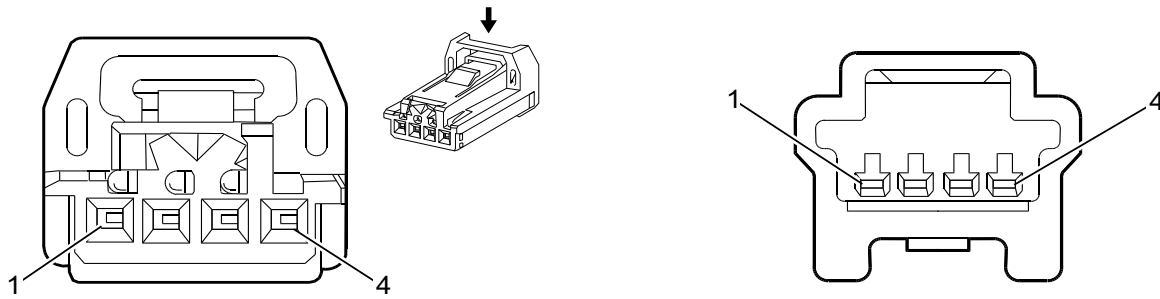

2294317

4065409

Connector Part Information

Harness Type: Left Sliding Door
 OEM Connector: TH04FW-NH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 4-Way F 1.5 Series, Sealed (WH)

Connector Part Information

Harness Type: Body
 OEM Connector: TH04MW-NH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 4-Way M 025 Series, (NA)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available
II	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

X303 Left Sliding Door Harness to Body Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	—	—	—	—	—	Not Occupied	1	—	—	—	—	—
2	—	L-GN	PD16	I	—	Left Sliding Door Ajar Switch Signal	2	—	D-GN	PD16	II	—
3-4	—	—	—	—	—	Not Occupied	3-4	—	—	—	—	—

X304 Headliner Harness to Body Harness

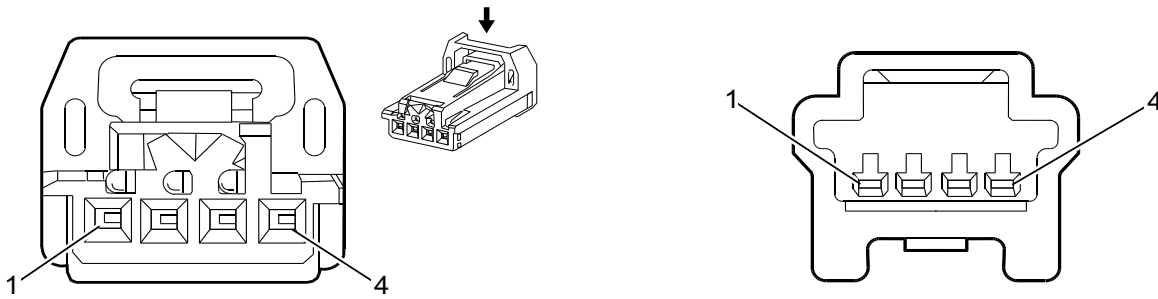

2294317

4065409

Connector Part Information

Harness Type: Headliner
 OEM Connector: TH04FW-NH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 4-Way F 1.5 Series, Sealed (WH)

Connector Part Information

Harness Type: Body
 OEM Connector: TH04MW-NH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 4-Way M 025 Series (NA)



Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available
II	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

X304 Headliner Harness to Body Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	—	YE	LG01	I	—	Interior Lamp Wake Up Signal	1	—	D-BU	LG01	II	—
2	—	BN	LG02	I	—	Interior Lamp Output Signal	2	—	BN	LG02	II	—
3-4	—	—	—	—	—	Not Occupied	3-4	—	—	—	—	—

X305 Instrument Panel Harness to Body Harness

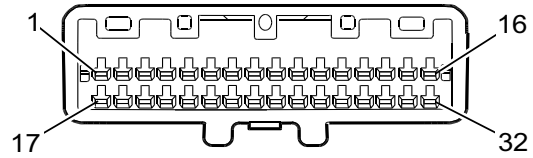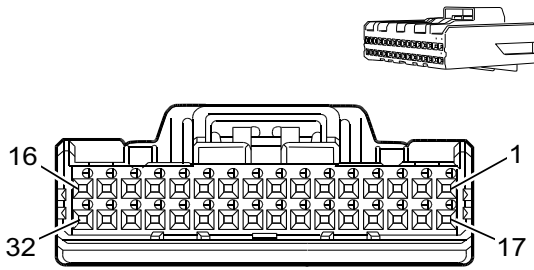

4092031

4070042

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: TH32FW-NH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 32-Way F 1.6 Series (NA)

Connector Part Information

Harness Type: Body
 OEM Connector: TH32MW-NH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 32-Way M 025 Series (NA)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available
II	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available


X305 Instrument Panel Harness to Body Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	—	D-GN	MP11	I	—	Right Rear Tire Pressure Receiver Serial Data	1	—	D-GN	MP11	II	—
2	—	D-BU	MP12	I	—	Right Rear Tire Pressure Receiver Signal	2	—	D-BU	MP12	II	—
3	—	L-BU	MP13	I	—	Right Rear Tire Pressure Receiver Supply Voltage	3	—	L-BU	MP13	II	—
4	—	L-GN	MP14	I	—	Right Rear Tire Pressure Receiver Low Reference	4	—	L-GN	MP14	II	—
5	—	BN	MA05	I	—	Fuel Level Sensor Signal	5	—	BN	MA05	II	—
6	—	—	—	—	—	Not Occupied	6	—	—	—	—	—
7	—	GY	MA16	I	—	Fuel Temperature Sensor Signal	7	—	GY	MA16	II	—


X305 Instrument Panel Harness to Body Harness (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
8	—	PU	LT02	I	—	Tail Lamps Relay Supply Voltage	8	—	PU	LT02	II	—
9	—	—	—	—	—	Not Occupied	9	—	—	—	—	—
10	—	D-GN	LR04	I	—	Backup Lamp Supply Voltage Signal	10	—	YE	LR04	II	—
11-14	—	—	—	—	—	Not Occupied	11-14	—	—	—	—	—
15	—	YE	RG05	I	UVC	Camera Signal (-)	15	—	YE	RG05	II	UVC
16	—	D-GN	RG04	I	UVC	Camera 6 Volt Supply Voltage	16	—	D-GN	RG04	II	UVC
17	—	D-BU	MP15	I	UVC	Left Rear Tire Pressure Receiver Serial Data	17	—	D-BU	MP15	II	UVC
18	—	PK	MP16	I	—	Left Rear Tire Pressure Receiver Signal	18	—	PK	MP16	II	UVC
19	—	GY	MP17	I	—	Left Rear Tire Pressure Receiver Supply Voltage	19	—	GY	MP17	II	—
20	—	VT	MP18	I	—	Left Rear Tire Pressure Receiver Low Reference	20	—	VT	MP18	II	—
21	—	OG	MA11	I	—	Driver Seat Belt Switch Signal	21	—	OG	MA11	II	—
22-23	—	—	—	—	—	Not Occupied	22-23	—	—	—	—	—
24	—	WH	LD09	I	—	Right Turn Signal Lamp Supply Voltage	24	—	WH	LD09	II	—
25	—	VT	LD10	I	—	Left Turn Signal Lamp Supply Voltage	25	—	L-GN	LD10	II	—
26-28	—	—	—	—	—	Not Occupied	26-28	—	—	—	—	—
29	—	D-BU	LG01	I	—	Interior Lamp Wake Up Signal	29	—	D-BU	LG01	II	—
30	—	BN	LG02	I	—	Interior Lamp Output Signal	30	—	BN	LG02	II	—
31	—	BK	RGE1	I	UVC	Low Reference	31	—	Bare	RGE1	II	UVC
32	—	D-BU	RG06	I	UVC	Camera Signal (+)	32	—	D-BU	RG06	II	UVC

X306 Instrument Panel Harness to Body Harness

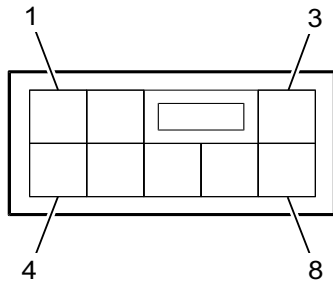

4083206

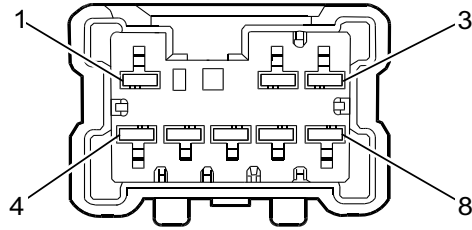

4065416

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: NS08FW-CS
 Service Connector: Service by Harness - See Parts Catalog
 Description: 8-Way F 250 Series (WH)

Connector Part Information

Harness Type: Body
 OEM Connector: NS08MW-CS
 Service Connector: Service by Harness - See Parts Catalog
 Description: 8-Way M 090 Series (NA)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available
II	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available


X306 Instrument Panel Harness to Body Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	—	YE	AB40	I	—	Engine Controls Ignition Relay Supply Voltage	1	—	YE	AB40	II	—
2	—	OG	AB41	I	—	EVAP Canister Vent Solenoid Control	2	—	OG	AB41	II	—
3	—	RD	LS02	I	—	Stop Lamp Supply Voltage	3	—	RD	LS02	II	—
4	—	D-BU	PD24	I	—	Left Sliding Door Lock Motor Lock Control	4	—	D-BU	PD24	II	—
5	—	YE	PD27	I	—	Rear Cargo Door Lock Motor Unlock Control	5	—	YE	PD27	II	—
6	—	D-BU	PD26	I	—	Rear Cargo Door Lock Motor Lock Control	6	—	D-BU/WH	PD26	II	—

6-352 Wiring Systems and Power Management**X306 Instrument Panel Harness to Body Harness (cont'd)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
7	—	RD	GA01	I	ATG	Accessory Relay Supply Voltage	7	—	RD/BU	GA01	II	ATG
8	—	—	—	—	—	Not Occupied	8	—	—	—	—	—


X307 Instrument Panel Harness to Body Harness

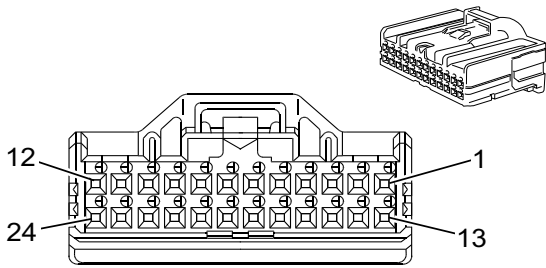

4089952

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: TH24FW-NH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 24-Way F 025 Series (NA)

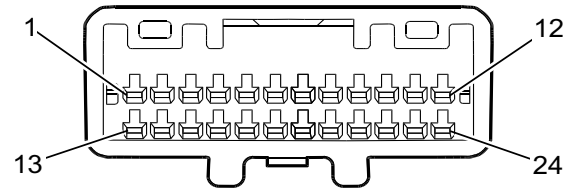

4065391

Connector Part Information

Harness Type: Body
 OEM Connector: TH24MW-NH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 24-Way M 0.64 Series (NA)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available
II	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available


X307 Instrument Panel Harness to Body Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	—	BK	AC82	I	—	Sensor Low Reference	1	—	BK	AC82	II	—
2	—	L-GN	AC81	I	—	EVAP Emission Pressure Sensor Signal	2	—	L-GN	AC81	II	—
3	—	BN	AC80	I	—	Sensor 5 Volt Reference	3	—	BN	AC80	II	—
4	—	D-BU	BS28	I	—	Wheel Speed Sensor Low Reference Right Rear	4	—	D-BU	BS28	II	—
5	—	GY	BS29	I	—	Wheel Speed Sensor Signal Right Rear	5	—	PU	BS29	II	—
6	—	WH	BS30	I	—	Wheel Speed Sensor Signal Left Rear	6	—	WH	BS30	II	—
7	—	RD	BS31	I	—	Wheel Speed Sensor Signal Left Rear	7	—	RD	BS31	II	—

X307 Instrument Panel Harness to Body Harness (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
8-9	—	—	—	—	—	Not Occupied	8-9	—	—	—	—	—
10	—	GY	FD19	I	UD7	Right Rear Corner Object Sensor Signal	10	—	GY	FD19	II	UD7
11	—	L-GN	FD16	I	UD7	Right Rear Middle Object Sensor Signal	11	—	L-GN	FD16	II	UD7
12	—	OG	FD13	I	UD7	Left Rear Middle Object Sensor Signal	12	—	OG	FD13	II	UD7
13	—	D-BU	AB43	I	—	Fuel Temperature Sensor 5 Volt Reference	13	—	D-BU	AB43	II	—
14	—	—	—	—	—	Not Occupied	14	—	—	—	—	—
15	—	D-BU	FB17	I	—	Run/Crank Ignition Voltage	15	—	RD/BU	FB17	II	—
16	—	GY	FB18	I	—	K-Line Diagnostic Serial Data	16	—	WH/RD	FB18	II	—
17	—	BN	PD13	I	—	Driver Door Ajar Switch Signal	17	—	L-GN	PD13	II	—
18	—	L-BU	PD14	I	—	Passenger Door Ajar Switch Signal	18	—	L-BU	PD14	II	—
19	—	L-GN	PD15	I	—	Right Sliding Door Ajar Switch Signal	19	—	L-GN	PD15	II	—
20	—	GY	PD16	I	—	Left Sliding Door Ajar Switch Signal	20	—	GY	PD16	II	—
21	—	WH	PD40	I	—	Rear Cargo Door Ajar Switch Signal	21	—	WH	PD40	II	—
22	—	PK	FD10	I	UD7	Left Rear Corner Object Sensor Signal	22	—	PK	FD10	II	UD7
23	—	YE	FD09	I	UD7	Object Sensor Low Reference-	23	—	YE	FD09	II	UD7
24	—	L-GN/BK	FD08	I	UD7	Object Sensor Supply Voltage	24	—	L-GN/BK	FD08	II	UD7

X308 Instrument Panel Harness to Body Harness

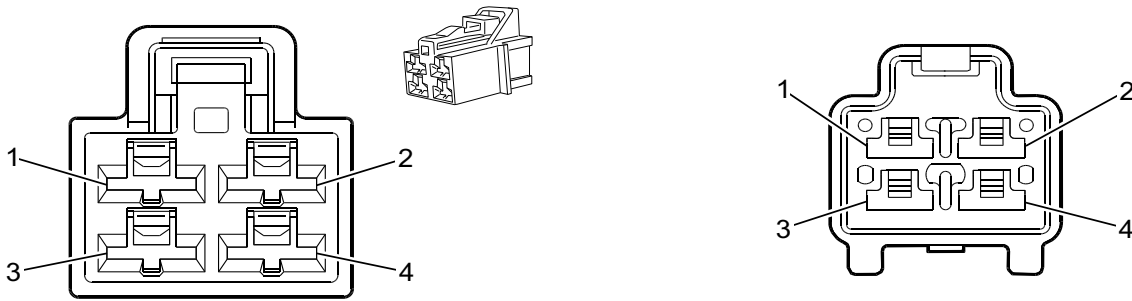

2684335

4065432

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: M04FW-LC
 Service Connector: Service by Harness - See Parts Catalog
 Description: 4-Way F 250 Series (WH)

Connector Part Information

Harness Type: Body
 OEM Connector: M04MW-LC
 Service Connector: Service by Harness - See Parts Catalog
 Description: 4-Way M 250 Series (WH)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available
II	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available


X308 Instrument Panel Harness to Body Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	—	BN	NA01	I	—	Rear Defogger Relay Supply Voltage	1	—	RD/WH	NA01	II	—
2	—	—	—	—	—	Not Occupied	2	—	—	—	—	—
3	—	D-GN	AC20	I	—	Fuel Pump Relay Supply Voltage	3	—	D-GN	AC20	II	—
4	—	—	—	—	—	Not Occupied	4	—	—	—	—	—

X400 Rear Jumper Harness to Body Harness (UD7)

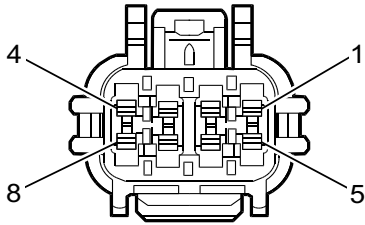

4065457

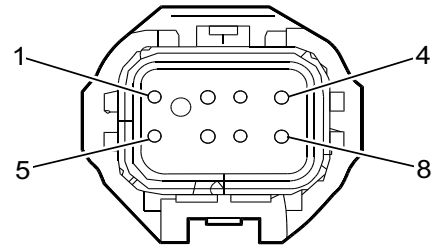

4065456

Connector Part Information

Harness Type: Rear Jumper
 OEM Connector: RK08FGY
 Service Connector: Service by Harness - See Parts Catalog
 Description: 8-Way F 040 Series, Sealed (L-GY)

Connector Part Information

Harness Type: Body
 OEM Connector: RK08MGY
 Service Connector: Service by Harness - See Parts Catalog
 Description: 8-Way M 040 Series, Sealed (L-GY)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available
II	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available


X400 Rear Jumper Harness to Body Harness (UD7)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	—	YE	FD09	I	—	Object Sensor Low Reference	1	—	YE	FD09	II	—
2	—	PK	FD10	I	—	Left Rear Corner Object Sensor Signal	2	—	PK	FD10	II	—
3	—	OG	FD13	I	—	Left Rear Middle Object Sensor Signal	3	—	OG	FD13	II	—
4	—	—	—	—	—	Not Occupied	4	—	—	—	—	—
5	—	L-GN/BK	FD08	I	—	Object Sensor Supply Voltage	5	—	L-GN/BK	FD08	II	—
6	—	L-GN	FD16	I	—	Right Rear Middle Object Sensor Signal	6	—	L-GN	FD16	II	—


X400 Rear Jumper Harness to Body Harness (UD7) (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
7	—	GY	FD19	I	—	Right Rear Corner Object Sensor Signal	7	—	GY	FD19	II	—
8	—	—	—	—	—	Not Occupied	8	—	—	—	—	—

X401 Rear Bumper Harness to Rear Jumper Harness (UD7)

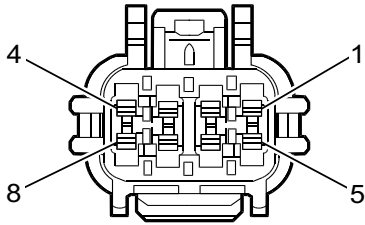

4065457

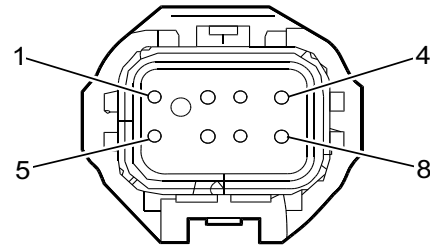

4065456

Connector Part Information

Harness Type: Rear Bumper
 OEM Connector: RK08FGY
 Service Connector: Service by Harness - See Parts Catalog
 Description: 8-Way F 040 Series, Sealed (L-GY)

Connector Part Information

Harness Type: Rear Jumper
 OEM Connector: RK08MGY
 Service Connector: Service by Harness - See Parts Catalog
 Description: 8-Way M 040 Series, Sealed (L-GY)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available
II	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available


X401 Rear Bumper Harness to Rear Jumper Harness (UD7)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	—	YE	FD09	I	—	Object Sensor Low Reference	1	—	YE	FD09	II	—
2	—	PK	FD10	I	—	Left Rear Corner Object Sensor Signal	2	—	PK	FD10	II	—
3	—	OG	FD13	I	UD7	Left Rear Middle Object Sensor Signal	3	—	OG	FD13	II	—
4	—	—	—	—	—	Not Occupied	4	—	—	—	—	—
5	—	L-GN/BK	FD08	I	—	Object Sensor Supply Voltage	5	—	L-GN/BK	FD08	II	—
6	—	L-GN	FD16	I	—	Right Rear Middle Object Sensor Signal	6	—	L-GN	FD16	II	—


X401 Rear Bumper Harness to Rear Jumper Harness (UD7) (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
7	—	GY	FD19	I	—	Right Rear Corner Object Sensor Signal	7	—	GY	FD19	II	—
8	—	—	—	—	—	Not Occupied	8	—	—	—	—	—

X402 Back Door Harness to Body Harness

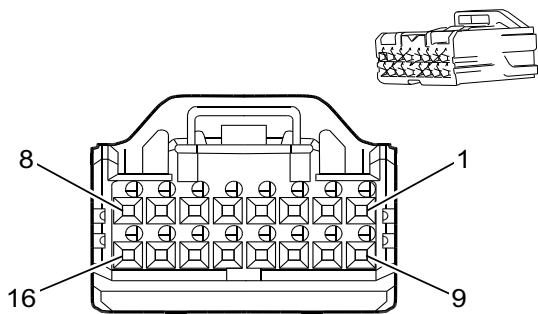

4063846

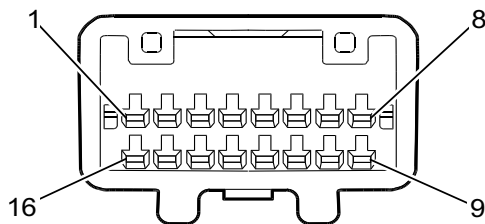

4063919

Connector Part Information

Harness Type: Back Door
 OEM Connector: TH16FW-NH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 16-Way F 025 Series (NA)

Connector Part Information

Harness Type: Body
 OEM Connector: TH16MW-NH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 16-Way M 025 Series (NA)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available
II	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available


X402 Back Door Harness to Body Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	—	D-GN	RG04	I	UVC	Camera 6 Volt Supply Voltage	1	—	D-GN	RG04	II	UVC
2	—	YE	RG05	I	UVC	Camera Signal (-)	2	—	YE	RG05	II	UVC
3-4	—	—	—	—	—	Not Occupied	3-4	—	—	—	—	—
5	—	WH	PD40	I	—	Rear Cargo Door Ajar Switch Signal	5	—	WH	PD40	II	—
6	—	OG	LL01	I	—	Tail Lamps Relay Supply Voltage	6	—	PU	LL01	II	—
7-8	—	—	—	—	—	Not Occupied	7-8	—	—	—	—	—
9	—	D-BU	RG06	I	UVC	Camera Signal (+)	9	—	D-BU	RG06	II	UVC
10	—	Bare	RGE1	I	UVC	Camera Shield Extension	10	—	Bare	RGE1	II	UVC
11-14	—	—	—	—	—	Not Occupied	11-14	—	—	—	—	—

X402 Back Door Harness to Body Harness (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
15	—	RD	LS04	I	—	Stop Lamp Supply Voltage	15	—	RD	LS04	II	—
16	—	—	—	—	—	Not Occupied	16	—	—	—	—	—


X403 Back Door Harness to Body Harness

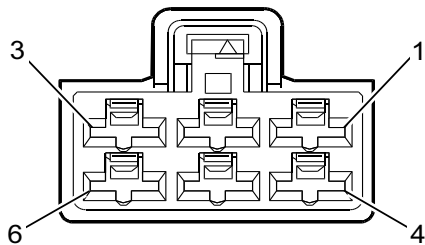

4065439

Connector Part Information

Harness Type: Back Door
 OEM Connector: M06FW-LC
 Service Connector: Service by Harness - See Parts Catalog
 Description: 6-Way F 250 Series (NA)

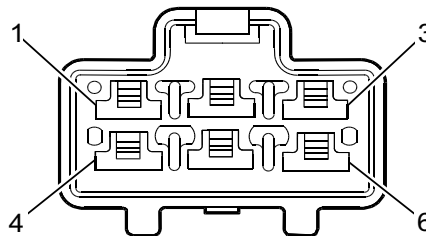

4065435

Connector Part Information

Harness Type: Body
 OEM Connector: M06MW-LC
 Service Connector: Service by Harness - See Parts Catalog
 Description: 6-Way M 250 Series (NA)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available
II	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available


X403 Back Door Harness to Body Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	—	—	—	—	—	Not Occupied	1	—	—	—	—	—
2	—	D-BU	PD26	I	—	Rear Cargo Door Lock Motor Lock Control	2	—	D-BU/WH	PD26	II	—
3	—	—	—	—	—	Not Occupied	3	—	—	—	—	—
4	—	BK	E007	I	—	Ground	4	—	BK	E007	II	—
5	—	YE	PD27	I	—	Rear Cargo Door Lock Motor Unlock Control	5	—	YE	PD27	II	—
6	—	RD/WH	NA01	I	—	Rear Defogger Relay Supply Voltage	6	—	RD/WH	NA01	II	—

X410 Left Tail Lamp Assembly Harness to Body Harness

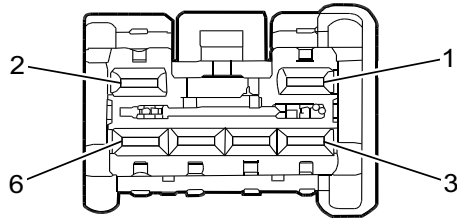

4065411

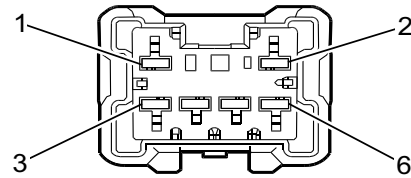

4065413

Connector Part Information

Harness Type: Left Tail Lamp Assembly
 OEM Connector: NS06FW-CS
 Service Connector: Service by Harness - See Parts Catalog
 Description: 6-Way F 2.3 Series (WH)

Connector Part Information

Harness Type: Body
 OEM Connector: NS06MW-CS
 Service Connector: Service by Harness - See Parts Catalog
 Description: 6-Way M 090 Series (NA)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available
II	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available


X410 Left Tail Lamp Assembly Harness to Body Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	—	WH	LR03	I	—	Backup Lamp Supply Voltage Signal	1	—	YE	LR03	II	—
2	—	BK	LTE1	I	—	Ground	2	—	BK	LTE1	II	—
3	—	—	—	—	—	Not Occupied	3	—	—	—	—	—
4	—	D-GN	LD10	I	—	Left Turn Signal Lamp Supply Voltage	4	—	L-GN	LD10	II	—
5	—	RD	LS03	I	—	Stop Lamp Supply Voltage	5	—	RD	LS03	II	—
6	—	GY	LT03	I	—	Tail Lamps Relay Supply Voltage	6	—	PU	LT03	II	—

X420 Right Tail Lamp Assembly Harness to Body Harness

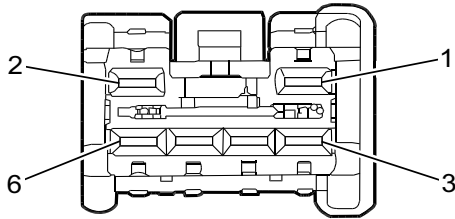

4065411

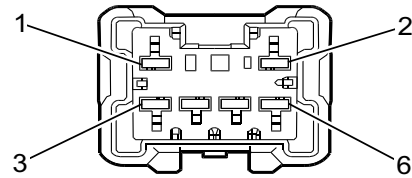

4065413

Connector Part Information

Harness Type: Right Tail Lamp Assembly
 OEM Connector: NS06FW-CS
 Service Connector: Service by Harness - See Parts Catalog
 Description: 6-Way F 2.3 Series (WH)

Connector Part Information

Harness Type: Body
 OEM Connector: NS06MW-CS
 Service Connector: Service by Harness - See Parts Catalog
 Description: 6-Way M 090 Series (NA)



Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available
II	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

X420 Right Tail Lamp Assembly Harness to Body Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	—	WH	LR04	I	—	Backup Lamp Supply Voltage Signal	1	—	YE	LR04	II	—
2	—	BK	LTE2	I	—	Ground	2	—	BK	LTE2	II	—
3	—	—	—	—	—	Not Occupied	3	—	—	—	—	—
4	—	D-GN	LD09	I	—	Right Turn Signal Lamp Supply Voltage	4	—	WH	LD09	II	—
5	—	RD	LS02	I	—	Stop Lamp Supply Voltage	5	—	RD	LS02	II	—
6	—	GY	LT02	I	—	Tail Lamps Relay Supply Voltage	6	—	PU	LT02	II	—

X500 Driver Door Harness to Instrument Panel Harness

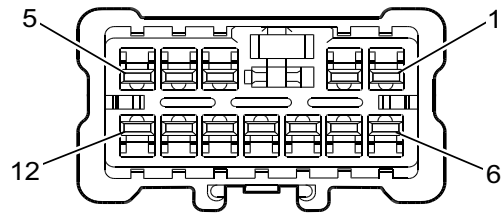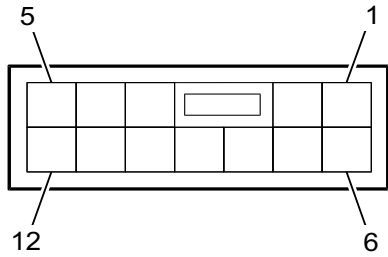

4083241

4094054

Connector Part Information

Harness Type: Driver Door
 OEM Connector: NS12FW-NH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 12-Way F (WH)

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: NS12MW-CS
 Service Connector: Service by Harness - See Parts Catalog
 Description: 12-Way M (WH)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available
II	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available


X500 Driver Door Harness to Instrument Panel Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	—	BK	PAE1	I	—	Ground	1	—	BK	PAE1	II	—
2	—	WH	PD17	I	—	Door Lock Key Switch Lock Signal	2	—	PK	PD17	II	—
3	—	BN	PD18	I	—	Door Lock Motor Lock Control	3	—	D-BU	PD18	II	—
4	-	WH	PD19	I	—	Driver Door Lock Motor Unlock Control	4	—	D-GN	PD19	II	—
5	—	PU	PA01	I	-	Power Window Supply Voltage	5	—	PK	PA01	II	—
6	—	L-BU	PA20	I	—	Power Window Serial Data	6	—	L-BU	PA20	II	—
7-10	—	—	—	—	—	Not Occupied	8-11	—	—	—	—	—
11	—	WH	PD28	I	—	Door Lock Key Switch Unlock Signal	11	—	BK	PD28	II	—


6-366 Wiring Systems and Power Management**X500 Driver Door Harness to Instrument Panel Harness (cont'd)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
12	—	D-BU	PA02	I	—	Power Window Ignition Output	12	—	D-BU	PA02	II	—

X501 Driver Door Harness to Instrument Panel Harness

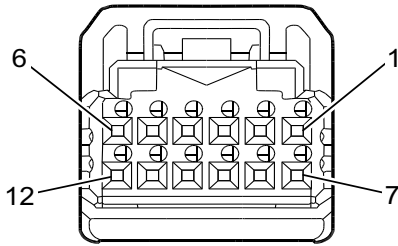

4063822

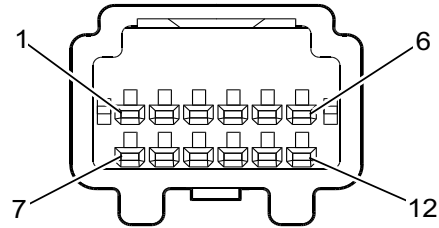

4094221

Connector Part Information

Harness Type: Driver Door
 OEM Connector: TH12FW-NH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 12-Way F, 025 Series (NA)

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: TH12MW-NH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 12-Way M (WH)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available
II	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available



X501 Driver Door Harness to Instrument Panel Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	—	PU	PD12	I	—	Driver Door Lock Switch Unlock Signal	1	—	PU	PD12	II	—
2	—	RD	PD11	I	—	Driver Door Lock Switch Lock Signal	2	—	RD	PD11	II	—
3	—	PK	KA05	I	—	Driver Mirror Motor Common Control	3	—	PK	KA05	II	—
4	—	D-GN	KA06	I	—	Driver Mirror Motor Right (+) Left (-) Control	4	—	D-GN	KA06	II	—
5	—	GY	KA07	I	—	Driver Mirror Motor Up (+) Down (-) Control	5	—	GY	KA07	II	—
6-9	—	—	—	—	—	Not Occupied	6-9	—	—	—	—	—
10	—	L-BU	KC03	I	—	Mirror Heating Element Supply Voltage	10	—	L-BU	KC03	II	—

6-368 Wiring Systems and Power Management**X501 Driver Door Harness to Instrument Panel Harness (cont'd)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
11	—	GY/ D-GN	RA06	I	—	Left Front Speaker (+)	11	—	D-BU	RA06	II	—
12	—	GY	RA07	I	—	Left Front Speaker (-)	12	—	GY	RA07	II	—

X502 Driver Door Harness to Instrument Panel Harness

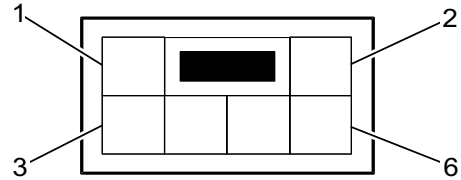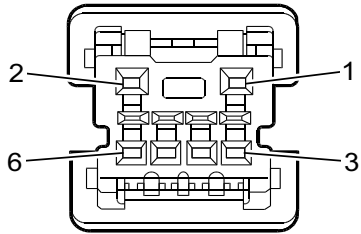

4065459

4095412

Connector Part Information

Harness Type: Driver Door
 OEM Connector: TK06FG-Y
 Service Connector: Service by Harness - See Parts Catalog
 Description: 6-Way F 1.5 YESC Kaizen Series (YE)

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: TK06MG-Y-BD
 Service Connector: Service by Harness - See Parts Catalog
 Description: 6-Way M (YE)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available
II	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available


X502 Driver Door Harness to Instrument Panel Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1-2	—	—	—	—	—	Not Occupied	1-2	—	—	—	—	—
3	—	OG	FB53	I	—	Left Front Side Impact Sensing Module Low Reference	3	—	RD	FB53	II	—
4	—	WH	FB54	I	—	Left Front Side Impact Sensing Module Signal	4	—	RD	FB54	II	—
5	—	Bare	FEE5	I	—	Ground	5	—	BK	FEE5	II	—
6	—	—	—	—	—	Not Occupied	6	—	—	—	—	—

X510 Driver Door Harness to Driver Outside Rearview Mirror Extension

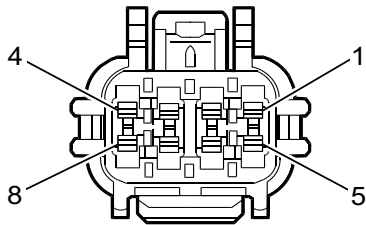

4065457

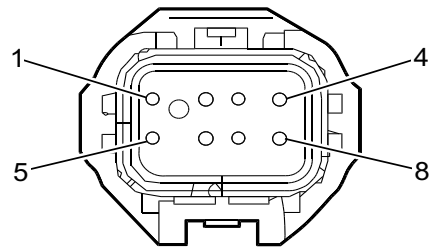

4065456

Connector Part Information

Harness Type: Driver Door
 OEM Connector: RK08FGY
 Service Connector: Service by Harness - See Parts Catalog
 Description: 8-Way F 040 Series, Sealed (L-GY)

Connector Part Information

Harness Type: Driver Outside Rearview Mirror Extension
 OEM Connector: RK08MGY
 Service Connector: Service by Harness - See Parts Catalog
 Description: 8-Way M 040 Series, Sealed (L-GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available
II	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available


X510 Driver Door Harness to Driver Outside Rearview Mirror Extension

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	—	BK	KCE3	I	—	Ground	1	—	BK	KCE3	II	—
2	—	L-BU	KC03	I	DE5 or DR6	Mirror Heating Element Supply Voltage	2	—	BK	KC03	II	DE5 or DR6
3-5	—	—	—	—	—	Not Occupied	3-5	—	—	—	—	—
6	—	PK	KA05	I	—	Driver Mirror Motor Common Control	6	—	D-BU	KA05	II	—
7	—	D-GN	KA06	I	—	Driver Mirror Motor Right (-) Left (+) Control	7	—	L-GN	KA06	II	—
8	—	GY	KA07	I	—	Driver Mirror Motor Up (+) Down (-) Control	8	—	YE	KA07	II	—

X600 Passenger Door Harness to Instrument Panel Harness

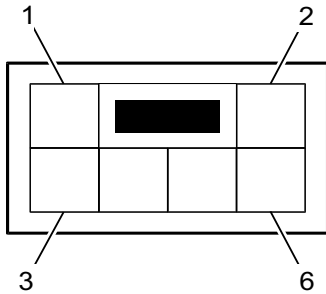

4083227

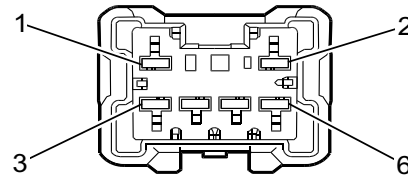

4065413

Connector Part Information

Harness Type: Passenger Door
 OEM Connector: NS06FW-CS
 Service Connector: Service by Harness - See Parts Catalog
 Description: 6-Way F 2.3 Series (WH)

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: NS06MW-CS
 Service Connector: Service by Harness - See Parts Catalog
 Description: 6-Way M 090 Series (NA)



Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available
II	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

X600 Passenger Door Harness to Instrument Panel Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	—	PK	PA17	I	—	Power Window Supply Voltage	1	—	PK	PA17	II	—
2	—	WH	PD21	I	—	Passenger Door Lock Motor Unlock Control	2	—	YE	PD21	II	—
3	—	BK	PAE2	I	—	Ground	3	—	BK	PAE2	II	—
4	—	L-BU	PA20	I	—	Power Window Serial Data	4	—	L-BU	PA20	II	—
5	—	BN	PD20	I	—	Passenger Door Lock Motor Lock Control	5	—	D-BU	PD20	II	—
6	—	—	—	—	—	Not Occupied	6	—	—	—	—	—

X601 Passenger Door Harness to Instrument Panel Harness

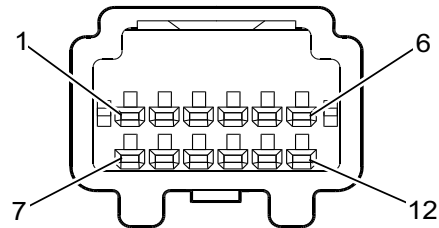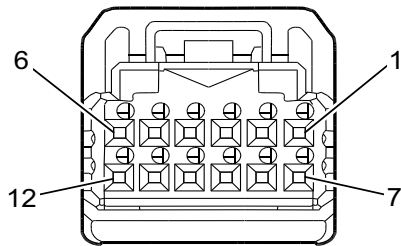

4063822

4094221

Connector Part Information

Harness Type: Passenger Door
 OEM Connector: TH12FW-NH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 12-Way F 025 Series (NA)

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: TH12MW-NH
 Service Connector: Service by Harness - See Parts Catalog
 Description: 12-Way M (NA)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available
II	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available


X601 Passenger Door Harness to Instrument Panel Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	—	PU	PD30	I	—	Driver Door Lock Switch Unlock Signal	1	—	PU	PD30	II	—
2	—	RD	PD29	I	—	Driver Door Lock Switch Lock Signal	2	—	RD	PD29	II	—
3	—	WH	KA02	I	—	Co-Driver Mirror Motor Common Control	3	—	WH	KA02	II	—
4	—	L-GN	KA03	I	—	Co-Driver Mirror Motor Right (+) Left (-) Control	4	—	L-GN	KA03	II	—
5	—	RD	KA04	I	—	Co-Driver Mirror Motor Up (+) Down (-) Control	5	—	RD	KA04	II	—
6-8	—	—	—	—	—	Not Occupied	6-8	—	—	—	—	—
9	—	BK	KCE2	I	—	Ground	9	—	BK	KCE2	II	—


X601 Passenger Door Harness to Instrument Panel Harness (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
10	—	L-BU	KC02	I	—	Mirror Heating Element Supply Voltage	10	—	L-BU	KC02	II	—
11	—	D-GN/WH	RA04	I	—	Right Front Speaker (+)	11	—	D-GN	RA04	II	—
12	—	GY	RA05	I	—	Right Front Speaker (-)	12	—	RD	RA05	II	—

X602 Passenger Door Harness to Instrument Panel Harness

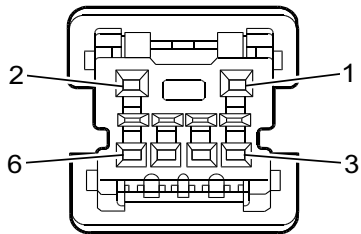

4065459

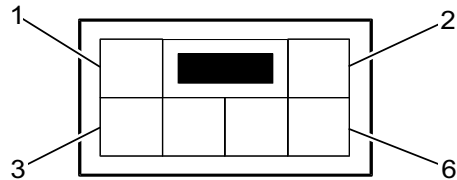

4095412

Connector Part Information

Harness Type: Passenger Door
 OEM Connector: TK06FG-Y
 Service Connector: Service by Harness - See Parts Catalog
 Description: 6-Way F 1.5 YESC Kaizen Series (YE)

Connector Part Information

Harness Type: Instrument Panel
 OEM Connector: TK06MG-Y-BD
 Service Connector: Service by Harness - See Parts Catalog
 Description: 6-Way M (YE)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available
II	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available


X602 Passenger Door Harness to Instrument Panel Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1-3	—	—	—	—	—	Not Occupied	1-3	—	—	—	—	—
4	—	Bare	FEE4	I	—	Ground	4	—	BK	FEE4	II	-
5	—	D-GN	FB52	I	—	Right Front Side Impact Sensing Module Low Reference	5	—	D-GN	FB52	II	—
6	—	RD	FB51	I	—	Right Front Side Impact Sensing Module Signal	6	—	RD	FB51	II	—

X610 Passenger Door Harness to Passenger Outside Rearview Mirror Extension

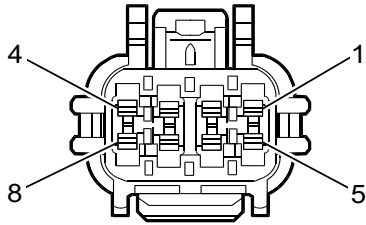

4065457

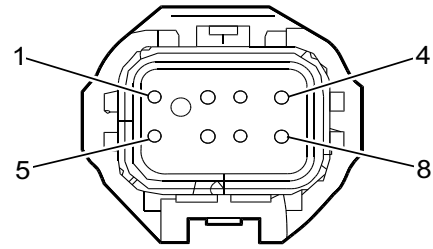

4065456

Connector Part Information

Harness Type: Passenger Door
 OEM Connector: RK08FGY
 Service Connector: Service by Harness - See Parts Catalog
 Description: 8-Way F 040 Series, Sealed (L-GY)

Connector Part Information

Harness Type: Passenger Outside Rearview Mirror Extension
 OEM Connector: RK08MGY
 Service Connector: Service by Harness - See Parts Catalog
 Description: 8-Way M 040 Series, Sealed (L-GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available
II	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

X610 Passenger Door Harness to Passenger Outside Rearview Mirror Extension

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	—	BK	KCE2	I	—	Ground	1	—	BK	KCE2	II	—
2	—	L-BU	KC02	I	DE5 or DR6	Mirror Heating Element Supply Voltage	2	—	BK	KC02	II	DE5 or DR6
3-5	—	—	—	—	—	Not Occupied	3-5	—	—	—	—	—
6	—	WH	KA02	I	—	Co-Driver Mirror Motor Common Control	6	—	D-BU	KA02	II	—
7	—	L-GN	KA03	I	—	Co-Driver Mirror Motor Right (+) Left (-) Control	7	—	L-GN	KA03	II	—
8	—	RD	KA04	I	—	Co-Driver Mirror Motor Up (+) Down (-) Control	8	—	YE	KA04	II	—


X905 License Plate Harness to Back Door Harness

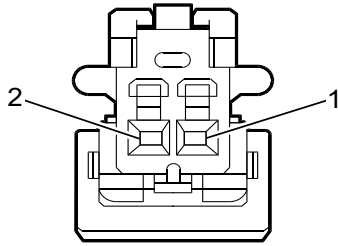

4065460

Connector Part Information

Harness Type: License Plate
 OEM Connector: TK02FBR
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F 040 Series (BN)

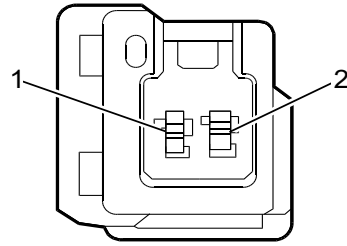

4065458

Connector Part Information

Harness Type: Back Door
 OEM Connector: TK02MBR-P
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way M 1.0 Series (BN)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available
II	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

X905 License Plate Harness to Back Door Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	—	VT	LL01	I	—	Tail Lamps Relay Supply Voltage	1	—	OG	LL01	II	—
2	—	BK	LLE1	I	—	Ground	2	—	BK	LLE1	II	—

X906 Rear Defogger Harness to Back Door Harness

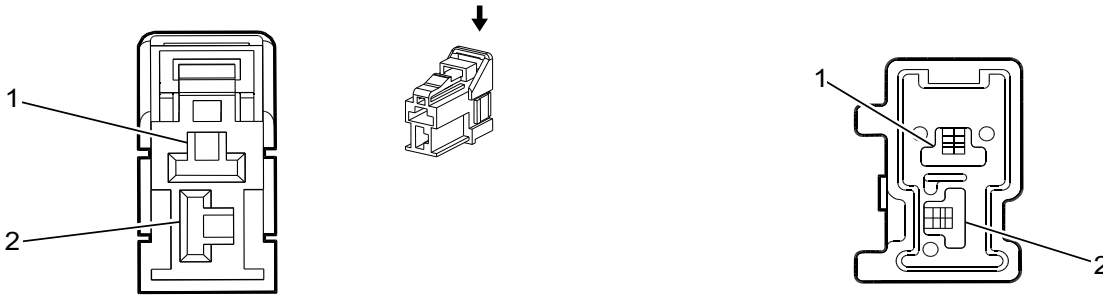

2268736

4065431

Connector Part Information

Harness Type: Rear Defogger
 OEM Connector: M02FW-LC
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F 250 Series (NA)

Connector Part Information

Harness Type: Back Door
 OEM Connector: M02MW-LC
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way M 250 Series (NA)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available
II	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

X906 Rear Defogger Harness to Back Door Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	—	BK	NAE1	I	—	Ground	1	—	BK	NAE1	II	—
2	—	RD	NA01	I	—	Rear Defogger Relay Supply Voltage	2	—	RD/WH	NA01	II	—


X907 Back Door Extension Harness to Back Door Harness

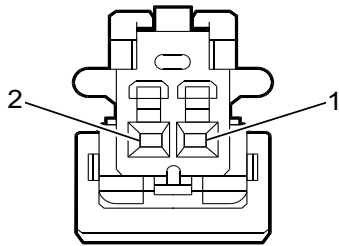

4065460

Connector Part Information

Harness Type: Back Door Extension
 OEM Connector: TK02FBR
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way F 040 Series (BN)

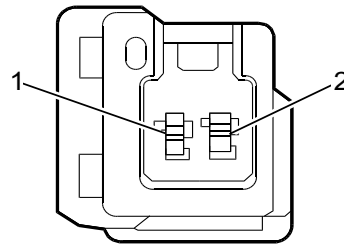

4065458

Connector Part Information

Harness Type: Back Door
 OEM Connector: TK02MBR-P
 Service Connector: Service by Harness - See Parts Catalog
 Description: 2-Way M 1.0 Series (BN)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool	Service Terminal	Tray	Core Crimp	Insulation Crimp
I	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available
II	Not Available	Not Available	Not Available	Service by Harness - See Parts Catalog	Not Available	Not Available	Not Available

X907 Back Door Extension Harness to Back Door Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	—	RD	LS04	I	—	Stop Lamp Supply Voltage	1	—	RD	LS04	II	—
2	—	BK	LSE1	I	—	Ground	2	—	BK	LSE1	II	—

Description and Operation Power Mode Description and Operation

Serial Data Power Mode Master

Power to many of this vehicles circuits are controlled by the module that is designated the power mode master. This vehicles power mode master is the body control module (BCM). The ignition switch supplies multiple discrete ignition switch signals to the power mode master for determination of the power mode that will be sent over the serial data circuits to the other modules that need this information. The power mode master determines which power mode is required, and reports this information to other modules via serial data. Modules that have switched voltage inputs may operate in a default mode if the power mode serial data message does not match what the individual module can see from its own connections.

Relay Controlled Power Mode

The ignition switch provides a direct input Run/Crank Voltage, Accessory Voltage, and Ignition 1 Voltage, to appropriate relays for that power mode.

The underhood fuse block receives a serial data message of the power mode from the BCM and an ignition ON status from the ignition switch. The underhood fuse block activates internal control circuits to perform the certain relay ON-OFF control according to the input signals from various sensors and the request signals received from control units via serial data.

Retained Accessory Power

Retained power operation is an additional power supply function that enables power window system to operate up to 120 s after the ignition switch is turned OFF providing no door is opened. The timer is set to 45 s from the factory but can be configured using the scan tool to OFF, Short (up to 45 s), or Long (up to 120 s).

Transport Mode

Transport mode reduces the parasitic load of some modules during shipment or during vehicle storage conditions. This improves the drain time on the battery. When a vehicle is in transport/storage, some features may have reduced functionality while in transport mode, such as disabling the Remote Function Actuator or content theft features. Transport mode is enabled by pulling the transport fuse in the instrument panel fuse block with the ignition OFF, then cycle the ignition ON and OFF 2 times without starting the vehicle. The mode is disabled by pushing down on the transport fuse with the ignition OFF and then cycling the ignition ON and OFF 2 times without starting the vehicle. The driver information center will display "Ship Phase On Push Fuse In" when the mode is enabled. When transport mode is enabled, the trip odometer stem will not cycle through the available trip computer displays and the scan tool will not communicate with the vehicle. This feature can be used as many times as necessary if the vehicle is to be stored for an extended period of time.

The auto active test is initiated by performing the procedure below.

Note: Never perform auto active test when the door is open or with the scan tool connected.

1. Close the hood and lift the wiper arms from the windshield. (Prevent windshield damage due to wiper operation)
2. Ignition OFF.
3. Ignition ON, and within 20 s press and release the driver door ajar switch 10 times, ignition OFF.
4. Turn the ignition ON within 10 s. After the horn sounds once the auto active test starts.
5. A series of operations listed in the table below will repeat 3 times.

Note: The auto active test can be cancelled by turning the ignition OFF.

Auto Active Test

The auto active test is performed to aide in troubleshooting certain systems controlled by the underhood fuse block. In the auto active test, the underhood fuse block sends a drive signal to the following systems to check their operation.

- Front wiper (LO, HI)
- Parking lamp
- License plate lamp
- Tail lamp
- Head lamp (LO, HI)
- A/C compressor (magnet clutch)
- Cooling fan

Auto Active Test Sequence

Operation sequence	Inspection Location	Operation
1	Front wiper	Low for 5 s then High for 5 s
2	Parking lamps License plate lamp tail lamps	Turn ON for 10 s
3	Headlamp	Turn the Low beams ON for 10 s then High beams ON then off 5 times
4	A/C compressor (magnet clutch)	Turn ON then OFF 5 times
5	Cooling Fan	Low for 5 s then Mid for 3 s then High for 2 s

Awake/Sleep States

The BCM is able to control or perform all of the BCM functions in the awake state. The BCM enters the sleep state when active control or normal monitoring of system functions has stopped and a time limit has passed. The BCM must detect certain wake-up inputs before entering the awake state. The BCM monitors for these inputs during the sleep state.

The vehicle will enter the awake state if any of the following wake-up inputs are detected:

- Activity on the serial data line
- Hazard switch turned ON
- Headlamp switch status changed
- Turn signals switch status changed
- Brake Pedal switch active
- Any door open signal
- Door lock and unlock switch status changed
- Drivers door locked or unlocked with the key
- Ignition ON

- Park lamps ON
- Keyless entry message

The vehicle will enter a sleep state when all of the following conditions exist:

- The ignition switch is OFF
- No Keyless entry message
- Panic alarm: No operation
- Brake pedal switch inactive
- Turn signals switch status unchanged
- Door ajar switch status is unchanged
- Door lock and unlock switch status unchanged
- Warning chime: No operation
- Rear window defogger is OFF
- No activity exists on the serial data line.
- No delay timers are actively counting.

If all these conditions are met, the vehicle will enter a low power or sleep condition.

Section 7

Safety and Security


<p>Immobilizer 7-3</p> <p> Schematic and Routing Diagrams 7-3</p> <p> Immobilizer Schematics 7-4</p> <p> Description and Operation 7-5</p> <p> Immobilizer Description and Operation 7-5</p> <p>Remote Functions 7-6</p> <p> Schematic and Routing Diagrams 7-6</p> <p> Remote Function Schematics 7-7</p> <p> Description and Operation 7-8</p> <p> Keyless Entry System Description and Operation 7-8</p>	<p>Seat Belts 7-9</p> <p> Schematic and Routing Diagrams 7-9</p> <p> Seat Belt Schematics 7-10</p> <p>Supplemental Restraints 7-11</p> <p> Description and Operation 7-11</p> <p> Supplemental Inflatable Restraint System Description and Operation 7-11</p>
---	---

BLANK

Immobilizer

Schematic and Routing Diagrams

Immobilizer Schematics (Immobilizer)

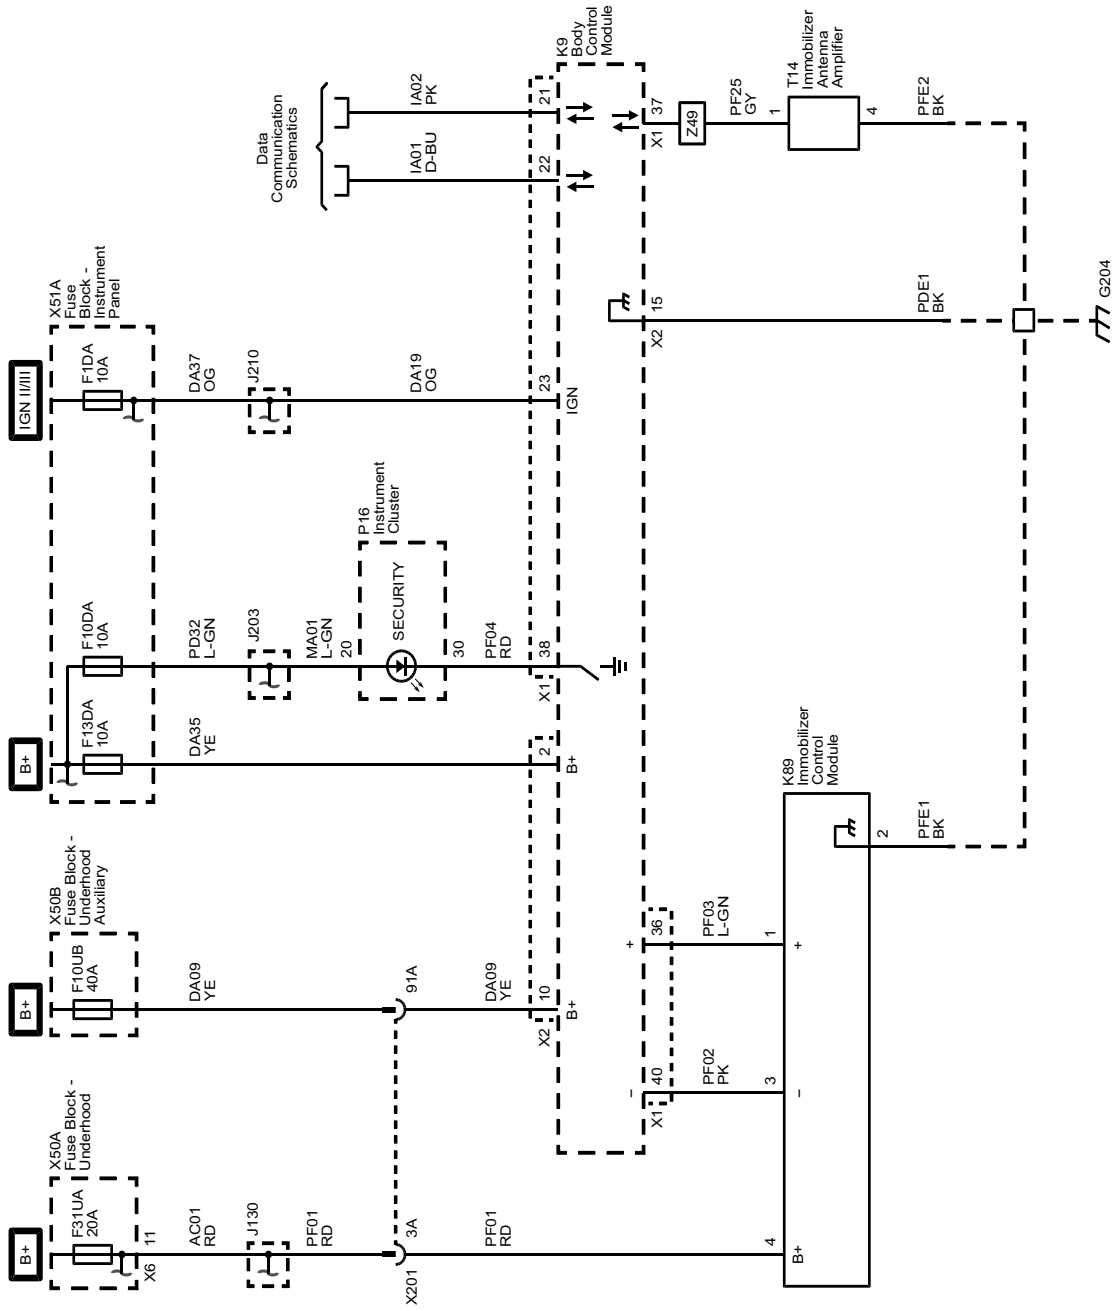

Description and Operation

Immobilizer Description and Operation

The immobilizer system functions are provided by the body control module (BCM). When an ignition key is inserted into the ignition lock cylinder and the ignition is switched ON, the transponder embedded in the head of the key is energized by the immobilizer antenna amplifier surrounding the ignition lock cylinder. The energized transponder transmits a signal that contains its unique value, which is received by the immobilizer antenna amplifier and then sent to the BCM.

The components of the immobilizer system are as follows:

- Immobilizer antenna amplifier
- BCM
- Ignition key (Transponder)
- Security indicator

Immobilizer Antenna Amplifier

The immobilizer antenna amplifier contains an exciter which is integral with the ignition switch located within the steering column.

The immobilizer antenna amplifier uses the following inputs:

- Battery voltage
- Ground circuit

The immobilizer antenna amplifier uses the following outputs:

- 2 12 V signals to the BCM

When an ignition key is inserted into the ignition lock cylinder and the ignition is switched ON, the transponder embedded in the head of the key is energized by the exciter coils surrounding the ignition lock cylinder. The energized transponder transmits a

signal that contains its unique value, which is received by the BCM. The BCM then performs one of the following functions:

- If the transponder value matches the values stored in the BCM memory, the BCM will allow vehicle cranking and starting.
- If the transponder's unique value does not match the value stored in the BCM, the BCM will prevent vehicle cranking and starting.
- If the immobilizer antenna amplifier is unable to measure the ignition key transponder value, the immobilizer antenna amplifier will not send any messages to the BCM.

Body Control Module (BCM)

When the body control module (BCM) receives the signal from the immobilizer antenna amplifier, the BCM will allow vehicle starting.

The BCM will disable vehicle starting if any of the following conditions occur:

- The key programming is invalid.
- No passwords are received. There is no communication with the immobilizer antenna amplifier.

The Ignition Key (Transponder)

The ignition key is a standard ignition key with a transponder located in the plastic head of the key. The transponder value is fixed and unable to be changed. The immobilizer system uses the ignition key transponder value to determine if a valid ignition key is being used to start the vehicle. There are approximately 3 trillion possible transponder values. There are no visible electrical contacts.


Security Indicator

The immobilizer system function is indicated by a security indicator in the gauge cluster.

Remote Functions

Schematic and Routing Diagrams

Remote Function Schematics (Keyless Entry)

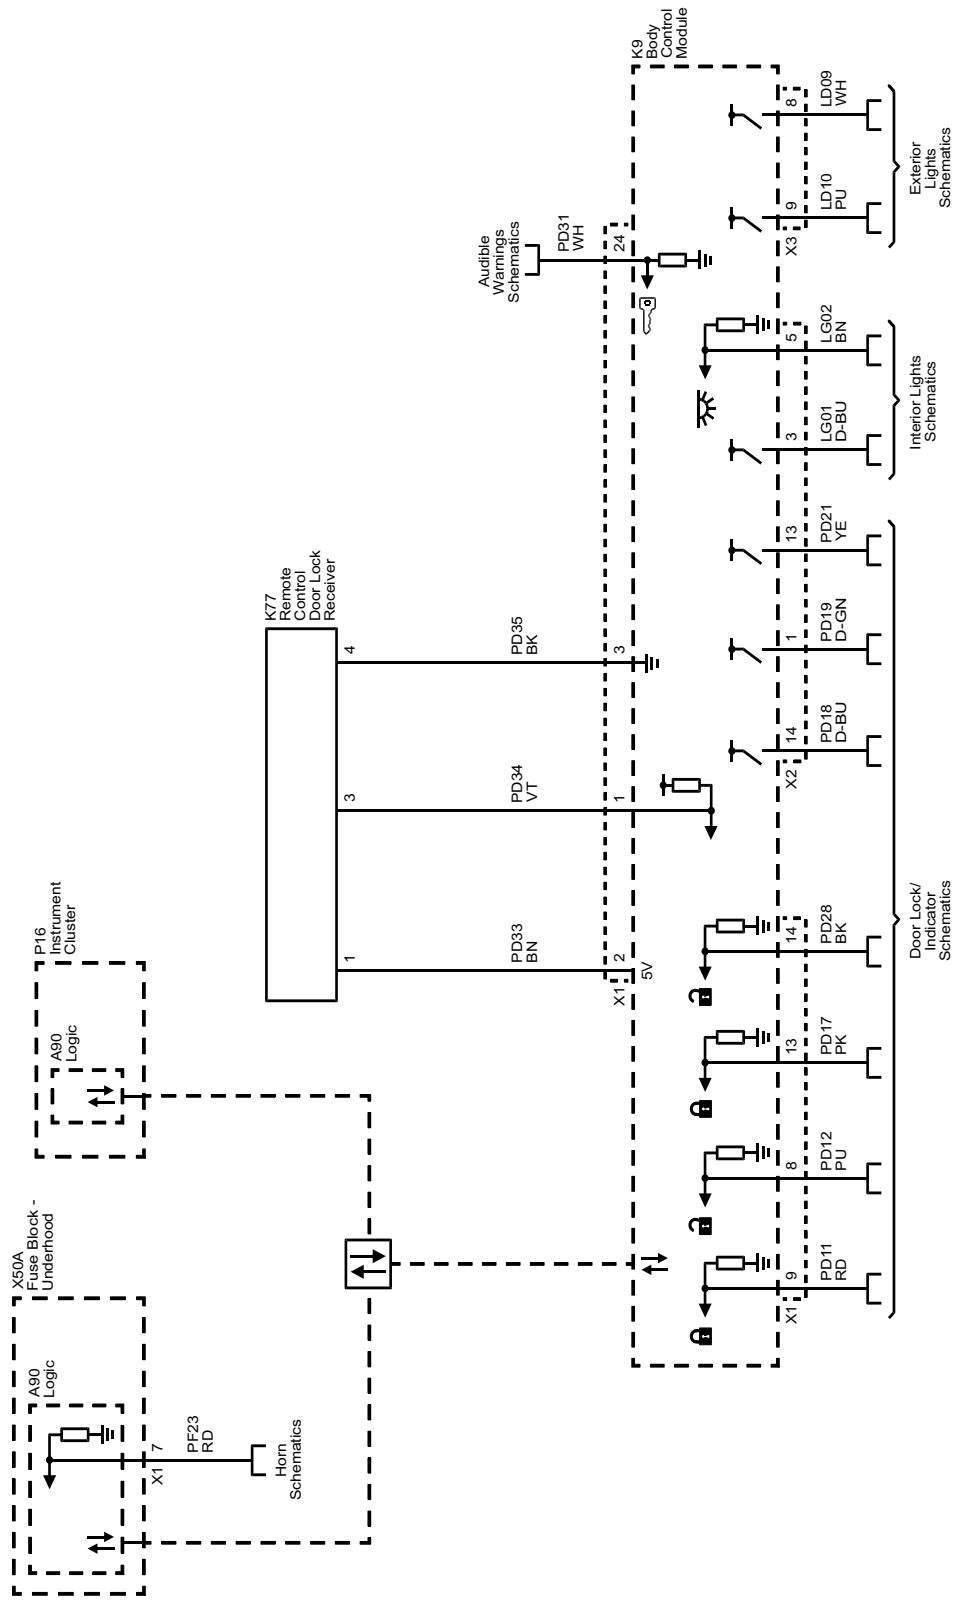

Description and Operation

Keyless Entry System Description and Operation

The keyless entry system is a vehicle entry device. The keyless entry system is used in conjunction with the body control module (BCM) to remotely activate certain vehicle features. Keyless entry will lock/unlock the doors when a corresponding button on the keyless entry transmitter is pressed. This is accomplished by the transmitter sending a radio frequency to the remote control door lock receiver (RCDLR). The RCDLR interprets the signal and activates the requested function via a serial data message to the BCM. A low transmitter or vehicle battery or radio frequency (RF) interference from aftermarket devices, such as 2-way radios, power inverters, computers, etc., may cause a system malfunction. High RF traffic areas may also cause interference that could lead to a malfunction. Keyless entry allows you to operate the following components:

- Door locks
- Vehicle locator/Panic alarm

The keyless entry system has the following components:

- Keyless entry transmitters
- BCM
- RCDLR

Keyless Entry Transmitters

The keyless entry transmitter are used to lock and unlock the vehicle doors from a distance of up to 33 feet (10 m) away.

Remote Control Door Lock Receiver (RCDLR)

The remote control door lock receiver (RCDLR) is a module that operates the keyless entry system. The RCDLR has an internal antenna that is used to receive radio frequency (RF) communications sent by the keyless entry transmitters. When an RF message is received from a keyless entry transmitter, the RCDLR interprets this signal and will request via serial data that the body control module (BCM) perform the specific function, i.e. door lock or door unlock.

Unlock Driver Door Only

Momentarily press the transmitter UNLOCK button in order to perform the following functions:

- Unlock only the driver door.
- Illuminate the interior lamps for a determined length of time, or until the ignition is turned ON.

Unlock All Doors – Second Operation

Momentarily press the transmitter UNLOCK button a second time, within 5 seconds of the first press, to perform the following functions:

- Unlock the remaining doors.
- Unlock the cargo doors.

Lock All Doors

Press the transmitter LOCK button to perform the following functions:

- Lock all vehicle doors.
- Immediately turn OFF the interior lamps.
- Flash the exterior lights, if enabled through personalization.
- Chirp the horn, if enabled through personalization.

Vehicle Locator/Panic Alarm

A single press of the panic button performs the following functions. Some functions may be dependent on personalization settings:

- Pulse the horn.
- Flash the exterior lamps.

A press and hold of the panic button performs the following functions:

- Pulse the horn and flash the exterior lamps for 30 second or until the following conditions occur:
 - The panic button is pressed.
 - The ignition switch is turned to the RUN position with a valid key.


Keyless Entry Personalization

Vehicle lock/unlock functions settings may be personalized. For functional descriptions and personalization instructions, refer to the vehicle owners manual.

Seat Belts

Schematic and Routing Diagrams

Seat Belt Schematics (Seat Belt)

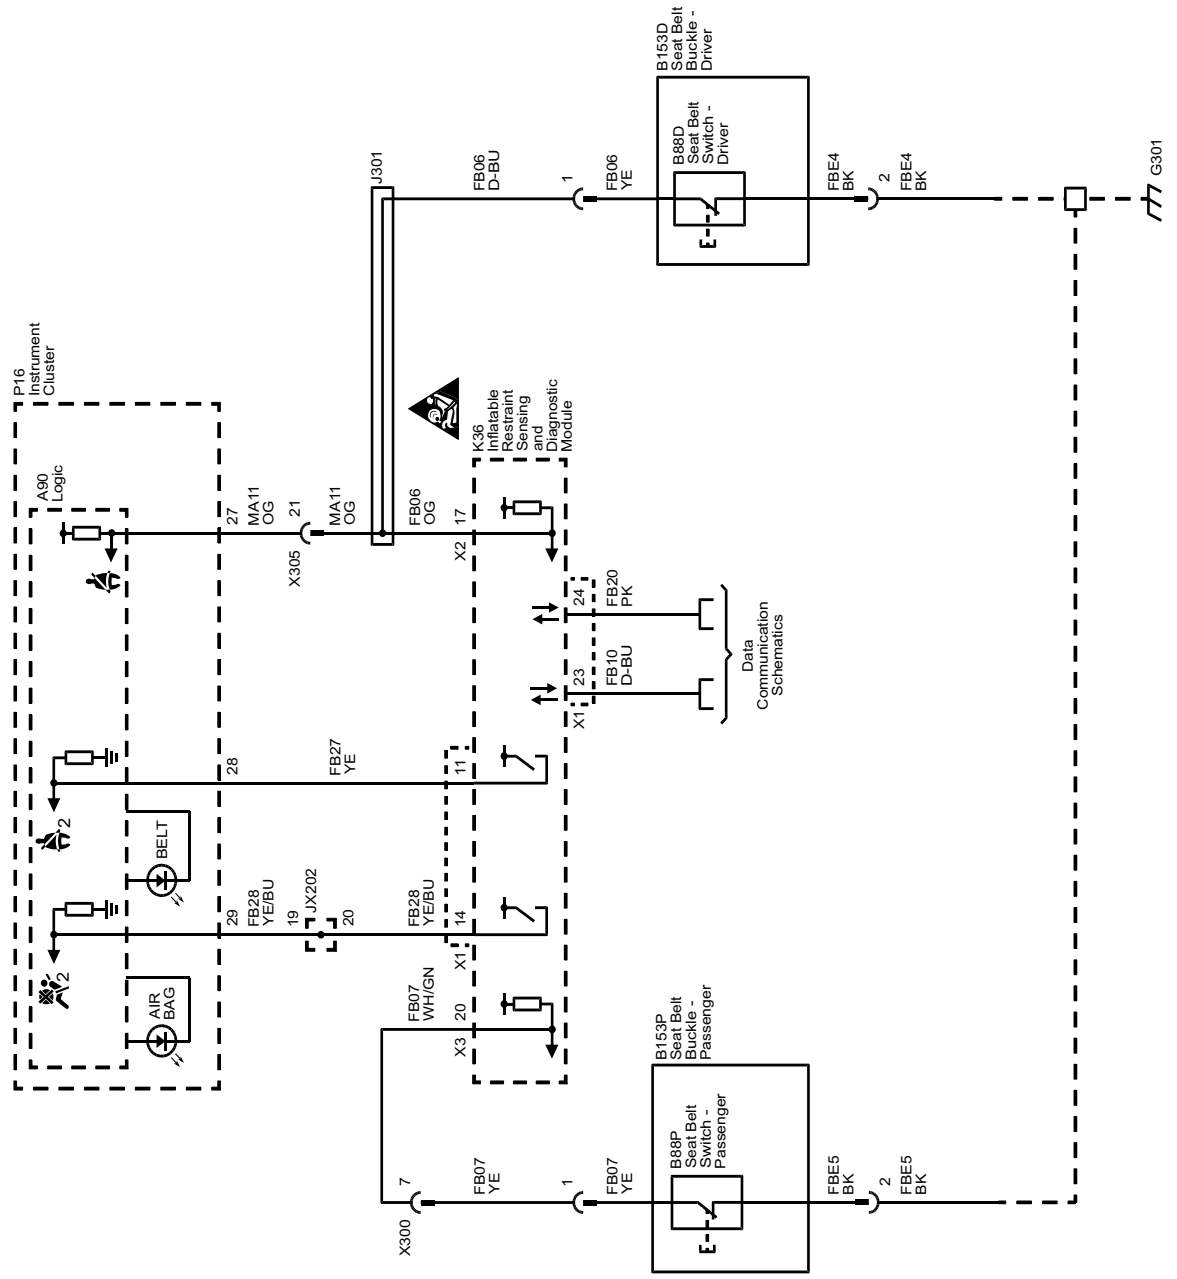

4510057

Supplemental Restraints

Description and Operation Supplemental Inflatable Restraint System Description and Operation

SIR System Overview

The supplemental inflatable restraint (SIR) system supplements the protection offered by the seat belts. The SIR system contains an inflatable restraint sensing and diagnostic module (SDM), inflator modules, seat belt pretensioners (anchor and retractor), and impact sensors. The SDM determines the severity of a collision with the assistance of side impact sensors located at strategic points on the vehicle. When the SDM detects a collision, the SDM will process the information provided by the sensors to further support air bag or pretensioner deployment. The SDM will deploy the air bags and pretensioners if it detects a collision of sufficient force. If the force of the impact is not sufficient to warrant inflator module deployment, the SDM may still deploy the seat belt pretensioners. The SDM contains a sensing device that converts vehicle velocity changes to an electrical signal. The SDM compares these signals to values stored in memory. If the signals exceed a stored value, the SDM will determine the severity of the impact and either cause current to flow through the frontal deployment loops deploying the frontal air bags and pretensioners, or it will deploy the pretensioners only. The SDM continuously monitors the deployment loops for malfunctions and illuminates the SIR system AIR BAG indicator if a fault is detected. The SDM performs continuous diagnostic monitoring of the SIR system electrical components. Upon detection of a circuit malfunction, the SDM will set a DTC and inform the driver by illuminating the SIR system AIR BAG indicator. The steering column and knee bolsters are designed to absorb energy and compress during frontal collisions in order to limit leg movement and decrease the chance of injury to the driver and passenger.

SIR System AIR BAG Indicator

The SIR system AIR BAG indicator, located in the instrument cluster, is used to notify the driver of SIR system malfunctions and to verify that the inflatable restraint sensing and diagnostic module (SDM) is communicating with the instrument cluster. When the ignition is turned ON, the SDM is supplied with ignition positive voltage. The instrument cluster will momentarily turn on the SIR system AIR BAG indicator. While the indicator is on, the SDM conducts tests on all SIR system components and circuits. If no malfunctions are detected the SDM will communicate with the instrument cluster through the serial data circuit and command the SIR system AIR BAG indicator OFF. The SDM provides continuous monitoring of the air bag circuits by conducting a sequence of checks. If a malfunction is detected the SDM will store a diagnostic trouble code (DTC) and command the instrument cluster to illuminate the SIR system AIR BAG indicator via serial data. The presence of a SIR system malfunction could result in non-deployment of the air

bags or deployment in conditions less severe than intended. The SIR system AIR BAG indicator will remain ON until the malfunction has been repaired.

Inflatable Restraint Sensing and Diagnostic Module (SDM)

The inflatable restraint sensing and diagnostic module (SDM) is a microprocessor and the control center for the supplemental inflatable restraint (SIR) system. The SDM contains internal sensors along with external impact sensors, mounted at strategic locations on the vehicle. In the event of a collision, the SDM compares the signals from the internal and external impact sensors to a value stored in memory. When the generated signals exceed the stored value, the SDM will cause current to flow through the appropriate deployment loops to deploy the air bags. The SDM records the SIR system status when a deployment occurs and illuminates the SIR system AIR BAG indicator located in the instrument cluster. The SDM performs continuous diagnostic monitoring of the SIR system electrical components and circuitry when the ignition is turned ON. If the SDM detects a malfunction, a DTC will be stored and the SDM will request the instrument cluster to illuminate the SIR system AIR BAG indicator, notifying the driver that a malfunction exists. In the event that ignition positive voltage is lost during a collision, the SDM maintains a 23-volt loop reserve for deployment of the air bags. It is important when disabling the SIR system for servicing or rescue operations to allow the 23-volt loop reserve to dissipate, which could take up to 1 minute.

Air Bags

This vehicle contains 6 air bags. The 6 air bags are located in the driver steering wheel (dual inflators), passenger instrument panel (passenger side) (dual inflators), driver seat side (B-pillar), passenger seat side (B-pillar), left roof rail, and right roof rail. To view the locations of the air bags refer to *Master Electrical Component List on page 6-46*. Air Bags contain a housing, inflatable air bag, two initiating devices (if dual inflator), canister of gas generating material and, in some cases, stored compressed gas. The deployment loops supply current to deploy the air bags. The driver steering wheel and passenger instrument panel air bags have two stages of deployment, which varies the amount of restraint to the occupant according to the collision severity. For moderate frontal collisions the air bags deploy at less than full deployment which consists of stage 1 of the air bag. For more severe frontal collisions a full deployment is initiated which consists of stage 1 and stage 2 of the air bag. The current passing through the air bags ignite the material in the canister producing a rapid generation of gas and in some cases, the release of compressed gas. The gas produced from this reaction rapidly inflates the air bag. Once the air bag is inflated it quickly deflates through the air bag vent holes and/or the bag fabric. A shorting bar (if equipped) is located in the connector

Seat Belt Pretensioners (Retractor)

The seat belt pretensioners (driver and passenger) consist of a housing, seat belt retractor (located in the B-pillar), seat belt webbing, an initiator, and a canister of gas generating materials. To view the locations of the seat belt pretensioners refer to *Master Electrical Component List on page 6-46*. The initiator is part of the seat belt pretensioner deployment loop. When the vehicle is involved in a collision of sufficient force, the SDM causes current to flow through the seat belt deployment loops to the initiator. Current passing through the initiator ignites the material in the canister producing a rapid generation of gas. The gas produced from this reaction deploys the seat belt pretensioners which removes all of the slack in the seat belts. Depending on the severity of the collision, the seat belt pretensioners may deploy without the frontal inflator modules deploying, or they will deploy immediately before the frontal inflator modules deploy. A shorting bar (if equipped) is located in the connector.

Impact Sensors

This vehicle contains 3 impact sensors. The 3 impact sensors are located in the front of the vehicle, and 2 in the B-pillars (left and right). To view the locations of the impact sensors refer to *Master Electrical Component List on page 6-46*. The impact sensors contain a sensing device which monitors vehicle acceleration and velocity changes to detect side collisions that are severe enough to warrant air bag deployment. The impact sensors are not part of the deployment loop, but instead provide input to the SDM. The SDM contains a microprocessor that performs calculations using the measured accelerations and compares these calculations to a value stored in memory. When the generated calculations exceed the stored value, the SDM will cause current to flow through the deployment loops deploying the appropriate air bags.

Seat Belt Indicators

The seat belt indicators are controlled through the inflatable restraint sensing and diagnostic module (SDM). For further information on seat belt indicators refer to *Seat Belt System Description and Operation*.

Section 8

Transmission


Shift Lock Control	8-3
Schematic and Routing Diagrams	8-3
Shift Lock Control Schematics	8-4
Description and Operation	8-5
Automatic Transmission Shift Lock Control Description and Operation	8-5

BLANK

Shift Lock Control

Schematic and Routing Diagrams

Shift Lock Control Schematics (Shift Lock Control)

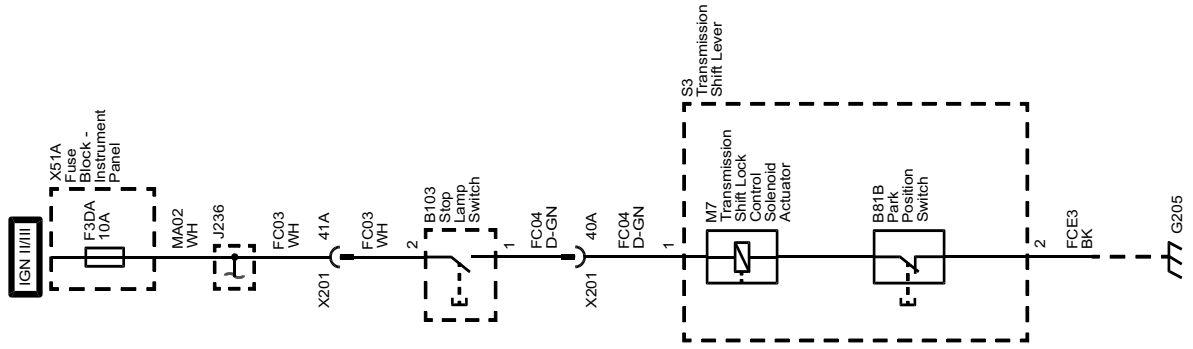

Description and Operation

Automatic Transmission Shift Lock Control Description and Operation

Automatic Transmission Shift Lock Control System

The automatic transmission shift lock control system is a safety device that prevents an inadvertent shift out of PARK when the engine is running. The driver must press the brake pedal before moving the shift lever out of the PARK position. The system consists of the following components:

- The automatic transmission shift lock control solenoid
- The body control module (BCM)
- The transmission control module (TCM)
- The stop lamp switch
- The shift lock release button

The stop lamp switch controls the voltage supply circuit of the shift lock control solenoid. The following conditions must be met before voltage is supplied to the shift lock control solenoid:

- The ignition is in the ON position.
- The stop lamp switch turns ON when the brake pedal is applied.
- The shift lock release button is pressed.

With the above conditions met, the stop lamp switch supplies voltage to the shift lock control solenoid. When the brake pedal is depressed the stop lamp switch turns ON and the BCM sends a message via CAN communication to the TCM indicating the brakes are applied. With the stop lamp switch ON, voltage is supplied to the shift lock control solenoid. This energizes the shift lock control solenoid releasing the mechanical lock, allowing the driver to move the shift lever out of the PARK position.

BLANK

B		O	
Battery		Outside Mirror	
Description and Operation	4-6	Description and Operation	2-28
Body Control System		P	
Description and Operation	6-11	Passenger Compartment/Roof Component	
C		Views	6-81
Charging System		Power Door Locks	
Description and Operation	4-6	Description and Operation	2-33
Component Connector End Views	6-135	Power Mode Description and Operation	6-378
D		Power Outlets	
Data Link Communications		Description and Operation	6-15
Description and Operation	6-11	Power Windows	
Door Ajar Indicator		Description and Operation	2-6
Description and Operation	2-33	Powertrain Component Views	6-74
Door Component Views	6-87	R	
E		Radio/Audio System	
Electrical Center Identification Views	6-103	Description and Operation	3-11, 3-12
Exterior Lighting Systems		Rear Window Defogger	
Description and Operation	2-22	Description and Operation	2-6
F		RPO Code List	1-5
Front of Vehicle/Engine Compartment		S	
Component Views	6-71	Schematics	
G		Body Control Systems	6-8
Ground Views	6-96	Cellular Telephone	3-8
H		Cigar Lighter/Power Outlet	6-14
Harness Routing Views	6-16	Data Communications	6-4
Heater and Air Conditioning		Defogger	2-5
System Description and Operation	5-3	Door Lock/Indicator	2-30
I		Exterior Lamps	2-13
Immobilizer		Ground Distribution	6-40
Description and Operation	7-5	Headlamps/Daytime Running Lamps	2-10
Inline Harness Connector End Views	6-329	Horns	2-8
Instrument Panel/Center Console Component		HVAC Systems - Manual	5-6
Views	6-78	Immobilizer	7-4
Interior Lighting System		Interior Lamps	2-18
Description and Operation	2-24	Interior Lamps Dimming	2-20
K		Moveable Window	2-4
Keyless Entry		Outside Rearview Mirror	2-27
System Description and Operation	7-8	Power Distribution	6-27
L		Power Moding	6-38
Luggage Compartment/Rear of Vehicle		Radio/Navigation	3-4
Component Views	6-92	Remote Function	7-7
M		Seat Belts	7-10
Manual HVAC Description and Operation	5-8	Shift Lock Control	8-4
Master Electrical Component List	6-46	Starting and Charging	4-4
		Steering Wheel Secondary/Configurable	
		Control	3-16
		Wiper and Washer Systems	2-35
		Schematics RPO Code List	6-26
		Shift Lock Control	
		Description and Operation	8-5
		Splice Pack Connector End Views	6-321
		Starting System	
		Description and Operation	4-8

Supplemental Inflatable Restraint
System Description and Operation 7-11

V

Vehicle Certification, Tire Placard, Anti-Theft,
and Service Parts ID Label 1-4
Vehicle Zoning Strategy 6-24
Vehicle, Engine and Transmission ID and VIN
Location, Derivative and Usage 1-3

W

Wheels/Vehicle Underbody Component
Views 6-93
Wiper/Washer
System Description and Operation 2-36