



2018

TAHOE 4WD PURSUIT



Shown with aftermarket equipment and dealer installed accessories



About This Publication

This catalog is not updated during the model year and should not be used for ordering purposes. It is intended as a source of basic information. All illustrations and specifications in this literature are based on the latest product information available at the time of publication. General Motors reserves the right to make changes at any time without notice. For further details, consult your local dealer.

Care must be taken during customer installation of equipment and wiring to ensure that all holes drilled in the body are corrosion protected, properly sealed and that vehicle wiring harnesses, piping or other components have not been displaced or damaged. Aftermarket equipment installers must be mindful of applicable Federal Motor Vehicle Safety Standards. This information can be obtained directly from the National Highway Traffic Safety Administration.

Adding non-dealer accessories or making modifications to the vehicle can affect vehicle performance, aerodynamics, and overall top speed.

These vehicles are equipped with an air bag system. The air bag system in your police vehicle includes frontal driver and passenger air bags, front seat back side impact air bags, front knee air bags or knee bolsters and side curtain air bags. Customer installed equipment such as security barriers behind the front seats should not be mounted so that the barrier ends are within the side air bag deployment zones. The sensors and other components for the air bag system must not be relocated to accommodate the installation of customer furnished equipment; please refer to the service manual for sensor and other component locations. For information concerning instrument panel top pad mounted equipment and air bag system deployment zones, see the air bag information section in this catalog and the vehicle owners manual.

A note about vehicle alterations by independent suppliers: This catalog shows pictures of vehicles that have been altered or upfitted with equipment or components supplied to Chevrolet or its dealers by independent suppliers. Chevrolet is not responsible for the safety or quality of design features, materials or workmanship of any alterations by a supplier.

INDEX

- **UPDATES FOR 2018 TAHOE
4WD POLICE PACKAGE**
- **STANDARD FEATURES**
- **POWERTRAIN & EMISSIONS**
- **COLORS & INTERIOR TRIM**
- **SPEEDOMETER/CLUSTER DISPLAY**
- **RADIO SCREEN DISPLAY**
- **OPTIONAL EQUIPMENT**
- **ONSTAR® 4G LTE Wi-Fi SERVICE PLANS**
- **SPECIFICATIONS**
- **ILLUSTRATION HIGHLIGHTS**
- **LOADING ZONES**
- **WIRING DIAGRAMS**
- **AIRBAG DIMENSIONS**
- **AIRBAGS FAQ**
- **STABILITRAK**
- **MAINTENANCE AND WARRANTY**

2018 TAHOE 4WD PURSUIT



Shown with aftermarket equipment



Fully accessible underbody spare tire standard



New Chevrolet MyLink Radio

UPDATES FOR 2018

NEW FEATURES

- (IO5) Chevrolet MyLink Radio with 8" diagonal color touch-screen
- (UDD) 4.2" diagonal multi-color Driver Information Center
- (UK3) Steering wheel-mounted audio, Cruise Control and Driver Information Center controls
- Optional (PCW) Enhanced Driver Alert Package, includes (JF4) Power-adjustable pedals, (UEU) Forward Collision Alert, (TQ5) IntelliBeam headlamps, (UHY) Low Speed Forward Automatic Braking, (UHX) Lane Keep Assist with Lane Departure Warning and Safety Alert Driver Seat
- (G9K) Satin Steel Metallic
- (G2X) Havana Brown Metallic (No longer available to order as of 11-20-17)
- (UJM) Tire Pressure Monitor System now includes Tire Fill Alert
- LED signature daytime running lamps



DISCONTINUED

- (GWT) Champagne Silver Metallic
- (IO3) AM/FM stereo with CD player
- (UDC) One-color Driver Information Center

2018 TAHOE 4WD POLICE PACKAGE 9C1

The four-wheel drive Tahoe Police Package (9C1) has been designed for police work up to, and including, high-speed emergency vehicle operations. GM restricts the sale of police vehicles and they are not to be sold to retail customers. Model CK15706 (four-wheel drive) with equipment group 1FL is required when ordering 9C1 Police Package. Content, Options and Specifications shown are for Police and Special Service Vehicles only which differ from retail civilian model.

STANDARD 9C1 INTERIOR FEATURES	
AIR CONDITIONING	Dual-zone automatic, includes front and rear air conditioning with electronic controls
ASSIST HANDLES	Front passenger and second row outboard; front passenger assist handle is deleted when passenger side spotlamp is ordered
AUDIO SYSTEM	Chevrolet MyLink Radio ⁵ with 8" diagonal color touch-screen, AM/FM stereo with seek-and-scan and digital clock, includes Bluetooth® streaming audio for music and select phones; voice-activated technology for radio and phone; and Shop with the ability to browse, select and install apps to your vehicle. Includes 4 USB ports and 1 auxiliary jack. The 8-inch diagonal color touch-screen slides up to reveal a password-protected area behind the display with space for cell phones, wallets or other valuables. Additionally, a USB port ⁶ gives you one more place to charge your devices. Includes 6 Speakers and Single-slot CD/MP3 player.
BLUETOOTH®¹	Bluetooth® cell phone connectivity Displayed on radio screen (see standard equipment illustrations section) Bluetooth® microphone is same location as ONSTAR®. It is located on the headliner in front of driver's sun visor. Bluetooth® phone conversations are broadcast over the 4 front speakers. The speakers are located in the left front door/right front door/left side of dash/right side of dash
COMPASS	Displayed on Speedometer Cluster (see Picture on Speedometer/Cluster page)
CONSOLE, OVERHEAD	Includes Rear Seat Panoramic Mirror, Map lights, Passenger airbag indicator and Sunglasses holder
CRUISE CONTROL	Electronic with set and resume speed
DRIVER INFORMATION CENTER	4.2" diagonal multi-color.
FLOOR COVERING	Black rubberized vinyl floor and load floor behind second row seats, see illustration section for description (carpeting and carpeted floor mats are available, see option B30 and B58 see available options page)
GLASS	Deep-tinted, all windows (except for windshield, and driver/front-passenger side glass which are light-tinted). Front doors have a 24.6% UV transmission Rear door and cargo glass is 12% +/- 3% transparency and front glass has 70% minimum. Non-tinted, solar absorbing glass available (see options page for descriptive).
GLOVE BOX	Locking door without courtesy light (uses ignition key)
LIGHTING	Interior LED with courtesy lights, door handle or remote entry activated, illuminated entry and map lights
MIRROR, INSIDE	Rearview, manual day/night.
NAVIGATION	Available only with active ONSTAR® ² account that includes Turn-by-Turn directions plan; directions are displayed as text on radio. Does not include map view navigation screen.
OCCUPANT SENSING SYSTEM	Automatic Occupant Sensing System, sensor indicator inflatable restraint, front passenger
ONSTAR®	ONSTAR® Basic Plan ³ , ONSTAR® Guidance ⁴ and ONSTAR® 4G LTE with Wi-Fi See ONSTAR® section for Availability and Available Plans
OUTSIDE TEMPERATURE	Displays in top right corner of radio screen (see standard equipment illustrations section)
RESTRAINT SYSTEM²	Three point safety belts, driver and front passenger with pretensioners, dual stage driver and front passenger frontal airbags, driver and passenger knee bolsters, front passenger sensing system with frontal airbag ON/OFF indicator, rollover sensor, dual head curtain airbags for front and second row outboard occupants ⁵ and front seat-back mounted thorax-pelvic airbags; head curtain airbag extends to cargo area. NOTE: Safety belt extenders are available in 9 inch (part number 19259268) through our dealer at no charge
SEATS, FRONT	CLOTH 40/20/40 individual seats, 3 passengers with 10-way power driver seat adjuster (fore/aft, up/down, tilt, recline, and lumbar), and 6-way power passenger seat adjuster. Adjustable outboard head restraints and storage pockets. Center seat section can be deleted (9U3) for 15" of open floor space (see front seats and interior trim illustration page for description).
SEAT, REAR	CLOTH split-folding 60/40 bench seats includes folding center armrest with cup holders, outboard seating position headrests and reclining rear seat back. (Vinyl 2nd row seat option 5T5) 3rd row seats not available (see front seats and interior trim illustration page for description).
SPEEDOMETER/CLUSTER	Digital Speedometer and 150 mph certified analog speedometer, 1 mph increments and digital trip odometer with gauges for engine oil pressure, fuel, battery volts, coolant temperature and tachometer. Driver Information Center displays engine hours, warnings, and backup sensor proximity status while in reverse. (see message listing for additional features).
STEERING WHEEL	Tilt-wheel with cruise control and column mounted gear shift lever.
STEERING WHEEL CONTROLS	Mounted audio and cruise controls, includes Driver Information Center controls
SURVEILLANCE FEATURE	Body Control Module calibration is available to disable all automatic interior and exterior lighting. Feature requires connection to BCM by customer. Feature operates with or without SEO 9G8, delete Daytime Running Lamps and Automatic Headlamps. (see Interior/Exterior Lamps Control page)
TEEN DRIVER MODE	A configurable feature that can be programmed through your radio that lets you activate customizable vehicle settings associated with a key fob, to encourage safe driving behavior. It can limit certain vehicle features, and it prevents certain safety systems from being turned off. An in-vehicle report gives you information on your driving habits.

1. Requires a compatible mobile device, active ONSTAR® service and data plan. 4G LTE service available in select markets. Visit ONSTAR®.com for coverage map, details and system limitations.

Data plan provided by AT&T.

2. Always use safety belts and child restraints. Children are safer when properly secured in a rear seat in the appropriate child restraint. See the Owner's Manual for more information.

3. Does not include emergency or security services. Visit ONSTAR®.com for coverage map, details and system limitations

4. Visit ONSTAR®.com for coverage map, details and system limitations

5. MyLink functionality varies by model. Full functionality requires compatible Bluetooth and smartphone, and USB connectivity for some devices

6. Not compatible with all devices.

2018 TAHOE 4WD POLICE PACKAGE 9C1

THEFT DETERRENT SYSTEM	Vehicle PASS-Key® III+ and content theft (unauthorized entry, or entry without use of keyless remote fob, sounds horn and lamps flash). Content Theft Alarm Disable, option UTQ must be ordered.
VISORS	Padded with cloth trim, extends on rod; driver and front passenger illuminated vanity mirrors
WARNING TONES	Headlamp on, key-in-ignition, driver and right-front passenger safety belt unfasten, backup sensor with warning tone and turn signal on
WINDOW OPERATION	Power with driver express up/down and lockout features
STANDARD 9C1 EXTERIOR FEATURES	
ASSIST STEPS	Black, mounted between front and rear wheels
BODY SIDE MOLDINGS	Optional (see options page)
CAPLESS FUEL FILL	The vehicle has a capless refueling system and does not have a fuel cap. The filling nozzle must be fully inserted and latched prior to starting fuel flow. NOTE: Overfilling the fuel tank by more than three clicks of a standard fill nozzle may cause vehicle performance issues, including engine stalling and damage to the fuel system, fuel spills, potential fuel fires
DEFOGGER	Electric, rear window
DOOR HANDLES	Body color
DOOR LOCKS	Power programmable; Lockout is disabled; see LOCK-OUT PROTECTION description shown under STANDARD 9C1 ELECTRICAL FEATURES below. Door locks can be programmed via radio settings menu (see standard equipment illustrations section). Lock cylinder not available on passenger front door or rear liftgate. Child safety door and window locks individually controlled electronically by driver door mounted switches. Includes 2 remote transmitters.
FASCIA, FRONT	Body color with police specific lower extension for increased brake cooling and ground clearance. Fascia comes with tow hook openings but does not include tow hooks. For tow hooks see Option V76 Recovery Hooks on exterior options page.
FASCIA, REAR	Body color with step pad
FOG LAMPS	Not available
HEADLAMPS	Dual LED with flash-to-pass feature, automatic exterior lamp control and daytime running lamps. Daytime running lamps are LED Signature Lighting. To disable daytime running lamps and automatic lamps control, see option 9G8 on the available options page. Altering headlamp assembly is not recommended, General Motors is not responsible for the effects of any modifications.
HORNS	Dual note
KEYS	Two-sided, random code, for ignition, driver door and glove box. Six additional keys are available (maximum 8 keys can be programmed per vehicle). Fleet keyed-alike is available; see Options 6E2 or 6E8.
KEYLESS ENTRY REMOTES	Includes two extended-range transmitters with non-functional panic button; stealth mode feature includes exterior lamps and horn disable as default setting. Remote feedback is programmable via radio settings if light and or horn lock/unlock notification is desired. Daytime running lamps will remain illuminated when optional (BTV) remote start is activated. Additional transmitters are available; (see options page for descriptive).
LUGGAGE RACK	Not available
MIRRORS, OUTSIDE	Heated power-adjustable, manual-folding, color keyed, driver-side includes spotter mirror
RADIO ANTENNA	Located in rear quarter glass
REAR LIFTGATE	Manual open/close with liftgate/liftglass latch exterior release switch or release via remote fob
REAR VISION CAMERA	Rear camera view radio screen display with audible warning (see illustration section for description)
REAR PARK ASSIST	Sensors on rear bumper to assist with parking and avoiding objects while in reverse.
TIRES	Goodyear P265/60R17 all-season, V-rated, blackwall, (see standard equipment illustrations section) includes matching spare tire
TIRE PRESSURE MONITOR WITH TIRE FILL ALERT	Tire Pressure Monitoring System. Standard spare wheel not equipped with TPM sensor. Includes Tire Fill Alert in addition to the DIC warning when a tire has low pressure, this feature provides audible and visual indication when air is being added to the low tire to aid in achieving optimal tire pressure.sensor; must be programmed when mounted (see standard equipment illustrations section).
TIRE, SPARE	Full-size spare, lockable with outside winch-type carrier mounted under frame at rear. (includes TPM sensor - not programmed)
UNDER HOOD LAMP	Not available
WINDSHIELD	Solar absorbing shaded upper with acoustic laminated glass
WINDSHIELD WIPERS	Intermittent, with rain sensing
WHEELS	17" x 8" black steel (includes matching full-size spare)
WHEEL CENTER CAP	Bolt-on metal, black finish

STANDARD 9C1 ELECTRICAL FEATURES

AUXILIARY POWER, FRONT	170-Amp ignition and main power supply wiring at lower center of instrument panel: 120-amp primary battery ignition controlled relay power and 50-amp auxiliary battery power (see specifications page for description)
AUXILIARY POWER, REAR	100-amp cargo area (auxiliary battery powered) (see standard equipment illustrations section)
LOCK-OUT PROTECTION	Lockout Protection is not available with the Tahoe Police and Special Service Vehicle. When locking is requested with the driver door open and the key in the ignition, all doors will lock and remain locked. The key-in-ignition audible warning will sound while the driver door is open. The locked driver door can be closed with the key in the ignition. If running, the engine will remain running.
POWER OUTLETS	110-volt (3 prong outlet) located in the lower center stack. 110 volt, 60 Hertz power outlet is rated 150 watts (1.36 amps at 110v). Overload power before automatic shut off is 275 watts for 10 seconds or 418 watts for 1 second. Also includes four auxiliary 12-volt outlets including one on the instrument panel, one in the center fold-down seat storage, and two in the cargo area. Outlet power is configurable to be Battery Powered at all times or Ignition Controlled Power. See the Standard Equipment Section for description of selecting Outlet power configuration.
WIRING DIAGRAMS	See Wiring Section for description; also see Tahoe Police Package owner's manual supplement (located in glove box folder with standard owner's manual)

STANDARD 9C1 CHASSIS FEATURES

AERO SHUTTERS	Aero shutters are designed to close when operating conditions permit. The shutters are located on the front of the A/C condenser under hood to divert airflow around the front of the truck reducing wind drag and improves fuel economy. When the cooling system requires more air flow the shutters automatically reopen, ensuring proper air flow through the radiator
AIR CLEANER	High-capacity
ALTERNATOR	170-amp high output with idle boost based on battery energy level (see specifications page for description)
AXLE	3.08 Ratio with heavy-duty locking differential
BATTERIES	Primary 720 CCA, 80 amp-hour rating with battery rundown protection (may be configured to protect customer installed equipment). Isolated, Auxiliary 730 CCA, 70 amp-hour battery without battery run-down protection for customer installed equipment. (see specifications page)
BRAKES	Heavy-duty 4-wheel anti-lock front and rear disc with vacuum boost power assist. Includes Front brake cooling air deflectors
COOLING	Heavy-duty high-capacity radiator, electric fans and extended life coolant; coolant hoses are EPDM (ethylene-propylene-diene monomer) rubber; silicone hoses are not required (coolant is DEX-COOL good for 5 years/150,000 miles, protects from -34° F to +265° F and against rust and corrosion)
ENGINE	5.3L EcoTec3 V8 with direct injection, variable valve timing (VVT), Active Fuel Management (AFM), aluminum block, Flex Fuel ¹ includes air conditioning wide open throttle cut off (see powertrain page for description and emissions, see also specifications page)
EXHAUST	Aluminized stainless-steel muffler and tailpipe
FRAME	Full perimeter, modular with hydroformed rails (includes ground straps. See Radio Suppression below.)
FUEL TANK CAPACITY	26 gallon (98 liters)
HILL START ASSIST	This feature is designed to prevent the vehicle from rolling, either forward or rearward, during vehicle drive off.
OIL COOLERS	Engine oil, oil-to-coolant heat exchanger in passenger side of coolant radiator. Transmission oil, oil-to-coolant heat exchanger in upper portion of the AC condenser (see standard equipment illustrations section)
PROP SHAFT	4 inch diameter aluminum
RADIO SUPPRESSION	Grounding straps, at five locations (see standard equipment illustrations section).
REAR DIFFERENTIAL	Heavy-duty locking
SPARK PLUGS	Extended life - iridium tip
STABILITRAK	The stability system is capable of recognizing high performance driving with a Track Detect Mode. When continuous high performance driving occurs in 2WD or Auto 4WD Mode, the stability system will automatically enter Competition Mode. When engaged, the message "Competition Mode" will appear in the DIC and the Traction Control OFF and StabiliTrak OFF lights will illuminate. (see illustration section for StabiliTrak button location) Competition mode can be disengaged by any of these four methods: -Discontinue high performance driving for approximately 2 minutes -Place transmission shift lever into Park for a brief period of time -Press and hold button to completely disable Traction Control and press again to re-enable all stability systems -Turn engine off
STEERING	Electric power-assisted rack and pinion (see standard equipment illustrations section)

1. E85 is 85% ethanol and 15% gasoline.

SUSPENSION, FRONT	Heavy-duty, police-rated. Includes specific spring rates, ride height, shock tuning and stabilizer bar.
SUSPENSION, REAR	Multi-link, coil springs and stabilizer bar
TRAILERING EQUIPMENT	SAE Class II hitch with 2 inch (51 mm) square receiver. Trailer may weigh up to 4,000 pounds (1,844 kg) with proper hitch selection. See the Owners Manual for additional information.
TRANSMISSION	Enhanced calibration 6-speed automatic with overdrive and tow/haul mode. Electronically-controlled transmission provides protection against over-revving the engine in low gear and a mechanical low gear blockout is not required; if a driver manually selects low gear and fails to manually upshift to high gear, the powertrain control module automatically protects the drivetrain. The transmission is calibrated to maintain lower gears when driving aggressively. This enhances vehicle control while driving through corners and when throttling up to exit a corner, keeping the transmission in one gear instead of upshifting and downshifting avoids "hunting" for a gear state
TRANSFER CASE	Autotrac, 2-speed electronic with rotary control, includes neutral position for dinghy towing (2HI, 4AUTO, 4HI, 4LO, and Neutral setting) See owners manual procedure for shifting into N (Neutral) and shifting out of N (Neutral).
UNDER BODY SHIELD, FRONT	Two-piece, heavy-duty aluminum front underbody shield starting behind front bumper and running to 2nd cross-member protecting front underbody and oil pan (see standard equipment illustrations section)
WARRANTY	See Maintenance and Warranty information for additional information.

POWERTRAIN

ENGINE				TRANSMISSION		AXLE	
OPTION CODE	TYPE	DISPLACEMENT LITERS/CU. IN.	FUEL SYSTEM	OPTION CODE	TYPE	OPTION CODE	RATIO
L83	V8	5.3/325	Active fuel management FlexFuel ¹	MXO/MYC	6L80 6-speed auto. with OD	GU4	3.08

EMISSIONS - MUST BE SPECIFIED

FE9	FEDERAL EMISSIONS , Use for ordering vehicles that will be registered in all states except California, Connecticut, Delaware, Maine, Maryland, Massachusetts, New Jersey, New York, Oregon, Pennsylvania, Rhode Island, Vermont and Washington State.
YF5	CALIFORNIA EMISSIONS , Use for ordering vehicles that will be registered in California.
NE1	EMISSIONS , Use for ordering vehicles that will be registered in Connecticut, Delaware, Maine, Maryland, Massachusetts, New Jersey, New York, Oregon, Pennsylvania, Rhode Island, Vermont or Washington State.
NB8	EMISSIONS , Required when option code FE9 "FEDERAL EMISSIONS" is ordered for delivery to a dealer located in California, Connecticut, Delaware, Maine, Maryland, Massachusetts, Maryland, New Jersey, New York, Oregon, Pennsylvania, Rhode Island and Washington State for a purchaser who will be registering the vehicle outside California, Connecticut, Delaware, Maine, Maryland, Massachusetts, New Jersey, New York, Oregon, Pennsylvania, Rhode Island, Vermont and Washington State. Do not use for vehicles that will be registered in California, Connecticut, Delaware, Maine, Maryland, Massachusetts, New Jersey, New York, Oregon, Pennsylvania, Rhode Island, Vermont or Washington State.
NC7	EMISSIONS , Required when option code YF5 "CALIFORNIA EMISSIONS" or option code NE1 "CT/DE/ME/MD/MA/NJ/NY/OR/PA/RI/VT/WA EMISSIONS" is ordered for delivery to a dealer located in any state except California, Connecticut, Delaware, Maine, Maryland, Massachusetts, New Jersey, New York, Oregon, Pennsylvania, Rhode Island, Vermont and Washington State for a purchaser who will be registering the vehicle in one of these states or sold as permitted below under "EPA Policy on the Sale of California Emission Vehicles".
NB9	EMISSIONS , Required when option code YF5 is ordered for delivery to a dealer located in Connecticut, Delaware, Maine, Maryland, Massachusetts, New Jersey, New York, Oregon, Pennsylvania, Rhode Island, Vermont and Washington State. Required when option code NE1 is ordered for delivery to a dealer located in California.
NOTE: For more 2018 Emissions requirements contact your local dealer (reference 2018 Model Year GM Vehicles Emission Requirements Bulletin number GM 17-17 issued August 22, 2017)	
NOTE: The 2018 Chevrolet Tahoe Police Patrol Vehicle and Special Service Vehicle with the 5.3L Engine (L83) with Emission Option Codes FE9, NE1 and YF5 is certified to EPA Tier 2 Bin 5 standards and qualifies as ULEV 125 (Ultra Low Emission Vehicle) under California Air Resources Board (CARB) requirements, meaning it is 50-state certified. Emission Standard: FFV BIN125/ULEV125 LDT3-LDT4 /LDT2 EPA engine family or test group: JGMXT05.3382	

1. E85 is 85% ethanol and 15% gasoline.

TIRES V-SPEED RATED

MANUFACTURER	QUANTITY	SIZE	SPEED RATING	TYPE
GOODYEAR	5	P265/60R17	V	All season BW

NOTE: Due to specific requirements for performance durability and safety, GM recommends only the original equipment tires for replacement

Tire Plies = Tread 6 ply; 2 Polyester, 2 Steel, 2 Nylon, Sidewall, 2 Polyester

Tire Chains - If the vehicle has 265/65R18, P265/65R18, P275/55R20, or P285/45R22 size tires, do not use tire chains. There is not enough clearance. Tire chains used on a vehicle without the proper amount of clearance can cause damage to the brakes, suspension, or other vehicle parts. The area damaged by the tire chains could cause loss of control and a crash. Use another type of traction device only if its manufacturer recommends it for the vehicle's tire size combination and road conditions. Follow that manufacturer's instructions. To avoid vehicle damage, drive slow and readjust or remove the traction device if it is contacting the vehicle. Do not spin the wheels. If traction devices are used, install them on the rear tires. If the vehicle has P255/70R17 or P265/70R17 size tires, use tire chains only where legal and only when necessary. Use chains that are the proper size for the tires. Install them on the rear tires only. Do not use chains on the front tires. Tighten them as tightly as possible with the ends securely fastened. Drive slowly and follow the chain manufacturer's instructions. If the chains contact the vehicle, stop and retighten them. If the contact continues, slow down until it stops. Driving too fast or spinning the wheels with chains on will damage the vehicle.

AVAILABLE EXTERIOR COLORS Actual colors may vary

GAN	G9K	GBA	GMU	GXG	GAZ	G1M	G2X	G1E
Silver Ice Metallic	Satin Steel Metallic	Black	Pepperdust Metallic	Tungsten Metallic	Summit White	Blue Velvet Metallic	**Havana Brown Metallic	*Siren Red Tintcoat

* Additional Charge.

** No longer available to order as of 11-20-17

SEO PAINT AVAILABLE

COLOR DESCRIPTION SEO CODE WA#

MSP Blue	9V2	WA-5665
Woodland Green	9V5	WA-9015
Victory Red ¹	5T4	WA-9260
Wheatland Yellow (86U) 9W3		WA-253A
Dark Toreador Red	—	WA-334D




Note: Will require 5 orders before sending to plant
1 - Requires SEO (5T4) Exterior body colored parts

AVAILABLE INTERIOR COLOR Actual colors may vary

HOU	5T5
Black Cloth	Black Vinyl

FRONT SEATS AND INTERIOR TRIM



STANDARD Cloth front 40/20/40 Individual Seats (AZ3) 3-Occupant, Center seat can be unbolted for removal. Center fold-down armrest with USB, Auxiliary Jack and Auxiliary Power connection and lockable seat cushion storage. STANDARD 10-way power driver seat, includes power lumbar and power recline. STANDARD 6-way power front passenger seat. Outboard seat back thoracic-pelvic airbags.

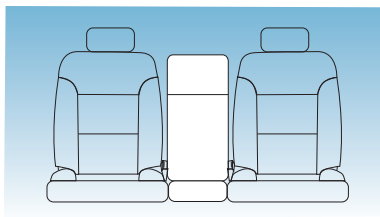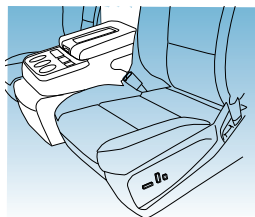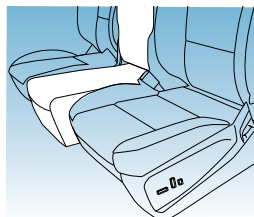

Seat Code	Seat Trim	Color	Color Code
AZ3	Cloth	Jet Black	HOU

- Front cloth and vinyl rear seat combination is available by ordering option 5T5 and requires Jet Black (HOU)
- Center seat can be unbolted for removal

OPTIONAL - SEO 9U3 20% SEAT DELETE Cloth Front 40/40 Individual Seats (AZ3 & Option 9U3) Deletes center seat to provide 15" of open space between Driver and Passenger Seat. STANDARD 10-way power driver seat, includes power lumbar and power recline. Outboard seat back thoracic-pelvic airbags. STANDARD 6-way power front passenger seat. A separate cable and connection kit for the USB, Auxiliary Jack and Auxiliary Power is provided in the vehicle when the center seat is deleted.

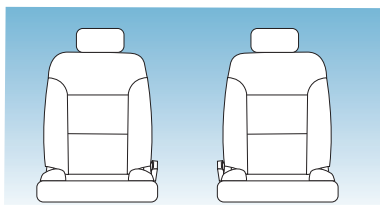
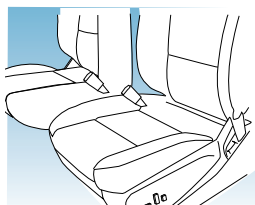


Seat Code	Seat Trim	Color	Color Code
AZ3 & 9U3	Cloth	Jet Black	HOU

- Front cloth and vinyl rear seat combination is available by ordering option 5T5 and requires Jet Black (HOU)

OPTIONAL - A95 BUCKET SEATS Cloth Bucket Seats with Console (Option A95) Driver and Passenger Front Bucket Cloth Seats, with integrated retail console. 10-way Power Driver and Passenger Seats with Outboard-Seat Back Pelvic Airbag and driver seat-mounted Front Center Airbag.

Not recommend for vehicles intended to be up-fitted with aftermarket equipment.


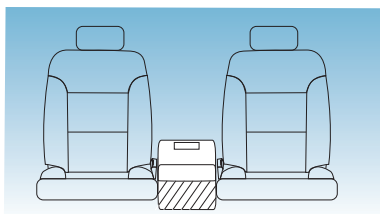
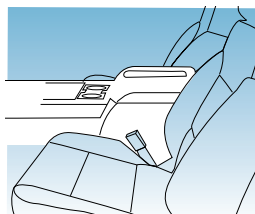


Seat Code	Seat Trim	Color	Color Code
A95	Cloth	Jet Black	HOU

- Front cloth and vinyl rear seat combination is available by ordering option 5T5 and requires Jet Black (HOU)
- Console cannot be deleted
- SD card reader not available

REAR SEATS AND INTERIOR TRIM



STANDARD Cloth Second Row 60/40 Split-folding Bench Seat (AT6) Includes folding center armrest with cup holder

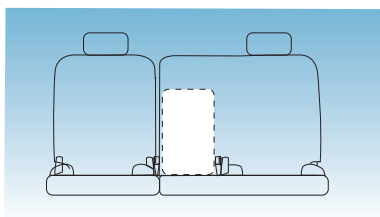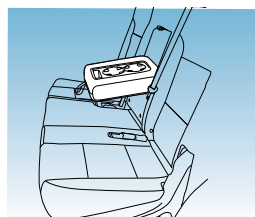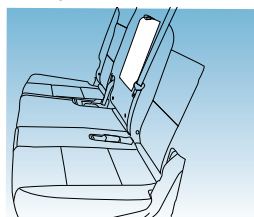

Seat Code	Seat Trim	Color	Color Code
AT6	Cloth	Jet Black	HOU

- Color is based on front seat choice

OPTIONAL - SEO 5T5 VINYL REAR SEAT Vinyl Second Row 60/40 Split-folding Bench Seat (Option 5T5)

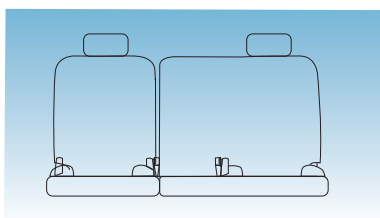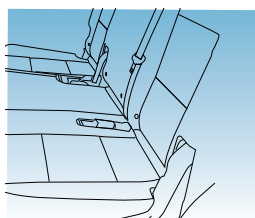

Seat Code	Seat Trim	Color	Color Code
5T5	Vinyl	Jet Black	HOU

- Front cloth and vinyl rear seat combination is available by ordering option 5T5 and requires Jet Black (HOU)

NOTE: Third row seating is not available and roof rail airbags extend into cargo area.

UNITED STATES CERTIFIED SPEEDOMETER/CLUSTER (CANADIAN SIMILAR)



DRIVER INFORMATION CENTER

DIC MAIN MENU

INFO
AUDIO
PHONE
NAVIGATION
OPTIONS

ACTIVE INFO PAGES as listed in
DIC main menu item **OPTIONS** above

- ☒ Speed
- ☒ Trip A
- ☒ Trip B
- ☒ Fuel Range
- ☒ Oil Life
- ☒ Tire Pressure
- ☒ Fuel Economy
- ☒ Timer
- ☒ Engine Hours
- ☒ Transmission Fluid
- ☒ Off-Road
- ☒ Blank Page



STEERING WHEEL MENU CONTROLS

SPEEDOMETER CERTIFICATION CALIBRATION

Specifications at ambient temperature of -10 to 120 degrees F (-23 to 49 Celsius). Inaccuracies due to vehicle speed sensing are included.

ACTUAL VEHICLE SPEED	INDICATED SPEED
0 TO 120 MPH	+/- 2 MPH
0 TO 193 KPH	+/- 3 KPH

The speedometer calibration is for the 5.3L engine, automatic transmission with a 3.08 axle and P265/60R17 V-rated tires

RADIO DISPLAY SCREEN AND RADIO CONTROLS



SETTINGS MENU

Time and Date

Rear Seat Reminder

Language

Valet Mode

Teen Driver

Radio

Vehicle

Climate and Air Quality

Collision/Detection System

Comfort and Convenience

Chime Volume

Auto Wipe in Reverse Gear

Lighting

Vehicle Locator Lights

Exit Lighting

Power Door Locks

Auto Door Lock

Auto Door Unlock

Delayed Door Lock

Bluetooth®

Device Management

Ringtones

Voice Mail Numbers

Text Message Alerts

Apple Carplay

Android Auto

Voice

Display

Calibrate Touchscreen

Turn Display Off

Rear Camera

Guidance Lines

Rear Park Assist Symbols

Return to Factory Settings

Software Information

WiFi

Remote keyless entry/lock feedback and courtesy lighting are programmable through radio menu. Factory default condition for Remote Keyless Entry feedback and exit lighting is enabled in Surveillance Mode (exterior lamps do not flash, horn does not sound).

OPTIONAL EQUIPMENT & FEATURES

INTERIOR

RWU	CARGO AREA ORGANIZER - Collapsible
UTQ	CONTENT THEFT ALARM DISABLE - Flashing lamps and horn warning disable (To avoid inadvertent alarm activation this option is recommended for customers that do not intend on using keyless entry remote fobs)
PCW	ENHANCED DRIVER ALERT PACKAGE - Includes (JF4) Power-adjustable pedals, (UEU) Forward Collision Alert, (TQ5) IntelliBeam headlamps, (UHY) Low Speed Forward Automatic Braking, (UHX) Lane Keep Assist with Lane Departure Warning and Safety Alert Driver Seat
B30	FLOOR COVERING - Color keyed carpeting (includes rear cargo floor)
AAK	FLOOR LINER ALL WEATHER - 1st and 2nd rows, bright finish badge. Requires (B30) color-keyed floor covering. Not available with (VAV) All-weather floor mats.
RIB	FLOOR LINER PACKAGE - All-Weather, includes 1st, 2nd and 3rd row coverage. Requires (B30) color-keyed carpeting floor covering. Not available with (AAK) all-weather floor liner, (VAV) all-weather floor mats.
B58	FLOOR MATS - Color keyed carpeted front and 2nd row included and only available with B30 Floor Covering (not available with vinyl floor covering)
VAV	FLOOR MATS - All weather (Dealer Installed) Requires (B30) floor covering
6E2	KEY COMMON - All vehicles in fleet, provides a single key cut with a specific code that is common to the door lock and ignition of all the vehicles in the vehicle fleet; this key code is an alternate to SEO 6E8 key common, complete vehicle fleet; An unlimited number of ignition keys may be programmed to a vehicle. Not compatible with Caprice or Impala. Not compatible with 2014 or older Tahoe.
6E8	KEY COMMON - All vehicles in fleet, provides a single key cut with a specific code that is common to the door lock and ignition of all the vehicles in the vehicle fleet; this key code is an alternate to SEO 6E2 key common, complete vehicle fleet; An unlimited number of ignition keys may be programmed to a vehicle. Not compatible with Caprice or Impala. Not compatible with 2014 or older Tahoe.
AMF	KEYLESS ENTRY TRANSMITTERS - Fleet Package includes 6 additional transmitters. Transmitters are not programmed. Each transmitter, including the two standard with the vehicle, must be programmed together by the customer or a dealer at customer expense. Transmitter programming is not a warranty item. See programming remote key transmitter instructions. Vehicle specific, common fleet transmitter frequency is not available
5HP	KEYS - 6 additional, keys are not programmed to vehicle. Each key, including the 2 delivered with the vehicle, must be programmed at the same time by the customer or a dealer at customer expense. Key programming is not a warranty item. A maximum of 8 random code keys can be programmed. If a key is lost, all remaining keys must be reprogrammed with the replacement key. (see optional equipment illustrations section)
6C7	LAMP, AUXILIARY DOME - Red and white LED dome lamp is located on the headliner between front row seats. Wired independently from standard dome lamp.
UEO	ONSTAR DELETE - Standard Bluetooth functionality remains. OnStar 4G LTE is deleted when UEO OnStar Delete is ordered
JF4	PEDALS - Power-adjustable for accelerator and brake.
6N6	REAR DOOR LOCKS AND HANDLES INOPERATIVE - Rear power locks are inoperable at rear door but operate from drivers position, rear doors can be opened only from outside the vehicle.
6N5	REAR DOOR WINDOW SWITCHES INOPERATIVE - Rear windows only operate from drivers position
UJS	REAR SEAT DVD ENTERTAINMENT SYSTEM - Includes dual DVD headrests and two analog headphones (dealer-installed). It is "A/D" on PPV 1FL and Special Service 1FL
SFJ	REFLECTIVE WINDOW SHADE
BTV	REMOTE VEHICLE STARTER SYSTEM - Includes remote keyless entry
A95	SEAT & CENTER CONSOLE - Driver and Passenger Front Bucket Cloth Seats, with integrated retail console. 10-way Power Driver and Passenger Seats with Outboard-Seat Back Pelvic Airbag and Driver Inboard Seat Back Airbag. Not recommend for vehicles intended to be up-fitted with aftermarket equipment.
5T5	SEAT - Front cloth with vinyl rear seat (see front seats and interior trim illustration page for description)
9U3	SEAT DELETE FRONT CENTER - 20% center section removed, Power driver and passenger bucket seats in base cloth trim. Derived from RPO (AZ3) 40-20-40 split bench seat with the 20% section removed. Does not include a floor console. All exposed floor area will remain untrimmed. Not available with (A95) Bucket Seats. A separate cable connection kit for the USB, Auxiliary Jack and Auxiliary Power is provided in the vehicle when the center seat section is deleted for installation by customer/upfitter in aftermarket console.
VRS	SHADE - Cargo security

EXTERIOR

B86	BODY SIDE LOWER DOOR MOLDINGS - Body-color. Not available with (TGK) Special paint or (B85) bright bodyside moldings
B85	BODY SIDE LOWER DOOR MOLDINGS - Bright bodyside. Not available with (B86) body-color bodyside moldings
9G8	DELETE DAYTIME RUNNING LAMPS AND AUTOMATIC HEADLAMPS - Exterior lamps are operated manually and automatic headlamps deleted. (See Surveillance Feature Manual Lamp Control in standard illustration section)
5T4	EXTERIOR BODY COLOR PARTS - SEO 5T4 Exterior body colored parts. Victory Red special painted exterior body parts in lieu of glossy Black color normally installed with special painted bodies, Victory Red painted parts will consist of front fascia, rear bumper fascia, rear liftgate handle, and door handles. Mirrors, rear D-pillar appliqué and liftgate spoiler will remain Black. Requires SEO (TGK) special paint solid, special paint color Victory Red WA-9260 and (V76) recovery hooks.
9V2	EXTERIOR BODY COLORED PARTS - Blue WA-5665 applied to front and rear fascia all other non-metal body parts will remain black, same as (TGK) special paint solid. Includes opening in front fascia without recovery hooks (requires TGK special paint solid) Recovery hooks (V76) optional.
6J7	FLASHER SYSTEM HEADLAMPS AND TAIL LAMPS - DRL compatible, headlamp flasher module with control wire to permit separate front and rear lamp flashing
AKP	NON-TINTED GLASS - Solar absorbing (replaces deep-tinted glass on rear doors and cargo area)
VK3	LICENSE PLATE - Front mounting package (included on orders with ship-to states that require front license plate) (see optional equipment illustrations section)
VLG	REAR-FASICA CLOSEOUT Available with (GAN) Silver Ice Metallic, (GAZ) Summit White or (GBA) Black exterior colors. Not available with (S6N) Trailer hitch insert.
V76	RECOVERY HOOKS, BLACK - Two front frame-mounted. Required on all models sold to Alaska, Guam, Hawaii, Puerto Rico and Virgin Islands. All Tahoe 9C1 Police and 5W4 Special Service Vehicles will include front fascia recovery hook openings but does not include the hooks . See optional equipment illustrations section.
TGK	SPECIAL PAINT SOLID - One color all normally body-colored non-sheet metal parts will be gloss Black. This includes front and rear facias, liftgate handle and applique, D-pillars and upper liftgate applique. Mirrors and door handles will be grained Black parts. B85 body-side moldings are not available except with SEO option 5T4 exterior body-colored parts. Required with any SEO paint selection may require extended lead time
VQK	SPLASH GUARDS - Molded black
7X6	SPOTLAMP - Left hand, separately fused, Not available with (7X7) left and right-hand spotlamps (see optional equipment illustrations section)
7X7	SPOTLAMPS - Left and right hand, separately fused (see optional equipment illustrations section)
	NOTE: Factory installation of spotlamps are recommended. Special tooling is used to locate and drill the spotlamp shaft hole in the pillars. (Interior trim covers provided with factory installed lamps are not available as service parts). Field installation of spotlamps must not interfere with proper deployment of the roof rail airbag in the event of a crash.
S6N	TRAILER HITCH INSERT - Black rubber square with a logo that closes out the receiver (see optional equipment illustrations section) (Dealer installed)
Q5U	WHEELS - Bright machined aluminum, 17" x 8" (43.2 cm x 20.3 cm), includes (RM7) 17" x 8" (43.2 cm x 20.3 cm) full-size, steel spare.

ELECTRICAL

WX7	WIRING - For customer connection to front door and windshield pillar speakers. Front speakers are not connected to the vehicle radio; radio audio signals are routed to the rear speakers
6J3	WIRING - For grille lamps and siren speaker
6J4	WIRING - For horn/siren circuit, in-line connection for customer furnished switch
UT7	GROUND STUDS - Two interior mounted left and right side M10 studs in cargo area. Driver side includes 5 feet of 8 gauge ground wire.

CHASSIS

1LR	BRAKE SYSTEM, CITY - Modified Police City Brake Package. Uses base friction material that wears better at lower temperatures and city service. The city brakes are not optimal for track performance. The front rotors are Duralife but do not have the radial drilled holes. The parts are physically interchangeable for service, however the parts should be substituted as complete four wheel sets.
R9Y	FLEET FREE MAINTENANCE CREDIT - This option code provides a credit in lieu of the free oil changes, tire rotations and inspections (2 maximum), during the first 24 months and 24,000 miles period for this ordered vehicle. The invoice will detail the applicable credit. The Customer will be responsible for all oil changes, tire rotations and inspections cost for this vehicle. NOTE: Dealer is unable to credit customer on vehicles not originally ordered with (R9Y) option.
K05	HEATER - Engine block
9C1	IDENTIFIER FOR PPV - Includes (K47) high-capacity air cleaner, (KW7) 170 amp high output alternator, (K4B) 730 cold-cranking amps auxiliary battery, electrical power & vehicle signals for customer connection located at the center front floor. Auxiliary battery circuit for customer connection located in the rear cargo area, (UN9) radio suppression package, (Z56) heavy-duty, police-rated suspension, front independent torsion bar, and stabilizer bar and rear, multilink with coil springs, (QAR) P265/60R17 all-season, v-rated tires, (ZAK) P265/60R17 all-season, V-rated spare tire, Police brakes, (NZZ) underbody shield, (RAP) Black steel wheels w/bolt on center caps, Certified speedometer, delete roof rails, (ATD) third row seat delete, (NQH) active 2-speed transfer case (4WD only).



ONSTAR®, 4G LTE WITH Wi-Fi and SIRIUS XM RADIO AVAILABILITY

Impala 1FL Tahoe 9C1 Tahoe SSV Suburban 1FL Suburban 3500HD Silverado SSV Cargo Van Passenger Van

ONSTAR® SERVICE PLANS

Basic Plan	S	S	S	S	S	O*	S	S
UE1	S	S	S	S	S	O	S	S
VV4	S	S	S	S	S	O	S	S
PQF	O	O	O	O	O	O	O	O
PQG	O	O	O	O	O	O	O	O
PQH	O	O	O	O	O	O	O	O
PQI	O	O	O	O	O	O	O	O
PQL	O	O	O	O	O	O	O	O
PQM	O	O	O	O	O	O	O	O
PQP	O	O	O	O	O	O	O	O
PQQ	O	O	O	O	O	O	O	O
PQT	O	O	O	O	O	O	O	O
PRD	O	O	O	O	O	O	O	O
PRE	O	O	O	O	O	O	O	O
PRF	O	O	O	O	O	O	O	O
UEO - ONSTAR® Delete	N/A	O	O	O	N/A	N/A	O	O

* Included when UE1 is ordered

ONSTAR® 4G LTE WITH Wi-Fi SERVICE PLANS

ROV	O	O	O	O	O	O	O	O
ROW	O	O	O	O	O	O	O	O

SIRIUS XM SATELLITE RADIO

U2K	S	N/A	N/A	N/A	S	S	O	O
PR6	O	N/A	N/A	N/A	O	O	O	O
PR7	O	N/A	N/A	N/A	O	O	O	O
PR8	O	N/A	N/A	N/A	O	O	O	O

GM COMMERCIAL LINK

POG	O	O	O	O	O	O	O	O
POH	O	O	O	O	O	O	O	O
POI	O	O	O	O	O	O	O	O

S = Standard

O = Optional

N/A = Not Available

Description of option codes attached or spinning the wheels with chains on will damage the vehicle.



ONSTAR® SERVICE PLANS

ONSTAR® BASIC PLAN FOR 5 YEARS

Includes limited vehicle mobile app features, Monthly Diagnostics Report and Dealer Maintenance Notification. Basic Plan available for 5 years from the date of vehicle delivery and is transferable. Does not include Emergency, Security or Navigation services.

UE1 - ONSTAR® GUIDANCE PLAN FOR 6 MONTHS

Includes Automatic Crash Response, Stolen Vehicle Assistance, Roadside Assistance, Turn-by-Turn Navigation, Advanced Diagnostics and more (trial excludes Hands-Free Calling minutes). Visit www.ONSTAR.com for coverage map, details and system limitations. Services vary by model. ONSTAR® acts as a link to existing emergency service providers. Not all vehicles may transmit all crash data.

VV4 - ONSTAR® 4G LTE

Available built-in Wi-Fi hotspot offers a fast and reliable Internet connection for up to 7 devices; includes data trial for 3 months or 3GB (whichever comes first). Requires (UE1) ONSTAR® Guidance plan. Available Wi-Fi requires compatible mobile device, active ONSTAR® service and data plan. Data plans provided by AT&T. Visit ONSTAR.com for details and system limitations.

PQF - ONSTAR® 6 MONTHS OF ONSTAR® PROTECTION SERVICE

Provides 6 months of Protection service in addition to the 6 months of standard Guidance Plan trial service that is included in the price of the vehicle (trial excludes Hands-Free Calling minutes). Total service duration is 12 months. Requires UE1 ONSTAR®. Requires one of the following Fleet or Government order types: FLS, FNR, FRC, FBC, FGO or FEF. Not available with PQI, PQL, PQM, PQP, PQQ, PQT, PRE and PRF. Not available with a ship-to of Puerto Rico or the Virgin Islands. Available to order in addition to PQG, PQH or PRD.

PQG - ONSTAR® 18 MONTHS OF ONSTAR® PROTECTION SERVICE

Provides 18 months of Protection service in addition to the 6 months of standard Guidance Plan trial service that is included in the price of the vehicle (trial excludes Hands-Free Calling minutes). Total service duration is 24 months. Requires UE1 ONSTAR®. Requires one of the following Fleet or Government order types: FLS, FNR, FRC, FBC, FGO or FEF. Not available with PQI, PQL, PQM, PQP, PQQ, PQT, PRE and PRF. Not available with a ship-to of Puerto Rico or the Virgin Islands. Available to order in addition to PQF, PQH or PRD.

PQH - ONSTAR® 30 MONTHS OF ONSTAR® PROTECTION SERVICE

Provides 30 months of Protection service in addition to the 6 months of standard Guidance Plan trial service that is included in the price of the vehicle (trial excludes Hands-Free Calling minutes). Total service duration is 36 months. Requires UE1 ONSTAR®. Requires one of the following Fleet or Government order types: FLS, FNR, FRC, FBC, FGO or FEF. Not available with PQI, PQL, PQM, PQP, PQQ, PQT, PRE and PRF. Not available with a ship-to of Puerto Rico or the Virgin Islands. Available to order in addition to PQF, PQG or PRD.

PQI - ONSTAR® 6 MONTHS OF ONSTAR® SECURITY SERVICE

Provides 6 months of Security service in addition to the 6 months of standard Guidance Plan trial. Requires UE1 ONSTAR®. Requires one of the following Fleet or Government order types: FLS, FNR, FRC, FBC, FGO or FEF. Not available with PQF, PQG, PQH, PQP, PQQ, PQT service that is included in the price of the vehicle (trial excludes Hands-Free Calling minutes). Total service duration is 12 months. PRD and PRF. Not available with a ship-to of Puerto Rico or the Virgin Islands. Available to order in addition to PQL, PQM or PRE.

PQL - ONSTAR® 18 MONTHS OF ONSTAR® SECURITY SERVICE

Provides 18 months of Security service in addition to the 6 months of standard Guidance Plan trial service that is included in the price of the vehicle (trial excludes Hands-Free Calling minutes). Total service duration is 24 months. Requires UE1 ONSTAR®. Requires one of the following Fleet or Government order types: FLS, FNR, FRC, FBC, FGO or FEF. Not available with PQF, PQG, PQH, PQP, PQQ, PQT, PRD and PRF. Not available with a ship-to of Puerto Rico or the Virgin Islands. Available to order in addition to PQI, PQM or PRE.

PQM - ONSTAR® 30 MONTHS OF ONSTAR® SECURITY SERVICE

Provides 30 months of Security service in addition to the 6 months of standard Guidance Plan trial service that is included in the price of the vehicle (trial excludes Hands-Free Calling minutes). Total service duration is 36 months. Requires UE1 ONSTAR®. Requires one of the following Fleet or Government order types: FLS, FNR, FRC, FBC, FGO or FEF. Not available with PQF, PQG, PQH, PQP, PQQ, PQT, PRD and PRF. Not available with a ship-to of Puerto Rico or the Virgin Islands. Available to order in addition to PQI, PQL or PRE.

PQP - ONSTAR® ADDITIONAL 6 MONTHS OF ONSTAR® FLEET GUIDANCE SERVICE

Provides 6 months of Fleet Guidance service in addition to the 6 months of standard Guidance Plan trial service that is included in the price of the vehicle (plan excludes Hands-Free Calling minutes). Total service duration is 12 months. Requires UE1 ONSTAR®. Requires one of the following Fleet or Government order types: FLS, FNR, FRC, FBC, FGO or FEF. Not available with PQF, PQG, PQH, PQI, PQL, PQM, PRD and PRE. Not available with a ship-to of Puerto Rico or the Virgin Islands. Available to order in addition to PQQ, PQT or PRF.

PQQ - ONSTAR® ADDITIONAL 18 MONTHS OF ONSTAR® FLEET GUIDANCE SERVICE

Provides 18 months of Fleet Guidance service in addition to the 6 months of standard Guidance Plan trial service that is included in the price of the vehicle (plan excludes Hands-Free Calling minutes). Total service duration is 24 months. Requires UE1 ONSTAR®. Requires one of the following Fleet or Government order types: FLS, FNR, FRC, FBC, FGO or FEF. Not available with PQF, PQG, PQH, PQI, PQL, PQM, PRD and PRE. Not available with a ship-to of Puerto Rico or the Virgin Islands. Available to order in addition to PQP, PQT or PRF.

PQT - ONSTAR® ADDITIONAL 30 MONTHS OF ONSTAR® FLEET GUIDANCE SERVICE

Provides 30 months of Guidance service in addition to the 6 months of standard Guidance Plan trial service that is included in the price of the vehicle (plan excludes Hands-Free Calling minutes). Total service duration is 36 months. Requires UE1 ONSTAR®. Requires one of the following Fleet or Government order types: FLS, FNR, FRC, FBC, FGO or FEF. Not available with PQF, PQG, PQH, PQI, PQL, PQM, PRD and PRE. Not available with a ship-to of Puerto Rico or the Virgin Islands. Available to order in addition to PQP, PQQ or PRF.



ONSTAR® SERVICE PLANS (CONTINUED)

PRD - ONSTAR® 42 MONTHS OF ONSTAR® PROTECTION SERVICE

Provides 42 months of Protection service in addition to the 6 months of standard Guidance plan trial service that is included in the price of the vehicle (trial excludes Hands-Free Calling minutes). Total service duration is 48 months. Requires UE1 ONSTAR®. Requires one of the following Fleet or Government order types: FLS, FNR, FRC, FBC, FGO or FEF. Not available with PQI, PQL, PQM, PQP, PQQ, PQT, PRE and PRF. Not available with a ship-to of Puerto Rico or the Virgin Islands. Available to order in addition to PQF, PQG or PQH.

PRE - ONSTAR® 42 MONTHS OF ONSTAR® SECURITY SERVICE

Provides 42 months of Security service in addition to the 6 months of standard Guidance plan trial service that is included in the price of the vehicle (trial excludes Hands-Free Calling minutes). Total service duration is 48 months. Requires UE1 ONSTAR®. Requires one of the following Fleet or Government order types: FLS, FNR, FRC, FBC, FGO or FEF. Not available with PQF, PQG, PQH, PQP, PQQ, PQT, PRD and PRF. Not available with a ship-to of Puerto Rico or the Virgin Islands. Available to order in addition to PQI, PQL or PQM.

PRF - ONSTAR® ADDITIONAL 42 MONTHS OF ONSTAR® FLEET GUIDANCE SERVICE

Provides 42 months of Guidance service in addition to the 6 months of standard Guidance plan trial service that is included in the price of the vehicle (trial and plan excludes Hands-Free Calling minutes). Total service duration is 48 months. Requires UE1 ONSTAR®. Requires one of the following Fleet or Government order types: FLS, FNR, FRC, FBC, FGO or FEF. Not available with PQF, PQG, PQH, PQI, PQL, PQM, PRD and PRE. Not available with a ship-to of Puerto Rico or the Virgin Islands. Available to order in addition to PQP, PQQ or PQT.

UE0 - ONSTAR®, DELETE

Wi-Fi SERVICE PLANS

ROV - ONSTAR® WITH 4G LTE FOR FLEET (20GB/12 MONTHS)

Provides a built-in Wi-Fi hotspot to connect to the internet at 4G LTE speeds, includes AT&T 12GB data plan good for 12 months. 1 - Requires (UE1) ONSTAR® and (VV4) ONSTAR® with 4G LTE and one of the following order types FLS, FNR, FRC, FBC, FGO or FEF. Not available with ROW. Visit www.ONSTAR.com for vehicle availability, details and system limitations. Services and connectivity may vary by model and conditions. 4G LTE service available in select markets. 4G LTE performance based on industry averages and vehicle systems design. Some services require data plan.

ROW - ONSTAR® WITH 4G LTE FOR FLEET (36GB/24 MONTHS)

Provides a built-in Wi-Fi hotspot to connect to the internet at 4G LTE speeds, includes AT&T 24GB data plan good for 24 months. Requires (UE1) ONSTAR® and (VV4) ONSTAR® with 4G LTE and one of the following order types: FLS, FNR, FRC, FBC, FGO or FEF. Not available with ROV. Visit www.ONSTAR.com for vehicle availability, details and system limitations. Services and connectivity may vary by model and conditions. 4G LTE service available in select markets. 4G LTE performance based on industry averages and vehicle systems design. Some services require data plan.

GM COMMERCIAL LINK

POG GM COMMERCIAL LINK 1 YEAR OF SERVICE - Includes 12 months of GM Commercial Link service. Provides access and reporting for key vehicle information such as speed, location and maintenance through website and mobile application. Eligible customers must sign up for an account at www.gmcommerciallink.com in order take advantage of this 12 month offer. The Commercial Link service is included in the price of the vehicle. Total service duration is 12 months. Non-Transferrable. Non-Refundable. Requires UE1 OnStar. Requires one of the following Fleet or Government order types: FLS, FNR, FRC, FBC, FGO or FEF. Not available with (POH) GM Commercial Link - 2 years of Service or (POI) GM Commercial Link - 3 years of Service.

POH GM COMMERCIAL LINK 2 YEARS OF SERVICE - Includes 24 months of GM Commercial Link service. Provides access and reporting for key vehicle information such as speed, location and maintenance through website and mobile application. Eligible customers must sign up for an account at www.gmcommerciallink.com in order take advantage of this 24 month offer. The Commercial Link service is included in the price of the vehicle. Total service duration is 24 months. Non-Transferrable. Non-Refundable. Requires UE1 OnStar. Requires one of the following Fleet or Government order types: FLS, FNR, FRC, FBC, FGO or FEF. Not available with (POG) GM Commercial Link - 1 year of Service or (POI) GM Commercial Link - 3 years of Service.

POI GM COMMERCIAL LINK 3 YEARS OF SERVICE - Includes 36 months of GM Commercial Link service. Provides access and reporting for key vehicle information such as speed, location and maintenance through website and mobile application. Eligible customers must sign up for an account at www.gmcommerciallink.com in order take advantage of this 36 month offer. The Commercial Link service is included in the price of the vehicle. Total service duration is 36 months. Non-Transferrable. Non-Refundable. Requires UE1 OnStar. Requires one of the following Fleet or Government order types: FLS, FNR, FRC, FBC, FGO or FEF. Not available with (POG) GM Commercial Link - 1 year of Service or (POH) GM Commercial Link - 2 years of Service.

SPECIFICATIONS

Specifications shown are for Police and Special Service Vehicles only which differ from retail civilian models

GENERAL

Model	CK15706
Drive	4-wheel
Projected top speed (without equipment)	121 mph
Projected top speed in reverse (without equipment)	49 mph

NOTE: Adding non dealer accessories or making modifications to the vehicle can affect vehicle performance, aerodynamics, and overall top speed

EXTERIOR (in./mm)

Wheelbase	116.0/2946
Overall length	204.0/5182
Body width (without mirrors)	80.5/2045
Overall height*	72.4/1839
Lift in height* (Top of load floor to ground)	35.9/912
Step-in height	22.0/559
Front track width	68.7/1745
Rear track width	68.7/1744
Turning diameter curb to curb (ft./m)	39.3/999
Ground clearance* (rear axle)	8.5/216
Air intake height*	37.4/950

*Published dimensions indicated are at Base Curb Weight

FRONT COMPARTMENT (in./mm)

Head room (Maximum)	42.8/1087
Shoulder room	64.8/1646
Hip room	60.8/1544
Leg room (Maximum)	45.3/1151

REAR COMPARTMENT (in./mm)

Head room	38.7/983
Shoulder room	65.1/1654
Hip room	60.2/1529
Leg room	39.0/991

CARGO

Load floor length to center of front seat at floor (in./mm)	79.9/2029
Load floor length to center of 2nd seat at floor at seat (in./mm)	43.2/1097
Inside width between wheel house (in./mm)	49.3/1252
Cargo area height (in./mm)	40.9/1039
Cargo volume ¹ maximum behind front seat (cu. ft./liters)	112.1/3174
Cargo volume ¹ maximum behind second seat (cu. ft./liters)	54.0/1530

NOTE: For additional dimensional data go to: gmupfitter.com

PASSENGER COMPARTMENT

VOLUME INDEX (cu.ft./liters)

Passenger compartment volume index	120.7/3418
------------------------------------	------------

FUEL ECONOMY RATINGS (CITY/HIGHWAY/COMBINED)

5.3L engine 4WD	16/22/18
-----------------	----------

NOTE: EPA estimated MPG label values. Actual mileage will vary with options, driving conditions, driving habits and vehicle condition.

VEHICLE WEIGHT (lbs./kg.)

Seat Type	40/20/40	40/40
	Standard	Optional
GVWR ³ (Gross Vehicle Weight Rating)	7100/3221	7100/3221
FGAWR (Front Gross Axle Weight Rating)	3500/1588	3500/1588
RGAWR (Rear Gross Axle Weight Rating)	3800/1724	3800/1724
Base curb weight ⁴	5480/2486	5442/2468
Payload ⁵	1590/721	1628/738
Max. Trailer Towing ⁶	4000/1814	4000/1814

NOTE: See owner's manual supplement for loading information

- Cargo and load capacity limited by weight and distribution.
- Gross Vehicle Weight Rating (GVWR). When properly equipped, includes vehicle, passengers, cargo and equipment.
- Vehicle weight in operational status with 100% fuel, fluids to factory fill, and standard base equipment. Does not include driver, passenger or optional content.
- These maximum payload ratings are intended for comparison purposes only. Before you buy a vehicle or use it to haul people or cargo, carefully review the vehicle loading section of the Owner's Manual and check the carrying capacity of your specific vehicle on the label on the inside of the driver's door jamb.
- Maximum Trailer Towing ratings are calculated assuming a minimally equipped vehicle plus options necessary to achieve the rating plus driver. The weight of other optional equipment, passengers and cargo will reduce the Maximum Trailer Towing your vehicle can tow. See Order Guide for additional information.

SPECIFICATIONS

Specifications shown are for Police and Special Service Vehicles only which differ from retail civilian models

ENGINE	STANDARD
Type	EcoTec3 V8
Displacement: liters/cu. in.	5.3/325
Horsepower/rpm	355 @ 5600
Torque lb.-ft./rpm	383 @ 4100
Induction system	Direct Injection
Compression ratio	11.0:1
Exhaust	Single
Minimum recommended fuel octane	87
Fuel tank capacity (gallons/liters)	26/98
Oil with filter (quarts/liters)	8.0/7.6
Cooling capacity (quarts/liters)	18.1/17.1

TRANSMISSION	
Automatic electronic with overdrive	6-speed
Fluid pan removed and filter replaced (quarts/liters)	6.0/5.7

AXLE	
Ratio	3.08

BRAKES	
ABS with vacuum-boost	Disc/Disc
Front-swept area (sq. in./sq. cm)	256.6/1655
Rear-swept area (sq. in./sq. cm)	248/1600
Total front and rear swept area (sq. in./sq. cm)	504.6/3255
Front rotor diameter (in./mm)	13.0/330
Rear rotor diameter (in./mm)	13.5/345
Front rotor thickness (in./mm)	1.2/30
Rear rotor thickness (in./mm)	.79/20

TIRES	
Type	Goodyear V-rated all-season
Size	P265/60R17


WHEELS	
Type	Steel
Size	17" x 8"

CHASSIS	
Frame	Full perimeter steel
Front suspension	SLA (Short Long Arm) with coil over shock and stabilizer bar
Rear suspension	Multi-link, coil springs and stabilizer bar
Steering type	Electric power-assisted rack and pinion
Steering ratio	17.75:1

BATTERIES	PRIMARY	AUXILIARY
Type	Maintenance free	Maintenance free
BCI group size	LN4	LN3
Volts	12	12
Amp hour rating	80	70
Cold cranking-amps @ 0°F (-18°C)	720	730


ALTERNATOR	
Type	Denso SC3
Amps	77°F (25°C) 170

TAHOE POLICE ALTERNATOR OUTPUT

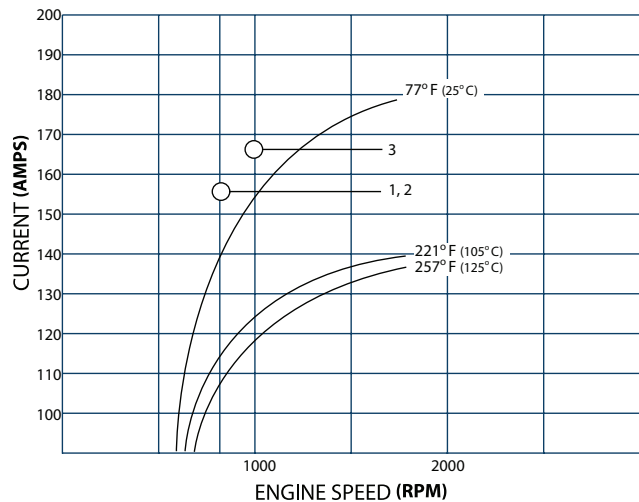


BOOST LEVEL	PARK/NEUTRAL	DRIVE
Normal Idle	550	500
1	800	650
2	800	725
3	1000	800

DIMENSIONS

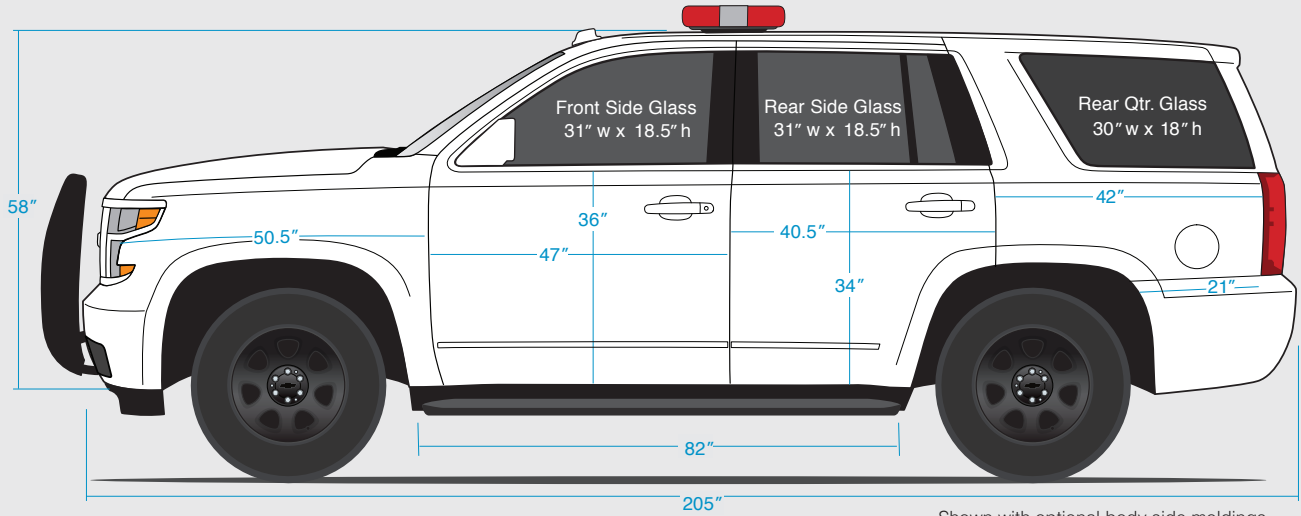


Shown with optional body side moldings

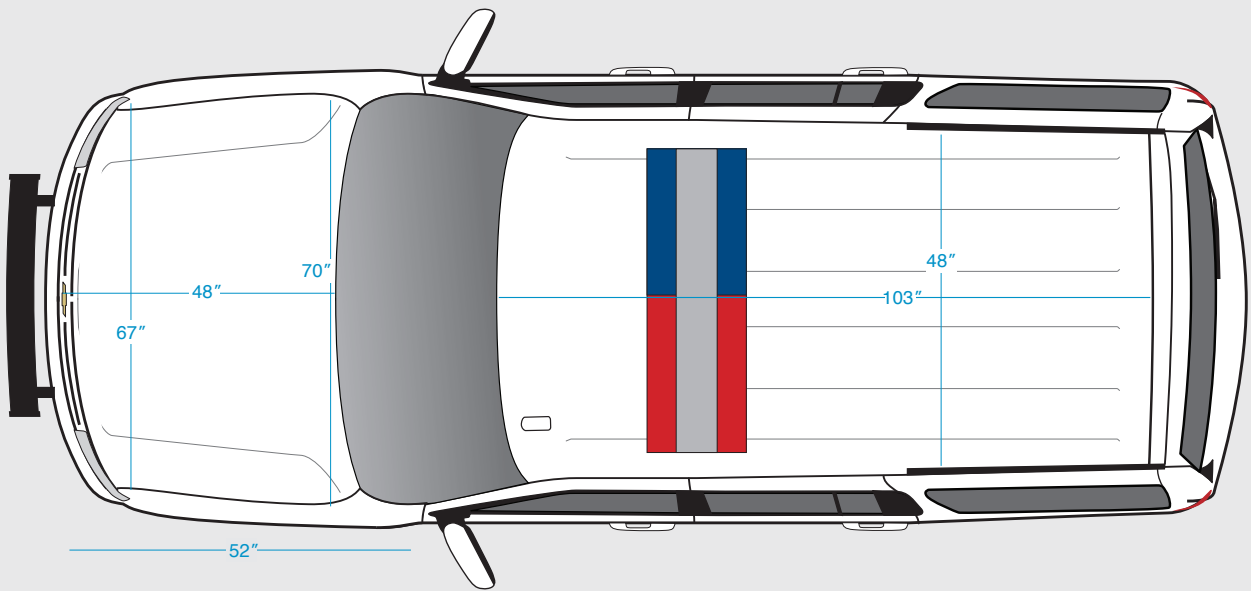

Estimated material sizes to wrap:

- Hood – 72" x 52"
- Front Doors – 50" x 38"
- Rear Doors – 42" x 36"
- Roof – 110" x 55"
- Rear hatch – 63" x 26"

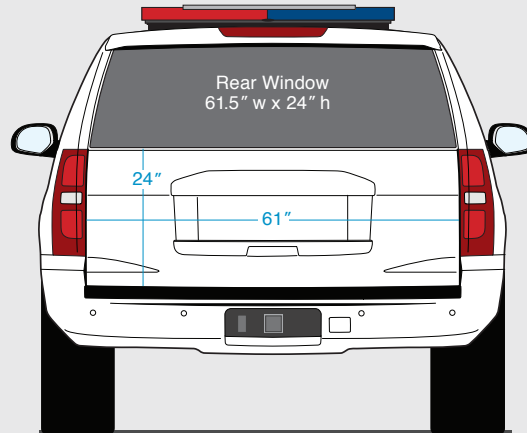

VEHICLE LOAD LIMITS

This information is intended for those who intend to install additional equipment on the police vehicle after it has left the factory, and for those who will be driving and loading the vehicle with passengers and/or cargo. Two labels on your vehicle show how much weight it was designed to carry, the Tire and Loading Information label and the Certification/Tire label. These labels are attached to your vehicle and give you the maximum load capacity, the Gross Vehicle Weight Rating (GVWR) and the Gross Axle Weight Rating (GAWR) for your vehicle. See "Vehicle Load Limits" in the owner manual Index for additional loading information.

The following guidelines can help you with proper loading and load distribution when installing additional equipment on the Tahoe Police Package.

WARNING

DO NOT LOAD THE VEHICLE ANY HEAVIER THAN THE GROSS VEHICLE WEIGHT RATING (GVWR), NOR EITHER THE MAXIMUM FRONT OR REAR GROSS AXLE WEIGHT RATING (GAWR). THIS CAN CAUSE SYSTEMS TO BREAK AND CHANGE THE WAY THE VEHICLE HANDLES. THIS COULD CAUSE LOSS OF CONTROL AND A CRASH. OVERLOADING CAN ALSO SHORTEN THE LIFE OF THE VEHICLE.

ADDING EQUIPMENT TO YOUR VEHICLE

Before adding accessories or equipment to your police vehicle, there are some things you need to know

- The police vehicle's maximum capacity weight (payload). The weight of your police vehicle, including a full tank of fuel but without a driver and passengers.
- The weight of items you plan on adding to your police vehicle, like roof mounted light bar(s), push bumpers, security barrier(s), rear storage organizer, highway flares, fire extinguishers, weapons, ammunition, radios, and video equipment.
- The weight and number of passengers you intend to carry in your vehicle.
- The total weight of any additional cargo you intend to carry in your vehicle.

When planning your vehicle equipment installation remember not to exceed the Gross Vehicle Weight Rating (GVWR) or the Gross Axle Weight Rating (GAWR) of the front or rear axles. To keep the available load weight less than the vehicle capacity weight, you may need to limit the number of passengers you carry in your vehicle or change your choice of additional equipment. Towing a trailer may change the vehicle payload capacity.

CENTER OF GRAVITY (CG)

A vehicle's center of gravity is an imaginary location inside the vehicle and is a balance point for the vehicle mass as it moves down the road. The police vehicle's center of gravity, before you add a load and passengers, is approximately midway between the center of the axles, up from the ground to just below the front window, and between the driver and passenger. Equipment location and weight on the vehicle's center of gravity is important to keep in mind when planning an installation. Heavy equipment should be positioned as low and as far forward in the rear load compartment as possible. Try to mount the equipment below the bottom of the side windows. Refer to the Loading Zone chart and diagram to help with your installation plan.

A procedure to make the necessary measurements and formulas to calculate the vehicle longitudinal, lateral and vertical position of the center of gravity can be found in the GM Coachbuilders Manual.

Equipment required to conduct the measurements for calculating the center of gravity are:

- Weight scales of sufficient capacity to measure the vehicle weight at each wheel.
- A post type hoist or other means to safely elevate the front of the vehicle to at least an angle of 20 degrees above horizontal.

See your GM dealer to get more information about this coachbuilder procedure.


Keeping the center of gravity midway between the axles is also important to provide proper braking performance. About half the total vehicle weight on each axle is recommended.

Weigh your vehicle after the additional equipment has been installed to determine the actual weight of your vehicle. Weigh the vehicle with a full tank of fuel and without passengers. You may need to put a limit on how many people or other equipment you can carry inside your vehicle after the additional equipment has been installed.

Note: See loading zone weight chart and diagram

LOADING ZONES

Loading zones for customer installed equipment and cargo with six occupants
Refer to your vehicle tire placard for Vehicle Seating Capacity and Payload Capacity (Occupants + Cargo) Weight

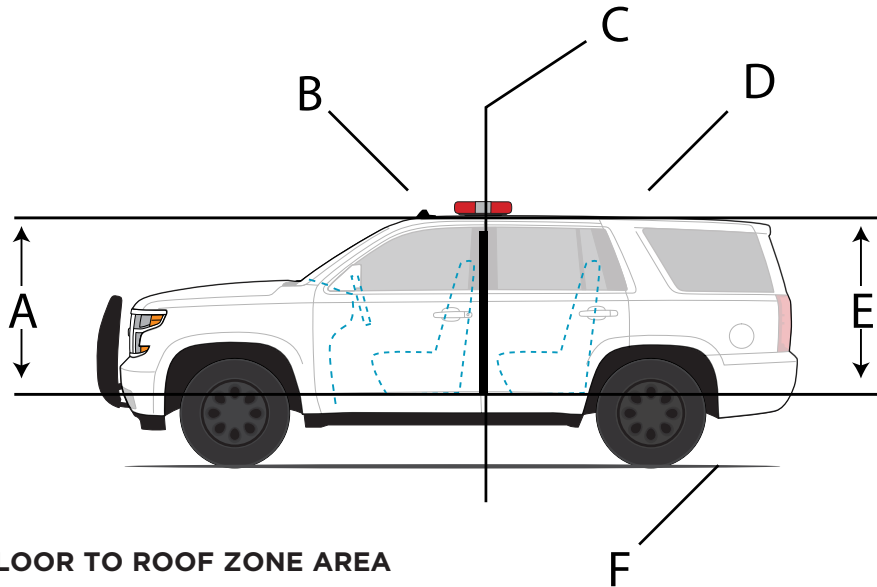

- A. FRONT FLOOR TO ROOF ZONE AREA
- B. FRONT ROOF ZONE AREA
- C. BACK OF FRONT DOOR
- D. REAR ROOF ZONE AREA
- E. REAR FLOOR TO ROOF ZONE AREA
- F. GROUND

LOADING ZONE WEIGHT CHART TAHOE POLICE PACKAGE 4WD 9C1

LOADING ZONES	FRONT AXLE WEIGHT	REAR AXLE WEIGHT	TOTAL
ROOF	25 LBS (11 kg)	34 LBS (15 kg)	59 LBS (26 kg)
FLOOR TO ROOF	91 LBS (41 kg)	360 LBS (163 kg)	451 LBS (204 kg)
TOTAL	116 LBS (52 kg)	394 LBS (178 kg)	510 LBS (230 kg)

NOTE:

CARGO WEIGHT CAN BE GREATER WITH FEWER OCCUPANTS. TOWING A TRAILER MAY CHANGE VEHICLE PAYLOAD

REFER TO YOUR OWNER'S MANUAL SUPPLEMENT FOR DETERMINING MAXIMUM CARGO LOADING AND POSITIONING.

USING HEAVIER SUSPENSION COMPONENTS TO GET ADDED DURABILITY MIGHT NOT CHANGE YOUR WEIGHT RATINGS AND MAY AFFECT THE VEHICLE PERFORMANCE AND HANDLING CHARACTERISTICS.

HIGH SPEED OPERATIONS SHOULD NOT BE ATTEMPTED WITH AN IMPROPERLY OR OVERLOADED VEHICLE OR WHILE TOWING A TRAILER.

YOUR GM DEALER CAN PROVIDE HELP WITH PROPERLY LOADING YOUR VEHICLE.

STANDARD WHEEL



Goodyear P265/60R17 V-rated all season tire mounted on 8.5" black steel wheel with bolted on center cap and matching spare wheel.

OPTIONAL WHEEL



Goodyear P265/60R17 V-rated all season tire mounted on aluminum wheel. Full size spare tire mounted on black steel wheel (does not include center cap).

STANDARD EQUIPMENT

WIRING PROVISIONS FOR 12-VOLT BATTERY POWER SUPPLY

The vehicle is equipped with wiring provisions for connecting 12-volt battery power to customer installed equipment. Refer to the following information when adding electrical accessories that will use the 12-volt power supply circuits connected to the vehicle's electrical system. A wiring harness is located below the instrument panel (IP) near the center of the vehicle and another connection point is located in the left rear of the cargo area.

The 12-volt battery power for customer connection is supplied from the Primary vehicle battery via control relays to four blunt cut 30-amp circuit wires and from an Auxiliary battery via one blunt cut 50 -amp circuit wire in the harness under the center IP. A blunt cut ground wire is also included in the front harness. A 100-amp Rear Electrical Center (REC) stud is located in the left rear cargo area.

The Primary battery is located at the right rear of the engine compartment and the Auxiliary Battery is located at the left front of the engine compartment. The Auxiliary Battery is connected to the vehicle charging system via a relay which is closed when the ignition is ON.

Four 30-amp control relays and 30-amp fuses are located in the Underhood Electrical Center (UEC).

Also in the UEC are two 5-amp fuses which connect control relay coils 1 & 2 and control relay coils 3 & 4 to the UEC primary battery bus. Refer to the UEC label showing the 5-amp fuse locations 69 and 77, labeled "R/C" for Run/Crank power and locations 70 and 78, labeled "V/Batt" for primary battery power.

The 5-amp fuses for the control relays can be positioned to operate all relays from the ignition buss or primary battery buss or one pair on ignition and one pair on battery. See also Bulletin #118 at gmupfitter.com.

The four control relays are operated via separate blunt-cut wires located in the harness under the instrument panel and are intended to be connected via customer switching to vehicle ground.

Blunt cut ignition control and signal wires are also in the harnesses under the center IP and between the front seats.

The auxiliary power control relay control wires and the relay contact 30-amp load side wires for customer connection are identified as follows:

Control Relay Ground control wires:

- Red/White...Control relay 1
- Yellow/White...Control relay 2
- Green/Grey...Control relay 3
- White/Blue...Control relay 4


12-volt, 30-amp load wires:

- Blue...Control relay 1
- Grey/Black...Control relay 2
- Yellow/Brown...Control relay 3
- Red/Green...Control relay 4
- A Violet/Yellow circuit wire, hot in ACCESSORY/RUN. This circuit is also provided in a coil in the cargo area near the REC.
- A Violet/White circuit wire, Hot in RUN/CRANK. This circuit is also provided in a coil in the cargo area near the REC.
- A Yellow/Black circuit wire, transmission in Park signal. The circuit provides switched 12-volt power when the transmission control is in Park and the engine is running. The circuit is at 0 volts when the transmission control is in any other position, i.e., R, N, D, L. Note that the circuit is at 12-volts when the transmission is in Park and the ignition is in LOCK/OFF. To avoid the possibility of undesired parasitic electrical load when the ignition is OFF, it is recommended that the Park Signal circuit be isolated by a customer furnished ignition control relay.
- A Green/Gray circuit wire for Vehicle Speed signal providing 4000 pulses per mile. The vehicle Electronic Brake Control Module (ECBM) Vehicle Speed Signal (VSS) output circuitry does not include a logic pull-up resistance. If a pull-up resistance is not part of the customer equipment VSS input connection circuitry, a 5000 ohm resistor can be connected between the vehicle VSS circuit wire and vehicle battery power.
- A White/Blue circuit wire for 12-volts when the Service Brakes are applied.
- Blue/White wire provides a pulsating 12 volt signal when a left turn is selected
- A Yellow/Gray wire provides a pulsating 12 volt signal when a right turn is selected
- All automatic lighting can be disabled when a ground is applied via a customer-furnished wire terminated in BCM connector X2, terminal 18

A 100-amp battery voltage stud for customer connection is located in the REC at the left rear of the cargo area. The ACCESSORY/RUN (Violet/Yellow) and RUN/CRANK (Violet/White) circuits are coiled near the REC.


NOTE : Vehicles equipped with (A95) Bucket Seats will have to remove trim to access wiring

AUXILIARY BATTERY POWER REAR ELECTRICAL CENTER

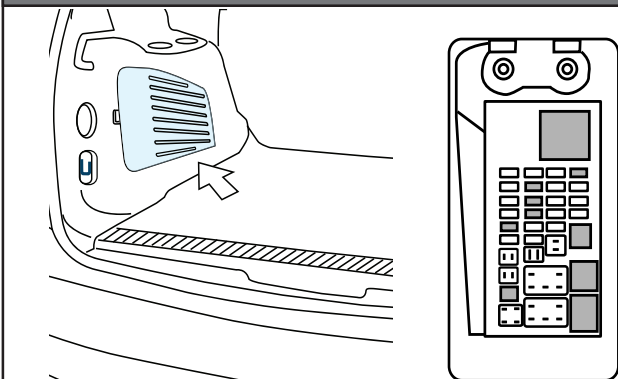

A 100-amp battery voltage stud is located in the Rear Electrical Center (REC) at the left rear of the cargo area. Removal of the vented trim cover in the lower left quarter trim panel provides access to the REC, located to the rear of the jack storage compartment. A blunt cut ACCESSORY/RUN (Violet/Yellow) circuit wire and a blunt cut RUN/CRANK (Violet/White) circuit wire are coiled near the REC. The nut on the power stud must be torqued to 9Nm+0.5 when attaching other wires to the stud. The stud adjacent to the rear of the 100 amp power stud is inactive.

TIRE PRESSURE MONITOR WITH TIRE FILL ALERT

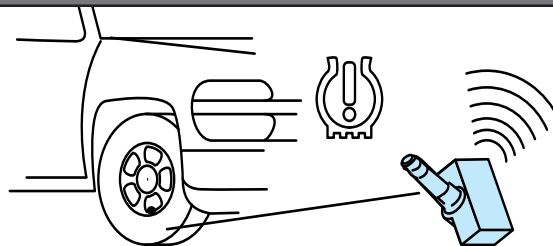


The Tahoe Police Package is equipped with Tire Pressure Monitor System (TPMS) which warns of low tire pressure. The Tahoe Police Package has a full size spare tire with a TPMS sensor which does not read spare tire pressure. When the spare tire from your vehicle or an unused spare tire from another Police Package is placed in use as a road wheel, the system will not read the presence of the new TPM sensor and must be calibrated. Refer to your owner's manual for additional information the Tire Pressure Monitor System Programming.

Tire Fill Alert in addition to the DIC warning when a tire has low pressure, this feature provides audible and visual indication when air is being added to the low tire to aid in achieving optimal tire pressure.

STANDARD EQUIPMENT

RADIO SUPPRESSION GROUND STRAPS

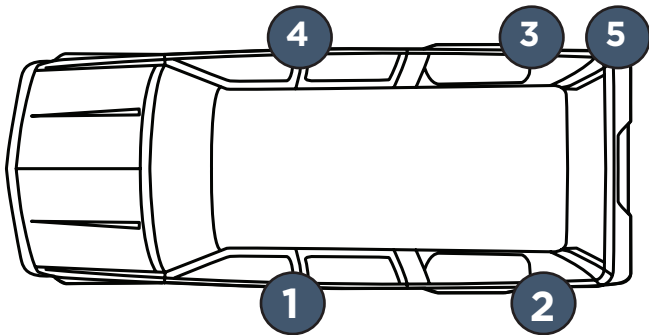

Police Package is equipped with additional grounding in the following locations:


1. Left hand front frame body mount bracket to underbody
2. Left hand rear frame body mount bracket to rear underbody
3. Right hand rear frame body mount bracket to rear underbody
4. Right hand front frame body mount bracket to underbody
5. Exhaust pipe hanger rod to rear frame hanger

SERVICE PARTS IDENTIFICATION LABEL

SERVICE PARTS IDENTIFICATION												DO NOT REMOVE	
1GNLC2E0BR8152140												PDBJCH	CC10706
AGK	AG2	AL0	AMF	AP3	AR9	AT8	AXJ	AY0	A75	A76			
BDR	B3B	B42	B86	B9V	C67	DK2	EF7	E2C	FE9	FR9			
IPG	JA9	JL9	KD1	KG4	LGD	MX0	M15	NK5	NT7	N99			
OST	OPP	R7V	R9N	R9Z	SLM	T53	UH8	UJM	UN9	UT7			
UW6	UIC	U77	VT7	V8D	WL9	ZFH	1SZ	19C	41U	191			
3FL	6A3	6E2	6HP	6J1	6J3	6J4	6J7	7B3	7HP	7M9			
7X6	8MZ		PPV	9MZ									
BC/CC			U 636R										

A Service Parts Identification (SPID) Label provides Vehicle Identification Number (VIN)-specific Option Code content list, Engineering Model Number (Nameplate, body style), Exterior paint system, Exterior paint color code and Interior trim level and color. The SPID label for the Tahoe is located on the inner surface of the instrument panel storage compartment (glove box).

SURVEILLANCE FEATURE MANUAL LAMP CONTROL AND 9G8

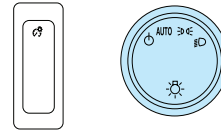


The headlamp control on the driver's side of the instrument panel operates the exterior lamps. If your Tahoe does not have option 9G8, DELETE DAYTIME RUNNING LAMPS and AUTOMATIC HEADLAMPS, the Daytime Running Lamps and Automatic Headlamps can be turned OFF for one ignition cycle by rotating the headlamp control knob momentarily counter-clockwise. See also Section 3 of your Tahoe Owner's Manual.

Surveillance Feature - The Body Control Module (BCM) has been calibrated to provide disabling of the exterior and interior automatic lighting. The BCM is located under the instrument panel to the left side of the steering column. The Surveillance Feature can be connected by installing a terminated wire in cavity 18 of the Light Blue colored BCM connector, X2. The wire and terminal part number to be installed is GM #13582297. When a customer-provided terminated wire is properly installed in X2-18 and the wire is connected via a customer-provided switch to vehicle ground, automatically controlled lighting is disabled or dimmed to minimum Federally regulated level.

Option SEO 9G8 - Delete Daytime Running Lamps and Automatic Headlamps. This option disables the Daytime Running Lamps and Automatic Headlamps control feature. Exterior lamps are only manually controlled (Option 9G8 is not available in Canada).


When the headlamp switch is in Auto with 9G8 installed, the instrument cluster, radio display and air conditioning illumination remains at daytime intensity and are dimmable only when the headlamp switch is rotated to the Parking Lamps or Headlamps positions. If SEO 9G8 is not installed, the displays are dimmable with the Headlamp switch in the AUTO position. The instrument cluster, radio and AC displays will dim if the Surveillance Feature is activated as described above.

Interior courtesy lamps, including dome lamps, can be turned OFF with a three-position switch located in the front overhead console. The interior lamp control positions are: OFF - DOOR - ON. When the switch is in the OFF position, all interior lighting remains off whenever the doors or liftgate are opened.

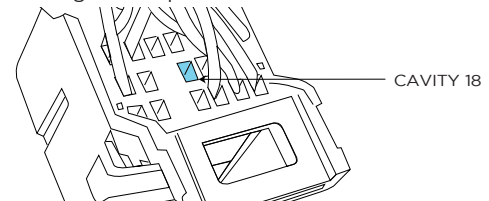


LH INSTRUMENT PANEL FUSE BLOCK

50 amp Fuse for APO's.
Left Fuse Position (5) for
Battery Powered APO's.
Right Fuse Position (6) for
Ignition controlled APO Power.

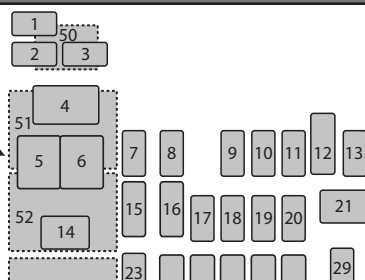

USB AND AUXILIARY JACK LOCATION

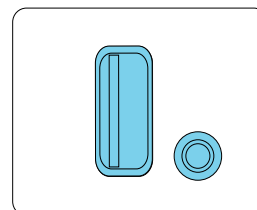

Vehicles ordered with Option 9U3, Delete Center Seat, will have a separate cable connection kit provided in the vehicle for the USB, Auxiliary Jack and Auxiliary Power connection.

STANDARD EQUIPMENT


AERO SHUTTERS



Aero shutters are designed to close when operating conditions permit. The shutters are located on the front of the A/C condenser under hood to divert airflow around the front of the truck reducing wind drag and improves fuel economy. When the cooling system requires more air flow the shutters automatically reopen, ensuring proper air flow through the radiator.


NOTE: : Aero Shutters will remain open at speeds under 30mph.

UNDERBODY SHIELD, FRONT

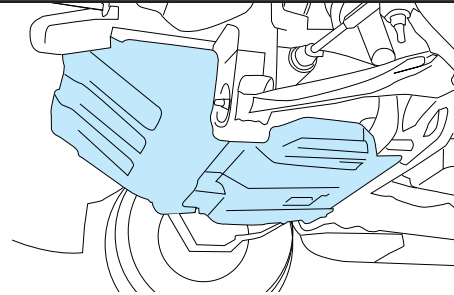

Two piece aluminum front underbody shield starting behind the front bumper and running to the 2nd cross-member protecting front underbody and oil pan.

TRANSMISSION OIL COOLER

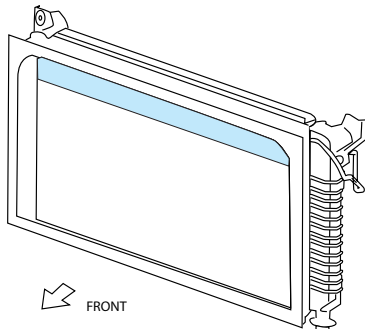


Transmission oil is pumped from the transmission through piping to an oil to air heat exchanger in the upper portion of the air conditioning condenser tuning and returns to the transmission. The air conditioning condenser is located in front of the engine coolant radiator as part of the Cooling Fan and Radiator Module (CFRM) assembly.

ENGINE OIL COOLER




Engine Oil and Transmission Oil are cooled by passing the fluids through separate coolers located in the engine radiator assembly end tank and the air conditioning condenser. Engine oil is pumped by the engine oil pump from the right side of the engine block through piping to an oil-to-coolant heat exchanger located within the right side end-tank of the coolant radiator and returned to the engine. See also TRANSMISSION OIL COOLER.

ROUTING GROMMET

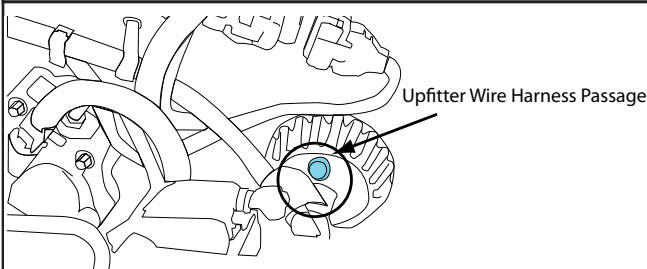

Provides pass through for small number of wires and is located at the lower left side of the front of dash. Carefully remove or puncture only the nipple portion for passage of wire and silicone seal around the wire after installation. Note that a vehicle harness connector is located at the interior side of the grommet and may interfere with passage of wire.


ELECTRIC POWER STEERING SYSTEM

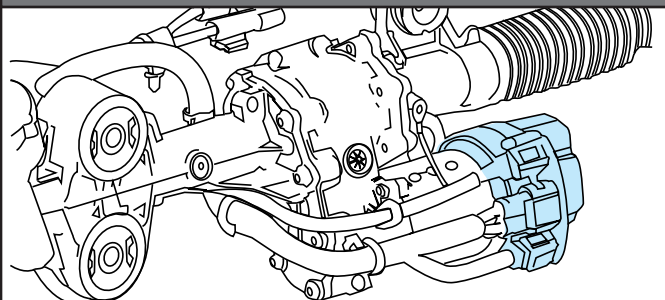

The Electric Power Steering System consists of a Rack-and-Pinion steering gear assisted by an electronically controlled power steering motor and drive assembly. The steering gear is mechanically connected to the steering wheel system.

STANDARD EQUIPMENT

STABILITRAK CONTROL

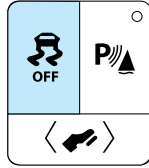



The StabiliTrak Stability Control System control button is located to the left of the steering column on the instrument panel. Button shown is with the optional power adjustable pedals. See also Ride Control Systems in your Owner's Manual for an operation description of the stability control system and related Driver Information Center messages.
(See StabiliTrak page for description)

PROXIMITY SENSORS



The parking assist displays proximity distance bars to nearby objects. When an object is first detected in the rear, one beep will be heard from the speakers.
A continuous beep will sound once object becomes very close.

ONSTAR®

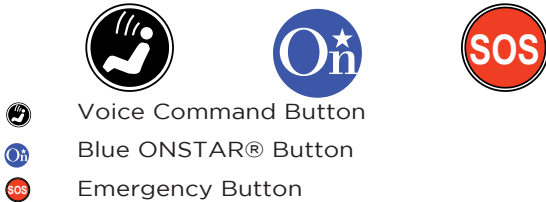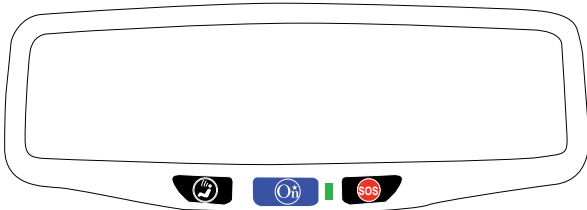

- Voice Command Button
- Blue ONSTAR® Button
- Emergency Button

This vehicle is equipped with a comprehensive, in-vehicle system that can connect to a live ONSTAR® Advisor for Emergency, Security, Navigation, Connection, and Diagnostic Services. ONSTAR® services may require a paid subscription. ONSTAR® requires the vehicle battery and electrical system, cellular service, and GPS satellite signals to be available and operating. ONSTAR® acts as a link to existing public emergency service providers. ONSTAR® may collect information about you and your vehicle, including location information. See ONSTAR®'s Terms and Conditions and Privacy Statement for more details including system limitations at www.ONSTAR.com (U.S.) or www.ONSTAR.ca (Canada). The ONSTAR® system status light is next to the ONSTAR® buttons. If the status light is:

- Solid Green: System is on.
- Flashing Green: On a call.
- Red: Indicates a problem.
- Off: System is off. Press the blue ONSTAR® button twice to speak with an ONSTAR® Advisor.


Press or call 1-888-4-ONSTAR (1-888-466-7827) to speak to an Advisor.

Press to:

- Make a call, end a call, or answer an incoming call.
- Give ONSTAR® Hands-Free Calling voice commands.

NOTE: Do not activate ONSTAR® if you have no plans on using this feature

REAR PARK ASSIST-AUDIBLE WARNING WITH REAR VISION CAMERA

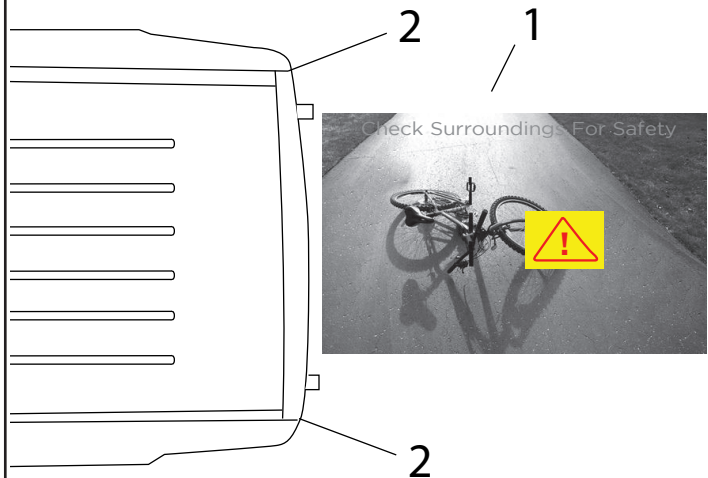

1. View Displayed by the Camera in Radio Screen
2. Corners of the Rear Bumper

Displayed images may be farther or closer than they appear. The area displayed is limited and objects that are close to either corner of the bumper or under the bumper do not display.

A warning triangle may display on the RVC screen to show where the RPA has detected an object. This triangle changes from amber to red and increases in size the closer the object.

Rear Parking Assist (RPA) uses sensors on the rear bumper to assist with parking and avoiding objects while in R (Reverse). It operates at speeds less than 5 mph (8 km/h). RPA may display a warning triangle on the Rear Vision Camera screen and a graphic on the instrument cluster to provide the object distance. In addition, multiple beeps may occur if very close to an object. The RVC displays a view of the area behind the vehicle, on the center stack display, when the vehicle is shifted into R (Reverse).

PCW

ENHANCED DRIVER ALERT PACKAGE

INCLUDES THE FOLLOWING ORDER CODES PLUS JD4 POWER ADJUSTABLE PEDALS

UEU

FORWARD COLLISION ALERT



The Forward Collision Alert system may help to avoid or reduce the harm caused by front-end crashes. When approaching a vehicle ahead too quickly, FCA provides a red flashing alert on the windshield and rapidly beeps or pulses the driver seat. FCA also lights an amber visual alert if following another vehicle much too closely. FCA detects vehicles within a distance of approximately 60m (197 ft) and operates at speeds above 8 km/h (5 mph). If the vehicle has Adaptive Cruise Control (ACC), it can detect vehicles to distances of approximately 110 m (360 ft) and operates at all speeds.

Warning FCA is a warning system and does not apply the brakes. When approaching a slower-moving or stopped vehicle ahead too rapidly, or when following a vehicle too closely, FCA may not provide a warning with enough time to help avoid a crash. It also may not provide any warning at all. FCA does not warn of pedestrians, animals, signs, guardrails, bridges, construction barrels, or other objects. Be ready to take action and apply the brakes. FCA can be disabled with either the FCA steering wheel control or, if equipped, through vehicle personalization. .

Detecting the Vehicle Ahead FCA warnings will not occur unless the FCA system detects a vehicle ahead. When a vehicle is detected, the vehicle ahead indicator will display green. Vehicles may not be detected on curves, highway exit ramps, or hills, due to poor visibility; or if a vehicle ahead is partially blocked by pedestrians or other objects. FCA will not detect another vehicle ahead until it is completely in the driving lane.

Warning FCA does not provide a warning to help avoid a crash, unless it detects a vehicle. FCA may not detect a vehicle ahead if the FCA sensor is blocked by dirt, snow, or ice, or if the windshield is damaged. It may also not detect a vehicle on winding or hilly roads, or in conditions that can limit visibility such as fog, rain, or snow, or if the headlamps or windshield are not cleaned or in proper condition. Keep the windshield, headlamps, and FCA sensors clean and in good repair.

UHY

LOW SPEED FORWARD AUTOMATIC BRAKING

The brakes may be applied automatically in potential collision situations to help reduce damage or help avoid collisions with vehicles directly ahead.

When the system detects a vehicle ahead in your path that is traveling in the same direction that you may be about to crash into, it can provide a boost to braking or automatically brake the vehicle. This can help avoid or lessen the severity of crashes when driving in a forward gear. Depending on the situation, the vehicle may automatically brake moderately or hard. This forward automatic braking can only occur if a vehicle is detected. This is shown by the Forward Collision Alert.

To set the Forward Automatic Braking and Forward Collision Alert systems to Alert and Brake, Alert, or Off, go to **Settings>Vehicle>Collision/Detection Systems>Forward Collision System**.

PCW ENHANCED DRIVER ALERT PACKAGE

INCLUDES THE FOLLOWING ORDER CODES PLUS JD4 POWER ADJUSTABLE PEDALS

TQ5

INTELLIBEAM HEADLIGHTS

Exterior Lamp Controls here



IntelliBeam System This system turns the vehicle's high-beam headlamps on and off according to surrounding traffic conditions. The system turns the high beam headlamps on when it is dark enough and there is no other traffic present. This light comes on in the instrument cluster when the IntelliBeam system is enabled.

Turning On and Enabling IntelliBeam To enable the IntelliBeam system, with the turn signal lever in the neutral position, turn the exterior lamp control to AUTO. The blue high-beam on light appears on the instrument cluster when the high beams are on.





Driving with IntelliBeam The system only activates the high beams when driving over 40 km/h (25 mph). There is a sensor near the top center of the windshield that automatically controls the system. Keep this area of the windshield clear of debris to allow for best system performance. The high-beam headlamps remain on, under the automatic control, until one of the following situations occurs:

- The system detects an approaching vehicle's headlamps.
- The system detects a preceding vehicle's taillamps.
- The outside light is bright enough that high-beam headlamps are not required.
- The vehicle's speed drops below 20 km/h (12 mph).
- The IntelliBeam system can be disabled by the High/Low-Beam Changer or the Flash-to-Pass feature. If this happens, the High/Low-Beam Changer must be activated on then off within two seconds to reactivate the IntelliBeam system. The instrument cluster light will come on to indicate the IntelliBeam is reactivated. The high beams may not turn off automatically if the system cannot detect another vehicle's lamps because of any of the following: . The other vehicle's lamps are missing, damaged, obstructed from view, or otherwise undetected. The other vehicle's lamps are covered with dirt, snow, and/or road spray. The other vehicle's lamps cannot be detected due to dense exhaust, smoke, fog, snow, road spray, mist, or other airborne obstructions.
- The vehicle's windshield is dirty, cracked, or obstructed by something that blocks the view of the light sensor.
- The vehicle is loaded such that the front end points upward, causing the light sensor to aim high and not detect headlamps and taillamps.
- The vehicle is being driven on winding or hilly roads. The automatic high-beam headlamps may need to be disabled if any of the above conditions exist.

UHX


LANE KEEP ASSIST WITH LANE DEPARTURE WARNING AND SAFETY ALERT DRIVER SEAT

Lane Keep Assist may help avoid crashes due to unintentional lane departures. It may also provide a Lane Departure Warning (LDW) system alert as the lane marking is crossed. The LKA system will not assist or provide an LDW alert if it detects that you are actively steering. Override LKA by turning the steering wheel. LKA uses a camera to detect lane markings between 60 km/h (37 mph) and 180 km/h (112 mph).

How the System Works The LKA camera sensor is on the Windshield. To turn LKA on and off, press  to the left of the steering wheel. When on,  is green if LKA is available to assist and provide LDW alerts. It may assist by gently turning the steering wheel and display  as amber if the vehicle approaches a detected lane marking without using a turn signal in that direction. It may also provide an LDW alert by flashing  amber as the lane marking is crossed. Additionally, there may be three beeps, or the driver seat may pulse three times, on the right or left, depending on the lane departure direction.

Take Steering The LKA system does not continuously steer the vehicle. If LKA does not detect active driver steering, an alert, chime, or DIC message may be provided. Steer the vehicle to dismiss.

SAFETY ALERT SEAT

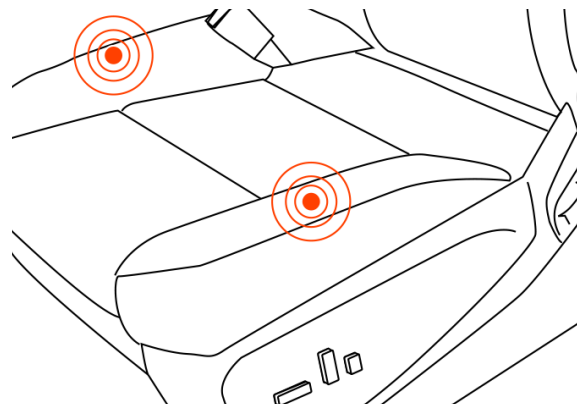

The Safety Alert Seat uses pulsing driver seat vibrations to intuitively communicate the direction of a possible crash threat.

How To Use It When the windshield mounted camera detects a possible collision, the Safety Alert Seat pulses on the left, right or both sides of the seat to alert drivers to the direction of the possible danger. When this happens, visual alerts will also notify the driver.


Just like a smartphone, drivers can select either Auditory or Vibration Alerts using the vehicle settings menu. The selected Safety Alert Seat or Auditory Alert setting applies to all crash avoidance alerts:

- The available Lane Departure Warning and available Lane Keep Assist with Lane Departure Warning systems use left- or right-side pulses to alert drivers if they unintentionally drift out of their lane
- The available Rear Cross Traffic Alert system also uses left- or right-side pulses to indicate the direction of an approaching vehicle
- Several active safety features pulse both sides of the seat simultaneously:
- The available Forward Collision Alert system pulses on both sides to warn drivers of a possible collision with the vehicle that they're following
- The available Front Pedestrian Braking system pulses to warn drivers of a pedestrian directly ahead that they may be about to crash into
- The available Front Parking Assist, available Rear Parking Assist and the Backing Warning, used with the available Rear Automatic Braking system, pulse on both sides of the seat when a potential collision situation is detected under low speeds

OPTIONAL EQUIPMENT

V76


RECOVERY HOOKS

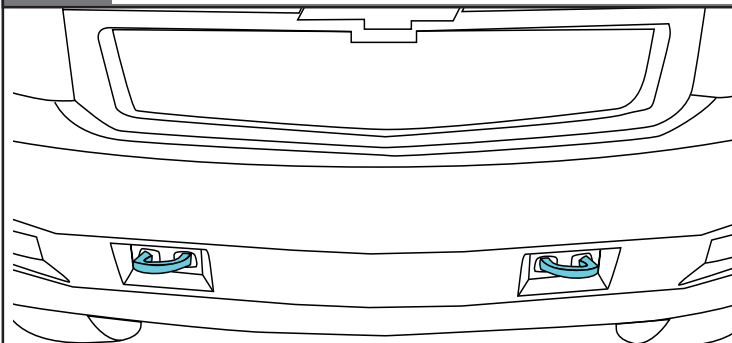

Two black front frame mounted.

S6N


TRAILER HITCH INSERT

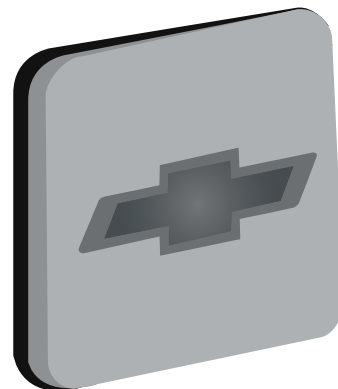

Black rubber square with a logo that closes out the receiver
(Dealer installed)

VQK


SPLASH GUARDS, MOLDED

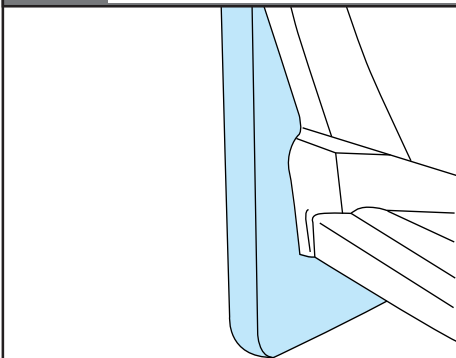

Black finish

VK3


FRONT LICENSE PLATE MOUNTING PACKAGE

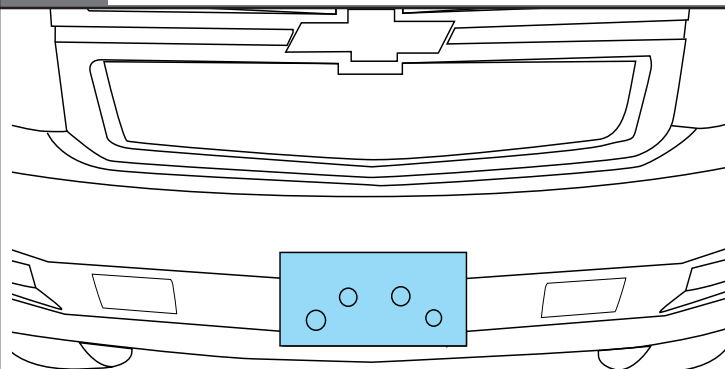

Includes, Bracket and mounting screws

UT7

GROUND STUDS

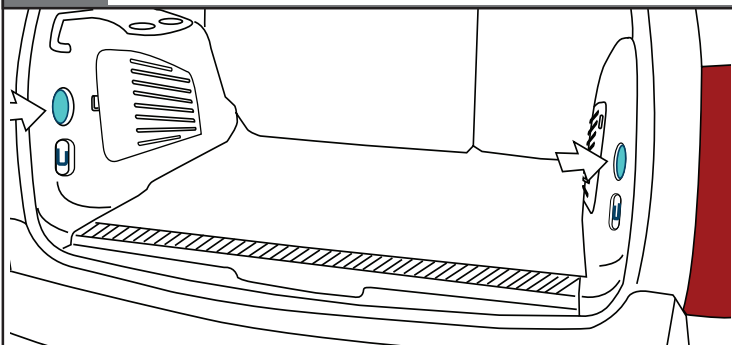


Studs are located on the left and right of the liftgate opening above the tie-down rings

OPTIONAL EQUIPMENT

6N5


SWITCHES - REAR WINDOW INOPERATIVE

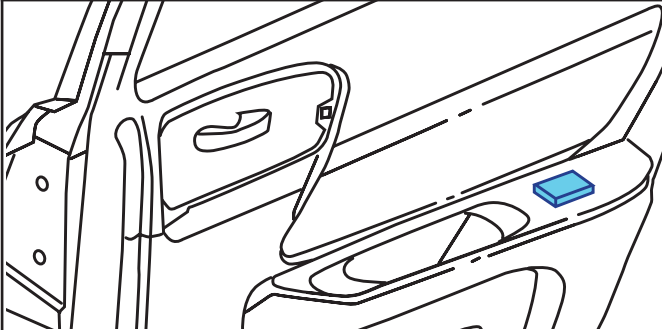

Rear door window switches are inoperable. Rear door power regulators are operable only from driver position switches.

6N6


REAR DOOR LOCKS AND HANDLES INOPERATIVE

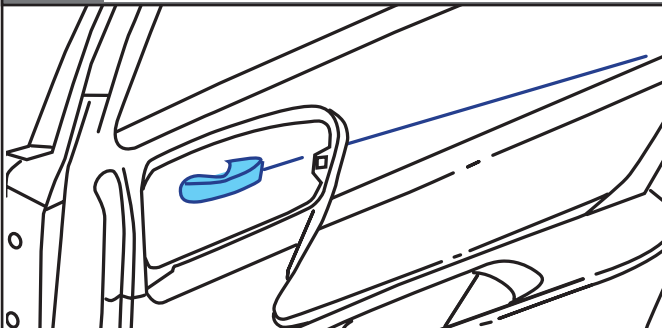

Rear door locking rods are disabled. Rear door locks are inoperable at rear doors, but operate from driver position. Inside rear door handles are disconnected. Rear doors can only be opened from the outside.

6C7


AUXILIARY DOME LAMP

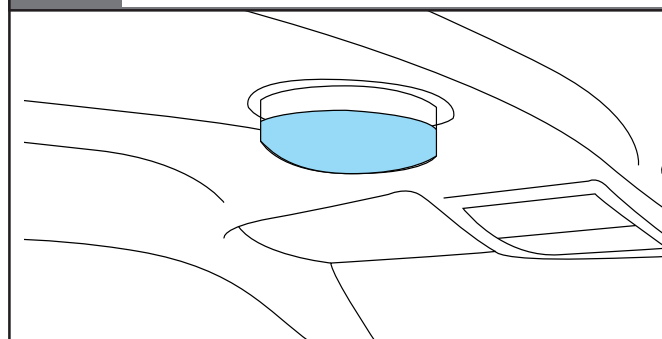

Auxiliary dome lamp is located on the headliner to the rear of the overhead console and is switched at the rear lamp base. Lamp is wired separately standard dome lamps with red and white LED bulbs.

6J7

EXTERIOR LAMPS EMERGENCY FLASHING SYSTEM

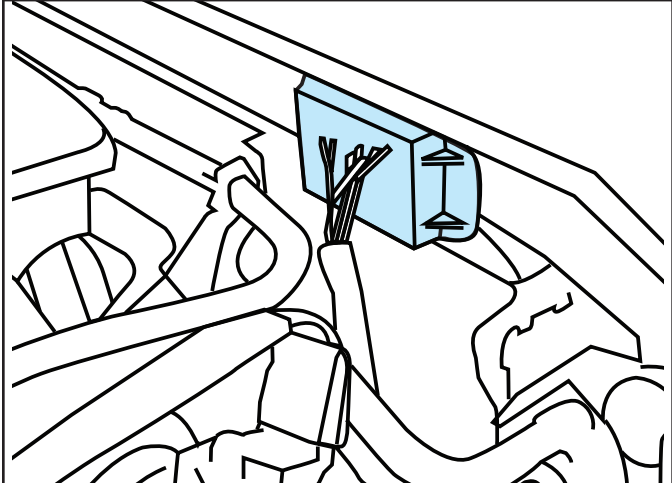

Option 6J7 provides a headlamps high beam flashing module, rear lamps flashing via the Body Control Module (BCM) and a control wire for customer-furnished switching to turn the module on and off. The flasher control wire is part of the blunt-cut upfitter harness coiled under the instrument panel in the front passenger side foot well. The flashing module is located on the rear edge of the right hand upper radiator support.

The headlamp flashing module is activated by the application of 12 volts to a dark green wire in the upfitter harness connector labeled 6J3. When activated, the headlamp high beams and the high beam instrument cluster indicator will flash alternately at 3.0 flashes per second. When the flashing module is turned on, the module sends a signal to the BCM which alternately flashes the stop lamps and backup lamps at the same flash rate as the headlamps. Depressing the brake pedal will override the stop lamp flashing and placing the transmission in Reverse will override the backup lamps flashing.

During daylight conditions, the Daytime Running Lamps (DRL) are automatically turned off whenever the headlamps flashing module is activated. During night time conditions, the low beam headlamps automatically turn on while the high beam lamps flash. Turning on the high beam headlamps manually will override the flashing module and the high beam headlamps will operate continuously. During night time conditions the tail lamps will turn on automatically. If Option 9G8 is present the low beam headlamps and tail lamps will not come on automatically. The Center Mounted Stop Lamp will operate only when the service brakes are applied.

A 10-amp fuse labeled POLICE UPFITTER protects the flasher module circuit. The fuse is located in the Underhood Electrical Center in the engine compartment on the driver side of the vehicle. See also the Owner Manual for more information.

Activation of the headlamps flashing and rear lamps flashing can be separated by opening the blue/green BCM circuit at the flasher module connector, X122-F, and applying a customer-switched ground to the blue/green wire in the upfitter harness which is located under the center instrument panel. Power to the green flasher module activation wire must be off for the rear lamps flashing only.

Warning:


BCM will be damaged if 12V power is connected to the dark-blue/yellow wire.

NOTE: For wiring diagram see Wiring Section

OPTIONAL EQUIPMENT

6J3

WIRING PROVISIONS FOR VEHICLE GRILLE LAMPS AND SPEAKER/SIREN

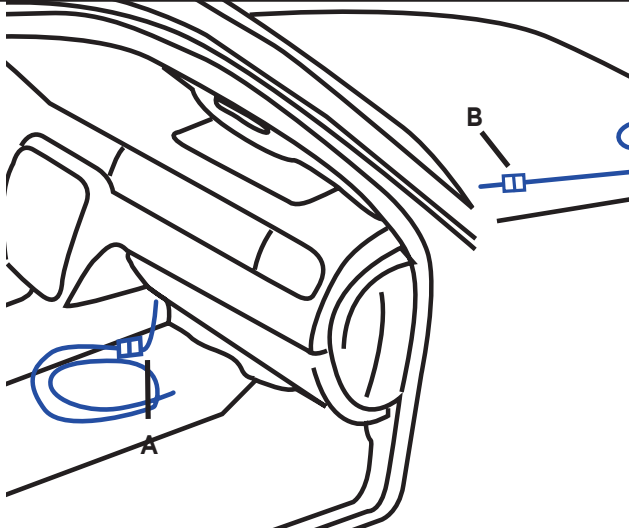


A. Blunt cut ends for the customer-furnished grille lamps and customer-furnished siren/speaker
 B. Control wires from in-line connector in forward lamp harness for customer-furnished grille lamps and speaker
 The SEO 6J3 wiring provision has a 5-foot (1.5 m) harness coiled underneath the instrument panel on the passenger side. The wiring circuits are routed from under the instrument panel to a 1-foot (30 cm) coil secured in the area behind the grille. There are four 16-gauge (1.0 mm²) wires for connecting to the grille lamps (GRY, TAN) and siren speaker (LT BU, LT GN)
 The SEO 6J3 wiring provision also includes one 18-gauge (0.8 mm²) control wire for the SEO 6J7 Exterior Lamps Emergency Flashing System.
 When Option 6J7 is installed without Option 6J3, only the blunt-cut green control wire is provided under the center instrument panel for activating the Emergency Flashing System. The blunt-cut blue/green Separation-of-Function wire for customer switching to activate only rear lamps flashing is located in the upfitter branch harness exiting below the center instrument panel. For only rear lamps flashing, power to the green module activation wire must be off.

NOTE: For wiring diagram see Wiring Section

WX7

WIRING PROVISION FOR FRONT SPEAKERS

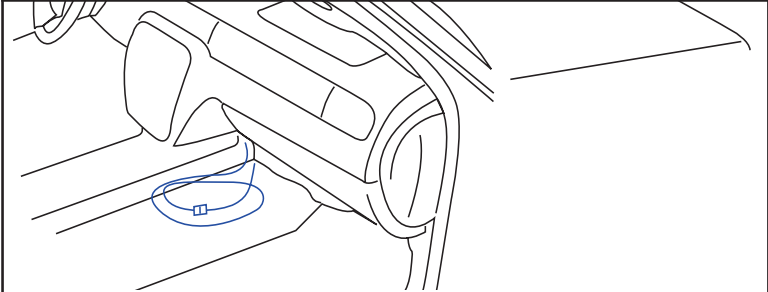


Approximately 60 inches (1.5 m) of auxiliary speaker wiring is routed from the front door and windshield pillar speakers and coiled under the instrument panel. The wiring permits connection of the front speaker pairs to customer-installed communication equipment. Vehicle radio front speaker outputs are re-routed to the rear speakers to maintain the required open door/key-ignition and other audible warnings.

NOTE: For wiring diagram see Wiring Section

6J4

WIRING PROVISION FOR HORN SIREN CIRCUIT

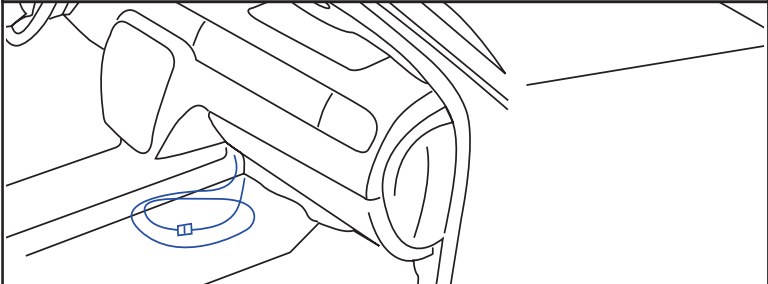

This provision permits customer connection of a switch to select either horn of siren operation when the horn pad is pressed.

A 22-gauge (0.35 mm²) wire is connected to an in-line connector in the horn circuit of the instrument panel harness under the instrument panel. The end of this harness extension is a 5-foot (1.5 m) loop of wire coiled under the center of the instrument panel.


NOTE: For wiring diagram see Wiring Section

OPTIONAL EQUIPMENT

7X6

SPOTLAMPS

7X7

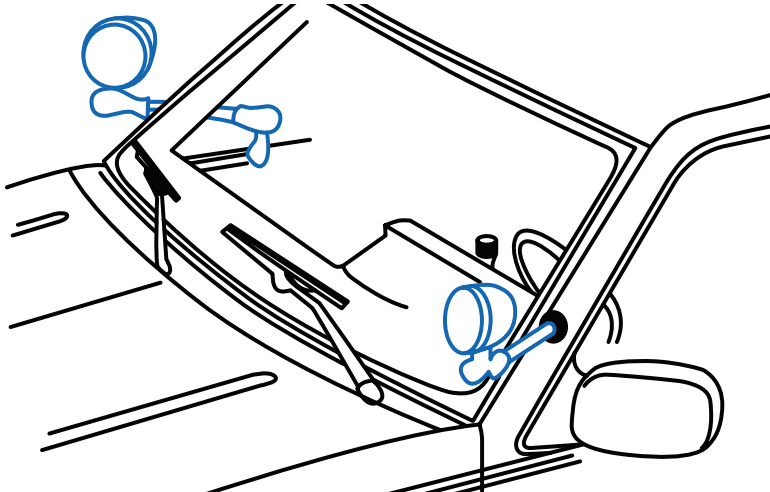

- 7X6 Spotlamp left hand, pillar-mounted unity, 6-inch with replaceable H3 halogen bulb; independently fused
- 7X7 Spotlamps left and right hand, pillar-mounted unity, 6-inch with replaceable H3 halogen bulb; independently fused

NOTE: • Lamp bulbs are halogen 12 volt 100 watt H-3 rated at 245,000 candle power

- For fuse location see Wiring Section
- Factory installation of spotlamps is recommended. Special tooling is used to locate and drill the spotlamp shaft hole in the windshield pillars. Field installation of spotlamps must not interfere with proper deployment of the roof rail airbag in the event of a crash.
- A customer furnished spotlamp assembly must be installed to avoid interference with proper deployment of roof rail and passenger side airbags

5HP

PACKAGE OF SIX ADDITIONAL KEYS

PROGRAMMING KEYS WITHOUT TRANSMITTERS

A maximum of eight random code ignition keys can be programmed for a Tahoe Police (PPV) or Special Service Vehicle (SSV). An unlimited number of ignition keys can be learned if the vehicle is equipped with either fleet Common Code Option 6E2 or Option 6E8. (This procedure can also be used to program new ignition keys for Model Year 2017 Tahoe PPV and SSV vehicles.) Two original ignition keys are required for this procedure.

Note: If only one previously ignition key is available, the programming of new keys must be performed by a dealer using the Service Programming System (SPS). Ignition key programming is not a warranty item and programming is conducted by the customer or at a dealer at customer expense.

ADDING KEYS PROGRAMMING PROCEDURE

1. Insert the first of two (2) original ignition keys in the ignition switch and turn the key to ON/RUN without starting engine.
2. Turn the key to LOCK/OFF and remove the key.
3. Within five (5) seconds, insert the second original ignition key and turn it to ON/RUN without starting engine.
4. Turn the key to LOCK/OFF and remove the key.
5. Within five (5) seconds, insert the new key to be programmed and turn it to ON/RUN without starting engine. The Theft Security Light will turn OFF once the new has been learned.
6. Remove the newly programmed key and repeat steps 1-5 for all additional new keys.
7. Verify the newly programmed keys will start the vehicle engine.

AMF

PACKAGE OF SIX UNPROGRAMMED TRANSMITTERS

PROGRAMMING KEYED ENTRY TRANSMITTERS (RKE)

A maximum of eight transmitters can be programmed for a Tahoe Police (PPV) or Special Service Vehicle (SSV). The programming procedure for SEO AMF transmitters requires that both previously learned transmitters must be present in the vehicle. (This procedure can also be used to program new transmitters for Model Year 2017 Tahoe PPV and SSV vehicles.) Two original ignition keys are required for this procedure.


Note: If only one previously learned transmitter is available, the programming of the new transmitters must be performed by a dealer using the Service Programming System (SPS). Transmitter programming is not a warranty item and programming is conducted by the customer or at a dealer at customer expense.

PROGRAMMING PROCEDURE:

1. Using the ignition key, turn the ignition ON but do not crank the engine. The transmission selector must be in PARK.
2. Using the SELECT and other buttons on the right side of the steering wheel, open the Driver Information Center (DIC) Main Menu. Scroll down to Main Menu item OPTIONS with the lower steering wheel button and then SELECT. Scroll to REMOTE KEY RELEARN and Select START. The DIC will display LEARNING ACTIVE.
3. At the same time, press and hold LOCK and UNLOCK on the RKE transmitter for approximately 5 seconds. A beep will sound, indicating the transmitter is matched to the vehicle.
4. Repeat Step 3 to match up the next RKE transmitter.
5. To exit the RKE programming mode, turn the ignition key to LOCK/OFF.
6. Verify that all transmitters are learned by operating the door locks remotely.

WIRING


WIRING DIAGRAM FOR 12-VOLT BATTERY POWER SUPPLY

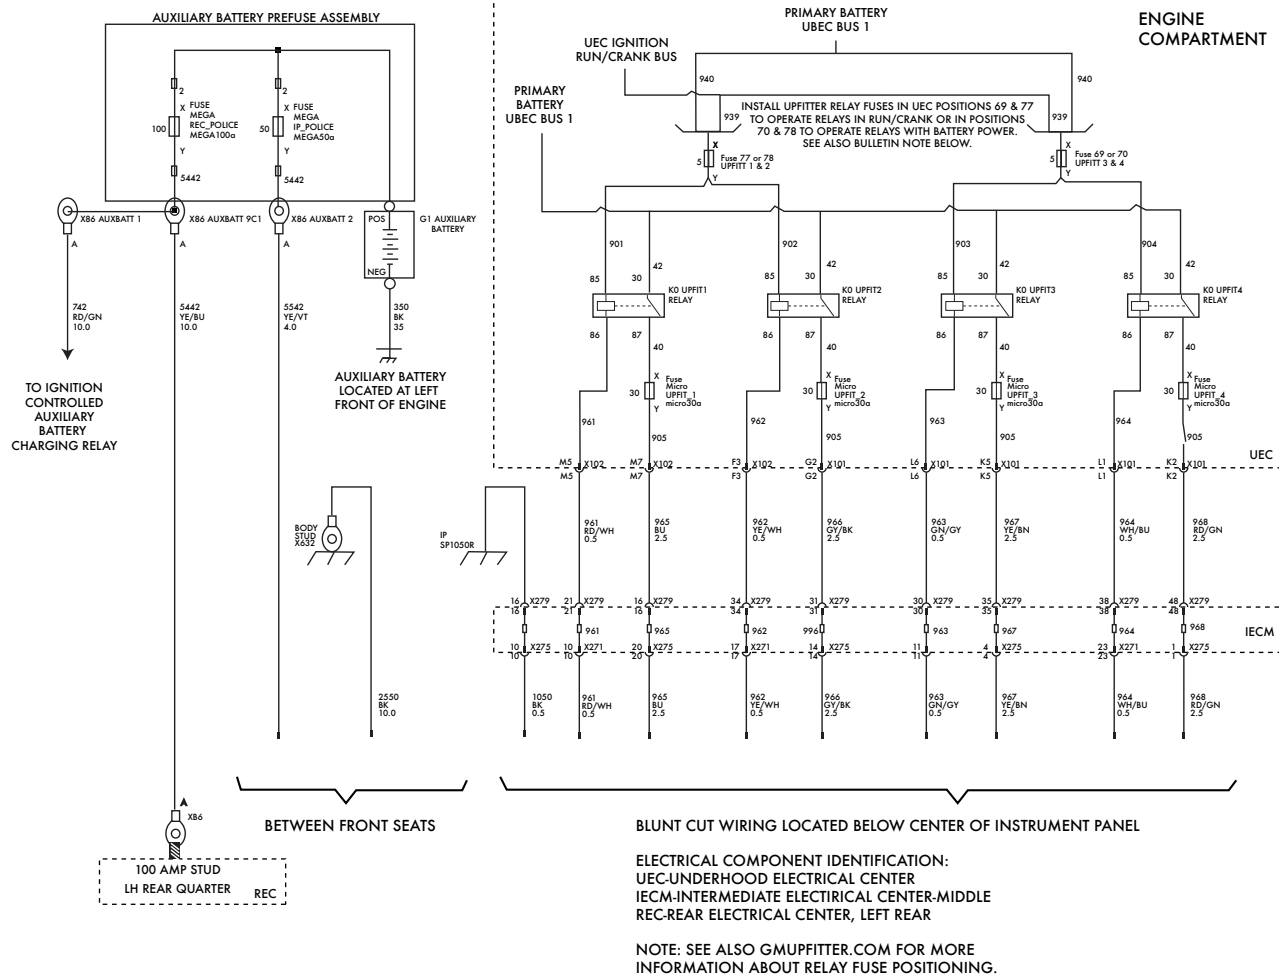

NOTE: Wiring diagrams for these options are shown in the Police Package owner's manual supplement (shipped in glove box).

WIRING


WIRING PROVISIONS IGNITION POWER AND SIGNAL CIRCUITS

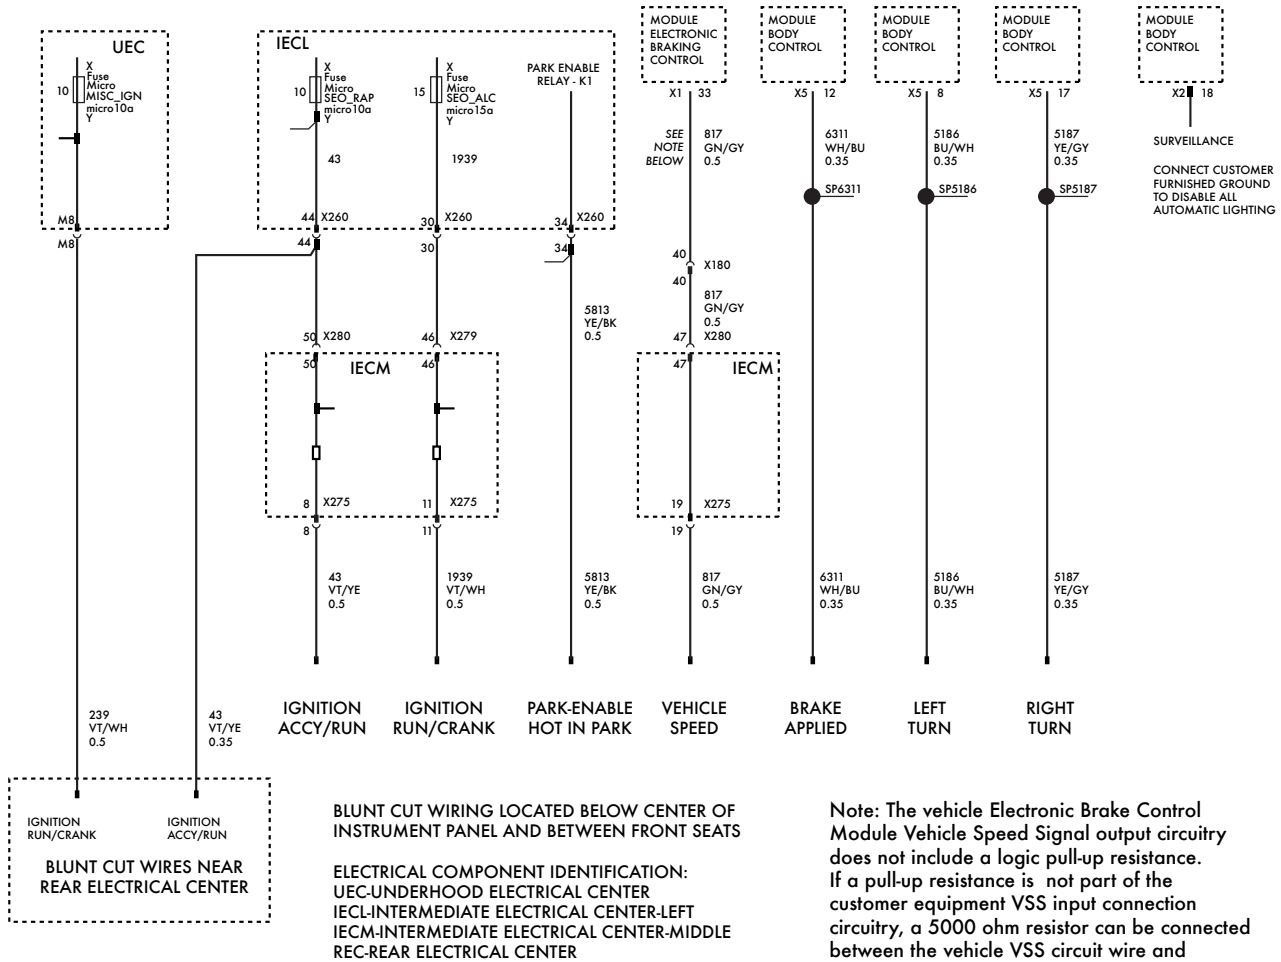


NOTE: Wiring diagrams for these options are shown in the Police Package owner's manual supplement (shipped in glove box).

WIRING

WIRING PROVISION FOR OPTION 6J3 VEHICLE GRILLE LAMPS AND SPEAKER/ SIREN

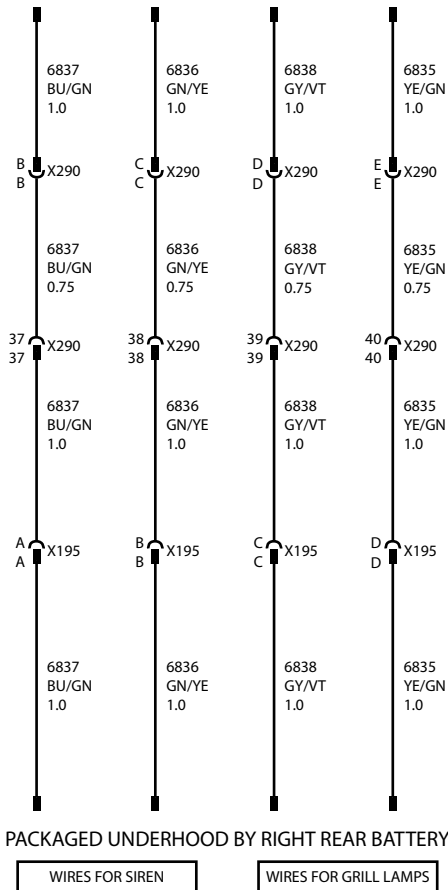


WINDSHIELD PILLAR-MOUNTED SPOTLAMPS OPTION 7X6 LH ONLY / OPTION 7X7 LH AND RH

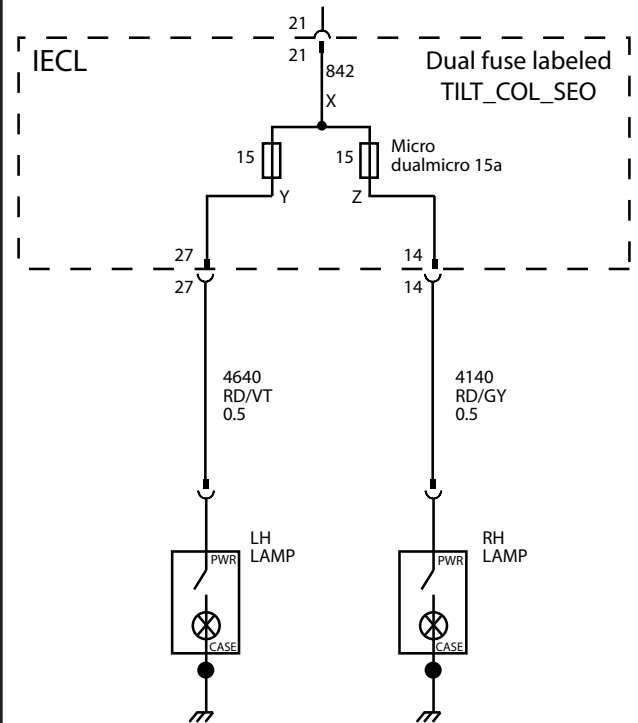

NOTE: Wiring diagrams for these options are shown in the Police Package owner's manual supplement (shipped in glove box).

WIRING


WIRING PROVISION FOR OPTION 6J7 EXTERIOR LAMPS EMERGENCY FLASHING SYSTEM

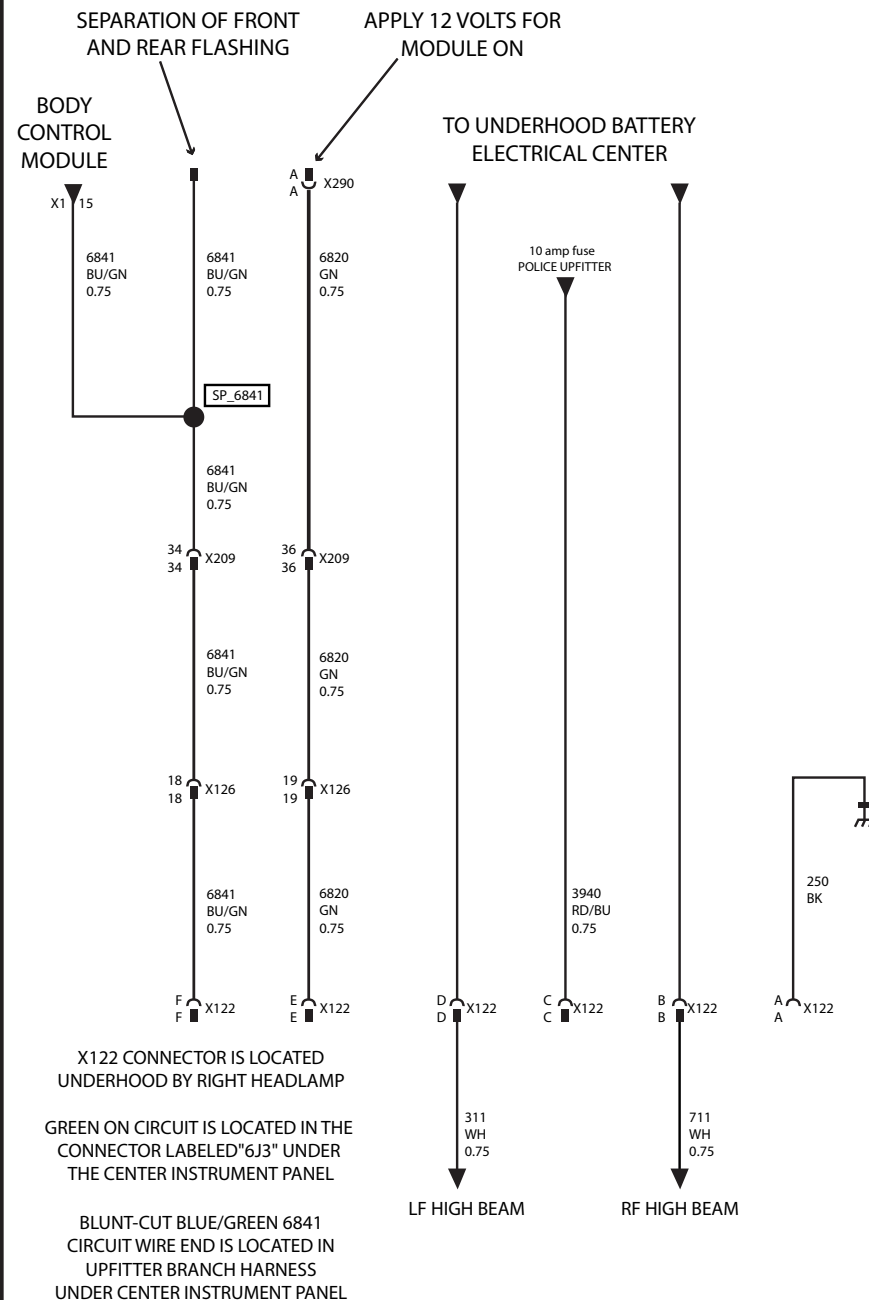


NOTE: Wiring diagrams for these options are shown in the Police Package owner's manual supplement (shipped in glove box).

WIRING

WIRING PROVISION FOR OPTION 6J4, HORN - SIREN CIRCUIT

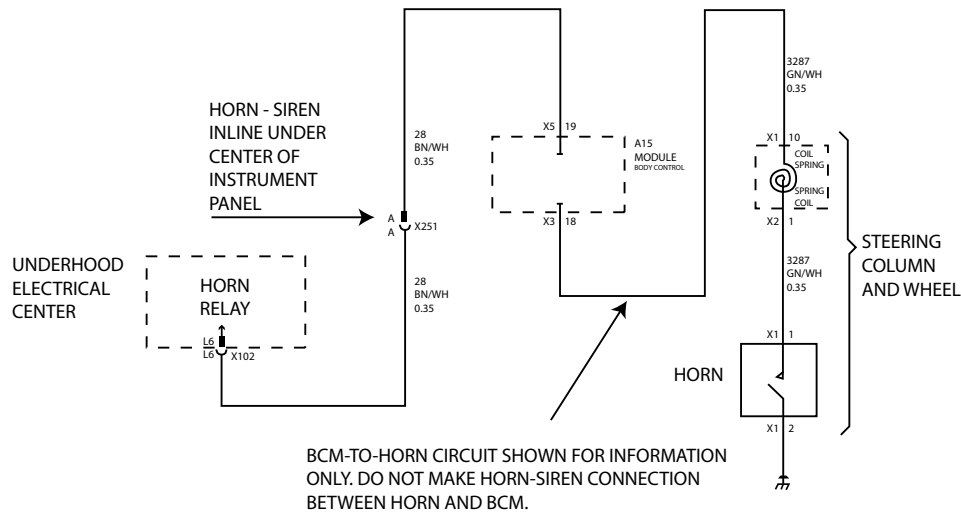


WIRING DIAGRAM FOR OPTION WX7 IN-LINE CONNECTOR

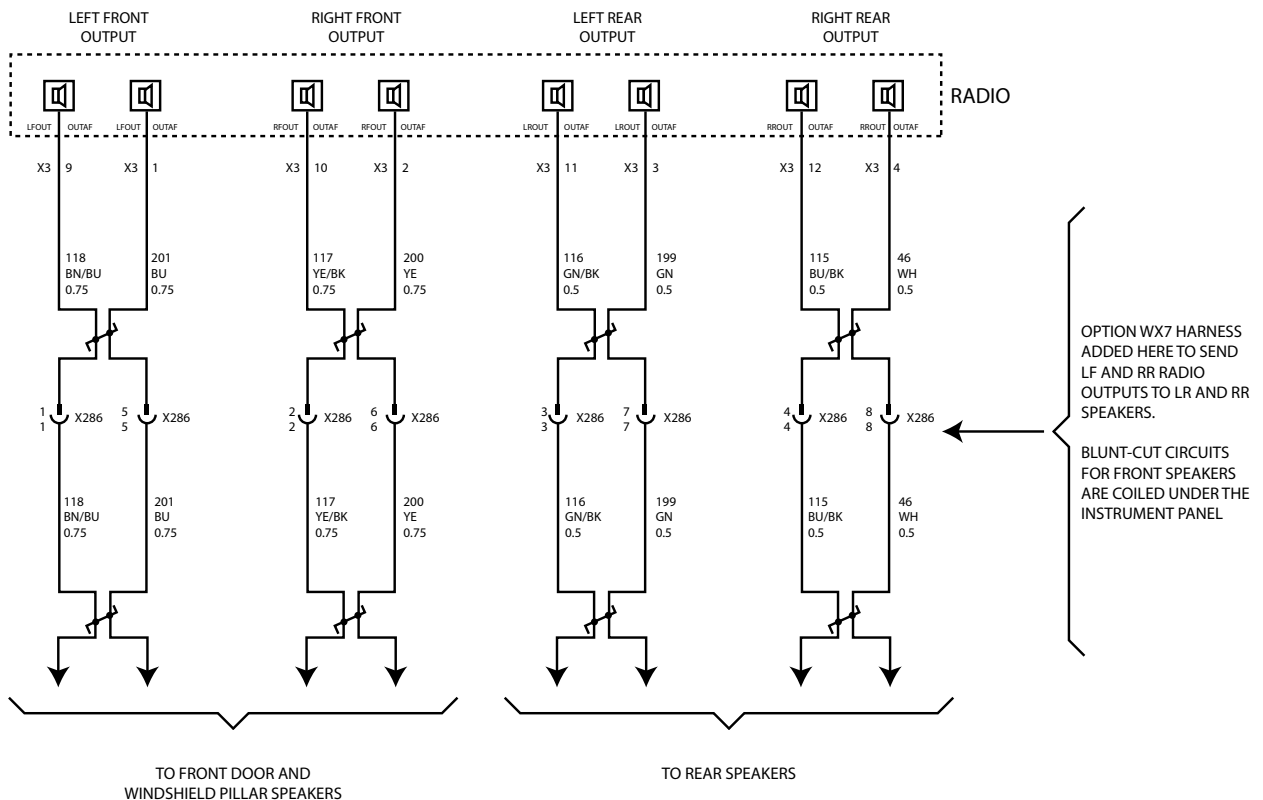

NOTE: Wiring diagrams for these options are shown in the Police Package owner's manual supplement (shipped in glove box).

AIRBAGS

TOP VIEW OF INSTRUMENT PANEL AND APPROXIMATE DEPLOYMENT AREA OF THE AIRBAG ZONE

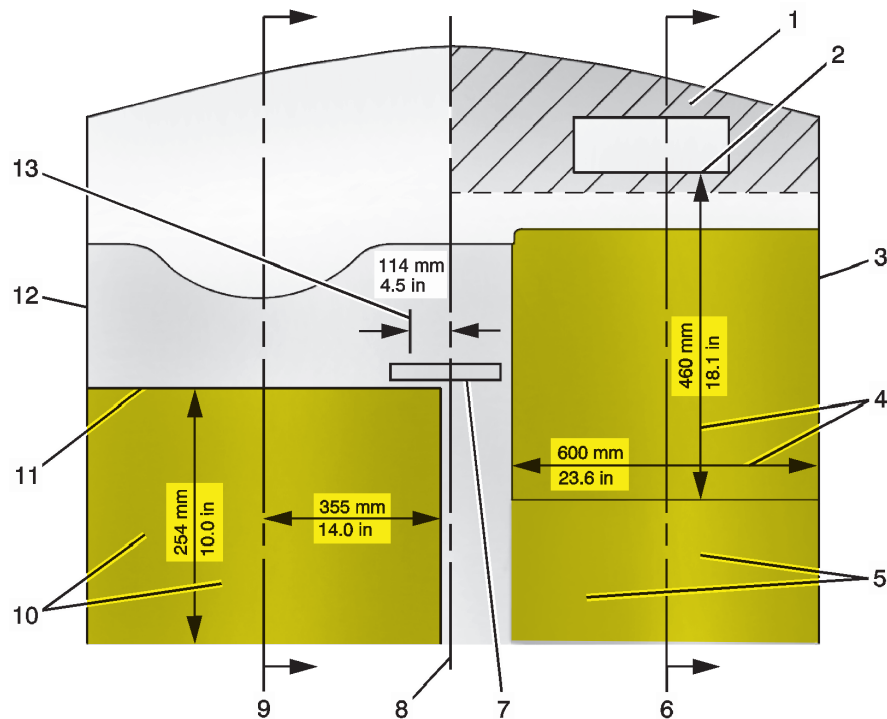


1. Passenger Side Instrument Panel Top Surface Zone
2. Passenger Frontal Airbag Module Trim Panel - Rear Edge
3. Passenger Side Door
4. Approximate Dimensions of Inflated Airbag
5. Passenger Frontal Airbag Deployment Zone
6. Passenger Centerline
7. Inside Rearview Mirror
8. Vehicle Centerline
9. Driver Centerline
10. Driver Frontal Airbag Deployment Zone
11. Front of Steering Wheel
12. Driver Side Door
13. Shift Selector Arc

Lower instrument panel knee bolsters are provided to absorb energy during frontal collisions and are designed to limit leg movement to decrease the chance of injury to the driver and front passenger.

Airbag inflation can cause severe injury or death to anyone too close to the bag when it deploys. Be sure every occupant is properly restrained.


AIRBAGS

SIDE VIEW OF DRIVER FRONTAL AIRBAG DEPLOYMENT ZONE

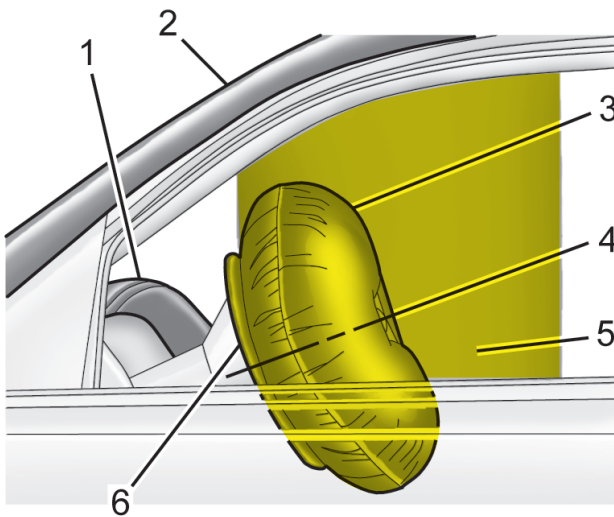

1. Top of Instrument Panel
2. Top Edge of Windshield
3. Inflated Airbag - Steering Wheel
4. Centerline of Steering Column at Mid-Tilt
5. Driver Frontal Airbag Deployment Zone
6. Front of Steering Wheel

SIDE VIEW OF PASSENGER FRONTAL AIRBAG DEPLOYMENT ZONE

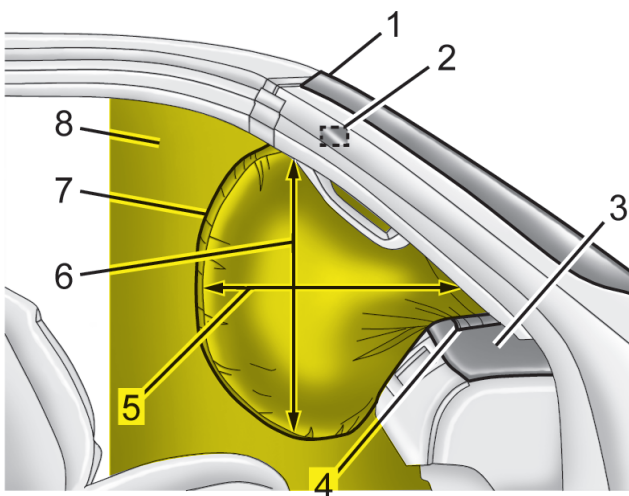


1. Top Edge of Windshield
2. Inside Rearview Mirror
3. Instrument Panel Top Surface Zone
4. Passenger Frontal Airbag Module Trim Panel - Rear Edge
5. Inflated Airbag - Horizontal Dimension, approximately 18.1 in (460 mm)
6. Inflated Airbag - Vertical Dimension (from Top of Occupant's Lap to Headliner)
7. Inflated Airbag - Instrument Panel
8. Passenger Frontal Airbag Deployment Zone

Airbag inflation can cause severe injury or death to anyone too close to the bag when it deploys. Be sure every occupant is properly restrained.

AIRBAGS

ROOF-RAIL AND SEAT-MOUNTED SIDE IMPACT AIRBAG DEPLOYMENT ZONES - PASSENGER SIDE SHOWN, DRIVER SIDE SIMILAR

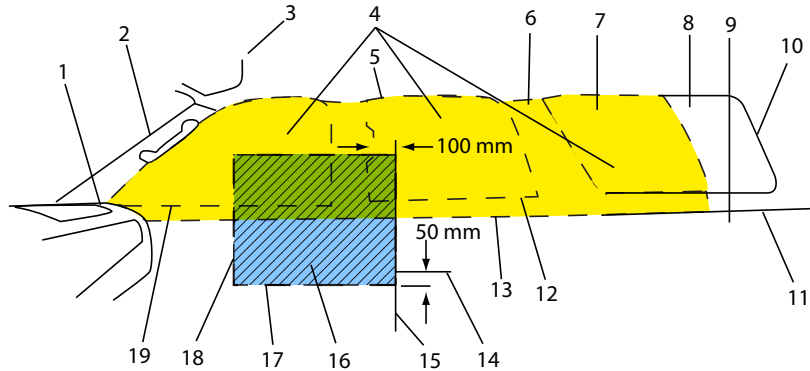


1. Front of Deployment Zone at Bottom of Windshield Pillar Trim
2. A-Pillar Trim with Grab Handle (Passenger Side)
3. Sun Visor
4. Deployment Zone - Seat Rows 1 and 2 and Cargo Area
5. Top of Deployment Zone - Along Roof-rail at Edge of Headliner
6. C-Pillar Upper Trim
7. Rear Quarter Window
8. D-Pillar Upper Trim
9. Rear of Cargo Area Zone at Back Corner of Headliner
10. Rear of Vehicle at liftgate Opening
11. Bottom of Cargo Area Zone at Rear Side Trim Cupholders
12. Top Edge of Rear Door Trim

13. Bottom of Deployment Zone at Top of Side Door Armrests
14. Top Surface of Front Seat Cushion (with Seal Fully lowered)
15. Seat-Mounted Side Impact Airbag Deployment Zone 3.9 in (100 mm) to Rearward of Back Edge of B-Pillar Trim Grab Handle)
16. Front Seat Deployment Zone (With Seat Fully Lowered)
17. Bottom of Seat-Mounted Side Impact Airbag Zone 2.0 in (50 mm) Below Top of Seat Cushion with Seat Fully lowered)
18. Rear of Front Door Trim Armrest Handle
19. Top Edge of Front Door Trim

The roof-rail airbag deploys in the cargo area. Third-row seating is not available on the police package (RPO 9C1) or the special service package (RPO 5W4).

ROOF-RAIL AND SEAT-MOUNTED SIDE IMPACT AIRBAG DRIVER AND PASSENGER DEPLOYMENT ZONES - VIEW FROM REAR CARGO AREA

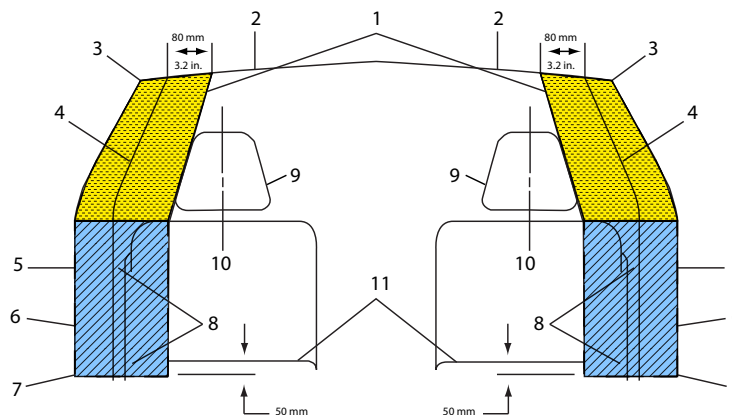


1. Roof-rail Airbag Deployment Zone
2. Underside of Headliner
3. Edge of Headliner
4. Inner Center and Rear Pillar Trim
5. Inner Front and Rear Door
6. Side Door Upper Armrests and Rear Quarter Trim Armrests

7. Seat-Mounted Side Impact Airbag Deployment Zone 2.0 in (50 mm) Below Top Surface of Outboard Front Seat Cushion with Seat Fully Lowered.
8. Front Seatback Side Deployment Zone
9. Front Seat Head Restraint
10. Seat Centerline
11. Top of Seat Cushion

Airbag inflation can cause severe injury or death to anyone too close to the bag when it deploys. Be sure every occupant is properly restrained.

AIRBAGS

OPTIONAL DRIVER SEATBACK FRONT CENTER AIRBAG (RPO AYQ AND D07) INCLUDED WITH A95 BUCKET SEATS - VIEW FROM PASSENGER SIDE

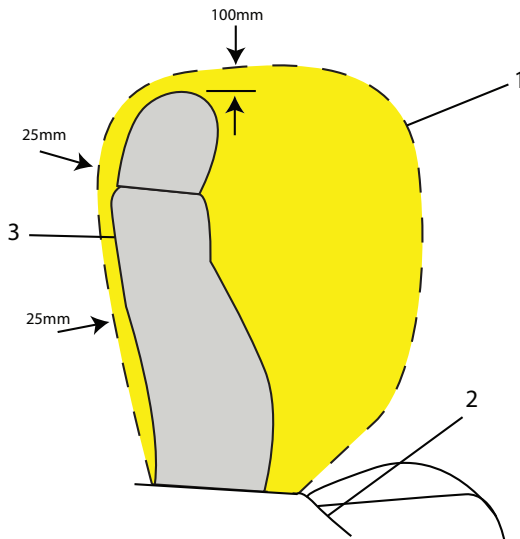


1. Driver Seatback Front Center Airbag
2. Front Center Console
3. Driver Seat and Head Restraint

The deployment zones for the driver seatback front center airbag and the driver and passenger seat-mounted side impact airbags move up, down, fore, and aft as the seat is adjusted by the occupant.

The driver seatback front center airbag (RPO AYQ) requires front bucket seats (RPO A95) and the front center console (RPO D07). Do not remove the front center console to install customer equipment or install customer equipment between the front bucket seats. The equipment may interfere with the deployment of the driver seatback front center airbag.

OPTIONAL DRIVER SEATBACK FRONT CENTER AIRBAG DEPLOYMENT ZONE (RPO AYQ AND D07) - VIEW FROM REAR CARGO AREA

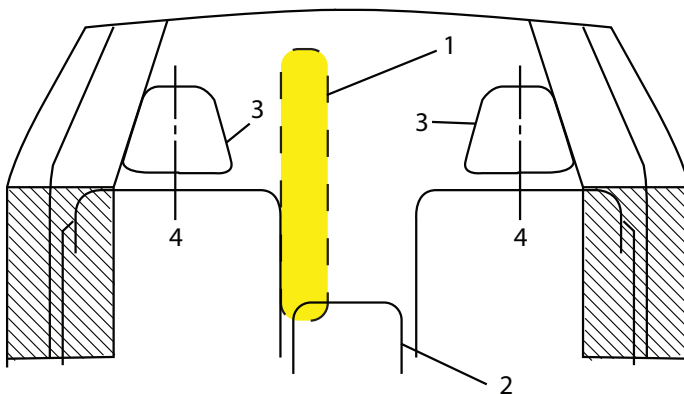

1. Driver Seatback Front Center Airbag (RPO AYQ)
2. Front Center Console (RPO D07)
3. Front Seat Head Restraint
4. Seat Centerline

Airbag inflation can cause severe injury or death to anyone too close to the bag when it deploys. Be sure every occupant is properly restrained.

AIRBAGS FAQ

Can specialty vehicle equipment (e.g. radar devices, video cameras, computers, meters, radio trees, shotguns, etc.) still be mounted in cars with passenger side airbags?

Yes, but care must be taken to mount the equipment outside of the deployment zone. Airbags inflate with great force and will interact with any object in the deployment zone. Therefore, to reduce the risk of injury to vehicle occupants, GM recommends that the air deployment zone be kept free of any equipment. If a piece of equipment were to become dislodged it could strike an occupant in the vehicle and result in injury. The likelihood of an object becoming dislodged is influenced by many factors, including the proximity of the object to the inflatable restraint, the size and shape of the object and the means by which the object is secured to the vehicle. In addition to these factors, the trajectory and velocity of the dislodged object can be influenced by the type and severity of vehicle crash.

Objects that are in the deployment zone, but do not become dislodged by an inflating airbag can still affect the performance of the airbag. For example, such objects could tear the fabric or affect the shape of the airbag, thus reducing the ability of the bag to provide restraint.

Is it possible to shield equipment that is installed in the passenger side frontal airbag deployment zone in a manner that will allow full and safe airbag deployment?

Due to the complexity of the influencing variables, GM is unable to evaluate the potential for shielding expected equipment configurations in all accident scenarios in order to assure that the airbag performance would be unaffected. While shielding may protect certain equipment from being damaged or dislodged, it may also negatively affect the inflation characteristics of the airbag. The airbag's shape, inflation angle, fold pattern, and inflation rate and pressure are developed to maximize the protection capability of the inflatable restraint system. Therefore, GM cannot recommend the placement of any equipment in the deployment zone, even if it is shielded to protect it from damage.

Front airbag systems and instrument panel mounted equipment.

Passenger airbags in GM vehicles deploy in different ways depending upon the type of vehicle and the particular instrument panel design.

In some vehicles, the passenger airbag deploys through a discrete door located on the top surface of the instrument panel (top-mount airbag systems). In other vehicles, the passenger airbag deploys through a discrete door mounted on the vertical rearward surface of the instrument panel, above the glove box door (mid-mount airbag system). With these types of top mount and mid-mount passenger airbag systems, the top pad of the instrument panel remains in place during deployment.

Some GM passenger airbag systems deploy from beneath the instrument panel top pad. These are considered 3/4-mount airbag systems with a "deployable top pad." The entire instrument panel top pad is the "deployment door" from under which the inflation airbag emerges. When an airbag deployment is commanded, the forces from the inflating passenger airbag push up on the instrument panel top pad, releasing special fasteners across the rearward edge of the top pad. This allows the top pad to rotate upward so that the passenger airbag may emerge. The top pad rotates upward to open widest at the right hand side, and is usually forced upward into contact with the windshield on the right hand

side of the vehicle during a deployment.

Instrument panel top mounted special equipment, such as a radar antenna and control unit or video camera must be positioned to the left of the vehicle center line. This equipment must be mounted as low as possible and securely fastened to the top pad to avoid being dislodged in the event of a crash and possible airbag deployment. In the process of securely fastening special equipment to the top, DO NOT fasten down the top pad itself to any other vehicle component such as the cluster trim plate. As described above, the top pad rotates upward during a deployment. In order to enable the proper deployment of the passenger airbag, specialty equipment installation MUST NOT PREVENT the top pad from rotating upward during deployment. Location and attachment of special equipment should minimize added resistance or interference to upward rotation of the top pad during deployment.

On the right half of the top pad closest to the passenger airbag module, GM recommends that no equipment be mounted. When mounting equipment not on the driver side of the top pad, GM recommends that the total mass of the top pad mounted special equipment not exceed 8 pounds (3.6 Kilograms), since some top pads tend to rotate about the left end.

Fasteners used to secure special equipment to the instrument panel top pad, the windshield glass, or to the windshield upper frame (header), should be selected to ensure that these devices will remain attached during a vehicle crash and possible airbag deployment.

Side-Impact Airbags for crashes to the vehicle sides.

The airbag system in your police vehicle includes roof rail mounted Head Curtain side airbags. The vehicle is also equipped with seat back mounted upper body airbags located on the outboard side of the driver and front passenger seat backs. Together the Head Curtain and seat-mounted side airbags are intended to protect the head and upper body in the event of a side crash. The Head Curtain and seat-mounted side airbags also may be commanded to deploy in the event that the vehicle sensing system detects an impending or underway rollover of the vehicle. Some vehicles may also be equipped with an optional airbag, mounted on the inboard side of the driver seat back.

Can Specialty Vehicle Security Barriers be mounted within the side airbag deployment zones?

No. The Side airbags inflate extremely fast because of the nature of side crashes to the vehicle. Mounting a security barrier behind the front seats with the ends placed within the side airbag deployment zones will result in unintended interaction between the barrier and the inflated side airbags. To reduce the risk of injury to the vehicle occupants, GM recommends that the side airbag zones be kept free of any customer installed equipment.

Customer furnished equipment installed to the vehicle roof.

The roof system may also include side airbag head curtain components. Inflation devices and cushion components may be mounted not on the vehicle roof side from the base of the windshield along the roof rail above the door openings to the base of the rear window pillar. Care must be taken to avoid damage to these components or interference with their operation when installing roof mounted equipment such as emergency lamps and communication antennas.

Always use safety belts and the correct restraint for your child's age and size, even with air bags. Even in vehicles equipped with the Passenger Sensing System, children are safer when properly secured in a rear seat in the appropriate infant, child or booster seat. Never place a rear-facing infant restraint in the front seat of any vehicle equipped with an active frontal air bag. See the Owner's Manual and the child safety seat instructions for more safety information.

AIRBAGS FAQ

Can the installation of push bumpers on the front end of the vehicle affect the deployment of the airbag?

General Motors is not aware of adverse effects during crash events from the many push bumpers that have been installed on GM police vehicles. Because there are many styles of push bumpers available with varying crash characteristics, installation of push bumpers may or may not effect deployment timing of the airbags. Push bumpers should be mounted to avoid modifying the vehicle structure and interfering with the front airbag sensors mounted on the upper radiator support cross member.

Two front impact sensors are installed in General Motors vehicles. Do not relocate or disconnect the front sensors. The location and orientation of the front sensors are critical for correct operation of the airbag system. Avoid mounting components on or near the sensors. Push bumper styles with vertical pushing members that are in foreaft alignment with the front airbag sensors are not recommended.

When should an airbag inflate?

The driver's and right-front passenger's frontal airbags are designed to inflate in moderate to severe frontal or near-frontal crashes. But they are designed to inflate only if the impact speed is above the system's designed "threshold level."

In addition, your vehicle has "dual stage" frontal airbags which tailor the amount of restraint according to crash severity. For moderate frontal impacts, the airbags inflate at a level less than full deployment. For more severe frontal impacts, "dual stage" frontal airbags deploy at full levels.

If the front of your vehicle goes straight into a wall that doesn't move or deform, the threshold level of the reduced deployment is about 12 to 16mph (19 to 15 km/h), and the threshold level for a full deployment is about 18 to 24 mph (29 to 28.5 km/h). The threshold level can vary, however, with specific vehicle design, so that it can be somewhat above or below this range.

If your vehicle strikes something that will move or deform such as a parked car, the threshold level will be higher. The driver's and right-front passenger's frontal airbags are not designed to inflate in rollover, side impacts, or rear impacts, because inflation would not help the occupant.

Seat mounted side impact airbags are designed to inflate in moderate to severe side crashes. The side impact airbags will inflate if the crash severity is above the designed "threshold level." The threshold level can vary with specific vehicles design. The side impact airbags are not designed to inflate on frontal or near frontal impacts or rear impacts, because inflation would not help the occupant.

Roof rail mounted head-curtain airbags are designed to inflate in moderate to severe side crashes. In addition, certain vehicles have head-curtain airbags which are also designed to inflate in situations where an impending rollover condition is identified by the vehicle's rollover sensing system and/or frontal or near-frontal impacts if the crash severity is above the designed "threshold level." Safety belt pretensioners at the driver and front passenger seat positions are designed to deploy in frontal, near-frontal, side, and rear crashes that exceed the "threshold level" of crash severity to help reduce slack in the safety belt. Safety belt pretensioners will also deploy in impending rollover situations.

How long will the airbag remain inflated?

It takes approximately 1/20th of a second to fully inflate the frontal airbags. This is faster than the blink of an eye. The airbags begin to deflate immediately, helping to stop the occupants more gradually. Unlike frontal airbags, head curtain side airbags can remain inflated for more than 5 seconds before they start to deflate.

I've heard that a deployed airbag produces what appears to be smoke, is the airbag hot?

After the bag has deployed in a crash, the airbag itself will not be hot to touch. Some components within the airbag module will be hot for a short time. A small amount of smoke coming from a deployed airbag module is normal and should not be cause for concern. Also, when the nitrogen gas is vented out of the airbag, small particles from inside the bag are also vented into passenger compartment. These airborne particles look like smoke and some particles are deposited as residue on and around the airbag.

I've heard that the dusts that are released into the passenger compartment from the airbag are harmful, is this true?

For most people, the only effect the dusts will produce is some irritation of the throat and eyes, and that is only if the occupant remains in the vehicle for many minutes after the airbag deployment with no ventilation and windows closed. However, some people with asthma may develop an asthmatic attack from inhaling the dusts. If this happens, they should first treat themselves the same way their doctor has advised them to treat any other asthma attack, and then immediately seek medical treatment.

Can the airbag system be re-used?

No. The airbags are designed to inflate only once. After inflation, some new parts will be required. These will include the airbag module and possibly other parts. (A competent service technician with access to the vehicle's service manual and the required tools should replace the required components after a deployment crash.)

If my vehicle has airbags, why should I have to wear my safety belt?

Yes, safety belts are the primary safety restraint in the vehicle. Airbags are in many vehicles today and will be in most of them in the future. But they are supplemental systems only; so they work with safety belts, not instead of them. Every airbag system ever offered for sale has required the use of safety belts. Even if you're in a vehicle that has airbags, you still have to buckle up to get the most protection. That's true not only in frontal collisions but especially in side and other collisions.

ELECTRONIC STABILITY CONTROL SYSTEMS (STABILITRAK)

StabiliTrak systems help drivers maintain control of their vehicles, especially during emergency lane changes or avoidance maneuvers. StabiliTrak uses various sensors, such as steering wheel angle, wheel speed, yaw velocity, etc., to detect any difference between the path requested by the steering wheel position and vehicle's actual path. When appropriate, the system selectively controls brakes, engine power, and even suspension settings to enhance control of the vehicle's direction and help keep it on course.

Independent studies conducted by the National Highway Traffic Safety Administration, the Insurance Institute for Highway Safety, and others have found StabiliTrak to be highly reactive in reducing vehicle crashes. General Motors offers StabiliTrak systems on many of its passenger car and light truck models.

See your owner's manual for additional information about the operation of StabiliTrak.

Q. How do I use StabiliTrak?

A. StabiliTrak operates independently of the driver.

You should continue to drive your StabiliTrak equipped vehicle with caution and care. GM's StabiliTrak system, StabiliTrak is designed to be as seamless as possible in operation, and part of the overall vehicle response to make a good vehicle better

Q. How does StabiliTrak work?

A. StabiliTrak has the ability to apply control forces to the vehicle independent of the driver. StabiliTrak uses sensors to continuously compare the path indicated by the steering wheel position to the vehicle's actual path. If a discrepancy is detected, StabiliTrak selectively controls vehicle brakes and engine torque to create a yaw moment that helps restore the vehicle's actual path to the path indicated by the steering wheel position. StabiliTrak has the ability to help correct both understeer (where the vehicle is not turning as much as the steering wheel position indicates) and oversteer (where the vehicle is turning more than the steering wheel position indicates).

Q. Will a tire change affect StabiliTrak?

A. Use of tires other than original equipment may affect StabiliTrak performance. StabiliTrak is designed to make the best use of available traction. The performance characteristics of the original equipment tires are part of the overall system effectiveness. When you replace tires check the recommendations in your owner's manual. On GM vehicles, the original equipment tires have a "TPC" (Tire Performance Criteria) code on the sidewall. Replacing the tires with the same "TPC" code will help assure proper StabiliTrak performance.

DRIVER OPERATED TRACTION CONTROL BUTTON

An advanced computer controlled stability enhancement system assists the driver with directional control of the vehicle in difficult driving conditions. Each time the vehicle is started, the StabiliTrak system is fully on. StabiliTrak can be controlled by a Traction Control Button. The condition system is displayed by a StabiliTrak indicator light and Driver Information

Center (DIC) Message. Push once to disable Traction Control. Push and hold to disable both Traction Control and StabiliTrak. In this condition, StabiliTrak will automatically turn ON when the vehicle speed exceeds 35 mph (56km/hr) while the Traction Control remains OFF. Push again to enable Traction Control and StabiliTrak.

MAINTENANCE / WARRANTY

MAINTENANCE

Two maintenance visits within 2 years/24,000 miles (whichever comes first) includes:

- ACDelco dexos1®Oil and ACDelco Oil Filter Change (excludes Bolt EV)
- 4-wheel Tire Rotation
- 27-Point Vehicle Inspection (MPVI)

Maintenance visits must occur within two years or 24,000 miles of vehicle delivery, whichever comes first. All 2017 Corvette models are eligible for three service visits under the Chevrolet Complete Care program. Does not include air filters. See participating dealer for other restrictions and complete details.

All vehicles require periodic maintenance. Maintenance services, such as those detailed in the Owner's Manual are the owner's expense. Vehicle lubrication, cleaning, or polishing are not covered. Failure of or damage to components requiring replacement or repair due to vehicle use, wear, exposure, or lack of maintenance is not covered.

Items such as audio system cleaning, brake pads/linings, clutch linings, coolants and fluids, filters, keyless entry (or other remote transmitter/receiver batteries),[†] limited slip rear axle service, tire rotation, wheel alignment/balance,[†] wiper inserts are covered up to the first maintenance inspection period outlined in the Owner's Manual. Any replacement at the time of, or beyond the maintenance inspection period is considered maintenance, and is not covered as part of the New Vehicle Limited Warranty. The New Vehicle Limited Warranty only covered components when replacement or repair of these components is the result of a defect in material or workmanship.

BUMPER TO BUMPER WARRANTY (including tires)

Coverage is for the first 3 years or 36,000 miles, whichever comes first.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. GM does not authorize any person to create for it any other obligation or liability in connection with these vehicles. Any implied warranty of merchantability or fitness for a particular purpose applicable to this vehicle is limited in duration to the duration of this written warranty. Performance of repairs and needed adjustments is the exclusive remedy under this written warranty or any implied warranty. GM shall not be liable for incidental or consequential damages, such as, but not limited to, lost wages or vehicle rental expenses, resulting from breach of this written warranty or any implied warranty.

ENGINE

Coverage includes all internally lubricated parts, engine oil cooling hoses, and lines. Also included are all actuators and electrical components internal to the engine (e.g., Active Fuel Management valve, lifter and oil manifold) cylinder head, block, timing gears, timing chain, timing cover, oil pump/oil pump housing, OHC carriers, valve covers, oil pan, seals, gaskets, manifolds, flywheel, water pump, harmonic balancer, engine mount, turbocharger, and supercharger. Timing belts are covered until the first scheduled maintenance interval. Exclusions: Excluded from the powertrain coverage are sensors, wiring, connectors, engine radiator, coolant hoses, coolant, and heater core. Coverage on the engine cooling system begins at the inlet to the water pump and ends with the thermostat housing and/or outlet that attaches to the return hose. Also excluded is the starter motor, entire pressurized fuel system (in-tank fuel pump, pressure lines, fuel rail(s), regulator, injectors, and return line), as well as the Engine/ Powertrain Control Module and/or module programming.

DIESEL ENGINE COMPONENTS

Cylinder block and heads and all internal parts, intake and exhaust manifolds, timing gears, timing gear chain or belt and cover, flywheel, harmonic balancer, valve covers, oil pan, oil pump, water pump, fuel pump, engine mounts, seals, and gaskets. Parts of the Emissions Reduction System such as the emissions reduction fluid tank, injectors, sensors including NOx and exhaust, and the Exhaust Particulate Filter. Glow Plug Control System: Control/glow plug assembly, glow plugs, cold advance relay, and engine control module. The fuel injection control module, integral oil cooler, transmission adapter plate, common fuel rails, fuel filter assembly, fuel temperature sensor, and function block.

MAINTENANCE / WARRANTY

POWERTRAIN LIMITED WARRANTY

Coverage is for the first 5 years or 60,000 miles, whichever comes first.

Certain commercial fleet and/or government fleet vehicles purchased under a qualifying fleet account number are covered for 5 years or 100,000 miles, whichever comes first. A Qualified Fleet User is defined as a company that has purchased and registered or leased five (5) or more new cars/or trucks solely for use in its operation during the current or preceding calendar year, model year, preceding twelve (12) month period, or that owns or leases fifteen (15) or more cars and trucks. Excludes rental customers. See dealer for details.

Diesel Engine/Components: Cylinder block and heads and all internal parts, intake and exhaust manifolds, timing gears, timing gear chain or belt and cover, flywheel, harmonic balancer, valve covers, oil pan, oil pump, water pump, fuel pump, engine mounts, seals, and gaskets. Parts of the Emissions Reduction System such as the emissions reduction fluid tank, injectors, sensors including NOx and exhaust, and the Exhaust Particulate Filter. Glow Plug Control System: Control/glow plug assembly, glow plugs, cold advance relay, and engine control module. The fuel injection control module, integral oil cooler, transmission adapter plate, common fuel rails, fuel filter assembly, fuel temperature sensor, and function block.

Refer to the Limited Warranty and Owner Assistance Information or a Chevrolet dealership for additional details.

TRANSMISSION AND TRANSAXLE

Coverage includes all internally lubricated parts, case, torque converter, mounts, seals and gaskets, as well as any electrical components internal to the transmission/transaxle. Also covered are any actuators directly connected to the transmission (slave cylinder, etc.). Exclusions: Exclusions from the powertrain coverage include cooling lines, hoses, radiator, sensors, wiring, and electrical connectors. Also excluded are the clutch and pressure plate, as well as any Transmission Control Module and/or module programming.

TRANSFER CASE

Coverage includes all internally lubricated parts, case, mounts, seals and gaskets, as well as any electrical components internal to the transfer case. Also covered are any actuators directly connected to the transfer case, as well as the encoder motor. Exclusions: Excluded from the powertrain coverage are transfer case cooling lines, hoses, radiator, sensors, wiring, and electrical connectors, as well as the transfer case control module and/or module programming.

DRIVE SYSTEMS

Coverage includes all internally lubricated parts, final drive housings, axle shafts and bearings, constant velocity joints, propeller shafts and universal joints. All mounts, supports, seals, and gaskets, as well as any electrical components internal to the drive axle. Also covered are any actuators directly connected to the drive axle (e.g., front differential actuator). Exclusions: Excluded from the powertrain coverage are all wheel bearings, drive wheel front and rear hub bearings, locking hubs, drive system cooling, lines, hoses, radiator, sensors, wiring, and electrical connectors related to drive systems, as well as any drive system control module and/or module programming.

SHEET METAL

All body and sheet metal components are warranted against corrosion for 3 years or 36,000 miles, whichever comes first. Plus you're protected even further from rust-through corrosion for a minimum of 6 years/100,000 miles (whichever comes first). Application of additional rust-inhibiting materials is not required under the corrosion coverage and none is recommended. See your GM dealer for terms of this limited warranty.

EMISSION CONTROL SYSTEM

For light duty trucks, see "How to Determine the Applicable Emissions Control Systems Warranty" under Emission Control System Warranty on pg. 21 for more information. Defects and performance for car and light-duty truck emission control systems are covered for the first 2 years or 24,000 miles, whichever comes first. From the first 2 years or 24,000 miles to 3 years or 36,000 miles defects in material or workmanship continue to be covered under the New Vehicle Limited Bumper-to-Bumper Warranty coverage. Specified major components are covered for the first 8 years or 80,000 miles, whichever comes first. Defects and performance for heavy duty truck emission control systems including those found in 6.6L Duramax® Diesel Engines are covered for the first 5 years or 50,000 miles, whichever comes first.

California: Defects and performance for cars and trucks with light duty or medium duty emission control systems are covered for the first 3 years or 50,000 miles, whichever comes first. Specified components for cars or light duty trucks equipped with light duty or medium duty truck emission control systems are covered for the first 7 years or 70,000 miles, whichever comes first. See "California Emission Control System Warranty" on pg. 21 of your Chevrolet Limited Warranty and Owner Assistance Information booklet.

MAINTENANCE / WARRANTY

TIRES

The tires supplied with your vehicle are covered by General Motors against defects in material or workmanship under the Bumper-to-Bumper Limited Warranty coverage. Wear-out is not considered a defect, and it may occur before the vehicle warranty expires. In this case, the owner is responsible for purchasing replacement tires, or seeking coverage solely from the tire manufacturer. For vehicles within the Bumper-to-Bumper Limited Warranty coverage, defective tires will be replaced on a prorated adjustment basis according to the mileage-based schedule in your Warranty and Owner Assistance Information booklet. After your New-Vehicle Limited Warranty expires, you may still have prorated warranty coverage on your original equipment tires by the tire manufacturer.

ACCESSORY COVERAGE

Most GM parts and accessories sold and permanently installed on a GM vehicle by a GM Dealer or GM approved Accessory Distributor/Installer (ADI) prior to delivery will be covered under the applicable portion (Bumper-to-Bumper, Powertrain, etc.) of the New Vehicle Limited Warranty. In the event GM accessories are installed after vehicle delivery, or are replaced under the New Vehicle Limited Warranty, they will be covered, parts and labor, for the balance of the applicable portion of the New Vehicle Limited Warranty, but in no event less than 12 months/unlimited miles. GM Accessories sold over the counter, or those not requiring installation, will continue to receive the standard GM Dealer Parts Warranty of 12 months from the date of purchase, parts only. GM Licensed and Integrated Business Partner (IBP) Accessories are covered under the accessory-specific manufacturer's warranty and are not warranted by GM or its dealers.

TOWING

Towing is covered to the nearest Chevrolet dealer if your vehicle cannot be driven because of a warranted defect.

COURTESY TRANSPORTATION PROGRAM

Offers response, security and convenience of the 24-Hour Roadside Assistance Program. Roadside Assistance is provided with all purchased or leased GM vehicles that are within the Powertrain Limited Warranty.

- Emergency Towing (from a public road or highway to nearest Chevrolet dealer)
- Lockout Service (keys locked inside vehicle)
- Flat Tire Changes (service to change a flat tire with the spare tire (if equipped))
- Fuel Delivery (enough fuel for vehicle to get to the nearest service station)
- Jump-Starts (service to jumpstart a dead battery) During the 8 year or 100,000 miles
- Electric Propulsion warranty period, towing is covered to the nearest Chevrolet servicing dealer if your vehicle cannot be driven because of a warranted Electric Propulsion specific defect. Refer to your Owner's Manual for details, including reservation of rights, or consult your dealer/retailer. --For specific terms and conditions, please contact your Chevrolet Roadside Assistance Program advisor at 1-800-243-8872.

WHAT IS NOT COVERED

Tire and Wheel Damage or Wear Normal tire wear and tear or wear-out is not covered. Tire wear is influenced by many variables such as road conditions, driving styles, vehicle weight, and tire construction. Uniform tire wear is a normal condition, and it not considered a defect. Road hazard damage such as punctures, cuts, snags, and breaks resulting from pothole impact, curb impact, or from other objects is not covered. Tire wear due to misalignment beyond the warranty period is not covered. Also, damage from improper mounting or dismounting, misuse, negligence, alteration, improper repair, accident, collision, fire, vandalism, or misapplication is not covered. Damage to sidewalls caused by automatic car washes or cleaning agents is not covered.

Damage Due to Bedliners Owners of trucks with a bedliner, whether after-market or factory installed, should expect that with normal operation the bedliner will move. This movement may cause finish damage. Therefore, any damage caused by the bedliner is not covered under the terms of the New Vehicle Limited Warranty. The factory spray in bedliner (RPO CGN) is not covered for a loss of shine and luster or fading. Refer to the Owner's Manual for more information on spray in bedliner maintenance.

Damage Due to Accident, Misuse, or Alteration. The New Vehicle Limited Warranty does not cover damage caused as a result of the following: Collision, fire, theft, freezing, vandalism, riot, explosion, or objects striking the vehicle.

Misuse of the vehicle such as driving over curbs, overloading, racing, or other competition. Proper Vehicle use is discussed in the Owner's Manual. Alteration, modification, or tampering to the vehicle, including, but not limited to the body, chassis, powertrain, driveline, software, or other components after final assembly by GM. Coverages do not apply if the odometer has been disconnected, its reading has been altered, or mileage cannot be determined. Installation of non-GM (General Motors) parts. Water or fluid contamination.

MAINTENANCE / WARRANTY

Damage resulting from hail, floods, windstorms, lightning, and other environmental conditions. Alteration of glass parts by application of tinting films.

Damage caused by failure to follow the recommended maintenance schedule intervals and/or failure to use or maintain proper fluids, or maintain fluids between recommended maintenance intervals, fuel, lubricants, or refrigerants recommended in the Owner's Manual is not covered.

Damage Due to Impact, Use, or the Environment Windshield or glass cracks, chips, or scratches due to impact are not covered. Windshield cracks will be covered for the first 12 months, regardless of mileage if caused by defects in material or workmanship. Lights, lenses, mirrors, paint, grille, moldings, and trim are not covered for cracks, chips, scratches, dents, dings, and punctures or tears as a result of impact with others objects or road hazards. In addition, cracks, chips, scratches, or other damage to the face of a radio or instrument cluster from impact or foreign objects are not covered.

Damage Due to Contaminated, Improper, or Poor Quality Fuel

Poor fuel quality or incorrect fuel may cause drivability problems, such as hesitation, lack of power, stalling, or failure to start. They may also degrade functionality of critical exhaust emissions components such as spark plugs, oxygen sensors, and the catalytic converter. Damage from poor fuel quality, water contamination, or if the vehicle requires premium fuel, operating the vehicle on gasoline with a Pump Octane less than 91 (R+M)/2, may not be covered. Prohibited fuels are: Gasolines containing any methanol, MMT, an organometallic octane enhancing additive, and/or fuels containing more than 15% ethanol in non-Flex Fuel Vehicles (FFV). Please refer to your Owner's Manual under "Fuel," for additional recommendations, including the use of TOP TIER Detergent Gasoline. Additional information can also be found at <http://www.toptiergas.com>

Third Party Externally Connected Electrical Products

This warranty does not apply to hardware or software of a third party device that is connected to the vehicle or its components, even if integrated or delivered with the vehicle. GM is not responsible for the quality or accuracy of any information, or service accessed through or from any third party device or platform. Software distributed by GM inside or outside the vehicle (including, but not limited to system software or applications) is not covered by this Warranty. GM does not warrant that connections to, from or through the vehicle will be uninterrupted or error-free. Also, the user should back-up their data and user information frequently. GM is not responsible for any loss or damage to data or information made available in connection with the use of the vehicle.

In addition, this Warranty does not apply to:

- consumable parts that are designed to diminish over time, unless failure has occurred due to a defect in materials or workmanship;
- damage caused by a third party device or service (including upgrades and expansions), or (d) to obsolescence or lack of utility with future versions of external hardware or software, including, but not limited to mobile devices.

ALTERATIONS AND WARRANTIES: The Chevrolet New Vehicle Limited Warranty does not cover any damage or failure resulting from modifications, installations, or alterations to the original equipment as manufactured or assembled by General Motors. The special body company, assembler, equipment installer or upfitter is solely responsible for warranties on the body or equipment and any alterations (or any effect of the alterations) to any of the parts, components, systems or assemblies installed by GM. General Motors is not responsible for the safety or quality of design features, materials or workmanship of any alterations by such suppliers.

IMPORTANT: This warranty is void on vehicles currently or previously titled as salvage scrapped, junked, or otherwise considered a total loss. Damage or Corrosion Due to Environment, Chemical Treatments, or Aftermarket Products

Damage Caused by airborne fallout, rail dust, salt from sea air, salt or other materials used to control road conditions, chemicals, tree sap, stones, hail, earthquake, water or flood, windstorm, lightning, the application of chemicals or sealants subsequent to manufacture, etc., is not covered. See "Chemical Paint Spotting" under Things to Know About the New Vehicle Limited Warranty on pg. 16. Damage Due to Insufficient or Improper Maintenance.



GM reserves the right to make changes at any time, without notice, in prices, colors, materials, equipment, specifications, models, and availability. Specifications, dimensions, measurements, ratings, and other numbers in this catalog and other printed materials provided at the dealership or affixed to vehicles are approximates based upon design and engineering drawings and prototypes and laboratory tests. Your vehicle may differ due to variations in manufacture and equipment. Since some information may have been updated since the time of printing, please check with your GM dealer for complete details. Some of the equipment shown or described throughout this publication may be available at extra cost, and/or is supplied by an independent supplier.

Copyright 2018 General Motors. All rights reserved. All text, images, graphics, and other materials in this publication are subject to the copyright and other intellectual property rights of General Motors. These materials may not be reproduced, distributed, or modified without the express written permission of General Motors. The marks appearing in this publication including, but not limited to: GM and the GM logo; Chevrolet and their respective logos, emblems, slogans, and vehicle model names and body designs; and other marks such as GM Fleet and Commercial are trademarks and/or service marks of General Motors, its subsidiaries, affiliates, or licensors.

For more detailed information, contact your District Sales Manager or see the online order guide at gmfleet.com.



For more information, visit gmfleet.com/police

