

Table of Contents

General Information	1-1	HVAC	6-1
General Information	1-3	HVAC - Automatic	6-3
Body Systems	2-1	HVAC - Manual	6-14
Fixed and Moveable Windows	2-3	Power and Signal Distribution	7-1
Horns and Pedestrian Alerts	2-12	Data Communications	7-3
Lighting	2-15	Electrical Component and Inline Harness	
Mirrors	2-47	Connector End Views	7-6
Trailer Systems	2-55	Power Outlets	7-764
Vehicle Access	2-69	Wiring Systems and Power	
Wipers and Washers	2-86	Management	7-779
Brakes	3-1	Transmission	8-1
Park Brake	3-3	Power Take-Off	8-3
Driver Information and Entertainment	4-1	Shift Lock Control	8-7
Image Display Cameras	4-3	INDEX	INDEX-1
Engine/Propulsion	5-1		
Starting, Charging, and Low Voltage Energy			
Storage	5-3		

BLANK

Section 1

General Information

General Information	1-3
Introduction	1-3
Vehicle, Engine and Transmission ID and VIN Location, Derivative and Usage	1-3
Vehicle Certification, Tire Placard, and Anti-Theft Label	1-5
RPO Code List	1-7

BLANK

General Information

Introduction

Vehicle, Engine and Transmission ID and VIN Location, Derivative and Usage



5138041

The vehicle identification number (VIN) plate is the legal identifier of the vehicle. The VIN plate is located on the upper left corner of the instrument panel. The VIN number can be seen through the windshield from the outside of the vehicle:

Vehicle Identification Number (VIN) System

Position	Definition	Character	Description
1	Country of Origin	1	United States
2	Manufacturer	G	General Motors
3	Vehicle Brand/Type	B	Chevrolet Incomplete Truck
		C	Chevrolet Truck

1-4 General Information

Vehicle Identification Number (VIN) System (cont'd)

Position	Definition	Character	Description
4	GVWR/Brake System/Body Style	N	6,001–7,000 lbs/Hydraulic/Commercial Special Cutaway, Two (2) Door Cab pick-up, Motor Home Chassis
		P	6,001–7,000 lbs/Hydraulic/Crew Cab
		R	6,001–7,000 lbs/Hydraulic/Extended Cab
		U	7,001–8,000 lbs/Hydraulic/Crew Cab
		V	7,001–8,000 lbs/Hydraulic/Extended Cab
		0	9,001–10,000 lbs/Hydraulic/Commercial Special Cutaway, Two (2) Door Cab pick-up, Motor Home Chassis
		1	9,001–10,000 lbs/Hydraulic/Crew Cab
		2	9,001–10,000 lbs/Hydraulic/Extended Cab
		3	10,001–14,000 lbs/Hydraulic/Commercial Special Cutaway, Two (2) Door Cab pick-up, Motor Home Chassis
		4	10,001–14,000 lbs/Hydraulic/Crew Cab
		5	10,001–14,000 lbs/Hydraulic/Extended Cab
5/6	Chassis/Series	W/L	4x2, 2500 Chevrolet Silverado Work Truck
		W/M	4x2, 2500 Chevrolet Silverado Custom
		W/N	4x2, 2500 Chevrolet Silverado LT
		W/P	4x2, 2500 Chevrolet Silverado LTZ
		W/R	4x2, 3500 Chevrolet Silverado Work Truck
		W/S	4x2, 3500 Chevrolet Silverado LT
		W/T	4x2, 3500 Chevrolet Silverado LTZ
		W/9	4x2, Chevrolet Silverado (Non-US, Non-Canada)
		Y/L	4x4, 2500 Chevrolet Silverado Work Truck 4WD
		Y/M	4x4, 2500 Chevrolet Silverado Custom 4WD
		Y/N	4x4, 2500 Chevrolet Silverado LT 4WD
		Y/P	4x4, 2500 Chevrolet Silverado LTZ 4WD
		Y/R	4x4, 2500 Chevrolet Silverado High Country 4WD
		Y/S	4x4, 3500 Chevrolet Silverado Work Truck 4WD
		Y/T	4x4, 3500 Chevrolet Silverado LT 4WD
		Y/U	4x4, 3500 Chevrolet Silverado LTZ 4WD
		Y/V	4x4, 3500 Chevrolet Silverado High Country 4WD
Y/9	4x4, Chevrolet Silverado (Non-US, Non-Canada)		
7	Restraint System	E	RPO AY0 – Active Manual Belts, Airbags – Driver and Passenger – Front (1st row), Front Seat Side (1st row), Roof Side (all seating rows)
8	Engine Type	Y	L5P - ENGINE DIESEL, 8 CYL, 6.6L, DI, V8, TURBO, DURAMAX, GEN 5
		7	L8T - ENGINE GAS, 8 CYL, 6.6L, SIDI, VVT, CAST IRON
9	Check Digit	—	Check Digit
10	Model Year	R	2024
11	Plant Location	F	Flint, Michigan, USA
		1	Oshawa, Canada
12–17	Plant Sequence Number	—	Plant Sequence Number

6.6L (L5P) Engine ID and VIN Derivative Location

Engine Identification


6.6L (L8T) Engine ID and VIN Derivative Location

Engine Identification

10L1000 (MGM/MGU) Transmission ID and VIN Derivative Location

Transmission Identification Information

Vehicle Certification, Tire Placard, and Anti-Theft Label

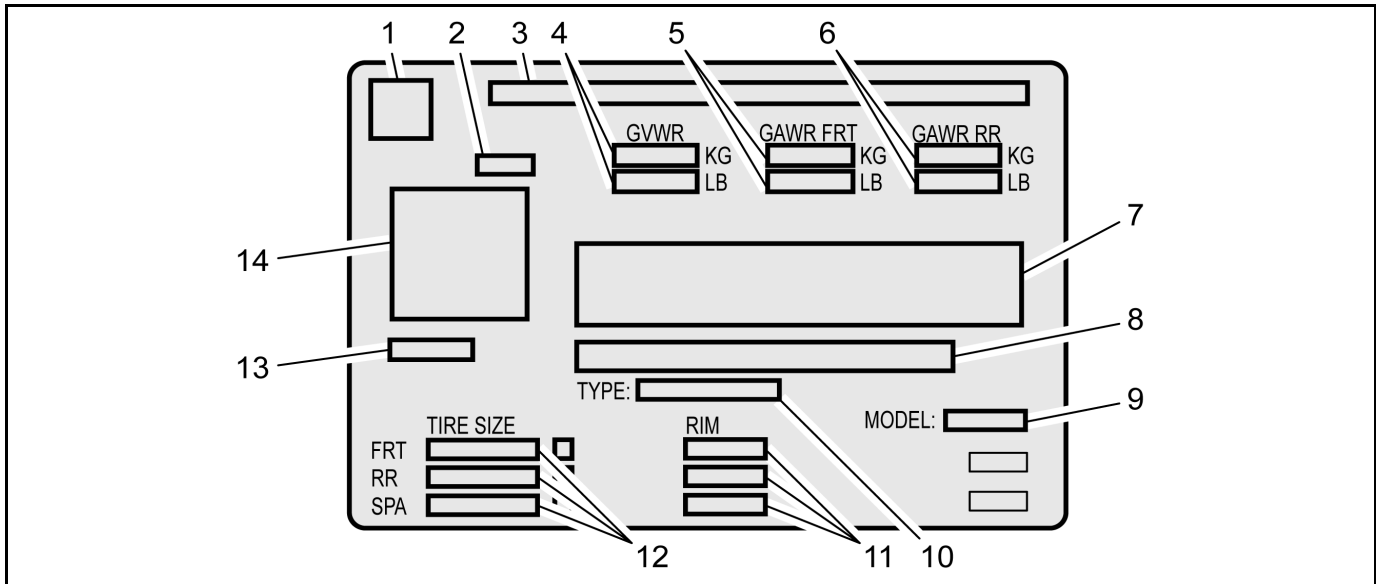


4992823

Vehicle Certification Label

Callout	Description
A vehicle-specific Certification label is attached to the vehicle's center pillar (B-pillar) and displays the following assessments:	
1	Logo
2	Final Date of Manufacture (Month and Year MM/YY) Date of manufacture is to reflect the date that the vehicle is counted as built. In those cases where a replacement label is needed, the replacement label should reflect the actual build date not the date of replacement.
3	Name of Manufacturer
4	Maximum Gross Vehicle Weight Rating (GVWR)
5	Maximum Gross Axle Weight Rating (GAWR) - Front
6	Maximum Gross Axle Weight Rating (GAWR) - Rear
7	Certification Statement
8	Vehicle Identification Number (VIN)
9	Engineering Model Number
10	Vehicle Class Type (Pass Car, etc.)
11	Original Equipment Rim Size
12	Original Equipment Tire Size
13	Paint Code
14	QR Code Once the QR code is scanned, the information will appear in this order on your smartphone or laptop: VIN, Model Year, Model, Build Month, Year, Engineering Book, Vehicle Order Number, 3 Digit RPO Codes sorted alphanumerically and the Paint Code (same code appears the lower left of the QR code)


1-6 General Information

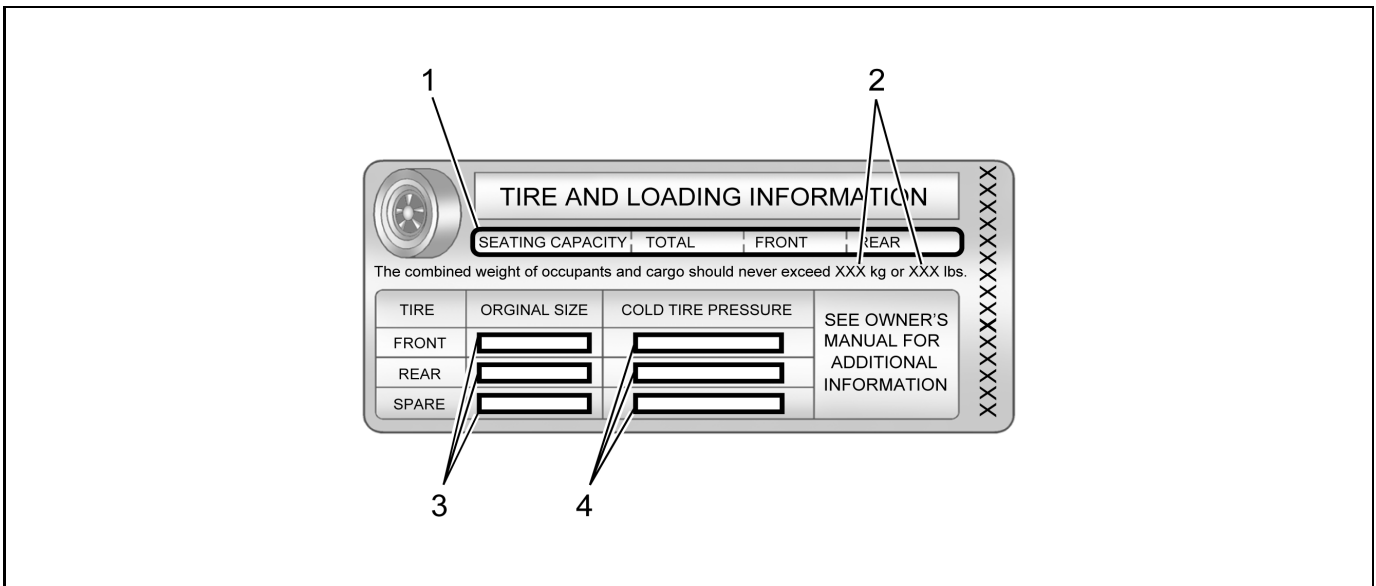

4962282

Tire Placard

Callout	Description
A vehicle-specific Tire and Loading Information label is attached to the vehicle's center pillar (B-pillar) and displays the following assessments:	
1	Specified Occupant Seating Positions
2	Maximum Vehicle Capacity Weight
3	Original Equipment Tire Size
4	Tire Pressure, Front, Rear, and Spare (Cold)

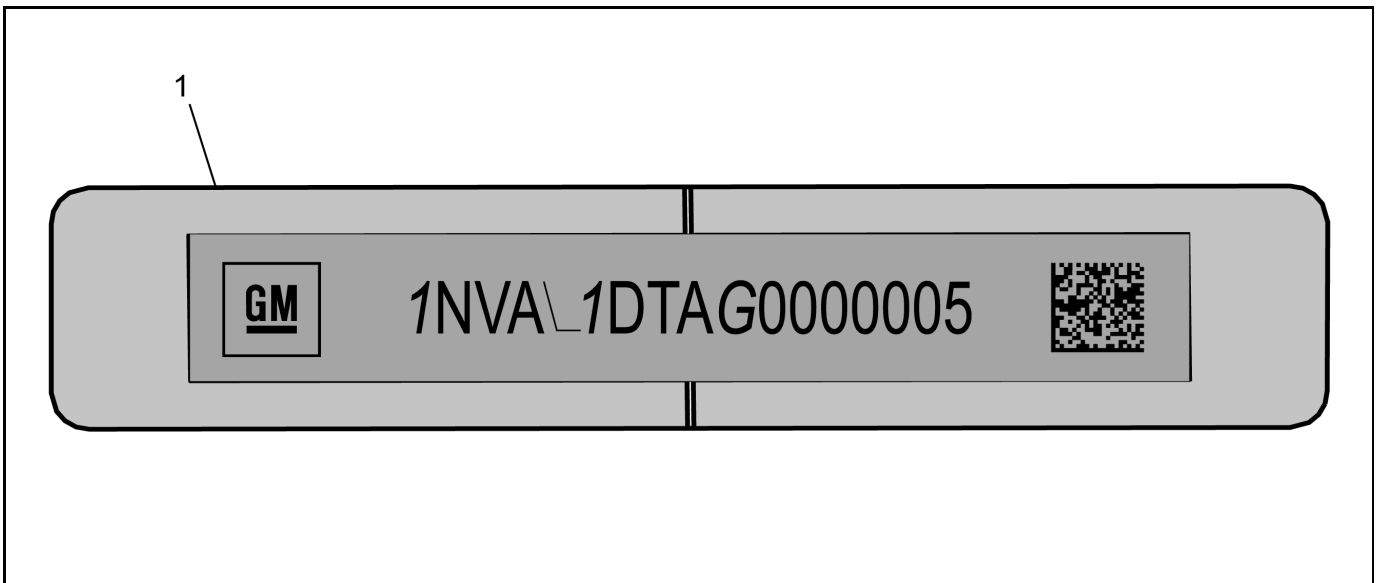

4962289

Anti-Theft Label

Callout	Description
This legal identifier is in the front corner of the instrument panel, on the driver side of the vehicle. It can be seen through the windshield from outside. The Vehicle Identification Number (VIN) also appears on the Vehicle Certification and certificates of title and registration.	
1	Vehicle Identification Number (VIN)

RPO Code List

The following table provides the description of the Regular Production Option (RPO) codes that are available on the vehicle. The vehicle's RPO list is printed on the Service Parts Identification Label.

RPO	Description
00C	IDENTIFICATION-NOT EQUIPPED WITH WIRELESS CHARGING MODULE
00H	IDENTIFICATION-EQUIPPED WITH HVAC MODULE WITH BRUSHED MOTOR
00J	IDENTIFICATION-EQUIPPED WITH SENSING DIAGNOSTIC MODULE DESIGN 2
00R	IDENTIFICATION-NOT EQUIPPED WITH REAR HEAT SEATS
00S	IDENTIFICATION-NOT EQUIPPED WITH SIDE BLIND ZONE ALERT
00V	IDENTIFICATION-NOT EQUIPPED WITH FRONT HEAT/VENT SEATS
00Y	IDENTIFICATION-NOT EQUIPPED WITH REAR PARK ASSIST
00Z	IDENTIFICATION-NOT EQUIPPED WITH FRONT AND REAR PARK ASSIST
1CX	PACKAGE-CX OPTION 1
1LT	PACKAGE-LT OPTION 1
1LZ	PACKAGE-LZ OPTION 1
1WT	PACKAGE-WT OPTION 1
3LZ	PACKAGE-LZ OPTION 3
4AA	INTERIOR TRIM-JET BLACK
4AK	INTERIOR TRIM-JET BLACK/ CAPTAIN BLUE
4JJ	INTERIOR TRIM-GIDEON/VY DK ATMOSPHERE
4JS	INTERIOR TRIM-JET BLACK/UMBER
4KW	INTERIOR TRIM-JET BLACK / ARTEMIS
5A7	WHEEL SPARE-NONE
5JY	ACCESSORY-TONNEAU - RR COMPT - SOFT FOLDING
5K4	ACCESSORY-DECAL PACKAGE - BODYSIDE - DESIGN 2
5LE	ACCESSORY-GARAGE DOOR OPENER
5VE	ACCESSORY-EXHAUST TIP - DESIGN 5
5VG	ACCESSORY-EXHAUST TIP - DESIGN 4
5VI	ACCESSORY-TIE DOWN RINGS - CARGO AREA
65C	LABEL, WARNING-CALIFORNIA, PROP 65 COMPLIANT

RPO	Description
6K5	SALES PACKAGE-CONVENIENCE II
77S	LABEL, REGULATORY-CALIFORNIA, SECTION 177 STATES
9J4	BUMPER RR-(NONE)
9L3	TIRE SPARE-NONE
9L7	EQUIPMENT-ACSRV WRG JUNC BLK
A2S	ADJUSTER DRIVER SEAT-4WAY, DISCONT MAN RECLINE, MAN FORE/AFT
A2X	ADJUSTER DRIVER SEAT-8WAY, PWR RECLINE, PWR FORE/AFT, PWR HEIGHT, PWR TILT
A45	MEMORY-SEAT ADJUSTER, MIRROR, POWER, DRIVER, PERSONALIZATION
A48	WINDOW RR-FULL WIDTH, SLIDING, POWER
A4H	HANDLING CHARGE-SHIP THROUGH TO GROUND EFFECT, OSHAWA, CANADA
A50	SEAT-FRT BKT
A60	LOCK CONTROL RR CMPT-LID, TAILGATE, KEY ACTIVATED
A68	SEAT RR-SPLIT, FOLDING
A7E	ADJUSTER PASS ST-4WAY, DISCONT MAN RECLINE, MAN FORE/AFT
A7K	ADJUSTER PASS ST-8WAY, PWR RECLINE, PWR FORE/AFT, PWR HEIGHT, PWR TILT
AAK	ACCESSORY-FLOOR LINER - CONTOURED - ALT DESIGN 1
AAO	ACCESSORY-FLOOR LINER - CONTOURED - ALT DESIGN 2
AED	WINDOW REG PASS DR-POWER OPERATED, EXPRESS DOWN (DO NOT USE NEXT NEW MAJOR)
AEF	WINDOW REG PASS DR-POWER OPERATED, EXPRESS UP/DOWN (DO NOT USE NEXT NEW MAJOR)
AEQ	WINDOW REG REAR DR-POWER OPERATED, EXPRESS DOWN (DO NOT USE NEXT NEW MAJOR)
AKO	WINDOW TYPE-PRIVACY
AKP	WINDOW TYPE-SOLAR ABSORBING
AL0	SENSOR INDICATOR-INFLATABLE RESTRAINT, FRT PASS/CHILD PRESENCE DETECTOR
ANM	SALES PACKAGE-FIRE AND RESCUE
ANQ	SALES PACKAGE-SNOW PLOW SPECIAL EDITION

1-8 General Information

RPO	Description
AQQ	LOCK CONTROL, ENTRY-REMOTE ENTRY, EXTENDED RANGE (MY 09 AND FUTURE)
AU3	LOCK CONTROL-SIDE DR, ELEC
AVI	RESTRAINT PROVISIONS-ADJUSTABLE GUIDE LOOP
AVJ	LOCK CONTROL, ENTRY-REMOTE ENTRY, EXTENDED RANGE, PASSIVE ENTRY, FRONT DOORS
AXG	WINDOW REG DRVR DR-POWER OPERATED, EXPRESS UP/DOWN (DO NOT USE NEXT NEW MAJOR)
AXK	VEHICLE TYPE-TRUCK
AY0	RESTRAINT SYSTEM-SEAT, INFLATABLE, DRIVER & PASS FRT, SEAT SIDE, ROOF SIDE
AZ3	SEAT-FRT SPLIT, DRIVER, PASS, FULL FEATURE CENTER
B1J	LINER-RR WHEELHOUSE
B26	SALES PACKAGE-SAFETY PACKAGE VAR. 1
B30	COVERING FLOOR-CARPET
B32	COVERING FRT-FLOOR MATS, AUX
B33	COVERING REAR-FLOOR MATS, AUX
B34	COVERING FRT-FLOOR MATS, CARPETED INSERT
B35	COVERING REAR-FLOOR MATS, CARPETED INSERT
B3L	STEPS, RUNNINGBOARD-SIDE, RETRACTABLE, POWER, BLACK
B59	SALES PACKAGE-FUNCTIONAL PACKAGE
BG9	COVERING FLOOR-RUBBER
BHP	COVER-WINTER GRILLE
BKE	COVERING REAR-FLOOR MATS, FLOOR LINER CARPET INSERT
BKF	COVERING FRT-FLOOR MATS, FLOOR LINER CARPET INSERT
BPH	APPEARANCE PACKAGE-CHEVROLET "OFF ROAD"
BRS	STEPS, RUNNINGBOARD-SIDE, RETRACTABLE, POWER, BRIGHT
BTM	SWITCH-START, KEYLESS
BTV	REMOTE START-VEHICLE
BVQ	STEPS, RUNNINGBOARD-SIDE, TUBULAR, CHROME
BWN	STEPS-CORNER ASSIST, BUMPER
C32	HEATER AIR SYSTEM-HEATING/ DEFROSTER SYSTEM, REINFORCED, ELECTRIC
C49	DEFOGGER-RR WINDOW, ELECTRIC
C59	VENT-AIR, CONSOLE, RR
C67	HVAC SYSTEM-AIR CONDITIONER FRT, ELECTRONIC CONTROLS

RPO	Description
CE1	WIPER SYS WINDSHIELD-PULSE, MOISTURE SENSITIVE
CF5	ROOF-SUN, GLASS, SLIDING, ELEC (DO NOT USE NEXT NEW MAJOR)
CGN	LINER-PUBX, SPRAY ON
CGO	COLLECTION GVW-COLLECTION GVW LESS THAN OR EQUAL TO 10,000 LBS
CJ2	HVAC SYSTEM-AIR CONDITIONER FRT, AUTO TEMP CONT, AUX TEMP CONT
CMD	PLANT CODE-FLINT, MI, USA (TRK)
CMT	SALES PACKAGE-GOOSE NECK/5TH WHEEL PREP AND CAMERA
CTT	HITCH ASSIST-GUIDELINES
CWM	SALES PACKAGE-TECHNOLOGY
CXH	SALES PACKAGE-INTERIOR LEATHER PACKAGE
D07	CONSOLE-FRT COMPT, FLOOR, CUSTOM
D31	MIRROR I/S R/V-TILT
D4J	COUNTRY-US VIRGIN ISLAND
D72	HANDLE O/S DOOR-BLACK
D75	HANDLE O/S DOOR-BODY COLOR
DBG	MIRROR O/S-MAN EXT, PWR ADJ, HEAT, MAN FOLD, TURN SIG, AUX CLR, FLAT DRVR/PASS, WFOV DRVR/PASS
DD8	MIRROR I/S R/V-LT SENSITIVE
DH6	MIRROR I/S FRT VAN-LH & RH, SUNSHADE, ILLUM (DO NOT USE NEXT NEW MAJOR)
DLN	MIRROR O/S-LH & RH, ELEC REMOTE CONTROL, HEATER, MANUAL FOLD, FLAT/DRVR, FLAT/PASS
DMQ	DECAL-ALASKAN
DN1	DECAL-PICK UP BOX - DELETE
DNS	EQUIPMENT-SUPPLIER INSTALLED
DP6	MIRROR PROVISIONS-HOUSING, PAINTED
DP9	MIRROR PROVISIONS-HOUSING, CHROME
DRC	MIRROR I/S R/V-LT SENSITIVE, PARTIAL VIDEO DISPLAY
DRZ	MIRROR I/S R/V-LT SENSITIVE, FULL VIDEO DISPLAY
DUD	MIRROR O/S-LH & RH, WFOV, MANUAL, MAN FOLD, MAN EXT, FLAT/COVN DR/PASS
DWI	MIRROR O/S-LH&RH,WFOV,MAN EXT, PWR FLD,HTD,TURN SIG,R/CON,ELEC, AUX CARGO,AUX CLR,PERM LIGHT,FLAT LT SENS DR/PAS
DZC	MIRROR O/S-LH&RH,WFOV,PWR EXT, PWR FOLD,HTD,TURN SID,R/CON MEM, AUX CARGO,AUX CLR,PERM LT,FLAT LT SENS DR/PAS
DZW	CHASSIS-DUAL REAR WHEEL, RIDE & HANDLING
E20	HANDLE O/S DOOR-CHROME

RPO	Description
E63	BODY EQUIPMENT-FLEETSIDE PICK-UP BOX
E6J	COUNTRY-PUERTO RICO
EF7	COUNTRY-UNITED STATES OF AMERICA (USA)
EU2	ACCESSORY-WHEEL - 18" X 8.0 - J - ALUMINUM - DESIGN 2
F48	CHASSIS DRIVE LINE-ALL WHEEL DRIVE (AWD)/FOUR WHEEL DRIVE(4WD), DRIVER SELECT
F60	SPRING FRONT-HEAVY DUTY
FE9	CERTIFICATION-EMISSION, FEDERAL
FHS	VEHICLE FUEL-GASOLINE E85
FHX	VEHICLE FUEL-DIESEL B20
FJW	VEHICLE FUEL-GASOLINE E15
FPF	EQUIPMENT-EMISSION-DIESEL DPF MANUAL REGENERATION
G1W	PRIMARY COLOR-EXTERIOR, ABALONE WHITE TRICOAT(140X)
G48	PRIMARY COLOR-EXTERIOR, GALACTICA MET-1 (613G)
G6M	PRIMARY COLOR-EXTERIOR, RUSH MET-1 (618G)
G7C	PRIMARY COLOR-EXTERIOR, PULL ME OVER RED SOLID (130X)
G80	AXLE POSITRACTION-LIMITED SLIP
GAZ	PRIMARY COLOR-EXTERIOR, SUMMIT WHITE (G) 8624
GBA	PRIMARY COLOR-EXTERIOR, BLACK (G) 8555
GF2	TRIM PACKAGE-CUSTOM
GF3	TRIM PACKAGE-LT
GF5	TRIM PACKAGE-WORK TRUCK
GF9	TRIM PACKAGE-LTZ
GFD	TRIM PACKAGE-HIGH COUNTRY
GNO	PRIMARY COLOR-EXTERIOR, BARB WIRE MET -1 (633D)
GNT	PRIMARY COLOR-EXTERIOR, RADIANT RED TINT MET-1 (170H)
GT4	AXLE REAR-3.73 RATIO
GTY	AXLE-WIDE TRACK
GU6	AXLE REAR-3.42 RATIO
GXD	PRIMARY COLOR-EXTERIOR, SHARKSKIN MET-1 (130H)
GXP	PRIMARY COLOR-EXTERIOR, COSMONAUT MET-1 (136H)
H0U	INTERIOR TRIM CONFIG-CLOTH, LEVEL 2, JET BLACK
H0Y	INTERIOR TRIM CONFIG-LEATHER, LEVEL 1, JET BLACK
H1T	INTERIOR TRIM CONFIG-CLOTH, LEVEL 1, JET BLACK
H1Y	INTERIOR TRIM CONFIG-LEATHER, LEVEL 2, JET BLACK

RPO	Description
H2G	INTERIOR TRIM CONFIG-VINYL, LEVEL 1, JET BLACK
H37	INTERIOR TRIM CONFIG-LEATHER, LEVEL 7, JET BLACK / ARTEMIS
H38	INTERIOR TRIM CONFIG-LEATHER, LEVEL 8, JET BLACK / CAPTAIN BLUE
HF0	INTERIOR TRIM CONFIG-LEATHER, LEVEL 8, JET BLACK / UMBER
HS1	ALERT-SAFETY HAPTIC SEAT
HV5	INTERIOR TRIM CONFIG-CLOTH, LEVEL 2, GIDEON/VY DK ATMOSPHERE
HVC	INTERIOR TRIM CONFIG-LEATHER, LEVEL 1, GIDEON/VY DK ATMOSPHERE
HVE	INTERIOR TRIM CONFIG-LEATHER, LEVEL 2, GIDEON/VY DK ATMOSPHERE
HXC	INTERIOR TRIM CONFIG-LEATHER, LEVEL 8, JET BLACK
ICY	ACCESSORY-ARCTIC HOSE - POWER STEERING
IOK	RADIO-INFOTAINMENT SYSTEM - 3.X MID/HIGH HMI, ENHANCED CONNECTIVITY 2.0, VOICE RECOGNITION
IOR	RADIO-INFOTAINMENT SYSTEM - 3.X LOW HMI, MIDLEVEL CONNECTIVITY 3.X
J24	ENGINEERING YEAR-2024
J61	BRAKE SYSTEM-POWER, FRT & RR DISC, ABS, 17"
JBP	BRAKE LINING WEAR SY-LIFE SPAN PROGNOSTIC INDICATOR
JHD	BRK APL CTRL FEATURE-HILL DESCENT, GEAR HOLD
JL1	BRK APL CTRL FEATURE-INTEGRATED TRAILER BRAKE
K05	HEATER ENG-BLOCK
K10	FILTER MONITOR-ENGINE AIR
K34	CRUISE CONTROL-AUTOMATIC, ELECTRONIC
K40	ENGINE BRAKE-EXHAUST
K47	AIR CLEANER-HIGH CAPACITY
K4C	CHARGER-INDUCTIVE PORTABLE WIRELESS DEVICE
K4Z	BATTERY-LN3, AGM, 12V, 70AH, 700 CCA, AUX
KA1	HEATER SEAT FRT-DRVR & PASS
KA6	HEATER SEAT-REAR
KC4	COOLING SYSTEM-ENG OIL
KC5	RECEPTACLE-ELECTRICAL, ACCESSORY
KC9	RECEPTACLE PUBX-ELECTRICAL, 110 VOLT
KGU	MODULE-UPFITTER, SERIAL DATA GATEWAY
KHF	GENERATOR-170 AMP AND 220 AMP, DUAL
KI3	STEERING WHEEL HEAT-AUTOMATIC
KI4	RECEPTACLE I/P-ELECTRICAL, 110 VOLT

1-10 General Information

RPO	Description
KNP	COOLING SYSTEM-TRANS, HD
KQV	HEATER-SEAT, VENTED, FRT (DO NOT USE NEXT NEW MAJOR, USE KU9)
KSG	CRUISE CONTROL-AUTOMATIC, ADAPTIVE, WITH STOP/GO
KW5	GENERATOR-220 AMP
KW7	GENERATOR-170 AMP
L5P	ENGINE-DIESEL, 8 CYL, 6.6L, DI, V8, TURBO, DURAMAX, GEN 5, VAR. 1
L8T	ENGINE-GAS, 8 CYL, 6.6L, SIDI, VVT, CAST IRON
M1F	POWER TAKE OFF-RR PTO
MAH	MARKETING AREA-US, PUERTO RICO/USVI
MGM	TRANSMISSION-AUTO 10 SPD, 10L1000, GRX, GEN 1, VAR 1
MGU	TRANSMISSION-AUTO 10 SPD, 10L1000, GRX, GEN 2, VAR 2
MKM	TRANSMISSION-AUTO 10 SPD, RWD 4.54 1ST, 2.86 2ND, 2.06 3RD, 1.71 4TH, 1.48 5TH, 1.26 6TH, 1.00 7TH, 10L1001
N06	STEERING COLUMN LOCK-ELECTRICAL
N2L	FUEL TANK-REAR TANK 40 GAL (151L)
N2M	FUEL TANK-FRONT TANK 23.5 GAL (89L)
N2N	FUEL TANK-DUAL TANK, FRONT TANK 23.5 GAL (89L) REAR TANK 40 GAL (151L)
N33	STEERING COLUMN-TILT TYPE
N37	STEERING COLUMN-TILT, TELESCOPING
N57	STEERING WHEEL-SYNTHETIC, 4 SPOKE, THIN, ROUND
N79	WHEEL SPARE-18 X 8.0, J, STEEL, DESIGN 2
NB5	EXHAUST SYSTEM-SINGLE (DO NOT USE NEXT NEW MAJOR, USE NC2)
NE1	CERTIFICATION-EMISSION, GEOGRAPHICALLY RESTRICTED REGISTRATION
NHT	PERFORMANCE PACKAGE-ENHANCED TOWING
NK5	STEERING WHEEL-STANDARD
NQF	TRANSFER CASE-ELECTRIC SHIFT CONT, TWO SPEED, ALUM
NQH	TRANSFER CASE-ACTIVE, TWO SPEED, SWITCH ACTIVATED, ALUM
NRW	EMISSION SYSTEM-CALIFORNIA, SULEV170
NTB	EMISSION SYSTEM-FEDERAL, TIER 3
NU9	EMISSION SYSTEM-CALIFORNIA, ULEV200
NUM	EMISSION SYSTEM-CALIFORNIA, LEV3 MDV 10-14K GVW
NV8	STEERING-POWER, MAGNETIC SPEED, VARIABLE ASSIST
NZ4	WHEEL SPARE-17 X 7.5, J, STEEL, DESIGN 2

RPO	Description
NZZ	SALES PACKAGE-SKID PLATE, "OFF ROAD" SPORT
OST	PLANT CODE-OSHAWA 2, ONT, CANADA
P03	COVER, WHEEL-VAR 3
P06	TRIM DISCS-WHEEL
PPW	PHONE PROJECTION-PHONE PROJECTION WIRELESS
PTO	ENGINE CONTROL-POWER TAKE OFF (PTO) CONTROLS
PTT	TRAILER TIRE PRESSUR-MANUAL LEARN
PTW	WHEEL-18 X 8.0, J, ALUMINUM, DESIGN 2
PYN	WHEEL-17 X 7.5, J, STEEL, DESIGN 7
PYQ	WHEEL-17 X 7.5, J, ALUMINUM, DESIGN 7
PYT	WHEEL-18 X 8.0, J, STEEL, DESIGN 2
PYV	WHEEL-18 X 8.0, J, ALUMINUM, DESIGN 23
PYW	WHEEL-17 X 6.5, J, STEEL, DESIGN 2
PZ8	IMAGE ADJUSTMENT-HITCH VIEW
Q21	WHEEL-18 X 6.5, J, ALUMINUM, DESIGN 1
Q2V	ACCESSORY TIRE-TIRE ALL - LT275/70R18 E 125/122 S BW AT VAR 1
Q7G	WHEEL-20 X 8.5, J, ALUMINUM, DESIGN 6
Q7Q	WHEEL-20 X 8.5, J, ALUMINUM, DESIGN 12
Q86	WHEEL-20 X 8.5, J, ALUMINUM, DESIGN 25
QF6	TIRE ALL-LT275/70R18 E 125/122 S BW AT VAR 1
QF9	TIRE ALL-LT275/65R20 E 126/123 S BW AT VAR 1
QFG	TIRE ALL-LT275/65R20 E 126/123 S BW OOR VAR 1
QG3	TIRE ALL-LT275/70R18 E 125/122 R BW OOR VAR 1
QHQ	TIRE ALL-LT245/75R17 E 121/118R BW ALS
QHY	TIRE ALL-LT235/80R18 E 121/118R BW AT
QK1	GATE TYPE-PUBX END STANDARD
QK2	GATE TYPE-PUBX END ENHANCED
QMG	TIRE ALL-LT305/70R18 E 126/123 R BW OOR VAR 1
QNJ	WHEEL SPARE-18 X 9.0, J, ALUMINUM, DESIGN 2
QNO	WHEEL SPARE-18 X 9.0, J, ALUMINUM, DESIGN 4
QNZ	TIRE SPARE-LT305/70R18 E 126/123 R BW OOR VAR 1
QT2	GATE FUNCTION-MANUAL
QT5	GATE FUNCTION-MANUAL ASSIST POWER RELEASE
QT6	GATE FUNCTION-POWER
QXT	TIRE ALL-LT265/70R17 E 121/118 Q BW AT
QZT	TIRE ALL-LT235/80R17 E 120/117R BW AT

RPO	Description
R7O	SEAT RR-SPLIT, FOLDING, BASE STORAGE
RDI	ACCESSORY-KEYLESS ENTRY
REM	ACCESSORY-TIRE-TIRE ALL - LT275/65R20 E 126/123 S BW AT VAR 1
RIA	ACCESSORY-FLOOR LINER - CONTOURED
RIK	ACCESSORY-BADGE - EXTERIOR, PACKAGE, DESIGN 1
RN6	WHEEL-22 X 8.5, J, STEEL, DESIGN 1
RSR	OCCUPANT DETECT SYS-REAR SEAT, DOOR ACTIVATED
RVG	ACCESSORY-ADAPTER - TRAILER HARNESS
RVK	ACCESSORY-AIRBOX
RVQ	ACCESSORY-ASSIST STEPS - TUBULAR - OVAL - BLACK
RVS	ACCESSORY-ASSIST STEPS - TUBULAR - ROUND - BLACK
RW9	ACCESSORY-BED STORAGE BOX - SIDE FULL LENGTH - COMPOSITE
RWA	ACCESSORY-BED STORAGE BOX - FOAM
RWL	CHASSIS DRIVE LINE-REAR WHEEL DRIVE (RWD)
RWS	ACCESSORY-FLOOR MATS - CARPET
RXC	ACCESSORY-AIR, POLLUTANT, ODOR, FINE DUST, ALLERGEN
RXJ	ACCESSORY-CENTER CAP - WHEEL - DESIGN 2
RXQ	ACCESSORY-CONVENIENCE NET - BED MOUNTED
RY2	ACCESSORY-DECALS/APPLIQUES
RYT	ACCESSORY-FIRST AID KIT
S08	ACCESSORY-HIGHWAY SAFETY KIT
S0M	ACCESSORY-ILLUMINATED DOOR SILLS
S0T	ACCESSORY-INTERIOR TRIM KIT - ALTERNATE FINISH 1
S0Y	ACCESSORY-LAMPS - CARGO AREA
S1O	ACCESSORY-CONTAINER - LOCKABLE STORAGE - INTERIOR
S3I	ACCESSORY-LAMPS - PERIMETER ILLUMINATION
S41	ACCESSORY-LINER - WHEEL HOUSE
S47	ACCESSORY-LUG NUTS
S6L	ACCESSORY-PROTECTOR - ROCKER PANEL
S6N	ACCESSORY-RECEIVER COVER - TRAILER HITCH
S6P	ACCESSORY-REMOTE START KIT
S6Z	ACCESSORY-SEAT COVER - TAILORED - ALTERNATE MATERIAL
S8A	WHEEL-20 X 8.5, J, ALUMINUM, DESIGN 16

RPO	Description
S9O	WHEEL-20 X 8.5, J, ALUMINUM, DESIGN 18
SAF	LOCK-SPARE TIRE, HOIST SHAFT
SAK	ACCESSORY-WHEEL - 22 X 8.5 - J - ALUMINUM DESIGN 1
SAM	ACCESSORY-SKID PLATES
SAY	ACCESSORY-WHEEL - 22 X 8.5 - J - ALUMINUM DESIGN 2
SB7	ACCESSORY-DECAL PACKAGE - DESIGN 1
SB9	ACCESSORY-DECAL PACKAGE - DESIGN 2
SBL	ACCESSORY-WHEEL - 22 X 8.5 - J - ALUMINUM DESIGN 3
SBZ	ACCESSORY-SPORT PEDAL KIT
SD5	ACCESSORY-TIRE PRESSURE MONITOR
SDE	ACCESSORY-TRAILER HITCH - REMOVABLE
SDI	ACCESSORY-TRIANGLE - REFLECTIVE
SFE	ACCESSORY-WHEEL LOCKS
SFJ	ACCESSORY-WINDOW SHADES - REFLECTIVE
SFZ	ACCESSORY-EMBLEM - EXTERIOR - DESIGN 1
SHH	ACCESSORY-WHEEL - 20 X 8.5 - J - ALUMINUM - DESIGN 1
SHL	ACCESSORY-WHEEL - 20 X 8.5 - J - ALUMINUM - DESIGN 2
SIE	ACCESSORY-PUBX TIERED STORAGE
SIL	ACCESSORY-RSE - PORTABLE MEDIA CONNECTIVITY PKG - W/INTEGRATED POWER
SJB	ACCESSORY-GRILLE / GRILLE INSERTS - ALTERNATE FINISH 3
SK1	WHEEL SPARE-18 X 6.5, J, STEEL, DESIGN 1
SKP	WHEEL SPARE-17 X 6.5, J, STEEL, DESIGN 1
SKW	ACCESSORY-WHEEL - 20 X 8.5 - J - ALUMINUM - DESIGN 6
SKX	ACCESSORY-WHEEL - 20 X 8.5 - J - ALUMINUM - DESIGN 7
SL7	ACCESSORY-PUBX LADDER / UTILITY RACK STANCHIONS
SNO	ACCESSORY-HITCH COMPLETION PKG - GOOSENECK
SNR	SEAT RR-SPLIT, FOLDING, DELUXE STORAGE
SPY	ACCESSORY-LUG NUTS - ALT FINISH
SPZ	ACCESSORY-WHEEL LOCKS - ALT FINISH
SQ9	ACCESSORY-WHEEL - 20 X 8.5 - J - ALUMINUM - DESIGN 8
SRW	CHASSIS-SINGLE REAR WHEEL, RIDE & HANDLING

1-12 General Information

RPO	Description
SUR	ACCESSORY-TRAILER TIRE PRESSURE MONITOR
T3U	LAMP FRT FOG-FRT FOG
T4A	HEADLAMPS-HALOGEN
T4L	HEADLAMPS-LED
T4Z	SEAT BELT SAFETY SYS-SHIFTER INTERLOCK, GEN 1, NON-CUSTOMIZABLE
T8Z	SEAT BELT SAFETY SYS-SHIFTER INTERLOCK, GEN 3, INFOTAINMENT CUSTOMIZABLE
TDM	MODE DRIVER SETTINGS-TEEN DRIVER, INFOTAINMENT
TQ5	HEADLAMP HIGH BEAM-AUTO CONTROL
TRG	VISION TRAILER-INSIDE VIEW, REAR VIEW
TRO	ACCESSORY-CAMERA PKG - TRAILERING AUX MOUNTED
TUF	ORNAMENTATION-EMBLEM, "TEXAS EDITION"
U01	LAMP-FIVE, ROOF MARKER, TRUCK
U12	LAMP-EXTR, OSRV MIRROR, TASK
U2J	DIGITAL AUDIO SYSTEM-S-BAND - NONE
U2K	DIGITAL AUDIO SYSTEM-S-BAND
U73	ANTENNA-FIXED, RADIO
U95	SPEAKER SYSTEM-2, BASE
UBC	RECPT USB ARMREST-DUAL, CHARGE, DATA
UBI	RECPT USB FLR CNSL R-DUAL, CHARGE
UBJ	RECPT USB IP LWR-DUAL, CHARGE, DATA
UD5	PARK ASSIST-FRONT AND REAR
UD7	PARK ASSIST-REAR
UDC	DISPLAY INSTRUMENT-DRIVER INFO ENHANCED (ONE COLOR GRAPHIC)
UDU	PROVISIONS-REAR CAMERA PREP
UDV	DISPLAY INSTRUMENT-DRIVER INFO ENHANCED, FULL CLUSTER (MULTI COLOR GRAPHIC)
UE1	COMMUNICATION SYSTEM-VEHICLE, ONSTAR
UE4	SENSOR INDICATOR-FOLLOWING DISTANCE
UET	INDICATOR-SMART TRAILER INTEGRATION
UEU	SENSOR INDICATOR-FORWARD COLLISION ALERT
UF2	LAMP-CARGO
UF3	SWITCH-HIGH IDLE
UFG	REAR CROSS TRAFFIC-ALERT
UFL	LANE ACTIVE SAFETY-DEPARTURE WARNING
UG1	OPENER-GARAGE DOOR, UNIVERSAL

RPO	Description
UGA	HOOK-TOW, RED
UH5	INDICATOR-SEAT BELT WARNING, REAR SEAT
UHY	COLL IMMINENT BRK-LOW SPEED, VEH FWD MOVEMENT, BRAKE PREFILL, INTEGRATED BRAKE ASSIST
UIR	INFOTAINMENT DISPLAY-NORMALLY BLACK COLOR (TFT), 7", WVGA 800X480P
UJM	TIRE PRESS INDICATOR-MANUAL LEARN
UJN	TIRE PRESS INDICATOR-AUTO LEARN
UK3	CONTROL-STEERING WHEEL, ACCESSORY
UKC	SIDE ACTIVE SAFETY-OBSTACLE DETECTION ENHANCED
UKJ	PED DETECTION FRT-BASIC, PEDESTRIANS
UKV	SIDE ACTIVE SAFETY-OBSTACLE DETECTION ENHANCED, EXTENDED TRAILER VIEW
ULK	ACCESSORY-TOW HOOKS - RED
ULV	SALES PACKAGE-CHEVROLET BISON
UMN	SPEEDOMETER-INST, MILES & KILO, MILES ODOMETER
UQA	SPEAKER SYSTEM-PREMIUM AUDIO, BRANDED AMPLIFIER
UQF	SPEAKER SYSTEM-STANDARD AUDIO
URC	SWITCH-FLEXRIDE MODE SYSTEM
URD	INFOTAINMENT DISPLAY-NORMALLY BLACK COLOR (TFT), 13.4", 2400X960
UTJ	THEFT DETERENT-ELECTRICAL, UNAUTHORIZED ENTRY
UV2	VISION-360 VIEW, MONO, HD DIGITAL
UV6	HEAD UP DISPLAY-WINDSHIELD
UVB	VISION-REAR VIEW, MONO, HD DIGITAL
UVN	VISION AUXILIARY-CARGO BED
UVO	VISION AUXILIARY-CARGO BED BASE
UY2	WIRING PROVISIONS-CAMPER & 5TH WHEEL TRAILER
V46	BUMPER FRT-CHROME
V76	HOOK-TOW
V8D	VEHICLE STATEMENT-VEHICLE LABEL CONTENT - U.S. FMVSS
VAV	ACCESSORY-FLOOR MATS - ALL WEATHER
VB5	BUMPER FRT-COLOR
VBJ	ACCESSORY-UNDERSEAT STORAGE
VBR	ACCESSORY-PUBX RUBBER MAT
VDA	ACCESSORY-CAMPER & 5TH WHEEL TRAILER CONNECTION
VGC	PROTECTOR-FILM, PAINT ETCH PREVENTIVE
VH6	BUMPER FRT-BLACK
VJG	BUMPER RR-BLACK

RPO	Description
VJH	BUMPER RR-CHROME
VK3	LICENSE PLATE FRONT-FRT MOUNTING PKG
VKU	ACCESSORY-MIRROR CAPS - CHROME
VKY	ACCESSORY-DOOR HANDLES - ALTERNATE FINISH - CHROME
VLQ	HOOK-TOW, CHROME
VMK	ACCESSORY-CARGO MANAGEMENT SYSTEM RAILS
VOZ	ACCESSORY-TONNEAU - RR COMPT - HARD FOLDING - ALT DESIGN
VPB	ACCESSORY-TONNEAU - RR COMPT - VINYL W/ INTEGRAL CROSSBOW SUPPORTS
VQK	ACCESSORY-SPLASH GUARDS - CUSTOM MOLDED
VQO	ACCESSORY-ASSIST STEPS - BLACK
VQY	ACCESSORY-TOW HOOKS - CHROME
VQZ	ACCESSORY-EXHAUST TIP - DESIGN 1
VST	ACCESSORY-SILL PLATES - ALTERNATE DESIGN 1
VSX	LABEL-TOWING
VT5	BUMPER RR-COLOR KEYED
VT7	OWNERS MANUAL-ENGLISH LANGUAGE
VTA	ACCESSORY-EXHAUST TIP - DESIGN 2
VTI	SHUTTERS-FRONT GRILLE, ACTIVE, UPR
VTP	ACCESSORY-ASSIST STEPS - COMMERCIAL
VV4	COMMUNICATION EQUIP-MOBILE INTERNET CONNECTIVITY
VW9	ACCESSORY-CENTER CAP - WHEEL - DESIGN 3
VXH	ACCESSORY-ASSIST STEPS - TUBULAR - CHROME - OVAL
VXJ	ACCESSORY-ASSIST STEPS - TUBULAR - CHROME - ROUND
VXT	VEHICLE TYPE-INCOMPLETE
VXW	ACCESSORY-ASSIST STEPS - MOLDED
VYU	PROVISIONS-SNOW PLOW PREP
VZX	ACCESSORY-PUBX BEDLINER
W0F	ACCESSORY-GRILLE COVER - WINTER PROTECTION
W2D	ACCESSORY-CARGO NET
WBC	ACCESSORY-EXHAUST UPGRADE
WBL	SALES PACKAGE-SPORT
WEA	SALES PACKAGE-Z71 PLUS
WJP	SALES PACKAGE-MIDNIGHT EDITION
WLD	WINDOW CONTROL-REMOTE EXPRESS DOWN, ALL WINDOWS
WMY	VIN MODEL YEAR-2024
WPC	SALES PACKAGE-COMFORT AND CONVENIENCE

RPO	Description
WPQ	SALES PACKAGE-PROTECTION
X88	MARKET BRAND-CHEVROLET
XGC	ACCESSORY TIRE-TIRE ALL-LT265/60R22 E 123/120S BW AT
XGD	TIRE ALL-LT265/60R22 E 123/120S BW AT VAR 1
YF5	CERTIFICATION-EMISSION, CALIFORNIA
Z6A	PROVISIONS-SPECIAL EQUIPMENT, 5TH WHEEL/ GOOSENECK TRAILER HITCH PREP PACKAGE
Z71	CHASSIS PACKAGE-"OFF ROAD"
Z82	TRAILER PROVISIONS-SPECIAL EQUIPMENT, H.D.
Z85	CHASSIS PACKAGE-INCREASED CAPACITY
ZAE	TIRE SPARE-LT235/80R18 E 121/118R BW AT
ZHQ	TIRE SPARE-LT245/75R17 E 121/118 R BW ALS
ZL3	SALES PACKAGE-CONVENIENCE
ZLQ	SALES PACKAGE-LS FLEET
ZM9	SALES PACKAGE-COMFORT & CONVENIENCE
ZW9	BODY EQUIPMENT-BASE BODY OR CHASSIS
ZXT	TIRE SPARE-LT265/70R17/E BW TL
ZYG	TIRE SPARE-LT275/70R18 E 125/122 S BW AT VAR 1
ZZT	TIRE SPARE-LT235/80R17 E 120/117 R BW AT

BLANK

Section 2

Body Systems


<p>Fixed and Moveable Windows 2-3</p> <p> Schematic and Routing Diagrams 2-3</p> <p> Moveable Window Schematics 2-4</p> <p> Defogger Schematics 2-10</p> <p> Description and Operation 2-11</p> <p> Power Windows Description and Operation 2-11</p> <p> Rear Window Defogger Description and Operation 2-11</p> <p>Horns and Pedestrian Alerts 2-12</p> <p> Schematic and Routing Diagrams 2-12</p> <p> Horn Schematics 2-13</p> <p> Description and Operation 2-14</p> <p> Horns System Description and Operation 2-14</p> <p>Lighting 2-15</p> <p> Schematic and Routing Diagrams 2-15</p> <p> Headlights/Daytime Running Lights (DRL) Schematics 2-16</p> <p> Fog Lights Schematics 2-20</p> <p> Exterior Lights Schematics 2-21</p> <p> Interior Lights Schematics 2-37</p> <p> Interior Lights Dimming Schematics 2-39</p> <p> Description and Operation 2-43</p> <p> Exterior Lighting Systems Description and Operation 2-43</p> <p> Interior Lighting Systems Description and Operation 2-46</p> <p>Mirrors 2-47</p> <p> Schematic and Routing Diagrams 2-47</p> <p> Inside Rearview Mirror Schematics 2-48</p> <p> Outside Rearview Mirror Schematics 2-49</p> <p> Description and Operation 2-52</p> <p> Automatic Day-Night Mirror Description and Operation 2-52</p> <p> Outside Mirror Description and Operation 2-53</p> <p>Trailer Systems 2-55</p> <p> Schematic and Routing Diagrams 2-55</p> <p> Trailer Systems Schematics 2-56</p> <p> Description and Operation 2-63</p> <p> Trailer Description and Operation 2-63</p> <p>Vehicle Access 2-69</p> <p> Schematic and Routing Diagrams 2-69</p> <p> Door Lock/Indicator Schematics 2-70</p> <p> Release Systems Schematics 2-76</p>	<p> Endgate Schematics 2-77</p> <p> Hood Latch Schematics 2-81</p> <p> Description and Operation 2-82</p> <p> Door Ajar Indicator Description and Operation 2-82</p> <p> Endgate Description and Operation (QT6) 2-82</p> <p> Endgate Description and Operation (QT5 Without MultiPro Tailgate) 2-83</p> <p> Endgate Description and Operation (QT5 With MultiPro Tailgate) 2-84</p> <p> Hood Ajar Indicator Description and Operation 2-84</p> <p> Power Door Locks Description and Operation 2-84</p> <p>Wipers and Washers 2-86</p> <p> Schematic and Routing Diagrams 2-86</p> <p> Wiper/Washer Schematics 2-87</p> <p> Description and Operation 2-89</p> <p> Wiper/Washer System Description and Operation 2-89</p>
--	--

BLANK


Fixed and Moveable Windows

Schematic and Routing Diagrams


Moveable Window Schematics (Passenger Window (AED))

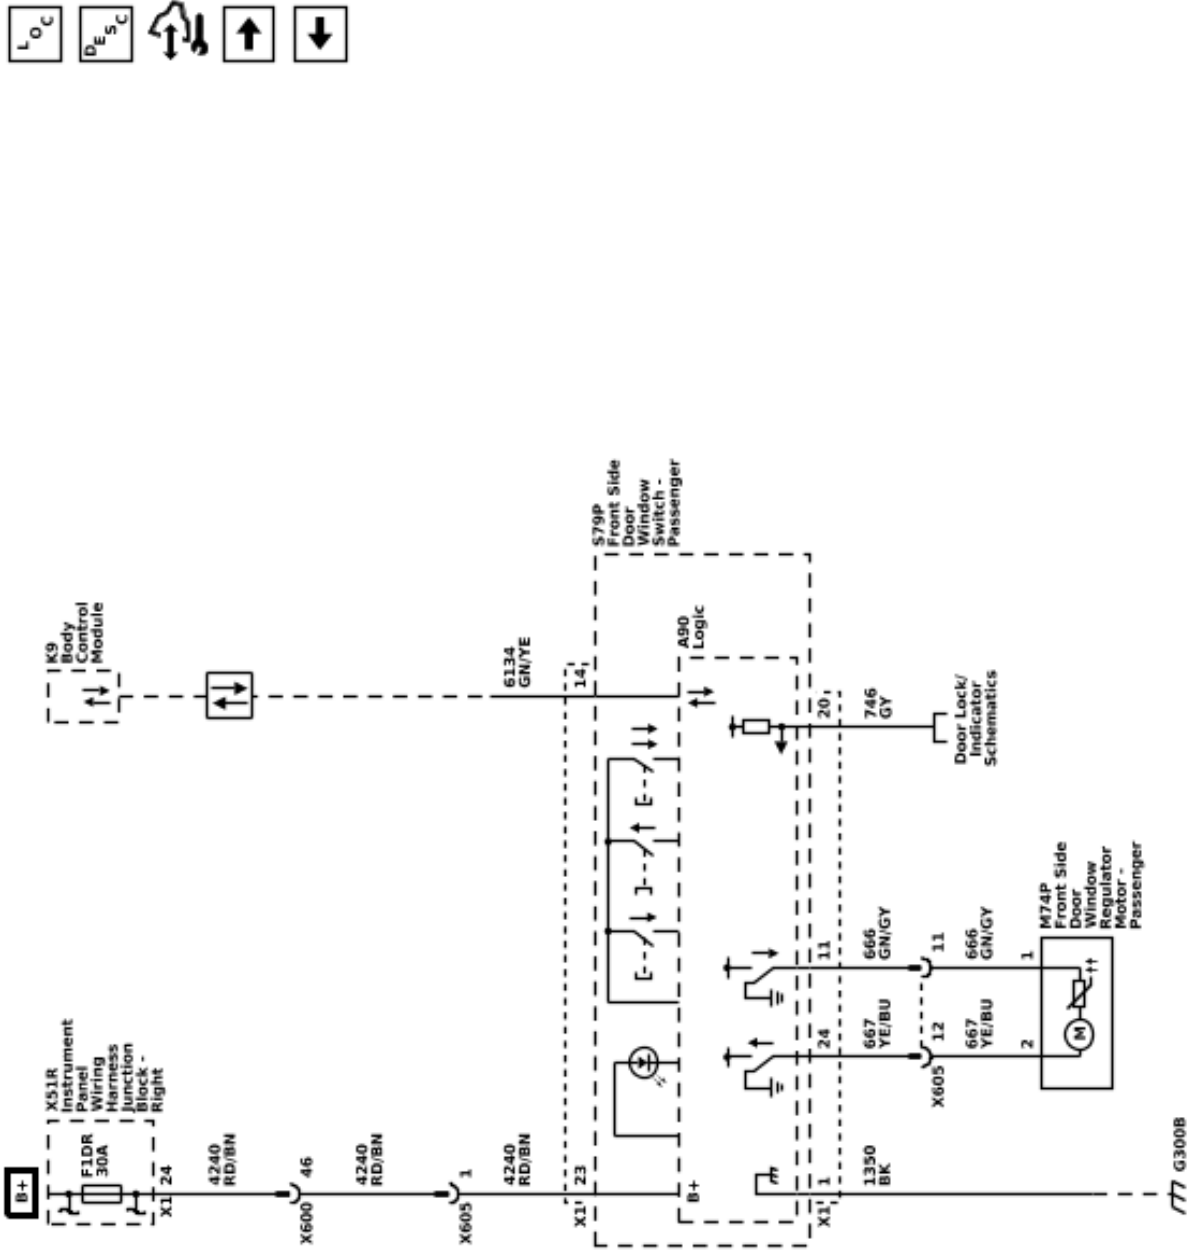


Moveable Window Schematics (Rear Windows (AEQ))

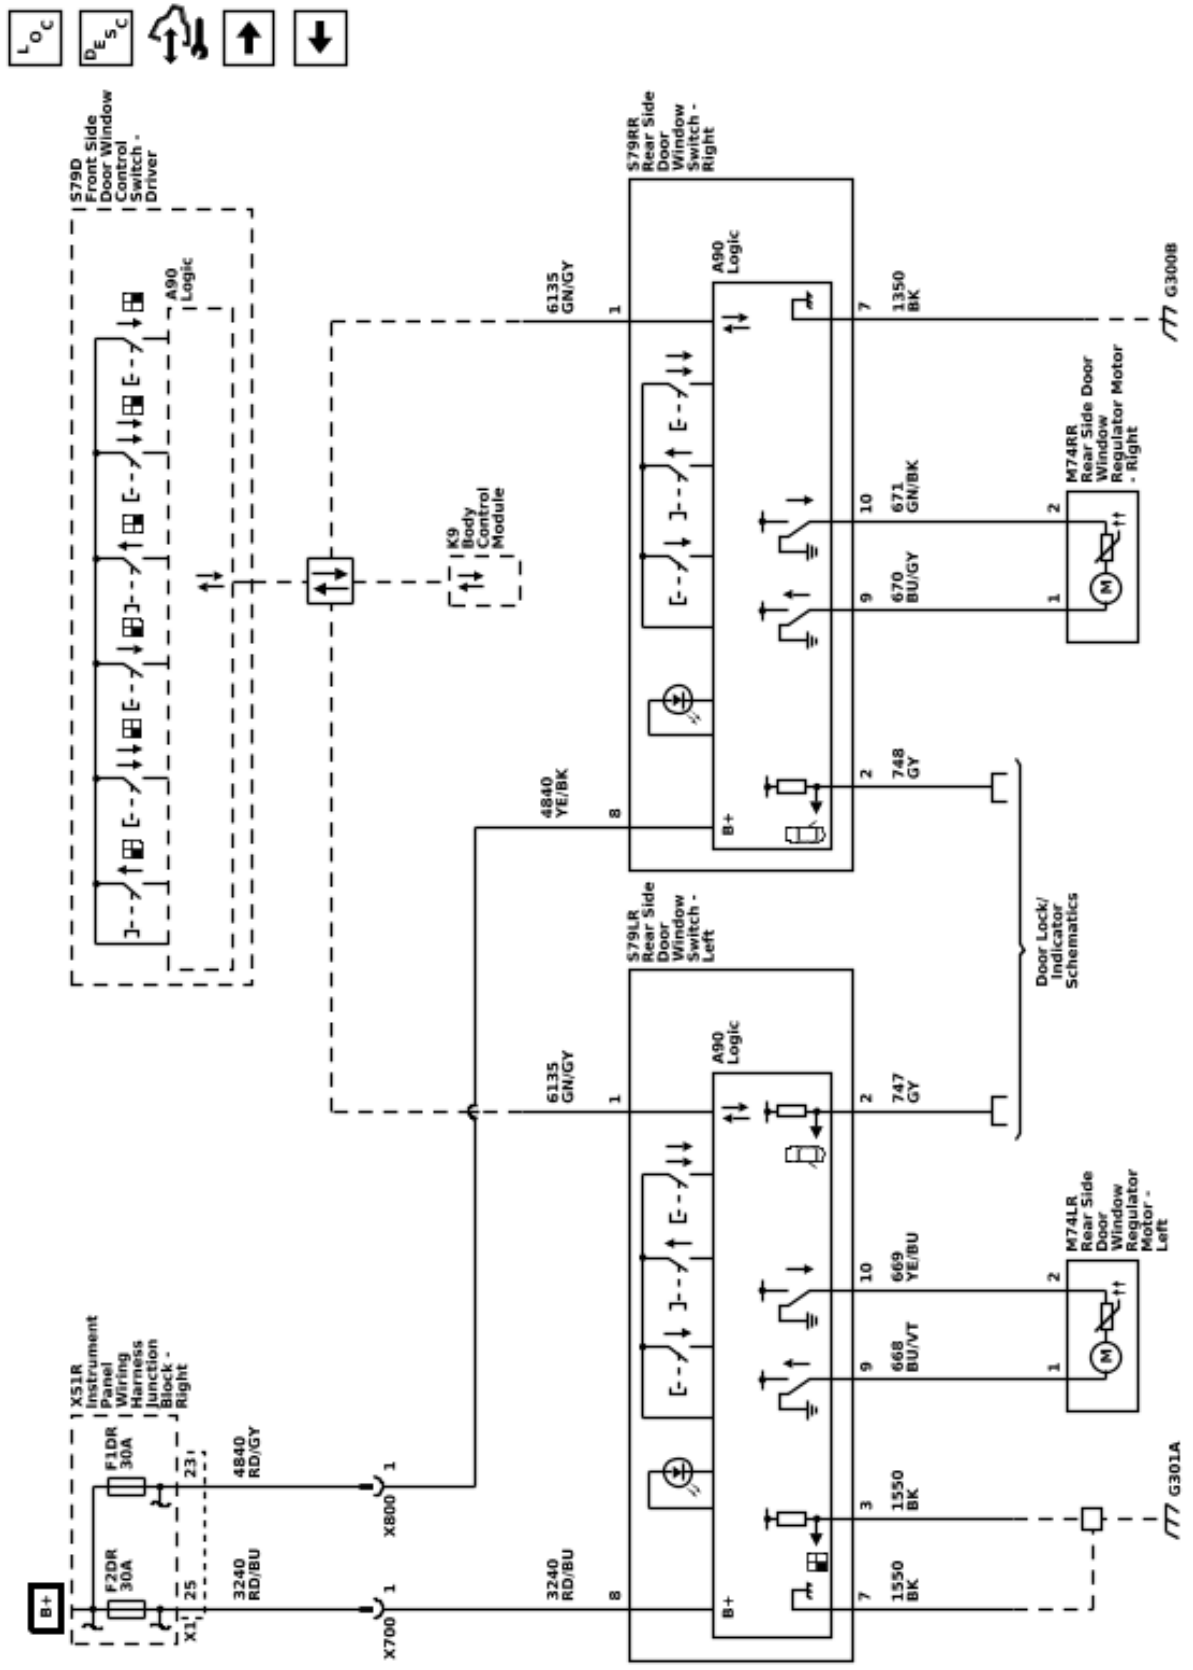


Moveable Window Schematics (Global Window Express Down Switch - In Right IP Accessory Function Switch (WLD))

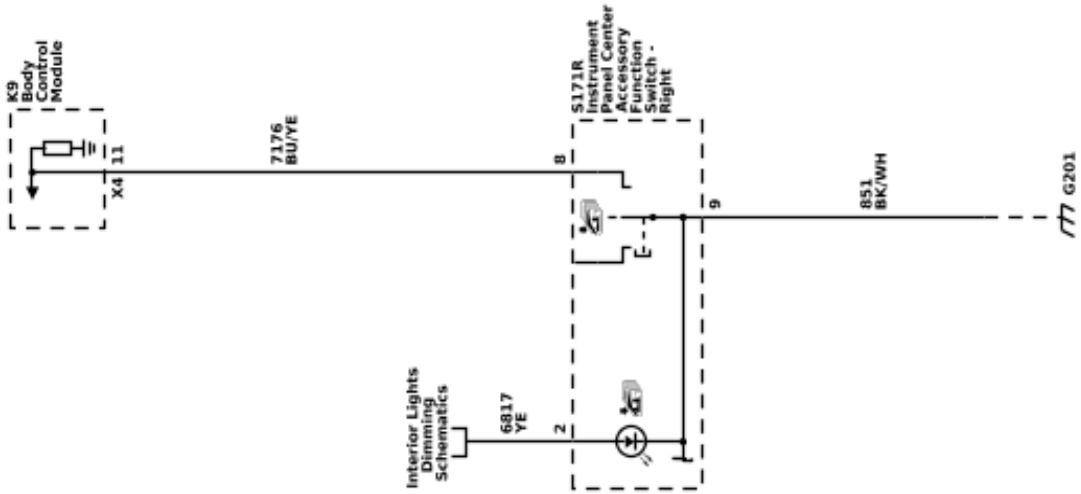

Moveable Window Schematics (Rear Sliding Window (A48))

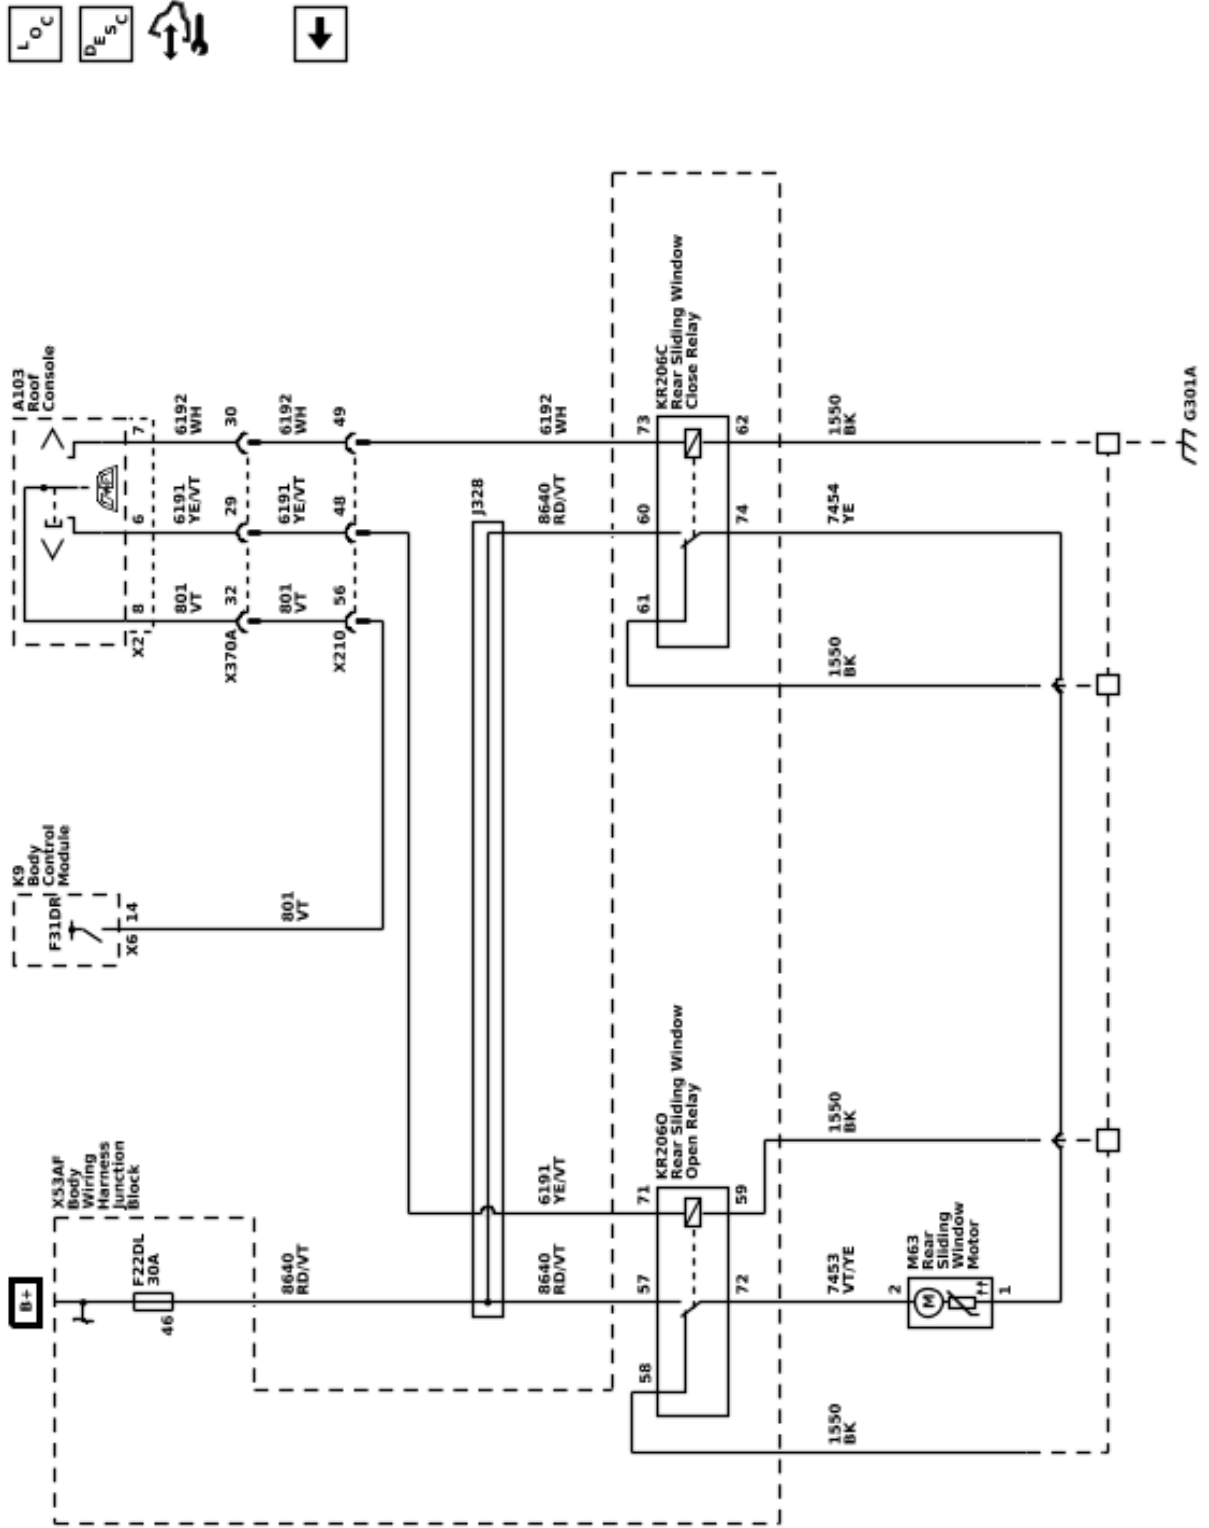

Defogger Schematics (Defogger)

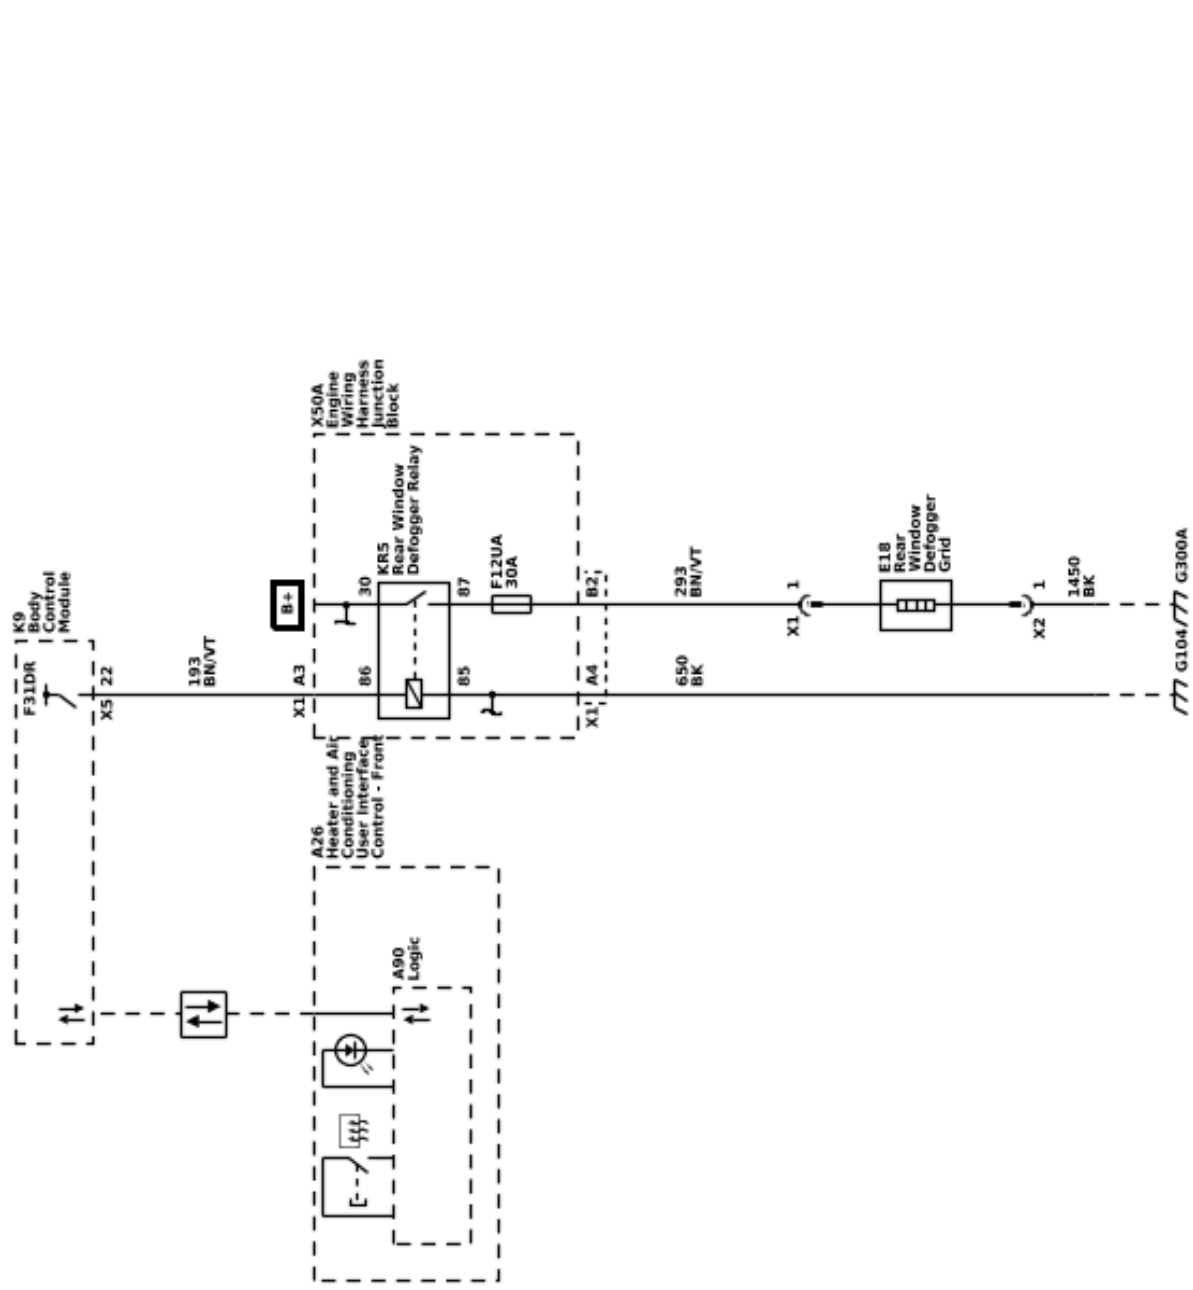

Description and Operation

Power Windows Description and Operation

Power Windows System Components

The power window system consists of the following components:

- Driver front side door window control switch
- Passenger front side door window control switch
- Left rear side door window switch
- Right rear side door window switch
- Window motors in each of the doors
- Body control module (BCM)

Driver and Passenger Express Up and Express Down Power Window Motors

The driver and passenger doors contains a window motor is smart motor that will detect excessive resistance while performing the express up function and automatically reverse direction to prevent injury to any occupants that may become trapped between the closing window and the door frame. The automatic reverse safety feature can be overridden by pulling and holding the window switch.

The logic circuit within the window motor monitors the up, down and express signal circuits which are normally equal to B+ voltage. When a switch is used on the front side door window control switch, the contacts close causing a voltage drop within the appropriate signal circuit. The window motor will detect the voltage drop and will command the window to move in the direction requested.

The driver front side door window control switch communicates to the BCM by a serial data circuit. When the driver wishes to control the passenger window, the driver will use the appropriate switch on the driver front side door window control switch. When this switch is used, a serial data message is sent to the BCM requesting the passenger window motor command, the BCM will then send a serial data message to the passenger window motor which will then move in the direction requested.

Left Rear, Right Rear Express Down Window Motors

For the right rear and left rear doors, when their window switch is pressed in the down position, battery positive voltage is applied to their respective window motor control circuit and ground to the other window motor control circuit causing that window to open. When the individual window switch is pulled in the up position, voltage and ground is applied to the window motor in the opposite direction causing that window to close. The return path to ground is supplied through the inactive control circuit being normally grounded through the window switch.

Each rear side door window switch communicates to the BCM by a serial data circuit. When the driver wishes to control the left rear or right rear window, the driver will use the appropriate switch on the driver front side door window control switch. When this switch is used, a serial data message is sent to the BCM

requesting a window motor command, the BCM will then send a serial data message to the appropriate rear side door window switch which will then command that window to move in the direction requested.

Lockout Switch Feature

The driver front side door window control switch contains a window lockout switch, when the driver presses the window lockout switch, a serial data message is sent to the BCM which will send a disable command to the rear side door window switches, deactivating them. The rear windows will still function normally from the switches on the driver front side door window control switch.

Rear Window Defogger Description and Operation

Rear Window Defogger System Components

The rear window defogger system consists of the following components:

- Body Control Module
- Front Heater and Air Conditioning User Interface Control
- Rear Body Wiring Harness Junction Block (Contains PCB Rear Defogger Relay)
- Rear Defogger Grid
- 40A Fuse

Rear Window Defogger Operation

The rear defog control system utilizes a single zone backlight design, driven with a single relay configuration. A switch for the customer to control the system is provided within the front heater and air conditioning user interface control. Also included in the front heater and air conditioning user interface control is an indicator to inform the customer with the current state of the system. The system is only operational when engine is running or during remote start.


Pressing the heated rear window switch causes the front heater and air conditioning user interface control to send a serial data message to the body control module requesting rear window defog operation. The body control module upon receipt of the serial data message will provide voltage to the coil side of the rear defogger relay, this will energize the relay causing the relay switch contacts to close allowing B+ voltage to flow through the rear defogger grid control circuit to the rear defogger grid.

When the rear heated rear window switch is pressed and the engine is running, the rear window defogger grid will activate and will turn off automatically depending upon the vehicle speed (refer to owner's manual for rear window defogger operation cycles)

Horns and Pedestrian Alerts

Schematic and Routing Diagrams

Horn Schematics (Horn)

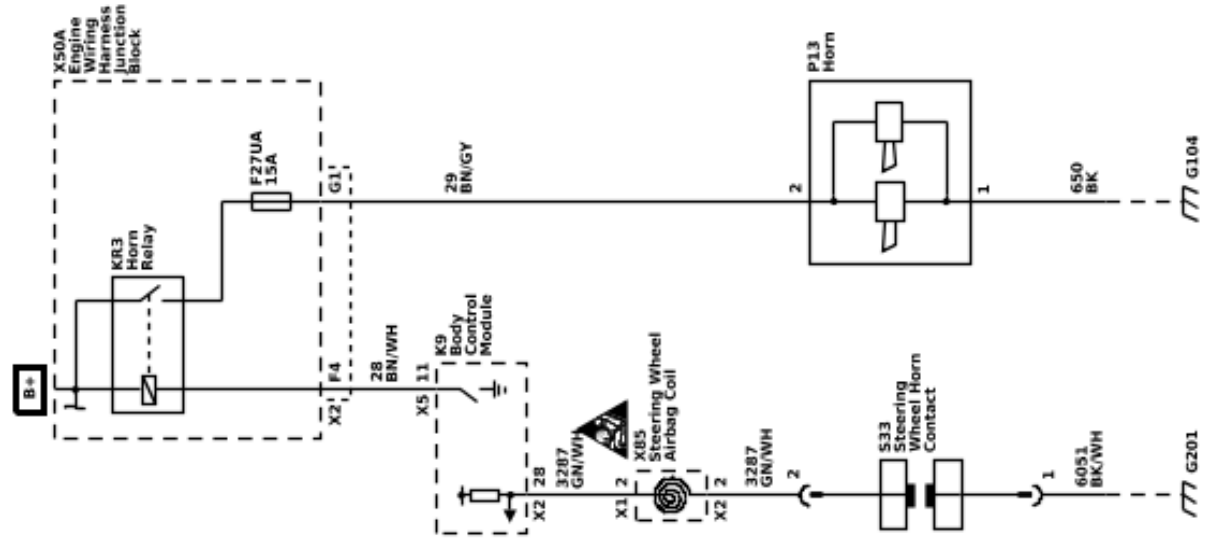

Description and Operation

Horns System Description and Operation

System Description

The horn system consists of the following components:

- HORN fuse
- Engine wiring harness junction block (contains horn PCB relay)
- Steering wheel horn contact
- Horn
- Body control module (BCM)

System Operation

The vehicle horn system is activated under the following conditions:

- When the horn switch is depressed
- The BCM commands the horns ON under any of the following conditions:
 - When the content theft deterrent system detects a vehicle intrusion.
 - When the panic button is depressed on the remote control door lock transmitter—For further information refer to Keyless Entry System Description and Operation
 - When the keyless entry system is used to lock the vehicle, a horn chirp may sound to notify the driver that the vehicle has been locked. The notification feature may be enabled or disabled through personalization. For further information refer to Keyless Entry System Description and Operation.
 - When the OnStar[®] system is used to sound the horns if equipped—For further information, refer to OnStar Description and Operation



Circuit Operation

Battery positive voltage is applied at all times to the horn relay coil and the horn relay switch. Pressing either of the horn switches applies ground to the horn relay control circuit. The BCM may also apply ground to the horn relay control circuit as described above. When the horn relay control circuit is grounded, the horn relay is energized and battery positive voltage is applied to the horns through the horn control circuit. The horns sound as long as ground is applied to the horn relay control circuit.


Lighting

Schematic and Routing Diagrams


Headlights/Daytime Running Lights (DRL) Schematics (Controls and Indicators)

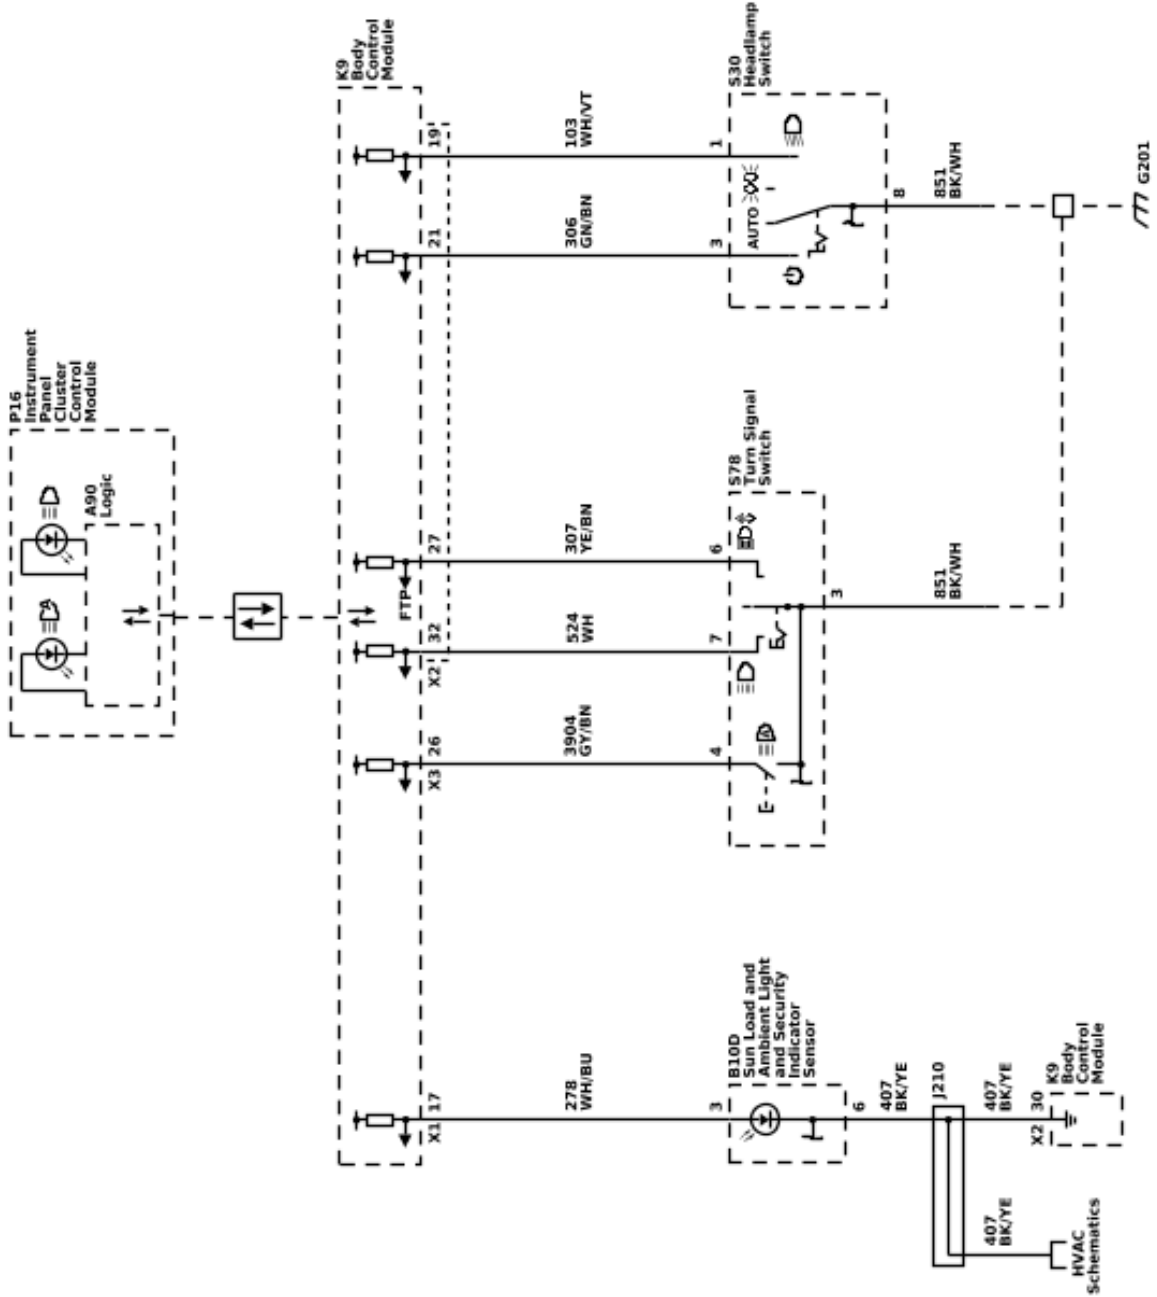


Headlights/Daytime Running Lights (DRL) Schematics (Headlamps (T4A))

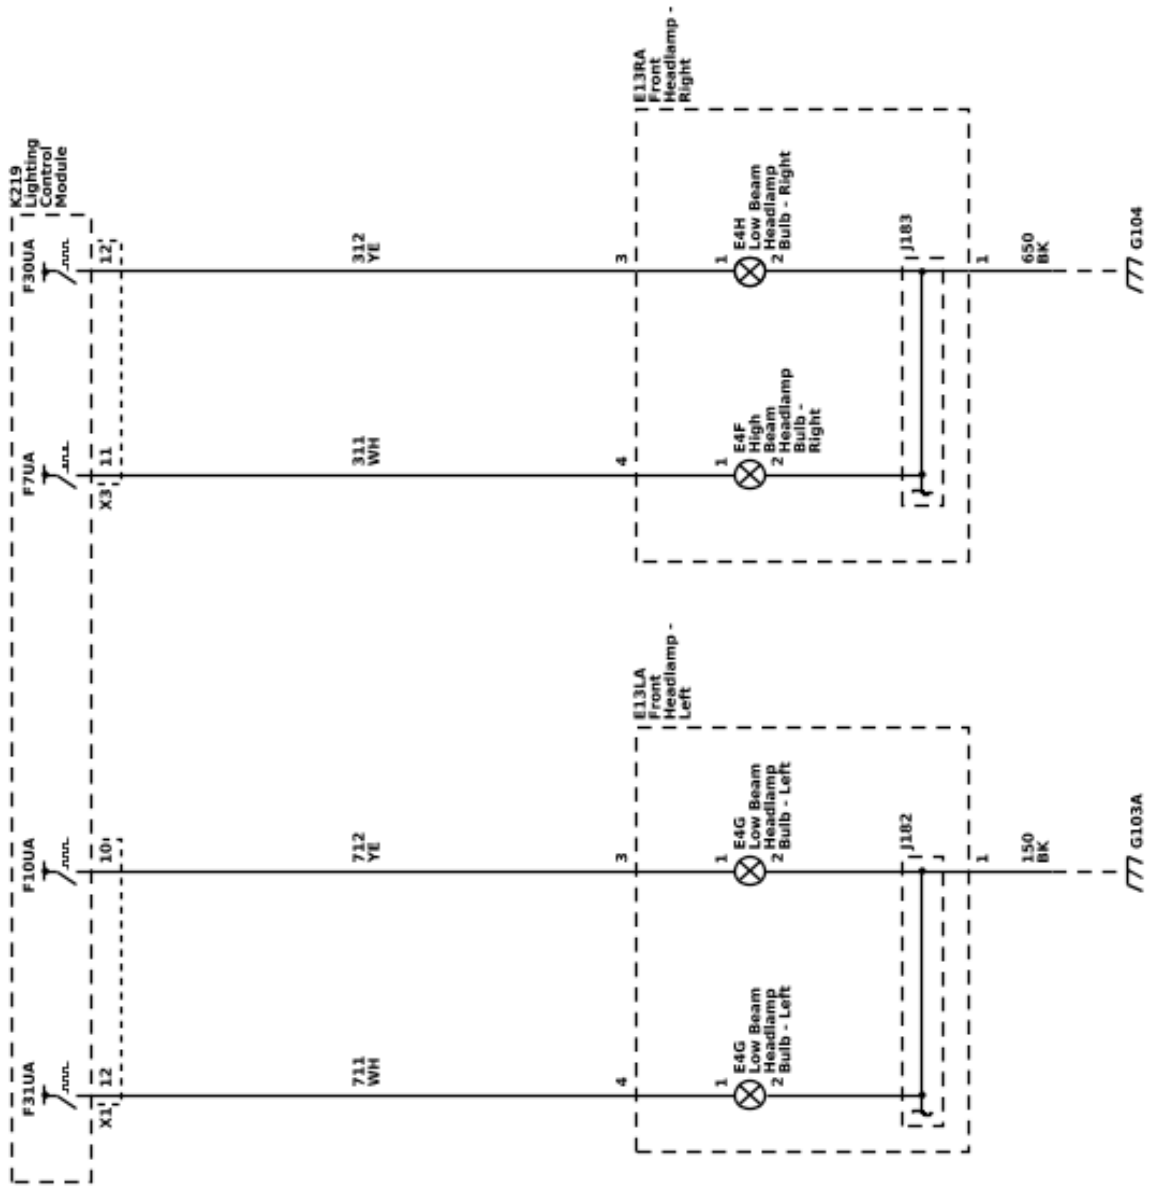


Headlights/Daytime Running Lights (DRL) Schematics (Headlamps and Daytime Running Lamps - Left (T4L))

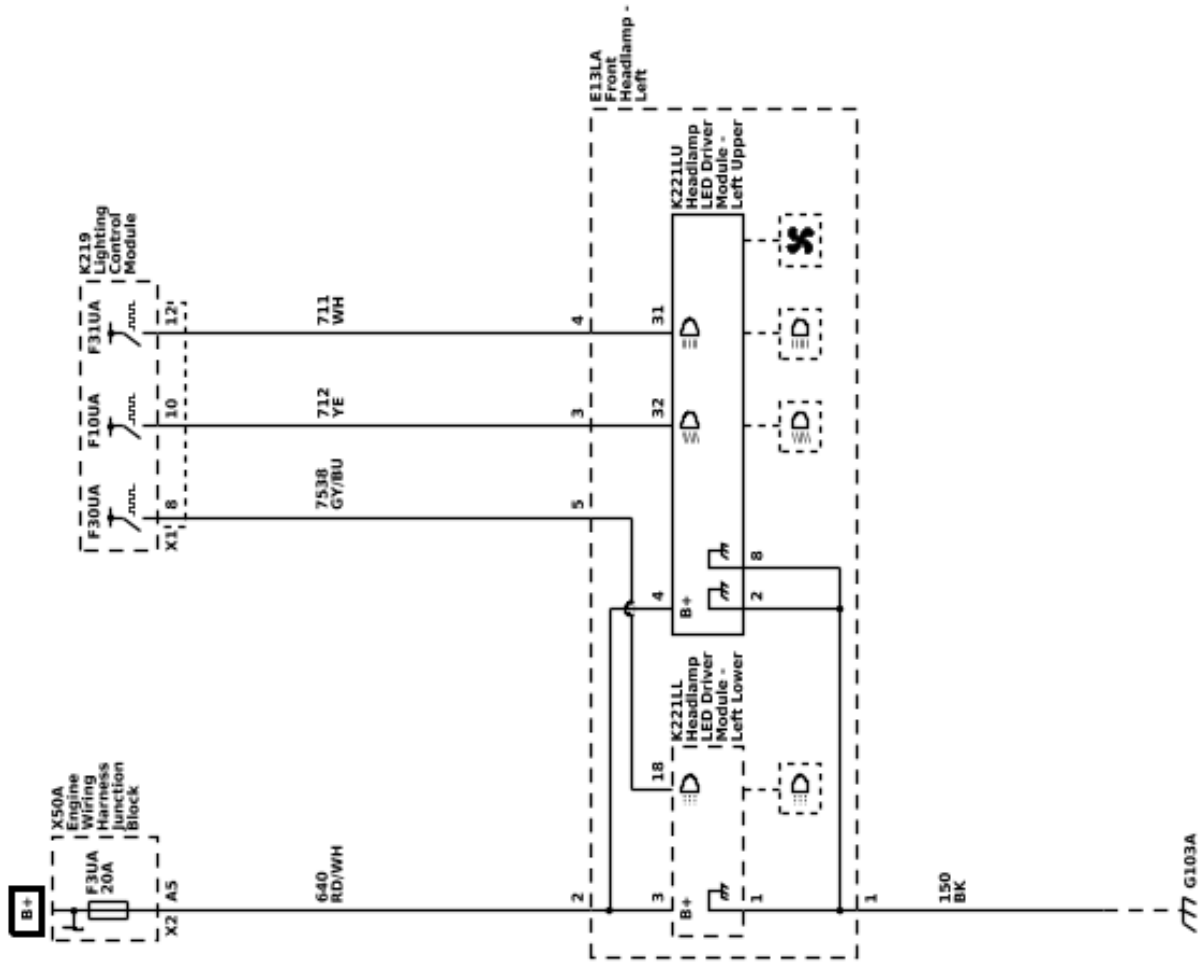



Headlights/Daytime Running Lights (DRL) Schematics (Headlamps and Daytime Running Lamps - Right (T4L))

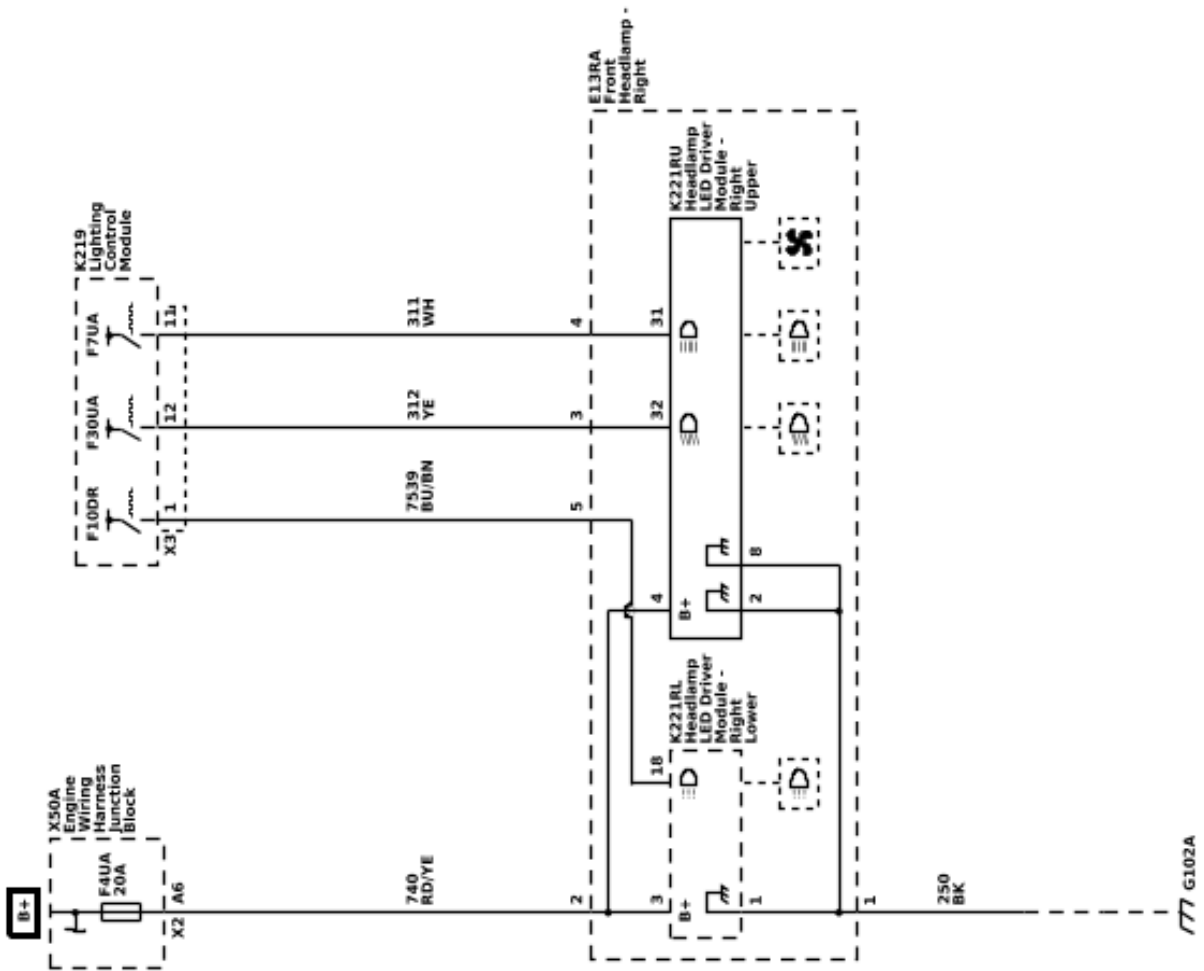


Fog Lights Schematics (Fog Lamps (T3U))

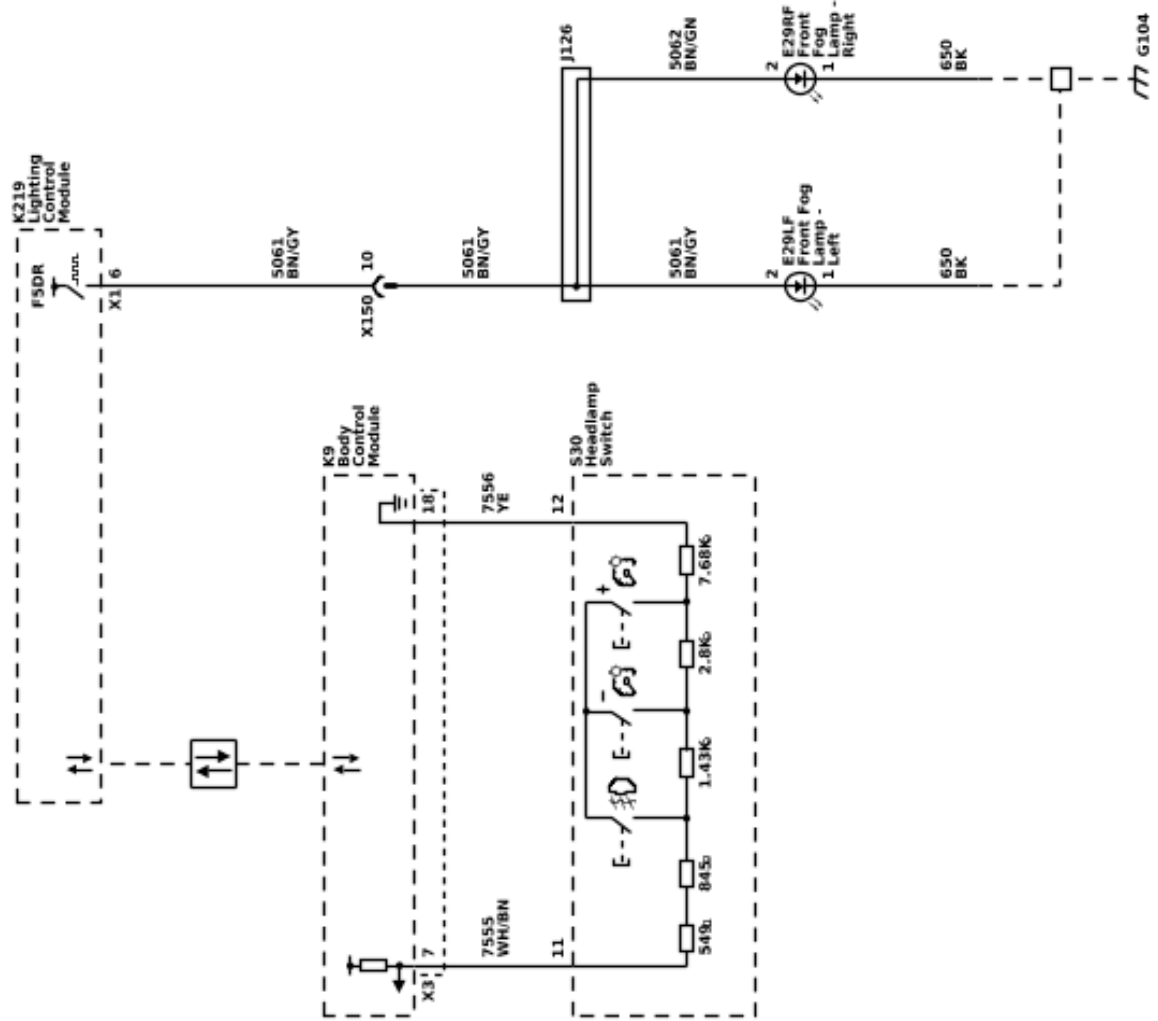


Exterior Lights Schematics (Lighting Control Module Power, Ground, and Serial Data)

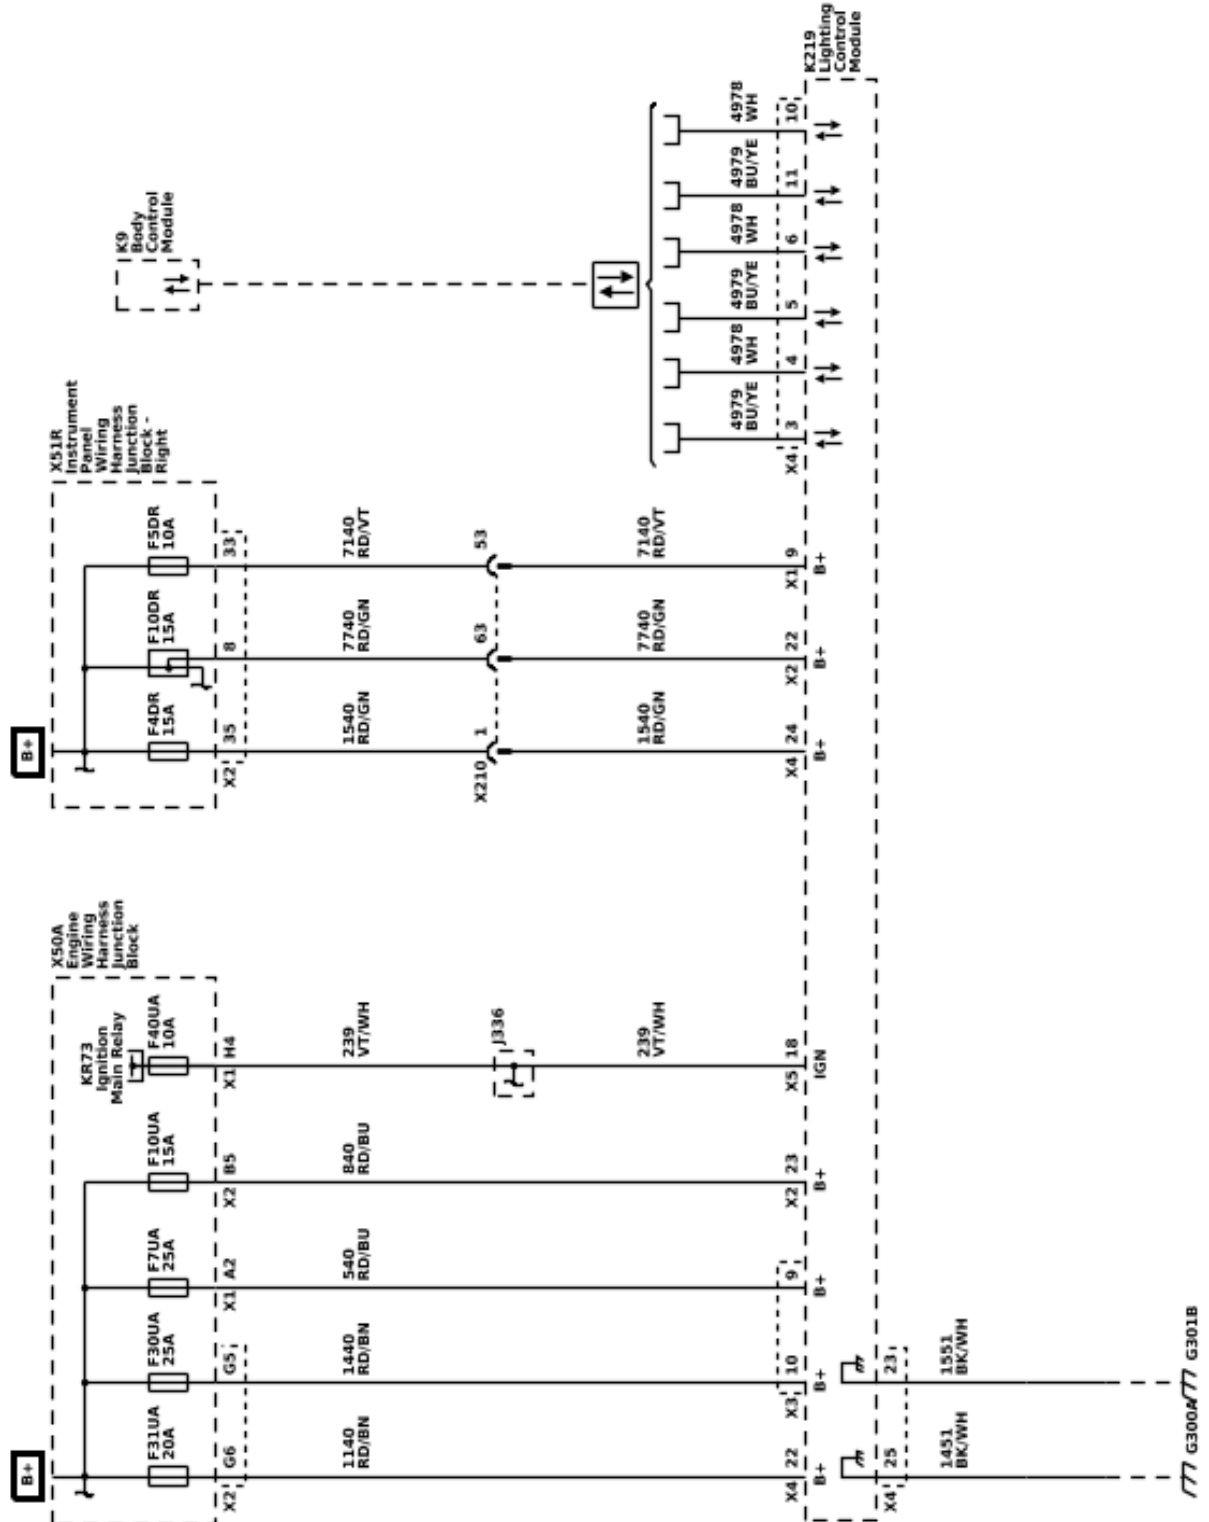


Exterior Lights Schematics (Controls and Indicators)

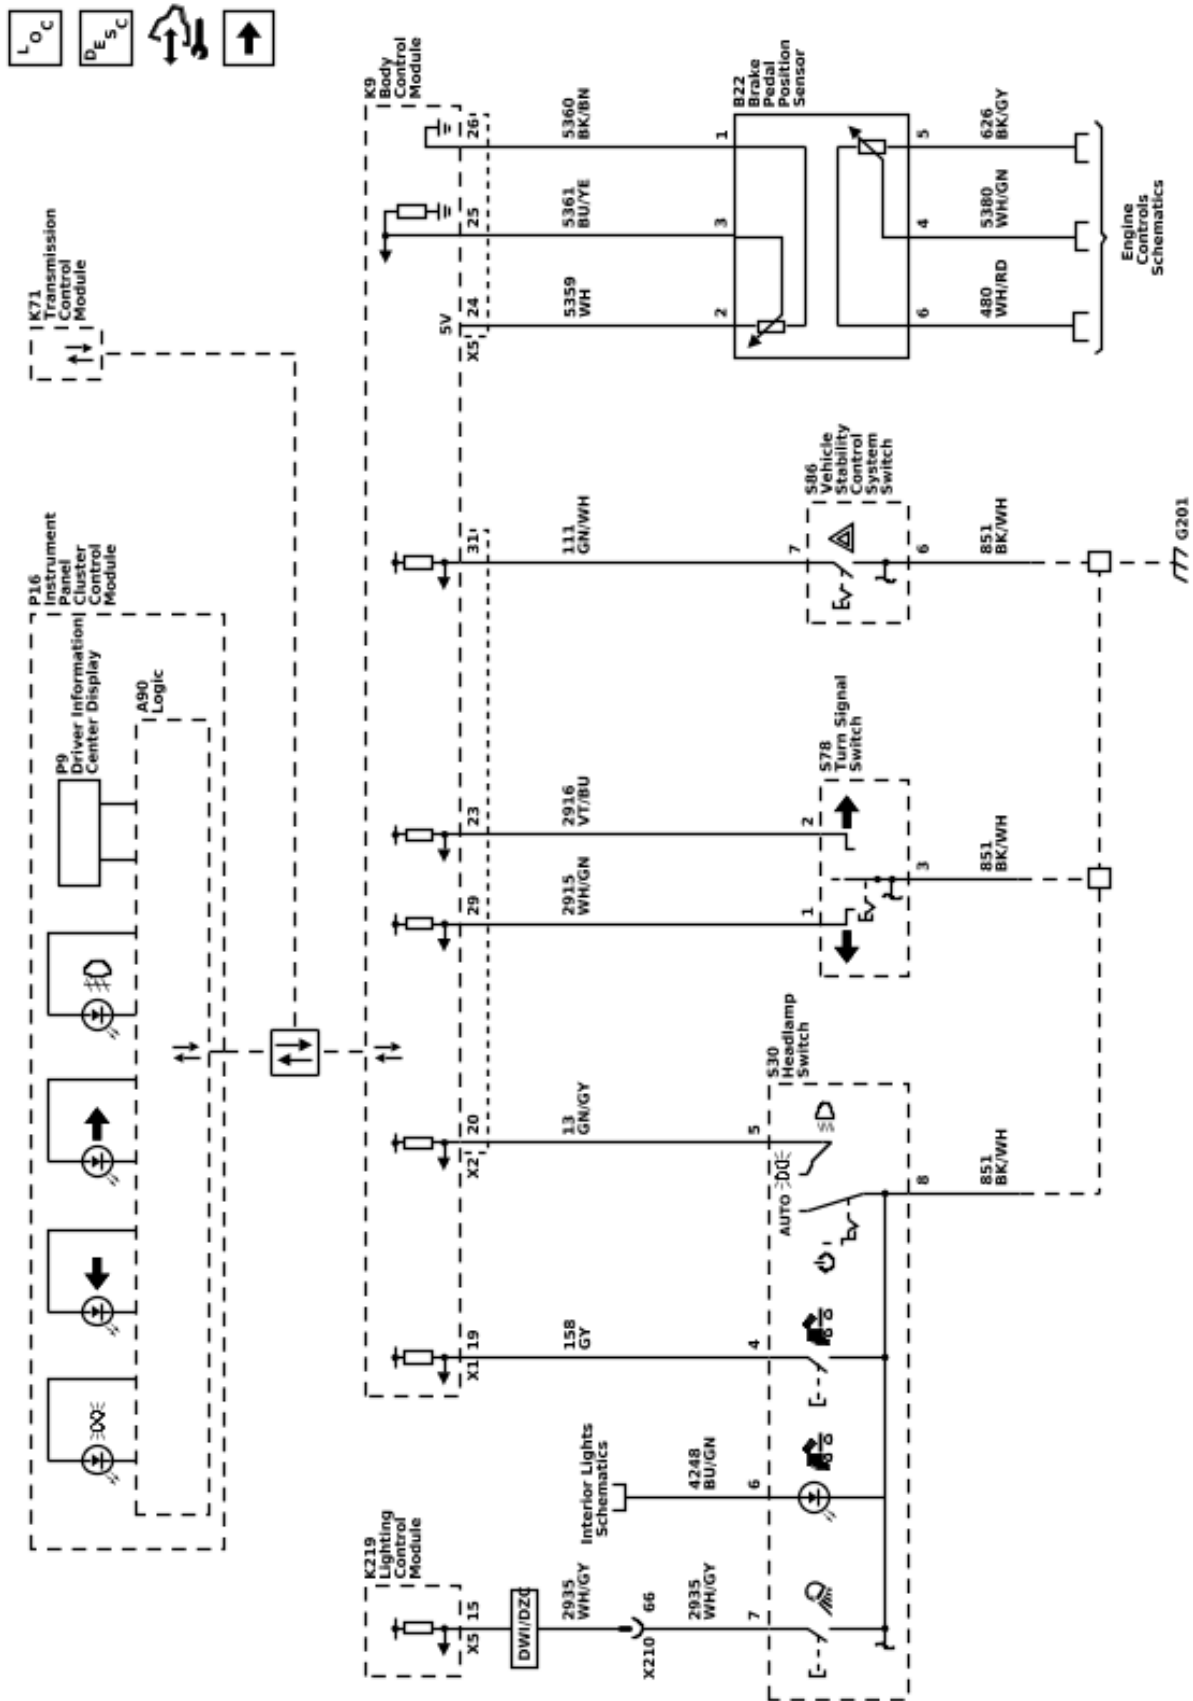


Exterior Lights Schematics (Front Turn Signals, Park Lamps, and Side Marker Lamps (T4A))

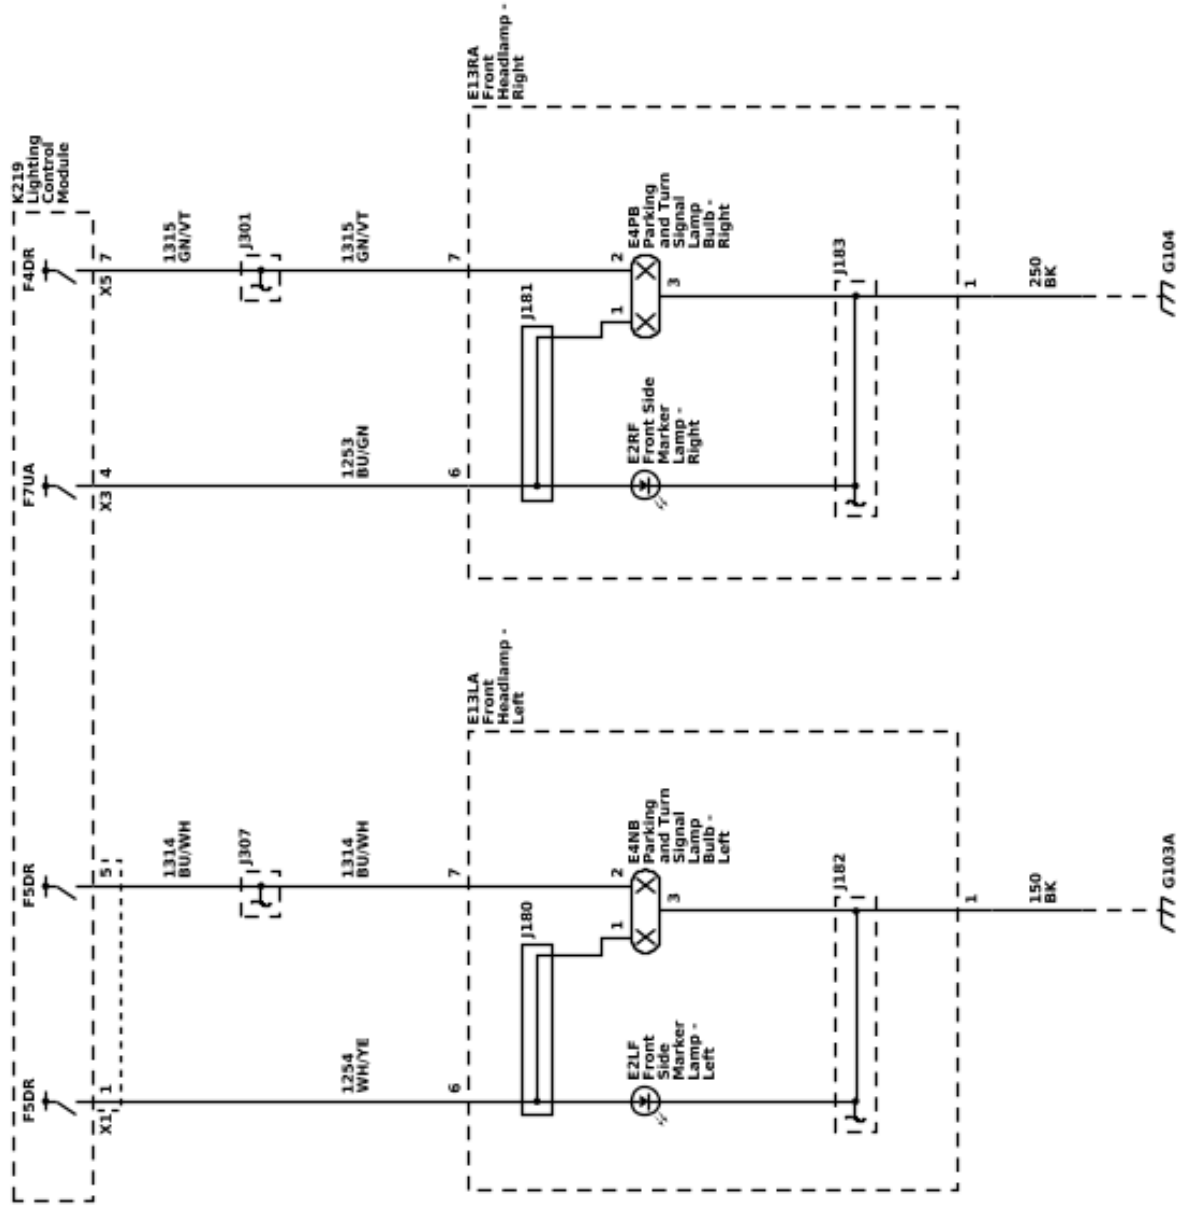


Exterior Lights Schematics (Outside Rearview Mirror Task, Turn, Approach, and Flood Lights (DWI / DLF / DZC))

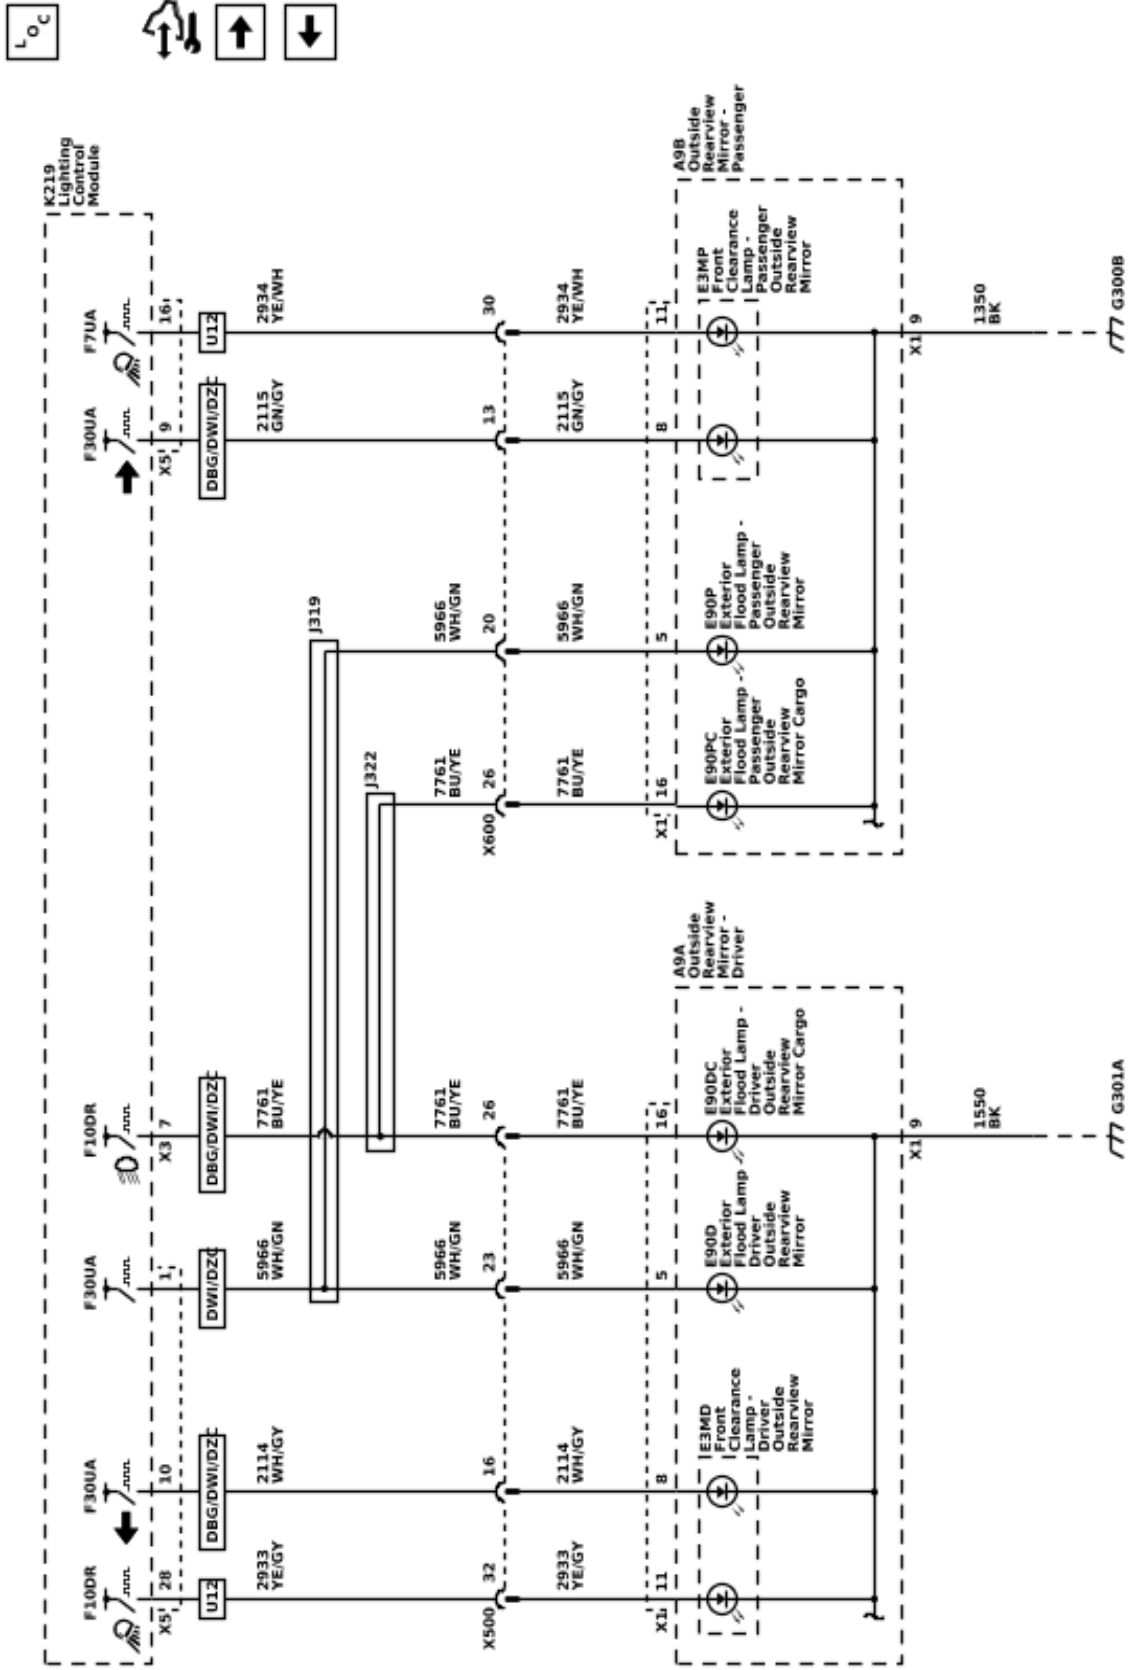

Exterior Lights Schematics (Tail Lamp Assembly - Left ((GF2/GF3/GF5)&SRW))

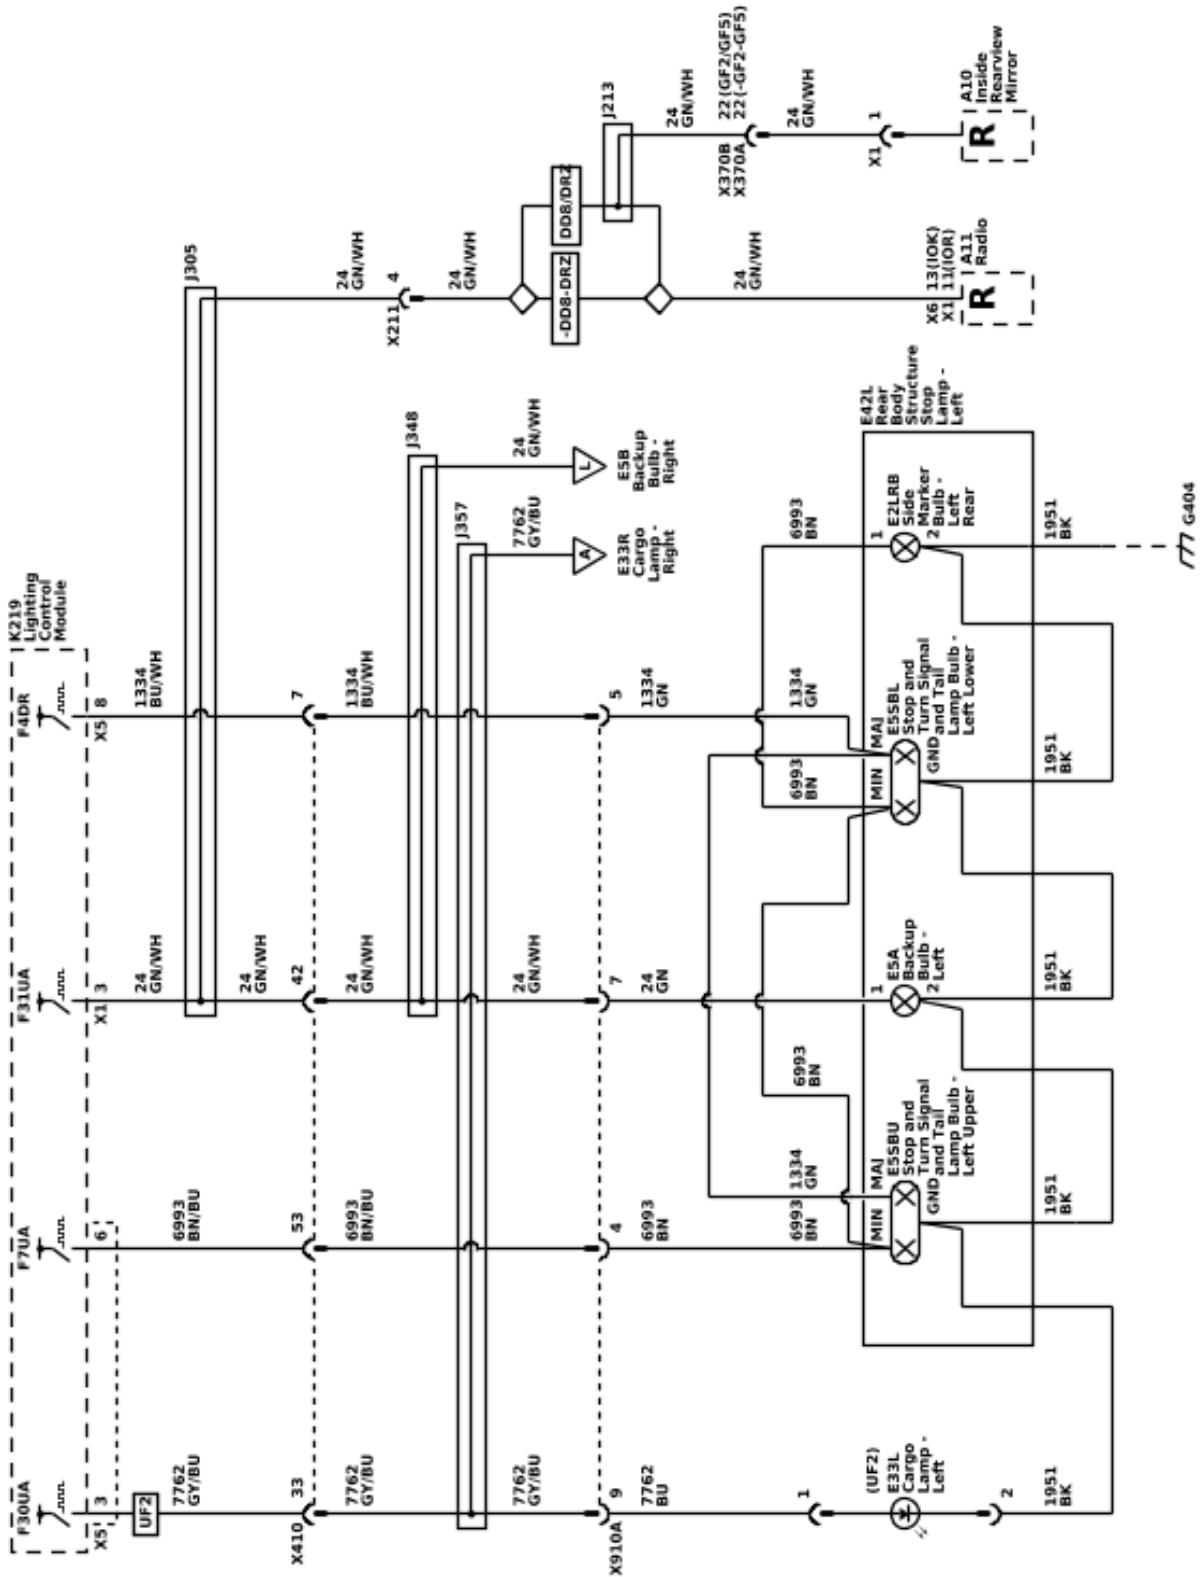


Exterior Lights Schematics (Tail Lamp Assembly - Right ((GF2/GF3/GF5)&SRW))

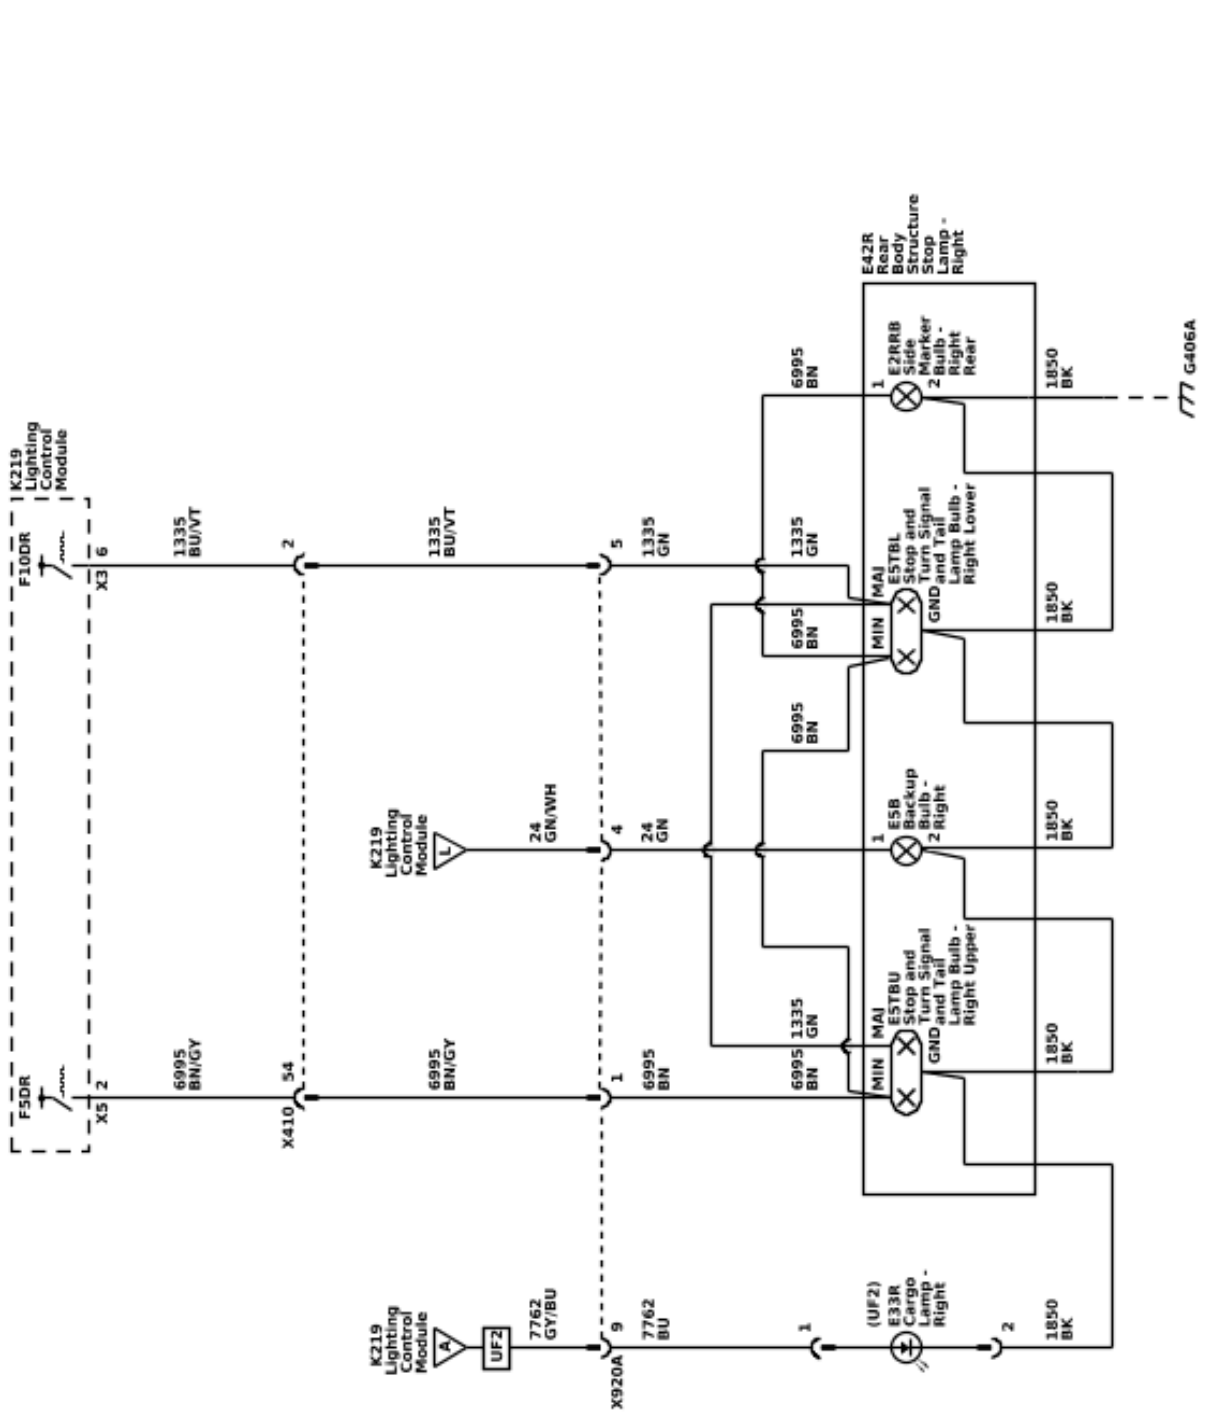


6150144



Exterior Lights Schematics (Tail Lamp Assembly - Left (DZW/(GF9/GFD/GRZ)&SRW)))

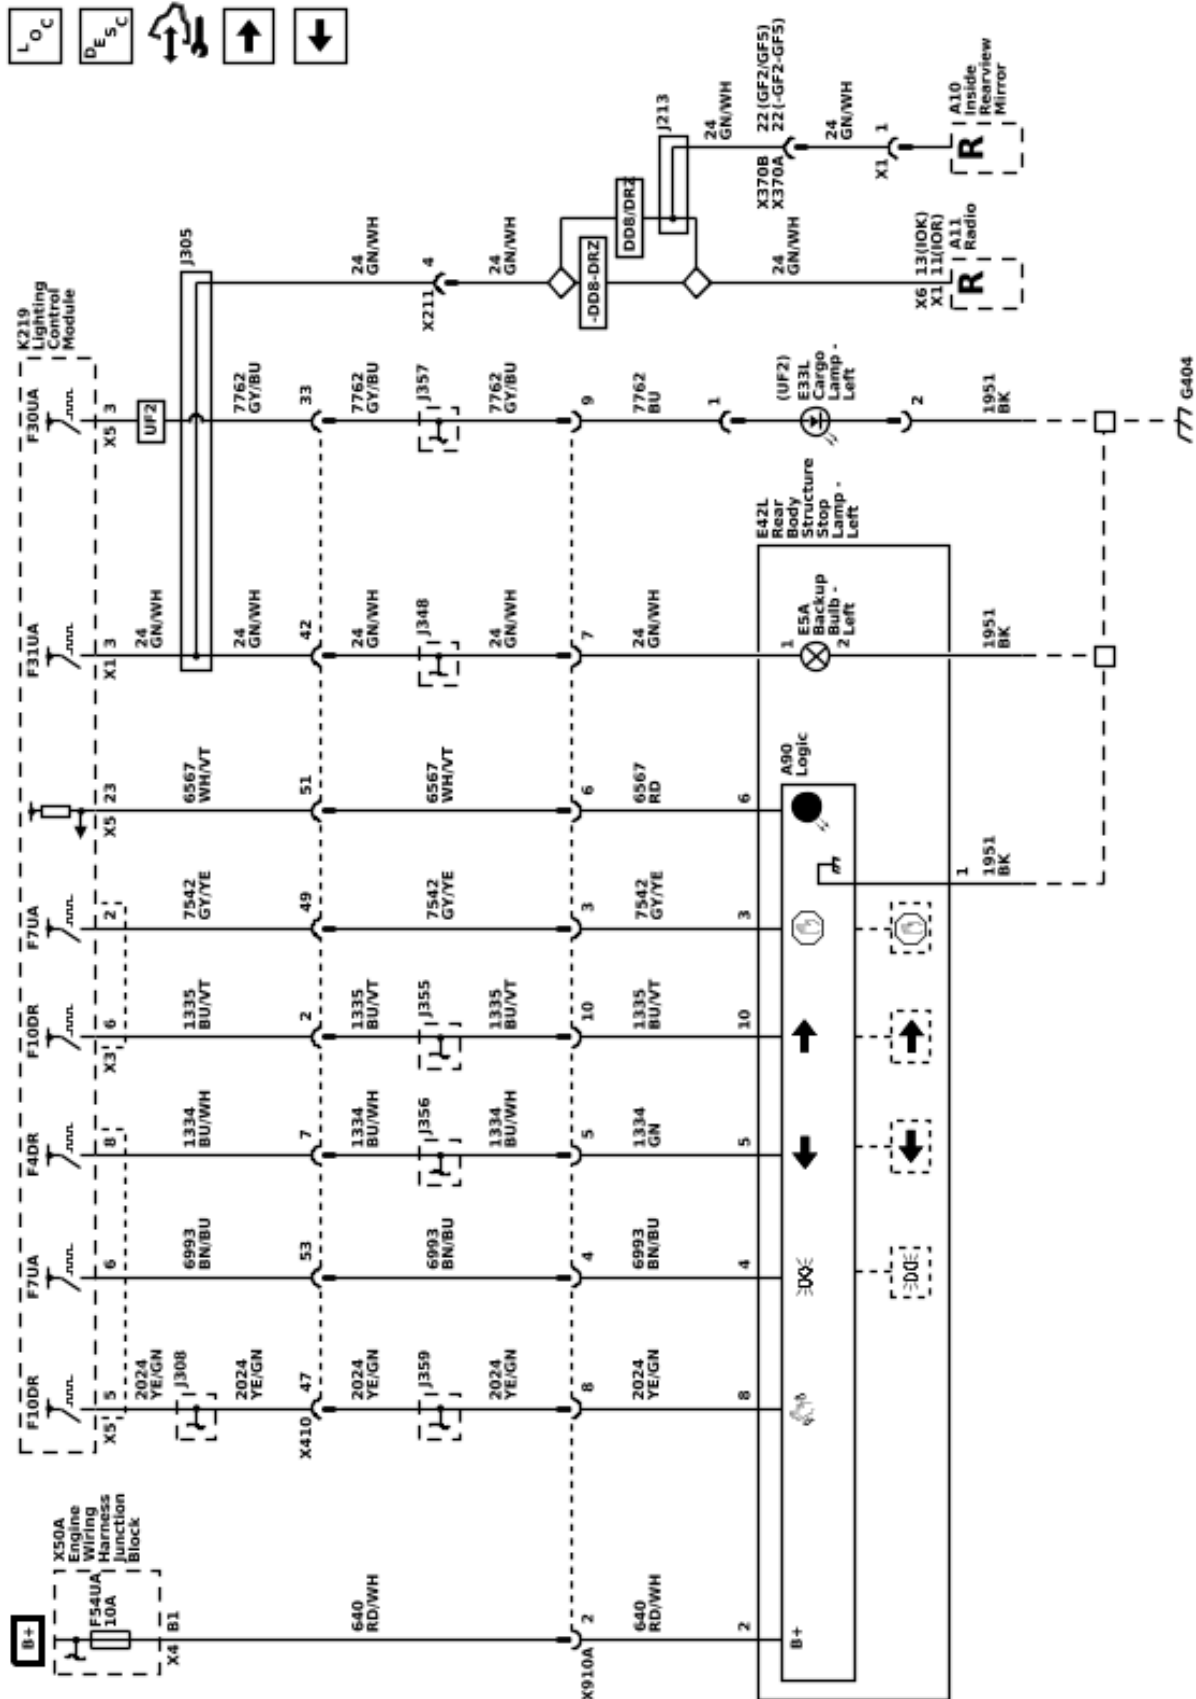


Exterior Lights Schematics (Tail Lamp Assembly - Right (DZW/(GF9/GFD/GRZ)&SRW)))

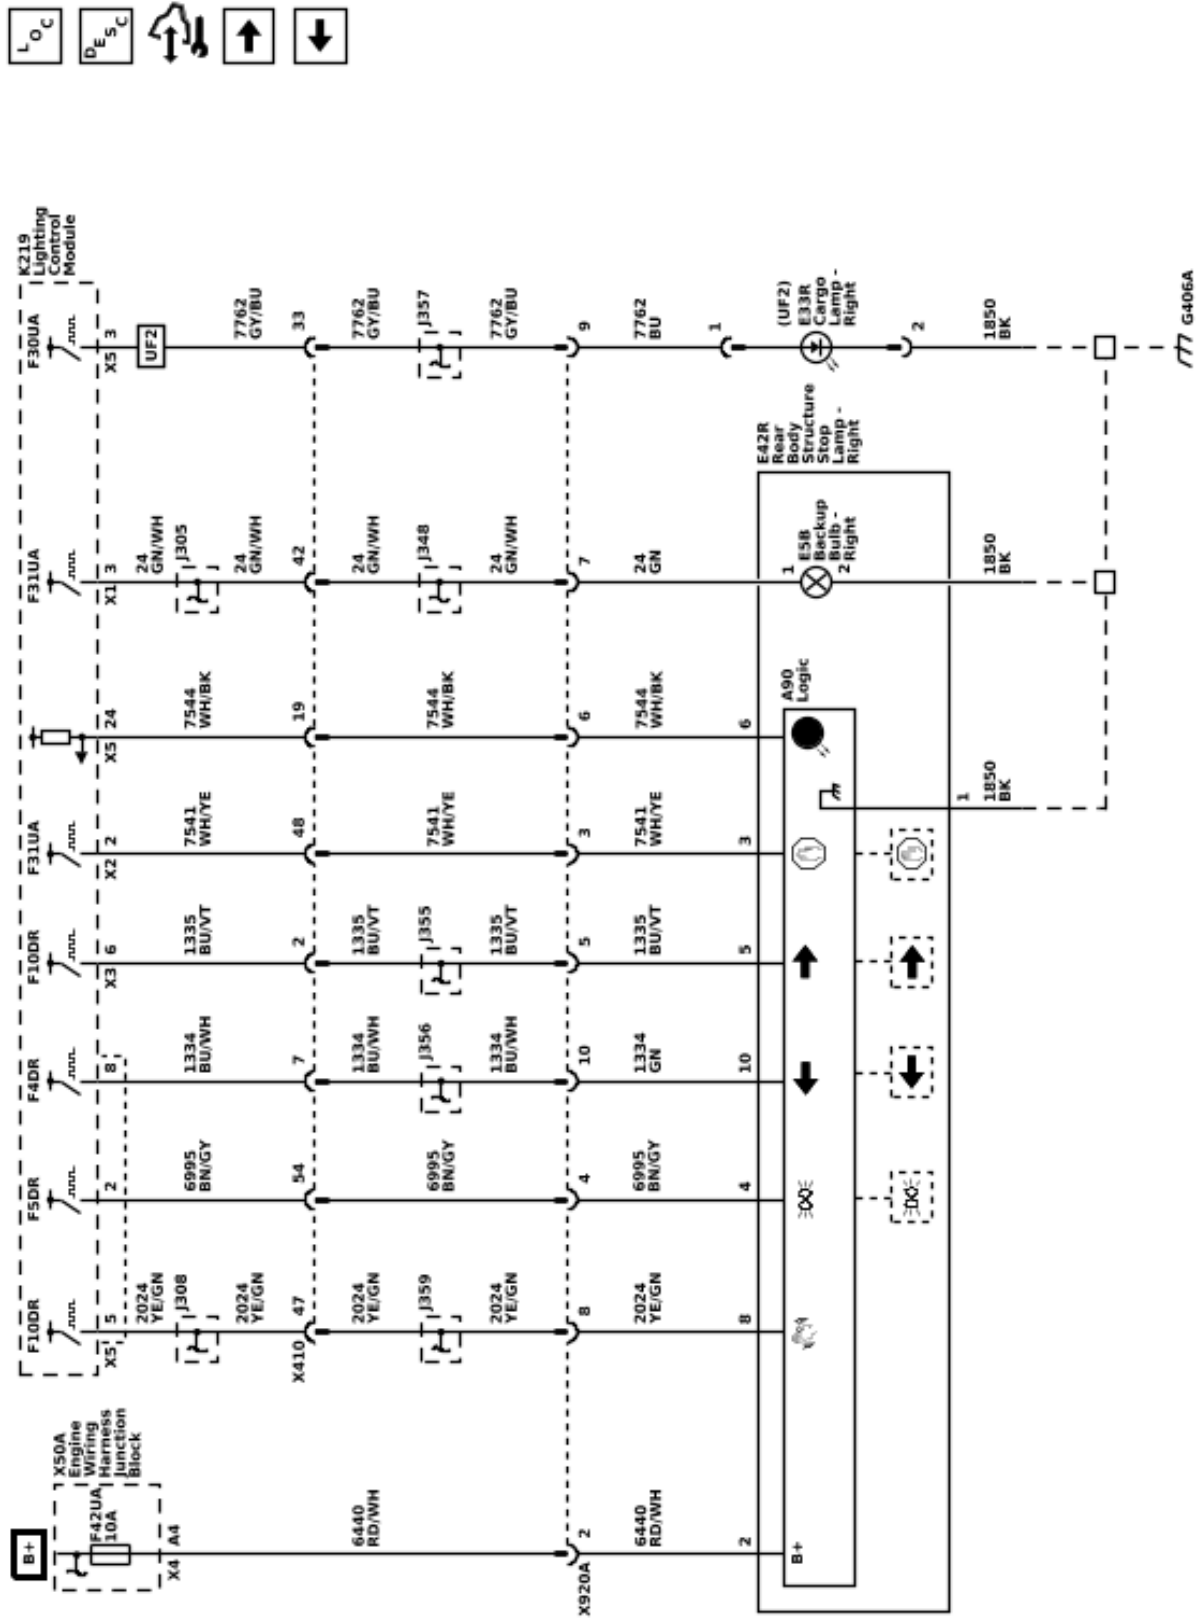



Exterior Lights Schematics (Tail Lamp Assemblies (ZW9))

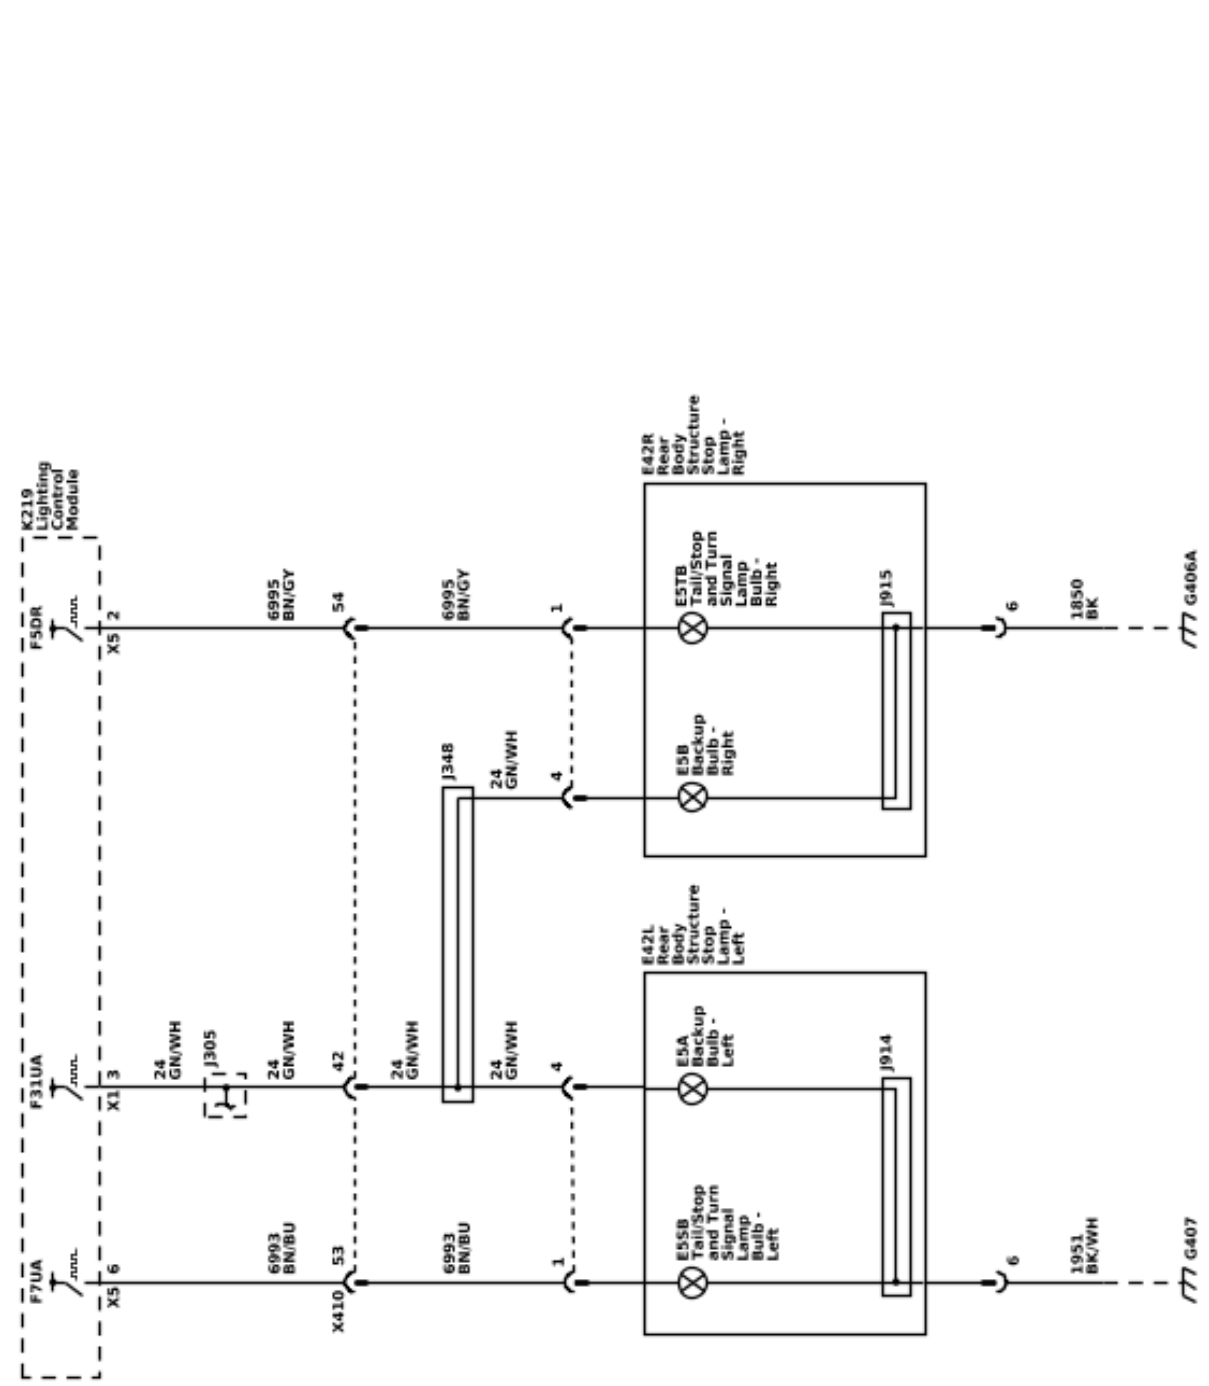


Exterior Lights Schematics (Center High Mount Stop and Exterior Courtesy Lights - Regular Cab)

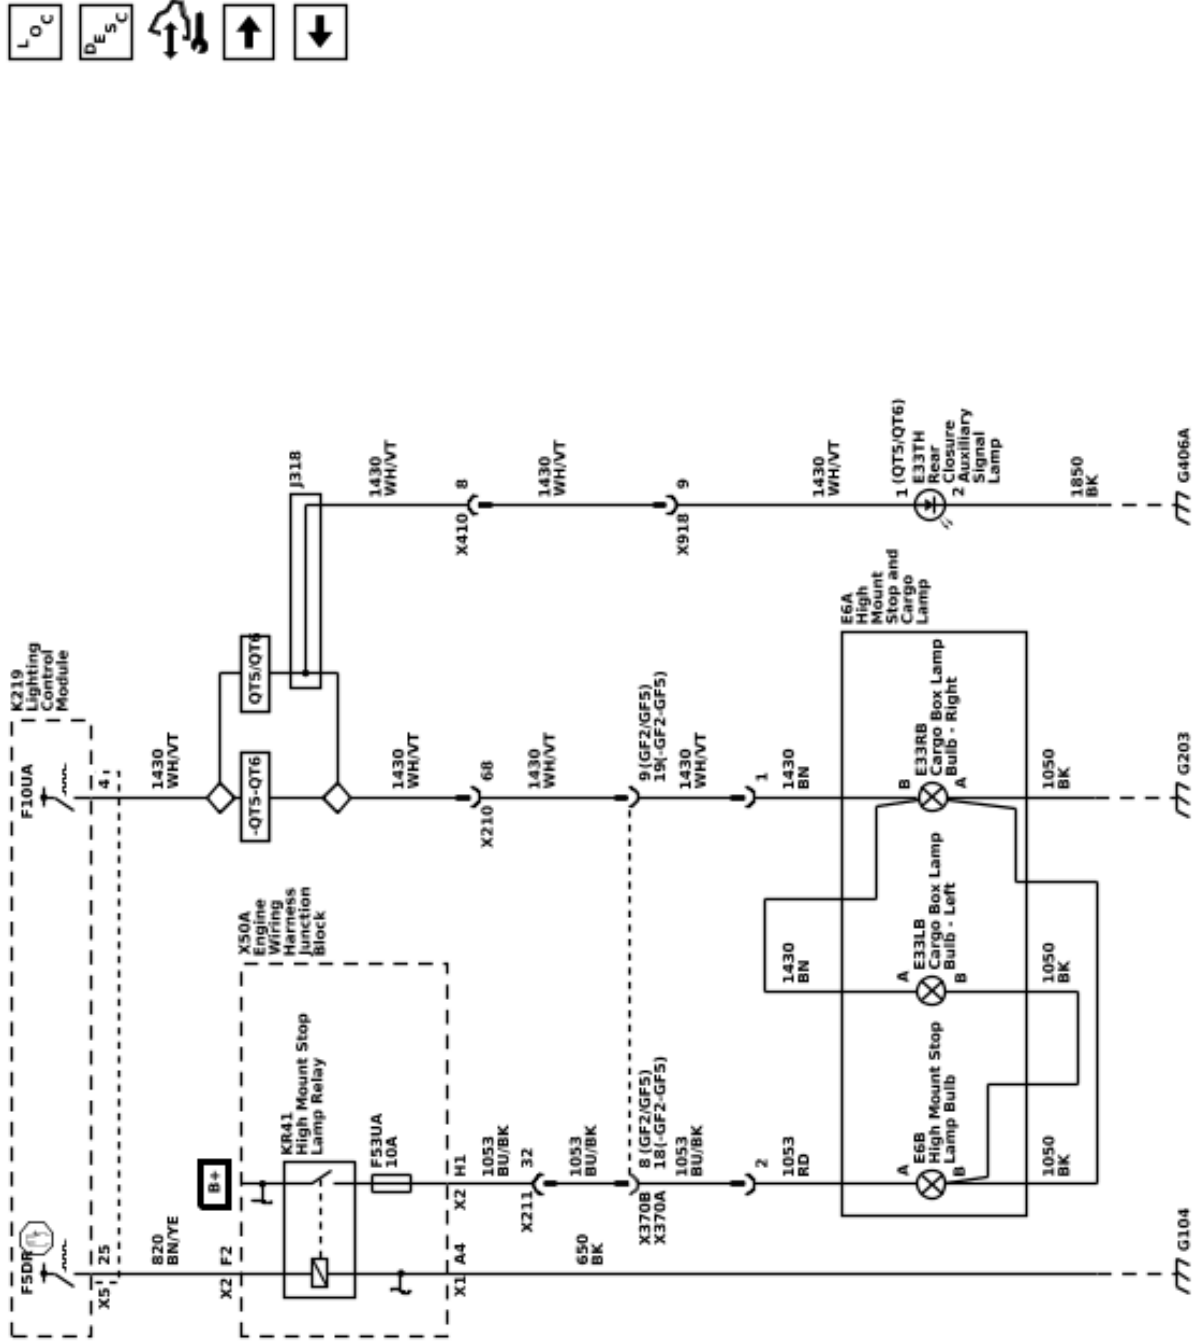


Exterior Lights Schematics (Center High Mount Stop and Exterior Courtesy Lights - Double Cab/Crew Cab)

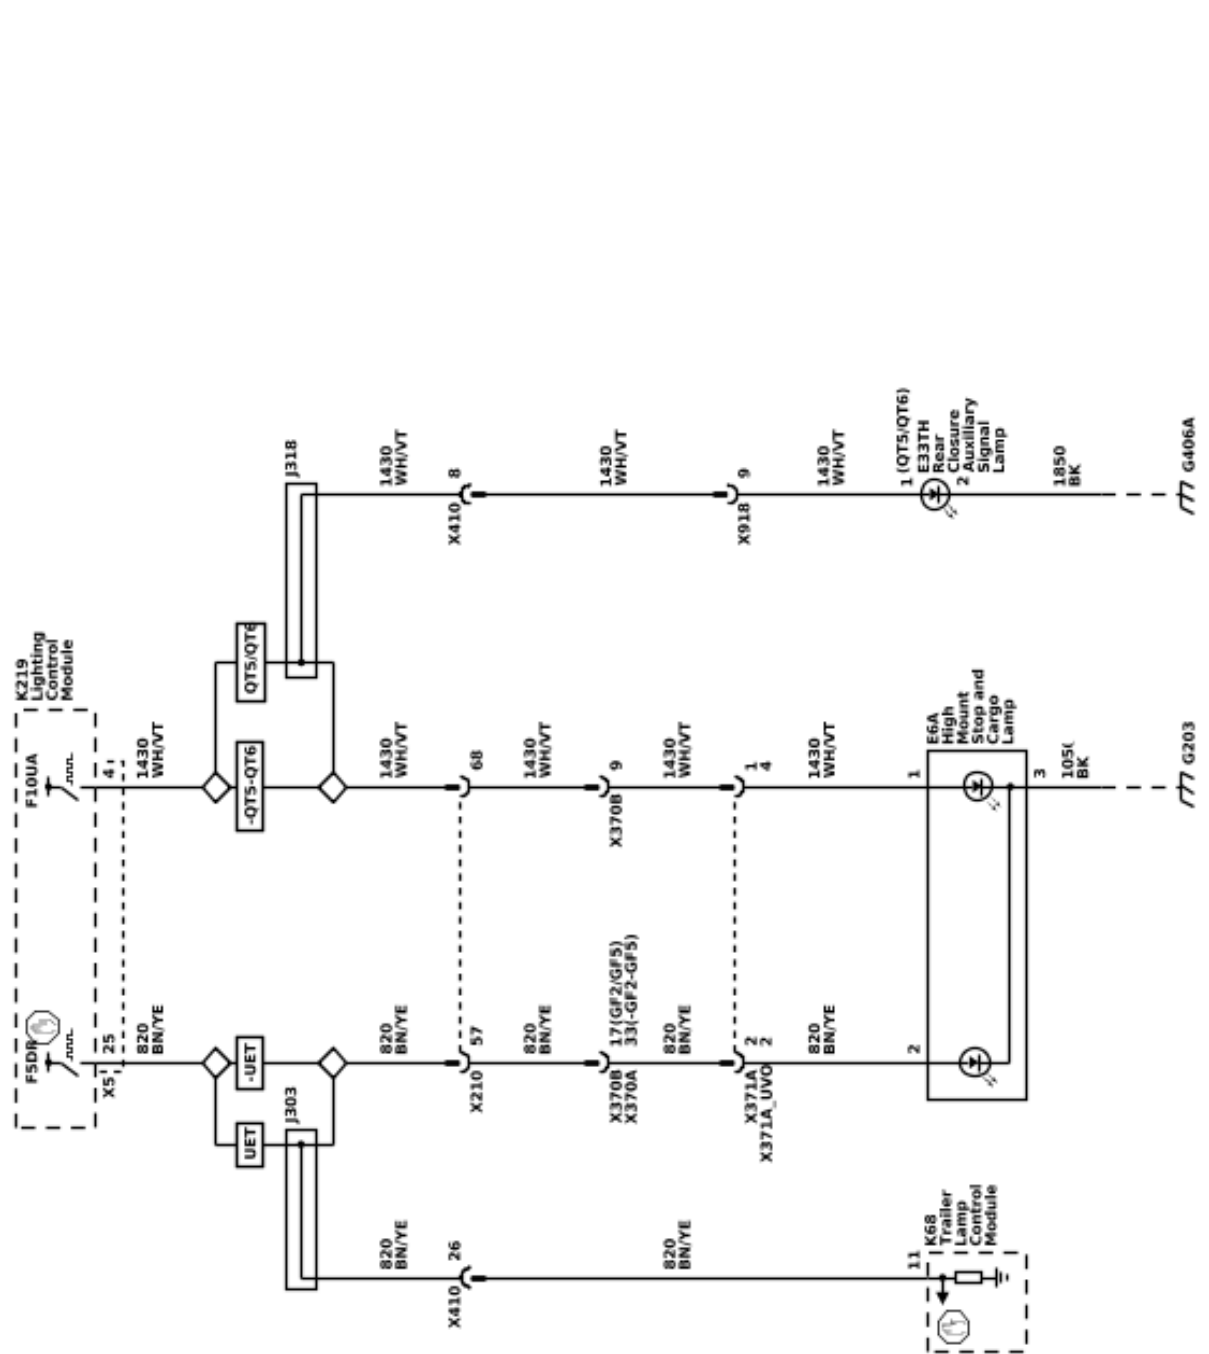


Exterior Lights Schematics (License Plate Lamps)

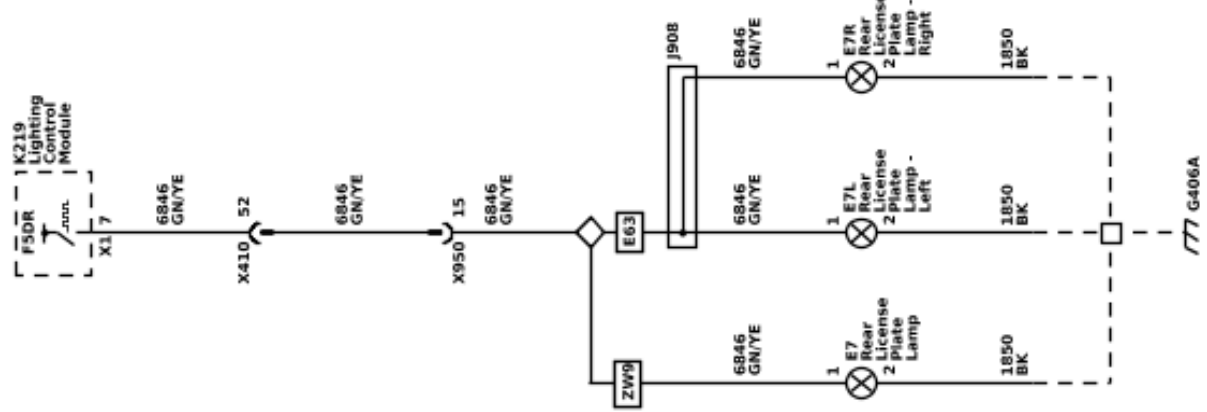


Exterior Lights Schematics (Identification Lights - Front (DBG / DWI / DZC / U01))

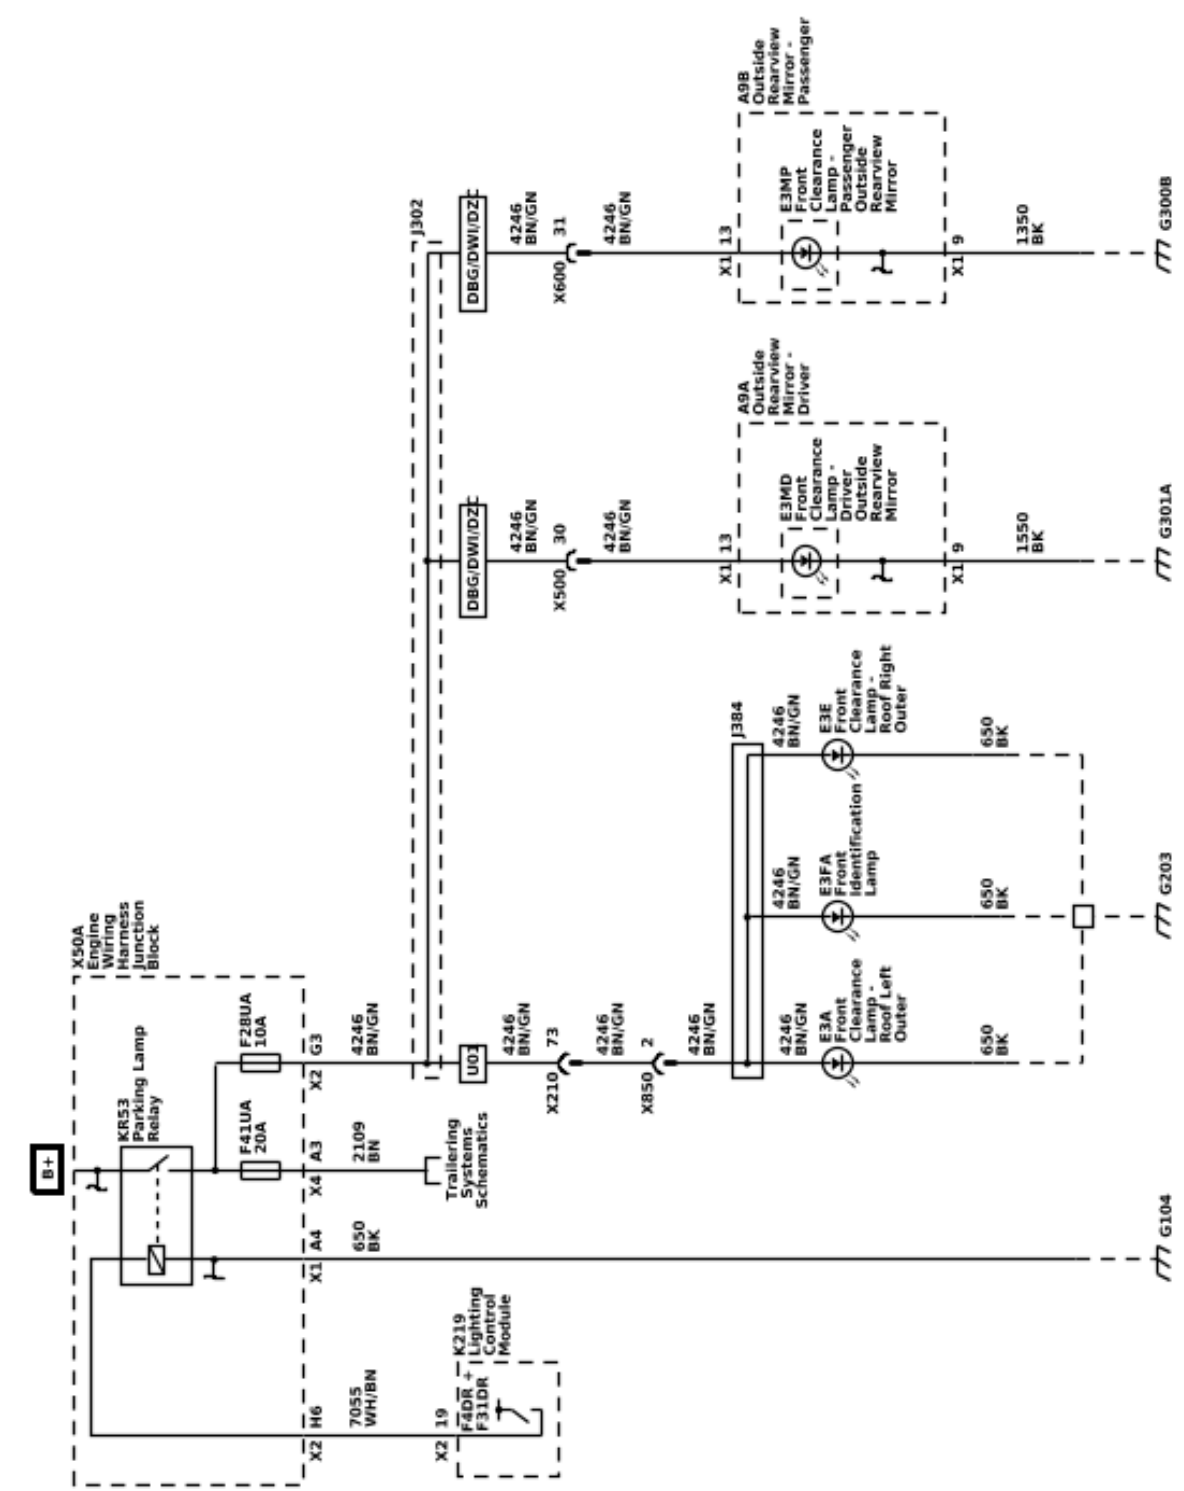


Exterior Lights Schematics (Identification Lights - Rear (DBG / DWI / DZC / U01))

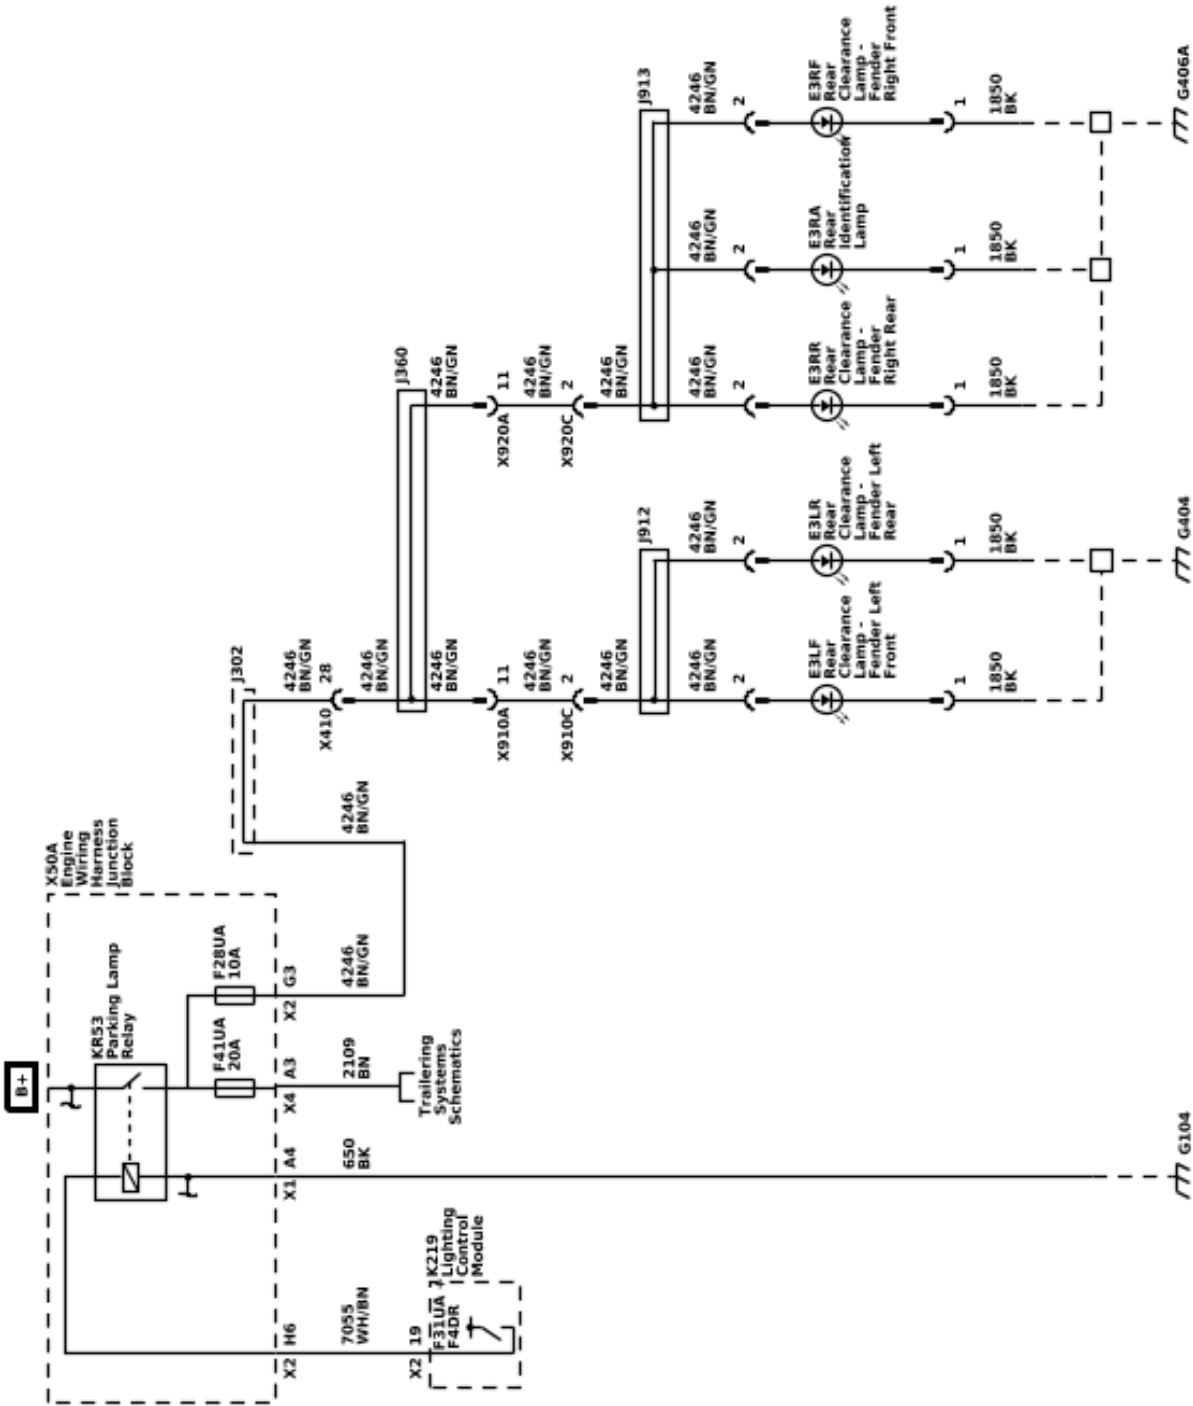

Interior Lights Schematics (Roof Console and Rear Seat Reading and Courtesy Lamps - Double Cab/Crew Cab)


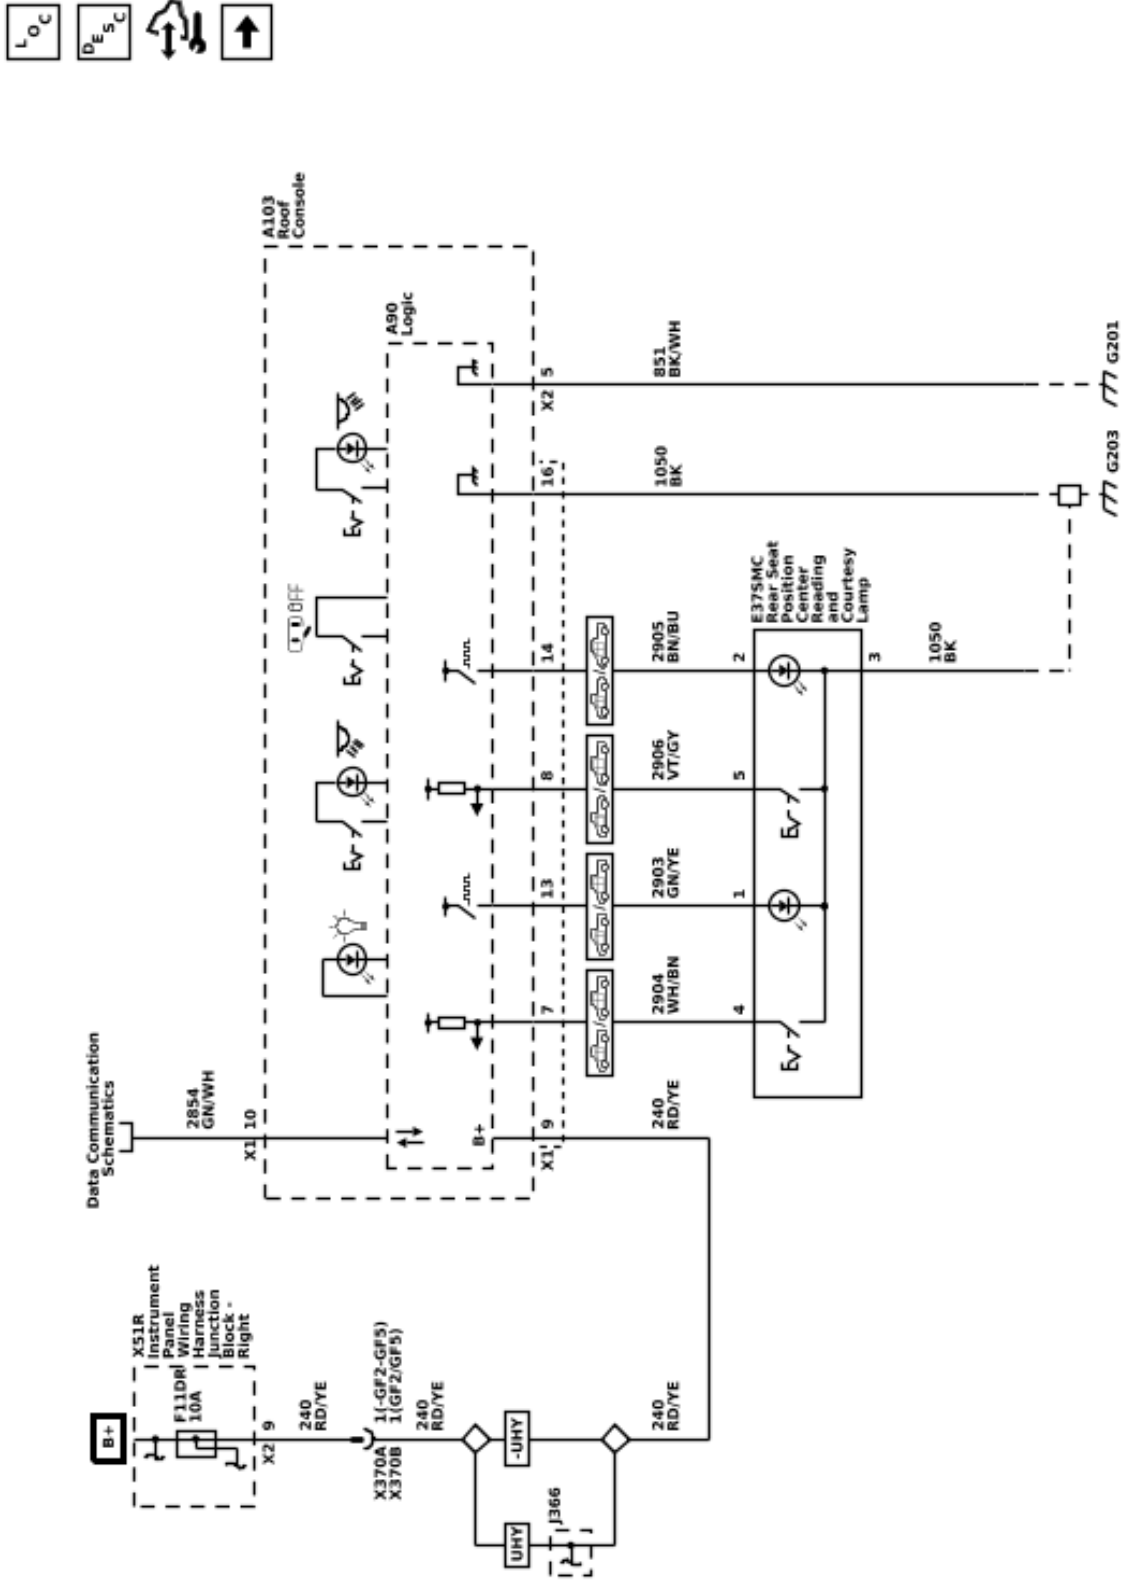


Interior Lights Schematics (Cargo Lamp Indicator, Sunshade, Center Console, and Door Lamps)

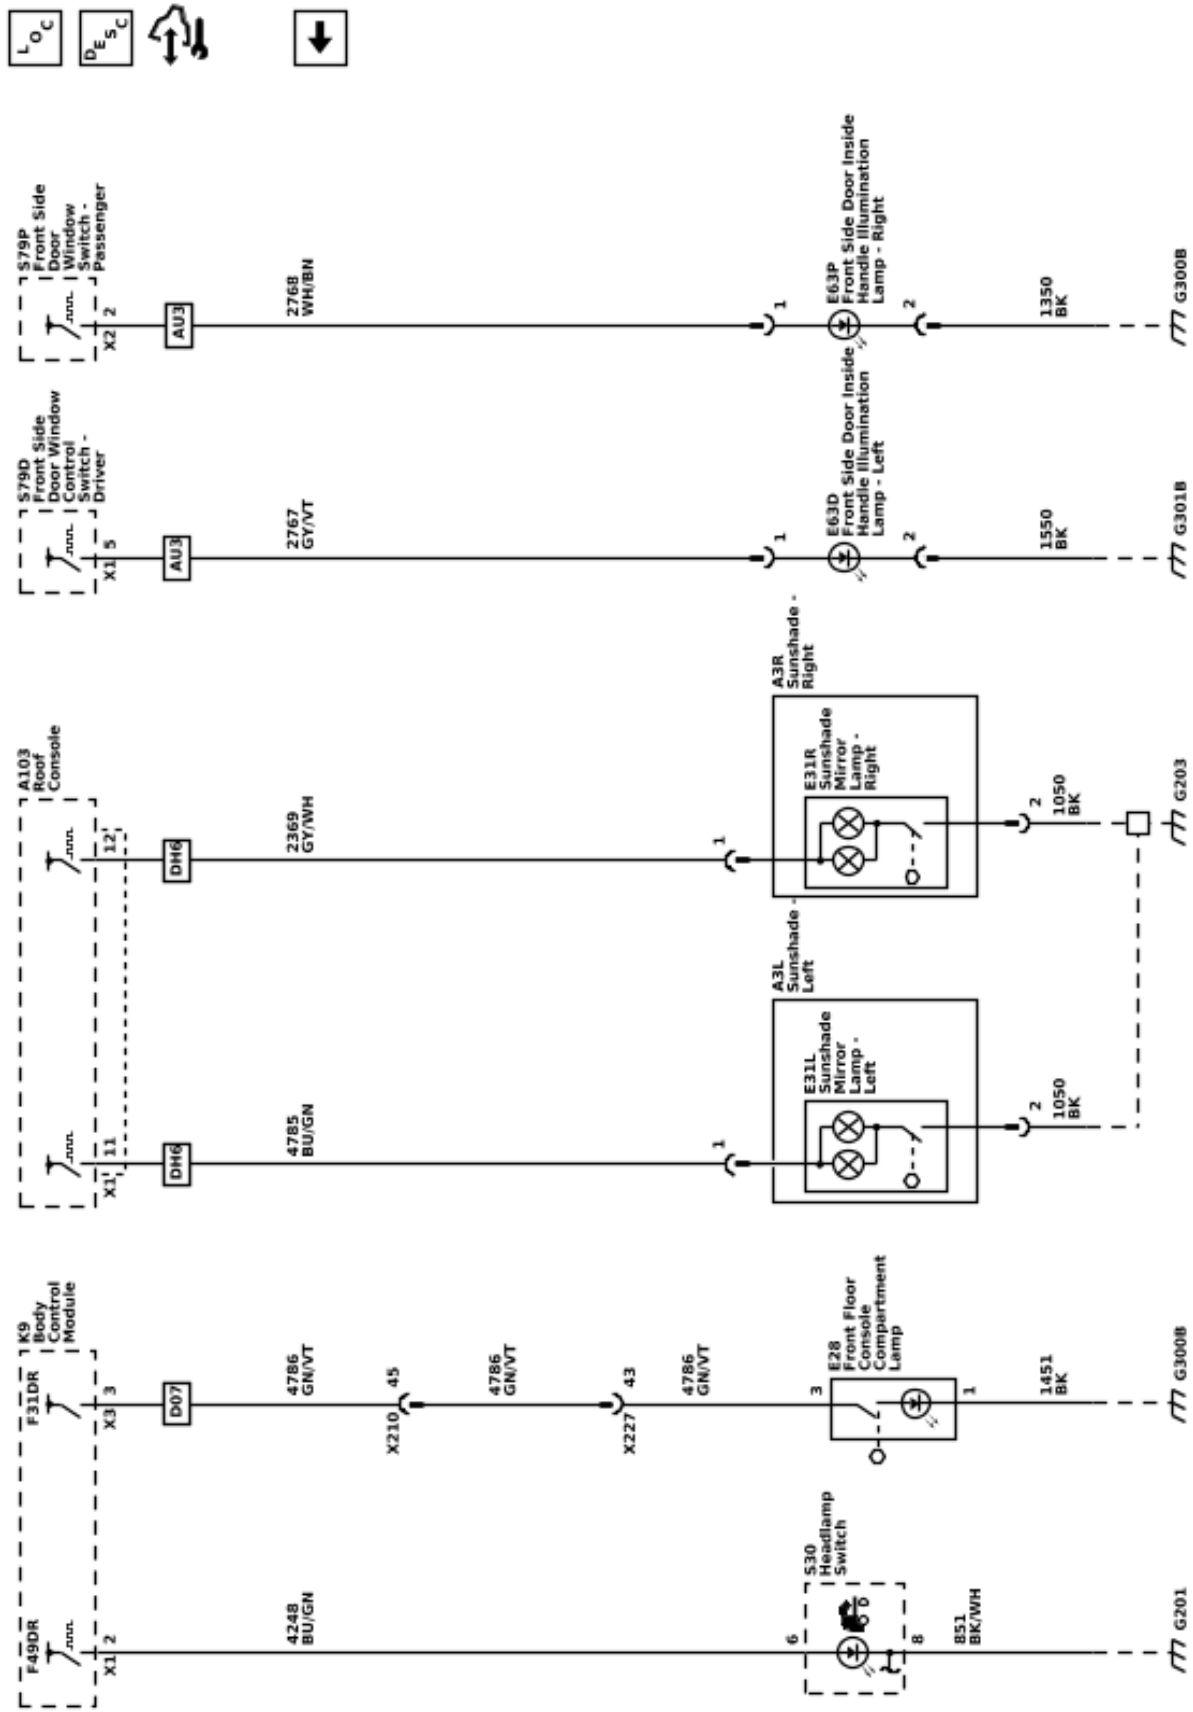


6150153


Interior Lights Dimming Schematics (Controls and Front Door Backlights)

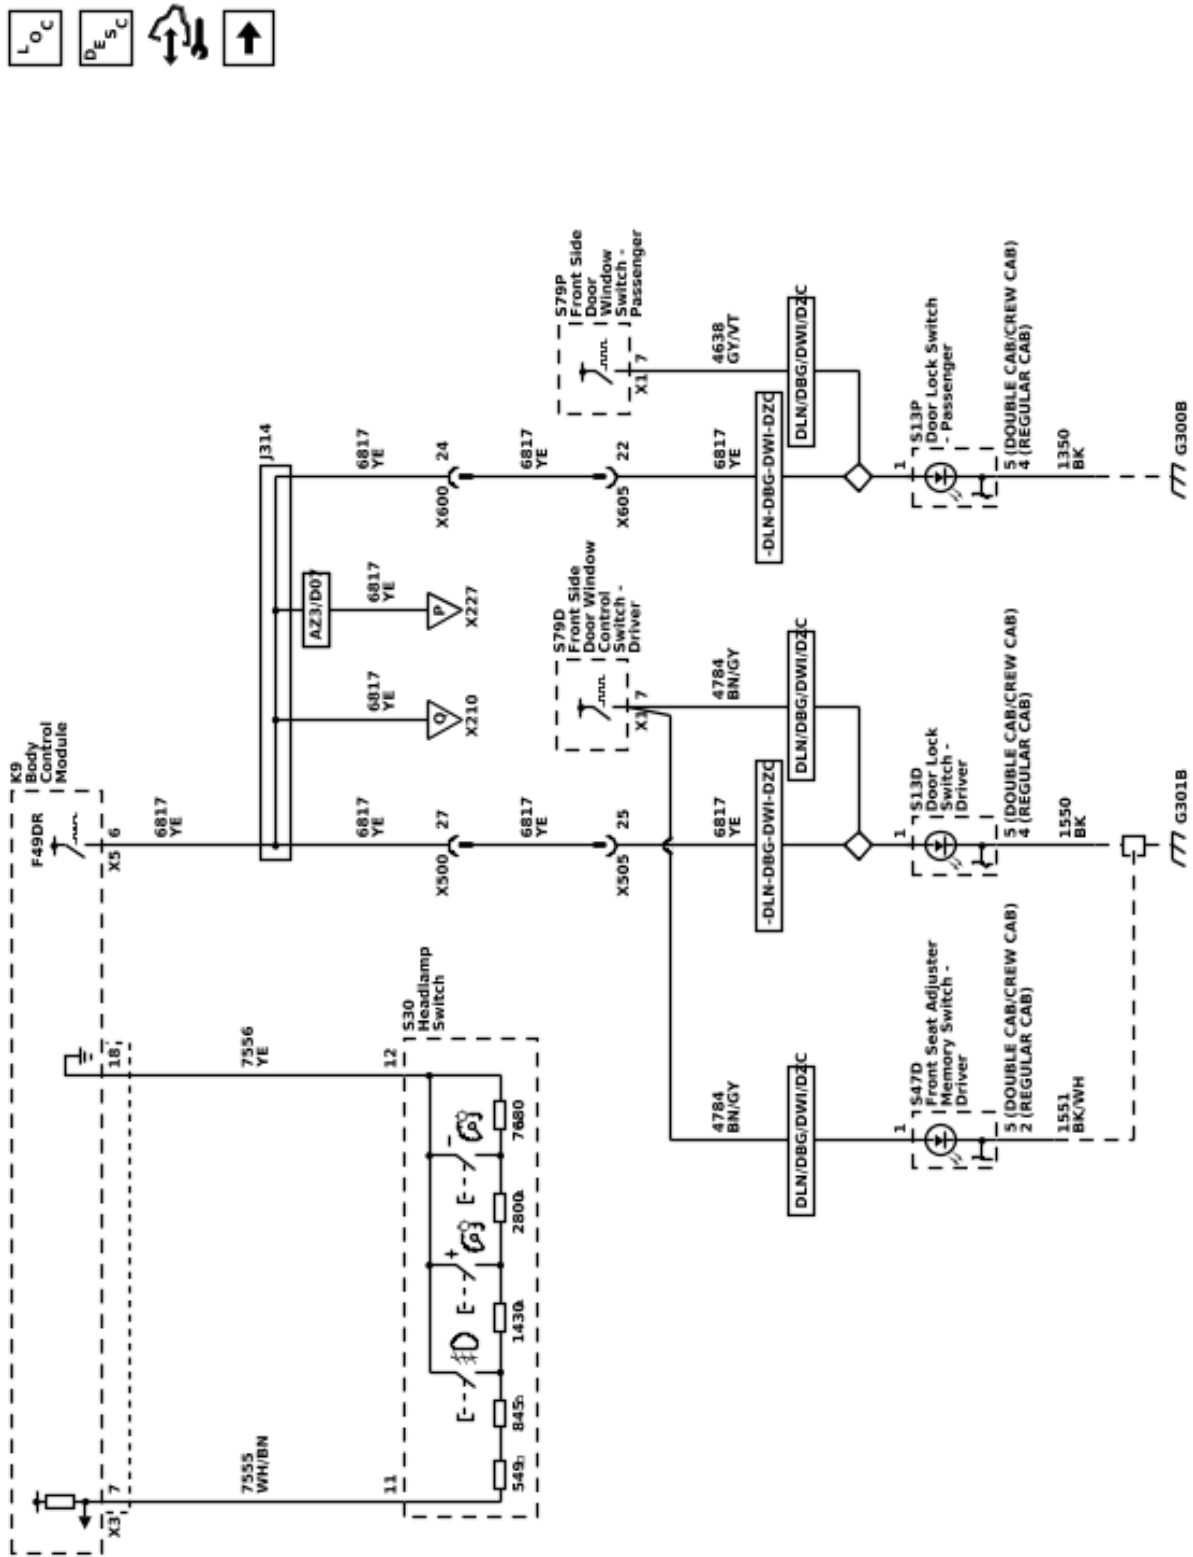


Interior Lights Dimming Schematics (Steering Wheel, Floor Console, and Center Seat Backlights)

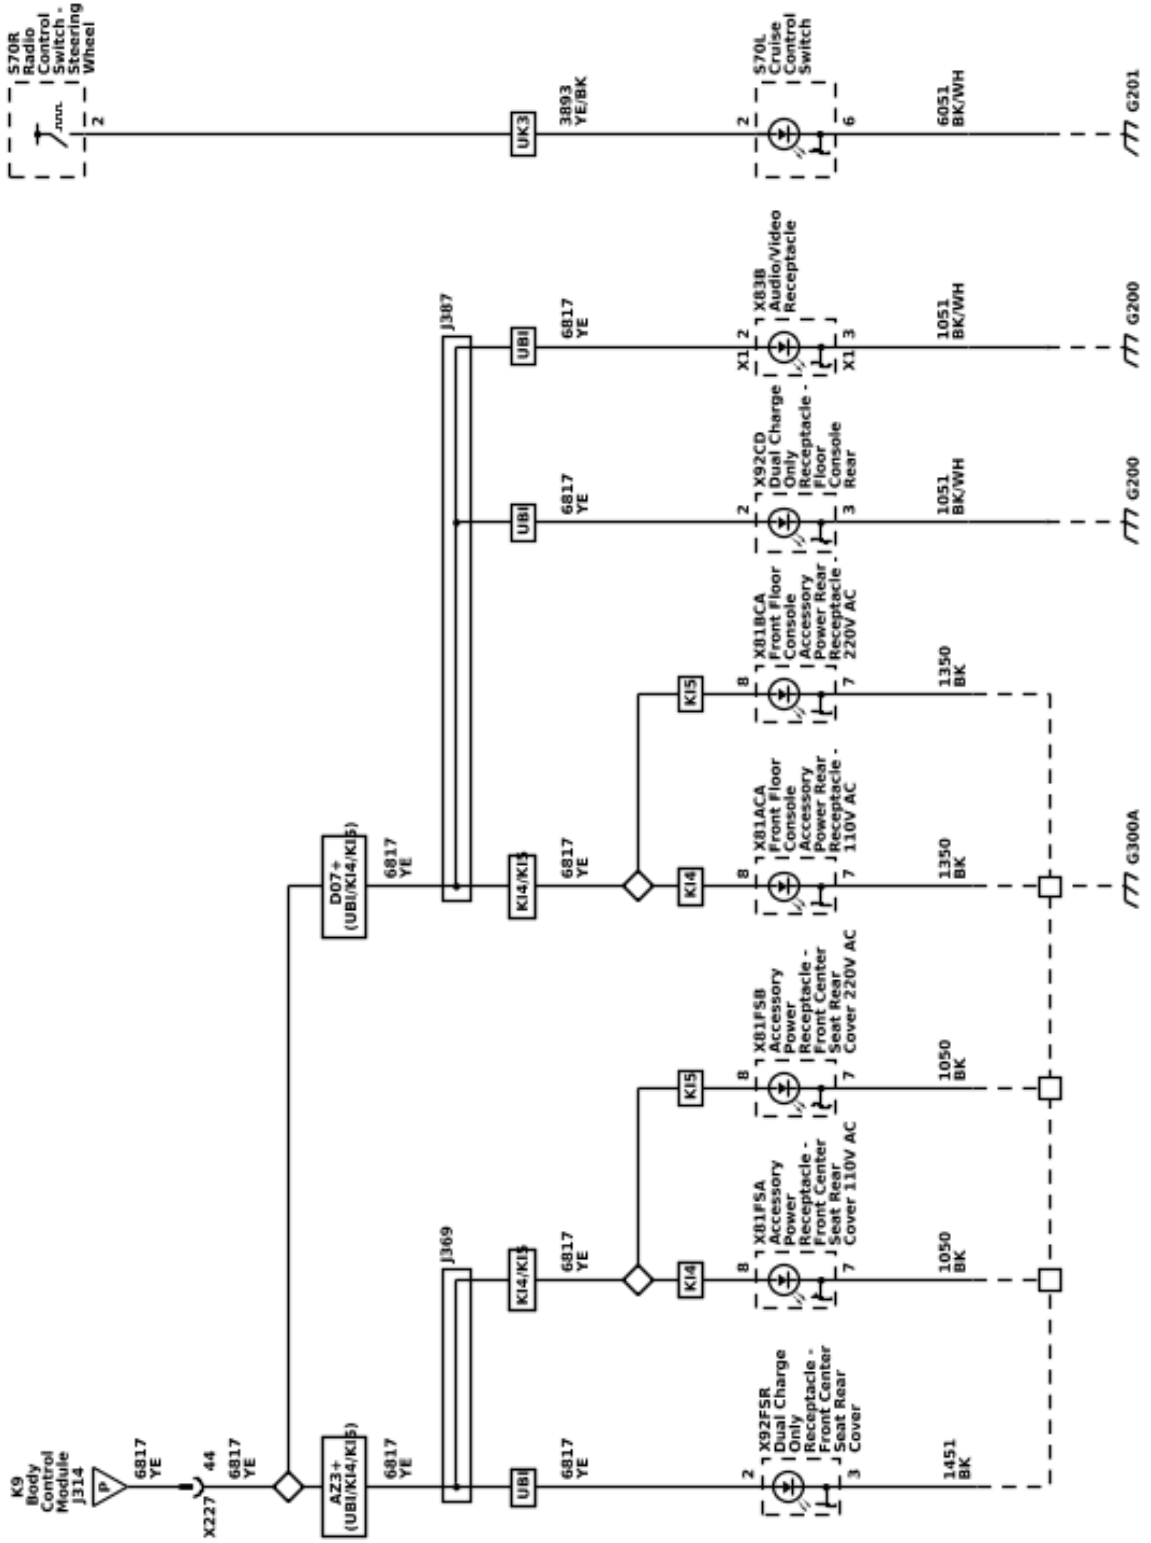

Interior Lights Dimming Schematics (Instrument Panel Backlights)

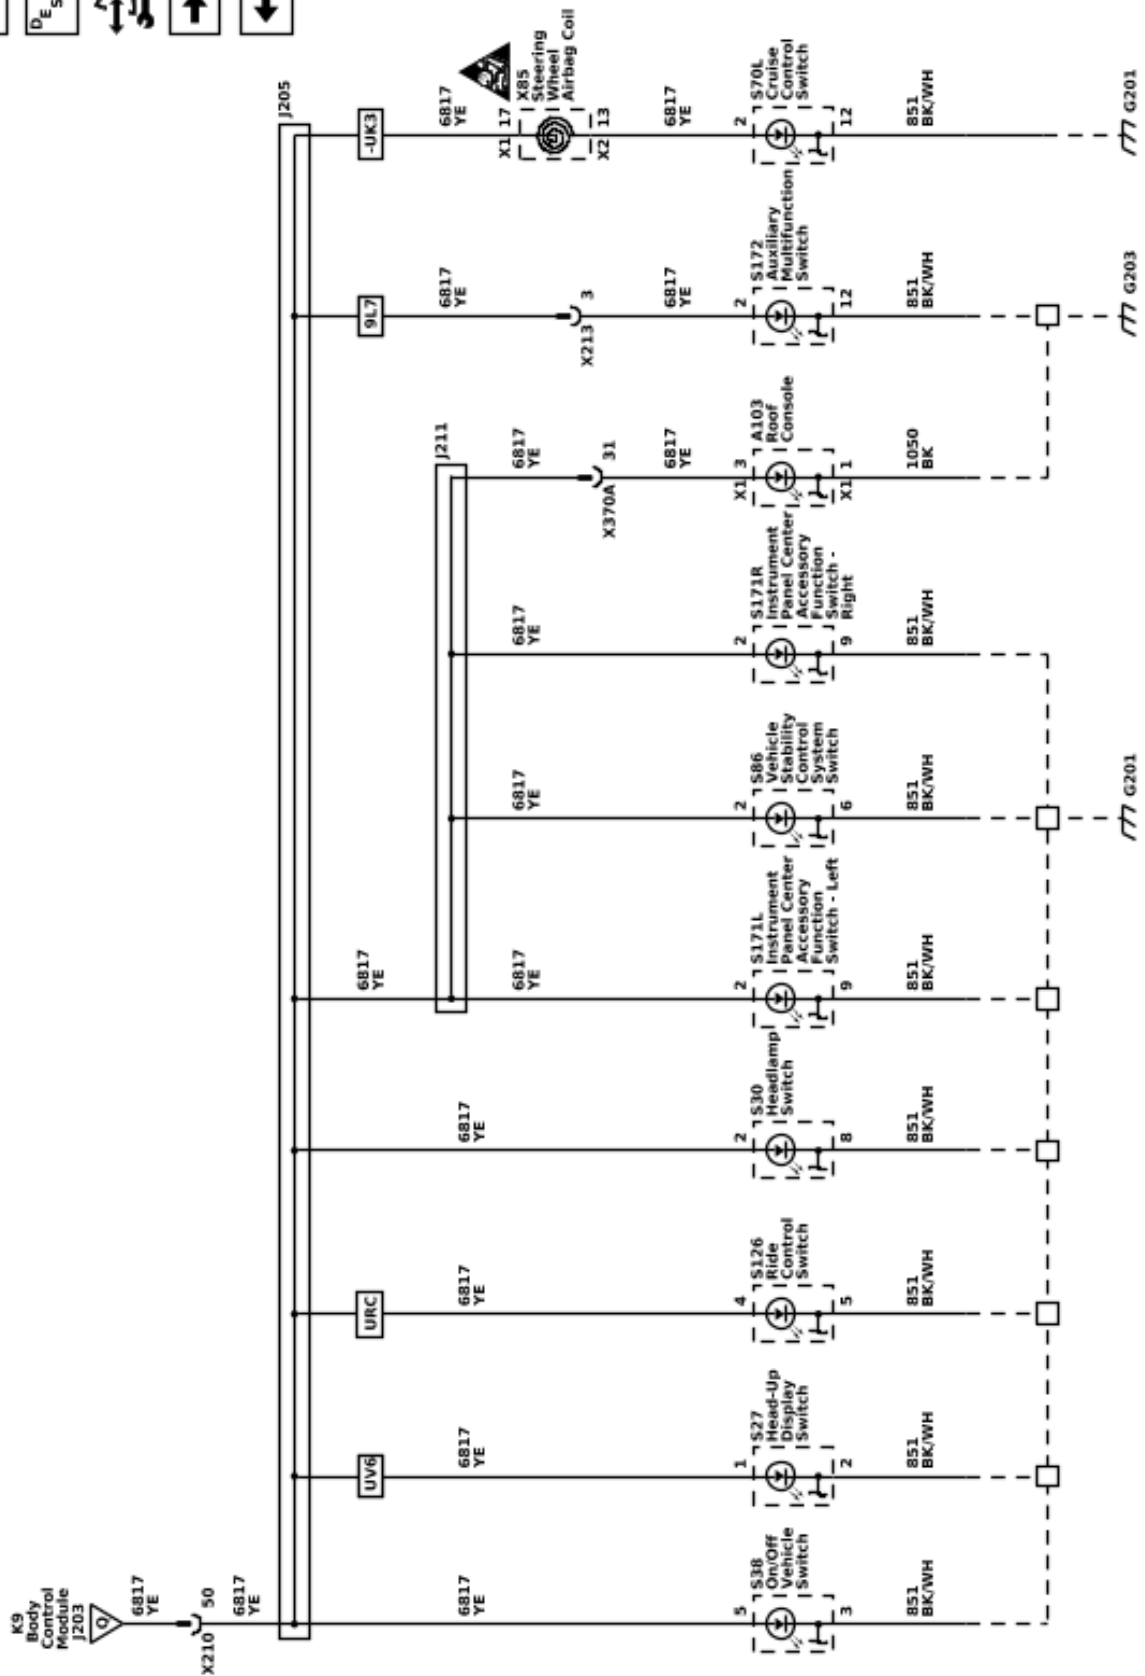

Interior Lights Dimming Schematics (Indicators)

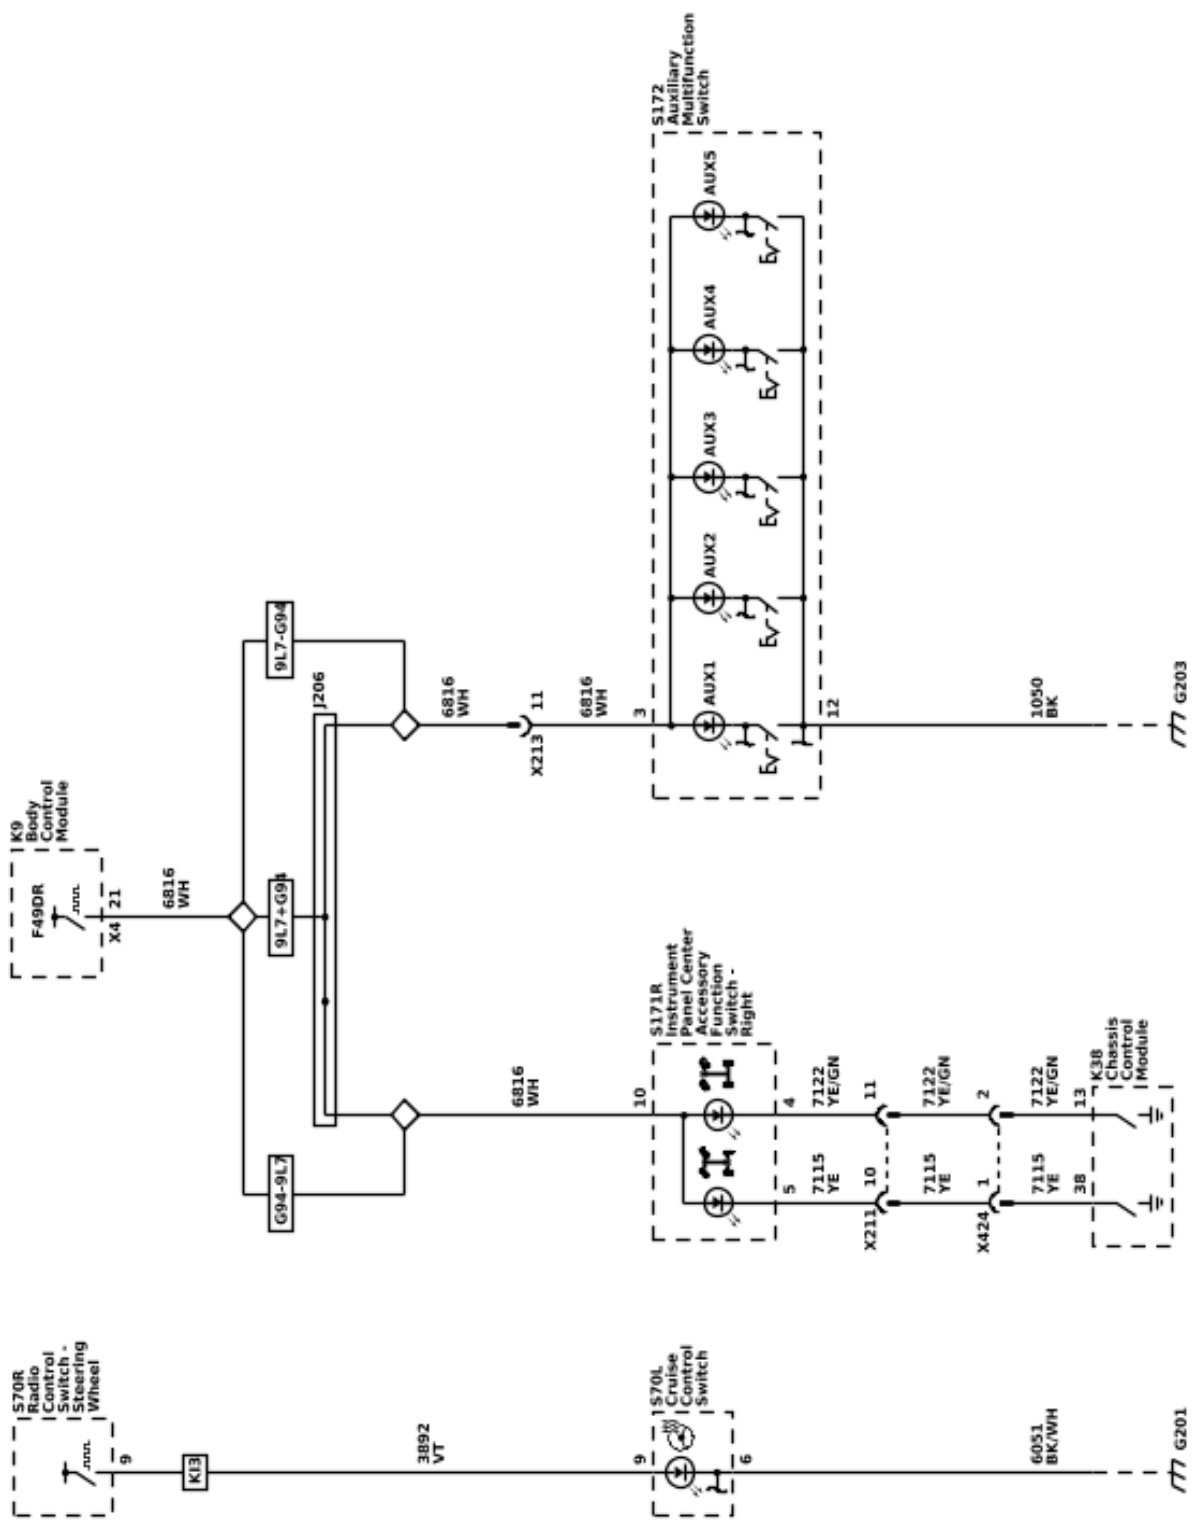

6150157

Description and Operation

Exterior Lighting Systems

Description and Operation

The exterior lighting system consist of the following lamps:

- Backup lamps
- Cargo lamps
- Daytime running lamps (DRL)
- Exterior courtesy lamps
- Hazard warning lamps
- Headlamps
- Park, tail, license, and marker lamps
- Front fog lamps (T3U)
- Stop lamps
- Task lamps
- Turn signal lamps
- Trailer lighting, refer to [Trailer Description and Operation on page 2-63](#) for more information.

Low Beam Headlamps

The headlamps may be turned ON in 3 different ways:

- When the headlamp switch is placed in the ON position, for normal operation
- When the headlamp switch is placed in the AUTO position, for automatic lamp control during low ambient light conditions
- When the headlamp switch is placed in the AUTO position, with the windshield wipers ON in daylight conditions, after a 6 second delay

The K9 Body Control Module (BCM) monitors three signal circuits from the S30 Headlamp Switch. When the headlamp switch is in the AUTO position, the three signal circuits are unaffected (open) and the BCM relies on the B10D Sun Load and Ambient Light and Security Indicator Sensor input to determine if headlamps are required or if daytime running lamps will be activated based on outside lighting conditions. When the headlamp switch is placed in the headlamp OFF position, the headlamp switch headlamps OFF signal circuit is grounded, indicating to the BCM that the exterior lamps should be turned OFF. With the headlamp switch in the PARK LAMPS position, the headlamp switch park lamps ON signal circuit is grounded, indicating that the park lamps have been requested. When the headlamp switch is in the HEADLAMP position, both the headlamp switch park lamps ON signal circuit and the headlamps ON signal circuit are grounded. The BCM responds to these inputs by sending a serial data message to the K219 Lighting Control Module. The Lighting Control Module responds by applying pulse width modulated (PWM) voltage to both headlamp low beam control circuits, illuminating the low beam headlamps. When the Lighting Control Module commands the low beam headlamps ON, the operator will notice the interior backlighting for the instrument cluster and the various other switches dim to the level of brightness selected by the instrument panel dimmer switch.

High Beam Headlamps

The high beam and flash to pass (FTP) functions are contained within the S78 Turn Signal Switch. The K9 Body Control Module (BCM) provides the turn signal/multifunction switch with two signal circuits, the high beam signal circuit and the FTP signal circuit. When the low beam headlamps are ON, and the turn signal/multifunction switch is placed in either the high beam position or FTP position, ground is applied to the BCM through the high beam/FTP signal circuit. The BCM responds to the high beam request by sending a serial data message to the K219 Lighting Control Module. The Lighting Control Module responds by applying pulse width modulated (PWM) voltage to both headlamp high beam control circuits, illuminating the high beam headlamps. The status of the high beam lamps is shown by a blue indicator located on the instrument cluster. When high beams are commanded on, the indicator will be illuminated continuously. If the driver turns the high beams off, the indicator will also turn off.

Flash to Pass

When the S78 Turn Signal Switch is momentarily placed in the flash to pass position, ground is applied to the turn signal/multifunction switch. The turn signal/multifunction switch applies ground to the K9 Body Control Module (BCM) through the flash to pass switch signal circuit. The BCM responds to the flash to pass request by sending a serial data message to the K219 Lighting Control Module. The Lighting Control Module responds by applying pulse width modulated (PWM) voltage to both headlamp high beam control circuits, illuminating the high beam headlamps. This causes the high beam headlamps to illuminate at full brightness until the turn signal/multifunction switch is returned to the at rest position.

Automatic Headlamp Control

The K9 Body Control Module (BCM) monitors three signal circuits from the S30 Headlamp Switch. When the headlamp switch is in the AUTO position, the three signal circuits are unaffected (open) and the BCM relies on the B10D Sun Load and Ambient Light and Security Indicator Sensor input to determine if headlamps are required or if daytime running lamps will be activated based on outside lighting conditions. During automatic lamp control, the headlamps will be off during daylight conditions but will turn on when the ambient light sensor detects low ambient light conditions. The ambient light sensor is a light sensitive transistor that varies the voltage signal to the BCM. The BCM provides a 5 volt reference signal and a low reference ground to the ambient light sensor. During low light conditions the BCM will request the low beam headlamps ON by sending a serial data message to the K219 Lighting Control Module. The Lighting Control Module responds by applying pulse width modulated (PWM) voltage to both headlamp low beam control circuits, illuminating the low beam headlamps.

IntelliBeam – Automatic High Beam Assist (TQ5)

The IntelliBeam system is activated by pressing the auto high beam assist button on the turn signal switch while the exterior lamp control is in AUTO mode and

2-44 Lighting

the engine running. The AHBA system consists of a front camera module that detects light, and is able to identify approaching vehicles on an even, straight road at a distance of greater than 0.4 km (0.25 mi). The front camera module analyzes light color, intensity, and movement. The AHBA system will turn OFF the high beam headlamps when approaching vehicle headlamps or preceding vehicle taillights are detected by the front camera module. The AHBA system is turned off anytime the headlamp switch is moved out of the AUTO position.

AHBA System Activation

- Vehicle ON
- Headlamp switch placed in the AUTO position
- Outside lighting conditions must be dark
- Vehicle speed greater than 25 mph (40 km/h)

AHBA System Operation

The following are conditions that the AHBA system will turn the high beam headlamps off during operation:

- The system detects approaching traffic headlamps
- The system detects preceding traffic tail lamps
- Ambient light level too high due to towns or twilight situations
- The vehicle's speed drops below 13 mph (22 km/h)
- Delay

Note: AHBA may not operate properly if any of the following conditions exist:

- Approaching and preceding vehicles lamps are undetectable due to dirt, snow, road spray, smoke, fog, or any other airborne conditions.
- The front camera module is covered with ice, dirt, snow, haze, or is obstructed.
- The vehicle is being driven on winding or hilly road conditions which would make any on coming vehicle headlamps undetectable by the AHBA.

AHBA System Deactivation

- Manually operating the headlamp switch from neutral to high beam position
- AHBA is deactivated automatically when the front or rear fog lamps are turned ON

AHBA System Indicator

The status of the AHBA system is shown by a green indicator located on the instrument panel cluster. When AHBA is active, the indicator will be illuminated continuously. If the operator deactivates the AHBA system, the indicator will turn off.

Daytime Running Lamps

The daytime running lamps (DRL) will illuminate continuously when the following conditions are met:

- Engine running
- The headlamp switch is in the AUTO position
- Ambient light conditions are daytime conditions

The B10D Sun Load and Ambient Light and Security Indicator Sensor is used to monitor outside lighting conditions. The ambient light sensor provides a voltage signal that will vary between 0.2 and 4.9 volts

depending on outside lighting conditions. The K9 Body Control Module (BCM) provides a 5 volt reference signal and a low reference ground to the ambient light sensor. The BCM monitors the ambient light sensor signal circuit to determine if outside lighting conditions are correct for either daytime running lamps (DRL) or automatic lamp control when the headlamp switch is in the AUTO position. In daylight conditions the BCM will send a serial data message to the K219 Lighting Control Module to command the DRLs ON, the Lighting Control Module responds by applying pulse width modulated (PWM) voltage to both DRL control circuits, illuminating the DRLs. During low light conditions the Lighting Control Module will command the low beam headlamps ON.

Hazard Lamps

The hazard flashers may be activated in any power mode. The Hazard Warning Switch signal circuit is momentarily grounded when the hazard switch is pressed. The K9 Body Control Module (BCM) responds to the hazard switch signal input by sending a serial data message to the K219 Lighting Control Module. The Lighting Control Module responds by supplying battery voltage to all turn signal lamps in an ON and OFF duty cycle. When the hazard switch is activated, the BCM also sends a serial data message to the instrument cluster requesting both turn signal indicators to be cycled ON and OFF.

Park, Tail, and License Lamps

When the S30 Headlamp Switch is placed in the HEAD or PARK position, ground is applied to the park lamp switch ON signal circuit to the K9 Body Control Module (BCM). The BCM responds to the park lamp switch signal input by sending a serial data message to the K219 Lighting Control Module. The Lighting Control Module responds by applying battery voltage to the park lamps, tail lamps, and license lamps control circuits illuminating the park, tail, and license lamps.

Stop Lamps

The B22 Brake Pedal Position Sensor is used to sense the action of the driver application of the brake pedal. The K9 Body Control Module (BCM) provides the brake pedal position sensor with low reference, signal, and 5 volt reference circuits. When the variable signal reaches a voltage threshold indicating the brakes have been applied, the BCM will respond by sending a serial data message to the K219 Lighting Control Module requesting the stop lamps to be turned ON. The Lighting Control Module responds by applying battery voltage to the left and right stop lamp control circuits as well as the center high mounted stop lamp control circuit illuminating the left and right stop lamps and the center high mounted stop lamp. If serial data communication is lost between the BCM and the Lighting Control Module, the Lighting Control Module will receive a serial data message from the Electronic Brake Control Module indicating that the brakes have been applied. If serial data communication is lost between all three modules, the Lighting Control Module also receives a hard wired voltage signal from the BCM to signal the brake lamps ON.

Turn Signal Lamps

Turn Signals

The K9 Body Control Module (BCM) provides the S78 Turn Signal Switch with left and right turn signal switch signal circuits. Ground is applied at all times to the turn signal/multifunction switch. The turn signal lamps may only be activated with the ignition switch in the ON or START positions. When the turn signal/multifunction switch is placed in either the turn right or turn left position, ground is applied to the BCM through either the right turn or left turn signal switch signal circuit. The BCM responds to the turn signal switch input by sending a serial data message to the K219 Lighting Control Module. The Lighting Control Module responds by applying a pulsating voltage to the turn signal lamps through their respective control circuits. When a turn signal request is received by the BCM, a serial data message is also sent to the instrument cluster requesting the respective turn signal indicator be pulsed ON and OFF.

Turn Signal Outage Detection

Vehicles with LED turn signals require additional turn signal outage detection circuits that provide turn signal feedback to the K219 Lighting Control Module. The Lighting Control Module uses the feedback information to send a serial data message to the instrument cluster to alert the driver anytime a turn signal fault is detected. If a fault is detected on a turn signal circuit or a turn signal feedback circuit, the turn signals will flash in a rapid manner to alert the driver of the fault.

Turn Signal Animation

When the K219 Lighting Control Module receives a serial data message from the K9 Body Control Module (BCM) that the turn signals are being commanded on, the lighting control module responds by applying a pulsating voltage to the front, mirror, and rear turn signal lamps through their respective control circuits. The left and right turn signal control circuits are connected to each front and rear lamp assemblies, this is for animation purposes. When a lamp assembly only receives one turn signal input, an animation effect takes place as a “swiping” motion for the turn signals. When a lamp assembly receives both turn signal inputs as part of the hazard lamps becoming active, the turn signals do not exhibit the animation effect and will flash without the “swiping” motion.

Backup Lamps

With the engine running and the transmission in the reverse position, the transmission control module (TCM) sends a serial data message to the multiple control modules. The message indicates that the gear selector is in the reverse position. The K9 Body Control Module (BCM) responds to the reverse position message by sending a serial data message to the K219 Lighting Control Module to request the backup lamps on. The Lighting Control Module responds by applying battery voltage to the backup lamps control circuit(s) illuminating the backup lamps. The applied voltage is also sent to the A11 Radio and A10 Inside Rearview Mirror for rearview camera purposes. Once the driver moves the gear selector out of the reverse position, a serial data message is sent by the TCM that the transmission is no longer in the reverse position.

The BCM responds to the reverse position message by sending a serial data message to the Lighting Control Module to request the backup lamps off. The Lighting Control Module responds by removing battery voltage from the backup lamp circuits. The engine must be running for the backup lamps to operate.

Cargo Lamps

Cargo Lamps

When the K9 Body Control Module (BCM) receives a task lamp switch input from the S30 Headlamp Switch, the BCM responds by sending a serial data message to the K219 Lighting Control Module. The lighting control module responds by applying pulse width modulated (PWM) voltage to the cargo lamp control circuits illuminating the cargo lamps. In the event that the cargo lamps were to remain illuminated for more than 10 minutes with the ignition switch in the OFF position, the lighting control module will deactivate the cargo lamp control circuits to prevent total battery discharge.

Task Lamps

When the K9 Body Control Module (BCM) receives a task lamp switch input from the S30 Headlamp Switch, the BCM responds by sending a serial data message to the K219 Lighting Control Module. The lighting control module responds by applying pulse width modulated (PWM) voltage to the task lamp control circuits illuminating the task lamps in each outside rearview mirror assembly. When the task lamp switch is pressed a second time, the left task lamp control circuit will stay illuminated while the right side will be turned off. When the task lamp switch is pressed a third time, the left task lamp control circuit will be turned off while the right side will be turned back on. When the task lamp switch is pressed a fourth time, both task lamps will be turned off. In the event that the task lamps were to remain illuminated for more than 10 minutes with the ignition switch in the OFF position, the lighting control module will deactivate the cargo lamp control circuit to prevent total battery discharge.

Approach Lighting

Approach lighting is commanded ON when the unlock button is pressed on the keyless entry transmitter during dark ambient light conditions. When the keyless entry transmitter unlock button is pressed, a serial data message is sent by the K9 Body Control Module (BCM) that the vehicle is being unlocked. The K219 Lighting Control Module responds to the serial data message by applying voltage to the approach lamp control circuit illuminating the LED lighting located under each outside rearview mirror as part of approach lighting.

Battery Run Down Protection/ Inadvertent Power

To provide battery run down protection, the exterior lamps will be deactivated automatically under certain conditions. The K9 Body Control Module (BCM) monitors the state of the S30 Headlamp Switch. If the headlamp switch is in the park or headlamp position when the ignition switch is ON and then the ignition switch is placed in the OFF position, the BCM initiates a 10 minutes timer. At the end of the 10 minutes, the BCM will send a serial data message to the K219 Lighting

Control Module to deactivate the exterior lamps to prevent total battery discharge. This feature will be cancelled if any power mode other than OFF becomes active.

The BCM will disable battery run down protection if any of the following conditions exist:

- The park or headlamp switch is changed from the ON to OFF position, and back to the ON position during battery run down protection.
- The BCM determined that the park or headlamp switch was not active when the ignition was turned OFF.

Interior Lighting Systems Description and Operation

Interior Lamps

Dome Lamps

The dome lamps are controlled by door ajar inputs to the K9 Body Control Module (BCM). When any door is opened, the door ajar switch contacts close and the BCM receives a door-open input. The BCM responds by sending a serial data message to the A103 Roof Console. The Roof Console responds by applying battery voltage to the dome lamps illuminating the dome lamps. The BCM will also send a serial data message to request the dome lamps on when a door lock/unlock request is activated with the key fob. After all doors have been closed, the dome lamp will remain illuminated approximately 3 seconds after the last door closes. In the event that the dome lamp were to remain illuminated for more than 10 minutes with the ignition switch in the OFF position, the BCM will deactivate the dome lamp control circuit to prevent total battery discharge. The dome lamps will turn OFF using the theater dimming feature when controlled by the BCM.

Center Console Compartment Lamp

The K9 Body Control Module (BCM) supplies battery voltage to the center console lamp through control circuit 4786 anytime the ignition/vehicle is turned on or the dome lamps are requested on through the dome lamp control switch on the A103 Roof Console. In the event that the center console lamp were to remain illuminated for more than 10 minutes with the ignition/vehicle off, the BCM will deactivate the courtesy lamp control circuit to prevent total battery discharge.

Keyless Entry Interior Illumination

When the operator uses the keyless entry transmitter in order to unlock the doors, the K9 Body Control Module (BCM) receives a door-unlock signal. The BCM must receive inputs from various systems that indicate that the ignition switch is OFF, the courtesy lamp switch is OFF, and all doors are closed before the BCM will activate the interior lamps. After all doors have been closed, the courtesy lamps will turn OFF immediately if the ignition switch is turned to the ON position, the door locks are LOCKED, or approximately 20 seconds after the last door closes. The BCM will turn off the courtesy lamps through the theater dimming feature. The BCM keeps the courtesy lamps on for 40 seconds after an alarm event is completed.

Reading Lamps

When a reading lamp button is pressed, the switch contacts close providing a path to ground for the signal circuit from the A103 Roof Console. The roof console responds by applying battery voltage to the appropriate reading lamp control circuit illuminating the reading lamp. If the operator inadvertently leaves a reading lamp ON, the BCM will send a serial data message to turn all interior lighting off after 10 minutes has passed to prevent total battery discharge.

Sunshade Mirror Lamp

The inadvertent power supply voltage circuit from the K9 Body Control Module (BCM) provides battery voltage to the passenger side sunshade mirror lamp. When the sunshade mirror cover is opened, a switch closes providing ground and the sunshade lamp illuminates. If the operator inadvertently leaves the sunshade mirror cover open with the lamp ON, the BCM will turn all interior lamps OFF after 10 minutes has passed to prevent total battery discharge.

Interior Lamps Dimming

With the S30 Headlamp Switch in the PARK or HEAD position, the park lamp switch signal circuit provides an input to the K9 Body Control Module (BCM). The BCM responds by applying voltage to the backlight dimming control circuits illuminating all components with interior backlighting. All interior backlighting turns on at the dimming level set by the dimmer buttons within the headlamp switch. The headlamp switch is used to increase and decrease the brightness of the interior backlighting components. The BCM provides a signal circuit and a low reference circuit to the headlamp switch for backlight dimming. When a dimming button is pressed, the signal circuit becomes grounded through the appropriate resistor internal to the headlight switch and voltage from the BCM will decrease accordingly. The BCM interprets the signal and responds in two ways. The BCM applies a pulse width modulated (PWM) voltage through the LED dimming control circuits illuminating the interior backlighting to the requested level of brightness. The BCM also sends a serial data message to the appropriate control modules requesting all dimming components to be illuminated to the same level of brightness.


Battery Rundown Protection/ Inadvertent Power

The K9 Body Control Module (BCM) inadvertent power supply voltage circuit provides battery voltage to all of the interior courtesy lamps. In the event that any of these lamps were to remain illuminated for a period of more than 10 minutes with the ignition switch in the OFF position, the BCM will deactivate the inadvertent power supply voltage circuit to prevent total battery discharge. If the ignition switch is turned to any position other than OFF, or if a lamp switch is activated during this 10 minute period, the timer resets for another 10 minutes.


Mirrors

Schematic and Routing Diagrams



Inside Rearview Mirror Schematics (Inside Rearview Mirror (DD8/DRZ))

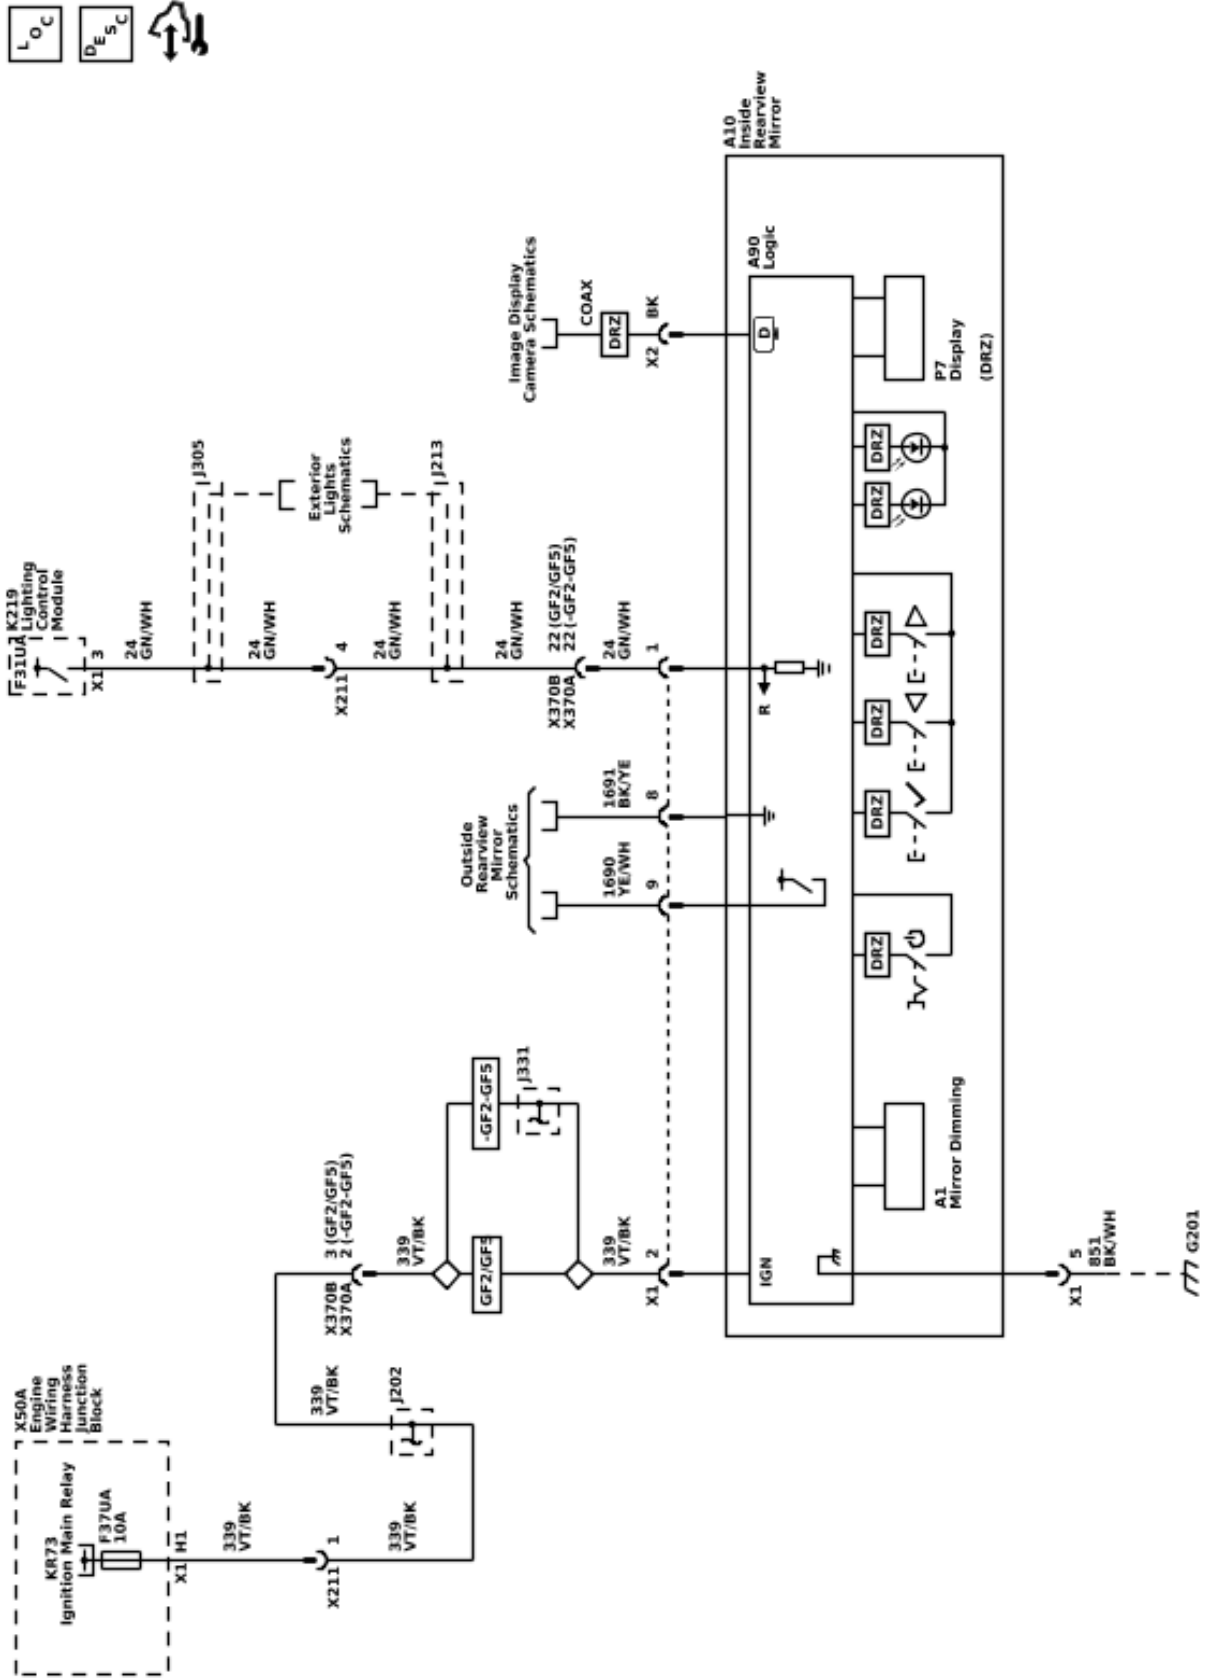


Outside Rearview Mirror Schematics (Driver Controls, Position, and Folding)

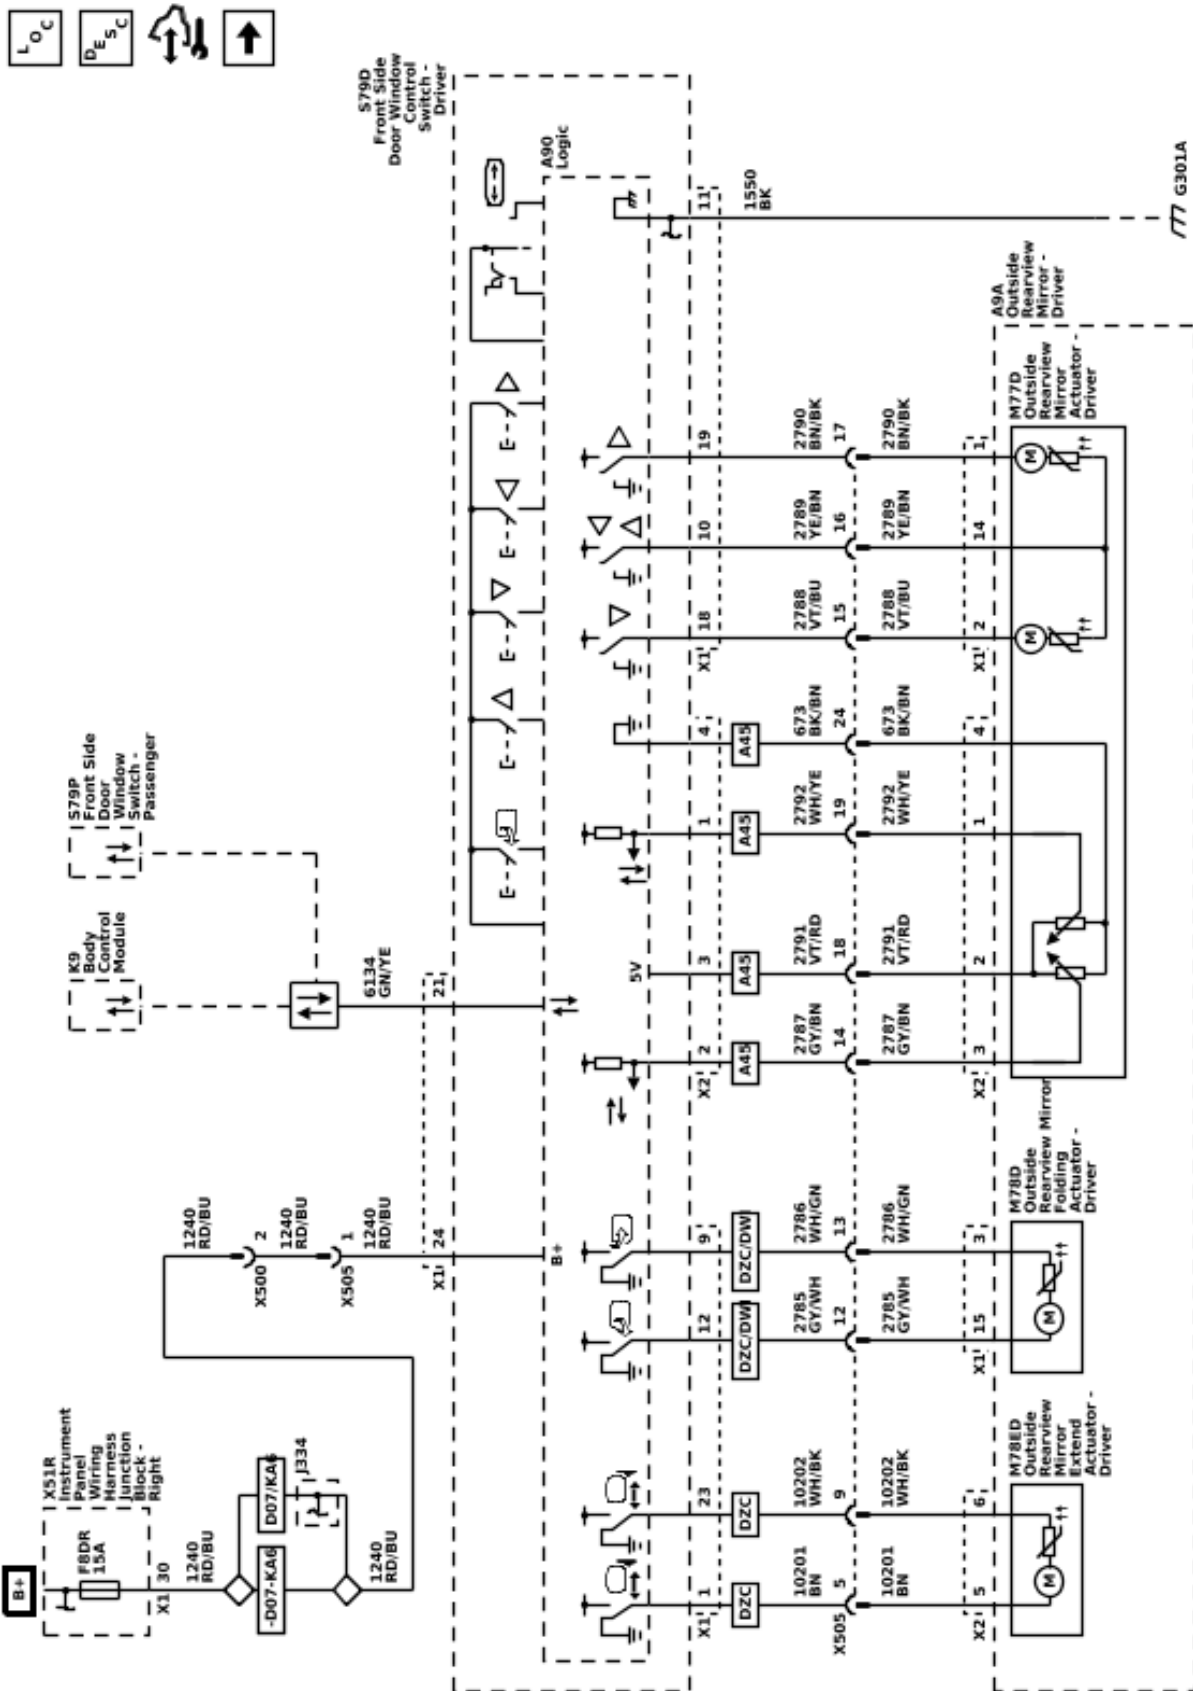

Outside Rearview Mirror Schematics (Passenger Controls, Position, and Folding)

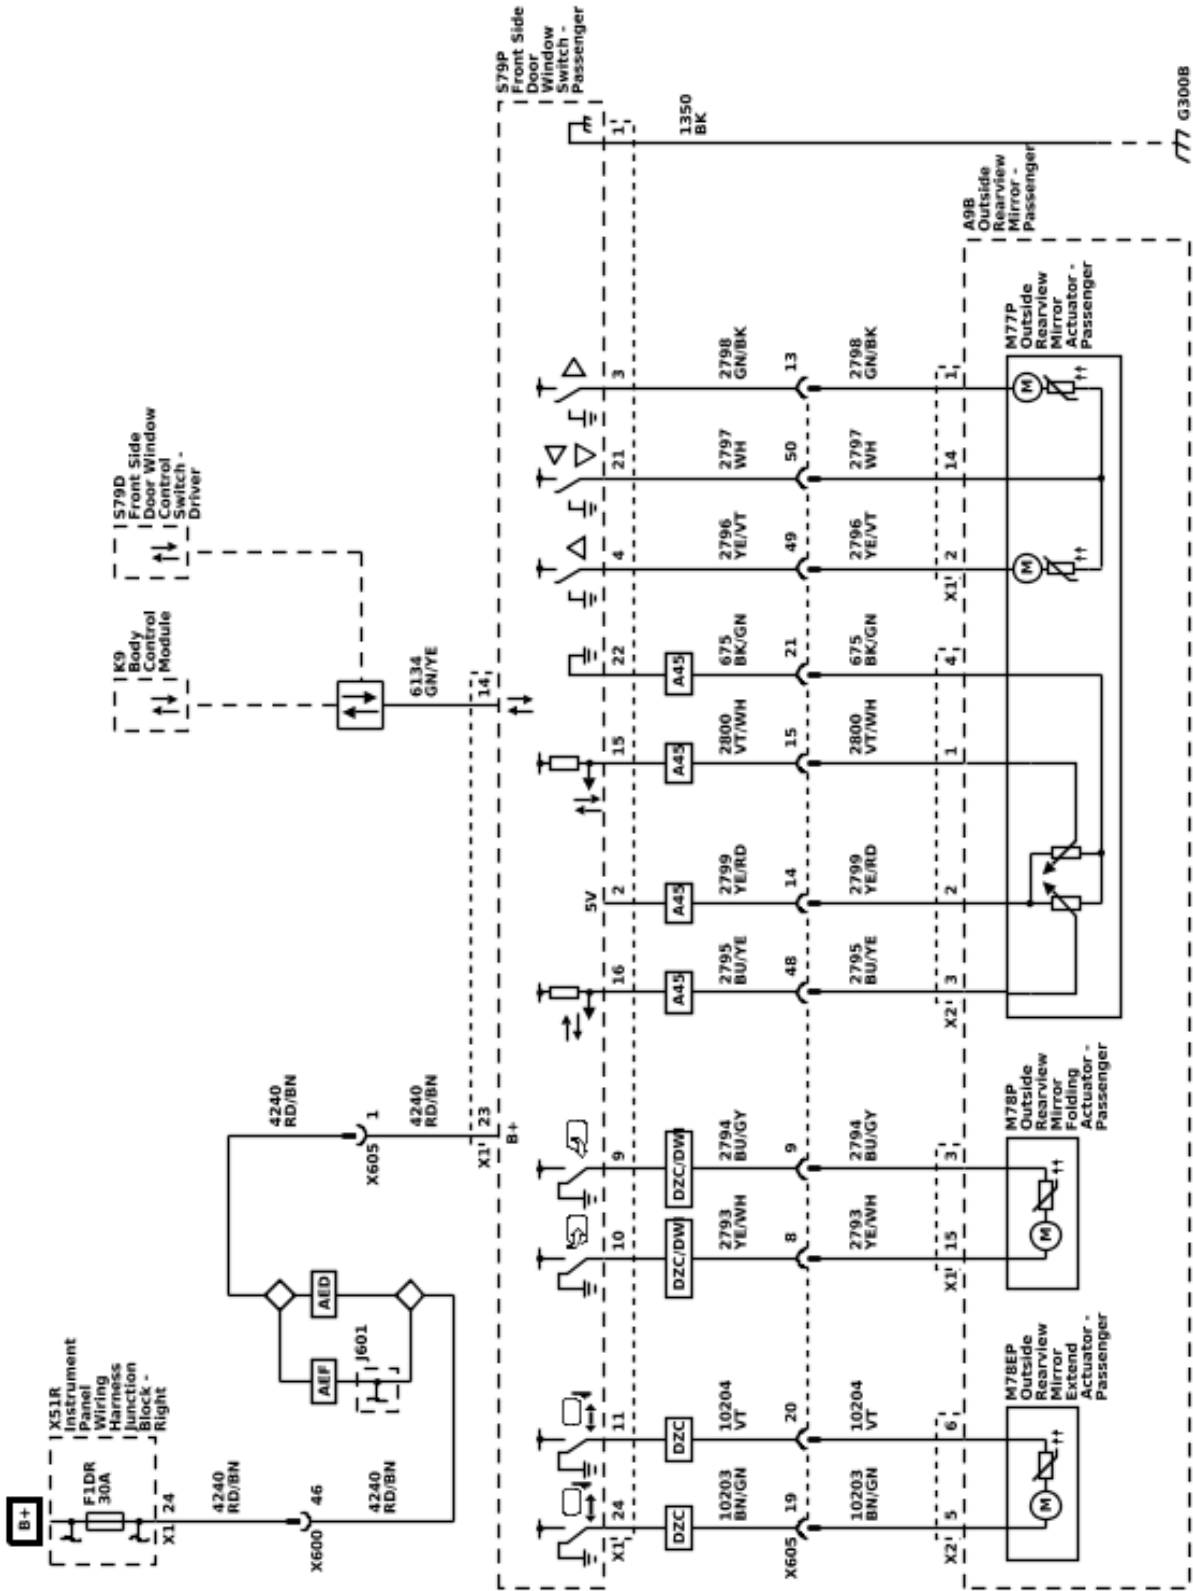

Outside Rearview Mirror Schematics (Dimming and Heating (DWI))

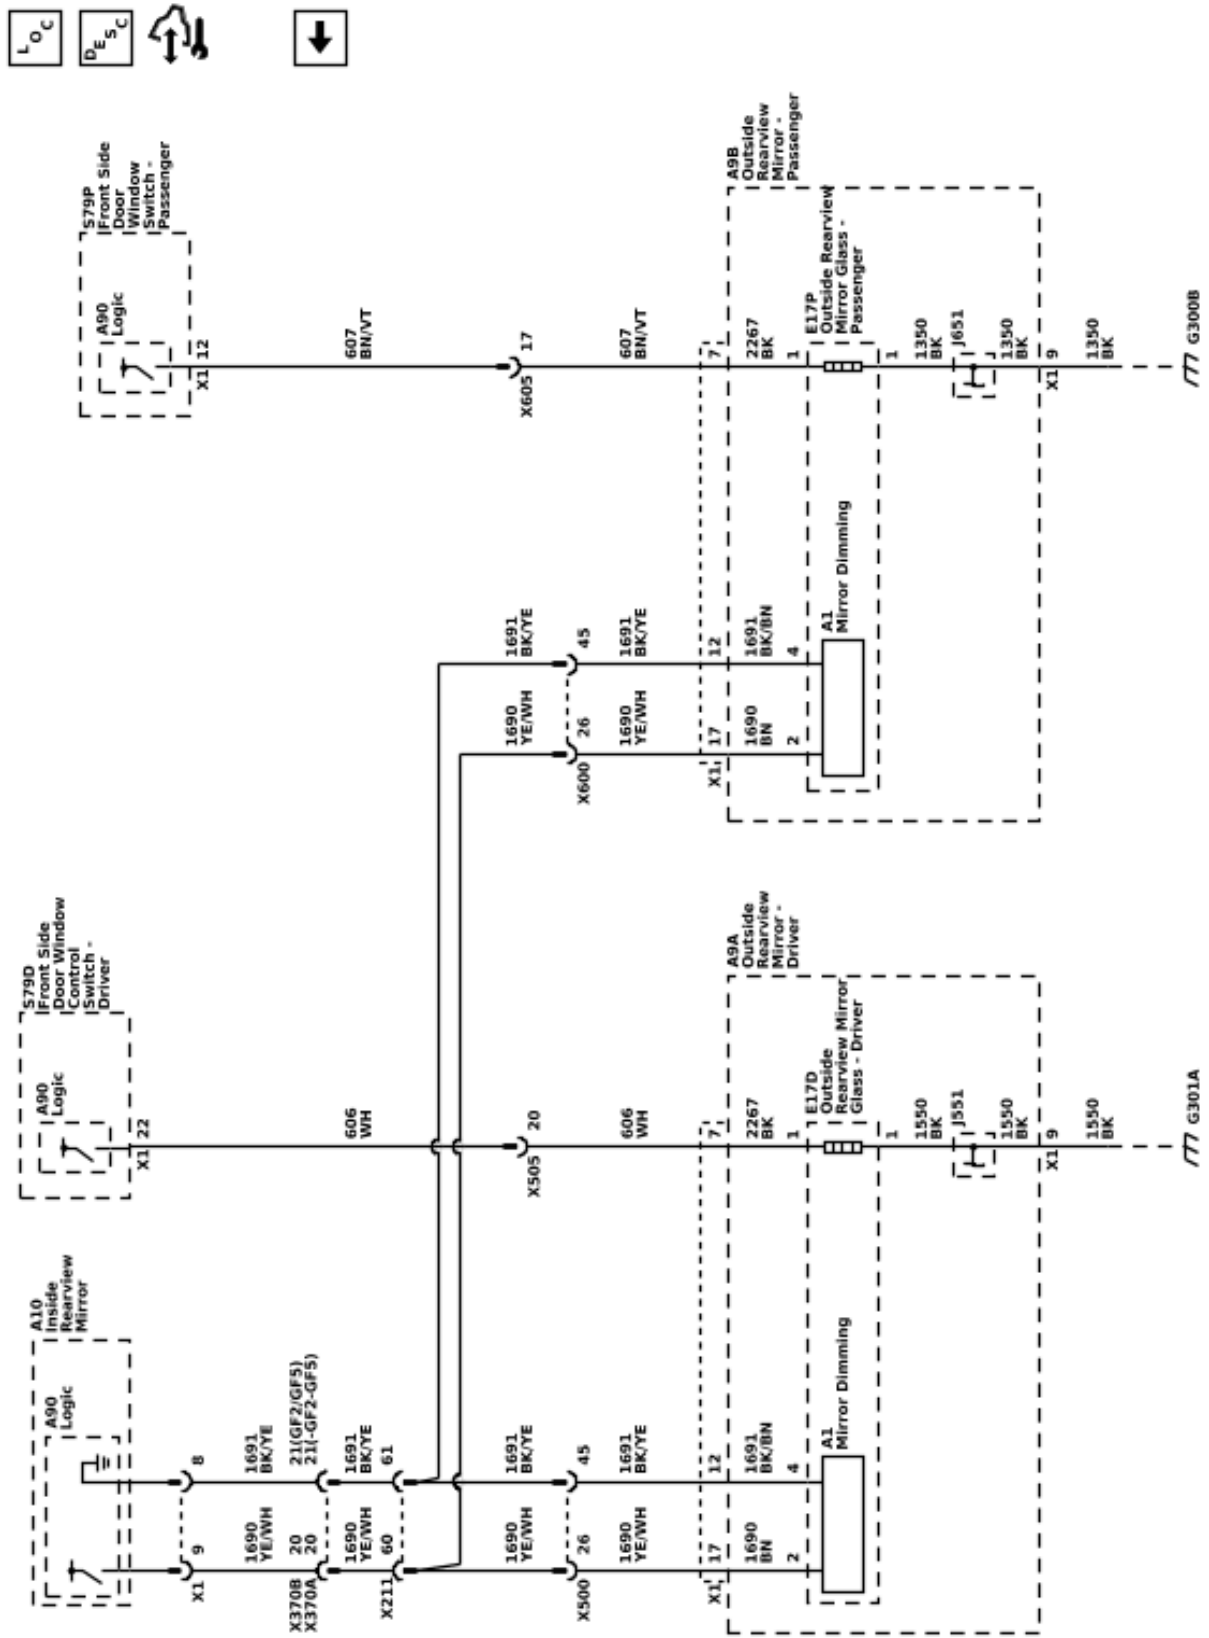

Description and Operation

Automatic Day-Night Mirror

Description and Operation

Inside Rearview Mirror with the Automatic Day-Night Feature System Operation

The inside rearview mirror uses 2 photocell sensors. One sensor is the headlight sensor, located on the face side of the mirror. The headlight sensor is used to determine light conditions present at the mirror face. The other sensor is the ambient light sensor, located on the rear of the mirror or windshield side. The ambient light sensor is used to determine the exterior light conditions. With a low exterior light condition detected, and a high light condition from behind the car, at the headlight sensor, the inside rearview mirror will automatically darken the face of the mirror.

In the daytime, the mirror is in a normal state because of the high exterior light condition that is indicated by the ambient light sensor. With the gear selector lever in the REVERSE position and the Ignition ON/Vehicle in Service Mode, backup lamp supply voltage is supplied as an input to the inside rearview mirror. The mirror monitors this input to disable the automatic day-night feature. This allows the driver to see objects in the mirror clearly when backing up, even during the night.

Driver Outside Rearview Mirror with Automatic Day-Night System Operation (If Equipped)

The automatic day-night feature of the driver outside rearview mirror is controlled by the inside rearview mirror. The inside rearview mirror supplies control and low reference to the driver outside rearview mirror. At night, with the automatic day-night feature enabled, the driver outside rearview mirror will automatically darken with the inside rearview mirror to reduce glare from headlamps behind the vehicle.

Inside Rearview Camera Full Display Mirror System Operation


The inside rearview camera full display mirror is connected to the outside rearview camera via a shielded coaxial cable. When the tab under the inside rearview mirror is pulled rearward, a view of the area behind the vehicle displays on the mirror. Adjust the rearview mirror for a clear view of the area behind the vehicle before turning on full display mirror. Use the button on the back of the mirror to adjust the brightness of the display. Make sure the light sensor is not covered when adjusting the brightness.

The inside rearview camera full display mirror may not work properly or display a clear image if..

- It is dark.
- The sun or the beam of headlamps are shining directly into the camera lens.
- Ice, snow, mud, or anything else builds up on the camera lens. Clean the lens, rinse it with water, and wipe it with a soft cloth.

When the mirror detects that the camera is not sending a valid video signal, it “blue screens” with a “no video” decal for 3 seconds, then reverts back to the mirror. Meanwhile, if a blue screen keeps on displaying instead of the camera view, take the vehicle to your dealer for service.

Rearview Camera Full Display Mirror Block Diagram

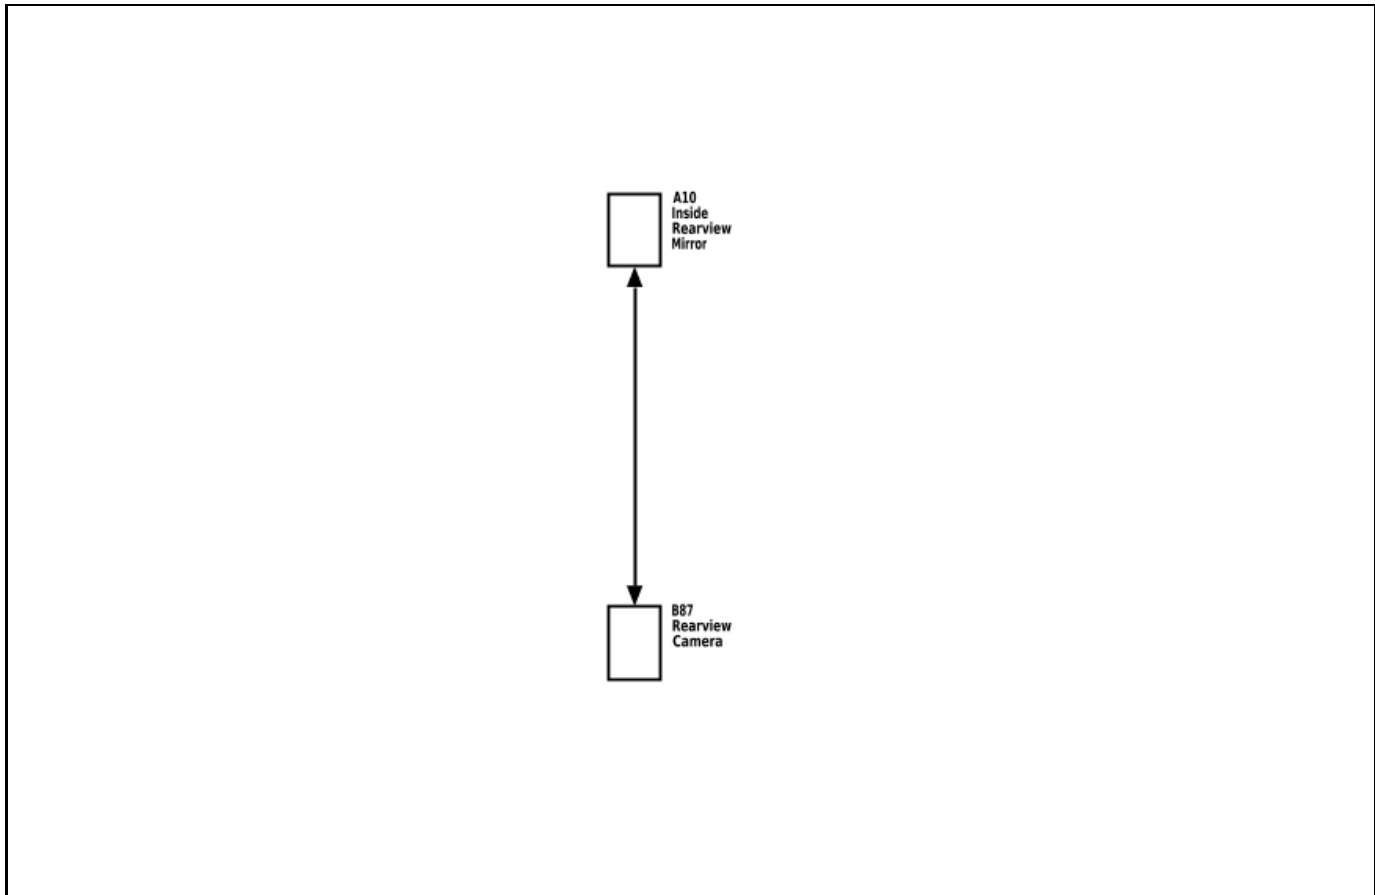

4433072

Outside Mirror Description and Operation

Power Mirror System Components

The power mirror system consists of the following components:

- Body Control Module
- Driver Seat Adjuster Memory Module
- Outside Mirror Switch
- Passenger Window Switch
- Left Outside Rearview Mirror
- Right Outside Rearview Mirror

Power Mirror System Controls

The outside rearview mirror switch is part of the S79D Driver Front Side Door Window Control Switch and uses serial data to control the passenger mirror through the S79P Passenger Front Side Door Window Control Switch. Each S79 Side Door Window Control Switch has its own 12V, ground and data communications circuit along with mirror directional control and mirror fold circuits.

Driver Mirror Controls

The S79D Driver Front Side Door Window Control Switch has internal connections for the driver mirror. When the mirror position switch is active the driver mirror is commanded to move through bi-directional

motor control circuits. The motor control circuits are floating while in an inactive state and the switches will apply power and ground to the control circuits as necessary to move the mirror in the commanded direction.

Passenger Mirror Controls

The S79D Driver Front Side Door Window Control Switch uses serial data circuits to communicate the active states for the passenger mirror switch to the S79P Passenger Front Side Door Window Control Switch. The S79P Passenger Front Side Door Window Control Switch has internal connections for the passenger mirror. When the mirror position switch is active the passenger mirror is commanded to move through bi-directional motor control circuits. The motor control circuits are floating while in an inactive state and the switches will apply power and ground to the control circuits as necessary to move the mirror in the commanded direction.

Mirror Position

Mirror position is determined by both horizontal and vertical position sensors in each of the power mirrors. Each S79 Front Side Door Window Control Switch supplies a 5 V reference, low reference, and horizontal and vertical position signal circuits to these sensors. The signal circuits are referenced from 5 V by the S79 Front Side Door Window Control Switch and the signal circuit voltage levels represent the mirror positions. The mirror positions are stored in each

2-54 Mirrors

S79 Front Side Door Window Control Switch for memory mirror operation. When the memory seat module receives a memory recall command, the memory seat control module will send the go to position to the S79 Front Side Door Window Control Switch. The S79 Front Side Door Window Control Switches will then drive the appropriate mirror motors to the commanded position sensor settings.

Mirror Select

The S79D Driver Front Side Door Window Control Switch has internal connections for the mirror select switch. When the mirror select switch is active the S79 Front Side Door Window Control Switch will either control the driver mirror or send a serial data message to control the passenger mirror.

Folding Mirrors

The S79D Driver Front Side Door Window Control Switch sends the mirror fold/unfold inputs to the K9 Body Control Module (BCM) through serial data. When the BCM receives a fold/unfold signal it will send a fold/unfold command to the S79 Driver Front Side Door Window Control Switch which will send a serial data message to the S79P Passenger Front Side Door Window Control Switch. The outside mirrors will fold or unfold depending on their current state. The BCM will also send a serial data message to unfold the mirrors when the vehicle reaches 20 km/h (12 mph). The S79 Front Side Door Window Control Switches control the fold/unfold motors through bi-directional control circuits



Heated Mirrors

The heated mirrors are controlled through each S79 Front Side Door Window Control Switch. When the vehicle is running and the HVAC control module receives a rear window defog request from the radio/HVAC controls, the HVAC control module will send a serial data message to the S79D Driver Front Side Door Window Control Switch and S79P Passenger Front Side Door Window Control Switch. Each S79 Front Side Door Window Control Switch provide B+ voltage to the driver and passenger outside rearview mirror heating elements.



Trailer Systems

Schematic and Routing Diagrams


Trailing Systems Schematics (Trailer Lighting Control Module (Z82&UET-(UY2/Z6A)))

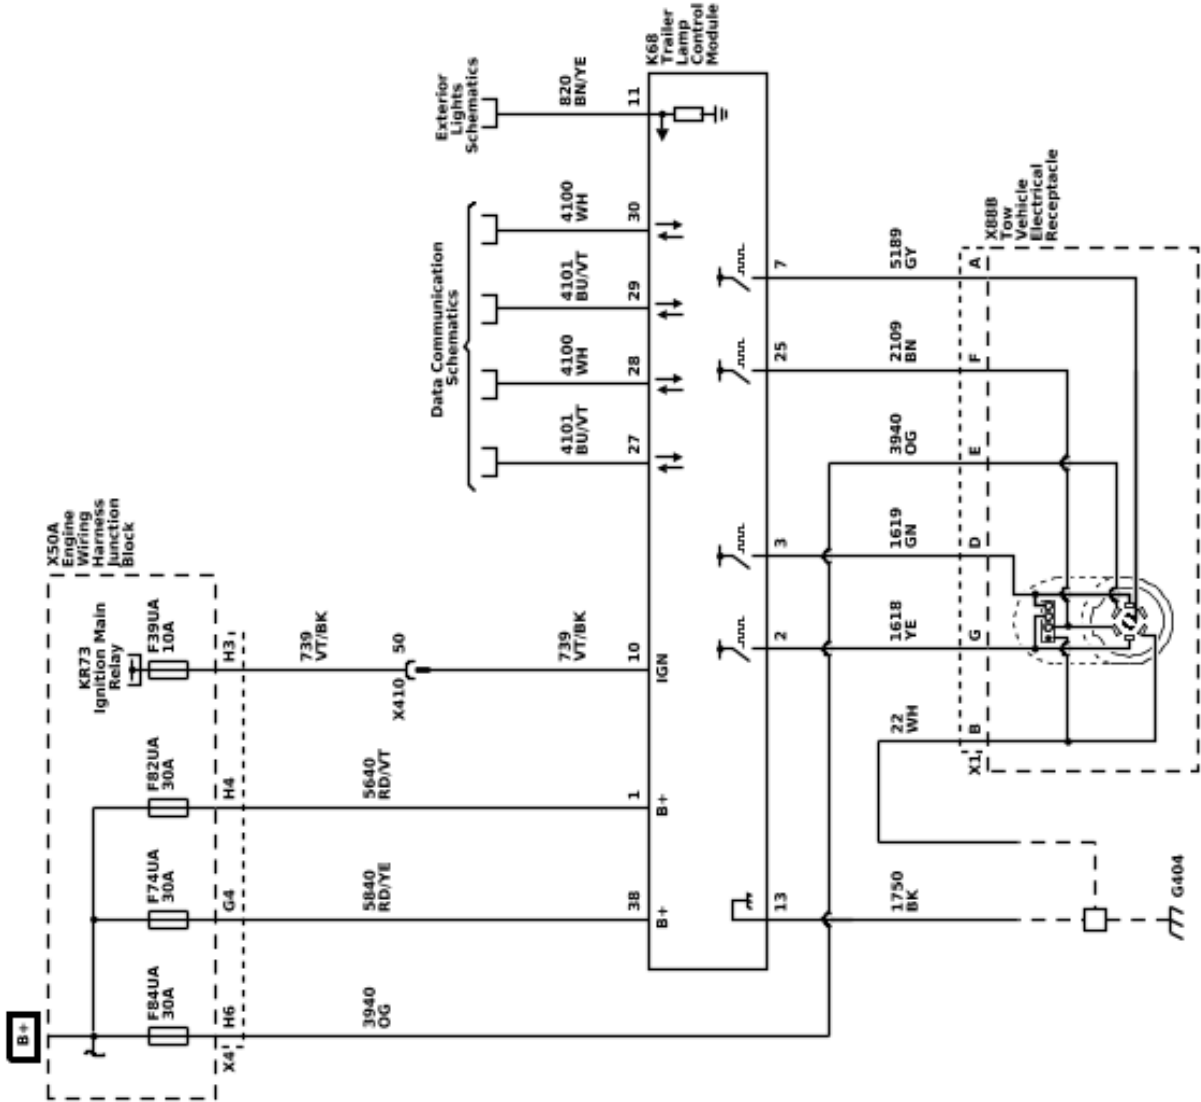


Trailer Systems Schematics (Trailer Connector Pins: A, B, D, E, F, G (Z82-(UET/UY2/Z6A)))

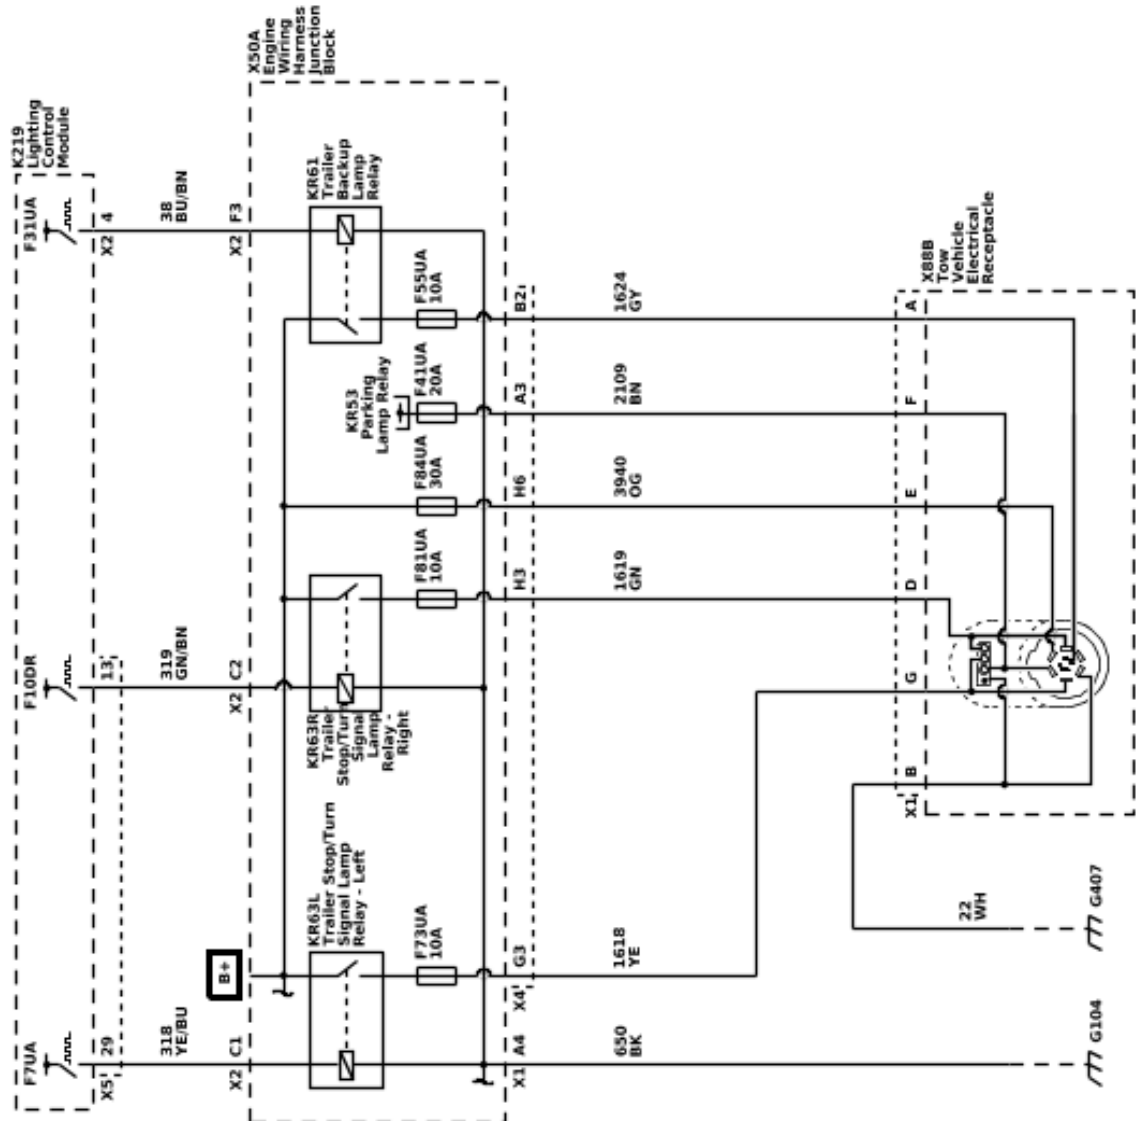



Trailing Systems Schematics (Trailer Connector Pins: A, B, D, E, F, G (Z82&Z6A-(UET/UY2)))

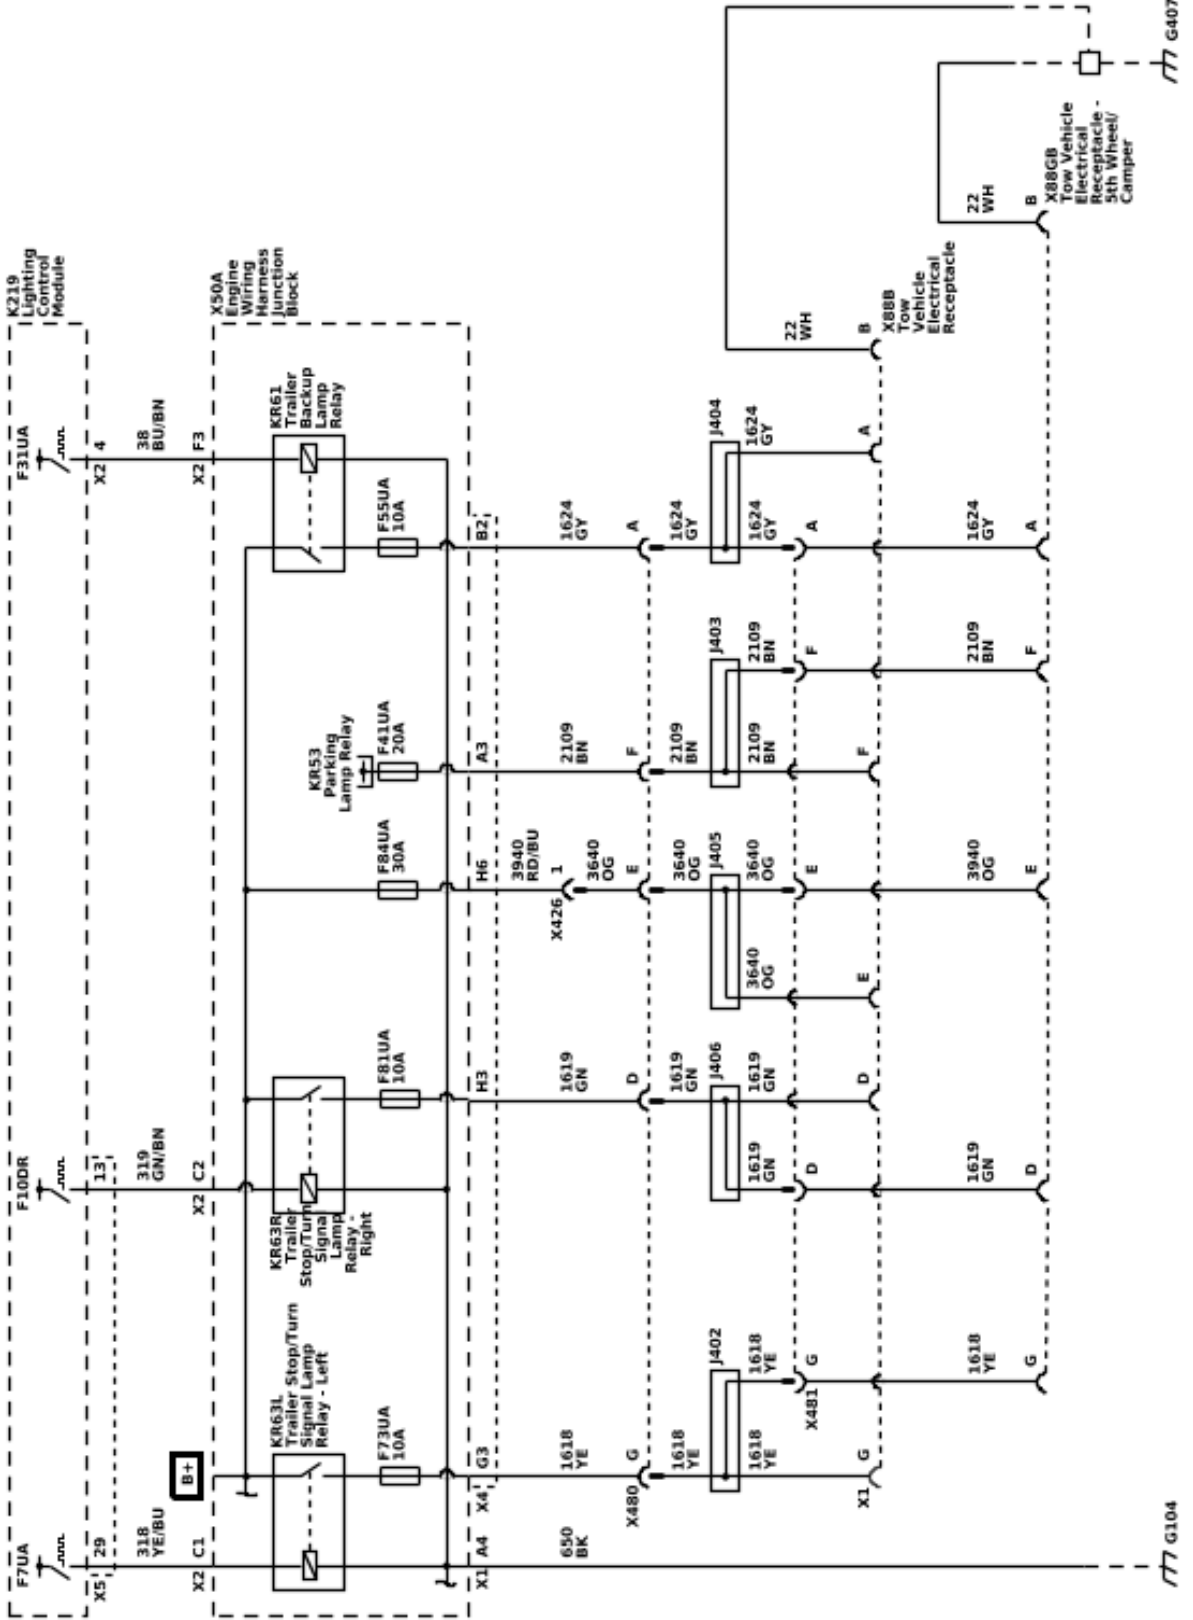



Trailer Systems Schematics (Trailer Connector Pins: A, B, D, E, F, G (Z82&UY2-(UET/Z6A)))

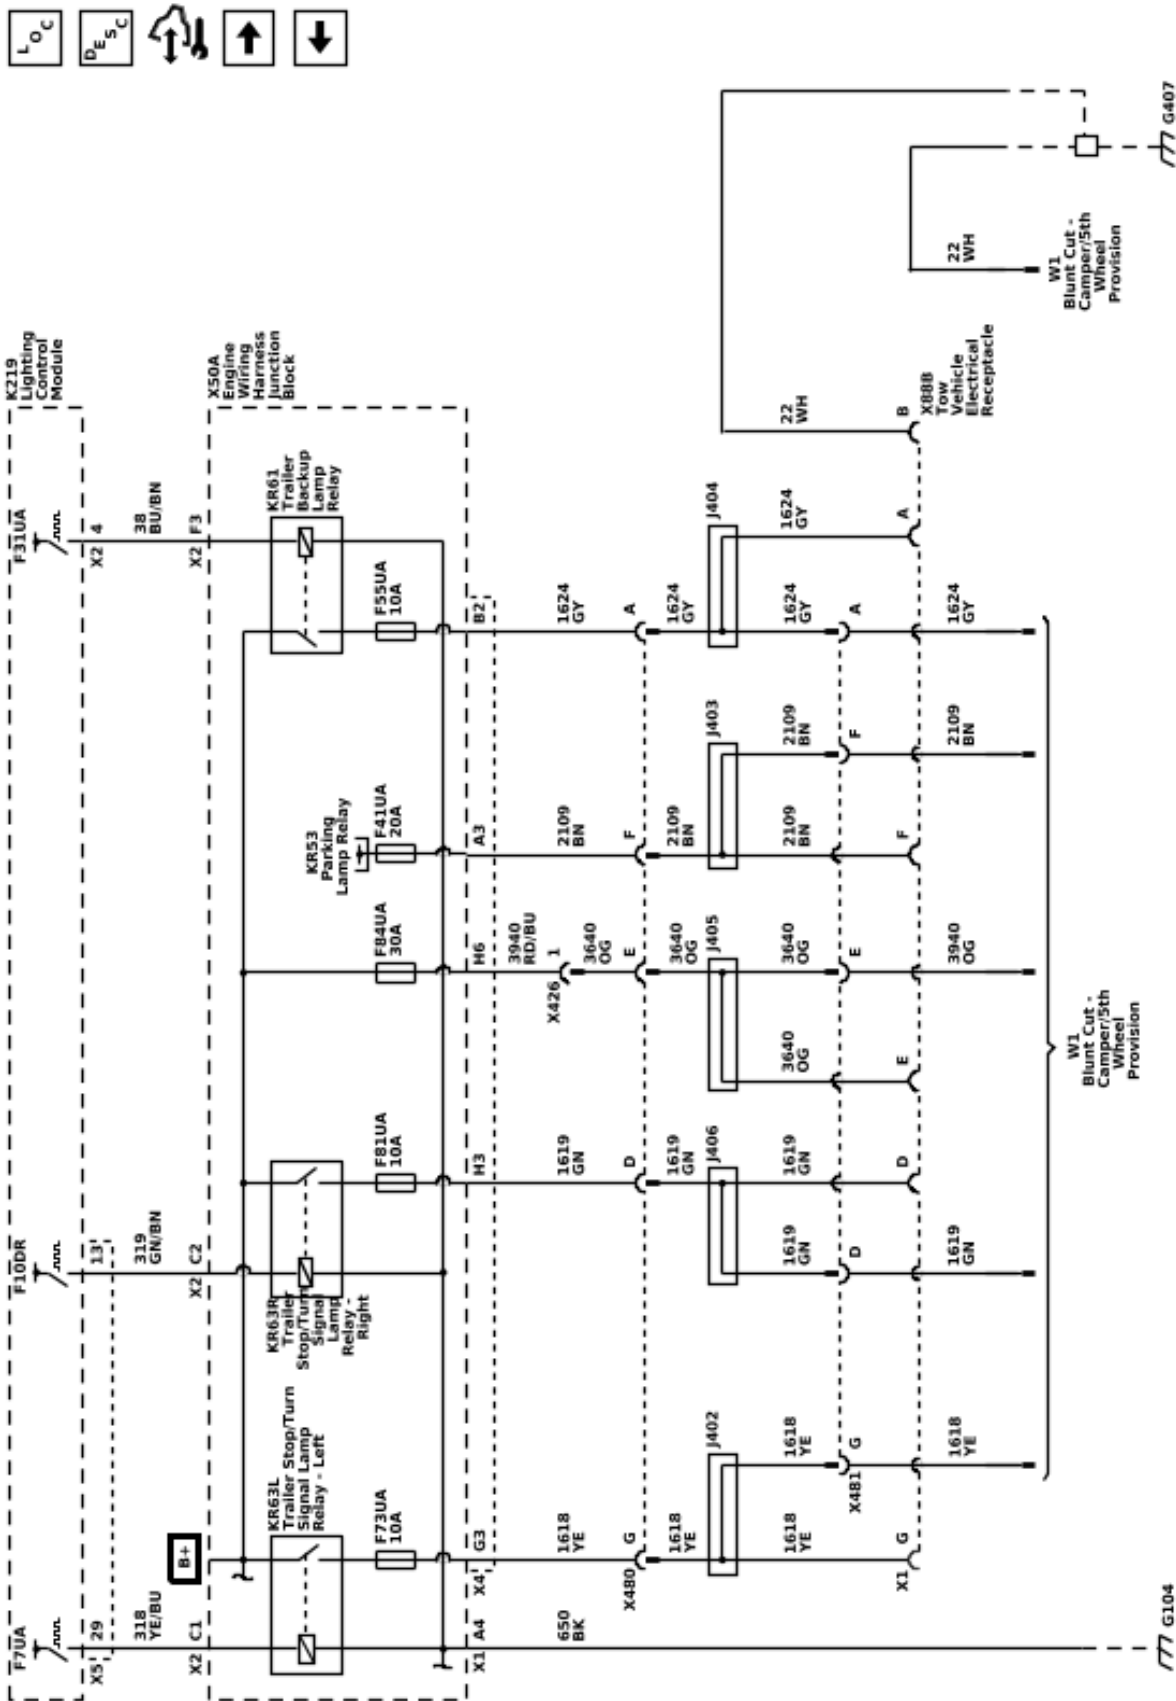


Trailing Systems Schematics (Trailer Connector Pin: C (Z82))

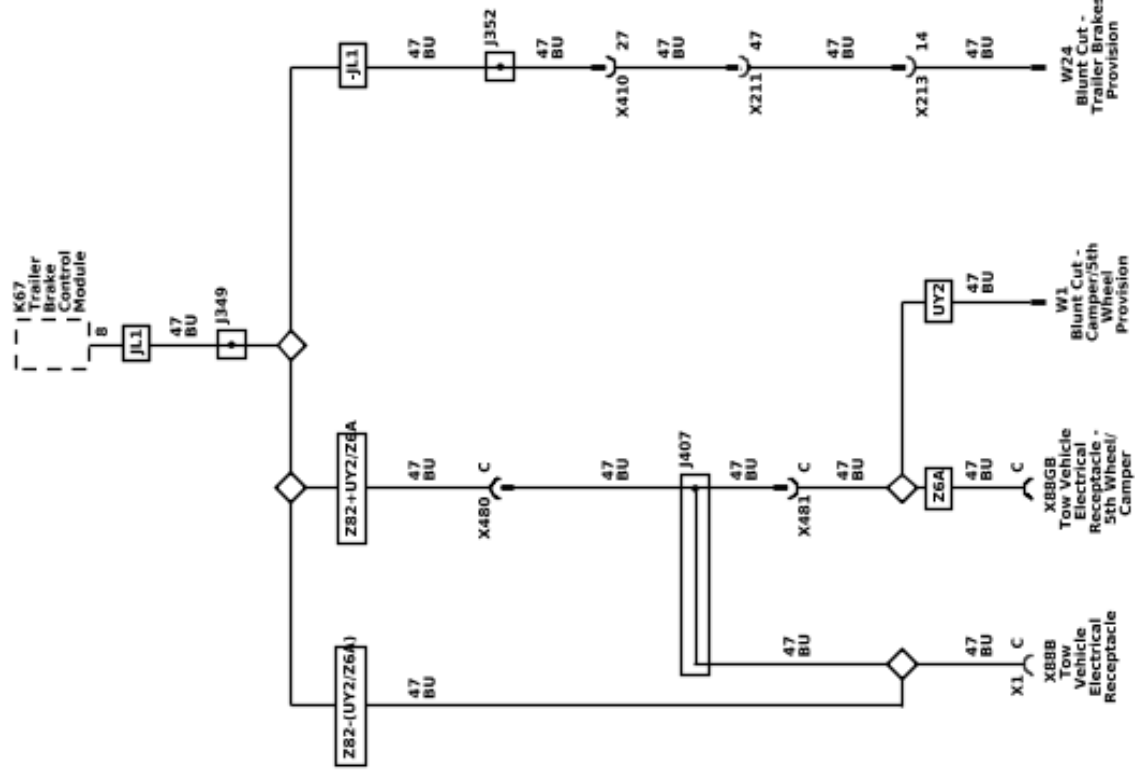

Trailer Systems Schematics (Trailer Brake Provisions (Z82 - JL1))

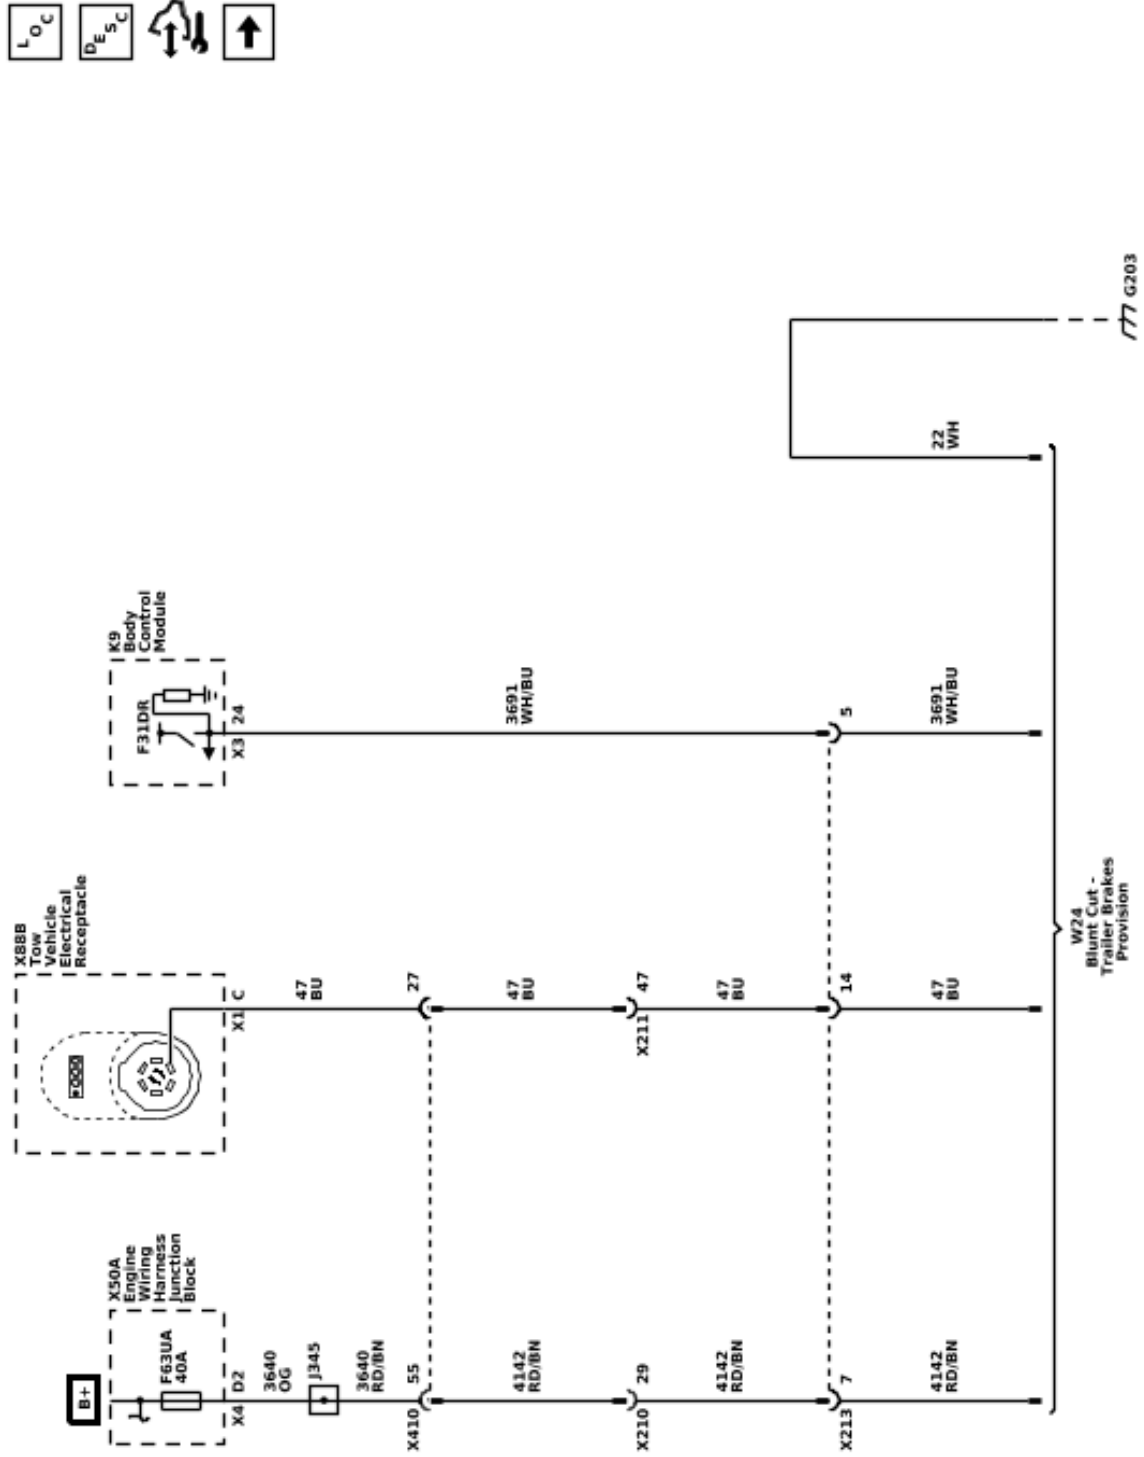

Trailing Systems Schematics (Trailer Brake (JL1))

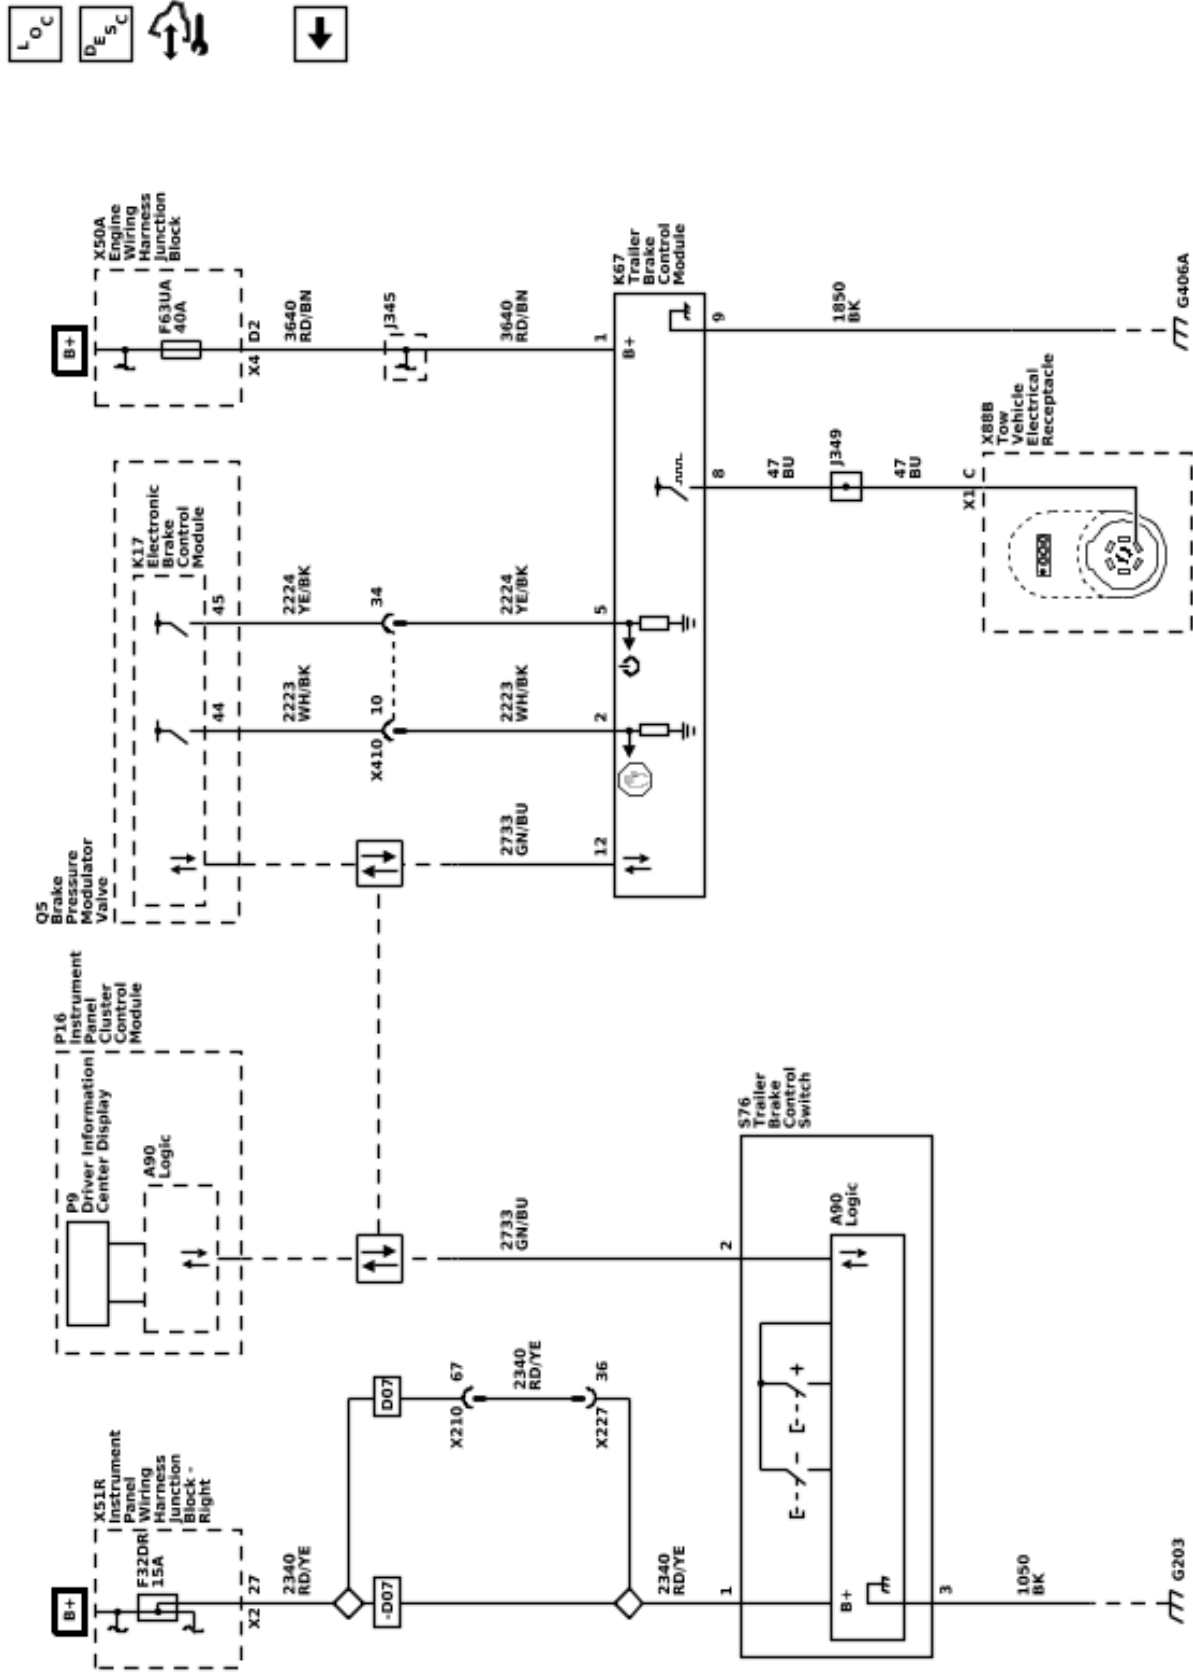

6150354

Description and Operation

Trailer Description and Operation

Trailer System Overview

Begin the trailering system diagnosis with Diagnostic System Check - Trailering. The Diagnostic System Check - Trailering will provide a complete strategy to locate and repair a vehicle trailering electrical fault. Not following this strategy may cause additional diagnostic time and/or misdiagnosis.

The trailering system consists of the following:

- Trailer Lighting, refer to Trailer Lamps Malfunction for additional diagnostic information.
- {JL1} Trailer Brakes, refer to Trailer Brake Malfunction for additional diagnostic information.
- Trailer Battery Charging System, refer to Trailer Battery Charging Malfunction for additional diagnostic information.
- Trailer Detection, refer to Trailer Detection Malfunction for additional diagnostic information.
- Trailer Tire Pressure Monitoring System, refer to Trailer Tire Pressure Monitoring Malfunction for additional diagnostic information.
- Trailer Theft Detection.

7-Terminal Tow Vehicle Electrical Receptacle Pinout

- Terminal A – Trailer Backup Lamp Control
- Terminal B – Ground
- Terminal C – Trailer Brake Control
- Terminal D – Right Trailer Stop/Turn Signal Lamp Control
- Terminal E – B+
- Terminal F – Trailer Park Lamp Control
- Terminal G – Left Trailer Stop/Turn Signal Lamp Control

Connecting Aftermarket Accessories

- Some aftermarket accessories that connect to the X88B Tow Vehicle Electrical Receptacle will be recognized by the vehicle as a trailer connected, even if the accessory is not a trailer. As a result, side blind zone detection, rear park assist, and/or rear cross traffic alert will be turned off anytime the vehicle detects a trailer/accessory is connected.
- Vehicles equipped with U1D/UET have trailer theft detection that constantly monitors trailer connected status when enabled. This is done by randomly pulsing the lighting circuits of the trailer when the vehicle is parked. As a result, some aftermarket accessories may be turned ON/OFF when connected to the vehicle with theft detection enabled.
- Vehicles equipped with U1D/UET use pulse width modulation voltage (PWM) for trailer lighting functions. Some aftermarket accessories are incompatible with PWM and may not function correctly when connected to the trailer lighting circuits of the vehicle.

Trailer Battery Charging System

Trailer battery charging is accomplished through constant battery voltage from the X50A Engine Wiring Harness Junction Block to the X88B Tow Vehicle Electrical Receptacle. Battery voltage is supplied to terminal E at the X88B Tow Vehicle Electrical Receptacle at all times. If equipped, the trailer battery will constantly be charged by the vehicle's electrical system anytime the trailer is connected. Some trailers require the B+ circuit to the X88B Tow Vehicle Electrical Receptacle for the trailer brakes to function.

Trailer Lighting and Detection With U1D/UET

Note:

- Some trailers utilize a trailer mounted control module to operate some or all of the trailer lights. These trailers may use the B+ circuit from the trailer connector to power the trailer lighting circuits. These trailers may not always be detected by the Trailer Lighting Control Module and may set faults.
- When a trailer is detected on a vehicle equipped with side blind zone detection, rear park assist, and/or rear cross traffic alert, the vehicle will automatically turn these features off. These features are turned off to prevent false detections due to the trailer obstructing the view of the sensors.
- Vehicles equipped with IOR/1FL do not come equipped with the trailering APP however may still be equipped with a K68 trailer Lamp Control Module.

The K68 Trailer Lamp Control Module is responsible for controlling the trailer lighting on vehicles with U1D/UET. The combined trailer stop/turn signal lamps of the trailer must draw at least 55mA of total current to be detected as a trailer or the Trailer Lamp Control Module will not control the lighting circuits. The Trailer Lamp Control Module receives serial data messages from the K9 Body Control Module (BCM) indicating what lamps have been activated on the vehicle. The Trailer Lamp Control Module responds by applying pulse width modulated voltage (PWM) to the appropriate control circuits for the requested lamps illuminating the lamps on the attached trailer. The Trailer Lamp Control Module constantly monitors for trailer connection status, trailer lighting faults, and trailer theft deterrent purposes. This is accomplished through the lighting circuits of the trailer to determine if a trailer is connected. When a trailer is connected, the Trailer Lamp Control Module senses the trailer connection and alerts the driver by requesting a trailer profile setup through the Trailering App, which is displayed on the infotainment screen. If a trailer is disconnected with the ignition ON, the vehicle will display multiple trailer lighting messages until a trailer is reconnected or the message is dismissed by the user. With the key OFF, the Trailer Lamp Control Module will periodically pulse the lighting circuits of the trailer to verify it is still connected. The lights on the trailer may flash at different intervals with the key OFF depending on which type of lights the trailer is built with. If a trailer is

2-64 Trailing Systems

disconnected with the key ON, the vehicle will display a trailer disconnected message until a trailer is reconnected or the ignition is cycled.

Trailer Lighting Without U1D/UET

The K219 Lighting Control Module is responsible for controlling the trailer lighting on vehicles without U1D/UET. The lighting control module receives serial data messages from the K9 Body Control Module (BCM) indicating what lamps have been activated on the vehicle. The lighting control module responds by applying voltage to the appropriate relay control circuits for the requested lamps anytime the vehicle lamps are commanded ON. With the relay coil energized, the relay contacts close and allow voltage to flow through the relay illuminating the appropriate lamps on the attached trailer.

Trailing Messages

The Infotainment Display may display one or more of the following messages to the user related to trailing:

Trailing Messages

Trailing Message	Description
Check Trailer Left Turn Signal Lamp	The K68 Trailer Lighting Control Module detects a fault on the left trailer stop/turn lamp control circuit
Check Trailer Right Turn Signal Lamp	The K68 Trailer Lighting Control Module detects a fault on the right trailer stop/turn lamp control circuit
Check Trailer Rear Lamp	The K68 Trailer Lighting Control Module detects a fault on the trailer park lamp control circuit.
Check Trailer Reversing Lamp	The K68 Trailer Lighting Control Module detects a fault on the trailer backup lamp control circuit.
Check Trailer Brake Lamps	The K68 Trailer Lighting Control Module detects a fault on the left and/or right trailer stop/turn lamp control circuits
{JL1} Check Trailer Wiring	The K67 Trailer Brake Power Control Module detects a fault on the trailer brake control circuit or the trailer was disconnected.
Lane Change Alert Off	Reminder to the user that lane change alerts are turned off anytime a trailer is detected.
Rear Cross Traffic Alert Off	Reminder to the user that rear cross traffic alerts are turned off anytime a trailer is detected.
Rear Park Assist Off	Reminder to the user that rear park assist is turned off anytime a trailer is detected.
Remember to turn On Tow/Haul Mode	Reminder to the user to turn ON Tow/Haul Mode when towing.
{JL1} Service Trailer Brake System	The K67 Trailer Brake Power Control Module detects a fault on the trailer brake control circuit.
Service Trailer Tire Monitor System	The K214 Trailer Tire Pressure Indicator Module detects one or more issues with the trailer tire pressure monitoring system.
Trailer Detected	The K68 Trailer Lighting Control Module detects a trailer has been connected to the X88B Tow Vehicle electrical Receptacle.
{JL1} Trailer Brakes Detected	The K67 Trailer Brake Power Control Module detects a trailer with trailer brakes has been connected to the X88B Tow Vehicle electrical Receptacle.
Trailer Disconnected Check Connection	The K68 Trailer Lighting Control Module detects a trailer has been disconnected from the X88B Tow Vehicle electrical Receptacle.
Trailer Tire Pressure High	The K214 Trailer Tire Pressure Indicator Module detects one or more of the trailer tire pressures is high.
Trailer Tire Pressure Low	The K214 Trailer Tire Pressure Indicator Module detects one or more of the trailer tire pressures is low.
Trailer Tire Sensor Fault	The K214 Trailer Tire Pressure Indicator Module detects one or more of the trailer tire pressure sensors has a fault.

Trailer Messages (cont'd)

Trailer Message	Description
Trailer Tire Temperature High	The K214 Trailer Tire Pressure Indicator Module detects one or more of the trailer tire temperatures is too high.

Trailer Theft Detection (With U1D/ UET Only)

Trailer theft monitoring can be turned ON and OFF through the vehicle Trailer App. When enabled, any time the trailer theft deterrent system is armed, the trailer lighting circuits are constantly monitored to determine if a trailer is connected for trailer theft deterrent purposes. With the key OFF, the K68 Trailer Lamp Control Module will randomly pulse the lighting circuits of the trailer to verify it is still connected by monitoring the voltage drop of the circuit. Depending on the configuration of the trailer lights, the trailer lights may randomly flash as part of the trailer theft deterrent function. These flashes correspond to when the K68 Trailer Lamp Control Module pulses the lighting circuits to ensure the trailer is still connected and is considered normal. If the trailer is disconnected while the trailer theft deterrent system is armed, the vehicle will flash the exterior lights and cycle the horn to alert of a trailer theft event. Refer to Theft Systems Description and Operation for more information on the content theft deterrent system.

Trailer Brakes (JL1)

The vehicle is equipped with the following trailer braking components:

- K160 Brake System Control Module
- K67 Trailer Brake Control Module
- S76 Trailer Brake Control Switch
- Trailer Brake Driver Information Center Display

Trailer Brake Circuits

- Circuit 2223 is the trailer brake apply signal circuit. The K160 Brake System Control Module receives vehicle braking force data and/or data from the application of the manual trailer brake slide lever. The brake system control module responds by applying the appropriate amount of pulse width modulated (PWM) voltage based on the amount of trailer brake application desired. The K67 Trailer Brake Power Control Module responds to the signal circuit by applying the appropriate amount of PWM voltage to the trailer auxiliary control circuit 47.
- Circuit 2224 is the trailer brake enable signal circuit. The K160 Brake System Control Module applies voltage to the enable circuit anytime a LIN data communication fault is not present, a trailer is connected, and the vehicle brakes are being applied. The enable circuit must have voltage applied to it before the K67 Trailer Brake Power Control Module applies the appropriate amount of pulse width modulated (PWM) voltage to the trailer auxiliary control circuit 47.
- Circuit 2733 is the brake system control module LIN bus 2 circuit. The K160 Brake System Control Module, K67 Trailer Brake Power Control Module, and the S76 Trailer Brake Control Switch all

communicate through the brake system control module LIN bus 2 circuit. If the LIN bus has a fault on the circuit, trailer braking will be disabled until the fault is repaired.

- Circuit 47 is the trailer auxiliary control circuit. The K67 Trailer Brake Power Control Module responds to signal circuit 2223 and enable circuit 2224 by applying the appropriate amount of PWM voltage to the trailer auxiliary control circuit. A properly functioning trailer will apply the appropriate amount of braking force to the brakes of the trailer.

The Trailer Brake Control System is compatible with two types of Trailer Brake Systems as listed below:

1. **Electric Brakes** A controlled electrical output signal energizes an electric-magnet/lever arm assembly that directly actuates the brake mechanism. The GDS name for this system is "Electromagnetic Brakes".
2. **Electric Over Hydraulic Brakes** A controlled electrical output signal energizes a remote, trailer mounted hydraulic pump to build brake pressure in a closed hydraulic system on the trailer. The hydraulic fluid pressure actuates the brake mechanism. The GDS name for this system is "Electrohydraulic Brakes".

Trailer Brake Output Versus Trailer Brake Type

- The trailer brake system characterizes the trailer brakes as either Electric Brake or Electric Over Hydraulic Brake automatically. This characterization may be affected by the number, type, and age of the trailer brake magnets, as well as any other devices installed on the trailer brakes (i.e. adapters for Electric Over Hydraulic brake functionality).
- The trailer brake system is fully operational with either characterization.
- Sliding the manual trailer brake apply lever will produce output at zero speed for either characterization.

The user gain allows the driver to adjust the amount of trailer brake output to match the trailer load and road surface. The controller determines the desired trailer brake output and provides a control signal to the K67 Trailer Brake Control Module (TBPM). The K67 Trailer Brake Control Module amplifies the signal and provides the output required to activate the Electric or Electric Over Hydraulic trailer brakes.

The trailer brake control can support up to a maximum of four axles with electric trailer brakes (8 brake magnets).

Connecting a trailer that is not compatible with the trailer brake system may result in reduced or complete loss of trailer braking. There may be an increase in stopping distance or trailer instability which could result in personal injury or damage to the vehicle, trailer or

other property. An aftermarket controller may be available for use with incompatible trailer brake systems.

To determine the type of brakes on your trailer and the availability of controllers, check with your trailer manufacturer or dealer. Do not power up an aftermarket controller with the factory brake controller at the same time.

Trailer Brake Control Panel

The S76 Trailer Brake Control Switch contains the trailer gain and manual apply switches. It is located in the vehicle center stack. Refer to the owner's manual for more information on the location. The control panel and switches allows you to adjust the amount of output, referred to as trailer gain, available to the Electric or Electric Over Hydraulic brakes. It also allows you to manually apply the trailer brakes. The trailer brake control switch is used along with the trailer brake display page on the driver information center to adjust and display power output to the trailer brakes.

Manual Trailer Brake Apply

The manual trailer brake apply lever is located on the S76 Trailer Brake Control Switch and is used to apply the trailer's Electric or Electric Over Hydraulic brakes independent of the vehicle's brakes. This lever is used in the trailer gain adjustment procedure to properly adjust the power output to the trailer brakes.

Sliding the lever will apply only the trailer brakes. The power output to the trailer is indicated in the trailer brake display page in the Driver Information Center (DIC). If the vehicle's service brakes are applied while using the manual trailer brake apply lever, the trailer brake control output power will be the greater of the two.

The trailer and the vehicle's brake lamps will come on when either the vehicle's braking or manual trailer brakes are applied.

Trailer Brake Gain Adjustment

Trailer gain should be set for a specific trailing condition and must be adjusted any time vehicle loading, trailer loading or road surface conditions change. It is important to re-adjust trailer gain any time the tow vehicle, trailer loading or road surface conditions change or if you notice trailer wheel lock-up at any time while you are towing.

Setting the trailer gain properly is needed for the best trailer stopping performance. A trailer that is over-gained may result in locked trailer brakes. A trailer that is under-gained may result in not enough trailer braking. Both of these conditions may result in poor stopping and stability of the vehicle and trailer.

Trailer Gain Adjustment Procedure

- Adjust trailer gain in 0.5 step increments up to 10 gain setting by using the gain adjustment +/- buttons on the trailer brake control panel switch. Pressing and holding a gain button will cause the trailer gain to continuously increment or decrement. To turn the output to the trailer off, set the gain to zero.
- Drive the tow vehicle and trailer combination on a level surface representative of the towing condition and free of traffic at approximately 32–40 km/h (20–25 mph) and fully apply the manual trailer brake apply lever mechanism located on the trailer brake control panel switch. Adjusting the trailer gain at slower speeds may result in an incorrect gain setting.
- Adjust the trailer gain to just below the threshold of trailer wheel lock-up. Trailer wheel lock-up may not occur if towing a heavily loaded trailer. In this case, adjust the trailer gain to the highest allowable setting for the towing condition.

Trailer Brake Gain and Output Display

This display menu can be accessed by scrolling through the DIC menu, or any time the trailer gain +/- button is depressed, or the manual trailer brake apply lever is actuated. The trailer output is displayed from 0 to full output and indicates the output power provided to the trailer brakes, relative to the gain setting.

After the electrical connection is made to a trailer equipped with electric brakes or electric over hydraulic brakes, the TRAILER CONNECTED message will be displayed momentarily on the DIC. The Trailer Brake Display Page can be selected on the DIC showing TRAILER GAIN and OUTPUT, after all vehicle related service messages are acknowledged by the driver. Depending on which instrument panel cluster is in the vehicle, the DIC may display dashed lines, a greyed out display, or it may be blank signifying a disconnected trailer or a trailer brake fault condition.

Trailer Brake Driver Information Center Indicators and Messages

Trailer Brake Detection

The K67 Trailer Brake Control Module constantly monitors the trailer auxiliary control circuit from Terminal C at the X88B Tow Vehicle electrical Receptacle. When a trailer is connected with trailer brakes, the K67 Trailer Brake Control Module senses the connection and alerts the driver with a Trailer Connected message. If the K67 Trailer Brake Control Module senses a fault, or the trailer becomes disconnected, the vehicle will alert the driver with a Check Trailer Wiring message.

The following indicators are used to inform the driver of several different conditions:

Trailer Connected

This message will be briefly displayed when a trailer with Electric or Electric Over Hydraulic brakes is first connected to the vehicle. This message will automatically turn off in about ten seconds. The driver can also acknowledge this message before it automatically turns off.

Check Trailer Wiring

This message will be displayed if:

- The system detects that a trailer with Electric or Electric Over Hydraulic brakes is connected to the vehicle and then the trailer harness becomes disconnected from the vehicle.
- The trailer connection is recognized initially and then a disconnect occurs while the vehicle is stationary. This message will automatically turn off in about thirty seconds. This message will also turn off if the driver selects to turn this message off or if the trailer harness is reconnected.
- A disconnect of the trailer wiring harness occurs while the vehicle is moving. The Check Trailer Wiring message will continue until the ignition is turned off. The message will also turn off if the driver selects to turn this message off or if the trailer harness is re-connected.
- There is an electrical fault in the wiring to the electric trailer brakes. The Check Trailer Wiring message will continue as long as there is an electrical fault in the trailer wiring. This message will also turn off if the driver acknowledges this message off.
- A poor connection at the 7-way connector may cause the Check Trailer Wiring message. Some aftermarket 7-way trailer side connector adapters or plugs may cause deformation or excessive wear to the vehicle's trailer terminals. It is recommended that you use an OEM or Pollak heavy duty 7-way trailer side connector adapter.

Service Trailer Brake System

This message will be displayed when there is a problem with the trailer brake control system. The trailer brake system may not be fully functional, or may not be functioning at all. The trailer brake system is designed to provide trailer braking, if possible, even when faults prevent it from being fully functional. This reduced functionality includes:

1. Providing trailer braking when the master cylinder pressure or brake pedal switch are faulted.
2. Providing trailer braking when hill start assist and trailer sway control communication is faulted.
3. Providing trailer braking when certain manual trailer brake apply lever faults are present.

Trailer Tire Pressure Monitoring

Special Tools

- EL-46079/J-46079 Tire Pressure Monitor Diagnostic Tool
- EL-50448 Tire Pressure Monitor Sensor Activation Tool
- EL-52641 Trailer Presence Simulator Tool

For equivalent regional tools, refer to Special Tools.

The Trailer Tire Pressure Monitor System is designed to monitor the pressure of the trailer tires, and warn the driver when a low pressure condition exists. Four Trailer Tire Pressure Monitor System sensors may be provided in the vehicle's glove box as an accessory when equipped. The system can accommodate a trailer with up to (6) tires if additional sensors are purchased from the dealership. Also, the system can be paired

with up to (5) individual trailers. The sensors must be mounted onto each tire and wheel assembly, and the sensors must be learned by the vehicle by following the learning procedure as shown in the Trailing App section of this manual. For sensor installation assistance, please contact your trailer service center or tire service center. The Trailer Tire Pressure Monitor System sensors monitor the air pressure in the trailer tires and transmit the trailer tire pressure readings to a receiver located in the vehicle. The trailer tire pressure sensors can transmit up to 23 feet (7 meters) from the hitch receiver of the vehicle. The tire pressure values can be viewed in the trailing app in the vehicle's center stack.


Trailing Diagnostic Tools

In some situations when diagnosing trailer tire pressure monitoring, trailer lighting, or integrated trailer brakes, it may be necessary to connect the vehicle to a trailer to confirm proper operation. Performing this activity may prove difficult in the service environment since trailers are not often available for diagnostic use, may have existing electrical issues outside of the issues a technician is attempting to diagnose, or simply may be too unwieldily to connect for diagnosis.

With all this in mind, it may be helpful to build or create a tool that can be plugged into the vehicle's trailer connector and simulate a connected trailer. This tool would include park lamps, stop lamps, and a reverse lamp for lighting and trailer tire pressure monitoring diagnosis. It can be expanded to include trailer brake magnets to diagnose integrated trailer brake concerns. Also, an additional lamp can be included to diagnose the B+ circuit to the trailer.

Trailer issues are NOT covered under warranty, but these tools may be used to verify the vehicle is functioning properly and to help the customer understand and correct any trailer related issues if they so choose.

Available Trailer Presence Simulator Tool

Illustration	Tool Number/Description
 <p style="text-align: right; font-size: small;">5166189</p>	<p style="text-align: center;">EL-52641 Trailer Presence Simulator Tool</p>

Simulated Trailer Lighting

Creating a tool to simulate a connected trailer can be used to diagnose issues with trailer lighting, trailer brake (if equipped), the Trailing App (if equipped), and trailer tire pressure monitoring system (if equipped).

If the vehicle is equipped with a K68 Trailer Lamp Control Module (U1D/UET), the module monitors the current on the lighting circuits to determine a trailer has been connected. The Trailer Lamp Control Module pulses current on the trailer lighting circuits every 42 minutes to monitor for a connected trailer. If a current draw greater than 55mA is detected, the Trailer Lamp Control Module recognizes this as a connected trailer. This will enable any trailer lighting controlled by the Trailer Lamp Control Module. The Center Stack Module will also use this trailer detection as a cue to enable the Trailing App and trailer tire pressure monitoring functions.

Creating a Simulated Trailer Lighting Tool

Parts needed:

- 7-way RV trailer connector Qty: 1

Note: The combination trailer stop/turn, and backup lamps must draw at least 55mA of total current to be detected as a trailer. Some LED combination lamps will not draw enough current. If an LED combination lamp is used, make sure it draws at least 55mA. A load resistor can be added to the circuit if necessary to obtain the correct load.

- Combination trailer park/stop/turn lamp (greater than 55mA drawn when on) Qty: 2
 - Reverse lamp Qty: 1
 - 12 gauge wire and terminals/connectors Qty: As needed
 - 18 gauge wire and terminals/connectors Qty: As needed
 - Mounting board Qty: 1
1. Connect a 12 gauge wire to the ground terminal of the 7-way trailer connector and the ground circuit of each combination trailer park/stop/turn lamp and the reverse lamp in parallel.
 2. Connect an 18 gauge wire between the park lamp terminal of the 7-way trailer connector and the park lamp circuit of each combination trailer park/stop/turn lamp in parallel.
 3. Connect an 18 gauge wire between the left turn/stop lamp terminal of the 7-way trailer connector and the turn/stop lamp circuit of left trailer park/stop/turn lamp.
 4. Connect an 18 gauge wire between the right turn/stop lamp terminal of the 7-way trailer connector and the turn/stop lamp circuit of right trailer park/stop/turn lamp.
 5. Connect an 18 gauge wire between the reverse lamp terminal of the 7-way trailer connector and the reverse lamp.
Note: A combination trailer lighting and trailer brake tool can be created on the same mounting board.
 6. Mount the left combination trailer park/stop/turn lamp, right combination trailer park/stop/turn lamp, and reverse lamp to the mounting board.
 7. Plug the 7-way RV trailer connector to the vehicle and verify functionality.

Simulated Trailer Brakes

Creating a tool to simulate trailer brakes can be used to diagnose trailer brake issues.

The trailer brake control system is compatible with two types of trailer brake systems: electromagnetic or electro-over hydraulic trailer brakes. The Brake System Control Module must determine which type of brakes the trailer is equipped with so the system can output correctly for the trailer's brake system. Because the Brake System Control Module has to determine the type of trailer brake system that is being used, it can be sensitive to a variety of trailer wiring issues.

The Trailer Brake Control Module continuously sends a test pulse out on the trailer brake control circuit (circuit 47) to determine if a trailer with trailer brakes has been connected. How the pulse reacts when a trailer is connected is how the Trailer Brake Control Module determines which type of braking system the trailer is equipped with.

Even after the system detects the trailer, Trailer Brake Control Module will continue to send this test pulse on the trailer brake control circuit, which now is monitoring both the truck and trailer circuitry. The trailer brake control circuit continues to be monitored for any faults so the driver can be notified of any issues that may occur within the truck or trailer, as well as, to determine when the trailer is disconnected from the truck.

Creating a Simulated Trailer Brake Tool


Parts needed:

- 7-way RV trailer connector Qty: 1
 - Electric trailer brake magnets Qty: 2, 4, 6, or 8
 - Reverse lamp Qty: 1
 - Mounting board Qty: 1
 - 12 gauge wire and terminals/connectors Qty: As needed
1. Connect a 12 gauge wire to the ground terminal of the 7-way trailer connector.
 2. Connect a 12 gauge wire to the brake controller output terminal of the 7-way trailer connector.
Note: The trailer brake magnets must be connected in parallel. Connecting in series will create an excessive current draw and disable the trailer brake system.
 3. Connect the trailer brake magnets to the 12 gauge wires from the 7-way trailer connector in parallel.
Note: A combination trailer lighting and trailer brake tool can be created on the same mounting board.
 4. Mount the trailer brake magnets to the mounting board.
 5. Plug the 7-way RV trailer connector to the vehicle and verify functionality.


Vehicle Access

Schematic and Routing Diagrams

Door Lock/Indicator Schematics (Driver Door Switch Panel Control Module Power, Ground, Serial Data, and Subsystem References)

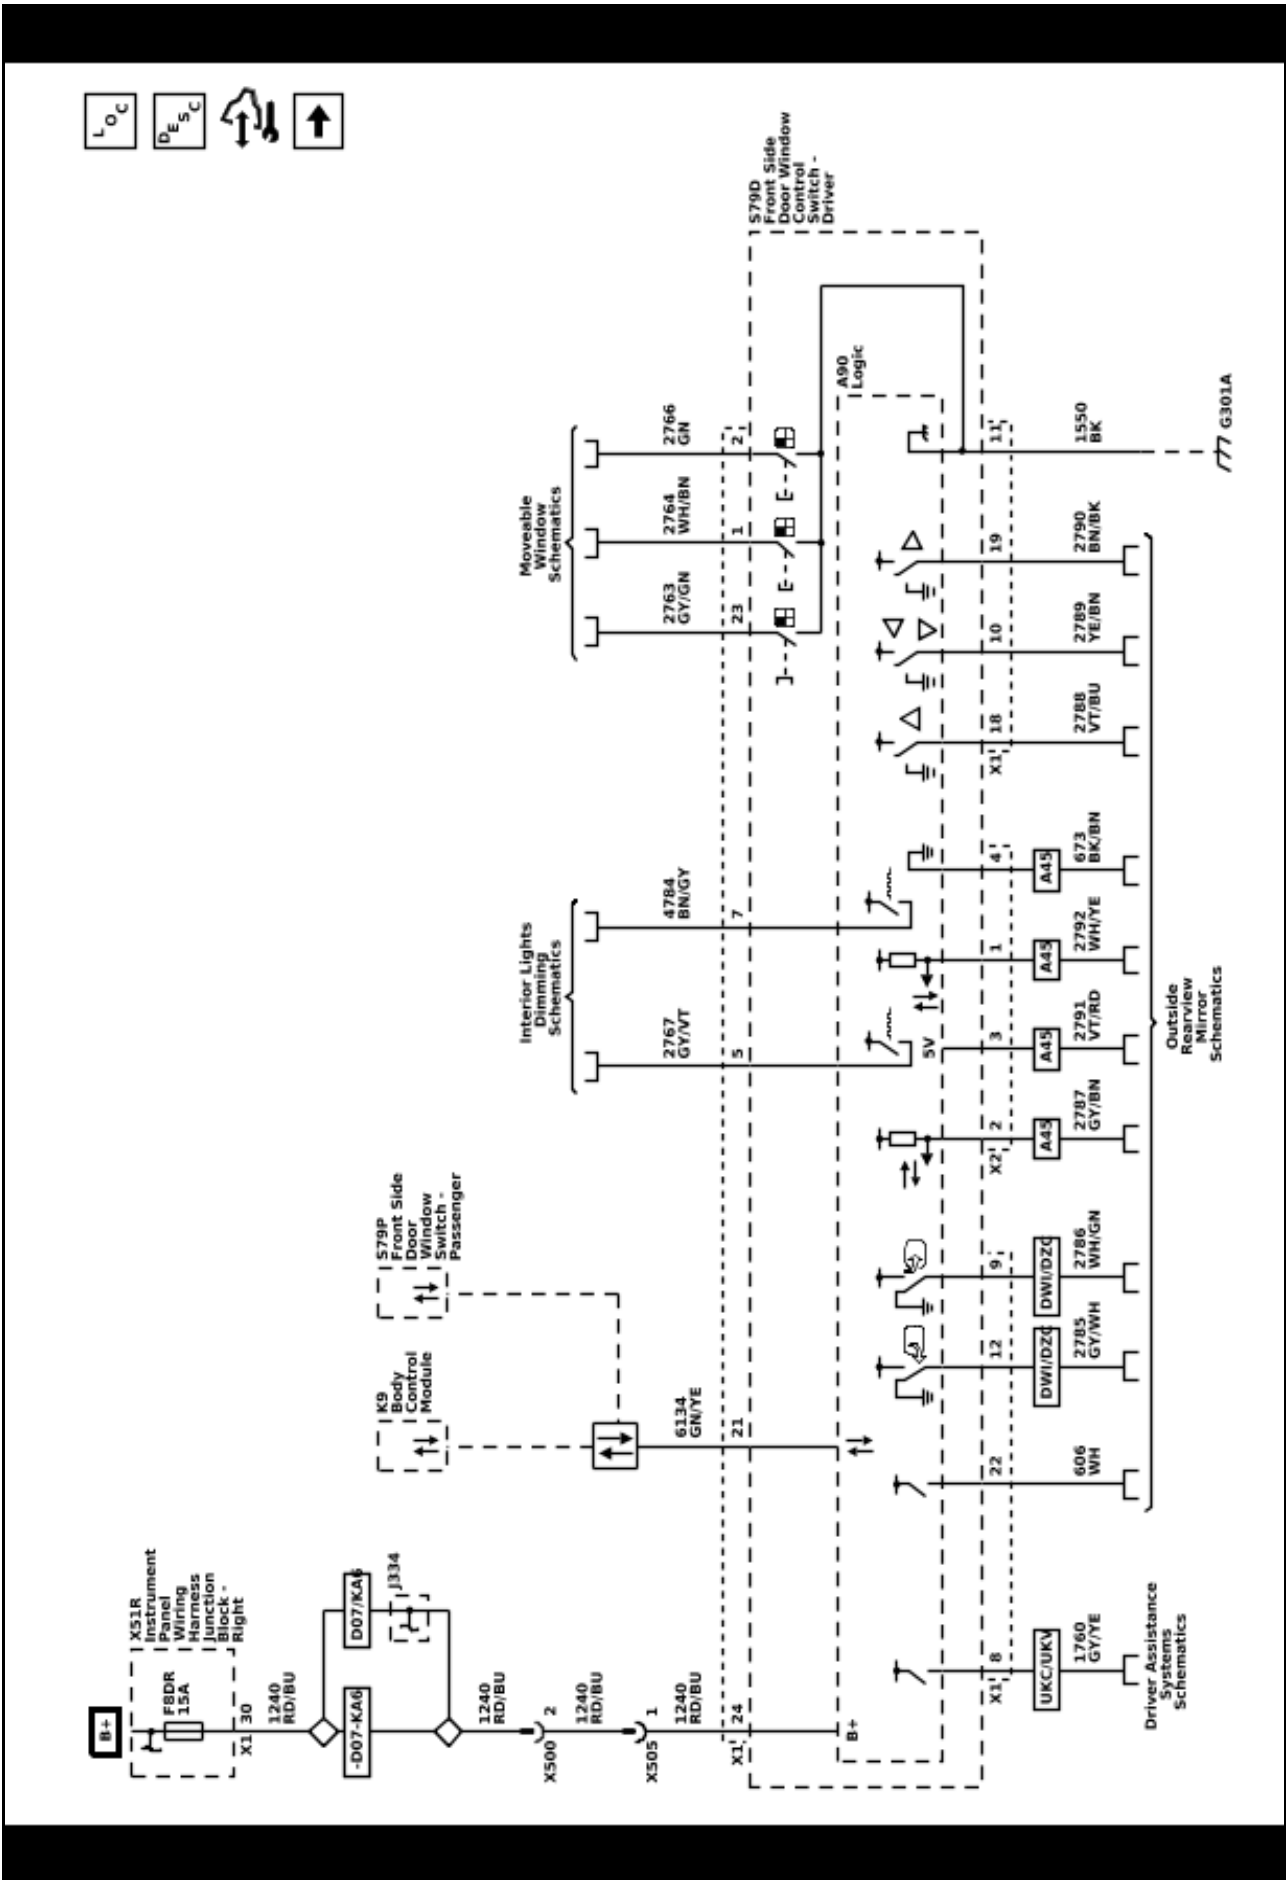


Door Lock/Indicator Schematics (Passenger Door Switch Panel Control Module Power, Ground, Serial Data, and Subsystem References)

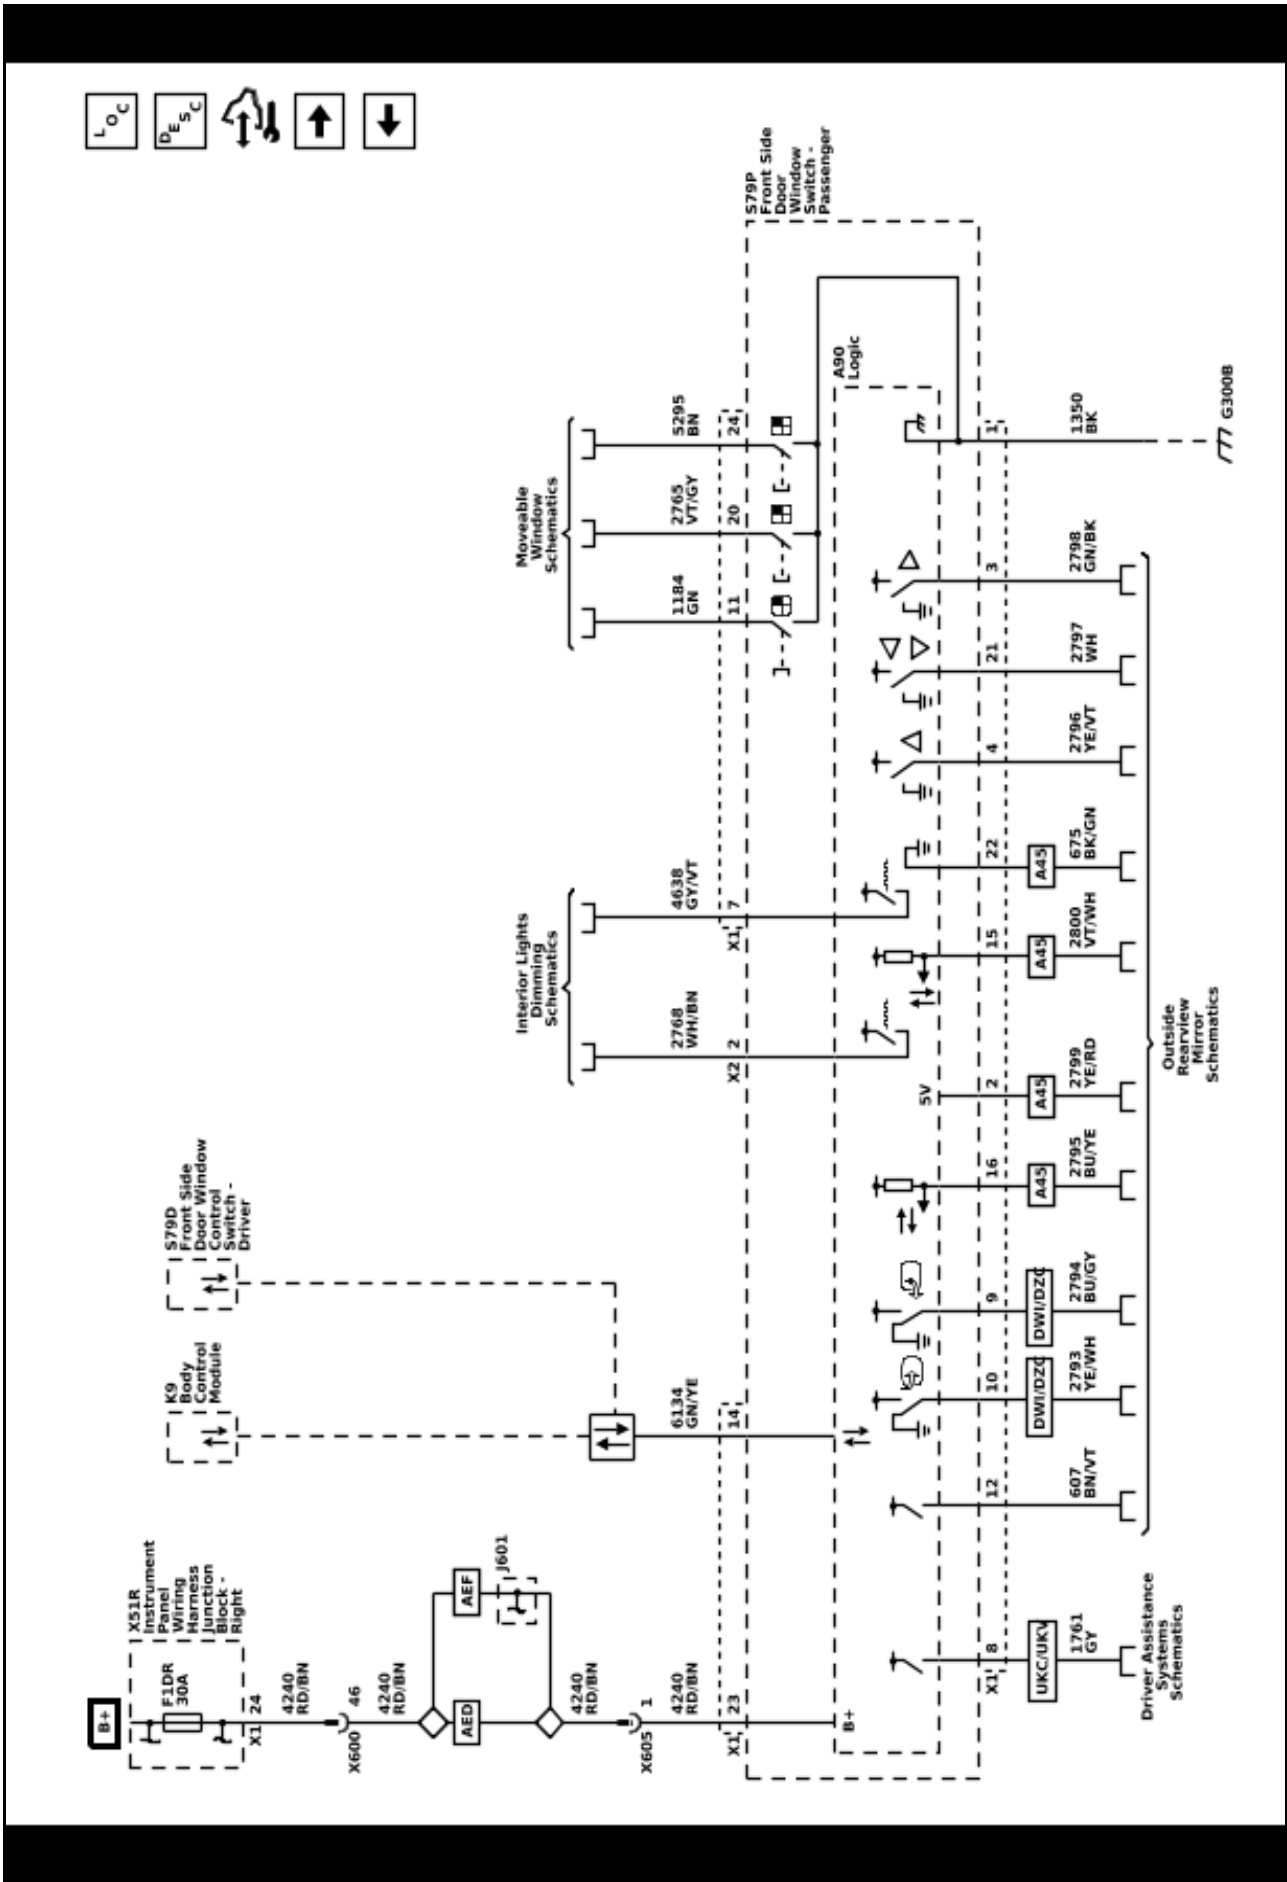


6150167


Door Lock/Indicator Schematics (Door Lock Switches and Indicators)

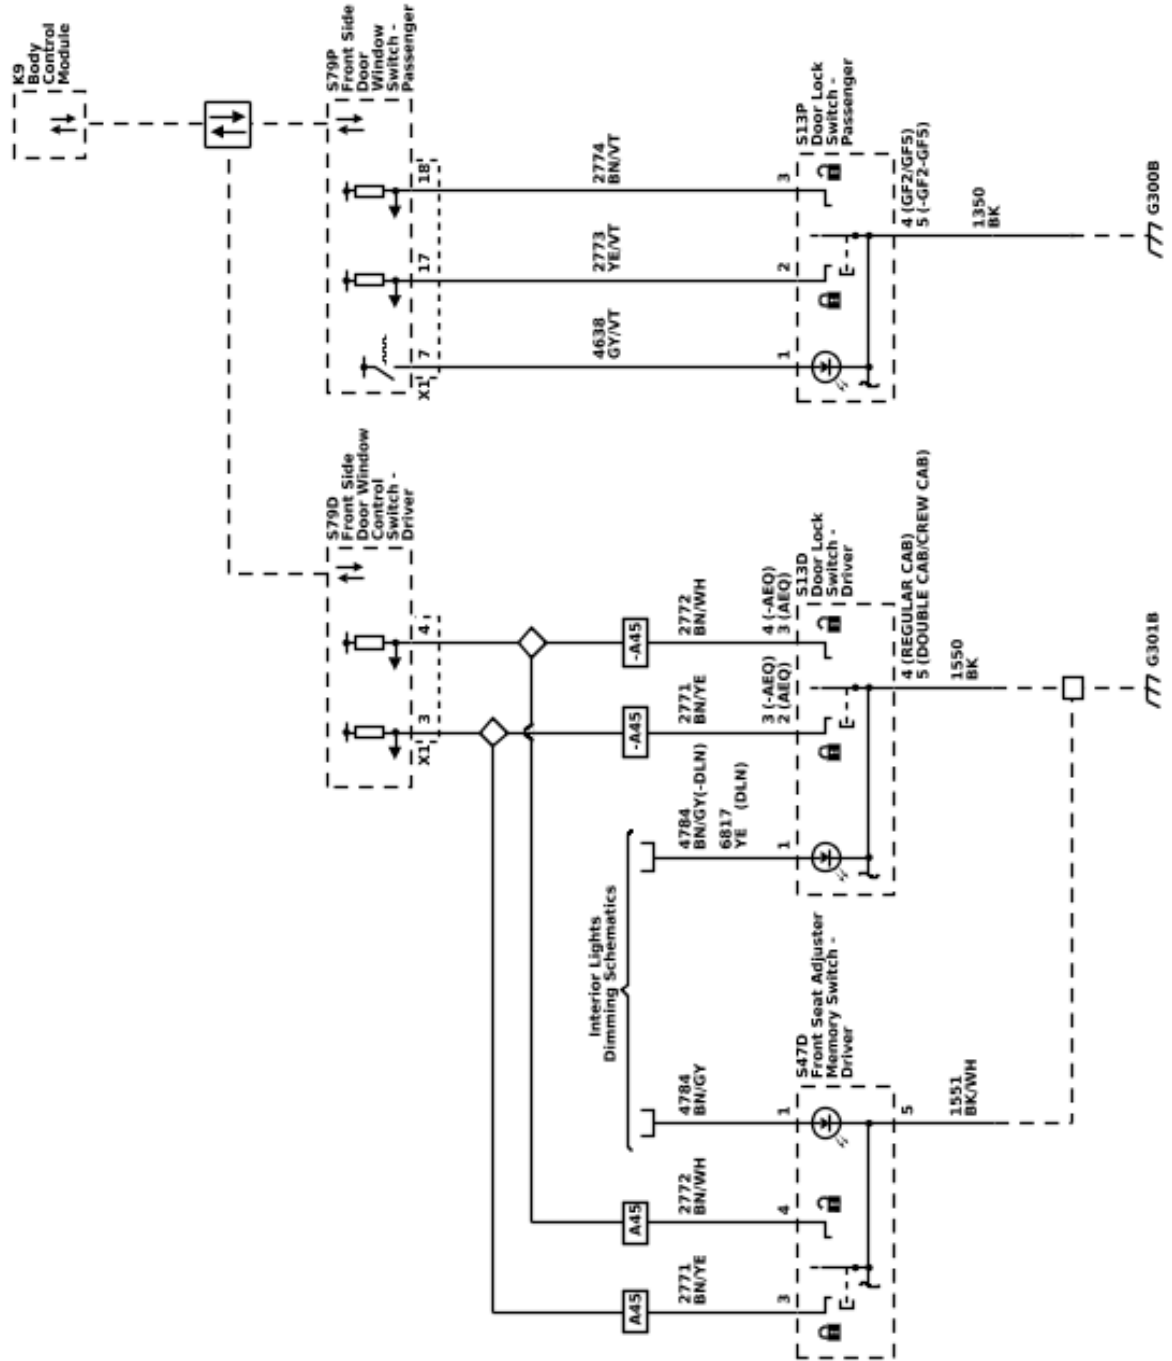

Door Lock/Indicator Schematics (Ajar Switches, Lock Status and Child Lock Status)

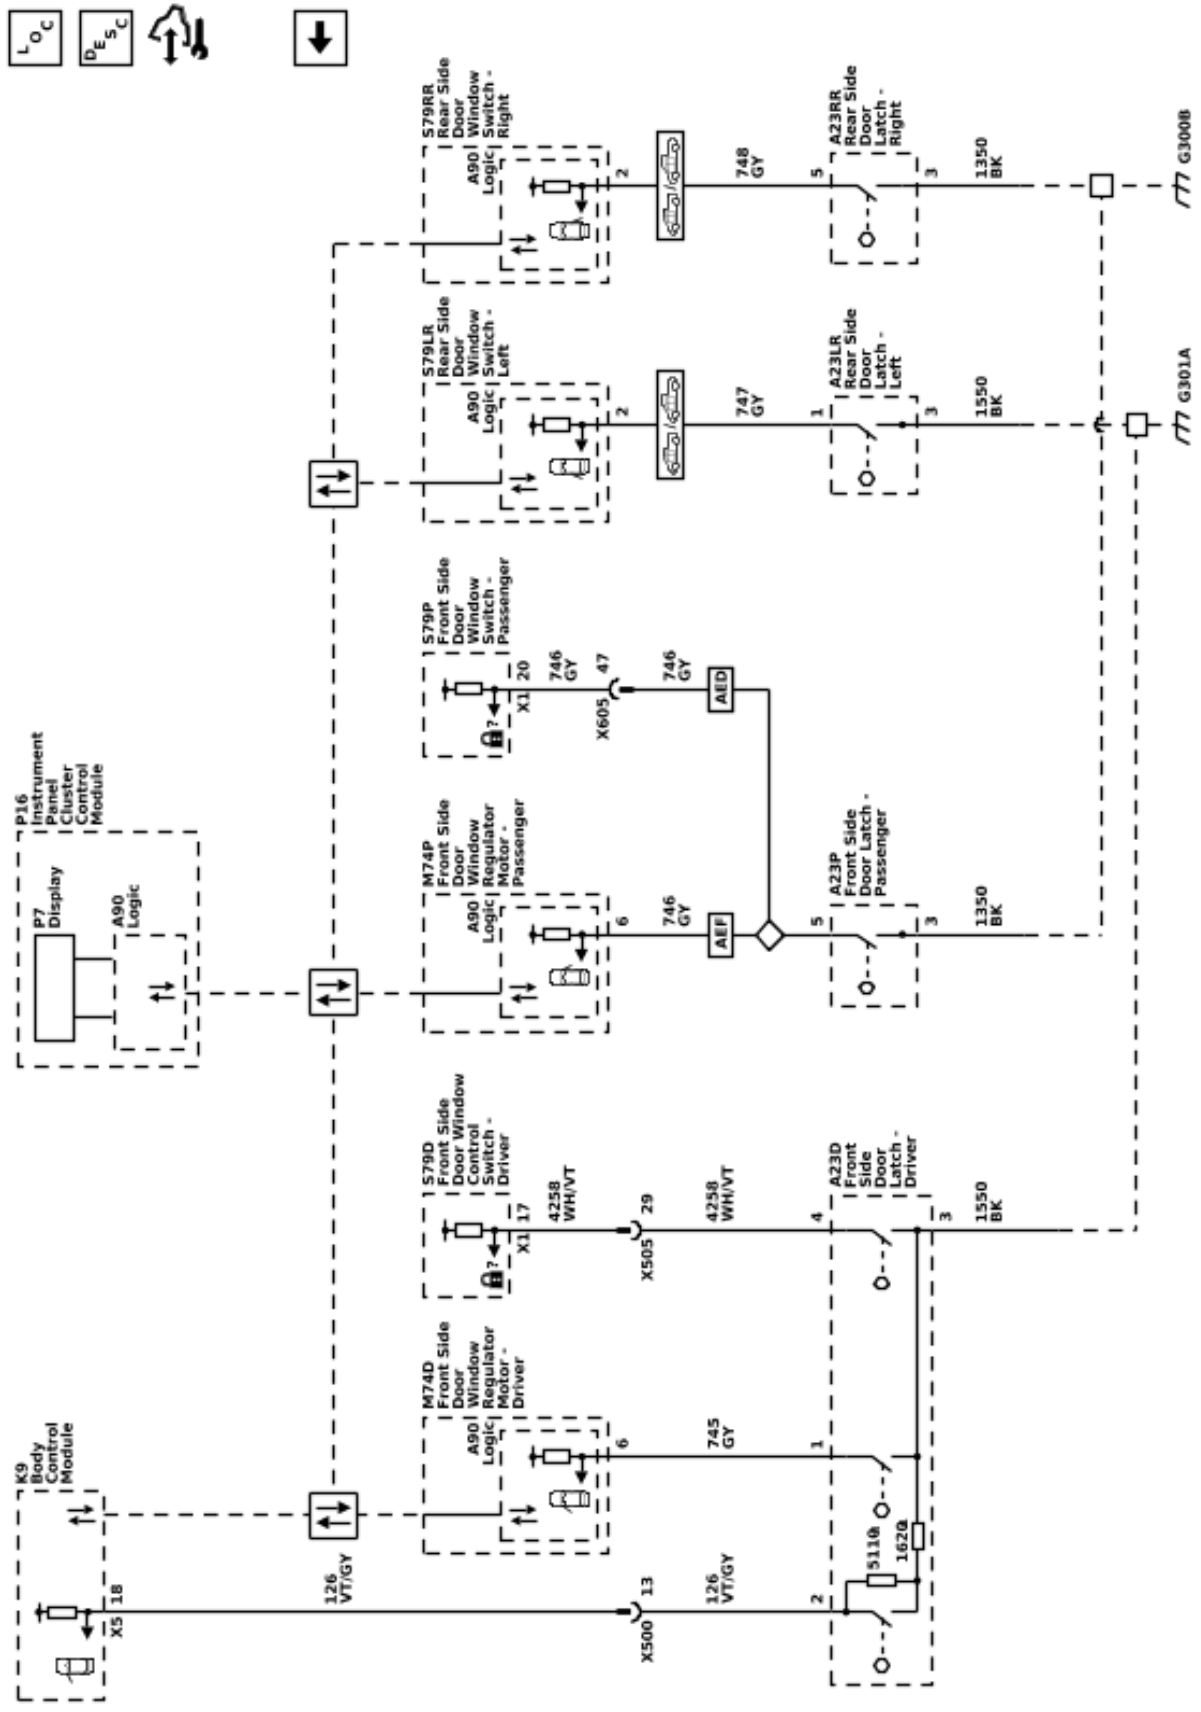


Door Lock/Indicator Schematics (Actuators)

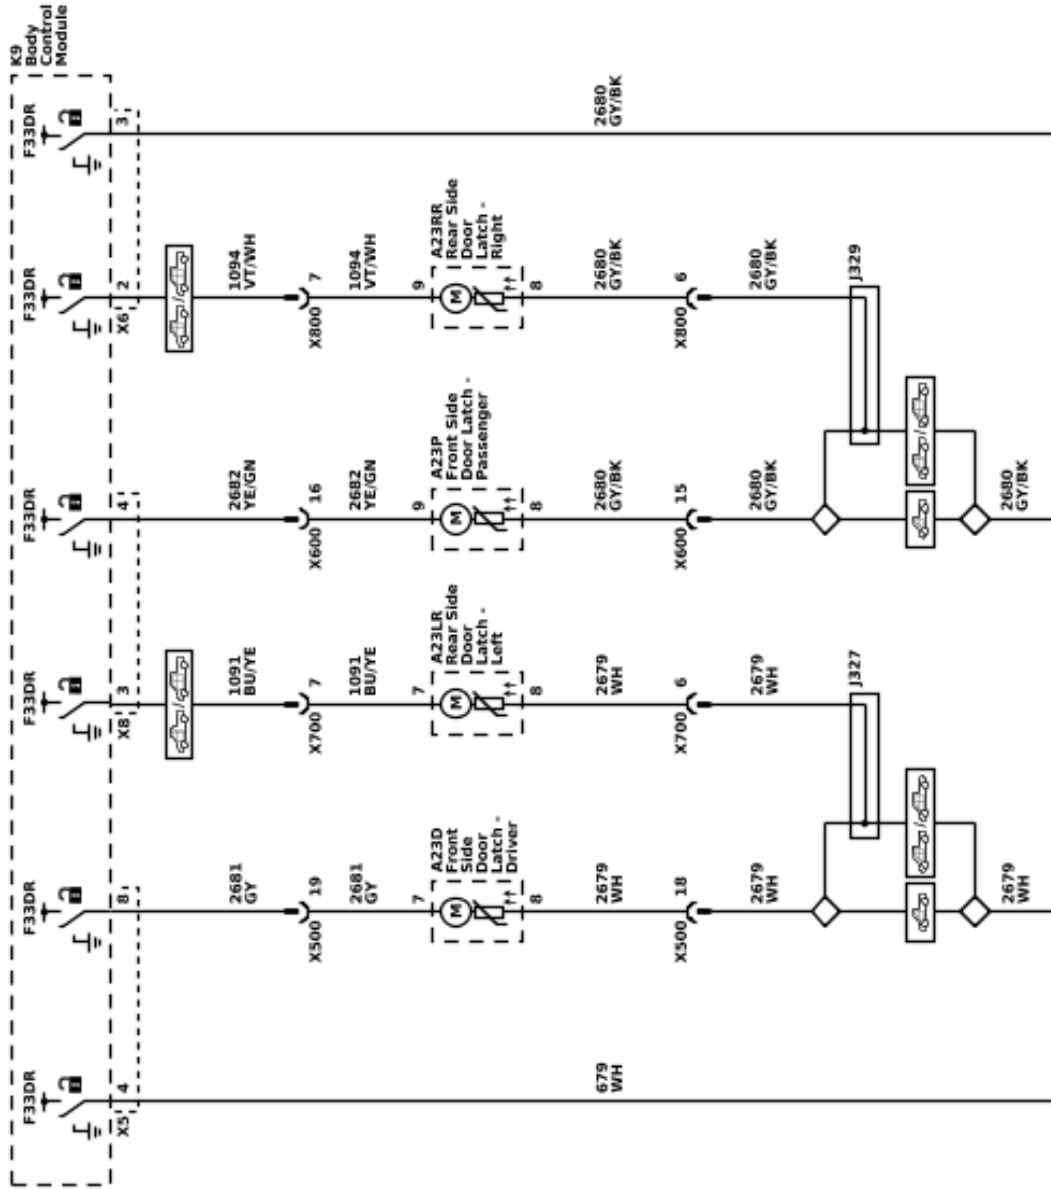


Door Lock/Indicator Schematics (Door Handle Switches)

LOC

DES

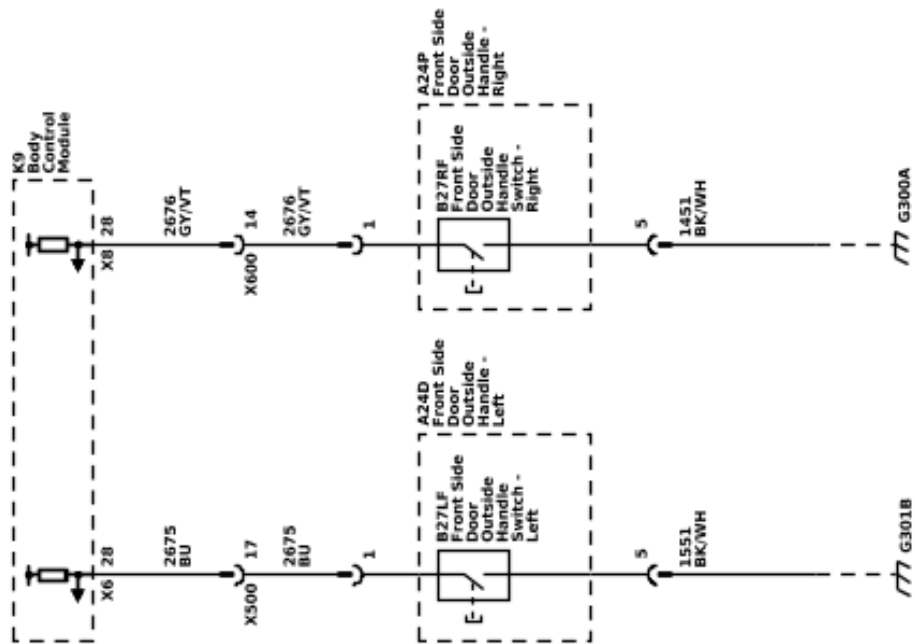


Release Systems Schematics (Endgate Release (QT5))

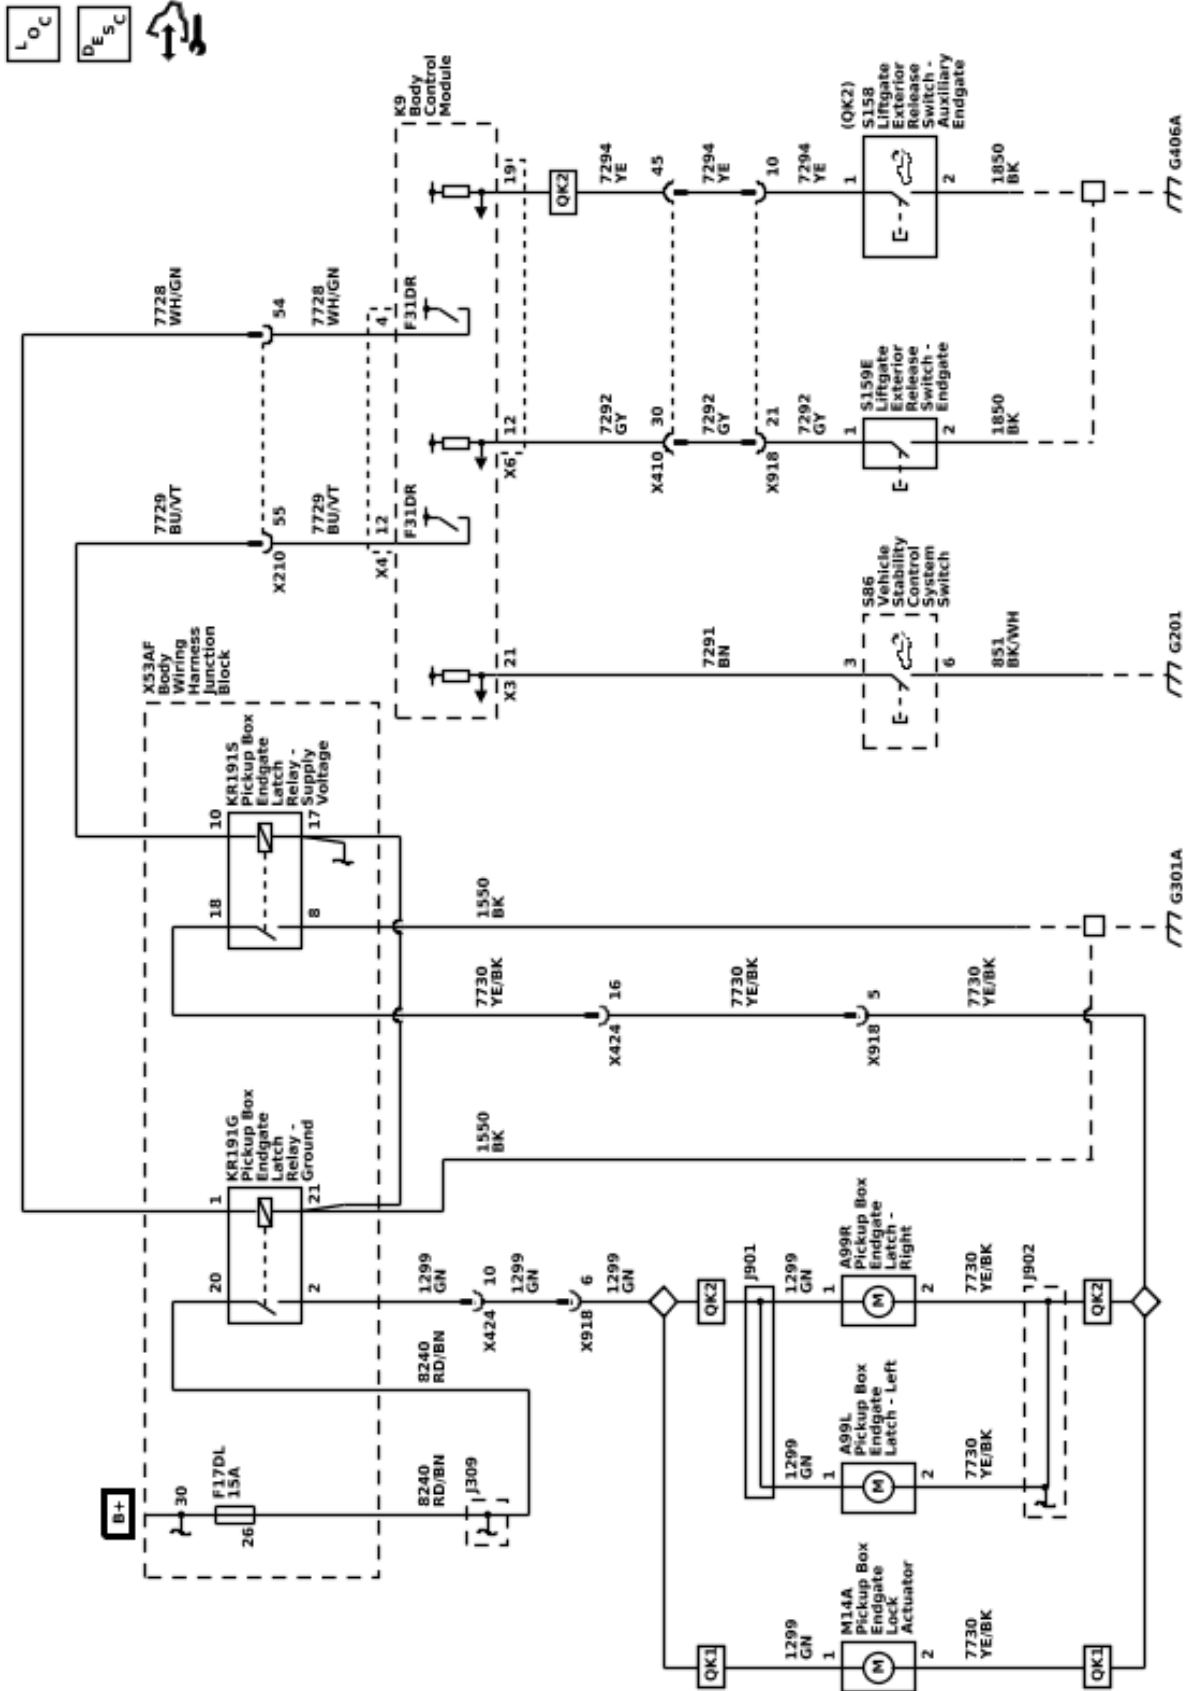


6150170


Endgate Schematics (Power Endgate Controls (QT6))

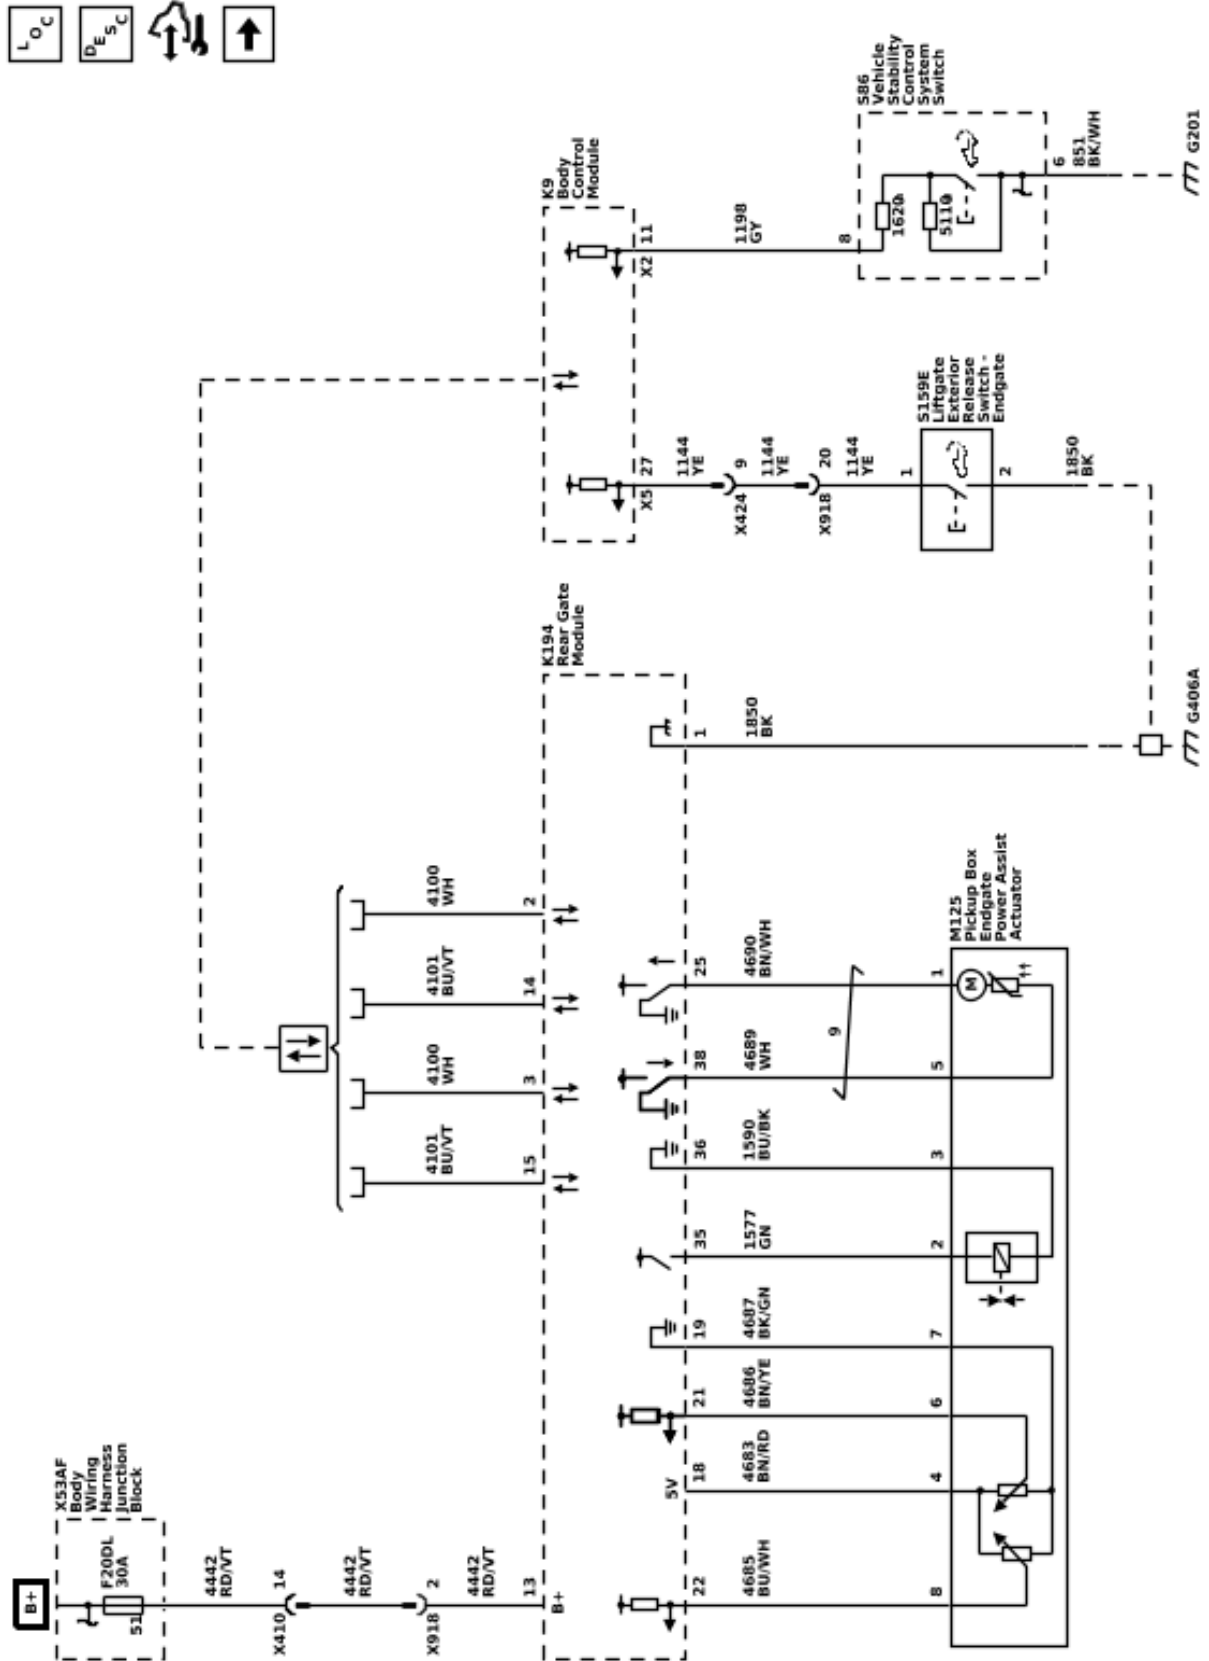


Endgate Schematics (Power Endgate Latches (QT6))

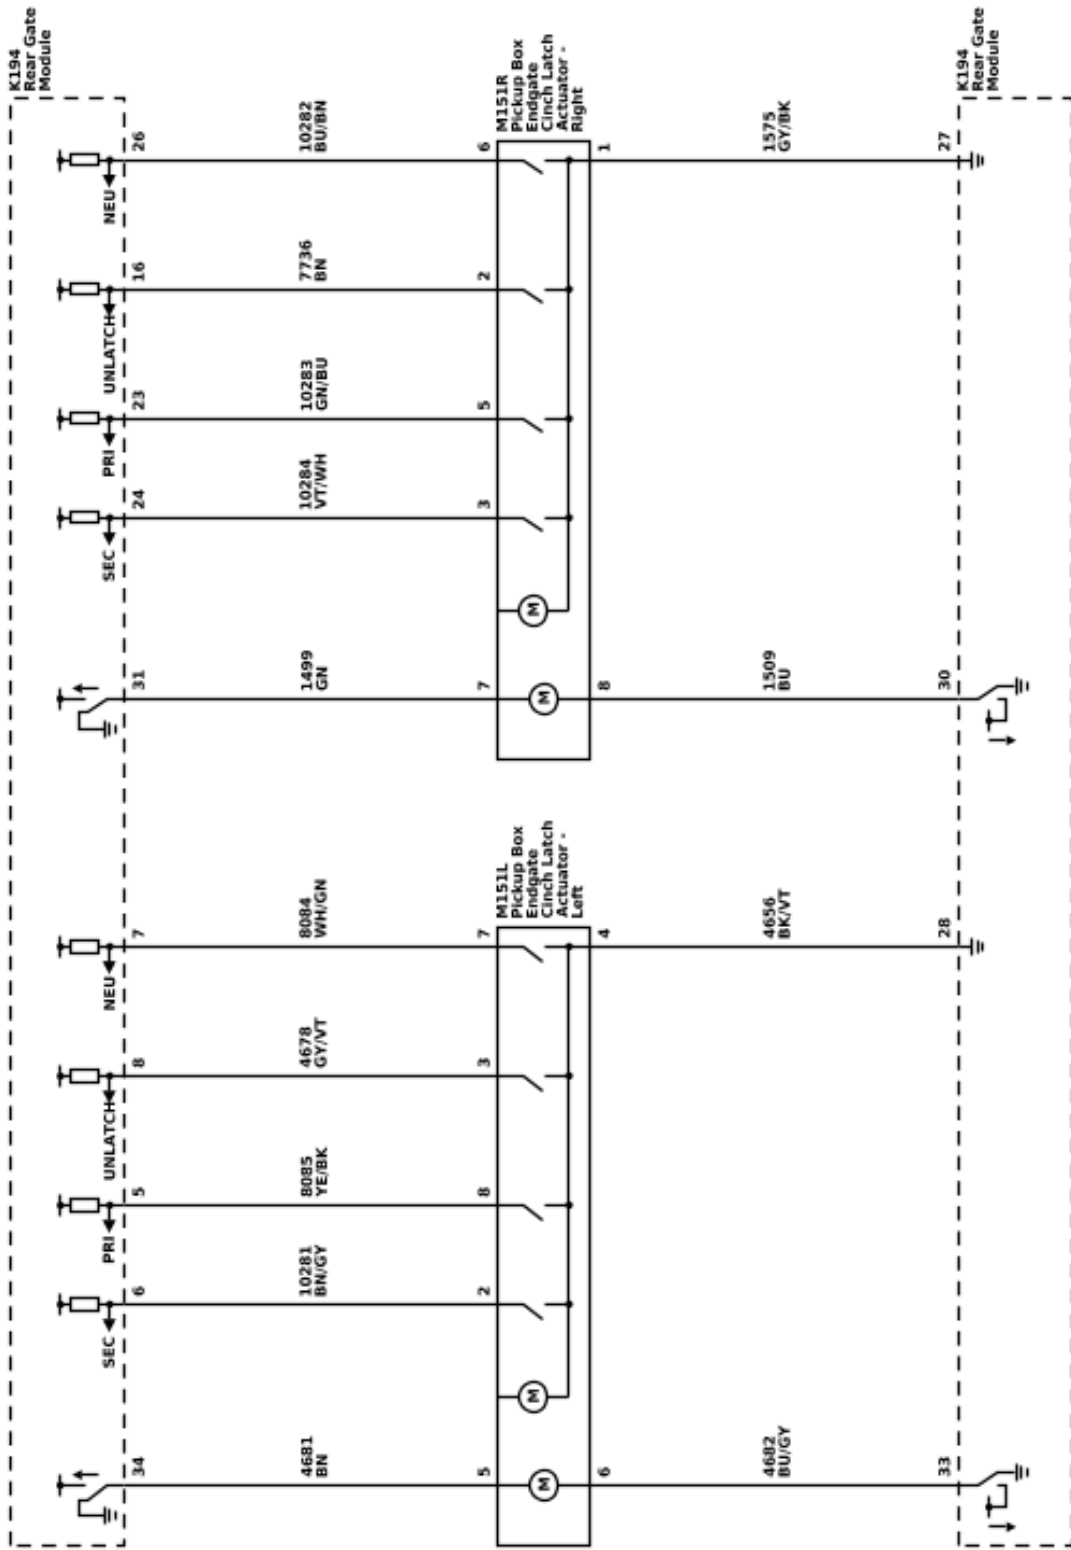


Endgate Schematics (Auxiliary Endgate Latch Controls and Switches (QK2))

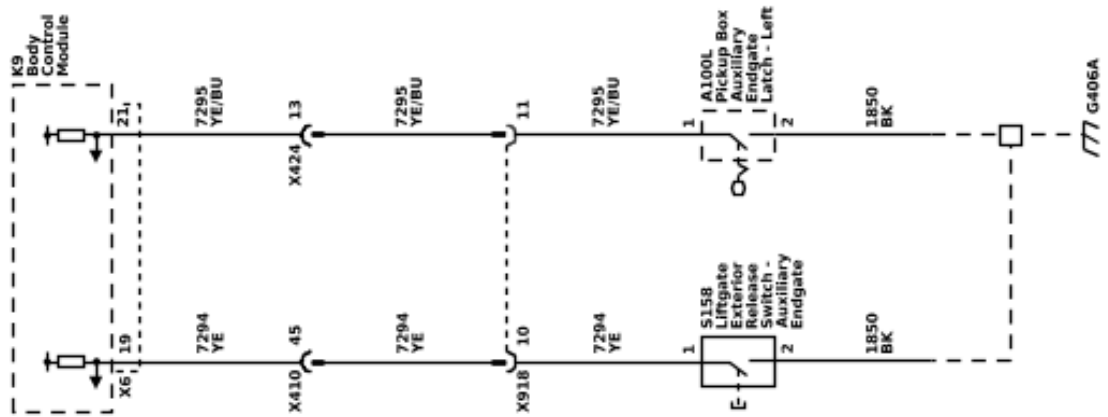

Endgate Schematics (Auxiliary Endgate Latch Motors (QK2))

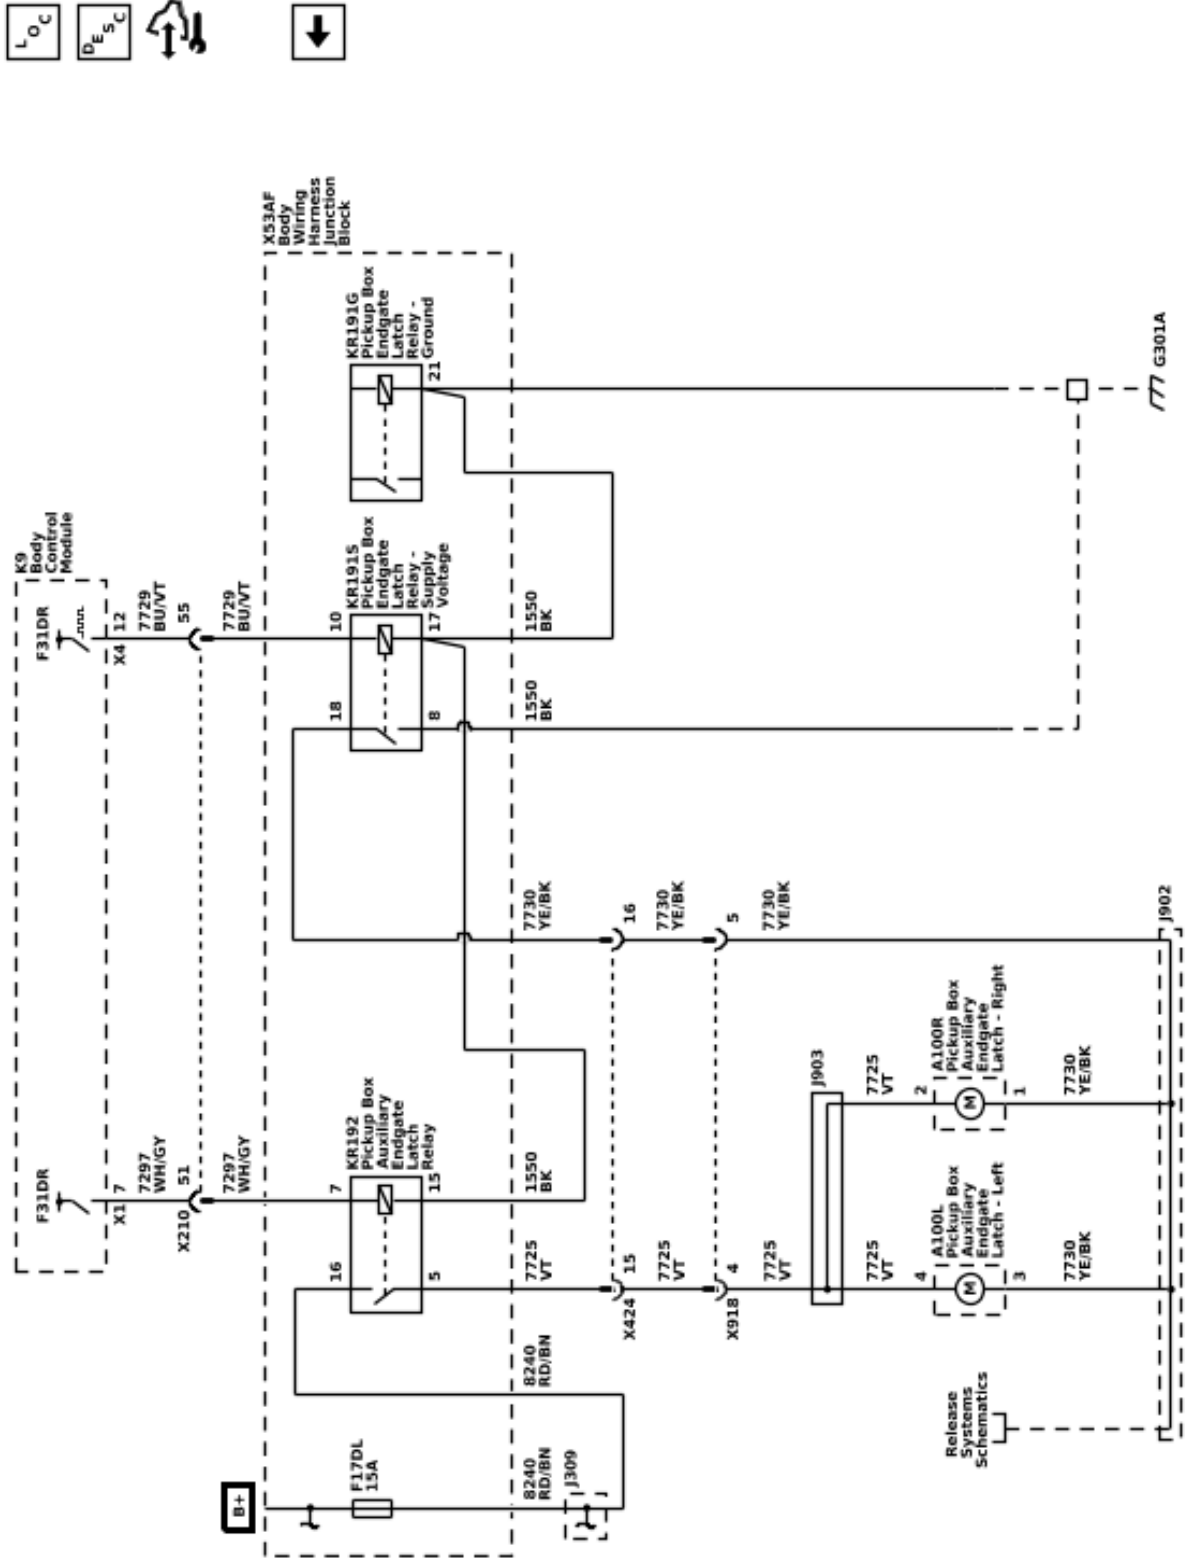

Hood Latch Schematics (Hood Ajar Switch)

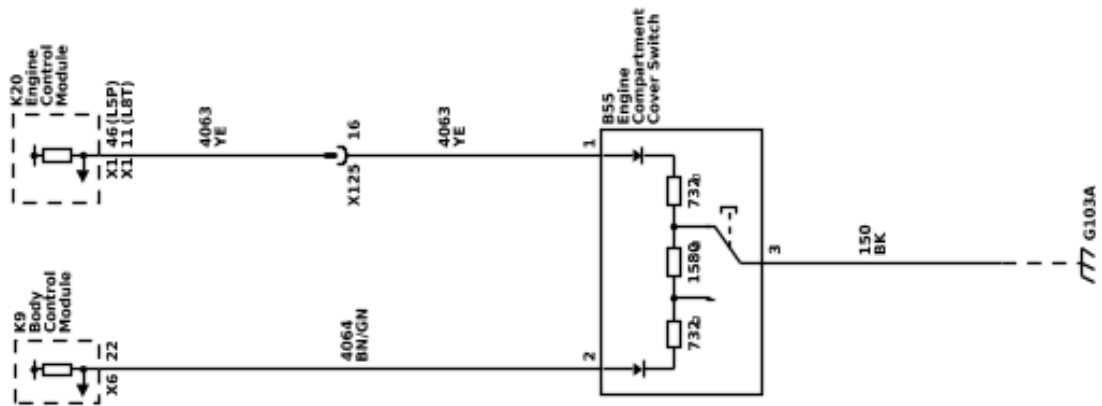

Description and Operation

Door Ajar Indicator Description and Operation

Door Ajar Indicator System Components

The door ajar indicator system consists of the following components:

- Body control module (BCM)
- Instrument cluster
- Driver door latch
- Passenger door latch
- Left rear door latch
- Right rear door latch
- Driver window motor
- Passenger window motor
- Left rear side door window switch
- Right rear side door window switch

Driver and Passenger Door Ajar

The window motor supplies a 12 V signal to the door ajar switch within the door latch, when a door is open the door ajar switch closes pulling the 12 V signal low. When the window motor detects the drop in the 12 V signal circuit, it will then communicate this status to the BCM via local interconnect network (LIN) bus. The BCM communicates with the instrument cluster via serial data message. The instrument cluster, upon receipt of this serial data message, will illuminate the door ajar indicator and also send a serial data message to the radio to activate the door ajar audible warning when the vehicle speed is greater than 8 km/h (5 mph).

Rear Doors Ajar

The rear side door window switches each provide a 12 V signal to their respective door ajar switch signal circuits. The rear door ajar switches are integral to each rear door latch assembly. When a rear door is opened, the normally open door ajar switch closes. With the door ajar switch closed, ground is provided to the door ajar switch signal circuit and the voltage within the signal circuit drops. The rear side door window switches will detect the voltage drop and will send a serial data message to the body control module which will then send a message to the instrument cluster to command the door ajar message

Endgate Description and Operation (QT6)

System Description

The power endgate system consists of the following components:

- Rear gate module
- Pickup box endgate power assist actuator
- Pickup box endgate position sensor (part of the power assist actuator)
- Interior pickup box endgate control switch (Part of the Instrument panel multifunction switch)
- Exterior pickup box endgate control switch

- Right pickup box endgate latch assembly
- Left pickup box endgate latch assembly
- Keyless entry transmitter
- Remote control door lock receiver

Operation

The power endgate can be commanded to power open by the following methods:

- Pressing the interior pickup box endgate control switch on the center stack
- Pressing the touch pad on the exterior endgate handle (vehicle doors must be unlocked)
- Pressing the endgate button on the RKE transmitter twice and holding until the endgate latches release

The power endgate can be commanded to power close by the following methods:

- Pressing and holding the interior pickup box endgate control switch on the center stack until the endgate is fully closed and latched
- Pressing the touch pad on the exterior endgate handle
- Pressing the endgate button on the RKE transmitter twice and holding until the endgate is fully closed and latched
- Lifting the tailgate at least 10 cm (4 in) above the full close position and holding momentarily

The vehicle must be in Park for any of the power tailgate functions to operate.

The rear gate module will respond to a request by commanding the left and right pickup box endgate latches to release the endgate and activate the pickup box endgate power assist actuator and lower the endgate or to raise and cinch the endgate closed.

Power Latch

The rear gate module continuously monitors power endgate operation and calculates its location and direction of travel from an endgate position sensor (part of the power assist actuator). One input returns the position of the endgate relative to the x-axis and y-axis. The rear gate module then uses these 2 inputs together to calculate its angle relative to the endgate.

The left and right pickup box endgate latches are bi-directional motors and latch or unlatch operation is the result of the direction of the motor rotation. The rear gate module controls the left and right pickup box endgate latches through the control circuits by supplying power and ground in the appropriate polarity. The motor control circuits are monitored by the rear gate module prior to activation for a high or low condition and during motor operation for an insufficient current flow condition. The ratchet, pawl and sector switches are part of the left and right pickup box endgate latches and are used by the rear gate module to determine the state of the latch during the process of latching or unlatching. Each of the latch switch signal circuits are supplied battery voltage and monitored within the rear gate module. The latch switches share a common low reference circuit from the rear gate module and when the switch contacts close the signal circuit goes low and the rear gate module determines the switch to be active. The ratchet, pawl and unlatch

switches are inactive when the endgate is closed and will transition to active as the endgate is opened. The sector switch will be inactive when the endgate is closed, during opening of the endgate the sector switch will change to active and back to inactive when the endgate is in the fully open position.

The exterior pickup box endgate control switch signal circuit is supplied battery voltage by the rear gate module. When the switch is pressed the contacts close and the signal circuit goes low, the rear gate module will detect the voltage drop and will command the endgate to release and lower or to power raise the endgate to the closed position.

For vehicles without the optional passive keyless entry, when the exterior pickup box endgate control switch is pressed, the rear gate module will check the status of the vehicle door locks by sending a serial data message to the body control module requesting the door lock status. If the vehicle doors are locked, the rear gate module will ignore the signal from the exterior pickup box endgate control switch. If the vehicle doors are unlocked, the rear gate module will permit the endgate to unlatch and power open when the exterior pickup box endgate control switch is pressed.

For vehicles with the optional passive keyless entry system, the keyless entry control module monitors the proximity of the keyless entry transmitter. If the exterior pickup box endgate control switch is pressed and the keyless entry transmitter is within range, the keyless entry control module will send a serial data message to the rear gate module indicating the presence of the keyless entry transmitter and the rear gate module will permit the endgate to unlatch and power open. If the doors are locked and the keyless entry transmitter is not within range, the rear gate module will ignore the signal from the exterior pickup box endgate control switch.

Manual Endgate Operation

The endgate can be manually closed from the full-open position when the endgate is lifted in a continuous motion. If the endgate motion is stopped between the full-open and half-closed positions, the lift to close feature can engage and power close the endgate. If the touch pad is pressed during power operation, the endgate will stop and allow manual operation. The endgate must be held after stopping, or it will continue to open.

Tailgate Release Unavailable Driver Information Center Message

Power Endgate Functions Disabled Without Setting DTCs

The driver information center displays Tailgate Release Unavailable when a thermal inhibit occurs in the latch or drive unit or the position count is out of range.

The power endgate functions will be restored by performing the following actions:

- Closing the endgate which will reset the position counts
- Closing the endgate and removing the F20DL 30A fuse for greater than 5 minutes

Power Endgate Functions Disabled With DTCs Current

The driver information center displays Tailgate Release Unavailable when the rear gate module control module detects a malfunction in the power endgate system and the system is disabled.

Endgate Description and Operation (QT5 Without MultiPro Tailgate)

Endgate Release System Components

- Body control module (BCM)
- Pickup box endgate control switch-interior (Part of the instrument panel multifunction switch)
- Pickup box endgate control switch-exterior
- Pickup box endgate unlatch actuator
- Pickup box endgate unlatch relay

Endgate Release Operation (Without MutiPro Tailgate Option)

Interior Endgate Release Switch

The body control module monitors the voltage level of the endgate unlatch signal circuit so that when the switch is pressed contacts within the switch closes providing a ground path for the endgate unlatch signal circuit, the voltage within the signal circuit is pulled low, the body control module will detect the voltage drop and if the passenger doors are unlocked, will energize the pickup box endgate unlatch relay.

Exterior Endgate Release Switch

The body control module monitors the status of the vehicle doors, if the doors are locked the body control module will ignore the request from the exterior pickup box endgate control switch. If the passenger doors have been commanded to unlock, pressing the exterior pickup box endgate control switch will close contacts within the switch and provide a ground path for the endgate unlatch signal circuit, the body control module will detect the voltage drop and will energize the pickup box endgate unlatch relay.

If the vehicle has been equipped with the passive keyless entry system and the keyless entry transmitter is within 3 feet (1 meter) of the endgate, pressing the exterior pickup box endgate control switch will also function in the same manner but without unlocking the passenger doors. Refer to Keyless Entry System Description and Operation for more information on the passive keyless entry system.

Pickup Box Endgate Unlatch actuator

When body control module receives a endgate release command from the exterior pickup box endgate control switch, the body control module applies brief pulse of voltage to the pickup box endgate unlatch relay control circuit, which energizes the coil side of the relay. The switch side of the pickup box endgate unlatch relay then momentarily closes, supplying a brief pulse of battery positive voltage to the pickup box endgate unlatch actuator. The pickup box endgate unlatch actuator is continuously grounded and when it receives

the voltage pulse, it will become energized and the latch will activate releasing the endgate so that it may be manually lowered to an open position.

Endgate Description and Operation (QT5 With MultiPro Tailgate)

Endgate Release System Components

- Body control module (BCM)
- Pickup box endgate control switch-interior (Part of the instrument panel multifunction switch)
- Pickup box endgate control switch-exterior
- Left pickup box endgate latch
- Right pickup box endgate latch
- Left pickup box auxiliary endgate latch
- Right pickup box auxiliary endgate latch
- Left pickup box endgate latch relay
- Right pickup box endgate latch relay
- Left pickup box auxiliary endgate latch relay
- Right pickup box auxiliary endgate latch relay

Endgate Release Operation (With MutiPro Tailgate Option)

Interior Endgate Release Switch

The body control module monitors the voltage level of the endgate unlatch signal circuit so that when the switch is pressed contacts within the switch closes providing a ground path for the endgate unlatch signal circuit, the voltage within the signal circuit is pulled low, the body control module will detect the voltage drop and if the passenger doors are unlocked, will energize the left pickup box endgate latch relay and right pickup box endgate latch relay.

Exterior Endgate Release Switch

The body control module monitors the status of the vehicle doors, if the doors are locked the body control module will ignore the request from the exterior pickup box endgate control switch. If the passenger doors have been commanded to unlock, pressing the appropriate exterior pickup box endgate control switch will close contacts within the switch and provide a ground path for the major or minor endgate unlatch signal circuit, the body control module will detect the voltage drop and will energize the appropriate pickup box endgate latch relays.

If the vehicle has been equipped with the passive keyless entry system and the keyless entry transmitter is within 3 feet (1 meter) of the endgate, pressing the exterior pickup box endgate control switch will also function in the same manner but without unlocking the passenger doors. Refer to Keyless Entry System Description and Operation for more information on the passive keyless entry system.

Major Pickup Box Endgate

Note: The auxiliary pickup box endgate must be in the latched position before commanding the major pickup box endgate to release. The body control module will disable the major pickup box endgate release function if the auxiliary pickup box endgate is open or ajar.

When body control module receives a major endgate release command from the exterior pickup box endgate control switch, the body control module applies brief pulse of voltage to the left and right pickup box endgate latch relay control circuits, which energizes the coil side of the relays. The switch side of the left and right pickup box endgate latch relay then momentarily closes, supplying a brief pulse of battery positive voltage to the left and right pickup box endgate latches. The left and right pickup box endgate latches will become energized and the latches will activate releasing the major endgate so that it may be manually lowered to an open position.

Minor Pickup Box Endgate

When body control module receives a major endgate release command from the exterior pickup box endgate control switch, the body control module applies brief pulse of voltage to the left and right pickup box auxiliary endgate latch relay control circuits, which energizes the coil side of the relays. The switch side of the left and right pickup box auxiliary endgate latch relay then momentarily closes, supplying a brief pulse of battery positive voltage to the left and right pickup box auxiliary endgate latches. The left and right pickup box auxiliary endgate latches will become energized and the latches will activate releasing the minor endgate so that it may be manually lowered to an open position.

Hood Ajar Indicator Description and Operation

Hood Ajar Switch

The body control module (BCM) applies B+ to the hood ajar signal circuit and monitors the voltage to determine the position of the hood. When the hood is open, the switch is open and voltage remains high. When the hood is closed, the switch is closed and the voltage is pulled low.

The BCM uses the hood ajar switch as a content theft deterrent alarm trigger.

Hood Ajar Indicator/Message

When the hood is ajar, a message is displayed on the DIC or the hood ajar indicator will be illuminated.

Power Door Locks Description and Operation

Door Lock System Components

The power door lock system consists of the following components:

- Driver door lock switch
- Passenger door lock switch
- Left rear door lock switch
- Right rear door lock switch
- Driver front side door window control switch
- Passenger front side door window switch
- Driver front side door latch
- Passenger front side door latch
- Left rear side door latch
- Right rear side door latch
- Exterior door handle switches

- Body control module
- Lighting control module

Door Lock System Controls

The power door lock system can be controlled by any of the following:

- Power door lock switch activation
- Keyless entry lock or unlock command
- Delayed locking command
- Automatic door lock command
- When the OnStar[®] system is used to unlock the driver door

Door Lock and Unlock Operation

The driver or passenger front side door window control switch will monitor the voltage of their respective door lock switches, when the driver or passenger door lock switch is activated in the lock or unlock position the signal voltage will be pulled low, the corresponding front side door window control switch will detect the voltage drop in the signal circuit and will send a serial data message to the body control module requesting the door lock or unlock command.

The lighting control module will monitor the voltage of the left rear and right rear door lock switches, when the left rear or right rear door lock switch is activated in the lock or unlock position the signal voltage will be pulled low, the lighting control module will detect the voltage drop in the signal circuit and will send a serial data message to the body control module requesting the door lock or unlock command.

The body control module upon receipt of a lock or unlock request, will supply battery voltage to the door lock actuator lock or unlock control circuits. Since the opposite side of the lock actuator is connected to ground through the other lock actuator control circuit, the doors, and fuel filler door will then lock or unlock as commanded.

The following control circuits are used to operate the door lock actuators:

- Driver door unlock only
- Passenger and rear door unlock
- All door lock

This sequence can be modified through the personalization settings


Passive Door Lock/Unlock Operation

The exterior door handle switch signal circuits provide inputs to the body control module when the exterior door handle switches are activated. These inputs allow the body control module to detect a door lock or a door unlock request. The body control module provides a 7 V signal to each exterior door handle switch via the door handle switch signal circuits. When a door handle switch is pressed, the switch closes and the voltage signal within the signal circuit is pulled to ground. The body control module will detect the voltage drop and a low frequency antenna will transmit a challenge to the keyless entry transmitter. If the challenge is met, the keyless entry transmitter will respond, and the body control module will command the door(s) to be locked or unlocked.


Wipers and Washers

Schematic and Routing Diagrams

Wiper/Washer Schematics (Controls)

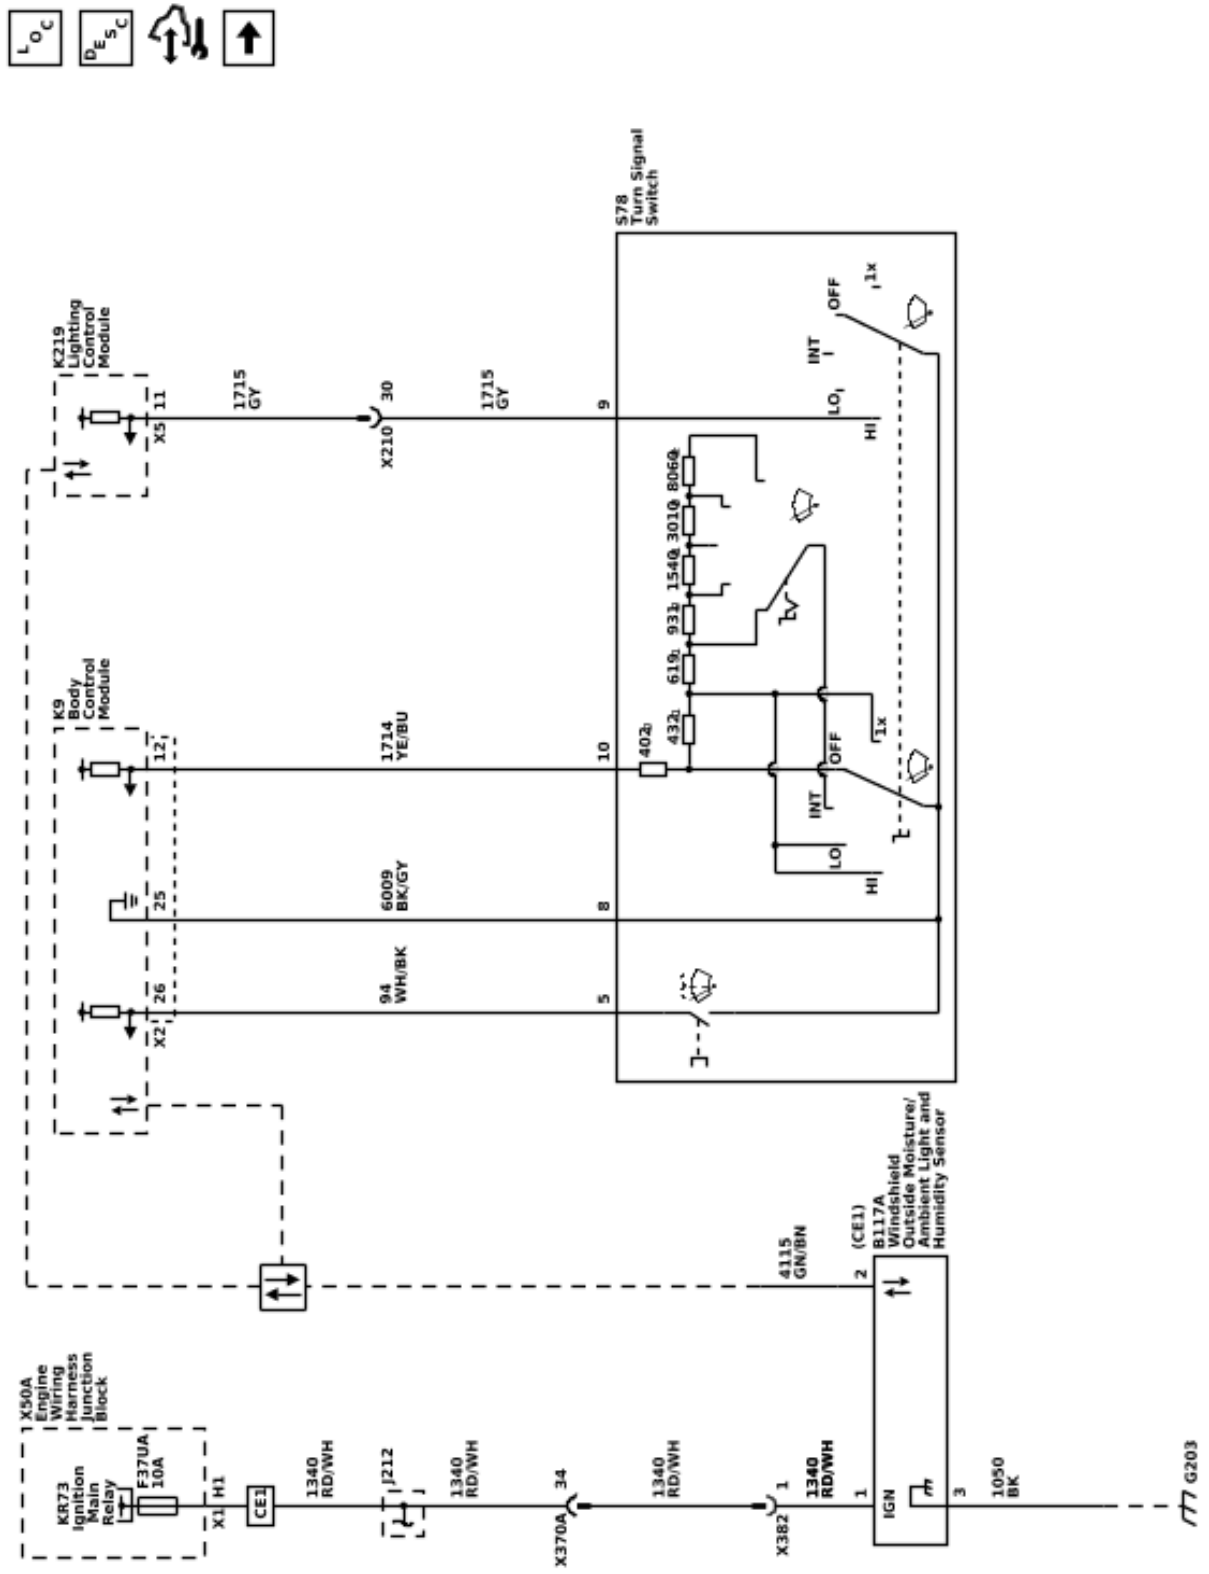

Wiper/Washer Schematics (Wiper Motor and Washer Pump)

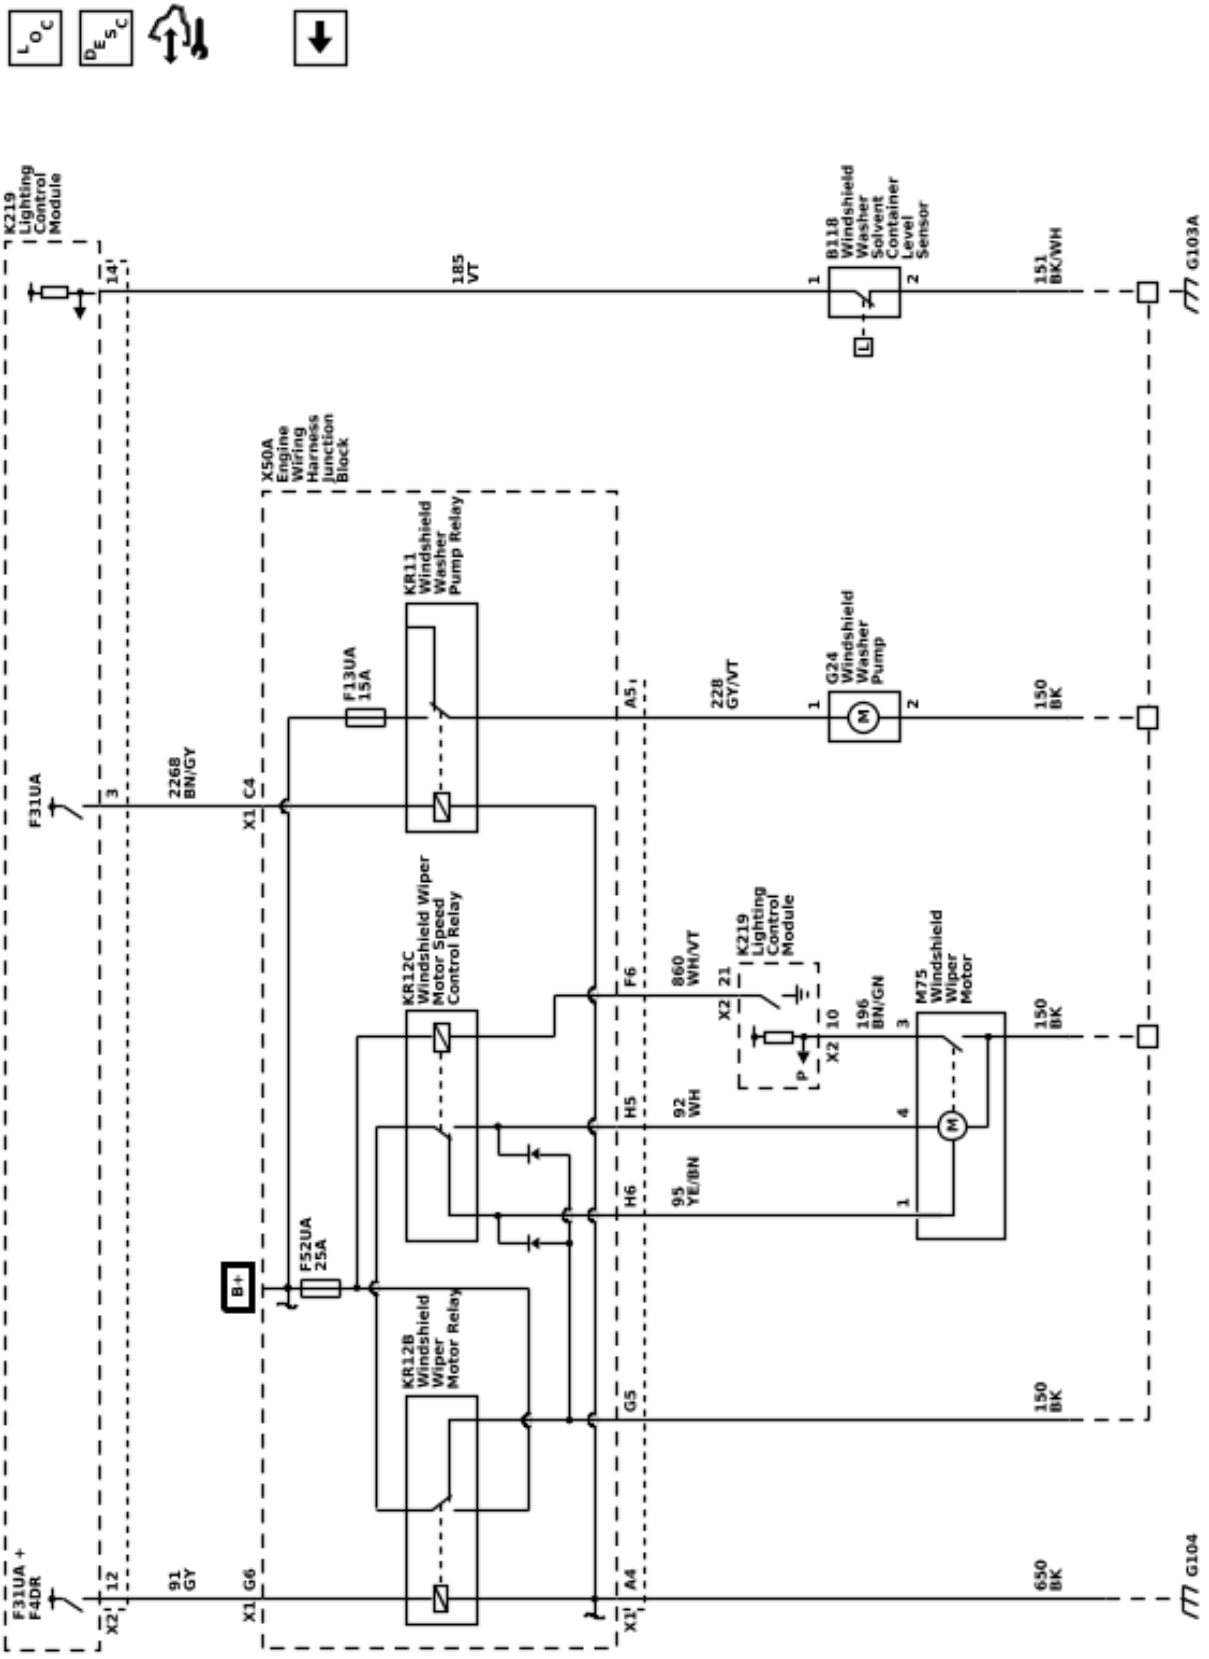

6150176

Description and Operation

Wiper/Washer System Description and Operation

Front Windshield Wiper Operation

The windshield wipers system allows the driver to clear the vehicle's windshield using a discrete switch or through an automatic rain sensing system. The windshield wiper system functions through a primary control, but also allows redundant high speed-only operation in the event of a system fault. The wiper systems uses the S82 Windshield Wiper/Washer Switch as the primary means of driver control, along with the B117A Windshield Outside Moisture/Ambient Light and Humidity Sensor to modulate intermittent wiper operation. The S82 Windshield Wiper/Washer Switch is a discrete input to the K9 Body Control Module. The K9 Body Control Module communicates with the K219 Lighting Control Module over CAN, and with the B117A Windshield Outside Moisture/Ambient Light and Humidity Sensor over LIN, to control wiper activation.

Low Speed Wiper Operation

With the S82 Windshield Wiper/Washer Switch in the low speed position, the discrete signal circuit to the K9 Body Control Module is pulled down through two resistors in a resistor ladder to a low reference provided by the K9 Body Control Module. The K9 Body Control Module communicates with the K219 Lighting Control Module over CAN, requesting consistent low speed wiping operation. To initiate low speed operation, the K219 Lighting Control Module energizes the KR12B Windshield Wiper Relay. This allows battery voltage from the wiper fuse to be applied through the switched contacts of the KR12B Windshield Wiper Relay, through the normally closed contacts of the KR12C Windshield Wiper Speed Control Relay, to the windshield wiper low speed control circuit of the M75 Windshield Wiper Motor.

Intermittent Wiper Operation

With the S82 Windshield Wiper/Washer Switch in the intermittent position, the discrete signal circuit to the K9 Body Control Module is pulled down through a number of resistors within a resistor ladder to a low reference provided by the K9 Body Control Module. The number of resistors the signal travels through is dependent on the intermittent selection made on the S82 Windshield Wiper/Washer Switch. The K9 Body Control Module interprets this range of voltage pull-down as a request for intermittent wiper activation, with each pull-down voltage value equating an intermittent delay (sensitivity) level. If the rain sense is enabled the K9 Body Control Module communicates with the B117A Windshield Outside Moisture/Ambient Light and Humidity Sensor via LIN. The B117A Windshield Outside Moisture/Ambient Light and Humidity Sensor utilizes windshield optics to determine the amount of water on the windshield and will communicate this info to the K9 Body Control Module, which will vary wiping cadence based on the intermittent sensitivity selection on the S82 Windshield Wiper/Washer Switch and the amount of water on the windshield. If the rain sense is disabled the K9 Body

Control will vary the wiping cadence based on a preset amount of time determined by the intermittent delay selection on the S82 Windshield Wiper/Washer Switch. To initiate wiper operation, the K219 Lighting Control Module energizes the KR12B Windshield Wiper Relay. This allows battery voltage from the wiper fuse to be applied through the switched contacts of the KR12B Windshield Wiper Relay, through the normally closed contacts of the KR12C Windshield Wiper Speed Control Relay, to the low speed control circuit of the M75 Windshield Wiper Motor.

High Speed Wiper Operation

With the S82 Windshield Wiper/Washer Switch in the high speed position, the discrete signal circuit to the K9 Body Control Module is pulled down through two resistors in a resistor ladder to a low reference provided by the K9 Body Control Module. The K9 Body Control Module interprets this specific voltage pull-down as a request for wiper activation. In addition to this pull-down signal, a second switch in the S82 Windshield Wiper/Washer Switch is also pulled down to low reference. This signal is a discrete input to the K219 Lighting Control Module. The K219 Lighting Control Module requests wiping operation. To initiate high speed operation, the K219 Lighting Control Module energizes the KR12B Windshield Wiper Relay and grounds the KR12C Windshield Wiper Speed Control Relay. This allows battery voltage from the wiper fuse to be applied through the switched contacts of the KR12B Windshield Wiper Relay, through the switched contacts of the KR12C Windshield Wiper Speed Control Relay, to the windshield wiper motor high speed control circuit of the M75 Windshield Wiper Motor.

Mist (Single Wipe) Operation

The mist (single wipe) position is a momentary switch position that will return the S82 Windshield Wiper/Washer Switch to the off position as soon as the switch is released. With the S82 Windshield Wiper/Washer Switch in the mist (single wipe) position, the discrete signal circuit to the K9 Body Control Module is pulled down through two resistors in a resistor ladder to a low reference provided by the K9 Body Control Module. The K9 Body Control Module interprets this specific voltage pull-down as a request for wiper activation. The K9 Body Control Module communicates with the K219 Lighting Control Module via CAN, requesting consistent low speed wiping operation as long as the S82 Windshield Wiper/Washer Switch is held in the mist (single wipe) position. If the mist (single wipe) position is only briefly selected, the K9 Body Control Module will request only a single wipe.

Wiper Park Operation

With the S82 Windshield Wiper/Washer Switch in the off position, the discrete signal circuit to the K9 Body Control Module is pulled down through one resistor in a resistor ladder to a low reference provided by the K9 Body Control Module. The K9 Body Control Module interprets this specific voltage pull-down as a request to stop wiper activation. The K9 Body Control Module communicates with the K219 Lighting Control Module via CAN, requesting wiper operation stop. At this time, the K219 Lighting Control Module will deactivate the KR12B Windshield Wiper Relay and KR12C Windshield Wiper Speed Control Relay. The relay contacts will

switch back to their normally closed position and will apply ground to the wiper motor power inputs through the normally closed contacts of the wiper relays. This deactivates and dynamically brakes the wiper motor in the park position. When the wiper switch is turned to the OFF position while the wiper motor is somewhere in mid-cycle, the K219 Lighting Control Module will continue to operate the motor until the wipers reach the park position. If the ignition is turned OFF while the wipers are in mid-cycle, the wipers will stop immediately, regardless of position. The K219 Lighting Control Module will park the wipers next time the ignition is turned ON.

The windshield wiper system consists of the following electrical components:

- S82 Windshield Wiper/Washer Switch
- K9 Body Control Module
- K219 Lighting Control Module
- KR12B Windshield Wiper Relay
- KR12C Windshield Wiper Speed Control Relay
- B117A Windshield Outside Moisture/Ambient Light and Humidity Sensor
- M75 Windshield Wiper Motor

Front Windshield Wiper Components

S82 Windshield Wiper/Washer Switch

The S82 Windshield Wiper/Washer Switch is the primary input to the K9 Body Control Module for the driver to control windshield wiper operation. The S82 Windshield Wiper/Washer Switch also provides discrete input to the K219 Exterior Lighting Control Module and M75 Windshield Wiper Motor during high speed wiper operation.

The S82 Windshield Wiper/Washer Switch contains three individual internal switch. One switch changes between mist (single wipe), off, intermittent, low speed, and high speed selection. The second switch changes with differing intermittent sensitivity selection. The third switch is only active when high speed wiper operation is selected. A resistor ladder is also used to determine switch selection and intermittent sensitivity selection. The high speed switch does not utilize the resistor ladder.

The K9 Body Control Module provides the S82 Windshield Wiper/Washer Switch with ground through a single low reference circuit and monitors the switch position through a single signal circuit. Voltage is applied by the K9 Body Control Module to this signal circuit and voltage drop is monitored to determine switch selection. This voltage drop will vary depending on the number of resistors in the resistor ladder, which changes depending on switch position. In the off position, current flows through a single resistor. In the mist (single wipe), low speed, and high speed position, current flows through two resistors. In the intermittent position, current flows through three or more resistors, depending on the intermittent sensitivity selected.

The S82 Windshield Wiper/Washer Switch provides a discrete switch input to the K219 Lighting Control Module during high speed wiper operation. Voltage is applied by the K219 Lighting Control Module to this signal circuit and voltage drop is monitored to

determine switch selection. When high speed operation is selected, the signal circuit is pulled to ground (low reference).

K9 Body Control Module

The K9 Body Control Module will send a CAN message to the K219 Lighting Control Module to request wiper operation. The K9 Body Control Module responds to input requests from the S82 Windshield Wiper/Washer Switch. The K9 Body Control Module provides a constant ground for the S82 Windshield Wiper/Washer Switch and monitors a signal circuit to determine the requested windshield wiper position.

The K9 Body Control Module communicates with the B117A Windshield Outside Moisture/Ambient Light and Humidity Sensor via LIN. Messages are received from the B117A Windshield Outside Moisture/Ambient Light and Humidity Sensor to indicate the amount of water on the windshield.

K219 Lighting Control Module

The K219 Lighting Control Module controls the wiper motor via two PCB relays (KR12B Windshield Wiper Relay and KR12C Windshield Wiper Speed Control Relay). The K219 Lighting Control Module receives a message from K9 Body Control Module over CAN to determine what type of wiper operation is requested.

KR12B Windshield Wiper Relay

The KR12B Windshield Wiper Relay supplies B+ to the M75 Windshield Wiper Motor and is controlled by the K219 Lighting Control Module. The coil side of the relay receives a constant chassis ground and the switch side receives a constant B+. When wiper operation is requested, the K219 Lighting Control Module will provide voltage to the coil side of the relay. This will energize the relay, closing the high current contact, and supply B+ to the M75 Windshield Wiper Motor through the KR12C Windshield Wiper Speed Control Relay, enabling wiper operation.

KR12C Windshield Wiper Speed Control Relay

The KR12C Windshield Wiper Speed Control Relay controls B+ to the M75 Windshield Wiper Motor and is controlled by the K219 Lighting Control Module. The coil side of the relay receives a ground controlled by the K219 Lighting Control Module. The switch side of the relay receives B+ through the KR12B Windshield Wiper Relay. When high speed wiper operation is requested, the K219 Lighting Control Module will provide ground to the coil side of the relay. This will energize the relay, closing the high current contact, and supply the B+ to the M75 Windshield Wiper Motor high speed control, enabling high speed wiper operation.

B117A Windshield Outside Moisture/Ambient Light and Humidity Sensor

Note: Due to the sensitivity of the sensor, the wipers may swipe once upon start up or rapid lighting changes.

The B117A Windshield Outside Moisture/Ambient Light and Humidity Sensor utilizes an internal infrared LED and an optic sensor to determine the amount of water on the windshield. The infrared LED bounces infrared light against the inside of the windshield. The optic sensor measures the amount of light returned after

bouncing off the windshield. With a dry windshield, all light bounced off the windshield is returned to the optic sensor. As water accumulates on the windshield, the light input to the optic sensor is diffused and reduced. The amount of light reduction corresponds directly to the amount of water on the windshield. The B117A Windshield Outside Moisture/Ambient Light and Humidity Sensor interprets the amount of light returned and communicates this info to the K9 Body Control Module, which will control intermittent wiper operation based on the sensitivity selection of the S82 Windshield Wiper/Washer Switch and the amount of water on the windshield.

M75 Windshield Wiper Motor

The M75 Windshield Wiper Motor receives a constant chassis ground. B+ is controlled by the KR12B Windshield Wiper Relay and KR12C Windshield Wiper Speed Control Relay being operated by the K219 Lighting Control Module.

The M75 Windshield Wiper Motor includes a DC motor and an internal position switch to indicate the wiper park position. When wiper operation is requested, the DC motor spins. The spinning motor is directed to a wiping motion through the windshield wiper transmission. When wiper operation is no longer required, the M75 Windshield Wiper Motor will continue spinning until the internal position switch indicates it is in the park position.

Rear Window Wiper Operation

The rear window wiper system allows the driver to clear the vehicle's rear window using a discrete switch. The rear wiper systems use the S82 Windshield Wiper/Washer Switch as the means of control. The S82 Windshield Wiper/Washer Switch is a discrete input to the K9 Body Control Module. The K9 Body Control Module communicates with the M45 Rear Wiper Motor via LIN to control wiper activation.

Low Speed Wiper Operation

With the S82 Windshield Wiper/Washer Switch in the low speed position, the discrete signal circuit to the K9 Body Control Module is pulled down through one resistor in a resistor ladder to a low reference provided by the K9 Body Control Module. The K9 Body Control Module communicates with the M45 Rear Wiper Motor over LIN, requesting consistent low speed wiping operation.

Intermittent Wiper Operation

With the S82 Windshield Wiper/Washer Switch in the intermittent position, the discrete signal circuit to the K9 Body Control Module is pulled down through a two resistors in a resistor ladder to a low reference provided by the K9 Body Control Module. The K9 Body Control Module communicates with the M45 Rear Wiper Motor over LIN, requesting consistent intermittent wiping operation. The K9 Body Control will vary the wiping cadence based on a preset amount of time.

Mist (Single Wipe) Operation

The mist (single wipe) position is a momentary switch position that will return the S82 Windshield Wiper/Washer Switch to the off position as soon as the switch is released. With the S82 Windshield Wiper/Washer Switch in the mist (single wipe) position, the discrete

signal circuit to the K9 Body Control Module is pulled down through three resistors in a resistor ladder to a low reference provided by the K9 Body Control Module. The K9 Body Control Module interprets this specific voltage pull-down as a request for wiper activation. The K9 Body Control Module communicates with the M45 Rear Wiper Motor via LIN, requesting consistent low speed wiping operation as long as the S82 Windshield Wiper/Washer Switch is held in the mist (single wipe) position. If the mist (single wipe) position is only briefly selected, the K9 Body Control Module will request only a single wipe.

Wiper Park Operation

With the S82 Windshield Wiper/Washer Switch in the off position, the discrete signal circuit to the K9 Body Control Module is opened. The K9 Body Control Module interprets this as a request to stop wiper activation. The K9 Body Control Module communicates with the M45 Rear Wiper Motor via LIN, requesting wiper operation stop. The M45 Rear Wiper Motor will park the rear window wiper in their lowest position. When the wiper switch is turned to the OFF position while the wiper motor is somewhere in mid-cycle, the K9 Body Control Module will continue to operate the motor until the wiper reaches the park position. If the ignition is turned OFF while the wipers are in mid-cycle, the wipers will stop immediately, regardless of position. The K9 Body Control Module will park the wipers next time the ignition is turned ON.

The rear window wiper system consists of the following electrical components:

- S82 Windshield Wiper/Washer Switch
- K9 Body Control Module
- M45 Rear Wiper Motor

Rear Window Wiper Components

S82 Windshield Wiper/Washer Switch

The S82 Windshield Wiper/Washer Switch is the primary input to the K9 Body Control Module for the driver to control rear window wiper operation.

The S82 Windshield Wiper/Washer Switch contains one individual internal switch used to request mist (single wipe) off, intermittent, and low speed selection.

The K9 Body Control Module provides the S82 Windshield Wiper/Washer Switch with ground through a single low reference circuit and monitors the switch position through a single signal circuit. Voltage is applied by the K9 Body Control Module to this signal circuit and voltage drop is monitored to determine switch selection. This voltage drop will vary depending on the number of resistors in the resistor ladder, which changes depending on switch position. In the off position, current doesn't flow. In the mist (single wipe) position current flows through three resistors, in the intermittent speed position current flows through two resistors, and in the low speed position, current flows through one resistor.

K9 Body Control Module

The K9 Body Control Module will send a LIN message to the M45 Rear Wiper Motor to request wiper operation. The K9 Body Control Module responds to input requests from the S82 Windshield Wiper/Washer

2-92 Wipers and Washers

Switch. The K9 Body Control Module provides a constant ground for the S82 Windshield Wiper/Washer Switch and monitors a signal circuit to determine the requested windshield wiper position.

M45 Rear Wiper Motor

The M45 Rear Wiper Motor receives a constant B+ and chassis ground.

The M45 Rear Wiper Motor includes a DC motor and an internal position switch to indicate the wiper park position. When wiper operation is requested, the DC motor spins. The spinning motor is directed to a wiping motion through the windshield wiper transmission.

When wiper operation is no longer required, the M45 Rear Wiper Motor will continue spinning until the internal position switch indicates it is in the park position.

Windshield Washer Operation

The windshield washer system allows the driver to clean the vehicle's windshield or rear window using a discrete switch. The washer system uses the S82 Windshield Wiper/Washer Switch as the primary means of driver control. The S82 Windshield Wiper/Washer Switch is a discrete input to the K9 Body Control Module. The K9 Body Control Module communicates with the K219 Lighting Control Module over CAN to control G24 Windshield Washer Pump activation. The K9 Body Control Module also communicates with the K219 Lighting Control Module to control B+ to the M75 Windshield Wiper Motor during operation.

The windshield wiper system consists of the following electrical components:

- S82 Windshield Wiper/Washer Switch
- K9 Body Control Module
- K219 Lighting Control Module
- KR12B Windshield Wiper Relay
- KR6 Rear Window Washer Pump Relay
- KR11 Windshield Washer Pump Relay
- G24 Windshield Washer Pump
- M45 Rear Wiper Motor
- M75 Windshield Wiper Motor
- B118B Windshield Washer Fluid Level Switch

Windshield Washer Components

S82 Windshield Wiper/Washer Switch

The S82 Windshield Wiper/Washer Switch is the primary input to the K9 Body Control Module for the driver to control washer operation.

For front washers, the K9 Body Control Module provides the S82 Windshield Wiper/Washer Switch with ground through a single low reference circuit and monitors the two switch positions through two signal circuits. Voltage is applied by the K9 Body Control Module to the signal circuits and voltage drop is monitored to determine switch selection. For front washers, the S82 Windshield Wiper/Washer Switch contains an internal switch dedicated to front windshield washer operation. When the switch is closed, the signal circuit is pulled to ground, indicating front washer operation is requested. For rear washers,

the switch is part of a resistor ladder. The voltage drop will vary depending on the number of resistors in the resistor ladder. When the switch is closed, the signal circuit is pulled to ground through three resistors, indicating rear washer operation is requested.

K9 Body Control Module

The K9 Body Control Module responds to input requests from the S82 Windshield Wiper/Washer Switch. The K9 Body Control Module provides a constant ground for the S82 Windshield Wiper/Washer Switch and monitors a signal circuit to determine the requested windshield wiper position.

When front washer operation is requested, the K9 Body Control Module will send a CAN message to the K219 Lighting Control Module to enable the G24 Windshield Washer Pump through the KR11 Windshield Washer Pump Relay, as well as supply B+ to the M75 Windshield Wiper Motor for low speed wiper operation.

When rear washer operation is requested, the K9 Body Control Module will send a CAN message to the K219 Lighting Control Module to enable the G24 Windshield Washer Pump through the KR6 Rear Window Washer Pump Relay, as well as send a signal through LIN to the M45 Rear Wiper Motor for low speed wiper operation.

K219 Lighting Control Module

The K219 Lighting Control Module controls B+ to the G24 Windshield Washer Pump. When washer operation is requested from a CAN message from the K9 Body Control Module, the K219 Lighting Control Module will apply voltage via a high side driver to the KR11 Windshield Washer Pump Relay or the KR6 Rear Window Washer Pump Relay. The K219 Lighting Control Module also controls B+ to the M75 Windshield Wiper Motor. When washer operation is requested, the K219 Lighting Control Module will apply voltage via a high side driver to the KR12B Windshield Wiper Relay.

The K219 Lighting Control Module also monitors the B118B Windshield Washer Fluid Level Switch through a discrete signal circuit.

KR12B Windshield Wiper Relay

The KR12B Windshield Wiper Relay supplies B+ to the M75 Windshield Wiper Motor and is controlled by the K219 Lighting Control Module. The coil side of the relay receives a constant chassis ground and the switch side receives a constant B+. When wiper operation is requested, the K219 Lighting Control Module will provide voltage to the coil side of the relay. This will energize the relay, closing the high current contact, and supply B+ to the M75 Windshield Wiper Motor through the KR12C Windshield Wiper Speed Control Relay, enabling wiper operation.

KR6 Rear Window Washer Pump Relay

The KR6 Rear Window Washer Pump Relay supplies B+ to the G24 Windshield Washer Pump and is controlled by the K219 Lighting Control Module. The coil side of the relay receives a constant chassis ground and the switch side receives a constant B+. When washer operation is requested, the K219 Lighting Control Module will provide voltage to the coil side of

the relay. This will energize the relay, closing the high current contact, and supply B+ to the G24 Windshield Washer Pump, enabling washer pump operation.

KR11 Windshield Washer Pump Relay

The KR11 Windshield Washer Pump Relay supplies B+ to the G24 Windshield Washer Pump and is controlled by the K219 Lighting Control Module. The coil side of the relay receives a constant chassis ground and the switch side receives a constant B+. When wiper operation is requested, the K219 Lighting Control Module will provide voltage to the coil side of the relay. This will energize the relay, closing the high current contact, and supply B+ to the G24 Windshield Washer Pump, enabling washer pump operation.

G24 Windshield Washer Pump

The G24 Windshield Washer Pump is a reversible motor that receives a ground through the non activated relay. B+ is controlled by the KR11 Windshield Washer Pump Relay for front washer operation, or the KR6 Rear Window Washer Pump Relay for rear washer operation. With voltage applied, a DC motor spins, connecting and pressurizing washer fluid from the washer fluid reservoir. The pressurized washer fluid is deposited on the windshield or rear window through a series of lines and nozzles.

M45 Rear Window Wiper Motor

The M45 Rear Wiper Motor communicates with the K9 Body Control Module via LIN and responds to requests to turn the rear wipers on and off. The M45 Rear Wiper Motor receives a constant B+ and chassis ground. In operation, the M45 Rear Wiper Motor monitors LIN messages to determine when washer operation is requested. The M45 Rear Wiper Motor will wipe at low speed when washer operation is requested.

The M45 Rear Wiper Motor includes a DC motor and an internal position switch to indicate the wiper park position. When washer operation is requested, the DC motor spins. When wiper operation is no longer required, the M45 Rear Wiper Motor will continue spinning until the internal position switch indicates it is in the park position.

M75 Windshield Wiper Motor

The M75 Windshield Wiper Motor receives a constant chassis ground. B+ is controlled by the KR12B Windshield Wiper Relay and KR12C Windshield Wiper Speed Control Relay being operated by the K219 Lighting Control Module. The M75 Windshield Wiper Motor will wiper at low speed when washer operation is requested.

The M75 Windshield Wiper Motor includes a DC motor and an internal position switch to indicate the wiper park position. When wiper operation is requested, the DC motor spins. The spinning motor is directed to a wiping motion through the windshield wiper transmission. When wiper operation is no longer required, the M75 Windshield Wiper Motor will continue spinning until the internal position switch indicates it is in the park position.

B118B Windshield Washer Fluid Level Switch

The B118B Windshield Washer Fluid Level Switch receives a constant chassis ground. A signal circuit is monitored by the K219 Lighting Control Module. The K219 Lighting Control Module applies voltage to the signal circuit. When the B118B Windshield Washer Fluid Level Switch is closed, voltage on the signal circuit is pulled to ground, indicating fluid in the washer fluid reservoir.

BLANK

Section 3

Brakes

Park Brake	3-3
Description and Operation	3-3
Electronic Parking Brake Description	3-3

BLANK

Park Brake

Description and Operation

Electronic Parking Brake Description

Vehicles with the electric parking brake have a switch in the center console or on the dash, which takes the place of the manual parking brake system, the foot pedal and release handle. In case of insufficient electrical power, the electric parking brake cannot be applied or released.

Electronic Brake Control Module/Brake System Control Module

The parking brake function is integrated into the Electronic Brake Control Module/Brake System Control Module. The module contains the logic for applying and releasing the parking brake when commanded by the Park Brake Switch.

When the Park Brake Switch is pulled, a signal is sent to the Electronic Brake Control Module which will supply 12 V to the apply control circuits and ground to the release control circuits which will cause the left and right park brake actuators to activate causing the park brakes to engage. When the Park Brake Switch is pressed, a signal is sent to the Electronic Brake Control Module which will supply 12 V to the released control circuits and ground to the apply control circuits which will cause the left and right park brake actuators to activate causing the park brakes to release. In some vehicles, the Park Brake Switch is a push-button style switch. When the switch is pressed, the park brakes are commanded to either apply or release based off of their current position.

The Electronic Brake Control Module/Brake System Control Module will diagnose the park brake motor circuits to verify that they are functioning properly. The park brake motor circuits are used to command actuator motor operation, which will apply and release the parking brake. These circuits are used to activate the actuator, which applies or releases park brake shoes.

The Park Brake Motor Position Sensor is an internal sensor to the park brake actuator, this sensor is used to monitor the park brake motor position.

Electric Parking Brake Apply

The electric parking brake can be applied any time the vehicle is stopped or in motion. The electric parking brake is applied by momentarily operating the park brake control switch. The red park brake light will momentarily flash while the parking brake is being applied. Once fully applied, the red park brake light will turn on. If the electric parking brake is applied while the vehicle is in motion, the vehicle will decelerate as long as the switch is being operated. If the switch is operated until the vehicle comes to a stop, the park brake will remain applied.

If the red park brake light is flashing, the electric parking brake is only partially applied or released, or there is a problem with the electric parking brake. A DIC message will display.

The vehicle may automatically apply the electric parking brake in some situations when the vehicle is not moving. This is normal, and is done to periodically check the correct operation of the electric parking brake system.

Electric Parking Brake Release

To release the electric parking brake, turn the ignition switch to the ON or RUN position, apply and hold the brake pedal, and push down momentarily on the park brake control switch. When the electric parking brake is released the red park brake light turns off.

Automatic Electric Parking Brake Release

The parking brake will automatically release if the vehicle is running, placed into gear, and an attempt is made to drive away. Avoid rapid acceleration when the parking brake is applied to preserve parking brake lining life.

BLANK

Section 4

Driver Information and Entertainment

Image Display Cameras	4-3
Schematic and Routing Diagrams	4-3
Image Display Camera Schematics	4-4
Description and Operation	4-8
Rearview Camera Full Display Mirror Description and Operation	4-8
Rear Vision Camera Description and Operation	4-8
Surround Vision Camera Description and Operation	4-8

BLANK

Image Display Cameras

Schematic and Routing Diagrams

Image Display Camera Schematics (Inside Rearview Mirror Camera (DRZ))

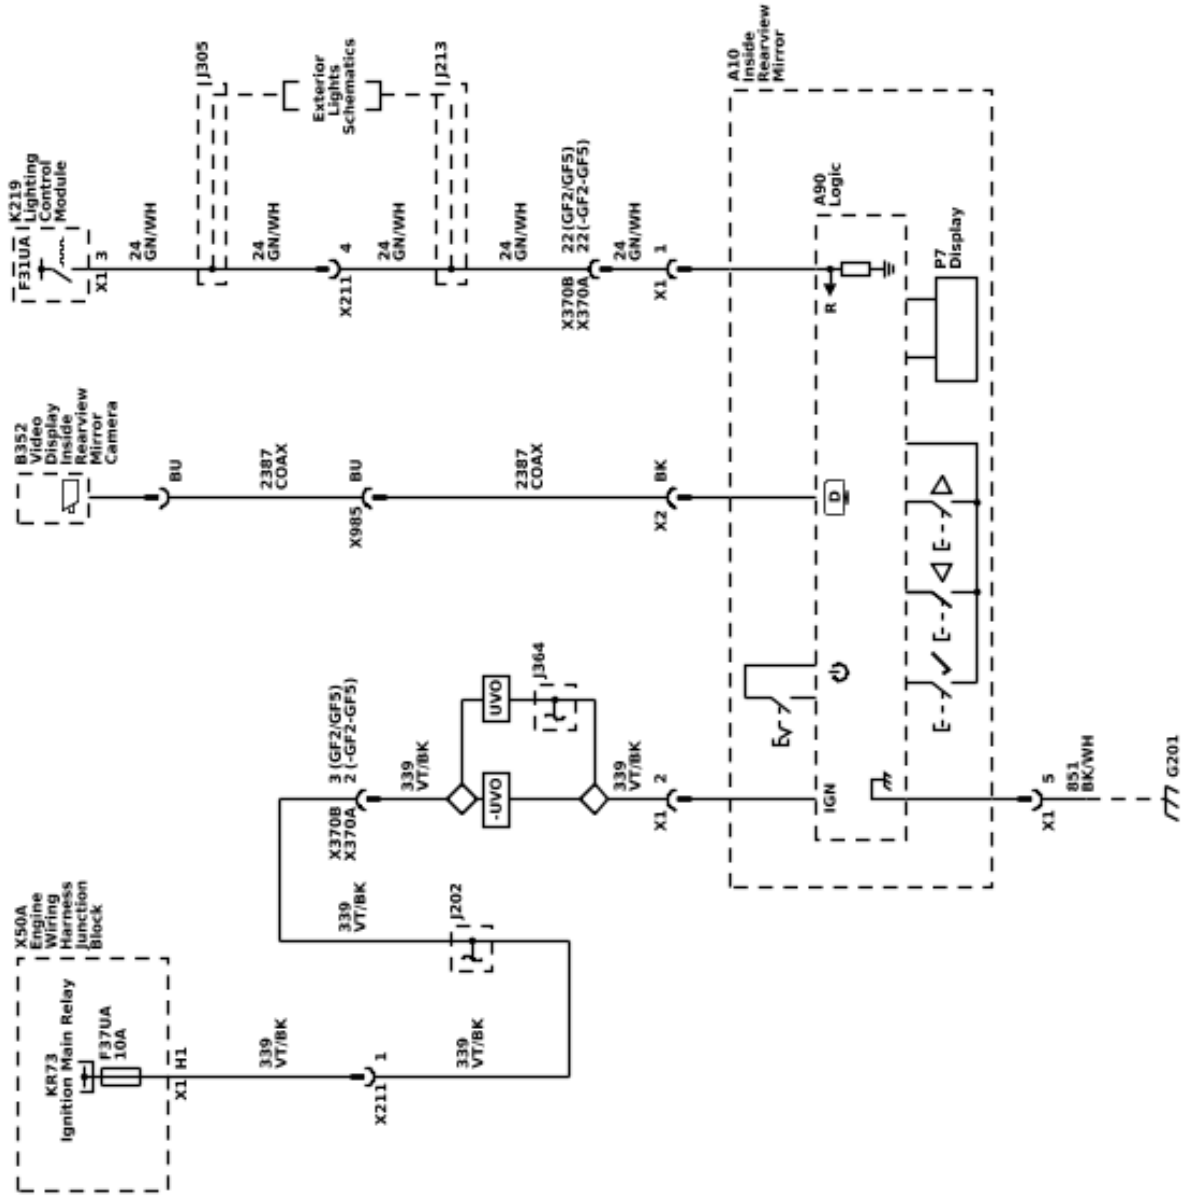



Image Display Camera Schematics (Inside Rearview Mirror Camera (UVO))



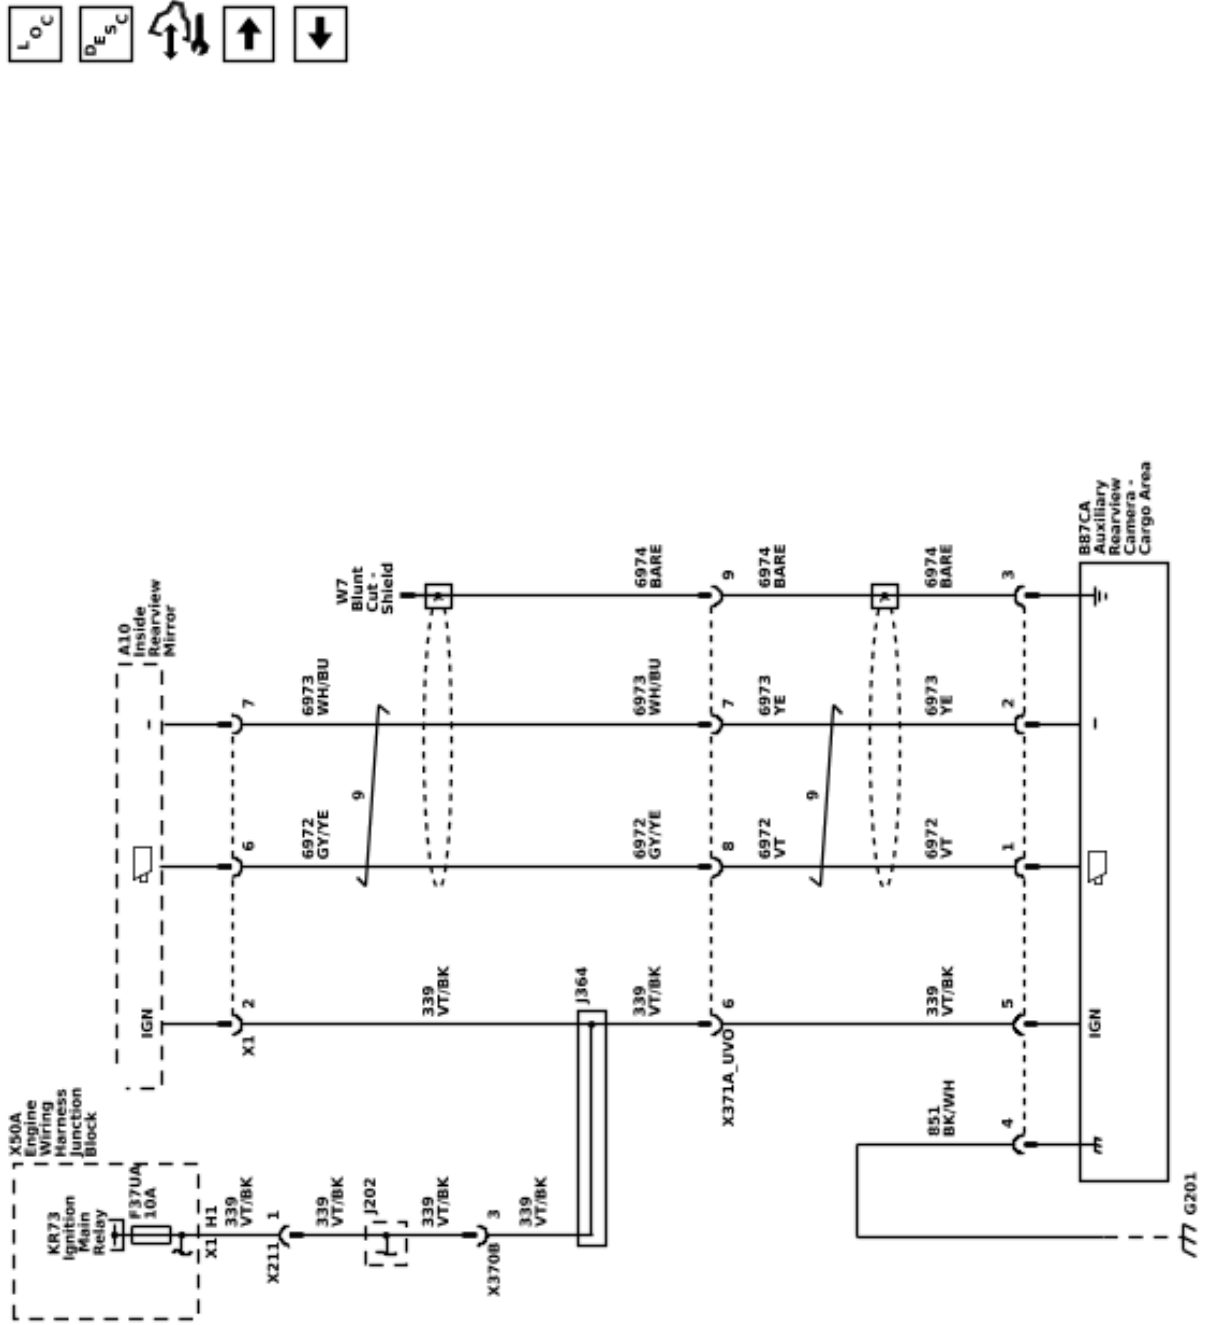


Image Display Camera Schematics (Rearview Driver Information Camera (UVB))

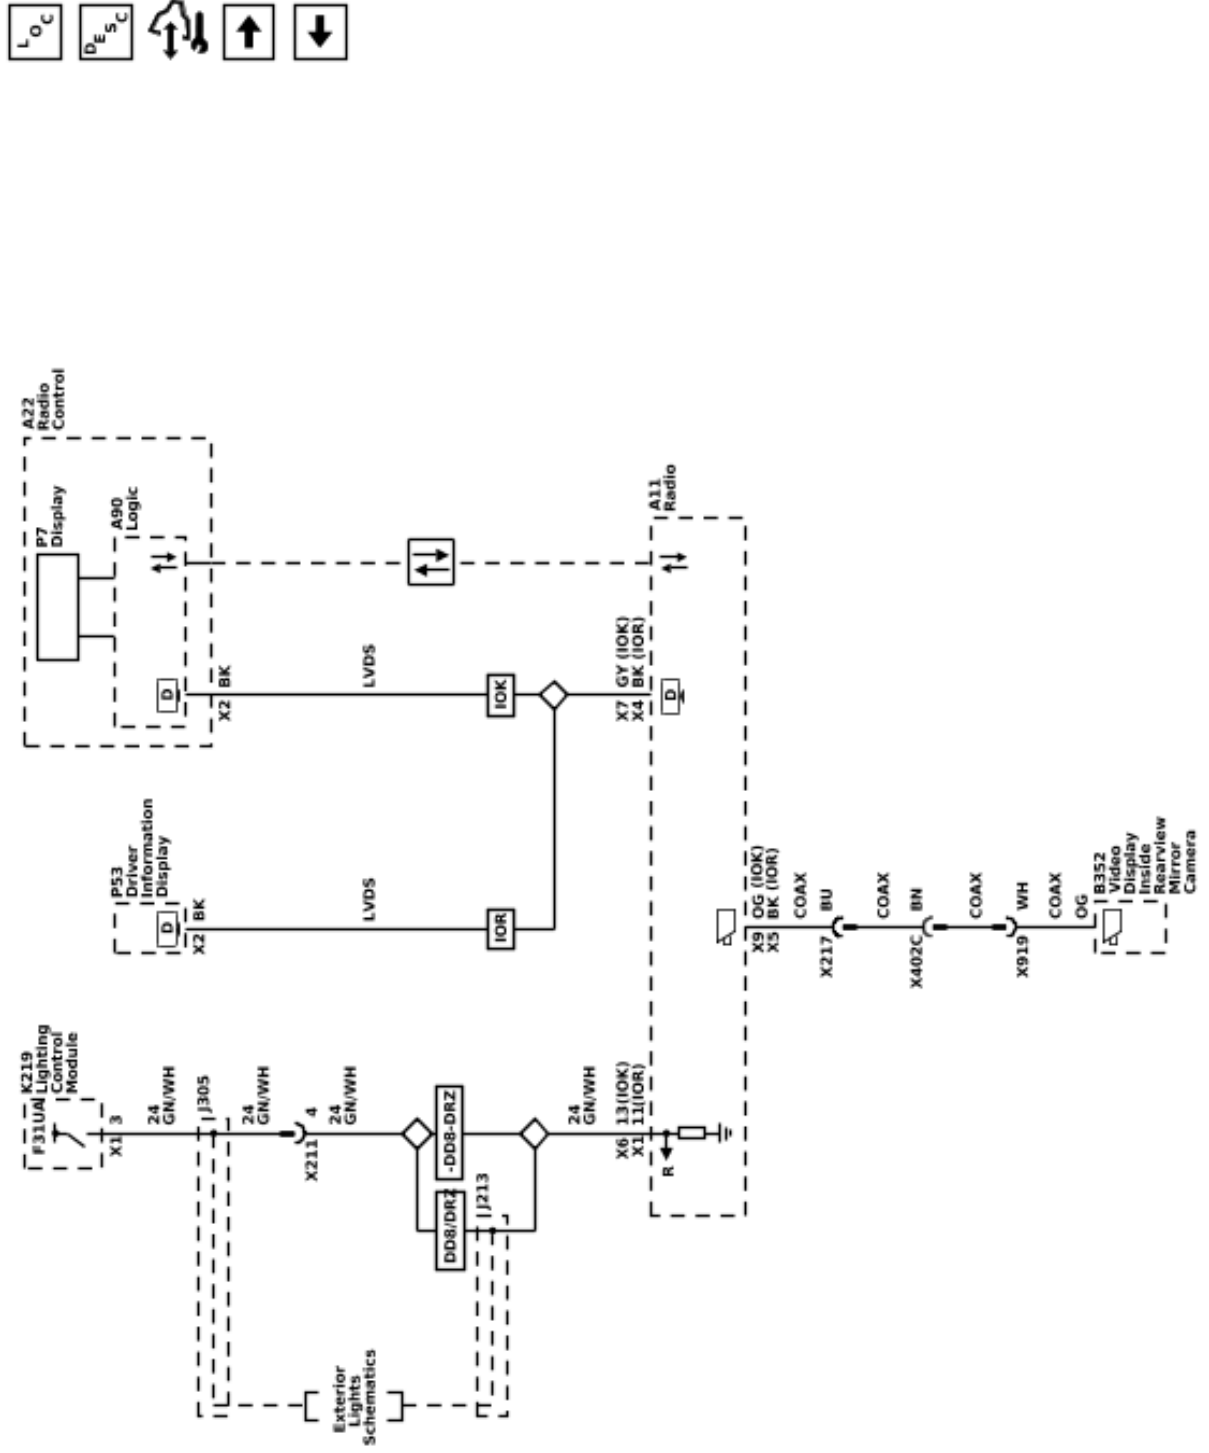

6150204

Image Display Camera Schematics (Surround Vision (UV2))

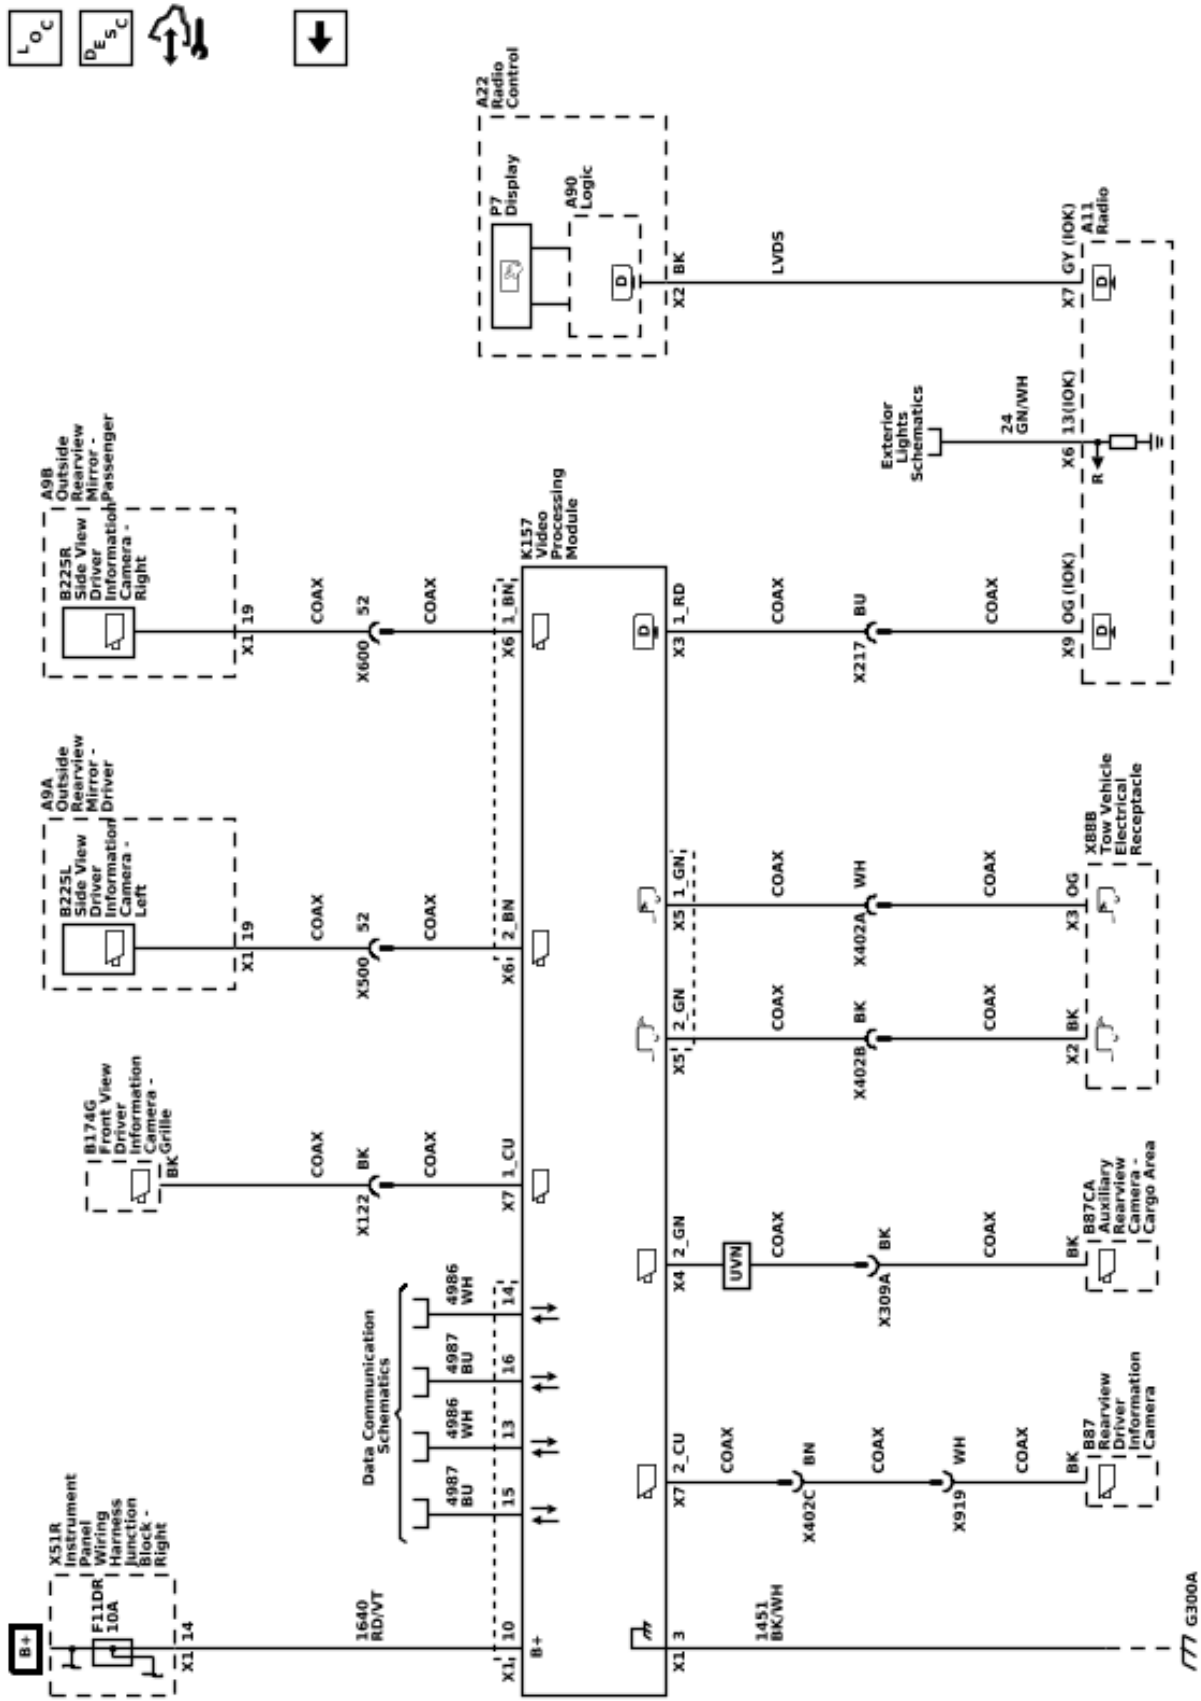

77 G300A

Description and Operation

Rearview Camera Full Display Mirror Description and Operation

If equipped, full display mirror provides a wider field of view than normally seen from the inside rearview mirror to assist when driving and changing lanes. When the tab under the inside rearview mirror is pulled rearward, a view of the area behind the vehicle displays on the mirror. The inside rearview camera full display mirror is connected to the outside rearview camera via a shielded coaxial cable.

When the tab under the inside rearview mirror is pulled rearward, a view of the area behind the vehicle displays on the mirror.

Adjust the rearview mirror for a clear view of the area behind the vehicle before turning on full display mirror. Use the three buttons on the bottom of the mirror to adjust the brightness, zoom, and tilt of the display. Make sure the light sensor is not covered when adjusting the brightness.

The inside rearview camera full display mirror may not work properly or display a clear image if:

- It is dark.
- The sun or the beam of headlamps are shining directly into the camera lens.
- Ice, snow, mud, or anything else builds up on the camera lens. Clean the lens, rinse it with water, and wipe it with a soft cloth.

When the mirror detects that the camera is not sending a valid video signal, it “blue screens” with a “no video” decal for 3 seconds, then reverts back to the mirror.

Rear Vision Camera Description and Operation

Rear Vision Camera System Operation

The rear vision camera system consists of a video camera located at the rear of the vehicle and the Radio.

When the transmission is placed into REVERSE, a signal is sent to the Radio indicating that camera operation is requested. The rearview camera sends video information to the radio through a coax cable. The coax cable also provides power from the Radio to the rearview camera.


The following conditions may cause a degraded rear vision camera image:

- Ice, snow, or mud has built up on the rear vision camera
- Dark conditions
- Extreme light conditions, such as glare from the sun or the headlights of another vehicle
- Damage to the rear of the vehicle
- Extreme high temperatures or extreme temperature changes

If a malfunction is detected in the system, Service Rear Vision Camera may be displayed on the Info Display Module as an indicator to the customer that a problem exists that requires service.


Surround Vision Camera Description and Operation

Warning: The Surround Vision cameras have blind spots and will not display all objects near the corners of the vehicle. Folding outside mirrors that are out of position may not display surround view correctly. Always check around the vehicle when parking or backing.

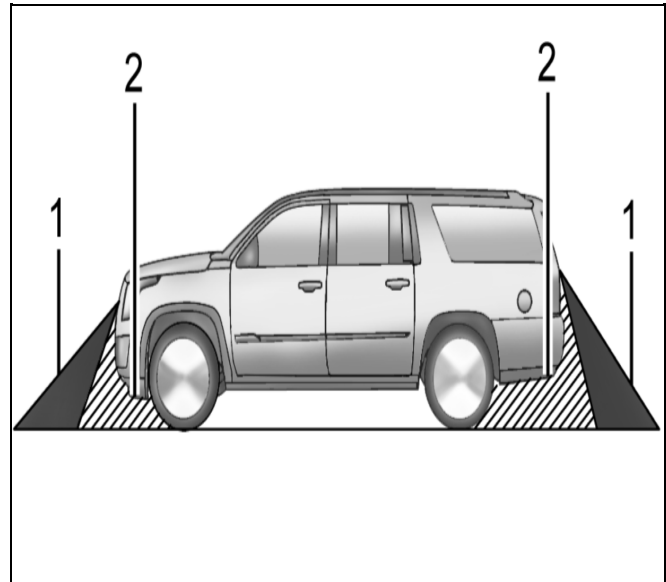

4291164

1. View Displayed by the Surround Vision Camera
2. Area Not Shown

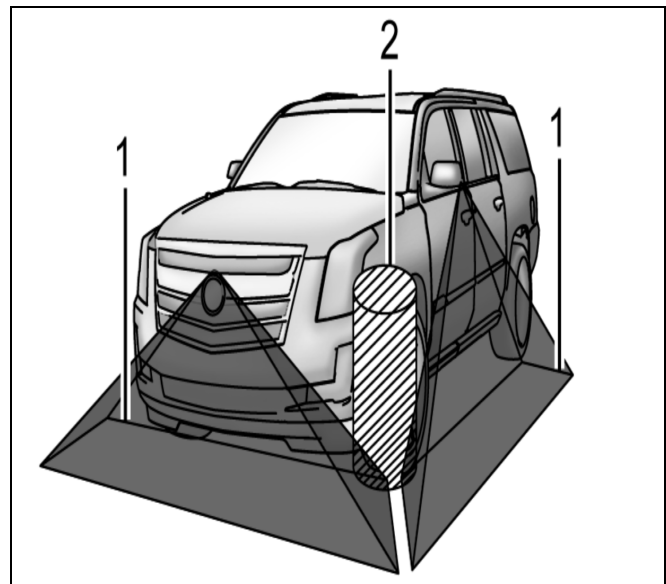

4291749

1. View Displayed by the Surround Vision Camera
2. Area Not Shown

The surround vision camera system consists of the following components:

- B87 Rearview Camera
- B174G Frontview Camera – Grille
- K157 Video Processing Control Module

- A11 Radio **OR** K74 Human Machine Interface Module
- B225L Sideview Camera – Left
- B225R Sideview Camera – Right
- X20 Memory Card Receptacle (with XVR)

When the vehicle is traveling at speeds slower than 6 mph (10kph) the video processing control module will power up the cameras and send a video signal to the radio or human machine interface module.

The following conditions may cause a degraded surround vision camera image:

- Ice, snow, or mud has built up on the rear vision camera
- Dark conditions
- Extreme light conditions, such as glare from the sun or the headlights of another vehicle
- Damage to the rear of the vehicle
- Extreme high temperatures or extreme temperature changes

Surround Vision displays an overhead view of the area surrounding the vehicle, along with the front or rear camera views in the center stack. The front camera is in the grille or near the front emblem, the side cameras are on the bottom of the outside rearview mirrors, and the rear vision camera is above the license plate.

Note: Images from the Sideview Cameras are only displayed when both front doors are properly closed.

Features of the Surround Vision System

- Rear camera (B87 Rearview Camera) view alongside overhead view is displayed in reverse
- Front camera (B174G Frontview Camera – Grille) view alongside overhead view is displayed after shifting out of reverse to Neutral or Drive
- Will display front view when front park assist object is within trigger range calibration value (30 cm (12 in) in a forward gear
- Image is removed from display when vehicle speed exceeds speed calibration (10kph/6 mph) or button press / screen touch

System Operation

The video processing control module is connected to each camera via a shielded coaxial cable. The coaxial cable provides power for the camera and also carries the video image from the cameras to the video processing control module for processing. The video processing control module will then send the processed image output to infotainment system via another coaxial cable.

The video processing module receives various vehicle information (such as steering wheel angle, object detection, etc) from other sources such as parking assist modules and the Body Control Module via serial data. This information is used to produce the enhanced surround vision system images that include a warning triangle that may display if an object is detected nearby. This triangle changes from amber to red and increases in size as the object gets closer to the vehicle. Also, dynamic guidelines are displayed in Reverse to show the projected path of the vehicle based on steering

wheel angle. Due to this use of vehicle information, any faults or DTCs in these related systems can prohibit proper surround vision operation.

If equipped, the video processing control module system may have a memory card receptacle (with XVR) located in the trunk. The memory card receptacle interfaces with the video processing control module via a USB cable. The memory card receptacle also receives fused battery voltage and ground from the video processing control module. The video processing control module uses the memory card as a mass storage device, similar to a USB storage device.

BLANK

Section 5

Engine/Propulsion

Starting, Charging, and Low Voltage Energy



Storage	5-3
Schematic and Routing Diagrams	5-3
Starting and Charging Schematics	5-4
Auxiliary Battery Schematics	5-10
Description and Operation	5-11
Battery Description and Operation	5-11
Charging System Description and Operation ...	5-11
Electrical Power Management Description and Operation	5-14
Starting System Description and Operation	5-16

BLANK


Starting, Charging, and Low Voltage Energy Storage

Schematic and Routing Diagrams


Starting and Charging Schematics (Starting)

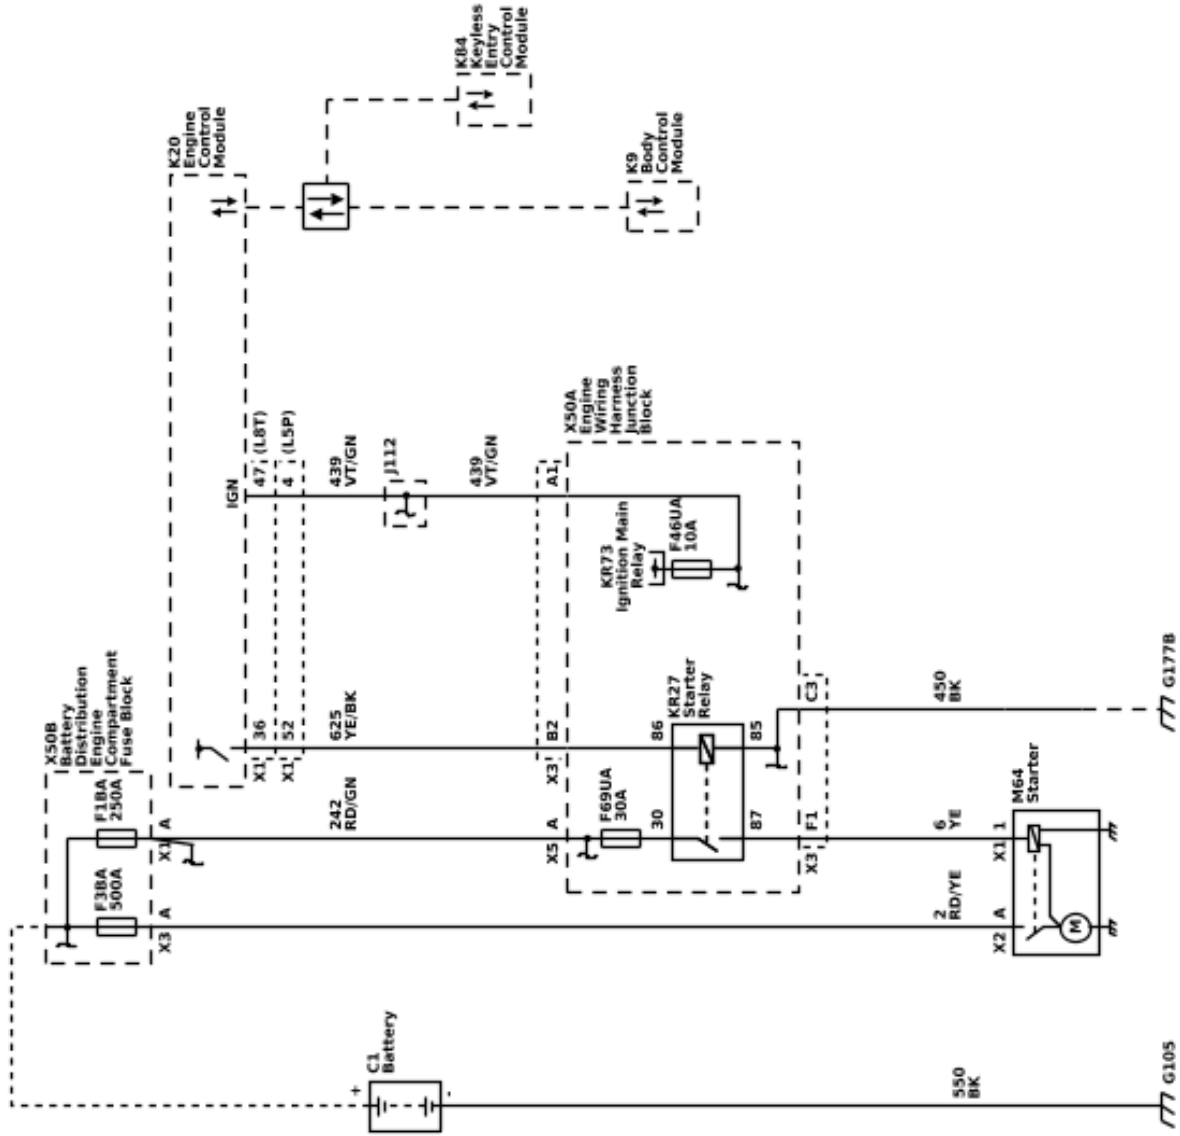


Starting and Charging Schematics (Charging (L8T))

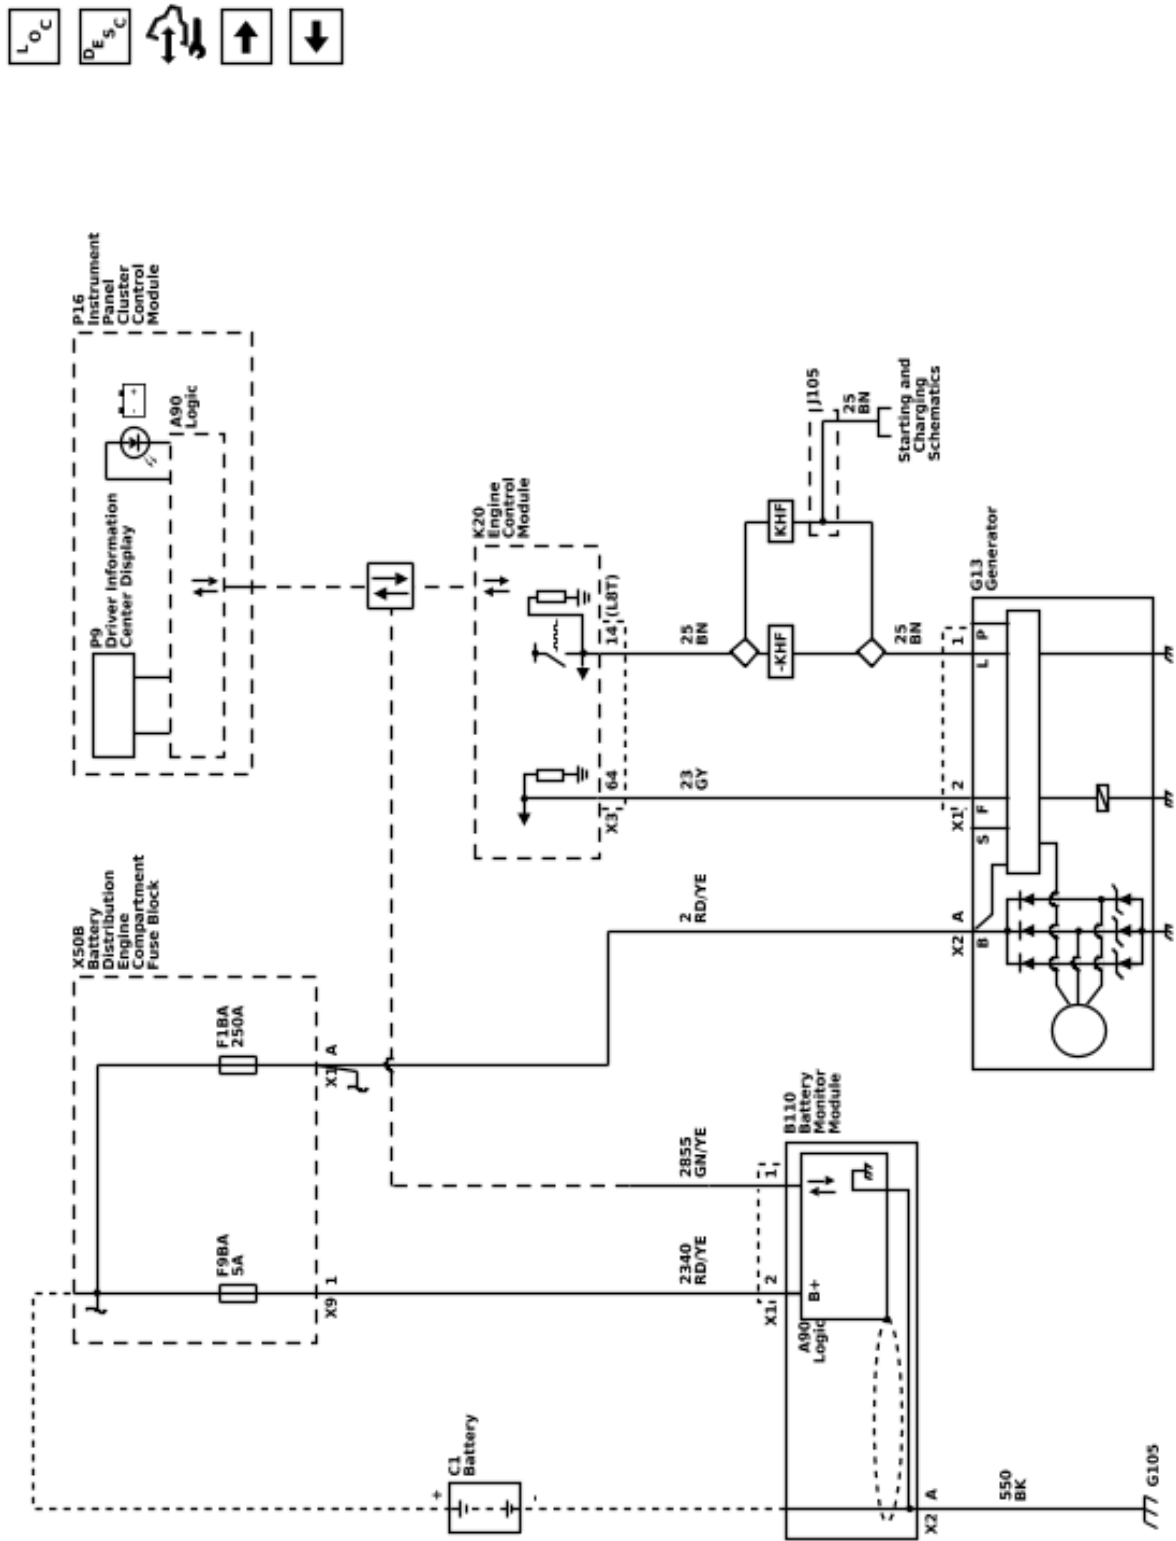


Starting and Charging Schematics (Charging Auxiliary (L8T))

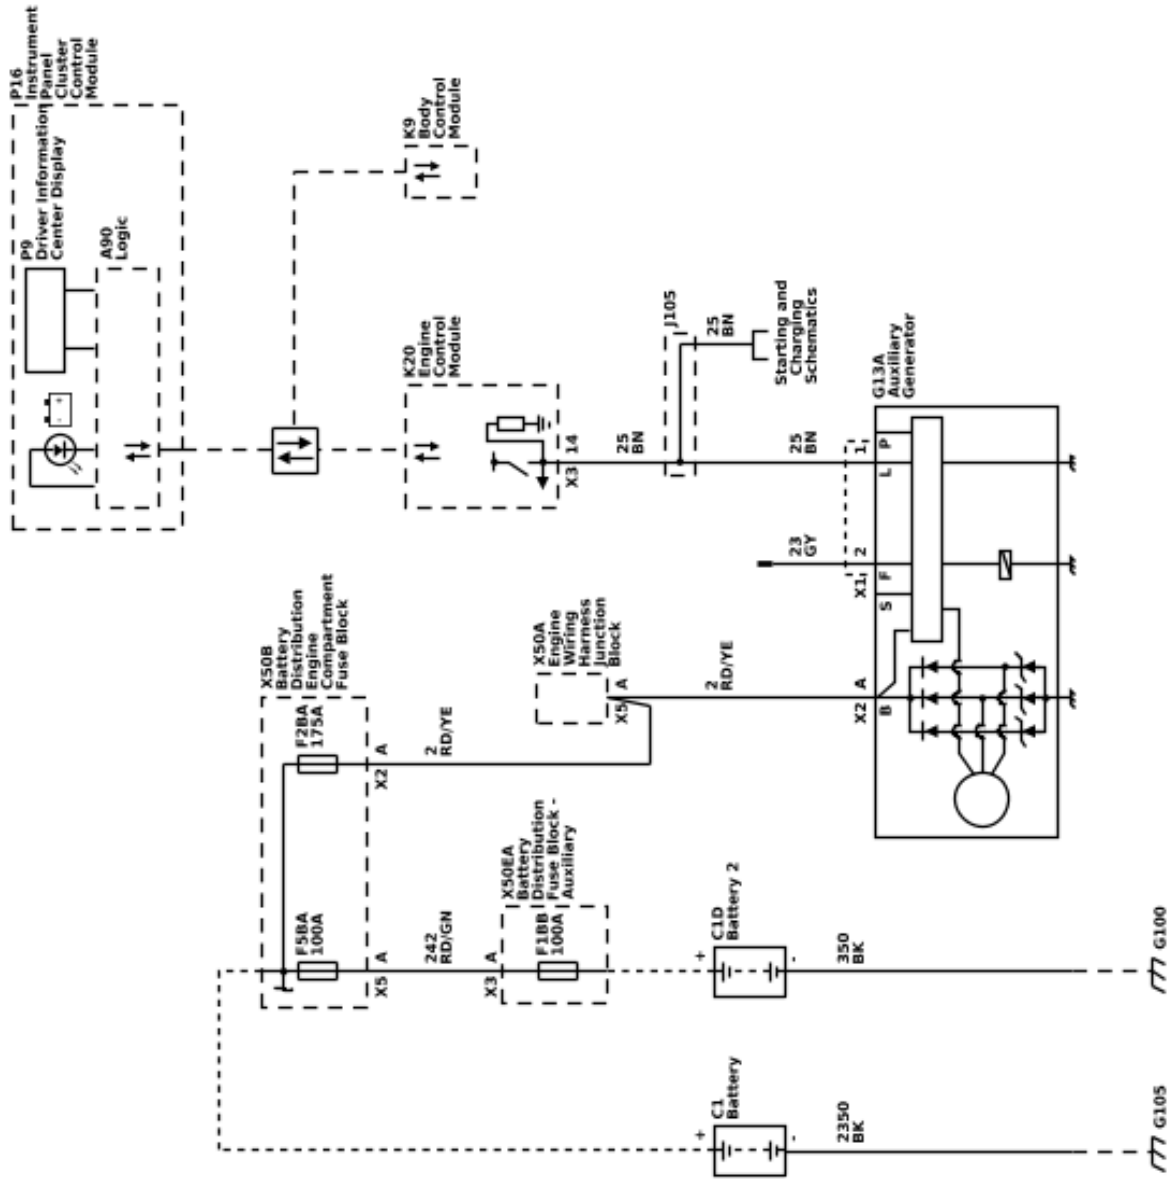


Starting and Charging Schematics (L5P))

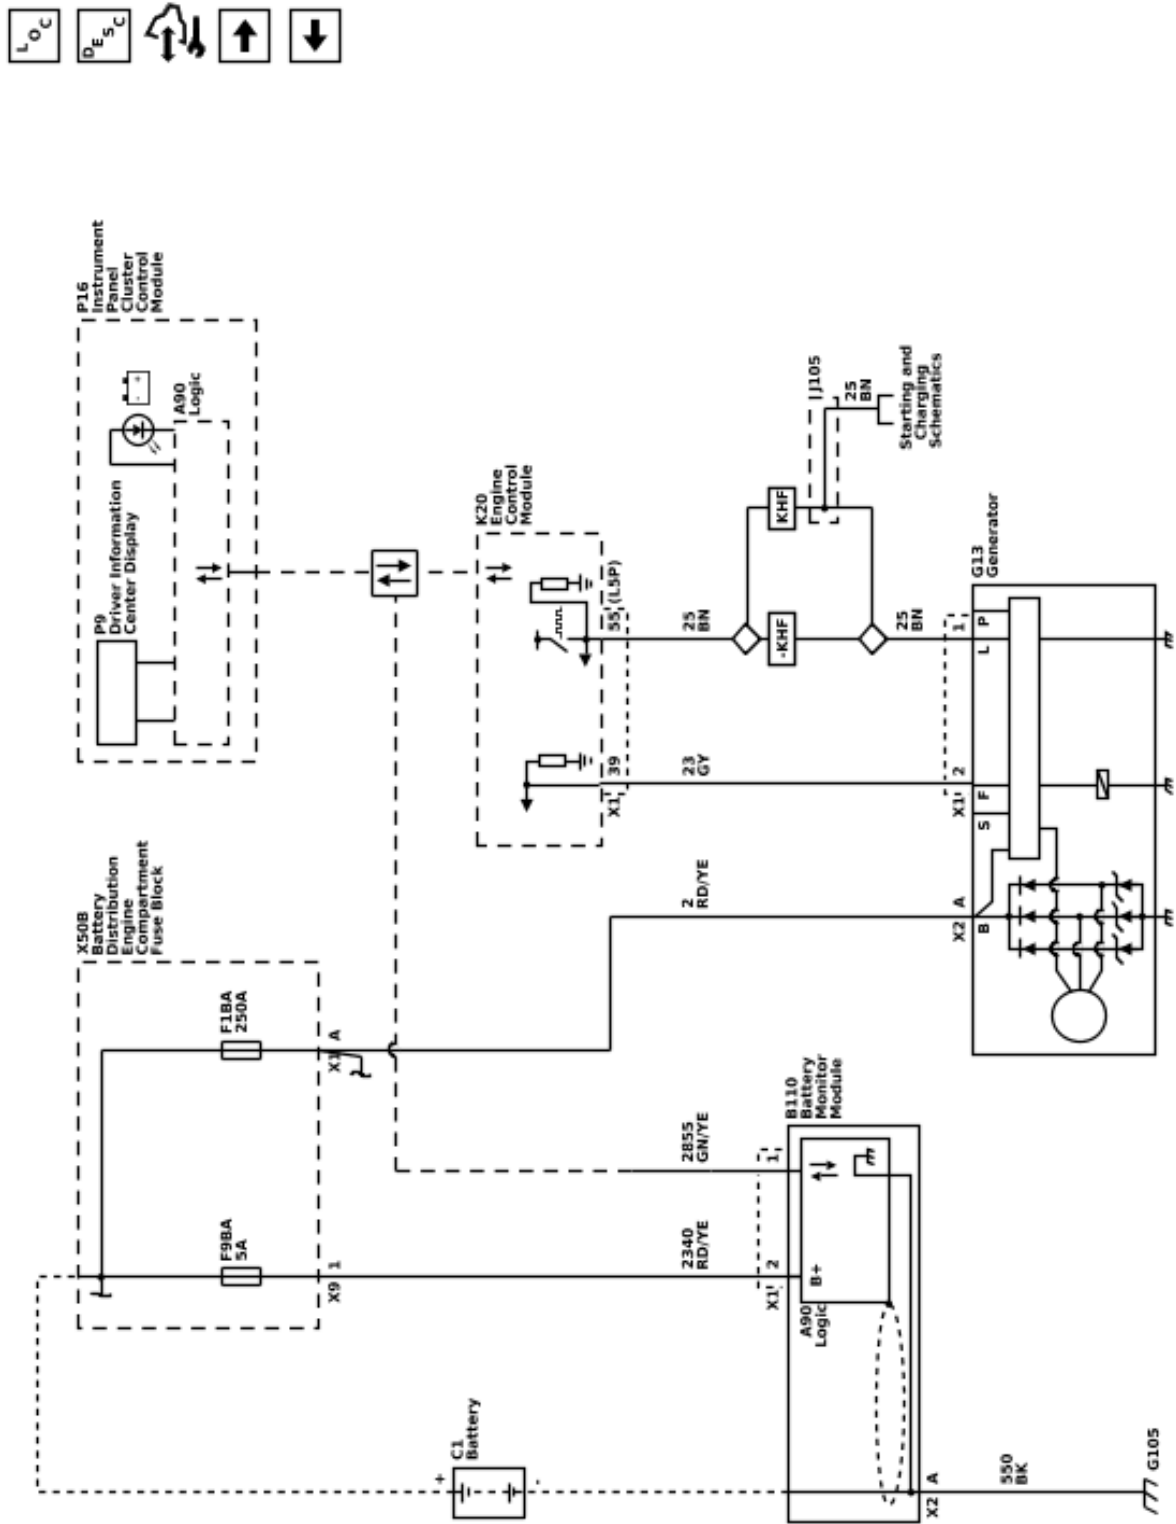


Starting and Charging Schematics (Charging Auxiliary (L5P))

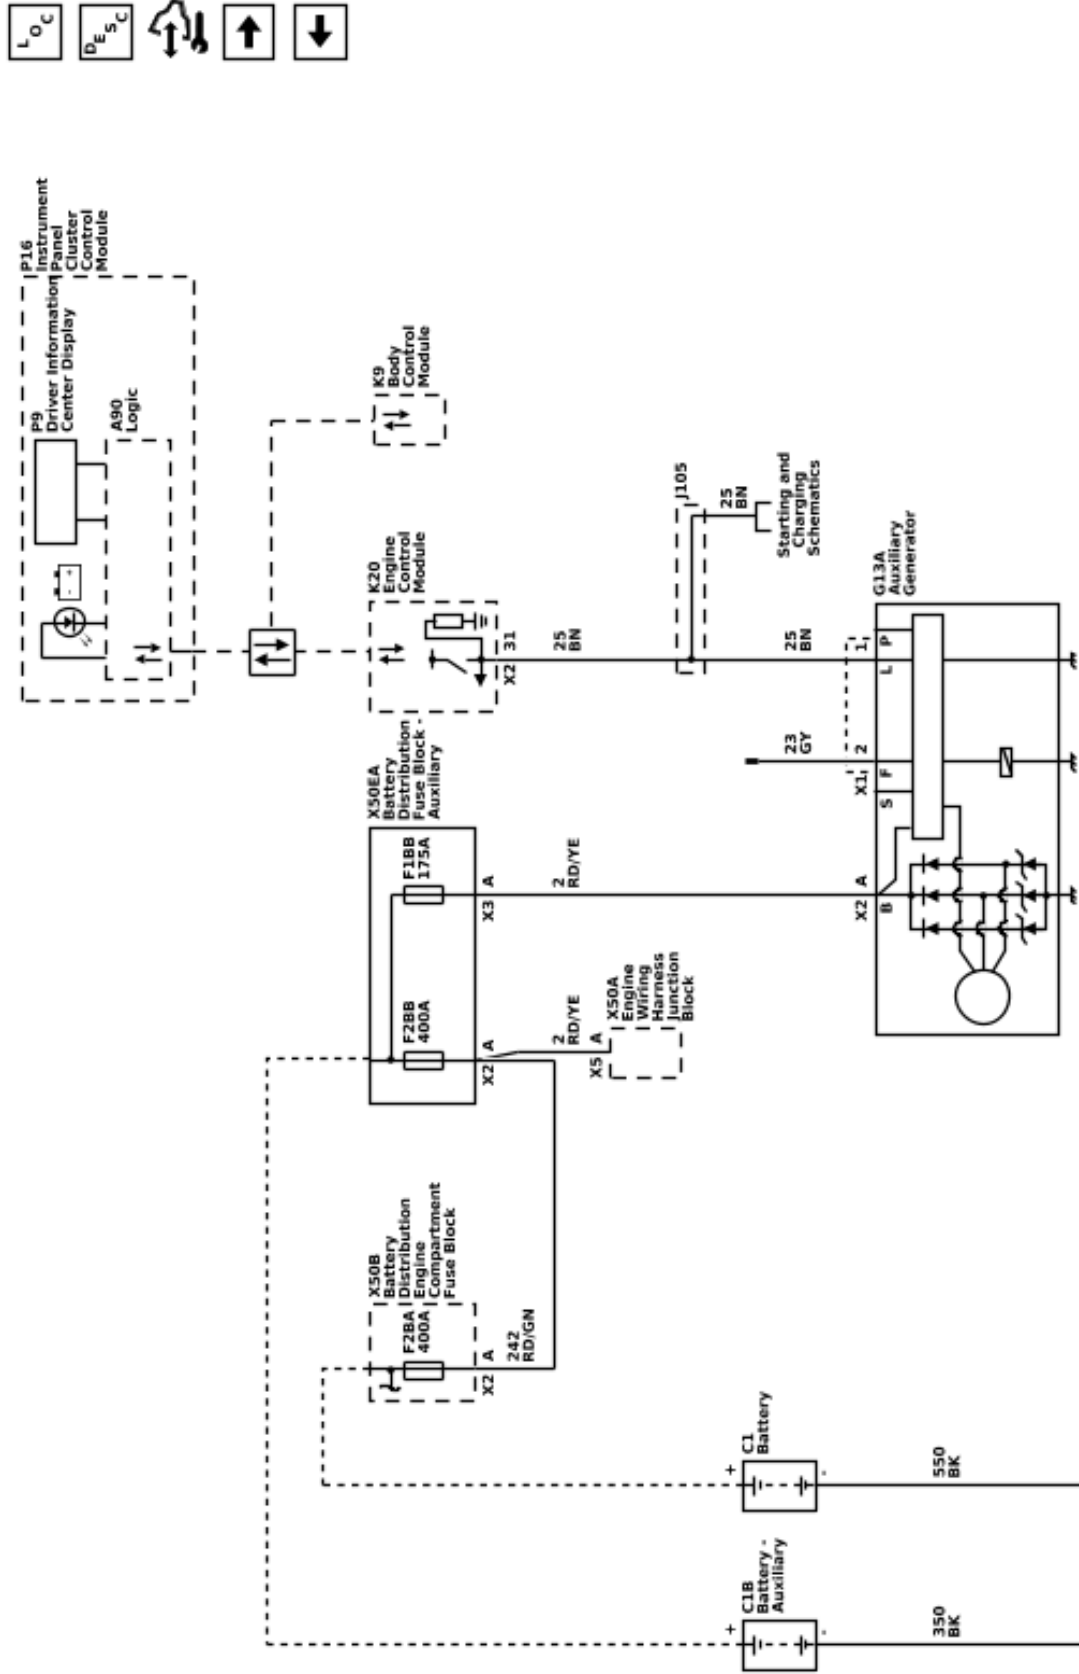

Starting and Charging Schematics (Charging (VYU))

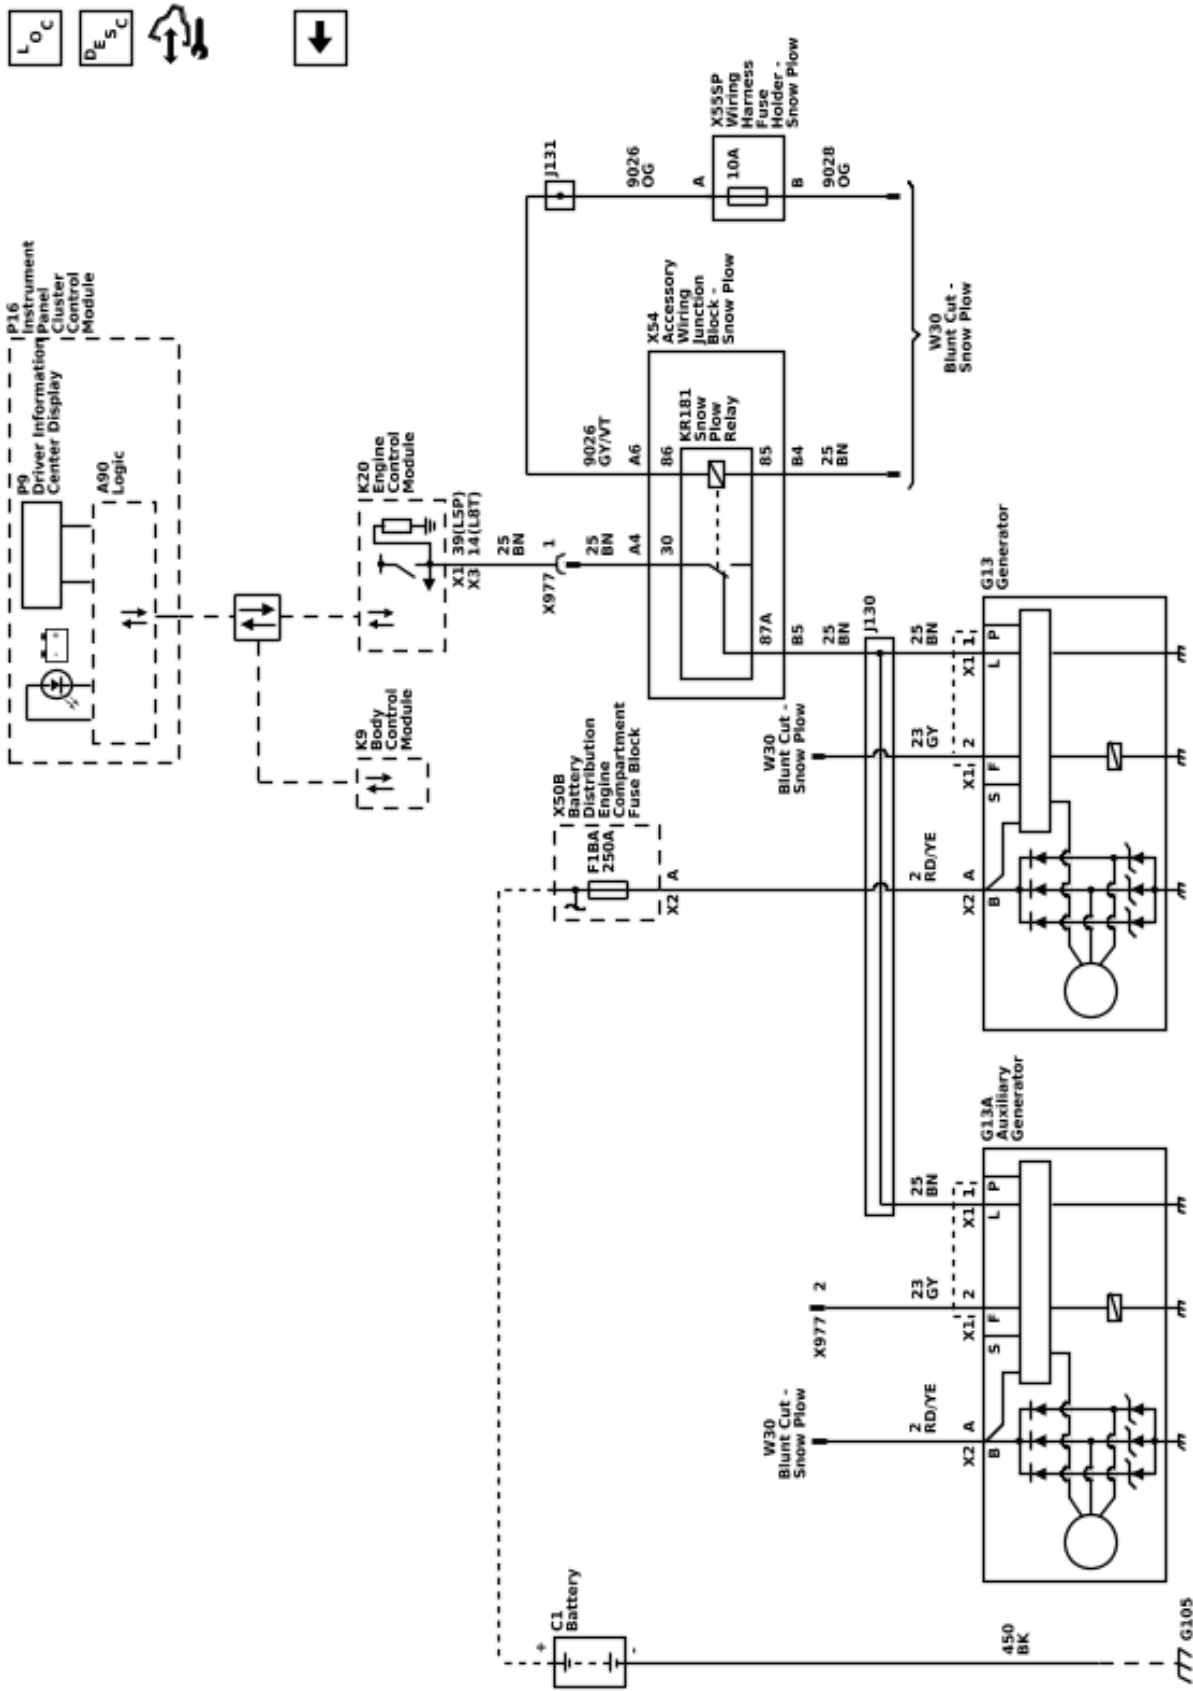

Auxiliary Battery Schematics (Auxiliary Battery Relays (K4Z))

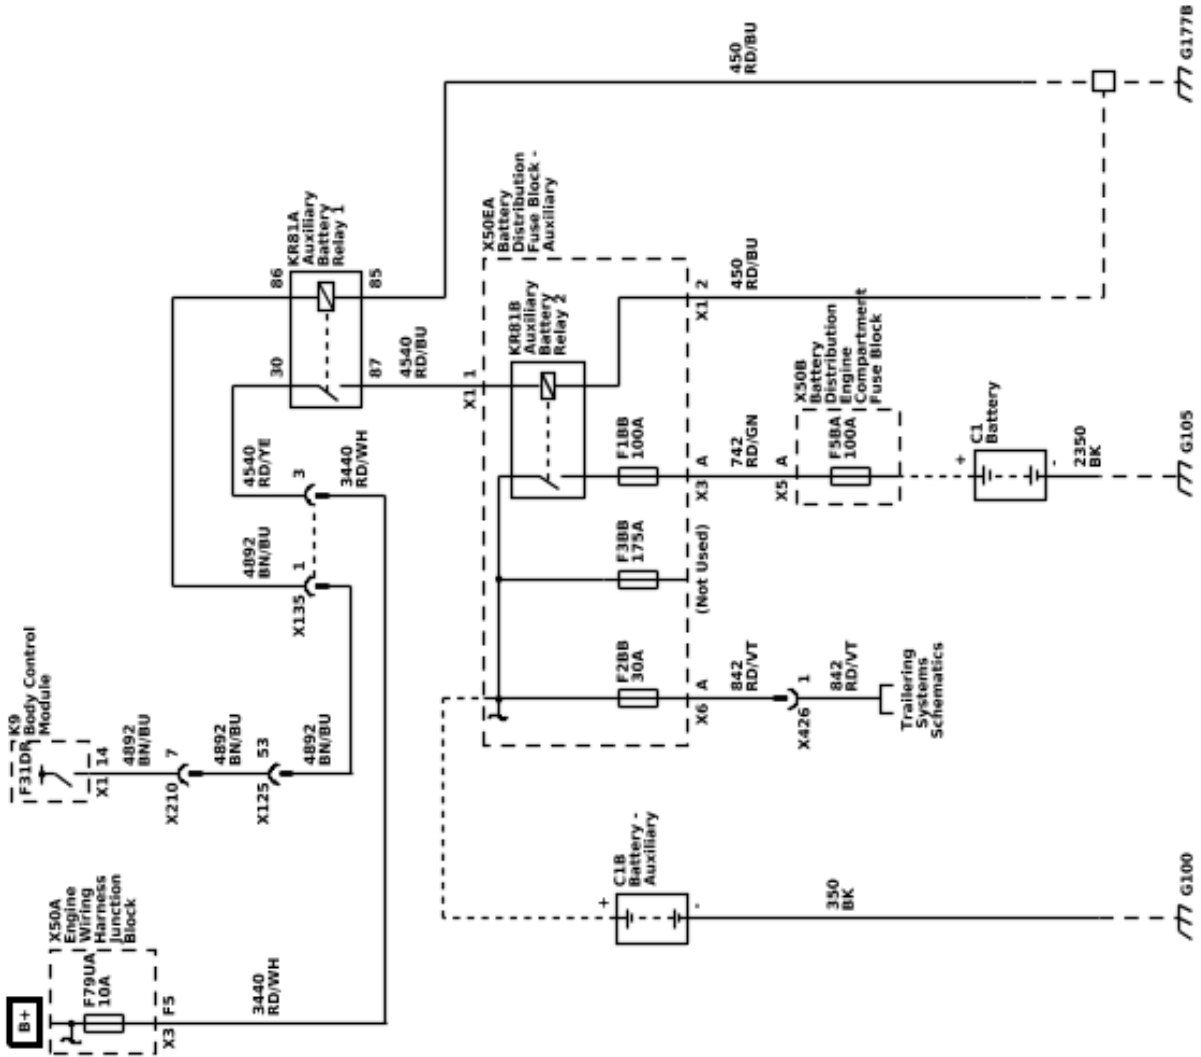

6150214

Description and Operation

Battery Description and Operation

Warning: Batteries produce explosive gases, contain corrosive acid, and supply levels of electrical current high enough to cause burns. Therefore, to reduce the risk of personal injury when working near a battery:

- Always shield your eyes and avoid leaning over the battery whenever possible.
- Do not expose the battery to open flames or sparks.
- Do not allow the battery electrolyte to contact the eyes or the skin. Flush immediately and thoroughly any contacted areas with water and get medical help.
- Follow each step of the jump starting procedure in order.
- Treat both the booster and the discharged batteries carefully when using the jumper cables.

Batteries that are no longer wanted must be disposed of by an approved battery recycler and must never be thrown in the trash or sent to a landfill.

Batteries that are not part of the vehicle itself, not the battery under the hood, must only be transported on public streets for business purposes via approved hazardous material transportation procedures.

Battery storage, charging and testing facilities in repair shops must meet various requirements for ventilation, safety equipment, material segregation, etc.

The maintenance free battery is standard. There are no vent plugs in the cover. The battery is completely sealed except for 2 small vent holes in the side. These vent holes allow the small amount of gas that is produced in the battery to escape.

The battery has 3 functions as a major source of energy:

- Engine cranking
- Voltage stabilizer
- Alternate source of energy with generator overload

Battery Low Start Vehicle Message

The body control module (BCM) monitors battery positive voltage to determine battery state of charge. If one or more of the BCM battery positive voltage terminals measure less than approximately 11.6V compared to the BCM ground circuits, this message will display and four chimes may sound. Start the vehicle immediately. If the vehicle is not started and the battery continues to discharge, the climate controls, heated seats, and audio systems will shut off and the vehicle may require a jump start. These systems will function again after the vehicle is started.

Battery Ratings

A battery has 2 ratings:

- Cold cranking amperage
- Amperage hours

When a battery is replaced use a battery with similar ratings. See battery specification label on the original battery.

Amperage Hours

The amperage hour rating tells you how much amperage is available when discharged evenly over a 20 hour period. The amperage hour rating is cumulative, so in order to know how many constant amperage the battery will output for 20 h, you have to divide the amperage hour rating by 20. Example: If a battery has an amperage hour rating of 74, dividing by 20 = 3.75. Such a battery can carry a 3.75 A load for 20 hours before dropping to 10.5 V. (10.5 V is the fully discharged level, at which point the battery needs to be recharged.) A battery with an amperage hour rating of 55 will carry a 2.75 A load for 20 hours before dropping to 10.5 V.

Cold Cranking Amperage

The cold cranking amperage is an indication of the ability of the battery to crank the engine at cold temperatures. The cold cranking amperage rating is the minimum amperage the battery must maintain for 30 seconds at -18°C (0°F) while maintaining at least 7.2 V. See battery label for the cold cranking amperage rating of this battery.

Charging System Description and Operation

Electrical Power Management Overview

The electrical power management system is designed to monitor and control the charging system and send diagnostic messages to alert the driver of possible problems with the battery and generator. This electrical power management system primarily utilizes existing on-board computer capability to maximize the effectiveness of the generator, to manage the load, improve battery state-of-charge and life, and minimize the system's impact on fuel economy. The electrical power management system performs 3 functions:

- Monitor the battery voltage and estimate the battery condition
- Take corrective actions by boosting idle speeds, and adjusting the regulated voltage
- Perform diagnostics and driver notification

The battery condition is estimated during ignition/vehicle off and during ignition/vehicle on. During ignition/vehicle off the state-of-charge of the battery is determined by measuring the open-circuit voltage. The state-of-charge is a function of the acid concentration and the internal resistance of the battery, and is estimated by reading the battery open circuit voltage when the battery has been at rest for several hours.

Any time the ignition/vehicle is on, the vehicle algorithm continuously estimates battery state-of-charge based on adjusted net amp hours, battery capacity, initial state-of-charge, and calculated temperature.

While the engine is running, the battery degree of discharge is primarily determined by the integrated battery current sensor, to obtain net amp hours.

5-12 Starting, Charging, and Low Voltage Energy Storage

In addition, the electrical power management function is designed to perform regulated voltage control to improve battery state-of-charge, battery life, and fuel economy. This is accomplished by using knowledge of the battery state-of-charge and temperature to set the charging voltage to an optimum battery voltage level for recharging without detriment to battery life.

Charging System Components

Generator

The engine drive belt drives the generator. When the rotor is spun, it induces an alternating current (AC) into the stator windings. The AC voltage is then sent through a series of diodes for rectification. The rectified voltage has been converted into a direct current (DC) for use by the vehicles electrical system to maintain electrical loads and the battery charge. The voltage regulator integral to the generator controls the output of the generator; it is not serviceable. The voltage regulator controls the amount of current provided to the rotor. If the generator has field control circuit fault, the generator defaults to an output voltage of 13.8 V.

The generator is serviced as a complete assembly. If there is a diagnosed fault in the generator, it must be replaced as an assembly.

Generator Pulley

The pulley drives the Generator via the engine drive belt. There are 2 types of pulleys:

1. Conventional solid Pulley which is bolted to the Generator stator shaft. This Pulley can be serviced separately.
2. One Way Clutch Pulley or Overrunning Alternator Decoupler Pulley allows the Generator to spin freely when the engine rapidly slows down on sudden deceleration. This part is not serviceable and the Generator needs to be replaced as an assembly.

Body Control Module (BCM)

The BCM communicates with the Engine Control Module (ECM) and the instrument cluster for electrical power management operation. The BCM determines the output of the generator and sends the information to the ECM for control of the generator turn on signal circuit. It monitors the generator field duty cycle signal circuit information sent from the ECM for control of the generator. It monitors the battery current sensor, the battery positive voltage circuit, and estimates battery temperature to determine battery state of charge. The BCM also performs idle boost.

Battery Sensor Module (if applicable)

The BCM monitors the Battery Sensor Module for battery state of current, state of health, and battery charge via serial data. If the battery is determined to be in poor state of health or having a low state of charge, the BCM will not allow the ECM to perform an auto-stop.

Engine Control Module (ECM)

When the engine is running, the generator turn-on signal is sent to the generator from the ECM, turning on the regulator. The generator's voltage regulator controls current to the rotor, thereby controlling the output voltage. The rotor current is proportional to the

electrical pulse width supplied by the regulator. When the engine is started, the regulator senses generator rotation by detecting AC voltage at the stator through an internal wire. Once the engine is running, the regulator varies the field current by controlling the pulse width. This regulates the generator output voltage for proper battery charging and electrical system operation. The generator field duty terminal is connected internally to the voltage regulator and externally to the ECM. When the voltage regulator detects a charging system problem, it grounds this circuit to signal the ECM that a problem exists. The ECM monitors the generator field duty cycle signal circuit, and receives control decisions based on information from the BCM.

Instrument Cluster

As a means of displaying the charging system functions, some vehicles may be equipped with a voltmeter gauge on the instrument cluster and/or a system voltage display in the driver information center. These will indicate the current vehicle system voltage.

The instrument cluster also provides customer notification if there is a concern with the charging system. There are two means of notification: a charge indicator on the instrument cluster and/or a service system message displayed on the Driver Information Center (DIC) if equipped.

Charging System Operation

The purpose of the charging system is to maintain the battery charge and vehicle loads. There are 6 modes of operation and they include:

- Battery Sulfation Mode
- Charge Mode
- Fuel Economy Mode
- Head lamp Mode
- Start Up Mode
- Voltage Reduction Mode

The ECM Controls the Generator through the generator turn-on signal circuit, also known as the Generator L-terminal. The ECM monitors the generator performance through the Generator field duty cycle signal circuit, also known as the generator F-terminal.

The Generator turn-on signal (Generator L-terminal) is a Pulse Width Modulation (PWM) signal of 128 Hz with a duty cycle of 0–100%. Normal duty cycle is between 5–95%. 0–5% and 95–100% are for diagnostic purposes, with 0–5% monitoring for an open circuit and 95–100% monitoring for a short to ground at a fixed 13.8 V. The following table shows the commanded duty cycle and output voltage of the Generator:

Commanded Duty Cycle	Generator Output Voltage (+/- .25 V)
0–5%	13.8 V
10%	11 V
20%	11.56 V
30%	12.13 V
40%	12.69 V
50%	13.25 V
60%	13.81 V

Commanded Duty Cycle	Generator Output Voltage (+/- .25 V)
70%	14.38 V
80%	14.94 V
90%	15.5 V
95–100%	13.8 V

The Generator provides a PWM feedback signal of the Generator voltage output through the Generator field duty cycle signal circuit to the ECM. This information is sent to the Body Control Module (BCM). The Generator field duty cycle signal (Generator F-terminal) is a PWM signal of 60–460 Hz with a duty cycle of 0–100%. Normal duty cycle is between 5–100%. 0–5% is reserved for diagnostic purposes.

As the charging systems works to maintain the battery charge and manage vehicle electrical loads, it is normal for the voltmeter gauge on the instrument cluster or the system voltage displayed in the DIC to fluctuate or change. This does not indicate a malfunction. Depending on the battery state of charge and the vehicle electrical load, these values may be anywhere from 12.5 V to 15.5 V.

Charging System Modes

Battery Sulfation Mode

The BCM will enter this mode when the interpreted Generator output voltage is less than 13.2 V for 45 minutes. When this condition exists the BCM will enter Charge Mode for 2–3 minutes. The BCM will then determine which mode to enter depending on voltage requirements.

Charge Mode

The BCM will enter Charge Mode when ever one of the following conditions are met:

- Windshield wipers are ON for more than 3 s.
- Climate Control Voltage Boost Mode Request is true, as sensed by the HVAC control module via serial data. High speed cooling fan, rear defogger, and HVAC high speed blower operation can cause the BCM to enter the Charge Mode.
- The estimated battery temperature is less than 0° C (32°F).
- Battery State of Charge is less than 80%.
- Vehicle speed is greater than 145 km/h (90 mph)
- A current sensor malfunction exists.
- System voltage is determined to be below 12.56 V

When any one of these conditions is met, the system will set targeted generator output voltage to a charging voltage between 13.9–15.5 V, depending on the battery state of charge and estimated battery temperature.

Fuel Economy Mode

The BCM will enter Fuel Economy Mode when the estimated battery temperature is at least 0° C (32°F) but less than or equal to 80° C (176°F), the calculated battery current is less than 15 A and greater than –8 A, and the battery state-of-charge is greater than or equal to 80%. Its targeted generator output voltage is the open circuit voltage of the battery and can be between 12.5–13.1 V. When fuel economy mode is active, the

generator is not charging, only maintaining open circuit battery voltage. The BCM will exit this mode and enter Charge Mode when any of the conditions described above are present.

Headlamp Mode

The BCM will enter Headlamp Mode when ever the head lamps are ON (high or low beams). Voltage will be regulated between 13.9–14.5 V.

Start Up Mode

When the engine is started the BCM sets a targeted generator output voltage of 14.5 V for 30 s.

Tow/Haul Mode (if applicable)

Pressing the Tow/Haul Mode button located on the center stack, the vehicle system voltage is raised and the remote (non-vehicle) battery will be charged. Having the headlamps on will raise the system voltage and if the Tow/Haul button is applied it will not serve any purpose. The voltage is regulated between 13.9–14.5 V.

Instrument Cluster Operation

Charge Indicator Operation

The instrument cluster illuminates the charge indicator and displays a warning message in the driver information center if equipped, when the one or more of the following occurs:

- The ECM detects that the generator output is less than 11 V or greater than 16 V. The instrument cluster receives a serial data message from the ECM requesting illumination.
- The instrument cluster determines that the system voltage is less than 11 V or greater than 16 V for more than 30 s. The instrument cluster receives a serial data message from the BCM indicating there is a system voltage range concern.
- The instrument cluster performs the displays test at the start of each ignition cycle. The indicator illuminates for approximately 3 s.

Driver Information Center Message: BATTERY NOT CHARGING SERVICE CHARGING SYSTEM or SERVICE BATTERY CHARGING SYSTEM

The BCM and the ECM will send a serial data message to the driver information center for the BATTERY NOT CHARGING SERVICE CHARGING SYSTEM or SERVICE BATTERY CHARGING SYSTEM message to be displayed. It is displayed when a charging system DTC is a current DTC. The message is turned off when the conditions for clearing the DTC have been met.

Voltmeter Gauge and/or System Voltage Display (if equipped)

As a means of displaying the charging system functions, some vehicles may be equipped with a voltmeter gauge on the instrument cluster and/or a system voltage display in the driver information center. These will indicate the current vehicle system voltage.

As the charging systems works to maintain the battery charge and manage vehicle electrical loads, it is normal for the voltmeter gauge on the instrument cluster or the system voltage display in the driver information center to fluctuate or change. This does not indicate a

5-14 Starting, Charging, and Low Voltage Energy Storage

malfunction. Depending on the battery state of charge and the vehicle electrical load, these values may be anywhere from 12.5 V to 15.5 V.

Electrical Power Management Description and Operation

Electrical Power Management

The electrical power management is used to monitor and control the charging system and alert the driver of possible problems within the charging system. The electrical power management system makes the most efficient use of the generator output, improves the battery state-of-charge, extends battery life, and manages system electrical loads.

The load shed operation is a means of reducing electrical loads during a low voltage or low battery state-of-charge condition.

The idle boost operation is a means of improving generator performance during a low voltage or low battery state-of-charge condition.

Each electrical power management function, either idle boost or load shed, is activated in incremental steps. For example, idle boost 1 must be active before idle boost 2 can be active. The criteria used by the body control module (BCM) to regulate electrical power management are outlined below:

Idle Boost and Load Shed With Current Sensor

Function	Battery Temperature Calculation	Battery Voltage Calculation	Amp-Hour Calculation	Action Taken
Idle Boost 1 Start	Less Than -15°C (5°F)	Less Than 13 V	—	First level Idle boost requested
Idle Boost 1 Start	—	—	Battery has a net loss greater than 0.6 Ah	First level Idle boost requested
Idle Boost 1 Start	—	Less Than 11 V	—	First level Idle boost requested
Idle Boost 1 End	Greater Than -10°C (14°F)	Greater Than 12 V	Battery has a net loss less than 0.2 Ah	First level Idle boost request cancelled
Idle Boost 2 Start	—	—	Battery has a net loss greater than 1.6 Ah	Second level Idle boost requested
Idle Boost 2 Start	—	Less Than 11 V	—	Second level Idle boost requested
Idle Boost 2 End	—	Greater Than 12 V	Battery has a net loss less than 0.8 Ah	Second level Idle boost request cancelled
Load Shed 1 Start	—	—	Battery has a net loss of 4 Ah	Rear Defrost, Heated Mirrors, Heated Seats, HVAC cycled OFF for 20% of their cycle
Load Shed 1 Start	—	Less Than 11 V	—	Rear Defrost, Heated Mirrors, Heated Seats, HVAC cycled OFF for 20% of their cycle
Load Shed 1 End	—	Greater Than 12 V	Battery has a net loss of less than 2 Ah	Clear Load Shed 1
Idle Boost 3 Start	—	—	Battery has a net loss of 10 Ah	Third level Idle boost requested
Idle Boost 3 Start	—	Less Than 11 V	—	Third level Idle boost requested
Idle Boost 3 End	—	Greater Than 12 V	Battery has a net loss of less than 6.0 Ah	Third level Idle boost request cancelled

Idle Boost and Load Shed With Current Sensor (cont'd)

Function	Battery Temperature Calculation	Battery Voltage Calculation	Amp-Hour Calculation	Action Taken
Load Shed 2 Start	—	—	Battery has a net loss greater than 12 Ah	Rear Defrost, Heated Mirrors, Heated Seats, HVAC cycled OFF for 50% of their cycle. The BATTERY SAVER ACTIVE message will be displayed on the DIC
Load Shed 2 Start	—	Less Than 11 V	—	Rear Defrost, Heated Mirrors, Heated Seats, HVAC cycled OFF for 50% of their cycle. The BATTERY SAVER ACTIVE message will be displayed on the DIC
Load Shed 2 End	—	Greater Than 12 V	Battery has a net loss of less than 8 Ah	Clear Load Shed 2
Load Shed 3 Start	—	Less Than 11.9 V	Battery has a net loss greater than 20 Ah	Rear Defrost, Heated Mirrors, Heated Seats, HVAC cycled OFF for 100% of their cycle. The BATTERY SAVER ACTIVE message will be displayed on the DIC
Load Shed 3 Start	—	Less Than 11 V	—	Rear Defrost, Heated Mirrors, Heated Seats, HVAC cycled OFF for 100% of their cycle. The BATTERY SAVER ACTIVE message will be displayed on the DIC
Load Shed 3 End	—	Greater Than 12.6 V	Battery has a net loss of less than 13 Ah	Clear Load Shed 3

Idle Boost and Load Shed Without Current Sensor (based on battery voltage)

Function	Battery Temperature Calculation	Battery Voltage Calculation	Action Taken
Idle Boost 1 Start	Less Than -15°C (5°F)	Less Than 13 V	First level Idle boost requested
Idle Boost 1 Start	—	Less Than 12.6 V	First level Idle boost requested
Idle Boost 1 End	Greater Than -15°C (5°F)	—	First level Idle boost request cancelled
Idle Boost 1 End	—	Greater Than 13 V	First level Idle boost request cancelled
Idle Boost 2 Start	—	Less Than 12.4 V	Second level Idle boost requested
Idle Boost 2 End	—	Greater Than 12.5 V	Second level Idle boost request cancelled
Load Shed 1 Start	—	Less Than 12.3 V	Rear Defrost, Heated Mirrors, Heated Seats, HVAC cycled OFF for 20% of their cycle
Load Shed 1 End	—	Greater Than 12.4 V	Clear Load Shed 1
Idle Boost 3 Start	—	Less Than 10 V	Third level Idle boost requested

Idle Boost and Load Shed Without Current Sensor (based on battery voltage) (cont'd)

Function	Battery Temperature Calculation	Battery Voltage Calculation	Action Taken
Idle Boost 3 End	—	Greater Than 12.3 V	Third level Idle boost request cancelled
Load Shed 2 Start	—	Less Than 12.1 V	Rear Defrost, Heated Mirrors, Heated Seats, HVAC cycled OFF for 50% of their cycle. The BATTERY SAVER ACTIVE message will be displayed on the DIC
Load Shed 2 End	—	Greater Than 12.2 V	Clear Load Shed 2
Load Shed 3 Start	—	Less Than 11.9 V	Rear Defrost, Heated Mirrors, Heated Seats, HVAC cycled OFF for 100% of their cycle. The BATTERY SAVER ACTIVE message will be displayed on the DIC
Load Shed 3 End	—	Greater Than 12.0 V	Clear Load Shed 3

Starting System Description and Operation

Starter Motor Operation (Without KL9)

The starter motors are non-repairable. They have pole pieces that are arranged around the armature. Both solenoid windings are energized. The pull-in winding circuit is completed to the ground through the starter motor. The windings work together magnetically to pull and hold in the plunger. The plunger moves the shift lever. This action causes the starter drive assembly to rotate on the armature shaft spline as it engages with the flywheel ring gear on the engine. Moving at the same time, the plunger also closes the solenoid switch contacts in the starter solenoid. Full battery voltage is applied directly to the starter motor and it cranks the engine.

As soon as the solenoid switch contacts close, current stops flowing thorough the pull-in winding because battery voltage is applied to both ends of the windings. The hold-in winding remains energized. Its magnetic field is strong enough to hold the plunger, shift lever, starter drive assembly, and solenoid switch contacts in place to continue cranking the engine. When the engine starts, pinion overrun protects the armature from excessive speed until the switch is opened.

When the crank signal is removed, the starter relay opens and battery voltage is removed from the starter solenoid S terminal. Current flows from the motor contacts through both windings to the ground at the end of the hold-in winding. However, the direction of the current flow through the pull-in winding is now opposite the direction of the current flow when the winding was first energized.

The magnetic fields of the pull-in and hold-in windings now oppose one another. This action of the windings, along with the help of the return spring, causes the starter drive assembly to disengage and the solenoid switch contacts to open simultaneously. As soon as the contacts open, the starter circuit is turned off.

Enhanced Starter Motor Operation (KL9)

The Engine Stop/Start system in GM vehicles automatically turns off the engine when the vehicle comes to a stop under certain driving conditions, and can quickly restart the engine in about 0.3 seconds when commanded to do so.

In order to smoothly restart the engine as quickly as possible while managing the greater number of engine starts, the Stop/Start system uses an enhanced starter motor that operates differently from a conventional starter motor. It has a high performance electric motor and a stronger pinion engagement mechanism than a conventional starter. It also has independent control of the pinion and motor.

The enhanced starter motor continues using the typical pinion engagement mechanism with a starter solenoid that drives the pinion gear to engage or disengage the flywheel of the engine. When engaged, the starter motor can rotate the engine flywheel and, in turn, the crankshaft.

On the enhanced starter of a Stop/Start system the operation is done in two separate functions inside the solenoid, Starter Motor and Pinion Actuator. Each function controlled individually by the ECM. There are two separate relays to control the two separate parts of the enhanced solenoid:

- KR27 Starter Motor Relay
- KR27C Starter Pinion Actuator Relay

The two individually-controlled relays allow for smooth engagement of the pinion gear into the flywheel with minimum noise and wear.

When the vehicle is coming to a stop, just before the engine stops rotating (at approximately 50 RPM) during stop/start operation, the ECM energizes the Starter Pinion Solenoid Actuator Relay to easily push the pinion gear into the flywheel gear without gear clash. (Fig. 8) When the engine stops rotating during Stop/Start operation (Auto Stop mode), the starter pinion gear is fully engaged, ready for the starter motor to become energized to quickly start the engine again.

A secondary need for the starter pinion to be driven into the flywheel gear before the engine stops rotating is to address quickly changing demands on the engine. For example, when a driver is slowing nearly to a stop — and the Stop/Start system is preparing for Auto Stop mode — but suddenly decides to release the brake and accelerate

In this situation, the engine has already stopped rotating, or nearly so. A conventional starter cannot restart the engine until the engine has completely stopped. However, with the enhanced starter, the starter pinion gear is fully engaged and ready to begin rotating the engine even before it fully stops turning. Otherwise, the engine would actually have to stop rotating before the pinion can engage smoothly to begin a restart.

To prevent a lag in engine operation, the ECM uses predictive speed matching of the flywheel gear speed and the pinion gear speed to engage the pinion gear into the flywheel gear without gear clash before the engine fully stops. By predicting how long it takes the starter motor to spin up using an algorithm, the pinion gear speed can be matched to the flywheel gear speed. The result is an almost instant restart that is possible at extremely low engine speeds.

Circuit Description

Keyless Start

When the Ignition mode switch is placed in the crank position, a discrete signal is supplied to the body control module (BCM) notifying it that the ignition is in the crank position. The BCM then sends a serial data message to the engine control module (ECM) that crank has been requested. The ECM then verifies that the brake pedal is applied and for manual transmission the clutch is fully depressed or for automatic transmission is in Park/Neutral. If it is, the ECM then supplies 12 V to the control circuit of the starter relay. When this occurs, battery positive voltage is supplied through the switch side of the crank relay to the S terminal of the starter solenoid.

Key Start

When the ignition switch is placed in the Start position, a discrete signal is supplied to the body control module (BCM) notifying it that the ignition is in the Start position. The BCM then sends a message to the engine control module (ECM) notifying it that CRANK has been requested. The ECM verifies that the transmission is in Park or Neutral. If it is, the ECM then supplies 12 V to the control circuit of the crank relay. When this occurs, battery positive voltage is supplied through the switch side of the crank relay to the S terminal of the starter solenoid.

BLANK

Section 6

HVAC



HVAC - Automatic	6-3
Schematic and Routing Diagrams	6-3
HVAC Schematics	6-4
Description and Operation	6-10
Automatic HVAC Description and Operation	6-10
HVAC - Manual	6-14
Schematic and Routing Diagrams	6-14
HVAC Schematics	6-15
Description and Operation	6-21
Manual HVAC Description and Operation	6-21

BLANK


HVAC - Automatic

Schematic and Routing Diagrams


HVAC Schematics (HVAC Controls)

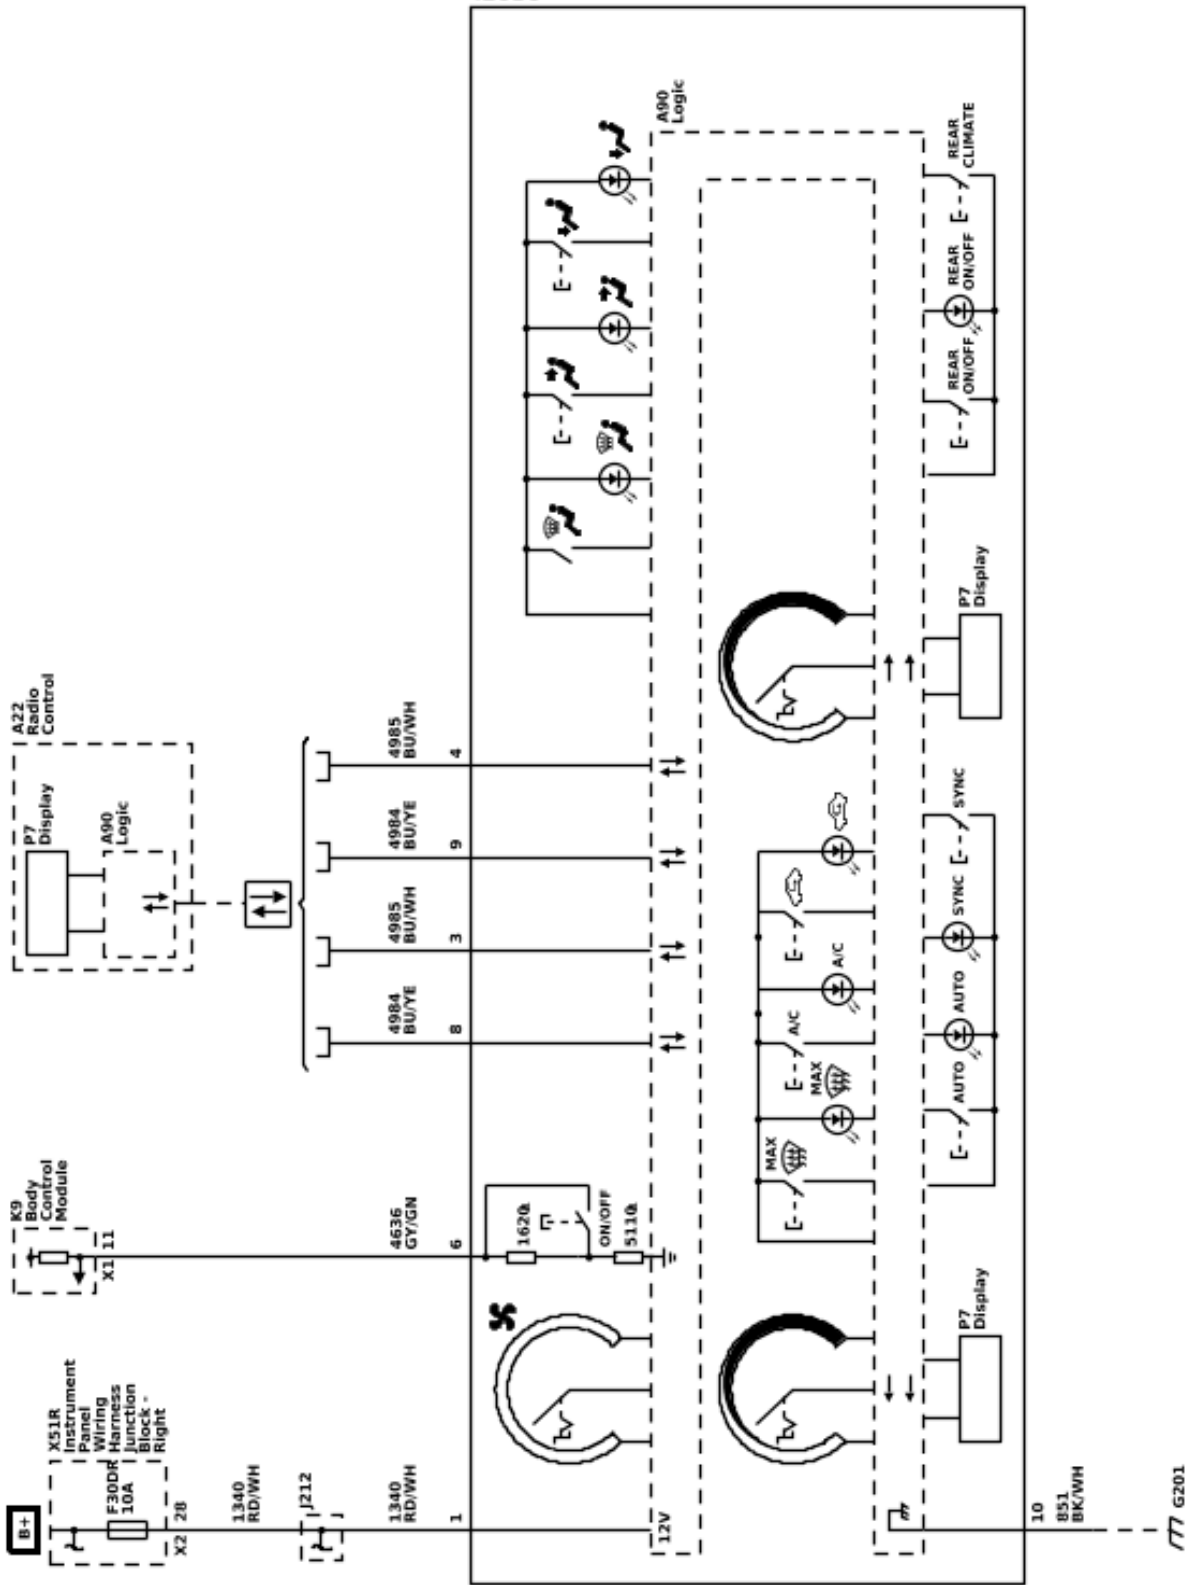

HVAC Schematics (Actuators)

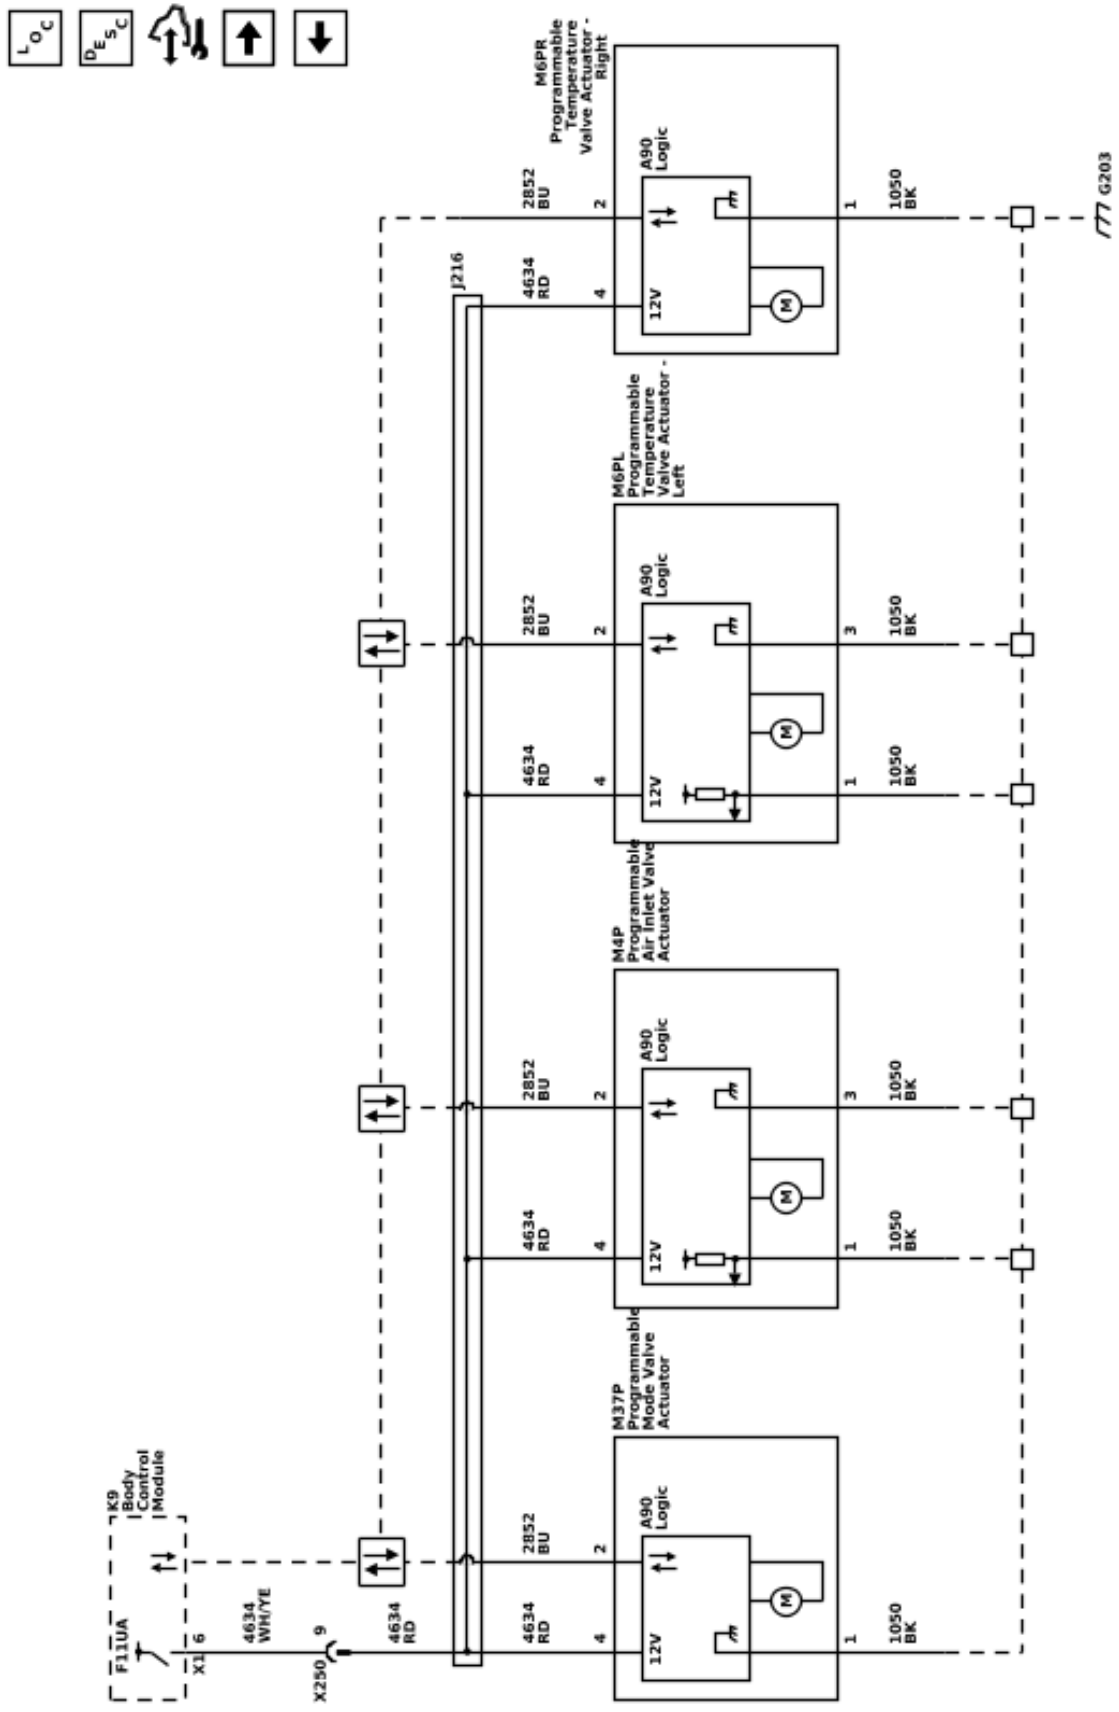


HVAC Schematics (Blower Motor)

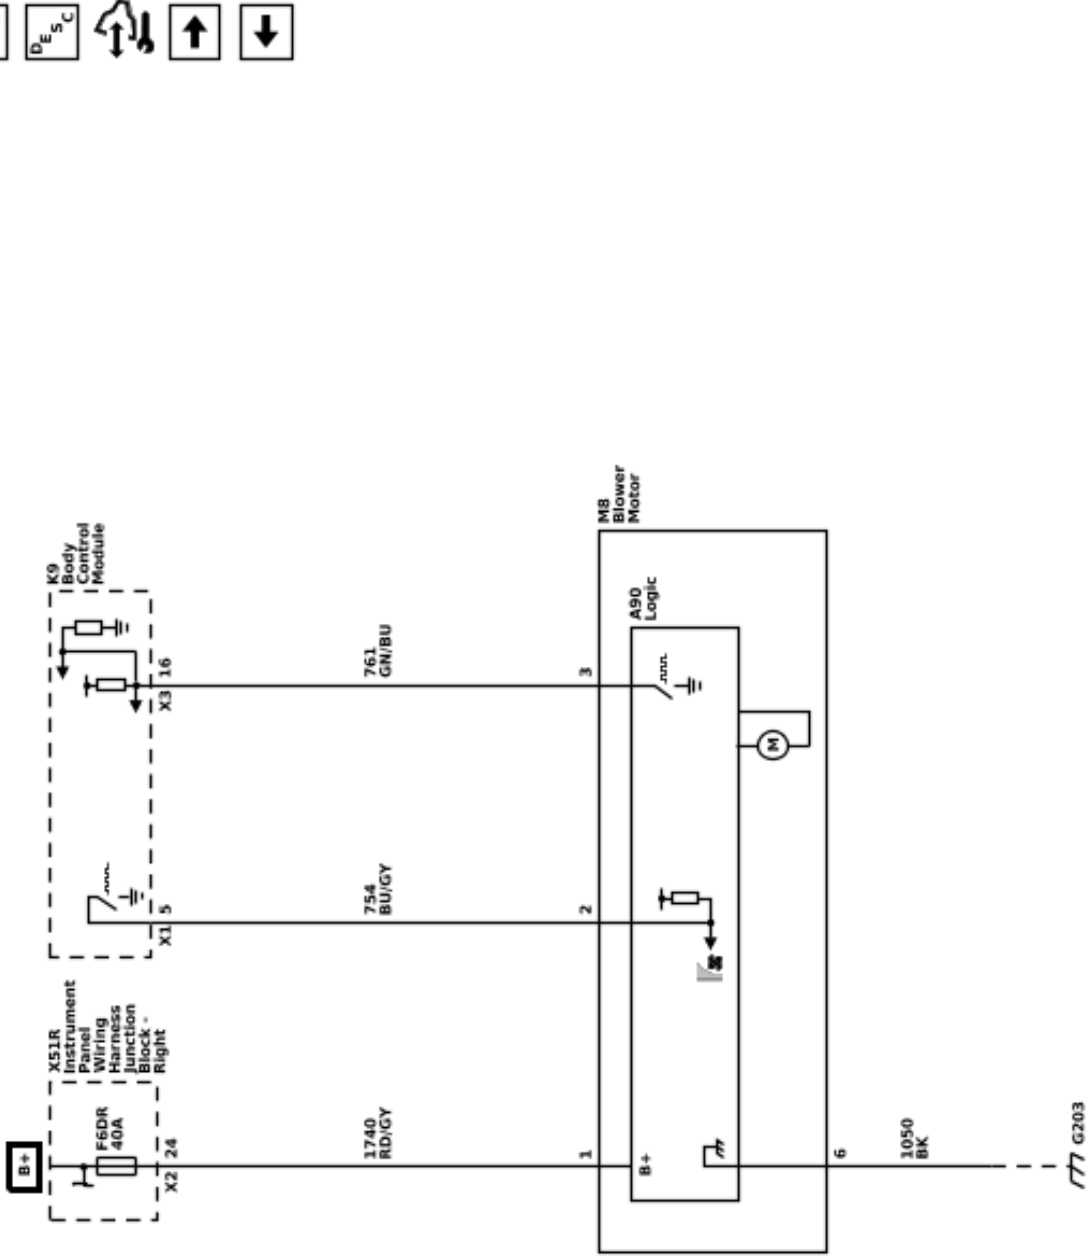


6150262


HVAC Schematics (Windshield Sensors and A/C Evaporator Temperature Sensor)

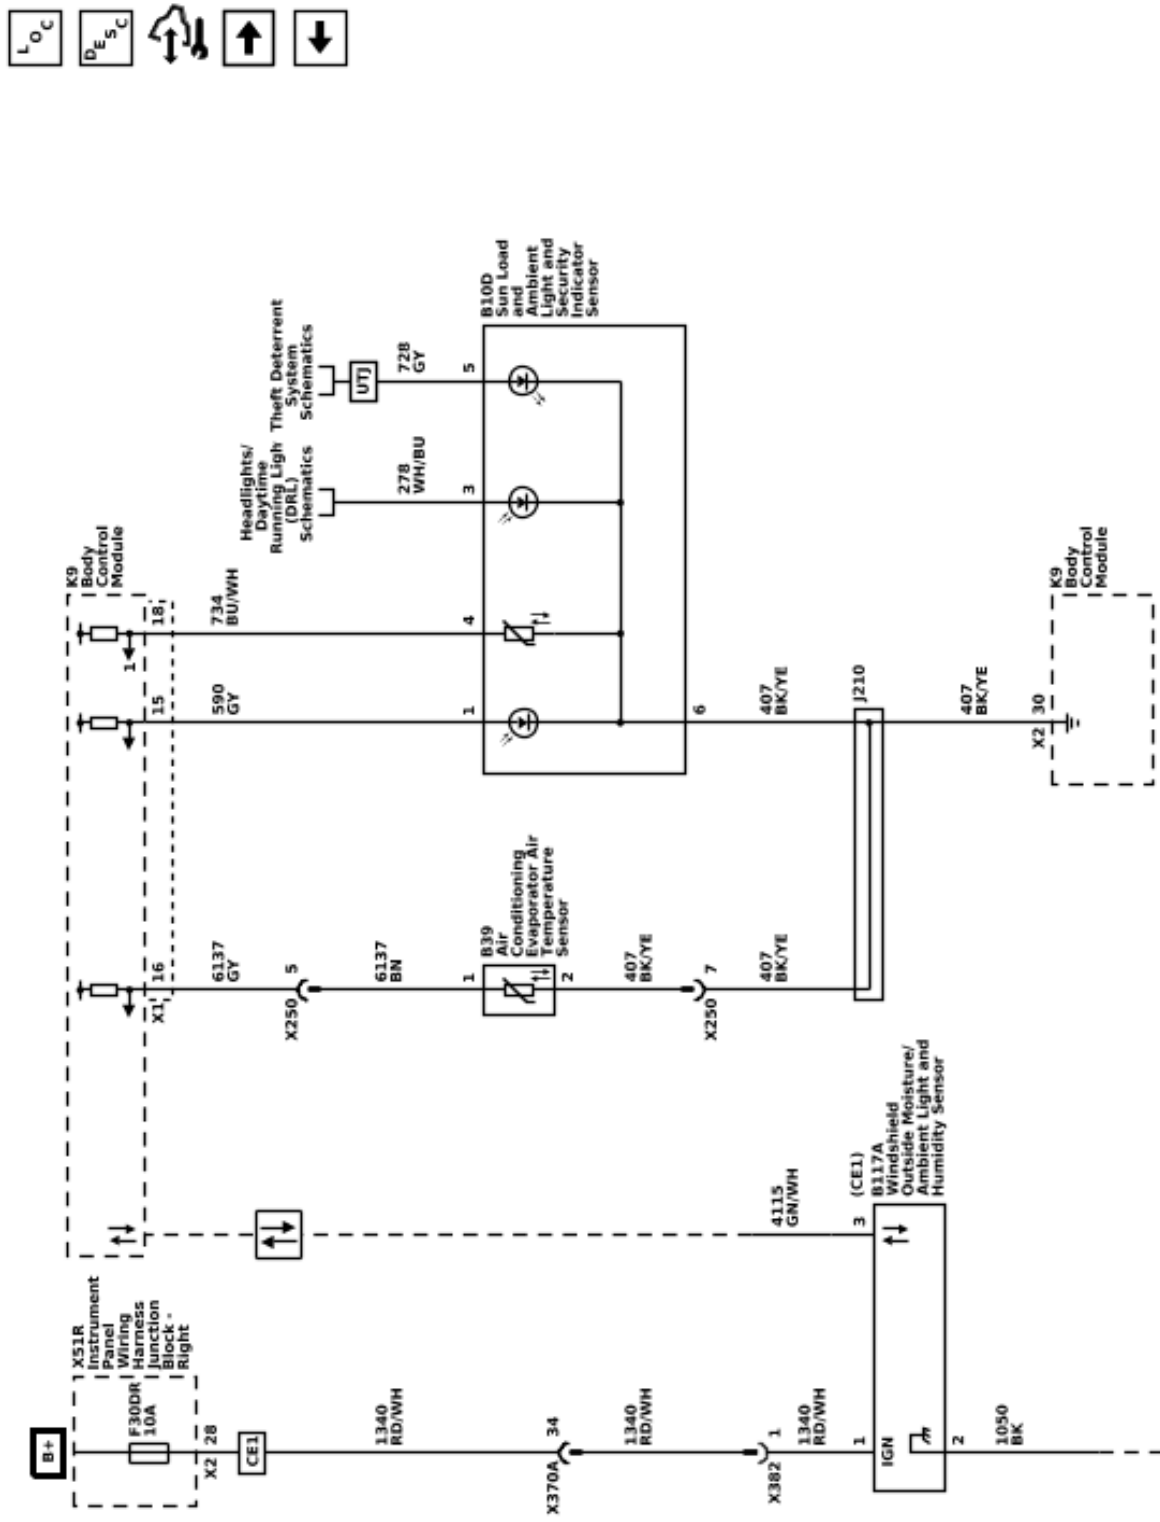

HVAC Schematics (A/C Compressor Controls)

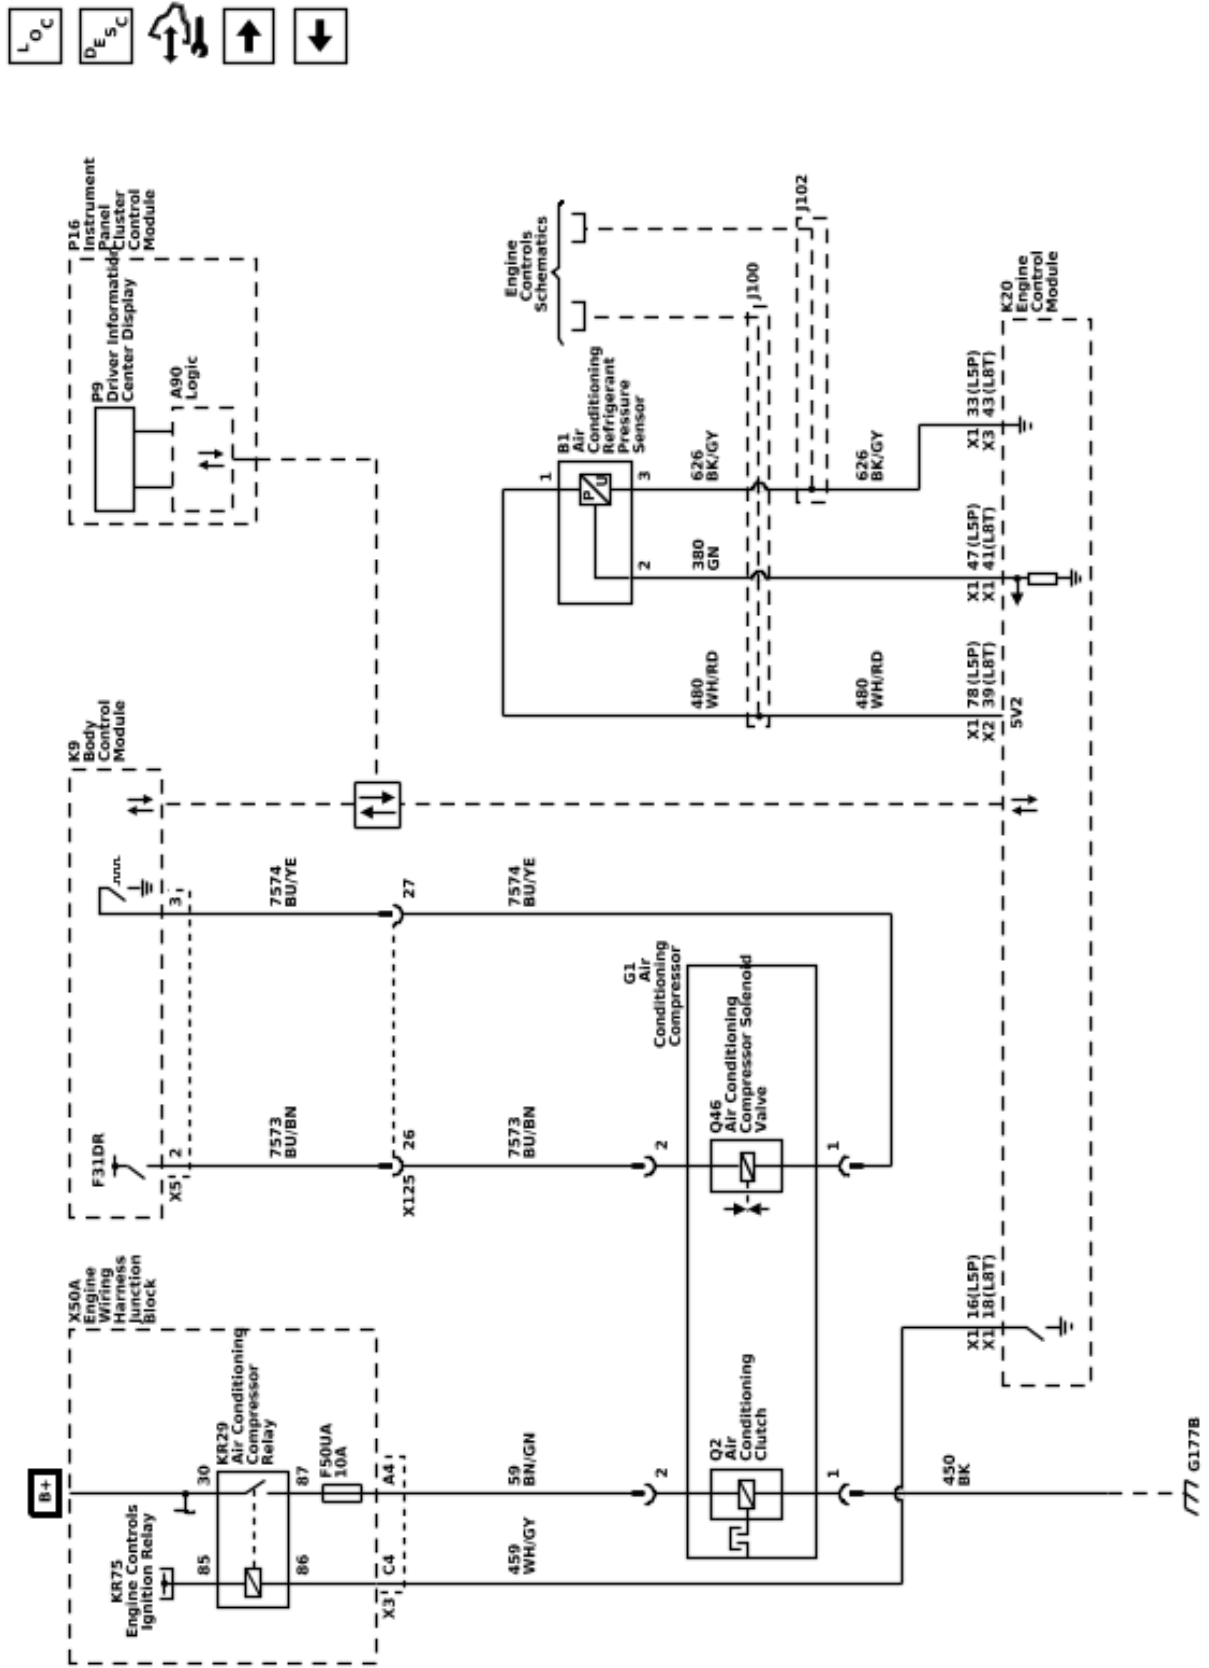

HVAC Schematics (Air Heater)

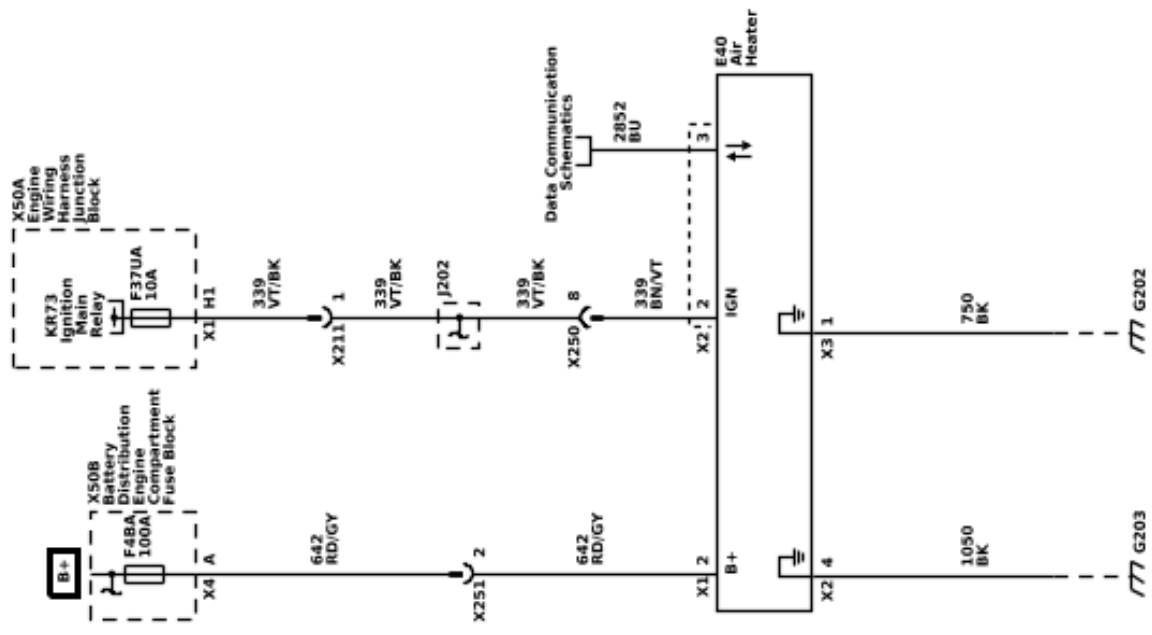

Description and Operation

Automatic HVAC Description and Operation

The air temperature and the air delivery description and operation are divided into the following:

- HVAC Control Components
- Air Speed and Blower Motor
- Air Delivery
- Recirculation Operation
- Heating and A/C Operation
- Automatic Operation
- Engine Coolant and A/C System Refrigerant

HVAC Control Components

K9 Body Control Module

The body control module (BCM) is a CAN device that interfaces between the operator and the HVAC system to maintain and control desired air temperature and air distribution settings. The BCM provides a device ON-Signal for the HVAC controls. The BCM provides blower, air delivery mode and air temperature control.

A26 Heater and Air Conditioning User Interface Control - Front

The HVAC control contains all switches which are required to control the functions of HVAC and serve as interface between the operator and the BCM. The selected values are passed to the BCM via serial data.

Actuators

Doors in the HVAC case assembly are used to control air flow. The BCM operates the doors through the use of actuators, with one actuator being used for each door. The system has the following air control doors and associated actuators: mode, left and right temperature, and recirculation.

Each actuator used in the system is a LIN device controlled by the BCM. The BCM supplies a 12 V reference voltage to the actuators, and ground is provided by the wiring harness. When the BCM sends a request message to the actuator, the actuator then operates internal stepper motors to move the door to the required position.

Duct Air Temperature

Physical duct air temperature sensors are not used with the system. The air temperature in the air distribution ducts is calculated by the BCM based on the engine coolant temperature, coolant flow, evaporator temperature, outside air temperature, solar load, blower motor speed, air inlet door position, and temperature door position information. The BCM uses the values to calculate actuator position.

B39 Air Conditioning Evaporator Air Temperature Sensor

The evaporator temperature sensor is a 2-wire negative temperature coefficient thermistor. The sensor operates within a temperature range of -40 to $+85^{\circ}\text{C}$ (-40 to $+185^{\circ}\text{F}$). The sensor is installed near the evaporator core to measure the air temperature exiting the core.

Based on vehicle operating conditions and operator settings, the HVAC software algorithms will determine a target evaporator air temperature. The operation of the compressor solenoid will be adjusted as needed to quickly reach and maintain the targeted temperature.

B1 Air Conditioning Refrigerant Pressure Sensor

The A/C refrigerant pressure sensor is a 3-wire piezoelectric pressure transducer. A 5 V reference voltage, low reference, and signal circuits enable the sensor to operate. The A/C pressure signal can be between 0.2–4.8 V. When the A/C refrigerant pressure is low, the signal value is near 0 V. When the A/C refrigerant pressure is high, the signal value is near 5 V. The engine control module (ECM) converts the voltage signal to a pressure value. When pressure is too high or too low, the ECM will not allow the A/C compressor clutch to engage.

G1 Air Conditioning Compressor

The A/C compressor uses a conventional belt driven magnetic clutch to engage and mechanically turn the compressor. When the A/C switch is pressed, the BCM sends an A/C request message to the ECM via serial data. If specific criteria is met, the ECM then grounds the A/C compressor clutch relay control circuit, which will switch the A/C compressor clutch relay. With the relay contacts closed, battery voltage is supplied to the permanently grounded A/C compressor clutch. The A/C compressor clutch will then be activated.

This A/C system utilizes a variable displacement solenoid valve to alter the amount of displacement created by the turning of the compressor. The BCM provides both battery voltage and a pulse width modulated ground to the Q46 Air Conditioning Compressor Solenoid Valve. When the A/C switch is pressed, the BCM grounds the variable displacement solenoid using a (PWM) signal in order to determine the amount of compressor displacement. The performance of the A/C compressor is regulated based on cooling load.

B117A Windshield Outside Moisture/Ambient Light and Humidity Sensor (CE1)

The windshield outside moisture, ambient light, and humidity sensor is used by the wiper system to determine exterior moisture, and by the HVAC system for inside windshield temperature and humidity.

The sensors are part of a LIN windshield sensor array, and the sensor values are transmitted to the BCM via serial data.

When equipped, this sensor assembly provides information to the HVAC system about:

- Relative humidity level at windshield (passenger compartment side)
- Temperature of the windshield (passenger compartment side)
- Temperature of the humidity sensor element

The relative humidity sensor measures the relative humidity of the passenger compartment side of the windshield. It also detects the temperature of the windshield surface on the passenger compartment side. Both values are used as control inputs for the BCM application to calculate the fog risk on windshield compartment side and ability to reduce fuel

consumption by decreasing A/C compressor power to a minimum without causing any fog. The sensor will also enable partial recirculation mode in order to improve heat-up performance of the passenger compartment under cold ambient temperature conditions without the risk of mist build-up on the windshield. The humidity sensor element temperature sensor supplies the temperature of the humidity sensor element. It is only needed if the thermal contact between the humidity sensing element and the inside windshield surface is not sufficient.

B10D Sun Load and Ambient Light and Security Indicator Sensor

The ambient light/sunload sensor includes the solar sensor and passenger compartment temperature sensor.

The solar sensor is connected to a low reference and 5 V supply through the BCM. As the sunload increases, the sensor signal voltage also increases and vice versa. The signal provided to the BCM varies between 1.2–4.85 V.

The passenger compartment temperature sensor is a negative temperature coefficient thermistor, connected to a low reference and 5 V supply through the BCM. As the air temperature increases, the sensor resistance decreases. The signal varies between 0–5 V.

Bright or high intensity light can cause the vehicles interior temperature to increase. The HVAC system uses the sensor values and compensates for the increased temperature to maintain the system settings.

E40 Air Heater (C32)

Some models are equipped with an auxiliary electric heater to assist in warming the passenger compartment when the engine coolant has not sufficiently warmed to operating temperature. The air heater is a LIN device. The heater uses an ignition circuit, battery voltage circuit, ground circuit, and a serial data signal from the BCM to operate.

The heater is a 12 V positive temperature coefficient heating element located in the HVAC case just downstream of the traditional heater core. The system will activate the heater when the outside temperature is less than approximately 8°C (46°F), the engine coolant temperature is less than approximately 75°C (167°F), and the temperature blend door is commanded to the full hot position.

Air Speed and M8 Blower Motor

The selected blower motor speed is passed from the controls to the BCM via serial data.

The motor uses a fused B+, ground, control, and speed output signal circuits to operate. The blower motor speed is controlled by increasing or decreasing the voltage drop on the ground side of the blower motor speed control circuit. The BCM provides a low side pulse width modulation (PWM) signal to the blower motor to request a specific motor speed. The blower motor internal circuitry translates the PWM signal and drives the motor accordingly.

The blower motor has a signal wire used to output a speed signal. The signal is monitored by the BCM. The BCM monitors the blower motor speed to modify the total commanded engine coolant flow rate, which is a

percentage of available coolant flow sent to the heater core for occupant comfort and windshield defrosting. The HVAC Blower Speed is monitored so that the ECM can optimize engine coolant flow for fuel economy and emissions.

Afterblow

Afterblow is a feature that dries the evaporator core by operating the blower motor after the engine is turned OFF under certain conditions. This reduces the amount of moisture that can create undesirable odors. For additional information on afterblow, the default setting, and changing the setting, refer to Afterblow Configuration.

Air Delivery

The BCM controls the distribution of air by the use of recirculation and mode door actuators. The modes that may be selected are:

- Defrost: windshield outlet
- Panel: dashboard outlets
- Floor: front footwell outlets
- Defog: defrost + floor
- Bi-level: panel + floor
- Tri-level: panel + defrost + floor
- Hi-level: panel + defrost

The desired air distribution mode can be selected with the air distribution switches at the HVAC control. The HVAC control delivers the values to the BCM via serial data. The BCM sends a request to the mode door actuator to move the door to the required position. Depending on the position of the door, air is distributed through various ducts leading to the outlets in the dash. When defrost airflow is active, the BCM will move the recirculation actuator to outside air, to aid in reducing window fogging. When defrost is selected the blower motor will be activated, regardless of the coolant temperature. A/C is available in all modes.

Refer to the owners manual for operation of the HVAC controls and mode selection.

Recirculation Operation

The recirculation switch is integrated into the HVAC control. The selected recirculation setting is sent to the BCM via serial data. The BCM controls the air intake using the recirculation actuator. In recirculation mode the recirculation door is positioned to block outside air from entering and circulate the air within the vehicle. In outside air mode the recirculation door is positioned to route outside air into the vehicle.

Recirculation is only available if the defrost mode is not active. When the defrost mode is active, the recirculation actuator positions the recirculation door so that outside air is circulated to the windshield to reduce fogging.

In automatic mode the values of the sensors are used as inputs for the BCM to calculate the fog risk on the passenger compartment side of the windshield. The A/C compressor and the defrost mode may be activated to prevent or remove fog on the passenger compartment side of the windshield.

In automatic mode, a partial recirculation mode may be commanded to accelerate cabin heating or cooling and reduce energy usage. The recirculation indicator remains illuminated at all times, regardless of the actual operating mode determined by the system.

Heating and A/C Operation

The purpose of the heating and A/C system is to provide heated and cooled air to the interior of the vehicle. The A/C system will also remove humidity from the interior and reduce windshield fogging. Regardless of the temperature setting, the following may affect the rate that the HVAC system can achieve the desired temperature:

- Recirculation setting
- Difference between inside and desired temperature
- Blower motor speed setting
- Mode setting
- Dashboard outlet open/closed position

When the A/C switch or the AUTO switch is pressed, the HVAC control sends a signal to the BCM via serial data. The BCM evaluates this signal and sends an A/C request signal to the ECM via CAN-Bus. The ECM checks all preconditions before releasing and if all conditions are met sends a release signal back to the BCM. The A/C compressor is activated by the BCM. The BCM supplies battery voltage to the A/C compressor solenoid. When the A/C switch is pressed, the BCM provides a pulse width modulation (PWM) signal to the A/C compressor solenoid in order to command the performance of the A/C compressor. The performance of the A/C compressor is regulated using evaporator temperature and engine load.

The A/C indicator does not indicate the compressor is currently active. The A/C indicator shows that A/C has been requested and the system will activate the compressor as needed.

The following conditions must be met in order to activate the A/C compressor:

- Battery voltage is between 9–18 V
- Engine coolant temperature is less than 124°C (255°F)
- Engine speed is greater than 600 RPM
- Engine speed is less than 5 500 RPM
- A/C high side pressure is between 269–2 929 kPa (39–425 PSI)
- Throttle position is less than 100%
- Evaporator temperature is greater than 3°C (38°F)
- ECM does not detect immoderate torque load
- ECM does not detect insufficient idle quality
- The ambient temperature is above 1°C (34°F)

The sensor information is used by the ECM to determine the following:

- The A/C high side pressure
- An A/C system load on the engine
- An immoderate A/C high side pressure
- The heat load at the A/C condenser

The air streams into the passenger compartment through the heater core and the evaporator core. The air temperature actuator drives the mixed air door to direct the airflow. If the interior temperature should be increased, the mixed air door is put into the position in which more air streams through the heater core. If the interior temperature should be decreased, the mixed air door is put into the position in which more air streams through the evaporator core.

Automatic Operation

In automatic operation, the BCM maintains the comfort level inside of the vehicle by controlling the A/C compressor solenoid, the blower motor, the air temperature actuators, mode actuator and recirculation actuator.

The automatic mode indicator shows that the system is in full automatic operation. If an individual setting is changed (excluding temperature), the automatic indicator will turn off, and that function will enter manual control. All other functions will remain under automatic control unless manually changed.

To put the HVAC system in automatic mode, the following is required:

1. The auto switch must be activated.
2. The air temperature switch must not be in either the full hot or full cold position.

Once the desired temperature is reached, the blower motor, mode, recirculation and temperature actuators automatically adjust to maintain the temperature selected. The BCM performs the following functions to maintain the desired air temperature:

- Monitors the following:
 - Ambient (outside) air temperature sensor
 - Passenger compartment temperature sensor
 - Calculated front duct air temperatures
 - Windshield temperature and inside moisture sensor
 - Evaporator temperature sensor
 - Ambient light/sunload sensor
- Regulate the blower motor speed
- Position the air temperature actuators
- Position the mode door actuators
- Position the recirculation actuator
- Control of the A/C compressor solenoid

When the temperature setting is set to full hot, the blower speed will increase gradually as the coolant warms to normal operating temperature. When normal engine operating temperature is reached the blower stays on high speed and the air temperature actuators stays in the full heat position.

When the temperature setting is set to full cold, the blower will immediately operate at high speed and the air temperature actuators move to full cold position. The mode actuator moves to the panel position and the recirculation actuator moves to the recirculation position.

Under cold ambient temperatures, the automatic HVAC system provides heat in the most efficient manner. The operator can select an extreme temperature setting but the system will not warm the vehicle any faster. Under

warm ambient temperatures, the automatic HVAC system also provides air conditioning in the most efficient manner. Selecting an extreme cool temperature will not cool the vehicle any faster.

In automatic mode the values of the windshield temperature and inside moisture sensor are used as control inputs for the BCM application to calculate the fog risk on the passenger compartment side of the windshield and ability to reduce fuel consumption by decreasing A/C compressor power to a minimum without causing any fog. The A/C compressor and the defrost mode are activated to prevent or remove fog on the passenger compartment side of the windshield. The sensor will also enable partial recirculation mode in order to improve heat-up performance of the passenger compartment under cold ambient temperature conditions without the risk of mist build-up on the windshield.


Engine Coolant and A/C System Refrigerant

For information on engine coolant, coolant flow, A/C refrigerant, and the A/C refrigerant cycle, refer to Heating and Air Conditioning System Description and Operation.


HVAC - Manual

Schematic and Routing Diagrams


HVAC Schematics (Actuators)

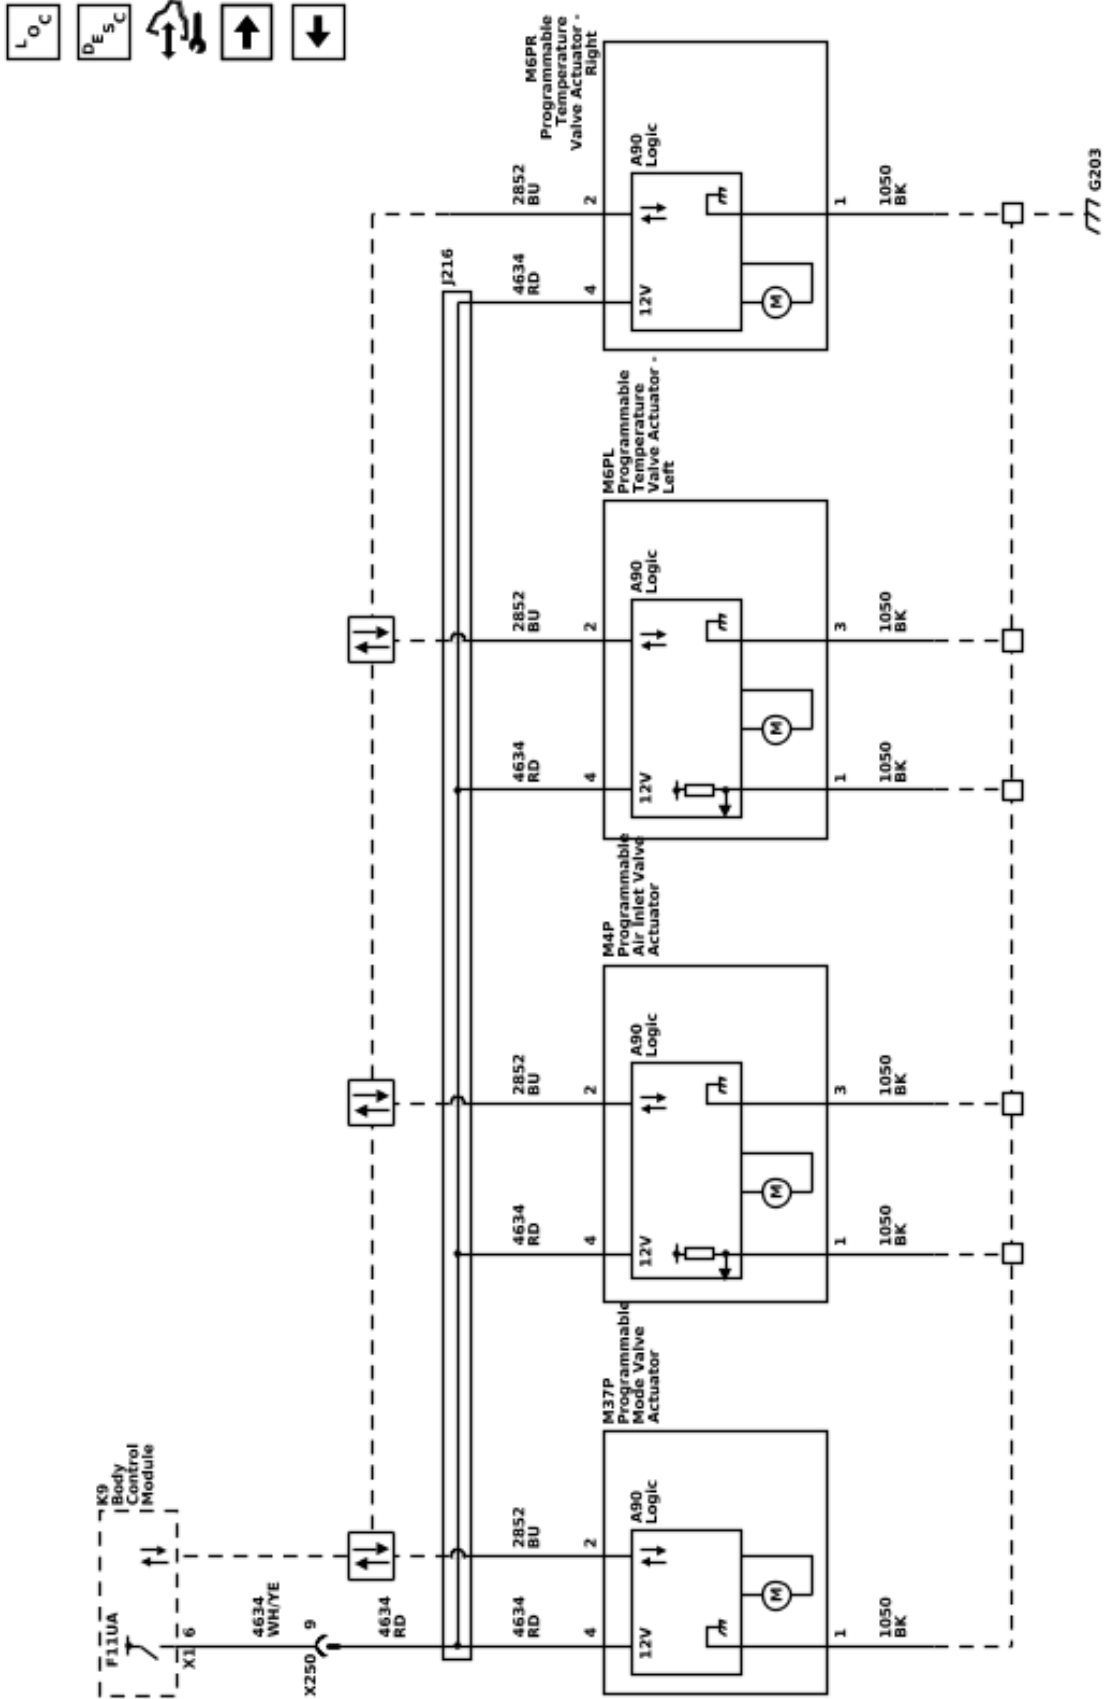


HVAC Schematics (Blower Motor)

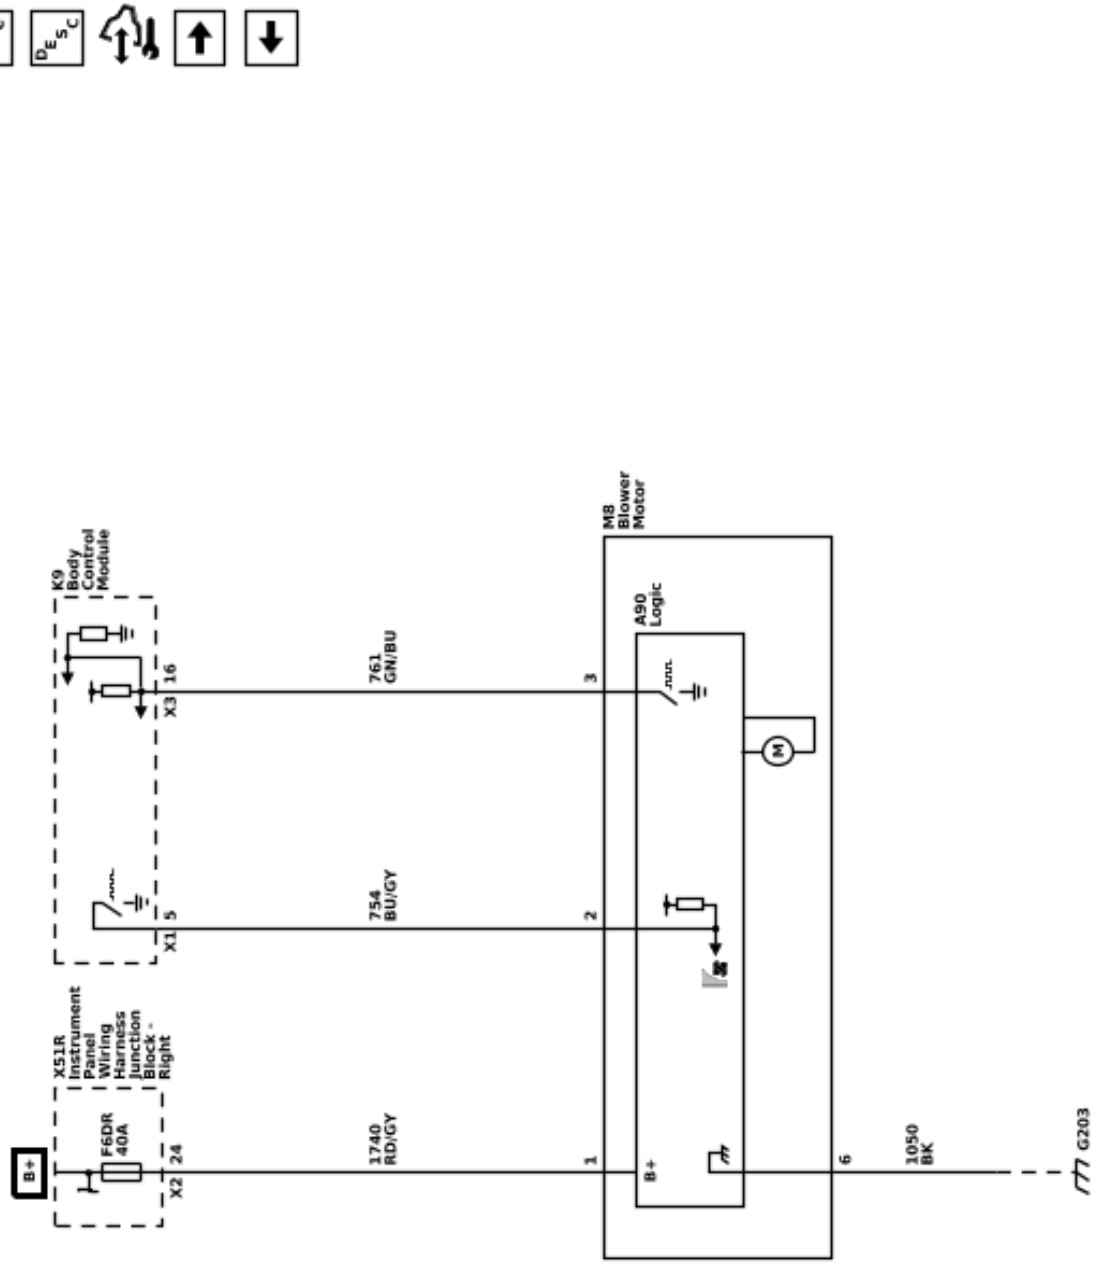

HVAC Schematics (A/C Compressor Controls)

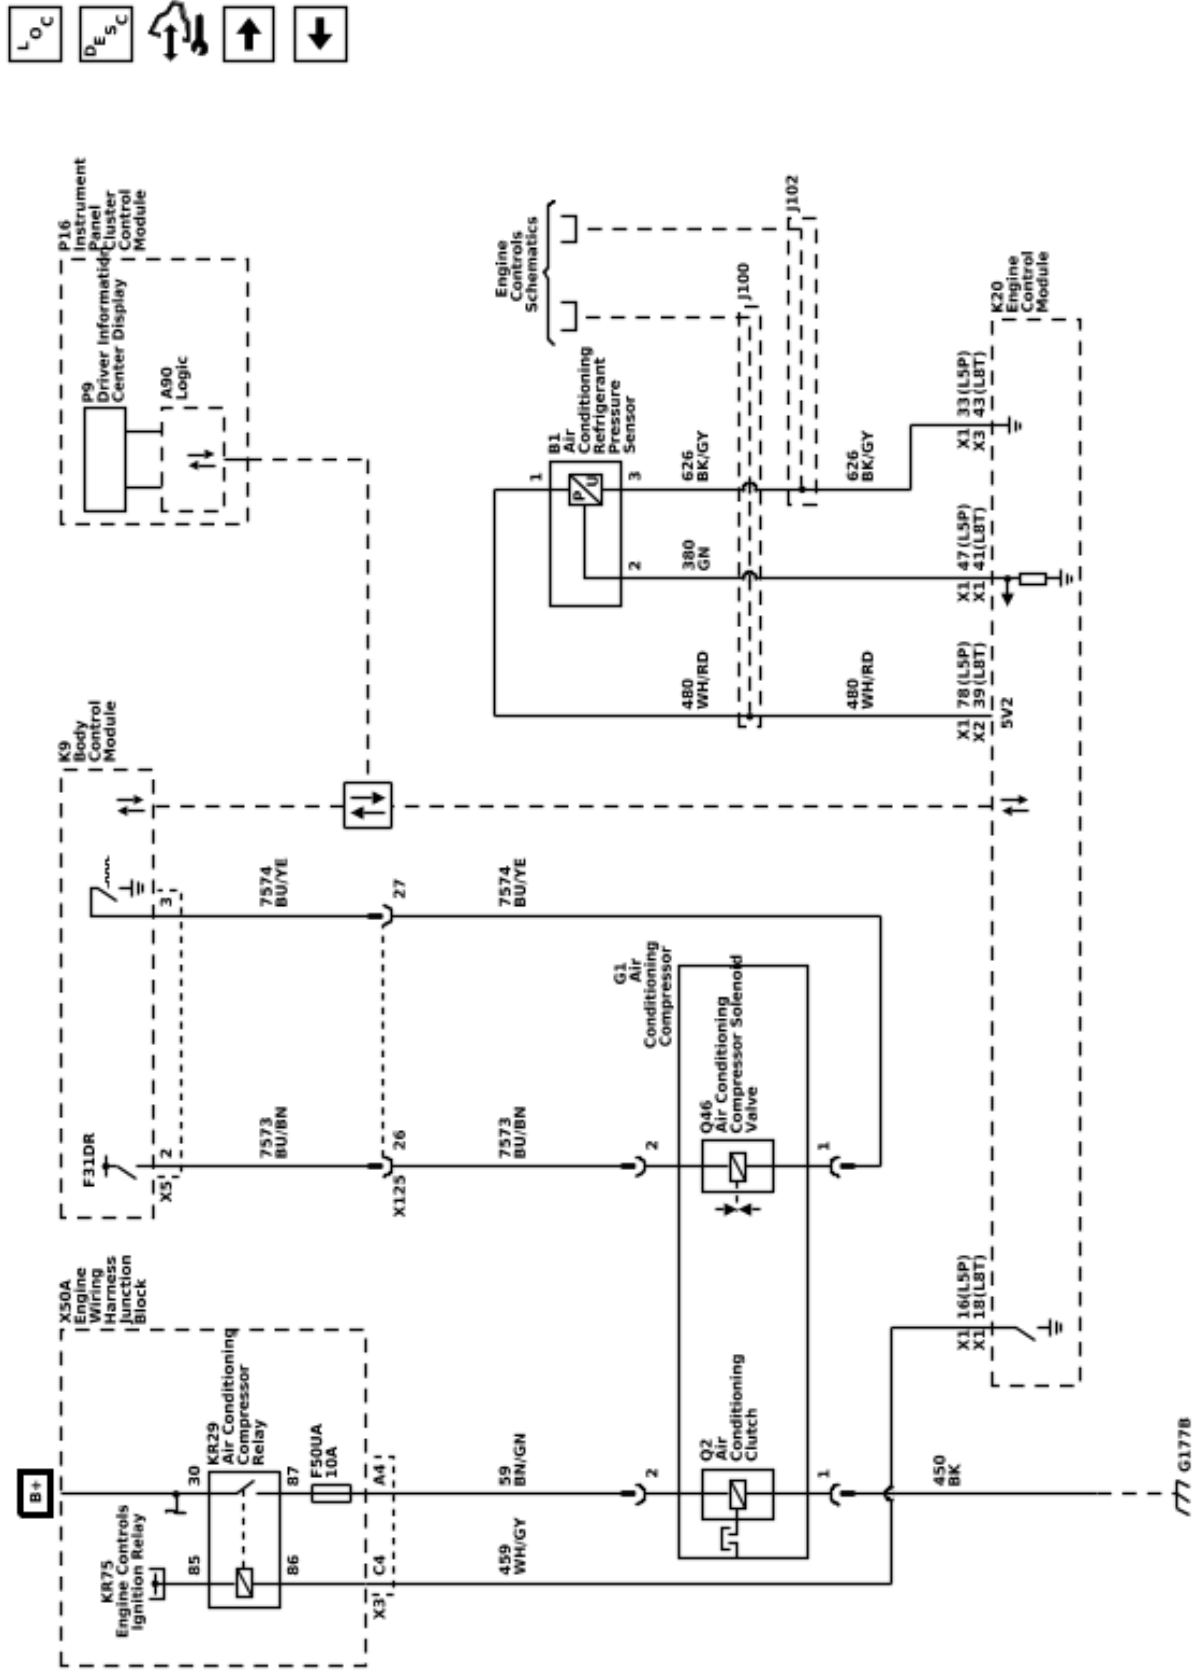

HVAC Schematics (Air Heater)

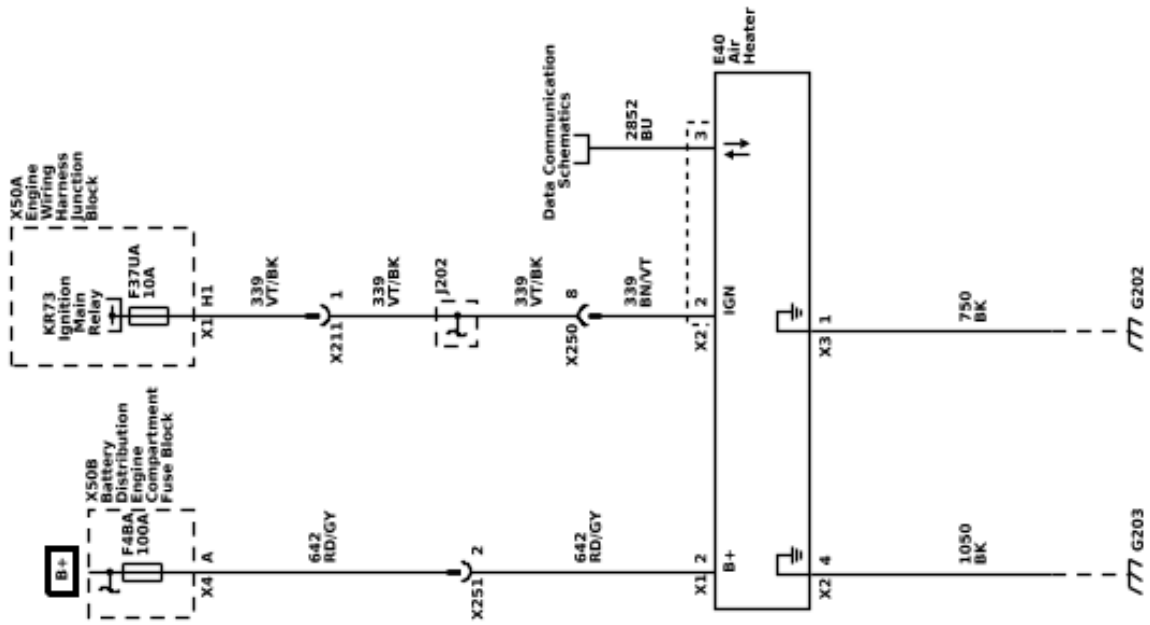

Description and Operation

Manual HVAC Description and Operation

The air temperature and the air delivery description and operation are divided into the following:

- HVAC Control Components
- Air Speed and Blower Motor
- Air Delivery
- Heating and A/C Operation
- Recirculation Operation
- Engine Coolant and A/C System Refrigerant

HVAC Control Components

K9 Body Control Module

The body control module (BCM) is a CAN device that interfaces between the operator and the HVAC system to maintain and control desired air temperature and air distribution settings. The BCM provides a device ON-Signal for the HVAC controls. The BCM provides blower, air delivery mode and air temperature control.

A26 Heater and Air Conditioning User Interface Control - Front

The HVAC control contains all switches which are required to control the functions of HVAC and serve as interface between the operator and the BCM. The selected values are passed to the BCM via serial data.

Actuators

Doors in the HVAC case assembly are used to control air flow. The BCM operates the doors through the use of actuators, with one actuator being used for each door. The system has the following air control doors and associated actuators: mode, temperature, and recirculation.

Each actuator used in the system is a LIN device controlled by the BCM. The BCM supplies a 12 V reference voltage to the actuators, and ground is provided by the wiring harness. When the BCM sends a request message to the actuator, the actuator then operates internal stepper motors to move the door to the required position.

Air Speed and M8 Blower Motor

The selected blower motor speed is passed from the controls to the BCM via serial data.

The motor uses a fused B+, ground, control, and speed output signal circuits to operate. The blower motor speed is controlled by increasing or decreasing the voltage drop on the ground side of the blower motor speed control circuit. The BCM provides a low side pulse width modulation (PWM) signal to the blower motor to request a specific motor speed. The blower motor internal circuitry translates the PWM signal and drives the motor accordingly.

The blower motor has a signal wire used to output a speed signal. The signal is monitored by the BCM. The BCM monitors the blower motor speed to modify the total commanded engine coolant flow rate, which is a percentage of available coolant flow sent to the heater core for occupant comfort and windshield defrosting.

The HVAC Blower Speed is monitored so that the ECM can optimize engine coolant flow for fuel economy and emissions.

Afterblow

Afterblow is a feature that dries the evaporator core by operating the blower motor after the engine is turned OFF under certain conditions. This reduces the amount of moisture that can create undesirable odors. For additional information on afterblow, the default setting, and changing the setting, refer to Afterblow Configuration.

B39 Air Conditioning Evaporator Air Temperature Sensor

The evaporator temperature sensor is a 2-wire negative temperature coefficient thermistor. The sensor operates within a temperature range of -40 to $+85^{\circ}\text{C}$ (-40 to $+185^{\circ}\text{F}$). The sensor is installed near the evaporator core to measure the air temperature exiting the core.

Based on vehicle operating conditions and operator settings, the HVAC software algorithms will determine a target evaporator air temperature. The operation of the compressor solenoid will be adjusted as needed to quickly reach and maintain the targeted temperature.

B1 Air Conditioning Refrigerant Pressure Sensor

The A/C refrigerant pressure sensor is a 3-wire piezoelectric pressure transducer. A 5 V reference voltage, low reference, and signal circuits enable the sensor to operate. The A/C pressure signal can be between 0.2–4.8 V. When the A/C refrigerant pressure is low, the signal value is near 0 V. When the A/C refrigerant pressure is high, the signal value is near 5 V. The engine control module (ECM) converts the voltage signal to a pressure value. When pressure is too high or too low, the ECM will not allow the A/C compressor clutch to engage.

G1 Air Conditioning Compressor

The A/C compressor uses a conventional belt driven magnetic clutch to engage and mechanically turn the compressor. When the A/C switch is pressed, the BCM sends an A/C request message to the ECM via serial data. If specific criteria is met, the ECM then grounds the A/C compressor clutch relay control circuit, which will switch the A/C compressor clutch relay. With the relay contacts closed, battery voltage is supplied to the permanently grounded A/C compressor clutch. The A/C compressor clutch will then be activated.

This A/C system utilizes a variable displacement solenoid valve to alter the amount of displacement created by the turning of the compressor. The BCM provides both battery voltage and a pulse width modulated ground to the Q46 Air Conditioning Compressor Solenoid Valve. When the A/C switch is pressed, the BCM grounds the variable displacement solenoid using a (PWM) signal in order to determine the amount of compressor displacement. The performance of the A/C compressor is regulated based on cooling load.

E40 Air Heater (C32)

Some models are equipped with an auxiliary electric heater to assist in warming the passenger compartment when the engine coolant has not sufficiently warmed to

operating temperature. The air heater is a LIN device. The heater uses an ignition circuit, battery voltage circuit, ground circuit, and a serial data signal from the BCM to operate.

The heater is a 12 V positive temperature coefficient heating element located in the HVAC case just downstream of the traditional heater core. The system will activate the heater when the outside temperature is less than approximately 8°C (46°F), the engine coolant temperature is less than approximately 75°C (167°F), and the temperature blend door is commanded to the full hot position.

Air Delivery

The BCM controls the distribution of air by the use of recirculation and mode door actuators. The modes that may be selected are:

- Defrost: windshield outlet
- Panel: dashboard outlets
- Floor: front footwell outlets
- Defog: defrost + floor
- Bi-level: panel + floor
- Tri-level: panel + defrost + floor
- Hi-level: panel + defrost

The desired air distribution mode can be selected with the air distribution switches at the HVAC control. The HVAC control delivers the values to the BCM via serial data. The BCM sends a request to the mode door actuator to move the door to the required position. Depending on the position of the door, air is distributed through various ducts leading to the outlets in the dash. When defrost airflow is active, the BCM will move the recirculation actuator to outside air, to aid in reducing window fogging. When defrost is selected the blower motor will be activated, regardless of the coolant temperature. A/C is available in all modes.

Refer to the owners manual for operation of the HVAC controls and mode selection.

Recirculation Operation

The recirculation switch is integrated into the HVAC control. The selected recirculation setting is sent to the BCM via serial data. The BCM controls the air intake using the recirculation actuator. In recirculation mode the recirculation door is positioned to block outside air from entering and circulate the air within the vehicle. In outside air mode the recirculation door is positioned to route outside air into the vehicle.

Recirculation is only available if the defrost mode is not active. When the defrost mode is active, the recirculation actuator positions the recirculation door so that outside air is circulated to the windshield to reduce fogging.

Heating and A/C Operation

The purpose of the heating and A/C system is to provide heated and cooled air to the interior of the vehicle. The A/C system will also remove humidity from the interior and reduce windshield fogging. Regardless

of the temperature setting, the following may affect the rate that the HVAC system can achieve the desired temperature:

- Recirculation setting
- Difference between inside and desired temperature
- Blower motor speed setting
- Mode setting
- Dashboard outlet open/closed position

When the A/C switch or the AUTO switch is pressed, the HVAC control sends a signal to the BCM via serial data. The BCM evaluates this signal and sends an A/C request signal to the ECM via CAN-Bus. The ECM checks all preconditions before releasing and if all conditions are met sends a release signal back to the BCM. The A/C compressor is activated by the BCM. The BCM supplies battery voltage to the A/C compressor solenoid. When the A/C switch is pressed, the BCM provides a pulse width modulation (PWM) signal to the A/C compressor solenoid in order to command the performance of the A/C compressor. The performance of the A/C compressor is regulated using evaporator temperature and engine load.

The A/C indicator does not indicate the compressor is currently active. The A/C indicator shows that A/C has been requested and the system will activate the compressor as needed.

The following conditions must be met in order to activate the A/C compressor:

- Battery voltage is between 9–18 V
- Engine coolant temperature is less than 124°C (255°F)
- Engine speed is greater than 600 RPM
- Engine speed is less than 5 500 RPM
- A/C high side pressure is between 269–2 929 kPa (39–425 PSI)
- Throttle position is less than 100%
- Evaporator temperature is greater than 3°C (38°F)
- ECM does not detect immoderate torque load
- ECM does not detect insufficient idle quality
- The ambient temperature is above 1°C (34°F)

The sensor information is used by the ECM to determine the following:

- The A/C high side pressure
- An A/C system load on the engine
- An immoderate A/C high side pressure
- The heat load at the A/C condenser

The air streams into the passenger compartment through the heater core and the evaporator core. The air temperature actuator drives the mixed air door to direct the airflow. If the interior temperature should be increased, the mixed air door is put into the position in which more air streams through the heater core. If the interior temperature should be decreased, the mixed air door is put into the position in which more air streams through the evaporator core.

Engine Coolant and A/C System Refrigerant

For information on engine coolant, coolant flow, A/C refrigerant, and the A/C refrigerant cycle, refer to Heating and Air Conditioning System Description and Operation.

BLANK

Section 7

Power and Signal Distribution

Data Communications	7-3
Description and Operation	7-3
Data Link Communications Description and Operation	7-3
Electrical Component and Inline Harness	
Connector End Views	7-6
Component Locator	7-6
Electrical Center Identification Views	7-6
Component Connector End Views	7-57
Inline Harness Connector End Views	7-620
Power Outlets	7-764
Schematic and Routing Diagrams	7-764
Cigar Lighter/Power Outlet Schematics	7-765
Description and Operation	7-776
Power Outlets Description and Operation	7-776
Wiring Systems and Power	
Management	7-779
Schematic and Routing Diagrams	7-779
Master Electrical Schematic Icons	7-779
Power Distribution Schematics	7-780
Power Moding Schematics	7-818
Ground Distribution Schematics	7-820
Upfitter Provision Schematics	7-843
Description and Operation	7-846
Power Mode Description and Operation	7-846
Retained Accessory Power Description and Operation	7-850

BLANK

Data Communications

Description and Operation

Data Link Communications

Description and Operation

Note: This is an overview of different serial data buses used by control modules to communicate with each others. Use Data Communication Schematics to find out which serial data buses are configured for a specific vehicle.

Data Link Communications Overview

There are many components in a vehicle that rely on information from other sources, transmit information to other sources, or both. Serial data communication networks provide a reliable, cost effective, way for various components of the vehicle to “talk” to one another and share information.

General Motors uses a number of different communication buses to insure the timely and efficient exchange of information between control modules. When compared to each other, some of these buses are different in nature as far as speed, signal characteristics, and behavior.

On the other hand, when other buses are compared to each other they have similar characteristics and simply operate in parallel. In this case they are used to group together components which have high interaction. Examples are the Controller Area Network (CAN), private CAN, and LIN buses. This allows them to communicate with each other on a bus with reduced message congestion insuring faster and the more timely exchange of information than if all vehicle control modules were on a single bus.

The majority of information that exists within a given network generally stays local; however some information will have to be shared on other networks. Control modules designated as Gateway’s perform the function of transferring information between the various buses. A Gateway module is connected to at least 2 buses and will interact with each network according to its message strategy and transmission models.

CAN provides the capability for a receiving control module to monitor message transmissions from other control modules in order to determine if messages of interest are not being received. The primary purpose is to allow reasonable default values to be substituted for the information no longer being received. Additionally, a control module may set a Diagnostic Trouble Code (DTC) to indicate that the control module it is expecting information from is no longer communicating.

K9 Body Control Module (BCM)

The body control system consists of the K9 Body Control Module, communications, and various input and outputs. Some inputs, outputs and messages require other control modules to interact with the K9 Body Control Module. The K9 Body Control Module also has discrete input and output terminals to control the vehicle's body functions. The K9 Body Control

Module is wired to CAN bus and multiple Local Interconnect Network (LIN) buses and acts as a gateway between them.

The various K9 Body Control Module input and output circuits are illustrated in the corresponding functional areas on the K9 Body Control Module electrical schematics. Refer to the Body Control System Schematics for more detailed information.

K56 Serial Data Gateway Module

The K56 Serial Data Gateway Module gates messages between the CAN networks described in the Controller Area Network (CAN) Bus Description section below. The K56 Serial Data Gateway Module needs to know what CAN control modules are present on a given vehicle in order to enable/disable loss of communication DTCs and to know what CAN control modules to track for their communication status. The K56 Serial Data Gateway Module has the ability to learn the diagnostic addresses list of CAN control modules to identify what CAN control modules are equipped on the vehicle and what CAN buses they are on. If the K56 Serial Data Gateway Module is replaced, this learn/verification process will have to be done again through K56 Serial Data Gateway Module programming and setup procedure in SPS. This learn process will not cause any previously learned contents to be forgotten/overwritten. If the learn process is not done on a new K56 Serial Data Gateway Module, DTC U1977 will be set until the learn procedure is executed. If the learn is invalid due to control module internal malfunction or a K56 Serial Data Gateway Module swap, DTC U3000 42 or DTC U3002 56 will be set. If any of these DTCs sets, the K56 Serial Data Gateway Module will enable loss of communication for all CAN control modules. This will result in loss of communication DTCs being set against CAN control modules that are not equipped on the vehicle.

A fault can be localized by monitoring the normal mode messages on a CAN bus. The K56 Serial Data Gateway Module will monitor one signal per CAN control module per CAN bus to determine control module status. When a signal times out, a loss of communication event will be started.

Controller Area Network (CAN) Bus Description

The CAN buses are used where data needs to be exchanged at a high enough rate to minimize the delay between the occurrence of a change in sensor value and the reception of this information by a control device using the information to adjust vehicle system performance.

Each CAN serial data network consists of two twisted wires. One signal circuit is identified as CAN-High and the other signal circuit is identified as CAN-Low. At each end of the data bus there is a 120 Ω termination resistor between the CAN-High and CAN-Low circuits. Most CAN control modules have an internal resistance of 4.950K Ω. There may be one or two CAN control modules that have a higher internal resistance like the K60 Column Lock Module which has an internal resistance of 77.4K Ω. The internal resistance of CAN

7-4 Data Communications

control modules causes lower terminating resistor reading when splitting the CAN network to check for faults. The more CAN control modules on the network the lower the terminating resistor will read.

The data to be transmitted over a CAN bus is represented by the voltage difference between the CAN-High signal voltage and the CAN-Low signal voltage. Data symbols (1's and 0's) are transmitted sequentially at the following rate:

- CAN 1 (circuits 4986 & 4987) = 500 Kbit/s
- CAN 2 (circuits 4978 & 4979) = 2 Mbit/s
- CAN 3 (circuits 4976 & 4977) = 500 Kbit/s
- CAN 4 (circuits 4100 & 4101) = 500 Kbit/s
- CAN 5 (circuits 4984 & 4985) = 500 Kbit/s
- CAN 6 (circuits 4980 & 4981) = 5 Mbit/s
- CAN 7 (circuits 4982 & 4983) = 5 Mbit/s
- CAN 8 (circuits 4104 & 4105) = 2 Mbit/s
- CAN 9 (circuits 4102 & 4103) = 2 Mbit/s

When the two wire bus is at rest the CAN-High and CAN-Low signal circuits are not being driven and this represents a logic "1". In this state both signal circuits are at the same voltage of 2.5 V. The differential voltage is approximately 0 V.

When a logic "0" is to be transmitted, the CAN-High signal circuit is driven higher to about 3.5 V and the CAN-Low circuit is driven lower to about 1.5 V. The differential voltage becomes approximately 2.0 (+/- 0.5) V.

The CAN 1, CAN 2, CAN 3, CAN 4, CAN 5, CAN 8, and CAN 9 buses are used to communicate between the K56 Serial Data Gateway Module and other CAN control modules.

The CAN 8, and CAN 9 buses are reserved for the following systems:

- The CAN 8 bus is reserved for most control modules and sensors related to active safety system, if applicable.
- The CAN 9 bus is reserved for most control modules and sensors related to Hybrid/EV system, if applicable.

The following CAN buses are between the X84 Data Link Connector and the K56 Serial Data Gateway Module:

- The CAN 6 bus is used for CAN diagnostics and programming.
- The CAN 7 bus is used for programming by assembly plant only.
- The Private Presentation CAN 1 bus (circuits 2577 & 2578) is used by Engineering to observe data communications on CAN buses not directly accessible at the X84 Data Link Connector. It requires special security access and will not be used in a service environment.
- The Private Presentation CAN 2 bus (circuits 2579 & 2580) is used by Engineering to observe data communications on CAN buses not directly accessible at the X84 Data Link Connector. It requires special security access and will not be used in a service environment.

Private Powertrain CAN Bus Description

The Private Powertrain CAN bus (circuits 4054 & 4055) is reserved for Powertrain components. It has a transmission rate of 500 Kbit/s. Sometimes communication is required between the Private Powertrain CAN bus and another CAN bus. This is accomplished by using the K20 Engine Control Module (for gas vehicles) or K16 Battery Energy Control Module (for electric vehicles) as the Gateway module. Since the Private Powertrain CAN bus and other CAN buses operate in the same manner, the diagnostics for each are similar.

Local Interconnect Network (LIN) Bus Description

The LIN Bus consists of a single wire with a transmission rate of 10.417 Kbit/s. This bus is used to exchange information between a master control module and other smart devices which provide supporting functionality. This type of configuration does not require the capacity or speed of a CAN bus and is thus relatively simpler.

The data symbols (1's and 0's) to be transmitted are represented by different voltage levels on the communication bus. When the LIN Bus is at rest and is not being driven, the signal is in a high voltage state of approximately V_{batt} . This represents a logic "1". When a logic "0" is to be transmitted, the signal voltage is driven low to about ground (0.0 V).

Ethernet Bus Description

Ethernet is a data communication technology that uses a single twisted copper pair of wires at speeds of 100 Mbit/s and 1000 Mbit/s. The Ethernet system uses point-to-point communication that is connected via an Ethernet switch [Module <-> Switch <-> Module]. The Ethernet bus does not use terminating resistors.

The K56 Serial Data Gateway Module and the A11 Radio have an Ethernet switch that connects to other Ethernet modules. The K56 Serial Data Gateway Module and the A11 Radio communicate with other devices and systems in the vehicle via CAN and LIN buses. Diagnostic Trouble Codes will be read on CAN to diagnose Ethernet, LIN and system faults.

Note: Ethernet harness failures should only be repaired using an appropriate kit to perform de-pin/re-pin overlays or in cases where the wiring harness repair kits are not available, the entire harness should be replaced. No crimps or splicing should be performed on the Ethernet wiring harness.

Ethernet 1

Ethernet bus 1 consists of 2 twisted pair of wires [1 pair for Ethernet bus 1R (circuits 4972 & 4973) and 1 pair for Ethernet bus 1T (circuits 4974 & 4975)]. It is connected between X84 Data Link Connector (DLC) and K56 Serial Data Gateway Module. This bus is used for diagnostics and service programming of control modules using Ethernet instead of CAN. The K56 Serial Data Gateway Module will convert Ethernet serial data to CAN as necessary, and vice versa. There is an

Ethernet enable circuit (circuit 7207) which can be used to wake up the K56 Serial Data Gateway Module for Ethernet diagnostic and programming.

Ethernet 2

Ethernet bus 2 (circuits 4757 & 4758) is for connection between the A11 Radio and the K56 Serial Data Gateway Module.

Ethernet 3

Ethernet bus 3 (circuits 7208 & 7209) is for connection between the K56 Serial Data Gateway Module and K179 Automated Driving Mapping Module.

Ethernet 4

Ethernet bus 4 (circuits 7210 & 7211) is for connection between the following control modules:

- K56 Serial Data Gateway Module and K73 Communication Interface Module for vehicles equipped with IOR radio.
- A11 Radio and K73 Communication Interface Module for vehicles equipped with other radios.

Ethernet 5

Ethernet bus 5 (circuits 7212 & 7213) is for connection between the A11 Radio and P22F Video Display - Right Front Seat Back.

Ethernet 6

Ethernet bus 6 (circuits 7214 & 7215) is for connection between the A11 Radio and T3 Audio Amplifier.

Ethernet 7

Ethernet bus 7 (circuits 7216 & 7217) is for connection between the K56 Serial Data Gateway Module and P16 Instrument Panel Cluster Control Module or K190 Off-Board Charger Control Module.

Ethernet 11

Ethernet bus 11 (circuits 7224 & 7225) is for connection between the K124 Image Processing Module and K179 Automated Driving Mapping Module.

Ethernet 14

Ethernet bus 14 (circuits 7230 & 7231) is for connection between the A11 Radio and P29 Head-Up Display.

Ethernet 15

Ethernet bus 15 (circuits 7232 & 7233) is for connection between the K56 Serial Data Gateway Module, K161 Vehicle Performance Data Recorder, and P22F Video Display - Passenger Seat Back.

X84 Data Link Connector (DLC)

The X84 Data Link Connector is a standardized 16-cavity connector. Connector design and location is dictated by an industry wide standard, and is required to provide the following:

- Terminal 1: CAN Bus 7 Serial Data [+]
- Terminal 2: Private Presentation CAN Bus 1 Serial Data [+]
- Terminal 3: Ethernet Bus 1R [+]
- Terminal 4: Scan tool power ground
- Terminal 5: Common signal ground
- Terminal 6: CAN Bus 6 Serial Data [+]

- Terminal 7: Private Presentation CAN Bus 2 Serial Data [+]
- Terminal 8: Ethernet Bus 1 Enable Signal
- Terminal 9: CAN Bus 7 Serial Data [-]
- Terminal 10: Private Presentation CAN Bus 1 Serial Data [-]
- Terminal 11: Ethernet Bus 1R [-]
- Terminal 12: Ethernet Bus 1T [+]
- Terminal 13: Ethernet Bus 1T [-]
- Terminal 14: CAN Bus 6 Serial Data [-]
- Terminal 15: Private Presentation CAN Bus 2 Serial Data [-]
- Terminal 16: Scan tool power, B+

Serial Data Reference


The scan tool communicates over the various buses on the vehicle. When a scan tool is installed on a vehicle, the scan tool will try to communicate with every control module that could be optioned into the vehicle. If an option is not installed on the vehicle, the scan tool will display No Communication for that optional control module. In order to avert misdiagnoses of No Communication with a specific control module, refer to Data Link References for a list of control modules and the buses they communicate with. Use schematics and specific vehicle build RPO codes to determine optional control modules.

Electrical Component and Inline Harness Connector End Views

Component Locator

Electrical Center Identification Views

X50B Battery Distribution Engine Compartment Fuse Block Top View

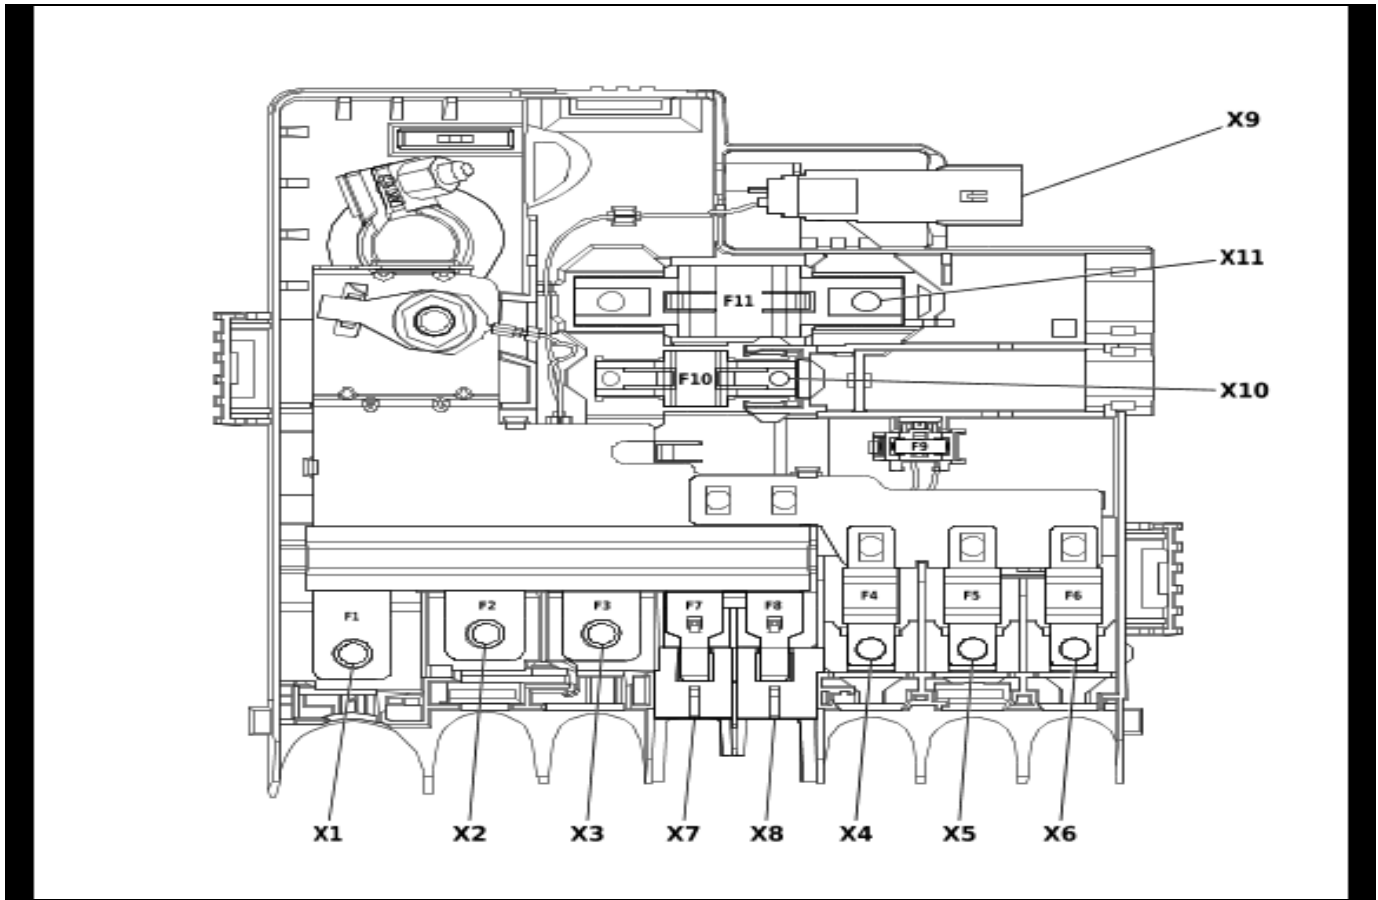

5070128


Usage Table

No.	Device Label Name	Device Assigned Name	Rating	Description
Fuses				
F1	—	F1BA	250A	<ul style="list-style-type: none"> G13 Generator X50A Engine Wiring Harness Junction Block
F2	—	F2BA	175A (L8T) 400A (L5P)	<ul style="list-style-type: none"> X50A Engine Wiring Harness Junction Block (L8T) X50EA Battery Distribution Fuse Block - Auxiliary (L5P)
F3	—	F3BA	400A	<ul style="list-style-type: none"> M64 Starter Motor
F4	—	F4BA	60A	<ul style="list-style-type: none"> E40 Air Heater (C3A)
F5	—	F5BA	100A (K4B) 60A (L5P)	<ul style="list-style-type: none"> X50EA Battery Distribution Fuse Block - Auxiliary (K4B) K20 Engine Control Module (L5P)
F6	—	F6BA	60A	<ul style="list-style-type: none"> K20 Engine Control Module (L5P)
F7	—	F7BA	60A	<ul style="list-style-type: none"> X51R Instrument Panel Wiring Harness Junction Block - Right

Usage Table (cont'd)

No.	Device Label Name	Device Assigned Name	Rating	Description
F8	—	F8BA	60A	<ul style="list-style-type: none"> • X51R Instrument Panel Wiring Harness Junction Block - Right
F9	—	F9BA	5A	<ul style="list-style-type: none"> • B110 Battery Sensor Module
F10	—	F10BA	60A	<ul style="list-style-type: none"> • X51AX Instrument Panel Wiring Harness Junction Block - Right (9L7)

X50B Battery Distribution Engine Compartment Fuse Block X1

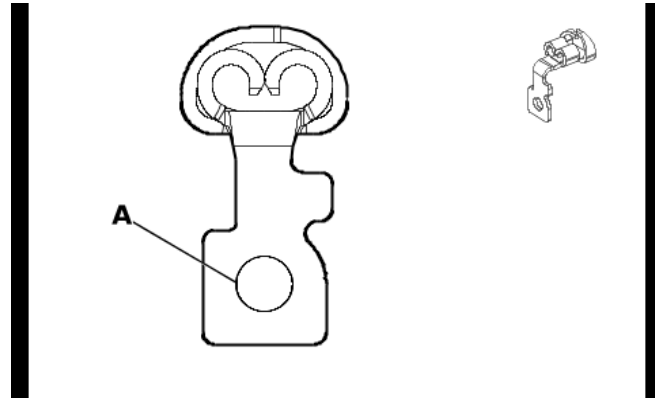

5911326

Connector Part Information

Harness Type: Starter Solenoid Cable
 OEM Connector: 84386516
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way Ring Terminal


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

X50B Battery Distribution Engine Compartment Fuse Block X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	35	RD / YE	2	Battery Positive Voltage	I	—

X50B Battery Distribution Engine Compartment Fuse Block X2

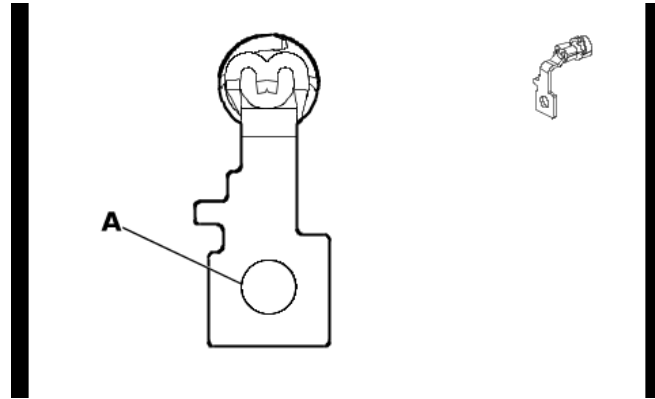

5664311

Connector Part Information

Harness Type: Battery Positive Cable
 OEM Connector: 84386514
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way Ring Terminal


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

X50B Battery Distribution Engine Compartment Fuse Block X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	25	RD / GN	242	Battery Positive Voltage	I	—

X50B Battery Distribution Engine Compartment Fuse Block X3

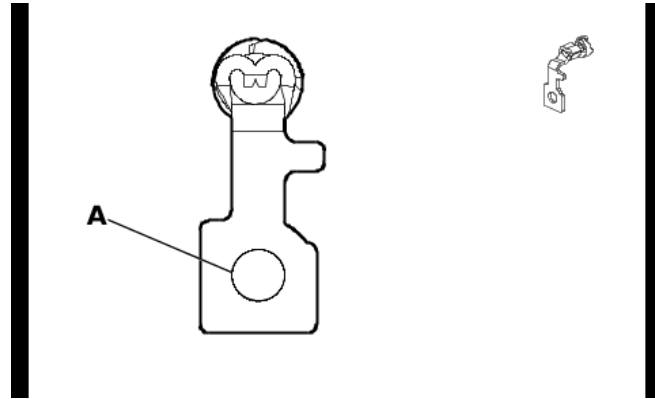

5881244

Connector Part Information

Harness Type: Starter Solenoid Cable
 OEM Connector: 84386515
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way Ring Terminal


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

X50B Battery Distribution Engine Compartment Fuse Block X3

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	35	RD / YE	2	Battery Positive Voltage	I	—

X50B Battery Distribution Engine Compartment Fuse Block X4

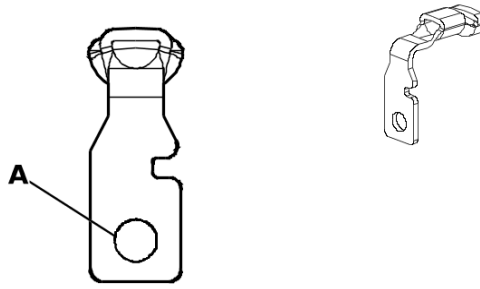

5194789

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 35085117
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way Ring Terminal


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

X50B Battery Distribution Engine Compartment Fuse Block X4

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	10	RD / GY	642	Battery Positive Voltage	I	—

X50B Battery Distribution Engine Compartment Fuse Block X5 (L5P)

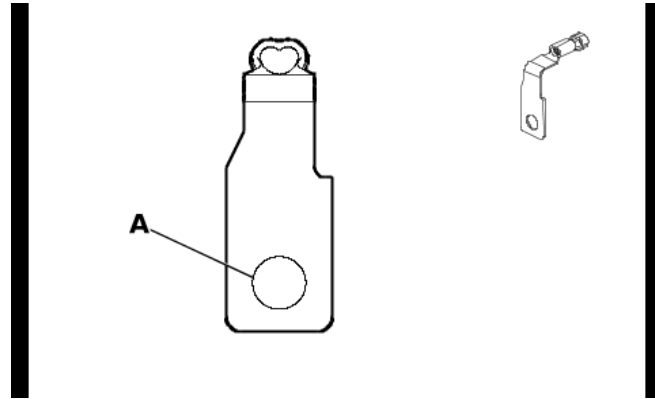

5373306

Connector Part Information

Harness Type: Engine Wiring Harness Chassis
 OEM Connector: 35169508
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way Ring Terminal


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

X50B Battery Distribution Engine Compartment Fuse Block X5 (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	6	BN / BU	104	Glow Plug Control	I	—

X50B Battery Distribution Engine Compartment Fuse Block X6 (L5P)

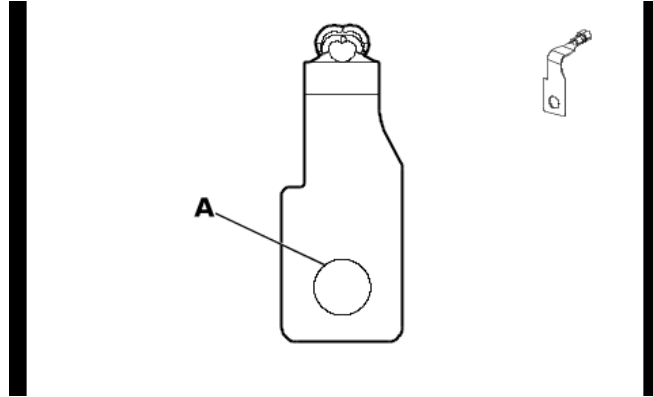

6167349

Connector Part Information

Harness Type: Engine Wiring Harness Chassis
 OEM Connector: 35510990
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way Ring Terminal


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

X50B Battery Distribution Engine Compartment Fuse Block X6 (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	6	BN / BU	104	Glow Plug Control	I	—

X50B Battery Distribution Engine Compartment Fuse Block X7

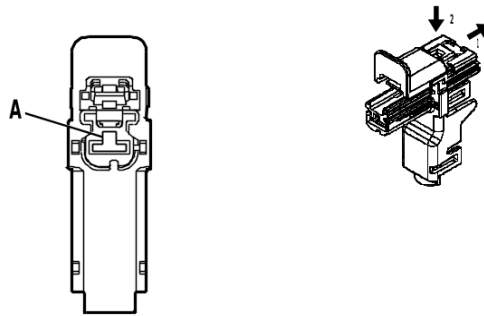

4994171

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 33297579
 Service Connector: Service by Harness - See Part Catalog
 Description: 1-Way F 6.3 Series(BU)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-42 (RD)	No Tool Required

X50B Battery Distribution Engine Compartment Fuse Block X7

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	5	RD / YE	1442	Battery Positive Voltage	I	—

X50B Battery Distribution Engine Compartment Fuse Block X8

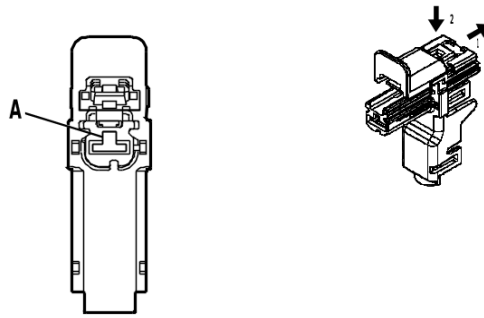

4994183

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 33297578
 Service Connector: Service by Harness - See Part Catalog
 Description: 1-Way F 6.3 Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-42 (RD)	No Tool Required

X50B Battery Distribution Engine Compartment Fuse Block X8

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	10	RD / WH	342	Battery Positive Voltage	I	—

X50B Battery Distribution Engine Compartment Fuse Block X9

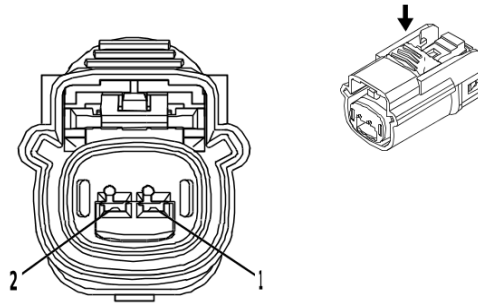

4332222

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 33314786
 Service Connector: 19368124
 Description: 2-Way F 1.5 OCS Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required

X50B Battery Distribution Engine Compartment Fuse Block X9

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	RD / YE	2340	Battery Positive Voltage	I	—
2	—	—	—	Not Occupied	—	—

X50B Battery Distribution Engine Compartment Fuse Block X10

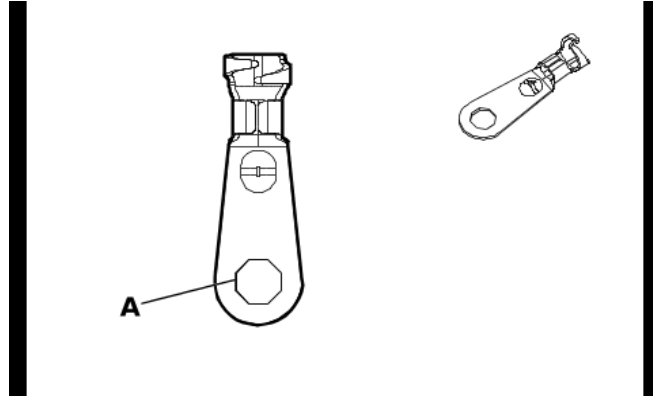

5920578

Connector Part Information

Harness Type: Auxiliary Fuse Block Wiring Harness
 OEM Connector: 13624367
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way Ring Terminal

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

X50B Battery Distribution Engine Compartment Fuse Block X10

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	10	RD / VT	542	Battery Positive Voltage	I	—
A	—	—	—	Not Occupied	—	—

X50EA Battery Distribution Fuse Block - Auxiliary X2 (L5P)

Connector Part Information

Harness Type: Right Side Marker Lamp Harness
 OEM Connector: 84668601
 Service Connector: Service by Harness - See Part Catalog
 Description: 1-Way


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

X50EA Battery Distribution Fuse Block - Auxiliary X2 (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	—	RD / YE	2	Battery Positive Voltage	I	L5P
	—	RD / GN	242	Battery Positive Voltage		L5P

X50EA Battery Distribution Fuse Block - Auxiliary X3 (K4B)

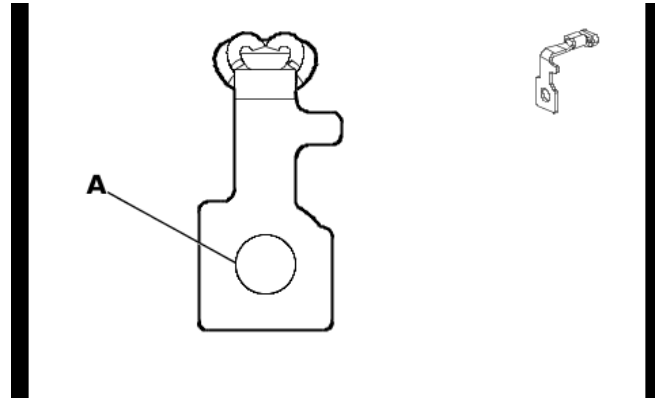

5873864

Connector Part Information

Harness Type: Right Side Marker Lamp Harness
 OEM Connector: 84537527
 Service Connector: Service by Harness - See Part Catalog
 Description: 1-Way Ring Terminal


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

X50EA Battery Distribution Fuse Block - Auxiliary X3 (K4B)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	—	RD / GN	742	Battery Positive Voltage	I	K4B
	—	RD / YE	2	Battery Positive Voltage	I	L5P+ KHF

X50EA Battery Distribution Fuse Block - Auxiliary X6 (K4B)

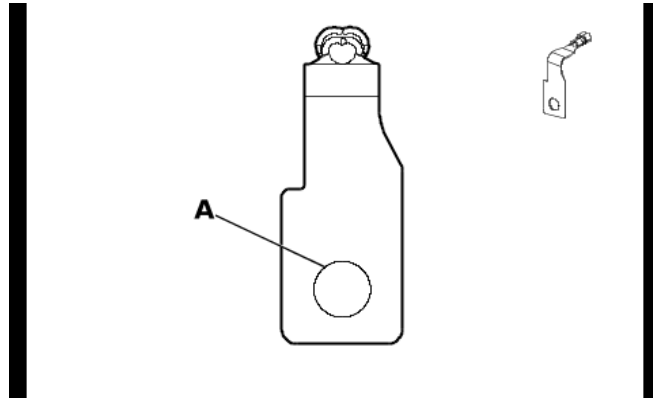

6167349

Connector Part Information

Harness Type: Right Side Marker Lamp Harness
 OEM Connector: 84392525
 Service Connector: Service by Harness - See Part Catalog
 Description: 1-Way Ring Terminal


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required


X50EA Battery Distribution Fuse Block - Auxiliary X6 (K4B)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	—	RD / VT	842	Battery Positive Voltage	I	—

X50A Engine Wiring Harness Junction Block Label

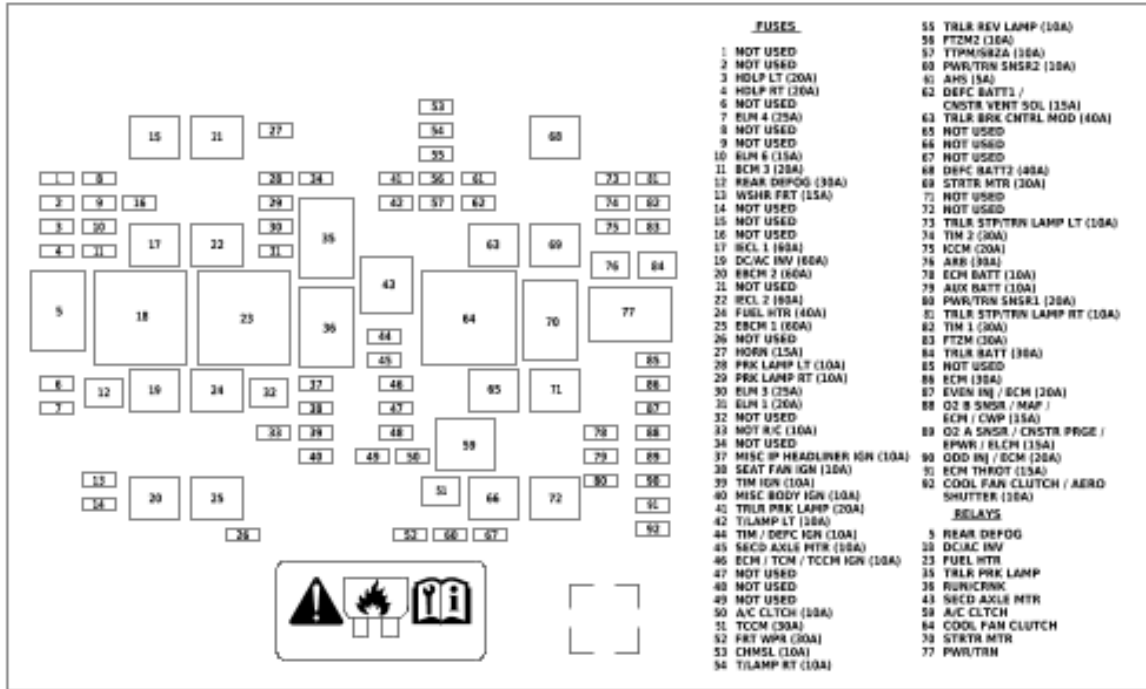

X50A Engine Wiring Harness Junction Block Top View

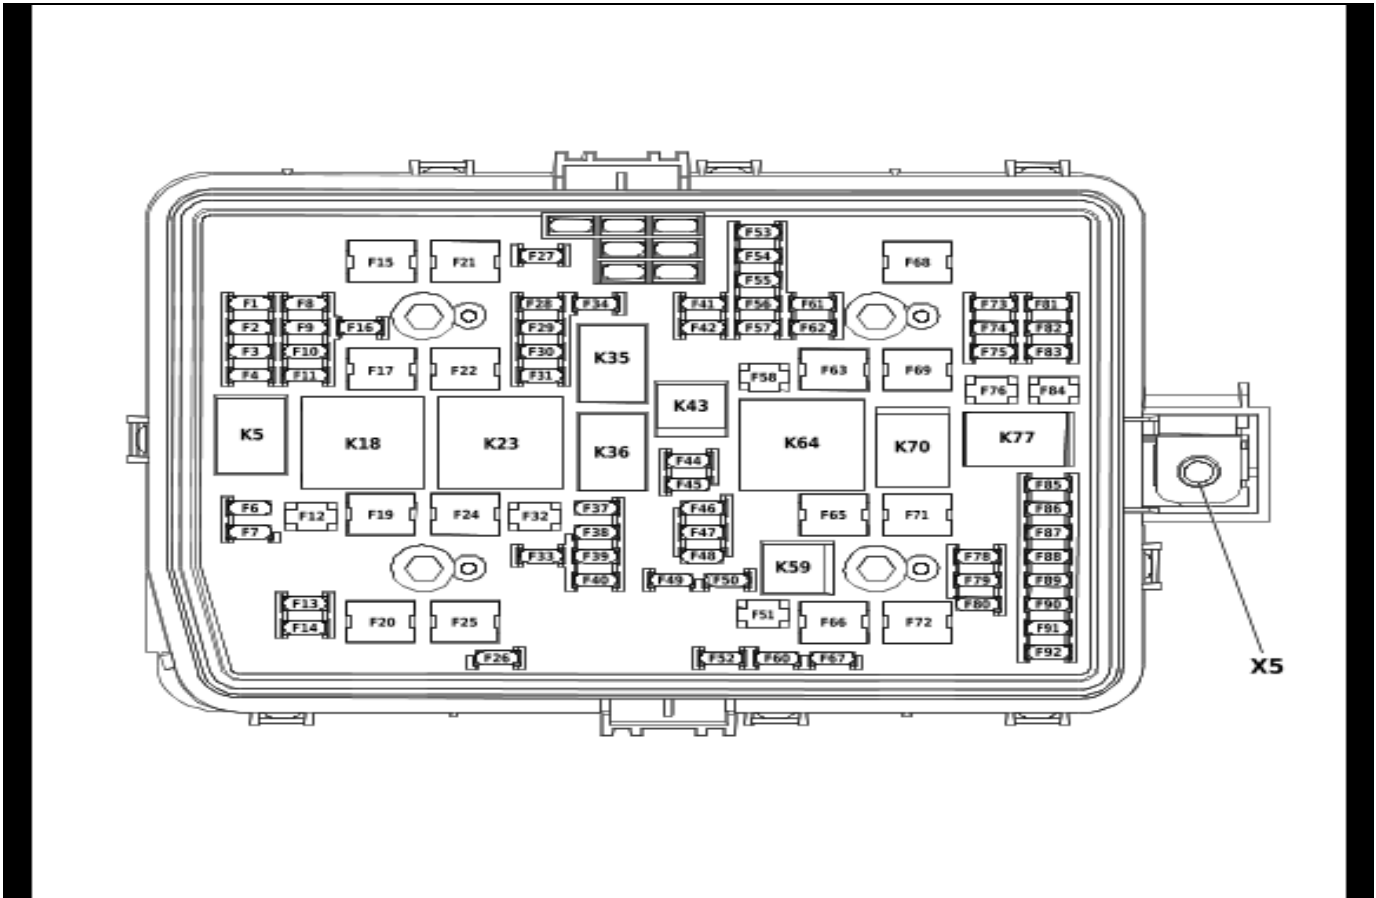

6013389

Usage Table

No.	Device Label Name	Device Assigned Name	Rating	Description
Fuses				
F1	NOT USED	F1UA	—	• Not Used
F2	NOT USED	F2UA	—	• Not Used
F3	HDLP LT	F3UA	20A	• E13LA Front Headlamp - Left
F4	HDLP RT	F4UA	20A	• E13RA Front Headlamp - Right
F6	ELM 7	F6UA	25A	• Not Used
F7	ELM 4	F7UA	25A	• K219 Lighting Control Module
F8	NOT USED	F8UA	—	• Not Used
F9	ELM 5	F9UA	25A	• Not Used
F10	ELM 6	F10UA	15A	• K219 Lighting Control Module
F11	BCM 2	F11UA	20A	• K9 Body Control Module
F12	REAR DEFOG	F12UA	30A	• E18 Rear Window Defogger Grid
F13	WSHR FRT	F13UA	15A	• G24 Windshield Washer Pump
F14	NOT USED	F14UA	—	• Not Used
F15	NOT USED	F15UA	—	• Not Used
F16	NOT USED	F16UA	—	• Not Used
F17	IECL 1	F17UA	60A	• X53AF Body Wiring Harness Junction Block
F19	DC/AC INV	F19UA	60A	• T1 DC/AC Converter Control Module (K14/K15)

Usage Table (cont'd)

No.	Device Label Name	Device Assigned Name	Rating	Description
F20	IECR2	F20UA	60A	• K160 Brake System Control Module
F21	NOT USED	F21UA	—	• Not Used
F22	IECL 2	F22UA	60A	• X53AF Body Wiring Harness Junction Block
F24	FUEL HTR	F24UA	40A	• R29 Fuel Filter (L5P)
F25	EBCM	F25UA	60A	• K160 Brake System Control Module
F26	NOT USED	F26UA	—	• Not Used
F27	HORN	F27UA	15A	• P13 Horn
F28	PARK LAMP LT	F28UA	10A	<ul style="list-style-type: none"> • A9A Outside Rearview Mirror - Driver (DBG/DWI/DZC) • A9B Outside Rearview Mirror - Passenger (DBG/DWI/DZC) • E3A Front Clearance Lamp - Roof Left Outer • E3FA Front Identification Lamp • E3E Front Clearance Lamp - Roof Right Outer • E3LF Rear Clearance Lamp - Fender Left Front • E3LR Rear Clearance Lamp - Fender Left Rear • E3RF Rear Clearance Lamp - Fender Right Front • E3RR Rear Clearance Lamp - Fender Right Rear • E3RA Rear Identification Lamp
F29	PARK LAMP RT	F29UA	10A	• Not Used
F30	ELM 3	F30UA	25A	• K219 Lighting Control Module
F31	ELM 1	F31UA	20A	• K219 Lighting Control Module
F32	NOT USED	F32UA	—	• Not Used
F33	NOT R/C	F33UA	10A	• K60 Column Lock Module
F34	RADARS	F34UA	10A	• Not Used
F37	MISC IP HEAD-LINER IGN	F37UA	10A	<ul style="list-style-type: none"> • A10 Inside Rearview Mirror • E40 Air Heater (C32) • P16 Instrument Panel Cluster Control Module • P43 Forward Collision Alert Display ((UEU/UHX)-UV6) • B87CA Auxiliary Rearview Camera - Cargo Area (UVO)
F38	SEAT FAN IGN	F38UA	10A	<ul style="list-style-type: none"> • M73A Front Seat Back Ventilation Blower - Driver (KQV) • M73B Front Seat Back Ventilation Blower - Passenger (KQV) • M73D Front Seat Cushion Ventilation Blower - Driver (KQV) • M73P Front Seat Cushion Ventilation Blower - Passenger (KQV)
F39	NOT USED	F39UA	10A	• K68 Trailer Lamp Control Module (UET)
F40	MISC BODY IGN	F40UA	10A	<ul style="list-style-type: none"> • K36 Restraints Control Module • K160 Brake System Control Module • K219 Lighting Control Module • T1 DC/AC Converter Control Module (K14/KI5)
F41	TRLR PRK LAMP / GRT GRILLE LAMP	F41UA	20A	• X88B Tow Vehicle Electrical Receptacle (Z82-UET)
F42	NOT USED	F42UA	—	• Not Used

7-24 Electrical Component and Inline Harness Connector End Views

Usage Table (cont'd)

No.	Device Label Name	Device Assigned Name	Rating	Description
F44	TIM / DEFC / ICCM IGN	F44UA	10A	<ul style="list-style-type: none"> • K38 Chassis Control Module (G94) • K111 Fuel Pump Power Control Module • K115 Reductant Control Module (L5P)
F45	SECD AXLE MTR	F45UA	10A	<ul style="list-style-type: none"> • Not Used
F46	ECM / TCM / TCCM IGN	F46UA	15A	<ul style="list-style-type: none"> • K20 Engine Control Module • K71 Transmission Control Module • K69 Transfer Case Control Module
F47	NOT USED	F47UA	—	<ul style="list-style-type: none"> • Not Used
F48	NOT USED	F48UA	—	<ul style="list-style-type: none"> • Not Used
F49	TRANS AUX OIL PUMP	F49UA	15A	<ul style="list-style-type: none"> • Not Used
F50	A/C CLTCH	F50UA	10A	<ul style="list-style-type: none"> • Q2 Air Conditioning Clutch
F51	TCCM	F51UA	30A	<ul style="list-style-type: none"> • K69 Transfer Case Control Module (NP0/NQH)
F52	FRT WPR	F52UA	30A	<ul style="list-style-type: none"> • M75 Windshield Wiper Motor
F53	CHMSL	F53UA	10A	<ul style="list-style-type: none"> • E6A High Mount Stop and Cargo Lamp (Regular Cab)
F54	NOT USED	F54UA	10A	<ul style="list-style-type: none"> • E42L Rear Body Structure Stop Lamp - Left
F55	TRLR REV LAMP	F55UA	10A	<ul style="list-style-type: none"> • X88B Tow Vehicle Electrical Receptacle (Z82-UET)
F56	SADS	F56UA	10A	<ul style="list-style-type: none"> • Not Used
F57	TTPM/SBZA	F57UA	10A	<ul style="list-style-type: none"> • B218L Side Obstacle Detection Control Module - Left (UKC/UKV) • B218R Side Obstacle Detection Control Module - Right (UKC/UKV) • K214 Trailer Tire Pressure Indicator Module (UET)
F58	STRTR MTR	F58UA	30A	<ul style="list-style-type: none"> • Not Used
F60	PWR/TRN SNSR2	F60UA	10A	<ul style="list-style-type: none"> • B195A Nitrogen Oxides Sensor 1 (L5P) • K44 Power Takeoff Control Module (PTO)
F61	NOT USED	F61UA	5A	<ul style="list-style-type: none"> • K43 Power Steering Control Module (NV8)
F62	DEFC BATT1 / ICCM / CNSTR VENT SOL	F62UA	15A	<ul style="list-style-type: none"> • K115 Reductant Control Module (L5P) • Q13 Evaporative Emission Canister Vent Solenoid Valve (L8T)
F63	TRLR BRK CNTRL MOD	F63UA	40A	<ul style="list-style-type: none"> • K67 Trailer Brake Control Module (JL1) • W24 Blunt Cut - Trailer Brakes Provision (JL1+Z82)
F65	NOT USED	F65UA	—	<ul style="list-style-type: none"> • Not Used
F66	COOL FAN MTR LT	F66UA	50A	<ul style="list-style-type: none"> • Not Used
F67	NOT USED	F67UA	—	<ul style="list-style-type: none"> • Not Used
F68	DEFC BATT2	F68UA	40A	<ul style="list-style-type: none"> • K115 Reductant Control Module (L5P)
F69	STRTR PINION	F69UA	40A	<ul style="list-style-type: none"> • M64 Starter Motor
F71	COOL FAN MTR LWR	F71UA	50A	<ul style="list-style-type: none"> • Not Used
F72	COOL FAN MTR RT	F72UA	50A	<ul style="list-style-type: none"> • Not Used
F73	TRLR STP/TRN LAMP LT	F73UA	10A	<ul style="list-style-type: none"> • X88B Tow Vehicle Electrical Receptacle (Z82-UET)
F74	TIM 2	F74UA	30A	<ul style="list-style-type: none"> • K68 Trailer Lamp Control Module (UET)
F75	NOT USED	F75UA	20A	<ul style="list-style-type: none"> • K38 Chassis Control Module (G94)
F76	ARB	F76UA	30A	<ul style="list-style-type: none"> • K4 Running Board Control Module (BRS)
F78	ECM BATT	F78UA	15A	<ul style="list-style-type: none"> • K20 Engine Control Module


Usage Table (cont'd)

No.	Device Label Name	Device Assigned Name	Rating	Description
F79	AUX BATT	F79UA	10A	• X50EA Battery Distribution Fuse Block - Auxiliary
F80	PWR/TRN SNSR1	F80UA	20A	• B195B Nitrogen Oxides Sensor 2 (L5P) • M103 Turbocharger Vane Position Actuator (L5P) • B136 Exhaust Particulate Matter Sensor (L5P) • K111 Fuel Pump Power Control Module (L5P) • R29 Fuel Filter (L5P)
F81	TRLR STP/TRN LAMP RT	F81UA	10A	• X88B Tow Vehicle Electrical Receptacle (Z82-UET)
F82	TIM 1	F82UA	30A	• K68 Trailer Lamp Control Module (UET)
F83	FTZM	F83UA	30A	• K111 Fuel Pump Power Control Module
F84	TRLR BATT	F84UA	30A	• X88B Tow Vehicle Electrical Receptacle (Z82)
F85	NOT USED	F85UA	—	• Not Used
F86	ECM	F86UA	30A	• K20 Engine Control Module
F87	EVEN INJ / ECM	F87UA	20A	• K20 Engine Control Module (L8T) • T8B Ignition Coil 2 (L8T) • T8D Ignition Coil 4 (L8T) • T8F Ignition Coil 6 (L8T) • T8H Ignition Coil 8 (L8T)
F88	O2 B SNSR / MAF / ECM / EVAP / CWP / BCV	F88UA	15A	• B75 Mass Airflow Sensor • B52D Heated Oxygen Sensor - Bank 1 Sensor 2 (L8T) • B52F Heated Oxygen Sensor - Bank 2 Sensor 2 (L8T) • K20 Engine Control Module • M10 Charge Air Cooler Coolant Pump (L5P)
F89	O2 A SNSR / CNSTR PRGE / EPWR / WRAF / TURBO BYPASS / STEP CAM	F89UA	15A	• B52C Heated Oxygen Sensor - Bank 1 Sensor 1 (L8T) • B52E Heated Oxygen Sensor - Bank 2 Sensor 1 (L8T) • Q12 Evaporative Emission Canister Purge Solenoid Valve (L8T) • G34 Evaporative Emission System Leak Detection Pump (L8T) • Q44 Engine Oil Pressure Control Solenoid Valve (L8T)
F90	ODD INJ / ECM	F90UA	20A	• K20 Engine Control Module (L8T) • T8A Ignition Coil 1 (L8T) • T8C Ignition Coil 3 (L8T) • T8E Ignition Coil 5 (L8T) • T8G Ignition Coil 7 (L8T)
F91	NOT USED	F91UA	15A	• K20 Engine Control Module
F92	AERO SHUTTER	F92UA	10A	• M96A Active Grille Air Shutter Actuator 1 (VTI) • Q85 Cooling Fan Clutch (L5P)
Relays				
K5	REAR DEFOG	KR5 Rear Window Defogger Relay	—	• F12UA
K18	DC/AC INV	KR202 Accessory AC and DC Power Control Module Relay	—	• F19UA
K23	FUEL HTR	KR22 Fuel Heater Relay	—	• R29 Fuel Filter (L5P)

Usage Table (cont'd)


No.	Device Label Name	Device Assigned Name	Rating	Description
K35	TRLR PRK LAMP/ FRT GRILLE LAMP	KR53 Parking Lamp Relay	—	<ul style="list-style-type: none"> • F28UA • F41UA
K36	RUN/CRNK	KR73 Ignition Main Relay	—	<ul style="list-style-type: none"> • F33UA • F37UA • F38UA • F39UA • F40UA • F44UA • F46UA
K43	SECD AXLE MTR	KR203 Front Drive Axle Actuator Re- lay	—	<ul style="list-style-type: none"> • M26 Front Drive Axle Actuator
K59	A/C CLTCH	KR29 A/C Com- pressor Clutch Re- lay	—	<ul style="list-style-type: none"> • F50UA
K64	STRTR MTR	KR27 Starter Motor	—	<ul style="list-style-type: none"> • M64 Starter Motor
K77	PWR/TRN	KR75 Engine Con- trols Ignition Relay	—	<ul style="list-style-type: none"> • F86UA • F87UA • F88UA • F89UA • F90UA • F91UA • F92UA • KR29 Air Conditioning Compressor Relay
Note: Relays listed below are non-serviceable Printed Circuit Board (PCB) relays and are internal to the block.				
—	—	KR3 Horn Relay	—	<ul style="list-style-type: none"> • F27UA
—	—	KR11 Windshield Washer Pump Re- lay	—	<ul style="list-style-type: none"> • G24 Windshield Washer Pump
—	—	KR12B Windshield Wiper Motor Relay	—	<ul style="list-style-type: none"> • M75 Windshield Wiper Motor
—	—	KR12C Windshield Wiper Motor Speed Control Relay	—	<ul style="list-style-type: none"> • M75 Windshield Wiper Motor
—	—	KR61 Trailer Back- up Lamp Relay	—	<ul style="list-style-type: none"> • F53UA
—	—	KR63L Trailer Stop/Turn Signal Lamp Relay - Left	—	<ul style="list-style-type: none"> • F55UA
—	—	KR63R Trailer Stop/Turn Signal Lamp Relay - Right	—	<ul style="list-style-type: none"> • F73UA
—	—	KR200 Engine Controls Sensor Supply Voltage Re- lay	—	<ul style="list-style-type: none"> • F81UA
—	—	KR41 High Mount stop Lamp Relay	—	<ul style="list-style-type: none"> • F60UA • F80UA

X50A Engine Wiring Harness Junction Block Bottom View

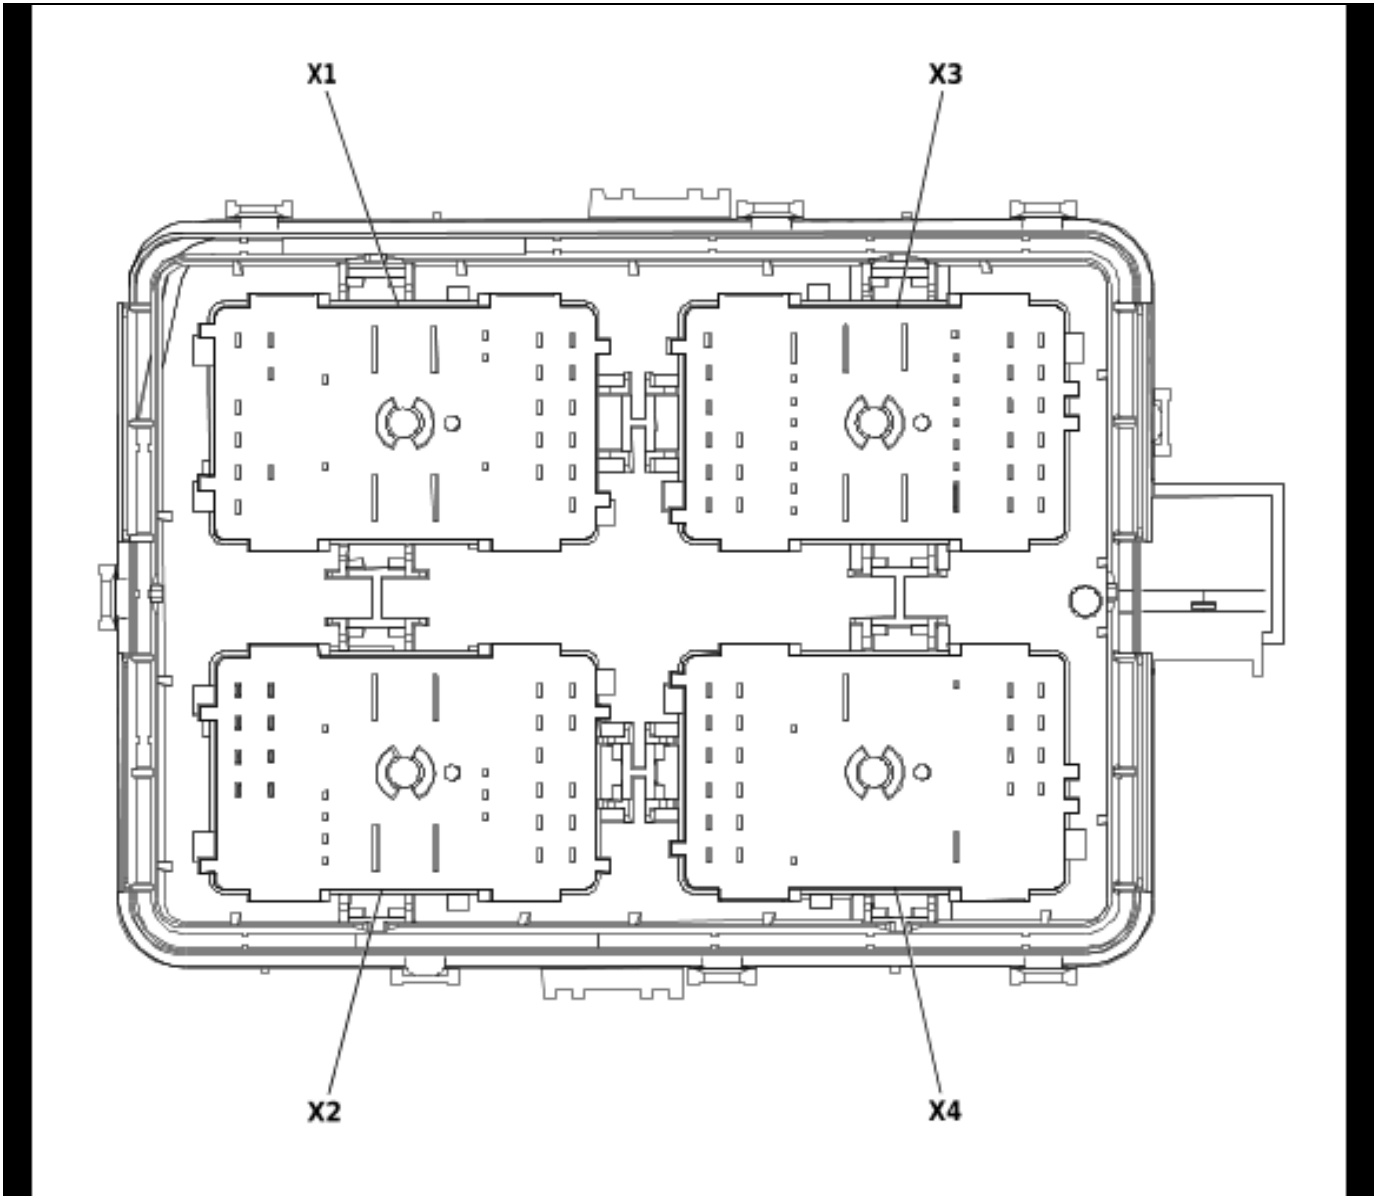

5041382

X50A Engine Wiring Harness Junction Block X1

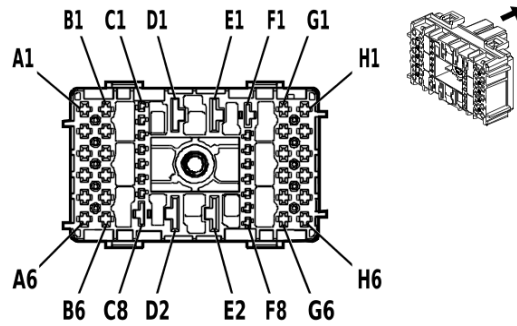

4994109

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 33384590
 Service Connector: 19370824
 Description: 44-Way F 1.5, 2.8, 6.3 CTS, 9.5 MCON-LL Series(BU)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19369711	J-35616-14 (GN)	EL-38125-560A
II	84764079	J-35616-44 (YE)	J-38125-11A
III	84779405	J-35616-35 (VT)	J-38125-215A


X50A Engine Wiring Harness Junction Block X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A1	—	—	—	Not Occupied	—	—
A2	1.5	RD / BU	540	Battery Positive Voltage	III	—
A3	0.35	BN / VT	193	Rear Defogger Relay Control	III	—
A4	0.5	BK	650	Ground	III	—
A5	0.75	GY / VT	228	Windshield Washer Pump Control	III	—
A6 - B1	—	—	—	Not Occupied	—	—
B2	2.5	BN / VT	293	Rear Defogger Grid Control	III	—
B3 - C2	—	—	—	Not Occupied	—	—
C3	0.5	WH / GN	4628	DC/AC Inverter Relay Control	I	—
C4	0.35	BN / GY	2268	Windshield Washer Relay Control	I	—
C5 - C8	—	—	—	Not Occupied	—	—
D1	5	BN / BK	4629	DC/AC Inverter Control	II	—
D2	6	RD / WH	1642	Battery Positive Voltage	II	—
E1	—	—	—	Not Occupied	—	—
E2	6	RD / WH	1040	Battery Positive Voltage	II	—
F1 - F5	—	—	—	Not Occupied	—	—
F6	0.35	WH / VT	860	Windshield Wiper Switch High Signal	I	—
F7 - G2	—	—	—	Not Occupied	—	—
G3	0.35	BU / VT	807	Ignition Off/Accessory Ignition Voltage	III	—
G4	0.5	GN / VT	5199	Run/Crank Relay Coil Control	III	—

X50A Engine Wiring Harness Junction Block X1 (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
G5	2	BK	150	Ground	III	—
G6	0.35	GY	91	Windshield Wiper Motor Relay Coil Control	III	—
H1	0.5	VT / BK	339	Run/Crank Ignition 1 Voltage	III	—
H2	0.75	VT / WH	1139	Run/Crank Ignition 1 Voltage	III	—
H3	0.5	VT / BK	739	Run/Crank Ignition 1 Voltage	III	—
H4	0.5	VT / WH	239	Run/Crank Ignition 1 Voltage	III	—
H5	2	WH	92	Windshield Wiper Motor High Speed Control	III	—
H6	2	YE / BN	95	Windshield Wiper Motor Low Speed Control	III	—

X50A Engine Wiring Harness Junction Block X2

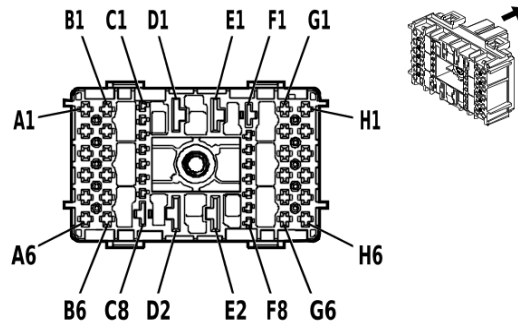

4994132

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 33384594
 Service Connector: 19371174
 Description: 44-Way F 1.5, 2.8, 6.3 CTS, 9.5 MCON-LL Series(GN)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19369711	J-35616-14 (GN)	EL-38125-560A
II	84779405	J-35616-35 (VT)	J-38125-215A
III	Not required	J-35616-44 (YE)	No Tool Required


X50A Engine Wiring Harness Junction Block X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A1 - A4	—	—	—	Not Occupied	—	—
A5	1.5	RD / WH	640	Battery Positive Voltage	II	—
A6	1.5	RD / YE	740	Battery Positive Voltage	II	—
B1 - B4	—	—	—	Not Occupied	—	—
B5	0.5	RD / BU	840	Battery Positive Voltage	II	—
B6	1	GN / YE	6840	Auxiliary Device 2 Switched Voltage	II	—
C1	0.35	YE / BU	318	Left Rear Trailer Stop/Turn Lamp Control	I	—
C2	0.35	GN / BN	319	Right Rear Trailer Stop/Turn Lamp Control	I	—
C3 - D1	—	—	—	Not Occupied	—	—
D2	10	RD / GY	142	Battery Positive Voltage	III	—
E1	—	—	—	Not Occupied	—	—
E2	10	RD / GN	242	Battery Positive Voltage	III	—
F1	—	—	—	Not Occupied	—	—
F2	0.5 0.35	BN / YE BN / YE	820 820	Center High Mounted Stop Lamp Supply Voltage Center High Mounted Stop Lamp Supply Voltage	I I	UET - UET
F3	0.35	BU / BN	38	Backup Lamp Relay Control	I	—
F4	0.35	BN / WH	28	Horn Relay Control	I	—
F5 - F8	—	—	—	Not Occupied	—	—
G1	0.75	BN / GY	29	Horn Control	II	—
G2	—	—	—	Not Occupied	—	—

X50A Engine Wiring Harness Junction Block X2 (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
G3	0.5	BN / GN	4246	Identification Lamp Control	II	—
G4	—	—	—	Not Occupied	—	—
G5	1.5	RD / BN	1440	Battery Positive Voltage	II	—
G6	1	RD / BN	1140	Battery Positive Voltage	II	—
H1	0.5	BU / BK	1053	Center High Mounted Stop Lamp Control 3	II	—
H2 - H5	—	—	—	Not Occupied	—	—
H6	0.35	WH / BN	7055	Auxiliary Park Lamp Relay Control	II	—

X50A Engine Wiring Harness Junction Block X3 (L5P)

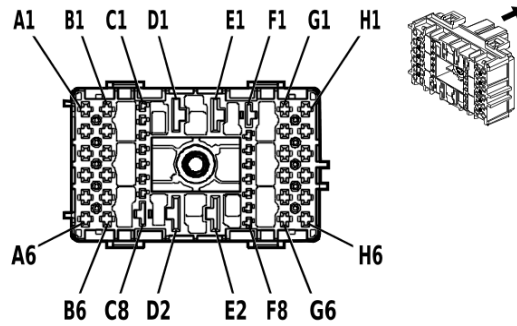

4992608

Connector Part Information

Harness Type: Engine Wiring Harness Chassis
 OEM Connector: 33384584
 Service Connector: Service by Harness - See Part Catalog
 Description: 44-Way F 1.5, 2.8, 6.3 CTS, 9.5 MCON-LL Series(GY)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required
II	Not required	J-35616-35 (VT)	No Tool Required
III	Not required	J-35616-40 (BU)	No Tool Required


X50A Engine Wiring Harness Junction Block X3 (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A1	0.75	VT / GN	439	Run/Crank Ignition 1 Voltage	II	—
A2 - A3	—	—	—	Not Occupied	—	—
A4	0.75	BN / GN	59	Air Conditioning Compressor Clutch Control	II	—
A5	—	—	—	Not Occupied	—	—
A6	0.5	GN	8016	Secondary Axle Motor Control	II	—
B1	0.5	WH	2368	Cooling Fan Control Signal	II	—
B2	0.5	VT / BU	5705	Powertrain Main Relay Control	II	—
B3	0.5	VT / GY	8017	Secondary Axle Motor Relay Control	II	—
B4 - B5	—	—	—	Not Occupied	—	—
B6	3	GN / RD	6042	Cruise Control Switch 5V Reference	II	—
C1	0.5	BU	3017	Fuel Heater Relay 1 Control	I	—
C2	0.5	WH / BK	2366	Cooling Fan Speed Control Signal	I	—
C3	1.5	BK	450	Ground	I	—
C4	0.5	WH / GY	459	Air Conditioning Compressor Clutch Relay Control	I	—
C5	0.5	GN / BU	3889	Powertrain Sensor Bus Relay Control	I	—
C6	0.75	VT / GN	4320	Powertrain Sensor Bus Enable	I	—
C7 - E2	—	—	—	Not Occupied	—	—
F1	2.5	YE	6	Starter Solenoid Crank Ignition Voltage	III	—
F2	0.5	YE / BK	625	Starter Enable Relay Control	I	—

X50A Engine Wiring Harness Junction Block X3 (L5P) (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
F3	0.75	RD / BN	440	Battery Positive Voltage	I	—
F4	0.5	YE	5991	Powertrain Relay Coil Control	I	—
F5 - F6	—	—	—	Not Occupied	—	—
F7	0.5	VT / BU	5705	Powertrain Main Relay Control	I	—
F8 - G4	—	—	—	Not Occupied	—	—
G5	1.5	VT / GN	4320	Powertrain Sensor Bus Enable	II	—
G6	—	—	—	Not Occupied	—	—
H1	4	VT / BU	5290	Powertrain Main Relay Fused Supply Voltage 1	II	—
H2	—	—	—	Not Occupied	—	—
H3	1	VT / BU	5294	Powertrain Main Relay Fused Supply Voltage 5	II	—
H4 - H5	—	—	—	Not Occupied	—	—
H6	2.5	VT / BU	5290	Powertrain Main Relay Fused Supply Voltage 1	II	—

X50A Engine Wiring Harness Junction Block X3 (L8T)

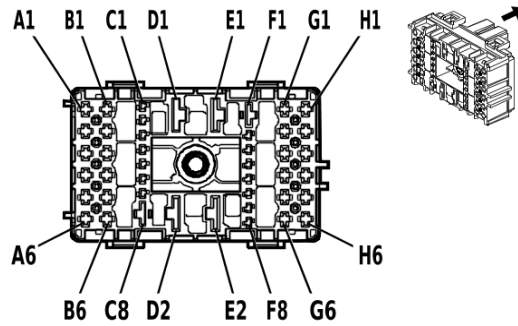

4992608

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 33384584
 Service Connector: 19371176
 Description: 44-Way F 1.5, 2.8, 6.3 CTS, 9.5 MCON-LL Series(GY)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19369711	J-35616-14 (GN)	EL-38125-560A
II	84764078	J-35616-42 (RD)	J-38125-215A
III	84779405	J-35616-35 (VT)	J-38125-215A


X50A Engine Wiring Harness Junction Block X3 (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A1	0.75	VT / GN	439	Run/Crank Ignition 1 Voltage	III	—
A2 - A3	—	—	—	Not Occupied	—	—
A4	0.75	BN / GN	59	Air Conditioning Compressor Clutch Control	III	—
A5	—	—	—	Not Occupied	—	—
A6	0.5	GN	8016	Secondary Axle Motor Control	III	—
B1 - B2	—	—	—	Not Occupied	—	—
B3	0.5	VT / GY	8017	Secondary Axle Motor Relay Control	III	—
B4 - B5	—	—	—	Not Occupied	—	—
B6	3	GN / RD	6042	Cruise Control Switch 5V Reference	III	—
C1 - C2	—	—	—	Not Occupied	—	—
C3	1.5	BK	450	Ground	I	—
C4	0.5	WH / GY	459	Air Conditioning Compressor Clutch Relay Control	I	—
C5 - E2	—	—	—	Not Occupied	—	—
F1	2.5	YE	6	Starter Solenoid Crank Ignition Voltage	II	—
F2	0.5	YE / BK	625	Starter Enable Relay Control	I	—
F3	0.5	RD / BN	440	Battery Positive Voltage	I	—
F4	0.5	YE	5991	Powertrain Relay Coil Control	I	—
F5	0.5	RD / WH	3440	Battery Positive Voltage	I	—
F6	—	—	—	Not Occupied	—	—

X50A Engine Wiring Harness Junction Block X3 (L8T) (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
F7	0.5	VT / BU	5705	Powertrain Main Relay Control	I	—
F8 - G1	—	—	—	Not Occupied	—	—
G2	1	VT / BU	5292	Powertrain Main Relay Fused Supply Voltage 3	III	—
G3	—	—	—	Not Occupied	—	—
G4	0.75	VT / BU	5293	Powertrain Main Relay Fused Supply Voltage 4	III	—
G5	—	—	—	Not Occupied	—	—
G6	0.75	VT / BU	5291	Powertrain Main Relay Fused Supply Voltage 2	III	—
H1	2.5	VT / BU	5290	Powertrain Main Relay Fused Supply Voltage 1	III	—
H2	0.75	VT / BU	5292	Powertrain Main Relay Fused Supply Voltage 3	III	—
H3	1	VT / BU	5294	Powertrain Main Relay Fused Supply Voltage 5	III	—
H4	0.75	VT / BU	5293	Powertrain Main Relay Fused Supply Voltage 4	III	—
H5	1	VT / BU	5291	Powertrain Main Relay Fused Supply Voltage 2	III	—
H6	0.75	VT / BU	5290	Powertrain Main Relay Fused Supply Voltage 1	III	—

X50A Engine Wiring Harness Junction Block X4

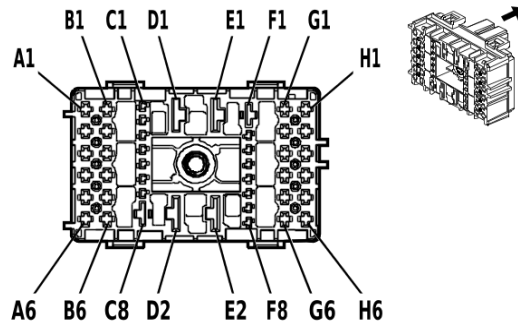

4993031

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 33384574
 Service Connector: 19371188
 Description: 44-Way F 1.5, 2.8, 6.3 CTS, 9.5 MCON-LL Series(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19369711	J-35616-14 (GN)	EL-38125-560A
II	84764078	J-35616-42 (RD)	J-38125-215A
III	84764079	J-35616-44 (YE)	J-38125-11A
IV	84779405	J-35616-35 (VT)	J-38125-215A


X50A Engine Wiring Harness Junction Block X4

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A1 - A2	—	—	—	Not Occupied	—	—
A3	1.5	BN	2109	Trailer Park Lamp Control	IV	—
A4	0.5	RD / WH	6440	Battery Positive Voltage	IV	—
A5	—	—	—	Not Occupied	—	—
A6	0.5	VT / WH	639	Run/Crank Ignition 1 Voltage	IV	—
B1	0.5	RD / WH	640	Battery Positive Voltage	IV	—
B2	1	GY	1624	Trailer Backup Lamp Control	IV	—
B3	—	—	—	Not Occupied	—	—
B4	0.5	RD / GN	6940	Battery Positive Voltage	IV	—
B5 - B6	—	—	—	Not Occupied	—	—
C1	0.5	RD / WH	5740	Battery Positive Voltage	I	—
C2 - C6	—	—	—	Not Occupied	—	—
C7	0.5 1.5	RD / WH RD / WH	3440 3440	Battery Positive Voltage Battery Positive Voltage	I I	FHS L5P
C8	2.5	BN / YE	2996	Fuel Heater Control 1	II	—
D1	—	—	—	Not Occupied	—	—
D2	4	RD / BN	3640	Battery Positive Voltage	III	—
E1 - E2	—	—	—	Not Occupied	—	—
F1	2.5	RD / WH	2040	Battery Positive Voltage	II	—

X50A Engine Wiring Harness Junction Block X4 (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
F2 - G2	—	—	—	Not Occupied	—	—
G3	1	YE	1618	Left Rear Trailer Stop/Turn Lamp Control	IV	—
G4	2.5	RD / YE	5840	Battery Positive Voltage	IV	—
G5	1.5	RD / BN	5940	Battery Positive Voltage	IV	—
G6	2.5	RD / WH	1040	Battery Positive Voltage	IV	—
H1 - H2	—	—	—	Not Occupied	—	—
H3	1	GN	1619	Right Rear Trailer Stop/Turn Lamp Control	IV	—
H4	2.5	RD / VT	5640	Battery Positive Voltage	IV	—
H5	2.5	RD / VT	1940	Battery Positive Voltage	IV	—
H6	4	OG	3940	Battery Positive Voltage	IV	L5P
	4	RD / BU	3940	Battery Positive Voltage	IV	L8T

X50A Engine Wiring Harness Junction Block X5

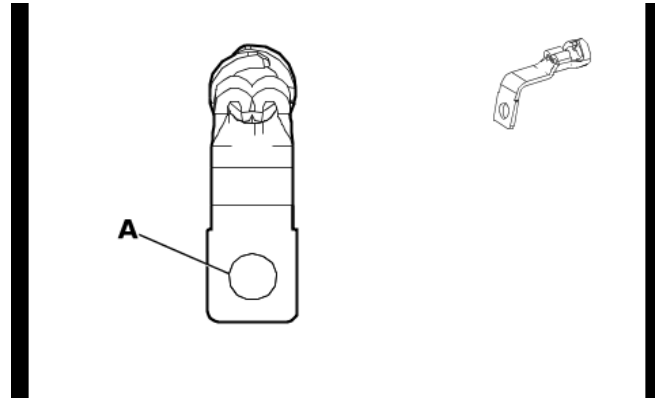

5525767

Connector Part Information

Harness Type: Starter Solenoid Cable
 OEM Connector: 84386513
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way Ring Terminal


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

X50A Engine Wiring Harness Junction Block X5


Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	35	RD / GN	242	Battery Positive Voltage	I	—

X51AX Instrument Panel Wiring Harness Junction Block - Auxiliary Label (9L7)

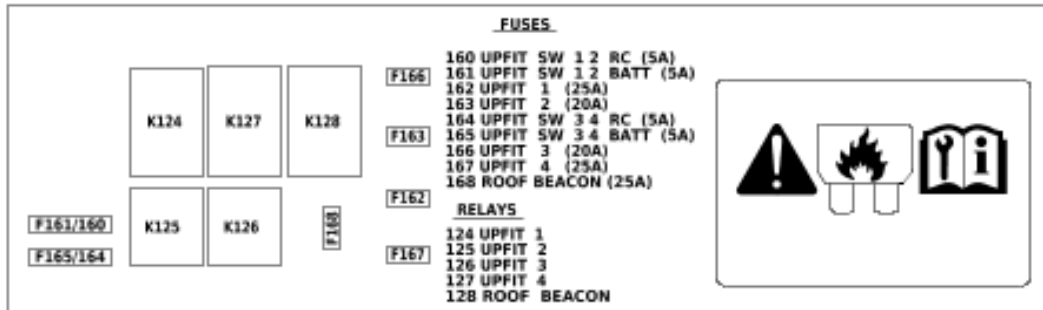

5969422

X51AX Instrument Panel Wiring Harness Junction Block - Auxiliary Top View (9L7)

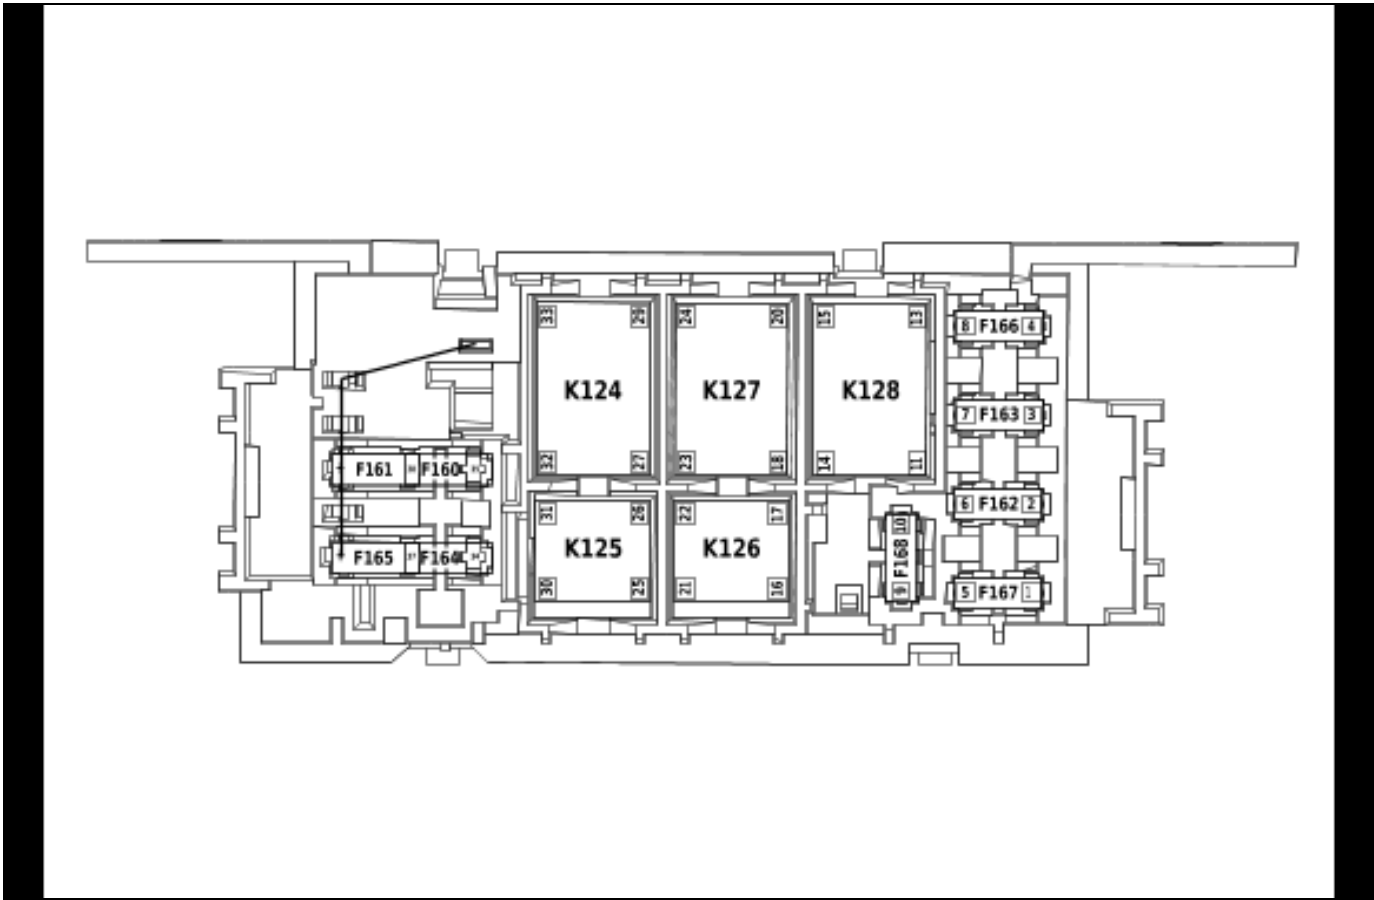

5988611

Usage Table

No.	Device Label Name	Device Assigned Name	Rating	Description
Fuses				
F160	UPFIT SW 1 2 RC	F160DA	5A	<ul style="list-style-type: none"> • KR161AA Configurable/Accessory Provision Relay 1 • KR161BA Configurable/Accessory Provision Relay 2
F161	UPFIT SW 1 2 BATT	F161DA	5A	<ul style="list-style-type: none"> • KR161AA Configurable/Accessory Provision Relay 1 • KR161BA Configurable/Accessory Provision Relay 2
F162	UPFIT 1	F162DA	25A	<ul style="list-style-type: none"> • X79A Configurable/Accessory Provision Supply Connector
F163	UPFIT 2	F163DA	20A	<ul style="list-style-type: none"> • X79A Configurable/Accessory Provision Supply Connector
F164	UPFIT SW 3 4 RC	F164DA	5A	<ul style="list-style-type: none"> • KR161CA Configurable/Accessory Provision Relay 3 • KR161DA Configurable/Accessory Provision Relay 4 • KR161EA Configurable/Accessory Provision Relay 5
F165	UPFIT SW 3 4 BATT	F165DA	5A	<ul style="list-style-type: none"> • KR161CA Configurable/Accessory Provision Relay 3 • KR161DA Configurable/Accessory Provision Relay 4 • KR161EA Configurable/Accessory Provision Relay 5
F166	UPFIT 3	F166DA	20A	<ul style="list-style-type: none"> • X79A Configurable/Accessory Provision Supply Connector
F167	UPFIT 4	F167DA	25A	<ul style="list-style-type: none"> • X79A Configurable/Accessory Provision Supply Connector
F168	ROOF BEACON	F168DA	25A	<ul style="list-style-type: none"> • W11 Blunt Cut - Emergency Vehicle Roof Lamp

Usage Table (cont'd)

No.	Device Label Name	Device Assigned Name	Rating	Description
Relays				
K124	UPFIT 1	KR161AA Configurable/Accessory Provision Relay 1	—	• F162DA
K125	UPFIT 2	KR161BA Configurable/Accessory Provision Relay 2	—	• F163DA
K126	UPFIT 3	KR161CA Configurable/Accessory Provision Relay 3	—	• F166DA
K127	UPFIT 4	KR161DA Configurable/Accessory Provision Relay 4	—	• F167DA
K128	ROOF BEACON	KR161EA Configurable/Accessory Provision Relay 5	—	• F168DA

X51AX Instrument Panel Wiring Harness Junction Block - Auxiliary**Connector Part Information**

Harness Type: Auxiliary Fuse Block Wiring Harness

OEM Connector: 23355673

Service Connector: Service by Component Assembly - See Part Catalog

Description: Wire Entry Fuse Block

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-22 (RD)	No Tool Required
II	Not required	J-35616-4A (PU)	No Tool Required


X51AX Instrument Panel Wiring Harness Junction Block - Auxiliary

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	YE / BN	10734	Upfitter Accessory 4 Supply Voltage	II	—
2	2.5	BU	10731	Upfitter Accessory 1 Supply Voltage	II	—
3	2.5	GY / BK	10732	Upfitter Accessory 2 Supply Voltage	II	—
4	2.5	BN / WH	10733	Upfitter Accessory 3 Supply Voltage	II	—
5	2.5	YE	10729	Upfitter Accessory Fuse 4 Supply Voltage	II	—
6	2.5	BU / GN	10726	Upfitter Accessory Fuse 1 Supply Voltage	II	—
7	2.5	GY	10727	Upfitter Accessory Fuse 2 Supply Voltage	II	—
8	2.5	BN	10728	Upfitter Accessory Fuse 3 Supply Voltage	II	—
9	2.5	VT / BU	10735	Upfitter Accessory 5 Supply Voltage	II	—
10	2.5	VT	10730	Upfitter Accessory Fuse 5 Supply Voltage	II	—
11	2.5	VT	10730	Upfitter Accessory Fuse 5 Supply Voltage	II	—
13	0.35	VT / BN	10723	Upfitter Accessory Relay 3 Coil Supply Voltage	II	—
14	0.35	GY / VT	10720	Upfitter Accessory Relay 5 Coil Control	II	—
15	2.5	RD / VT	542	Battery Positive Voltage	II	—
16	2.5	RD / VT	542	Battery Positive Voltage	II	—
17	0.35	GN / BN	10718	Upfitter Accessory Relay 3 Coil Control	II	—
18	2.5	YE	10729	Upfitter Accessory Fuse 4 Supply Voltage	II	—
20	0.35	VT / BN	10723	Upfitter Accessory Relay 3 Coil Supply Voltage	II	—
21	0.35	VT / BN	10723	Upfitter Accessory Relay 3 Coil Supply Voltage	II	—
22	2.5	BN	10728	Upfitter Accessory Fuse 3 Supply Voltage	II	—
23	0.35	WH / YE	10719	Upfitter Accessory Relay 4 Coil Control	II	—
24	2.5	RD / VT	542	Battery Positive Voltage	II	—
25	2.5	RD / VT	542	Battery Positive Voltage	II	—
26	0.35	VT / GY	10717	Upfitter Accessory Relay 2 Coil Control	II	—
27	2.5	BU / GN	10726	Upfitter Accessory Fuse 1 Supply Voltage	II	—
29	0.35	BU / VT	10721	Upfitter Accessory Relay 1 Coil Supply Voltage	II	—
30	0.35	BU / VT	10721	Upfitter Accessory Relay 1 Coil Supply Voltage	II	—
31	2.5	GY	10727	Upfitter Accessory Fuse 2 Supply Voltage	II	—
32	0.35	BU / WH	10716	Upfitter Accessory Relay 1 Coil Control	II	—
33	2.5	RD / VT	542	Battery Positive Voltage	II	—
34	0.5	VT / BK	339	Run/Crank Ignition 1 Voltage	II	—

X51AX Instrument Panel Wiring Harness Junction Block - Auxiliary (cont'd)


Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
35	0.5	VT / BK	339	Run/Crank Ignition 1 Voltage	II	—
36	10	RD / VT	542	Battery Positive Voltage	I	—
37	0.35	VT / BN	10723	Upfitter Accessory Relay 3 Coil Supply Voltage	II	—
38	0.35	BU / VT	10721	Upfitter Accessory Relay 1 Coil Supply Voltage	II	—
39	2.5	RD / VT	542	Battery Positive Voltage	II	—
40	2.5	RD / VT	542	Battery Positive Voltage	II	—
41	2.5	RD / VT	542	Battery Positive Voltage	II	—
42	2.5	RD / VT	542	Battery Positive Voltage	II	—
43	2.5	RD / VT	542	Battery Positive Voltage	II	—

X53AF Body Wiring Harness Junction Block Label

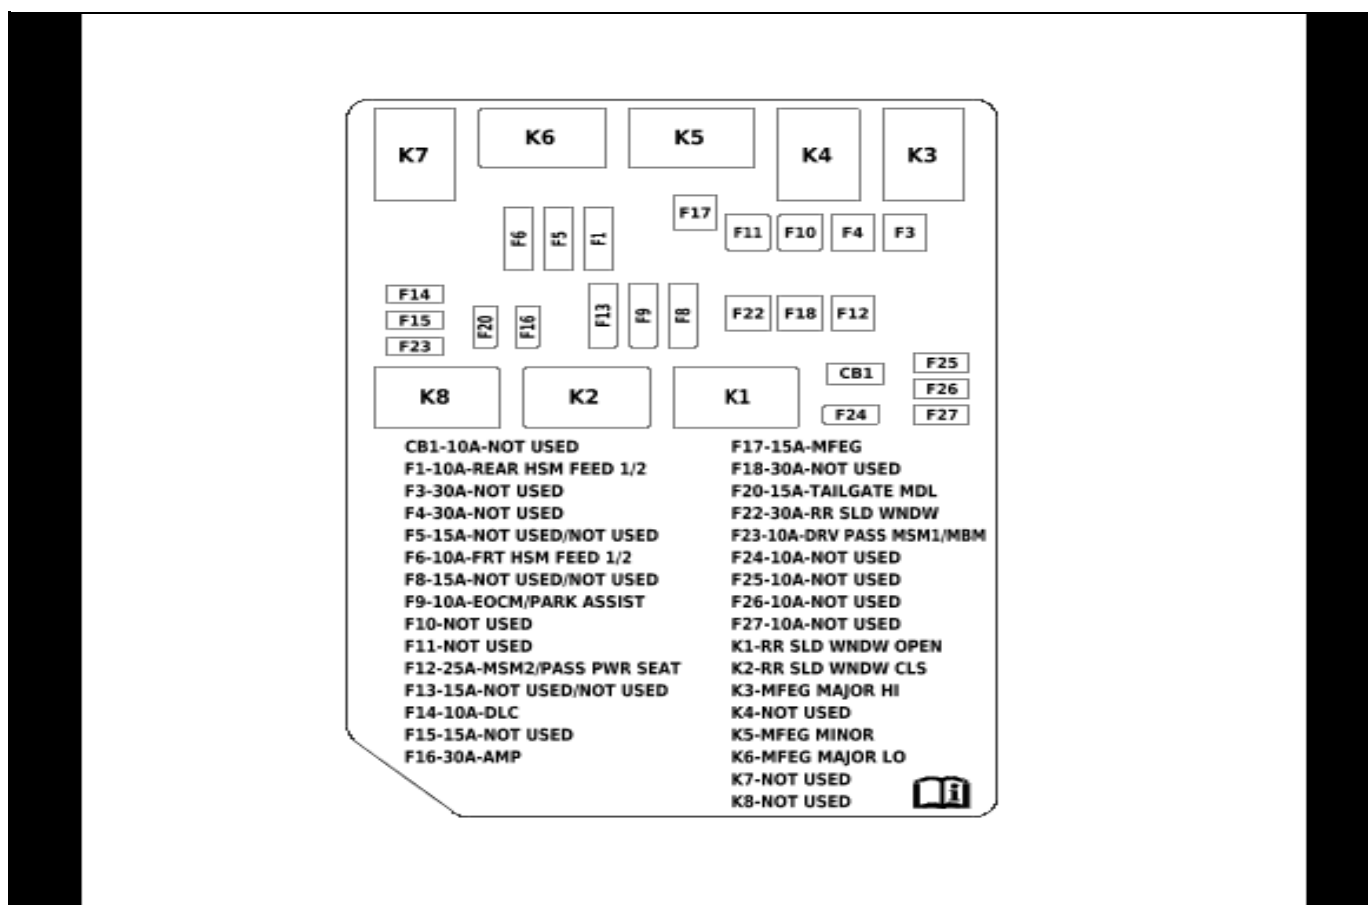

5969417

X53AF Body Wiring Harness Junction Block Top View

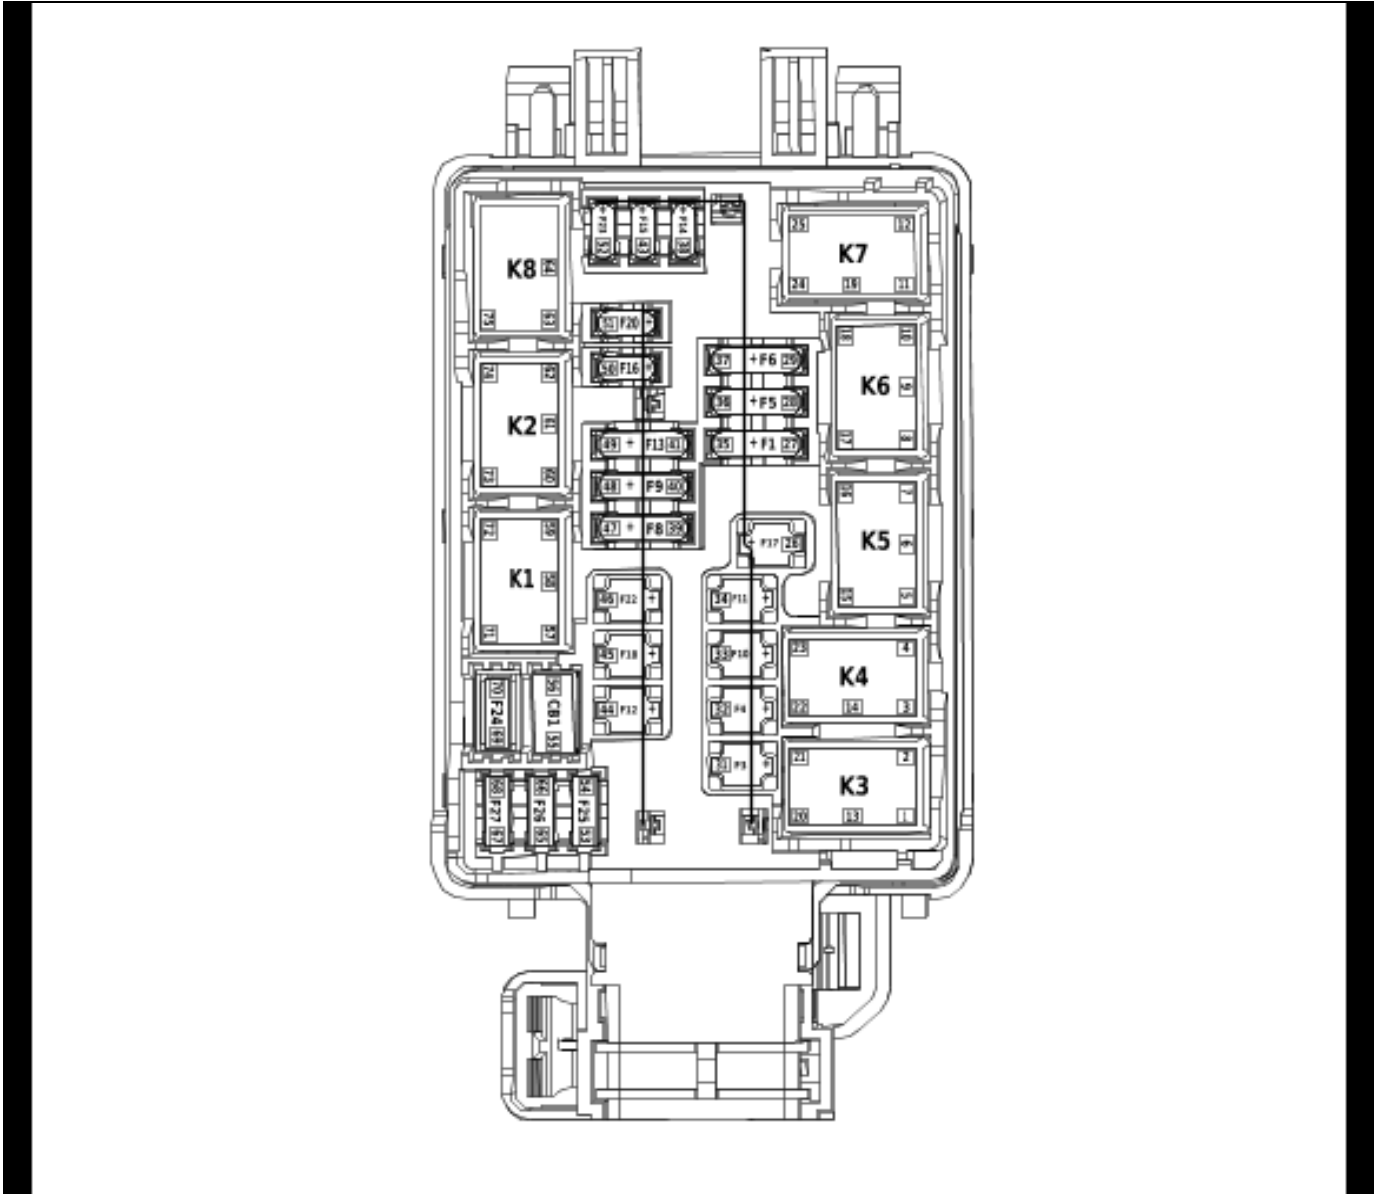

6143341

Usage Table

No.	Device Label Name	Device Assigned Name	Rating	Description
Fuses				
F1	REAR HSM FEED 1/2	F1DL	10A	• K234 Rear Seat Heater Vent Control Module (KA6)
F3	NOT USED	F3DL	30A	• Not Used
F4	NOT USED	F4DL	30A	• Not Used
F5	NOT USED/NOT USED	F5DL	15A	• Not Used
F6	FRT HSM FEED 1/2	F6DL	10A	• K29FV Front Seat Heater Vent Control Module (KA1/KQV)
F8	NOT USED/NOT USED	F8DL	15A	• Not Used
F9	EOCM/PARK ASSIST	F9DL	10A	• K182 Parking Assist Control Module (UD5/UD7)

Usage Table (cont'd)

No.	Device Label Name	Device Assigned Name	Rating	Description
F10	NOT USED	F10DL	30A	• Not Used
F11	NOT USED	F11DL	30A	• Not Used
F12	MSM2/PASS PWR SEAT	F12DL	25A	• S64P Front Seat Adjuster Switch - Passenger (A7K-AKE)
F13	NOT USED/NOT USED	F13DL	15A	• Not Used
F14	DLC	F14DL	10A	• X84 Data Link Connector
F15	NOT USED	F15DL	15A	• Not Used
F16	AMP	F16DL	30A	• T3 Audio Amplifier (UQA)
F17	MFEG	F17DL	15A	• KR191S Pickup Box Endgate Latch Relay - Supply Voltage (QT5) • KR192 Pickup Box Auxiliary Endgate Latch Relay (QT5)
F18	NOT USED	F18DL	30A	• Not Used
F20	TAILGATE MDL	F20DL	15A	• K194 Rear Gate Module (QT6)
F22	RR SLD WNDW	F22DL	30A	• KR206C Rear Sliding Window Close Relay (A48) • KR206O Rear Sliding Window Open Relay (A48)
F23	DRV PASS MSM1/MBM	F23DL	10A	• K40D Driver Seat Adjuster Memory Module (A45) • S64D Front Seat Adjuster Switch - Driver (A45) • S65D Front Seat Lumbar Switch - Driver • S65P Front Seat Lumbar Switch - Passenger
F24	NOT USED	F24DL	10A	• Not Used
F25	NOT USED	F25DL	10A	• Not Used
F26	NOT USED	F26DL	10A	• Not Used
F27	NOT USED	F27DL	10A	• Not Used
Circuit Breakers				
CB1	NOT USED	CB1DL	10A	• Not Used
Relays				
K1	RR SLD WNDW OPEN	KR206O Rear Sliding Window Open Relay	—	• M63 Rear Sliding Window Motor (A48)
K2	RR WNDW CLS	KR206C Rear Sliding Window Close Relay	—	• M63 Rear Sliding Window Motor (A48)
K3	MFEG MAJOR HI	KR191G Pickup Box Endgate Latch Relay - Ground	—	• A99L Pickup Box Endgate Latch - Left (QK2+QT5) • A99R Pickup Box Endgate Latch - Right (QK2+QT5) • M14A Pickup Box Endgate Lock Actuator (QK1+QT5)
K4	NOT USED	—	—	• Not Used
K5	MFEG MINOR	KR192 Pickup Box Auxiliary Endgate Latch Relay	—	• A100L Pickup Box Auxiliary Endgate Latch - Left (QK2+QT5) • A100R Pickup Box Auxiliary Endgate Latch - Right (QK2+QT5)
K6	MFEG MAJOR LO	KR191S Pickup Box Endgate Latch Relay - Supply Voltage	—	• A99L Pickup Box Endgate Latch - Left (QK2+QT5) • A99R Pickup Box Endgate Latch - Right (QK2+QT5) • M14A Pickup Box Endgate Lock Actuator (QT5)
K7	NOT USED	—	—	• Not Used
K8	NOT USED	—	—	• Not Used

X53AF Body Wiring Harness Junction Block Wire Entry View

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 84596390
 Service Connector: Service by Component Assembly - See Part Catalog
 Description: Wire Entry Fuse Block

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	13575574	J-35616-5 (PU)	J-38125-215A
II	Not required	J-35616-22 (RD)	No Tool Required


X53AF Body Wiring Harness Junction Block Wire Entry View

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	WH / GN	7728	Major Endgate High Relay Control	I	—
2	1	GN	1299	Major Endgate Motor Control	I	—
5	1	VT	7725	Minor Endgate Motor Control	I	—
7	0.75	WH / GY	7297	Minor Endgate High Relay Control	I	—
8	1.5	BK	1550	Ground	I	—
10	0.75	BU / VT	7729	Major Endgate Low Relay Control	I	—
15	0.5	BK	1550	Ground	I	—
16	1	RD / BN	8240	Battery Positive Voltage	I	—
17	0.5	BK	1550	Ground	I	—
18	1	YE / BK	7730	Major Endgate Motor Low Reference	I	—
20	1	RD / BN	8240	Battery Positive Voltage	I	—
21	0.5	BK	1550	Ground	I	—
26	1	RD / BN	8240	Battery Positive Voltage	I	—
27	0.75	RD / WH	5740	Battery Positive Voltage	I	—
29	0.75	RD / BN	6640	Battery Positive Voltage	I	—
30	10	RD / GY	142	Battery Positive Voltage	II	—
35	0.75	RD / BU	6740	Battery Positive Voltage	I	—
37	0.75	RD / GN	6140	Battery Positive Voltage	I	—
38	0.5	RD / YE	6540	Battery Positive Voltage	I	—
41	0.5	RD / VT	2640	Battery Positive Voltage	I	—
42	10	RD / GN	242	Battery Positive Voltage	II	—
44	2.5	RD / YE	7440	Battery Positive Voltage	I	—
46	2.5	RD / VT	8640	Battery Positive Voltage	I	—
48	0.5	RD / WH	4740	Battery Positive Voltage	I	—
49	0.5	RD / BU	4540	Battery Positive Voltage	I	—
50	2.5	RD / YE	3740	Battery Positive Voltage	I	—
51	2.5	RD / VT	4442	Primary Fused Battery Positive Voltage	I	—
52	0.5	RD / BN	2240	Battery Positive Voltage	I	—
57	2.5	RD / VT	8640	Battery Positive Voltage	I	—
58	2.5	BK	1550	Ground	I	—
59	0.5	BK	1550	Ground	I	—

X53AF Body Wiring Harness Junction Block Wire Entry View (cont'd)


Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
60	2.5	RD / VT	8640	Battery Positive Voltage		—
61	2.5	BK	1550	Ground		—
62	0.5	BK	1550	Ground		—
71	0.5	YE / VT	6191	Power Rear Window Switch Open Signal		—
72	2	VT / YE	7453	Window Motor Rear Auxiliary Open Control		—
73	0.5	WH	6192	Sliding Rear Window Switch Close Signal		—
74	2	YE	7454	Window Motor Rear Auxiliary Close Control		—

X51R Instrument Panel Wiring Harness Junction Block - Right Label

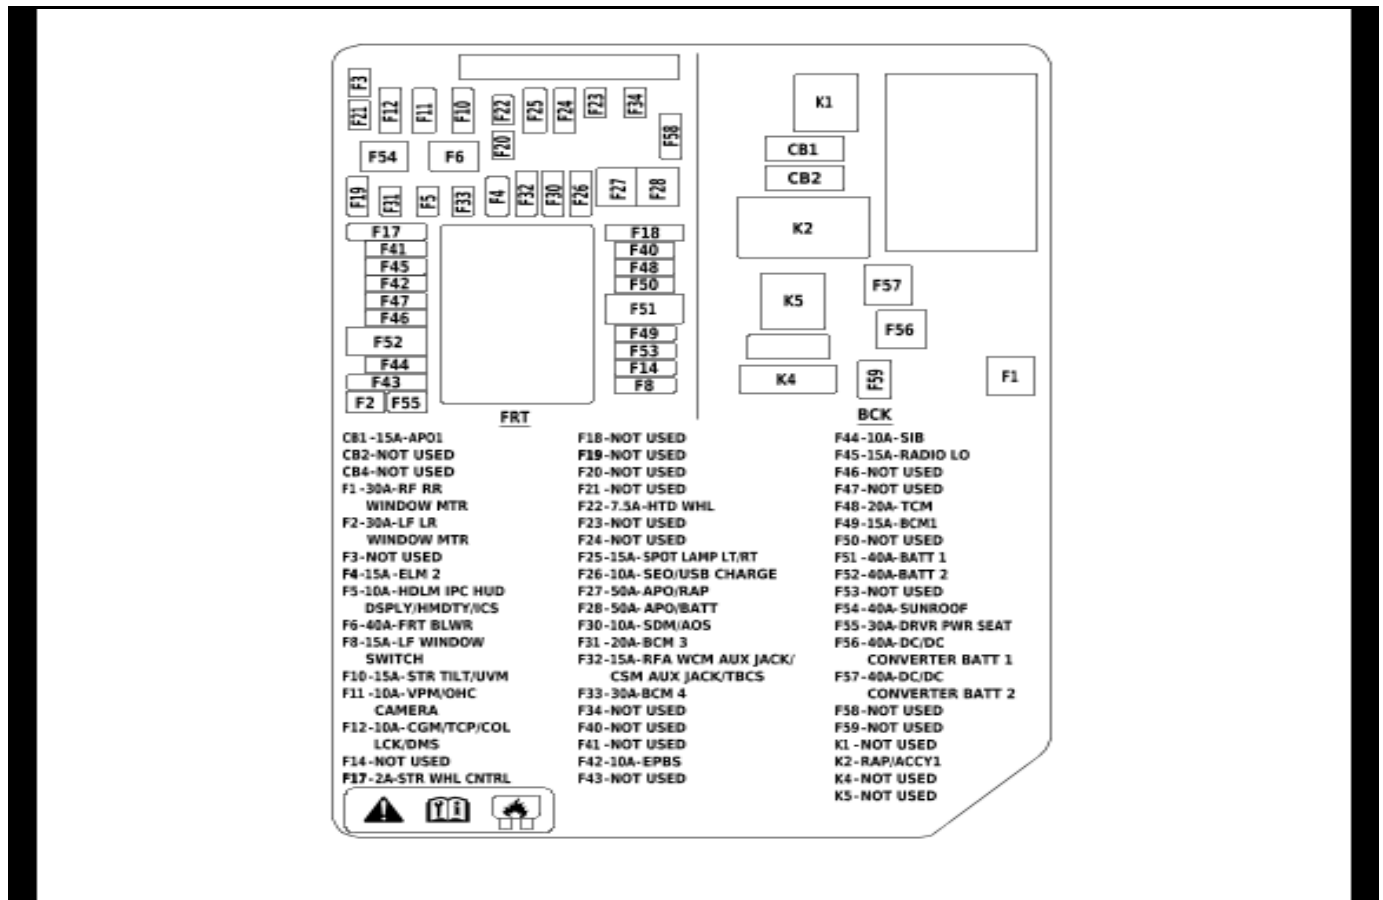

5969420

X51R Instrument Panel Wiring Harness Junction Block - Right Top View

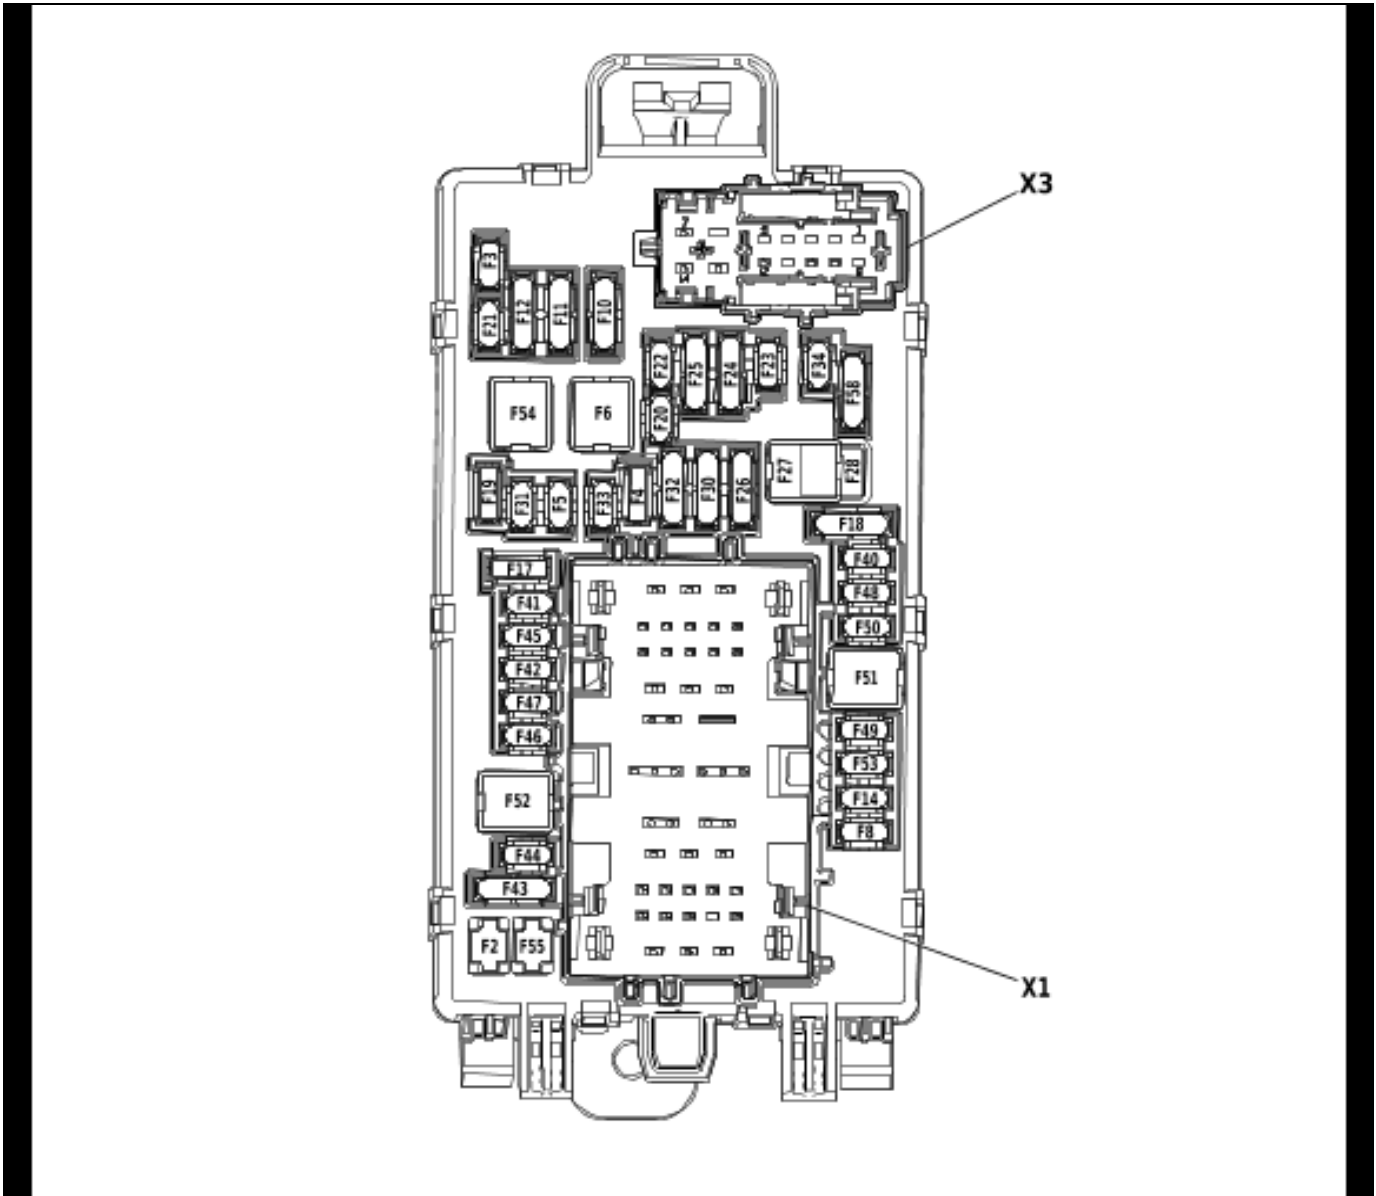

5041376

Usage Table

No.	Device Label Name	Device Assigned Name	Rating	Description
Circuit Breakers				
CB4	NOT USED	—	—	• Not Used
Fuses				
F1	RF RR WINDOW MTR	F1DR	30A	<ul style="list-style-type: none"> • M74P Front Side Door Window Regulator Motor - Passenger (AEF) • S79P Front Side Door Window Switch - Passenger (AED/AEF) • S79RR Rear Side Door Window Switch - Right
F2	LF LR WINDOW MTR	F2DR	30A	<ul style="list-style-type: none"> • M74D Front Side Door Window Regulator Motor - Driver • S79LR Rear Side Door Window Switch - Left
F3	NOT USED	F3DR	—	• Not Used
F4	ELM 2	F4DR	15A	• K219 Lighting Control Module


Usage Table (cont'd)

No.	Device Label Name	Device Assigned Name	Rating	Description
F5	ELM 3	F5DR	10A	• K219 Lighting Control Module
F6	FRT BLWR	F6DR	40A	• M8 Blower Motor
F8	LF WINDOW SWITCH	F8DR	15A	• S79D Front Side Door Window Control Switch - Driver • S32R Rear Seat Heater Switch (KA6)
F10	STR TILT/UVM	F10DR	15A	• K219 Lighting Control Module • K56U Special Purpose Vehicle Control Module
F11	VPM/OHC CAMERA	F11DR	10A	• A103 Roof Console • B174W Front View Camera - Windshield (UGN/UHY) • K157 Video Processing Module (UV2)
F12	CGM/TCP/COLLCK/DMS	F12DR	10A	• K56 Serial Data Gateway Module • K60 Column Lock Module • K73 Telematic Control Module (UE1)
F14	NOT USED	F14DR	—	• Not Used
F17	STR WHL CNTRL	F17DR	2A	• S70L Cruise Control Switch (KI3) • S70R Radio Control Switch - Steering Wheel (KI3)
F18	NOT USED	F18DR	—	• Not Used
F19	NOT USED	F19DR	—	• Not Used
F20	NOT USED	F20DR	—	• Not Used
F21	NOT USED	F21DR	—	• Not Used
F22	HTD WHL	F22DR	7.5A	• K32 Steering Wheel Heating Control Module (KI3)
F23	NOT USED	F23DR	—	• Not Used
F24	NOT USED	F24DR	—	• Not Used
F25	SPOT LAMP LT/RT	F25DR	15A	• Not Used
F26	SEO/USB CHARGE	F26DR	10A	• X92CD Dual Charge Only Receptacle - Floor Console Rear (D07+UBI) • X92FSR Dual Charge Only Receptacle - Front Center Seat Rear Cover (AZ3+UBI)
F27	APO/RAP	F27DR	50A	• Not Used
F28	APO/BATT	F28DR	50A	• Not Used
F30	SDM/AOS	F30DR	10A	• K85P Restraints Occupant Classification System Module - Passenger • P16 Instrument Panel Cluster Control Module • P29 Head-Up Display • A22 Radio Control • A26 Heater and Air Conditioning User Interface Control - Front • B117A Windshield Outside Moisture/Ambient Light and Humidity Sensor
F31	BCM 3	F31DR	20A	• K9 Body Control Module
F32	RFA WCM AUX JACK/CSM AUX JACK/TBCS	F32DR	15A	• A11 Radio (IOK) • S76 Trailer Brake Control Switch • T22 Wireless Accessory Charging Module (K4C) • X83B Audio/Video Receptacle (D07) • X92IP USB 2 Port Receptacle - Instrument Panel (d07) • X92CF USB 2 Port Receptacle - Floor Console Front (UBD)
F33	BCM 4	F33DR	30A	• K9 Body Control Module

Usage Table (cont'd)

No.	Device Label Name	Device Assigned Name	Rating	Description
F34	NOT USED	F34DR	—	• Not Used
F40	NOT USED	F40DR	—	• Not Used
F41	NOT USED	F41DR	—	• Not Used
F42	EPBS	F42DR	10A	• S91 Parking Brake Control Switch
F43	NOT USED	F43DR	—	• Not Used
F44	SIB	F44DR	10A	• Not Used
F45	RADIO LO	F45DR	15A	• A11 Radio (IOR)
F46	NOT USED	F46DR	—	• Not Used

X51R Instrument Panel Wiring Harness Junction Block - Right Bottom View

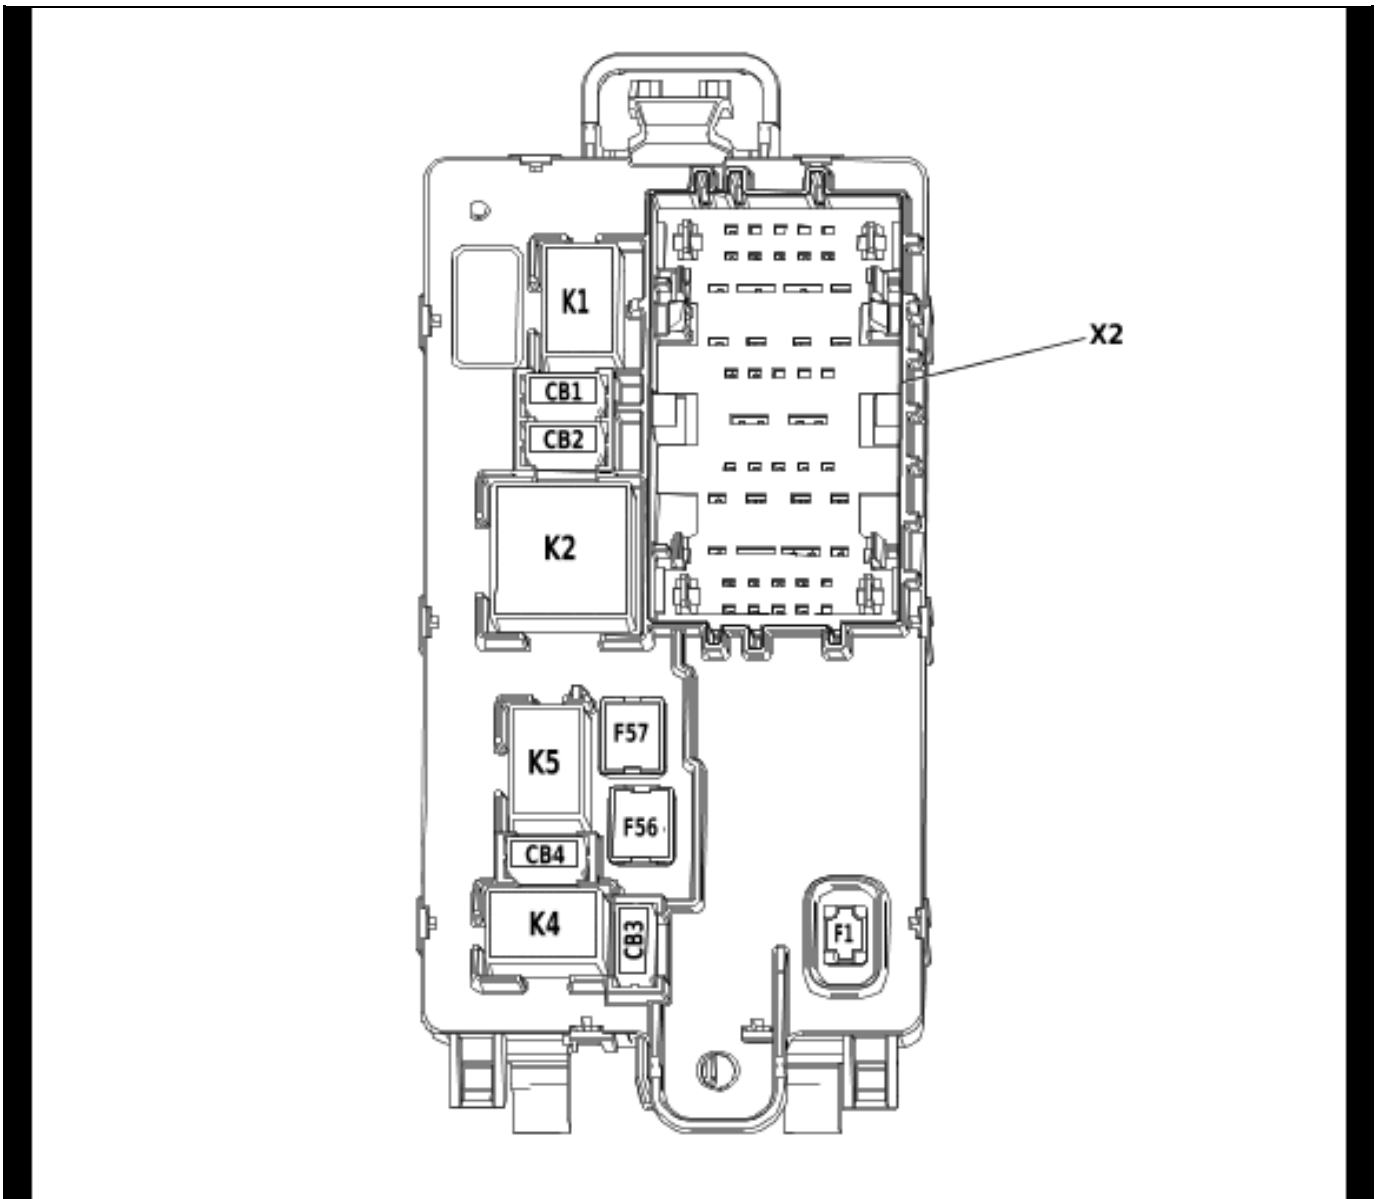


6143342

Usage Table

No.	Device Label Name	Device Assigned Name	Rating	Description
Circuit Breakers				
CB1	APO 1	CB1DR	15A	<ul style="list-style-type: none"> • X80G Accessory Power Receptacle - Instrument Panel (KC5)
CB2	NOT USED	—	—	<ul style="list-style-type: none"> • Not Used
Fuses				
F47	NOT USED	F47DR	—	<ul style="list-style-type: none"> • Not Used
F48	TCM	F48DR	20A	<ul style="list-style-type: none"> • K71 Transmission Control Module
F49	BCM 1	F49DR	15A	<ul style="list-style-type: none"> • K9 Body Control Module
F50	NOT USED	F50DR	—	<ul style="list-style-type: none"> • Not Used
F51	BATT 1	F51DR	40A	<ul style="list-style-type: none"> • Not Used
F52	BATT 2	F52DR	40A	<ul style="list-style-type: none"> • Not Used
F53	NOT USED	F53DR	—	<ul style="list-style-type: none"> • Not Used
F54	SUNROOF	F54DR	40A	<ul style="list-style-type: none"> • K61 Sunroof Control Module (CF5)
F55	DRVR PWR SEAT	F55DR	30A	<ul style="list-style-type: none"> • K40D Driver Seat Adjuster Memory Module (A45) • S64D Front Seat Adjuster Switch - Driver (-A45)
F56	DC/DC CONVERTER BATT 1	F56DR	40A	<ul style="list-style-type: none"> • Not Used
F57	DC/DC CONVERTER BATT 2	F57DR	40A	<ul style="list-style-type: none"> • Not Used
F58	NOT USED	F58DR	—	<ul style="list-style-type: none"> • Not Used
F59	NOT USED	F59DR	—	<ul style="list-style-type: none"> • Not Used
Relays				
K1	NOT USED	—	—	<ul style="list-style-type: none"> • Not Used
K2	RAP/ACCY 1	KR76 Accessory Time Delay Cutoff Relay	—	<ul style="list-style-type: none"> • CB1DR • F26DR
K4	NOT USED	—	—	<ul style="list-style-type: none"> • Not Used
K5	NOT USED	—	—	<ul style="list-style-type: none"> • Not Used

X51R Instrument Panel Wiring Harness Junction Block - Right X1

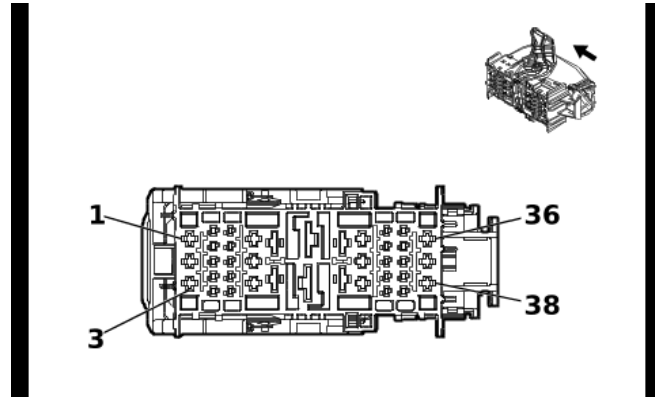

5402140

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 35264615
 Service Connector: 84941450
 Description: 38-Way F 1.5, 2.8, 6.3 MCP, 9.5 MCON-LL Series(BU)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19332366	J-35616-35 (VT)	J-38125-212
II	19371175	J-35616-2A (GY)	EL-38125-560A
III	Not required	J-35616-22 (RD)	No Tool Required

X51R Instrument Panel Wiring Harness Junction Block - Right X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 2	—	—	—	Not Occupied	—	—
3	1.5	RD / GN	1840	Battery Positive Voltage	I	—
4	0.75	RD / VT	2640	Battery Positive Voltage	II	—
5	0.5	RD / GN	4440	Battery Positive Voltage	II	—
6	0.35	VT	4701	Retained Accessory Power Control	II	—
7 - 13	—	—	—	Not Occupied	—	—
14	0.5	RD / VT	1640	Battery Positive Voltage	I	—
15 - 18	—	—	—	Not Occupied	—	—
19	5	RD / YE	1442	Battery Positive Voltage	III	—
20	10	RD / WH	342	Battery Positive Voltage	III	—
21 - 22	—	—	—	Not Occupied	—	—
23	2.5	RD / GY	4840	Battery Positive Voltage	I	—
24	2.5	RD / BN	4240	Battery Positive Voltage	I	—
25	2.5	RD / BU	3240	Battery Positive Voltage	I	—
26 - 29	—	—	—	Not Occupied	—	—
30	0.5	RD / BU	1240	Battery Positive Voltage	II	—
31 - 35	—	—	—	Not Occupied	—	—
36	2.5	RD / YE	5040	Battery Positive Voltage	I	—
37	2.5	RD / GY	3540	Battery Positive Voltage	I	—
38	—	—	—	Not Occupied	—	—

X51R Instrument Panel Wiring Harness Junction Block - Right X2

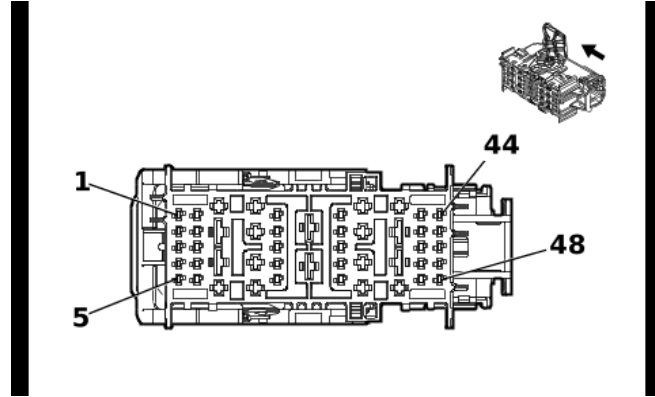

5403539

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 35264616
 Service Connector: 19371180
 Description: 48-Way F 1.5, 2.8, 6.3 CTS Series(GN)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19369711	J-35616-14 (GN)	EL-38125-560A
II	84764078	J-35616-42 (RD)	J-38125-215A
III	84779405	J-35616-35 (VT)	J-38125-215A

X51R Instrument Panel Wiring Harness Junction Block - Right X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BK	1050	Ground	I	—
2	—	—	—	Not Occupied	—	—
3	0.35	GY / GN	4083	Retained Accessory Power Relay 2 Coil Control	I	—
4 - 7	—	—	—	Not Occupied	—	—
8	0.5	RD / GN	7740	Battery Positive Voltage	I	—
9	0.5	RD / YE	240	Battery Positive Voltage	I	—
10 - 13	—	—	—	Not Occupied	—	—
14	0.5	RD / YE	3040	Battery Positive Voltage	III	—
15	0.5	RD / BN	10040	Battery Positive Voltage	III	—
16	0.75	RD / VT	4640	Battery Positive Voltage	III	—
17	—	—	—	Not Occupied	—	—
18	0.35	RD / VT	3340	Battery Positive Voltage	III	—
19 - 23	—	—	—	Not Occupied	—	—
24	4	RD / GY	1740	Battery Positive Voltage	II	—
25	2.5	RD / BU	4540	Battery Positive Voltage	II	—
26	—	—	—	Not Occupied	—	—
27	0.5	RD / YE	2340	Battery Positive Voltage	I	—
28	0.5	RD / WH	1340	Battery Positive Voltage	I	—
29 - 30	—	—	—	Not Occupied	—	—
31	1.5	VT	1001	Retained Accessory Power Ignition Voltage	III	—

7-54 Electrical Component and Inline Harness Connector End Views**X51R Instrument Panel Wiring Harness Junction Block - Right X2 (cont'd)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
32	2	RD / BU	2540	Battery Positive Voltage	III	—
33	0.5	RD / VT	7140	Battery Positive Voltage	III	—
34	1	RD / GY	2140	Battery Positive Voltage	III	—
35	0.5	RD / GN	1540	Battery Positive Voltage	III	—
36	—	—	—	Not Occupied	—	—
37	1	RD / GY	2840	Battery Positive Voltage	II	—
38 - 40	—	—	—	Not Occupied	—	—
41	0.35	RD / GN	5140	Battery Positive Voltage	I	—
42	0.35	RD / YE	4340	Battery Positive Voltage	I	—
43 - 44	—	—	—	Not Occupied	—	—
45	0.5	RD / WH	2740	Battery Positive Voltage	I	—
46 - 48	—	—	—	Not Occupied	—	—

X54 Accessory Wiring Junction Block - Snow Plow

—

Connector Part Information

Harness Type: Accessory Wiring Harness
 OEM Connector: 35028846
 Service Connector: Service by Component Assembly - See Part Catalog
 Description: Wire Entry Fuse Block

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-4A (PU)	No Tool Required

X54 Accessory Wiring Junction Block - Snow Plow

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A4	0.5	BN	25	Charge Indicator Control	I	—
A6	0.75	GY / VT	9026	Snow Plow Relay Control	I	—
B4	0.75	GY / VT	9026	Snow Plow Relay Control	I	—
B5	0.5	BN	25	Charge Indicator Control	I	—

X55SP Wiring Harness Fuse Holder - Snow Plow

Connector Part Information

Harness Type: Accessory Wiring Harness
 OEM Connector: 23183688
 Service Connector: Service by Harness - See Part Catalog
 Description: Fuse Holder


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

X55SP Wiring Harness Fuse Holder - Snow Plow

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	1	OG	9026	Snow Plow Relay Supply	I	—
B	1	OG	9028	Snow Plow Relay Supply	I	—

Component Connector End Views
A7 Fuel Tank Fuel Pump Module (N2L)

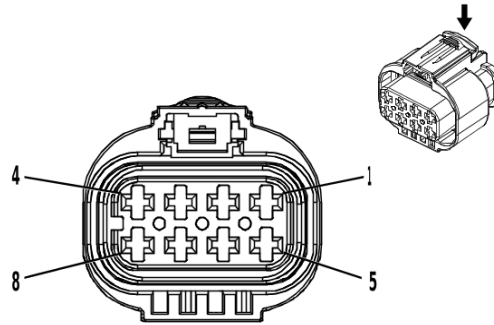

3749582

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 33180742
 Service Connector: 19354078
 Description: 8-Way F 2.8 Series, Sealed(L-GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-4A (PU)	No Tool Required

A7 Fuel Tank Fuel Pump Module (N2L)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	GY	120	Fuel Pump Control	I	—
2	2.5	YE / GY	4137	Fuel Pump Supply Voltage Phase 2	I	—
3	2.5	WH / BN	4138	Fuel Pump Supply Voltage Phase 3	I	—
4	0.5	WH	7444	Fuel Pump Assembly Shield Ground	I	—
5	0.5	BU / GN	1936	Primary Fuel Level Sensor Signal	I	—
6	0.5	BK / GN	6281	Fuel Level Sensor Low Reference	I	—
7 - 8	—	—	—	Not Occupied	—	—

A7 Fuel Tank Fuel Pump Module (N2M)

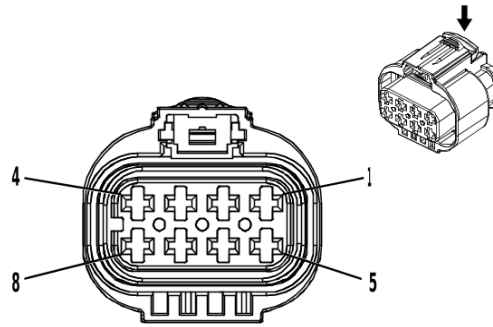

3749582

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 33180742
 Service Connector: 19354078
 Description: 8-Way F 2.8 Series, Sealed(L-GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-4A (PU)	No Tool Required

A7 Fuel Tank Fuel Pump Module (N2M)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	GY	120	Fuel Pump Control	I	—
2	2.5	YE / GY	4137	Fuel Pump Supply Voltage Phase 2	I	—
3	2.5	WH / BN	4138	Fuel Pump Supply Voltage Phase 3	I	—
4	0.5	WH	7444	Fuel Pump Assembly Shield Ground	I	—
5	0.75	BU / GN	1936	Primary Fuel Level Sensor Signal	I	L5P+ N2N
	0.5	BU / GN	1936	Primary Fuel Level Sensor Signal	I	L8T+ N2L
6	0.5	BK / GN	6281	Fuel Level Sensor Low Reference	I	—
7 - 8	—	—	—	Not Occupied	—	—

A7 Fuel Tank Fuel Pump Module (N2N)

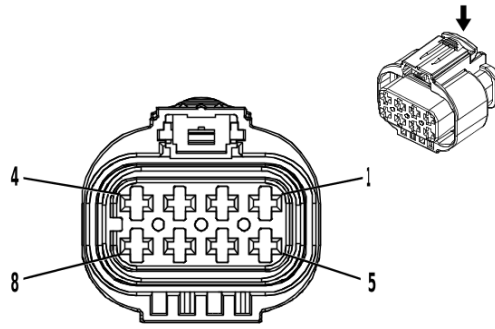

3749582

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 33180742
 Service Connector: 19354078
 Description: 8-Way F 2.8 Series, Sealed(L-GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-4A (PU)	No Tool Required

A7 Fuel Tank Fuel Pump Module (N2N)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	GY	120	Fuel Pump Control	I	—
2	2.5	YE / GY	4137	Fuel Pump Supply Voltage Phase 2	I	—
3	2.5	WH / BN	4138	Fuel Pump Supply Voltage Phase 3	I	—
4	0.5	WH	7444	Fuel Pump Assembly Shield Ground	I	—
5	0.5	BU / GN	1936	Primary Fuel Level Sensor Signal	I	—
6	0.5	BK / GN	6281	Fuel Level Sensor Low Reference	I	—
7 - 8	—	—	—	Not Occupied	—	—

A7AX Fuel Tank Fuel Pump Module - Auxiliary (L5P)

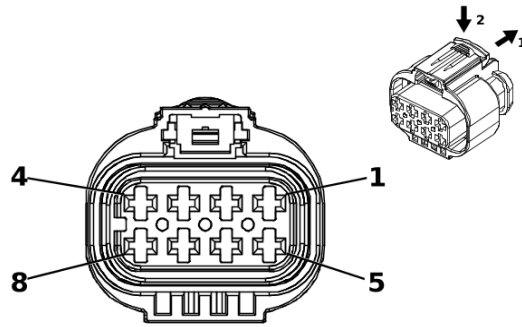

3749581

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 33180017
 Service Connector: 19355165
 Description: 8-Way F 2.8 Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-4A (PU)	No Tool Required

A7AX Fuel Tank Fuel Pump Module - Auxiliary (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 4	—	—	—	Not Occupied	—	—
5	0.5	BU / WH	1937	Secondary Fuel Level Sensor Signal	I	—
6	0.5	BK / BU	6282	Fuel Level Sensor 2 Low Reference	I	—
7 - 8	—	—	—	Not Occupied	—	—

A7AX Fuel Tank Fuel Pump Module - Auxiliary (L8T)

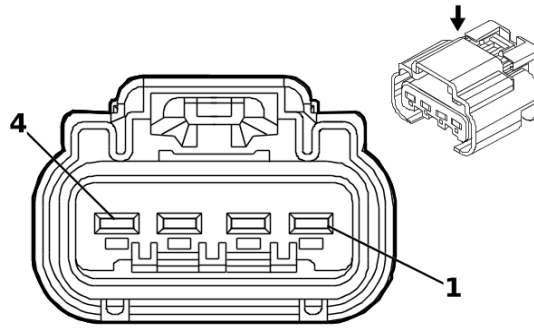

5199377

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 13843236
 Service Connector: 84769204
 Description: 4-Way F 280 GT Series, Sealed(NA)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-4A (PU)	No Tool Required

A7AX Fuel Tank Fuel Pump Module - Auxiliary (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	1	BU / GN	2120	Secondary Fuel Pump Control	I	—
2	1	BK / GN	1580	Fuel Pump Low Reference	I	—
3	0.5	BU / WH	1937	Secondary Fuel Level Sensor Signal	I	—
4	0.5	BK / BU	6282	Fuel Level Sensor 2 Low Reference	I	—

A9A Outside Rearview Mirror - Driver X1

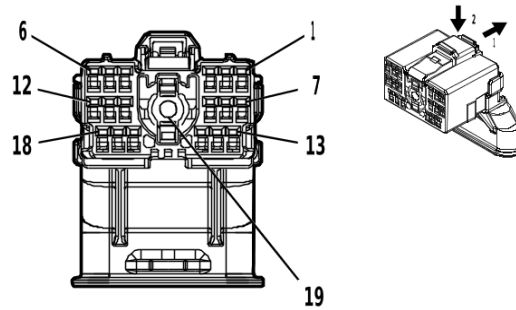

4991775

Connector Part Information

Harness Type: Front Side Door Door Wiring Harness - Left
 OEM Connector: 35077331
 Service Connector: Service by Harness - See Part Catalog
 Description: 19-Way F 1.2 MCON, Coaxial Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required
II	Not required	J-35616-16 (L-GN)	No Tool Required
III	Not required	J-35616-64B (L-BU)	No Tool Required

A9A Outside Rearview Mirror - Driver X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN / BK	2790	Left Front Mirror Motor Right [+] Left [-] Control	II	—
2	0.5	VT / BU	2788	Left Front Mirror Motor Up [+] Down [-] Control	II	—
3	0.5	WH / GN	2786	Left Front Mirror Motor Fold In Control	II	—
4	0.5	GY / YE	1760	Left Side Object Detection LED Control	II	—
5	0.5	WH / GN	5966	Approach Lamp Control	II	—
6	0.5	BN / GN	4246	Identification Lamp Control	II	—
7	0.5	WH	606	Left Outside Rearview Mirror Heater Control	II	—
8	0.5	WH / GY	2114	Left Turn Signal Lamp Control 2	II	—
9	0.5	BK	1550	Ground	II	—
10	—	—	—	Not Occupied	—	—
11	0.35	YE / GY	2933	Task Lamp Control Left	I	—
12	0.5	BK / YE	1691	Automatic Day/Night Mirror Low Reference	II	—
13	0.5	BU / YE	7761	Backup Illumination Lamp Control	II	—
14	0.5	YE / BN	2789	Left Front Mirror Motor Common Control	II	—
15	0.5	GY / WH	2785	Left Front Mirror Motor Fold Out Control	II	—
16	—	—	—	Not Occupied	—	—
17	0.5	YE / WH	1690	Mirror Dimming Signal	II	—
18	—	—	—	Not Occupied	—	—
19	—	BK	4725	Left Sideview Camera LVDS (Low Voltage Differential Signaling) Coaxial Signal	III	—

A9A Outside Rearview Mirror - Driver X2

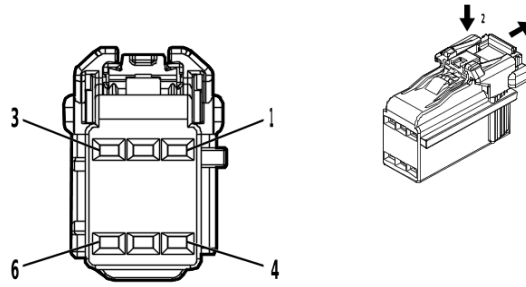

4862126

Connector Part Information

Harness Type: Front Side Door Door Wiring Harness - Left
 OEM Connector: 35327305
 Service Connector: Service by Harness - See Part Catalog
 Description: 6-Way F 1.2 Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

A9A Outside Rearview Mirror - Driver X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH / YE	2792	Left Front Mirror Position Sensor Left [-] Right [+] Signal	I	—
2	0.5	VT / RD	2791	Left Front Mirror Position Sensor High Refer- ence	I	—
3	0.5	GY / BN	2787	Left Front Mirror Position Sensor Up [+] Down [-] Signal	I	—
4	0.5	BK / BN	673	Left Outside Rearview Mirror Position Sensor Low Reference	I	—
5	0.5	BN	10201	Left Front Mirror Motor Extend Control	I	—
6	0.5	WH / BK	10202	Left Front Mirror Motor Retract Control	I	—

A9B Outside Rearview Mirror - Passenger X1

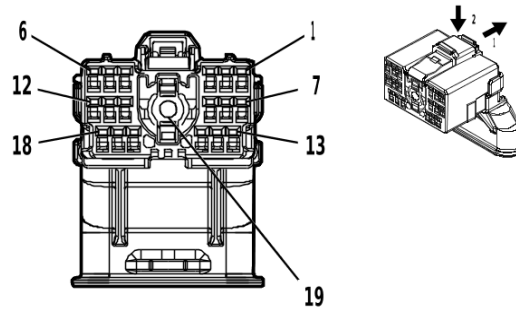

4991775

Connector Part Information

Harness Type: Front Side Door Door Wiring Harness - Right
 OEM Connector: 35077331
 Service Connector: Service by Harness - See Part Catalog
 Description: 19-Way F 1.2 MCON, Coaxial Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required
II	Not required	J-35616-16 (L-GN)	No Tool Required
III	Not required	J-35616-64B (L-BU)	No Tool Required

A9B Outside Rearview Mirror - Passenger X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GN / BK	2798	Right Front Mirror Motor Right [+] Left [-] Control	II	—
2	0.5	YE / VT	2796	Right Front Mirror Motor Up [+] Down [-] Control	II	—
3	0.5	BU / GY	2794	Right Front Mirror Motor Fold In Control	II	—
4	0.5	GY	1761	Right Side Object Detection LED Control	II	—
5	0.5	WH / GN	5966	Approach Lamp Control	II	—
6	0.5	BN / GN	4246	Identification Lamp Control	II	—
7	0.5	BN / VT	607	Right Outside Rearview Mirror Heater Control	II	—
8	0.5	GN / GY	2115	Right Turn Signal Lamp Control 2	II	—
9	0.75	BK	1350	Ground	II	—
10	0.5	BU / GY	636	Ambient Air Temperature Sensor Signal	II	—
11	0.35	YE / WH	2934	Task Lamp Control Right	I	—
12	0.5	BK / YE	1691	Automatic Day/Night Mirror Low Reference	II	—
13	0.5	BU / YE	7761	Backup Illumination Lamp Control	II	—
14	0.5	WH	2797	Right Front Mirror Motor Common Control	II	—
15	0.5	YE / WH	2793	Right Front Mirror Motor Fold Out Control	II	—
16	—	—	—	Not Occupied	—	—
17	0.5	YE / WH	1690	Mirror Dimming Signal	II	—
18	0.5	BK / GY	626	Engine Control Vehicle Sensors Low Reference 1	II	—
19	—	BK	4724	Right Sideview Camera LVDS (Low Voltage Differential Signaling) Coaxial Signal	III	—

A9B Outside Rearview Mirror - Passenger X2

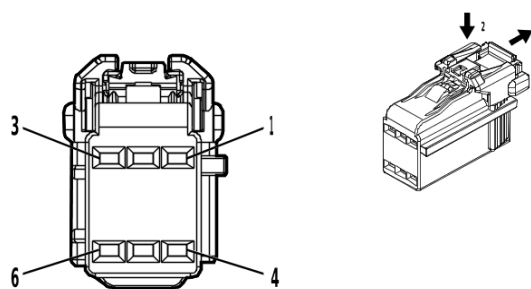

4862126

Connector Part Information

Harness Type: Front Side Door Door Wiring Harness - Right
 OEM Connector: 35327305
 Service Connector: Service by Harness - See Part Catalog
 Description: 6-Way F 1.2 Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

A9B Outside Rearview Mirror - Passenger X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	VT / WH	2800	Right Front Mirror Position Sensor Left [-] Right [+] Signal	I	—
2	0.5	YE / RD	2799	Right Front Mirror Position Sensor High Reference	I	—
3	0.5	BU / YE	2795	Right Front Mirror Position Sensor Up [+] Down [-] Signal	I	—
4	0.5	BK / GN	675	Right Outside Rearview Mirror Position Sensor Low Reference	I	—
5	0.5	BN / GN	10203	Right Front Mirror Motor Extend Control	I	—
6	0.5	VT	10204	Right Front Mirror Motor Retract Control	I	—

A10 Inside Rearview Mirror X1

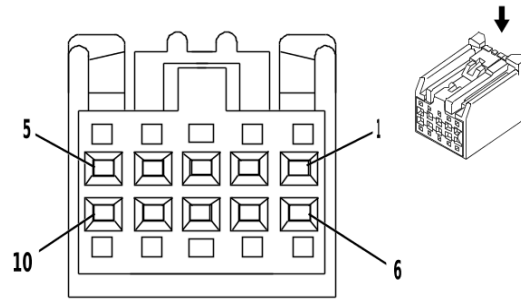

2180211

Connector Part Information

Harness Type: Dome Lamp Wiring Harness
 OEM Connector: 13815336
 Service Connector: 13577390
 Description: 10-Way F 0.64 Kaizen Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	13575742	J-35616-64B (L-BU)	J-38125-215A

A10 Inside Rearview Mirror X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	GN / WH	24	Backup Lamp Control	I	—
2	0.5	VT / BK	339	Run/Crank Ignition 1 Voltage	I	(DD8/ DRZ) + (GF2/ GF5/ GFF) UVO
	0.35	VT / BK	339	Run/Crank Ignition 1 Voltage	I	
3 - 4	—	—	—	Not Occupied	—	—
5	0.5	BK / WH	851	Signal Ground	I	—
6	0.35	GY / YE	6972	Rearview Camera Signal [+]	I	—
7	0.35	WH / BU	6973	Rearview Camera Signal [-]	I	—
8	0.35	BK / YE	1691	Automatic Day/Night Mirror Low Reference	I	—
9	0.35	YE / WH	1690	Mirror Dimming Signal	I	—
10	—	—	—	Not Occupied	—	—

A10 Inside Rearview Mirror X2 (DRZ)

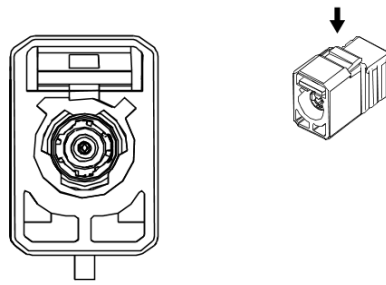

2893647

Connector Part Information

Harness Type: Radio Antenna Cable Extension Cable COAX
 OEM Connector: 13581683
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way F Coax Type(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

A10 Inside Rearview Mirror X2 (DRZ)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	Coax Ca- ble	—	Full Display Mirror Rear Camera Coaxial Video Signal	I	—

A11 Radio X1 (IOR)

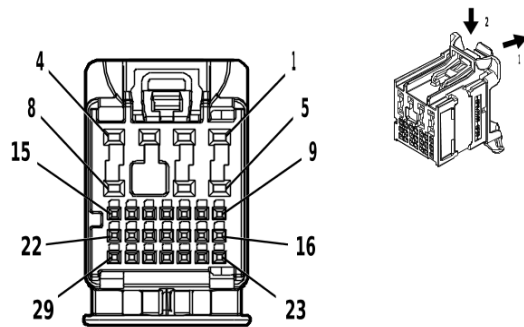

4584346

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 35364128
 Service Connector: 13534972
 Description: 29-Way F 0.5 NANO, 1.2 MCON Series(GN)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19370262	EL-35616-58 (BK)	EL-38125-58
II	84729890	J-35616-12 (BU)	J-38125-215A


A11 Radio X1 (IOR)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	RD / GY	2840	Battery Positive Voltage	II	—
2	0.75	RD / GY	2840	Battery Positive Voltage	II	—
3	0.75	BK / WH	1051	Signal Ground	II	—
4	0.35	BU / RD	11246	Infotainment Display 5 Volt Reference	II	—
5	0.35	BK / WH	11252	Infotainment Display Low Reference	II	—
6	0.75	BK / WH	1051	Signal Ground	II	—
7	—	—	—	Not Occupied	—	—
8	0.75	GN / BK	116	Left Rear Speaker [-] Control	II	—
9	0.35	GY / BU	11247	Infotainment Display LCD Enable Signal	I	—
10	—	—	—	Not Occupied	—	—
11	0.35	GN / WH	24	Backup Lamp Control	I	—
12 - 14	—	—	—	Not Occupied	—	—
15	0.35	BU / GY	11244	Radio Switch Dimming Control	I	—
16	—	—	—	Not Occupied	—	—
17	0.35	BU / WH	4985	AUTOSAR CAN Bus [+] 5 Serial Data	I	—
18	0.35	BU / YE	4984	AUTOSAR CAN Bus [-] 5 Serial Data	I	—
19 - 20	—	—	—	Not Occupied	—	—
21	0.35	GY / VT	11249	Infotainment Display Backlight Enable Control	I	—
22	0.35	BU / GN	11248	Infotainment Display Backlight Dimming Control	I	—
23	—	—	—	Not Occupied	—	—
24	0.35	BN / WH	11233	Radio Switch Power ON/OFF Switch Signal	I	—

A11 Radio X1 (IOR) (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
25	0.35	VT / WH	11245	Radio Switch Buttons Signal	I	—
26	0.35	BU	11235	Radio Switch Volume Up Signal	I	—
27	0.35	GY / BN	11234	Radio Switch Volume Down Signal	I	—
28 - 29	—	—	—	Not Occupied	—	—

A11 Radio X2 (IOK)

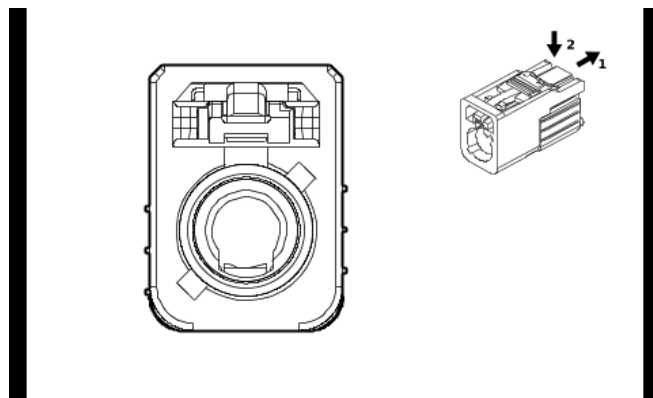

5793980

Connector Part Information

Harness Type: Instrument Panel Wiring Harness COAX
 OEM Connector: 33340311
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way F Coax Type(BU)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

A11 Radio X2 (IOK)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	Coax Cable	—	(GPS only) Coaxial Antenna GPS Signal	I	—

A11 Radio X2 (IOR)

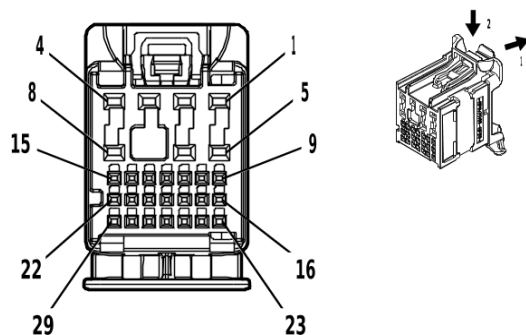

4584398

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 35364129
 Service Connector: 13534973
 Description: 29-Way F 0.5 NANO, 1.2 MCON, stAK50h Series(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19370262	EL-35616-58 (BK)	EL-38125-58
II	84729890	J-35616-12 (BU)	J-38125-215A

A11 Radio X2 (IOR)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	GN	199	Left Rear Speaker [+] Control	II	—
2	0.75	BU	201	Left Front Speaker 1 [+] Control	II	—
3	0.75	YE	200	Right Front Speaker 1 [+] Control	II	—
4	0.75	BU / BK	115	Right Rear Speaker [-] Control	II	—
5	0.75	BN / BU	118	Left Front Speaker [-] Control 1	II	—
6	0.75	YE / BK	117	Right Front Speaker [-] Control 1	II	—
7	—	—	—	Not Occupied	—	—
8	0.75	WH	46	Right Rear Speaker [+] Control	II	—
9	0.35	BK / BN	654	Cellular Telephone Microphone Low Reference Voice Recognition Audio [-] Control	I	- GF2- GF5- GFF+ IOK- UE1 IOK+ UE1
	0.35	BK / GY	5152		I	
10	0.35	BU	655	Cellular Telephone Microphone Signal Voice Recognition Audio Signal	I	- GF2- GF5- GFF+ IOK- UE1 IOK+ UE1
	0.35	GY / YE	5149		I	
11 - 29	—	—	—	Not Occupied	—	—

A11 Radio X3 (IOK)

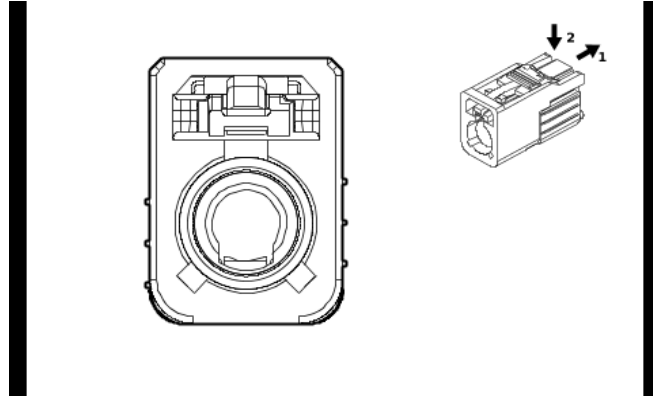

5794617

Connector Part Information

Harness Type: Instrument Panel Wiring Harness COAX
 OEM Connector: 33340318
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way F Coax Type(CU)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

A11 Radio X3 (IOK)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	Coax Cable	—	(XM +/-HD) Coaxial Antenna XM Signal	I	—

A11 Radio X3 (IOR)

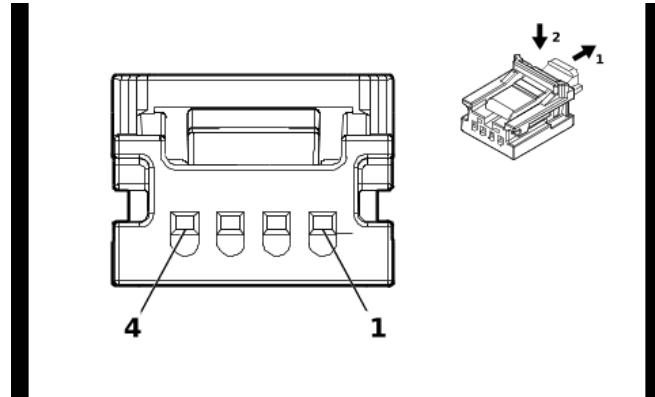

5493278

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 33228283
 Service Connector: 19354840
 Description: 4-Way F Mini 50 Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	EL-35616-58 (BK)	No Tool Required

A11 Radio X3 (IOR)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	—	Not Occupied	—	—
2	0.35	YE	4758	Ethernet Bus 2 [+]	I	—
3	0.35	BU	4757	Ethernet Bus 2 [-]	I	—
4	—	—	—	Not Occupied	—	—

A11 Radio X4 (IOR)

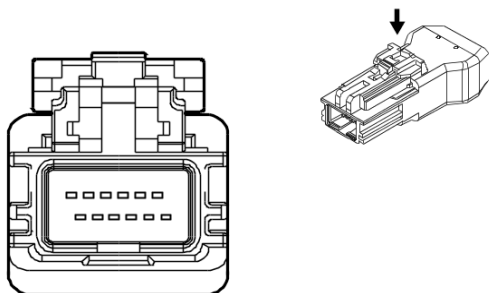

4527210

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 33358813
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 12-Way M 2.0 HSAL-2 Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

A11 Radio X4 (IOR)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	4844	Radio LVDS (Low Voltage Differential Signaling) Low Reference	I	—
2	—	—	4845	Radio LVDS (Low Voltage Differential Signaling) Signal [+]	I	—
3	—	—	4846	Radio LVDS (Low Voltage Differential Signaling) Signal [-]	I	—
4 - 6	—	—	—	Not Occupied	—	—
7	—	—	7899	Auxiliary Audio/Video Jack USB Serial Data Supply Voltage	I	—
8	—	—	—	Not Occupied	—	—
9	—	—	7896	Auxiliary Audio/Video Jack USB [+] Serial Data	I	—
10	—	—	7897	Auxiliary Audio/Video Jack USB [-] Serial Data	I	—
11	—	—	—	Not Occupied	—	—
12	—	—	7898	Auxiliary Audio/Video Jack USB Low Reference	I	—

A11 Radio X5 (IOK)

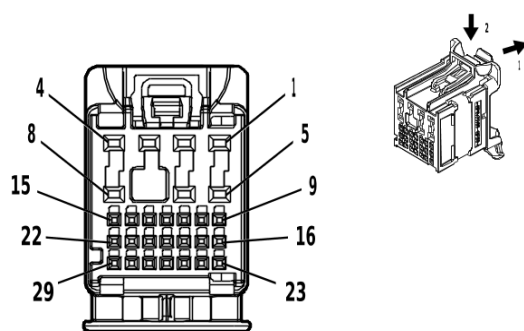

4496253

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 35364134
 Service Connector: 13534974
 Description: 29-Way F 0.5 NANO, 1.2 MCON, stAK50h Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19370262	EL-35616-58 (BK)	EL-38125-58
II	84729890	J-35616-12 (BU)	J-38125-215A

A11 Radio X5 (IOK)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	RD / YE	2340	Battery Positive Voltage	II	—
2	—	—	—	Not Occupied	—	—
3	0.75	BK / WH	1051	Signal Ground	II	—
4 - 7	—	—	—	Not Occupied	—	—
8	0.75	GN / BK	116	Left Rear Speaker [-] Control	II	—
9	0.35	BU	655	Cellular Telephone Microphone Signal	I	- GF2- GF5- GFF+ IOK- UE1 IOK+ UE1
	0.35	GY / YE	5149	Voice Recognition Audio Signal	I	
10	0.35	BK / BN	654	Cellular Telephone Microphone Low Reference	I	- GF2- GF5- GFF+ IOK- UE1 IOK+ UE1
	0.35	BK / GY	5152	Voice Recognition Audio [-] Control	I	
11	0.35	VT / YE	7043	Microphone [+] Signal	I	—
12	0.35	BU / BK	7044	Microphone [-] Signal	I	—
13 - 29	—	—	—	Not Occupied	—	—

A11 Radio X5 (IOR)

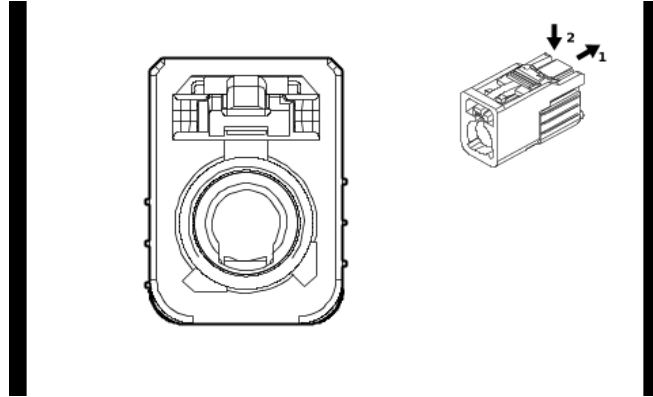

5191842

Connector Part Information

Harness Type: Instrument Panel Wiring Harness COAX
 OEM Connector: 33340320
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way F Coax Type(OG)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

A11 Radio X5 (IOR)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	Coax Cable	—	Rear Vision Camera Coaxial Video Signal	I	—

A11 Radio X6 (IOK)

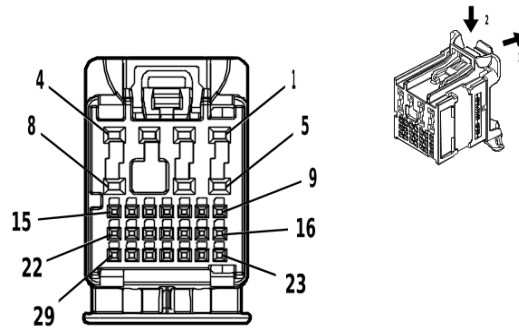

4578560

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 35364137
 Service Connector: 13534971
 Description: 29-Way F 0.5 NANO, 1.2 MCON, stAK50h Series(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19370262	EL-35616-58 (BK)	EL-38125-58
II	84729890	J-35616-12 (BU)	J-38125-215A

A11 Radio X6 (IOK)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	GN	199	Left Rear Speaker [+] Control	II	—
2	0.75	BU	201	Left Front Speaker 1 [+] Control	II	—
3	0.75	YE / BK	117	Right Front Speaker [-] Control 1	II	—
4	0.75	BU / BK	115	Right Rear Speaker [-] Control	II	—
5	0.75	BN / BU	118	Left Front Speaker [-] Control 1	II	—
6	0.75	YE	200	Right Front Speaker 1 [+] Control	II	—
7	—	—	—	Not Occupied	—	—
8	0.75	WH	46	Right Rear Speaker [+] Control	II	—
9	0.35	BU / WH	4985	AUTOSAR CAN Bus [+] 5 Serial Data	I	—
10	0.35	BU / YE	4984	AUTOSAR CAN Bus [-] 5 Serial Data	I	—
11 - 12	—	—	—	Not Occupied	—	—
13	0.35	GN / WH	24	Backup Lamp Control	I	—
14 - 29	—	—	—	Not Occupied	—	—

A11 Radio X7 (IOK)

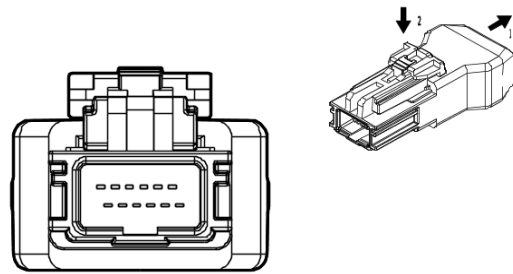

4584321

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 13511515
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 12-Way M 2.0 HSAL-2 Series(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

A11 Radio X7 (IOK)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	7853	Center Stack LVDS (Low Voltage Differential Signaling) Low Reference	I	—
2	—	—	7854	Center Stack LVDS (Low Voltage Differential Signaling) Signal [+]	I	—
3	—	—	7855	Center Stack LVDS (Low Voltage Differential Signaling) Signal [-]	I	—
4	—	—	7847	Center Stack LVDS (Low Voltage Differential Signaling) 2 Low Reference	I	—
5	—	—	7848	Center Stack LVDS (Low Voltage Differential Signaling) 2 Signal [+]	I	—
6	—	—	7849	Center Stack LVDS (Low Voltage Differential Signaling) 2 Signal [-]	I	—
7 - 12	—	—	—	Not Occupied	—	—

A11 Radio X7 (IOR)

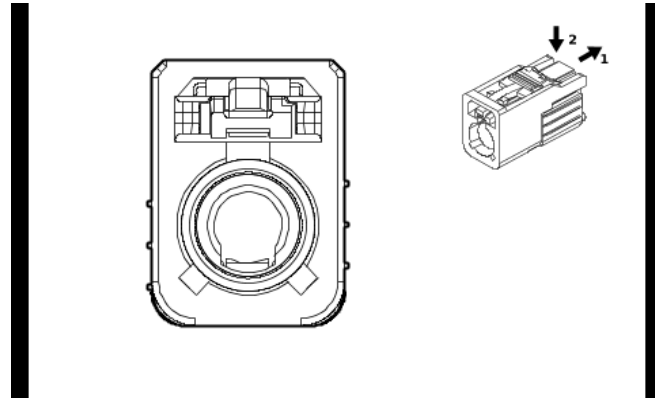

5794617

Connector Part Information

Harness Type: Instrument Panel Wiring Harness COAX
 OEM Connector: 33340318
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way F Coax Type(CU)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

A11 Radio X7 (IOR)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	Coax Cable	—	(XM +/-HD) Coaxial Antenna XM Signal	I	—

A11 Radio X8 (IOK)

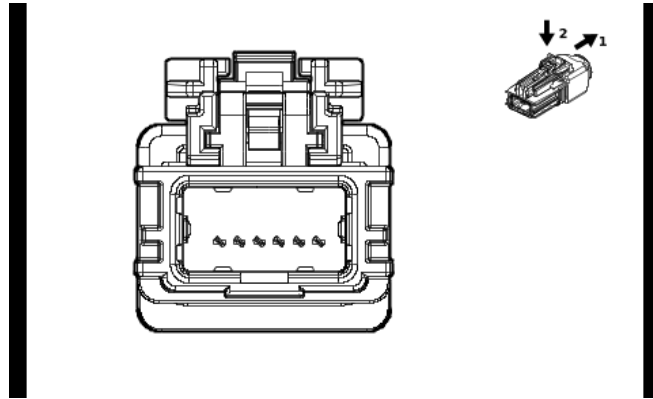

5987912

Connector Part Information

Harness Type: Instrument Panel Wiring Harness USB
 OEM Connector: 13545174
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 12-Way M 2.0 HSAL-2 Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

A11 Radio X8 (IOK)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	USB	—	USB Serial Data	I	—

A11 Radio X8 (IOR)

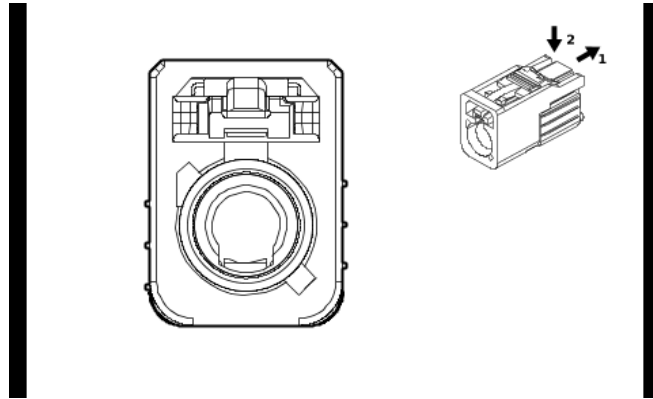

5518456

Connector Part Information

Harness Type: Instrument Panel Wiring Harness COAX
 OEM Connector: 33340317
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way F Coax Type(BG)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

A11 Radio X8 (IOR)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	Coax Cable	—	WiFi Antenna Coaxial Signal	I	—

A11 Radio X9 (IOK)

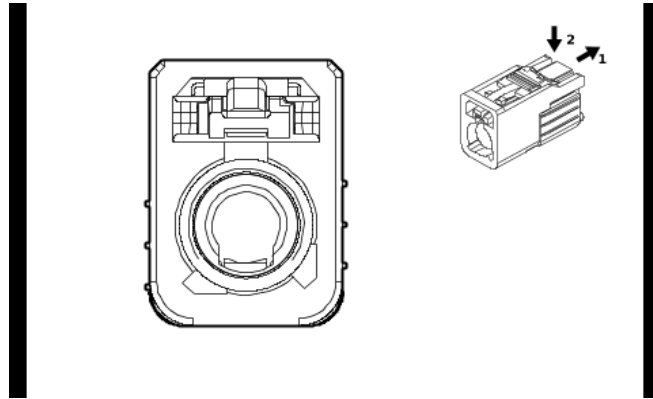

5191842

Connector Part Information

Harness Type: Instrument Panel Wiring Harness COAX
 OEM Connector: 33340320
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way F Coax Type(OG)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

A11 Radio X9 (IOK)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	Coax Cable	—	Video Processing Module Coaxial Video Signal	I	—

A11 Radio X10 (IOK)

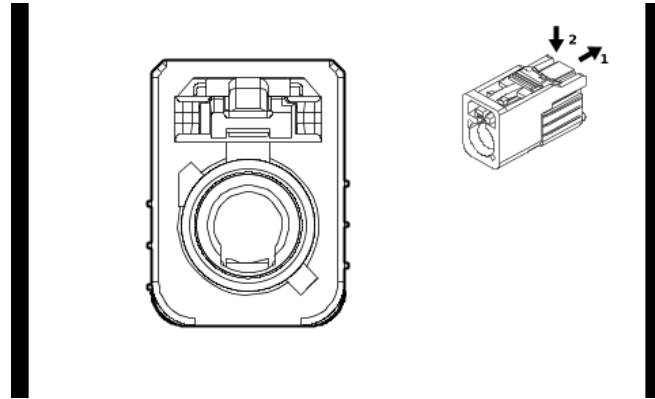

5518456

Connector Part Information

Harness Type: Instrument Panel Wiring Harness COAX
 OEM Connector: 33340317
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way F Coax Type(BG)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

A11 Radio X10 (IOK)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	Coax Cable	—	WiFi Antenna Coaxial Signal	I	—

A11 Radio X11 (IOK)

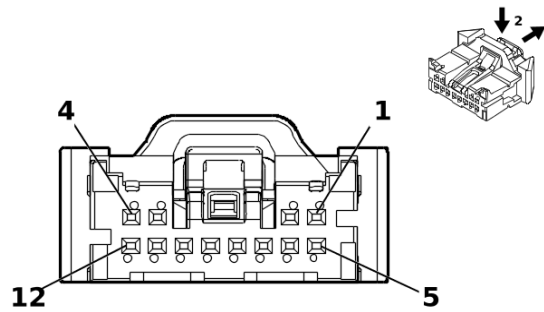

5360826

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 35068239
 Service Connector: 13529935
 Description: 12-Way F 050 CTS Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Service by Cable	No Tool Required	No Tool Required

A11 Radio X11 (IOK)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 2	—	—	—	Not Occupied	—	—
3	0.35	YE	4758	Ethernet Bus 2 [+]	I	—
4	0.35	BU	4757	Ethernet Bus 2 [-]	I	—
5 - 7	—	—	—	Not Occupied	—	—
8	0.35	YE	7215	Ethernet Bus 6 [+]	I	—
9	0.35	GN	7214	Ethernet Bus 6 [-]	I	—
10	—	—	—	Not Occupied	—	—
11	0.35	BN	7211	Ethernet Bus 4 [+]	I	—
12	0.35	GY	7210	Ethernet Bus 4 [-]	I	—

A16 Transfer Case Four Wheel Drive Actuator (L5P&NQF)

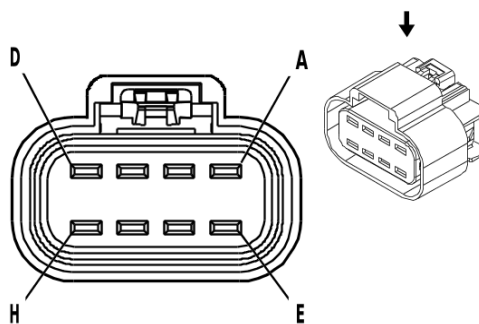

646372

Connector Part Information

Harness Type: Engine Wiring Harness Chassis
 OEM Connector: 13538370
 Service Connector: Service by Harness - See Part Catalog
 Description: 8-Way F 280 GT Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-4A (PU)	No Tool Required

A16 Transfer Case Four Wheel Drive Actuator (L5P&NQF)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	2.5	YE / GY	1552	Transfer Case Motor Clockwise Control	I	—
B	0.75	BU	8013	Transfer Case Lock Solenoid Control 2	I	—
C	0.75	YE / BN	1569	Transfer Case Lock Solenoid Valve Control	I	—
D	2.5	YE / VT	1553	Transfer Case Motor Counter Clockwise Control	I	—
E	0.5	YE	7474	Incremental Encoder Direction Signal	I	—
F	0.5	BU / GY	7473	Incremental Encoder Impulse Signal	I	—
G	0.5	WH / GN	7475	Incremental Encoder Sensor Voltage Reference	I	—
H	0.5	VT	7476	Incremental Encoder Sensor Low Reference	I	—

A16 Transfer Case Four Wheel Drive Actuator (L5P&NQH)

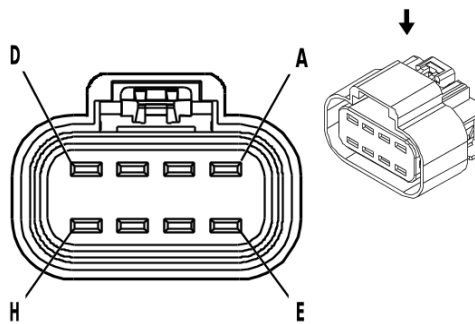

646372

Connector Part Information

Harness Type: Engine Wiring Harness Chassis
 OEM Connector: 13538370
 Service Connector: Service by Harness - See Part Catalog
 Description: 8-Way F 280 GT Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-4A (PU)	No Tool Required

A16 Transfer Case Four Wheel Drive Actuator (L5P&NQH)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	2.5	YE / GY	1552	Transfer Case Motor Clockwise Control	I	—
B	0.75	BU	8013	Transfer Case Lock Solenoid Control 2	I	—
C	0.75	YE / BN	1569	Transfer Case Lock Solenoid Valve Control	I	—
D	2.5	YE / VT	1553	Transfer Case Motor Counter Clockwise Control	I	—
E	0.5	YE	7474	Incremental Encoder Direction Signal	I	—
F	0.5	BU / GY	7473	Incremental Encoder Impulse Signal	I	—
G	0.5	WH / GN	7475	Incremental Encoder Sensor Voltage Reference	I	—
H	0.5	VT	7476	Incremental Encoder Sensor Low Reference	I	—

A16 Transfer Case Four Wheel Drive Actuator (L8T&NQF)

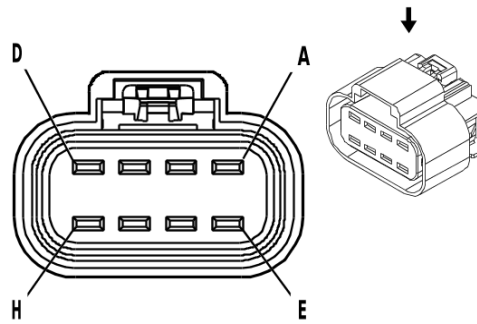

646372

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13538370
 Service Connector: 19369184
 Description: 8-Way F 280 GT Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-4A (PU)	No Tool Required

A16 Transfer Case Four Wheel Drive Actuator (L8T&NQF)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	2.5	YE / GY	1552	Transfer Case Motor Clockwise Control	I	—
B	0.75	BU	8013	Transfer Case Lock Solenoid Control 2	I	—
C	0.75	YE / BN	1569	Transfer Case Lock Solenoid Valve Control	I	—
D	2.5	YE / VT	1553	Transfer Case Motor Counter Clockwise Control	I	—
E	0.5	YE	7474	Incremental Encoder Direction Signal	I	—
F	0.5	BU / GY	7473	Incremental Encoder Impulse Signal	I	—
G	0.5	WH / GN	7475	Incremental Encoder Sensor Voltage Reference	I	—
H	0.5	VT	7476	Incremental Encoder Sensor Low Reference	I	—

A16 Transfer Case Four Wheel Drive Actuator (L8T&NQH)

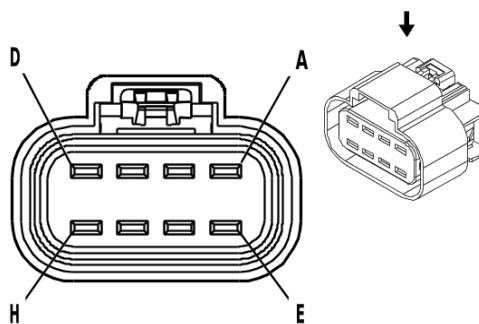

646372

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13538370
 Service Connector: 19369184
 Description: 8-Way F 280 GT Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-4A (PU)	No Tool Required

A16 Transfer Case Four Wheel Drive Actuator (L8T&NQH)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	2.5	YE / GY	1552	Transfer Case Motor Clockwise Control	I	—
B	0.75	BU	8013	Transfer Case Lock Solenoid Control 2	I	—
C	0.75	YE / BN	1569	Transfer Case Lock Solenoid Valve Control	I	—
D	2.5	YE / VT	1553	Transfer Case Motor Counter Clockwise Control	I	—
E	0.5	YE	7474	Incremental Encoder Direction Signal	I	—
F	0.5	BU / GY	7473	Incremental Encoder Impulse Signal	I	—
G	0.5	WH / GN	7475	Incremental Encoder Sensor Voltage Reference	I	—
H	0.5	VT	7476	Incremental Encoder Sensor Low Reference	I	—

A22 Radio Control X1 (IOK)

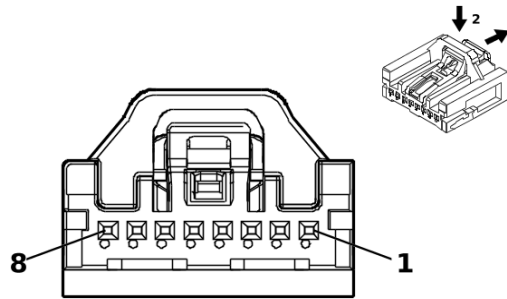

5200269

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 35068228
 Service Connector: 84769201
 Description: 8-Way F Mini 50 Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	EL-35616-58 (BK)	No Tool Required

A22 Radio Control X1 (IOK)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	RD / WH	1340	Battery Positive Voltage	I	—
2 - 7	—	—	—	Not Occupied	—	—
8	0.35	BK / WH	1051	Signal Ground	I	—

A22 Radio Control X2 (IOK)

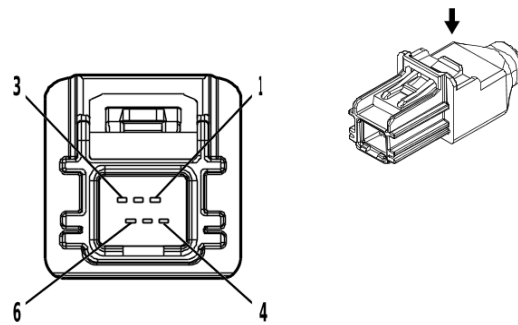

4806625

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 13522802
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 6-Way M HSAL-2 Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

A22 Radio Control X2 (IOK)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	7853	Center Stack LVDS (Low Voltage Differential Signaling) Low Reference	I	—
2	—	—	7854	Center Stack LVDS (Low Voltage Differential Signaling) Signal [+]	I	—
3	—	—	7855	Center Stack LVDS (Low Voltage Differential Signaling) Signal [-]	I	—
4	—	—	7848	Center Stack LVDS (Low Voltage Differential Signaling) 2 Signal [+]	I	—
5	—	—	7849	Center Stack LVDS (Low Voltage Differential Signaling) 2 Signal [-]	I	—
6	—	—	7847	Center Stack LVDS (Low Voltage Differential Signaling) 2 Low Reference	I	—

A23D Front Side Door Latch - Driver

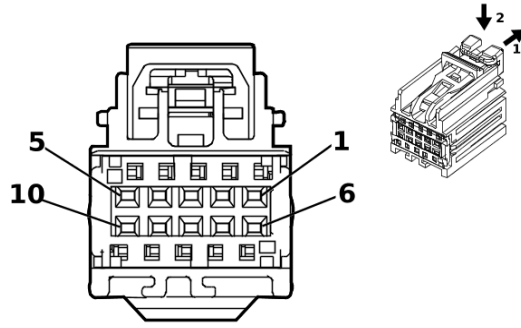

4622549

Connector Part Information

Harness Type: Front Side Door Door Wiring Harness - Left
 OEM Connector: 33320811
 Service Connector: Service by Harness - See Part Catalog
 Description: 10-Way F 0.64 Kaizen Series(GN)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

A23D Front Side Door Latch - Driver

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GY	745	Left Front Door Ajar Switch Signal	I	—
2	0.5	VT / GY	126	Left Front Door Open Switch Signal	I	—
3	0.5	BK	1550	Ground	I	—
4	0.5	WH / VT	4258	Left Front Door Lock Status Signal	I	—
5 - 6	—	—	—	Not Occupied	—	—
7	0.75	GY	2681	Left Front Door Lock Actuator Lock Control	I	—
8	0.75	WH	2679	Lock Actuators Unlock Control 1	I	—
9 - 10	—	—	—	Not Occupied	—	—

A23LR Rear Side Door Latch - Left

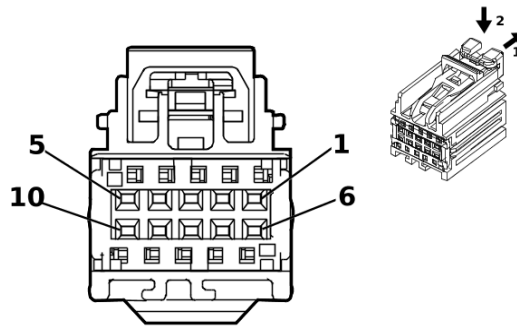

4622549

Connector Part Information

Harness Type: Rear Side Door Door Wiring Harness - Left
 OEM Connector: 33320811
 Service Connector: Service by Harness - See Part Catalog
 Description: 10-Way F 0.64 Kaizen Series(GN)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

A23LR Rear Side Door Latch - Left

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GY	747	Left Rear Door Ajar Switch Signal	I	—
2	—	—	—	Not Occupied	—	—
3	0.5	BK	1550	Ground	I	—
4 - 6	—	—	—	Not Occupied	—	—
7	0.75	BU / YE	1091	Left Rear Door Lock Actuator Lock Control	I	—
8	0.75	WH	2679	Lock Actuators Unlock Control 1	I	—
9 - 10	—	—	—	Not Occupied	—	—

A23P Front Side Door Latch - Passenger

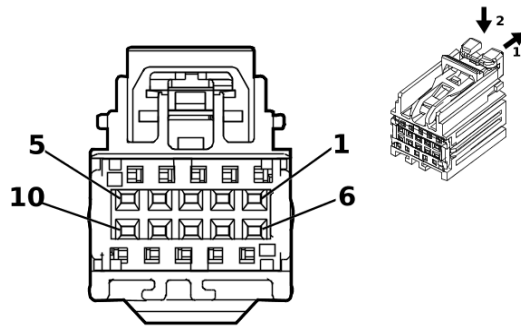

4622549

Connector Part Information

Harness Type: Front Side Door Door Wiring Harness - Right
 OEM Connector: 33320811
 Service Connector: Service by Harness - See Part Catalog
 Description: 10-Way F 0.64 Kaizen Series(GN)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

A23P Front Side Door Latch - Passenger

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 2	—	—	—	Not Occupied	—	—
3	0.5	BK	1350	Ground	I	—
4	—	—	—	Not Occupied	—	—
5	0.5	GY	746	Right Front Door Ajar Switch Signal	I	—
6 - 7	—	—	—	Not Occupied	—	—
8	0.75	GY / BK	2680	Lock Actuators Unlock Control 2	I	—
9	0.75	YE / GN	2682	Right Front Door Lock Actuator Lock Control	I	—
10	—	—	—	Not Occupied	—	—

A23RR Rear Side Door Latch - Right

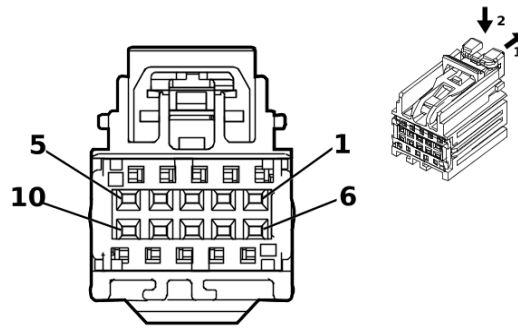

4622549

Connector Part Information

Harness Type: Rear Side Door Door Wiring Harness - Right
 OEM Connector: 33320811
 Service Connector: Service by Harness - See Part Catalog
 Description: 10-Way F 0.64 Kaizen Series(GN)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

A23RR Rear Side Door Latch - Right

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 2	—	—	—	Not Occupied	—	—
3	0.5	BK	1350	Ground	I	—
4	—	—	—	Not Occupied	—	—
5	0.5	GY	748	Right Rear Door Ajar Switch Signal	I	—
6 - 7	—	—	—	Not Occupied	—	—
8	0.75	GY / BK	2680	Lock Actuators Unlock Control 2	I	—
9	0.75	VT / WH	1094	Right Rear Door Lock Actuator Lock Control	I	—
10	—	—	—	Not Occupied	—	—

A24D Front Side Door Outside Handle - Left

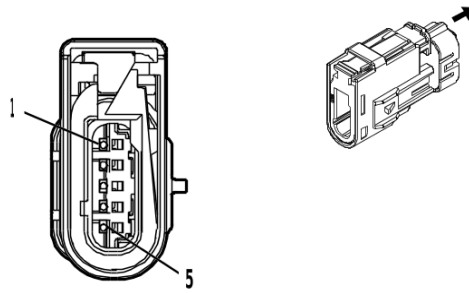

4808321

Connector Part Information

Harness Type: Front Side Door Door Wiring Harness - Left
 OEM Connector: 35028909
 Service Connector: Service by Harness - See Part Catalog
 Description: 5-Way M 1.2 Series, Sealed(NA)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-17 (L-GN)	No Tool Required

A24D Front Side Door Outside Handle - Left

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BU	2675	Left Front Exterior Door Handle Switch Unlock Signal	I	—
2	0.5	VT	4301	Passive Entry Left Front Antenna Signal High	I	—
3	—	—	—	Not Occupied	—	—
4	0.5	VT / GY	4302	Passive Entry Left Front Antenna Signal Low	I	—
5	0.5	BK / WH	1551	Signal Ground	I	—

A24P Front Side Door Outside Handle - Right

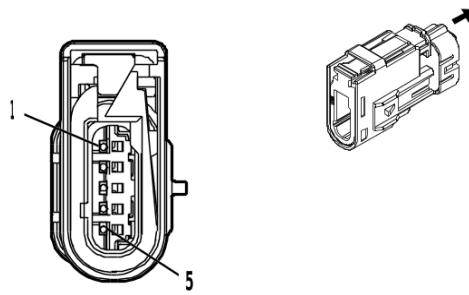

4808321

Connector Part Information

Harness Type: Front Side Door Door Wiring Harness - Right
 OEM Connector: 35028909
 Service Connector: Service by Harness - See Part Catalog
 Description: 5-Way M 1.2 Series, Sealed(NA)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-17 (L-GN)	No Tool Required

A24P Front Side Door Outside Handle - Right

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GY / VT	2676	Right Front Door Exterior Switch Unlock Signal	I	—
2	0.5	GN / YE	4303	Passive Entry Right Front Door Antenna Signal High	I	—
3	—	—	—	Not Occupied	—	—
4	0.5	GN / BK	4304	Passive Entry Right Front Door Antenna Signal Low	I	—
5	0.5	BK / WH	1451	Signal Ground	I	—

A26 Heater and Air Conditioning User Interface Control - Front

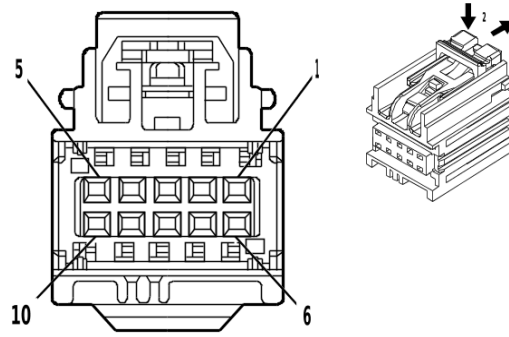

4891168

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 33315379
 Service Connector: 13509649
 Description: 10-Way F 0.64 Kaizen Series(NA)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19300629	J-35616-64B (L-BU)	J-38125-215A

A26 Heater and Air Conditioning User Interface Control - Front

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	RD / WH	1340	Battery Positive Voltage	I	—
2	—	—	—	Not Occupied	—	—
3	0.35	BU / WH	4985	AUTOSAR CAN Bus [+] 5 Serial Data	I	—
4	0.35	BU / WH	4985	AUTOSAR CAN Bus [+] 5 Serial Data	I	—
5	—	—	—	Not Occupied	—	—
6	0.35	GY / GN	4636	HVAC System Enable Signal	I	—
7	—	—	—	Not Occupied	—	—
8	0.35	BU / YE	4984	AUTOSAR CAN Bus [-] 5 Serial Data	I	—
9	0.35	BU / YE	4984	AUTOSAR CAN Bus [-] 5 Serial Data	I	—
10	0.5	BK / WH	851	Signal Ground	I	—

A38 Reductant Tank Fluid Supply Pump Module (L5P)

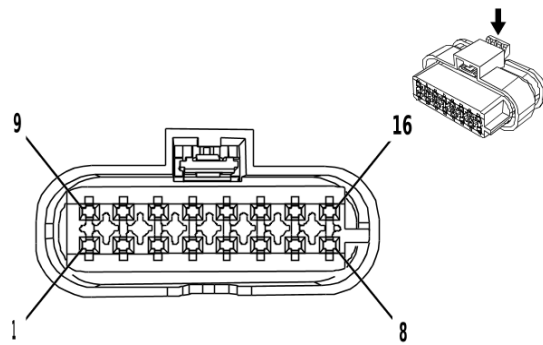

4259227

Connector Part Information

Harness Type: Emission Reduction Fluid Tank Reservoir Wire Harness
 OEM Connector: 33210848
 Service Connector: Service by Harness - See Part Catalog
 Description: 16-Way F 1.2 MLK Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (LT GN)	No Tool Required
I	Not required	J-35616-16 (LT GN)	No Tool Required

A38 Reductant Tank Fluid Supply Pump Module (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BK	3244	Diesel Exhaust Fluid Tank Temperature Sensor Signal	I	—
2	0.5	BN	3245	Diesel Exhaust Fluid Tank Temperature Sensor Low Reference	I	—
3	0.5	BU	3107	Diesel Exhaust Fluid Pressure Sensor Low Reference	I	—
4	0.5	BU	3108	Diesel Exhaust Fluid Pressure Sensor Signal	I	—
5	0.5	BN	3106	Diesel Exhaust Fluid Pressure Sensor 5 Volt Reference	I	—
6	—	—	—	Not Occupied	—	—
7	1.0	WH	3103	Diesel Exhaust Fluid Smart Pump Control	I	—
8	1.0	BN	3875	Diesel Exhaust Fluid Smart Pump Supply Voltage Phase 2	I	—
9	1.0	YE	3677	Diesel Exhaust Fluid Reservoir Heater Control	I	—
10	1.0	BN	3676	Diesel Exhaust Fluid Heating Tank 2 Heater Control	I	—
11	1.0	BU	4318	Diesel Exhaust Fluid Tank Heater Low Control	I	—
12 - 13	—	—	—	Not Occupied	—	—
14	1.0	BU	2937	Diesel Exhaust Fluid Pump Motor Stator Low Reference	I	—
15	1.0	BN	2936	Diesel Exhaust Fluid Heating Tank 2 Heater Control Low	I	—
16	1.0	YE	3876	Diesel Exhaust Fluid Smart Pump Supply Voltage Phase 3	I	—

A99L Pickup Box Endgate Latch - Left (QK2)

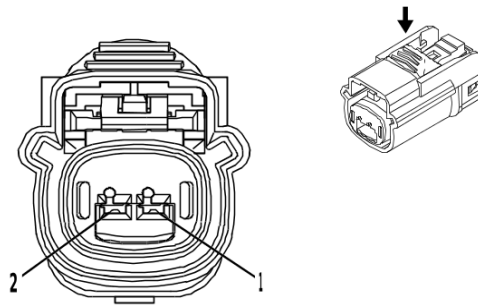

4332222

Connector Part Information

Harness Type: Endgate Wiring Harness
 OEM Connector: 15514573
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.5 OCS Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required

A99L Pickup Box Endgate Latch - Left (QK2)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	1	GN	1299	Major Endgate Motor Control	I	—
2	1	YE / BK	7730	Major Endgate Motor Low Reference	I	—

A99R Pickup Box Endgate Latch - Right (QK2)

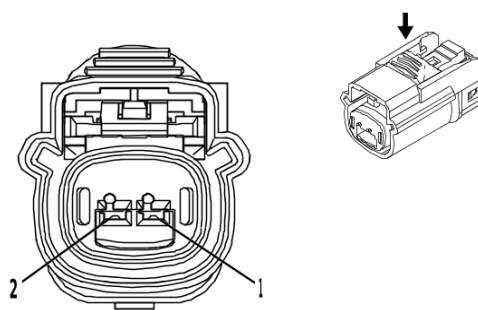

4332222

Connector Part Information

Harness Type: Endgate Wiring Harness
 OEM Connector: 15514573
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.5 OCS Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required

A99R Pickup Box Endgate Latch - Right (QK2)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	1	GN	1299	Major Endgate Motor Control	I	—
2	1	YE / BK	7730	Major Endgate Motor Low Reference	I	—

A100L Pickup Box Auxiliary Endgate Latch - Left (QK2)

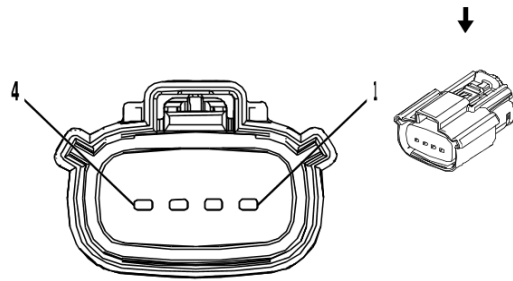

2474747

Connector Part Information

Harness Type: Endgate Wiring Harness
 OEM Connector: 13815807
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way F 1.5 MX Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required

A100L Pickup Box Auxiliary Endgate Latch - Left (QK2)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	YE / BU	7295	Left Minor Endgate Ajar Signal	I	—
2	0.75	BK	1850	Ground	I	—
3	1	YE / BK	7730	Major Endgate Motor Low Reference	I	—
4	1	VT	7725	Minor Endgate Motor Control	I	—

A100R Pickup Box Auxiliary Endgate Latch - Right (QK2)

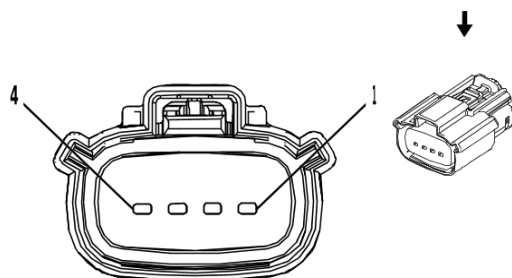

2474747

Connector Part Information

Harness Type: Endgate Wiring Harness
 OEM Connector: 13815807
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way F 1.5 MX Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required

A100R Pickup Box Auxiliary Endgate Latch - Right (QK2)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	1	YE / BK	7730	Major Endgate Motor Low Reference	I	—
2	1	VT	7725	Minor Endgate Motor Control	I	—
3 - 4	—	—	—	Not Occupied	—	—

A103 Roof Console X1

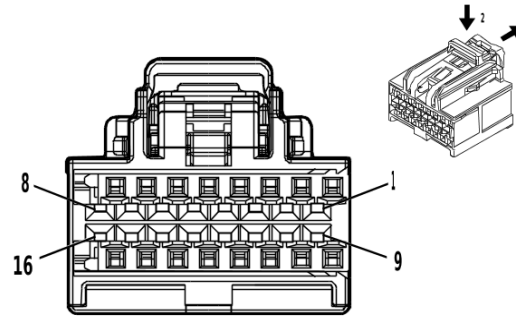

4873254

Connector Part Information

Harness Type: Dome Lamp Wiring Harness
 OEM Connector: 35016344
 Service Connector: 13519739
 Description: 16-Way F 0.64 OCS Series(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19300660	J-35616-64B (L-BU)	J-38125-215A

A103 Roof Console X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BK	1050	Ground	I	—
2	—	—	—	Not Occupied	—	—
3	0.35	YE	6817	LED Backlight Dimming Control 1	I	—
4 - 6	—	—	—	Not Occupied	—	—
7	0.35	WH / BN	2904	Row 2 Dome Reading Lamp Switch Signal	I	—
8	0.35	VT / GY	2906	Row 2 Dome Reading Lamp 2 Switch Signal	I	—
9	0.5	RD / YE	240	Battery Positive Voltage	I	—
10	0.5	GN / WH	2854	Body Control Module LIN Bus 8	I	—
11	0.35	BU / GN	4785	Interior Lamp Overhead Enable Signal	I	—
12	0.35	GY / WH	2369	Interior Lamp Overhead 2 Enable Signal	I	—
13	0.35	GN / YE	2903	Row 2 Dome Reading Lamp Interior Lamp Control	I	—
14	0.35	BN / BU	2905	Row 2 Dome Reading Lamp 2 Interior Lamp Control	I	—
15	—	—	—	Not Occupied	—	—
16	0.5	BK	1050	Ground	I	—

A103 Roof Console X2

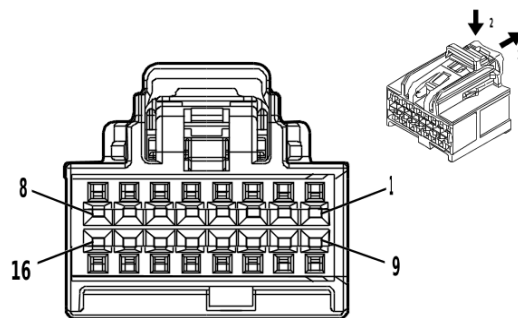

4873243

Connector Part Information

Harness Type: Dome Lamp Wiring Harness
 OEM Connector: 35016343
 Service Connector: 13519738
 Description: 16-Way F 0.64 OCS Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19354230	J-35616-64B (L-BU)	J-38125-215A

A103 Roof Console X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	YE / VT	2516	Telematics Switch Green LED Indicator Control	I	—
2	0.35	BN / WH	2517	Telematics Switch Red LED Indicator Control	I	—
3	0.35	GN / WH	2514	Telematics Switch Signal	I	—
4	0.35	GN / BK	2515	Telematics Switch Supply Voltage	I	—
5	0.35	BK / WH	851	Signal Ground	I	—
6	0.35	YE / VT	6191	Power Rear Window Switch Open Signal	I	—
7	0.35	WH	6192	Sliding Rear Window Switch Close Signal	I	—
8	0.5	VT	801	Retained Accessory Power Control	I	—
9 - 16	—	—	—	Not Occupied	—	—

B1 Air Conditioning Refrigerant Pressure Sensor (L5P)

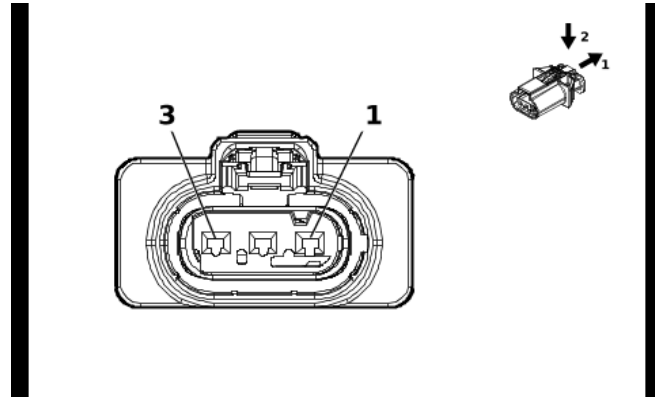

5877159

Connector Part Information

Harness Type: Engine Wiring Harness Chassis
 OEM Connector: 35242152
 Service Connector: Service by Harness - See Part Catalog
 Description: 3-Way F 1.2 MLK Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B1 Air Conditioning Refrigerant Pressure Sensor (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH / RD	480	Engine Control Vehicle Sensors 5 Volt Reference 1	I	—
2	0.5	GN	380	Air Conditioning Refrigerant Pressure Sensor Signal	I	—
3	0.5	BK / GY	626	Engine Control Vehicle Sensors Low Reference 1	I	—

B1 Air Conditioning Refrigerant Pressure Sensor (L8T)

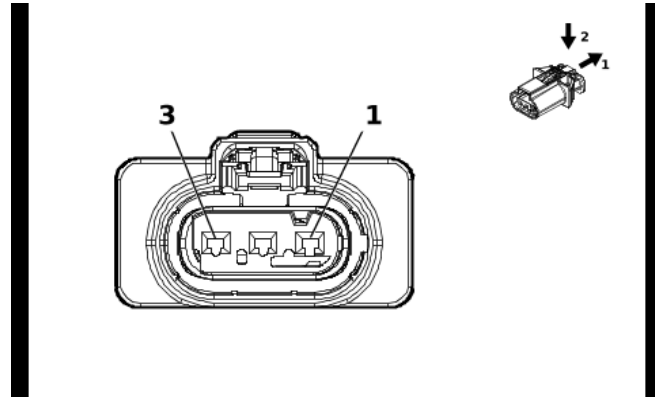

5877159

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 35242152
 Service Connector: 85596544
 Description: 3-Way F 1.2 MLK Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B1 Air Conditioning Refrigerant Pressure Sensor (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH / RD	480	Engine Control Vehicle Sensors 5 Volt Reference 1	I	—
2	0.5	GN	380	Air Conditioning Refrigerant Pressure Sensor Signal	I	—
3	0.5	BK / GY	626	Engine Control Vehicle Sensors Low Reference 1	I	—

B5LF Front Wheel Speed Sensor - Left

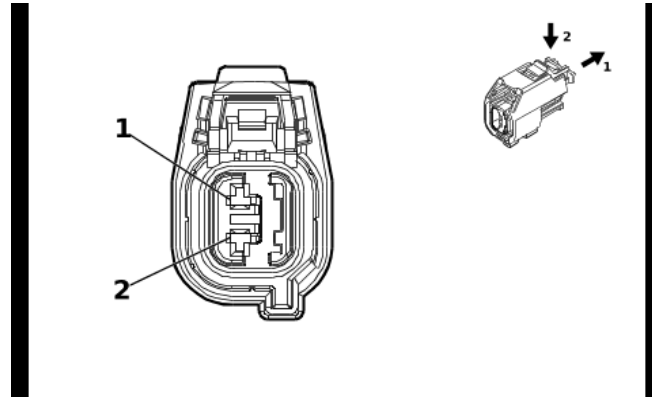

5666214

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 33189092
 Service Connector: 85526683
 Description: 2-Way F 1.5 OCS Series, Sealed(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required

B5LF Front Wheel Speed Sensor - Left

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GY / WH	7064	Left Front Wheel Speed Sensor Control	I	—
2	0.5	GY	830	Left Front Wheel Speed Sensor Signal	I	—

B5LR Rear Wheel Speed Sensor - Left

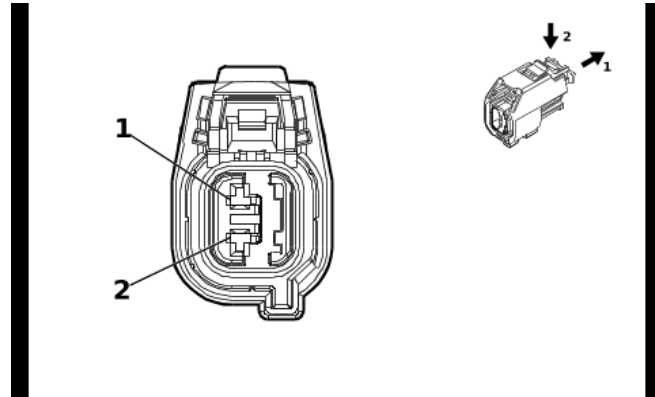

5666214

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 33189092
 Service Connector: 85526683
 Description: 2-Way F 1.5 OCS Series, Sealed(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required

B5LR Rear Wheel Speed Sensor - Left

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GY / BK	7127	Left Rear Wheel Speed Sensor Control	I	—
2	0.5	BU	884	Left Rear Wheel Speed Sensor Signal	I	—

B5RF Front Wheel Speed Sensor - Right (L5P)

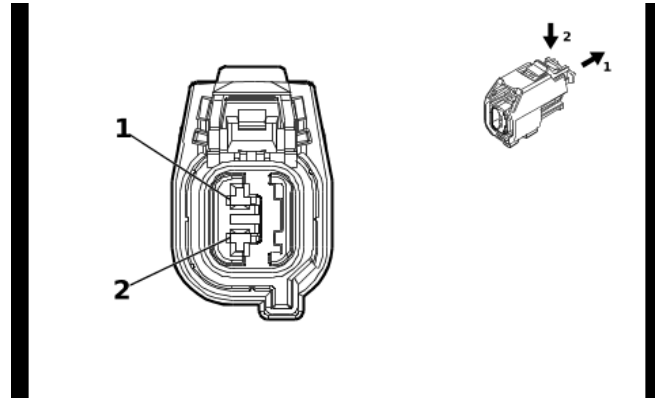

5666214

Connector Part Information

Harness Type: Engine Wiring Harness Chassis
 OEM Connector: 33189092
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.5 OCS Series, Sealed(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required

B5RF Front Wheel Speed Sensor - Right (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GY / BN	7065	Right Front Wheel Speed Sensor Control	I	—
2	0.5	YE	872	Right Front Wheel Speed Sensor Signal	I	—

B5RF Front Wheel Speed Sensor - Right (L8T)

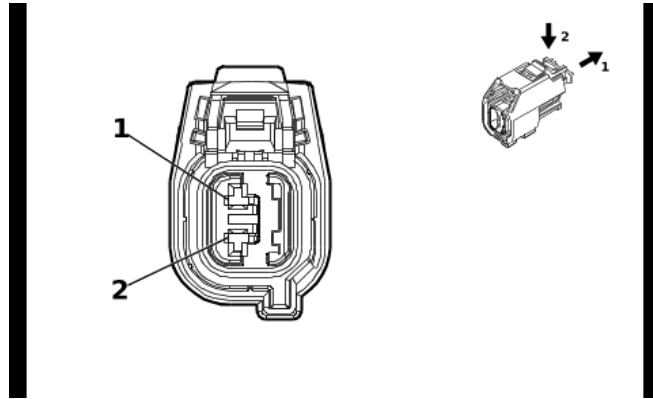

5666214

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 33189092
 Service Connector: 85526683
 Description: 2-Way F 1.5 OCS Series, Sealed(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required

B5RF Front Wheel Speed Sensor - Right (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GY / BN	7065	Right Front Wheel Speed Sensor Control	I	—
2	0.5	YE	872	Right Front Wheel Speed Sensor Signal	I	—

B5RR Rear Wheel Speed Sensor - Right

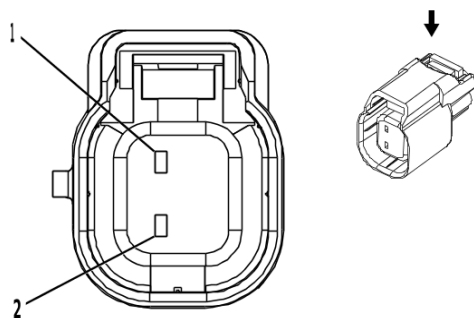

4115616

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 33122852
 Service Connector: 19366860
 Description: 2-Way F 1.5 Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required

B5RR Rear Wheel Speed Sensor - Right

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GY / YE	7128	Right Rear Wheel Speed Sensor Control	I	—
2	0.5	VT	882	Right Rear Wheel Speed Sensor Signal	I	—

B10D Sun Load and Ambient Light and Security Indicator Sensor

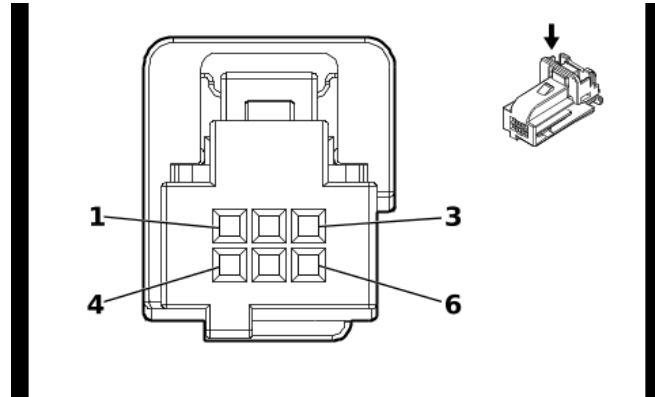

2282896

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 15338980
 Service Connector: 85587649
 Description: 6-Way F 0.64 Micro-Quadlock Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

B10D Sun Load and Ambient Light and Security Indicator Sensor

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	GY	590	Driver Solar Sensor Signal	I	—
2	—	—	—	Not Occupied	—	—
3	0.35	WH / BU	278	Ambient Light Sensor Signal	I	—
4	0.35	BU / WH	734	Inside Air Temperature Sensor Signal	I	—
5	0.35	GY	728	Security Indicator Control	I	—
6	0.35	BK / YE	407	Sensor Low Reference	I	—

B12P Automatic Transmission Fluid Pressure Sensor - Power Take-Off (L5P)

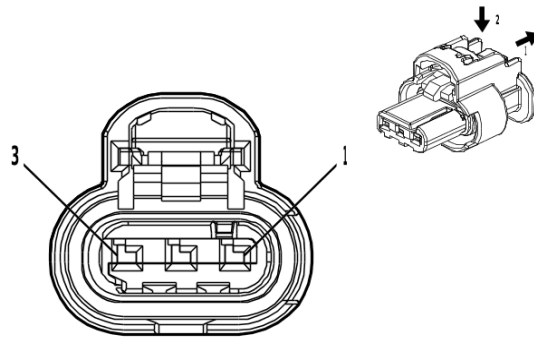

4581126

Connector Part Information

Harness Type: Engine Wiring Harness Chassis
 OEM Connector: 33358800
 Service Connector: Service by Harness - See Part Catalog
 Description: 3-Way F 1.2 MCON-CB Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B12P Automatic Transmission Fluid Pressure Sensor - Power Take-Off (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN / WH	8234	Power Take Off Pressure Sensor Signal	I	—
2	0.5	WH	8232	Power Take Off Pressure Sensor 5 Volt Reference	I	—
3	0.5	YE	8233	Power Take Off Pressure Sensor Low Reference	I	—

B13 Automatic Transmission Fluid Temperature Sensor (MGM / MGU / MKM)

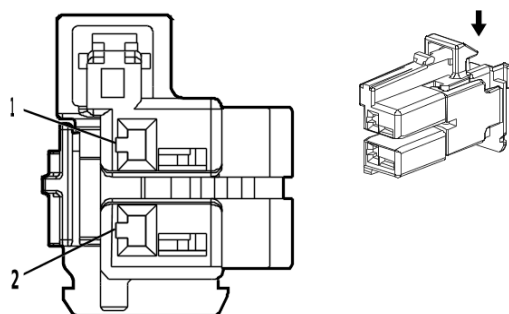

4672650

Connector Part Information

Harness Type: Automatic Transmission Wiring Harness - Control
 OEM Connector: 2289523-1
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.2 MCON Series(BN)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required

B13 Automatic Transmission Fluid Temperature Sensor (MGM / MGU / MKM)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BU / BN	586	Transmission Fluid Temperature Sensor Low Reference	I	—
2	0.5	BN / YE	585	Transmission Fluid Temperature Sensor Signal	I	—

B14A Automatic Transmission Output Speed Sensor (MGM / MGU / MKM)

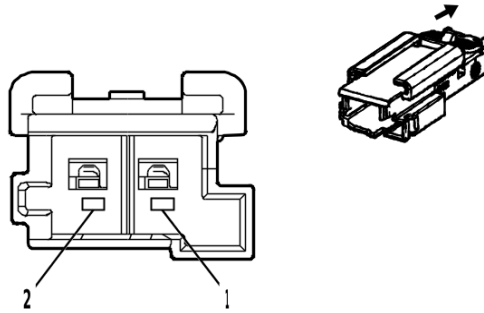

4672593

Connector Part Information

Harness Type: Automatic Transmission Wiring Harness - Case
 OEM Connector: 2340311-2
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way M SLV WIR CONN MALE


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-13 (BU)	No Tool Required

B14A Automatic Transmission Output Speed Sensor (MGM / MGU / MKM)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	YE / OG	6358	Output Speed Signal	I	—
2	0.5	GN	4170	Transmission Output Shaft Speed Sensor Circuit 9V Reference	I	—

B14C Automatic Transmission Input Speed Sensor (MGM / MGU / MKM)

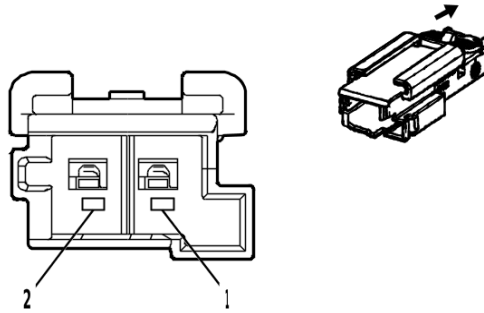

4672611

Connector Part Information

Harness Type: Automatic Transmission Wiring Harness - Case
 OEM Connector: 2340311-3
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way M SLV WIR CONN MALE


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-13 (BU)	No Tool Required

B14C Automatic Transmission Input Speed Sensor (MGM / MGU / MKM)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH / VT	6353	Input Speed Signal	I	—
2	0.5	BU	4171	Transmission Input Shaft Speed Sensor Circuit 9V Reference	I	—

B14DA Transmission Intermediate Speed Sensor 1 (MGM / MGU / MKM)

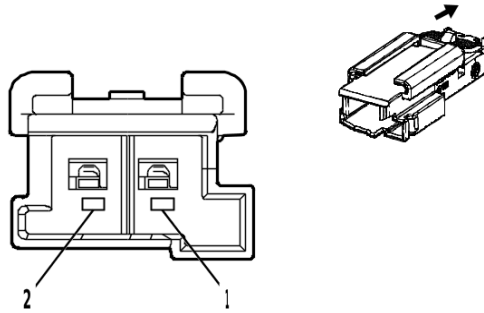

4663490

Connector Part Information

Harness Type: Automatic Transmission Wiring Harness - Case
 OEM Connector: 2340311-1
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way M SLV WIR CONN MALE


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-13 (BU)	No Tool Required

B14DA Transmission Intermediate Speed Sensor 1 (MGM / MGU / MKM)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	VT / GN	4510	Transmission Intermediate Speed Signal	I	—
2	0.5	GN	4170	Transmission Output Shaft Speed Sensor Circuit 9V Reference	I	—

B14DB Automatic Transmission Intermediate Speed Sensor 2 (MGM / MGU / MKM)

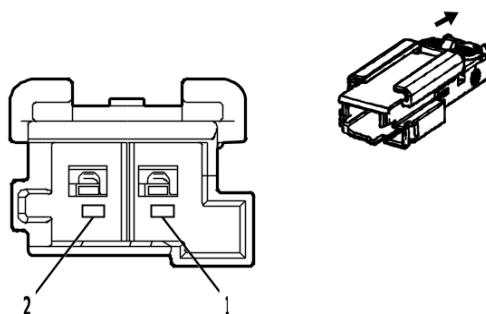

4672593

Connector Part Information

Harness Type: Automatic Transmission Wiring Harness - Case
 OEM Connector: 2340311-2
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way M SLV WIR CONN MALE


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-13 (BU)	No Tool Required

B14DB Automatic Transmission Intermediate Speed Sensor 2 (MGM / MGU / MKM)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH / BU	6254	Transmission Input Speed Sensor Signal	I	—
2	0.5	BU	4171	Transmission Input Shaft Speed Sensor Circuit 9V Reference	I	—

B20A Brake Fluid Level Indicator Switch

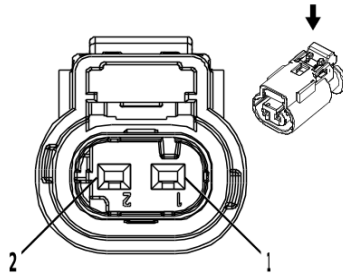

2717066

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 13735326
 Service Connector: 13587326
 Description: 2-Way F 1.2 Multilock Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required
II	Not required	J-35616-16 (L-GN)	No Tool Required

B20A Brake Fluid Level Indicator Switch

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GN / GY	333	Brake Fluid Level Signal	II	—
2	1	BK	150	Ground	I	—

B22 Brake Pedal Position Sensor

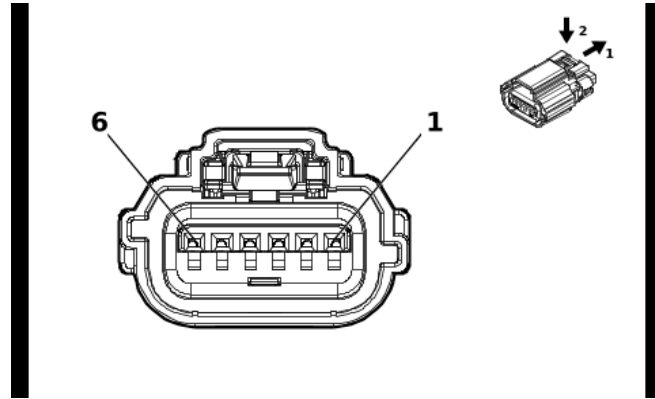

5921818

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 35547326
 Service Connector: 86825468
 Description: 6-Way F 0.64 OCS Series, Sealed(NA)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

B22 Brake Pedal Position Sensor

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	BK / BN	5360	Brake Apply Sensor Low Reference	I	—
2	0.35	WH	5359	Brake Apply Sensor Control	I	—
3	0.35	BU / YE	5361	Brake Apply Sensor Signal	I	—
4	0.35	WH / GN	5380	Brake Position Sensor Signal	I	—
5	0.35	BK / GY	626	Engine Control Vehicle Sensors Low Reference 1	I	—
6	0.35	WH / RD	480	Engine Control Vehicle Sensors 5 Volt Reference 1	I	—

B23 Camshaft Position Sensor (L5P)

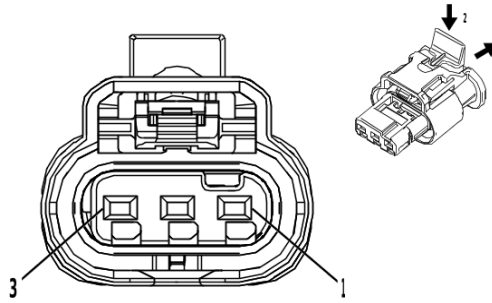

4249125

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13594670
 Service Connector: 86792094
 Description: 3-Way F 1.2 MCP Series, Sealed(BN)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B23 Camshaft Position Sensor (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GY / YE	5297	Exhaust Camshaft Position Sensor 1 Voltage Reference	I	—
2	0.5	BK / GY	5296	Exhaust Camshaft Position Sensor Low Reference 1	I	—
3	0.5	VT / BK	5273	Exhaust Camshaft Position Sensor 1	I	—

B24LF Mobile Telephone Microphone - Left Front

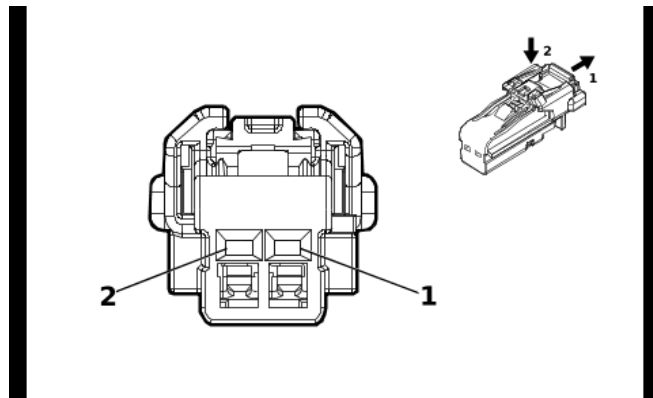

4115691

Connector Part Information

Harness Type: Dome Lamp Wiring Harness
 OEM Connector: 35311666
 Service Connector: 87816612
 Description: 2-Way F 1.2 MCON Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B24LF Mobile Telephone Microphone - Left Front

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	BK / BN	654	Cellular Telephone Microphone Low Reference	I	—
2	0.35	BU	655	Cellular Telephone Microphone Signal	I	—

B24RF Mobile Telephone Microphone - Right Front

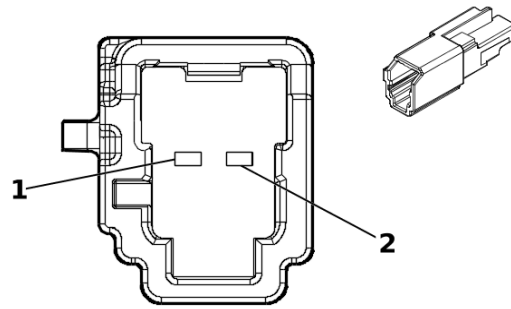

5360948

Connector Part Information

Harness Type: Dome Lamp Wiring Harness
 OEM Connector: 35264701
 Service Connector: 84847259
 Description: 2-Way M 1.2 MCON Series(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-13 (BU)	No Tool Required

B24RF Mobile Telephone Microphone - Right Front

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	BU / BK	7044	Microphone [-] Signal	I	—
2	0.35	VT / YE	7043	Microphone [+] Signal	I	—

B26 Crankshaft Position Sensor (L5P)

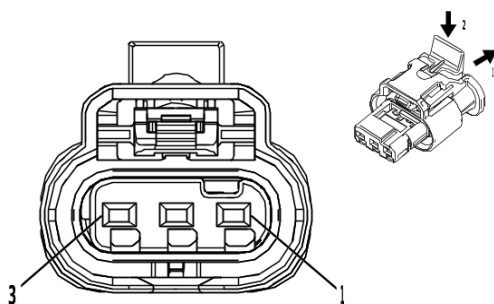

4249125

Connector Part Information

Harness Type: Engine Wiring Harness Extension

OEM Connector: 13594670

Service Connector: 86792094

Description: 3-Way F 1.2 MCP Series, Sealed(BN)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B26 Crankshaft Position Sensor (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	VT / BU	6270	Crankshaft Position Sensor Voltage	I	—
2	0.5	BK / VT	6272	Crankshaft Position Sensor Low Reference	I	—
3	0.5	GN	6271	Crankshaft Position Sensor Signal	I	—

B26 Crankshaft Position Sensor (L8T)

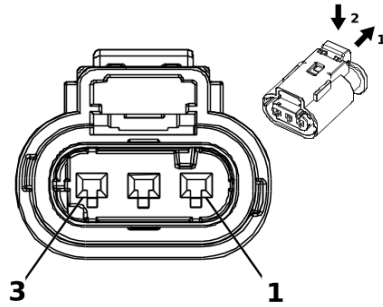

2717069

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13763990
 Service Connector: 84601390
 Description: 3-Way F 1.2 Multilock Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B26 Crankshaft Position Sensor (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GN	6271	Crankshaft Position Sensor Signal	I	—
2	0.5	BK / VT	6272	Crankshaft Position Sensor Low Reference	I	—
3	0.5	VT / BU	6270	Crankshaft Position Sensor Voltage	I	—

B33 Low Coolant Level Switch (L5P)

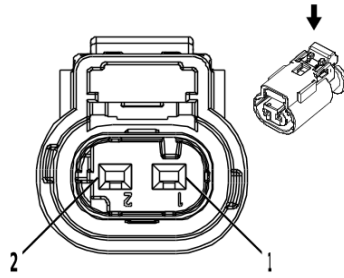

2717066

Connector Part Information

Harness Type: Engine Wiring Harness Chassis
 OEM Connector: 13735326
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.2 Multilock Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required
II	Not required	J-35616-16 (L-GN)	No Tool Required

B33 Low Coolant Level Switch (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BU / YE	68	Low Coolant Level Indicator Control	II	—
2	1	BK / WH	251	Signal Ground	I	—

B34 Engine Coolant Temperature Sensor (L5P)

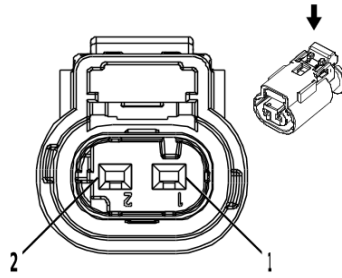

2717066

Connector Part Information

Harness Type: Engine Wiring Harness Extension
 OEM Connector: 13503566
 Service Connector: 13587326
 Description: 2-Way F 1.2 Multilock Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B34 Engine Coolant Temperature Sensor (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BU	410	Engine Coolant Temperature Sensor Signal	I	—
2	0.5	BK / YE	548	Engine Control Sensors Low Reference 1	I	—

B35 Engine Oil Level Indicator Switch (L5P)

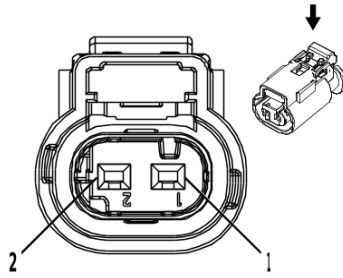

2717066

Connector Part Information

Harness Type: Engine Wiring Harness Extension
 OEM Connector: 13503566
 Service Connector: 13587326
 Description: 2-Way F 1.2 Multilock Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B35 Engine Oil Level Indicator Switch (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BK / WH	6151	Engine Control Module Ground	I	—
2	0.5	BN / GN	1174	Oil Level Switch Signal	I	—

B35 Engine Oil Level Indicator Switch (L8T)

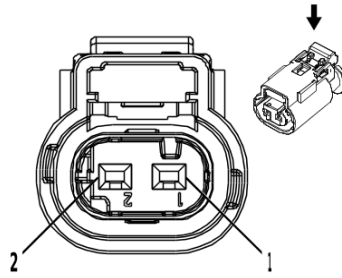

2717066

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13735326
 Service Connector: 13587326
 Description: 2-Way F 1.2 Multilock Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B35 Engine Oil Level Indicator Switch (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN / GN	1174	Oil Level Switch Signal	I	—
2	1	BK / WH	251	Signal Ground	I	—

B36 Engine Oil Temperature Sensor (L8T)

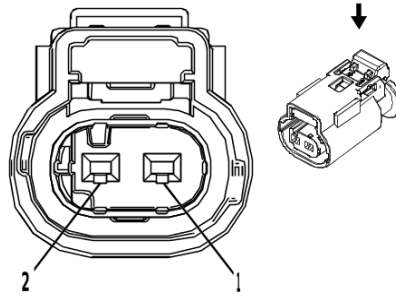

2830969

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13840071
 Service Connector: 13587321
 Description: 2-Way F 1.2 Multilock Series, Sealed(D-GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B36 Engine Oil Temperature Sensor (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN / BU	357	Oil Temperature Sensor Signal	I	—
2	0.5	BK / YE	548	Engine Control Sensors Low Reference 1	I	—

B37B Engine Oil Pressure Sensor (L5P)

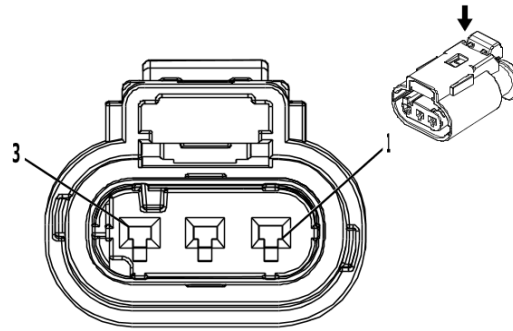

3240107

Connector Part Information

Harness Type: Engine Wiring Harness Extension
 OEM Connector: 13503573
 Service Connector: 19301717
 Description: 3-Way F 1.2 Multilock Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B37B Engine Oil Pressure Sensor (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	YE / BN	331	Oil Pressure Sensor Signal	I	—
2	0.5	BK / YE	548	Engine Control Sensors Low Reference 1	I	—
3	0.5	BU / RD	460	Engine Control Sensors 5 Volt Reference 1	I	—

B39 Air Conditioning Evaporator Air Temperature Sensor

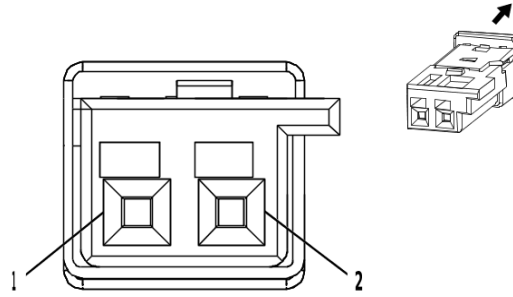

2780265

Connector Part Information

Harness Type: Heater Wiring Harness
 OEM Connector: 13535799
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 0.64 Micro-Quadlock Series(NA)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

B39 Air Conditioning Evaporator Air Temperature Sensor

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	BN	6137	Air Conditioning Evaporator Temperature Sensor Signal	I	—
2	0.35	BK / YE	407	Sensor Low Reference	I	—

B47 Fuel Pressure Sensor (L5P)

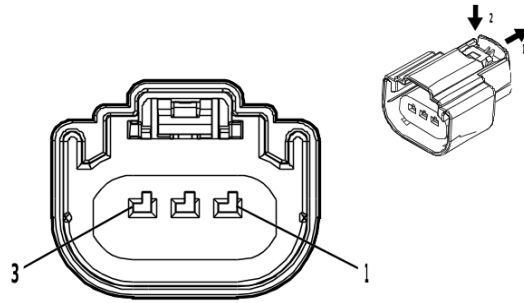

4569745

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 33343869
 Service Connector: 19179750
 Description: 3-Way F 1.5 MX Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required

B47 Fuel Pressure Sensor (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BU / WH	7446	Fuel Pressure Sensor Signal	I	L5P+ N2N
	0.5	BU / WH	7446	Fuel Pressure Sensor Signal	I	L8T+ (N2L/ N2N)
2	0.5	BK / YE	7447	Fuel Pressure Sensor Low Reference	I	—
3	0.5	BN / RD	7445	Fuel Line Pressure Sensor 5V Reference	I	—

B47 Fuel Pressure Sensor (L8T)

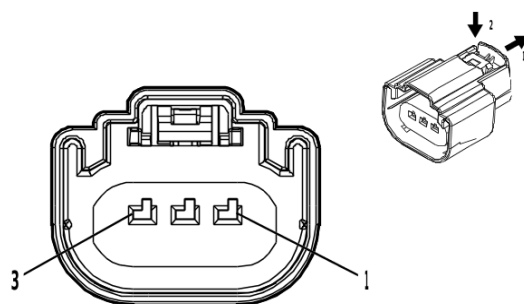

4569745

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 33343869
 Service Connector: 19179750
 Description: 3-Way F 1.5 MX Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required

B47 Fuel Pressure Sensor (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BU / WH	7446	Fuel Pressure Sensor Signal	I	—
2	0.5	BK / YE	7447	Fuel Pressure Sensor Low Reference	I	—
3	0.5	BN / RD	7445	Fuel Line Pressure Sensor 5V Reference	I	—

B47 Fuel Pressure Sensor (L8T - N2N)

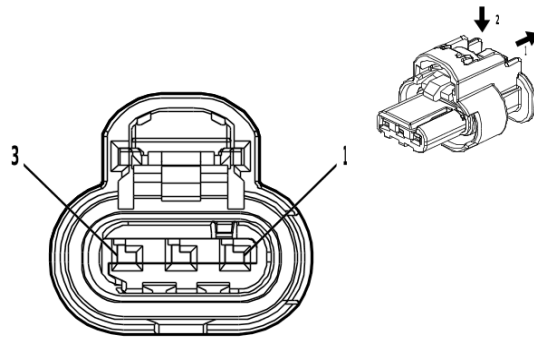

4581126

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 33358800
 Service Connector: 86792094
 Description: 3-Way F 1.2 MCON-CB Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B47 Fuel Pressure Sensor (L8T - N2N)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN / RD	7445	Fuel Line Pressure Sensor 5V Reference	I	—
2	0.5	BK / YE	7447	Fuel Pressure Sensor Low Reference	I	—
3	0.5	BU / WH	7446	Fuel Pressure Sensor Signal	I	—

B47B Fuel Rail Pressure Sensor (L5P)

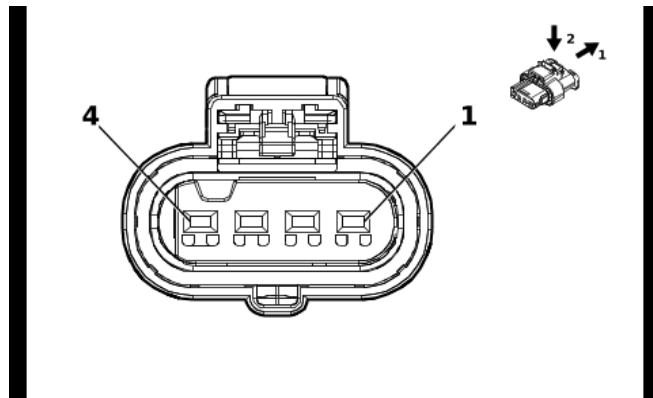

5985721

Connector Part Information

Harness Type: Engine Wiring Harness Extension
 OEM Connector: 13534801
 Service Connector: 87840363
 Description: 4-Way F 1.2 HPF Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required

B47B Fuel Rail Pressure Sensor (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN / RD	2917	Fuel Rail Pressure Sensor 5V Reference	I	—
2	0.5	BN / YE	2161	Fuel Rail Pressure Sensor 2 Signal	I	—
3	0.5	BK / GN	2919	Fuel Rail Pressure Sensor Low Reference	I	—
4	0.5	BU / WH	2918	Fuel Rail Pressure Sensor Signal	I	—

B52C Heated Oxygen Sensor - Bank 1 Sensor 1 (L8T)

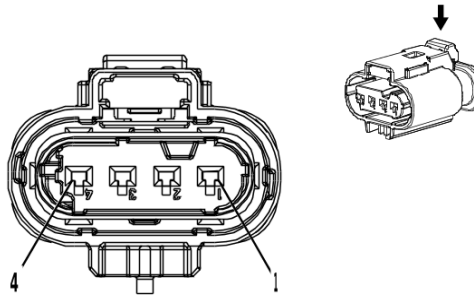

4381050

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 33253021
 Service Connector: 19354075
 Description: 4-Way F 1.2 Multilock Series, Sealed(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B52C Heated Oxygen Sensor - Bank 1 Sensor 1 (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GY / WH	3113	HO2S Heater Low Control Bank 1 Sensor 1	I	—
2	0.5	VT / BU	5293	Powertrain Main Relay Fused Supply Voltage 4	I	—
3	0.5	WH / BK	3111	HO2S Low Signal Bank 1 Sensor 1	I	—
4	0.5	VT / GY	3110	HO2S High Signal Bank 1 Sensor 1	I	—

B52D Heated Oxygen Sensor - Bank 1 Sensor 2 (L8T)

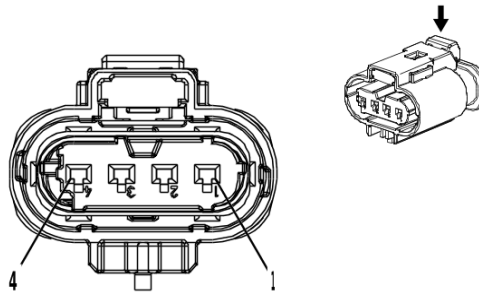

4036370

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 15532690
 Service Connector: 19330920
 Description: 4-Way F 1.2 Multilock Series, Sealed(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B52D Heated Oxygen Sensor - Bank 1 Sensor 2 (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GY / WH	3122	HO2S Heater Low Control Bank 1 Sensor 2	I	—
2	0.5	VT / BU	5294	Powertrain Main Relay Fused Supply Voltage 5	I	—
3	0.5	WH / YE	3121	HO2S Low Signal Bank 1 Sensor 2	I	—
4	0.5	BN	3120	HO2S High Signal Bank 1 Sensor 2	I	—

B52E Heated Oxygen Sensor - Bank 2 Sensor 1 (L8T)

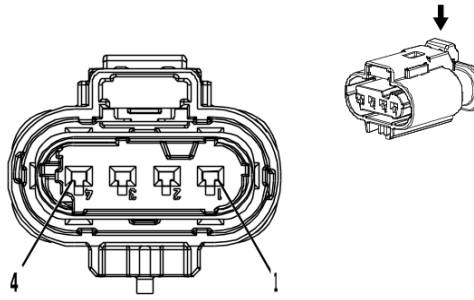

4381050

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 33253021
 Service Connector: 19354075
 Description: 4-Way F 1.2 Multilock Series, Sealed(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B52E Heated Oxygen Sensor - Bank 2 Sensor 1 (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GN / YE	3212	HO2S Heater Low Control Bank 2 Sensor 1	I	—
2	0.5	VT / BU	5293	Powertrain Main Relay Fused Supply Voltage 4	I	—
3	0.5	YE / WH	3211	HO2S Low Signal Bank 2 Sensor 1	I	—
4	0.5	VT / WH	3210	HO2S High Signal Bank 2 Sensor 1	I	—

B52F Heated Oxygen Sensor - Bank 2 Sensor 2 (L8T)

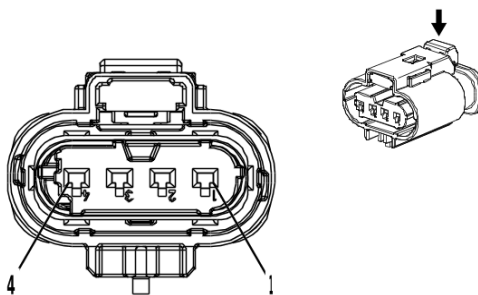

4036370

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 15532690
 Service Connector: 19330920
 Description: 4-Way F 1.2 Multilock Series, Sealed(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B52F Heated Oxygen Sensor - Bank 2 Sensor 2 (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH / BN	3223	HO2S Heater Low Control Bank 2 Sensor 2	I	—
2	0.5	VT / BU	5294	Powertrain Main Relay Fused Supply Voltage 5	I	—
3	0.5	YE / BU	3221	HO2S Low Signal Bank 2 Sensor 2	I	—
4	0.5	VT / GN	3220	HO2S High Signal Bank 2 Sensor 2	I	—

B55 Engine Compartment Cover Switch

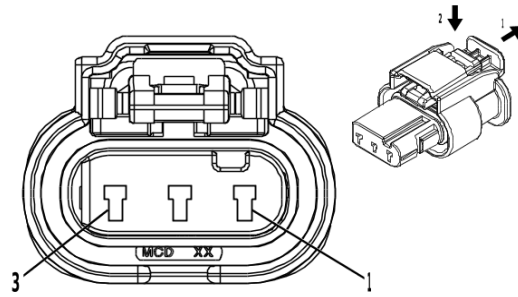

4421568

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 33320864
 Service Connector: 19368220
 Description: 3-Way F 1.2 MCON-LL Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B55 Engine Compartment Cover Switch

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	YE	4063	Hood Status A Signal	I	—
2	0.35	BN / GN	4064	Hood Status B Signal	I	—
3	0.5	BK	150	Ground	I	—

B58L Airbag Front End Discriminating Sensor - Left

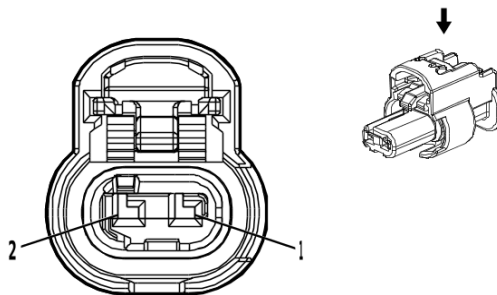

4690744

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 33375932
 Service Connector: 19366871
 Description: 2-Way F 1.2 MCON Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B58L Airbag Front End Discriminating Sensor - Left

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	OG / YE	354	Left Front Impact Discriminating Sensor Signal	I	—
2	0.5	BK / OG	5045	Left Front Impact Discriminating Sensor Low Reference	I	—

B58R Airbag Front End Discriminating Sensor - Right

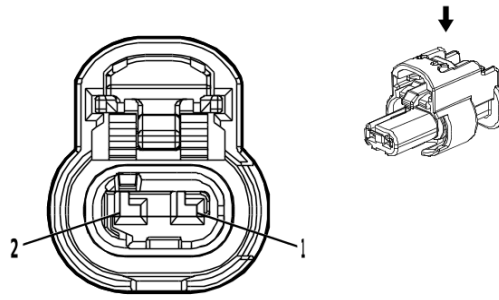

4690744

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 33375932
 Service Connector: 19366871
 Description: 2-Way F 1.2 MCON Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B58R Airbag Front End Discriminating Sensor - Right

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	OG / GN	1409	Right Front Impact Discriminating Sensor Signal	I	—
2	0.5	BK / OG	5600	Right Front Impact Discriminating Sensor Low Reference	I	—

B61P Seat Belt Tension Sensor - Passenger

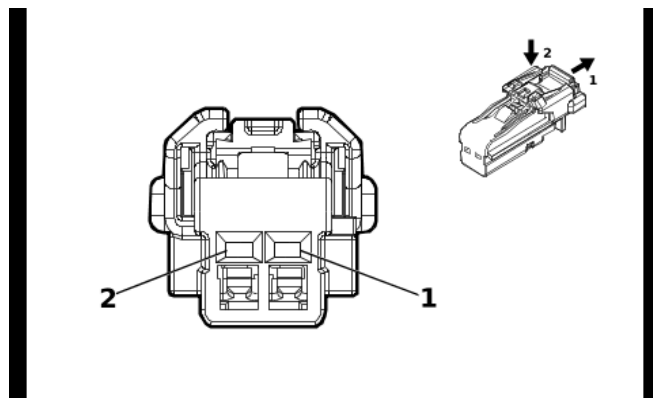

4115691

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 35311666
 Service Connector: 87816612
 Description: 2-Way F 1.2 MCON Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required

B61P Seat Belt Tension Sensor - Passenger

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	GY / OG	3946	Passenger Automatic Locking Retractor Switch Low Reference	I	—
2	0.35	OG / BN	3947	Passenger Automatic Locking Retractor Switch Signal	I	—

B63LF Airbag Side Impact Sensor - Left Front Door

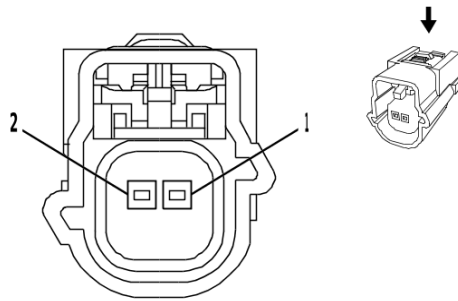

2179777

Connector Part Information

Harness Type: Front Side Door Door Wiring Harness - Left
 OEM Connector: 13610095
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 0.64 Series, Sealed(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

B63LF Airbag Side Impact Sensor - Left Front Door

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	OG / GN	2132	Left Front Side Impact Sensor Signal	I	—
2	0.5	BK / OG	6628	Left Front Side Impact Sensor Low Reference	I	—

B63LR Airbag Side Impact Rear Sensor - Left Door

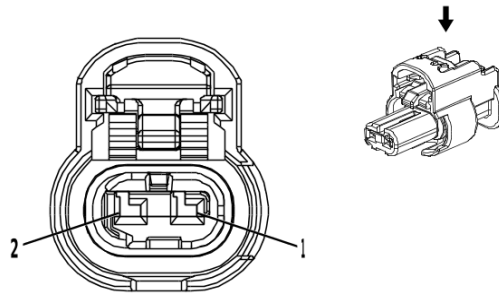

4335931

Connector Part Information

Harness Type: Rear Side Door Door Wiring Harness - Left
 OEM Connector: 33371691
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.2 MCON Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B63LR Airbag Side Impact Rear Sensor - Left Door

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	OG / BU	6622	Left Rear Side Impact Sensor Signal	I	—
2	0.5	BK / OG	6623	Left Rear Side Impact Sensor Low Reference	I	—

B63RF Airbag Side Impact Sensor - Right Front Door

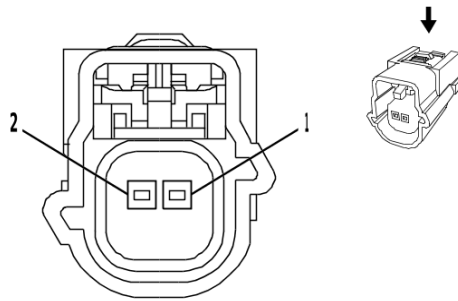

2179777

Connector Part Information

Harness Type: Front Side Door Door Wiring Harness - Right
 OEM Connector: 13610095
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 0.64 Series, Sealed(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

B63RF Airbag Side Impact Sensor - Right Front Door

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN / OG	2134	Right Front Side Impact Sensor Signal	I	—
2	0.5	BK / OG	6629	Right Front Side Impact Sensor Low Reference	I	—

B63RR Airbag Side Impact Rear Sensor - Right Door

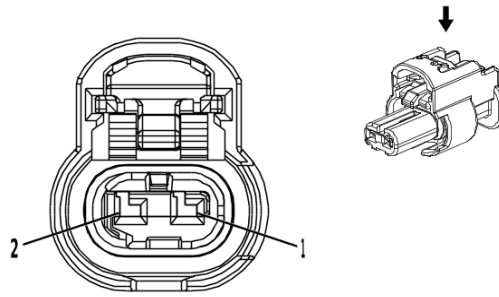

4335931

Connector Part Information

Harness Type: Rear Side Door Door Wiring Harness - Right
 OEM Connector: 33371691
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.2 MCON Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B63RR Airbag Side Impact Rear Sensor - Right Door

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	OG / WH	6626	Right Rear Side Impact Sensor Signal	I	—
2	0.5	BK / OG	6627	Right Rear Side Impact Sensor Low Reference	I	—

B65 Manifold Absolute Pressure and Intake Air Temperature Sensor (L5P)

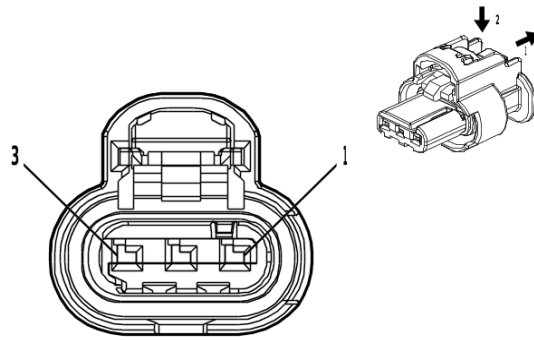

4581126

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13514590
 Service Connector: 86792094
 Description: 3-Way F 1.2 MCON-CB Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B65 Manifold Absolute Pressure and Intake Air Temperature Sensor (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BU / RD	460	Engine Control Sensors 5 Volt Reference 1	I	—
2	0.5	BK / YE	548	Engine Control Sensors Low Reference 1	I	—
3	0.5	GN / WH	432	Manifold Absolute Pressure Sensor Signal	I	—

B66 Intake Air Temperature Sensor (L5P)

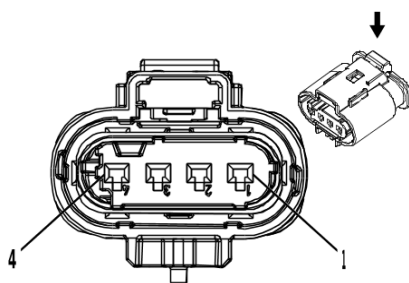

2717079

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13503575
 Service Connector: 13587299
 Description: 4-Way F 1.2 Multilock Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B66 Intake Air Temperature Sensor (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH / BU	7329	Pre-Throttle Air Temperature Signal	I	—
2	0.5	GY / RD	10667	Engine Control Sensors 5 Volt Reference	I	—
3	0.5	BK / GN	580	Engine Control Sensors Low Reference 2	I	—
4	—	—	—	Not Occupied	—	—

B68A Knock Sensor 1 (L8T)

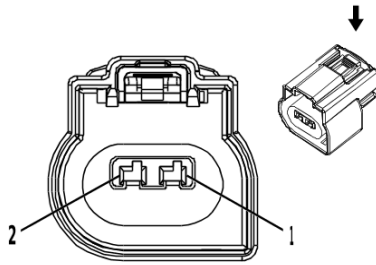

2717073

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13814755
 Service Connector: 19301207
 Description: 2-Way F 1.5 MX Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required

B68A Knock Sensor 1 (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	VT / GY	496	Knock Sensor 1 Signal	I	—
2	0.5	BK / YE	1716	Knock Sensor Low Reference 1	I	—

B68B Knock Sensor 2 (L8T)

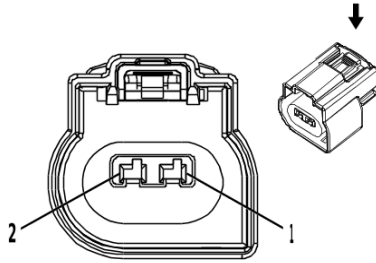

2717073

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13814755
 Service Connector: 19301207
 Description: 2-Way F 1.5 MX Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required

B68B Knock Sensor 2 (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH / GY	1876	Knock Sensor 2 Signal	I	—
2	0.5	BK / GY	2303	Knock Sensor Low Reference 2	I	—

B74 Manifold Absolute Pressure Sensor (L8T)

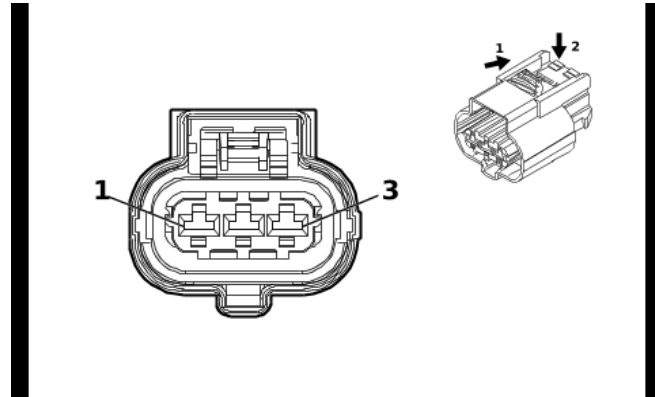

4900977

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 35133579
 Service Connector: 84815530
 Description: 3-Way F 2.8 CTS Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required

B74 Manifold Absolute Pressure Sensor (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GY / RD	2704	Manifold Absolute Pressure Sensor 5V Reference	I	—
2	0.5	BK / GN	469	Manifold Absolute Pressure Sensor Low Reference	I	—
3	0.5	GN / WH	432	Manifold Absolute Pressure Sensor Signal	I	—

B75 Mass Airflow Sensor (L5P)

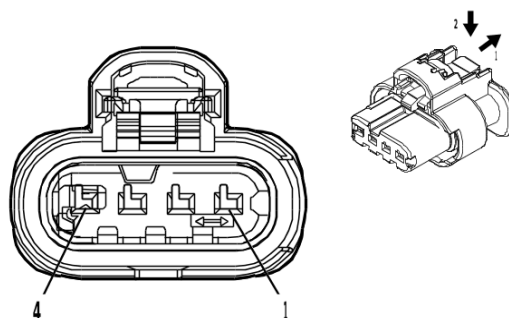

4934614

Connector Part Information

Harness Type: Engine Wiring Harness Chassis
 OEM Connector: 33367416
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way F 1.2 MCON-CB Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B75 Mass Airflow Sensor (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	VT / BU	5294	Powertrain Main Relay Fused Supply Voltage 5	I	—
2	0.5	BU	492	Mass Air Flow Sensor Signal	I	—
3	0.5	GN / WH	4622	Engine Control Module LIN Bus 2	I	—
4	0.5	BK / WH	6151	Engine Control Module Ground	I	—

B75 Mass Airflow Sensor (L8T)

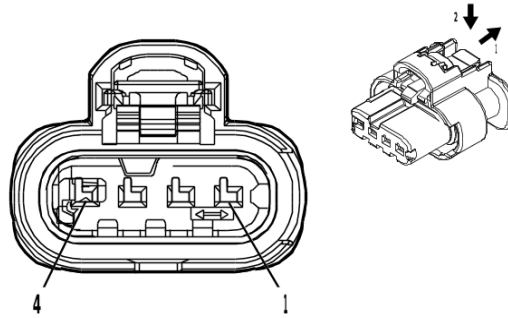

4934614

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 33367416
 Service Connector: 85519071
 Description: 4-Way F 1.2 MCON-CB Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B75 Mass Airflow Sensor (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	VT / BU	5294	Powertrain Main Relay Fused Supply Voltage 5	I	—
2	0.5	BU	492	Mass Air Flow Sensor Signal	I	—
3	0.5	GN / WH	4622	Engine Control Module LIN Bus 2	I	—
4	1	BK / WH	251	Signal Ground	I	—

B87 Rearview Driver Information Camera (UV2)

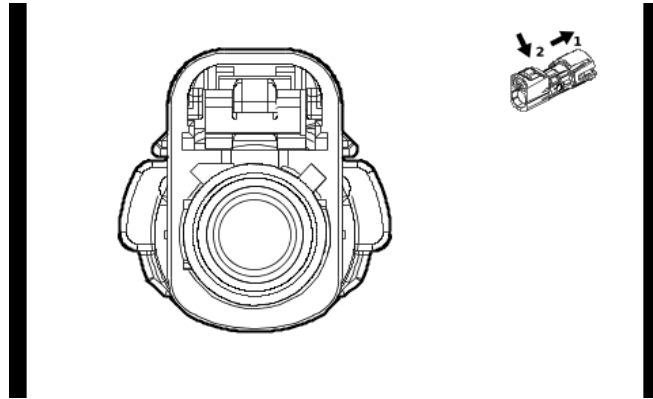

5758030

Connector Part Information

Harness Type: Endgate Wiring Harness COAX
 OEM Connector: 35187032
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way F Coax Type(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

B87 Rearview Driver Information Camera (UV2)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	Coax Cable	—	Rear Vision Camera Coaxial Video Signal	I	—

B87CA Auxiliary Rearview Camera - Cargo Area (UVN)

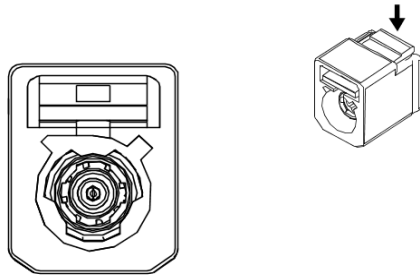

3293633

Connector Part Information

Harness Type: Inside Rearview Mirror Wiring Harness COAX
 OEM Connector: 13519801
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way F Coax Type(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

B87CA Auxiliary Rearview Camera - Cargo Area (UVN)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	Coax Cable	—	Cargo Bed Rear Vision Camera Coaxial Video Signal	I	—

B87CA Auxiliary Rearview Camera - Cargo Area (UVO)

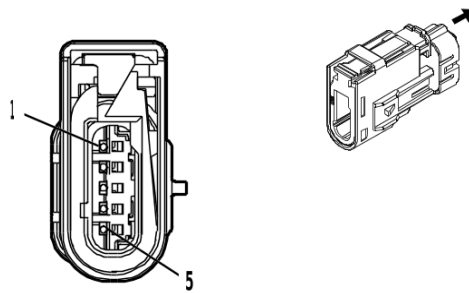

4808321

Connector Part Information

Harness Type: Inside Rearview Mirror Wiring Harness
 OEM Connector: 35028910
 Service Connector: Service by Harness - See Part Catalog
 Description: 5-Way M 1.2 Series, Sealed(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-13 (BU)	No Tool Required

B87CA Auxiliary Rearview Camera - Cargo Area (UVO)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	GY / YE	6972	Rearview Camera Signal [+]	I	—
2	0.35	WH / BU	6973	Rearview Camera Signal [-]	I	—
3	0.35	BU	6974	Rearview Camera Low Reference	I	—
4	0.35	BK / WH	1851	Signal Ground	I	—
5	0.35	VT / GN	1739	Run/Crank Ignition 1 Voltage	I	—

B99 Steering Angle Sensor Module

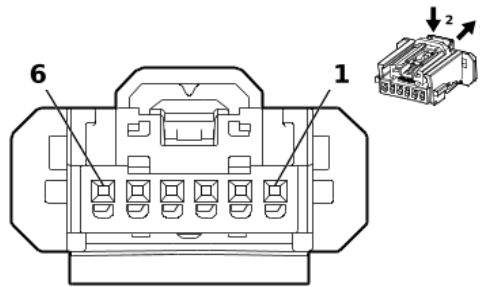

6171406

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 13522696
 Service Connector: Service by Harness - See Part Catalog
 Description: 6-Way F 2.0 Gen 50 Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	EL-35616-58 (BK)	No Tool Required

B99 Steering Angle Sensor Module

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	BU / WH	10279	Private Steering Angle CAN Bus [-] Serial Data	I	—
3	0.35	YE	10280	Private Steering Angle CAN Bus [+] Serial Data	I	—
5	0.35	GN / BN	2087	Multi-axis Acceleration Sensor Supply Voltage	I	—
6	0.35	BK / WH	851	Signal Ground	I	—

B107 Accelerator Pedal Position Sensor

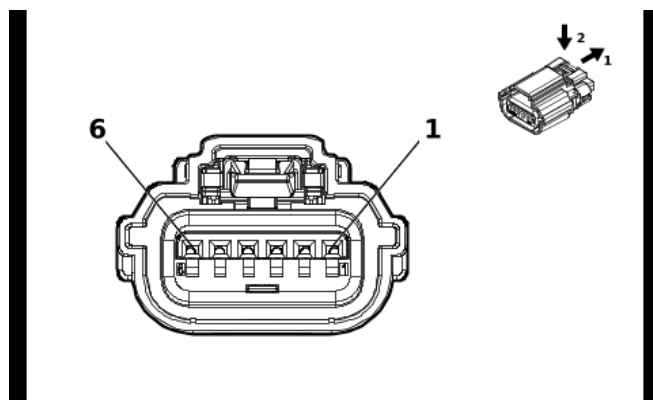

5921819

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 35390637
 Service Connector: 86825466
 Description: 6-Way F 0.64 OCS Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

B107 Accelerator Pedal Position Sensor

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	WH / RD	1164	Accelerator Pedal Position 5V Reference 1	I	—
2	0.35	YE / WH	1161	Accelerator Pedal Position Signal 1	I	—
3	0.35	BK / BU	1271	Accelerator Pedal Position Low Reference 1	I	—
4	0.35	BK / VT	1272	Accelerator Pedal Position Low Reference 2	I	—
5	0.35	GN / WH	1162	Accelerator Pedal Position Signal 2	I	—
6	0.35	BN / RD	1274	Accelerator Pedal Position 5V Reference 2	I	—

B110 Battery Monitor Module X1

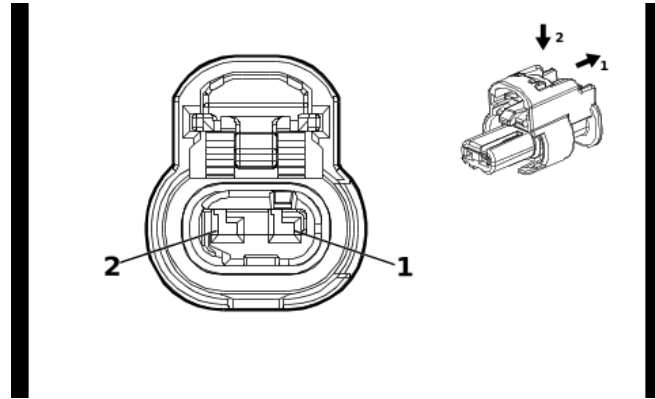

4649903

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 33327048
 Service Connector: 85519075
 Description: 2-Way F 1.2 MCON Series, Sealed(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B110 Battery Monitor Module X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	GN / YE	2855	Body Control Module LIN Bus 9	I	—
2	0.75	RD / YE	2340	Battery Positive Voltage	I	—

B110 Battery Monitor Module X2

Connector Part Information

Harness Type: Battery Negative Cable

OEM Connector: 13516387

Service Connector: Service by Cable Assembly — See Part Catalog

Description: 1-Way F Ring Terminal


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

B110 Battery Monitor Module X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	50	BK	550	Ground	I	—

B117A Windshield Outside Moisture/Ambient Light and Humidity Sensor (CE1)

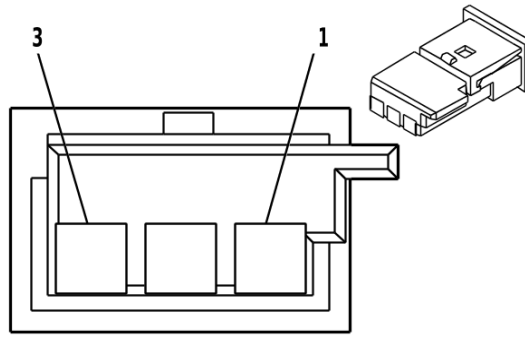

647970

Connector Part Information

Harness Type: Headlamp Automatic Control Ambient Light Sensor Wiring Harness
 OEM Connector: 13153088
 Service Connector: Service by Harness - See Part Catalog
 Description: 3-Way F 0.64 Micro-Quadlock Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

B117A Windshield Outside Moisture/Ambient Light and Humidity Sensor (CE1)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	RD / WH	1340	Battery Positive Voltage	I	—
2	0.35	GN / BN	4115	Body Control Module LIN Bus 5	I	—
3	0.35	BK	1050	Ground	I	—

B118 Windshield Washer Solvent Container Level Sensor

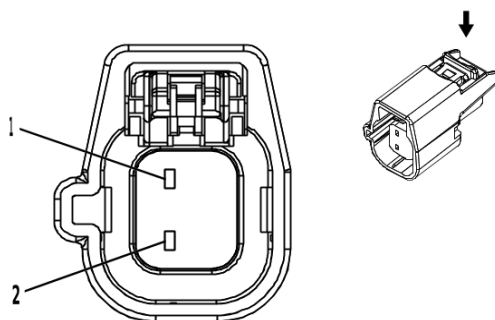

3958652

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 33113086
 Service Connector: 13593220
 Description: 2-Way F 1.5 Series, Sealed(L-GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required

B118 Windshield Washer Solvent Container Level Sensor

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	VT	185	Low Washer Fluid Indicator Control	I	—
2	0.5	BK	150	Ground	I	—

B130 Exhaust Gas Recirculation Temperature Sensor (L5P)

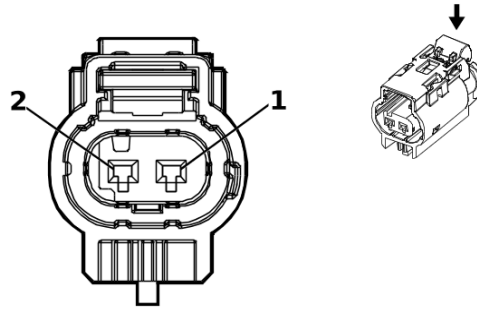

5207726

Connector Part Information


Harness Type: Engine Wiring Harness
 OEM Connector: 13583199
 Service Connector: 19332628
 Description: 2-Way F 1.2 Multilock Series, Sealed(GY)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B130 Exhaust Gas Recirculation Temperature Sensor (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	YE / GN	3236	Exhaust Gas Recirculation Temperature Sensor 2 Signal	I	—
2	0.5	BK / YE	6275	Exhaust Gas Recirculation Temperature Sensor 2 Low Reference	I	—

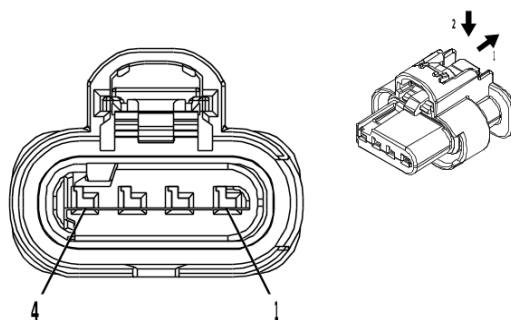B136 Exhaust Particulate Matter Sensor (L5P)

4210809

Connector Part Information

Harness Type: Chassis Wiring Harness

OEM Connector: 33390897

Service Connector: 85518225

Description: 4-Way F 1.2 MCON-CB Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B136 Exhaust Particulate Matter Sensor (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	1	BK / WH	1151	Signal Ground	I	—
2	0.5	BU / GY	4054	Private Serial Data Powertrain CAN Bus [-] Serial Data	I	—
3	0.5	WH	4055	Private Serial Data Powertrain CAN Bus [+] Serial Data	I	—
4	1	VT / GN	4320	Powertrain Sensor Bus Enable	I	—

B139 Transfer Case Two/Four Wheel Drive Actuator Position Sensor (L5P)

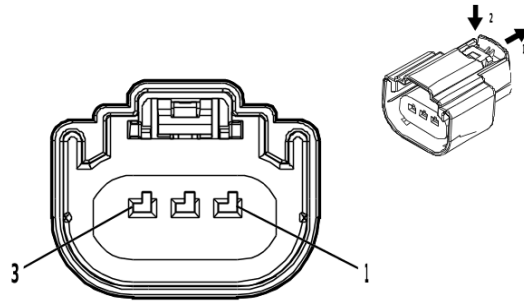

4569745

Connector Part Information

Harness Type: Engine Wiring Harness Chassis
 OEM Connector: 33343869
 Service Connector: Service by Harness - See Part Catalog
 Description: 3-Way F 1.5 MX Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required
II	Not required	J-35616-2A (GY)	No Tool Required

B139 Transfer Case Two/Four Wheel Drive Actuator Position Sensor (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH / RD	7477	Gear Position Sensor 5V Reference	II	—
2	0.5	WH / GN	7479	Rotary Position Sensor Signal	I	—
3	0.5	YE / BK	7478	Gear Position Sensor Low Reference	II	—

B139 Transfer Case Two/Four Wheel Drive Actuator Position Sensor (L8T)

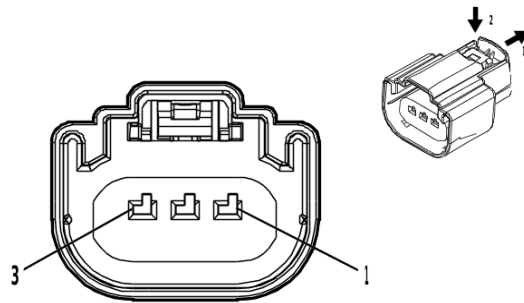

4569745

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 33343869
 Service Connector: 19179750
 Description: 3-Way F 1.5 MX Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required

B139 Transfer Case Two/Four Wheel Drive Actuator Position Sensor (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH / RD	7477	Gear Position Sensor 5V Reference	I	—
2	0.5	WH / GN	7479	Rotary Position Sensor Signal	I	—
3	0.5	YE / BK	7478	Gear Position Sensor Low Reference	I	—

B150 Fuel Tank Pressure Sensor (FHS)

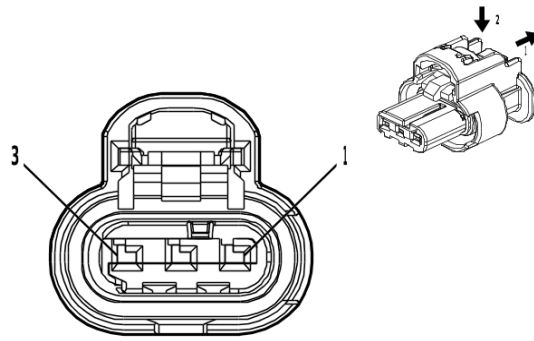

4778903

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 33358808
 Service Connector: 86792095
 Description: 3-Way F 1.2 MCON-CB Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B150 Fuel Tank Pressure Sensor (FHS)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BU / GN	890	Fuel Tank Pressure Sensor Signal	I	—
2	0.5	BK / BN	6284	Fuel Tank Pressure Sensor Low Reference	I	—
3	0.5	YE / RD	2709	Fuel Tank Pressure Sensor 5V Reference	I	—

B150 Fuel Tank Pressure Sensor (L8T&N2L)

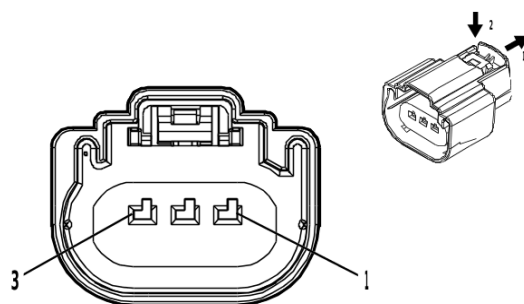

4589538

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 33343864
 Service Connector: 84569854
 Description: 3-Way F 1.5 MX Series, Sealed(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required

B150 Fuel Tank Pressure Sensor (L8T&N2L)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BU / GN	890	Fuel Tank Pressure Sensor Signal	I	—
2	0.5	BK / BN	6284	Fuel Tank Pressure Sensor Low Reference	I	—
3	0.5	YE / RD	2709	Fuel Tank Pressure Sensor 5V Reference	I	—

B150 Fuel Tank Pressure Sensor (L8T&N2N)

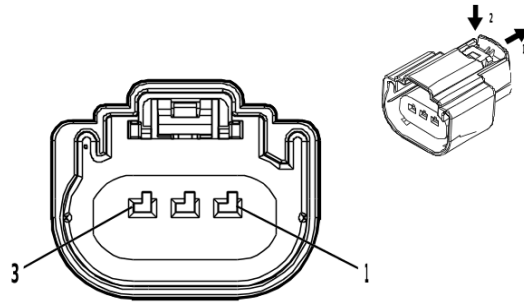

4589538

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 33343864
 Service Connector: 84569854
 Description: 3-Way F 1.5 MX Series, Sealed(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required

B150 Fuel Tank Pressure Sensor (L8T&N2N)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BU / GN	890	Fuel Tank Pressure Sensor Signal	I	—
2	0.5	BK / BN	6284	Fuel Tank Pressure Sensor Low Reference	I	—
3	0.5	YE / RD	2709	Fuel Tank Pressure Sensor 5V Reference	I	—

B150 Fuel Tank Pressure Sensor (N2M)

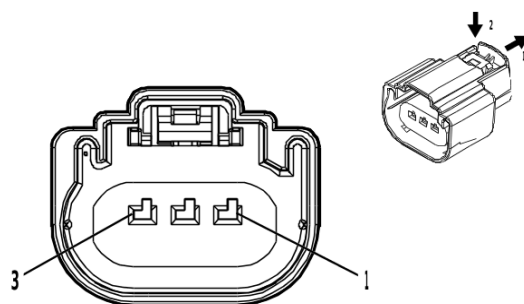

4589538

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 33343864
 Service Connector: 84569854
 Description: 3-Way F 1.5 MX Series, Sealed(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required

B150 Fuel Tank Pressure Sensor (N2M)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BU / GN	890	Fuel Tank Pressure Sensor Signal	I	—
2	0.5	BK / BN	6284	Fuel Tank Pressure Sensor Low Reference	I	—
3	0.5	YE / RD	2709	Fuel Tank Pressure Sensor 5V Reference	I	—

B153D Front Seat Belt Buckle - Driver

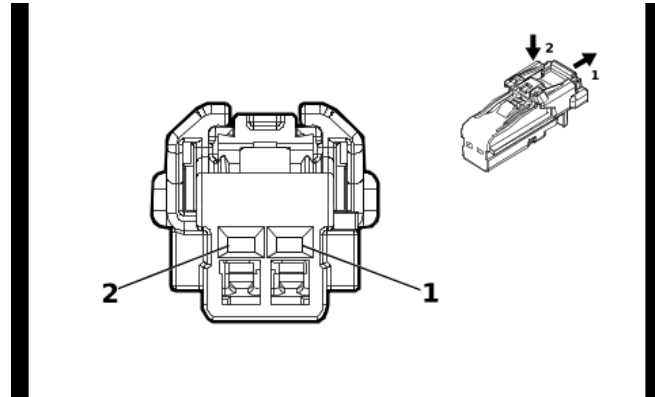

4115691

Connector Part Information

Harness Type: Front Seat Wiring Harness - Driver
 OEM Connector: 6098-8988
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.2 MCON Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B153D Front Seat Belt Buckle - Driver

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BK / OG	1363	Driver Seat Belt Switch Low Reference	I	—
2	0.5	OG / GY	2652	Driver Seat Belt Sensor Signal	I	—

B153LR Rear Seat Belt Buckle - Left

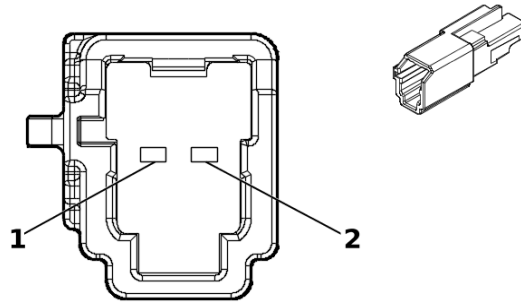

5355341

Connector Part Information

Harness Type: Body Wiring Harness

OEM Connector: 35258943

Service Connector: 84815531

Description: 2-Way M 1.2 MCON Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-17 (L-GN)	No Tool Required

B153LR Rear Seat Belt Buckle - Left

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BK / OG	1363	Driver Seat Belt Switch Low Reference	I	—
2	0.5	YE / OG	5161	Left Rear Seat Belt Switch Signal	I	—

B153P Front Seat Belt Buckle - Passenger

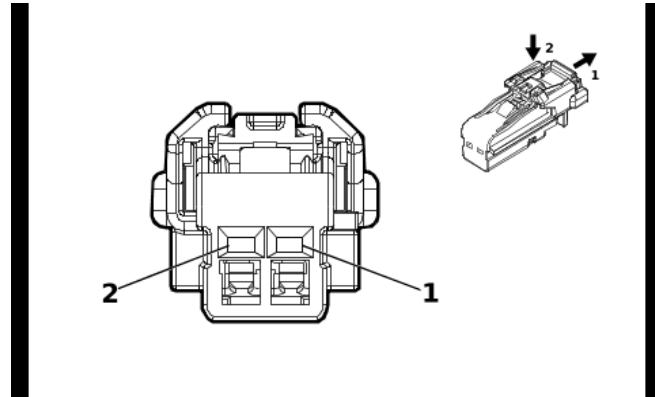

4115691

Connector Part Information

Harness Type: Front Seat Wiring Harness - Passenger
 OEM Connector: 6098-8988
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.2 MCON Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B153P Front Seat Belt Buckle - Passenger

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BK / OG	1363	Driver Seat Belt Switch Low Reference	I	—
2	0.5	OG / VT	1362	Passenger Seat Belt Switch Signal	I	—

B153RR Rear Seat Belt Buckle - Right

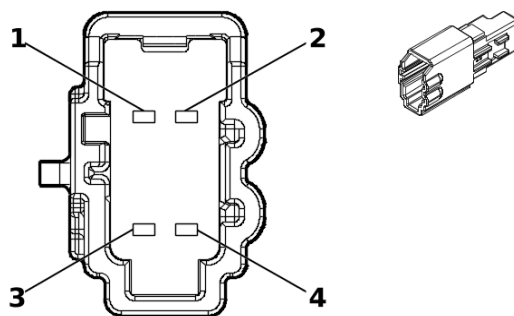

5360963

Connector Part Information

Harness Type: Body Wiring Harness

OEM Connector: 35264699

Service Connector: 84847258

Description: 4-Way M 1.2 MCON Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-17 (L-GN)	No Tool Required

B153RR Rear Seat Belt Buckle - Right

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BK / OG	1363	Driver Seat Belt Switch Low Reference	I	—
2	0.5	BU / OG	5163	Rear Center Seat Belt Switch Signal	I	—
3	0.5	BK / OG	1363	Driver Seat Belt Switch Low Reference	I	—
4	0.5	BN / OG	5162	Right Rear Seat Belt Switch Signal	I	—

B172LF Front Disc Brake Pad Wear Sensor - Left

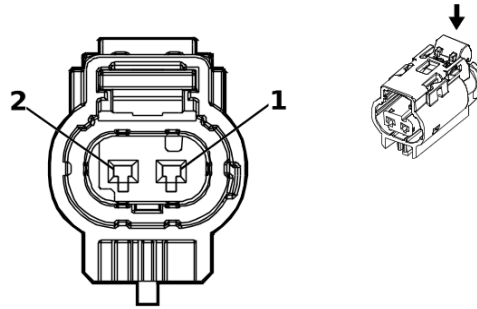

3747581

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 33226772
 Service Connector: 84727362
 Description: 2-Way F 1.2 Multilock Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B172LF Front Disc Brake Pad Wear Sensor - Left

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN / BU	1602	Front Brake Pad Wear Sensor Signal	I	—
2	1	BK / WH	1151	Signal Ground	I	NV8
	0.75	BK / WH	1151	Signal Ground	I	- NV8

B172LR Rear Disc Brake Pad Wear Sensor - Left

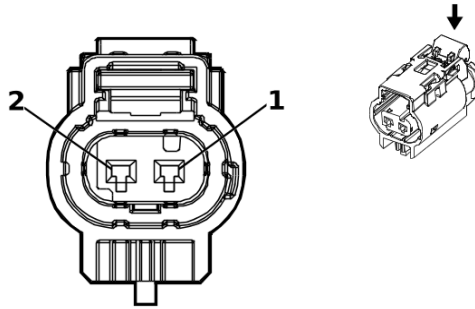

3747581

Connector Part Information

Harness Type: Chassis Rear Wiring Harness Extension Harness
 OEM Connector: 13583195
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.2 Multilock Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B172LR Rear Disc Brake Pad Wear Sensor - Left

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	GN / YE	1616	Rear Brake Pad Wear Sensor Signal	I	—
2	0.75	BK / WH	1751	Signal Ground	I	—

B174G Front View Driver Information Camera - Grille (UV2)

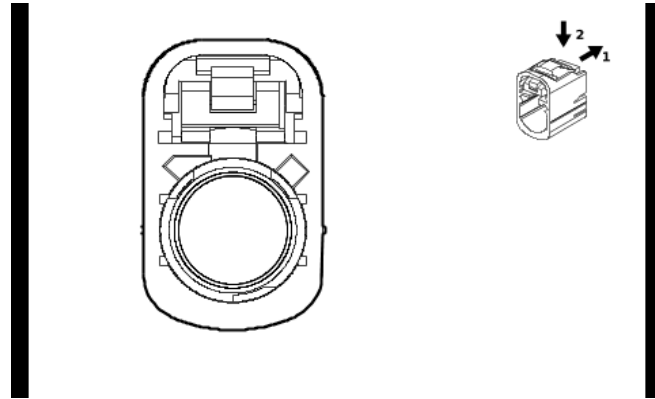

5920539

Connector Part Information

Harness Type: Right Side Marker Lamp Harness
 OEM Connector: 13537644
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way F Coax Type(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

B174G Front View Driver Information Camera - Grille (UV2)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
BK	—	—	Coax Cable	Coax Cable	I	—
Coax Cable	—	—	—	Not Occupied	—	—

B174W Front View Camera - Windshield

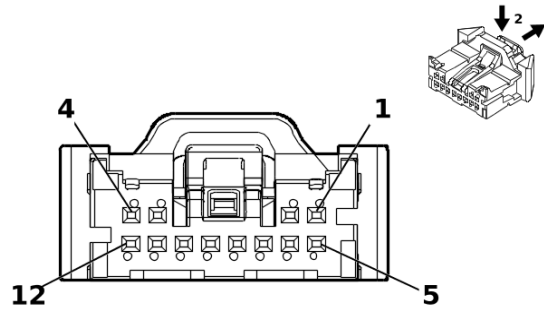

5360826

Connector Part Information

Harness Type: Dome Lamp Wiring Harness
 OEM Connector: 35068239
 Service Connector: 13529935
 Description: 12-Way F 050 CTS Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	84944580	EL-35616-58 (BK)	EL-38125-58

B174W Front View Camera - Windshield

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	BK / WH	851	Signal Ground	I	—
2	—	—	—	Not Occupied	—	—
3	0.35	RD / YE	240	Battery Positive Voltage	I	—
4	—	—	—	Not Occupied	—	—
5	0.35	BU / YE	4979	AUTOSAR CAN Bus [+] 2 Serial Data	I	—
6	0.35	WH	4978	AUTOSAR CAN Bus [-] 2 Serial Data	I	—
7	0.35	BU / YE	4979	AUTOSAR CAN Bus [+] 2 Serial Data	I	—
8	0.35	WH	4978	AUTOSAR CAN Bus [-] 2 Serial Data	I	—
9 - 12	—	—	—	Not Occupied	—	—

B193A Charge Air Cooler Air Temperature Sensor - Inlet (L5P)

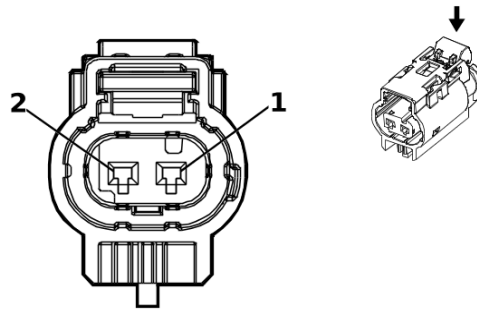

3747581

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13583195
 Service Connector: 84727362
 Description: 2-Way F 1.2 Multilock Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B193A Charge Air Cooler Air Temperature Sensor - Inlet (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BK / GN	580	Engine Control Sensors Low Reference 2	I	—
2	0.5	GN	3683	Charge Air Cooler Inlet Temperature Sensor Signal	I	—

B193B Charge Air Cooler Air Temperature Sensor - Outlet (L5P)

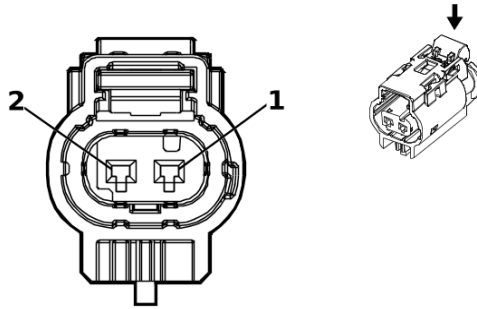

3747581

Connector Part Information

Harness Type: Engine Wiring Harness Chassis
 OEM Connector: 33226772
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.2 Multilock Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B193B Charge Air Cooler Air Temperature Sensor - Outlet (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BK / BU	10597	Engine Control Sensors Low Reference 3	I	—
2	0.5	BN	3681	Charge Air Cooler Outlet Temperature Sensor Signal	I	—

B195A Nitrogen Oxides Sensor 1 (L5P)

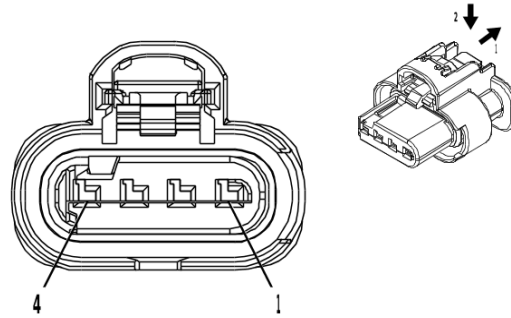

4210809

Connector Part Information

Harness Type: Engine Wiring Harness Chassis
 OEM Connector: 33390897
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way F 1.2 MCON-CB Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B195A Nitrogen Oxides Sensor 1 (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	VT / GN	4320	Powertrain Sensor Bus Enable	I	—
2	0.5	WH	4055	Private Serial Data Powertrain CAN Bus [+] Serial Data	I	—
3	0.5	BU / GY	4054	Private Serial Data Powertrain CAN Bus [-] Serial Data	I	—
4	0.75	BK / WH	1151	Signal Ground	I	—

B195B Nitrogen Oxides Sensor 2 (L5P)

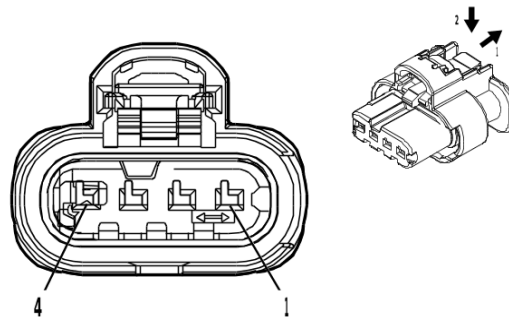

4934614

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 33367416
 Service Connector: 85519071
 Description: 4-Way F 1.2 MCON-CB Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B195B Nitrogen Oxides Sensor 2 (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	1	VT / GN	4320	Powertrain Sensor Bus Enable	I	—
2	0.5	WH	4055	Private Serial Data Powertrain CAN Bus [+] Serial Data	I	—
3	0.5	BU / GY	4054	Private Serial Data Powertrain CAN Bus [-] Serial Data	I	—
4	1	BK / WH	1151	Signal Ground	I	—

B198 Fuel Composition Sensor (FHS)

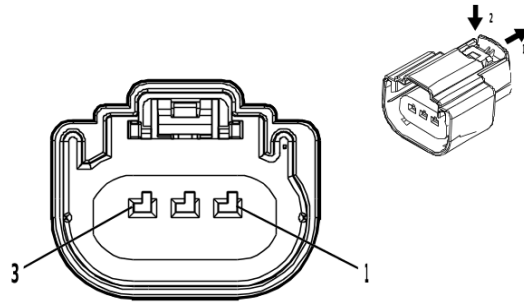

4829227

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 33362826
 Service Connector: 19371197
 Description: 3-Way F 1.5 MX Series, Sealed(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required

B198 Fuel Composition Sensor (FHS)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	VT / GN	4320	Powertrain Sensor Bus Enable	I	—
2	0.5	BK / GY	3802	Fuel Composition Sensor Low Reference	I	—
3	0.5	VT / BN	3803	Fuel Composition Sensor Signal	I	—

B212 Reductant Tank Fluid Sensor (L5P)

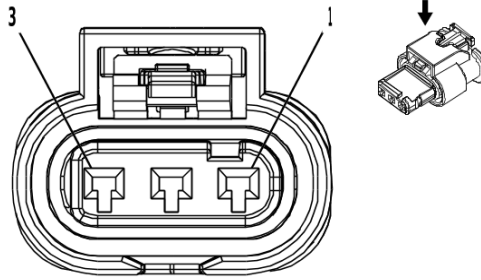

2750649

Connector Part Information

Harness Type: Emission Reduction Fluid Tank Reservoir Wire Harness
 OEM Connector: 13722729
 Service Connector: Service by Harness - See Part Catalog
 Description: 3-Way F 1.2 MCON Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B212 Reductant Tank Fluid Sensor (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BK / GY	7286	Diesel Exhaust Fluid Sensor Voltage Reference 2	I	—
2	0.5	YE / GN	7284	Diesel Exhaust Fluid Liquid Quality Temperature Signal	I	—
3	0.5	BK / YE	7285	Diesel Exhaust Fluid Liquid Quality Temperature Sensor Low Reference	I	—

B218L Side Obstacle Detection Control Module - Left

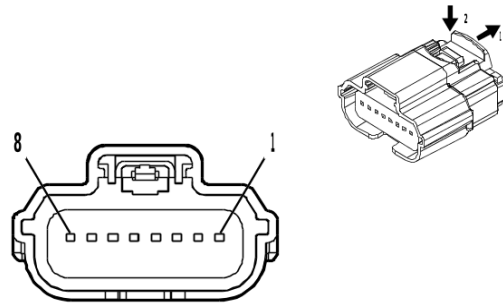

4708234

Connector Part Information

Harness Type: Rear Object Alarm Sensor Wiring Harness
 OEM Connector: 35192853
 Service Connector: Service by Harness - See Part Catalog
 Description: 8-Way F 64 Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

B218L Side Obstacle Detection Control Module - Left

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH	4087	Private Serial Data Side Obstacle Detection CAN Bus [-] Serial Data	I	—
2	0.5	BU / VT	4088	Private Serial Data Side Obstacle Detection CAN Bus [+] Serial Data	I	—
3	0.5	BK / WH	1951	Signal Ground	I	—
4	0.5	WH	4100	AUTOSAR CAN Bus [-] 4 Serial Data	I	—
5	0.5	WH	4100	AUTOSAR CAN Bus [-] 4 Serial Data	I	—
6	0.5	BU / VT	4101	AUTOSAR CAN Bus [+] 4 Serial Data	I	—
7	0.5	BU / VT	4101	AUTOSAR CAN Bus [+] 4 Serial Data	I	—
8	0.5	RD / GN	6940	Battery Positive Voltage	I	—

B218R Side Obstacle Detection Control Module - Right

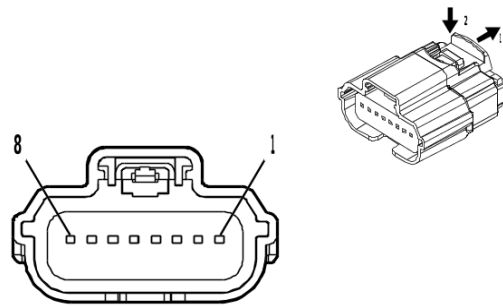

4708234

Connector Part Information

Harness Type: Rear Object Alarm Sensor Wiring Harness
 OEM Connector: 35200888
 Service Connector: Service by Harness - See Part Catalog
 Description: 8-Way F 64 Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

B218R Side Obstacle Detection Control Module - Right

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH	4087	Private Serial Data Side Obstacle Detection CAN Bus [-] Serial Data	I	—
2	0.5	BU / VT	4088	Private Serial Data Side Obstacle Detection CAN Bus [+] Serial Data	I	—
3	0.5	BK / WH	1951	Signal Ground	I	—
4	—	—	—	Not Occupied	—	—
5	0.5	WH	4100	AUTOSAR CAN Bus [-] 4 Serial Data	I	—
6	0.5	BU / VT	4101	AUTOSAR CAN Bus [+] 4 Serial Data	I	—
7	—	—	—	Not Occupied	—	—
8	0.5	RD / GN	6940	Battery Positive Voltage	I	—

B302 Steering Gear Pressure Sensor (NV8)

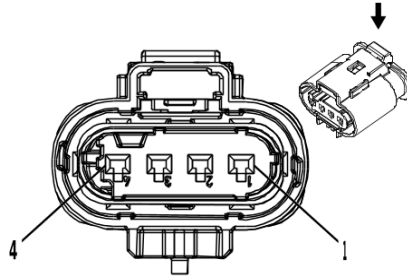

2717079

Connector Part Information

Harness Type: Right Side Marker Lamp Harness
 OEM Connector: 13503575
 Service Connector: 13587299
 Description: 4-Way F 1.2 Multilock Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

B302 Steering Gear Pressure Sensor (NV8)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	WH	3128	Hydrocarbon Injection Pressure Sensor Signal	I	—
2	—	GN	3129	Hydrocarbon Injection Pressure Sensor Low Reference	I	—
3	—	RD	3130	Hydrocarbon Injection Pressure Sensor 5V Reference	I	—
4	—	BK	8023	Hydraulic Pressure Sensor Low Reference	I	—

B306A Parking Assist Alarm Sensor - Front Left Outer

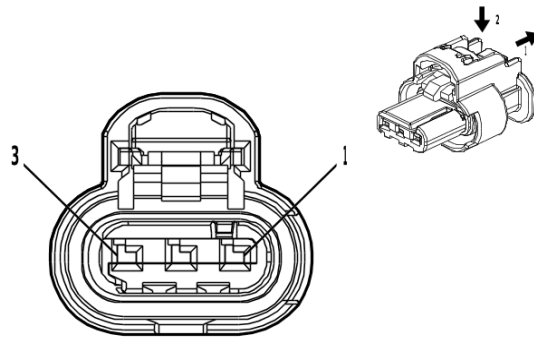

4581126

Connector Part Information

Harness Type: Front Object Alarm Sensor Wiring Harness
 OEM Connector: 33358800
 Service Connector: Service by Harness - See Part Catalog
 Description: 3-Way F 1.2 MCON-CB Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B306A Parking Assist Alarm Sensor - Front Left Outer

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN	6581	Front Parking Assist Display Control	I	—
2	0.5	VT / WH	5215	Left Front Outer Parking Assist Sensor	I	—
3	0.5	BK / BU	5214	Front Parking Assist Sensor Low Reference	I	—

B306B Parking Assist Alarm Sensor - Front Left Middle

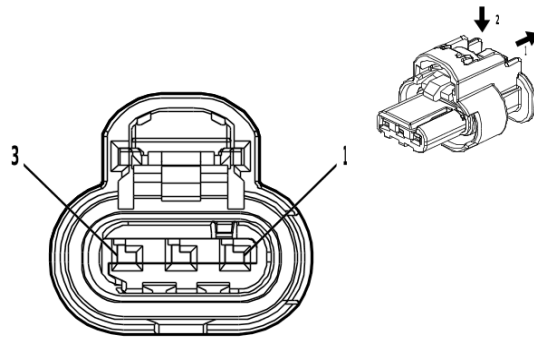

4581126

Connector Part Information

Harness Type: Front Object Alarm Sensor Wiring Harness
 OEM Connector: 33358800
 Service Connector: Service by Harness - See Part Catalog
 Description: 3-Way F 1.2 MCON-CB Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B306B Parking Assist Alarm Sensor - Front Left Middle

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN	6581	Front Parking Assist Display Control	I	—
2	0.5	YE / GY	5216	Left Front Middle Parking Assist Sensor	I	—
3	0.5	BK / BU	5214	Front Parking Assist Sensor Low Reference	I	—

B306C Parking Assist Alarm Sensor - Front Right Middle

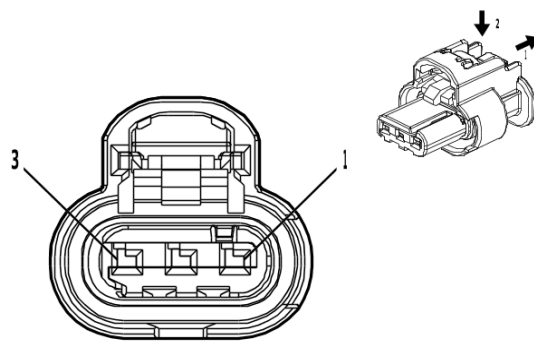

4581126

Connector Part Information

Harness Type: Front Object Alarm Sensor Wiring Harness
 OEM Connector: 33358800
 Service Connector: Service by Harness - See Part Catalog
 Description: 3-Way F 1.2 MCON-CB Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B306C Parking Assist Alarm Sensor - Front Right Middle

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN	6581	Front Parking Assist Display Control	I	—
2	0.5	VT / GY	5218	Right Front Middle Parking Assist Sensor	I	—
3	0.5	BK / BU	5214	Front Parking Assist Sensor Low Reference	I	—

B306D Parking Assist Alarm Sensor - Front Right Outer

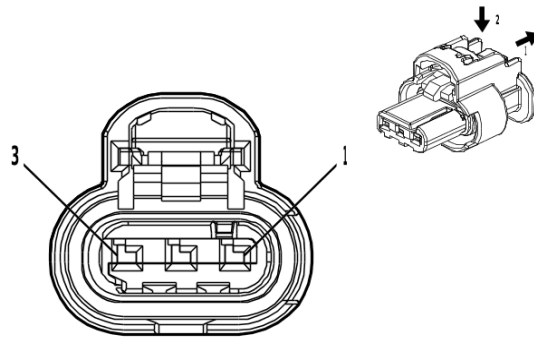

4581126

Connector Part Information

Harness Type: Front Object Alarm Sensor Wiring Harness
 OEM Connector: 33358800
 Service Connector: Service by Harness - See Part Catalog
 Description: 3-Way F 1.2 MCON-CB Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B306D Parking Assist Alarm Sensor - Front Right Outer

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN	6581	Front Parking Assist Display Control	I	—
2	0.5	WH / GY	5217	Right Front Outer Parking Assist Sensor	I	—
3	0.5	BK / BU	5214	Front Parking Assist Sensor Low Reference	I	—

B306E Parking Assist Alarm Sensor - Rear Left Outer

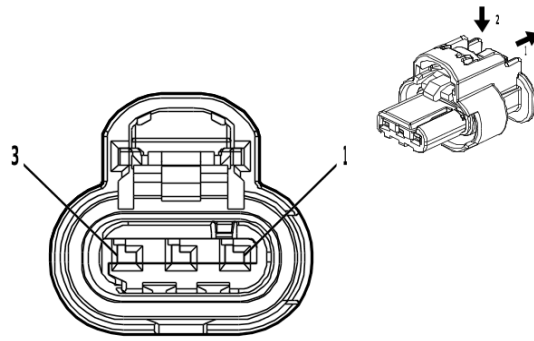

4581126

Connector Part Information

Harness Type: Rear Object Alarm Sensor Wiring Harness
 OEM Connector: 33358800
 Service Connector: Service by Harness - See Part Catalog
 Description: 3-Way F 1.2 MCON-CB Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B306E Parking Assist Alarm Sensor - Rear Left Outer

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN / WH	2374	Object Sensor Voltage Reference	I	—
2	0.5	YE	2375	Left Rear Outer Parking Assist Sensor Signal	I	—
3	0.5	BK / GY	2379	Object Sensor Low Reference	I	—

B306F Parking Assist Alarm Sensor - Rear Left Middle

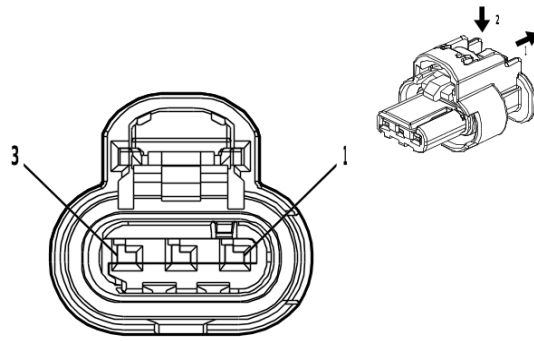

4581126

Connector Part Information

Harness Type: Rear Object Alarm Sensor Wiring Harness
 OEM Connector: 33358800
 Service Connector: Service by Harness - See Part Catalog
 Description: 3-Way F 1.2 MCON-CB Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B306F Parking Assist Alarm Sensor - Rear Left Middle

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN / WH	2374	Object Sensor Voltage Reference	I	—
2	0.5	YE / BU	2376	Left Rear Middle Parking Assist Sensor Signal	I	—
3	0.5	BK / GY	2379	Object Sensor Low Reference	I	—

B306G Parking Assist Alarm Sensor - Rear Right Middle

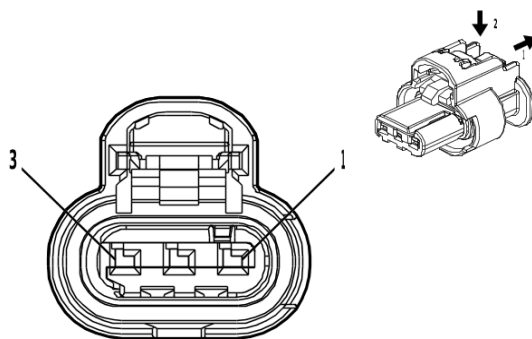

4581126

Connector Part Information

Harness Type: Rear Object Alarm Sensor Wiring Harness
 OEM Connector: 33358800
 Service Connector: Service by Harness - See Part Catalog
 Description: 3-Way F 1.2 MCON-CB Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B306G Parking Assist Alarm Sensor - Rear Right Middle

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN / WH	2374	Object Sensor Voltage Reference	I	—
2	0.5	YE / WH	2377	Right Rear Middle Parking Assist Sensor Signal	I	—
3	0.5	BK / GY	2379	Object Sensor Low Reference	I	—

B306H Parking Assist Alarm Sensor - Rear Right Outer

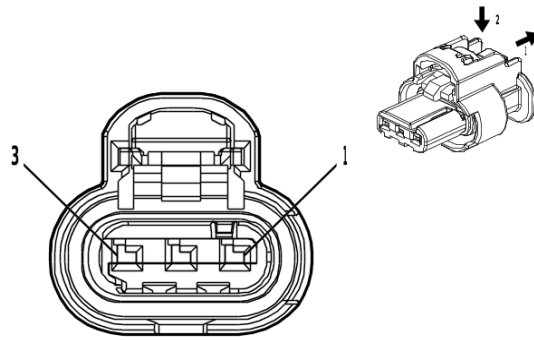

4581126

Connector Part Information

Harness Type: Rear Object Alarm Sensor Wiring Harness
 OEM Connector: 33358800
 Service Connector: Service by Harness - See Part Catalog
 Description: 3-Way F 1.2 MCON-CB Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B306H Parking Assist Alarm Sensor - Rear Right Outer

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN / WH	2374	Object Sensor Voltage Reference	I	—
2	0.5	YE / VT	2378	Right Rear Outer Parking Assist Sensor Signal	I	—
3	0.5	BK / GY	2379	Object Sensor Low Reference	I	—

B310 Fuel Pressure and Temperature Sensor (L8T)

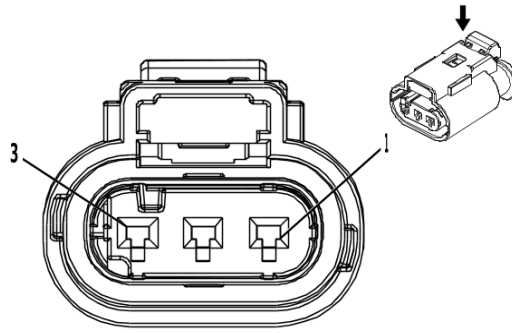

3240107

Connector Part Information

Harness Type: Fuel Injector Wiring Harness - Left
 OEM Connector: 172007659
 Service Connector: Service by Harness - See Part Catalog
 Description: 3-Way F 1.2 Multilock Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B310 Fuel Pressure and Temperature Sensor (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BK / GN	548	Engine Control Sensors Low Reference 1	I	—
2	0.5	BU / WH	10786	Fuel Rail Pressure Sensor SENT 1 Signal	I	—
3	0.5	BN / RD	480	Engine Control Vehicle Sensors 5 Volt Reference 1	I	—

B345P Exhaust Pressure Differential Sensor - Particulate Filter

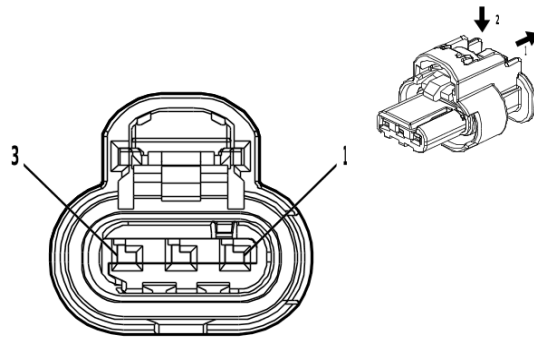

4581126

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 33358800
 Service Connector: 86792094
 Description: 3-Way F 1.2 MCON-CB Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B345P Exhaust Pressure Differential Sensor - Particulate Filter

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	1	WH / RD	480	Engine Control Vehicle Sensors 5 Volt Reference 1	I	—
2	1	WH / BN	2363	Exhaust Pressure Sensor SENT 1 Signal	I	—
3	1	BK / GY	626	Engine Control Vehicle Sensors Low Reference 1	I	—

B352 Video Display Inside Rearview Mirror Camera (DRZ)

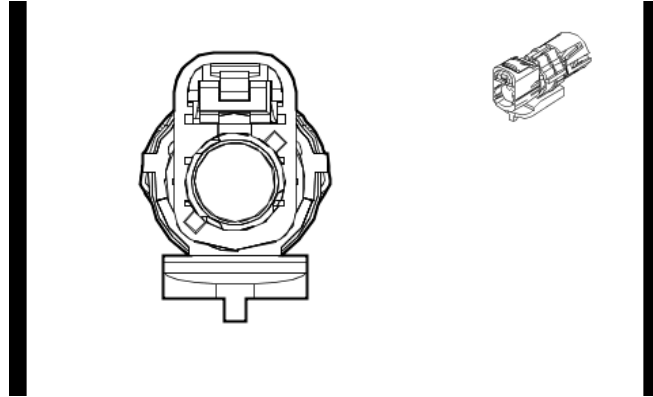

5633894

Connector Part Information

Harness Type: Inside Rearview Mirror Wiring Harness COAX
 OEM Connector: 35187049
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way F Coax Type, Sealed(BU)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

B352 Video Display Inside Rearview Mirror Camera (DRZ)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	Coax Cable	—	Full Display Mirror Rear Camera Coaxial Video Signal	I	—

B352 Video Display Inside Rearview Mirror Camera (UVB)

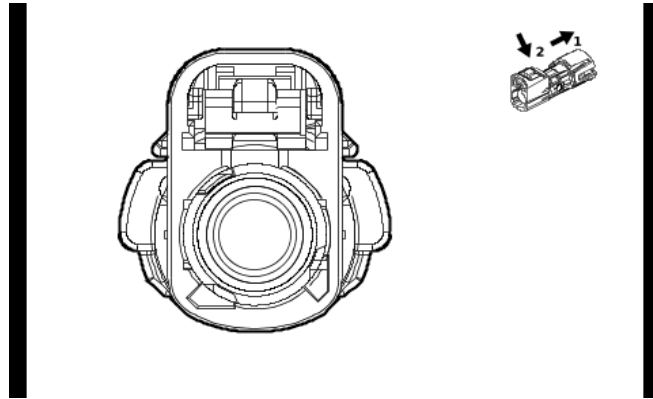

5757455

Connector Part Information

Harness Type: Endgate Wiring Harness COAX
 OEM Connector: 35187043
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way F Coax Type(OG)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

B352 Video Display Inside Rearview Mirror Camera (UVB)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	Coax Cable	—	Rear Vision Camera Coaxial Video Signal	I	—

B359 Exhaust Gas Temperature Sensor Module (L5P)

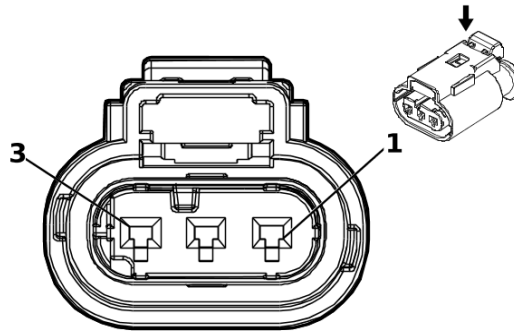

5192187

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13503572
 Service Connector: 84777453
 Description: 3-Way F 1.2 Multilock Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B359 Exhaust Gas Temperature Sensor Module (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GN	10289	Exhaust Gas Temperature Sensor SENT 1 Signal	I	—
2	0.5	BK / GN	580	Engine Control Sensors Low Reference 2	I	—
3	0.5	GY / RD	10667	Engine Control Sensors 5 Volt Reference	I	—

B359B Exhaust Gas Temperature Sensor Module 2

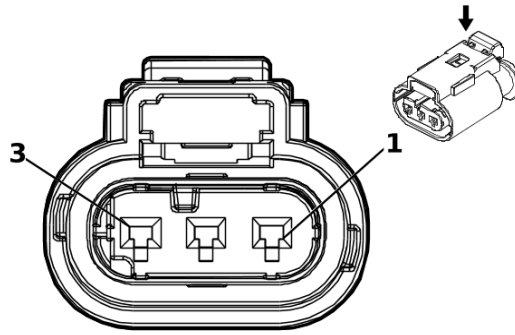

5192187

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 35129355
 Service Connector: 84777453
 Description: 3-Way F 1.2 Multilock Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B359B Exhaust Gas Temperature Sensor Module 2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BU	10290	Exhaust Gas Temperature Sensor SENT 2 Signal	I	—
2	0.5	BK / GY	626	Engine Control Vehicle Sensors Low Reference 1	I	—
3	0.5	YE / RD	10595	Engine Control Vehicle Sensors 5 Volt Reference 2	I	—

B359C Exhaust Gas Temperature Sensor Module 3

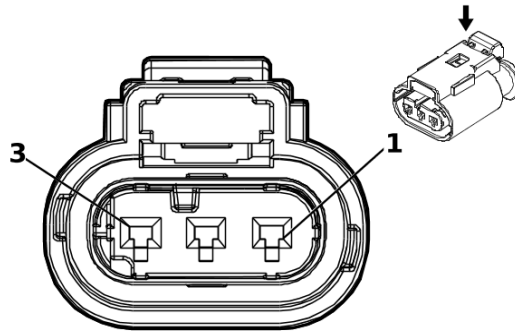

5192187

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 35129355
 Service Connector: 84777453
 Description: 3-Way F 1.2 Multilock Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B359C Exhaust Gas Temperature Sensor Module 3

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	YE	10291	Exhaust Gas Temperature Sensor SENT 3 Signal	I	—
2	0.5	BK / GY	626	Engine Control Vehicle Sensors Low Reference 1	I	—
3	0.5	YE / RD	10595	Engine Control Vehicle Sensors 5 Volt Reference 2	I	—

B394 Evaporative Emission Canister Purge System Pressure Sensor

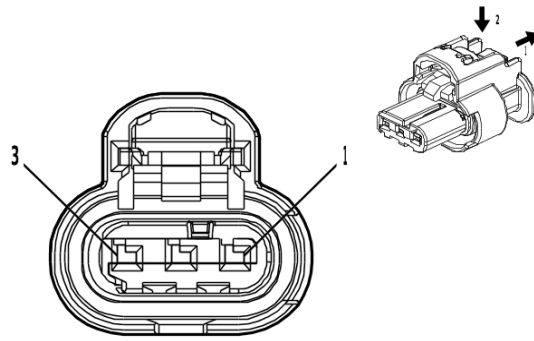

4778903

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 33358808
 Service Connector: 86792095
 Description: 3-Way F 1.2 MCON-CB Series, Sealed(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

B394 Evaporative Emission Canister Purge System Pressure Sensor

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	YE / GY	11029	Canister Vapor Pressure Sensor Signal	I	—
2	0.5	BK / GY	626	Engine Control Vehicle Sensors Low Reference 1	I	—
3	0.5	WH / RD	480	Engine Control Vehicle Sensors 5 Volt Reference 1	I	—

E2LRB Side Marker Bulb - Left Rear

Connector Part Information

Harness Type: Tail Lamp Wiring Harness - Left
 OEM Connector: EEM0098-LGY
 Service Connector: Service by Harness - See Part Catalog
 Description: Bulb Socket

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-3 (GY)	No Tool Required

E2LRB Side Marker Bulb - Left Rear

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BN / BN	6993	Left Rear Park Lamp Control	I	—
2	0.75	BK	1951	Signal Ground	I	—
	0.75	BK	1951	Signal Ground		—

E2RRB Side Marker Bulb - Right Rear

Connector Part Information

Harness Type: Tail Lamp Wiring Harness - Right
 OEM Connector: EEM0098-LGY
 Service Connector: Service by Harness - See Part Catalog
 Description: Bulb Socket


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-3 (GY)	No Tool Required

E2RRB Side Marker Bulb - Right Rear

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
2	0.75	BK	1850	Ground	I	—
	0.75	BK / BK	1850	Ground		—

E3A Front Clearance Lamp - Roof Left Outer

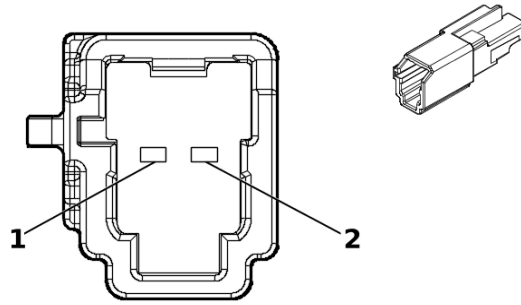

5355341

Connector Part Information

Harness Type: Roof Wiring Harness

OEM Connector: 35258943

Service Connector: 84815531

Description: 2-Way M 1.2 MCON Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-17 (L-GN)	No Tool Required

E3A Front Clearance Lamp - Roof Left Outer

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BK	1050	Ground	I	—
2	0.5	BN / GN	4246	Identification Lamp Control	I	—

E3E Front Clearance Lamp - Roof Right Outer

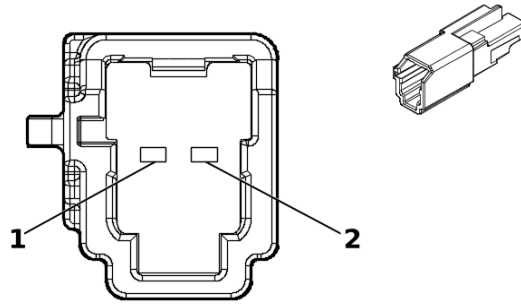

5355341

Connector Part Information

Harness Type: Roof Wiring Harness
 OEM Connector: 35258943
 Service Connector: 84815531
 Description: 2-Way M 1.2 MCON Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-17 (L-GN)	No Tool Required

E3E Front Clearance Lamp - Roof Right Outer

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BK	1050	Ground	I	—
2	0.5	BN / GN	4246	Identification Lamp Control	I	—

E3FA Front Identification Lamp

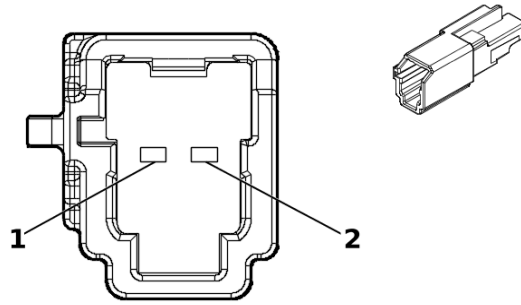

5355341

Connector Part Information

Harness Type: Roof Wiring Harness

OEM Connector: 35258943

Service Connector: 84815531

Description: 2-Way M 1.2 MCON Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-17 (L-GN)	No Tool Required

E3FA Front Identification Lamp

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BK	1050	Ground	I	—
2	0.5	BN / GN	4246	Identification Lamp Control	I	—

E3LF Rear Clearance Lamp - Fender Left Front

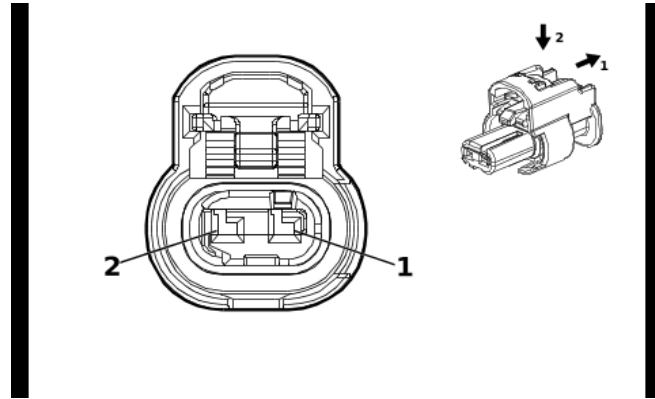

4649903

Connector Part Information

Harness Type: Right Side Marker Lamp Harness
 OEM Connector: 13512365
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.2 MCON Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

E3LF Rear Clearance Lamp - Fender Left Front

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BK	1850	Ground	I	—
2	—	BN / GN	4246	Identification Lamp Control	I	—

E3LR Rear Clearance Lamp - Fender Left Rear

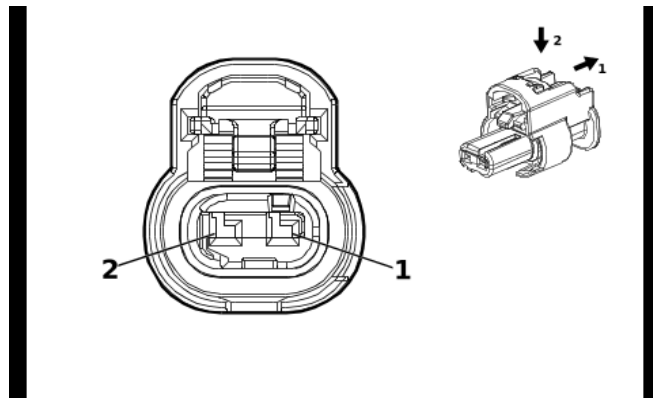

4649903

Connector Part Information

Harness Type: Right Side Marker Lamp Harness
 OEM Connector: 13512365
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.2 MCON Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

E3LR Rear Clearance Lamp - Fender Left Rear

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BK	1850	Ground	I	—
2	—	BN / GN	4246	Identification Lamp Control	I	—

E3RA Rear Identification Lamp

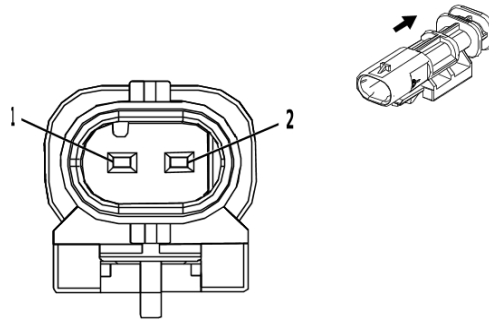

2474755

Connector Part Information

Harness Type: Right Side Marker Lamp Harness
 OEM Connector: 13591337
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way M 1.2 MCON Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

E3RA Rear Identification Lamp

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BK	1850	Ground	I	—
2	—	BN / GN	4246	Identification Lamp Control	I	—

E3RF Rear Clearance Lamp - Fender Right Front

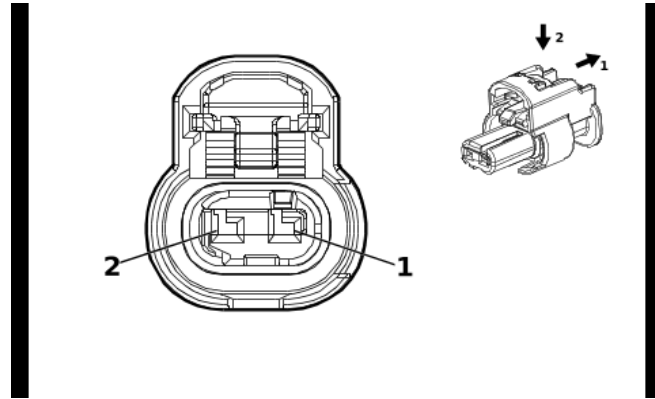

4649903

Connector Part Information

Harness Type: Right Side Marker Lamp Harness
 OEM Connector: 13512365
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.2 MCON Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

E3RF Rear Clearance Lamp - Fender Right Front

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BK	1850	Ground	I	—
2	—	BN / GN	4246	Identification Lamp Control	I	—

E3RR Rear Clearance Lamp - Fender Right Rear

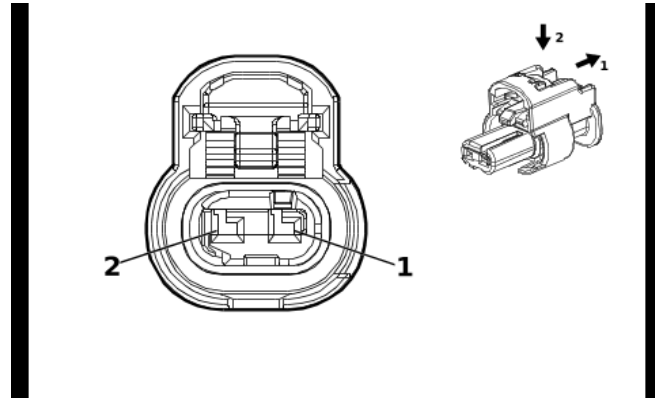

4649903

Connector Part Information

Harness Type: Right Side Marker Lamp Harness
 OEM Connector: 13512365
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.2 MCON Series, Sealed(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

E3RR Rear Clearance Lamp - Fender Right Rear

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BK	1850	Ground	I	—
2	—	BN / GN	4246	Identification Lamp Control	I	—

E5A Backup Bulb - Left

Connector Part Information

Harness Type: Tail Lamp Wiring Harness - Left
 OEM Connector: EEM0323-BLK
 Service Connector: Service by Harness - See Part Catalog
 Description: Bulb Socket

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-3 (GY)	No Tool Required

E5A Backup Bulb - Left

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	GN	24	Backup Lamp Control	I	—
2	0.75	BK / BK	1951	Signal Ground	I	—

E5B Backup Bulb - Right

Connector Part Information

Harness Type: Tail Lamp Wiring Harness - Right
 OEM Connector: EEM0323-BLK
 Service Connector: Service by Harness - See Part Catalog
 Description: Bulb Socket


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-3 (GY)	No Tool Required

E5B Backup Bulb - Right

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	GN / GN	24	Backup Lamp Control	I	—
2	0.75	BK	1850	Ground	I	—

E6A High Mount Stop and Cargo Lamp - Crew Cab and Double Cab and UVO

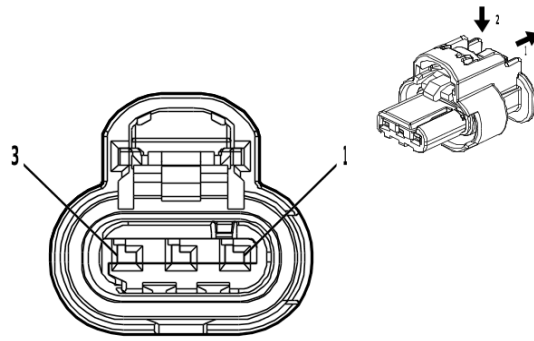

4581126

Connector Part Information

Harness Type: Inside Rearview Mirror Wiring Harness
 OEM Connector: 33358800
 Service Connector: Service by Harness - See Part Catalog
 Description: 3-Way F 1.2 MCON-CB Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

E6A High Mount Stop and Cargo Lamp - Crew Cab and Double Cab and UVO

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH / VT	1430	Exterior Courtesy Lamp Control	I	—
2	0.5	BN / YE	820	Center High Mounted Stop Lamp Supply Voltage	I	—
3	0.5	BK	1050	Ground	I	—

E6A High Mount Stop and Cargo Lamp - Crew Cab and Double Cab without UVO

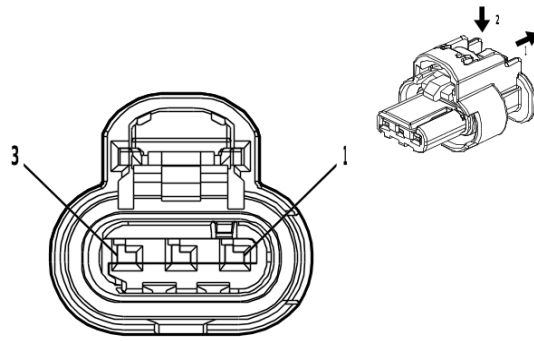

4581126

Connector Part Information

Harness Type: Inside Rearview Mirror Wiring Harness
 OEM Connector: 33358800
 Service Connector: Service by Harness - See Part Catalog
 Description: 3-Way F 1.2 MCON-CB Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

E6A High Mount Stop and Cargo Lamp - Crew Cab and Double Cab without UVO

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH / VT	1430	Exterior Courtesy Lamp Control	I	—
2	0.5	VT / WH	5065	Stop Lamp Relay Coil Control	I	—
3	0.5	BK	1050	Ground	I	—

E6A High Mount Stop and Cargo Lamp - Regular Cab

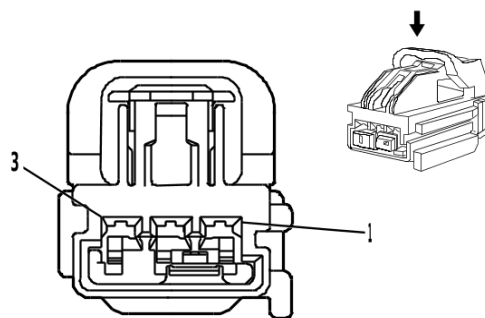

1787799

Connector Part Information

Harness Type: Dome Lamp Wiring Harness
 OEM Connector: 10847008
 Service Connector: 86825460
 Description: 3-Way F 1.5 Kaizen Series(L-GY)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required

E6A High Mount Stop and Cargo Lamp - Regular Cab

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH / VT	1430	Exterior Courtesy Lamp Control	I	—
2	0.5	BU / BK	1053	Center High Mounted Stop Lamp Control 3	I	—
3	1	BK	1050	Ground	I	—

E6B High Mount Stop Lamp Bulb - Regular Cab

Connector Part Information

Harness Type: High Mount Stop Lamp Wiring Harness
 OEM Connector: 02075-01
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	Not Available	No Tool Required

E6B High Mount Stop Lamp Bulb - Regular Cab

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	0.75	RD	1053	Center High Mounted Stop Lamp Control 3	I	—
B	0.75	BK	1050	Ground	I	—
	0.75	BK	1050	Ground		—

E7 Rear License Plate Lamp (ZW9)

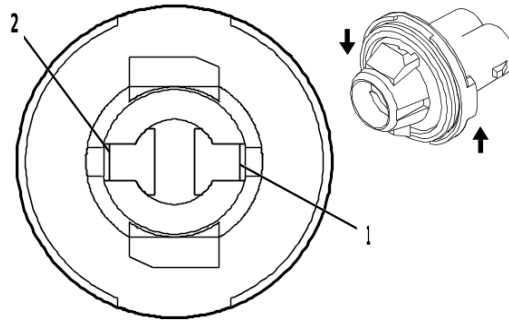

5153536

Connector Part Information

Harness Type: Right Side Marker Lamp Harness
 OEM Connector: 15324946
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F Lamp Socket Wedge Base, Type W-2(D-GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

E7 Rear License Plate Lamp (ZW9)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	GN / YE	6846	Rear License Plate Lamp Control	I	—
2	—	BK	1850	Ground	I	—

E7L Rear License Plate Lamp - Left

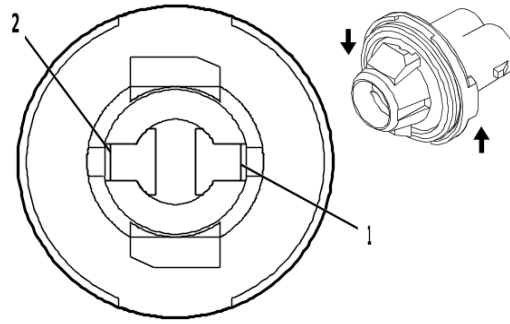

5153536

Connector Part Information

Harness Type: Rear Object Alarm Sensor Wiring Harness
 OEM Connector: 15324946
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F Lamp Socket Wedge Base, Type W-2(D-GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

E7L Rear License Plate Lamp - Left

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GN / YE	6846	Rear License Plate Lamp Control	I	—
2	0.5	BK	1850	Ground	I	—

E7R Rear License Plate Lamp - Right

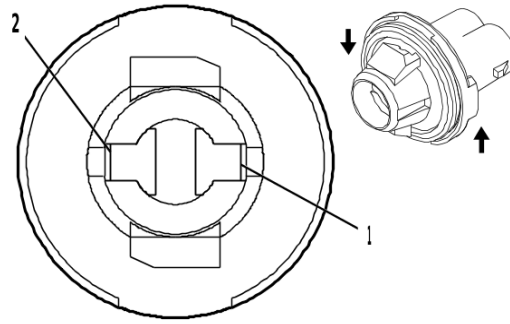

5153536

Connector Part Information

Harness Type: Rear Object Alarm Sensor Wiring Harness
 OEM Connector: 15324946
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F Lamp Socket Wedge Base, Type W-2(D-GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

E7R Rear License Plate Lamp - Right

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GN / YE	6846	Rear License Plate Lamp Control	I	—
2	0.5	BK	1850	Ground	I	—

E8ZL Assist Step Lamp - Left (BRS)

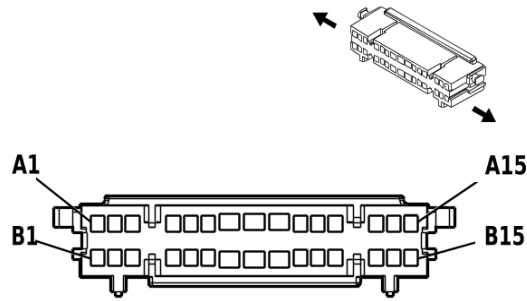

655763

Connector Part Information

Harness Type: Right Side Marker Lamp Harness
 OEM Connector: 13583926
 Service Connector: Service by Harness - See Part Catalog
 Description: 30-Way F 150, 280 GT FBT Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

E8ZL Assist Step Lamp - Left (BRS)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
2	—	BK	1850	Ground	I	—
A1 - B15	—	—	—	Not Occupied	—	—

E8ZR Assist Step Lamp - Right (BRS)

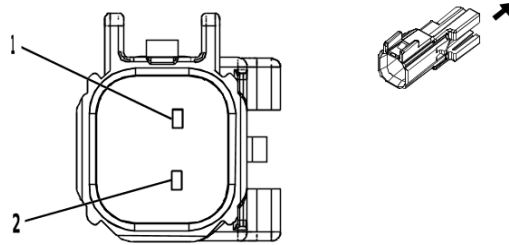

3271068

Connector Part Information

Harness Type: Right Side Marker Lamp Harness
 OEM Connector: 13503926
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way M 1.5 Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

E8ZR Assist Step Lamp - Right (BRS)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	—	Not Occupied	—	—
2	—	BK	1850	Ground	I	—

E12A Glow Plug 1 (L5P)

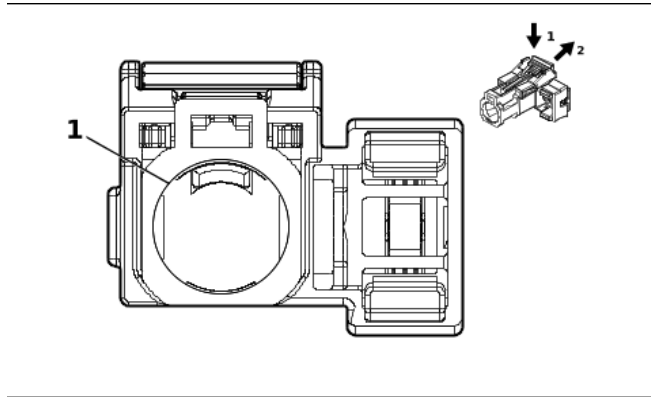

6166047

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13551815
 Service Connector: Service by Cable Assembly - See Part Catalog
 Description: 1-Way F RK4 Receptacle(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

E12A Glow Plug 1 (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	GY / BU	1581	Glow Plug 1 Control	I	—

E12B Glow Plug 2 (L5P)

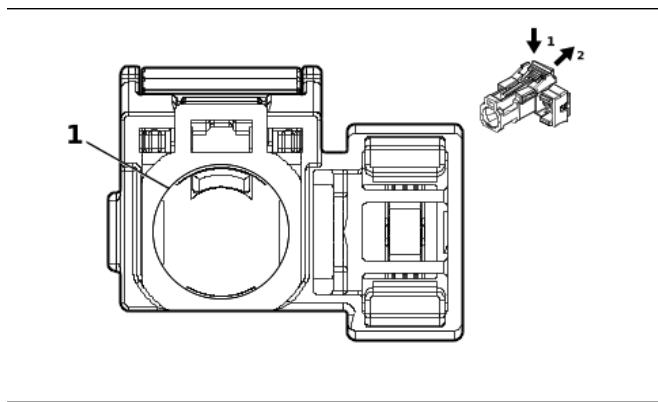

6166047

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13551815
 Service Connector: Service by Cable Assembly - See Part Catalog
 Description: 1-Way F RK4 Receptacle(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

E12B Glow Plug 2 (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	GY / BN	1582	Glow Plug 2 Control	I	—

E12C Glow Plug 3 (L5P)

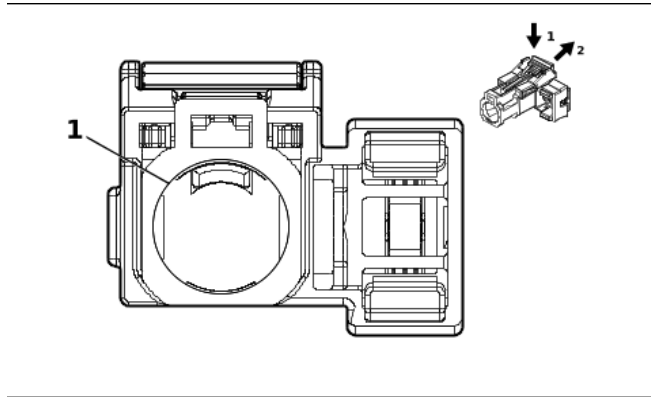

6166047

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13551815
 Service Connector: Service by Cable Assembly - See Part Catalog
 Description: 1-Way F RK4 Receptacle(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

E12C Glow Plug 3 (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	GY / GN	1583	Glow Plug 3 Control	I	—

E12D Glow Plug 4 (L5P)

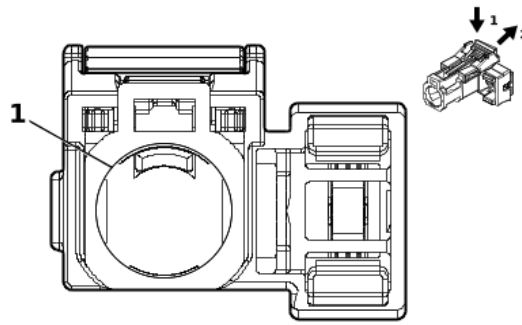

6166047

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13551815
 Service Connector: Service by Cable Assembly - See Part Catalog
 Description: 1-Way F RK4 Receptacle(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

E12D Glow Plug 4 (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	GY / YE	1584	Glow Plug 4 Control	I	—

E12E Glow Plug 5 (L5P)

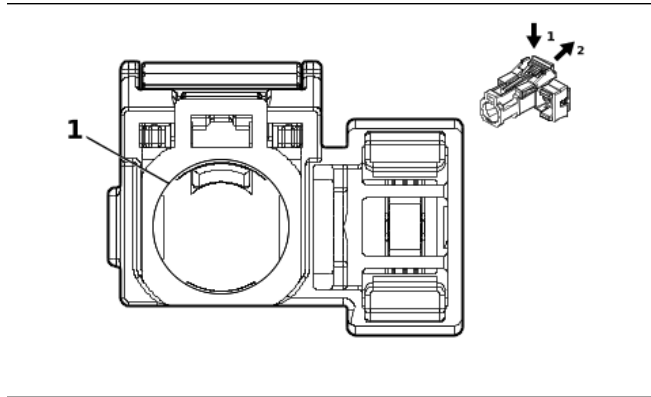

6166047

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13551815
 Service Connector: Service by Cable Assembly - See Part Catalog
 Description: 1-Way F RK4 Receptacle(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

E12E Glow Plug 5 (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	GY / WH	1585	Glow Plug 5 Control	I	—

E12F Glow Plug 6 (L5P)

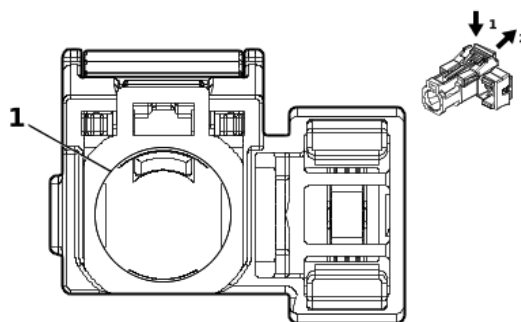

6166047

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13551815
 Service Connector: Service by Cable Assembly - See Part Catalog
 Description: 1-Way F RK4 Receptacle(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

E12F Glow Plug 6 (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	GY / VT	1586	Glow Plug 6 Control	I	—

E12G Glow Plug 7 (L5P)

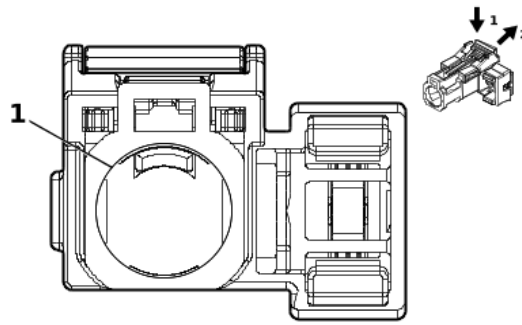

6166047

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13551815
 Service Connector: Service by Cable Assembly - See Part Catalog
 Description: 1-Way F RK4 Receptacle(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

E12G Glow Plug 7 (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	WH / BK	1587	Glow Plug 7 Control	I	—

E12H Glow Plug 8 (L5P)

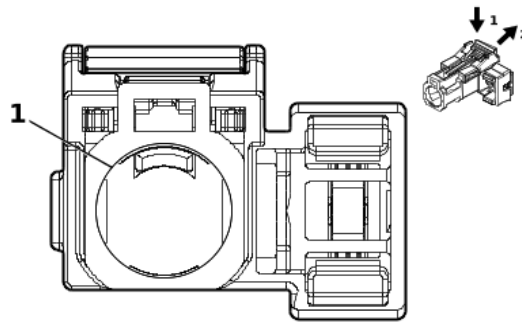

6166047

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13551815
 Service Connector: Service by Cable Assembly - See Part Catalog
 Description: 1-Way F RK4 Receptacle(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

E12H Glow Plug 8 (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	WH / BU	1588	Glow Plug 8 Control	I	—

E13LA Front Headlamp - Left

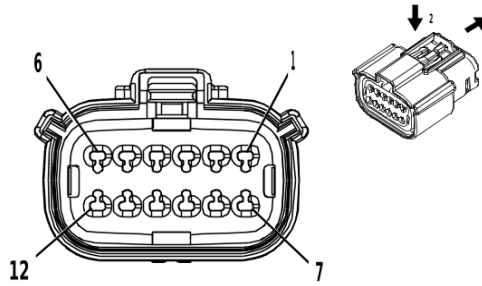

2871860

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 33362189
 Service Connector: 19352907
 Description: 12-Way F 1.5 MX Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19368973	J-35616-2A (GY)	J-38125-217

E13LA Front Headlamp - Left

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	1	BK	150	Ground	I	—
2	1.5	RD / WH	640	Battery Positive Voltage	I	—
3	0.5	YE	712	Left Headlamp Low Beam Control	I	—
4	0.5	WH	711	Left Headlamp High Beam Control	I	—
5	0.35	GY / BU	7538	Left Front DRL Control	I	—
6	0.5	WH / YE	1254	Left Front Park Lamp Control	I	—
7	0.5	BU / WH	1314	Left Front Turn Signal Lamp Control	I	—
8	0.35	VT / BK	6568	Front Turn Signal Lamp Feedback Signal	I	—
9	0.5	YE / GN	2024	Animation Lighting Control	I	—
10	0.5	GN / VT	1315	Right Front Turn Signal Lamp Control	I	—
11 - 12	—	—	—	Not Occupied	—	—

E13RA Front Headlamp - Right

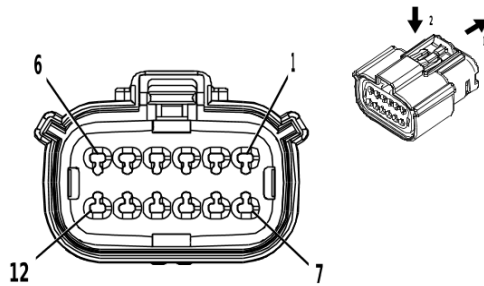

2871860

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 33362189
 Service Connector: 19352907
 Description: 12-Way F 1.5 MX Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19368973	J-35616-2A (GY)	J-38125-217

E13RA Front Headlamp - Right

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	1	BK	650	Ground	I	—
2	1.5	RD / YE	740	Battery Positive Voltage	I	—
3	0.5	YE	312	Right Headlamp Low Beam Control	I	—
4	0.5	WH	311	Right Headlamp High Beam Control	I	—
5	0.35	BU / BN	7539	Right Front DRL Control	I	—
6	0.5	BU / GN	1253	Right Front Park Lamp Control	I	—
7	0.5	GN / VT	1315	Right Front Turn Signal Lamp Control	I	—
8	0.35	WH / YE	7545	Right Front Turn Signal Lamp Feedback Signal	I	—
9	0.5	YE / GN	2024	Animation Lighting Control	I	—
10	0.5	BU / WH	1314	Left Front Turn Signal Lamp Control	I	—
11 - 12	—	—	—	Not Occupied	—	—

E14A Front Seat Back Heater - Driver

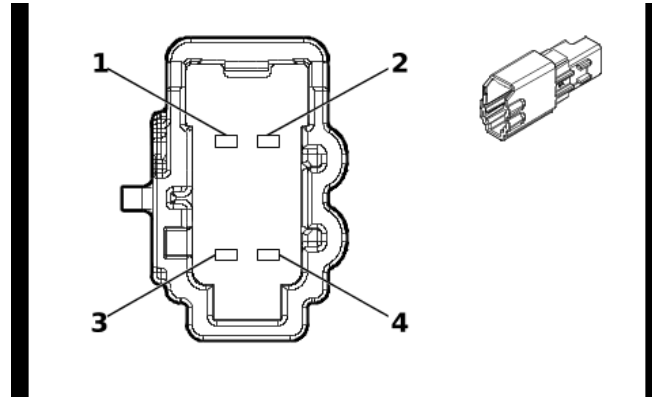

5423974

Connector Part Information

Harness Type: Front Seat Wiring Harness - Driver
 OEM Connector: 6098-9049
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way M 1.2 MCON Series(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-17 (L-GN)	No Tool Required

E14A Front Seat Back Heater - Driver

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BN	2432	Driver Seat Back Heating Element Control	I	—
2	0.5	BU	2425	Driver Seat Back Heating Temperature Sensor Signal	I	—
3	0.5	BK / YE	2080	Driver Heated Seat Thermistor Low Reference	I	—
4	0.75	BN / BK	2078	Driver Seat Heating Element Low Reference	I	—

E14B Front Seat Cushion Heater - Driver

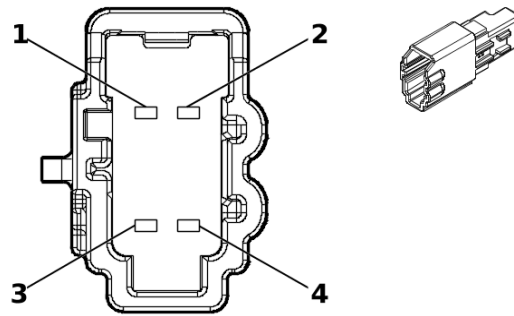

5360963

Connector Part Information

Harness Type: Front Seat Wiring Harness - Driver
 OEM Connector: 6098-9046
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way M 1.2 MCON Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-17 (L-GN)	No Tool Required

E14B Front Seat Cushion Heater - Driver

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BN / VT	2077	Driver Seat Heating Element Control	I	—
2	0.5	YE / GY	2079	Driver Seat Heating Temperature Sensor Signal	I	—
3	0.5	BK / YE	2080	Driver Heated Seat Thermistor Low Reference	I	—
4	0.75	BN / BK	2078	Driver Seat Heating Element Low Reference	I	—

E14C Front Seat Back Heater - Passenger (KA1)

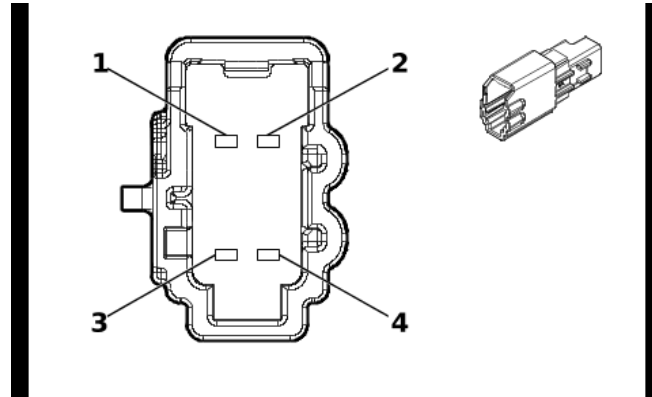

5423974

Connector Part Information

Harness Type: Front Seat Wiring Harness - Passenger
 OEM Connector: 6098-9049
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way M 1.2 MCON Series(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-17 (L-GN)	No Tool Required

E14C Front Seat Back Heater - Passenger (KA1)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	WH / BN	2481	Passenger Seat Back Heating Element Control	I	—
2	0.5	WH / BU	2436	Passenger Seat Back Heating Temperature Sensor Signal	I	—
3	0.5	BK / GN	2482	Passenger Heated Back Thermistor Low Reference	I	—
4	0.75	GY / BK	2480	Passenger Seat Heating Element Low Reference	I	—

E14D Front Seat Cushion Heater - Passenger (KA1)

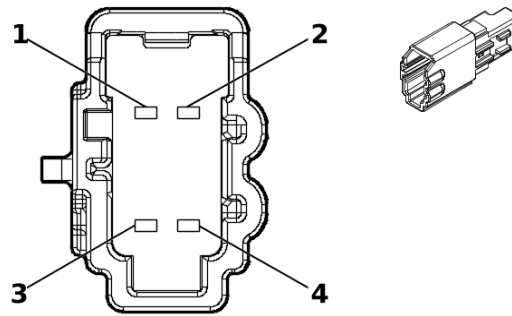

5360963

Connector Part Information

Harness Type: Front Seat Wiring Harness - Passenger
 OEM Connector: 6098-9046
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way M 1.2 MCON Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-17 (L-GN)	No Tool Required

E14D Front Seat Cushion Heater - Passenger (KA1)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BN / BU	2479	Passenger Seat Heating Element Control	I	—
2	0.5	WH / GY	2434	Passenger Seat Heating Temperature Sensor Signal	I	—
3	0.5	BK / GY	2435	Passenger Heated Seat Thermistor Low Reference	I	—
4	0.75	GY / BK	2480	Passenger Seat Heating Element Low Reference	I	—

E14F Rear Seat Cushion Heater - Left Rear (KA6)

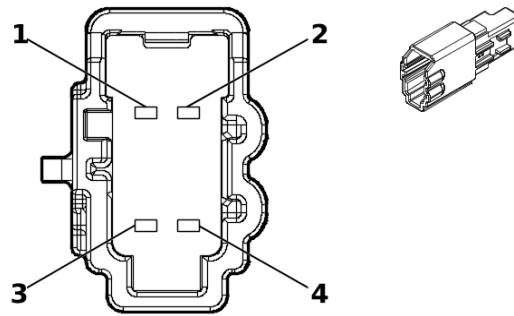

5360963

Connector Part Information

Harness Type: Rear Seat Heater Control Wiring Harness
 OEM Connector: 6098-9046
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way M 1.2 MCON Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-17 (L-GN)	No Tool Required

E14F Rear Seat Cushion Heater - Left Rear (KA6)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	GY	2294	Left Rear Seat Cushion Heating Element Control	I	—
2	0.75	WH / BU	7047	Left Rear Seat Cushion Temperature Sensor Signal	I	—
3	0.75	BU / WH	7048	Left Rear Cushion Thermistor Feedback Signal	I	—
4	0.75	BN / BK	2295	Left Rear Seat Cushion Heating Element Low Reference	I	—

E14H Rear Seat Cushion Heater - Right Rear (KA6)

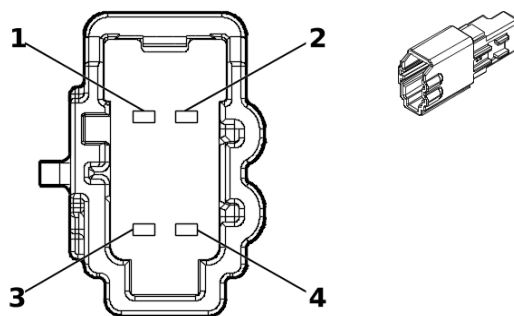

5360963

Connector Part Information

Harness Type: Rear Seat Heater Control Wiring Harness
 OEM Connector: 6098-9046
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way M 1.2 MCON Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-17 (L-GN)	No Tool Required

E14H Rear Seat Cushion Heater - Right Rear (KA6)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	GN / BN	2296	Right Rear Seat Cushion Heating Element Control	I	—
2	0.75	YE / WH	7053	Right Rear Seat Cushion Temperature Sensor Signal	I	—
3	0.75	WH / BK	7054	Right Rear Cushion Thermistor Feedback Signal	I	—
4	0.75	GN / BK	2297	Right Rear Seat Cushion Heating Element Low Reference	I	—

E18 Rear Window Defogger Grid X1

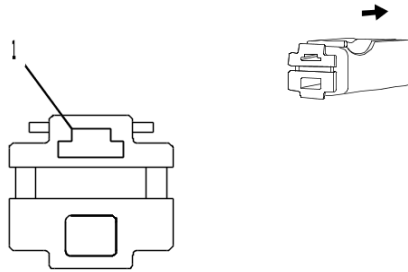

1413086

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 13511619
 Service Connector: 19367647
 Description: 1-Way F 250 Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-42 (RD)	No Tool Required

E18 Rear Window Defogger Grid X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	BN / VT	293	Rear Defogger Grid Control	I	—

E18 Rear Window Defogger Grid X2

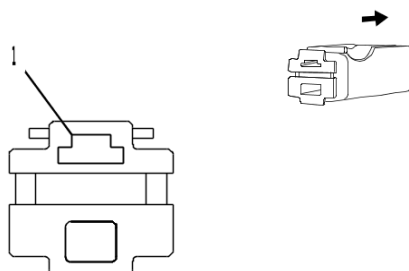

1413086

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 13511619
 Service Connector: 19367647
 Description: 1-Way F 250 Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-42 (RD)	No Tool Required

E18 Rear Window Defogger Grid X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	BK	1450	Ground	I	—

E28 Front Floor Console Compartment Lamp

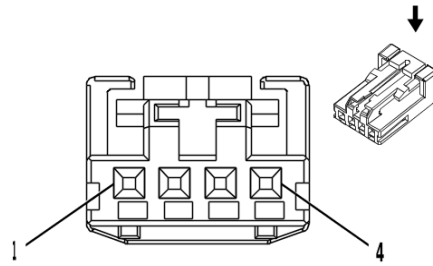

2717162

Connector Part Information

Harness Type: Front Floor Console Wiring Harness
 OEM Connector: 13969166
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way F 0.64 Micro-Quadlock Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

E28 Front Floor Console Compartment Lamp

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	BK	1350	Ground	I	—
2	—	—	—	Not Occupied	—	—
3	0.5	GN / VT	4786	Dome/Reading Lamp Enable Signal	I	—
4	—	—	—	Not Occupied	—	—

E29LF Front Fog Lamp - Left (T3U&VHU)

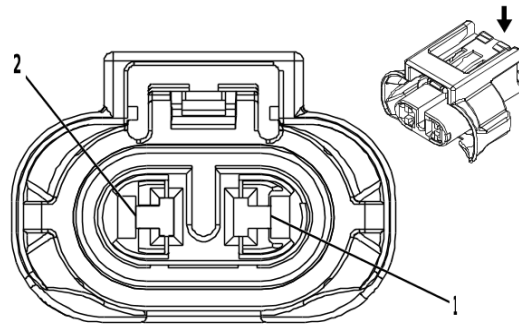

3404058

Connector Part Information

Harness Type: Front Object Alarm Sensor Wiring Harness
 OEM Connector: 13930730
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 2.8 APEX Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-4A (PU)	No Tool Required

E29LF Front Fog Lamp - Left (T3U&VHU)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN / GY	5061	Left Front Fog Lamp Control	I	—
2	0.5	BK	650	Ground	I	—

E29LF Front Fog Lamp - Left ((T3U & X88) - (Z88 - VHU))

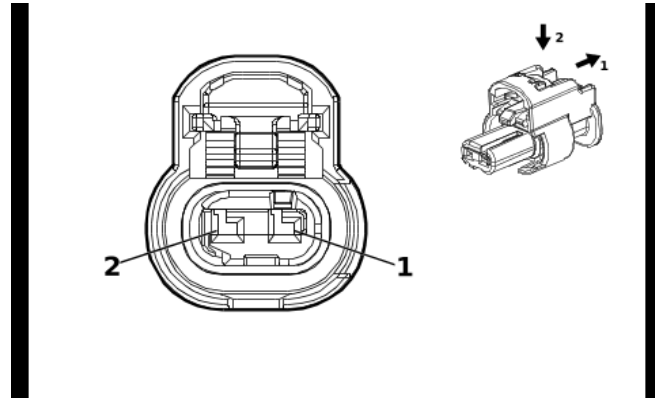

4649903

Connector Part Information

Harness Type: Front Object Alarm Sensor Wiring Harness
 OEM Connector: 33327048
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.2 MCON Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

E29LF Front Fog Lamp - Left ((T3U & X88) - (Z88 - VHU))

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BK	650	Ground	I	—
2	0.5	BN / GY	5061	Left Front Fog Lamp Control	I	—

E29RF Front Fog Lamp - Right (T3U&VHU)

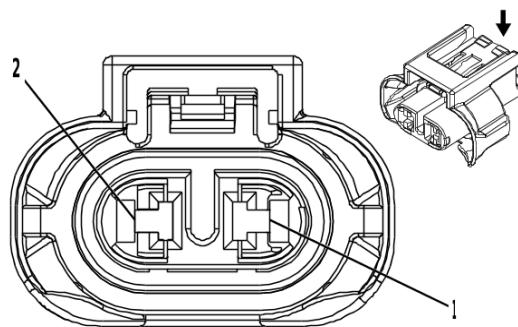

3404058

Connector Part Information

Harness Type: Front Object Alarm Sensor Wiring Harness
 OEM Connector: 13930730
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 2.8 APEX Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-4A (PU)	No Tool Required

E29RF Front Fog Lamp - Right (T3U&VHU)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN / GN	5062	Right Front Fog Lamp Control	I	—
2	0.5	BK	650	Ground	I	—

E29RF Front Fog Lamp - Right ((T3U & X88) - (Z88 - VHU))

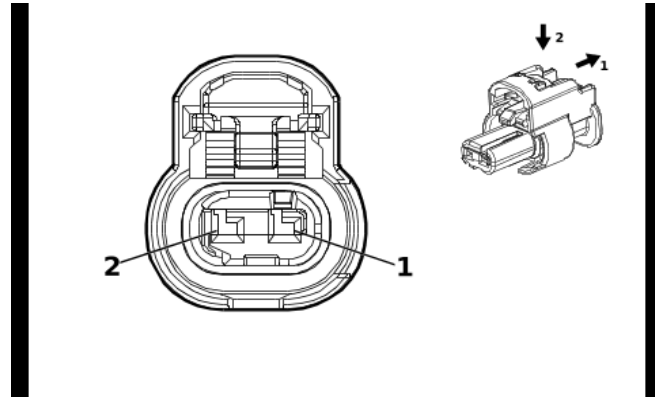

4649903

Connector Part Information

Harness Type: Front Object Alarm Sensor Wiring Harness
 OEM Connector: 33327048
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.2 MCON Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

E29RF Front Fog Lamp - Right ((T3U & X88) - (Z88 - VHU))

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BK	650	Ground	I	—
2	0.5	BN / GN	5062	Right Front Fog Lamp Control	I	—

E31L Sunshade Mirror Lamp - Left

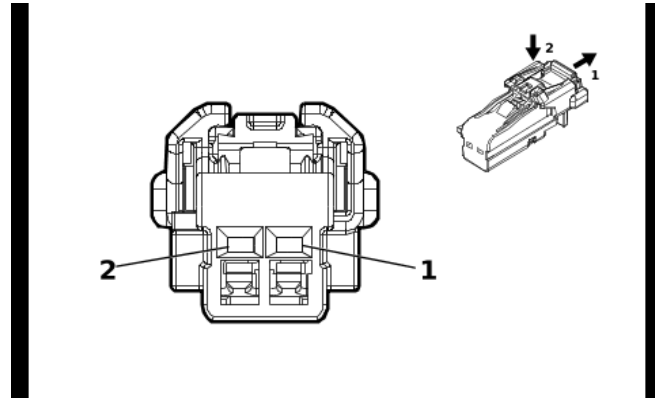

5377746

Connector Part Information

Harness Type: Dome Lamp Wiring Harness
 OEM Connector: 35327306
 Service Connector: 84867147
 Description: 2-Way F 1.2 MCON Series(BN)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

E31L Sunshade Mirror Lamp - Left

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	BU / GN	4785	Interior Lamp Overhead Enable Signal	I	—
2	0.5	BK	1050	Ground	I	—

E31R Sunshade Mirror Lamp - Right

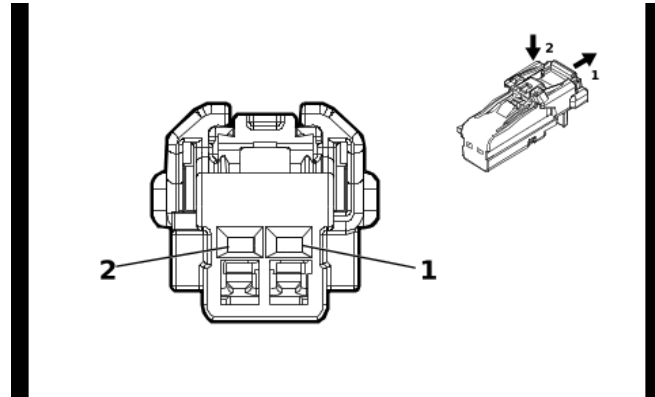

5377746

Connector Part Information

Harness Type: Dome Lamp Wiring Harness
 OEM Connector: 35327306
 Service Connector: 84867147
 Description: 2-Way F 1.2 MCON Series(BN)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

E31R Sunshade Mirror Lamp - Right

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	GY / WH	2369	Interior Lamp Overhead 2 Enable Signal	I	—
2	0.5	BK	1050	Ground	I	—

E33L Cargo Lamp - Left

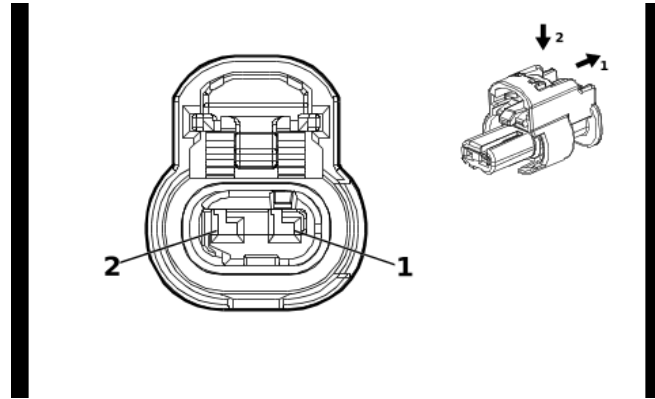

4649903

Connector Part Information

Harness Type: Tail Lamp Wiring Harness - Left
 OEM Connector: 13512365
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.2 MCON Series, Sealed(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required

E33L Cargo Lamp - Left

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BU	7762	Cargo Lamp Control	I	—
2	—	—	—	Not Occupied	—	—

E33LB Cargo Box Lamp Bulb - Left - Regular Cab

—

Connector Part Information

Harness Type: High Mount Stop Lamp Wiring Harness
 OEM Connector: 02075-01
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	Not Available	No Tool Required

E33LB Cargo Box Lamp Bulb - Left - Regular Cab

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	0.75	BN	1430	Exterior Courtesy Lamp Control	I	—
B	0.75	BK	1050	Ground	I	—

E33R Cargo Lamp - Right

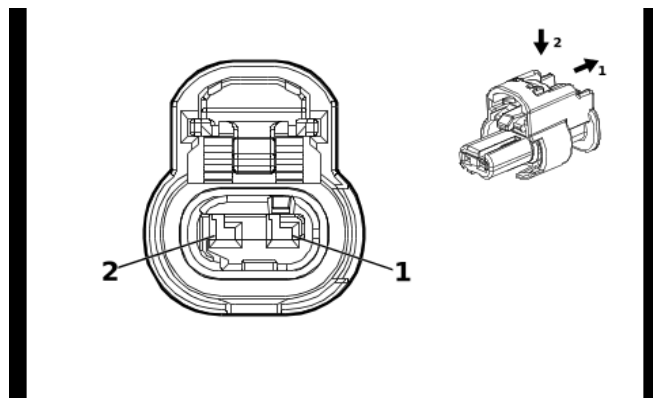

4649903

Connector Part Information

Harness Type: Tail Lamp Wiring Harness - Right
 OEM Connector: 13512365
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.2 MCON Series, Sealed(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required

E33R Cargo Lamp - Right

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BU	7762	Cargo Lamp Control	I	—
2	—	—	—	Not Occupied	—	—

E33RB Cargo Box Lamp Bulb - Right - Regular Cab

—

Connector Part Information

Harness Type: High Mount Stop Lamp Wiring Harness
 OEM Connector: 02075-01
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	Not Available	No Tool Required

E33RB Cargo Box Lamp Bulb - Right - Regular Cab

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	0.75	BK	1050	Ground	I	—
	0.75	BK	1050	Ground		—
B	0.75	BN	1430	Exterior Courtesy Lamp Control	I	—
	0.75	BN	1430	Exterior Courtesy Lamp Control		—

E33TH Rear Closure Auxiliary Signal Lamp

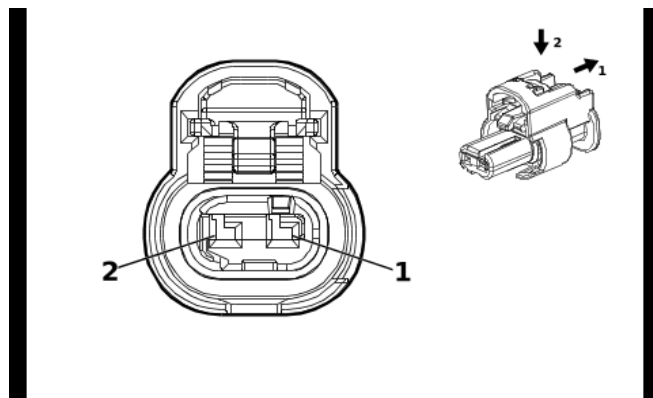

4649903

Connector Part Information

Harness Type: Endgate Wiring Harness
 OEM Connector: 33327048
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.2 MCON Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

E33TH Rear Closure Auxiliary Signal Lamp

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH / VT	1430	Exterior Courtesy Lamp Control	I	—
2	0.5	BK	1850	Ground	I	—

E37SMC Rear Seat Position Center Reading and Courtesy Lamp

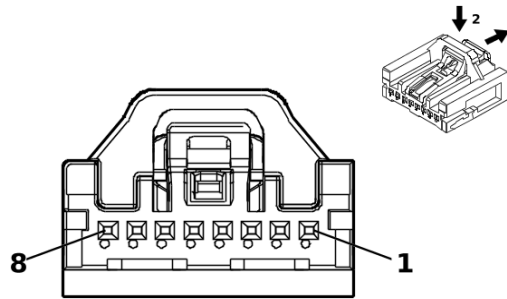

5200269

Connector Part Information

Harness Type: Dome Lamp Wiring Harness
 OEM Connector: 35068228
 Service Connector: 84769201
 Description: 8-Way F Mini 50 Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	EL-35616-58 (BK)	No Tool Required

E37SMC Rear Seat Position Center Reading and Courtesy Lamp

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	GN / YE	2903	Row 2 Dome Reading Lamp Interior Lamp Control	I	—
2	0.35	BN / BU	2905	Row 2 Dome Reading Lamp 2 Interior Lamp Control	I	—
3	0.35	BK	1050	Ground	I	—
4	0.35	WH / BN	2904	Row 2 Dome Reading Lamp Switch Signal	I	—
5	0.35	VT / GY	2906	Row 2 Dome Reading Lamp 2 Switch Signal	I	—
6 - 8	—	—	—	Not Occupied	—	—

E40 Air Heater X1 (C32)

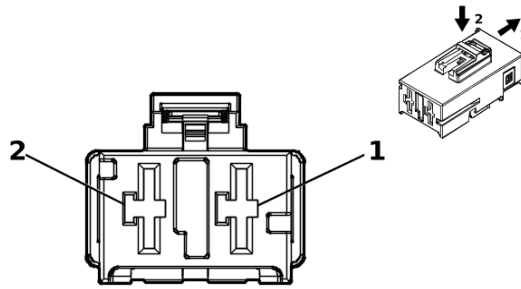

5187955

Connector Part Information

Harness Type: Auxiliary Heater Wiring Harness
 OEM Connector: 13525311
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 9.5 MCON-LL Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

E40 Air Heater X1 (C32)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	—	Not Occupied	—	—
2	10	RD / GY	642	Battery Positive Voltage	I	—

E40 Air Heater X2 (C32)

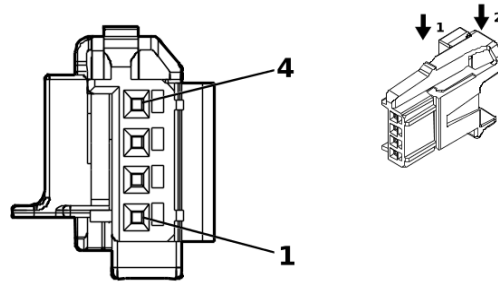

5191926

Connector Part Information

Harness Type: Heater Wiring Harness
 OEM Connector: 2294399-1
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way F 0.64 Micro-Quadlock Series(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

E40 Air Heater X2 (C32)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	—	Not Occupied	—	—
2	0.35	VT / BK	339	Run/Crank Ignition 1 Voltage	I	—
3	0.35	BU / VT	2852	Body Control Module LIN Bus 6	I	—
4	0.35	BK	1050	Ground	I	—

E40 Air Heater X3 (C32)

Connector Part Information

Harness Type: Auxiliary Heater Wiring Harness

OEM Connector: 20000001

Service Connector: Service by Harness - See Part Catalog

Description: 1-Way


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

E40 Air Heater X3 (C32)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	10	BK	750	Ground	I	—

E42L Rear Body Structure Stop Lamp - Left (GF4 / GF9 / GFC / GFD / GRZ)

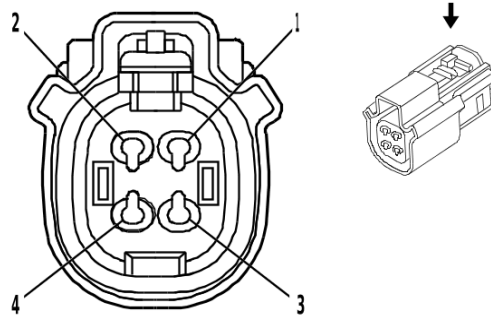

1960031

Connector Part Information

Harness Type: Tail Lamp Wiring Harness - Left
 OEM Connector: 33472-4006
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way F 1.5 MX Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required

E42L Rear Body Structure Stop Lamp - Left (GF4 / GF9 / GFC / GFD / GRZ)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BN	6993	Left Rear Park Lamp Control	I	—
2	0.75	RD	6567	Rear Turn Signal Lamp Feedback Signal	I	—
3	0.75	GN / GN	1334	Left Rear Turn Signal Lamp Control 2	I	—
4	0.75	BK	1951	Signal Ground	I	—

E42R Rear Body Structure Stop Lamp - Right (GF4 / GF9 / GFC / GFD / GRZ)

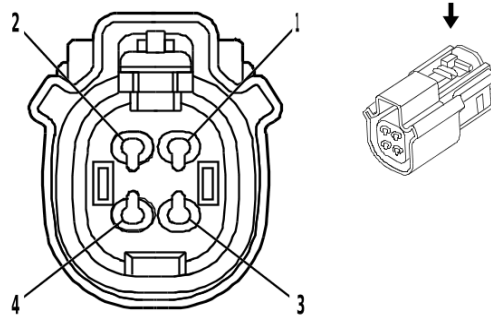

1960031

Connector Part Information

Harness Type: Tail Lamp Wiring Harness - Right
 OEM Connector: 33472-4006
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way F 1.5 MX Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required

E42R Rear Body Structure Stop Lamp - Right (GF4 / GF9 / GFC / GFD / GRZ)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BN / BN	6995	Right Rear Park Lamp Control	I	—
2	0.75	RD	7544	Right Rear Turn Signal Lamp Feedback Signal	I	—
3	0.75	GN	1335	Right Rear Turn Signal Lamp Control 2	I	—
4	0.75	BK	1850	Ground	I	—

E52 Reductant Heater 2 - Injector Supply Pipe (L5P)

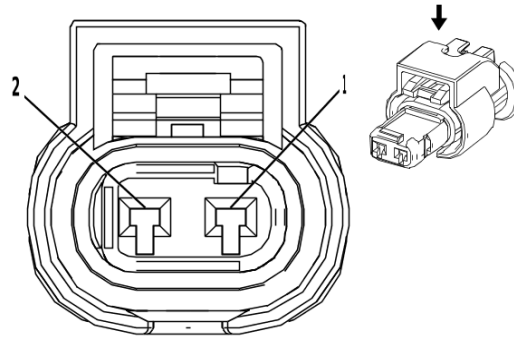

2474752

Connector Part Information

Harness Type: Emission Reduction Fluid Tank Reservoir Wire Harness
 OEM Connector: 13586143
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.2 MCON Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

E52 Reductant Heater 2 - Injector Supply Pipe (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	1	WH	3199	Diesel Exhaust Fluid Pressure Line Heater Control	I	—
2	1	BN	4319	Diesel Exhaust Fluid Line Heater Low Control	I	—

E63D Front Side Door Inside Handle Illumination Lamp - Left

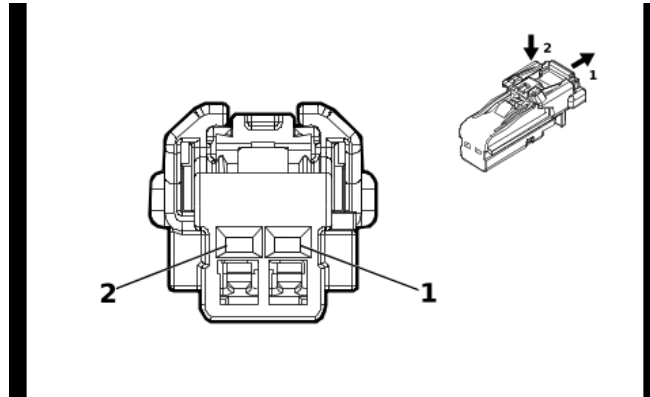

4115691

Connector Part Information

Harness Type: Front Side Door Door Lock Door Wiring Harness - Left
 OEM Connector: 35311666
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.2 MCON Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

E63D Front Side Door Inside Handle Illumination Lamp - Left

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GY / VT	2767	LED Ambient Lighting Control Left Front Door	I	—
2	0.5	BK	1550	Ground	I	—

E63P Front Side Door Inside Handle Illumination Lamp - Right

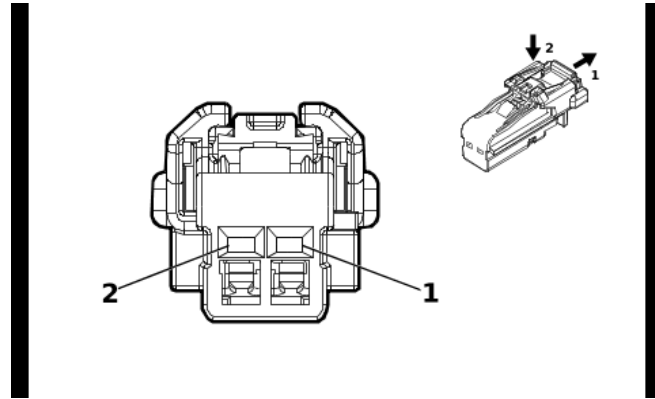

4115691

Connector Part Information

Harness Type: Front Side Door Door Lock Door Wiring Harness - Right
 OEM Connector: 35311666
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.2 MCON Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

E63P Front Side Door Inside Handle Illumination Lamp - Right

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH / BN	2768	LED Ambient Lighting Control Right Front Door	I	—
2	0.75	BK	1350	Ground	I	—

F101 Instrument Panel Airbag X1

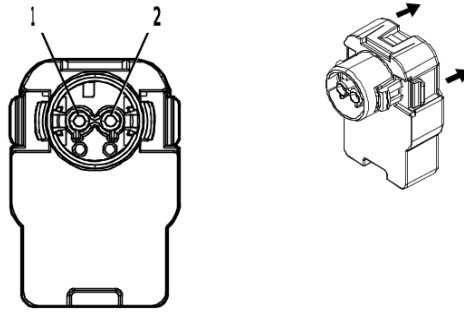

4823732

Connector Part Information

Harness Type: Instrument Panel Airbag Wiring Harness
 OEM Connector: 13530531
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

F101 Instrument Panel Airbag X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	YE / OG	3025	Passenger Instrument Panel Air Bag Stage 1 High Control	I	—
2	0.35	OG / WH	3024	Passenger Instrument Panel Air Bag Stage 1 Low Control	I	—

F101 Instrument Panel Airbag X2

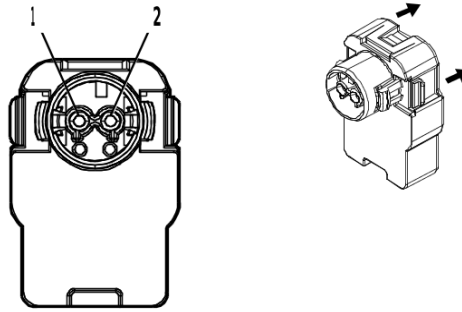

4772246

Connector Part Information

Harness Type: Instrument Panel Airbag Wiring Harness
 OEM Connector: 13530532
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

F101 Instrument Panel Airbag X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	GY / OG	3027	Passenger Instrument Panel Air Bag Stage 2 High Control	I	—
2	0.35	OG / VT	3026	Passenger Instrument Panel Air Bag Stage 2 Low Control	I	—

F105L Front and Rear Row Roof Rail Airbag - Left

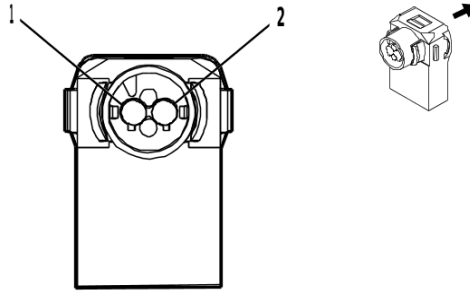

4679778

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 13516030
 Service Connector: 13545488
 Description: 2-Way F ABX-5 Series(GY with YE Cover)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

F105L Front and Rear Row Roof Rail Airbag - Left

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	OG / GN	5019	Left Front Roof Rail Air Bag High Control	I	—
2	0.5	VT / OG	5020	Left Front Roof Rail Air Bag Low Control	I	—

F105LF Front Row Roof Rail Airbag - Left

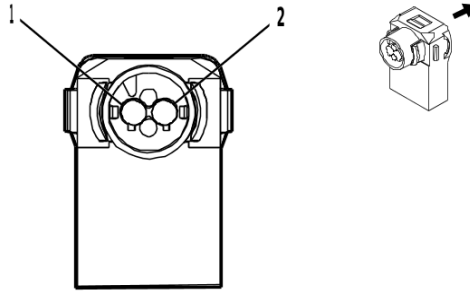

4679778

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 33345783
 Service Connector: 13545488
 Description: 2-Way F ABX-5 Series(GY with YE Cover)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

F105LF Front Row Roof Rail Airbag - Left

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	OG / GN	5019	Left Front Roof Rail Air Bag High Control	I	—
2	0.5	VT / OG	5020	Left Front Roof Rail Air Bag Low Control	I	—

F105R Front and Rear Row Roof Rail Airbag - Right

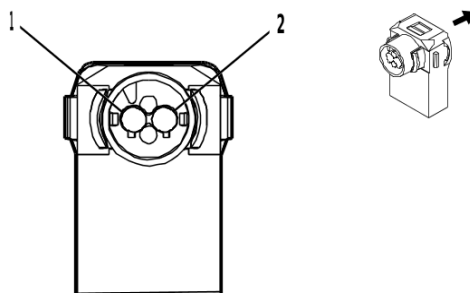

4679778

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 13516030
 Service Connector: 13545488
 Description: 2-Way F ABX-5 Series(GY with YE Cover)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

F105R Front and Rear Row Roof Rail Airbag - Right

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	OG / GY	5021	Right Front Roof Rail Air Bag High Control	I	—
2	0.5	WH / OG	5022	Right Front Roof Rail Air Bag Low Control	I	—

F105RF Front Row Roof Rail Airbag - Right

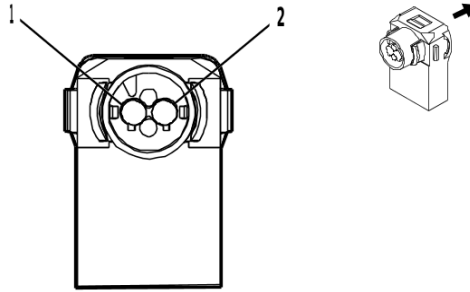

4679778

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 33345783
 Service Connector: 13545488
 Description: 2-Way F ABX-5 Series(GY with YE Cover)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

F105RF Front Row Roof Rail Airbag - Right

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	OG / GY	5021	Right Front Roof Rail Air Bag High Control	I	—
2	0.5	WH / OG	5022	Right Front Roof Rail Air Bag Low Control	I	—

F106D Front Seat Outboard Seat Back Airbag - Driver

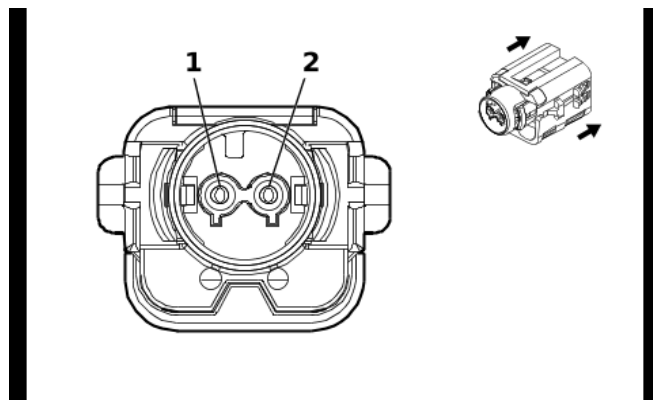

5499727

Connector Part Information

Harness Type: Front Seat Wiring Harness - Driver
 OEM Connector: 13535270
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F ABX-5 Series(PK with YE Cover)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

F106D Front Seat Outboard Seat Back Airbag - Driver

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	OG / BU	4962	Driver Seat Back Air Bag High Control	I	—
2	0.5	BK / OG	4963	Driver Seat Back Air Bag Low Control	I	—

F106P Front Seat Outboard Seat Back Airbag - Passenger

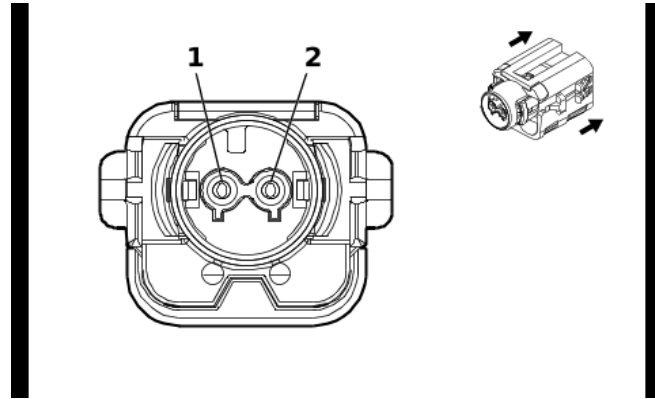

5499727

Connector Part Information

Harness Type: Front Seat Wiring Harness - Passenger
 OEM Connector: 13535270
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F ABX-5 Series(PK with YE Cover)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

F106P Front Seat Outboard Seat Back Airbag - Passenger

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	OG / GY	4956	Passenger Seat Back Air Bag High Control	I	—
2	0.5	BU / OG	4957	Passenger Seat Back Air Bag Low Control	I	—

F107 Steering Wheel Airbag X1 (NK5)

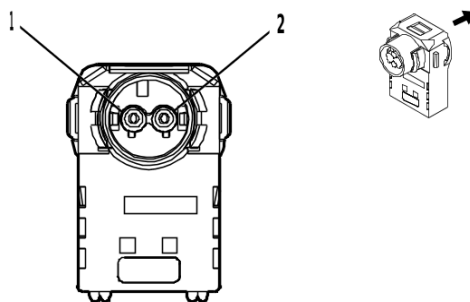

4231869

Connector Part Information

Harness Type: Steering Wheel Horn Switch Wiring Harness
 OEM Connector: 13516028
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F ABX-5 Series(PK with YE Cover)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-10 (GN)	No Tool Required

F107 Steering Wheel Airbag X1 (NK5)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	YE / VT	3021	Steering Wheel Air Bag Stage 1 High Control	I	—
2	0.5	BN / WH	3020	Steering Wheel Air Bag Stage 1 Low Control	I	—

F107 Steering Wheel Airbag X2 (NK5)

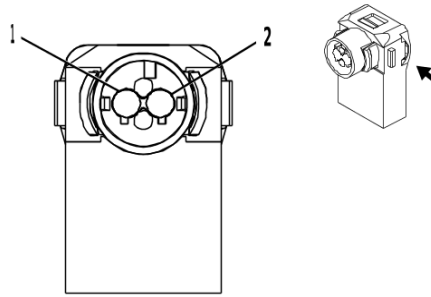

4241364

Connector Part Information

Harness Type: Steering Wheel Horn Switch Wiring Harness
 OEM Connector: 13516029
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F ABX-5 Series(PU with YE Cover)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-10 (GN)	No Tool Required

F107 Steering Wheel Airbag X2 (NK5)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	OG / GN	3023	Steering Wheel Air Bag Stage 2 High Control	I	—
2	0.5	WH / VT	3022	Steering Wheel Air Bag Stage 2 Low Control	I	—

F112D Front Seat Belt Retractor - Driver - Crew Cab and Double Cab

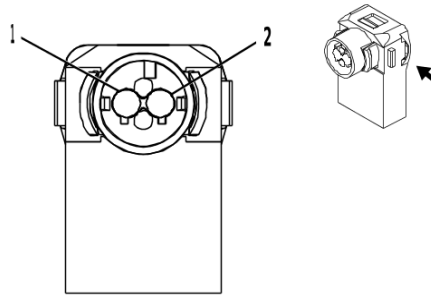

4241364

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 33345778
 Service Connector: 13545487
 Description: 2-Way F ABX-5 Series(PU with YE Cover)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

F112D Front Seat Belt Retractor - Driver - Crew Cab and Double Cab

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	OG / WH	3477	Driver Seat Belt Retractor Pretensioner High Control	I	—
2	0.5	VT / OG	3478	Driver Seat Belt Retractor Pretensioner Low Control	I	—

F112D Front Seat Belt Retractor - Driver - Regular Cab

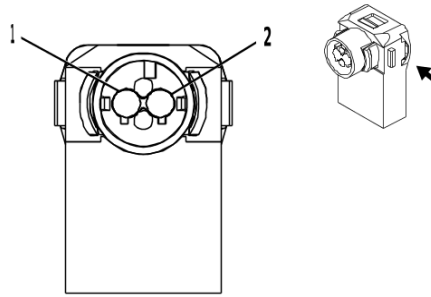

4241364

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 33345778
 Service Connector: 13545487
 Description: 2-Way F ABX-5 Series(PU with YE Cover)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

F112D Front Seat Belt Retractor - Driver - Regular Cab

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	OG / WH	3477	Driver Seat Belt Retractor Pretensioner High Control	I	—
2	0.5	VT / OG	3478	Driver Seat Belt Retractor Pretensioner Low Control	I	—

F112P Front Seat Belt Retractor - Passenger - Crew Cab and Double Cab

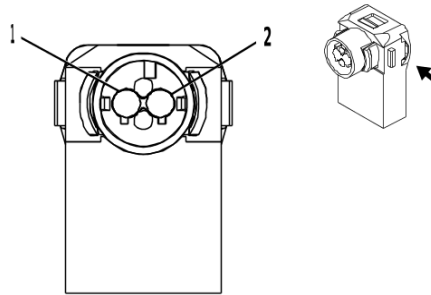

4241364

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 33345778
 Service Connector: 13545487
 Description: 2-Way F ABX-5 Series(PU with YE Cover)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

F112P Front Seat Belt Retractor - Passenger - Crew Cab and Double Cab

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	OG / GN	3475	Passenger Seat Belt Retractor Pretensioner High Control	I	—
2	0.5	WH / OG	3476	Passenger Seat Belt Retractor Pretensioner Low Control	I	—

F112P Front Seat Belt Retractor - Passenger - Regular Cab

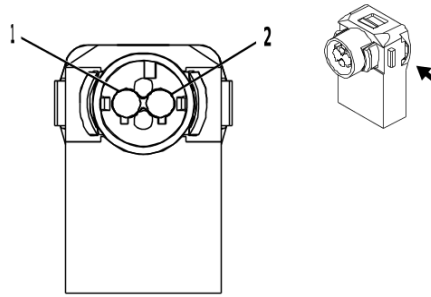

4241364

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 33345778
 Service Connector: 13545487
 Description: 2-Way F ABX-5 Series(PU with YE Cover)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

F112P Front Seat Belt Retractor - Passenger - Regular Cab

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	OG / GN	3475	Passenger Seat Belt Retractor Pretensioner High Control	I	—
2	0.5	WH / OG	3476	Passenger Seat Belt Retractor Pretensioner Low Control	I	—

F113D Front Seat Belt Anchor Plate Tensioner - Driver

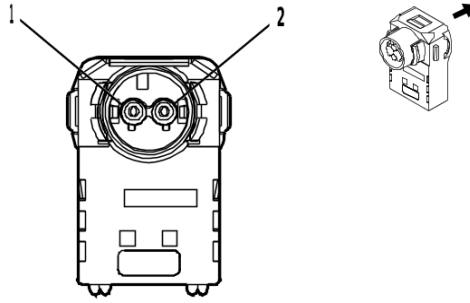

4231869

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 33345777
 Service Connector: 13545486
 Description: 2-Way F ABX-5 Series(PK with YE Cover)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

F113D Front Seat Belt Anchor Plate Tensioner - Driver

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	OG / YE	3481	Driver Seat Belt Anchor Pretensioner High Control	I	—
2	0.5	VT / OG	3482	Driver Seat Belt Anchor Pretensioner Low Control	I	—

F113P Front Seat Belt Anchor Plate Tensioner - Passenger

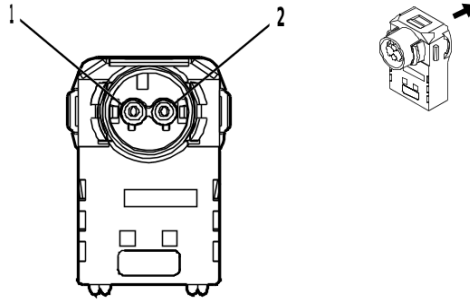

4231869

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 33345777
 Service Connector: 13545486
 Description: 2-Way F ABX-5 Series(PK with YE Cover)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

F113P Front Seat Belt Anchor Plate Tensioner - Passenger

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	OG / BN	3479	Passenger Seat Belt Anchor Pretensioner High Control	I	—
2	0.5	GY / OG	3480	Passenger Seat Belt Anchor Pretensioner Low Control	I	—

G12AX Fuel Pump - Auxiliary (L5P)

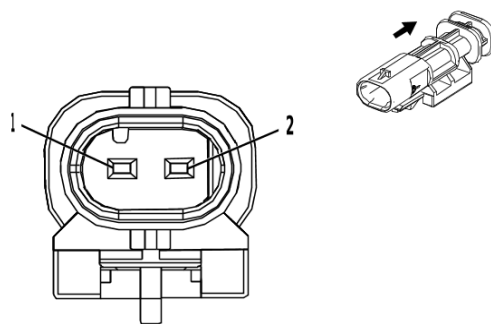

2474755

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 33207247
 Service Connector: 85533165
 Description: 2-Way M 1.2 MCON Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-13 (BU)	No Tool Required

G12AX Fuel Pump - Auxiliary (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	1	BU / GN	2120	Secondary Fuel Pump Control	I	—
2	1	BK / GN	1580	Fuel Pump Low Reference	I	—

G13 Generator X1 (L5P)

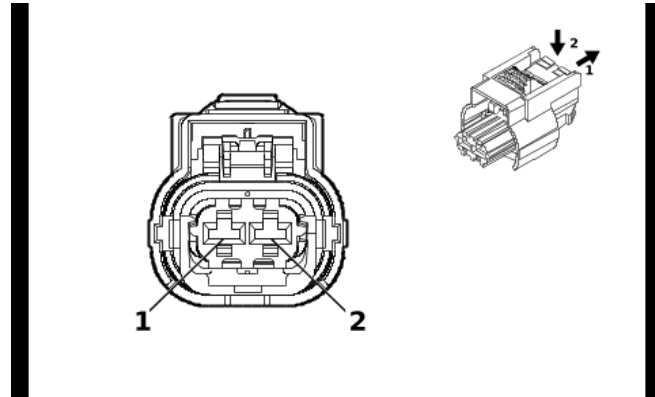

4992524

Connector Part Information

Harness Type: Engine Wiring Harness Chassis
 OEM Connector: 35182447
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 2.8 MCP Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-4A (PU)	No Tool Required

G13 Generator X1 (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN	25	Charge Indicator Control	I	—
2	0.5	GY	23	Generator Field Duty Cycle Signal	I	—

G13 Generator X1 (L8T)

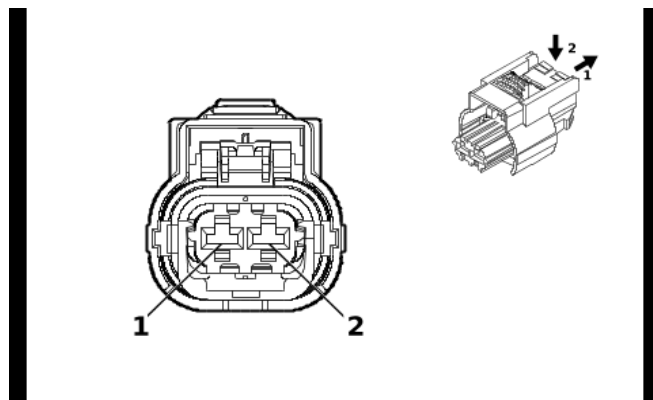

4992524

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 35182447
 Service Connector: 84941154
 Description: 2-Way F 2.8 MCP Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required

G13 Generator X1 (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN	25	Charge Indicator Control	I	—
2	0.5	GY	23	Generator Field Duty Cycle Signal	I	—

G13 Generator X1 (VYU)

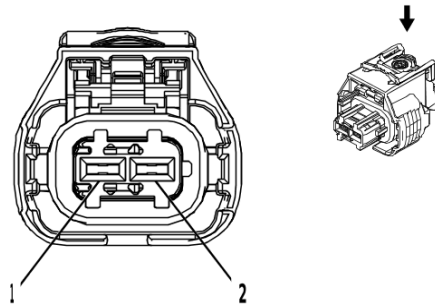

2577394

Connector Part Information

Harness Type: Accessory Wiring Harness
 OEM Connector: 13930085
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 2.8 Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required

G13 Generator X1 (VYU)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN	25	Charge Indicator Control	I	—
2	0.5	GY	23	Generator Field Duty Cycle Signal	I	—

G13 Generator X2

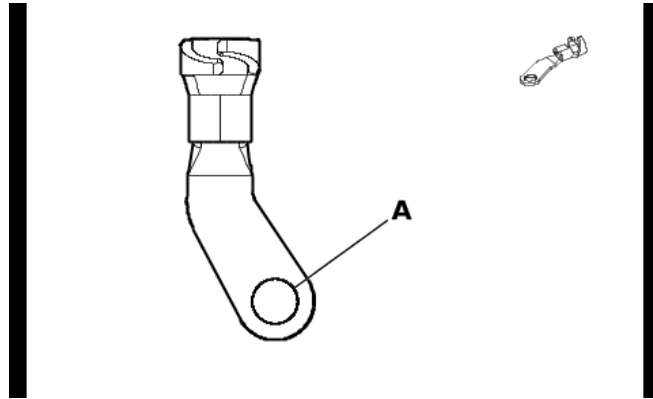

5911279

Connector Part Information

Harness Type: Starter Solenoid Cable
 OEM Connector: 84238913
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way Ring Terminal


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

G13 Generator X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	35	RD / BU	42	Battery Positive Voltage	I	—

G13A Auxiliary Generator X1 (L5P)

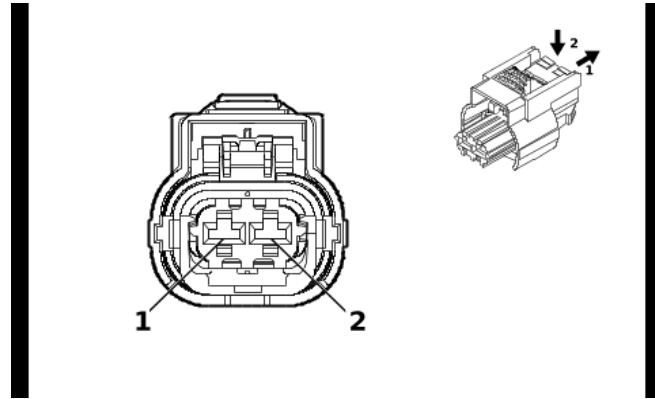

4992524

Connector Part Information

Harness Type: Engine Wiring Harness Chassis
 OEM Connector: 35182447
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 2.8 MCP Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required

G13A Auxiliary Generator X1 (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN	25	Charge Indicator Control	I	—
2	0.5	GY	23	Generator Field Duty Cycle Signal	I	—

G13A Auxiliary Generator X1 (L8T)

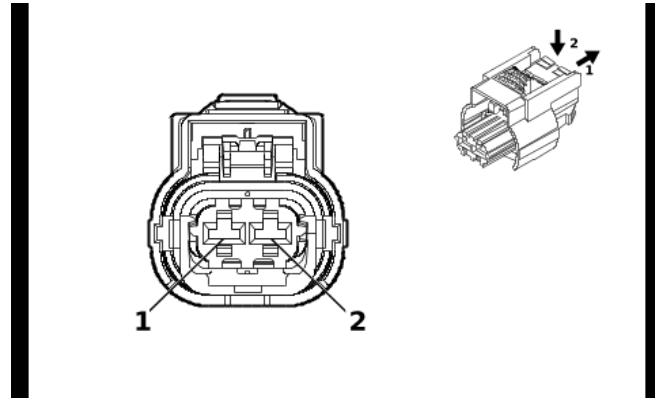

4992524

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 35182447
 Service Connector: 84941154
 Description: 2-Way F 2.8 MCP Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required

G13A Auxiliary Generator X1 (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN	25	Charge Indicator Control	I	—
2	0.5	GY	23	Generator Field Duty Cycle Signal	I	—

G13A Auxiliary Generator X1 (VYU)

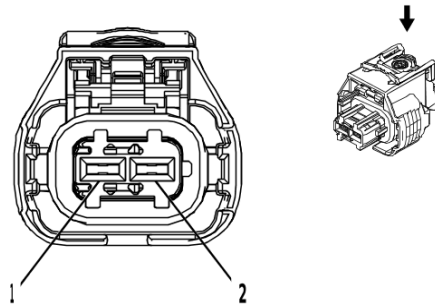

2577394

Connector Part Information

Harness Type: Accessory Wiring Harness
 OEM Connector: 13930085
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 2.8 Series, Sealed(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required

G13A Auxiliary Generator X1 (VYU)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN	25	Charge Indicator Control	I	—
2	0.5	GY	23	Generator Field Duty Cycle Signal	I	—

G13A Auxiliary Generator X2 (KHF)

Connector Part Information

Harness Type: Right Side Marker Lamp Harness
 OEM Connector: 84223343
 Service Connector: Not Available
 Description: 1-Way


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

G13A Auxiliary Generator X2 (KHF)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	—	RD / YE	2	Battery Positive Voltage	I	—

G18 Fuel Pump - High Pressure (L8T)

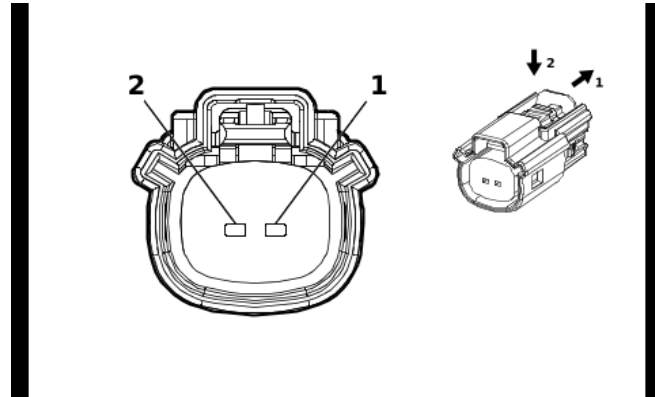

2474713

Connector Part Information

Harness Type: Fuel Injector Wiring Harness - Right
 OEM Connector: 33471-0206
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.5 Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required

G18 Fuel Pump - High Pressure (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.8	VT / BK	7300	High Pressure Fuel Pump Low Control	I	—
2	0.8	YE	7301	High Pressure Fuel Pump High Control	I	—

G24 Windshield Washer Pump

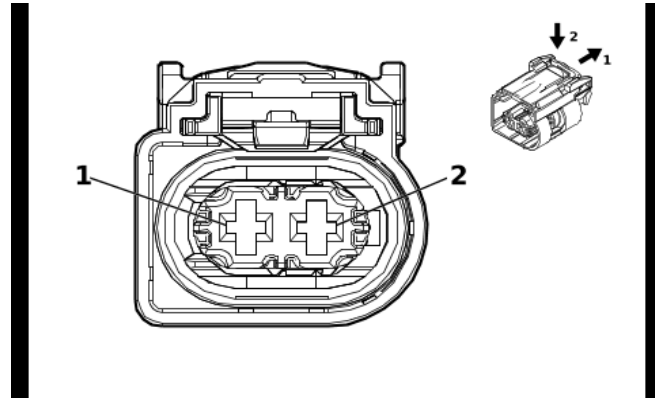

5580410

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 35459954
 Service Connector: 85005016
 Description: 2-Way F 2.8 MCP Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-4A (PU)	No Tool Required

G24 Windshield Washer Pump

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	GY / VT	228	Windshield Washer Pump Control	I	—
2	0.75	BK	150	Ground	I	—

G34 Evaporative Emission System Leak Detection Pump

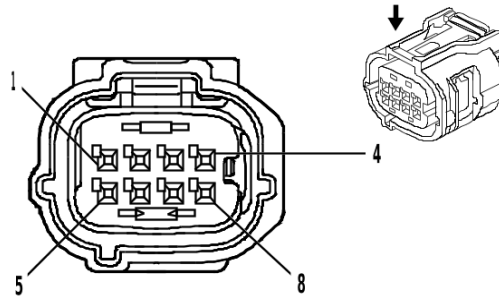

2042489

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 13524142
 Service Connector: 19352210
 Description: 8-Way F TS Series, Sealed(D-GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

G34 Evaporative Emission System Leak Detection Pump

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH / GN	332	Evaporative Leak Check Switching Valve Control	I	—
2	—	—	—	Not Occupied	—	—
3	0.5	VT / BU	5293	Powertrain Main Relay Fused Supply Voltage 4	I	—
4	0.5	VT / WH	338	Evaporative Leak Check Pump Motor Control	I	—
5	0.5	VT / BU	5293	Powertrain Main Relay Fused Supply Voltage 4	I	—
6	0.5	GN / RD	69	Evaporative Leak Check Tank Vapor Pressure Sensor Voltage Reference	I	—
7	0.5	YE / BU	316	Evaporative Leak Check Tank Vapor Pressure Signal	I	—
8	0.5	BK / GN	54	Evaporative Leak Check Tank Vapor Pressure Sensor Low Reference	I	—

K4 Running Board Control Module X1

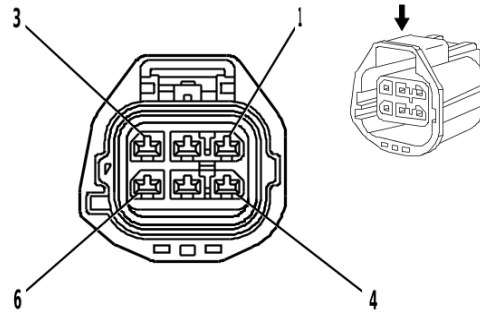

1420587

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 33334914
 Service Connector: 19368306
 Description: 6-Way F 2.8 Series, Sealed(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required

K4 Running Board Control Module X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	RD / WH	1040	Battery Positive Voltage	I	—
2	2	GY	7472	Left Running Board Step Motor Control Retract	I	—
3	2	BU	7470	Right Running Board Step Motor Control Extend	I	—
4	2.5	BK / WH	1151	Signal Ground	I	—
5	2	WH / BN	7471	Left Running Board Step Motor Control Extend	I	—
6	2	GN	7469	Right Left Running Board Step Motor Control Retract	I	—

K4 Running Board Control Module X2

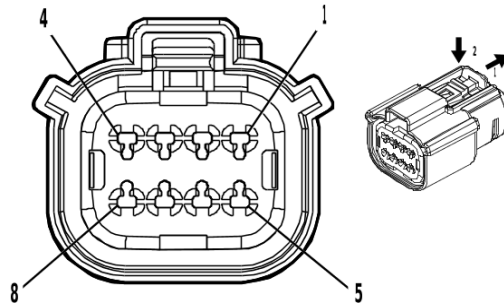

4846407

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 35037827
 Service Connector: 84928314
 Description: 8-Way F 1.5 MX Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required

K4 Running Board Control Module X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH	4986	AUTOSAR CAN Bus [-] 1 Serial Data	I	—
2	0.5	WH	4986	AUTOSAR CAN Bus [-] 1 Serial Data	I	—
3	0.5	BU	4987	AUTOSAR CAN Bus [+] 1 Serial Data	I	—
4	—	—	—	Not Occupied	—	—
5	0.5	BU	4987	AUTOSAR CAN Bus [+] 1 Serial Data	I	—
6	0.5	WH	4986	AUTOSAR CAN Bus [-] 1 Serial Data	I	—
7	0.5	BU	4987	AUTOSAR CAN Bus [+] 1 Serial Data	I	—
8	—	—	—	Not Occupied	—	—

K4 Running Board Control Module X3

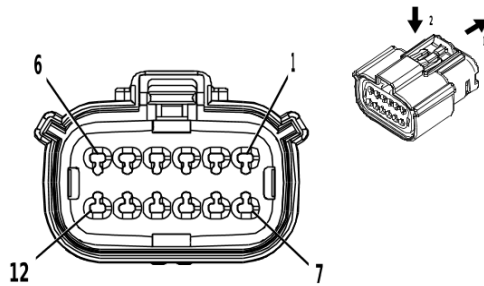

2871860

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 35435906
 Service Connector: 19352907
 Description: 12-Way F 1.5 MX Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19368973	J-35616-2A (GY)	J-38125-217

K4 Running Board Control Module X3

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GN / RD	7464	Right Running Board Step Motor Hall Sensor 5V Reference	I	—
2	0.5	VT	7465	Right Running Board Step Motor Hall Sensor Signal	I	—
3	0.5	YE / BK	7463	Right Running Board Step Motor Hall Sensor Low Reference	I	—
4	0.5	BN	4748	Left Running Board Step Courtesy Lamp Control	I	—
5	0.5	GY / VT	4749	Right Running Board Step Courtesy Lamp Control	I	—
6	—	—	—	Not Occupied	—	—
7	0.5	VT / RD	7468	Left Running Board Step Motor Hall Sensor 5V Reference	I	—
8	0.5	YE	7467	Left Running Board Step Motor Hall Sensor Signal	I	—
9	0.5	YE / BN	7466	Left Running Board Step Motor Hall Sensor Low Reference	I	—
10 - 12	—	—	—	Not Occupied	—	—

K9 Body Control Module X1

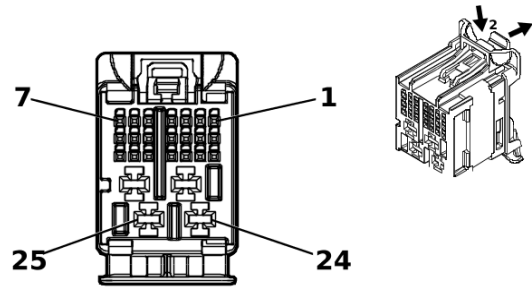

5203995

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 35392285
 Service Connector: 13534967
 Description: 25-Way F 0.5 MQS, 2.8 MCP Series(BK with GY Inner Connector)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19370262	EL-35616-58 (BK)	EL-38125-58
II	87814662	J-35616-4A (PU)	J-38125-557

K9 Body Control Module X1


Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	—	Not Occupied	—	—
2	0.35	BU / GN	4248	Cargo Lamp Indicator Control	I	—
3 - 4	—	—	—	Not Occupied	—	—
5	0.35	BU / GY	754	Blower Motor Speed Control	I	—
6	0.35	WH / YE	4634	HVAC Remote Enable Signal	I	—
7	0.35	WH / GY	7297	Minor Endgate High Relay Control	I	—
8 - 10	—	—	—	Not Occupied	—	—
11	0.35	GY / GN	4636	HVAC System Enable Signal	I	—
12	0.35	GY	728	Security Indicator Control	I	—
13	0.35	YE	6812	Out of Park Signal	I	—
14	0.35	BN / BU	4892	Auxiliary Battery Relay Control	I	—
15	0.35	GY	590	Driver Solar Sensor Signal	I	—
16	0.35	GY	6137	Air Conditioning Evaporator Temperature Sensor Signal	I	—
17	0.35	WH / BU	278	Ambient Light Sensor Signal	I	—
18	0.35	BU / WH	734	Inside Air Temperature Sensor Signal	I	—
19	0.35	GY	158	Cargo Lamp Switch Signal	I	—
20	0.35	GN / VT	2852	Body Control Module LIN Bus 6	I	—
21 - 22	—	—	—	Not Occupied	—	—
23	1	RD / GY	2140	Battery Positive Voltage	II	—
24	—	—	—	Not Occupied	—	—

7-298 Electrical Component and Inline Harness Connector End Views

K9 Body Control Module X1 (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
25	1	GN / YE	6840	Auxiliary Device 2 Switched Voltage	II	—

K9 Body Control Module X2

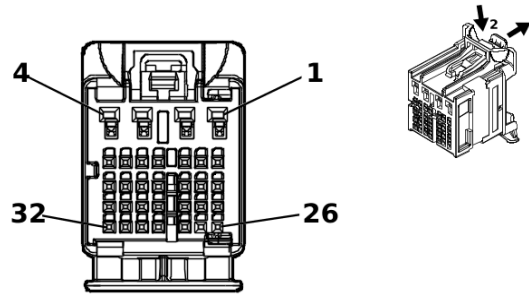

5204222

Connector Part Information

Harness Type: Instrument Panel Wiring Harness

OEM Connector: 35392289

Service Connector: 13534980

Description: 32-Way F 0.5 NANO, 1.2 MCON, stAK50h Series(PK with GY Inner Connector)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19370262	EL-35616-58 (BK)	EL-38125-58


K9 Body Control Module X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 4	—	—	—	Not Occupied	—	—
5	0.35	BU / GN	5723	Ignition Mode Switch Mode Voltage	I	—
6 - 8	—	—	—	Not Occupied	—	—
9	0.35	GN / BU	3738	Tap Up/Tap Down Switch Signal 2	I	—
10	0.35	WH / BN	2203	Enhanced Driver Mode 2 Switch Signal	I	—
11	0.35	GY	1198	Endgate Release Switch Analog Signal Interior	I	—
12	0.35	YE / BU	1714	Windshield Wiper Switch Low Signal	I	—
13	0.35	GY / GN	5737	Distance Sensing Cruise Control Gap Up/Down Switch Signal	I	—
14	0.35	BN / GN	1884	Cruise Control Set/Coast/Resume/Accelerate Switch Signal	I	—
15	—	—	—	Not Occupied	—	—
16	0.35	BN / BK	5720	Ignition Mode Switch Accessory LED Signal	I	—
17	—	—	—	Not Occupied	—	—
18	0.35	YE / BU	2912	Driver Mode 2 Indicator Control	I	—
19	0.35	WH / VT	103	Headlamp Switch On Signal	I	—
20	0.35	GN / GY	13	Headlamp Switch Park Lamp Signal	I	—
21	0.35	GN / BN	306	Headlamp Switch Off Signal	I	—
22	0.35	GY	4989	Driver Mode 2 Switch Signal	I	—
23	0.35	VT / BU	2916	Right Turn Signal Switch Signal	I	—
24	—	—	—	Not Occupied	—	—
25	0.35	BK / GY	6009	Windshield Wiper Switch Low Reference	I	—
26	0.35	WH / BK	94	Windshield Washer Switch Signal	I	—

7-300 Electrical Component and Inline Harness Connector End Views**K9 Body Control Module X2 (cont'd)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
27	0.35	YE / BN	307	Headlamp Switch Flash Signal	I	—
28	0.35	GN / WH	3287	Horn Switch Signal	I	—
29	0.35	WH / GN	2915	Left Turn Signal Switch Signal	I	—
30	0.35	BK / YE	407	Sensor Low Reference	I	—
31	0.35	GN / WH	111	Hazard Warning Switch Signal	I	—
32	0.35	WH	524	High Beam Select Switch High Beam Signal	I	—

K9 Body Control Module X3

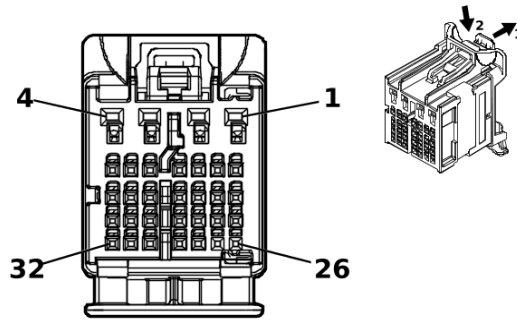

5203925

Connector Part Information

Harness Type: Instrument Panel Wiring Harness

OEM Connector: 35392288

Service Connector: 13534977

Description: 32-Way F 0.5 NANO, 1.2 MCON, stAK50h Series(BU with GY Inner Connector)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19370262	EL-35616-58 (BK)	EL-38125-58
II	84729890	J-35616-12 (BU)	J-38125-215A


K9 Body Control Module X3

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 2	—	—	—	Not Occupied	—	—
3	0.35	GN / VT	4786	Dome/Reading Lamp Enable Signal	II	—
4 - 6	—	—	—	Not Occupied	—	—
7	0.35	WH / BN	7555	Headlamp Switch Signal	I	—
8 - 9	—	—	—	Not Occupied	—	—
10	0.35	GN / BK	2858	Body Control Module LIN Bus 12	I	—
11	—	—	—	Not Occupied	—	—
12	0.35	YE / WH	816	Brake Transmission Shift Interlock Solenoid Actuator Control	I	—
13	0.35	WH	3152	Lane Departure Warning Indicator Control	I	—
14	0.35	GN / BN	5852	Rear Parking Assist Disable LED Signal	I	—
15	—	—	—	Not Occupied	—	—
16	0.35	GN / BU	761	Blower Speed Feedback Signal	I	—
17	0.35	WH / VT	5905	Key Capture/Column Lock Shift Position Signal	I	—
18	0.35	YE	7556	Headlamp Switch Reference	I	—
19	0.35	BU / BK	5719	Ignition Mode Switch Start LED Signal	I	—
20	—	—	—	Not Occupied	—	—
21	0.35	BN	7291	Major Endgate Release Switch Signal Interior	I	—
22 - 23	—	—	—	Not Occupied	—	—
24	0.35	WH / BU	3691	Trailer Brake Apply Signal	I	—
25	0.35	BU / GY	4990	Driver Mode 1 Switch Signal	I	—

7-302 Electrical Component and Inline Harness Connector End Views**K9 Body Control Module X3 (cont'd)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
26	0.35	GY / BN	3904	Auto High Beam Assist Switch Signal	I	—
27	0.35	GY / WH	3153	Lane Departure Warning Disable Switch Signal	I	—
28 - 29	—	—	—	Not Occupied	—	—
30	0.35	BU / YE	6844	ABS/Traction Control Hill Descent Control Switch Signal	I	—
31	0.35	GY / GN	2555	Rear Parking Assist Disable Signal	I	—
32	—	—	—	Not Occupied	—	—

K9 Body Control Module X4

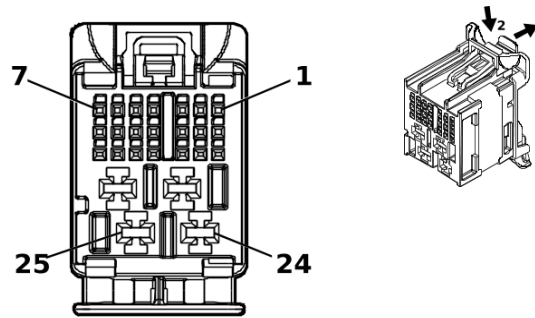

5203893

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 35392284
 Service Connector: 13534970
 Description: 25-Way F 0.5 MQS, 2.8 MCP Series(GY)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19370262	EL-35616-58 (BK)	EL-38125-58
II	87814662	J-35616-4A (PU)	J-38125-557

K9 Body Control Module X4


Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	BN / BK	3552	Interior Passive Entry Antenna 1 High Signal	I	—
2	0.35	WH	3553	Interior Passive Entry Antenna 1 Low Signal	I	—
3	0.35	BK / VT	1449	Steering Wheel Resistor Ladder Low Reference	I	—
4	0.35	WH / GN	7728	Major Endgate High Relay Control	I	—
5	0.35	GN / VT	5199	Run/Crank Relay Coil Control	I	—
6	—	—	—	Not Occupied	—	—
7	0.35	BN / BK	4996	Immobilizer Antenna Signal [+]	I	—
8 - 9	—	—	—	Not Occupied	—	—
10	0.35	GY / GN	4083	Retained Accessory Power Relay 2 Coil Control	I	—
11	0.35	BU / YE	7176	All Windows Open Switch Signal	I	—
12	0.35	BU / VT	7729	Major Endgate Low Relay Control	I	—
13	—	—	—	Not Occupied	—	—
14	0.35	WH / GY	4997	Immobilizer Antenna Low Signal	I	—
15	0.35	BU / VT	1788	Traction Control Switch Signal 1	I	—
16	0.35	GN / WH	4115	Body Control Module LIN Bus 5	I	—
17 - 18	—	—	—	Not Occupied	—	—
19	0.35	BU / YE	4979	AUTOSAR CAN Bus [+] ² Serial Data	I	—
20	0.35	WH	4978	AUTOSAR CAN Bus [-] ² Serial Data	I	—
21	0.35	WH	6816	Indicator Dimming Control	I	—
22	0.5	RD / WH	2740	Battery Positive Voltage	II	—
23	2	RD / BU	2540	Battery Positive Voltage	II	—

7-304 Electrical Component and Inline Harness Connector End Views

K9 Body Control Module X4 (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
24	1	BK	1050	Ground	II	—
25	1	BK	1050	Ground	II	—

K9 Body Control Module X5

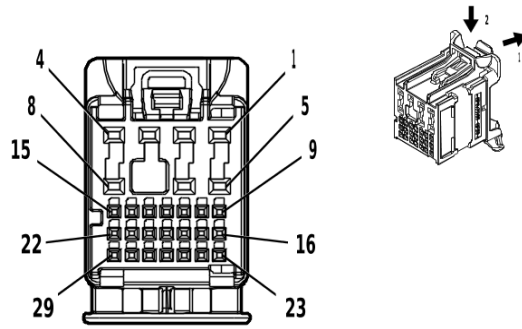

4584346

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 35364128
 Service Connector: 13534972
 Description: 29-Way F 0.5 NANO, 1.2 MCON Series(GN)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19370262	EL-35616-58 (BK)	EL-38125-58
II	84729890	J-35616-12 (BU)	J-38125-215A


K9 Body Control Module X5

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	—	Not Occupied	—	—
2	0.5	BU / BN	7573	Air Conditioning Compressor Solenoid Valve Control	II	—
3	0.5	BU / YE	7574	Air Conditioning Compressor Solenoid Valve Control	II	—
4	0.75	WH	2679	Lock Actuators Unlock Control 1	II	—
5	—	—	—	Not Occupied	—	—
6	0.5	YE	6817	LED Backlight Dimming Control 1	II	—
7	—	—	—	Not Occupied	—	—
8	0.75	GY	2681	Left Front Door Lock Actuator Lock Control	II	—
9 - 10	—	—	—	Not Occupied	—	—
11	0.35	BN / WH	28	Horn Relay Control	I	—
12	0.35	WH	4978	AUTOSAR CAN Bus [-] 2 Serial Data	I	—
13	0.35	BU / YE	4979	AUTOSAR CAN Bus [+] 2 Serial Data	I	—
14 - 15	—	—	—	Not Occupied	—	—
16	0.35	VT	4301	Passive Entry Left Front Antenna Signal High	I	—
17	0.35	GN / YE	2855	Body Control Module LIN Bus 9	I	—
18	0.35	VT / GY	126	Left Front Door Open Switch Signal	I	—
19	0.35	GN / YE	6134	Body Control Module LIN Bus 3	I	—
20	—	—	—	Not Occupied	—	—
21	0.35	WH / BU	6311	Cruise/ETC/TCC Brake Signal	I	—
22	0.35	BN / VT	193	Rear Defogger Relay Control	I	—

7-306 Electrical Component and Inline Harness Connector End Views**K9 Body Control Module X5 (cont'd)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
23	0.35	VT / GY	4302	Passive Entry Left Front Antenna Signal Low	I	—
24	0.35	WH	5359	Brake Apply Sensor Control	I	—
25	0.35	BU / YE	5361	Brake Apply Sensor Signal	I	—
26	0.35	BK / BN	5360	Brake Apply Sensor Low Reference	I	—
27	0.35	YE	1144	Endgate Release Switch Discrete Signal Exterior	I	—
28 - 29	—	—	—	Not Occupied	—	—

K9 Body Control Module X6

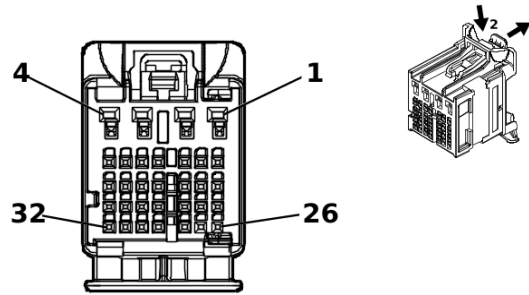

5202291

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 35392287
 Service Connector: 13534981
 Description: 32-Way F 0.5 MQS, 1.2 OCS Series(BN with GY Inner Connector)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19370262	EL-35616-58 (BK)	EL-38125-58
II	84729890	J-35616-12 (BU)	J-38125-215A

K9 Body Control Module X6

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	—	Not Occupied	—	—
2	0.75	VT / WH	1094	Right Rear Door Lock Actuator Lock Control	II	—
3	0.75	GY / BK	2680	Lock Actuators Unlock Control 2	II	—
4 - 6	—	—	—	Not Occupied	—	—
7	0.35	BN / GN	3568	Rear Closure Passive Entry Antenna High Signal	I	—
8	0.35	GN / GY	3569	Rear Closure Passive Entry Antenna Low Signal	I	—
9 - 10	—	—	—	Not Occupied	—	—
11	0.35	GN / BU	6133	Body Control Module LIN Bus 2	I	—
12	0.35	GY	7292	Major Endgate Release Switch Signal Exterior	I	—
13	—	—	—	Not Occupied	—	—
14	0.35	VT	801	Retained Accessory Power Control	I	—
15 - 18	—	—	—	Not Occupied	—	—
19	0.35	YE	7294	Minor Endgate Release Switch Discrete Signal Exterior	I	—
20	—	—	—	Not Occupied	—	—
21	0.35	YE / BU	7295	Left Minor Endgate Ajar Signal	I	—
22	0.35	BN / GN	4064	Hood Status B Signal	I	—
23 - 27	—	—	—	Not Occupied	—	—
28	0.35	BU	2675	Left Front Exterior Door Handle Switch Unlock Signal	I	—
29 - 32	—	—	—	Not Occupied	—	—

K9 Body Control Module X7

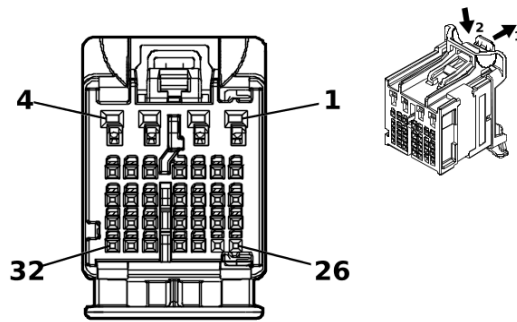

5202294

Connector Part Information

Harness Type: Body Wiring Harness

OEM Connector: 35397992

Service Connector: 13534979

Description: 32-Way F 0.5 MQS, 1.2 OCS Series(PU with GY Inner Connector)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19370262	EL-35616-58 (BK)	EL-38125-58

K9 Body Control Module X7

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 8	—	—	—	Not Occupied	—	—
9	0.35	YE / WH	900	Cavity Seal	I	—
10 - 18	—	—	—	Not Occupied	—	—
19	0.35	GN / VT	2857	Body Control Module LIN Bus 11	I	—
20	0.35	YE / BK	901	Cavity Seal	I	—
21	—	—	—	Not Occupied	—	—
22	0.35	YE / BU	902	Cavity Seal	I	—
23 - 32	—	—	—	Not Occupied	—	—

K9 Body Control Module X8

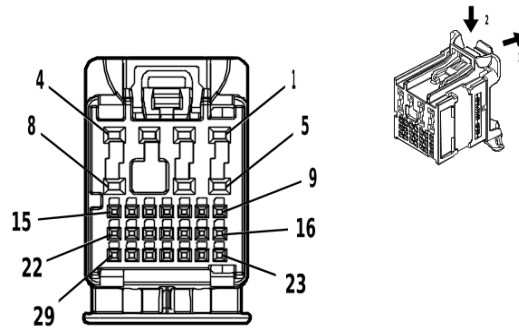

4578560

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 35364137
 Service Connector: 13534971
 Description: 29-Way F 0.5 NANO, 1.2 MCON, stAK50h Series(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19370262	EL-35616-58 (BK)	EL-38125-58
II	84729890	J-35616-12 (BU)	J-38125-215A

K9 Body Control Module X8

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 2	—	—	—	Not Occupied	—	—
3	0.75	BU / YE	1091	Left Rear Door Lock Actuator Lock Control	II	—
4	0.75	YE / GN	2682	Right Front Door Lock Actuator Lock Control	II	—
5 - 8	—	—	—	Not Occupied	—	—
9	0.35	GN / BK	4304	Passive Entry Right Front Door Antenna Signal Low	I	—
10	0.35	GN / YE	4303	Passive Entry Right Front Door Antenna Signal High	I	—
11 - 16	—	—	—	Not Occupied	—	—
17	0.35	GN / YE	2862	Body Control Module LIN Bus 16	I	—
18	0.35	GN / WH	2854	Body Control Module LIN Bus 8	I	—
19 - 27	—	—	—	Not Occupied	—	—
28	0.35	GY / VT	2676	Right Front Door Exterior Switch Unlock Signal	I	—
29	0.35	GN / GY	6135	Body Control Module LIN Bus 4	I	—

K17 Electronic Brake Control Module

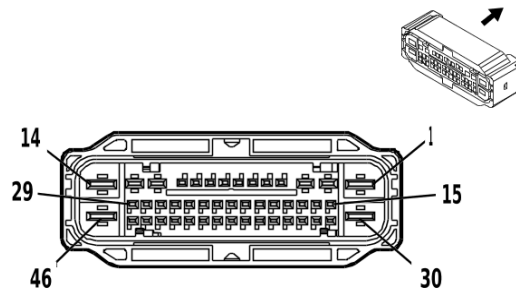

4162046

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 33222138
 Service Connector: 19333026
 Description: 46-Way F 1.2 OCS, 2.8, 6.3 CTS Series, Sealed(GY)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	13575368	J-35616-35 (VT)	J-38125-36
II	19370818	J-35616-12 (BU)	J-38125-215A
III	84634921	J-35616-42 (RD)	J-38125-212


K17 Electronic Brake Control Module

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	6	RD / WH	1642	Battery Positive Voltage	III	—
2	2.5	WH	2001	Left Park Brake Motor Apply Control	I	—
3	2.5	GY / BK	4369	Left Park Brake Motor Low Reference	I	—
4	0.5	GY / WH	7064	Left Front Wheel Speed Sensor Control	II	—
5	0.5	GY	830	Left Front Wheel Speed Sensor Signal	II	—
6	—	—	—	Not Occupied	—	—
7	0.5	BU / YE	4979	AUTOSAR CAN Bus [+] 2 Serial Data	II	—
8	0.5	WH	4978	AUTOSAR CAN Bus [-] 2 Serial Data	II	—
9	0.5	VT / WH	239	Run/Crank Ignition 1 Voltage	II	—
10	0.5	GY / BN	7065	Right Front Wheel Speed Sensor Control	II	—
11	0.5	YE	872	Right Front Wheel Speed Sensor Signal	II	—
12	2.5	GN / VT	1988	Right Park Brake Motor Apply Control	I	—
13	2.5	GY	4368	Right Park Brake Motor Low Reference	I	—
14	4	BK	150	Ground	III	—
15	0.5	GY / BK	7127	Left Rear Wheel Speed Sensor Control	II	—
16	0.5	BU	884	Left Rear Wheel Speed Sensor Signal	II	—
17 - 18	—	—	—	Not Occupied	—	—
19	0.5	BU / YE	4979	AUTOSAR CAN Bus [+] 2 Serial Data	II	—
20	0.5	WH	4978	AUTOSAR CAN Bus [-] 2 Serial Data	II	—
21 - 22	—	—	—	Not Occupied	—	—

K17 Electronic Brake Control Module (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
23	0.5	GN / YE	2731	Brake System Control Module LIN Bus 1	II	—
24 - 25	—	—	—	Not Occupied	—	—
26	0.5	WH	4986	AUTOSAR CAN Bus [-] 1 Serial Data	II	—
27	0.5	GN / GY	333	Brake Fluid Level Signal	II	—
28	0.5	GY / YE	7128	Right Rear Wheel Speed Sensor Control	II	—
29	0.5	VT	882	Right Rear Wheel Speed Sensor Signal	II	—
30	6	RD / WH	1040	Battery Positive Voltage	III	—
31 - 32	—	—	—	Not Occupied	—	—
33	0.35	YE	10280	Private Steering Angle CAN Bus [+] Serial Data	II	—
34	0.35	BU / WH	10279	Private Steering Angle CAN Bus [-] Serial Data	II	—
35	0.5	GN / BU	2733	Brake System Control Module LIN Bus 2	II	—
36	0.35	GN / GY	817	Vehicle Speed Signal	II	—
37 - 38	—	—	—	Not Occupied	—	—
39	0.5	BN / BU	1602	Front Brake Pad Wear Sensor Signal	II	—
40	0.5	GN / YE	1616	Rear Brake Pad Wear Sensor Signal	II	—
41	—	—	—	Not Occupied	—	—
42	0.5	BU	4987	AUTOSAR CAN Bus [+] 1 Serial Data	II	—
43	0.35	GN / BN	2087	Multi-axis Acceleration Sensor Supply Voltage	II	—
44	0.5	WH / BK	2223	Trailer Brake Apply Signal	II	—
45	0.5	YE / BK	2224	Trailer Brake Enable Signal	II	—
46	4	BK	250	Ground	III	—

K20 Engine Control Module X1 (L5P)

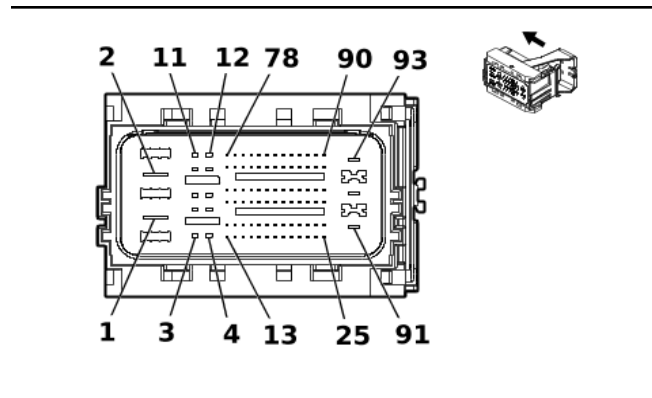

6173672

Connector Part Information

Harness Type: Engine Wiring Harness Chassis

OEM Connector: 35659436

Service Connector: Service by Harness - See Part Catalog

Description: 93-Way F 0.5, 1.2, 2.8, 6.3 MX GENV Series, Sealed(BK with BU Terminal Position Assurance)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	EL-35616-58 (BK)	No Tool Required
II	Not required	J-35616-12 (BU)	No Tool Required
III	Not required	J-35616-42 (RD)	No Tool Required
IV	Not required	J-35616-4A (PU)	No Tool Required

K20 Engine Control Module X1 (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	4	BK / WH	251	Signal Ground	III	—
2	4	VT / BU	5290	Powertrain Main Relay Fused Supply Voltage 1	III	—
3	0.75	RD / BN	440	Battery Positive Voltage	II	—
4	0.75	VT / GN	439	Run/Crank Ignition 1 Voltage	II	—
5	0.5	BU / GN	11437	Secondary Fuel Pump Disable Signal	II	—
6	0.5	GN / GY	465	Fuel Pump Primary Relay Control	II	—
7	0.5	BN / BU	2926	Exhaust Aftertreatment Fuel Injector High Control	II	—
8	0.5	YE	5991	Powertrain Relay Coil Control	II	—
9	0.5	VT / BN	2927	Exhaust Aftertreatment Fuel Injector Low Control	II	—
10	0.5	BN	3099	Diesel Exhaust Fluid Dosing Valve High Control	II	—
11	0.5	GN / BU	3889	Powertrain Sensor Bus Relay Control	II	—
12	0.5	BN / WH	3100	Diesel Exhaust Fluid Dosing Valve Low Control	II	—
13	0.5	BN / YE	11438	Power Take Off Wakeup Signal	I	PTO
14	0.5	WH / BK	2366	Cooling Fan Speed Control Signal	I	—
15	0.5	BU	3017	Fuel Heater Relay 1 Control	I	—
16	0.5	WH / GY	459	Air Conditioning Compressor Clutch Relay Control	I	—
17	—	—	—	Not Occupied	—	—


K20 Engine Control Module X1 (L5P) (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
18	0.5	YE / WH	1161	Accelerator Pedal Position Signal 1	I	—
19	0.5	WH / RD	1164	Accelerator Pedal Position 5V Reference 1	I	—
20	0.5	BN / RD	1274	Accelerator Pedal Position 5V Reference 2	I	—
21	0.5	GN / WH	1162	Accelerator Pedal Position Signal 2	I	—
22	—	—	—	Not Occupied	—	—
23	0.5	BU / GY	4054	Private Serial Data Powertrain CAN Bus [-] Serial Data	I	—
24	0.5	WH	4976	AUTOSAR CAN Bus [-] 3 Serial Data	I	—
25	0.5	WH	4978	AUTOSAR CAN Bus [-] 2 Serial Data	I	—
26 - 27	—	—	—	Not Occupied	—	—
28	0.5	GN / BN	507	Wait To Start Indicator Control	I	—
29 - 30	—	—	—	Not Occupied	—	—
31	0.5	BK / BU	1271	Accelerator Pedal Position Low Reference 1	I	—
32	—	—	—	Not Occupied	—	—
33	0.5	BK / GY	626	Engine Control Vehicle Sensors Low Reference 1	I	—
34	0.5	BK / VT	1272	Accelerator Pedal Position Low Reference 2	I	—
35	—	—	—	Not Occupied	—	—
36	0.5	WH	4055	Private Serial Data Powertrain CAN Bus [+] Serial Data	I	—
37	0.5	BU / BK	4977	AUTOSAR CAN Bus [+] 3 Serial Data	I	—
38	0.5	BU / YE	4979	AUTOSAR CAN Bus [+] 2 Serial Data	I	—
39	0.5	BN	25	Charge Indicator Control	I	—
40	—	—	—	Not Occupied	—	—
41	0.5	BU / VT	2364	Cooling Fan Speed Signal	I	—
42 - 43	—	—	—	Not Occupied	—	—
44	0.5	BU / GY	636	Ambient Air Temperature Sensor Signal	I	—
45	0.5	WH / GN	5380	Brake Position Sensor Signal	I	—
46	0.5	YE	4063	Hood Status A Signal	I	—
47	0.5	GN	380	Air Conditioning Refrigerant Pressure Sensor Signal	I	—
48 - 51	—	—	—	Not Occupied	—	—
52	0.5	YE / BK	625	Starter Enable Relay Control	I	—
53	—	—	—	Not Occupied	—	—
54	0.5	GN / YE	3337	Transmission Internal Mode Switch Mode Control Y	I	—
55	0.5	GY	23	Generator Field Duty Cycle Signal	I	—
56	0.5	BU	492	Mass Air Flow Sensor Signal	I	—
57 - 61	—	—	—	Not Occupied	—	—
62	0.5	GN / VT	4621	Engine Control Module LIN Bus 1	I	—
63	0.5	GN / WH	4622	Engine Control Module LIN Bus 2	I	—
64 - 66	—	—	—	Not Occupied	—	—
67	0.5	WH / GN	6142	Power Take-Off Engine Shutdown Signal	I	PTO
68 - 72	—	—	—	Not Occupied	—	—
73	0.5	BU	10290	Exhaust Gas Temperature Sensor SENT 2 Signal	I	—

7-314 Electrical Component and Inline Harness Connector End Views**K20 Engine Control Module X1 (L5P) (cont'd)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
74	0.5	YE	10291	Exhaust Gas Temperature Sensor SENT 3 Signal	I	—
75 - 76	—	—	—	Not Occupied	—	—
77	0.5	WH / BN	2363	Exhaust Pressure Sensor SENT 1 Signal	I	—
78	0.5	WH / RD	480	Engine Control Vehicle Sensors 5 Volt Reference 1	I	—
79	0.5	YE / RD	10595	Engine Control Vehicle Sensors 5 Volt Reference 2	I	—
80 - 91	—	—	—	Not Occupied	—	—
92	2.5	VT / BU	5294	Powertrain Main Relay Fused Supply Voltage 5	IV	—
93	2.5	VT / BU	5290	Powertrain Main Relay Fused Supply Voltage 1	IV	—

K20 Engine Control Module X1 (L8T)

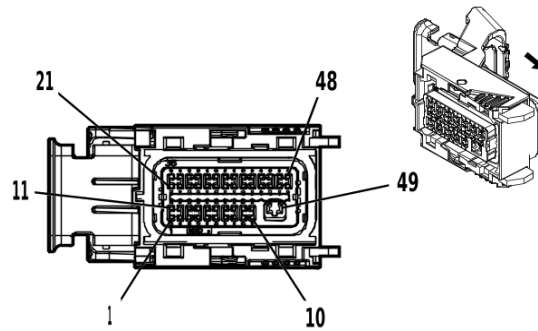

4596458

Connector Part Information

Harness Type: Engine Wiring Harness

OEM Connector: 33315785

Service Connector: 19368142

Description: 49-Way F 0.64, 2.8 Series, Sealed(BK with BU Terminal Position Assurance)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	13587518	J-35616-35 (VT)	J-38125-11A
II	19351723	J-35616-64B (L-BU)	J-38125-213


K20 Engine Control Module X1 (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BU	492	Mass Air Flow Sensor Signal	II	—
2	—	—	—	Not Occupied	—	—
3	0.5	BU / GY	4054	Private Serial Data Powertrain CAN Bus [-] Serial Data	II	—
4	—	—	—	Not Occupied	—	—
5	0.5	WH	4976	AUTOSAR CAN Bus [-] 3 Serial Data	II	—
6	—	—	—	Not Occupied	—	—
7	0.5	WH	4978	AUTOSAR CAN Bus [-] 2 Serial Data	II	—
8	—	—	—	Not Occupied	—	—
9	0.5	YE	5991	Powertrain Relay Coil Control	II	—
10	—	—	—	Not Occupied	—	—
11	0.5	YE	4063	Hood Status A Signal	II	—
12	0.5	BU / GY	636	Ambient Air Temperature Sensor Signal	II	—
13	0.5	WH	4055	Private Serial Data Powertrain CAN Bus [+] Serial Data	II	—
14	0.5	WH / GN	5380	Brake Position Sensor Signal	II	—
15	0.5	BU / BK	4977	AUTOSAR CAN Bus [+] 3 Serial Data	II	—
16	—	—	—	Not Occupied	—	—
17	0.5	BU / YE	4979	AUTOSAR CAN Bus [+] 2 Serial Data	II	—
18	0.5	WH / GY	459	Air Conditioning Compressor Clutch Relay Control	II	—
19 - 20	—	—	—	Not Occupied	—	—

7-316 Electrical Component and Inline Harness Connector End Views
K20 Engine Control Module X1 (L8T) (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
21	0.5	GN / BU	428	EVAP Canister Purge Solenoid Control	II	—
22	0.5	BU / GN	11437	Secondary Fuel Pump Disable Signal	II	—
23	—	—	—	Not Occupied	—	—
24	0.5	BK / BU	1271	Accelerator Pedal Position Low Reference 1	II	—
25 - 26	—	—	—	Not Occupied	—	—
27	0.5	GN / YE	3337	Transmission Internal Mode Switch Mode Control Y	II	—
28	0.5	BN / GN	1174	Oil Level Switch Signal	II	—
29	—	—	—	Not Occupied	—	—
30	0.5	BK / VT	1272	Accelerator Pedal Position Low Reference 2	II	—
31	—	—	—	Not Occupied	—	—
32	0.75	VT / BU	5291	Powertrain Main Relay Fused Supply Voltage 2	II	—
33	—	—	—	Not Occupied	—	—
34	0.5	RD / BN	440	Battery Positive Voltage	II	—
35	—	—	—	Not Occupied	—	—
36	0.5	YE / BK	625	Starter Enable Relay Control	II	—
37	0.5	GN / GY	465	Fuel Pump Primary Relay Control	II	—
38	0.5	WH / RD	1164	Accelerator Pedal Position 5V Reference 1	II	—
39	0.5	YE / WH	1161	Accelerator Pedal Position Signal 1	II	—
40	0.5	YE / BN	331	Oil Pressure Sensor Signal	II	—
41	0.5	GN	380	Air Conditioning Refrigerant Pressure Sensor Signal	II	—
42	0.5	YE / GY	11029	Canister Vapor Pressure Sensor Signal	II	—
43	—	—	—	Not Occupied	—	—
44	0.5	GN / WH	1162	Accelerator Pedal Position Signal 2	II	—
45	0.5	BN / RD	1274	Accelerator Pedal Position 5V Reference 2	II	—
46	—	—	—	Not Occupied	—	—
47	0.5	VT / GN	439	Run/Crank Ignition 1 Voltage	II	—
48	0.75	VT / BU	5290	Powertrain Main Relay Fused Supply Voltage 1	II	—
49	2.5	VT / BU	5290	Powertrain Main Relay Fused Supply Voltage 1	I	—

K20 Engine Control Module X2 (L5P)

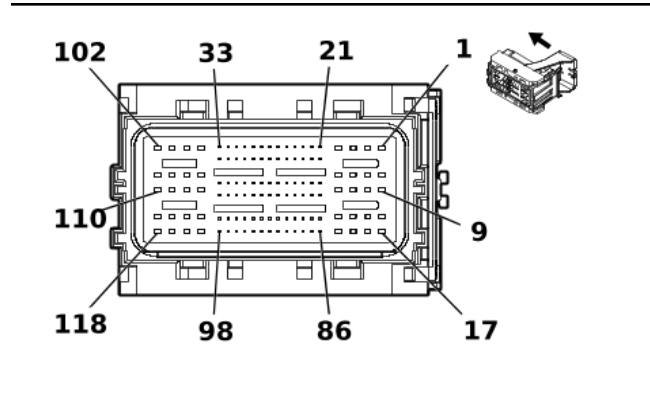

6166536

Connector Part Information

Harness Type: Engine Wiring Harness

OEM Connector: 13552796

Service Connector: Service by Harness - See Part Catalog

Description: 118-Way F 50, 120 TPX Series, Sealed(BK with BK Terminal Position Assurance)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	EL-35616-58 (BK)	No Tool Required

K20 Engine Control Module X2 (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BN / WH	4901	Direct Fuel Injector High Voltage Supply Cylinder 1	I	—
2	0.75	BU / WH	4904	Direct Fuel Injector High Voltage Supply Cylinder 4	I	—
3	0.75	BU / GY	4902	Direct Fuel Injector High Voltage Supply Cylinder 2	I	—
4	0.75	GN / WH	4905	Direct Fuel Injector High Voltage Supply Cylinder 5	I	—
5	0.5	YE	581	Throttle Actuator Open Control	I	—
6	0.5	WH / VT	5764	Exhaust Gas Recirculation Valve High Control	I	—
7	0.5	VT / BK	5746	Exhaust Gas Recirculation Valve Low Control	I	—
8	0.5	BK / BU	10597	Engine Control Sensors Low Reference 3	I	—
9	0.5	BN / WH	582	Throttle Actuator Close Control	I	—
10	0.5	BN / VT	3656	EGR Cooler Bypass Valve Close Control	I	—
11	0.5	YE / GN	3655	EGR Cooler Bypass Valve Open Control	I	—
12	—	—	—	Not Occupied	—	—
13	0.5	BU / WH	2530	Fuel Rail Pressure Solenoid Valve Control	I	—
14 - 16	—	—	—	Not Occupied	—	—
17	0.5	YE	2928	Fuel Metering Solenoid Valve High Control	I	—
18 - 20	—	—	—	Not Occupied	—	—
21	0.5	GN	10289	Exhaust Gas Temperature Sensor SENT 1 Signal	I	—
22	0.5	BU / WH	3630	Throttle Position Sensor SENT 1 Signal	I	—
23 - 25	—	—	—	Not Occupied	—	—


7-318 Electrical Component and Inline Harness Connector End Views
K20 Engine Control Module X2 (L5P) (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
26	0.5	GN / WH	432	Manifold Absolute Pressure Sensor Signal		—
27	0.5	YE / BN	331	Oil Pressure Sensor Signal		—
28	0.5	WH / BU	7329	Pre-Throttle Air Temperature Signal		—
29	0.5	BU	410	Engine Coolant Temperature Sensor Signal		—
30	0.5	BN	3681	Charge Air Cooler Outlet Temperature Sensor Signal		—
31	0.5	GN	3683	Charge Air Cooler Inlet Temperature Sensor Signal		—
32 - 38	—	—	—	Not Occupied	—	—
39	0.5	BU / WH	2918	Fuel Rail Pressure Sensor Signal		—
40	0.5	BN / WH	5763	Exhaust Gas Recirculation Position Signal		—
41	0.5	GN / GY	3654	EGR Cooler Bypass Valve Position Sensor Signal		—
42 - 59	—	—	—	Not Occupied	—	—
60	0.5	BN / GN	1174	Oil Level Switch Signal		—
61 - 63	—	—	—	Not Occupied	—	—
64	0.5	BK / GN	2919	Fuel Rail Pressure Sensor Low Reference		—
65 - 76	—	—	—	Not Occupied	—	—
77	0.5	BN / YE	2161	Fuel Rail Pressure Sensor 2 Signal		—
78	0.5	BK / YE	6275	Exhaust Gas Recirculation Temperature Sensor 2 Low Reference		—
79 - 82	—	—	—	Not Occupied	—	—
83	0.5	BK / GY	5296	Exhaust Camshaft Position Sensor Low Reference 1		—
84	0.5	GN	6271	Crankshaft Position Sensor Signal		—
85	0.5	BK / VT	6272	Crankshaft Position Sensor Low Reference		—
86 - 89	—	—	—	Not Occupied	—	—
90	0.5	BN / RD	2917	Fuel Rail Pressure Sensor 5V Reference		—
91	0.5	YE / GN	3236	Exhaust Gas Recirculation Temperature Sensor 2 Signal		—
92 - 95	—	—	—	Not Occupied	—	—
96	0.5	VT / BU	6270	Crankshaft Position Sensor Voltage		—
97	0.5	VT / BK	5273	Exhaust Camshaft Position Sensor 1		—
98	0.5	GY / YE	5297	Exhaust Camshaft Position Sensor 1 Voltage Reference		—
99	0.75	WH / YE	4907	Direct Fuel Injector High Voltage Supply Cylinder 7		—
100	0.75	VT / GY	4906	Direct Fuel Injector High Voltage Supply Cylinder 6		—
101	0.75	GY / WH	4908	Direct Fuel Injector High Voltage Supply Cylinder 8		—
102	0.75	GN / GY	4903	Direct Fuel Injector High Voltage Supply Cylinder 3		—
103	0.75	BN	4801	Direct Fuel Injector High Voltage Control Cylinder 1		—
104	0.75	GY / BU	4804	Direct Fuel Injector High Voltage Control Cylinder 4		—
105	0.75	BU	4802	Direct Fuel Injector High Voltage Control Cylinder 2		—

K20 Engine Control Module X2 (L5P) (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
106	0.75	WH / GN	4805	Direct Fuel Injector High Voltage Control Cylinder 5	I	—
107	0.75	YE / GY	4807	Direct Fuel Injector High Voltage Control Cylinder 7	I	—
108	0.75	VT / GN	4806	Direct Fuel Injector High Voltage Control Cylinder 6	I	—
109	0.75	GY	4808	Direct Fuel Injector High Voltage Control Cylinder 8	I	—
110	0.75	GN	4803	Direct Fuel Injector High Voltage Control Cylinder 3	I	—
111	0.5	BU / RD	460	Engine Control Sensors 5 Volt Reference 1	I	—
112	0.5	BK / YE	548	Engine Control Sensors Low Reference 1	I	—
113 - 114	—	—	—	Not Occupied	—	—
115	0.5	GY / RD	10667	Engine Control Sensors 5 Volt Reference	I	—
116	0.5	BK / GN	580	Engine Control Sensors Low Reference 2	I	—
117	0.5	BK / YE	2834	Fuel Rail Pressure Solenoid Valve Low Control	I	—
118	0.5	BN / BK	2929	Fuel Metering Solenoid Valve Low Control	I	—

K20 Engine Control Module X2 (L8T)

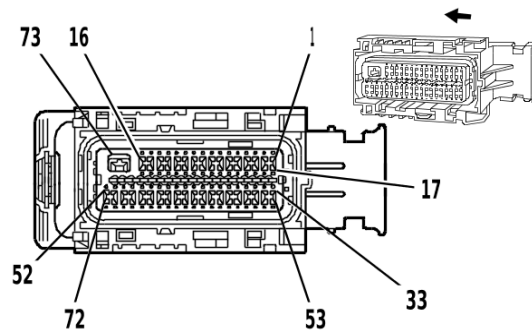

1673472

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 15499466
 Service Connector: 19333090
 Description: 73-Way F 0.64, 2.8 Series, Sealed(BK with BK Terminal Position Assurance)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	13587518	J-35616-35 (VT)	J-38125-11A
II	19354746	J-35616-64B (L-BU)	J-38125-215A


K20 Engine Control Module X2 (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GN / YE	3212	HO2S Heater Low Control Bank 2 Sensor 1	II	—
2	—	—	—	Not Occupied	—	—
3	0.5	BK / YE	548	Engine Control Sensors Low Reference 1	II	—
4 - 6	—	—	—	Not Occupied	—	—
7	0.5	GN / WH	4622	Engine Control Module LIN Bus 2	II	—
8	0.5	GN / VT	4621	Engine Control Module LIN Bus 1	II	—
9	—	—	—	Not Occupied	—	—
10	0.5	VT / GY	3110	HO2S High Signal Bank 1 Sensor 1	II	—
11	0.5	WH / BK	3111	HO2S Low Signal Bank 1 Sensor 1	II	—
12	0.5	YE / BU	2124	Ignition Control 4	II	—
13	0.5	BN / BU	2126	Ignition Control 6	II	—
14 - 16	—	—	—	Not Occupied	—	—
17	0.5	GY / WH	3113	HO2S Heater Low Control Bank 1 Sensor 1	II	—
18 - 25	—	—	—	Not Occupied	—	—
26	0.5	VT / WH	3210	HO2S High Signal Bank 2 Sensor 1	II	—
27	0.5	YE / WH	3211	HO2S Low Signal Bank 2 Sensor 1	II	—
28	0.5	GN / BU	2123	Ignition Control 3	II	—
29	0.5	BU / GY	2125	Ignition Control 5	II	—
30	0.5	BK / GY	2130	Ignition Control Low Reference Bank 2	II	—
31 - 32	—	—	—	Not Occupied	—	—
33	0.5	WH / BN	3223	HO2S Heater Low Control Bank 2 Sensor 2	II	—

K20 Engine Control Module X2 (L8T) (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
34	—	—	—	Not Occupied	—	—
35	0.5	BU	179	Engine Oil Pump Control	II	—
36	—	—	—	Not Occupied	—	—
37	0.5	VT / BU	5294	Powertrain Main Relay Fused Supply Voltage 5	II	—
38	—	—	—	Not Occupied	—	—
39	0.5	WH / RD	480	Engine Control Vehicle Sensors 5 Volt Reference 1	II	—
40 - 45	—	—	—	Not Occupied	—	—
46	0.5	YE / BU	3221	HO2S Low Signal Bank 2 Sensor 2	II	—
47	0.5	VT / GN	3220	HO2S High Signal Bank 2 Sensor 2	II	—
48 - 49	—	—	—	Not Occupied	—	—
50	0.5	BK / GY	2303	Knock Sensor Low Reference 2	II	—
51	0.5	BK / YE	1716	Knock Sensor Low Reference 1	II	—
52	0.5	BN / WH	582	Throttle Actuator Close Control	II	—
53	0.5	GY / WH	3122	HO2S Heater Low Control Bank 1 Sensor 2	II	—
54 - 65	—	—	—	Not Occupied	—	—
66	0.5	WH / YE	3121	HO2S Low Signal Bank 1 Sensor 2	II	—
67	0.5	BN	3120	HO2S High Signal Bank 1 Sensor 2	II	—
68 - 69	—	—	—	Not Occupied	—	—
70	0.5	WH / GY	1876	Knock Sensor 2 Signal	II	—
71	0.5	VT / GY	496	Knock Sensor 1 Signal	II	—
72	0.5	YE	581	Throttle Actuator Open Control	II	—
73	2.5	BK / WH	251	Signal Ground	I	—

K20 Engine Control Module X3 (L5P)

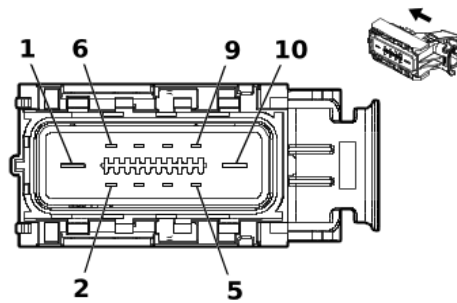

6168487

Connector Part Information

Harness Type: Engine Wiring Harness Chassis

OEM Connector: 12684811

Service Connector: Service by Harness - See Part Catalog

Description: 10-Way F 2.8, 6.3 APEX Series, Sealed(BK with GY Terminal Position Assurance)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-42 (RD)	No Tool Required
II	Not required	J-35616-4A (PU)	No Tool Required

K20 Engine Control Module X3 (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	6	BN / BU	104	Glow Plug Control	I	—
2	2.5	GY / BU	1581	Glow Plug 1 Control	II	—
3	2.5	WH / BK	1587	Glow Plug 7 Control	II	—
4	2.5	GY / YE	1584	Glow Plug 4 Control	II	—
5	2.5	GY / WH	1586	Glow Plug 6 Control	II	—
6	2.5	GY / BN	1582	Glow Plug 2 Control	II	—
7	2.5	WH / BU	1588	Glow Plug 8 Control	II	—
8	2.5	GY / WH	1585	Glow Plug 5 Control	II	—
9	2.5	GY / GN	1583	Glow Plug 3 Control	II	—
10	6	BN / BU	104	Glow Plug Control	I	—

K20 Engine Control Module X3 (L8T)

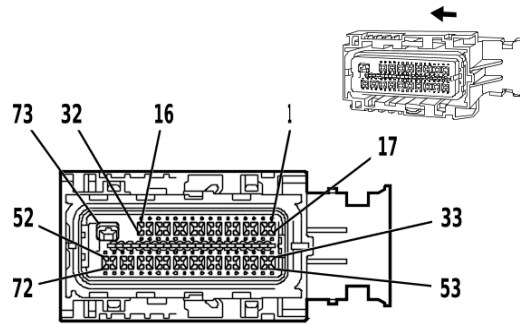

1650395

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 15497996
 Service Connector: 19333091
 Description: 73-Way F 0.64, 2.8 Series, Sealed(BK with GY Terminal Position Assurance)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	13587518	J-35616-35 (VT)	J-38125-11A
II	19354746	J-35616-64B (L-BU)	J-38125-215A

K20 Engine Control Module X3 (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 4	—	—	—	Not Occupied	—	—
5	0.5	VT / BN	5284	Intake Camshaft Position Actuator Solenoid Valve 1	II	—
6	0.5	VT / GN	4320	Powertrain Sensor Bus Enable	II	—
7	—	—	—	Not Occupied	—	—
8	0.5	YE / VT	5275	Intake Camshaft Position Sensor 1	II	—
9	0.5	GY / BU	5300	Intake Camshaft Position Sensor 1 Voltage Reference	II	—
10	0.5	GN	6271	Crankshaft Position Sensor Signal	II	—
11	—	—	—	Not Occupied	—	—
12	0.5	BU / WH	2122	Ignition Control 2	II	—
13	0.5	VT / WH	2128	Ignition Control 8	II	—
14	0.5	BN	25	Charge Indicator Control	II	—
15	—	—	—	Not Occupied	—	—
16	0.75	YE	7301	High Pressure Fuel Pump High Control	II	—
17 - 20	—	—	—	Not Occupied	—	—
21	0.5	BK / BN	6753	Camshaft Position Actuator Solenoid Valve W Low Reference	II	—
22 - 23	—	—	—	Not Occupied	—	—
24	0.5	BK / GN	5301	Intake Camshaft Position Sensor Low Reference 1	II	—
25	0.5	VT / BU	6270	Crankshaft Position Sensor Voltage	II	—


7-324 Electrical Component and Inline Harness Connector End Views
K20 Engine Control Module X3 (L8T) (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
26	0.5	BK / VT	6272	Crankshaft Position Sensor Low Reference	II	—
27	—	—	—	Not Occupied	—	—
28	0.5	GN / GY	2127	Ignition Control 7	II	—
29	0.5	BU / VT	2121	Ignition Control 1	II	—
30	0.5	BK / BU	2129	Ignition Control Low Reference Bank 1	II	—
31	—	—	—	Not Occupied	—	—
32	0.75	VT / BK	7300	High Pressure Fuel Pump Low Control	II	—
33 - 35	—	—	—	Not Occupied	—	—
36	0.5	BK / BN	2752	Throttle Position Sensor Low Reference	II	—
37	0.5	BK / GN	469	Manifold Absolute Pressure Sensor Low Reference	II	—
38 - 39	—	—	—	Not Occupied	—	—
40	0.5	BN / BU	357	Oil Temperature Sensor Signal	II	—
41 - 42	—	—	—	Not Occupied	—	—
43	0.5	BK / GY	626	Engine Control Vehicle Sensors Low Reference 1	II	—
44	0.75	VT / BU	5292	Powertrain Main Relay Fused Supply Voltage 3	II	—
45	0.75	GN	4803	Direct Fuel Injector High Voltage Control Cylinder 3	II	—
46	0.75	GY / BU	4804	Direct Fuel Injector High Voltage Control Cylinder 4	II	—
47	0.75	WH / GN	4805	Direct Fuel Injector High Voltage Control Cylinder 5	II	—
48	0.75	VT / GN	4806	Direct Fuel Injector High Voltage Control Cylinder 6	II	—
49	0.75	BU	4802	Direct Fuel Injector High Voltage Control Cylinder 2	II	—
50	0.75	YE / GY	4807	Direct Fuel Injector High Voltage Control Cylinder 7	II	—
51	0.75	GY	4808	Direct Fuel Injector High Voltage Control Cylinder 8	II	—
52	0.75	BN	4801	Direct Fuel Injector High Voltage Control Cylinder 1	II	—
53 - 54	—	—	—	Not Occupied	—	—
55	0.5	BN / RD	2701	Throttle Position Sensor 5V Reference	II	—
56	0.5	BU / WH	3630	Throttle Position Sensor SENT 1 Signal	II	—
57	0.5	GY / RD	2704	Manifold Absolute Pressure Sensor 5V Reference	II	—
58	0.5	GN / WH	432	Manifold Absolute Pressure Sensor Signal	II	—
59 - 60	—	—	—	Not Occupied	—	—
61	0.5	BU	410	Engine Coolant Temperature Sensor Signal	II	—
62	—	—	—	Not Occupied	—	—
63	0.5	BU / WH	10786	Fuel Rail Pressure Sensor SENT 1 Signal	II	—
64	0.5	GY	23	Generator Field Duty Cycle Signal	II	—
65	0.75	GN / GY	4903	Direct Fuel Injector High Voltage Supply Cylinder 3	II	—
66	0.75	BU / WH	4904	Direct Fuel Injector High Voltage Supply Cylinder 4	II	—
67	0.75	GN / WH	4905	Direct Fuel Injector High Voltage Supply Cylinder 5	II	—

K20 Engine Control Module X3 (L8T) (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
68	0.75	VT / GY	4906	Direct Fuel Injector High Voltage Supply Cylinder 6	II	—
69	0.75	BU / GY	4902	Direct Fuel Injector High Voltage Supply Cylinder 2	II	—
70	0.75	WH / YE	4907	Direct Fuel Injector High Voltage Supply Cylinder 7	II	—
71	0.75	GY / WH	4908	Direct Fuel Injector High Voltage Supply Cylinder 8	II	—
72	0.75	BN / WH	4901	Direct Fuel Injector High Voltage Supply Cylinder 1	II	—
73	2.5	BK / WH	251	Signal Ground	I	—

K29FV Front Seat Heater Vent Control Module X1 (KA1&KQV)

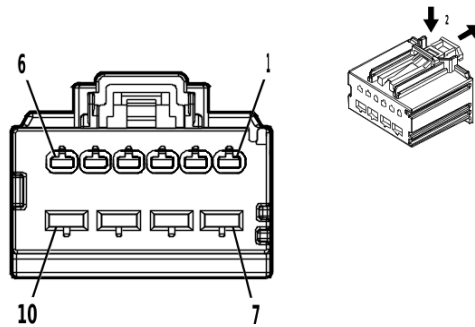

5035058

Connector Part Information

Harness Type: Front Seat Wiring Harness - Passenger
 OEM Connector: 31372-1600
 Service Connector: Service by Harness - See Part Catalog
 Description: 10-Way F 1.5, 2.8 MX Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required
II	Not required	J-35616-4A (PU)	No Tool Required

K29FV Front Seat Heater Vent Control Module X1 (KA1&KQV)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	WH / BN	2481	Passenger Seat Back Heating Element Control	I	—
2	0.75	BN / BU	2479	Passenger Seat Heating Element Control	I	—
3	0.75	GY / BK	2480	Passenger Seat Heating Element Low Reference	I	—
4	0.75	BN / BK	2078	Driver Seat Heating Element Low Reference	I	—
5	0.75	BN	2432	Driver Seat Back Heating Element Control	I	—
6	0.75	BN / VT	2077	Driver Seat Heating Element Control	I	—
7	0.75	RD / GN	6140	Battery Positive Voltage	II	—
8	0.75	BK	1350	Ground	II	—
9	—	—	—	Not Occupied	—	—
10	0.75	RD / BN	6640	Battery Positive Voltage	II	—

K29FV Front Seat Heater Vent Control Module X2 (KA1&KQV)

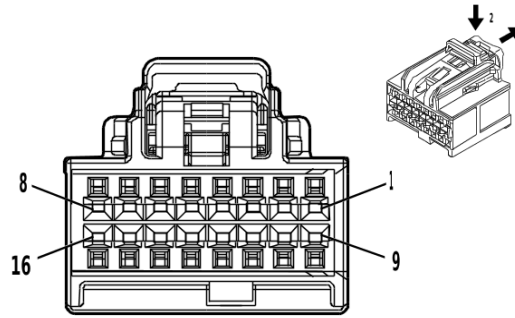

4873243

Connector Part Information

Harness Type: Front Seat Wiring Harness - Passenger
 OEM Connector: 35016343
 Service Connector: Service by Harness - See Part Catalog
 Description: 16-Way F 0.64 OCS Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

K29FV Front Seat Heater Vent Control Module X2 (KA1&KQV)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BK / YE	2080	Driver Heated Seat Thermistor Low Reference	I	—
2	0.5	BK / GY	2435	Passenger Heated Seat Thermistor Low Reference	I	—
3	0.5	BU	2425	Driver Seat Back Heating Temperature Sensor Signal	I	—
4	0.5	WH / BU	2436	Passenger Seat Back Heating Temperature Sensor Signal	I	—
5	0.5	WH / GY	2434	Passenger Seat Heating Temperature Sensor Signal	I	—
6	0.5	YE / GY	2079	Driver Seat Heating Temperature Sensor Signal	I	—
7	—	—	—	Not Occupied	—	—
8	0.5	GN / VT	2857	Body Control Module LIN Bus 11	I	—
9	0.5	GN / VT	5906	Driver Seat Blower Motor Control 1	I	—
10	0.5	VT / WH	5908	Passenger Seat Blower Motor Control 1	I	—
11	—	—	—	Not Occupied	—	—
12	0.5	BK / GN	2482	Passenger Heated Back Thermistor Low Reference	I	—
13 - 16	—	—	—	Not Occupied	—	—

K32 Heated Steering Wheel Module X1 (K13 & N57 & D07)

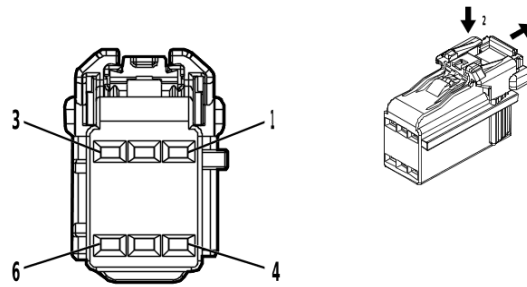

4862126

Connector Part Information

Harness Type: Steering Wheel Horn Switch Wiring Harness
 OEM Connector: 13532426
 Service Connector: Service by Harness - See Part Catalog
 Description: 6-Way F 1.2 Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

K32 Heated Steering Wheel Module X1 (K13 & N57 & D07)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	YE / GY	5883	Steering Wheel Heating Switch Signal	I	—
2	0.35	BN / WH	5884	Steering Wheel Heating Switch LED Control	I	—
3	0.5	RD / GN	10040	Battery Positive Voltage	I	—
4	0.5	BK	6050	Steering Wheel Ground	I	—
5	0.35	BK / WH	6051	Steering Wheel Ground	I	—
6	0.35	GN / BK	2858	Body Control Module LIN Bus 12	I	—

K32 Heated Steering Wheel Module X2 (KI3 - UKL)

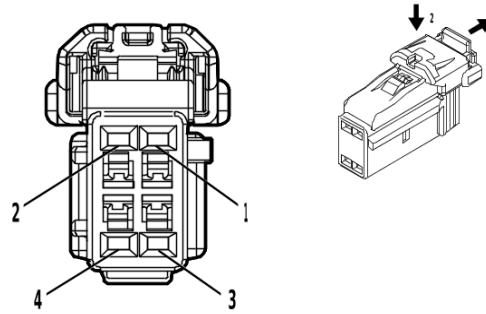

4872683

Connector Part Information

Harness Type: Steering Wheel Heater
 OEM Connector: 13533335
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way F 1.2 Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

K32 Heated Steering Wheel Module X2 (KI3 - UKL)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	WH / YE	5888	Steering Wheel Heating High Control	I	—
2	0.75	GY / YE	5887	Steering Wheel Heating Low Control	I	—
3	0.35	VT / BU	5886	Steering Wheel Heating Temperature Sensor Signal	I	—
4	0.35	YE / RD	5885	Steering Wheel Heating Voltage Reference	I	—

K36 Restraints Control Module X1

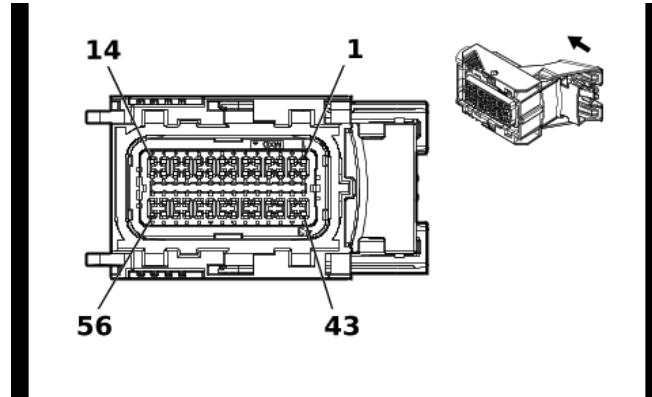

5377109

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 35280988
 Service Connector: 26314571
 Description: 56-Way F 0.64 Series, Sealed(BU)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19354746	J-35616-64B (L-BU)	J-38125-215A
II	Not required	J-35616-64B (L-BU)	No Tool Required


K36 Restraints Control Module X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 6	—	—	—	Not Occupied	—	—
7	0.5	BK / OG	5045	Left Front Impact Discriminating Sensor Low Reference	I	—
8	0.5	OG / YE	354	Left Front Impact Discriminating Sensor Signal	I	—
9	0.5	OG / GN	1409	Right Front Impact Discriminating Sensor Signal	I	—
10	0.5	BK / OG	5600	Right Front Impact Discriminating Sensor Low Reference	I	—
11	0.5	WH / OG	3476	Passenger Seat Belt Retractor Pretensioner Low Control	II	—
12	0.5	OG / GN	3475	Passenger Seat Belt Retractor Pretensioner High Control	II	—
13	0.35	YE / OG	3025	Passenger Instrument Panel Air Bag Stage 1 High Control	I	—
14	0.35	OG / WH	3024	Passenger Instrument Panel Air Bag Stage 1 Low Control	I	—
15 - 24	—	—	—	Not Occupied	—	—
25	0.5	VT / OG	3478	Driver Seat Belt Retractor Pretensioner Low Control	II	—
26	0.5	OG / WH	3477	Driver Seat Belt Retractor Pretensioner High Control	II	—
27	0.35	OG / VT	3021	Steering Wheel Air Bag Stage 1 High Control	I	—
28	0.35	BN / OG	3020	Steering Wheel Air Bag Stage 1 Low Control	I	—
29	0.5	BU	4987	AUTOSAR CAN Bus [+] 1 Serial Data	I	—
30	0.5	WH	4986	AUTOSAR CAN Bus [-] 1 Serial Data	I	—

K36 Restraints Control Module X1 (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
31	—	—	—	Not Occupied	—	—
32	0.5	OG / BN	3479	Passenger Seat Belt Anchor Pretensioner High Control	II	—
33	0.5	GY / OG	3480	Passenger Seat Belt Anchor Pretensioner Low Control	II	—
34 - 37	—	—	—	Not Occupied	—	—
38	0.35	OG / VT	3026	Passenger Instrument Panel Air Bag Stage 2 Low Control	I	—
39	0.35	GY / OG	3027	Passenger Instrument Panel Air Bag Stage 2 High Control	I	—
40 - 41	—	—	—	Not Occupied	—	—
42	0.5	BK / WH	1251	Signal Ground	I	—
43	0.5	BU	4987	AUTOSAR CAN Bus [+] 1 Serial Data	I	—
44	0.5	WH	4986	AUTOSAR CAN Bus [-] 1 Serial Data	I	—
45	—	—	—	Not Occupied	—	—
46	0.5	VT / OG	3482	Driver Seat Belt Anchor Pretensioner Low Control	II	—
47	0.5	OG / YE	3481	Driver Seat Belt Anchor Pretensioner High Control	II	—
48 - 49	—	—	—	Not Occupied	—	—
50	0.35	BN / WH	3895	Roof Rail Air Bag Disable Switch Low Reference	I	—
51	0.35	BU / WH	3119	Roof Rail Air Bag Disable Switch Signal	I	—
52	—	—	—	Not Occupied	—	—
53	0.35	WH / OG	3022	Steering Wheel Air Bag Stage 2 Low Control	I	—
54	0.35	OG / GN	3023	Steering Wheel Air Bag Stage 2 High Control	I	—
55	0.35	VT / WH	239	Run/Crank Ignition 1 Voltage	I	—
56	0.5	RD / GN	4440	Battery Positive Voltage	I	—

K36 Restraints Control Module X2

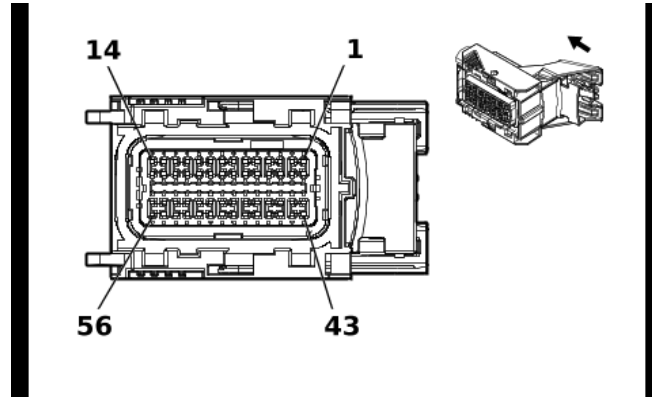

5377124

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 35280986
 Service Connector: 85004498
 Description: 56-Way F 0.64 Series, Sealed(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19354746	J-35616-64B (L-BU)	J-38125-215A
II	Not required	J-35616-64B (L-BU)	No Tool Required


K36 Restraints Control Module X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 9	—	—	—	Not Occupied	—	—
10	0.5	BU / OG	5163	Rear Center Seat Belt Switch Signal	I	—
11	0.5	YE / OG	5161	Left Rear Seat Belt Switch Signal	I	—
12	0.35	OG / BN	238	Driver Seat Belt Switch Signal	I	—
13	0.5	BK / OG	6627	Right Rear Side Impact Sensor Low Reference	I	—
14	0.5	OG / WH	6626	Right Rear Side Impact Sensor Signal	I	—
15 - 22	—	—	—	Not Occupied	—	—
23	0.5	BK / OG	1363	Driver Seat Belt Switch Low Reference	I	—
24	0.5	BN / OG	5162	Right Rear Seat Belt Switch Signal	I	—
25	0.35	OG / VT	1362	Passenger Seat Belt Switch Signal	I	—
26	—	—	—	Not Occupied	—	—
27	0.5	BK / OG	6628	Left Front Side Impact Sensor Low Reference	I	—
28	0.5	OG / GN	2132	Left Front Side Impact Sensor Signal	I	—
29 - 36	—	—	—	Not Occupied	—	—
37	0.5	OG / GY	5021	Right Front Roof Rail Air Bag High Control	II	—
38	0.5	WH / OG	5022	Right Front Roof Rail Air Bag Low Control	II	—
39	0.5	BU / OG	4957	Passenger Seat Back Air Bag Low Control	I	—
40	0.5	OG / GY	4956	Passenger Seat Back Air Bag High Control	I	—
41	0.5	BK / OG	6629	Right Front Side Impact Sensor Low Reference	I	—
42	0.5	BN / OG	2134	Right Front Side Impact Sensor Signal	I	—
43 - 50	—	—	—	Not Occupied	—	—

K36 Restraints Control Module X2 (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
51	0.5	OG / GN	5019	Left Front Roof Rail Air Bag High Control	II	—
52	0.5	VT / OG	5020	Left Front Roof Rail Air Bag Low Control	II	—
53	0.5	BK / OG	4963	Driver Seat Back Air Bag Low Control	I	—
54	0.5	OG / BU	4962	Driver Seat Back Air Bag High Control	I	—
55	0.5	BK / OG	6623	Left Rear Side Impact Sensor Low Reference	I	—
56	0.5	OG / BU	6622	Left Rear Side Impact Sensor Signal	I	—

K38 Chassis Control Module

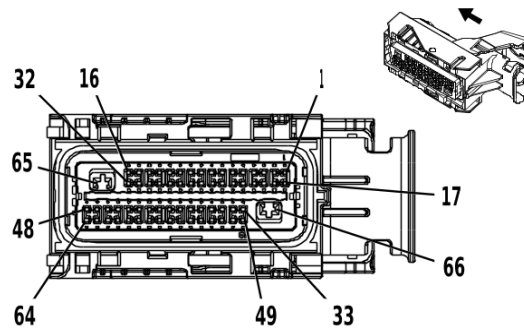

3621452

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 13965710
 Service Connector: 19329822
 Description: 66-Way F 0.64, 2.8 Series, Sealed(BK with BK Terminal Position Assurance)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	13587518	J-35616-35 (VT)	J-38125-11A
II	19351723	J-35616-64B (L-BU)	J-38125-213

K38 Chassis Control Module

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 5	—	—	—	Not Occupied	—	—
6	0.5	VT / WH	639	Run/Crank Ignition 1 Voltage	II	—
7 - 12	—	—	—	Not Occupied	—	—
13	0.5	YE / GN	7122	Axle Differential Lock Switch Signal	II	—
14 - 33	—	—	—	Not Occupied	—	—
34	0.5	BU / YE	4979	AUTOSAR CAN Bus [+] 2 Serial Data	II	—
35	0.5	BU / YE	4979	AUTOSAR CAN Bus [+] 2 Serial Data	II	—
36	0.5	WH	4978	AUTOSAR CAN Bus [-] 2 Serial Data	II	—
37	0.5	WH	4978	AUTOSAR CAN Bus [-] 2 Serial Data	II	—
38	0.5	YE	7115	Rear Axle Differential Lock Indicator Control	II	—
39 - 43	—	—	—	Not Occupied	—	—
44	0.75	GY / BK	7253	Rear Differential Lock Actuator Low Control	II	—
45 - 49	—	—	—	Not Occupied	—	—
50	0.75	VT / BN	7258	Rear Differential Lock Actuator Control	II	—
51 - 64	—	—	—	Not Occupied	—	—
65	1.5	BK	1850	Ground	I	—
66	1.5	RD / BN	5940	Battery Positive Voltage	I	—

K40D Driver Seat Adjuster Memory Module X1

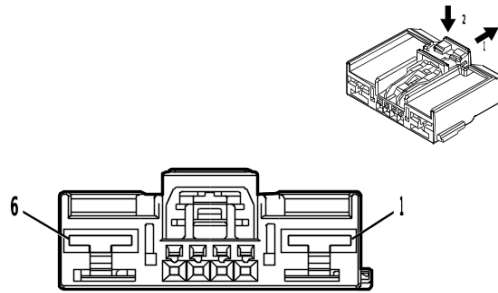

4650258

Connector Part Information

Harness Type: Front Seat Wiring Harness - Driver
 OEM Connector: 7289-7139-30
 Service Connector: Service by Harness - See Part Catalog
 Description: 6-Way F 0.64, 6.3 Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-42 (RD)	No Tool Required
II	Not required	J-35616-64B (L-BU)	No Tool Required

K40D Driver Seat Adjuster Memory Module X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	BK	1550	Ground	I	—
2	—	—	—	Not Occupied	—	—
3	0.5	RD / BN	2240	Battery Positive Voltage	II	—
4 - 5	—	—	—	Not Occupied	—	—
6	2.5	RD / YE	5040	Battery Positive Voltage	I	—

K40D Driver Seat Adjuster Memory Module X2

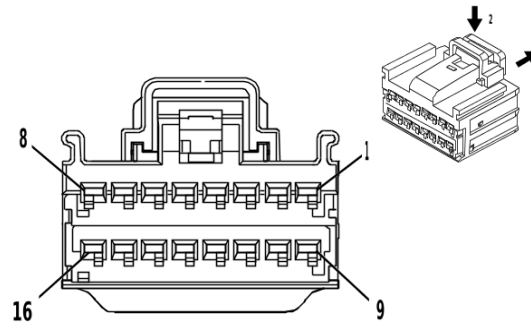

4332214

Connector Part Information

Harness Type: Front Seat Wiring Harness - Driver
 OEM Connector: 15512506
 Service Connector: Service by Harness - See Part Catalog
 Description: 16-Way F 1.5 OCS Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required

K40D Driver Seat Adjuster Memory Module X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	1.5	YE / BU	285	Driver Seat Horizontal Motor Forward Control	I	—
2	—	—	—	Not Occupied	—	—
3	1.5	GN / YE	276	Driver Seat Recline Motor Forward Control	I	—
4 - 5	—	—	—	Not Occupied	—	—
6	1.5	BU / VT	287	Driver Seat Front Vertical Motor Down Control	I	—
7	1.5	YE	282	Driver Seat Rear Vertical Motor Up Control	I	—
8	—	—	—	Not Occupied	—	—
9	1.5	BU / YE	277	Driver Seat Recline Motor Rearward Control	I	—
10	—	—	—	Not Occupied	—	—
11	1.5	GY / GN	284	Driver Seat Horizontal Motor Rearward Control	I	—
12	—	—	—	Not Occupied	—	—
13	1.5	GY / BU	283	Driver Seat Rear Vertical Motor Down Control	I	—
14 - 15	—	—	—	Not Occupied	—	—
16	1.5	GN / BN	286	Driver Seat Front Vertical Motor Up Control	I	—

K40D Driver Seat Adjuster Memory Module X3

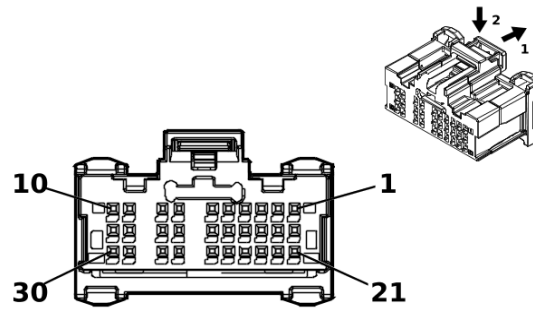

5202284

Connector Part Information

Harness Type: Front Seat Wiring Harness - Driver
 OEM Connector: 2309644-1
 Service Connector: Service by Harness - See Part Catalog
 Description: 30-Way F 0.5 MQS Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	EL-35616-58 (BK)	No Tool Required

K40D Driver Seat Adjuster Memory Module X3

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	—	Not Occupied	—	—
2	0.35	BU / GN	614	Seat Memory Switch Set Signal	I	—
3 - 4	—	—	—	Not Occupied	—	—
5	0.35	BN	3038	Driver Seat Right Rear Haptic Movement Motor Control	I	—
6	0.35	YE / BN	3037	Driver Seat Left Rear Haptic Movement Motor Control	I	—
7	—	—	—	Not Occupied	—	—
8	0.35	GN / WH	7530	Driver Seat Adjuster Memory Module LIN Bus 1	I	—
9	0.35	WH	4100	AUTOSAR CAN Bus [-] 4 Serial Data	I	—
10	0.35	BU / VT	4101	AUTOSAR CAN Bus [+] 4 Serial Data	I	—
11 - 15	—	—	—	Not Occupied	—	—
16	0.35	WH	615	Seat Memory Switch Signal 1	I	—
17	—	—	—	Not Occupied	—	—
18	0.35	GN / GY	3758	Driver Seat Adjuster Memory Module LIN Bus 2	I	—
19	0.35	WH	4100	AUTOSAR CAN Bus [-] 4 Serial Data	I	—
20	0.35	BU / VT	4101	AUTOSAR CAN Bus [+] 4 Serial Data	I	—
21 - 30	—	—	—	Not Occupied	—	—

K43 Power Steering Control Module X1

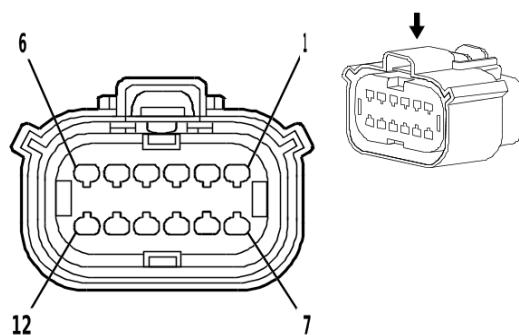

1825165

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 13595088
 Service Connector: 19352907
 Description: 12-Way F 1.5 MX Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19368973	J-35616-2A (GY)	J-38125-217

K43 Power Steering Control Module X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BU	4987	AUTOSAR CAN Bus [+] 1 Serial Data	I	—
2	0.5	WH	4986	AUTOSAR CAN Bus [-] 1 Serial Data	I	—
3 - 4	—	—	—	Not Occupied	—	—
5	0.5	RD / WH	5740	Battery Positive Voltage	I	—
6	—	—	—	Not Occupied	—	—
7	0.5	BU	4987	AUTOSAR CAN Bus [+] 1 Serial Data	I	—
8	0.5	WH	4986	AUTOSAR CAN Bus [-] 1 Serial Data	I	—
9 - 10	—	—	—	Not Occupied	—	—
11	1	BK / WH	1151	Signal Ground	I	—
12	—	—	—	Not Occupied	—	—

K43 Power Steering Control Module X2

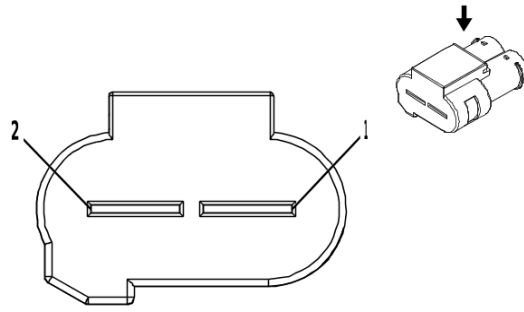

3608474

Connector Part Information

Harness Type: Power Steering Control Module Wiring Harness
 OEM Connector: 13598847
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

K43 Power Steering Control Module X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	20	RD	3542	Battery Positive Voltage	I	—
2	20	BK	350	Ground	I	—

K44 Power Takeoff Control Module X1 (L5P)

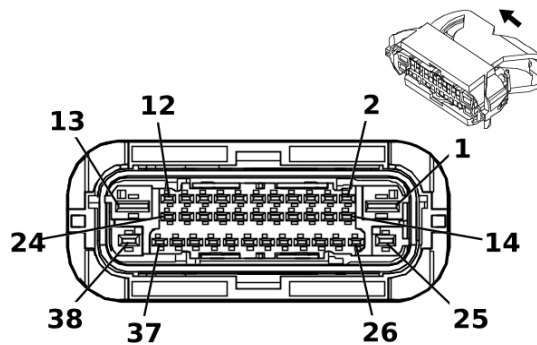

5199902

Connector Part Information

Harness Type: Engine Wiring Harness Chassis
 OEM Connector: 35503406
 Service Connector: Service by Harness - See Part Catalog
 Description: 38-Way F 1.5, 2.8, 4.8 MCP Series, Sealed(BK with BK Inner Connector)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required
II	Not required	J-35616-35 (VT)	No Tool Required
III	Not required	J-35616-40 (BU)	No Tool Required

K44 Power Takeoff Control Module X1 (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	RD / BU	4540	Battery Positive Voltage	III	—
2 - 12	—	—	—	Not Occupied	—	—
13	1.5	BK / WH	251	Signal Ground	III	—
14	0.5	VT / GN	4320	Powertrain Sensor Bus Enable	I	—
15	0.5	GN / WH	488	Power Take-Off Control Switch Signal	I	—
16 - 17	—	—	—	Not Occupied	—	—
18	0.5	BN / GN	4311	Power Take-Off Enable Cabin Switch Normally Closed Signal	I	—
19 - 21	—	—	—	Not Occupied	—	—
22	0.5	BN / YE	11438	Power Take Off Wakeup Signal	I	—
23 - 24	—	—	—	Not Occupied	—	—
25	0.5	GY / GN	6239	Transmission Power Take-Off Engage/Disengage Signal Power	II	—
26	0.5	WH	4055	Private Serial Data Powertrain CAN Bus [+] Serial Data	I	—
27	0.5	WH	4055	Private Serial Data Powertrain CAN Bus [+] Serial Data	I	—
28	0.5	BU / GY	4054	Private Serial Data Powertrain CAN Bus [-] Serial Data	I	—
29	0.5	BU / GY	4054	Private Serial Data Powertrain CAN Bus [-] Serial Data	I	—
30 - 38	—	—	—	Not Occupied	—	—

K44 Power Takeoff Control Module X2 (L5P)

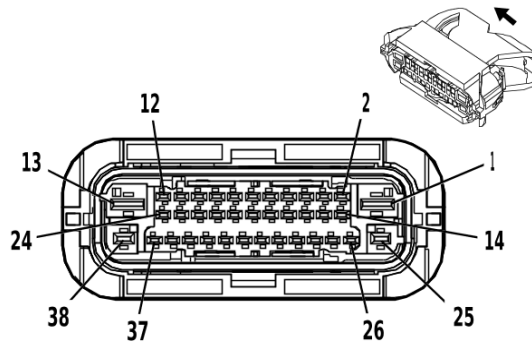

5141918

Connector Part Information

Harness Type: Engine Wiring Harness Chassis
 OEM Connector: 35497871
 Service Connector: Service by Harness - See Part Catalog
 Description: 38-Way F 1.5, 2.8, 4.8 MCP Series, Sealed(BK with BN Inner Connector)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required
II	Not required	J-35616-40 (BU)	No Tool Required

K44 Power Takeoff Control Module X2 (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 7	—	—	—	Not Occupied	—	—
8	0.5	WH / BK	8238	Power Take Off Upfitter Interlock Switch Signal 2	I	—
9	0.5	GN / WH	8236	Power Take Off Solenoid Control Low	I	—
10	0.5	GN / WH	8236	Power Take Off Solenoid Control Low	I	—
11 - 12	—	—	—	Not Occupied	—	—
13	0.5	BU / WH	8235	Power Take Off Solenoid Control High	II	—
14 - 16	—	—	—	Not Occupied	—	—
17	0.5	BN / WH	8234	Power Take Off Pressure Sensor Signal	I	—
18	0.5	YE	8233	Power Take Off Pressure Sensor Low Reference	I	—
19	0.5	WH	8232	Power Take Off Pressure Sensor 5 Volt Reference	I	—
20 - 27	—	—	—	Not Occupied	—	—
28	0.5	WH / GN	6142	Power Take-Off Engine Shutdown Signal	I	—
29 - 34	—	—	—	Not Occupied	—	—
35	0.5	VT / GN	4308	Power Take-Off Remote Throttle Signal	I	—
36	0.5	BU / BN	4408	Power Take-Off Enable Signal	I	—
37 - 38	—	—	—	Not Occupied	—	—

K56 Serial Data Gateway Module X1

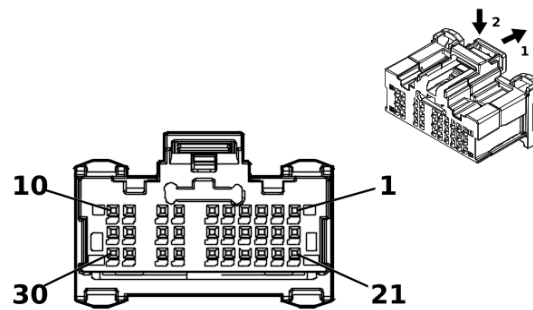

5202284

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 35085331
 Service Connector: 84766507
 Description: 30-Way F 0.5 MQS Series(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19370262	EL-35616-58 (BK)	EL-38125-58


K56 Serial Data Gateway Module X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	RD / VT	3340	Battery Positive Voltage	I	—
2 - 3	—	—	—	Not Occupied	—	—
4	0.35	BK / WH	851	Signal Ground	I	—
5	0.35	BU	4987	AUTOSAR CAN Bus [+] 1 Serial Data	I	—
6	0.35	WH	4986	AUTOSAR CAN Bus [-] 1 Serial Data	I	—
7	0.35	WH	4100	AUTOSAR CAN Bus [-] 4 Serial Data	I	—
8	0.35	BU / VT	4101	AUTOSAR CAN Bus [+] 4 Serial Data	I	—
9	0.35	WH	4976	AUTOSAR CAN Bus [-] 3 Serial Data	I	—
10	0.35	BU / BK	4977	AUTOSAR CAN Bus [+] 3 Serial Data	I	—
11 - 14	—	—	—	Not Occupied	—	—
15	0.35	BU	4987	AUTOSAR CAN Bus [+] 1 Serial Data	I	—
16	0.35	WH	4986	AUTOSAR CAN Bus [-] 1 Serial Data	I	—
17	0.35	WH	4978	AUTOSAR CAN Bus [-] 2 Serial Data	I	—
18	0.35	BU / YE	4979	AUTOSAR CAN Bus [+] 2 Serial Data	I	—
19	0.35	BU / YE	4984	AUTOSAR CAN Bus [-] 5 Serial Data	I	—
20	0.35	BU / WH	4985	AUTOSAR CAN Bus [+] 5 Serial Data	I	—
21 - 24	—	—	—	Not Occupied	—	—
25	0.35	BU	4987	AUTOSAR CAN Bus [+] 1 Serial Data	I	—
26	0.35	WH	4986	AUTOSAR CAN Bus [-] 1 Serial Data	I	—
27	0.35	WH	4978	AUTOSAR CAN Bus [-] 2 Serial Data	I	—
28	0.35	BU / YE	4979	AUTOSAR CAN Bus [+] 2 Serial Data	I	—
29	0.35	BU / YE	4984	AUTOSAR CAN Bus [-] 5 Serial Data	I	—

K56 Serial Data Gateway Module X1 (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
30	0.35	BU / WH	4985	AUTOSAR CAN Bus [+] 5 Serial Data	I	—

K56 Serial Data Gateway Module X2

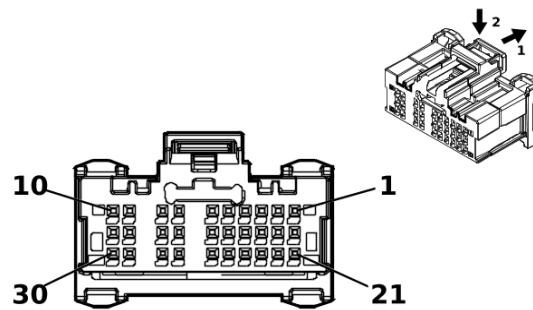

5203942

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 35094158
 Service Connector: 84766509
 Description: 30-Way F 0.5 MQS Series(BK with L-GY Front Housing)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19370262	EL-35616-58 (BK)	EL-38125-58


K56 Serial Data Gateway Module X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 4	—	—	—	Not Occupied	—	—
5	0.35	BK / GY	3559	Passive Start Switch 2 Low Reference	I	—
6	—	—	—	Not Occupied	—	—
7	0.35	GN / VT	5199	Run/Crank Relay Coil Control	I	—
8	—	—	—	Not Occupied	—	—
9	0.35	BU	4973	Ethernet Bus 1R [+]	I	—
10	0.35	YE	4972	Ethernet Bus 1R [-]	I	—
11 - 12	—	—	—	Not Occupied	—	—
13	0.35	BU / BN	4983	AUTOSAR CAN Bus [+] 7 Serial Data	I	—
14	0.35	WH	4982	AUTOSAR CAN Bus [-] 7 Serial Data	I	—
15	0.35	GN / BK	3558	Passive Start Switch Signal 2	I	—
16	0.35	WH	4980	AUTOSAR CAN Bus [-] 6 Serial Data	I	—
17	0.35	GN	2578	Private Serial Data Presentation CAN Bus [+] 1 Serial Data	I	—
18	0.35	BN	2577	Private Serial Data Presentation CAN Bus [-] 1 Serial Data	I	—
19	0.35	WH	7207	Ethernet Bus 1 Enable Signal	I	—
20 - 22	—	—	—	Not Occupied	—	—
23	0.35	BU / WH	4985	AUTOSAR CAN Bus [+] 5 Serial Data	I	—
24	0.35	BU / YE	4984	AUTOSAR CAN Bus [-] 5 Serial Data	I	—
25	—	—	—	Not Occupied	—	—
26	0.35	YE	4981	AUTOSAR CAN Bus [+] 6 Serial Data	I	—

K56 Serial Data Gateway Module X2 (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
27	0.35	VT	2580	Private Serial Data Presentation CAN Bus [+] 2 Serial Data	I	—
28	0.35	GY	2579	Private Serial Data Presentation CAN Bus [-] 2 Serial Data	I	—
29	0.35	BU	4975	Ethernet Bus 1T [+]	I	—
30	0.35	GN	4974	Ethernet Bus 1T [-]	I	—

K56 Serial Data Gateway Module X3

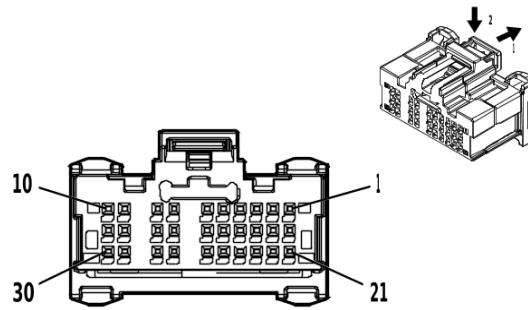

4900333

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 35077574
 Service Connector: 13519319
 Description: 30-Way F 0.5 MQS Series(BK with D-GY Front Housing)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Service by Cable	No Tool Required	No Tool Required

K56 Serial Data Gateway Module X3

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 6	—	—	—	Not Occupied	—	—
7	0.35	YE	4758	Ethernet Bus 2 [+]	I	IOK
	0.35	BN	7211	Ethernet Bus 4 [+]	I	IOR+ UE1
8	0.35	BU	4757	Ethernet Bus 2 [-]	I	IOK
	0.35	GY	7210	Ethernet Bus 4 [-]	I	IOR+ UE1
9	0.35	YE	4758	Ethernet Bus 2 [+]	I	—
10	0.35	BU	4757	Ethernet Bus 2 [-]	I	—
11 - 26	—	—	—	Not Occupied	—	—
27	0.35	GN	7217	Ethernet Bus 7 [+]	I	—
28	0.35	WH	7216	Ethernet Bus 7 [-]	I	—
29 - 30	—	—	—	Not Occupied	—	—

K56U Special Purpose Vehicle Control Module

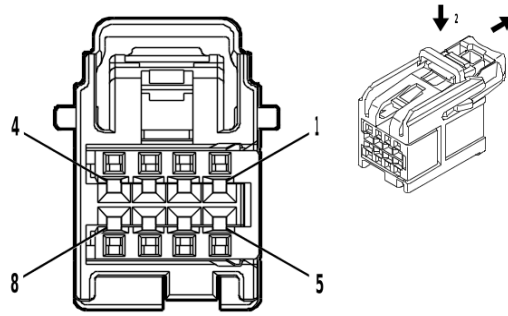

4935776

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 15526972
 Service Connector: 19370429
 Description: 8-Way F 0.64 OCS Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

K56U Special Purpose Vehicle Control Module

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	RD / VT	4640	Battery Positive Voltage	I	—
2	0.5	BU	4987	AUTOSAR CAN Bus [+] 1 Serial Data	I	—
3	0.5	WH	4986	AUTOSAR CAN Bus [-] 1 Serial Data	I	—
4	0.75	BK	1050	Ground	I	—
5 - 8	—	—	—	Not Occupied	—	—

K60 Column Lock Module

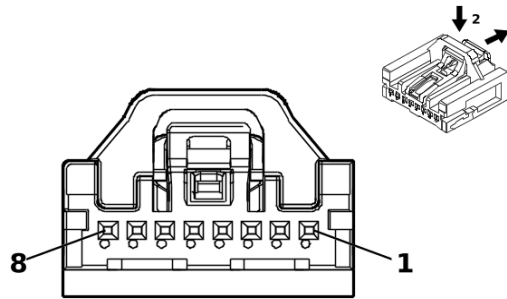

5200269

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 35068228
 Service Connector: 84769201
 Description: 8-Way F Mini 50 Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	EL-35616-58 (BK)	No Tool Required

K60 Column Lock Module

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	RD / VT	3340	Battery Positive Voltage	I	—
2	—	—	—	Not Occupied	—	—
3	0.35	BK	1050	Ground	I	—
4	0.35	BU	4987	AUTOSAR CAN Bus [+] 1 Serial Data	I	—
5	0.35	BU	4987	AUTOSAR CAN Bus [+] 1 Serial Data	I	—
6	0.35	WH	4986	AUTOSAR CAN Bus [-] 1 Serial Data	I	—
7	0.35	WH	4986	AUTOSAR CAN Bus [-] 1 Serial Data	I	—
8	0.35	BU / VT	807	Ignition Off/Accessory Ignition Voltage	I	—

K61 Sunroof Control Module (CF5)

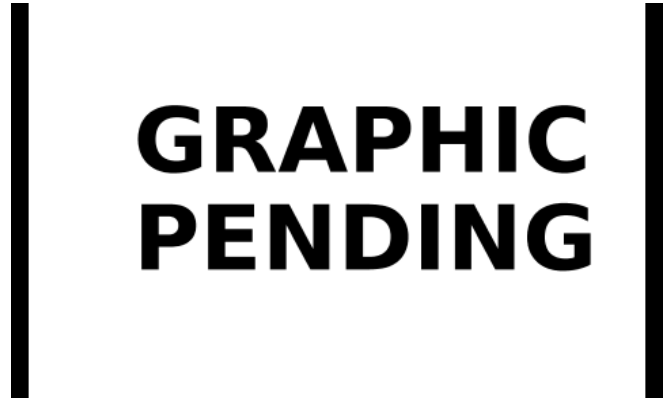

6153939

Connector Part Information

Harness Type: Right Side Marker Lamp Harness
 OEM Connector: 13590453
 Service Connector: Service by Harness - See Part Catalog
 Description: 10-Way F 1.5 OCS Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

K61 Sunroof Control Module (CF5)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
6	—	GN / BN	2854	Body Control Module LIN Bus 8	I	—
8	—	RD / GY	4540	Battery Positive Voltage	I	—
10	—	BK	1050	Ground	I	—

K67 Trailer Brake Control Module

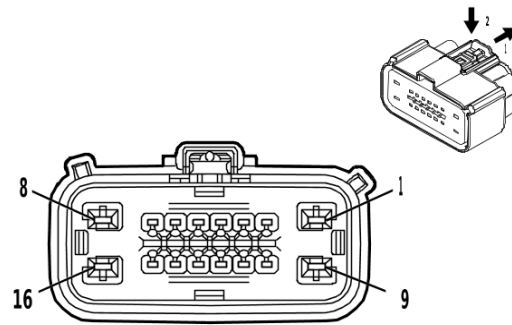

4624589

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 33297568
 Service Connector: 13599889
 Description: 16-Way F 1.5, 2.8 MX Series, Sealed(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	13576377	J-35616-35 (VT)	J-38125-12A
II	85528055	J-35616-2A (GY)	J-38125-217

K67 Trailer Brake Control Module

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	RD / BN	3640	Battery Positive Voltage	I	—
2	0.5	WH / BK	2223	Trailer Brake Apply Signal	II	—
3 - 4	—	—	—	Not Occupied	—	—
5	0.5	YE / BK	2224	Trailer Brake Enable Signal	II	—
6 - 7	—	—	—	Not Occupied	—	—
8	2.5	BU	47	Trailer Auxiliary Control	I	—
9	2.5	BK	1850	Ground	I	—
10 - 11	—	—	—	Not Occupied	—	—
12	0.5	GN / BU	2733	Brake System Control Module LIN Bus 2	II	—
13 - 16	—	—	—	Not Occupied	—	—

K68 Trailer Lamp Control Module

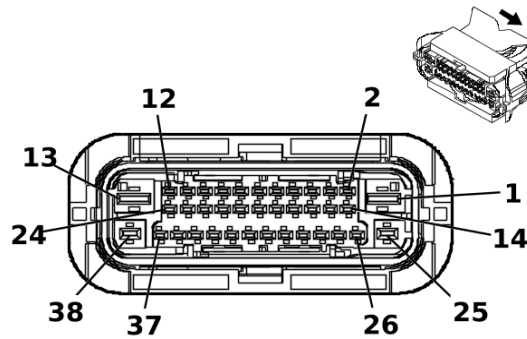

5199340

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 35497867
 Service Connector: 86825458
 Description: 38-Way F 1.5, 2.8, 4.8 MCP Series, Sealed(BK with BN Inner Connector)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19368624	J-35616-35 (VT)	J-38125-212
II	19369235	J-35616-14 (GN)	EL-38125-560A
III	85158596	J-35616-40 (BU)	EL-38125-560A

K68 Trailer Lamp Control Module

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	RD / VT	5640	Battery Positive Voltage	III	—
2	1	YE	1618	Left Rear Trailer Stop/Turn Lamp Control	II	—
3	1	GN	1619	Right Rear Trailer Stop/Turn Lamp Control	II	—
4 - 6	—	—	—	Not Occupied	—	—
7	1	GY	5189	Trailer Backup Lamp Control	II	—
8 - 9	—	—	—	Not Occupied	—	—
10	0.5	VT / WH	739	Run/Crank Ignition 1 Voltage	II	—
11	0.5	BN / YE	820	Center High Mounted Stop Lamp Supply Voltage	II	—
12	—	—	—	Not Occupied	—	—
13	2.5	BK	1750	Ground	III	—
14 - 24	—	—	—	Not Occupied	—	—
25	1	BN	2109	Trailer Park Lamp Control	I	—
26	—	—	—	Not Occupied	—	—
27	0.5	BU / VT	4101	AUTOSAR CAN Bus [+] 4 Serial Data	II	—
28	0.5	WH	4100	AUTOSAR CAN Bus [-] 4 Serial Data	II	—
29	0.5	BU / VT	4101	AUTOSAR CAN Bus [+] 4 Serial Data	II	—
30	0.5	WH	4100	AUTOSAR CAN Bus [-] 4 Serial Data	II	—
31 - 37	—	—	—	Not Occupied	—	—
38	2.5	RD / YE	5840	Battery Positive Voltage	I	—

K69 Transfer Case Control Module (L5P)

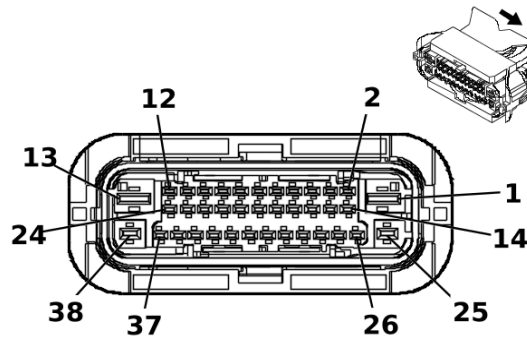

5199340

Connector Part Information

Harness Type: Engine Wiring Harness Chassis
 OEM Connector: 35497867
 Service Connector: Service by Harness - See Part Catalog
 Description: 38-Way F 1.5, 2.8, 4.8 MCP Series, Sealed(BK with BN Inner Connector)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required
II	Not required	J-35616-35 (VT)	No Tool Required
III	Not required	J-35616-40 (BU)	No Tool Required


K69 Transfer Case Control Module (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	3	GN / RD	6042	Cruise Control Switch 5V Reference	III	—
2	—	—	—	Not Occupied	—	—
3	0.5	BU / YE	4979	AUTOSAR CAN Bus [+] 2 Serial Data	I	—
4	0.5	WH	4978	AUTOSAR CAN Bus [-] 2 Serial Data	I	—
5	0.5	WH / GN	7479	Rotary Position Sensor Signal	I	—
6	—	—	—	Not Occupied	—	—
7	0.5	YE	7474	Incremental Encoder Direction Signal	I	—
8	—	—	—	Not Occupied	—	—
9	0.5	YE / WH	1695	4WD Locked Range Indicator Control	I	—
10	—	—	—	Not Occupied	—	—
11	0.5	VT / GY	8017	Secondary Axle Motor Relay Control	I	—
12	0.5	GY / BK	1570	Front Axle Actuator Control	I	—
13	4	YE / VT	1553	Transfer Case Motor Counter Clockwise Control	III	—
14	—	—	—	Not Occupied	—	—
15	0.5	BU / YE	4979	AUTOSAR CAN Bus [+] 2 Serial Data	I	—
16	0.5	WH	4978	AUTOSAR CAN Bus [-] 2 Serial Data	I	—
17	—	—	—	Not Occupied	—	—
18	0.5	VT / GN	439	Run/Crank Ignition 1 Voltage	I	—
19	0.5	BU / GY	7473	Incremental Encoder Impulse Signal	I	—
20	0.5	WH / RD	7477	Gear Position Sensor 5V Reference	I	—

K69 Transfer Case Control Module (L5P) (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
21 - 23	—	—	—	Not Occupied	—	—
24	0.5	GN	8015	Transfer Case Motor Low Reference	I	—
25	2.5	BK	450	Ground	II	—
26	—	—	—	Not Occupied	—	—
27	0.5	GN	8014	Transfer Case Lock Solenoid Low Reference	I	—
28 - 29	—	—	—	Not Occupied	—	—
30	0.5	YE / BK	7478	Gear Position Sensor Low Reference	I	—
31	0.5	WH / GN	7475	Incremental Encoder Sensor Voltage Reference	I	—
32	—	—	—	Not Occupied	—	—
33	0.75	BU	8013	Transfer Case Lock Solenoid Control 2	I	—
34	0.75	YE / BN	1569	Transfer Case Lock Solenoid Valve Control	I	—
35	—	—	—	Not Occupied	—	—
36	0.5	VT	7476	Incremental Encoder Sensor Low Reference	I	—
37	—	—	—	Not Occupied	—	—
38	2.5	YE / GY	1552	Transfer Case Motor Clockwise Control	II	—

K69 Transfer Case Control Module (L8T)

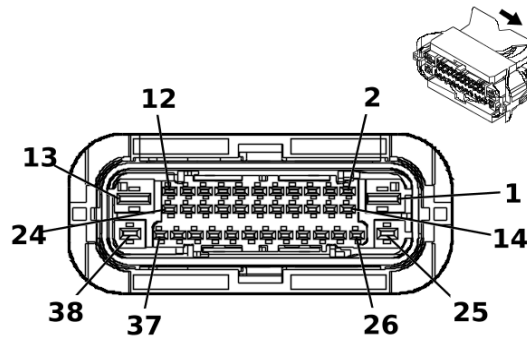

5199340

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 35497867
 Service Connector: 86825458
 Description: 38-Way F 1.5, 2.8, 4.8 MCP Series, Sealed(BK with BN Inner Connector)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19368624	J-35616-35 (VT)	J-38125-212
II	19369235	J-35616-14 (GN)	EL-38125-560A
III	85158596	J-35616-40 (BU)	EL-38125-560A


K69 Transfer Case Control Module (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	3	GN / RD	6042	Cruise Control Switch 5V Reference	III	—
2	—	—	—	Not Occupied	—	—
3	0.5	BU / YE	4979	AUTOSAR CAN Bus [+] 2 Serial Data	II	—
4	0.5	WH	4978	AUTOSAR CAN Bus [-] 2 Serial Data	II	—
5	0.5	WH / GN	7479	Rotary Position Sensor Signal	II	—
6	—	—	—	Not Occupied	—	—
7	0.5	YE	7474	Incremental Encoder Direction Signal	II	—
8	—	—	—	Not Occupied	—	—
9	0.5	YE / WH	1695	4WD Locked Range Indicator Control	II	—
10	—	—	—	Not Occupied	—	—
11	0.5	VT / GY	8017	Secondary Axle Motor Relay Control	II	—
12	0.5	GY / BK	1570	Front Axle Actuator Control	II	—
13	4	YE / VT	1553	Transfer Case Motor Counter Clockwise Control	III	—
14	—	—	—	Not Occupied	—	—
15	0.5	BU / YE	4979	AUTOSAR CAN Bus [+] 2 Serial Data	II	—
16	0.5	WH	4978	AUTOSAR CAN Bus [-] 2 Serial Data	II	—
17	—	—	—	Not Occupied	—	—
18	0.5	VT / GN	439	Run/Crank Ignition 1 Voltage	II	—
19	0.5	BU / GY	7473	Incremental Encoder Impulse Signal	II	—
20	0.5	WH / RD	7477	Gear Position Sensor 5V Reference	II	—

K69 Transfer Case Control Module (L8T) (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
21 - 23	—	—	—	Not Occupied	—	—
24	0.5	GN	8015	Transfer Case Motor Low Reference	II	—
25	2.5	BK	450	Ground	I	—
26	—	—	—	Not Occupied	—	—
27	0.5	GN	8014	Transfer Case Lock Solenoid Low Reference	II	—
28 - 29	—	—	—	Not Occupied	—	—
30	0.5	YE / BK	7478	Gear Position Sensor Low Reference	II	—
31	0.5	WH / GN	7475	Incremental Encoder Sensor Voltage Reference	II	—
32	—	—	—	Not Occupied	—	—
33	0.75	BU	8013	Transfer Case Lock Solenoid Control 2	II	—
34	0.75	YE / BN	1569	Transfer Case Lock Solenoid Valve Control	II	—
35	—	—	—	Not Occupied	—	—
36	0.5	VT	7476	Incremental Encoder Sensor Low Reference	II	—
37	—	—	—	Not Occupied	—	—
38	2.5	YE / GY	1552	Transfer Case Motor Clockwise Control	I	—

K71 Transmission Control Module (L5P)

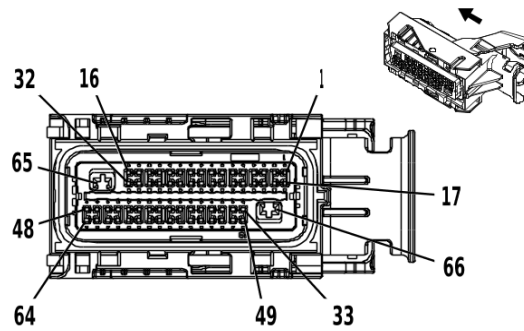

3621452

Connector Part Information

Harness Type: Engine Wiring Harness Chassis
 OEM Connector: 13965710
 Service Connector: Service by Harness - See Part Catalog
 Description: 66-Way F 0.64, 2.8 Series, Sealed(BK with BK Terminal Position Assurance)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required
II	Not required	J-35616-64B (L-BU)	No Tool Required


K71 Transmission Control Module (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	VT / WH	422	Torque Converter Clutch Solenoid Valve Control	II	—
2	0.5	GY / GN	6403	Clutch Solenoid Valve D Control	II	—
3	0.5	WH / BU	4507	Transmission Clutch H Control	II	—
4	0.5	WH	4508	Transmission Clutch G Control	II	—
5 - 6	—	—	—	Not Occupied	—	—
7	0.5	YE / GN	4170	Transmission Output Shaft Speed Sensor Circuit 9V Reference	II	—
8	0.5	YE / BU	4171	Transmission Input Shaft Speed Sensor Circuit 9V Reference	II	—
9 - 11	—	—	—	Not Occupied	—	—
12	0.5	GN / YE	6353	Input Speed Signal	II	—
13	0.5	GN / VT	4510	Transmission Intermediate Speed Signal	II	—
14	0.5	GY / BU	6358	Output Speed Signal	II	—
15	0.5	BN / WH	6254	Transmission Input Speed Sensor Signal	II	—
16	—	—	—	Not Occupied	—	—
17	0.5	GN / WH	1530	Transmission Line Pressure Control Solenoid Valve Control	II	—
18	0.5	YE / BN	6404	Clutch Solenoid Valve E Control	II	—
19	0.5	GY	6402	Clutch Solenoid Valve C Control	II	—
20	0.5	VT	4509	Transmission Clutch F Control	II	—
21	—	—	—	Not Occupied	—	—
22	0.5	GN / BK	7819	Default Disable Solenoid Control	II	—

K71 Transmission Control Module (L5P) (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
23 - 27	—	—	—	Not Occupied	—	—
28	0.5	BK / BN	586	Transmission Fluid Temperature Sensor Low Reference	II	—
29 - 32	—	—	—	Not Occupied	—	—
33	0.5	GN / GY	6387	Transmission High Side Driver 1 Control	II	—
34	—	—	—	Not Occupied	—	—
35	0.5	VT / GN	439	Run/Crank Ignition 1 Voltage	II	—
36	—	—	—	Not Occupied	—	—
37	0.5	BU / YE	4979	AUTOSAR CAN Bus [+] 2 Serial Data	II	—
38	0.5	WH	4978	AUTOSAR CAN Bus [-] 2 Serial Data	II	—
39 - 48	—	—	—	Not Occupied	—	—
49	0.5	GY / BN	6388	Transmission High Side Driver 2 Control	II	—
50 - 52	—	—	—	Not Occupied	—	—
53	0.5	BU / YE	4979	AUTOSAR CAN Bus [+] 2 Serial Data	II	—
54	0.5	WH	4978	AUTOSAR CAN Bus [-] 2 Serial Data	II	—
55 - 62	—	—	—	Not Occupied	—	—
63	0.5	BN / WH	585	Transmission Fluid Temperature Sensor Signal	II	—
64	0.5	BU / WH	3338	Transmission Internal Mode Switch Mode Control X	II	—
65	1.5	BK / WH	251	Signal Ground	I	—
66	1.5	RD / GN	1840	Battery Positive Voltage	I	—

K71 Transmission Control Module (L8T)

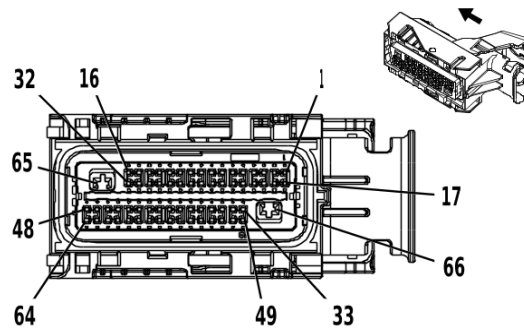

3621452

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13965710
 Service Connector: 19329822
 Description: 66-Way F 0.64, 2.8 Series, Sealed(BK with BK Terminal Position Assurance)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	13587518	J-35616-35 (VT)	J-38125-11A
II	19351723	J-35616-64B (L-BU)	J-38125-213


K71 Transmission Control Module (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	VT / WH	422	Torque Converter Clutch Solenoid Valve Control	II	—
2	0.5	GY / GN	6403	Clutch Solenoid Valve D Control	II	—
3	0.5	WH / BU	4507	Transmission Clutch H Control	II	—
4	0.5	WH	4508	Transmission Clutch G Control	II	—
5 - 6	—	—	—	Not Occupied	—	—
7	0.5	YE / GN	4170	Transmission Output Shaft Speed Sensor Circuit 9V Reference	II	—
8	0.5	YE / BU	4171	Transmission Input Shaft Speed Sensor Circuit 9V Reference	II	—
9 - 11	—	—	—	Not Occupied	—	—
12	0.5	GN / YE	6353	Input Speed Signal	II	—
13	0.5	GN / VT	4510	Transmission Intermediate Speed Signal	II	—
14	0.5	GY / BU	6358	Output Speed Signal	II	—
15	0.5	BN / WH	6254	Transmission Input Speed Sensor Signal	II	—
16	—	—	—	Not Occupied	—	—
17	0.5	GN / WH	1530	Transmission Line Pressure Control Solenoid Valve Control	II	—
18	0.5	YE / BN	6404	Clutch Solenoid Valve E Control	II	—
19	0.5	GY	6402	Clutch Solenoid Valve C Control	II	—
20	0.5	VT	4509	Transmission Clutch F Control	II	—
21	—	—	—	Not Occupied	—	—
22	0.5	GN / BK	7819	Default Disable Solenoid Control	II	—

K71 Transmission Control Module (L8T) (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
23 - 27	—	—	—	Not Occupied	—	—
28	0.5	BK / BN	586	Transmission Fluid Temperature Sensor Low Reference	II	—
29 - 32	—	—	—	Not Occupied	—	—
33	0.5	GN / GY	6387	Transmission High Side Driver 1 Control	II	—
34	—	—	—	Not Occupied	—	—
35	0.5	VT / GN	439	Run/Crank Ignition 1 Voltage	II	—
36	—	—	—	Not Occupied	—	—
37	0.5	BU / YE	4979	AUTOSAR CAN Bus [+] 2 Serial Data	II	—
38	0.5	WH	4978	AUTOSAR CAN Bus [-] 2 Serial Data	II	—
39 - 48	—	—	—	Not Occupied	—	—
49	0.5	GY / BN	6388	Transmission High Side Driver 2 Control	II	—
50 - 52	—	—	—	Not Occupied	—	—
53	0.5	BU / YE	4979	AUTOSAR CAN Bus [+] 2 Serial Data	II	—
54	0.5	WH	4978	AUTOSAR CAN Bus [-] 2 Serial Data	II	—
55 - 62	—	—	—	Not Occupied	—	—
63	0.5	BN / WH	585	Transmission Fluid Temperature Sensor Signal	II	—
64	0.5	BU / WH	3338	Transmission Internal Mode Switch Mode Control X	II	—
65	1.5	BK / WH	251	Signal Ground	I	—
66	1.5	RD / GN	1840	Battery Positive Voltage	I	—

K73 Telematic Control Module X1

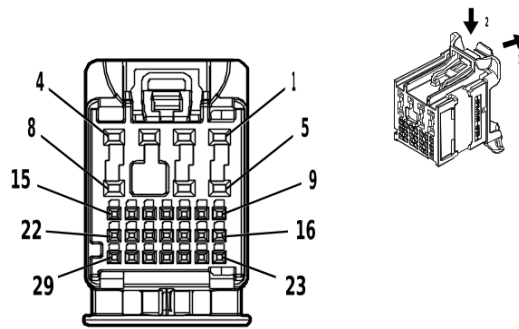

4496253

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 35364134
 Service Connector: 13534974
 Description: 29-Way F 0.5 NANO, 1.2 MCON, stAK50h Series(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19370262	EL-35616-58 (BK)	EL-38125-58
II	84729890	J-35616-12 (BU)	J-38125-215A


K73 Telematic Control Module X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	RD / YE	3040	Battery Positive Voltage	II	—
2 - 3	—	—	—	Not Occupied	—	—
4	0.75	BK / WH	1051	Signal Ground	II	—
5	—	—	—	Not Occupied	—	—
6	0.35	GN / BK	2515	Telematics Switch Supply Voltage	II	—
7 - 8	—	—	—	Not Occupied	—	—
9	0.35	BU / YE	4984	AUTOSAR CAN Bus [-] 5 Serial Data	I	—
10	0.35	BU / WH	4985	AUTOSAR CAN Bus [+] 5 Serial Data	I	—
11	0.35	GN / WH	2514	Telematics Switch Signal	I	—
12	—	—	—	Not Occupied	—	—
13	0.35	Bare	1792	Low Reference	I	—
14	0.35	BK / GY	5152	Voice Recognition Audio [-] Control	I	—
15	0.35	GY / YE	5149	Voice Recognition Audio Signal	I	—
16	0.35	BU / YE	4984	AUTOSAR CAN Bus [-] 5 Serial Data	I	—
17	0.35	BU / WH	4985	AUTOSAR CAN Bus [+] 5 Serial Data	I	—
18	—	—	—	Not Occupied	—	—
19	0.35	YE / VT	2516	Telematics Switch Green LED Indicator Control	I	—
20	—	—	—	Not Occupied	—	—
21	0.35	BK / BN	654	Cellular Telephone Microphone Low Reference	I	—
22	0.35	BU	655	Cellular Telephone Microphone Signal	I	—
23 - 25	—	—	—	Not Occupied	—	—

K73 Telematic Control Module X1 (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
26	0.35	BN / WH	2517	Telematics Switch Red LED Indicator Control	I	—
27	—	—	—	Not Occupied	—	—
28	0.35	BN	7211	Ethernet Bus 4 [+]	I	—
29	0.35	GY	7210	Ethernet Bus 4 [-]	I	—

K73 Telematic Control Module X2

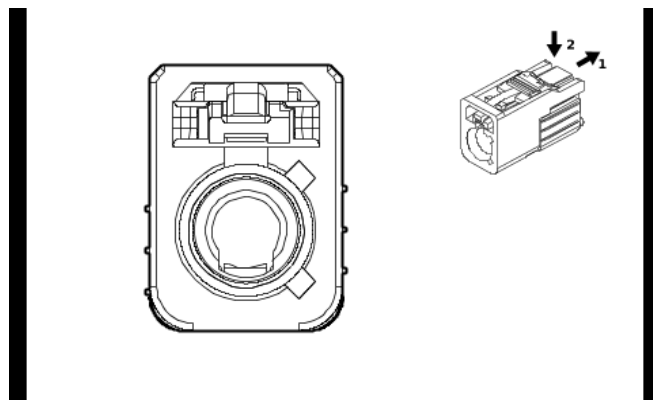

5630760

Connector Part Information

Harness Type: Instrument Panel Wiring Harness COAX
 OEM Connector: 33340312
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way F Coax Type(VT)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

K73 Telematic Control Module X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	Coax Cable	—	(Cell only) Coaxial Antenna Cell Phone Signal	I	—

K73 Telematic Control Module X3

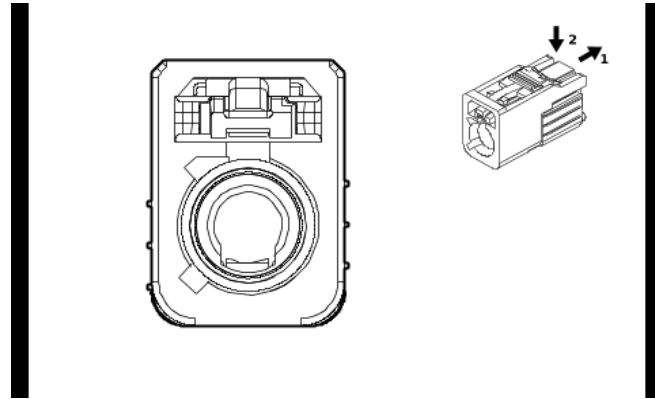

5630785

Connector Part Information

Harness Type: Instrument Panel Wiring Harness COAX
 OEM Connector: 33340314
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way F Coax Type(BN)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

K73 Telematic Control Module X3

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	Coax Ca- ble	—	(GPS/Cell) Coaxial Antenna Cell/GPS combined Signal	I	—

K77 Remote Function Actuator Module

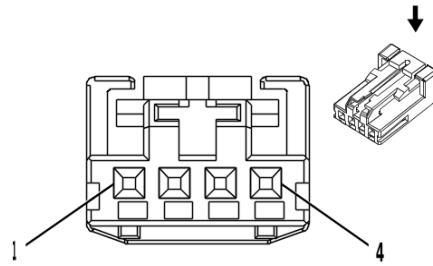

2717162

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 13969166
 Service Connector: 19367524
 Description: 4-Way F 0.64 Micro-Quadlock Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

K77 Remote Function Actuator Module

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	RD / VT	2640	Battery Positive Voltage	I	—
2	0.5	GN / YE	2862	Body Control Module LIN Bus 16	I	UET
	0.35	GN / YE	2862	Body Control Module LIN Bus 16		- UET
3	—	—	—	Not Occupied	—	—
4	0.75	BK / WH	1451	Signal Ground	I	—

K85P Restraints Occupant Classification System Module - Passenger (AL0)

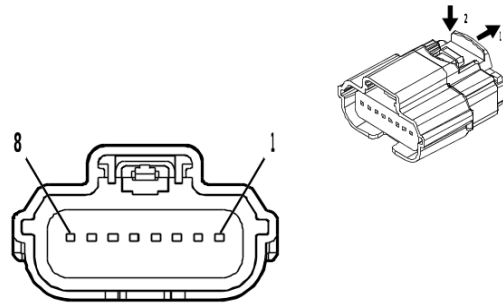

4708234

Connector Part Information

Harness Type: Front Seat Wiring Harness - Passenger
 OEM Connector: 31404-9110
 Service Connector: Service by Harness - See Part Catalog
 Description: 8-Way F 64 Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

K85P Restraints Occupant Classification System Module - Passenger (AL0)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	RD / GN	4440	Battery Positive Voltage	I	—
2	0.5	BU	4987	AUTOSAR CAN Bus [+] 1 Serial Data	I	—
3	0.5	BU	4987	AUTOSAR CAN Bus [+] 1 Serial Data	I	—
4	0.5	WH	4986	AUTOSAR CAN Bus [-] 1 Serial Data	I	—
5	0.5	WH	4986	AUTOSAR CAN Bus [-] 1 Serial Data	I	—
6	0.5	BK / WH	1251	Signal Ground	I	—
7	0.5	OG / BN	3947	Passenger Automatic Locking Retractor Switch Signal	I	AL0
8	0.5	GY / OG	3946	Passenger Automatic Locking Retractor Switch Low Reference	I	AL0

K111 Fuel Pump Power Control Module (FHS)

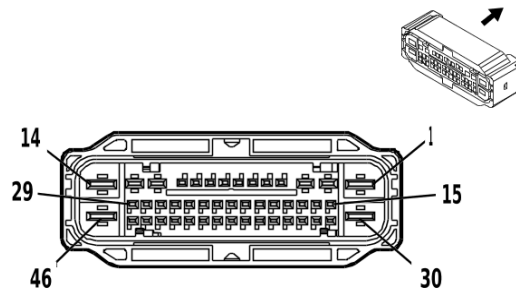

4162046

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 33222138
 Service Connector: 19333026
 Description: 46-Way F 1.2 OCS, 2.8, 6.3 CTS Series, Sealed(GY)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	13575368	J-35616-35 (VT)	J-38125-36
II	19370818	J-35616-12 (BU)	J-38125-215A
III	84634921	J-35616-42 (RD)	J-38125-212


K111 Fuel Pump Power Control Module (FHS)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	WH / BN	4138	Fuel Pump Supply Voltage Phase 3	III	—
2	2.5	GY	120	Fuel Pump Control	I	—
3	0.5	VT / WH	639	Run/Crank Ignition 1 Voltage	I	—
4	—	—	—	Not Occupied	—	—
5	0.5	BK / GY	3802	Fuel Composition Sensor Low Reference	II	—
6	—	—	—	Not Occupied	—	—
7	0.5	WH	4055	Private Serial Data Powertrain CAN Bus [+] Serial Data	II	—
8	0.5	BU / GY	4054	Private Serial Data Powertrain CAN Bus [-] Serial Data	II	—
9	—	—	—	Not Occupied	—	—
10	0.5	VT / GN	4320	Powertrain Sensor Bus Enable	II	—
11	0.5	GN / GY	465	Fuel Pump Primary Relay Control	II	—
12 - 13	—	—	—	Not Occupied	—	—
14	2.5	BK / WH	1951	Signal Ground	III	—
15	0.5	WH	7444	Fuel Pump Assembly Shield Ground	II	—
16	0.5	VT / BN	3803	Fuel Composition Sensor Signal	II	—
17 - 18	—	—	—	Not Occupied	—	—
19	0.5	BN / RD	7445	Fuel Line Pressure Sensor 5V Reference	II	—
20	0.5	BU / WH	7446	Fuel Pressure Sensor Signal	II	—
21	0.5	BK / GN	6281	Fuel Level Sensor Low Reference	II	—

K111 Fuel Pump Power Control Module (FHS) (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
22	—	—	—	Not Occupied	—	—
23	0.5	BK / BN	6284	Fuel Tank Pressure Sensor Low Reference	II	—
24 - 29	—	—	—	Not Occupied	—	—
30	2.5	YE / GY	4137	Fuel Pump Supply Voltage Phase 2	III	—
31 - 34	—	—	—	Not Occupied	—	—
35	0.5	BK / YE	7447	Fuel Pressure Sensor Low Reference	II	—
36	—	—	—	Not Occupied	—	—
37	0.5	BU / GN	1936	Primary Fuel Level Sensor Signal	II	—
38	—	—	—	Not Occupied	—	—
39	0.5	YE / RD	2709	Fuel Tank Pressure Sensor 5V Reference	II	—
40	0.5	BU / GN	890	Fuel Tank Pressure Sensor Signal	II	—
41 - 42	—	—	—	Not Occupied	—	—
43	0.5	WH	1310	EVAP Vent Solenoid Valve Control	II	—
44	—	—	—	Not Occupied	—	—
45	0.5	WH / RD	11031	Fuel Tank Isolation Valve Supply Voltage	II	—
46	2.5	RD / VT	1940	Battery Positive Voltage	III	—

K111 Fuel Pump Power Control Module (L5P)

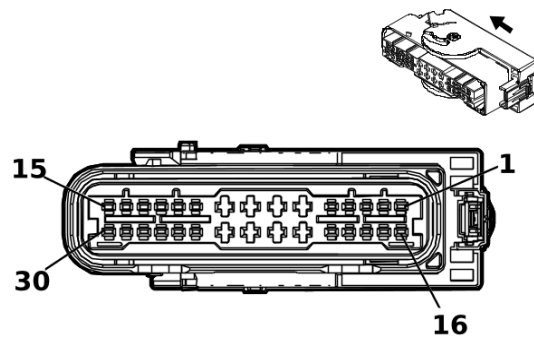

3240109

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 13551118
 Service Connector: 85140064
 Description: 30-Way F 1.5, 2.8 MCP Series, Sealed(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19329958	J-35616-2A (GY)	J-38125-11A
II	19371214	J-35616-4A (PU)	J-38125-215A


K111 Fuel Pump Power Control Module (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	—	Not Occupied	—	—
2	0.5	BU / YE	6861	Water In Fuel Sensor Signal	I	—
3	0.5	BK / BU	6863	Water In Fuel Sensor Low Reference	I	—
4	0.5	BN / GY	7072	Fuel Temperature Sensor 1 Signal	I	—
5 - 6	—	—	—	Not Occupied	—	—
7	2.5	RD / VT	1940	Battery Positive Voltage	II	—
8	2.5	GY	120	Fuel Pump Control	II	—
9	2.5	YE / GY	4137	Fuel Pump Supply Voltage Phase 2	II	—
10 - 11	—	—	—	Not Occupied	—	—
12	0.5	BN / RD	7445	Fuel Line Pressure Sensor 5V Reference	I	—
13	0.5	BU / GN	1936	Primary Fuel Level Sensor Signal	I	—
14	—	—	—	Not Occupied	—	—
15	0.5	BU / GY	4054	Private Serial Data Powertrain CAN Bus [-] Serial Data	I	—
16	1	VT / GN	4320	Powertrain Sensor Bus Enable	I	—
17	—	—	—	Not Occupied	—	—
18	0.5	GN / GY	465	Fuel Pump Primary Relay Control	I	—
19	0.5	BN / WH	7073	Fuel Temperature Sensor 1 Low Reference	I	—
20 - 21	—	—	—	Not Occupied	—	—
22	2.5	BK / WH	1951	Signal Ground	II	—
23	0.5	WH	7444	Fuel Pump Assembly Shield Ground	II	—

K111 Fuel Pump Power Control Module (L5P) (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
24	2.5	WH / BN	4138	Fuel Pump Supply Voltage Phase 3	II	—
25	—	—	—	Not Occupied	—	—
26	0.5	BU / WH	7446	Fuel Pressure Sensor Signal	I	—
27	0.5	BK / YE	7447	Fuel Pressure Sensor Low Reference	I	—
28	0.5	BK / GN	6281	Fuel Level Sensor Low Reference	I	—
29	—	—	—	Not Occupied	—	—
30	0.5	WH	4055	Private Serial Data Powertrain CAN Bus [+] Serial Data	I	—

K111 Fuel Pump Power Control Module (L5P&N2N)

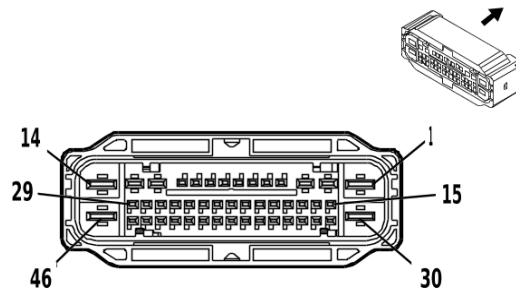

4162046

Connector Part Information

Harness Type: Fuel Pump Power Control Module Harness
 OEM Connector: 33222138
 Service Connector: Service by Harness - See Part Catalog
 Description: 46-Way F 1.2 OCS, 2.8, 6.3 CTS Series, Sealed(GY)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required
II	Not required	J-35616-35 (VT)	No Tool Required
III	Not required	J-35616-40 (BU)	No Tool Required


K111 Fuel Pump Power Control Module (L5P&N2N)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	WH / BN	4138	Fuel Pump Supply Voltage Phase 3	III	—
2	2.5	GY	120	Fuel Pump Control	II	—
3	0.5	VT / WH	639	Run/Crank Ignition 1 Voltage	II	—
4 - 5	—	—	—	Not Occupied	—	—
6	0.75	BU / GN	11437	Secondary Fuel Pump Disable Signal	I	—
7	0.5	WH	4055	Private Serial Data Powertrain CAN Bus [+] Serial Data	I	—
8	0.5	BU / GY	4054	Private Serial Data Powertrain CAN Bus [-] Serial Data	I	—
9	—	—	—	Not Occupied	—	—
10	0.75	VT / GN	4320	Powertrain Sensor Bus Enable	I	—
11	0.5	GN / GY	465	Fuel Pump Primary Relay Control	I	—
12	—	—	—	Not Occupied	—	—
13	1	BU / GN	2120	Secondary Fuel Pump Control	II	—
14	2.5	BK / WH	1951	Signal Ground	III	—
15	0.75	WH	7444	Fuel Pump Assembly Shield Ground	I	—
16	0.5	BU / YE	6861	Water In Fuel Sensor Signal	I	—
17 - 18	—	—	—	Not Occupied	—	—
19	0.5	BN / RD	7445	Fuel Line Pressure Sensor 5V Reference	I	—
20	0.75	BU / WH	7446	Fuel Pressure Sensor Signal	I	—
21	0.5	BK / GN	6281	Fuel Level Sensor Low Reference	I	—

K111 Fuel Pump Power Control Module (L5P&N2N) (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
22	0.5	BK / BU	6282	Fuel Level Sensor 2 Low Reference	I	—
23	0.5	BK / BU	6863	Water In Fuel Sensor Low Reference	I	—
24	0.5	BN / WH	7073	Fuel Temperature Sensor 1 Low Reference	I	—
25 - 29	—	—	—	Not Occupied	—	—
30	2.5	YE / GY	4137	Fuel Pump Supply Voltage Phase 2	III	—
31 - 34	—	—	—	Not Occupied	—	—
35	0.5	BK / YE	7447	Fuel Pressure Sensor Low Reference	I	—
36	0.5	BN / GY	7072	Fuel Temperature Sensor 1 Signal	I	—
37	0.75	BU / GN	1936	Primary Fuel Level Sensor Signal	I	—
38	0.5	BU / WH	1937	Secondary Fuel Level Sensor Signal	I	—
39 - 43	—	—	—	Not Occupied	—	—
44	1	BK / GN	1580	Fuel Pump Low Reference	I	—
45	—	—	—	Not Occupied	—	—
46	2.5	RD / VT	1940	Battery Positive Voltage	III	—

K111 Fuel Pump Power Control Module (L8T)

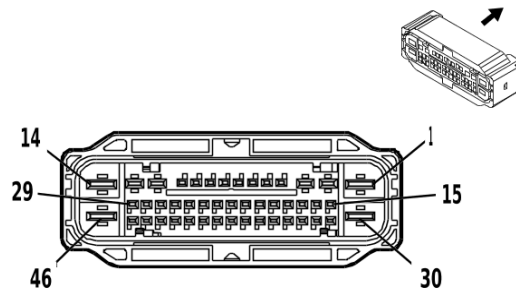

4162046

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 33222138
 Service Connector: 19333026
 Description: 46-Way F 1.2 OCS, 2.8, 6.3 CTS Series, Sealed(GY)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	13575368	J-35616-35 (VT)	J-38125-36
II	19370818	J-35616-12 (BU)	J-38125-215A
III	84634921	J-35616-42 (RD)	J-38125-212


K111 Fuel Pump Power Control Module (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	WH / BN	4138	Fuel Pump Supply Voltage Phase 3	III	—
2	2.5	GY	120	Fuel Pump Control	I	—
3	0.5	VT / WH	639	Run/Crank Ignition 1 Voltage	I	—
4 - 6	—	—	—	Not Occupied	—	—
7	0.5	WH	4055	Private Serial Data Powertrain CAN Bus [+] Serial Data	II	—
8	0.5	BU / GY	4054	Private Serial Data Powertrain CAN Bus [-] Serial Data	II	—
9	—	—	—	Not Occupied	—	—
10	0.5	VT / GN	4320	Powertrain Sensor Bus Enable	II	—
11	0.5	GN / GY	465	Fuel Pump Primary Relay Control	II	—
12 - 13	—	—	—	Not Occupied	—	—
14	2.5	BK / WH	1951	Signal Ground	III	—
15	0.5	WH	7444	Fuel Pump Assembly Shield Ground	II	—
16 - 18	—	—	—	Not Occupied	—	—
19	0.5	BN / RD	7445	Fuel Line Pressure Sensor 5V Reference	II	—
20	0.5	BU / WH	7446	Fuel Pressure Sensor Signal	II	—
21	0.5	BK / GN	6281	Fuel Level Sensor Low Reference	II	—
22	—	—	—	Not Occupied	—	—
23	0.5	BK / BN	6284	Fuel Tank Pressure Sensor Low Reference	II	—
24 - 29	—	—	—	Not Occupied	—	—

K111 Fuel Pump Power Control Module (L8T) (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
30	2.5	YE / GY	4137	Fuel Pump Supply Voltage Phase 2	III	—
31 - 34	—	—	—	Not Occupied	—	—
35	0.5	BK / YE	7447	Fuel Pressure Sensor Low Reference	II	—
36	—	—	—	Not Occupied	—	—
37	0.5	BU / GN	1936	Primary Fuel Level Sensor Signal	II	—
38	—	—	—	Not Occupied	—	—
39	0.5	YE / RD	2709	Fuel Tank Pressure Sensor 5V Reference	II	—
40	0.5	BU / GN	890	Fuel Tank Pressure Sensor Signal	II	—
41 - 42	—	—	—	Not Occupied	—	—
43	0.5	WH	1310	EVAP Vent Solenoid Valve Control	II	—
44	—	—	—	Not Occupied	—	—
45	0.5	WH / RD	11031	Fuel Tank Isolation Valve Supply Voltage	II	—
46	2.5	RD / VT	1940	Battery Positive Voltage	III	—

K111 Fuel Pump Power Control Module (L8T&N2M)

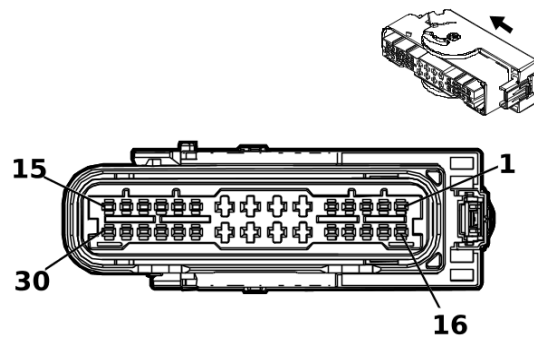

3240109

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 13551118
 Service Connector: 85140064
 Description: 30-Way F 1.5, 2.8 MCP Series, Sealed(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19329958	J-35616-2A (GY)	J-38125-11A
II	19371214	J-35616-4A (PU)	J-38125-215A


K111 Fuel Pump Power Control Module (L8T&N2M)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 6	—	—	—	Not Occupied	—	—
7	2.5	RD / VT	1940	Battery Positive Voltage	II	—
8	2.5	GY	120	Fuel Pump Control	II	—
9	2.5	YE / GY	4137	Fuel Pump Supply Voltage Phase 2	II	—
10	0.5	YE / RD	2709	Fuel Tank Pressure Sensor 5V Reference	I	—
11	0.5	BU / GN	890	Fuel Tank Pressure Sensor Signal	I	—
12	0.5	BN / RD	7445	Fuel Line Pressure Sensor 5V Reference	I	—
13	0.5	BU / GN	1936	Primary Fuel Level Sensor Signal	I	—
14	—	—	—	Not Occupied	—	—
15	0.5	BU / GY	4054	Private Serial Data Powertrain CAN Bus [-] Serial Data	I	—
16	0.5	VT / GN	4320	Powertrain Sensor Bus Enable	I	—
17	—	—	—	Not Occupied	—	—
18	0.5	GN / GY	465	Fuel Pump Primary Relay Control	I	—
19 - 20	—	—	—	Not Occupied	—	—
21	0.5	WH	1310	EVAP Vent Solenoid Valve Control	II	—
22	2.5	BK / WH	1951	Signal Ground	II	—
23	0.5	WH	7444	Fuel Pump Assembly Shield Ground	II	—
24	2.5	WH / BN	4138	Fuel Pump Supply Voltage Phase 3	II	—
25	0.5	BK / BN	6284	Fuel Tank Pressure Sensor Low Reference	I	—
26	0.5	BU / WH	7446	Fuel Pressure Sensor Signal	I	—

K111 Fuel Pump Power Control Module (L8T&N2M) (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
27	0.5	BK / YE	7447	Fuel Pressure Sensor Low Reference	I	—
28	0.5	BK / GN	6281	Fuel Level Sensor Low Reference	I	—
29	—	—	—	Not Occupied	—	—
30	0.5	WH	4055	Private Serial Data Powertrain CAN Bus [+] Serial Data	I	—

K111 Fuel Pump Power Control Module (L8T&N2N)

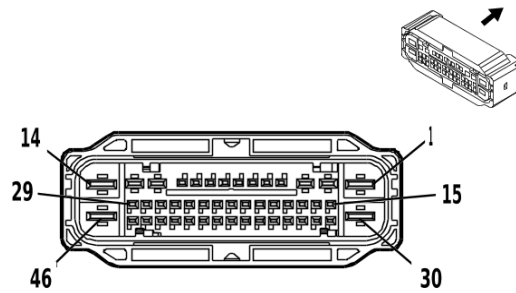

4162046

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 33222138
 Service Connector: 19333026
 Description: 46-Way F 1.2 OCS, 2.8, 6.3 CTS Series, Sealed(GY)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	13575368	J-35616-35 (VT)	J-38125-36
II	19370818	J-35616-12 (BU)	J-38125-215A
III	84634921	J-35616-42 (RD)	J-38125-212


K111 Fuel Pump Power Control Module (L8T&N2N)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	WH / BN	4138	Fuel Pump Supply Voltage Phase 3	III	—
2	2.5	GY	120	Fuel Pump Control	I	—
3	0.5	VT / WH	639	Run/Crank Ignition 1 Voltage	I	—
4 - 5	—	—	—	Not Occupied	—	—
6	0.5	BU / GN	11437	Secondary Fuel Pump Disable Signal	II	—
7	0.5	WH	4055	Private Serial Data Powertrain CAN Bus [+] Serial Data	II	—
8	0.5	BU / GY	4054	Private Serial Data Powertrain CAN Bus [-] Serial Data	II	—
9	—	—	—	Not Occupied	—	—
10	0.5	VT / GN	4320	Powertrain Sensor Bus Enable	II	—
11	0.5	GN / GY	465	Fuel Pump Primary Relay Control	II	—
12	1	BK / GN	1580	Fuel Pump Low Reference	I	—
13	1	BU / GN	2120	Secondary Fuel Pump Control	I	—
14	2.5	BK / WH	1951	Signal Ground	III	—
15	0.5	WH	7444	Fuel Pump Assembly Shield Ground	II	—
16 - 18	—	—	—	Not Occupied	—	—
19	0.5	BN / RD	7445	Fuel Line Pressure Sensor 5V Reference	II	—
20	0.5	BU / WH	7446	Fuel Pressure Sensor Signal	II	—
21	0.5	BK / GN	6281	Fuel Level Sensor Low Reference	II	—
22	0.5	BK / BU	6282	Fuel Level Sensor 2 Low Reference	II	—

K111 Fuel Pump Power Control Module (L8T&N2N) (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
23	0.5	BK / BN	6284	Fuel Tank Pressure Sensor Low Reference	II	—
24	0.5	BK / GN	54	Evaporative Leak Check Tank Vapor Pressure Sensor Low Reference	II	—
25	0.5	GN / RD	69	Evaporative Leak Check Tank Vapor Pressure Sensor Voltage Reference	II	—
26 - 29	—	—	—	Not Occupied	—	—
30	2.5	YE / GY	4137	Fuel Pump Supply Voltage Phase 2	III	—
31 - 34	—	—	—	Not Occupied	—	—
35	0.5	BK / YE	7447	Fuel Pressure Sensor Low Reference	II	—
36	—	—	—	Not Occupied	—	—
37	0.5	BU / GN	1936	Primary Fuel Level Sensor Signal	II	—
38	0.5	BU / WH	1937	Secondary Fuel Level Sensor Signal	II	—
39	0.5	YE / RD	2709	Fuel Tank Pressure Sensor 5V Reference	II	—
40	0.5	BU / GN	890	Fuel Tank Pressure Sensor Signal	II	—
41	0.5	YE / BU	316	Evaporative Leak Check Tank Vapor Pressure Signal	II	—
42	—	—	—	Not Occupied	—	—
43	0.5	WH	1310	EVAP Vent Solenoid Valve Control	II	FHS L8T+ N2L
	0.5	WH / GN	332	Evaporative Leak Check Switching Valve Control	II	
44	0.5	VT / WH	338	Evaporative Leak Check Pump Motor Control	II	—
45	—	—	—	Not Occupied	—	—
46	2.5	RD / VT	1940	Battery Positive Voltage	III	—

K115 Reductant Control Module (L5P)

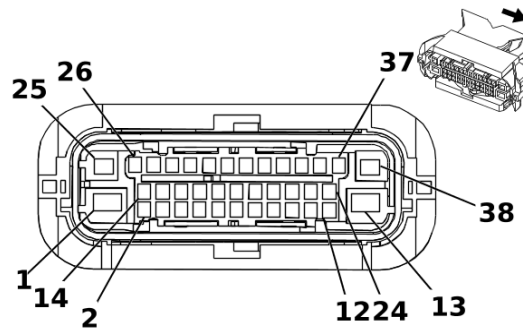

3240110

Connector Part Information

Harness Type: Emission Reduction Fluid Tank Reservoir Wire Harness
 OEM Connector: 13582126
 Service Connector: Service by Harness - See Part Catalog
 Description: 38-Way F 1.5 CTS, 2.8 MCP, 4.8 MCP Series, Sealed(BK with BK Inner Connector)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required
II	Not required	J-35616-40 (BU)	No Tool Required
III	Not required	J-35616-4A (PU)	No Tool Required


K115 Reductant Control Module (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	3.0	BK	2040	Battery Positive Voltage	II	—
2	1.0	BN	3676	Diesel Exhaust Fluid Heating Tank 2 Heater Control	I	—
3	—	—	—	Not Occupied	—	—
4	1.0	YE	3677	Diesel Exhaust Fluid Reservoir Heater Control	I	—
5	—	—	—	Not Occupied	—	—
6	0.5	BK	3244	Diesel Exhaust Fluid Tank Temperature Sensor Signal	I	—
7	0.5	BK	7290	Diesel Exhaust Fluid Sensor Voltage Reference 1	I	—
8	0.5	BN	7284	Diesel Exhaust Fluid Liquid Quality Temperature Signal	I	—
9	0.5	BK	8434	Diesel Exhaust Fluid Sensor Low Reference	I	—
10	—	—	—	Not Occupied	—	—
11	1.0	YE	3876	Diesel Exhaust Fluid Smart Pump Supply Voltage Phase 3	I	—
12	—	—	—	Not Occupied	—	—
13	3.0	WH	1650	Ground	II	—
14	1.0	BN	2936	Diesel Exhaust Fluid Heating Tank 2 Heater Control Low	I	—
15	—	—	—	Not Occupied	—	—
16	1.0	BU	4318	Diesel Exhaust Fluid Tank Heater Low Control	I	—

K115 Reductant Control Module (L5P) (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
17	—	—	—	Not Occupied	—	—
18	0.5	BN	3245	Diesel Exhaust Fluid Tank Temperature Sensor Low Reference	I	—
19	0.5	BN	3106	Diesel Exhaust Fluid Pressure Sensor 5 Volt Reference	I	—
20	0.5	BU	3108	Diesel Exhaust Fluid Pressure Sensor Signal	I	—
21	0.5	BU	3107	Diesel Exhaust Fluid Pressure Sensor Low Reference	I	—
22 - 23	—	—	—	Not Occupied	—	—
24	1.0	BN	3875	Diesel Exhaust Fluid Smart Pump Supply Voltage Phase 2	I	—
25	2.0	BK	1650	Ground	III	—
26	1.0	WH	3199	Diesel Exhaust Fluid Pressure Line Heater Control	I	—
27	—	—	—	Not Occupied	—	—
28	1.0	BN	4319	Diesel Exhaust Fluid Line Heater Low Control	I	—
29	—	—	—	Not Occupied	—	—
30	0.5	BN	639	Run/Crank Ignition 1 Voltage	I	—
31	0.5	BU	4977	AUTOSAR CAN Bus [+] 3 Serial Data	I	—
32	0.5	BU	4977	AUTOSAR CAN Bus [+] 3 Serial Data	I	—
33	0.5	BN	4976	AUTOSAR CAN Bus [-] 3 Serial Data	I	—
34	0.5	BN	4976	AUTOSAR CAN Bus [-] 3 Serial Data	I	—
35	—	—	—	Not Occupied	—	—
36	1.0	BU	2937	Diesel Exhaust Fluid Pump Motor Stator Low Reference	I	—
37	1.0	WH	3103	Diesel Exhaust Fluid Smart Pump Control	I	—
38	2.0	RD	3440	Battery Positive Voltage	III	—

K157 Video Processing Module X1

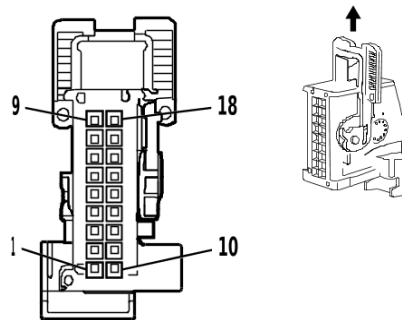

1567082

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 10820547
 Service Connector: 84976200
 Description: 18-Way F Micro-Quadlock Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19300632	J-35616-64B (L-BU)	J-38125-215A

K157 Video Processing Module X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 2	—	—	—	Not Occupied	—	—
3	0.75	BK / WH	1451	Signal Ground	I	—
4 - 9	—	—	—	Not Occupied	—	—
10	0.5	RD / VT	1640	Battery Positive Voltage	I	—
11 - 12	—	—	—	Not Occupied	—	—
13	0.5	WH	4986	AUTOSAR CAN Bus [-] 1 Serial Data	I	—
14	0.5	WH	4986	AUTOSAR CAN Bus [-] 1 Serial Data	I	—
15	0.5	BU	4987	AUTOSAR CAN Bus [+] 1 Serial Data	I	—
16	0.5	BU	4987	AUTOSAR CAN Bus [+] 1 Serial Data	I	—
17 - 18	—	—	—	Not Occupied	—	—

K157 Video Processing Module X3

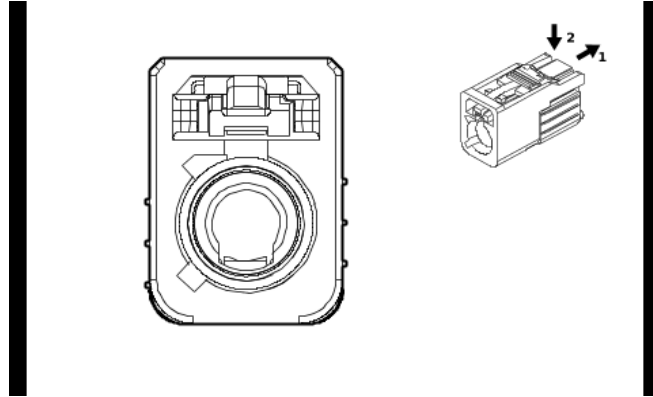

5630785

Connector Part Information

Harness Type: Body Wiring Harness COAX
 OEM Connector: 33340314
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way F Coax Type(BN)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

K157 Video Processing Module X3

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	Coax Cable	—	Video Processing Module Coaxial Video Signal	I	—

K157 Video Processing Module X4

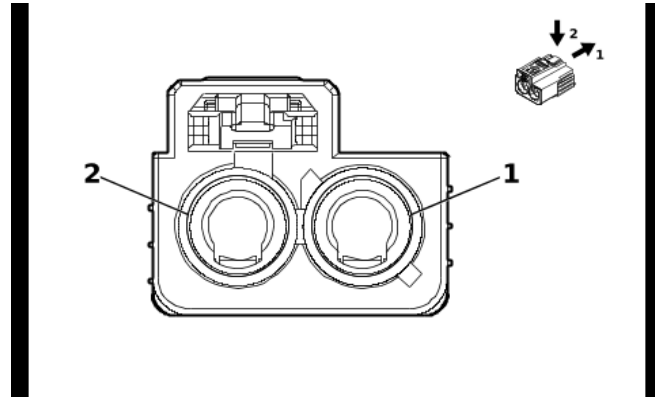

5810836

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 33340386
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 2-Way F Coax Type(BG)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

K157 Video Processing Module X4

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	2548	Cargo Bed Rear Vision Camera LVDS (Low Voltage Differential Signaling) Coaxial Signal	I	—
2	—	—	2548	Cargo Bed Rear Vision Camera LVDS (Low Voltage Differential Signaling) Coaxial Signal	I	—

K157 Video Processing Module X5

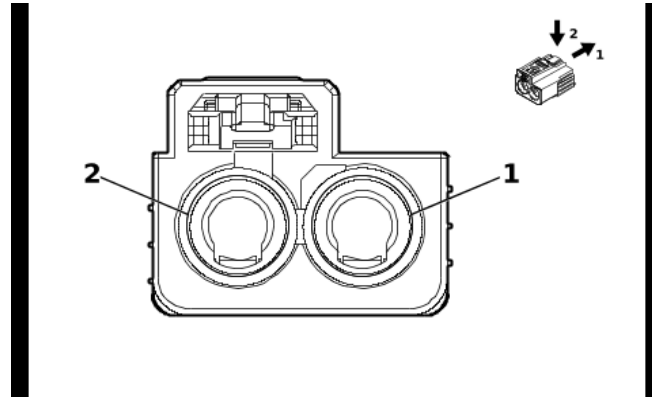

5810827

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 33340382
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 2-Way F Coax Type(GN)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

K157 Video Processing Module X5

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	7886	Trailer 2 Rear Vision Camera LVDS (Low Voltage Differential Signaling) Coaxial Signal	I	—
2	—	—	2421	Trailer Rear Vision Camera LVDS (Low Voltage Differential Signaling) Coaxial Signal	I	—

K157 Video Processing Module X6

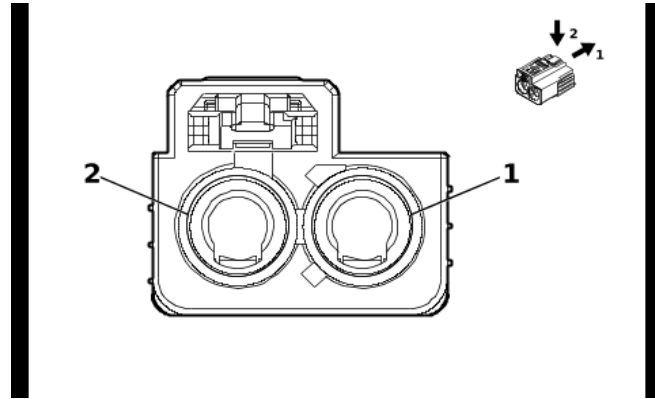

5810832

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 33340383
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 2-Way F Coax Type(BN)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

K157 Video Processing Module X6

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	4724	Right Sideview Camera LVDS (Low Voltage Differential Signaling) Coaxial Signal	I	—
2	—	—	4725	Left Sideview Camera LVDS (Low Voltage Differential Signaling) Coaxial Signal	I	—

K157 Video Processing Module X7

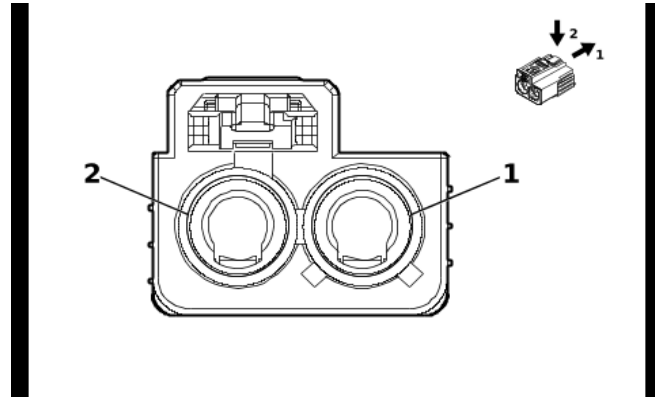

5810835

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 33340387
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 2-Way F Coax Type(CU)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

K157 Video Processing Module X7

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	4722	Frontview Camera LVDS (Low Voltage Differential Signaling) Coaxial Signal	I	—
2	—	—	4721	Rearview Camera LVDS (Low Voltage Differential Signaling) Coaxial Signal	I	—

K182 Parking Assist Control Module X1

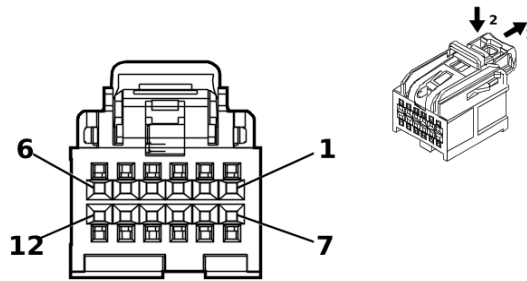

4975223

Connector Part Information

Harness Type: Body Wiring Harness

OEM Connector: 35016616

Service Connector: 13519750

Description: 12-Way F 0.64 OCS Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19300660	J-35616-64B (L-BU)	J-38125-215A

K182 Parking Assist Control Module X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	RD / WH	4740	Battery Positive Voltage	I	—
2	0.5	WH	4986	AUTOSAR CAN Bus [-] 1 Serial Data	I	—
3	0.5	BU	4987	AUTOSAR CAN Bus [+] 1 Serial Data	I	—
4 - 5	—	—	—	Not Occupied	—	—
6	0.5	BK / WH	1551	Signal Ground	I	—
7	—	—	—	Not Occupied	—	—
8	0.5	WH	4986	AUTOSAR CAN Bus [-] 1 Serial Data	I	—
9	0.5	BU	4987	AUTOSAR CAN Bus [+] 1 Serial Data	I	—
10 - 12	—	—	—	Not Occupied	—	—

K182 Parking Assist Control Module X2

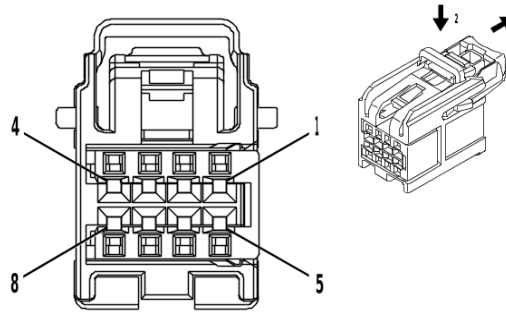

4232228

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 15526973
 Service Connector: 19353873
 Description: 8-Way F 0.64 OCS Series(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

K182 Parking Assist Control Module X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	—	Not Occupied	—	—
2	0.5	YE / WH	2377	Right Rear Middle Parking Assist Sensor Signal	I	—
3	0.5	YE	2375	Left Rear Outer Parking Assist Sensor Signal	I	—
4	0.5	BN / WH	2374	Object Sensor Voltage Reference	I	—
5	0.5	YE / VT	2378	Right Rear Outer Parking Assist Sensor Signal	I	—
6	0.5	YE / BU	2376	Left Rear Middle Parking Assist Sensor Signal	I	—
7	—	—	—	Not Occupied	—	—
8	0.5	BK / GY	2379	Object Sensor Low Reference	I	—

K182 Parking Assist Control Module X3

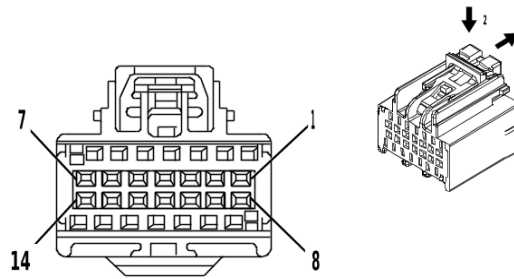

4547098

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 35014564
 Service Connector: 19354933
 Description: 14-Way F 0.64 Kaizen Series(BU)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19303553	J-35616-64B (L-BU)	J-38125-215A

K182 Parking Assist Control Module X3

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 4	—	—	—	Not Occupied	—	—
5	0.5	YE / GY	5216	Left Front Middle Parking Assist Sensor	I	—
6	0.5	WH / GY	5217	Right Front Outer Parking Assist Sensor	I	—
7	0.5	BN	6581	Front Parking Assist Display Control	I	—
8 - 10	—	—	—	Not Occupied	—	—
11	0.5	VT / WH	5215	Left Front Outer Parking Assist Sensor	I	—
12	0.5	VT / GY	5218	Right Front Middle Parking Assist Sensor	I	—
13	—	—	—	Not Occupied	—	—
14	0.5	BK / BU	5214	Front Parking Assist Sensor Low Reference	I	—

K194 Rear Gate Module (QK1)

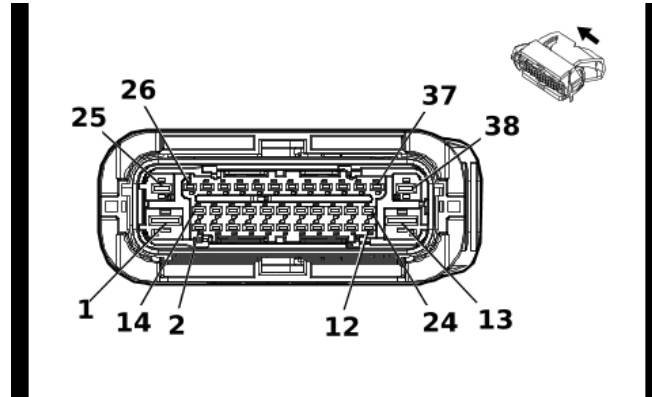

3240112

Connector Part Information

Harness Type: Endgate Wiring Harness
 OEM Connector: 35503407
 Service Connector: Service by Harness - See Part Catalog
 Description: 38-Way F 1.5 CTS, 2.8 MCP, 4.8 MCP Series, Sealed(BK with BU Inner Connector)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required
II	Not required	J-35616-35 (VT)	No Tool Required
III	Not required	J-35616-40 (BU)	No Tool Required


K194 Rear Gate Module (QK1)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	BK	1850	Ground	III	—
2	0.5	WH	4100	AUTOSAR CAN Bus [-] 4 Serial Data	I	—
3	0.5	WH	4100	AUTOSAR CAN Bus [-] 4 Serial Data	I	—
4	—	—	—	Not Occupied	—	—
5	0.5	YE / BK	8085	Rear Closure Latch Primary Status	I	—
6	0.5	BN / GY	10281	Rear Closure Latch Secondary Status Signal	I	—
7	0.5	WH / GN	8084	Rear Closure Latch Neutral Status	I	—
8	0.5	GY / VT	4678	Rear Closure Latch Unlatch Status	I	—
9 - 12	—	—	—	Not Occupied	—	—
13	2.5	RD / VT	4442	Primary Fused Battery Positive Voltage	III	—
14	0.5	BU / VT	4101	AUTOSAR CAN Bus [+] 4 Serial Data	I	—
15	0.5	BU / VT	4101	AUTOSAR CAN Bus [+] 4 Serial Data	I	—
16	0.5	BN	7736	Rear Closure Latch 2 Unlatch Status Signal	I	—
17	—	—	—	Not Occupied	—	—
18	0.5	BN / RD	4683	Rear Closure Position Sensor Voltage Reference	I	—
19	0.5	BK / GN	4687	Rear Closure Position Sensor Low Reference	I	—
20	0.5	BU / VT	4101	AUTOSAR CAN Bus [+] 4 Serial Data	I	—
21	0.5	BN / YE	4686	Rear Closure Position Sensor Signal 2	I	—
22	0.5	BU / WH	4685	Rear Closure Position Sensor Signal 1	I	—

7-390 Electrical Component and Inline Harness Connector End Views**K194 Rear Gate Module (QK1) (cont'd)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
23	0.5	GN / BU	10283	Rear Closure Latch 2 Primary Status Signal	I	—
24	0.5	VT / WH	10284	Rear Closure Latch 2 Secondary Status Signal	I	—
25	1	BN / WH	4690	Rear Closure Open/Close Motor Close Control	II	—
26	0.5	BU / BN	10282	Rear Closure Latch 2 Neutral Status Signal	I	—
27	0.5	GY / BK	1575	Rear Closure Sensor Low Reference 2	I	—
28	0.5	BK / VT	4656	Rear Closure Object Sensor Low Reference	I	—
29	—	—	—	Not Occupied	—	—
30	1	BU	1509	Rear Closure Cinch Latch Motor 2 Release Control	I	—
31	1	GN	1499	Rear Closure Cinch Latch Motor 2 Cinch Control	I	—
32	0.5	WH	4100	AUTOSAR CAN Bus [-] 4 Serial Data	I	—
33	1	BU / GY	4682	Rear Closure Cinch Latch Motor Release Control	I	—
34	1	BN	4681	Rear Closure Cinch Latch Motor Cinch Control	I	—
35	0.5	GN	1577	Rear Closure Clutch Control	I	—
36	0.5	BU / BK	1590	Rear Closure Clutch Low Return	I	—
37	—	—	—	Not Occupied	—	—
38	1	WH	4689	Rear Closure Open/Close Motor Open Control	II	—

K214 Trailer Tire Pressure Indicator Module

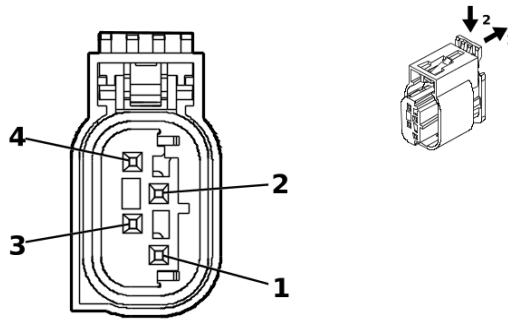

5215490

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 13655424
 Service Connector: 86825461
 Description: 4-Way F 0.64 MTS Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

K214 Trailer Tire Pressure Indicator Module

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	RD / GN	6940	Battery Positive Voltage	I	—
2	0.5	BK	1850	Ground	I	—
3	0.5	GN / YE	2862	Body Control Module LIN Bus 16	I	—
4	—	—	—	Not Occupied	—	—

K219 Lighting Control Module X1

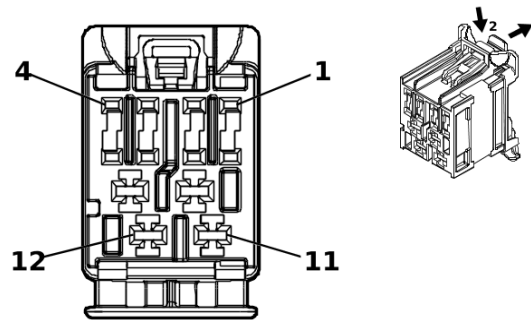

5203784

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 33382115
 Service Connector: 13509990
 Description: 12-Way F 1.2, 2.8 stAK50h Series(L-PU)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	84729890	J-35616-12 (BU)	J-38125-215A
II	87814662	J-35616-4A (PU)	J-38125-557

K219 Lighting Control Module X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH / YE	1254	Left Front Park Lamp Control	I	—
2	—	—	—	Not Occupied	—	—
3	0.5	GN / WH	24	Backup Lamp Control	I	—
4	—	—	—	Not Occupied	—	—
5	0.5	BU / WH	1314	Left Front Turn Signal Lamp Control	I	—
6	0.5	BN / GY	5061	Left Front Fog Lamp Control	I	—
7	0.5	GN / YE	6846	Rear License Plate Lamp Control	I	—
8	0.35	GY / BU	7538	Left Front DRL Control	I	—
9	0.5	RD / VT	7140	Battery Positive Voltage	II	—
10	0.5	YE	712	Left Headlamp Low Beam Control	II	—
11	—	—	—	Not Occupied	—	—
12	0.5	WH	711	Left Headlamp High Beam Control	II	—

K219 Lighting Control Module X2

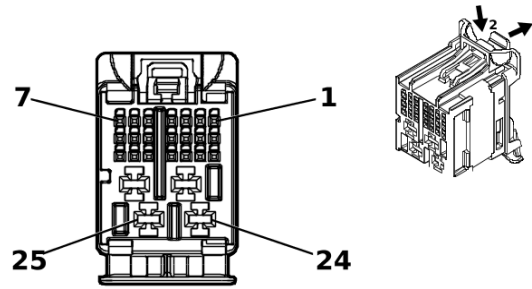

5203807

Connector Part Information

Harness Type: Body Wiring Harness

OEM Connector: 35392286

Service Connector: 13534966

Description: 25-Way F 0.5 MQS, 2.8 MCP Series(GY with GY Inner Connector)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19370262	EL-35616-58 (BK)	EL-38125-58
II	87814662	J-35616-4A (PU)	J-38125-557

K219 Lighting Control Module X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	—	Not Occupied	—	—
2	0.35	WH / YE	7541	Right Rear Stop Lamp Control	I	—
3	0.35	BN / GY	2268	Windshield Washer Relay Control	I	—
4	0.35	BU / BN	38	Backup Lamp Relay Control	I	—
5 - 9	—	—	—	Not Occupied	—	—
10	0.35	BN / GN	196	Windshield Wiper Motor Park Switch Signal	I	—
11	0.35	VT / BK	6568	Front Turn Signal Lamp Feedback Signal	I	—
12	0.35	GY	91	Windshield Wiper Motor Relay Coil Control	I	—
13	0.35	BU / YE	68	Low Coolant Level Indicator Control	I	—
14	0.35	VT	185	Low Washer Fluid Indicator Control	I	—
15 - 18	—	—	—	Not Occupied	—	—
19	0.35	WH / BN	7055	Auxiliary Park Lamp Relay Control	I	—
20	0.35	WH / YE	7545	Right Front Turn Signal Lamp Feedback Signal	I	—
21	0.35	WH / VT	860	Windshield Wiper Switch High Signal	I	—
22	0.5	RD / GN	7740	Battery Positive Voltage	II	—
23	0.5	RD / BU	840	Battery Positive Voltage	II	—
24 - 25	—	—	—	Not Occupied	—	—

K219 Lighting Control Module X3

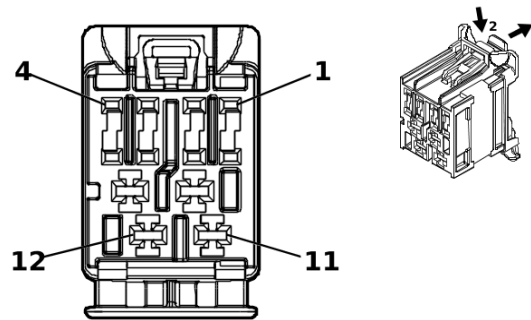

5203797

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 33382116
 Service Connector: 13509989
 Description: 12-Way F 1.2, 2.8 stAK50h Series(GN)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	84729890	J-35616-12 (BU)	J-38125-215A
II	87814662	J-35616-4A (PU)	J-38125-557

K219 Lighting Control Module X3

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	BU / BN	7539	Right Front DRL Control	I	—
2	0.75	GY / YE	7542	Left Rear Stop Lamp Control	I	—
3	—	—	—	Not Occupied	—	—
4	0.5	BU / GN	1253	Right Front Park Lamp Control	I	—
5	—	—	—	Not Occupied	—	—
6	0.75	BU / VT	1335	Right Rear Turn Signal Lamp Control 2	I	—
7	0.35	BU / YE	7761	Backup Illumination Lamp Control	I	—
8	—	—	—	Not Occupied	—	—
9	1.5	RD / BU	540	Battery Positive Voltage	II	—
10	1.5	RD / BN	1440	Battery Positive Voltage	II	—
11	0.5	WH	311	Right Headlamp High Beam Control	II	—
12	0.5	YE	312	Right Headlamp Low Beam Control	II	—

K219 Lighting Control Module X4

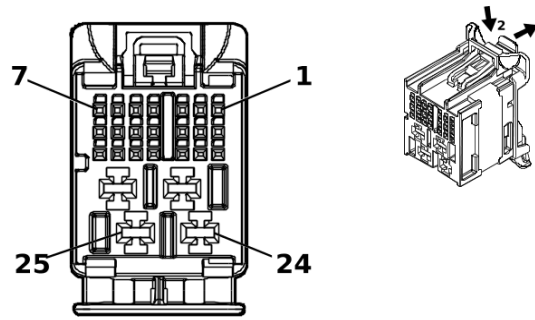

5203416

Connector Part Information

Harness Type: Body Wiring Harness

OEM Connector: 35392283

Service Connector: 13534969

Description: 25-Way F 0.5 MQS, 2.8 MCP Series(PU with GY Inner Connector)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19370262	EL-35616-58 (BK)	EL-38125-58
II	87814662	J-35616-4A (PU)	J-38125-557

K219 Lighting Control Module X4

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 2	—	—	—	Not Occupied	—	—
3	0.35	BU / YE	4979	AUTOSAR CAN Bus [+] 2 Serial Data	I	—
4	0.35	WH	4978	AUTOSAR CAN Bus [-] 2 Serial Data	I	—
5	0.35	BU / YE	4979	AUTOSAR CAN Bus [+] 2 Serial Data	I	—
6	0.35	WH	4978	AUTOSAR CAN Bus [-] 2 Serial Data	I	—
7	0.35	WH / BU	6311	Cruise/ETC/TCC Brake Signal	I	—
8 - 9	—	—	—	Not Occupied	—	—
10	0.35	WH	4978	AUTOSAR CAN Bus [-] 2 Serial Data	I	—
11	0.35	BU / YE	4979	AUTOSAR CAN Bus [+] 2 Serial Data	I	—
12 - 21	—	—	—	Not Occupied	—	—
22	1	RD / BN	1140	Battery Positive Voltage	II	—
23	1.5	BK / WH	1551	Signal Ground	II	—
24	0.5	RD / GN	1540	Battery Positive Voltage	II	—
25	1	BK / WH	1451	Signal Ground	II	—

K219 Lighting Control Module X5

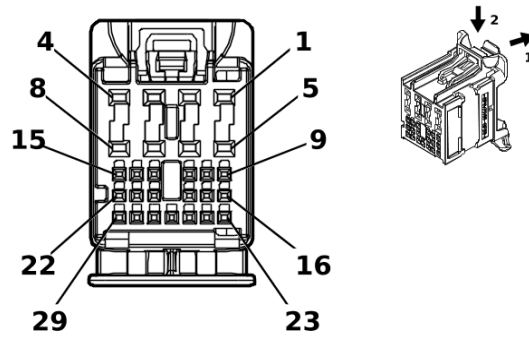

5203373

Connector Part Information

Harness Type: Body Wiring Harness

OEM Connector: 35392292

Service Connector: 13534975

Description: 29-Way F 0.5 NANO, 1.2 MCON, stAK50h Series(BU with GY Inner Connector)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19370262	EL-35616-58 (BK)	EL-38125-58
II	84729890	J-35616-12 (BU)	J-38125-215A


K219 Lighting Control Module X5

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH / GN	5966	Approach Lamp Control	II	—
2	0.75	BN / GY	6995	Right Rear Park Lamp Control	II	—
3	0.5	GY / BU	7762	Cargo Lamp Control	II	—
4	0.5	WH / VT	1430	Exterior Courtesy Lamp Control	II	—
5	0.5	YE / GN	2024	Animation Lighting Control	II	—
6	0.75	BN / BU	6993	Left Rear Park Lamp Control	II	—
7	0.5	GN / VT	1315	Right Front Turn Signal Lamp Control	II	—
8	0.75	BU / WH	1334	Left Rear Turn Signal Lamp Control 2	II	—
9	0.35	GN / GY	2115	Right Turn Signal Lamp Control 2	I	—
10	0.35	WH / GY	2114	Left Turn Signal Lamp Control 2	I	—
11	0.35	GY	1715	Windshield Wiper Switch High Signal	I	—
13	0.35	GN / BN	319	Right Rear Trailer Stop/Turn Lamp Control	I	—
14	—	—	—	Not Occupied	—	—
15	0.35	WH / GY	2935	Task Lamp Switch Signal	I	—
16	0.35	YE / WH	2934	Task Lamp Control Right	I	—
17	—	—	—	Not Occupied	—	—
18	0.35	VT / WH	239	Run/Crank Ignition 1 Voltage	I	—
20 - 22	—	—	—	Not Occupied	—	—
23	0.35	WH / VT	6567	Rear Turn Signal Lamp Feedback Signal	I	—
24	0.35	WH / BK	7544	Right Rear Turn Signal Lamp Feedback Signal	I	—
25	0.35	BN / YE	820	Center High Mounted Stop Lamp Supply Voltage	I	—

K219 Lighting Control Module X5 (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
26 - 27	—	—	—	Not Occupied	—	—
28	0.35	YE / GY	2933	Task Lamp Control Left	I	—
29	0.35	YE / BU	318	Left Rear Trailer Stop/Turn Lamp Control	I	—

K221LL Headlamp LED Driver Module - Left Lower (T4L)

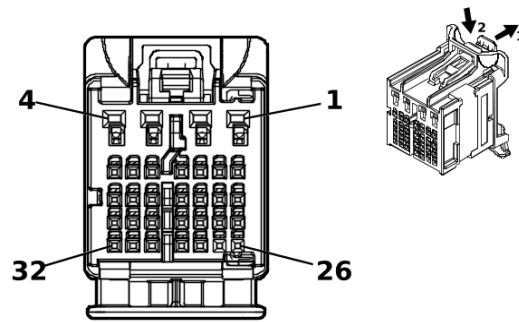

5203925

Connector Part Information

Harness Type: Front Headlamp - Left

OEM Connector: 160028-0012

Service Connector: Service by Harness - See Part Catalog

Description: 32-Way F 0.5 NANO, 1.2 MCON, stAK50h Series(BU with GY Inner Connector)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	EL-35616-58 (BK)	No Tool Required


K221LL Headlamp LED Driver Module - Left Lower (T4L)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	BK	150	Ground	I	—
2	—	—	—	Not Occupied	—	—
3	0.35	BK	540	Battery Positive Voltage	I	—
4	—	—	—	Not Occupied	—	—
5	0.35	BK	-	Lamp/Fan	I	—
6	0.35	BK	-	Lamp/Fan	I	—
7	0.35	BK	-	Lamp/Fan	I	—
8	0.35	BK	-	Lamp/Fan	I	—
9	0.35	BK	-	Lamp/Fan	I	—
10	—	—	—	Not Occupied	—	—
11	0.35	BK	-	Lamp/Fan	I	—
12	0.35	BK	-	Lamp/Fan	I	—
13 - 16	—	—	—	Not Occupied	—	—
17	0.35	BK	2024	Animation Lighting Control	I	—
18	0.35	BK	7538	Left Front DRL Control	I	—
19	0.35	BK	-	Lamp/Fan	I	—
20 - 22	—	—	—	Not Occupied	—	—
23	0.35	BK	6568	Front Turn Signal Lamp Feedback Signal	I	—
24	—	—	—	Not Occupied	—	—
25	0.35	BK	1314	Left Front Turn Signal Lamp Control	I	—
26	0.35	BK	-	Lamp/Fan	I	—
27	0.35	BK	150	Ground	I	—

K221LL Headlamp LED Driver Module - Left Lower (T4L) (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
28 - 30	—	—	—	Not Occupied	—	—
31	0.35	BK	1314	Left Front Turn Signal Lamp Control	I	—
32	—	—	—	Not Occupied	—	—

K221LU Headlamp LED Driver Module - Left Upper (T4L)

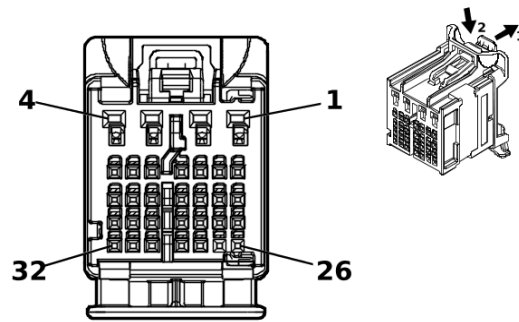

5202294

Connector Part Information

Harness Type: Front Headlamp - Left

OEM Connector: 160028-0014

Service Connector: Service by Harness - See Part Catalog

Description: 32-Way F 0.5 MQS, 1.2 OCS Series(PU with GY Inner Connector)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	EL-35616-58 (BK)	No Tool Required


K221LU Headlamp LED Driver Module - Left Upper (T4L)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	—	Not Occupied	—	—
2	0.35	BK	150	Ground	I	—
3	—	—	—	Not Occupied	—	—
4	0.35	BK	640	Battery Positive Voltage	I	—
5 - 7	—	—	—	Not Occupied	—	—
8	0.35	BK	150	Ground	I	—
9 - 11	—	—	—	Not Occupied	—	—
12	0.35	BK	-	Lamp/Fan	I	—
13	0.35	BK	-	Lamp/Fan	I	—
14	—	—	—	Not Occupied	—	—
15	0.35	BK	-	Lamp/Fan	I	—
16	—	—	—	Not Occupied	—	—
17	0.35	BK	2024	Animation Lighting Control	I	—
18 - 20	—	—	—	Not Occupied	—	—
21	0.35	BK	-	Lamp/Fan	I	—
22	0.35	BK	-	Lamp/Fan	I	—
23 - 25	—	—	—	Not Occupied	—	—
26	0.35	BK	-	Lamp/Fan	I	—
27	0.35	BK	-	Lamp/Fan	I	—
28	0.35	BK	-	Lamp/Fan	I	—
29	—	—	—	Not Occupied	—	—
30	0.35	BK	-	Lamp/Fan	I	—

K221LU Headlamp LED Driver Module - Left Upper (T4L) (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
31	0.35	BK	711	Left Headlamp High Beam Control	I	—
32	0.35	BK	712	Left Headlamp Low Beam Control	I	—

K221RL Headlamp LED Driver Module - Right Lower (T4L)

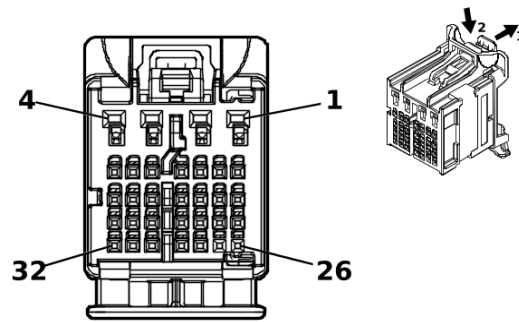

5203925

Connector Part Information

Harness Type: Front Headlamp - Right

OEM Connector: 160028-0012

Service Connector: Service by Harness - See Part Catalog

Description: 32-Way F 0.5 NANO, 1.2 MCON, stAK50h Series(BU with GY Inner Connector)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	EL-35616-58 (BK)	No Tool Required


K221RL Headlamp LED Driver Module - Right Lower (T4L)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	BK	650	Ground	I	—
2	—	—	—	Not Occupied	—	—
3	0.35	BK	740	Battery Positive Voltage	I	—
4	—	—	—	Not Occupied	—	—
5	0.35	BK	-	Lamp/Fan	I	—
6	0.35	BK	-	Lamp/Fan	I	—
7	0.35	BK	-	Lamp/Fan	I	—
8	0.35	BK	-	Lamp/Fan	I	—
9	0.35	BK	-	Lamp/Fan	I	—
10	—	—	—	Not Occupied	—	—
11	0.35	BK	-	Lamp/Fan	I	—
12	0.35	BK	-	Lamp/Fan	I	—
13 - 16	—	—	—	Not Occupied	—	—
17	0.35	BK	2024	Animation Lighting Control	I	—
18	0.35	BK	7539	Right Front DRL Control	I	—
19	0.35	BK	-	Lamp/Fan	I	—
20 - 22	—	—	—	Not Occupied	—	—
23	0.35	BK	7545	Right Front Turn Signal Lamp Feedback Signal	I	—
24	—	—	—	Not Occupied	—	—
25	0.35	BK	1315	Right Front Turn Signal Lamp Control	I	—
26	0.35	BK	-	Lamp/Fan	I	—
27	0.35	BK	650	Ground	I	—

K221RL Headlamp LED Driver Module - Right Lower (T4L) (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
28 - 30	—	—	—	Not Occupied	—	—
31	0.35	BK	1315	Right Front Turn Signal Lamp Control	I	—
32	—	—	—	Not Occupied	—	—

K221RU Headlamp LED Driver Module - Right Upper (T4L)

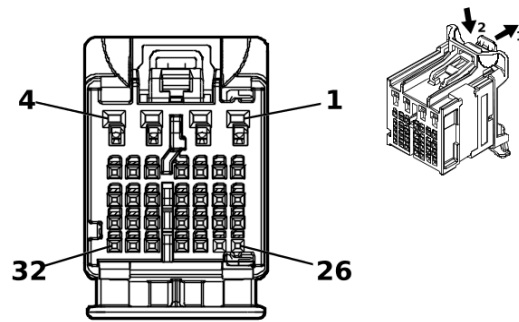

5202294

Connector Part Information

Harness Type: Front Headlamp - Right

OEM Connector: 160028-0014

Service Connector: Service by Harness - See Part Catalog

Description: 32-Way F 0.5 MQS, 1.2 OCS Series(PU with GY Inner Connector)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	EL-35616-58 (BK)	No Tool Required


K221RU Headlamp LED Driver Module - Right Upper (T4L)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	—	Not Occupied	—	—
2	0.35	BK	650	Ground	I	—
3	—	—	—	Not Occupied	—	—
4	0.35	BK	740	Battery Positive Voltage	I	—
5 - 7	—	—	—	Not Occupied	—	—
8	0.35	BK	650	Ground	I	—
9 - 11	—	—	—	Not Occupied	—	—
12	0.35	BK	-	Lamp/Fan	I	—
13	0.35	BK	-	Lamp/Fan	I	—
14	—	—	—	Not Occupied	—	—
15	0.35	BK	-	Lamp/Fan	I	—
16	—	—	—	Not Occupied	—	—
17	0.35	BK	2024	Animation Lighting Control	I	—
18 - 20	—	—	—	Not Occupied	—	—
21	0.35	BK	-	Lamp/Fan	I	—
22	0.35	BK	-	Lamp/Fan	I	—
23 - 25	—	—	—	Not Occupied	—	—
26	0.35	BK	-	Lamp/Fan	I	—
27	0.35	BK	-	Lamp/Fan	I	—
28	0.35	BK	-	Lamp/Fan	I	—
29	—	—	—	Not Occupied	—	—
30	0.35	BK	-	Lamp/Fan	I	—

K221RU Headlamp LED Driver Module - Right Upper (T4L) (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
31	0.35	BK	311	Right Headlamp High Beam Control	I	—
32	0.35	BK	312	Right Headlamp Low Beam Control	I	—

K234 Rear Seat Heater Vent Control Module X1 (KA6)

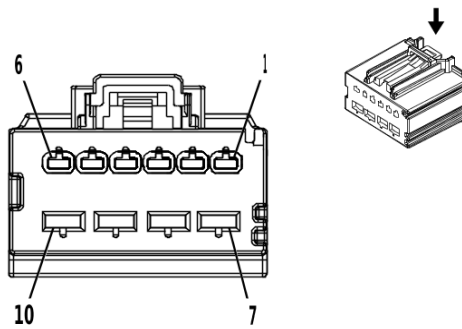

3791446

Connector Part Information

Harness Type: Rear Seat Heater Control Wiring Harness
 OEM Connector: 31372-1000
 Service Connector: Service by Harness - See Part Catalog
 Description: 10-Way F 1.5, 2.8 MX Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required
II	Not required	J-35616-4A (PU)	No Tool Required

K234 Rear Seat Heater Vent Control Module X1 (KA6)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	—	Not Occupied	—	—
2	0.75	GN / BN	2296	Right Rear Seat Cushion Heating Element Control	I	—
3	0.75	GN / BK	2297	Right Rear Seat Cushion Heating Element Low Reference	I	—
4	0.75	BN / BK	2295	Left Rear Seat Cushion Heating Element Low Reference	I	—
5	—	—	—	Not Occupied	—	—
6	0.75	GY	2294	Left Rear Seat Cushion Heating Element Control	I	—
7	0.75	RD / YE	5740	Battery Positive Voltage	II	—
8	1	BK	1150	Ground	II	—
9	—	—	—	Not Occupied	—	—
10	0.75	RD / VT	6740	Battery Positive Voltage	II	—

K234 Rear Seat Heater Vent Control Module X2 (KA6)

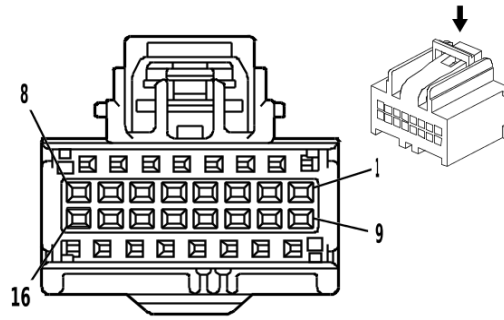

1653409

Connector Part Information

Harness Type: Rear Seat Heater Control Wiring Harness
 OEM Connector: 7283-9076-30
 Service Connector: Service by Harness - See Part Catalog
 Description: 16-Way F 0.64 Kaizen Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

K234 Rear Seat Heater Vent Control Module X2 (KA6)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BU / WH	7048	Left Rear Cushion Thermistor Feedback Signal	I	—
2	0.75	WH / BK	7054	Right Rear Cushion Thermistor Feedback Signal	I	—
3 - 4	—	—	—	Not Occupied	—	—
5	0.75	YE / WH	7053	Right Rear Seat Cushion Temperature Sensor Signal	I	—
6	0.75	WH / BU	7047	Left Rear Seat Cushion Temperature Sensor Signal	I	—
7	0.5	BK	1150	Ground	I	—
8	0.5	GN / BU	6133	Body Control Module LIN Bus 2	I	—
9 - 16	—	—	—	Not Occupied	—	—

KR81A Auxiliary Battery Relay 1

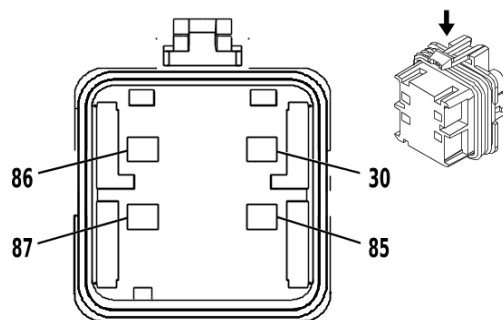

535912

Connector Part Information

Harness Type: Right Side Marker Lamp Harness
 OEM Connector: 12129716
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way F 280 Metri-Pack Flexlock Series, Sealed(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

KR81A Auxiliary Battery Relay 1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
30	—	RD / YE	4540	Battery Positive Voltage	I	—
85	—	BK	450	Ground	I	—
86	—	BN / BU	4893	3rd Row Left Seat Cushion Heating Element Feedback Signal	I	—
87	—	RD / BU	4540	Battery Positive Voltage	I	—

KR81B Auxiliary Battery Relay 2

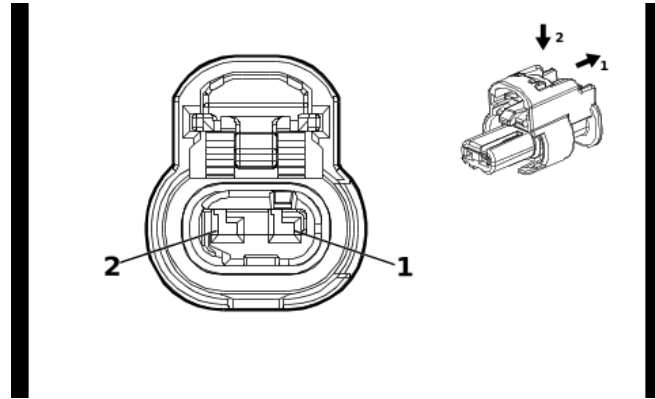

4649903

Connector Part Information

Harness Type: Right Side Marker Lamp Harness
 OEM Connector: 13512365
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.2 MCON Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

KR81B Auxiliary Battery Relay 2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	RD / BU	4540	Battery Positive Voltage	I	—
2	—	BK	450	Ground	I	—

M4P Programmable Air Inlet Valve Actuator

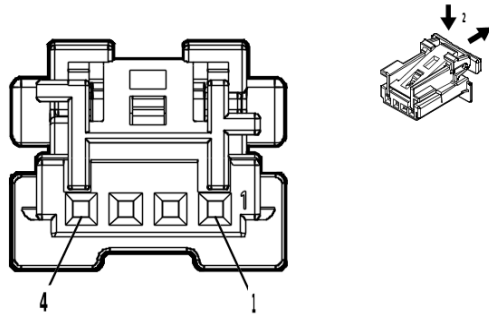

4997407

Connector Part Information

Harness Type: Heater Wiring Harness
 OEM Connector: 13511018
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way F 0.64 Micro-Quadlock Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

M4P Programmable Air Inlet Valve Actuator

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BK	1050	Ground	I	—
2	—	BU	2852	Body Control Module LIN Bus 6	I	—
3	—	BK	1050	Ground	I	—
4	—	RD	4634	HVAC Remote Enable Signal	I	—

M6PL Programmable Temperature Valve Actuator - Left

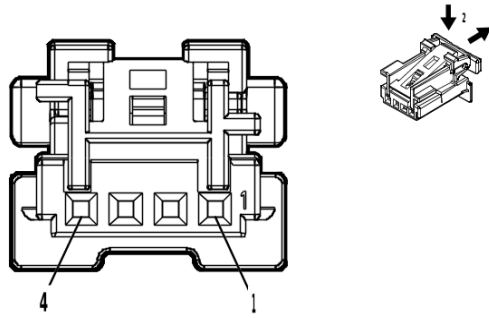

4997407

Connector Part Information

Harness Type: Heater Wiring Harness
 OEM Connector: 2294218-1
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way F 0.64 Micro-Quadlock Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

M6PL Programmable Temperature Valve Actuator - Left

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	BK	1050	Ground	I	—
2	0.35	BU / VT	2852	Body Control Module LIN Bus 6	I	—
3	0.35	BK	1050	Ground	I	—
4	0.35	WH / YE	4634	HVAC Remote Enable Signal	I	—

M6PR Programmable Temperature Valve Actuator - Right

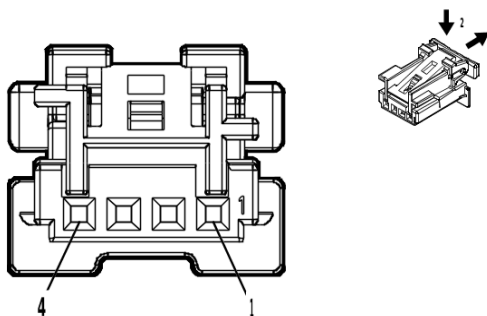

4997407

Connector Part Information

Harness Type: Heater Wiring Harness
 OEM Connector: 2294218-1
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way F 0.64 Micro-Quadlock Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

M6PR Programmable Temperature Valve Actuator - Right

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	BK	1050	Ground	I	—
2	0.35	BU / VT	2852	Body Control Module LIN Bus 6	I	—
3	—	—	—	Not Occupied	—	—
4	0.35	WH / YE	4634	HVAC Remote Enable Signal	I	—

M8 Blower Motor

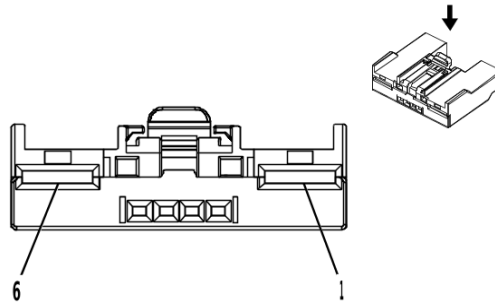

2904463

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 13965831
 Service Connector: 19356432
 Description: 6-Way F 0.64 GET, 6.3 Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-42 (RD)	No Tool Required
II	Not required	J-35616-64B (L-BU)	No Tool Required

M8 Blower Motor

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	4	RD / GY	1740	Battery Positive Voltage	I	—
2	0.35	BU / GY	754	Blower Motor Speed Control	II	—
3	0.35	GN / BU	761	Blower Speed Feedback Signal	II	—
4 - 5	—	—	—	Not Occupied	—	—
6	4	BK	1050	Ground	I	—

M10 Charge Air Cooler Coolant Pump (L5P)

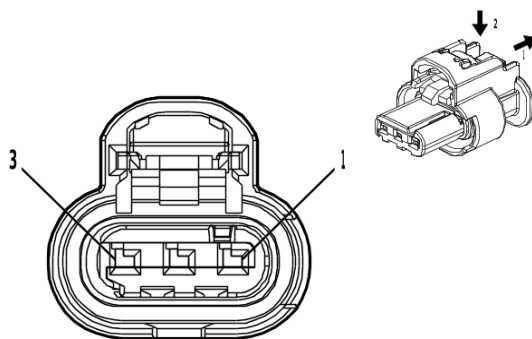

4581126

Connector Part Information

Harness Type: Engine Wiring Harness Chassis
 OEM Connector: 33358800
 Service Connector: Service by Harness - See Part Catalog
 Description: 3-Way F 1.2 MCON-CB Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

M10 Charge Air Cooler Coolant Pump (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	1.5	BK	6150	Engine Odd Bank Ground	I	—
2	1	VT / BU	5294	Powertrain Main Relay Fused Supply Voltage 5	I	—
3	0.5	GN / VT	4621	Engine Control Module LIN Bus 1	I	—

M14A Pickup Box Endgate Lock Actuator (QK1)

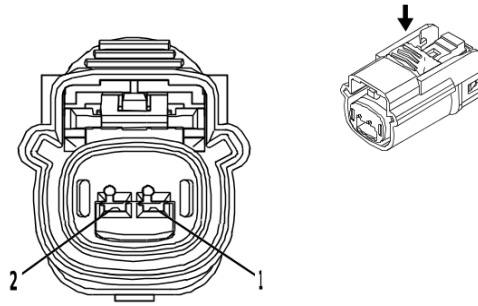

4332222

Connector Part Information

Harness Type: Endgate Wiring Harness
 OEM Connector: 15514573
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.5 OCS Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required

M14A Pickup Box Endgate Lock Actuator (QK1)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	1	GN	1299	Major Endgate Motor Control	I	—
2	1	YE / BK	7730	Major Endgate Motor Low Reference	I	—

M26 Front Drive Axle Actuator

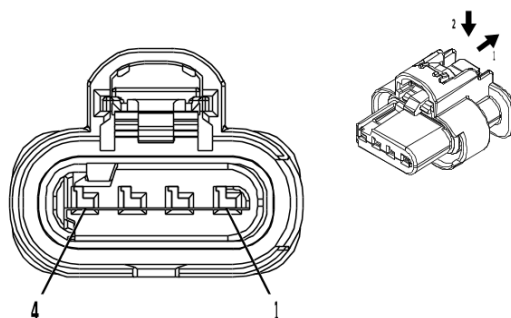

4210809

Connector Part Information

Harness Type: Transfer Case Selector Shift Control Switch Wiring Harness Extension Harness

OEM Connector: 33390897

Service Connector: Service by Harness - See Part Catalog

Description: 4-Way F 1.2 MCON-CB Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

M26 Front Drive Axle Actuator

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GN	8016	Secondary Axle Motor Control	I	—
2	0.5	GY / BK	1570	Front Axle Actuator Control	I	—
3	0.5	YE / WH	1695	4WD Locked Range Indicator Control	I	—
4	0.5	BK	450	Ground	I	—

M37P Programmable Mode Valve Actuator

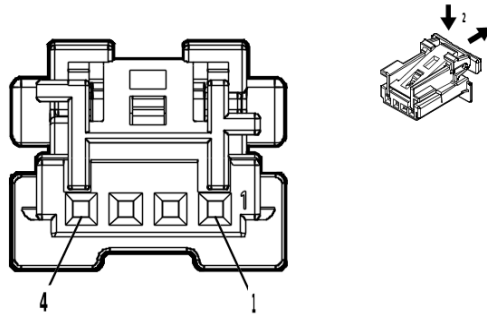

4997407

Connector Part Information

Harness Type: Heater Wiring Harness
 OEM Connector: 13511018
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way F 0.64 Micro-Quadlock Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

M37P Programmable Mode Valve Actuator

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BK	1050	Ground	I	—
2	—	BU	2852	Body Control Module LIN Bus 6	I	—
3	—	—	—	Not Occupied	—	—
4	—	RD	4634	HVAC Remote Enable Signal	I	—

M50D Front Seat Tilt Adjuster Actuator - Driver (A2X&A45)

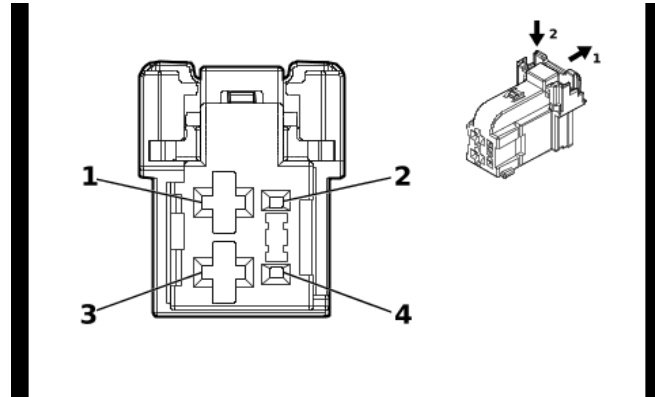

5410027

Connector Part Information

Harness Type: Front Seat Wiring Harness - Driver
 OEM Connector: 2316171-1
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way F 0.64, 2.8 Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required

M50D Front Seat Tilt Adjuster Actuator - Driver (A2X&A45)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	1.5	BU / VT	287	Driver Seat Front Vertical Motor Down Control	I	—
2	—	—	—	Not Occupied	—	—
3	1.5	GN / BN	286	Driver Seat Front Vertical Motor Up Control	I	—
4	—	—	—	Not Occupied	—	—

M50D Front Seat Tilt Adjuster Actuator - Driver (A2X - A45)

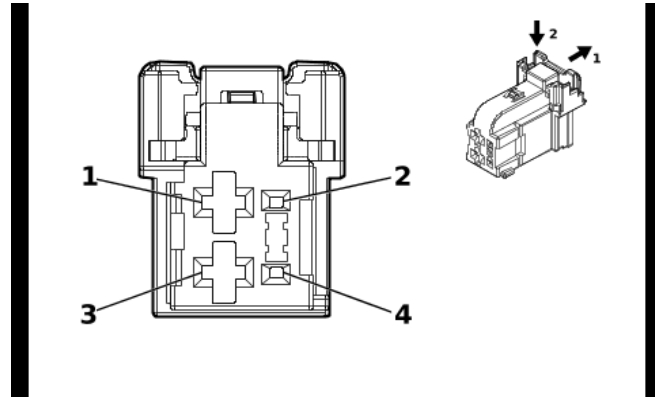

5410027

Connector Part Information

Harness Type: Front Seat Wiring Harness - Driver
 OEM Connector: 2316171-1
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way F 0.64, 2.8 Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required

M50D Front Seat Tilt Adjuster Actuator - Driver (A2X - A45)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	1.5	BU / VT	287	Driver Seat Front Vertical Motor Down Control	I	—
2	—	—	—	Not Occupied	—	—
3	1.5	GN / BN	286	Driver Seat Front Vertical Motor Up Control	I	—
4	—	—	—	Not Occupied	—	—

M50P Front Seat Tilt Adjuster Actuator - Passenger

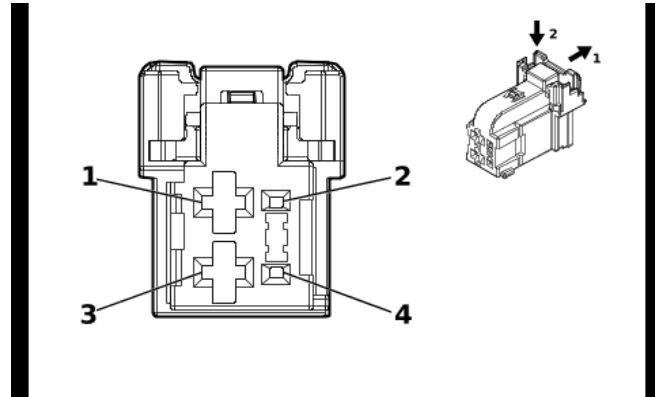

5410027

Connector Part Information

Harness Type: Front Seat Wiring Harness - Passenger
 OEM Connector: 2316171-1
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way F 0.64, 2.8 Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required

M50P Front Seat Tilt Adjuster Actuator - Passenger

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	1.5	GN / VT	297	Passenger Seat Front Vertical Motor Up Control	I	—
2	—	—	—	Not Occupied	—	—
3	1.5	GN / BU	298	Passenger Seat Front Vertical Motor Down Control	I	—
4	—	—	—	Not Occupied	—	—

M51D Front Seat Adjuster Actuator - Driver

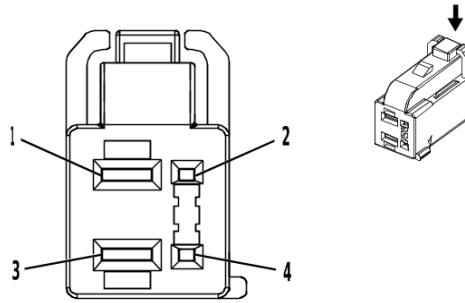

3683652

Connector Part Information

Harness Type: Front Seat Wiring Harness - Driver
 OEM Connector: 13583828
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way F 0.64, 2.8 Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-4A (PU)	No Tool Required

M51D Front Seat Adjuster Actuator - Driver

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	1.5	GY / GN	284	Driver Seat Horizontal Motor Rearward Control	I	—
2	—	—	—	Not Occupied	—	—
3	1.5	YE / BU	285	Driver Seat Horizontal Motor Forward Control	I	—
4	—	—	—	Not Occupied	—	—

M51P Front Seat Adjuster Actuator - Passenger

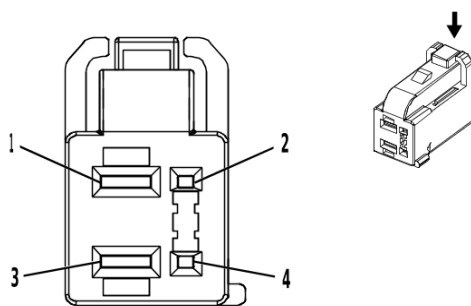

3683652

Connector Part Information

Harness Type: Front Seat Wiring Harness - Passenger
 OEM Connector: 13583828
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way F 0.64, 2.8 Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-4A (PU)	No Tool Required

M51P Front Seat Adjuster Actuator - Passenger

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	1.5	YE / BU	290	Passenger Seat Horizontal Motor Rearward Control	I	—
2	—	—	—	Not Occupied	—	—
3	1.5	YE / WH	296	Passenger Seat Horizontal Motor Forward Control	I	—
4	—	—	—	Not Occupied	—	—

M53D Front Seat Back Lumbar Motor - Driver

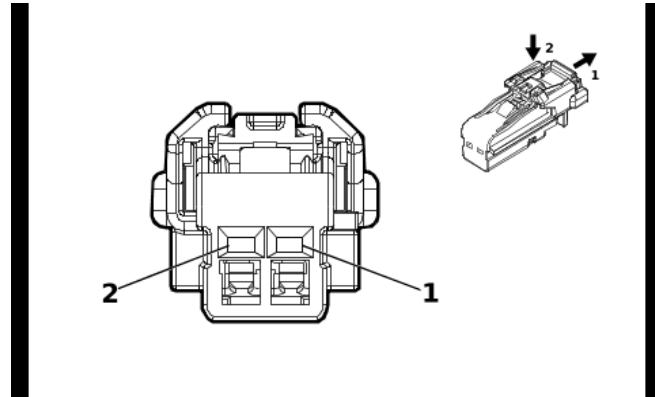

4115691

Connector Part Information

Harness Type: Front Seat Wiring Harness - Driver
 OEM Connector: 6098-8988
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.2 MCON Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

M53D Front Seat Back Lumbar Motor - Driver

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BU	611	Driver Seat Lumbar Support Motor Forward Control	I	—
2	0.75	VT	610	Driver Seat Lumbar Support Motor Backward Control	I	—

M53P Front Seat Back Lumbar Motor - Passenger

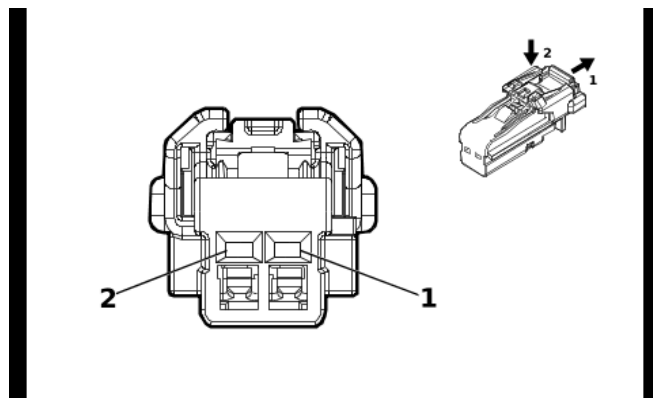

4115691

Connector Part Information

Harness Type: Front Seat Wiring Harness - Passenger
 OEM Connector: 6098-8988
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.2 MCON Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

M53P Front Seat Back Lumbar Motor - Passenger

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BU	211	Passenger Seat Lumbar Support Motor Forward Control	I	—
2	0.75	VT	210	Passenger Seat Lumbar Support Motor Backward Control	I	—

M55D Front Seat Vertical Adjuster Actuator - Driver

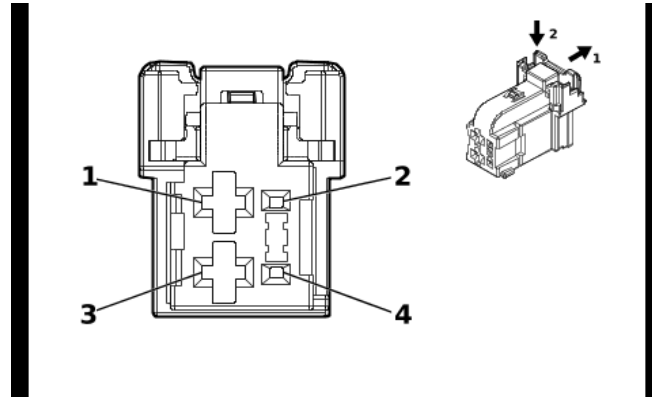

5410027

Connector Part Information

Harness Type: Front Seat Wiring Harness - Driver
 OEM Connector: 2316171-1
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way F 0.64, 2.8 Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required

M55D Front Seat Vertical Adjuster Actuator - Driver

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	1.5	GY / BU	283	Driver Seat Rear Vertical Motor Down Control	I	—
2	—	—	—	Not Occupied	—	—
3	1.5	YE	282	Driver Seat Rear Vertical Motor Up Control	I	—
4	—	—	—	Not Occupied	—	—

M55P Front Seat Vertical Adjuster Actuator - Passenger

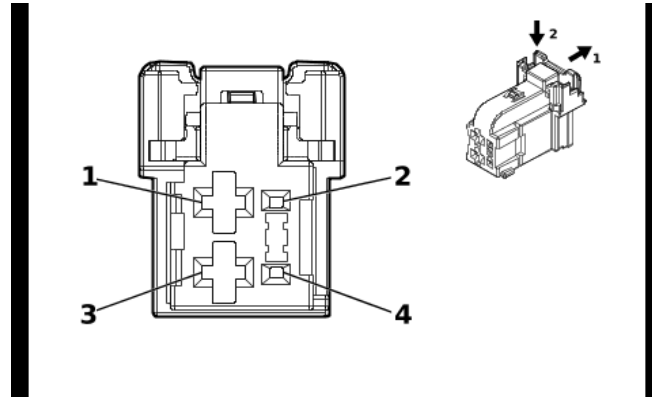

5410027

Connector Part Information

Harness Type: Front Seat Wiring Harness - Passenger
 OEM Connector: 2316171-1
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way F 0.64, 2.8 Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required

M55P Front Seat Vertical Adjuster Actuator - Passenger

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	1.5	BU / WH	289	Passenger Seat Rear Vertical Motor Down Control	I	—
2	—	—	—	Not Occupied	—	—
3	1.5	GN / WH	288	Passenger Seat Rear Vertical Motor Up Control	I	—
4	—	—	—	Not Occupied	—	—

M56D Front Seat Recliner Actuator - Driver (A45)

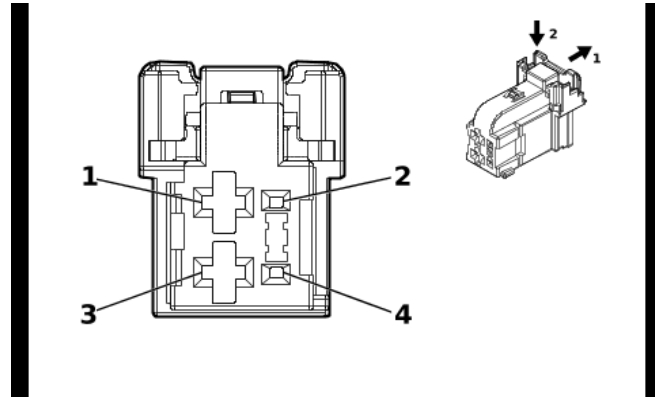

5410027

Connector Part Information

Harness Type: Front Seat Wiring Harness - Driver
 OEM Connector: 2316171-1
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way F 0.64, 2.8 Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required

M56D Front Seat Recliner Actuator - Driver (A45)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	1.5	GN / YE	276	Driver Seat Recline Motor Forward Control	I	—
2	—	—	—	Not Occupied	—	—
3	1.5	BU / YE	277	Driver Seat Recline Motor Rearward Control	I	—
4	—	—	—	Not Occupied	—	—

M56P Front Seat Recliner Actuator - Passenger (AKE)

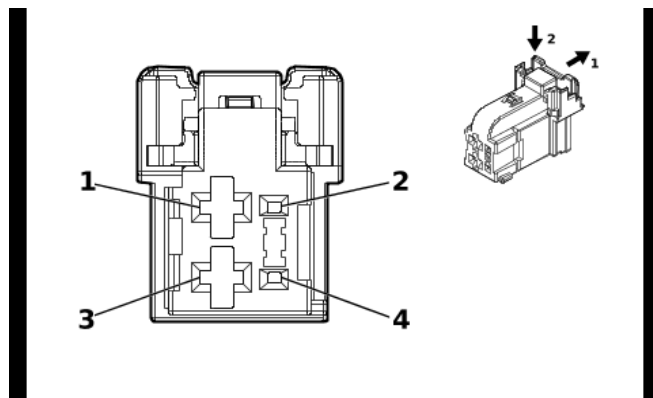

5410027

Connector Part Information

Harness Type: Front Seat Wiring Harness - Passenger
 OEM Connector: 2316171-1
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way F 0.64, 2.8 Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required

M56P Front Seat Recliner Actuator - Passenger (AKE)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	1.5	GN	76	Passenger Seat Recline Motor Forward Control	I	—
2	—	—	—	Not Occupied	—	—
3	1.5	BU / BN	77	Passenger Seat Recline Motor Rearward Control	I	—
4	—	—	—	Not Occupied	—	—

M63 Rear Sliding Window Motor

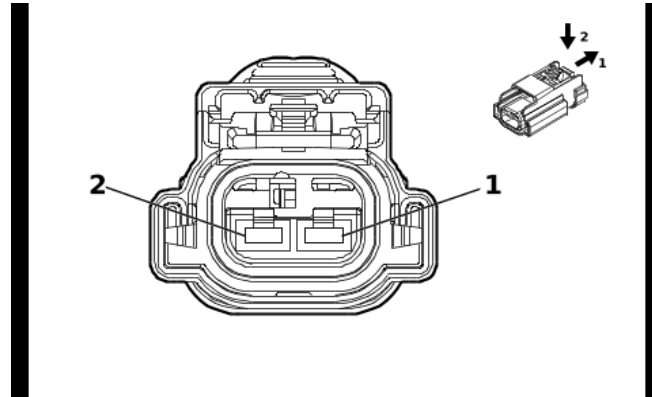

5795169

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 35286783
 Service Connector: 19301518
 Description: 2-Way F 2.8 APEX Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required

M63 Rear Sliding Window Motor

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2	YE	7454	Window Motor Rear Auxiliary Close Control	I	—
2	2	VT / YE	7453	Window Motor Rear Auxiliary Open Control	I	—

M64 Starter X1 (L5P)

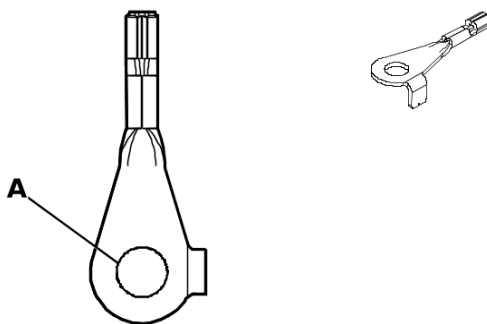

5200091

Connector Part Information

Harness Type: Engine Wiring Harness Chassis
 OEM Connector: 35181369
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way Ring Terminal


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

M64 Starter X1 (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	2.5	YE	6	Starter Solenoid Crank Ignition Voltage	I	—

M64 Starter X1 (L8T)

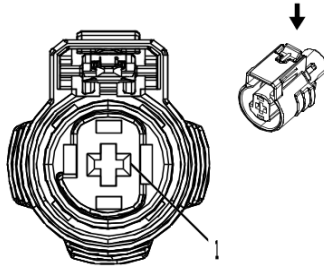

2717134

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 15526411
 Service Connector: 19300471
 Description: 1-Way F 2.8 MCP Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required

M64 Starter X1 (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	YE	6	Starter Solenoid Crank Ignition Voltage	I	—

M64 Starter X2

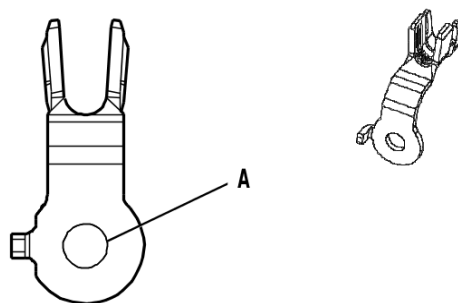

5020399

Connector Part Information

Harness Type: Right Side Marker Lamp Harness
 OEM Connector: 84496026
 Service Connector: Service by Harness - See Part Catalog
 Description: 1-Way


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

M64 Starter X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	35	RD / YE	2	Battery Positive Voltage	I	—

M73A Front Seat Back Ventilation Blower - Driver

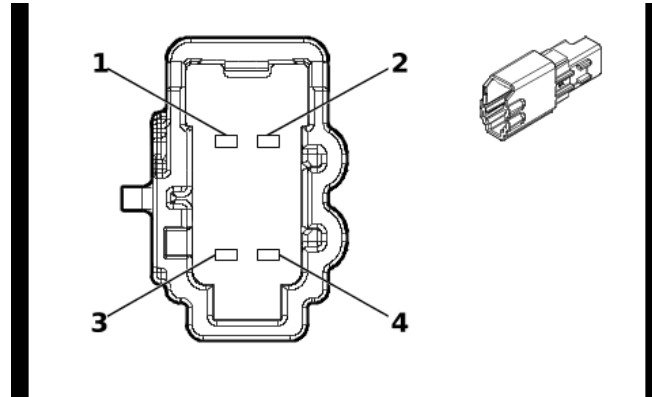

5423974

Connector Part Information

Harness Type: Front Seat Wiring Harness - Driver
 OEM Connector: 6098-9049
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way M 1.2 MCON Series(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-17 (L-GN)	No Tool Required

M73A Front Seat Back Ventilation Blower - Driver

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	VT / WH	1139	Run/Crank Ignition 1 Voltage	I	—
2	0.5	GN / VT	5906	Driver Seat Blower Motor Control 1	I	—
3	0.75	BK	1550	Ground	I	—
4	—	—	—	Not Occupied	—	—

M73B Front Seat Back Ventilation Blower - Passenger (KA1&KQV)

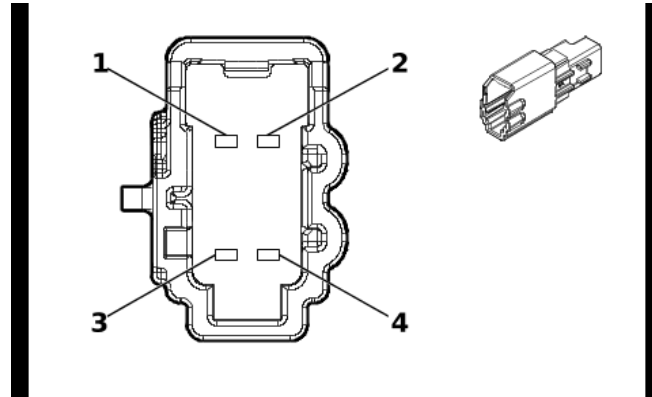

5423974

Connector Part Information

Harness Type: Front Seat Wiring Harness - Passenger
 OEM Connector: 6098-9049
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way M 1.2 MCON Series(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-17 (L-GN)	No Tool Required

M73B Front Seat Back Ventilation Blower - Passenger (KA1&KQV)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	VT / WH	1139	Run/Crank Ignition 1 Voltage	I	—
2	0.5	VT / WH	5908	Passenger Seat Blower Motor Control 1	I	—
3	0.75	BK	1350	Ground	I	—
4	—	—	—	Not Occupied	—	—

M73D Front Seat Cushion Ventilation Blower - Driver (KA1&KQV)

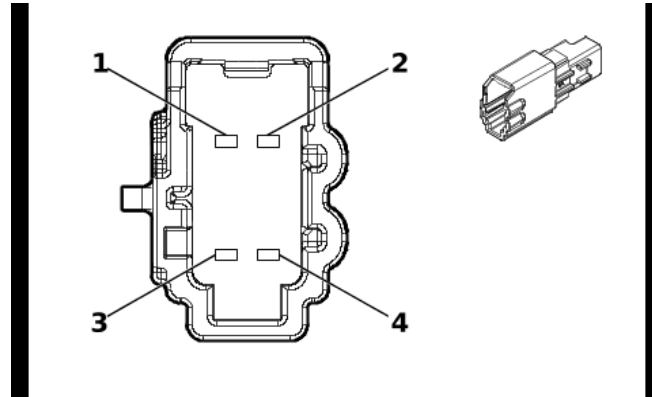

5423974

Connector Part Information

Harness Type: Front Seat Wiring Harness - Driver
 OEM Connector: 6098-9049
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way M 1.2 MCON Series(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-17 (L-GN)	No Tool Required

M73D Front Seat Cushion Ventilation Blower - Driver (KA1&KQV)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	VT / WH	1139	Run/Crank Ignition 1 Voltage	I	—
2	0.5	GN / VT	5906	Driver Seat Blower Motor Control 1	I	—
3	0.75	BK	1550	Ground	I	—
4	—	—	—	Not Occupied	—	—

M73P Front Seat Cushion Ventilation Blower - Passenger (KA1&KQV)

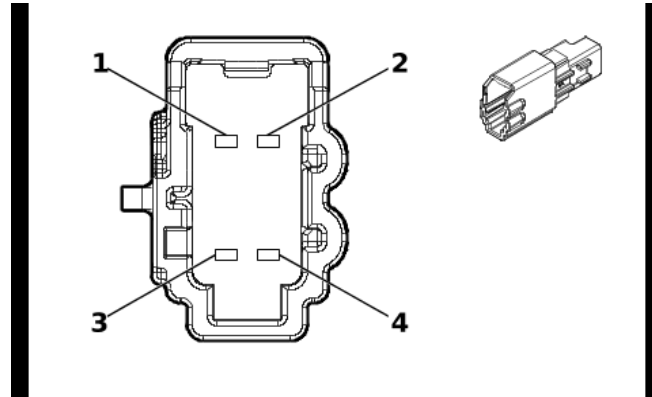

5423974

Connector Part Information

Harness Type: Front Seat Wiring Harness - Passenger
 OEM Connector: 6098-9049
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way M 1.2 MCON Series(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-17 (L-GN)	No Tool Required

M73P Front Seat Cushion Ventilation Blower - Passenger (KA1&KQV)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	VT / WH	1139	Run/Crank Ignition 1 Voltage	I	—
2	0.5	VT / WH	5908	Passenger Seat Blower Motor Control 1	I	—
3	0.75	BK	1350	Ground	I	—
4	—	—	—	Not Occupied	—	—

M74D Front Side Door Window Regulator Motor - Driver

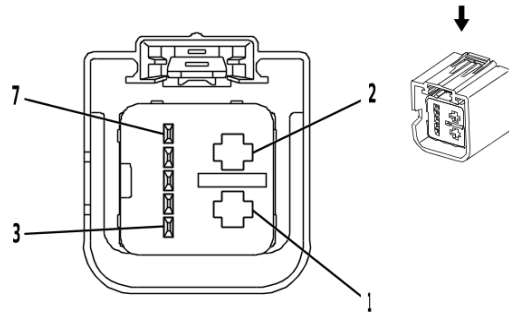

2282932

Connector Part Information

Harness Type: Front Side Door Door Wiring Harness - Left
 OEM Connector: 15504732
 Service Connector: Service by Harness - See Part Catalog
 Description: 7-Way F 0.64, 2.8 Kaizen Timer Series, Sealed(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-4A (PU)	No Tool Required
II	Not required	J-35616-64B (L-BU)	No Tool Required

M74D Front Side Door Window Regulator Motor - Driver

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	BK	1550	Ground	I	—
2	2.5	RD / GY	3540	Battery Positive Voltage	I	—
3	0.5	GY / GN	2763	Window Switch Left Front Up Signal	II	—
4	0.5	GN / YE	6134	Body Control Module LIN Bus 3	II	—
5	0.5	GN	2766	Power Window Switch Left Front Express Signal	II	—
6	0.5	GY	745	Left Front Door Ajar Switch Signal	II	—
7	0.5	WH / BN	2764	Window Switch Left Front Down Signal	II	—

M74LR Rear Side Door Window Regulator Motor - Left

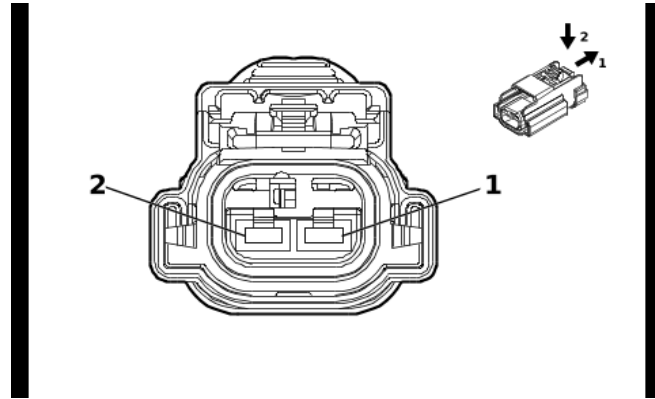

5795169

Connector Part Information

Harness Type: Rear Side Door Door Wiring Harness - Left
 OEM Connector: 35286783
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 2.8 APEX Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required

M74LR Rear Side Door Window Regulator Motor - Left

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2	BU / VT	668	Left Rear Window Motor Up Control	I	—
2	2	YE / BU	669	Left Rear Window Motor Down Control	I	—

M74P Front Side Door Window Regulator Motor - Passenger (AED)

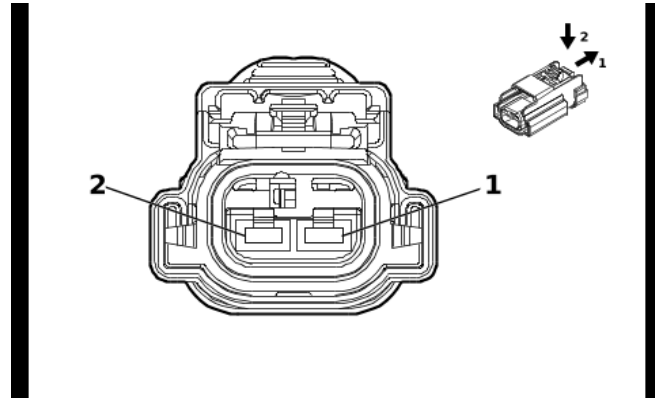

5795169

Connector Part Information

Harness Type: Front Side Door Door Wiring Harness - Right
 OEM Connector: 35286783
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 2.8 APEX Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required

M74P Front Side Door Window Regulator Motor - Passenger (AED)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2	GN / GY	666	Right Front Window Motor Up Control	I	—
2	2	YE / BU	667	Right Front Window Motor Down Control	I	—

M74P Front Side Door Window Regulator Motor - Passenger (AEF)

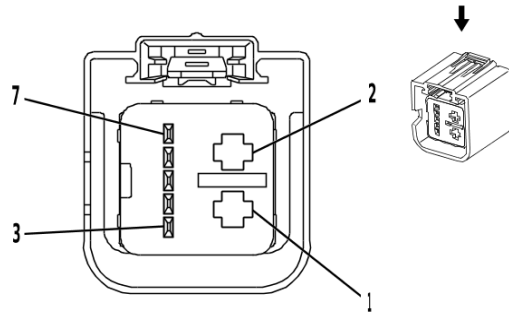

2282932

Connector Part Information

Harness Type: Front Side Door Door Wiring Harness - Right
 OEM Connector: 15504732
 Service Connector: Service by Harness - See Part Catalog
 Description: 7-Way F 0.64, 2.8 Kaizen Timer Series, Sealed(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-4A (PU)	No Tool Required
II	Not required	J-35616-64B (L-BU)	No Tool Required

M74P Front Side Door Window Regulator Motor - Passenger (AEF)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	BK	1350	Ground	I	—
2	2.5	RD / BN	4240	Battery Positive Voltage	I	—
3	0.5	GN	1184	Window Switch Right Front Up Signal	II	—
4	0.5	GN / YE	6134	Body Control Module LIN Bus 3	II	—
5	0.5	VT / GY	2765	Window Switch Right Front Express Signal	II	—
6	0.5	GY	746	Right Front Door Ajar Switch Signal	II	—
7	0.5	BN	5295	Window Switch Right Front Down Signal	II	—

M74RR Rear Side Door Window Regulator Motor - Right

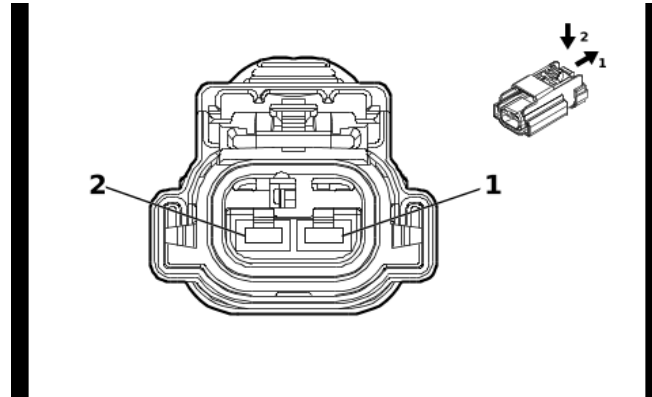

5795169

Connector Part Information

Harness Type: Rear Side Door Door Wiring Harness - Right
 OEM Connector: 35286783
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 2.8 APEX Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required

M74RR Rear Side Door Window Regulator Motor - Right

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2	BU / GY	670	Right Rear Window Motor Up Control	I	—
2	2	GN / BK	671	Right Rear Window Motor Down Control	I	—

M75 Windshield Wiper Motor

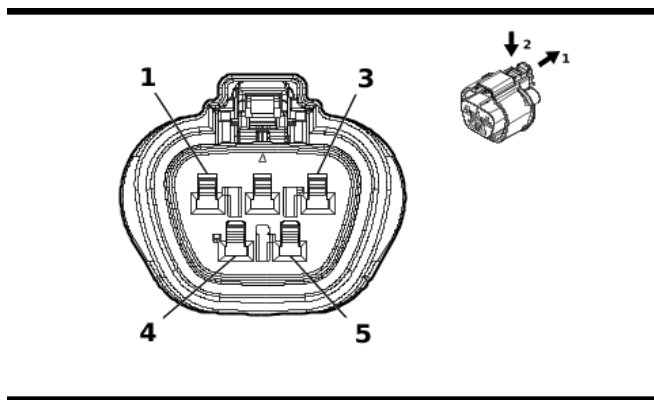

6171401

Connector Part Information

Harness Type: Body Wiring Harness

OEM Connector: 13552584

Service Connector: Service by Harness - See Part Catalog

Description: 5-Way F 2.3 Sumitomo Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-18 (BK)	No Tool Required

M75 Windshield Wiper Motor

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2	YE / BN	95	Windshield Wiper Motor Low Speed Control	I	—
3	0.35	BN / GN	196	Windshield Wiper Motor Park Switch Signal	I	—
4	2	WH	92	Windshield Wiper Motor High Speed Control	I	—
5	2	BK	150	Ground	I	—

M96A Active Grille Air Shutter Actuator 1 (L5P)

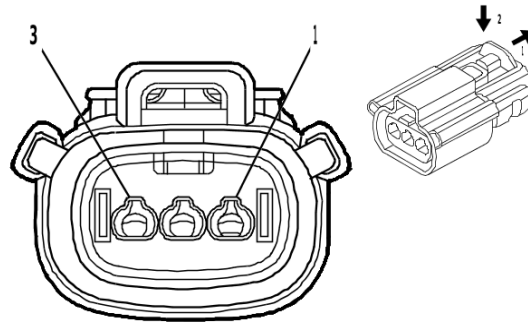

5095610

Connector Part Information

Harness Type: Engine Wiring Harness Chassis
 OEM Connector: 35143007
 Service Connector: Service by Harness - See Part Catalog
 Description: 3-Way F 1.5 Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required
II	Not required	J-35616-2A (GY)	No Tool Required

M96A Active Grille Air Shutter Actuator 1 (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	VT / BU	5705	Powertrain Main Relay Control	II	—
2	0.5	GN / VT	4621	Engine Control Module LIN Bus 1	II	—
3	1.5	BK	450	Ground	I	—

M96A Active Grille Air Shutter Actuator 1 (L8T)

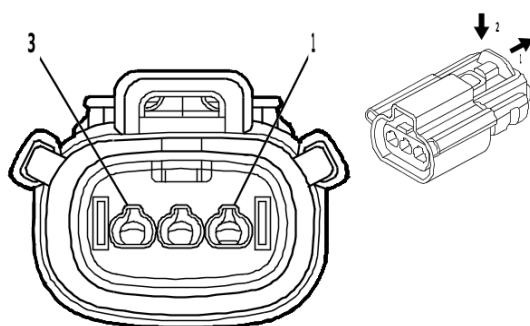

5095610

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 35143007
 Service Connector: 84719651
 Description: 3-Way F 1.5 Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required
II	Not required	J-35616-2A (GY)	No Tool Required

M96A Active Grille Air Shutter Actuator 1 (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	VT / BU	5705	Powertrain Main Relay Control	II	—
2	0.5	GN / VT	4621	Engine Control Module LIN Bus 1	II	—
3	1.5	BK	450	Ground	I	—

M103 Turbocharger Vane Position Actuator (L5P)

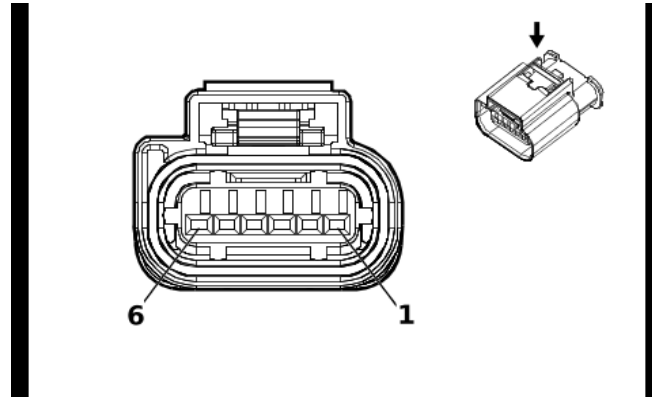

5483505

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13507084
 Service Connector: 84981395
 Description: 6-Way F 1.2 MCON Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

M103 Turbocharger Vane Position Actuator (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	VT / GN	4320	Powertrain Sensor Bus Enable	I	—
2	0.5	BK / WH	6151	Engine Control Module Ground	I	—
3	0.5	WH	4055	Private Serial Data Powertrain CAN Bus [+] Serial Data	I	—
4	0.5	WH	4055	Private Serial Data Powertrain CAN Bus [+] Serial Data	I	—
5	0.5	BU / GY	4054	Private Serial Data Powertrain CAN Bus [-] Serial Data	I	—
6	0.5	BU / GY	4054	Private Serial Data Powertrain CAN Bus [-] Serial Data	I	—

M104L Parking Brake Actuator - Left

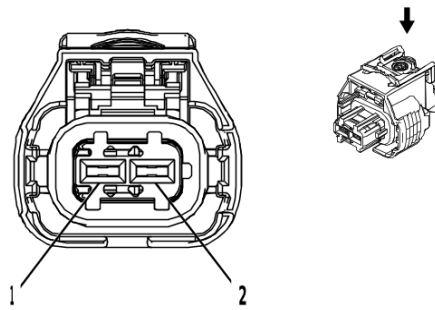

2577394

Connector Part Information

Harness Type: Chassis Rear Wiring Harness Extension Harness
 OEM Connector: 1 928 405 714
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 2.8 Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required

M104L Parking Brake Actuator - Left

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	GN / BK	4369	Left Park Brake Motor Low Reference	I	—
2	2.5	WH	2001	Left Park Brake Motor Apply Control	I	—

M104R Parking Brake Actuator - Right

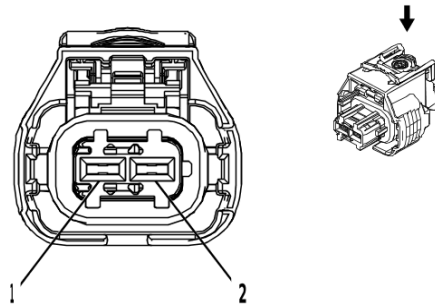

2577394

Connector Part Information

Harness Type: Chassis Rear Wiring Harness Extension Harness
 OEM Connector: 1 928 405 714
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 2.8 Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required

M104R Parking Brake Actuator - Right

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	GY	4368	Right Park Brake Motor Low Reference	I	—
2	2.5	GN / VT	1988	Right Park Brake Motor Apply Control	I	—

M125 Pickup Box Endgate Power Assist Actuator (QK1)

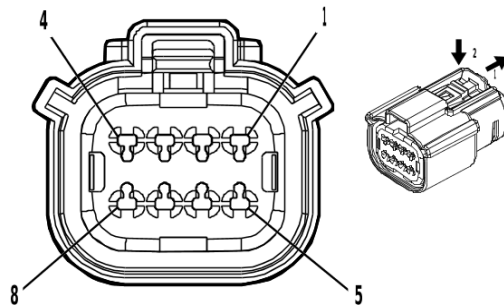

4846407

Connector Part Information

Harness Type: Endgate Wiring Harness
 OEM Connector: 35037827
 Service Connector: Service by Harness - See Part Catalog
 Description: 8-Way F 1.5 MX Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required

M125 Pickup Box Endgate Power Assist Actuator (QK1)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	1	BN / WH	4690	Rear Closure Open/Close Motor Close Control	I	—
2	0.5	GN	1577	Rear Closure Clutch Control	I	—
3	0.5	BU / BK	1590	Rear Closure Clutch Low Return	I	—
4	0.5	BN / RD	4683	Rear Closure Position Sensor Voltage Reference	I	—
5	1	WH	4689	Rear Closure Open/Close Motor Open Control	I	—
6	0.5	BN / YE	4686	Rear Closure Position Sensor Signal 2	I	—
7	0.5	BK / GN	4687	Rear Closure Position Sensor Low Reference	I	—
8	0.5	BU / WH	4685	Rear Closure Position Sensor Signal 1	I	—

M151L Pickup Box Endgate Cinch Latch Actuator - Left (QK1)

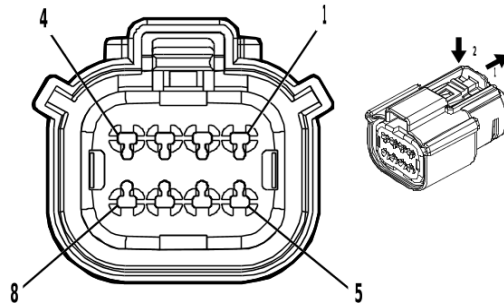

4846407

Connector Part Information

Harness Type: Endgate Wiring Harness
 OEM Connector: 35037827
 Service Connector: Service by Harness - See Part Catalog
 Description: 8-Way F 1.5 MX Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required

M151L Pickup Box Endgate Cinch Latch Actuator - Left (QK1)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	—	Not Occupied	—	—
2	0.5	BN / GY	10281	Rear Closure Latch Secondary Status Signal	I	—
3	0.5	GY / VT	4678	Rear Closure Latch Unlatch Status	I	—
4	0.5	BK / VT	4656	Rear Closure Object Sensor Low Reference	I	—
5	1	BN	4681	Rear Closure Cinch Latch Motor Cinch Control	I	—
6	1	BU / GY	4682	Rear Closure Cinch Latch Motor Release Control	I	—
7	0.5	WH / GN	8084	Rear Closure Latch Neutral Status	I	—
8	0.5	YE / BK	8085	Rear Closure Latch Primary Status	I	—

M151R Pickup Box Endgate Cinch Latch Actuator - Right (QK1)

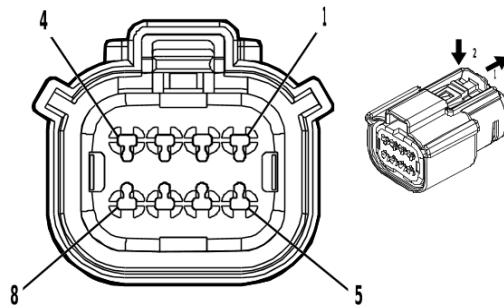

4846407

Connector Part Information

Harness Type: Endgate Wiring Harness
 OEM Connector: 35037827
 Service Connector: Service by Harness - See Part Catalog
 Description: 8-Way F 1.5 MX Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required

M151R Pickup Box Endgate Cinch Latch Actuator - Right (QK1)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GY / BK	1575	Rear Closure Sensor Low Reference 2	I	—
2	0.5	BN	7736	Rear Closure Latch 2 Unlatch Status Signal	I	—
3	0.5	VT / WH	10284	Rear Closure Latch 2 Secondary Status Signal	I	—
4	—	—	—	Not Occupied	—	—
5	0.5	GN / BU	10283	Rear Closure Latch 2 Primary Status Signal	I	—
6	0.5	BU / BN	10282	Rear Closure Latch 2 Neutral Status Signal	I	—
7	1	GN	1499	Rear Closure Cinch Latch Motor 2 Cinch Control	I	—
8	1	BU	1509	Rear Closure Cinch Latch Motor 2 Release Control	I	—

P13 Horn

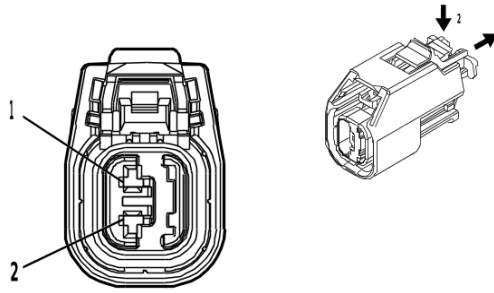

4889830

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 33164011
 Service Connector: 86802964
 Description: 2-Way F 1.5 OCS Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required

P13 Horn

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BK	650	Ground	I	—
2	0.75	BN / GY	29	Horn Control	I	—

P16 Instrument Panel Cluster Control Module X1

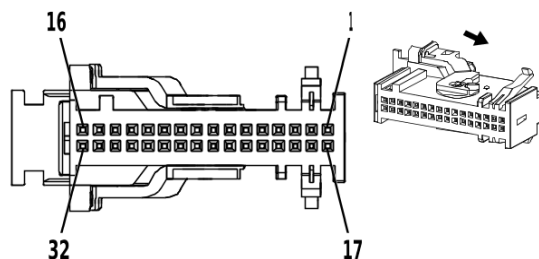

627214

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 12198036
 Service Connector: 13511333
 Description: 32-Way F 0.64 Micro-Quadlock Series(BK with GY Cover)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19300632	J-35616-64B (L-BU)	J-38125-215A

P16 Instrument Panel Cluster Control Module X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	WH	7216	Ethernet Bus 7 [-]	I	—
2 - 6	—	—	—	Not Occupied	—	—
7	0.5	RD / WH	1340	Battery Positive Voltage	I	—
8	0.35	VT / BK	339	Run/Crank Ignition 1 Voltage	I	—
9 - 10	—	—	—	Not Occupied	—	—
11	0.35	GY / BK	4787	Day Night LED Control	I	—
12	0.35	GY / YE	3885	Forward Collision Alert LED Control	I	—
13	0.35	BU / WH	4985	AUTOSAR CAN Bus [+] 5 Serial Data	I	—
14	0.35	BU / YE	4984	AUTOSAR CAN Bus [-] 5 Serial Data	I	—
15 - 16	—	—	—	Not Occupied	—	—
17	0.35	GN	7217	Ethernet Bus 7 [+]	I	—
18	—	—	—	Not Occupied	—	—
19	0.5	BK / WH	851	Signal Ground	I	—
20	0.5	GN / BK	3894	Instrument Panel Cluster Control Module LIN Bus 1	I	—
21 - 28	—	—	—	Not Occupied	—	—
29	0.35	BU / WH	4985	AUTOSAR CAN Bus [+] 5 Serial Data	I	—
30	0.35	BU / YE	4984	AUTOSAR CAN Bus [-] 5 Serial Data	I	—
31	—	—	—	Not Occupied	—	—
32	0.35	GN / BN	507	Wait To Start Indicator Control	I	—

P16 Instrument Panel Cluster Control Module X2

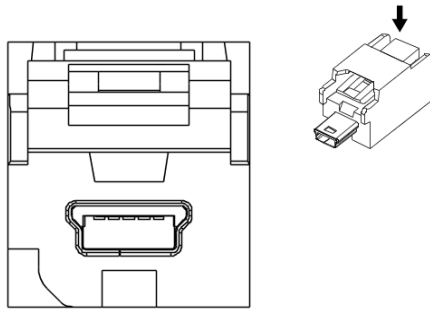

3214018

Connector Part Information

Harness Type: Instrument Panel Wiring Harness USB
 OEM Connector: 13893437
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 5-Way M 2.0 Mini-B USB Type(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

P16 Instrument Panel Cluster Control Module X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	USB	—	USB Serial Data	I	—

P19AFC Front Floor Speaker - Console

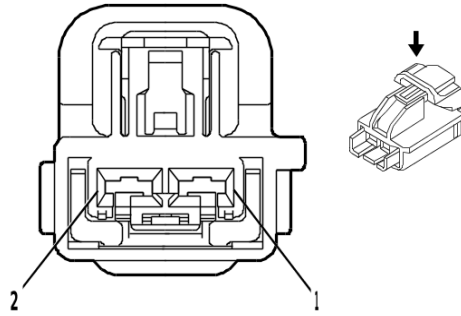

1803142

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 10846819
 Service Connector: 19367562
 Description: 2-Way F Kaizen Series(L-GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-4A (PU)	No Tool Required

P19AFC Front Floor Speaker - Console

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	GN / BK	1794	Left/Rear Subwoofer [-] Control	I	—
2	2.5	BU / GY	346	Left/Rear Subwoofer [+] Control	I	—

P19AG Radio Front Side Door Speaker - Left

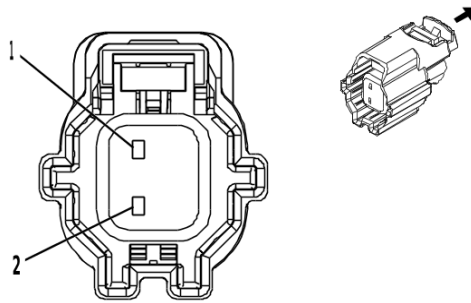

4223204

Connector Part Information

Harness Type: Front Side Door Door Wiring Harness - Left
 OEM Connector: 15548606
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.5 MX Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required

P19AG Radio Front Side Door Speaker - Left

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BN / BU	118	Left Front Speaker [-] Control 1	I	—
2	0.75	BU	201	Left Front Speaker 1 [+] Control	I	—

P19AH Radio Front Side Door Speaker - Right

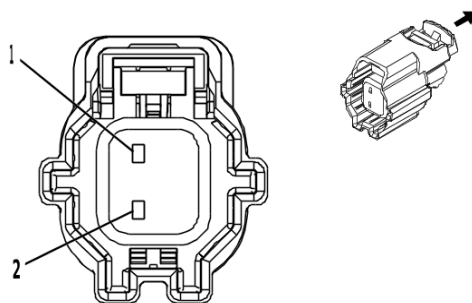

4223204

Connector Part Information

Harness Type: Front Side Door Door Wiring Harness - Right
 OEM Connector: 15548606
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.5 MX Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required

P19AH Radio Front Side Door Speaker - Right

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	YE / BK	117	Right Front Speaker [-] Control 1	I	—
2	0.75	YE	200	Right Front Speaker 1 [+] Control	I	—

P19AL Radio Rear Side Door Speaker - Left

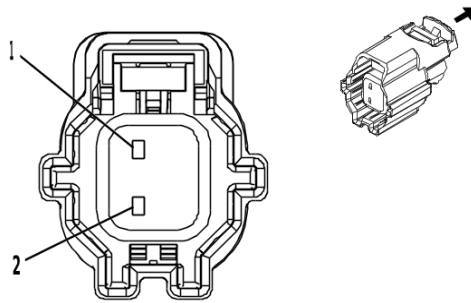

4223204

Connector Part Information

Harness Type: Rear Side Door Door Wiring Harness - Left
 OEM Connector: 15548606
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.5 MX Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required

P19AL Radio Rear Side Door Speaker - Left

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	GN / BK	116	Left Rear Speaker [-] Control	I	—
2	0.75	GN	199	Left Rear Speaker [+] Control	I	—

P19AM Radio Rear Side Door Speaker - Right

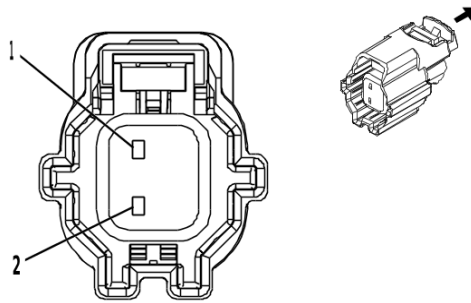

4223204

Connector Part Information

Harness Type: Rear Side Door Door Wiring Harness - Right
 OEM Connector: 15548606
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.5 MX Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required

P19AM Radio Rear Side Door Speaker - Right

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BU / BK	115	Right Rear Speaker [-] Control	I	—
2	0.75	WH	46	Right Rear Speaker [+] Control	I	—

P19J Radio Front Speaker - Instrument Panel Left (UQA / UQS)

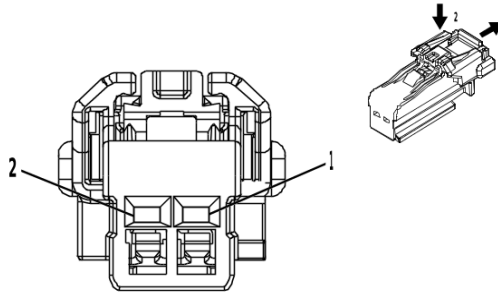

4373379

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 35311601
 Service Connector: 19369632
 Description: 2-Way F 1.2 MCON Series(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

P19J Radio Front Speaker - Instrument Panel Left (UQA / UQS)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BU / BN	1957	Left Front Midrange Speaker [-] Control	I	—
2	0.75	BU / VT	1857	Left Front Midrange Speaker [+] Control	I	—

P19J Radio Front Speaker - Instrument Panel Left (UQF / UQS)

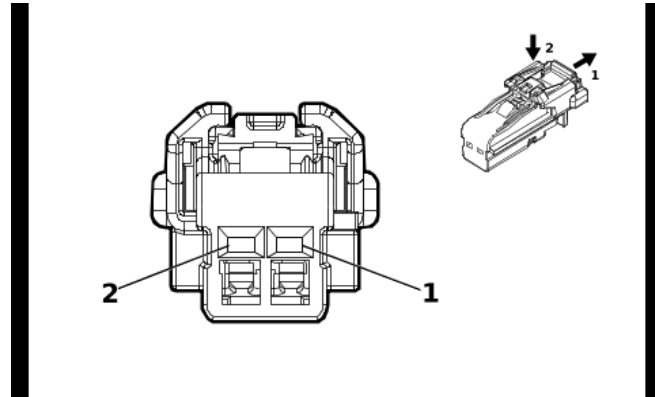

4115691

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 35311666
 Service Connector: 87816612
 Description: 2-Way F 1.2 MCON Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

P19J Radio Front Speaker - Instrument Panel Left (UQF / UQS)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BN / BU	118	Left Front Speaker [-] Control 1	I	—
2	0.75	BU	201	Left Front Speaker 1 [+] Control	I	—

P19W Radio Front Speaker - Instrument Panel Right (UQA / UQS)

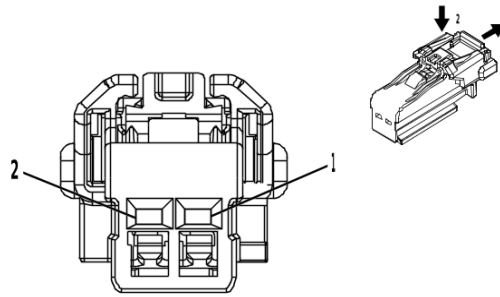

4373379

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 35311601
 Service Connector: 19369632
 Description: 2-Way F 1.2 MCON Series(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

P19W Radio Front Speaker - Instrument Panel Right (UQA / UQS)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BN / BK	1953	Right Front Midrange Speaker [-] Control	I	—
2	0.75	WH / YE	1853	Right Front Midrange Speaker [+] Control	I	—

P19W Radio Front Speaker - Instrument Panel Right (UQF / UQS)

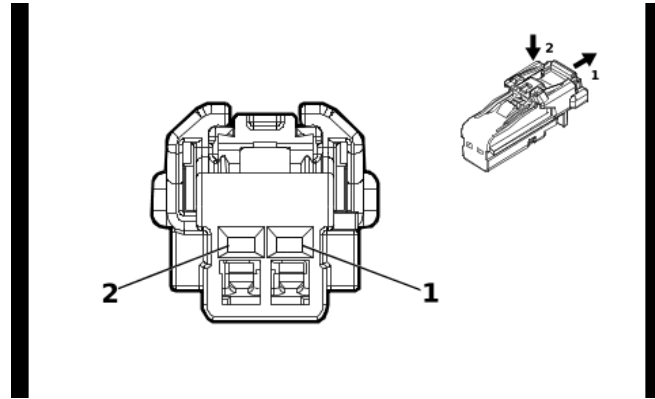

4115691

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 35311666
 Service Connector: 87816612
 Description: 2-Way F 1.2 MCON Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

P19W Radio Front Speaker - Instrument Panel Right (UQF / UQS)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	YE / BK	117	Right Front Speaker [-] Control 1	I	—
2	0.75	YE	200	Right Front Speaker 1 [+] Control	I	—

P29 Head-Up Display X1

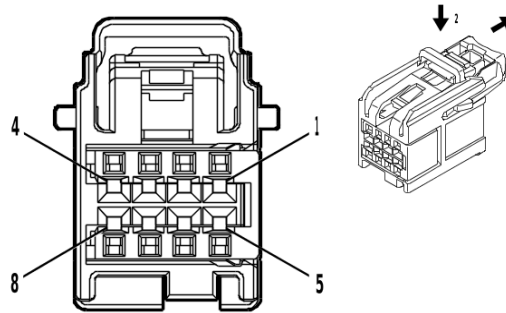

4935776

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 15526972
 Service Connector: 19370429
 Description: 8-Way F 0.64 OCS Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

P29 Head-Up Display X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	GN / BK	3894	Instrument Panel Cluster Control Module LIN Bus 1	I	—
2	—	—	—	Not Occupied	—	—
3	0.35	YE / WH	622	Head-Up Display Switch Signal	I	—
4	0.5	BK / WH	851	Signal Ground	I	—
5	—	—	—	Not Occupied	—	—
6	0.5	RD / WH	1340	Battery Positive Voltage	I	—
7	—	—	—	Not Occupied	—	—
8	0.35	BK / GN	5699	Head-Up Display Switch Low Reference	I	—

P29 Head-Up Display X2

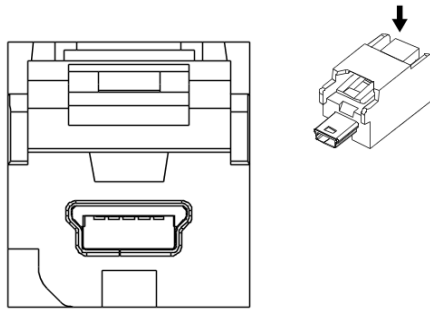

3214018

Connector Part Information

Harness Type: Instrument Panel Wiring Harness USB
 OEM Connector: 13871470
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 5-Way M 2.0 Mini-B USB Type(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

P29 Head-Up Display X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	USB	—	USB Serial Data	I	—

P43 Forward Collision Alert Display

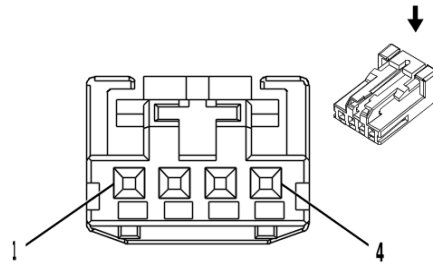

2717162

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 13969166
 Service Connector: 19367524
 Description: 4-Way F 0.64 Micro-Quadlock Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

P43 Forward Collision Alert Display

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	VT / BK	339	Run/Crank Ignition 1 Voltage	I	—
2	0.35	GY / YE	3885	Forward Collision Alert LED Control	I	—
3	0.35	GY / BK	4787	Day Night LED Control	I	—
4	0.35	BK / WH	851	Signal Ground	I	—

P45L Front Seat Lane Departure Warning Actuator - Left

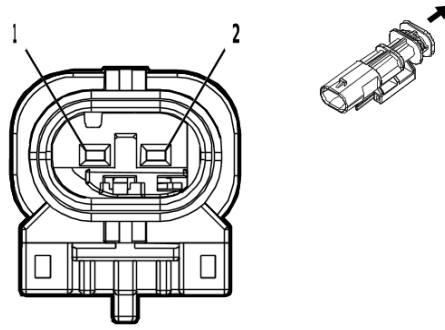

4569729

Connector Part Information

Harness Type: Front Seat Wiring Harness - Driver
 OEM Connector: 34899-2080
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way M 1.2 MCON Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-13 (BU)	No Tool Required

P45L Front Seat Lane Departure Warning Actuator - Left

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BK	1550	Ground	I	—
2	0.35	YE / BN	3037	Driver Seat Left Rear Haptic Movement Motor Control	I	—

P45R Front Seat Lane Departure Warning Actuator - Right

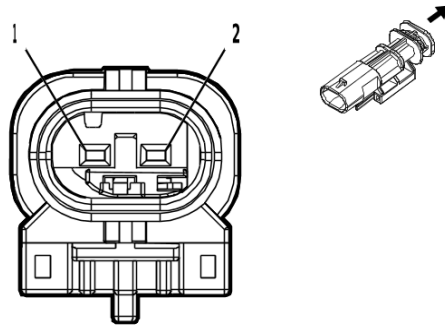

4569729

Connector Part Information

Harness Type: Front Seat Wiring Harness - Driver
 OEM Connector: 34899-2080
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way M 1.2 MCON Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-13 (BU)	No Tool Required

P45R Front Seat Lane Departure Warning Actuator - Right

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BK	1550	Ground	I	—
2	0.35	BN	3038	Driver Seat Right Rear Haptic Movement Motor Control	I	—

P53 Driver Information Display X1

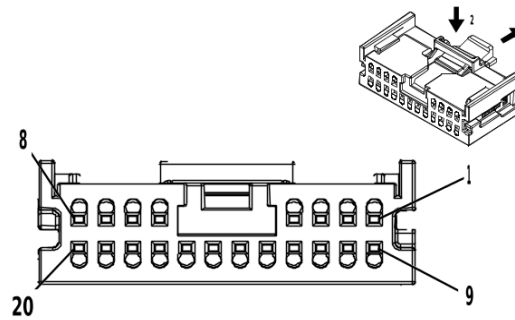

4231339

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 35340139
 Service Connector: 13544280
 Description: 20-Way F Mini 50 Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19333221	EL-35616-58 (BK)	EL-38125-58

P53 Driver Information Display X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	BU / RD	11246	Infotainment Display 5 Volt Reference	I	—
2	0.35	GY / BU	11247	Infotainment Display LCD Enable Signal	I	—
3	—	—	—	Not Occupied	—	—
4	0.35	BU	11235	Radio Switch Volume Up Signal	I	—
5	0.35	GY / BN	11234	Radio Switch Volume Down Signal	I	—
6	0.35	BN / WH	11233	Radio Switch Power ON/OFF Switch Signal	I	—
7	0.35	VT / WH	11245	Radio Switch Buttons Signal	I	—
8	0.35	BU / GY	11244	Radio Switch Dimming Control	I	—
9	0.35	BU / GN	11248	Infotainment Display Backlight Dimming Control	I	—
10	—	—	—	Not Occupied	—	—
11	0.35	BK / WH	11252	Infotainment Display Low Reference	I	—
12	0.35	YE / RD	11236	Radio Switch 5 Volt Reference	I	—
13	0.35	BK / BU	11237	Radio Switch Low Reference 1	I	—
14	0.35	BU	11235	Radio Switch Volume Up Signal	I	—
15	0.35	GY / BN	11234	Radio Switch Volume Down Signal	I	—
16	0.35	BN / WH	11233	Radio Switch Power ON/OFF Switch Signal	I	—
17	0.35	VT / WH	11245	Radio Switch Buttons Signal	I	—
18	0.35	BU / GY	11244	Radio Switch Dimming Control	I	—
19	0.35	GY / VT	11249	Infotainment Display Backlight Enable Control	I	—
20	0.35	BK / GN	11238	Radio Switch Low Reference 2	I	—

P53 Driver Information Display X2

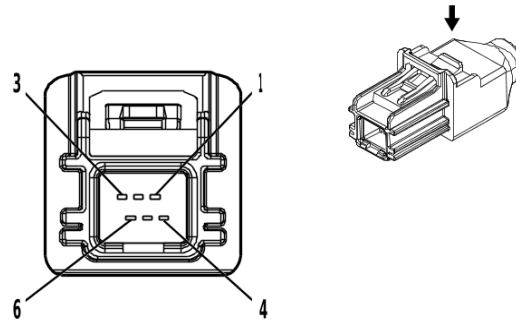

4806625

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 100337-1020
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 6-Way M HSAL-2 Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

P53 Driver Information Display X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	4844	Radio LVDS (Low Voltage Differential Signaling) Low Reference	I	—
2	—	—	4845	Radio LVDS (Low Voltage Differential Signaling) Signal [+]	I	—
3	—	—	4846	Radio LVDS (Low Voltage Differential Signaling) Signal [-]	I	—
4 - 6	—	—	—	Not Occupied	—	—

Q2 Air Conditioning Clutch (L5P)

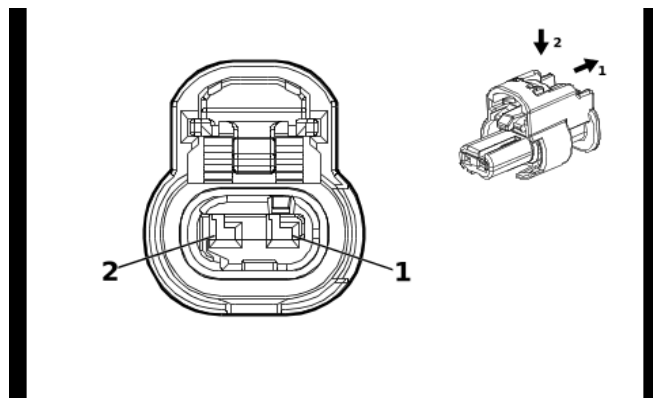

4649903

Connector Part Information

Harness Type: Engine Wiring Harness Chassis
 OEM Connector: 33327048
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.2 MCON Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

Q2 Air Conditioning Clutch (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	1.5	BK	450	Ground	I	—
2	0.75	BN / GN	59	Air Conditioning Compressor Clutch Control	I	—

Q2 Air Conditioning Clutch (L8T)

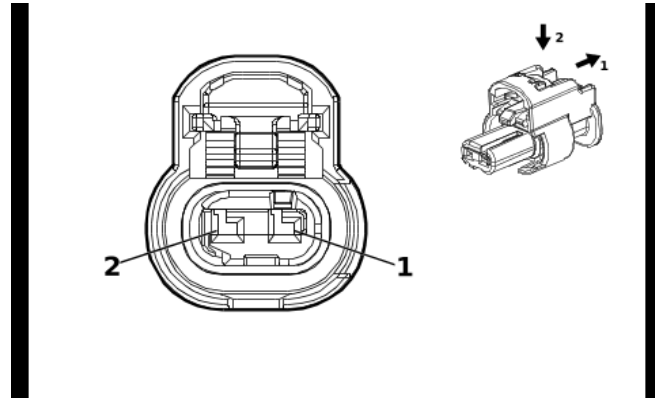

4649903

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 33327048
 Service Connector: 85519075
 Description: 2-Way F 1.2 MCON Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

Q2 Air Conditioning Clutch (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	1.5	BK	450	Ground	I	—
2	0.75	BN / GN	59	Air Conditioning Compressor Clutch Control	I	—

Q6 Camshaft Position Actuator Solenoid Valve (L84 / L87)

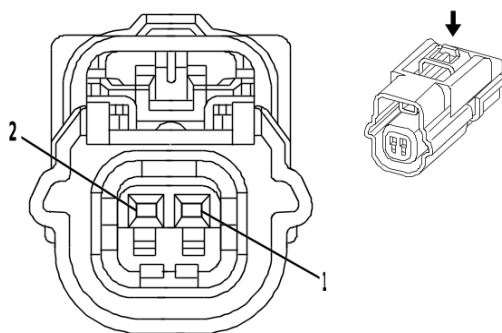

1664592

Connector Part Information

Harness Type: Camshaft Position Sensor Wire
 OEM Connector: 89047381
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 0.64 Kaizen Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

Q6 Camshaft Position Actuator Solenoid Valve (L84 / L87)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BK / BN	6753	Camshaft Position Actuator Solenoid Valve W Low Reference	I	—
2	0.5	VT / BN	5284	Intake Camshaft Position Actuator Solenoid Valve 1	I	—

Q9R Differential Locking Actuator - Rear

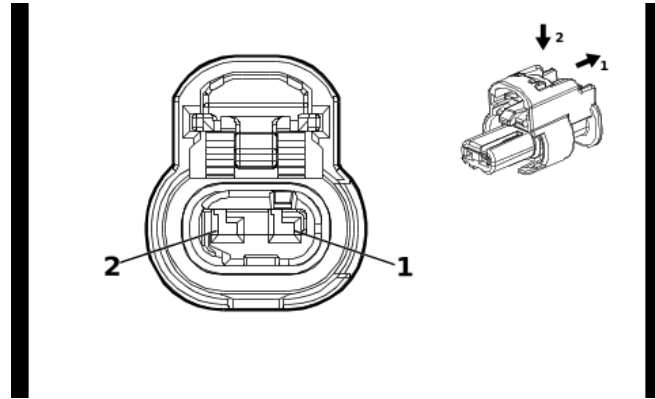

4649903

Connector Part Information

Harness Type: Chassis Rear Wiring Harness Extension Harness
 OEM Connector: 13512365
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.2 MCON Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

Q9R Differential Locking Actuator - Rear

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	VT / BN	7258	Rear Differential Lock Actuator Control	I	—
2	0.75	GY / BK	7253	Rear Differential Lock Actuator Low Control	I	—

Q12 Evaporative Emission Canister Purge Solenoid Valve (L8T)

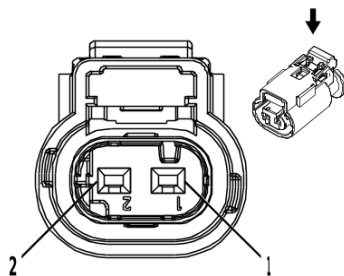

2717066

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13735326
 Service Connector: 13587326
 Description: 2-Way F 1.2 Multilock Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

Q12 Evaporative Emission Canister Purge Solenoid Valve (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	VT / BU	5293	Powertrain Main Relay Fused Supply Voltage 4	I	—
2	0.5	GN / BU	428	EVAP Canister Purge Solenoid Control	I	—

Q13 Evaporative Emission Canister Vent Solenoid Valve

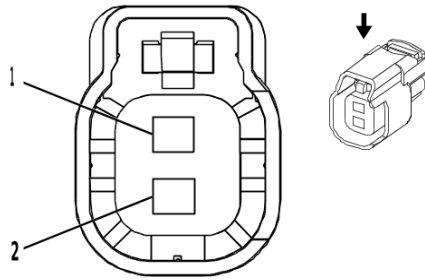

2422378

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 13771883
 Service Connector: 13579002
 Description: 2-Way F 1.5 Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required

Q13 Evaporative Emission Canister Vent Solenoid Valve

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH	1310	EVAP Vent Solenoid Valve Control	I	—
2	0.5	RD / WH	3440	Battery Positive Voltage	I	—

Q14 Exhaust Gas Recirculation Valve (L5P)

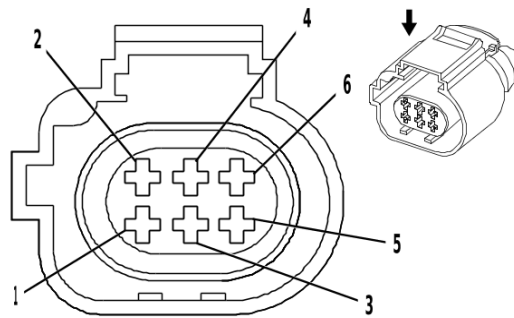

2216905

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 284716-5
 Service Connector: 19354082
 Description: 6-Way F 1.6 Micro-Timer Series, Sealed(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required

Q14 Exhaust Gas Recirculation Valve (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH / VT	5764	Exhaust Gas Recirculation Valve High Control	I	—
2	0.5	BN / WH	5763	Exhaust Gas Recirculation Position Signal	I	—
3	—	—	—	Not Occupied	—	—
4	0.5	BK / YE	548	Engine Control Sensors Low Reference 1	I	—
5	0.5	VT / BK	5746	Exhaust Gas Recirculation Valve Low Control	I	—
6	0.5	BU / RD	460	Engine Control Sensors 5 Volt Reference 1	I	—

Q17A Fuel Injector 1 (L5P)

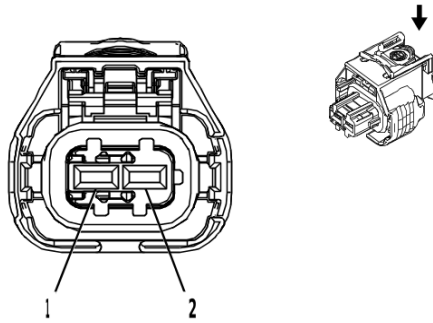

2845578

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13343445
 Service Connector: 19368140
 Description: 2-Way F 2.8 Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required

Q17A Fuel Injector 1 (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BN / WH	4901	Direct Fuel Injector High Voltage Supply Cylinder 1	I	—
2	0.75	BN	4801	Direct Fuel Injector High Voltage Control Cylinder 1	I	—

Q17A Fuel Injector 1 (L8T)

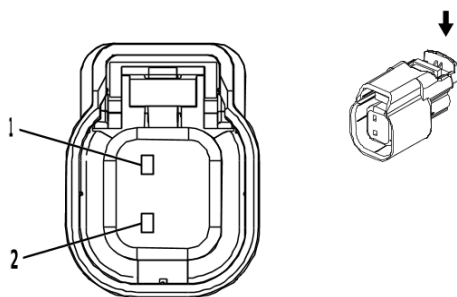

2792100

Connector Part Information

Harness Type: Fuel Injector Wiring Harness - Left
 OEM Connector: 340624008
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.5 Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required

Q17A Fuel Injector 1 (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.8	BN / WH	4901	Direct Fuel Injector High Voltage Supply Cylinder 1	I	—
2	0.8	BN	4801	Direct Fuel Injector High Voltage Control Cylinder 1	I	—

Q17B Fuel Injector 2 (L5P)

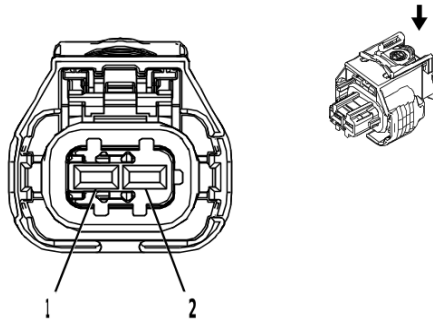

2845578

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13343445
 Service Connector: 19368140
 Description: 2-Way F 2.8 Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required

Q17B Fuel Injector 2 (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BU / GY	4902	Direct Fuel Injector High Voltage Supply Cylinder 2	I	—
2	0.75	BU	4802	Direct Fuel Injector High Voltage Control Cylinder 2	I	—

Q17B Fuel Injector 2 (L8T)

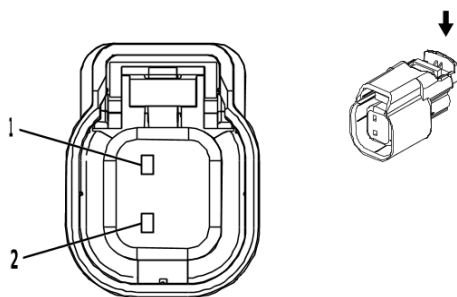

2792100

Connector Part Information

Harness Type: Fuel Injector Wiring Harness - Right
 OEM Connector: 340624008
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.5 Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required

Q17B Fuel Injector 2 (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.8	BU / GY	4902	Direct Fuel Injector High Voltage Supply Cylinder 2	I	—
2	0.8	BU	4802	Direct Fuel Injector High Voltage Control Cylinder 2	I	—

Q17C Fuel Injector 3 (L5P)

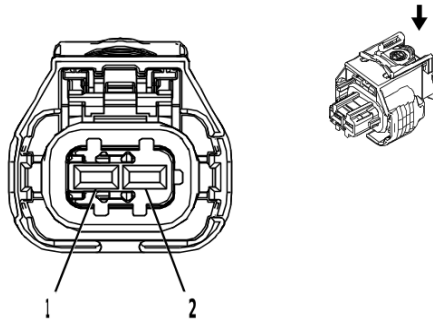

2845578

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13343445
 Service Connector: 19368140
 Description: 2-Way F 2.8 Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required

Q17C Fuel Injector 3 (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	GN / GY	4903	Direct Fuel Injector High Voltage Supply Cylinder 3	I	—
2	0.75	GN	4803	Direct Fuel Injector High Voltage Control Cylinder 3	I	—

Q17C Fuel Injector 3 (L8T)

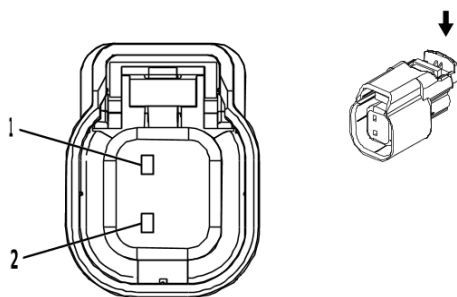

2792100

Connector Part Information

Harness Type: Fuel Injector Wiring Harness - Left
 OEM Connector: 340624008
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.5 Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required

Q17C Fuel Injector 3 (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.8	GN / GY	4903	Direct Fuel Injector High Voltage Supply Cylinder 3	I	—
2	0.8	GN	4803	Direct Fuel Injector High Voltage Control Cylinder 3	I	—

Q17D Fuel Injector 4 (L5P)

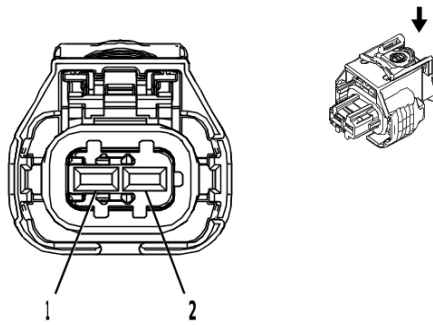

2845578

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13343445
 Service Connector: 19368140
 Description: 2-Way F 2.8 Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required

Q17D Fuel Injector 4 (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BU / WH	4904	Direct Fuel Injector High Voltage Supply Cylinder 4	I	—
2	0.75	GY / BU	4804	Direct Fuel Injector High Voltage Control Cylinder 4	I	—

Q17D Fuel Injector 4 (L8T)

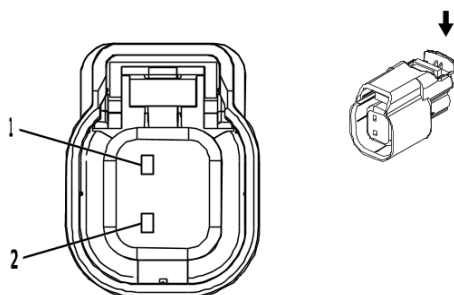

2792100

Connector Part Information

Harness Type: Fuel Injector Wiring Harness - Right
 OEM Connector: 340624008
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.5 Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required

Q17D Fuel Injector 4 (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.8	BU / WH	4904	Direct Fuel Injector High Voltage Supply Cylinder 4	I	—
2	0.8	GY / BU	4804	Direct Fuel Injector High Voltage Control Cylinder 4	I	—

Q17E Fuel Injector 5 (L5P)

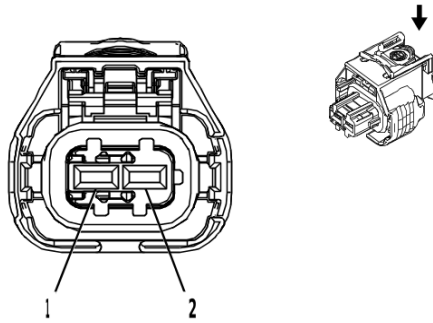

2845578

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13343445
 Service Connector: 19368140
 Description: 2-Way F 2.8 Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required

Q17E Fuel Injector 5 (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	GN / WH	4905	Direct Fuel Injector High Voltage Supply Cylinder 5	I	—
2	0.75	WH / GN	4805	Direct Fuel Injector High Voltage Control Cylinder 5	I	—

Q17E Fuel Injector 5 (L8T)

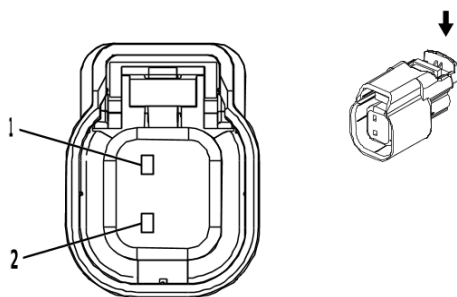

2792100

Connector Part Information

Harness Type: Fuel Injector Wiring Harness - Left
 OEM Connector: 340624008
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.5 Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required

Q17E Fuel Injector 5 (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.8	GN / WH	4905	Direct Fuel Injector High Voltage Supply Cylinder 5	I	—
2	0.8	WH / GN	4805	Direct Fuel Injector High Voltage Control Cylinder 5	I	—

Q17F Fuel Injector 6 (L5P)

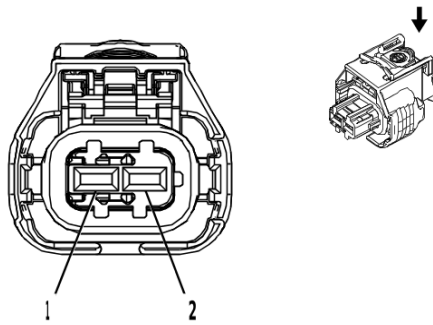

2845578

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13343445
 Service Connector: 19368140
 Description: 2-Way F 2.8 Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required

Q17F Fuel Injector 6 (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	VT / GY	4906	Direct Fuel Injector High Voltage Supply Cylinder 6	I	—
2	0.75	VT / GN	4806	Direct Fuel Injector High Voltage Control Cylinder 6	I	—

Q17F Fuel Injector 6 (L8T)

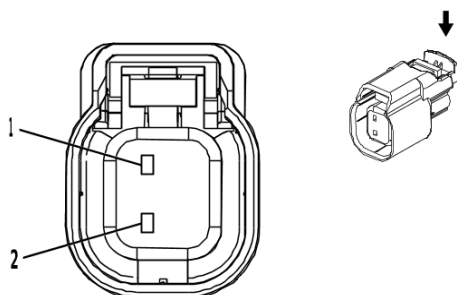

2792100

Connector Part Information

Harness Type: Fuel Injector Wiring Harness - Right
 OEM Connector: 340624008
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.5 Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required

Q17F Fuel Injector 6 (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.8	VT / GY	4906	Direct Fuel Injector High Voltage Supply Cylinder 6	I	—
2	0.8	VT / GN	4806	Direct Fuel Injector High Voltage Control Cylinder 6	I	—

Q17G Fuel Injector 7 (L5P)

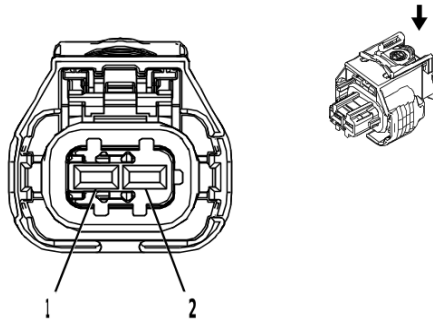

2845578

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13343445
 Service Connector: 19368140
 Description: 2-Way F 2.8 Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required

Q17G Fuel Injector 7 (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	WH / YE	4907	Direct Fuel Injector High Voltage Supply Cylinder 7	I	—
2	0.75	YE / GY	4807	Direct Fuel Injector High Voltage Control Cylinder 7	I	—

Q17G Fuel Injector 7 (L8T)

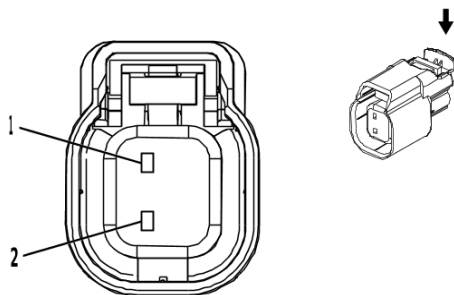

2792100

Connector Part Information

Harness Type: Fuel Injector Wiring Harness - Left
 OEM Connector: 340624008
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.5 Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required

Q17G Fuel Injector 7 (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.8	WH / YE	4907	Direct Fuel Injector High Voltage Supply Cylinder 7	I	—
2	0.8	YE / GY	4807	Direct Fuel Injector High Voltage Control Cylinder 7	I	—

Q17H Fuel Injector 8 (L5P)

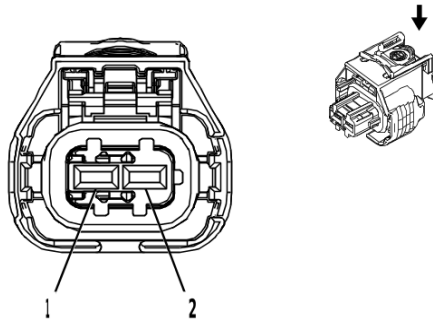

2845578

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13343445
 Service Connector: 19368140
 Description: 2-Way F 2.8 Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required

Q17H Fuel Injector 8 (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	GY / WH	4908	Direct Fuel Injector High Voltage Supply Cylinder 8	I	—
2	0.75	GY	4808	Direct Fuel Injector High Voltage Control Cylinder 8	I	—

Q17H Fuel Injector 8 (L8T)

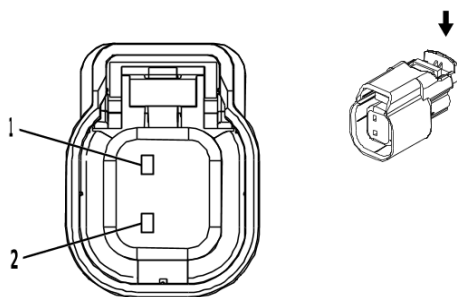

2792100

Connector Part Information

Harness Type: Fuel Injector Wiring Harness - Right
 OEM Connector: 340624008
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.5 Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required

Q17H Fuel Injector 8 (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.8	GY / WH	4908	Direct Fuel Injector High Voltage Supply Cylinder 8	I	—
2	0.8	GY	4808	Direct Fuel Injector High Voltage Control Cylinder 8	I	—

Q18A Fuel Pressure Regulator 1 (L5P)

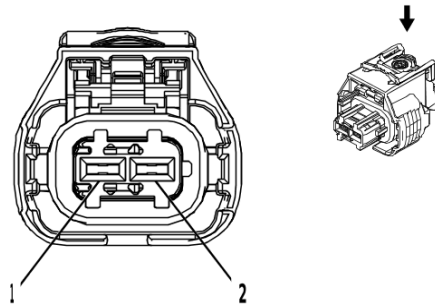

2577394

Connector Part Information

Harness Type: Engine Wiring Harness Extension
 OEM Connector: 13343443
 Service Connector: 13384371
 Description: 2-Way F 2.8 Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required

Q18A Fuel Pressure Regulator 1 (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN / BK	2929	Fuel Metering Solenoid Valve Low Control	I	—
2	0.5	YE	2928	Fuel Metering Solenoid Valve High Control	I	—

Q18B Fuel Pressure Regulator 2 (L5P)

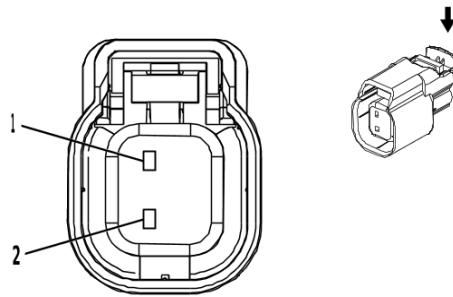

2792100

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13581410
 Service Connector: 19352068
 Description: 2-Way F 1.5 Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required

Q18B Fuel Pressure Regulator 2 (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BU / WH	2530	Fuel Rail Pressure Solenoid Valve Control	I	—
2	0.5	BK / YE	2834	Fuel Rail Pressure Solenoid Valve Low Control	I	—

Q20 Intake Airflow Control Valve (L5P)

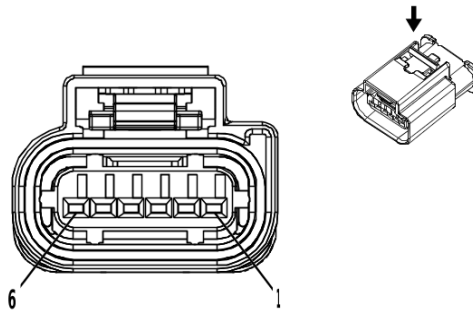

3747579

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13507087
 Service Connector: 19352911
 Description: 6-Way F 1.2 MCON Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

Q20 Intake Airflow Control Valve (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	YE	581	Throttle Actuator Open Control	I	—
2	0.5	BN / WH	582	Throttle Actuator Close Control	I	—
3	0.5	BU / WH	3630	Throttle Position Sensor SENT 1 Signal	I	—
4	0.5	BK / YE	548	Engine Control Sensors Low Reference 1	I	—
5	0.5	BU / RD	460	Engine Control Sensors 5 Volt Reference 1	I	—
6	—	—	—	Not Occupied	—	—

Q32P Shift Solenoid Valve - Power Take-Off (L5P)

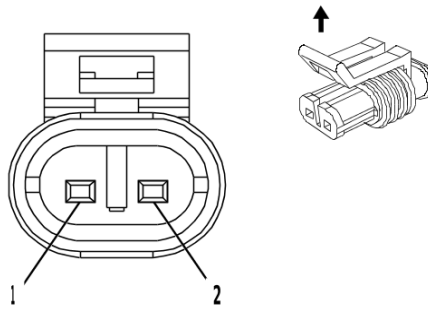

2448482

Connector Part Information

Harness Type: Engine Wiring Harness Chassis
 OEM Connector: 15369449
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.5 Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required

Q32P Shift Solenoid Valve - Power Take-Off (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BU / WH	8235	Power Take Off Solenoid Control High	I	—
2	0.5	GN / WH	8236	Power Take Off Solenoid Control Low	I	—

Q38 Throttle Body (L8T)

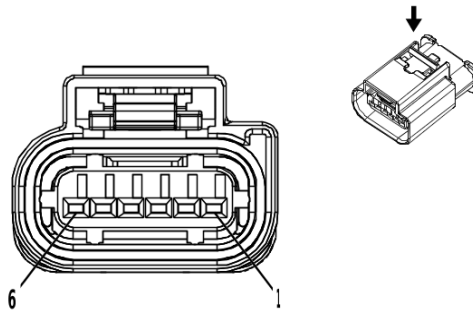

3747579

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 33220833
 Service Connector: 19352911
 Description: 6-Way F 1.2 MCON Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

Q38 Throttle Body (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	YE	581	Throttle Actuator Open Control	I	—
2	0.5	BN / WH	582	Throttle Actuator Close Control	I	—
3	0.5	BU / WH	3630	Throttle Position Sensor SENT 1 Signal	I	—
4	0.5	BK / BN	2752	Throttle Position Sensor Low Reference	I	—
5	0.5	BN / RD	2701	Throttle Position Sensor 5V Reference	I	—
6	—	—	—	Not Occupied	—	—

Q44 Engine Oil Pressure Control Solenoid Valve (L8T)

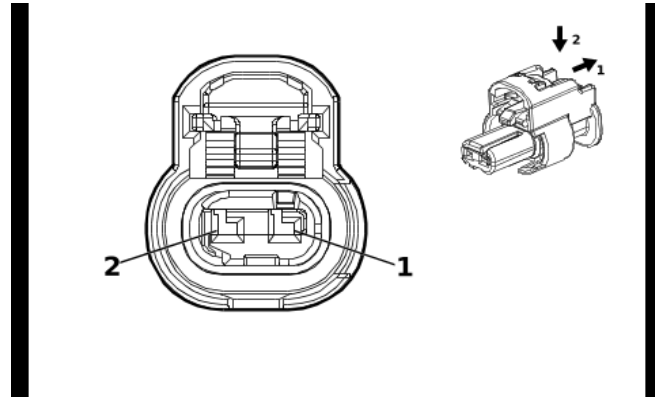

4036662

Connector Part Information

Harness Type: Oil Pump Flow Control Solenoid Valve Wire
 OEM Connector: 13514238
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.2 MCON-CB Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

Q44 Engine Oil Pressure Control Solenoid Valve (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	VT / BU	5293	Powertrain Main Relay Fused Supply Voltage 4	I	—
2	0.5	BU	179	Engine Oil Pump Control	I	—

Q46 Air Conditioning Compressor Solenoid Valve (L5P)

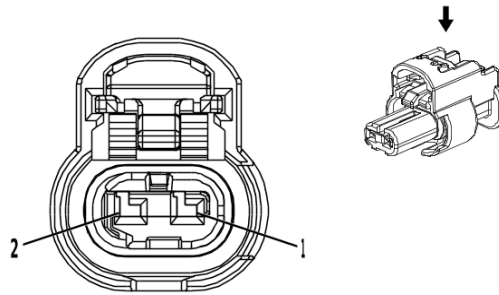

4335931

Connector Part Information

Harness Type: Engine Wiring Harness Chassis
 OEM Connector: 33371691
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.2 MCON Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

Q46 Air Conditioning Compressor Solenoid Valve (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BU / YE	7574	Air Conditioning Compressor Solenoid Valve Control	I	—
2	0.75	BU / BN	7573	Air Conditioning Compressor Solenoid Valve Control	I	—

Q46 Air Conditioning Compressor Solenoid Valve (L8T)

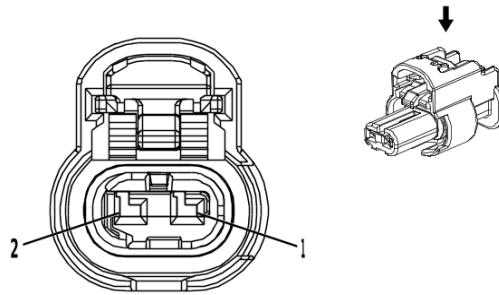

4335931

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 33371691
 Service Connector: 19366843
 Description: 2-Way F 1.2 MCON Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

Q46 Air Conditioning Compressor Solenoid Valve (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BU / YE	7574	Air Conditioning Compressor Solenoid Valve Control	I	—
2	0.75	BU / BN	7573	Air Conditioning Compressor Solenoid Valve Control	I	—

Q47 Exhaust Gas Recirculation Cooler Bypass Solenoid Valve (L5P)

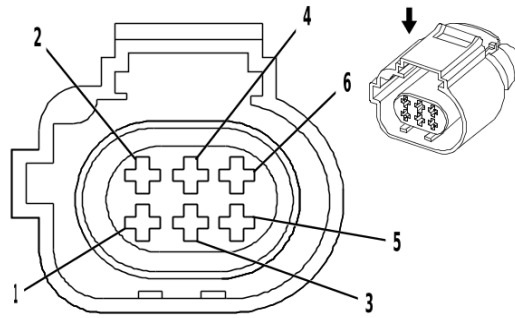

2216905

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 284716-5
 Service Connector: 19354082
 Description: 6-Way F 1.6 Micro-Timer Series, Sealed(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required

Q47 Exhaust Gas Recirculation Cooler Bypass Solenoid Valve (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN / VT	3656	EGR Cooler Bypass Valve Close Control	I	—
2	0.5	GN / GY	3654	EGR Cooler Bypass Valve Position Sensor Signal	I	—
3	—	—	—	Not Occupied	—	—
4	0.5	BK / YE	548	Engine Control Sensors Low Reference 1	I	—
5	0.5	YE / GN	3655	EGR Cooler Bypass Valve Open Control	I	—
6	0.5	BU / RD	460	Engine Control Sensors 5 Volt Reference 1	I	—

Q61 Reductant Fluid Injector (L5P)

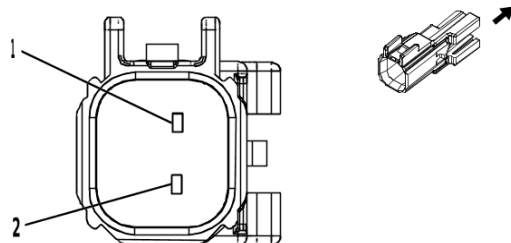

3271068

Connector Part Information

Harness Type: Engine Wiring Harness Chassis
 OEM Connector: 13719748
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way M 1.5 Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-3 (GY)	No Tool Required

Q61 Reductant Fluid Injector (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN / WH	3100	Diesel Exhaust Fluid Dosing Valve Low Control	I	—
2	0.5	BN	3099	Diesel Exhaust Fluid Dosing Valve High Control	I	—

Q64 Evaporative Emission System Switching Valve

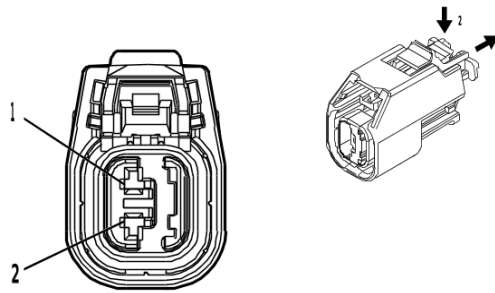

4889830

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 33164011
 Service Connector: 86802964
 Description: 2-Way F 1.5 OCS Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required
II	Not required	J-35616-2A (GY)	No Tool Required

Q64 Evaporative Emission System Switching Valve

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH / RD	11031	Fuel Tank Isolation Valve Supply Voltage	I	—
2	1.5	BK / WH	1951	Signal Ground	II	—

Q67 Exhaust Aftertreatment Fuel Injector - Chassis Cab

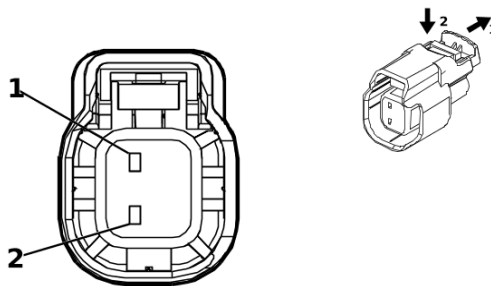

3028817

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 13820418
 Service Connector: 13580230
 Description: 2-Way F 1.5 Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required

Q67 Exhaust Aftertreatment Fuel Injector - Chassis Cab

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	VT / BN	2927	Exhaust Aftertreatment Fuel Injector Low Control	I	—
2	0.5	BN / BU	2926	Exhaust Aftertreatment Fuel Injector High Control	I	—

Q67 Exhaust Aftertreatment Fuel Injector - without Chassis Cab

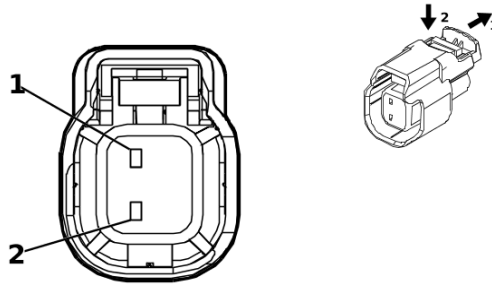

5199958

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 35259174
 Service Connector: 84769203
 Description: 2-Way F 1.5 Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required

Q67 Exhaust Aftertreatment Fuel Injector - without Chassis Cab

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	VT / BN	2927	Exhaust Aftertreatment Fuel Injector Low Control	I	—
2	0.5	BN / BU	2926	Exhaust Aftertreatment Fuel Injector High Control	I	—

Q77A Transmission Control Solenoid Valve 1 (MGM / MGU / MKM)

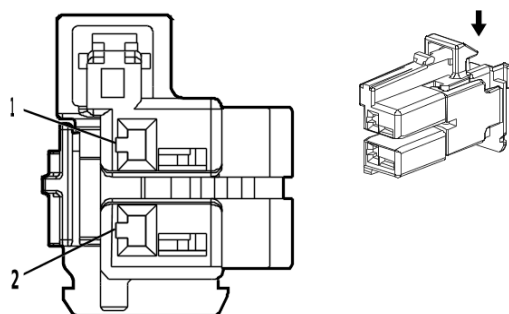

4672650

Connector Part Information

Harness Type: Transmission Control
 OEM Connector: 2289523-1
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.2 MCON Series(BN)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (LT GN)	No Tool Required

Q77A Transmission Control Solenoid Valve 1 (MGM / MGU / MKM)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH	6388	Transmission High Side Driver 2 Control	I	—
2	0.5	BU / GN	6404	Clutch Solenoid Valve E Control	I	—

Q77B Transmission Control Solenoid Valve 2 (MGM / MGU / MKM)

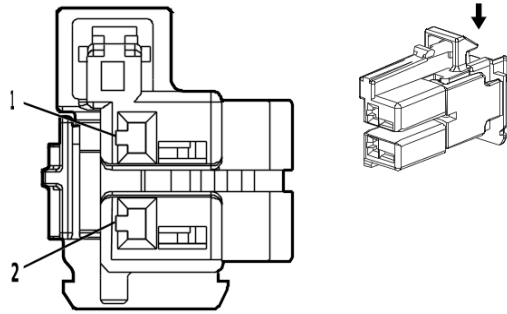

4672650

Connector Part Information

Harness Type: Transmission Control
 OEM Connector: 2289523-1
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.2 MCON Series(BN)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (LT GN)	No Tool Required

Q77B Transmission Control Solenoid Valve 2 (MGM / MGU / MKM)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH	6388	Transmission High Side Driver 2 Control	I	—
2	0.5	GN / BN	6403	Clutch Solenoid Valve D Control	I	—

Q77C Transmission Control Solenoid Valve 3 (MGM / MGU / MKM)

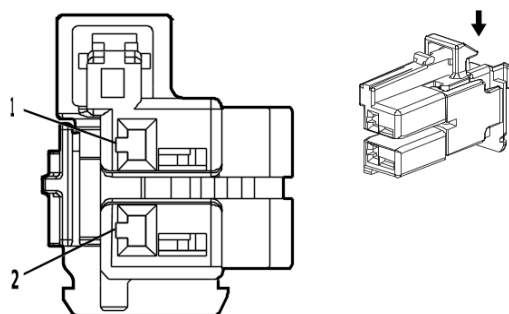

4672650

Connector Part Information

Harness Type: Transmission Control
 OEM Connector: 2289523-1
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.2 MCON Series(BN)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (LT GN)	No Tool Required

Q77C Transmission Control Solenoid Valve 3 (MGM / MGU / MKM)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH	6388	Transmission High Side Driver 2 Control	I	—
2	0.5	GY	6402	Clutch Solenoid Valve C Control	I	—

Q77D Transmission Control Solenoid Valve 4 (MGM / MGU / MKM)

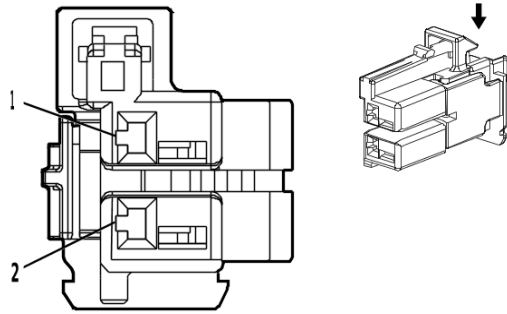

4672650

Connector Part Information

Harness Type: Transmission Control
 OEM Connector: 2289523-1
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.2 MCON Series(BN)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (LT GN)	No Tool Required

Q77D Transmission Control Solenoid Valve 4 (MGM / MGU / MKM)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH	6388	Transmission High Side Driver 2 Control	I	—
2	0.5	BN / WH	4509	Transmission Clutch F Control	I	—

Q77E Transmission Control Solenoid Valve 5 (MGM / MGU / MKM)

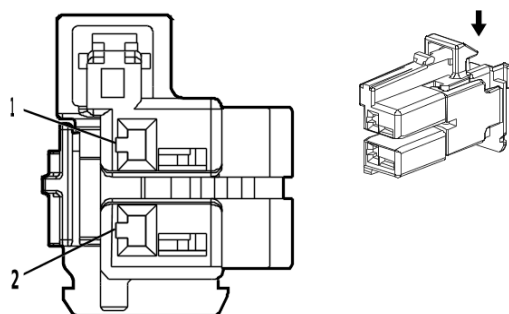

4672650

Connector Part Information

Harness Type: Transmission Control
 OEM Connector: 2289523-1
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.2 MCON Series(BN)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (LT GN)	No Tool Required

Q77E Transmission Control Solenoid Valve 5 (MGM / MGU / MKM)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH	6388	Transmission High Side Driver 2 Control	I	—
2	0.5	YE / VT	4507	Transmission Clutch H Control	I	—

Q77F Transmission Control Solenoid Valve 6 (MGM / MGU / MKM)

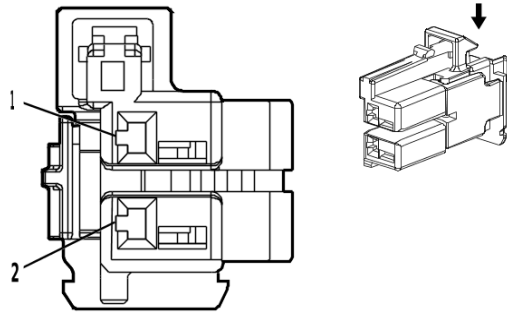

4672650

Connector Part Information

Harness Type: Transmission Control
 OEM Connector: 2289523-1
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.2 MCON Series(BN)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (LT GN)	No Tool Required

Q77F Transmission Control Solenoid Valve 6 (MGM / MGU / MKM)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH	6388	Transmission High Side Driver 2 Control	I	—
2	0.5	BU / GY	4508	Transmission Clutch G Control	I	—

Q77G Transmission Control Solenoid Valve 7 (MGM / MGU / MKM)

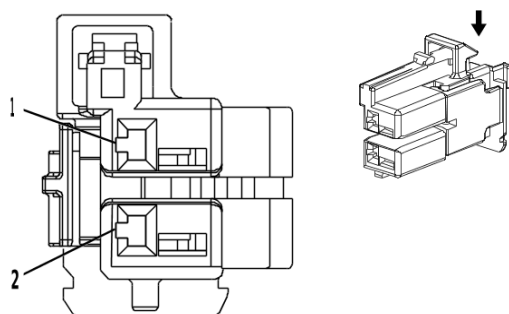

4364736

Connector Part Information

Harness Type: Transmission Control
 OEM Connector: 2289523-2
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.2 MCON Series(BU)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (LT GN)	No Tool Required

Q77G Transmission Control Solenoid Valve 7 (MGM / MGU / MKM)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN	6387	Transmission High Side Driver 1 Control	I	—
2	0.5	GN / OG	1530	Transmission Line Pressure Control Solenoid Valve Control	I	—

Q77H Transmission Control Solenoid Valve 8 (MGM / MGU / MKM)

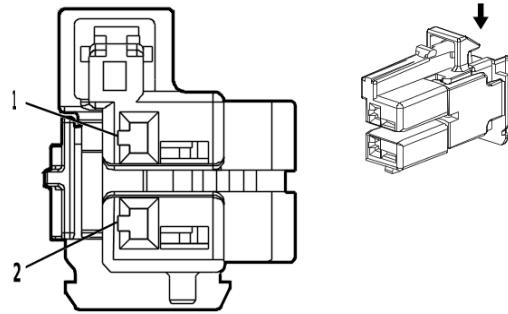

4672683

Connector Part Information

Harness Type: Transmission Control
 OEM Connector: 2289523-3
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.2 MCON Series(GN)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (LT GN)	No Tool Required

Q77H Transmission Control Solenoid Valve 8 (MGM / MGU / MKM)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN	6387	Transmission High Side Driver 1 Control	I	—
2	0.5	GY / BN	422	Torque Converter Clutch Solenoid Valve Control	I	—

Q77J Transmission Control Solenoid Valve 9 (MGM / MGU / MKM)

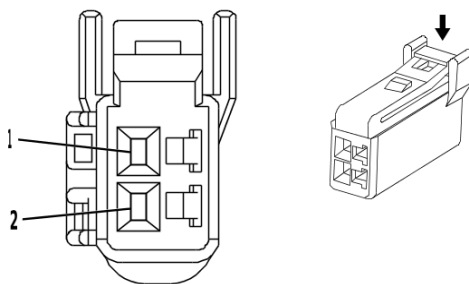

4051682

Connector Part Information

Harness Type: Transmission Control
 OEM Connector: 7287-0122
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 040 III Series(NA)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (LT GN)	No Tool Required

Q77J Transmission Control Solenoid Valve 9 (MGM / MGU / MKM)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH	6388	Transmission High Side Driver 2 Control	I	—
2	0.5	VT	7819	Default Disable Solenoid Control	I	—

Q85 Cooling Fan Clutch

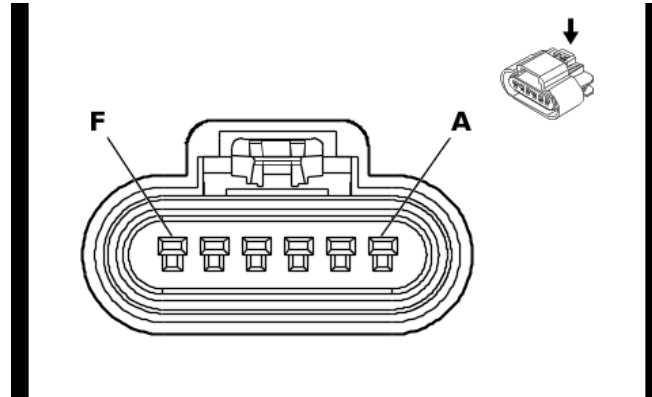

632357

Connector Part Information

Harness Type: Fan Blade Clutch Wiring Harness
 OEM Connector: Not Available
 Service Connector: Service by Harness - See Part Catalog
 Description: 6-Way F Sealed


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

Q85 Cooling Fan Clutch

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	—	RD	2368	Cooling Fan Control Signal	I	—
B	—	—	—	Not Occupied	—	—
C	—	OG	2365	Cooling Fan Speed Sensor 5V Reference	I	—
D	—	WH	2364	Cooling Fan Speed Signal	I	—
E	—	BK	6141	Cooling Fan Speed Sensor Low Reference	I	—
F	—	GN	550	Ground	I	—

R6A Terminating Resistor - High Speed Bus

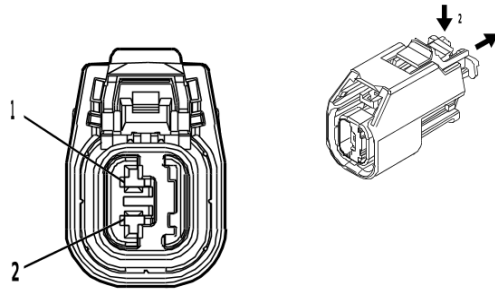

4889830

Connector Part Information

Harness Type: Rear Object Alarm Sensor Wiring Harness
 OEM Connector: 33164011
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.5 OCS Series, Sealed(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required

R6A Terminating Resistor - High Speed Bus

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH	4100	AUTOSAR CAN Bus [-] 4 Serial Data	I	—
2	0.5	BU / VT	4101	AUTOSAR CAN Bus [+] 4 Serial Data	I	—

R12 Power Take-Off Switch Diode (PTO)

Connector Part Information

Harness Type: Right Side Marker Lamp Harness
 OEM Connector: DID00000
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

R12 Power Take-Off Switch Diode (PTO)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	—	BU / BN	4408	Power Take-Off Enable Signal	I	—
C	—	GY / GN	6239	Transmission Power Take-Off Engage/Disengage Signal Power	I	—

R29 Fuel Filter

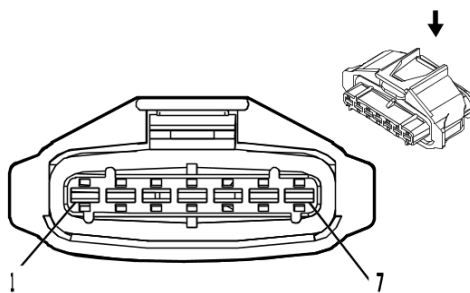

2537256

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 10774827
 Service Connector: 19354080
 Description: 7-Way F 2.8 Junior Power Timer Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required

R29 Fuel Filter

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	BK / WH	1951	Signal Ground	I	—
2	2.5	BN / YE	2996	Fuel Heater Control 1	I	—
3	1	VT / GN	4320	Powertrain Sensor Bus Enable	I	—
4	0.5	BK / BU	6863	Water In Fuel Sensor Low Reference	I	—
5	0.5	BU / YE	6861	Water In Fuel Sensor Signal	I	—
6	0.5	BN / GY	7072	Fuel Temperature Sensor 1 Signal	I	—
7	0.5	BN / WH	7073	Fuel Temperature Sensor 1 Low Reference	I	—

S2 Automatic Transmission Manual Shift Shaft Position Switch (MHT / MQB)

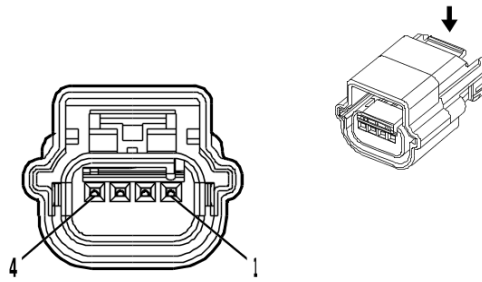

4789353

Connector Part Information

Harness Type: Automatic Transmission Wiring Harness - Case
 OEM Connector: 6006314801
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way F 0.64 Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

S2 Automatic Transmission Manual Shift Shaft Position Switch (MHT / MQB)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BK / GY	626	Engine Control Vehicle Sensors Low Reference 1	I	—
2	0.5	YE	3338	Transmission Internal Mode Switch Mode Control X	I	—
3	0.5	YE / GY	3337	Transmission Internal Mode Switch Mode Control Y	I	—
4	0.5	OG	480	Engine Control Vehicle Sensors 5 Volt Reference 1	I	—

S3 Automatic Transmission Control

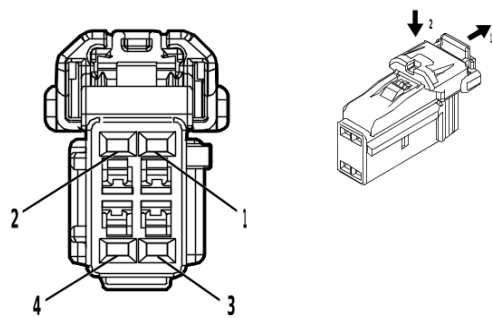

4872683

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 35029308
 Service Connector: 19369633
 Description: 4-Way F 1.2 Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

S3 Automatic Transmission Control

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	YE / WH	816	Brake Transmission Shift Interlock Solenoid Actuator Control	I	—
2	0.5	BK	1050	Ground	I	—
3	0.35	WH / VT	5905	Key Capture/Column Lock Shift Position Signal	I	—
4	0.5	BK	1050	Ground	I	—

S3C Automatic Transmission Control Lever

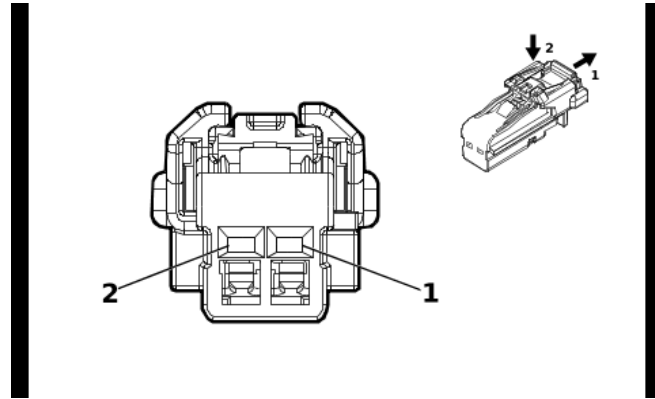

4115691

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 35311666
 Service Connector: 87816612
 Description: 2-Way F 1.2 MCON Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required

S3C Automatic Transmission Control Lever

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	GN / BU	3738	Tap Up/Tap Down Switch Signal 2	I	—
2	0.35	BK / WH	851	Signal Ground	I	—

S13D Door Lock Switch - Driver (- DLN / DBG / DWI / DZC)

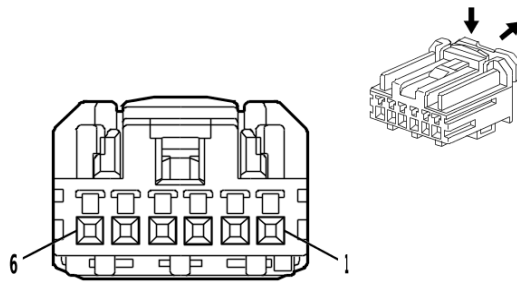

4650256

Connector Part Information

Harness Type: Front Side Door Door Lock Door Wiring Harness - Left
 OEM Connector: 33315784
 Service Connector: Service by Harness - See Part Catalog
 Description: 6-Way F 0.64 HCM Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

S13D Door Lock Switch - Driver (- DLN / DBG / DWI / DZC)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN / GY	4784	Left Front Door LED Backlight Dimming Control	I	(DLN/ DBG/ DWI/ DZC) - DLN/ - DBG/ - DWI/ - DZC
	0.5	YE	6817	LED Backlight Dimming Control 1	I	
2	0.5	BN / YE	2771	Left Front Door Lock Switch Lock Signal	I	—
3	0.5	BN / WH	2772	Left Front Door Lock Switch Unlock Signal	I	—
4	0.5	BK	1550	Ground	I	—
5 - 6	—	—	—	Not Occupied	—	—

S13D Door Lock Switch - Driver (DLN / DBG / DWI / DZC)

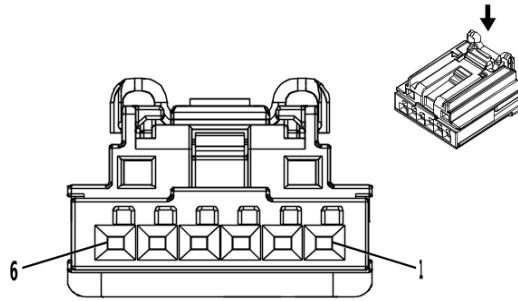

4145138

Connector Part Information

Harness Type: Front Side Door Door Lock Door Wiring Harness - Left
 OEM Connector: 33251915
 Service Connector: Service by Harness - See Part Catalog
 Description: 6-Way F 0.64 Generation Y Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

S13D Door Lock Switch - Driver (DLN / DBG / DWI / DZC)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN / GY	4784	Left Front Door LED Backlight Dimming Control	I	—
2	—	—	—	Not Occupied	—	—
3	0.5	BN / YE	2771	Left Front Door Lock Switch Lock Signal	I	—
4	0.5	BN / WH	2772	Left Front Door Lock Switch Unlock Signal	I	—
5	0.5	BK	1550	Ground	I	—
6	—	—	—	Not Occupied	—	—

S13P Door Lock Switch - Passenger (- DLN / DBG / DWI / DZC)

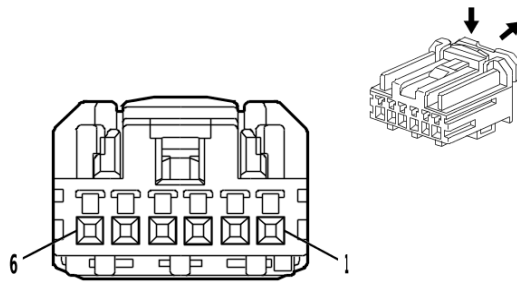

4650256

Connector Part Information

Harness Type: Front Side Door Door Lock Door Wiring Harness - Right
 OEM Connector: 33315784
 Service Connector: Service by Harness - See Part Catalog
 Description: 6-Way F 0.64 HCM Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

S13P Door Lock Switch - Passenger (- DLN / DBG / DWI / DZC)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GY / VT	4638	LED Backlight Dimming Control Right Front Door	I	(DLN/ DBG/ DWI/ DZC) - DLN/ - DBG/ - DWI/ - DZC)
	0.5	YE	6817	LED Backlight Dimming Control 1	I	
2	0.5	YE / VT	2773	Right Front Door Lock Switch Lock Control	I	—
3	0.5	BN / VT	2774	Right Front Door Lock Switch Unlock Control	I	—
4	0.5	BK	1350	Ground	I	—
5 - 6	—	—	—	Not Occupied	—	—

S13P Door Lock Switch - Passenger (DLN / DBG / DWI / DZC)

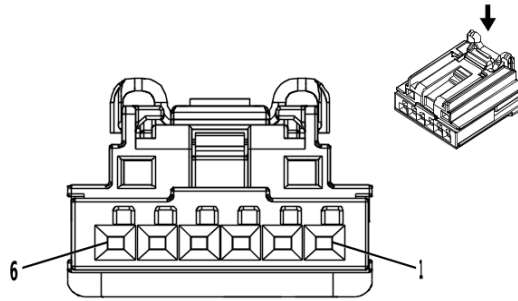

4145138

Connector Part Information

Harness Type: Front Side Door Door Lock Door Wiring Harness - Right
 OEM Connector: 33251915
 Service Connector: Service by Harness - See Part Catalog
 Description: 6-Way F 0.64 Generation Y Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

S13P Door Lock Switch - Passenger (DLN / DBG / DWI / DZC)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GY / VT	4638	LED Backlight Dimming Control Right Front Door	I	—
2	—	—	—	Not Occupied	—	—
3	0.5	YE / VT	2773	Right Front Door Lock Switch Lock Control	I	—
4	0.5	BN / VT	2774	Right Front Door Lock Switch Unlock Control	I	—
5	0.5	BK	1350	Ground	I	—
6	—	—	—	Not Occupied	—	—

S27 Head-Up Display Switch

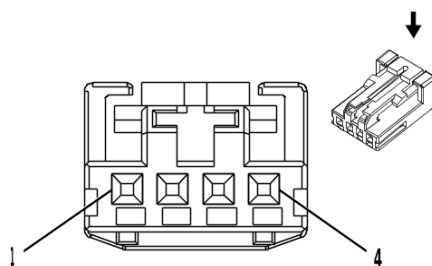

2717162

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 13969166
 Service Connector: 19367524
 Description: 4-Way F 0.64 Micro-Quadlock Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

S27 Head-Up Display Switch

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	YE	6817	LED Backlight Dimming Control 1	I	—
2	0.35	BK / WH	851	Signal Ground	I	—
3	0.35	BK / GN	5699	Head-Up Display Switch Low Reference	I	—
4	0.35	YE / WH	622	Head-Up Display Switch Signal	I	—

S30 Headlamp Switch

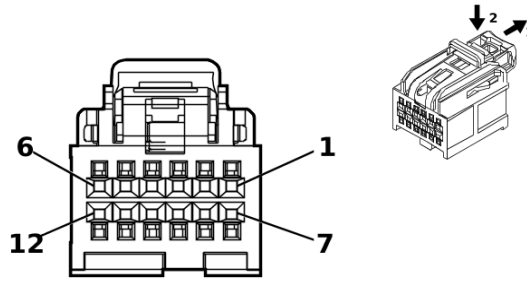

4975223

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 35016616
 Service Connector: 13519750
 Description: 12-Way F 0.64 OCS Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19300660	J-35616-64B (L-BU)	J-38125-215A

S30 Headlamp Switch

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	WH / VT	103	Headlamp Switch On Signal	I	—
2	0.35	YE	6817	LED Backlight Dimming Control 1	I	—
3	0.35	GN / BN	306	Headlamp Switch Off Signal	I	—
4	0.35	GY	158	Cargo Lamp Switch Signal	I	—
5	0.35	GN / GY	13	Headlamp Switch Park Lamp Signal	I	—
6	0.35	BU / GN	4248	Cargo Lamp Indicator Control	I	—
7	0.35	WH / GY	2935	Task Lamp Switch Signal	I	—
8	0.35	BK / WH	851	Signal Ground	I	—
9 - 10	—	—	—	Not Occupied	—	—
11	0.35	WH / BN	7555	Headlamp Switch Signal	I	—
12	0.35	YE	7556	Headlamp Switch Reference	I	—

S32R Rear Seat Heater Switch

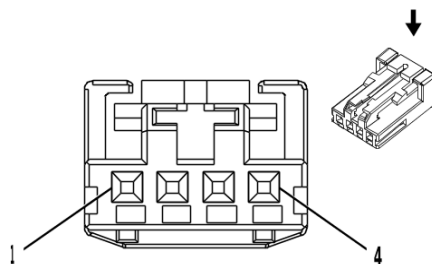

2717162

Connector Part Information

Harness Type: Front Floor Console Wiring Harness
 OEM Connector: 13969166
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way F 0.64 Micro-Quadlock Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

S32R Rear Seat Heater Switch

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	RD / BU	1240	Battery Positive Voltage	I	—
2	—	—	—	Not Occupied	—	—
3	0.5	GN / VT	2857	Body Control Module LIN Bus 11	I	—
4	0.5	BK / WH	1451	Signal Ground	I	—

S33 Steering Wheel Horn Contact (NK5)

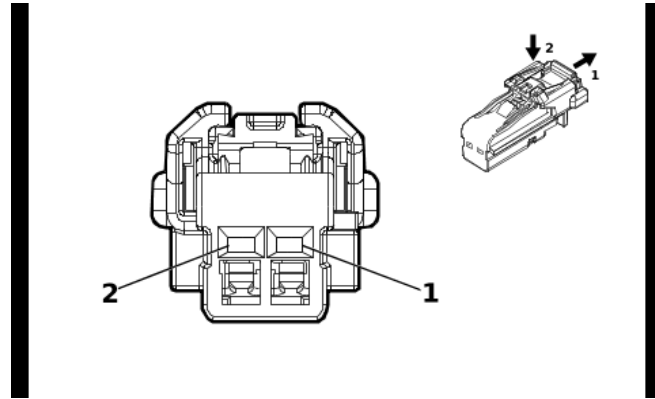

4115691

Connector Part Information

Harness Type: Steering Wheel Horn Switch Wiring Harness
 OEM Connector: 13517403
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.2 Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	Not Available	No Tool Required

S33 Steering Wheel Horn Contact (NK5)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	BK / WH	6051	Steering Wheel Ground	I	—
2	0.35	GN / WH	3287	Horn Switch Signal	I	—

S38 On/Off Vehicle Switch

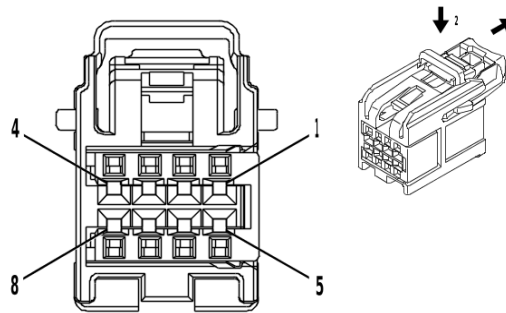

4232228

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 15526973
 Service Connector: 19353873
 Description: 8-Way F 0.64 OCS Series(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

S38 On/Off Vehicle Switch

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	BU / BK	5719	Ignition Mode Switch Start LED Signal	I	—
2	0.35	BN / BK	5720	Ignition Mode Switch Accessory LED Signal	I	—
3	0.35	BK / WH	851	Signal Ground	I	—
4	0.35	BU / GN	5723	Ignition Mode Switch Mode Voltage	I	—
5	0.35	YE	6817	LED Backlight Dimming Control 1	I	—
6	—	—	—	Not Occupied	—	—
7	0.35	BK / GY	3559	Passive Start Switch 2 Low Reference	I	—
8	0.35	GN / BK	3558	Passive Start Switch Signal 2	I	—

S47D Front Seat Adjuster Memory Switch - Driver

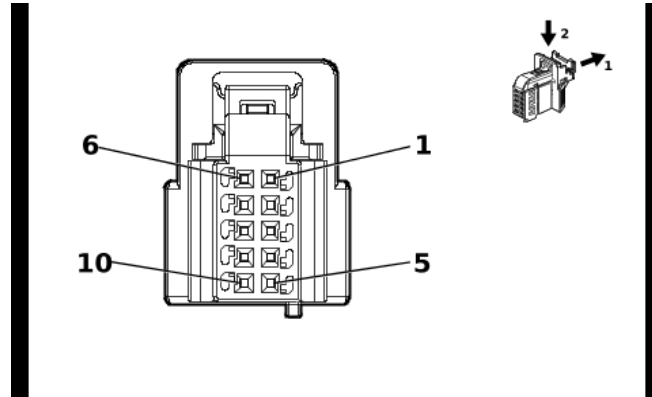

5838155

Connector Part Information

Harness Type: Front Side Door Door Lock Door Wiring Harness - Left
 OEM Connector: 35380960
 Service Connector: Service by Harness - See Part Catalog
 Description: 10-Way F 0.64 MQS Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

S47D Front Seat Adjuster Memory Switch - Driver

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN / GY	4784	Left Front Door LED Backlight Dimming Control	I	—
2	—	—	—	Not Occupied	—	—
3	0.5	BN / YE	2771	Left Front Door Lock Switch Lock Signal	I	—
4	0.5	BN / WH	2772	Left Front Door Lock Switch Unlock Signal	I	—
5	0.5	BK / WH	1551	Signal Ground	I	—
6	0.5	BU / GN	614	Seat Memory Switch Set Signal	I	—
7	0.5	WH	615	Seat Memory Switch Signal 1	I	—
8 - 10	—	—	—	Not Occupied	—	—

S64D Front Seat Adjuster Switch - Driver (A45)

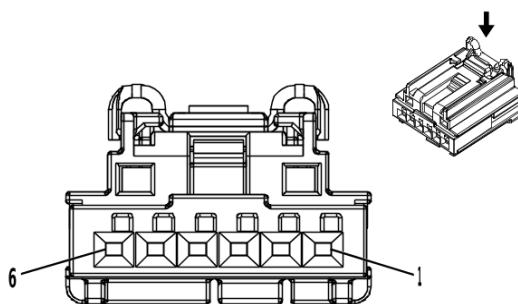

3960313

Connector Part Information

Harness Type: Front Seat Wiring Harness - Driver
 OEM Connector: 2035363-4
 Service Connector: Service by Harness - See Part Catalog
 Description: 6-Way F 0.64 Generation Y Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

S64D Front Seat Adjuster Switch - Driver (A45)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	RD / BN	2240	Battery Positive Voltage	I	—
2	—	—	—	Not Occupied	—	—
3	0.5	GN / GY	3758	Driver Seat Adjuster Memory Module LIN Bus 2	I	A45
	0.35	GN / GY	3758	Driver Seat Adjuster Memory Module LIN Bus 2	I	- A45
4	0.5	BK	1550	Ground	I	—
5	0.5	BU / YE	2818	Driver Seat Auxiliary Adjustment Switch Signal	I	—
6	0.5	BK / VT	2817	Auxiliary Driver Seat Adjustment Switch Low Reference	I	—

S64D Front Seat Adjuster Switch - Driver (AZX - A45)

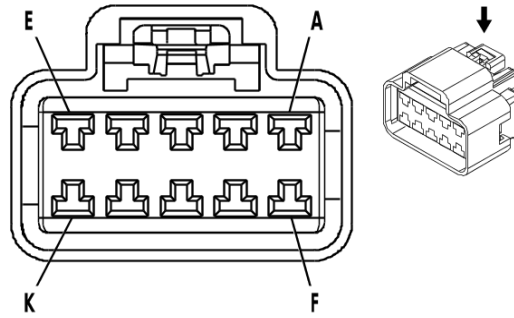

623046

Connector Part Information

Harness Type: Front Seat Wiring Harness - Driver
 OEM Connector: 35058909
 Service Connector: Service by Harness - See Part Catalog
 Description: 10-Way F 280 GT Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-4A (PU)	No Tool Required

S64D Front Seat Adjuster Switch - Driver (AZX - A45)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	2.5	RD / YE	5040	Battery Positive Voltage	I	—
B	1.5	BU / YE	277	Driver Seat Recline Motor Rearward Control	I	—
C	1.5	YE / BU	285	Driver Seat Horizontal Motor Forward Control	I	—
D	1.5	GY / GN	284	Driver Seat Horizontal Motor Rearward Control	I	—
E	1.5	GY / BU	283	Driver Seat Rear Vertical Motor Down Control	I	—
F	1.5	GN / BN	286	Driver Seat Front Vertical Motor Up Control	I	—
G	1.5	YE	282	Driver Seat Rear Vertical Motor Up Control	I	—
H	1.5	GN / YE	276	Driver Seat Recline Motor Forward Control	I	—
J	2.5	BK	1550	Ground	I	—
K	1.5	BU / VT	287	Driver Seat Front Vertical Motor Down Control	I	—

S64P Front Seat Adjuster Switch - Passenger (A7K)

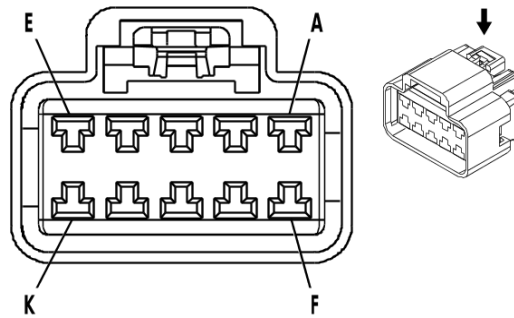

623046

Connector Part Information

Harness Type: Front Seat Wiring Harness - Passenger
 OEM Connector: 35058909
 Service Connector: Service by Harness - See Part Catalog
 Description: 10-Way F 280 GT Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-4A (PU)	No Tool Required

S64P Front Seat Adjuster Switch - Passenger (A7K)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	1.5	BU / WH	289	Passenger Seat Rear Vertical Motor Down Control	I	—
B	1.5	YE / BU	290	Passenger Seat Horizontal Motor Rearward Control	I	—
C	1.5	YE / WH	296	Passenger Seat Horizontal Motor Forward Control	I	—
D	1.5	BU / BN	77	Passenger Seat Recline Motor Rearward Control	I	—
E	2.5	BK	1350	Ground	I	—
F	1.5	GN / BU	298	Passenger Seat Front Vertical Motor Down Control	I	—
G	2.5	RD / GY	7440	Battery Positive Voltage	I	—
H	1.5	GN	76	Passenger Seat Recline Motor Forward Control	I	—
J	1.5	GN / WH	288	Passenger Seat Rear Vertical Motor Up Control	I	—
K	1.5	GN / VT	297	Passenger Seat Front Vertical Motor Up Control	I	—

S65D Front Seat Lumbar Switch - Driver (A45)

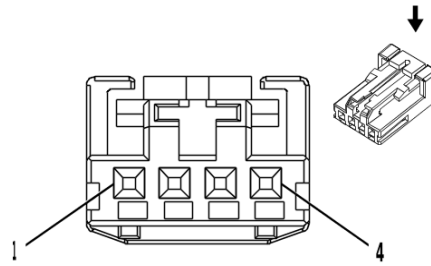

2717162

Connector Part Information

Harness Type: Front Seat Wiring Harness - Driver
 OEM Connector: 1-936119-1
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way F 0.64 Micro-Quadlock Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

S65D Front Seat Lumbar Switch - Driver (A45)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 2	—	—	—	Not Occupied	—	—
3	0.5	BU / YE	2818	Driver Seat Auxiliary Adjustment Switch Signal	I	—
4	0.5	BK / VT	2817	Auxiliary Driver Seat Adjustment Switch Low Reference	I	—

S65D Front Seat Lumbar Switch - Driver (AVK)

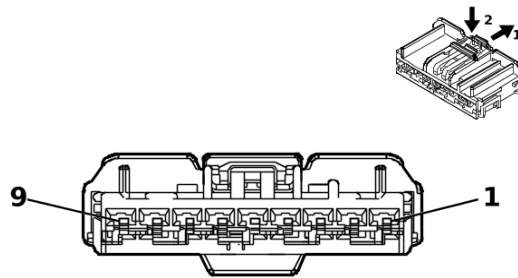

5204289

Connector Part Information

Harness Type: Front Seat Wiring Harness - Driver
 OEM Connector: 7289-6875-40
 Service Connector: Service by Harness - See Part Catalog
 Description: 9-Way F 2.8 YESC Series(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-4A (PU)	No Tool Required

S65D Front Seat Lumbar Switch - Driver (AVK)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BK	1550	Ground	I	—
2	—	—	—	Not Occupied	—	—
3	0.75	RD / BN	2240	Battery Positive Voltage	I	—
4	—	—	—	Not Occupied	—	—
5	0.75	BU	611	Driver Seat Lumbar Support Motor Forward Control	I	—
6	—	—	—	Not Occupied	—	—
7	0.75	VT	610	Driver Seat Lumbar Support Motor Backward Control	I	—
8 - 9	—	—	—	Not Occupied	—	—

S65P Front Seat Lumbar Switch - Passenger (AKE&AVU)

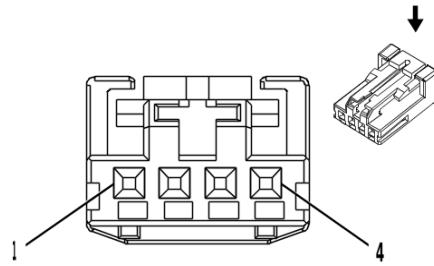

2717162

Connector Part Information

Harness Type: Front Seat Wiring Harness - Passenger
 OEM Connector: 1-936119-1
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way F 0.64 Micro-Quadlock Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

S65P Front Seat Lumbar Switch - Passenger (AKE&AVU)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 2	—	—	—	Not Occupied	—	—
3	0.5	GN / WH	2816	Passenger Seat Auxiliary Adjustment Switch Signal	I	—
4	0.5	BK / BN	2815	Auxiliary Passenger Seat Adjustment Switch Low Reference	I	—

S65P Front Seat Lumbar Switch - Passenger (- (AKE / AVU))

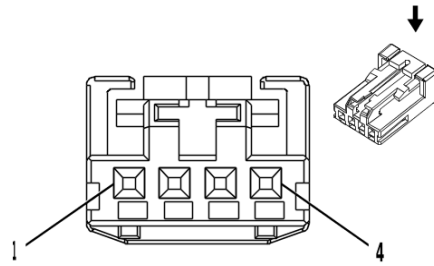

2717162

Connector Part Information

Harness Type: Front Seat Wiring Harness - Passenger
 OEM Connector: 1-936119-1
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way F 0.64 Micro-Quadlock Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

S65P Front Seat Lumbar Switch - Passenger (- (AKE / AVU))

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1 - 2	—	—	—	Not Occupied	—	—
3	0.5	YE / GN	1068	Passenger Seat Lumbar Support Switch Analog Signal	I	—
4	0.5	BK / BU	2194	Passenger Seat Position Switch Low Reference	I	—

S65P Front Seat Lumbar Switch - Passenger (A7K - AVU)

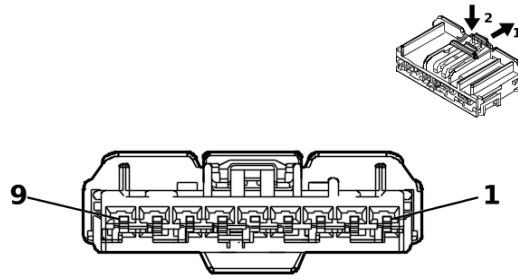

5204289

Connector Part Information

Harness Type: Front Seat Wiring Harness - Passenger
 OEM Connector: 7289-6875-40
 Service Connector: Service by Harness - See Part Catalog
 Description: 9-Way F 2.8 YESC Series(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-4A (PU)	No Tool Required

S65P Front Seat Lumbar Switch - Passenger (A7K - AVU)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BK	1350	Ground	I	—
2	—	—	—	Not Occupied	—	—
3	0.75	RD / BN	2240	Battery Positive Voltage	I	—
4	—	—	—	Not Occupied	—	—
5	0.75	BU	211	Passenger Seat Lumbar Support Motor Forward Control	I	—
6	—	—	—	Not Occupied	—	—
7	0.75	VT	210	Passenger Seat Lumbar Support Motor Backward Control	I	—
8 - 9	—	—	—	Not Occupied	—	—

S70E Radio Favorites Switch - Steering Wheel (UK3)

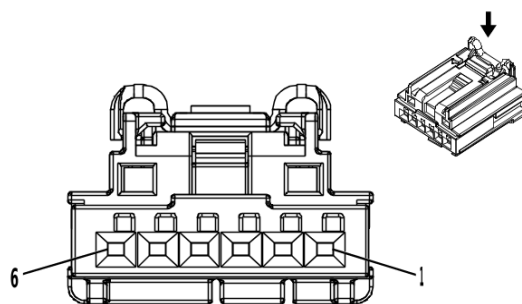

3960313

Connector Part Information

Harness Type: Steering Wheel Horn Switch Wiring Harness

OEM Connector: 13583825

Service Connector: Service by Harness - See Part Catalog

Description: 6-Way F 0.64 Generation Y Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

S70E Radio Favorites Switch - Steering Wheel (UK3)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	YE / BK	6051	Steering Wheel Ground	I	—
2	0.35	WH / YE	4312	Radio Favorite Back Switch Signal	I	—
3	0.35	YE / YE	4313	Radio Favorite Forward Switch Signal	I	—
4	0.35	YE / BU	6855	Transmission Tap Down Switch Signal	I	—
5 - 6	—	—	—	Not Occupied	—	—

S70F Radio Volume Switch - Steering Wheel (UK3)

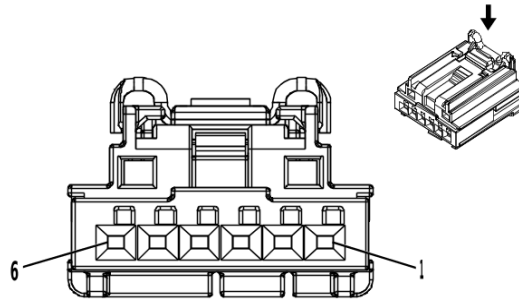

3960313

Connector Part Information

Harness Type: Steering Wheel Horn Switch Wiring Harness
 OEM Connector: 13583825
 Service Connector: Service by Harness - See Part Catalog
 Description: 6-Way F 0.64 Generation Y Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

S70F Radio Volume Switch - Steering Wheel (UK3)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	BK / WH	6051	Steering Wheel Ground	I	—
2	0.35	GY / BN	4314	Radio Volume Down Switch Signal	I	—
3	0.35	BU / BN	4315	Radio Volume Up Switch Signal	I	—
4	0.35	YE / BU	6855	Transmission Tap Down Switch Signal	I	—
5	0.35	VT / YE	5526	Tap Up/Tap Down Switch Signal	I	—
6	—	—	—	Not Occupied	—	—

S70L Cruise Control Switch (KI3)

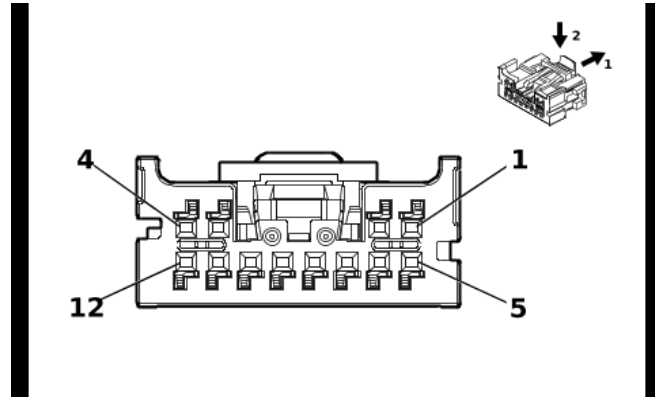

5823893

Connector Part Information

Harness Type: Steering Wheel Horn Switch Wiring Harness
 OEM Connector: 13541203
 Service Connector: Service by Harness - See Part Catalog
 Description: 12-Way F Mini 50 Series(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	EL-35616-58 (BK)	No Tool Required

S70L Cruise Control Switch (KI3)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	RD / GN	5140	Battery Positive Voltage	I	—
2	0.35	YE / BK	3893	Steering Wheel LED Backlight Dimming Control	I	—
3	0.35	BN / GN	1884	Cruise Control Set/Coast/Resume/Accelerate Switch Signal	I	—
4	0.35	GY / GN	5737	Distance Sensing Cruise Control Gap Up/Down Switch Signal	I	—
5	—	—	—	Not Occupied	—	—
6	0.35	BK / WH	6051	Steering Wheel Ground	I	—
7	0.35	BN / WH	5884	Steering Wheel Heating Switch LED Control	I	KI3
8	0.35	YE / GY	5883	Steering Wheel Heating Switch Signal	I	KI3
9	0.35	VT	3892	Indicator Dimming Control 2	I	—
10	0.35	BK / VT	1449	Steering Wheel Resistor Ladder Low Reference	I	—
11 - 12	—	—	—	Not Occupied	—	—

S70R Radio Control Switch - Steering Wheel (UK3)

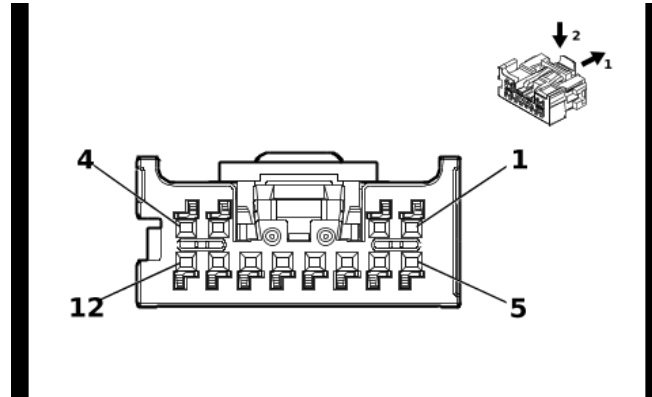

5911307

Connector Part Information

Harness Type: Steering Wheel Horn Switch Wiring Harness
 OEM Connector: 13541204
 Service Connector: Service by Harness - See Part Catalog
 Description: 12-Way F Mini 50 Series(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	EL-35616-58 (BK)	No Tool Required

S70R Radio Control Switch - Steering Wheel (UK3)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	GN	5140	Battery Positive Voltage	I	—
2	0.35	YE / BK	3893	Steering Wheel LED Backlight Dimming Control	I	—
3	0.35	GN / BK	3894	Instrument Panel Cluster Control Module LIN Bus 1	I	—
4 - 5	—	—	—	Not Occupied	—	—
6	0.35	BK / WH	6051	Steering Wheel Ground	I	—
7	0.35	WH / YE	4313	Radio Favorite Forward Switch Signal	I	—
8	0.35	YE / BU	4312	Radio Favorite Back Switch Signal	I	—
9	0.35	VT	3892	Indicator Dimming Control 2	I	—
10	0.35	BU	4315	Radio Volume Up Switch Signal	I	—
11	0.35	GY / BN	4314	Radio Volume Down Switch Signal	I	—
12	—	—	—	Not Occupied	—	—

S76 Trailer Brake Control Switch (- (GFY / GFG / GFW / GA4))

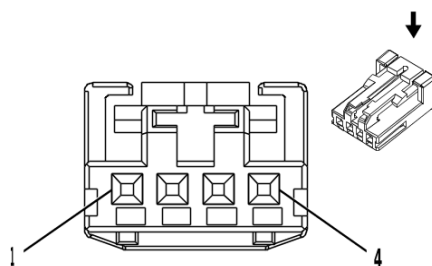

2717162

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 13969166
 Service Connector: 19367524
 Description: 4-Way F 0.64 Micro-Quadlock Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

S76 Trailer Brake Control Switch (- (GFY / GFG / GFW / GA4))

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	RD / YE	2340	Battery Positive Voltage	I	—
2	0.35	GN / BU	2733	Brake System Control Module LIN Bus 2	I	—
3	0.5	BK	1050	Ground	I	—
4	—	—	—	Not Occupied	—	—

S76 Trailer Brake Control Switch (GFY / GFG / GFW / GA4)

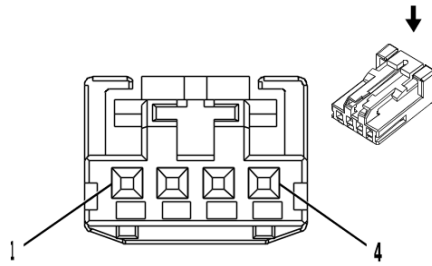

2717162

Connector Part Information

Harness Type: Front Floor Console Wiring Harness
 OEM Connector: 13969166
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way F 0.64 Micro-Quadlock Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

S76 Trailer Brake Control Switch (GFY / GFG / GFW / GA4)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	RD / YE	2340	Battery Positive Voltage	I	—
2	0.35	GN / BU	2733	Brake System Control Module LIN Bus 2	I	—
3	0.5	BK	1350	Ground	I	—
4	—	—	—	Not Occupied	—	—

S78 Turn Signal Switch

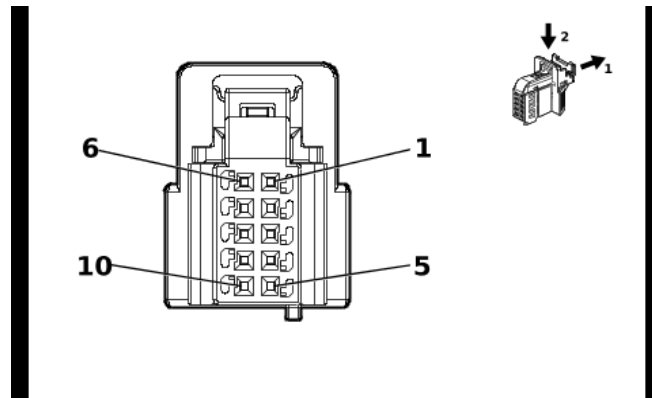

5838155

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 35380960
 Service Connector: 13518417
 Description: 10-Way F 0.64 MQS Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19300632	J-35616-64B (L-BU)	J-38125-215A

S78 Turn Signal Switch

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	WH / GN	2915	Left Turn Signal Switch Signal	I	—
2	0.35	VT / BU	2916	Right Turn Signal Switch Signal	I	—
3	0.35	BK / WH	851	Signal Ground	I	—
4	0.35	GY / BN	3904	Auto High Beam Assist Switch Signal	I	—
5	0.35	WH / BK	94	Windshield Washer Switch Signal	I	—
6	0.35	YE / BN	307	Headlamp Switch Flash Signal	I	—
7	0.35	WH	524	High Beam Select Switch High Beam Signal	I	—
8	0.35	BK / GY	6009	Windshield Wiper Switch Low Reference	I	—
9	0.35	GY	1715	Windshield Wiper Switch High Signal	I	—
10	0.35	YE / BU	1714	Windshield Wiper Switch Low Signal	I	—

S79D Front Side Door Window Control Switch - Driver X1

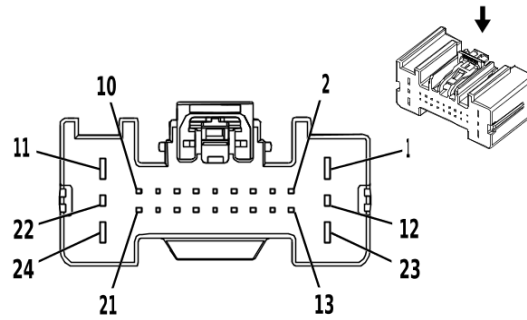

2871905

Connector Part Information

Harness Type: Front Side Door Door Lock Door Wiring Harness - Left
 OEM Connector: 13706537
 Service Connector: Service by Harness - See Part Catalog
 Description: 24-Way F 0.64 GEN-Y, 1.5, 2.8 YESC Series(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required
II	Not required	J-35616-4A (PU)	No Tool Required
III	Not required	J-35616-64B (L-BU)	No Tool Required


S79D Front Side Door Window Control Switch - Driver X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH / BN	2764	Window Switch Left Front Down Signal	II	AXG
	0.5	BN	10201	Left Front Mirror Motor Extend Control	II	DZC
2	0.5	GN	2766	Power Window Switch Left Front Express Signal	III	—
3	0.5	BN / YE	2771	Left Front Door Lock Switch Lock Signal	III	—
4	0.5	BN / WH	2772	Left Front Door Lock Switch Unlock Signal	III	—
5	0.5	GY / VT	2767	LED Ambient Lighting Control Left Front Door	III	—
6	—	—	—	Not Occupied	—	—
7	0.5	BN / GY	4784	Left Front Door LED Backlight Dimming Control	III	—
8	0.35	GY / YE	1760	Left Side Object Detection LED Control	III	—
9	0.5	WH / GN	2786	Left Front Mirror Motor Fold In Control	III	—
10	0.5	YE / BN	2789	Left Front Mirror Motor Common Control	III	—
11	0.5	BK	1550	Ground	II	—
12	0.5	GY / WH	2785	Left Front Mirror Motor Fold Out Control	I	—
13	0.5	WH / BN	2764	Window Switch Left Front Down Signal	III	—
14 - 15	—	—	—	Not Occupied	—	—
16	0.5	GY / GN	2763	Window Switch Left Front Up Signal	III	—
17	0.5	WH / VT	4258	Left Front Door Lock Status Signal	III	—
18	0.5	VT / BU	2788	Left Front Mirror Motor Up [+] Down [-] Control	III	—
19	0.5	BN / BK	2790	Left Front Mirror Motor Right [+] Left [-] Control	III	—
20	—	—	—	Not Occupied	—	—

7-548 Electrical Component and Inline Harness Connector End Views**S79D Front Side Door Window Control Switch - Driver X1 (cont'd)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
21	0.5	GN / YE	6134	Body Control Module LIN Bus 3	III	—
22	0.5	WH	606	Left Outside Rearview Mirror Heater Control	I	—
23	0.5	GY / GN	2763	Window Switch Left Front Up Signal	II	AXG
	0.5	WH / BK	10202	Left Front Mirror Motor Retract Control	II	DZC
24	0.5	RD / BU	1240	Battery Positive Voltage	II	—

S79D Front Side Door Window Control Switch - Driver X2

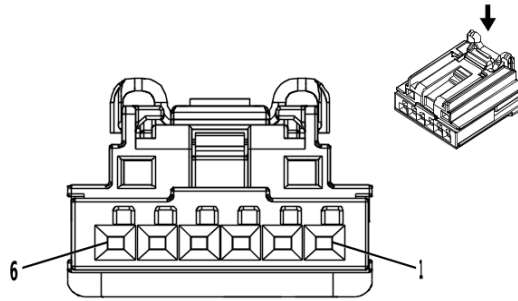

4145138

Connector Part Information

Harness Type: Front Side Door Door Lock Door Wiring Harness - Left
 OEM Connector: 33251915
 Service Connector: Service by Harness - See Part Catalog
 Description: 6-Way F 0.64 Generation Y Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

S79D Front Side Door Window Control Switch - Driver X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	WH / YE	2792	Left Front Mirror Position Sensor Left [-] Right [+] Signal	I	—
2	0.5	GY / BN	2787	Left Front Mirror Position Sensor Up [+] Down [-] Signal	I	—
3	0.5	VT / RD	2791	Left Front Mirror Position Sensor High Reference	I	—
4	0.5	BK / BN	673	Left Outside Rearview Mirror Position Sensor Low Reference	I	—
5 - 6	—	—	—	Not Occupied	—	—

S79LR Rear Side Door Window Switch - Left

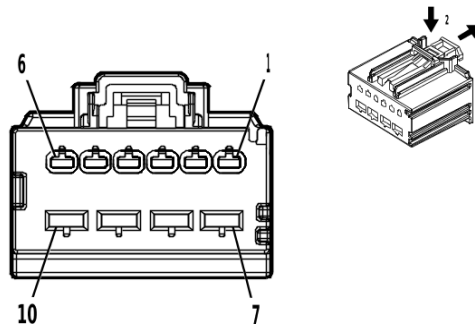

5035058

Connector Part Information

Harness Type: Rear Side Door Door Wiring Harness - Left
 OEM Connector: 35152553
 Service Connector: Service by Harness - See Part Catalog
 Description: 10-Way F 1.5, 2.8 MX Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required
II	Not required	J-35616-4A (PU)	No Tool Required

S79LR Rear Side Door Window Switch - Left

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GN / GY	6135	Body Control Module LIN Bus 4	I	—
2	0.5	GY	747	Left Rear Door Ajar Switch Signal	I	—
3	0.5	BK	1550	Ground	I	—
4 - 6	—	—	—	Not Occupied	—	—
7	2.5	BK	1550	Ground	II	—
8	2.5	RD / BU	3240	Battery Positive Voltage	II	—
9	2	BU / VT	668	Left Rear Window Motor Up Control	II	—
10	2	YE / BU	669	Left Rear Window Motor Down Control	II	—

S79P Front Side Door Window Switch - Passenger X1

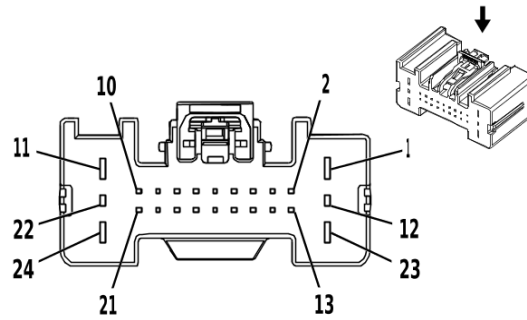

2871905

Connector Part Information

Harness Type: Front Side Door Door Lock Door Wiring Harness - Right
 OEM Connector: 13706537
 Service Connector: Service by Harness - See Part Catalog
 Description: 24-Way F 0.64 GEN-Y, 1.5, 2.8 YESC Series(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required
II	Not required	J-35616-4A (PU)	No Tool Required
III	Not required	J-35616-64B (L-BU)	No Tool Required


S79P Front Side Door Window Switch - Passenger X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	BK	1350	Ground	II	—
2	0.5	YE / RD	2799	Right Front Mirror Position Sensor High Reference	III	—
3	0.5	GN / BK	2798	Right Front Mirror Motor Right [+] Left [-] Control	III	—
4	0.5	YE / VT	2796	Right Front Mirror Motor Up [+] Down [-] Control	III	—
5	0.5	BN	5295	Window Switch Right Front Down Signal	III	—
6	—	—	—	Not Occupied	—	—
7	0.5	GY / VT	4638	LED Backlight Dimming Control Right Front Door	III	—
8	0.35	GY	1761	Right Side Object Detection LED Control	III	—
9	0.5	BU / GY	2794	Right Front Mirror Motor Fold In Control	III	—
10	0.5	YE / WH	2793	Right Front Mirror Motor Fold Out Control	III	—
11	2.5 0.5	GN / GY VT	666 10204	Right Front Window Motor Up Control Right Front Mirror Motor Retract Control	II II	AED+ AXG DZC
12	0.5	BN / VT	607	Right Outside Rearview Mirror Heater Control	I	—
13	0.5	GN	1184	Window Switch Right Front Up Signal	III	—
14	0.5	GN / YE	6134	Body Control Module LIN Bus 3	III	—
15	0.5	VT / WH	2800	Right Front Mirror Position Sensor Left [-] Right [+] Signal	III	—
16	0.5	BU / YE	2795	Right Front Mirror Position Sensor Up [+] Down [-] Signal	III	—

7-552 Electrical Component and Inline Harness Connector End Views**S79P Front Side Door Window Switch - Passenger X1 (cont'd)**

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
17	0.5	YE / VT	2773	Right Front Door Lock Switch Lock Control	III	—
18	0.5	BN / VT	2774	Right Front Door Lock Switch Unlock Control	III	—
19	—	—	—	Not Occupied	—	—
20	0.5	GY	746	Right Front Door Ajar Switch Signal	III	AED
	0.5	VT / GY	2765	Window Switch Right Front Express Signal	III	AXG+ AEF
21	0.5	WH	2797	Right Front Mirror Motor Common Control	III	—
22	0.5	BK / GN	675	Right Outside Rearview Mirror Position Sensor Low Reference	I	—
23	2.5	RD / BN	4240	Battery Positive Voltage	II	—
24	2.5	YE / BU	667	Right Front Window Motor Down Control	II	AED+ AXG
	0.5	BN / GN	10203	Right Front Mirror Motor Extend Control	II	DZC

S79P Front Side Door Window Switch - Passenger X2

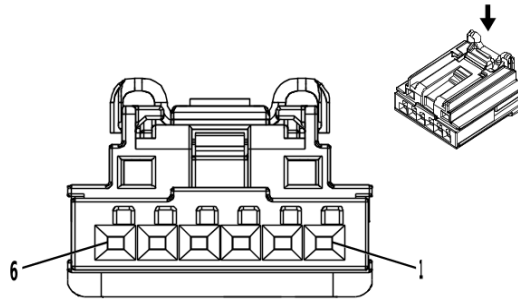

4145138

Connector Part Information

Harness Type: Front Side Door Door Lock Door Wiring Harness - Right
 OEM Connector: 33251915
 Service Connector: Service by Harness - See Part Catalog
 Description: 6-Way F 0.64 Generation Y Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

S79P Front Side Door Window Switch - Passenger X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	—	Not Occupied	—	—
2	0.5	WH / BN	2768	LED Ambient Lighting Control Right Front Door	I	—
3 - 6	—	—	—	Not Occupied	—	—

S79RR Rear Side Door Window Switch - Right

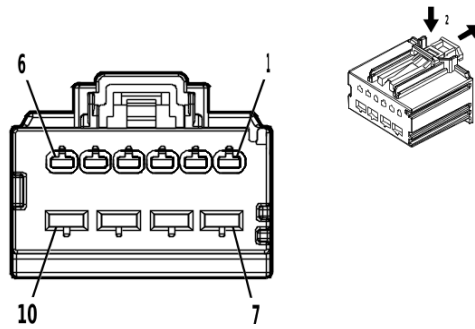

5035058

Connector Part Information

Harness Type: Rear Side Door Door Wiring Harness - Right
 OEM Connector: 35152553
 Service Connector: Service by Harness - See Part Catalog
 Description: 10-Way F 1.5, 2.8 MX Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required
II	Not required	J-35616-4A (PU)	No Tool Required

S79RR Rear Side Door Window Switch - Right

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GN / GY	6135	Body Control Module LIN Bus 4	I	—
2	0.5	GY	748	Right Rear Door Ajar Switch Signal	I	—
3 - 6	—	—	—	Not Occupied	—	—
7	2.5	BK	1350	Ground	II	—
8	2.5	YE / BK	4840	Battery Positive Voltage	II	—
9	2	BU / GY	670	Right Rear Window Motor Up Control	II	—
10	2	GN / BK	671	Right Rear Window Motor Down Control	II	—

S86 Vehicle Stability Control System Switch

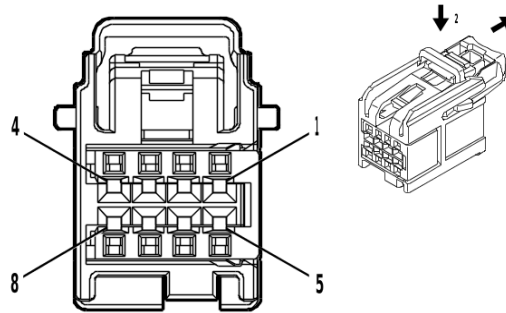

4935776

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 15526972
 Service Connector: 19370429
 Description: 8-Way F 0.64 OCS Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

S86 Vehicle Stability Control System Switch

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	BU / VT	1788	Traction Control Switch Signal 1	I	—
2	0.35	YE	6817	LED Backlight Dimming Control 1	I	—
3	0.35	BN	7291	Major Endgate Release Switch Signal Interior	I	—
4	0.35	BU / YE	6844	ABS/Traction Control Hill Descent Control Switch Signal	I	—
5	—	—	—	Not Occupied	—	—
6	0.35	BK / WH	851	Signal Ground	I	—
7	0.35	GN / WH	111	Hazard Warning Switch Signal	I	—
8	0.35	GY	1198	Endgate Release Switch Analog Signal Interior	I	—

S91 Parking Brake Control Switch

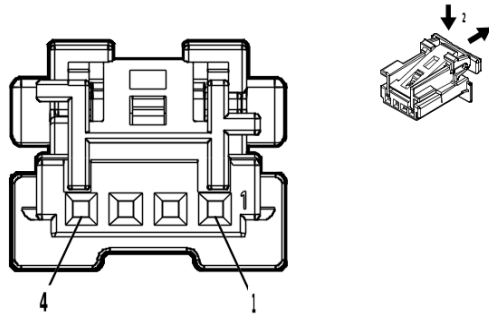

4997407

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 35082250
 Service Connector: 19371192
 Description: 4-Way F 0.64 Micro-Quadlock Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

S91 Parking Brake Control Switch

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	RD / YE	4340	Battery Positive Voltage	I	—
2	0.5	GN / YE	2731	Brake System Control Module LIN Bus 1	I	—
3	—	—	—	Not Occupied	—	—
4	0.35	BK / WH	851	Signal Ground	I	—

S126 Ride Control Switch

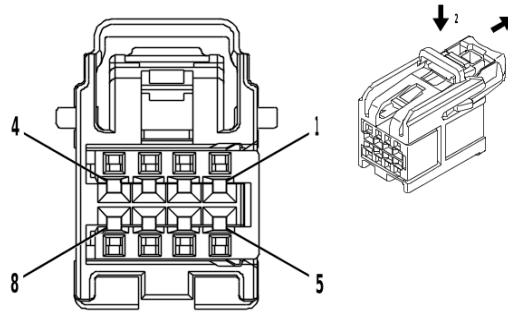

4232228

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 15526973
 Service Connector: 19353873
 Description: 8-Way F 0.64 OCS Series(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

S126 Ride Control Switch

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	WH / BN	2203	Enhanced Driver Mode 2 Switch Signal	I	—
2	—	—	—	Not Occupied	—	—
3	0.35	BK / GY	2204	Enhanced Driver Mode 1 Switch Low Reference	I	—
4	0.35	YE	6817	LED Backlight Dimming Control 1	I	—
5	0.35	BK / WH	851	Signal Ground	I	—
6 - 8	—	—	—	Not Occupied	—	—

S158 Liftgate Exterior Release Switch - Auxiliary Endgate (QK2)

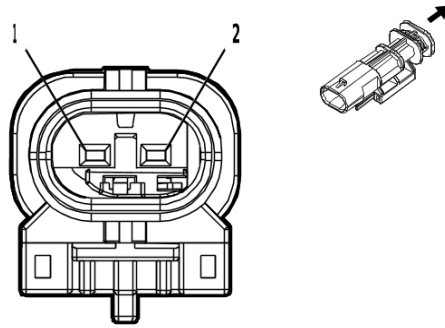

4994410

Connector Part Information

Harness Type: Endgate Wiring Harness
 OEM Connector: 35235497
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way M 1.2 MCON Series, Sealed(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-17 (L-GN)	No Tool Required

S158 Liftgate Exterior Release Switch - Auxiliary Endgate (QK2)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	YE	7294	Minor Endgate Release Switch Discrete Signal Exterior	I	—
2	0.5	BK	1850	Ground	I	—

S159E Liftgate Exterior Release Switch - Endgate (QK1)

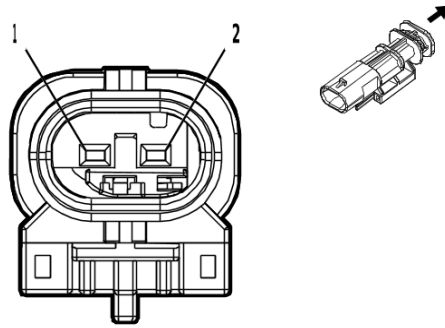

4994411

Connector Part Information

Harness Type: Endgate Wiring Harness
 OEM Connector: 35068608
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way M 1.2 MCON Series, Sealed(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-17 (L-GN)	No Tool Required

S159E Liftgate Exterior Release Switch - Endgate (QK1)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	YE	1144	Endgate Release Switch Discrete Signal Exterior	I	QK1+ QT6
	0.5	GY	7292	Major Endgate Release Switch Signal Exterior	I	QT5
2	0.5	BK	1850	Ground	I	—

S159E Liftgate Exterior Release Switch - Endgate (QK2)

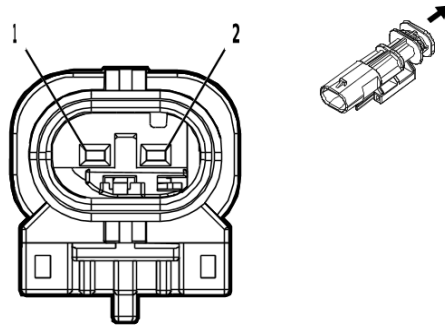

4994411

Connector Part Information

Harness Type: Endgate Wiring Harness
 OEM Connector: 35068608
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way M 1.2 MCON Series, Sealed(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-17 (L-GN)	No Tool Required

S159E Liftgate Exterior Release Switch - Endgate (QK2)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GY	7292	Major Endgate Release Switch Signal Exterior	I	—
2	0.5	BK	1850	Ground	I	—

S171L Instrument Panel Center Accessory Function Switch - Left

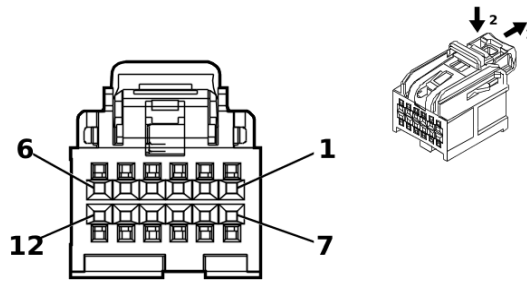

4975223

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 35016616
 Service Connector: 13519750
 Description: 12-Way F 0.64 OCS Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19300660	J-35616-64B (L-BU)	J-38125-215A

S171L Instrument Panel Center Accessory Function Switch - Left

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	GY / GN	2555	Rear Parking Assist Disable Signal	I	—
2	0.35	YE	6817	LED Backlight Dimming Control 1	I	—
3	0.35	BU / WH	3119	Roof Rail Air Bag Disable Switch Signal	I	—
4	0.35	GY / WH	3153	Lane Departure Warning Disable Switch Signal	I	—
5	0.35	WH	3152	Lane Departure Warning Indicator Control	I	—
6	0.35	BU / YE	6844	ABS/Traction Control Hill Descent Control Switch Signal	I	—
7	—	—	—	Not Occupied	—	—
8	0.35	GN / BN	5852	Rear Parking Assist Disable LED Signal	I	—
9	0.35	BK / WH	851	Signal Ground	I	—
10	0.35	BN / WH	3895	Roof Rail Air Bag Disable Switch Low Reference	I	—
11	0.35	YE / BU	2912	Driver Mode 2 Indicator Control	I	—
12	0.35	GY	4989	Driver Mode 2 Switch Signal	I	—

S171R Instrument Panel Center Accessory Function Switch - Right

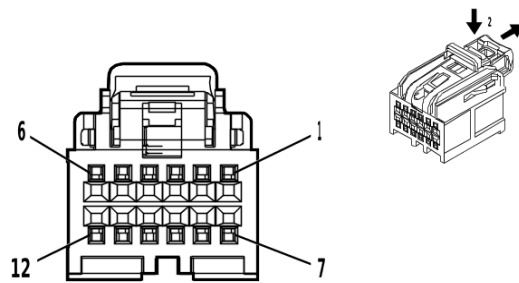

4997362

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 35016613
 Service Connector: 13519752
 Description: 12-Way F 0.64 OCS Series(BN)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19300660	J-35616-64B (L-BU)	J-38125-215A

S171R Instrument Panel Center Accessory Function Switch - Right

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	—	Not Occupied	—	—
2	0.35	YE	6817	LED Backlight Dimming Control 1	I	—
3	0.35	BU / YE	6844	ABS/Traction Control Hill Descent Control Switch Signal	I	—
4	0.35 0.35	YE / GN VT / BK	7122 339	Axle Differential Lock Switch Signal Run/Crank Ignition 1 Voltage	I I	G94 PTO
5	0.35 0.35	YE BN / GN	7115 4311	Rear Axle Differential Lock Indicator Control Power Take-Off Enable Cabin Switch Normally Closed Signal	I I	G94 PTO
6	—	—	—	Not Occupied	—	—
7	0.35	GN / WH	488	Power Take-Off Control Switch Signal	I	—
8	0.35	BU / YE	7176	All Windows Open Switch Signal	I	—
9	0.35	BK / WH	851	Signal Ground	I	—
10	0.35	WH	6816	Indicator Dimming Control	I	—
11	—	—	—	Not Occupied	—	—
12	0.35	BU / GY	4990	Driver Mode 1 Switch Signal	I	—

S172 Auxiliary Multifunction Switch

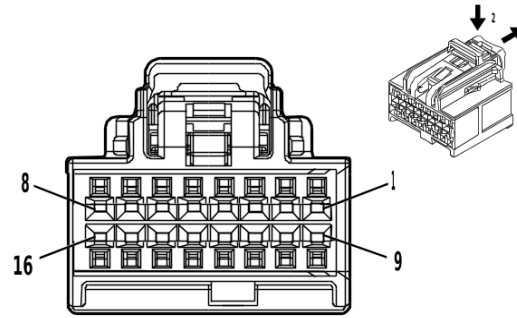

4873243

Connector Part Information

Harness Type: Auxiliary Fuse Block Wiring Harness
 OEM Connector: 35016343
 Service Connector: Service by Harness - See Part Catalog
 Description: 16-Way F 0.64 OCS Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

S172 Auxiliary Multifunction Switch

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	—	Not Occupied	—	—
2	0.35	YE	6817	LED Backlight Dimming Control 1	I	—
3	0.35	WH	6816	Indicator Dimming Control	I	—
4 - 5	—	—	—	Not Occupied	—	—
6	0.35	BU / WH	10716	Upfitter Accessory Relay 1 Coil Control	I	—
7	0.35	VT / GY	10717	Upfitter Accessory Relay 2 Coil Control	I	—
8	0.35	GN / BN	10718	Upfitter Accessory Relay 3 Coil Control	I	—
9	0.35	WH / YE	10719	Upfitter Accessory Relay 4 Coil Control	I	—
10	0.35	GY / VT	10720	Upfitter Accessory Relay 5 Coil Control	I	—
11	—	—	—	Not Occupied	—	—
12	0.75	BK / WH	851	Signal Ground	I	—
13 - 16	—	—	—	Not Occupied	—	—

S192 Radio Function Switch (IOR)

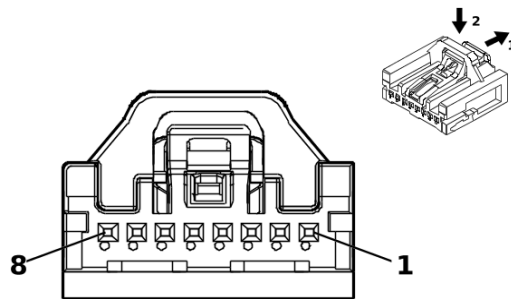

5200269

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 35068228
 Service Connector: 84769201
 Description: 8-Way F Mini 50 Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	EL-35616-58 (BK)	No Tool Required

S192 Radio Function Switch (IOR)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	YE / RD	11236	Radio Switch 5 Volt Reference	I	—
2	0.35	BK / BU	11237	Radio Switch Low Reference 1	I	—
3	0.35	BN / WH	11233	Radio Switch Power ON/OFF Switch Signal	I	—
4	0.35	BK / GN	11238	Radio Switch Low Reference 2	I	—
5	0.35	BU / GY	11244	Radio Switch Dimming Control	I	—
6	0.35	VT / WH	11245	Radio Switch Buttons Signal	I	—
7	0.35	BU	11235	Radio Switch Volume Up Signal	I	—
8	0.35	GY / BN	11234	Radio Switch Volume Down Signal	I	—

T1 DC/AC Converter Control Module X1

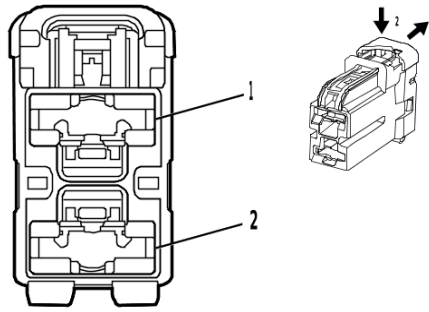

2453116

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 13581928
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 9.5 Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-22 (RD)	No Tool Required

T1 DC/AC Converter Control Module X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	5	BN / BK	4629	DC/AC Inverter Control	I	—
2	5	BK	1550	Ground	I	—

T1 DC/AC Converter Control Module X2

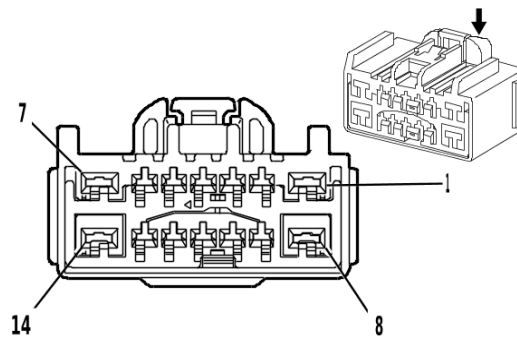

1540775

Connector Part Information

Harness Type: Body Rear Wiring Harness Extension Harness
 OEM Connector: 33356826
 Service Connector: Service by Harness - See Part Catalog
 Description: 14-Way F 1.5, 2.8 YESC Series(BU)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required
II	Not required	J-35616-4A (PU)	No Tool Required

T1 DC/AC Converter Control Module X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BK	10117	AC Outlet Phase A Control	II	—
2	0.5	VT / RD	4049	AC Power Outlet Sensor High Reference	I	—
3	0.35	VT / WH	239	Run/Crank Ignition 1 Voltage	I	—
4	0.5	WH / GN	4628	DC/AC Inverter Relay Control	I	—
5	0.5	BU / BN	6807	DC/AC Inverter Control	I	—
6	—	—	—	Not Occupied	—	—
7	0.75	BK / WH	10120	AC Outlet 2 Phase A Control	II	—
8	0.75	RD	10118	AC Outlet Phase B Control	II	—
9	0.35	Bare	10116	AC Outlet Low Reference	I	—
10	0.5	GN / BU	6133	Body Control Module LIN Bus 2	I	—
11	—	—	—	Not Occupied	—	—
12	0.5	GN / BN	2266	DC/AC Inverter Control 2	I	—
13	0.35	Bare	10119	AC Outlet 2 Low Reference	I	—
14	0.75	RD / WH	10121	AC Outlet 2 Phase B Control	II	—

T3 Audio Amplifier X1

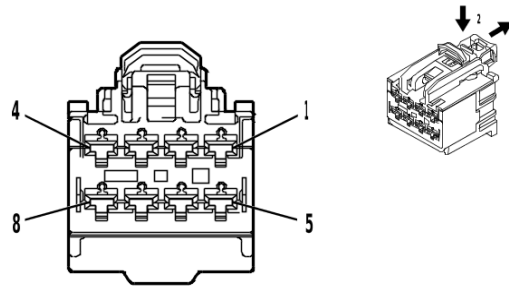

4875738

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 33223792
 Service Connector: 19369366
 Description: 8-Way F 2.8 OCS Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-4A (PU)	No Tool Required

T3 Audio Amplifier X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	2.5	BU / GY	346	Left/Rear Subwoofer [+] Control	I	—
2	0.75	YE	200	Right Front Speaker 1 [+] Control	I	—
3	0.75	BU	201	Left Front Speaker 1 [+] Control	I	—
4	2.5	RD / YE	3740	Battery Positive Voltage	I	—
5	2.5	GN / BK	1794	Left/Rear Subwoofer [-] Control	I	—
6	0.75	YE / BK	117	Right Front Speaker [-] Control 1	I	—
7	0.75	BN / BU	118	Left Front Speaker [-] Control 1	I	—
8	2.5	BK / WH	1051	Signal Ground	I	—

T3 Audio Amplifier X2

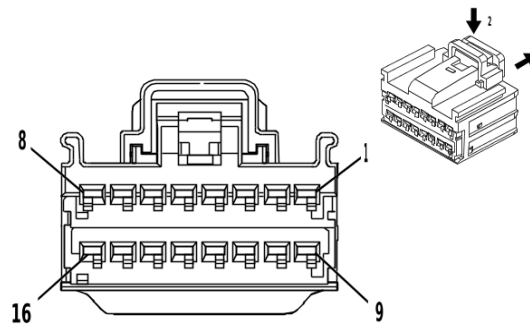

4332214

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 15512506
 Service Connector: 13591061
 Description: 16-Way F 1.5 OCS Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	84757974	J-35616-2A (GY)	J-38125-215A

T3 Audio Amplifier X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	—	Not Occupied	—	—
2	0.75	BN / BK	1953	Right Front Midrange Speaker [-] Control	I	—
3	0.75	BU / VT	1857	Left Front Midrange Speaker [+] Control	I	—
4	1.5	WH	46	Right Rear Speaker [+] Control	I	—
5	1.5	GN	199	Left Rear Speaker [+] Control	I	—
6	—	—	—	Not Occupied	—	—
7	0.75	YE / WH	1860	Front Center Speaker [+] Control	I	—
8 - 9	—	—	—	Not Occupied	—	—
10	0.75	WH / YE	1853	Right Front Midrange Speaker [+] Control	I	—
11	0.75	BU / BN	1957	Left Front Midrange Speaker [-] Control	I	—
12	1.5	BU / BK	115	Right Rear Speaker [-] Control	I	—
13	1.5	GN / BK	116	Left Rear Speaker [-] Control	I	—
14	—	—	—	Not Occupied	—	—
15	0.75	BU / YE	1960	Front Center Speaker [-] Control	I	—
16	—	—	—	Not Occupied	—	—

T3 Audio Amplifier X3

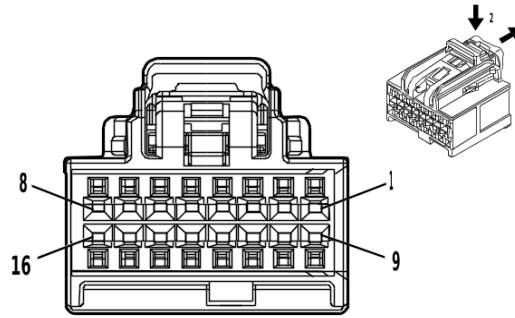

4873243

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 35016343
 Service Connector: 13519738
 Description: 16-Way F 0.64 OCS Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19354230	J-35616-64B (L-BU)	J-38125-215A
II	Service by Cable	No Tool Required	No Tool Required

T3 Audio Amplifier X3

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	YE	7215	Ethernet Bus 6 [+]	II	—
2	0.35	GN	7214	Ethernet Bus 6 [-]	II	—
3 - 4	—	—	—	Not Occupied	—	—
5	0.35	GN / BN	3005	Active Noise Cancellation Microphone 1 Signal	II	—
6 - 10	—	—	—	Not Occupied	—	—
11	0.5	BU / WH	4985	AUTOSAR CAN Bus [+] 5 Serial Data	I	—
12	0.5	BU / YE	4984	AUTOSAR CAN Bus [-] 5 Serial Data	I	—
13	0.35	GN / BK	3008	Active Noise Cancellation Microphone 1 Feed-back Signal	II	—
14 - 16	—	—	—	Not Occupied	—	—

T4M Radio Antenna

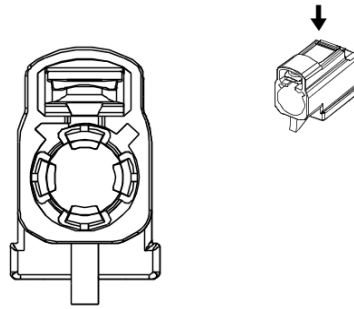

3214010

Connector Part Information

Harness Type: Radio Antenna Cable Extension Cable COAX
 OEM Connector: 12784301
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way F Coax Type(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

T4M Radio Antenna

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	Coax Cable	—	(AM/FM) Antenna RF Signal	I	—

T4P High Frequency Antenna X1 (UE1)

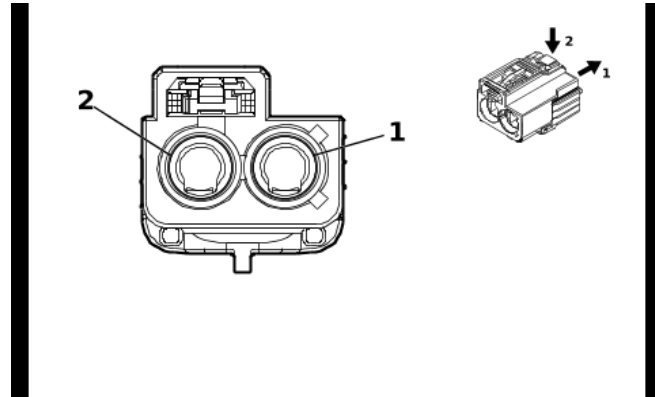

5661671

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 33351060
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 2-Way F Coax Type(VT)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

T4P High Frequency Antenna X1 (UE1)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	—	3134	Coaxial Antenna Cell/GPS Combined Signal	I	—
2	—	—	6449	Coaxial Antenna Cell Phone Signal	I	—

T4P High Frequency Antenna X2 (IOK - UE1)

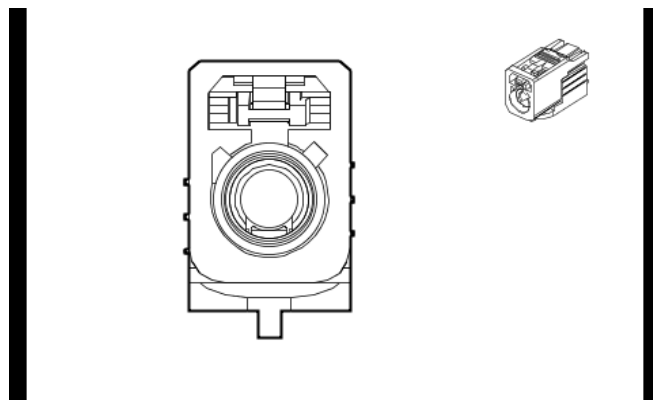

5633890

Connector Part Information

Harness Type: Instrument Panel Wiring Harness COAX
 OEM Connector: 33351013
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way F Coax Type(BU)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

T4P High Frequency Antenna X2 (IOK - UE1)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	Coax Cable	—	(GPS only) Coaxial Antenna GPS Signal	I	—

T4P High Frequency Antenna X2 (IOK & U2K)

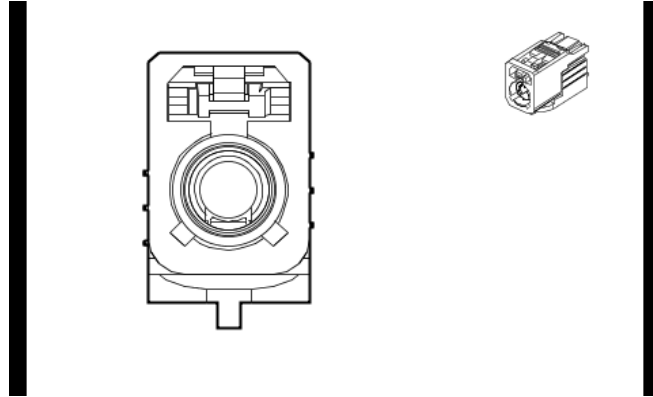

5661657

Connector Part Information

Harness Type: Instrument Panel Wiring Harness COAX
 OEM Connector: 33351022
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way F Coax Type(YE)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

T4P High Frequency Antenna X2 (IOK & U2K)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	Coax Cable	—	(XM +/-HD) Coaxial Antenna XM Signal	I	—

T4TA Auxiliary Wireless Communication Interface Antenna

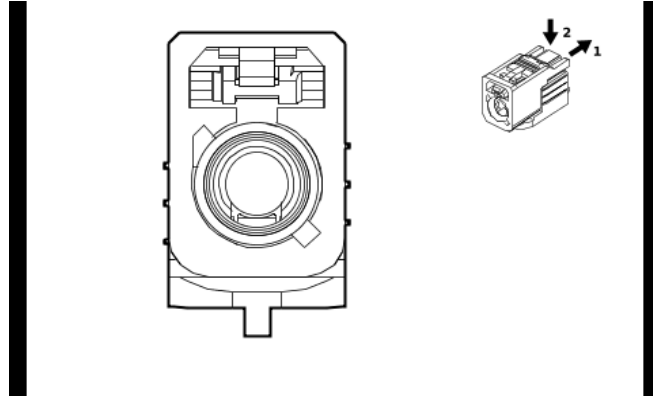

5518436

Connector Part Information

Harness Type: Instrument Panel Wiring Harness COAX
 OEM Connector: 33351021
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way F Coax Type(BG)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

T4TA Auxiliary Wireless Communication Interface Antenna

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	Coax Cable	—	WiFi Antenna Coaxial Signal	I	—

T8A Ignition Coil 1 (L8T)

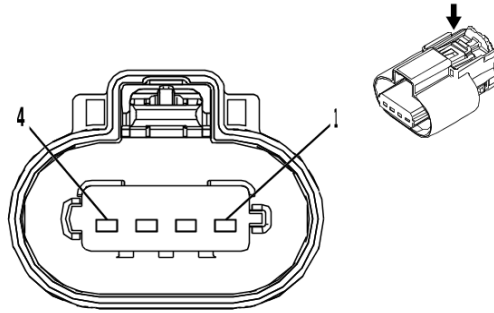

3240115

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13863211
 Service Connector: 19367596
 Description: 4-Way F 1.5 MX Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required

T8A Ignition Coil 1 (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BK	6150	Engine Odd Bank Ground	I	—
2	0.5	BK / BU	2129	Ignition Control Low Reference Bank 1	I	—
3	0.5	BU / VT	2121	Ignition Control 1	I	—
4	0.75	VT / BU	5291	Powertrain Main Relay Fused Supply Voltage 2	I	—

T8B Ignition Coil 2 (L8T)

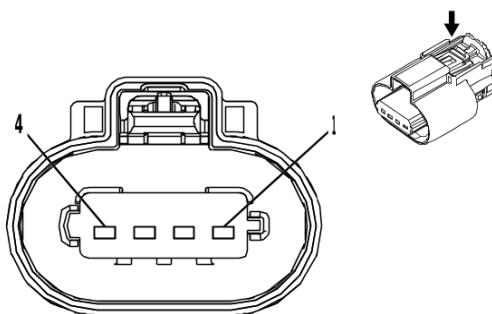

3240115

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13863211
 Service Connector: 19367596
 Description: 4-Way F 1.5 MX Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required

T8B Ignition Coil 2 (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BK	6450	Engine Even Bank Ground	I	—
2	0.5	BK / GY	2130	Ignition Control Low Reference Bank 2	I	—
3	0.5	BU / WH	2122	Ignition Control 2	I	—
4	0.75	VT / BU	5292	Powertrain Main Relay Fused Supply Voltage 3	I	—

T8C Ignition Coil 3 (L8T)

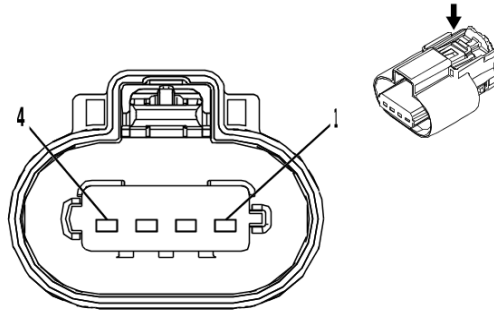

3240115

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13863211
 Service Connector: 19367596
 Description: 4-Way F 1.5 MX Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required

T8C Ignition Coil 3 (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BK	6150	Engine Odd Bank Ground	I	—
2	0.5	BK / BU	2129	Ignition Control Low Reference Bank 1	I	—
3	0.5	GN / BU	2123	Ignition Control 3	I	—
4	0.75	VT / BU	5291	Powertrain Main Relay Fused Supply Voltage 2	I	—

T8D Ignition Coil 4 (L8T)

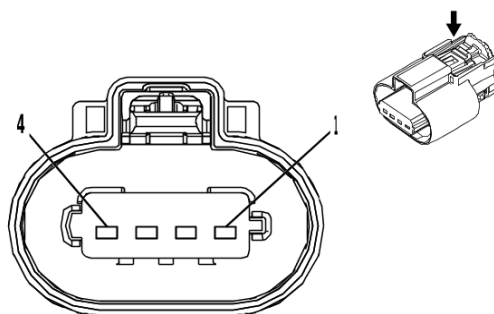

3240115

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13863211
 Service Connector: 19367596
 Description: 4-Way F 1.5 MX Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required

T8D Ignition Coil 4 (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BK	6450	Engine Even Bank Ground	I	—
2	0.5	BK / GY	2130	Ignition Control Low Reference Bank 2	I	—
3	0.5	YE / BU	2124	Ignition Control 4	I	—
4	0.75	VT / BU	5292	Powertrain Main Relay Fused Supply Voltage 3	I	—

T8E Ignition Coil 5 (L8T)

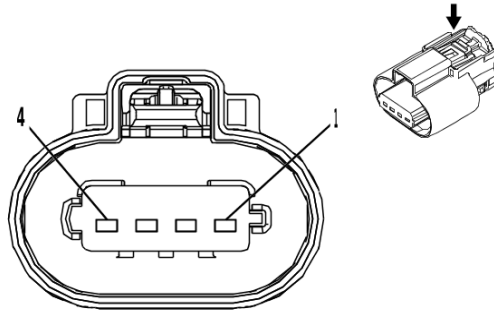

3240115

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13863211
 Service Connector: 19367596
 Description: 4-Way F 1.5 MX Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required

T8E Ignition Coil 5 (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BK	6150	Engine Odd Bank Ground	I	—
2	0.5	BK / BU	2129	Ignition Control Low Reference Bank 1	I	—
3	0.5	BU / GY	2125	Ignition Control 5	I	—
4	0.75	VT / BU	5291	Powertrain Main Relay Fused Supply Voltage 2	I	—

T8F Ignition Coil 6 (L8T)

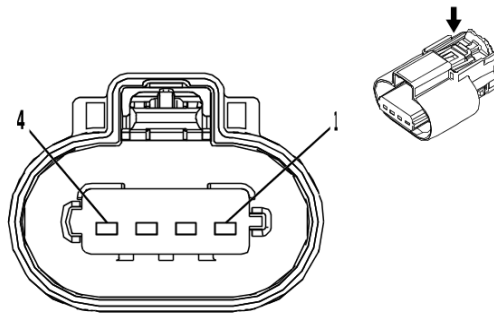

3240115

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13863211
 Service Connector: 19367596
 Description: 4-Way F 1.5 MX Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required

T8F Ignition Coil 6 (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BK	6450	Engine Even Bank Ground	I	—
2	0.5	BK / GY	2130	Ignition Control Low Reference Bank 2	I	—
3	0.5	BN / BU	2126	Ignition Control 6	I	—
4	0.75	VT / BU	5292	Powertrain Main Relay Fused Supply Voltage 3	I	—

T8G Ignition Coil 7 (L8T)

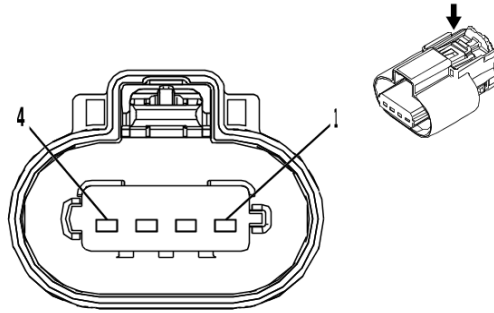

3240115

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13863211
 Service Connector: 19367596
 Description: 4-Way F 1.5 MX Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required

T8G Ignition Coil 7 (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BK	6150	Engine Odd Bank Ground	I	—
2	0.5	BK / BU	2129	Ignition Control Low Reference Bank 1	I	—
3	0.5	GN / GY	2127	Ignition Control 7	I	—
4	0.75	VT / BU	5291	Powertrain Main Relay Fused Supply Voltage 2	I	—

T8H Ignition Coil 8 (L8T)

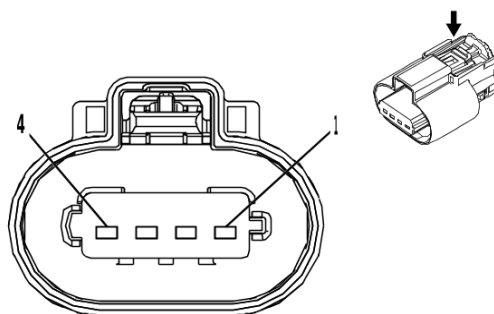

3240115

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13863211
 Service Connector: 19367596
 Description: 4-Way F 1.5 MX Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required

T8H Ignition Coil 8 (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BK	6450	Engine Even Bank Ground	I	—
2	0.5	BK / GY	2130	Ignition Control Low Reference Bank 2	I	—
3	0.5	VT / WH	2128	Ignition Control 8	I	—
4	0.75	VT / BU	5292	Powertrain Main Relay Fused Supply Voltage 3	I	—

T10G Low Frequency Rear Bumper Antenna

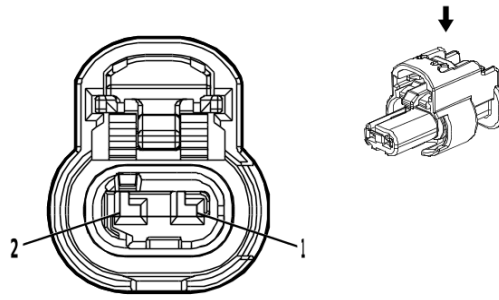

4690744

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 33375932
 Service Connector: 19366871
 Description: 2-Way F 1.2 MCON Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

T10G Low Frequency Rear Bumper Antenna

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN / GN	3568	Rear Closure Passive Entry Antenna High Signal	I	—
2	0.5	GN / GY	3569	Rear Closure Passive Entry Antenna Low Signal	I	—

T10J Low Frequency Instrument Panel Antenna

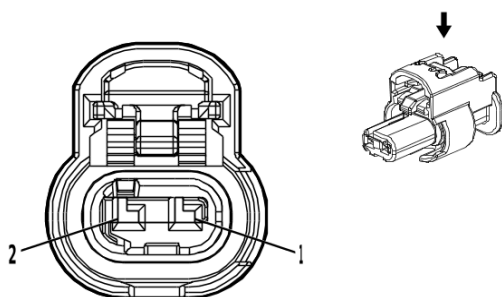

4690744

Connector Part Information

Harness Type: Instrument Panel Wiring Harness

OEM Connector: 33375932

Service Connector: 19366871

Description: 2-Way F 1.2 MCON Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

T10J Low Frequency Instrument Panel Antenna

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	BN / BK	3552	Interior Passive Entry Antenna 1 High Signal	I	—
2	0.35	WH	3553	Interior Passive Entry Antenna 1 Low Signal	I	—

T10KA Low Frequency Console Number 2 Antenna

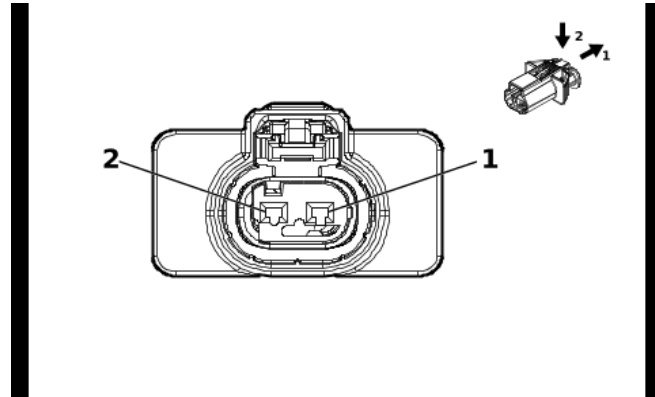

6168540

Connector Part Information

Harness Type: Front Floor Console Wiring Harness
 OEM Connector: 13533498
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.2 MLK Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required

T10KA Low Frequency Console Number 2 Antenna

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	BN / BK	3552	Interior Passive Entry Antenna 1 High Signal	I	—
2	0.35	WH	3553	Interior Passive Entry Antenna 1 Low Signal	I	—

T10UA Low Frequency Console Antenna (AZ3)

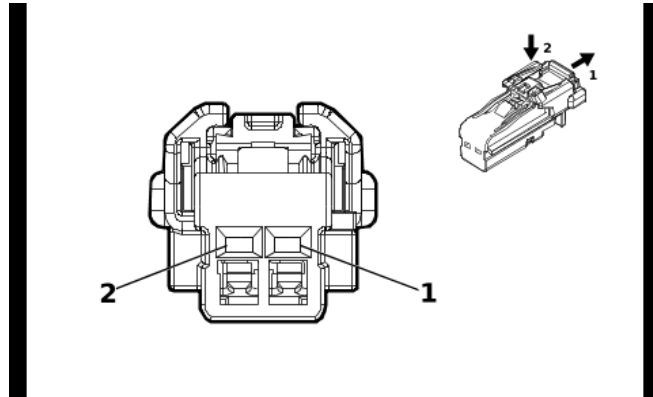

4115691

Connector Part Information

Harness Type: Front Seat Wiring Harness - Center
 OEM Connector: 6098-8988
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.2 MCON Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

T10UA Low Frequency Console Antenna (AZ3)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN / BK	4996	Immobilizer Antenna Signal [+]	I	—
2	0.5	WH / GY	4997	Immobilizer Antenna Low Signal	I	—

T10UA Low Frequency Console Antenna (D07)

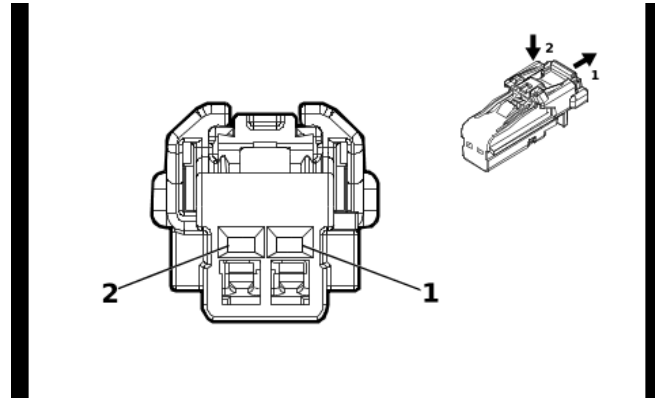

4115691

Connector Part Information

Harness Type: Front Floor Console Wiring Harness
 OEM Connector: 35311666
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.2 MCON Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required

T10UA Low Frequency Console Antenna (D07)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	BN / BK	4996	Immobilizer Antenna Signal [+]	I	—
2	0.35	WH / GY	4997	Immobilizer Antenna Low Signal	I	—

T12 Automatic Transmission X1 (L5P)

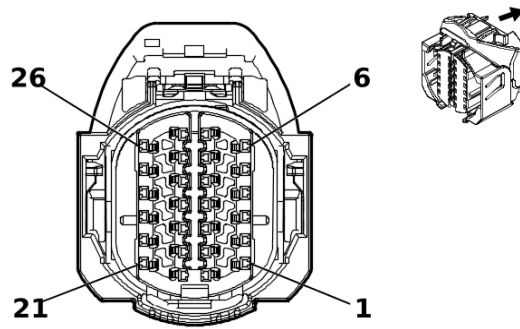

5275597

Connector Part Information

Harness Type: Engine Wiring Harness Chassis
 OEM Connector: 35345999
 Service Connector: Service by Harness - See Part Catalog
 Description: 26-Way F 1.2 MCON Series, Sealed(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required


T12 Automatic Transmission X1 (L5P)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GN / YE	6353	Input Speed Signal	I	—
2	0.5	GN / VT	4510	Transmission Intermediate Speed Signal	I	—
3	0.5	BN / WH	6254	Transmission Input Speed Sensor Signal	I	—
4	0.5	GY / BU	6358	Output Speed Signal	I	—
5	0.5	BU / WH	3338	Transmission Internal Mode Switch Mode Control X	I	—
6	0.5	GN / YE	3337	Transmission Internal Mode Switch Mode Control Y	I	—
7	0.5	YE / GN	4170	Transmission Output Shaft Speed Sensor Circuit 9V Reference	I	—
8	0.5	YE / BU	4171	Transmission Input Shaft Speed Sensor Circuit 9V Reference	I	—
9	0.5	GY / BN	6388	Transmission High Side Driver 2 Control	I	—
10	—	—	—	Not Occupied	—	—
11	0.5	GN / GY	6387	Transmission High Side Driver 1 Control	I	—
12	0.5	WH / RD	480	Engine Control Vehicle Sensors 5 Volt Reference 1	I	—
13	0.5	BN / WH	585	Transmission Fluid Temperature Sensor Signal	I	—
14	0.5	YE / BN	6404	Clutch Solenoid Valve E Control	I	—
15	0.5	GY / GN	6403	Clutch Solenoid Valve D Control	I	—
16	0.5	GY	6402	Clutch Solenoid Valve C Control	I	—
17 - 18	—	—	—	Not Occupied	—	—
19	0.5	GN / BK	7819	Default Disable Solenoid Control	I	—

T12 Automatic Transmission X1 (L5P) (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
20	0.5	BK / GY	626	Engine Control Vehicle Sensors Low Reference 1	I	—
21	0.5	VT	4509	Transmission Clutch F Control	I	—
22	0.5	WH / BU	4507	Transmission Clutch H Control	I	—
23	0.5	WH	4508	Transmission Clutch G Control	I	—
24	0.5	GN / WH	1530	Transmission Line Pressure Control Solenoid Valve Control	I	—
25	0.5	VT / WH	422	Torque Converter Clutch Solenoid Valve Control	I	—
26	0.5	BK / BN	586	Transmission Fluid Temperature Sensor Low Reference	I	—

T12 Automatic Transmission X1 (L8T)

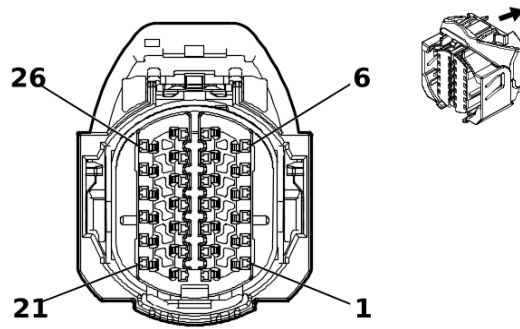

5275597

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 35345999
 Service Connector: 13528029
 Description: 26-Way F 1.2 MCON Series, Sealed(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19331733	J-35616-12 (BU)	J-38125-215A


T12 Automatic Transmission X1 (L8T)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	GN / YE	6353	Input Speed Signal	I	—
2	0.5	GN / VT	4510	Transmission Intermediate Speed Signal	I	—
3	0.5	BN / WH	6254	Transmission Input Speed Sensor Signal	I	—
4	0.5	GY / BU	6358	Output Speed Signal	I	—
5	0.5	BU / WH	3338	Transmission Internal Mode Switch Mode Control X	I	—
6	0.5	GN / YE	3337	Transmission Internal Mode Switch Mode Control Y	I	—
7	0.5	YE / GN	4170	Transmission Output Shaft Speed Sensor Circuit 9V Reference	I	—
8	0.5	YE / BU	4171	Transmission Input Shaft Speed Sensor Circuit 9V Reference	I	—
9	0.5	GY / BN	6388	Transmission High Side Driver 2 Control	I	—
10	—	—	—	Not Occupied	—	—
11	0.5	GN / GY	6387	Transmission High Side Driver 1 Control	I	—
12	0.5	WH / RD	480	Engine Control Vehicle Sensors 5 Volt Reference 1	I	—
13	0.5	BN / WH	585	Transmission Fluid Temperature Sensor Signal	I	—
14	0.5	YE / BN	6404	Clutch Solenoid Valve E Control	I	—
15	0.5	GY / GN	6403	Clutch Solenoid Valve D Control	I	—
16	0.5	GY	6402	Clutch Solenoid Valve C Control	I	—
17 - 18	—	—	—	Not Occupied	—	—
19	0.5	GN / BK	7819	Default Disable Solenoid Control	I	—

T12 Automatic Transmission X1 (L8T) (cont'd)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
20	0.5	BK / GY	626	Engine Control Vehicle Sensors Low Reference 1		—
21	0.5	VT	4509	Transmission Clutch F Control		—
22	0.5	WH / BU	4507	Transmission Clutch H Control		—
23	0.5	WH	4508	Transmission Clutch G Control		—
24	0.5	GN / WH	1530	Transmission Line Pressure Control Solenoid Valve Control		—
25	0.5	VT / WH	422	Torque Converter Clutch Solenoid Valve Control		—
26	0.5	BK / BN	586	Transmission Fluid Temperature Sensor Low Reference		—

T12 Automatic Transmission X2 (MGM / MGU / MKM)

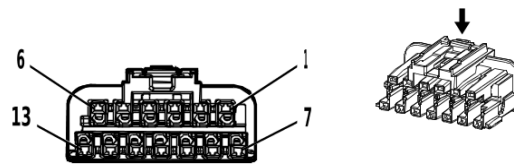

4757907

Connector Part Information

Harness Type: Automatic Transmission Wiring Harness - Case
 OEM Connector: 2203990-1
 Service Connector: Service by Harness - See Part Catalog
 Description: 13-Way F 1.2 MCON Series(BN)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required
II	Not required	J-35616-16 (L-GN)	No Tool Required

T12 Automatic Transmission X2 (MGM / MGU / MKM)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	YE / GY	3337	Transmission Internal Mode Switch Mode Control Y	II	—
2	0.5	YE	6317	Electronic Transmission Range Select Out of Park Switch Signal	II	—
3	0.5	YE / OG	6358	Output Speed Signal	I	—
4	0.5	WH / BU	4510	Transmission Intermediate Speed Signal	I	—
5	0.5	VT / GN	4510	Transmission Intermediate Speed Signal	I	—
6	0.5	WH / VT	6353	Input Speed Signal	I	—
7	0.5	BN / YE	585	Transmission Fluid Temperature Sensor Signal	I	—
8	0.5	OG	480	Engine Control Vehicle Sensors 5 Volt Reference 1	I	—
9	0.5	BN	6387	Transmission High Side Driver 1 Control	I	—
10	1.5	GN / VT	8540	Battery Positive Voltage	I	—
11	0.5	WH	6388	Transmission High Side Driver 2 Control	I	—
12	0.5	BU	4171	Transmission Input Shaft Speed Sensor Circuit 9V Reference	I	—
13	0.5	GN	4170	Transmission Output Shaft Speed Sensor Circuit 9V Reference	I	—

T12 Automatic Transmission X3 (MGM / MGU / MKM)

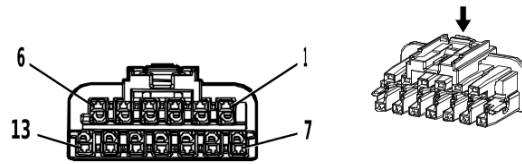

4757999

Connector Part Information

Harness Type: Automatic Transmission Wiring Harness - Case
 OEM Connector: 2203990-2
 Service Connector: Service by Harness - See Part Catalog
 Description: 13-Way F 1.2 MCON Series(BN)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required

T12 Automatic Transmission X3 (MGM / MGU / MKM)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BN / WH	4509	Transmission Clutch F Control	I	—
2	0.5	YE / VT	4507	Transmission Clutch H Control	I	—
3	0.5	BU / GY	4508	Transmission Clutch G Control	I	—
4	0.5	GN / OG	1530	Transmission Line Pressure Control Solenoid Valve Control	I	—
5	0.5	GY / BN	422	Torque Converter Clutch Solenoid Valve Control	I	—
6	0.5	BU / BN	586	Transmission Fluid Temperature Sensor Low Reference	I	—
7	0.5	BU / GN	6404	Clutch Solenoid Valve E Control	I	—
8	0.5	GN / BN	6403	Clutch Solenoid Valve D Control	I	—
9	0.5	GY	6402	Clutch Solenoid Valve C Control	I	—
10	1.5	BK / YE	450	Ground	I	—
11	0.5	GY / OG	2968	Transmission Auxiliary Fluid Pump Control	I	—
12	0.5	VT	7819	Default Disable Solenoid Control	I	—
13	0.5	BK / GY	626	Engine Control Vehicle Sensors Low Reference 1	I	—

T22 Wireless Accessory Charging Module

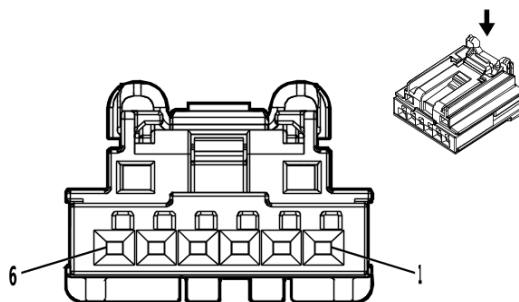

5020940

Connector Part Information

Harness Type: Front Floor Console Wiring Harness
 OEM Connector: 13920634
 Service Connector: Service by Harness - See Part Catalog
 Description: 6-Way F 0.64 Generation Y Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

T22 Wireless Accessory Charging Module

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	RD / VT	2640	Battery Positive Voltage	I	—
2	0.5	BK	1350	Ground	I	—
3	0.5	BU / YE	4984	AUTOSAR CAN Bus [-] 5 Serial Data	I	—
4	0.5	BU / WH	4985	AUTOSAR CAN Bus [+] 5 Serial Data	I	—
5	0.5	BU / YE	4984	AUTOSAR CAN Bus [-] 5 Serial Data	I	—
6	0.5	BU / WH	4985	AUTOSAR CAN Bus [+] 5 Serial Data	I	—

X80G Accessory Power Receptacle - Instrument Panel

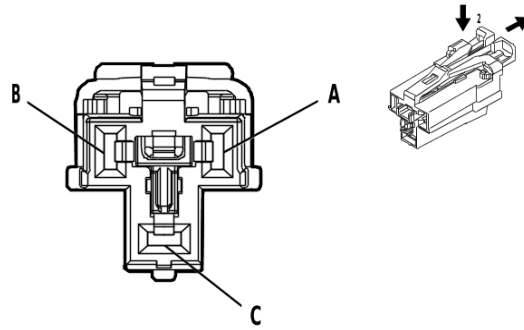

4872413

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 33386302
 Service Connector: 19369281
 Description: 3-Way F 2.8 APEX Series(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required

X80G Accessory Power Receptacle - Instrument Panel

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	1.5	VT	1001	Retained Accessory Power Ignition Voltage	I	—
B	—	—	—	Not Occupied	—	—
C	1.5	BK	1050	Ground	I	—

X81ACA Front Floor Console Accessory Power Rear Receptacle - 110V AC (KI4 & D07)

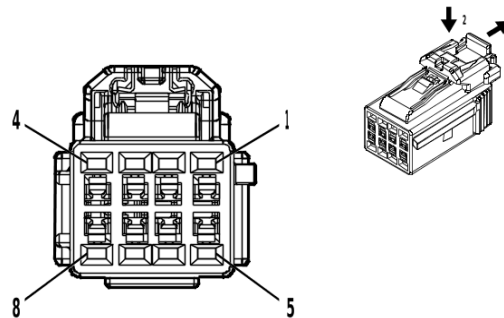

5086387

Connector Part Information

Harness Type: Front Floor Console Wiring Harness
 OEM Connector: 35029311
 Service Connector: Service by Harness - See Part Catalog
 Description: 8-Way F 1.2 Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

X81ACA Front Floor Console Accessory Power Rear Receptacle - 110V AC (KI4 & D07)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BK	10117	AC Outlet Phase A Control	I	—
2	—	—	—	Not Occupied	—	—
3	—	VT / RD	4049	AC Power Outlet Sensor High Reference	I	—
4	—	BU / BN	6807	DC/AC Inverter Control	I	—
5	—	RD	10118	AC Outlet Phase B Control	I	—
6	—	—	—	Not Occupied	—	—
7	—	BK	1350	Ground	I	—
8	—	YE	6817	LED Backlight Dimming Control 1	I	—

X81AI Accessory Power Receptacle - Instrument Panel 110V AC (KC9)

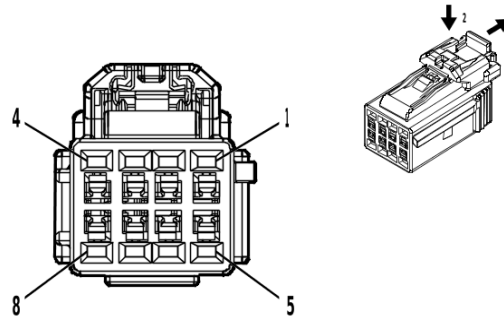

5086387

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 35029311
 Service Connector: 84613126
 Description: 8-Way F 1.2 Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

X81AI Accessory Power Receptacle - Instrument Panel 110V AC (KC9)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BK	10117	AC Outlet Phase A Control	I	—
2	—	—	—	Not Occupied	—	—
3	0.5	VT / RD	4049	AC Power Outlet Sensor High Reference	I	—
4	0.5	BU / BN	6807	DC/AC Inverter Control	I	—
5	0.75	RD	10118	AC Outlet Phase B Control	I	—
6	—	—	—	Not Occupied	—	—
7	0.5	BK	1050	Ground	I	—
8	0.35	YE	6817	LED Backlight Dimming Control 1	I	—

X81AP Pickup Box Accessory Power Receptacle - 110V AC

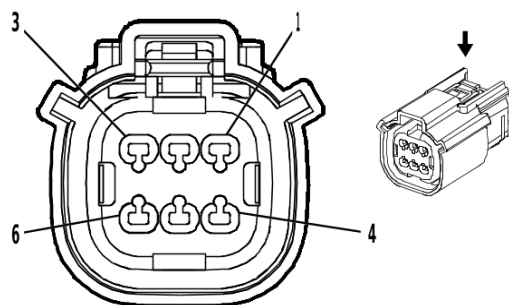

1986157

Connector Part Information

Harness Type: Chassis Rear Wiring Harness
 OEM Connector: 15533832
 Service Connector: Service by Harness - See Part Catalog
 Description: 6-Way F 1.5 MX Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required

X81AP Pickup Box Accessory Power Receptacle - 110V AC

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	VT / RD	4049	AC Power Outlet Sensor High Reference	I	—
2	0.5	GN / BN	2266	DC/AC Inverter Control 2	I	—
3	—	—	—	Not Occupied	—	—
4	0.75	BK / WH	10120	AC Outlet 2 Phase A Control	I	—
5	0.5	BK	1750	Ground	I	—
6	0.75	RD / WH	10121	AC Outlet 2 Phase B Control	I	—

X81BCA Front Floor Console Accessory Power Rear Receptacle - 220V AC (K15 & D07)

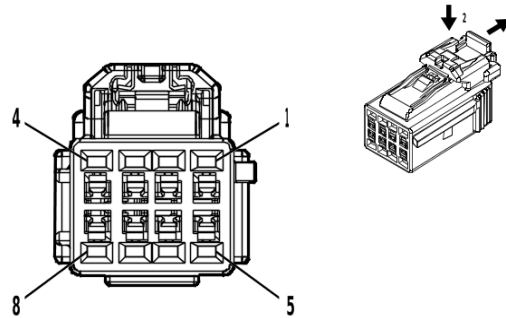

5086387

Connector Part Information

Harness Type: Front Floor Console Wiring Harness
 OEM Connector: 35029311
 Service Connector: Service by Harness - See Part Catalog
 Description: 8-Way F 1.2 Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

X81BCA Front Floor Console Accessory Power Rear Receptacle - 220V AC (K15 & D07)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BK	10117	AC Outlet Phase A Control	I	—
2	—	—	—	Not Occupied	—	—
3	—	VT / RD	4049	AC Power Outlet Sensor High Reference	I	—
4	—	BU / BN	6807	DC/AC Inverter Control	I	—
5	—	RD	10118	AC Outlet Phase B Control	I	—
6	—	—	—	Not Occupied	—	—
7	—	BK	1350	Ground	I	—
8	—	YE	6817	LED Backlight Dimming Control 1	I	—

X81BI Accessory Power Receptacle - Instrument Panel 220V AC (KCA)

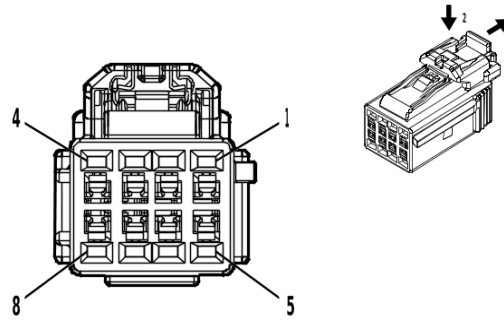

5086387

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 35029311
 Service Connector: 84613126
 Description: 8-Way F 1.2 Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

X81BI Accessory Power Receptacle - Instrument Panel 220V AC (KCA)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BK	10117	AC Outlet Phase A Control	I	—
2	—	—	—	Not Occupied	—	—
3	0.5	VT / RD	4049	AC Power Outlet Sensor High Reference	I	—
4	0.5	BU / BN	6807	DC/AC Inverter Control	I	—
5	0.75	RD	10118	AC Outlet Phase B Control	I	—
6	—	—	—	Not Occupied	—	—
7	0.5	BK	1050	Ground	I	—
8	0.35	YE	6817	LED Backlight Dimming Control 1	I	—

X81BP Pickup Box Accessory Power Receptacle - 220V AC

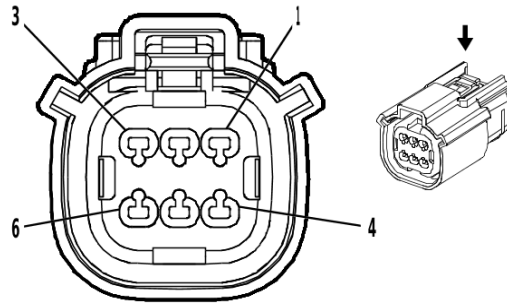

1986157

Connector Part Information

Harness Type: Chassis Rear Wiring Harness
 OEM Connector: 15533832
 Service Connector: Service by Harness - See Part Catalog
 Description: 6-Way F 1.5 MX Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required

X81BP Pickup Box Accessory Power Receptacle - 220V AC

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	VT / RD	4049	AC Power Outlet Sensor High Reference	I	—
2	0.5	GN / BN	2266	DC/AC Inverter Control 2	I	—
3	—	—	—	Not Occupied	—	—
4	0.75	BK / WH	10120	AC Outlet 2 Phase A Control	I	—
5	0.5	BK	1750	Ground	I	—
6	0.75	RD / WH	10121	AC Outlet 2 Phase B Control	I	—

X81FSA Accessory Power Receptacle - Front Center Seat Rear Cover 110V AC (KI4&D07)

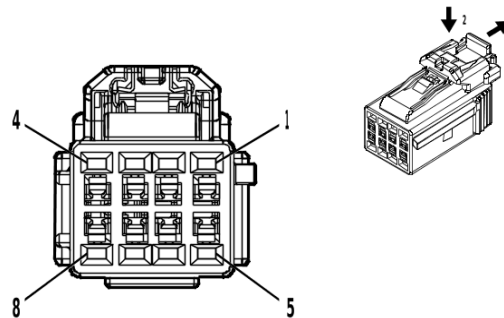

5086387

Connector Part Information

Harness Type: Front Floor Console Wiring Harness
 OEM Connector: 35029311
 Service Connector: Service by Harness - See Part Catalog
 Description: 8-Way F 1.2 Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required
II	Not required	J-35616-16 (L-GN)	No Tool Required

X81FSA Accessory Power Receptacle - Front Center Seat Rear Cover 110V AC (KI4&D07)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BK	10117	AC Outlet Phase A Control	II	—
2	—	—	—	Not Occupied	—	—
3	0.5	VT / RD	4049	AC Power Outlet Sensor High Reference	II	—
4	0.5	BU / BN	6807	DC/AC Inverter Control	II	—
5	0.75	RD	10118	AC Outlet Phase B Control	II	—
6	—	—	—	Not Occupied	—	—
7	0.5	BK	1350	Ground	II	—
8	0.35	YE	6817	LED Backlight Dimming Control 1	I	—

X81FSA Accessory Power Receptacle - Front Center Seat Rear Cover 110V AC (KI4 & AZ3)

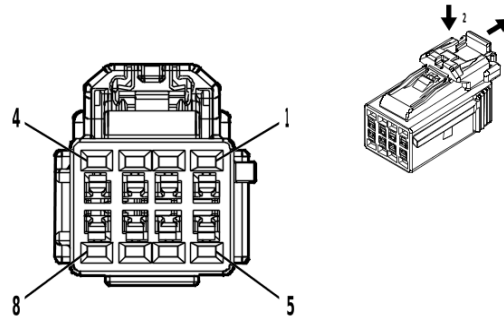

5086387

Connector Part Information

Harness Type: Front Seat Wiring Harness - Center
 OEM Connector: 6098-8443
 Service Connector: Service by Harness - See Part Catalog
 Description: 8-Way F 1.2 Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

X81FSA Accessory Power Receptacle - Front Center Seat Rear Cover 110V AC (KI4 & AZ3)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BK	10117	AC Outlet Phase A Control	I	—
2	—	—	—	Not Occupied	—	—
3	0.75	VT / RD	4049	AC Power Outlet Sensor High Reference	I	—
4	0.75	BU / BN	6807	DC/AC Inverter Control	I	—
5	0.75	RD	10118	AC Outlet Phase B Control	I	—
6	—	—	—	Not Occupied	—	—
7	0.75	BK	1050	Ground	I	—
8	0.35	YE	6817	LED Backlight Dimming Control 1	I	—

X81FSB Accessory Power Receptacle - Front Center Seat Rear Cover 220V AC (KI5&D07)

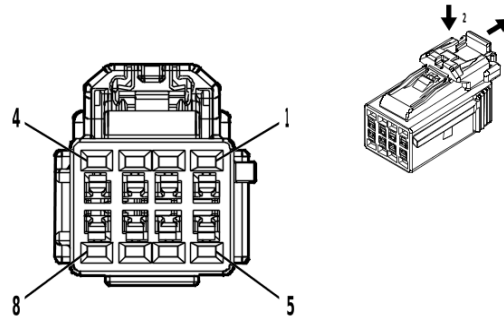

5086387

Connector Part Information

Harness Type: Front Floor Console Wiring Harness
 OEM Connector: 35029311
 Service Connector: Service by Harness - See Part Catalog
 Description: 8-Way F 1.2 Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required
II	Not required	J-35616-16 (L-GN)	No Tool Required

X81FSB Accessory Power Receptacle - Front Center Seat Rear Cover 220V AC (KI5&D07)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BK	10117	AC Outlet Phase A Control	II	—
2	—	—	—	Not Occupied	—	—
3	0.5	VT / RD	4049	AC Power Outlet Sensor High Reference	II	—
4	0.5	BU / BN	6807	DC/AC Inverter Control	II	—
5	0.75	RD	10118	AC Outlet Phase B Control	II	—
6	—	—	—	Not Occupied	—	—
7	0.5	BK	1350	Ground	II	—
8	0.35	YE	6817	LED Backlight Dimming Control 1	I	—

X81FSB Accessory Power Receptacle - Front Center Seat Rear Cover 220V AC (KI5 & AZ3)

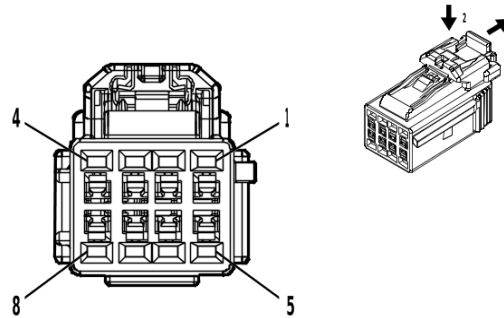

5086387

Connector Part Information

Harness Type: Front Seat Wiring Harness - Center
 OEM Connector: 6098-8443
 Service Connector: Service by Harness - See Part Catalog
 Description: 8-Way F 1.2 Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required

X81FSB Accessory Power Receptacle - Front Center Seat Rear Cover 220V AC (KI5 & AZ3)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.75	BK	10117	AC Outlet Phase A Control	I	—
2	—	—	—	Not Occupied	—	—
3	0.75	VT / RD	4049	AC Power Outlet Sensor High Reference	I	—
4	0.75	BU / BN	6807	DC/AC Inverter Control	I	—
5	0.75	RD	10118	AC Outlet Phase B Control	I	—
6	—	—	—	Not Occupied	—	—
7	0.75	BK	1050	Ground	I	—
8	0.35	YE	6817	LED Backlight Dimming Control 1	I	—

X83B Audio/Video Receptacle X1

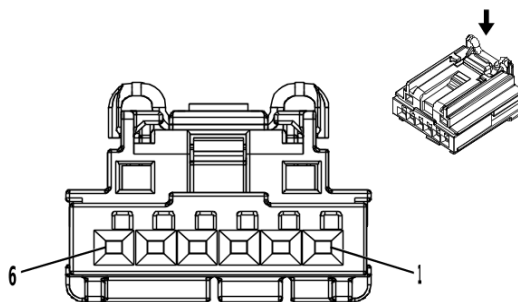

3960313

Connector Part Information

Harness Type: Front Floor Console Wiring Harness
 OEM Connector: 13920633
 Service Connector: Service by Harness - See Part Catalog
 Description: 6-Way F 0.64 Generation Y Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

X83B Audio/Video Receptacle X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	RD / VT	2640	Battery Positive Voltage	I	—
2	0.5 0.35	YE YE	6817 6817	LED Backlight Dimming Control 1	I	D07+ UBC+ UBI- UBD
				LED Backlight Dimming Control 1	I	D07+ UBC- UBI- UBD+ (K14/ K15)
3	0.5	BK / WH	1051	Signal Ground	I	—
4 - 6	—	—	—	Not Occupied	—	—

X83B Audio/Video Receptacle X2

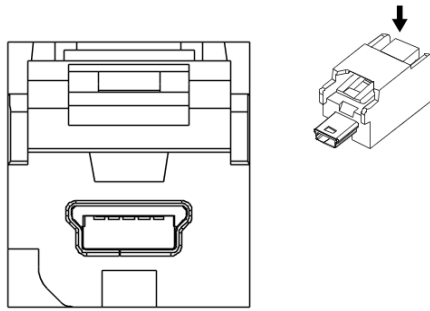

3214018

Connector Part Information

Harness Type: Front Floor Console Wiring Harness USB
 OEM Connector: 13890926
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 5-Way M 2.0 Mini-B USB Type(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

X83B Audio/Video Receptacle X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	USB	—	USB Serial Data	I	—

X84 Data Link Connector

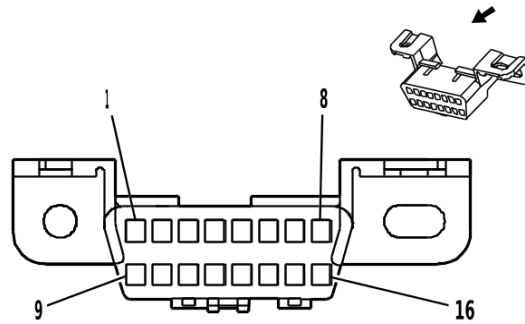

68793

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 12110250
 Service Connector: 12110250
 Description: 16-Way F 150 Metri-Pack Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	13580059	J-35616-14 (GN)	J-38125-12A

X84 Data Link Connector

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	BU / BN	4983	AUTOSAR CAN Bus [+] 7 Serial Data	I	—
2	0.35	GN	2578	Private Serial Data Presentation CAN Bus [+] 1 Serial Data	I	—
3	0.35	BU	4973	Ethernet Bus 1R [+]	I	—
4	0.5	BK	1050	Ground	I	—
5	0.5	BK / WH	851	Signal Ground	I	—
6	0.35	YE	4981	AUTOSAR CAN Bus [+] 6 Serial Data	I	—
7	0.35	VT	2580	Private Serial Data Presentation CAN Bus [+] 2 Serial Data	I	—
8	0.35	WH	7207	Ethernet Bus 1 Enable Signal	I	—
9	0.35	WH	4982	AUTOSAR CAN Bus [-] 7 Serial Data	I	—
10	0.35	BN	2577	Private Serial Data Presentation CAN Bus [-] 1 Serial Data	I	—
11	0.35	YE	4972	Ethernet Bus 1R [-]	I	—
12	0.35	BU	4975	Ethernet Bus 1T [+]	I	—
13	0.35	GN	4974	Ethernet Bus 1T [-]	I	—
14	0.35	WH	4980	AUTOSAR CAN Bus [-] 6 Serial Data	I	—
15	0.35	GY	2579	Private Serial Data Presentation CAN Bus [-] 2 Serial Data	I	—
16	0.5	RD / YE	6540	Battery Positive Voltage	I	—

X85 Steering Wheel Airbag Coil X1

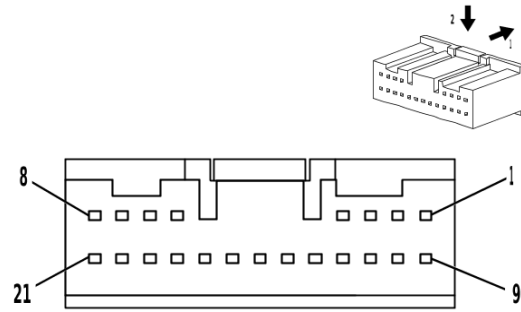

3960237

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 33291416
 Service Connector: 13510218
 Description: 21-Way F 0.64 Series(YE)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	13575742	J-35616-64B (L-BU)	J-38125-215A
II	13575865	J-35616-64B (L-BU)	J-38125-215A

X85 Steering Wheel Airbag Coil X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	BK / WH	851	Signal Ground	I	—
2	0.35	GN / WH	3287	Horn Switch Signal	I	—
3 - 4	—	—	—	Not Occupied	—	—
5	0.35	OG / GN	3023	Steering Wheel Air Bag Stage 2 High Control	II	—
6	0.35	WH / OG	3022	Steering Wheel Air Bag Stage 2 Low Control	II	—
7	0.35	BN / OG	3020	Steering Wheel Air Bag Stage 1 Low Control	II	—
8	0.35	OG / VT	3021	Steering Wheel Air Bag Stage 1 High Control	II	—
9	0.5	GN / BK	3894	Instrument Panel Cluster Control Module LIN Bus 1	I	—
10	0.35	GN / BK	2858	Body Control Module LIN Bus 12	I	—
11	0.35	BN / GN	1884	Cruise Control Set/Coast/Resume/Accelerate Switch Signal	I	—
12	0.35	BK / VT	1449	Steering Wheel Resistor Ladder Low Reference	I	—
13	—	—	—	Not Occupied	—	—
14	0.35	RD / GN	5140	Battery Positive Voltage	I	—
15	0.35	GY / GN	5737	Distance Sensing Cruise Control Gap Up/Down Switch Signal	I	—
16	—	—	—	Not Occupied	—	—
17	0.35	YE	6817	LED Backlight Dimming Control 1	I	—
18 - 19	—	—	—	Not Occupied	—	—
20	0.5	BK	1050	Ground	I	—
21	0.5	RD / BN	10040	Battery Positive Voltage	I	—

X85 Steering Wheel Airbag Coil X2

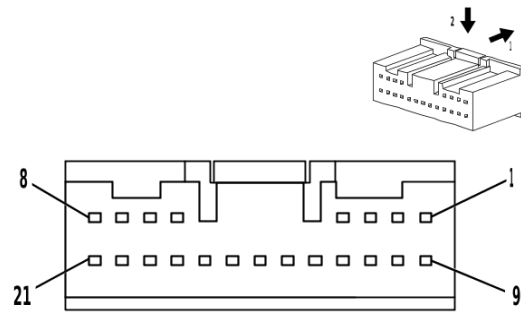

3960237

Connector Part Information

Harness Type: Right Side Marker Lamp Harness
 OEM Connector: 13510218
 Service Connector: Service by Harness - See Part Catalog
 Description: 21-Way F 0.64 Series(YE)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

X85 Steering Wheel Airbag Coil X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	—	BK / WH	6051	Steering Wheel Ground	I	—
2	—	GN / WH	3287	Horn Switch Signal	I	—
3 - 4	—	—	—	Not Occupied	—	—
5	—	OG / GN	3023	Steering Wheel Air Bag Stage 2 High Control	I	—
6	—	WH / OG	3022	Steering Wheel Air Bag Stage 2 Low Control	I	—
7	—	BN / OG	3020	Steering Wheel Air Bag Stage 1 Low Control	I	—
8	—	OG / VT	3021	Steering Wheel Air Bag Stage 1 High Control	I	—
9	—	RD / GN	10040	Battery Positive Voltage	I	—
10	—	BK	6050	Steering Wheel Ground	I	—
11 - 12	—	—	—	Not Occupied	—	—
13	—	YE	6817	LED Backlight Dimming Control 1	I	—
14	—	—	—	Not Occupied	—	—
15	—	GY / GN	5737	Distance Sensing Cruise Control Gap Up/Down Switch Signal	I	—
16	—	RD / GN	5140	Battery Positive Voltage	I	—
17	—	—	—	Not Occupied	—	—
18	—	BK / VT	1449	Steering Wheel Resistor Ladder Low Reference	I	—
19	—	BN / GN	1884	Cruise Control Set/Coast/Resume/Accelerate Switch Signal	I	—
20	—	GN / BK	2858	Body Control Module LIN Bus 12	I	—
21	—	GN / BK	3894	Instrument Panel Cluster Control Module LIN Bus 1	I	—

X88B Tow Vehicle Electrical Receptacle X1 (UY2&Z6A)

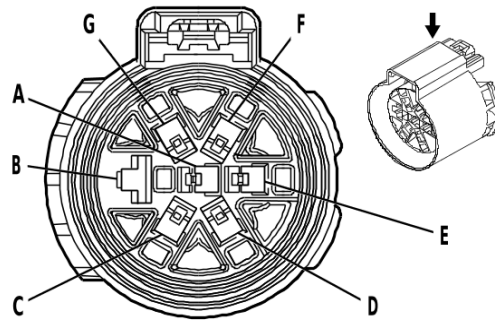

2056936

Connector Part Information

Harness Type: Trailer Rear Wiring Harness
 OEM Connector: 13857223
 Service Connector: Service by Harness - See Part Catalog
 Description: 7-Way F 280, 630 Metri-Pack Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-42 (RD)	No Tool Required
II	Not required	J-35616-4A (PU)	No Tool Required

X88B Tow Vehicle Electrical Receptacle X1 (UY2&Z6A)

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	1	GY	1624	Trailer Backup Lamp Control	II	—
B	5	WH	22	Trailer Ground	I	—
C	4	BU	47	Trailer Auxiliary Control	II	—
D	1	GN	1619	Right Rear Trailer Stop/Turn Lamp Control	II	—
E	4	OG	3640	Battery Positive Voltage	II	—
F	1.5	BN	2109	Trailer Park Lamp Control	II	—
G	1	YE	1618	Left Rear Trailer Stop/Turn Lamp Control	II	—

X88B Tow Vehicle Electrical Receptacle X2

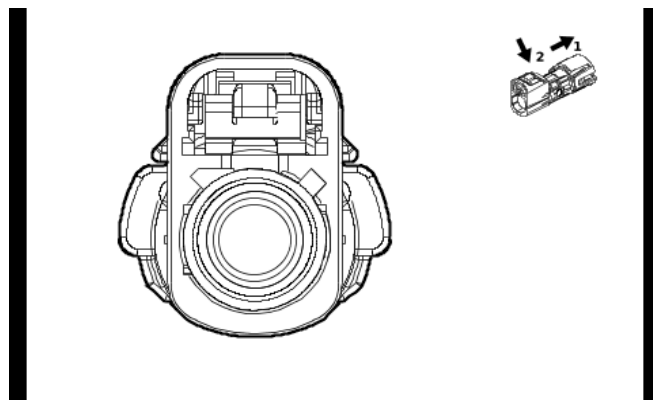

5758030

Connector Part Information

Harness Type: Chassis Wiring Harness COAX
 OEM Connector: 35187032
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way F Coax Type(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

X88B Tow Vehicle Electrical Receptacle X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	Coax Cable	—	Trailer Rear Vision Camera Coaxial Video Signal	I	—

X88B Tow Vehicle Electrical Receptacle X3

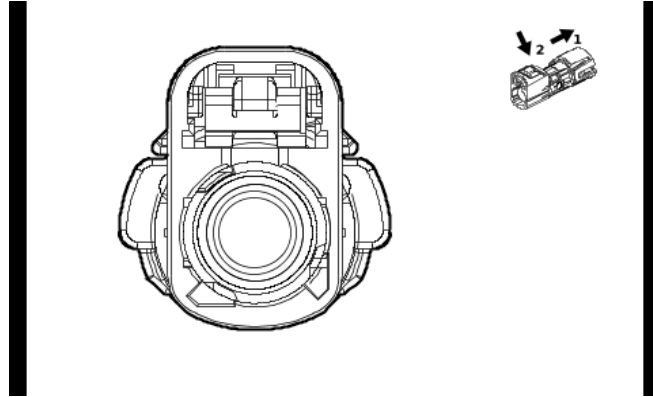

5757455

Connector Part Information

Harness Type: Chassis Wiring Harness COAX
 OEM Connector: 35187043
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way F Coax Type(OG)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

X88B Tow Vehicle Electrical Receptacle X3

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	Coax Ca- ble	—	Trailer 2 Rear Vision Camera Coaxial Video Sig- nal	I	—

X88GB Tow Vehicle Electrical Receptacle - 5th Wheel/Camper

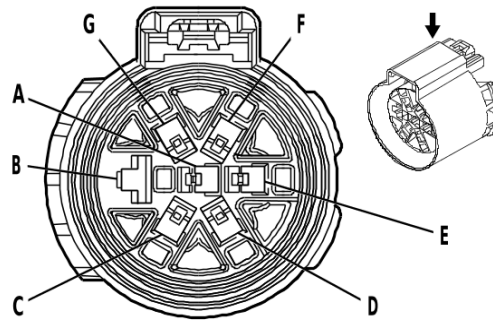

2056936

Connector Part Information

Harness Type: Trailer Rear Wiring Harness
 OEM Connector: 13857223
 Service Connector: Service by Harness - See Part Catalog
 Description: 7-Way F 280, 630 Metri-Pack Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-42 (RD)	No Tool Required
II	Not required	J-35616-4A (PU)	No Tool Required

X88GB Tow Vehicle Electrical Receptacle - 5th Wheel/Camper

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
A	1	GY	1624	Trailer Backup Lamp Control	II	—
B	5	WH	22	Trailer Ground	I	—
C	4	BU	47	Trailer Auxiliary Control	II	—
D	1	GN	1619	Right Rear Trailer Stop/Turn Lamp Control	II	—
E	4	OG	3640	Battery Positive Voltage	II	—
F	1.5	BN	2109	Trailer Park Lamp Control	II	—
G	1	YE	1618	Left Rear Trailer Stop/Turn Lamp Control	II	—

X92CD Dual Charge Only Receptacle - Floor Console Rear

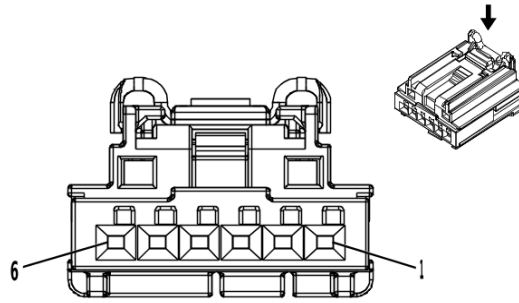

3960313

Connector Part Information

Harness Type: Front Floor Console Wiring Harness
 OEM Connector: 13920633
 Service Connector: Service by Harness - See Part Catalog
 Description: 6-Way F 0.64 Generation Y Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

X92CD Dual Charge Only Receptacle - Floor Console Rear

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	VT	4701	Retained Accessory Power Control	I	—
2	0.35	YE	6817	LED Backlight Dimming Control 1	I	—
3	0.35	BK	1350	Ground	I	—
4 - 6	—	—	—	Not Occupied	—	—

X92FSR Dual Charge Only Receptacle - Front Center Seat Rear Cover

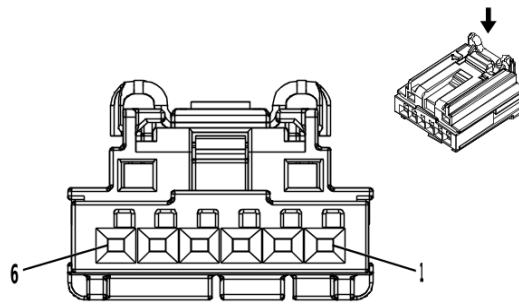

3960313

Connector Part Information

Harness Type: Front Seat Wiring Harness - Center
 OEM Connector: 2035363-4
 Service Connector: Service by Harness - See Part Catalog
 Description: 6-Way F 0.64 Generation Y Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

X92FSR Dual Charge Only Receptacle - Front Center Seat Rear Cover

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.35	VT	4701	Retained Accessory Power Control	I	—
2	0.35	YE	6817	LED Backlight Dimming Control 1	I	—
3	0.35	BK	1350	Ground	I	—
4 - 6	—	—	—	Not Occupied	—	—

X92IP USB 2 Port Receptacle - Instrument Panel X1

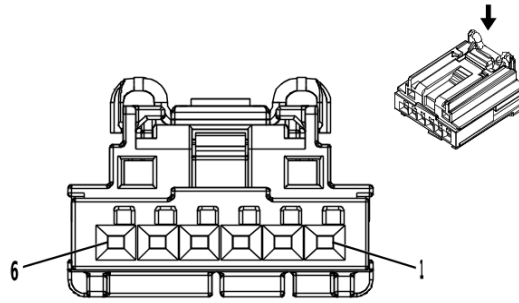

3960313

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 13920633
 Service Connector: 19332786
 Description: 6-Way F 0.64 Generation Y Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-64B (L-BU)	No Tool Required

X92IP USB 2 Port Receptacle - Instrument Panel X1

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	0.5	RD / VT	2640	Battery Positive Voltage	I	—
2	0.5	YE	6817	LED Backlight Dimming Control 1	I	—
3	0.75	BK / WH	1051	Signal Ground	I	—
4 - 6	—	—	—	Not Occupied	—	—

X92IP USB 2 Port Receptacle - Instrument Panel X2

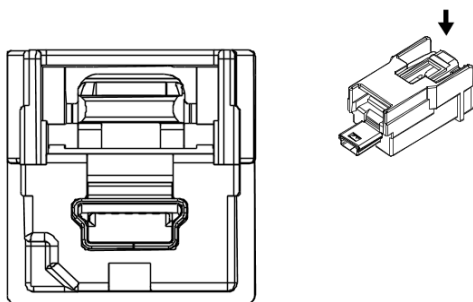

2807491

Connector Part Information

Harness Type: Instrument Panel Wiring Harness USB
 OEM Connector: 13581313
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 5-Way M 2.0 Mini-B USB Type(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

X92IP USB 2 Port Receptacle - Instrument Panel X2

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	USB	—	USB Serial Data	I	—

X92IP USB 2 Port Receptacle - Instrument Panel X3

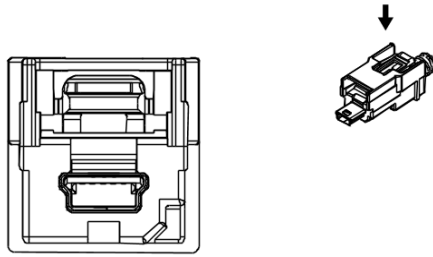

2807425

Connector Part Information

Harness Type: Instrument Panel Wiring Harness USB
 OEM Connector: 13576672
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 5-Way M 2.0 Mini-B USB Type(BK)

Terminal Part Information


Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

X92IP USB 2 Port Receptacle - Instrument Panel X3


Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
—	—	USB	—	USB Serial Data	I	—

Inline Harness Connector End Views

X112 Engine Wiring Harness Chassis to Cooling Fan Harness (L5P)

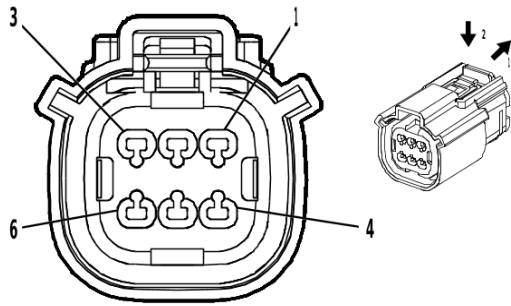

4574736

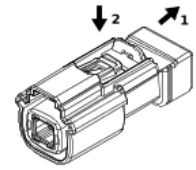

4477145

Connector Part Information

Harness Type: Engine Wiring Harness Chassis
 OEM Connector: 33367609
 Service Connector: Service by Harness - See Part Catalog
 Description: 6-Way F 1.5 MX Series, Sealed(BK)

Connector Part Information

Harness Type: Cooling Fan Harness
 OEM Connector: Not Available
 Service Connector: Service by Harness - See Part Catalog
 Description: 6-Way M (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required
II	Not required	No Tool Required	No Tool Required


X112 Engine Wiring Harness Chassis to Cooling Fan Harness (L5P)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	1.5	BK	450	I	—	Ground	1	1.5	BK	450	II	—
2	—	—	—	—	—	Not Occupied	2	—	—	—	—	—
3	0.5	WH	2368	I	—	Cooling Fan Control Signal	3	0.5	WH	2368	II	—
4	0.5	BK / GY	626	I	—	Engine Control Vehicle Sensors Low Reference 1	4	0.5	BK / GY	626	II	—
5	0.5	BU / VT	2364	I	—	Cooling Fan Speed Signal	5	0.5	BU / VT	2364	II	—
6	0.5	WH / RD	480	I	—	Engine Control Vehicle Sensors 5 Volt Reference 1	6	0.5	WH / RD	480	II	—

X122 Front View Camera Switch Wiring Harness to Body Wiring Harness

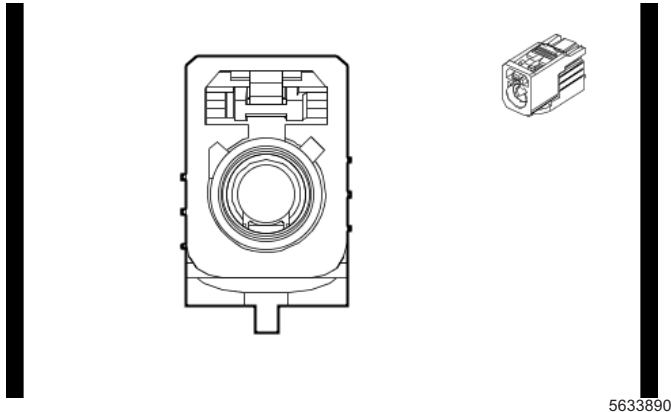

5633890

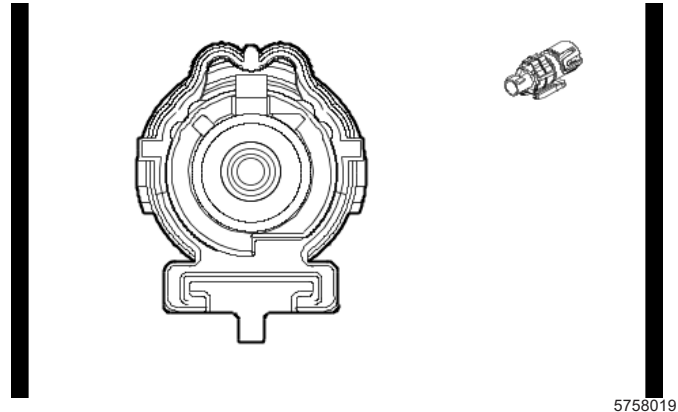

5758019

Connector Part Information

Harness Type: Front View Camera Switch Wiring
 Harness COAX
 OEM Connector: Not Available
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way F

Connector Part Information

Harness Type: Body Wiring Harness COAX
 OEM Connector: 33338239
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way M Coax Type, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required


X122 Front View Camera Switch Wiring Harness to Body Wiring Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
—	—	Coax Cable	—	I	—	Front Vision Camera 1 Coaxial Video Signal	—	—	Coax Cable	—	I	—

X125 Body Wiring Harness to Engine Wiring Harness (L8T)

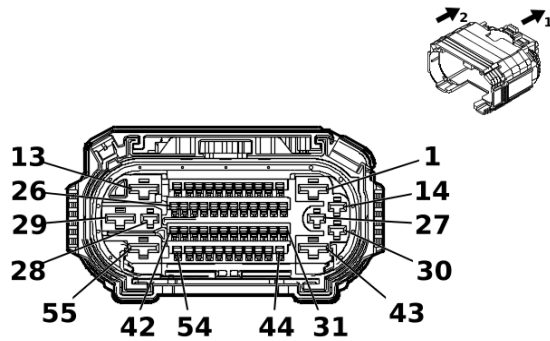

5246872

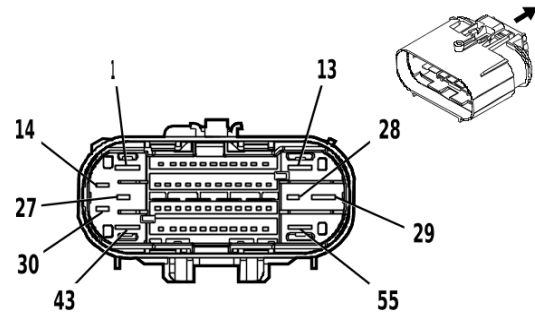

4994369

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 35016653
 Service Connector: 19371184
 Description: 55-Way F 1.2 OCS, 2.8, 6.3 CTS Series, Sealed(GY)

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 35205174
 Service Connector: 84727363
 Description: 55-Way M 1.2 OCS, 2.8, 6.3 CTS Series, Sealed(GY)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19332901	J-35616-35 (VT)	J-38125-212
II	19370818	J-35616-12 (BU)	J-38125-215A
III	19371217	J-35616-12 (BU)	J-38125-215A
IV	84634921	J-35616-42 (RD)	J-38125-212
V	84847992	J-35616-32 (OG)	J-38125-36
VI	84867140	J-35616-13 (BU)	J-38125-215A
VII	84867141	J-35616-13 (BU)	J-38125-215A
VIII	84992391	J-35616-5 (PU)	J-38125-215A

X125 Body Wiring Harness to Engine Wiring Harness (L8T)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	4	BK / WH	251	IV	—	Signal Ground	1	4	BK / WH	251	V	—
2	1.5	RD / GN	1840	III	—	Battery Positive Voltage	2	1.5	RD / GN	1840	VII	—
3	0.5	BN / GN	4311	II	—	Power Take-Off Enable Cabin Switch Normally Closed Signal	3	—	—	—	—	—
4 - 7	—	—	—	—	—	Not Occupied	4 - 7	—	—	—	—	—
8	0.35	WH / RD	1164	II	—	Accelerator Pedal Position 5V Reference 1	8	0.5	WH / RD	1164	VI	—



X125 Body Wiring Harness to Engine Wiring Harness (L8T) (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
9	0.35	BK / BU	1271	II	—	Accelerator Pedal Position Low Reference 1	9	0.5	BK / BU	1271	VI	—
10	0.35	YE / WH	1161	II	—	Accelerator Pedal Position Signal 1	10	0.5	YE / WH	1161	VI	—
11	0.35	GN / WH	1162	II	—	Accelerator Pedal Position Signal 2	11	0.5	GN / WH	1162	VI	—
12	1	BK	9003	III	—	Cavity Seal	12	1	BK	9003	VII	—
13	0.5	RD / BU	4540	IV	—	Battery Positive Voltage	13	—	—	—	—	—
14	0.5	RD / VT	2640	I	—	Battery Positive Voltage	14	—	—	—	—	—
15	0.35	BN / RD	1274	II	—	Accelerator Pedal Position 5V Reference 2	15	0.5	BN / RD	1274	VI	—
16	0.5	YE	4063	II	—	Hood Status A Signal	16	0.5	YE	4063	VI	—
17	—	—	—	—	—	Not Occupied	17	—	—	—	—	—
18	0.35	WH / RD	480	II	—	Engine Control Vehicle Sensors 5 Volt Reference 1	18	0.5	WH / RD	480	VI	—
19	0.35	GN / BN	507	II	—	Wait To Start Indicator Control	19	—	—	—	—	—
20	0.35	WH / GN	5380	II	—	Brake Position Sensor Signal	20	0.5	WH / GN	5380	VI	—
21	—	—	—	—	—	Not Occupied	21	—	—	—	—	—
22	0.35	BK / VT	1272	II	—	Accelerator Pedal Position Low Reference 2	22	0.5	BK / VT	1272	VI	—
23	0.5	BK / GY	626	II	—	Engine Control Vehicle Sensors Low Reference 1	23	0.5	BK / GY	626	VI	—
24	—	—	—	—	—	Not Occupied	24	—	—	—	—	—
25	0.5	BU / GY	636	II	—	Ambient Air Temperature Sensor Signal	25	0.5	BU / GY	636	VI	—
26	0.5	BU / BN	7573	II	—	Air Conditioning Compressor Solenoid Valve Control	26	0.75	BU / BN	7573	VI	—
27	0.5	BU / YE	7574	I	—	Air Conditioning Compressor Solenoid Valve Control	27	0.75	BU / YE	7574	VIII	—

7-624 Electrical Component and Inline Harness Connector End Views
X125 Body Wiring Harness to Engine Wiring Harness (L8T) (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
28	0.5	GN / WH	488	I	—	Power Take-Off Control Switch Signal	28	—	—	—	—	—
29 - 32	—	—	—	—	—	Not Occupied	29 - 32	—	—	—	—	—
33	0.5	VT / WH	239	II	—	Run/Crank Ignition 1 Voltage	33	—	—	—	—	—
34	0.5	GY / BN	7065	II	—	Right Front Wheel Speed Sensor Control	34	0.5	GY / BN	7065	VI	—
35	0.5	YE	872	II	—	Right Front Wheel Speed Sensor Signal	35	0.5	YE	872	VI	—
36 - 43	—	—	—	—	—	Not Occupied	36 - 43	—	—	—	—	—
44	1	BK	9003	III	—	Cavity Seal	44	1	BK	9003	VII	—
45 - 46	—	—	—	—	—	Not Occupied	45 - 46	—	—	—	—	—
47	0.35	BU / YE	68	II	—	Low Coolant Level Indicator Control	47	—	—	—	—	—
48 - 52	—	—	—	—	—	Not Occupied	48 - 52	—	—	—	—	—
53	0.35	BN / BU	4892	II	—	Auxiliary Battery Relay Control	53	0.5	BN / BU	4892	VI	—
54	1	BK	9003	III	—	Cavity Seal	54	1	BK	9003	VII	—
55	—	—	—	—	—	Not Occupied	55	—	—	—	—	—

X125 Body Wiring Harness to Engine Wiring Harness Chassis (L5P)

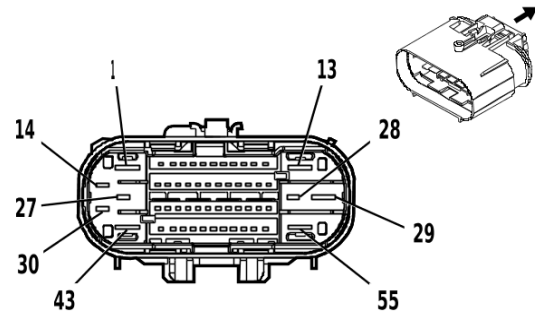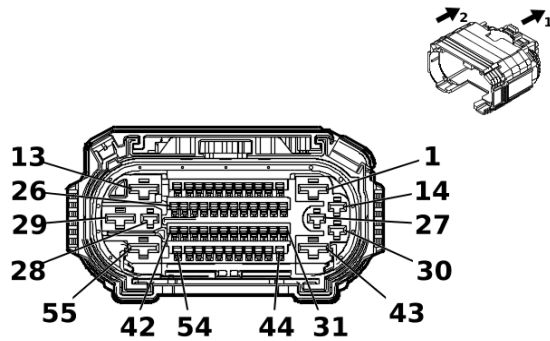

5246872

4994369

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 35016653
 Service Connector: 19371184
 Description: 55-Way F 1.2 OCS, 2.8, 6.3 CTS Series, Sealed(GY)

Connector Part Information

Harness Type: Engine Wiring Harness Chassis
 OEM Connector: 35664004
 Service Connector: Service by Harness - See Part Catalog
 Description: 55-Way M 1.2 OCS, 2.8, 6.3 CTS Series, Sealed(GY)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19332901	J-35616-35 (VT)	J-38125-212
II	19370818	J-35616-12 (BU)	J-38125-215A
III	19371217	J-35616-12 (BU)	J-38125-215A
IV	84634921	J-35616-42 (RD)	J-38125-212
V	Not required	J-35616-13 (BU)	No Tool Required
VI	Not required	J-35616-17 (L-GN)	No Tool Required
VII	Not required	J-35616-32 (OR)	No Tool Required
VIII	Not required	J-35616-5 (PU)	No Tool Required

X125 Body Wiring Harness to Engine Wiring Harness Chassis (L5P)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	4	BK / WH	251	IV	—	Signal Ground	1	4	BK / WH	251	VII	—
2	1.5	RD / GN	1840	III	—	Battery Positive Voltage	2	1.5	RD / GN	1840	VI	—
3	0.5	BN / GN	4311	II	—	Power Take-Off Enable Cabin Switch Normally Closed Signal	3	0.5	BN / GN	4311	V	—
4 - 7	—	—	—	—	—	Not Occupied	4 - 7	—	—	—	—	—
8	0.35	WH / RD	1164	II	—	Accelerator Pedal Position 5V Reference 1	8	0.5	WH / RD	1164	V	—

7-626 Electrical Component and Inline Harness Connector End Views


X125 Body Wiring Harness to Engine Wiring Harness Chassis (L5P) (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
9	0.35	BK / BU	1271	II	—	Accelerator Pedal Position Low Reference 1	9	0.5	BK / BU	1271	V	—
10	0.35	YE / WH	1161	II	—	Accelerator Pedal Position Signal 1	10	0.5	YE / WH	1161	V	—
11	0.35	GN / WH	1162	II	—	Accelerator Pedal Position Signal 2	11	0.5	GN / WH	1162	V	—
12	—	—	—	—	—	Not Occupied	12	—	—	—	—	—
13	0.5	RD / BU	4540	IV	—	Battery Positive Voltage	13	0.5	RD / BU	4540	VII	—
14	0.5	RD / VT	2640	I	—	Battery Positive Voltage	14	0.5	RD / VT	2640	VIII	—
15	0.35	BN / RD	1274	II	—	Accelerator Pedal Position 5V Reference 2	15	0.5	BN / RD	1274	V	—
16	0.5	YE	4063	II	—	Hood Status A Signal	16	0.5	YE	4063	V	—
17	—	—	—	—	—	Not Occupied	17	—	—	—	—	—
18	0.35	WH / RD	480	II	—	Engine Control Vehicle Sensors 5 Volt Reference 1	18	0.5	WH / RD	480	V	—
19	0.35	GN / BN	507	II	—	Wait To Start Indicator Control	19	0.5	GN / BN	507	V	—
20	0.35	WH / GN	5380	II	—	Brake Position Sensor Signal	20	0.5	WH / GN	5380	V	—
21	—	—	—	—	—	Not Occupied	21	—	—	—	—	—
22	0.35	BK / VT	1272	II	—	Accelerator Pedal Position Low Reference 2	22	0.5	BK / VT	1272	V	—
23	0.5	BK / GY	626	II	—	Engine Control Vehicle Sensors Low Reference 1	23	0.5	BK / GY	626	V	—
24	—	—	—	—	—	Not Occupied	24	—	—	—	—	—
25	0.5	BU / GY	636	II	—	Ambient Air Temperature Sensor Signal	25	0.5	BU / GY	636	V	—
26	0.5	BU / BN	7573	II	—	Air Conditioning Compressor Solenoid Valve Control	26	0.75	BU / BN	7573	VI	—

X125 Body Wiring Harness to Engine Wiring Harness Chassis (L5P) (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
27	0.5	BU / YE	7574	I	—	Air Conditioning Compressor Solenoid Valve Control	27	0.75	BU / YE	7574	VIII	—
28	0.5	GN / WH	488	I	—	Power Take-Off Control Switch Signal	28	0.5	GN / WH	488	VIII	—
29 - 32	—	—	—	—	—	Not Occupied	29 - 32	—	—	—	—	—
33	0.5	VT / WH	239	II	—	Run/Crank Ignition 1 Voltage	33	0.5	VT / WH	239	V	—
34	0.5	GY / BN	7065	II	—	Right Front Wheel Speed Sensor Control	34	0.5	GY / BN	7065	V	—
35	0.5	YE	872	II	—	Right Front Wheel Speed Sensor Signal	35	0.5	YE	872	V	—
36 - 46	—	—	—	—	—	Not Occupied	36 - 46	—	—	—	—	—
47	0.35	BU / YE	68	II	—	Low Coolant Level Indicator Control	47	0.5	BU / YE	68	V	—
48 - 55	—	—	—	—	—	Not Occupied	48 - 55	—	—	—	—	—

X128 Engine Wiring Harness to Camshaft Position Sensor Harness (L8T)

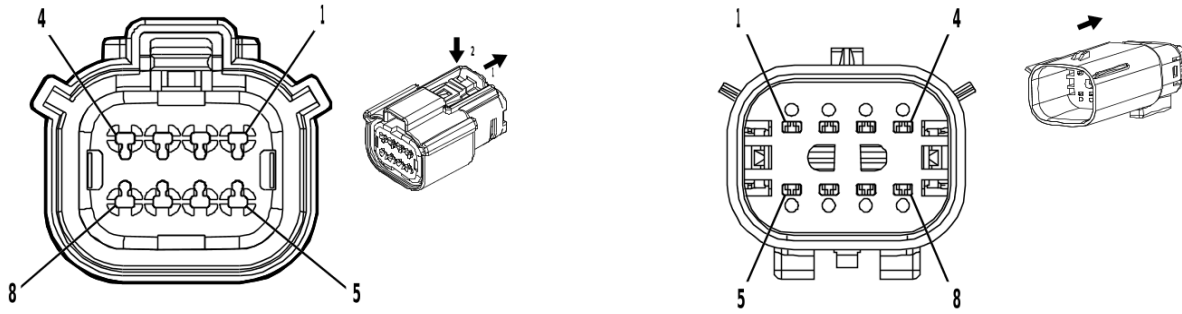

4846407

2667653

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 35063116
 Service Connector: 84928314
 Description: 8-Way F 1.5 MX Series, Sealed(BK)

Connector Part Information

Harness Type: Camshaft Position Sensor Harness
 OEM Connector: Not Available
 Service Connector: Service by Harness - See Part Catalog
 Description: 8-Way M (BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required
II	Not required	No Tool Required	No Tool Required


X128 Engine Wiring Harness to Camshaft Position Sensor Harness (L8T)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.5	GY / BU	5300	I	—	Intake Camshaft Position Sensor 1 Voltage Reference	1	0.5	GY / BU	5300	II	—
2	0.5	BK / GN	5301	I	—	Intake Camshaft Position Sensor Low Reference 1	2	0.5	BK / GN	5301	II	—
3	0.5	YE / VT	5275	I	—	Intake Camshaft Position Sensor 1	3	0.5	YE / VT	5275	II	—
4	0.5	BU	179	I	—	Engine Oil Pump Control	4	0.5	BU	179	II	—
5	0.5	VT / BN	5284	I	—	Intake Camshaft Position Actuator Solenoid Valve 1	5	0.5	VT / BN	5284	II	—
6	0.5	BK / BN	6753	I	—	Camshaft Position Actuator Solenoid Valve W Low Reference	6	0.5	BK / BN	6753	II	—

X128 Engine Wiring Harness to Camshaft Position Sensor Harness (L8T) (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
7	0.5	VT / BU	5293	I	—	Powertrain Main Relay Fused Supply Voltage 4	7	0.5	VT / BU	5293	II	—
8	—	—	—	—	—	Not Occupied	8	—	—	—	—	—

X129 Camshaft Position Sensor Harness to Engine Oil Pressure Control Harness (L8T)

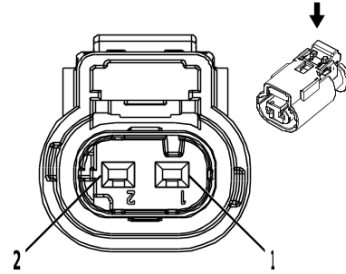

2717066

Connector Part Information

Harness Type: Camshaft Position Sensor Harness
 OEM Connector: 12681015
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F

Connector Part Information

Harness Type: Engine Oil Pressure Control Harness
 OEM Connector: 13503566
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way M 1.2 Multilock Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required
II	Not required	No Tool Required	No Tool Required

X129 Camshaft Position Sensor Harness to Engine Oil Pressure Control Harness (L8T)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	—	VT / BU	5293	I	—	Powertrain Main Relay Fused Supply Voltage 4	1	—	VT / BU	5293	II	—
2	—	BU	179	I	—	Engine Oil Pump Control	2	—	BU	179	II	—

X135 Engine Wiring Harness to Auxilliary Battery Wiring Harness (L8T)

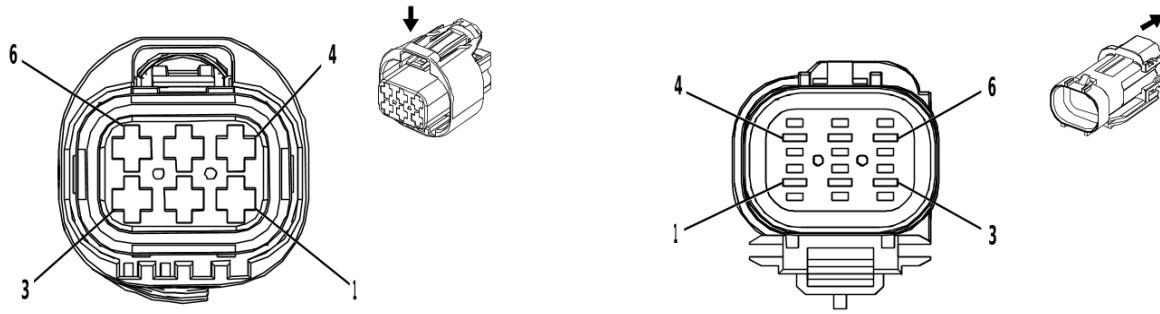

2042938

2042939

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 10866617
 Service Connector: 19332889
 Description: 6-Way F 2.8 Junior Power Timer Series, Sealed(GY)

Connector Part Information

Harness Type: Auxilliary Battery Wiring Harness
 OEM Connector: Not Available
 Service Connector: Service by Harness - See Part Catalog
 Description: 6-Way M (GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-4A (PU)	No Tool Required
II	Not required	No Tool Required	No Tool Required

X135 Engine Wiring Harness to Auxilliary Battery Wiring Harness (L8T)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.5	BN / BU	4892	I	—	Auxiliary Battery Relay Control	1	0.5	BN / BU	4892	II	—
2	—	—	—	—	—	Not Occupied	2	—	—	—	—	—
3	0.5	RD / WH	3440	I	—	Battery Positive Voltage	3	0.5	RD / WH	3440	II	—
4	1.5	BK	450	I	—	Ground	4	1.5	BK	450	II	—
5 - 6	—	—	—	—	—	Not Occupied	5 - 6	—	—	—	—	—

X150 Front Object Alarm Sensor Wiring Harness to Body Wiring Harness

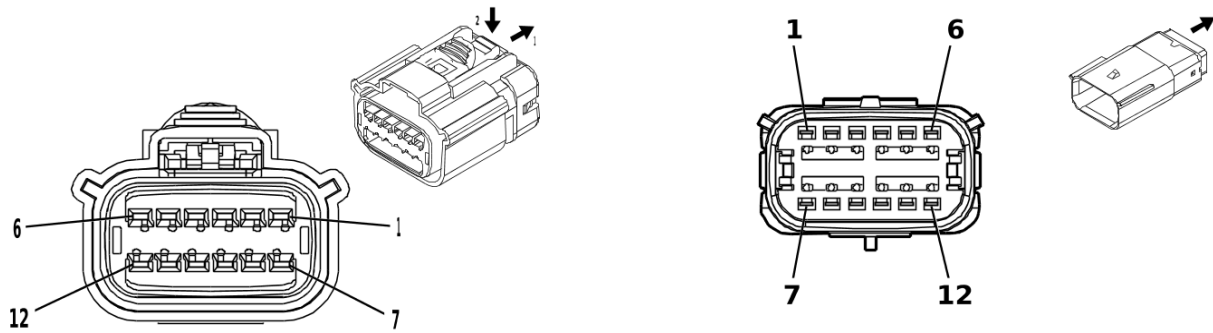

4621955

4862194

Connector Part Information

Harness Type: Front Object Alarm Sensor Wiring Harness
 OEM Connector: 15514623
 Service Connector: Service by Harness - See Part Catalog
 Description: 12-Way F 1.5 OCS Series, Sealed(BK)

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 15521147
 Service Connector: 19371239
 Description: 12-Way M 1.5 OCS Series, Sealed(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required
II	19352418	J-35616-3 (GY)	J-38125-215A


X150 Front Object Alarm Sensor Wiring Harness to Body Wiring Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1-2	—	—	—	—	—	Not Occupied	1-2	—	—	—	—	—
3	0.5	BK / BU	5214	I	—	Front Parking Assist Sensor Low Reference	3	0.5	BK / BU	5214	II	—
4	0.5	VT / WH	5215	I	—	Left Front Outer Parking Assist Sensor	4	0.5	VT / WH	5215	II	—
5	0.5	YE / GY	5216	I	—	Left Front Middle Parking Assist Sensor	5	0.5	YE / GY	5216	II	—
6	0.5	WH / GY	5217	I	—	Right Front Outer Parking Assist Sensor	6	0.5	WH / GY	5217	II	—
7	0.5	VT / GY	5218	I	—	Right Front Middle Parking Assist Sensor	7	0.5	VT / GY	5218	II	—
8	0.5	BK	650	I	—	Ground	8	0.5	BK	650	II	—
9	—	—	—	—	—	Not Occupied	9	—	—	—	—	—
10	0.5	BN / GY	5061	I	—	Left Front Fog Lamp Control	10	0.5	BN / GY	5061	II	—

X150 Front Object Alarm Sensor Wiring Harness to Body Wiring Harness (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
11	0.5	BN	6581	I	—	Front Parking Assist Display Control	11	0.5	BN	6581	II	—
12	—	—	—	—	—	Not Occupied	12	—	—	—	—	—


X160 Engine Wiring Harness to Fuel Injector Wiring Harness - Left (L8T)

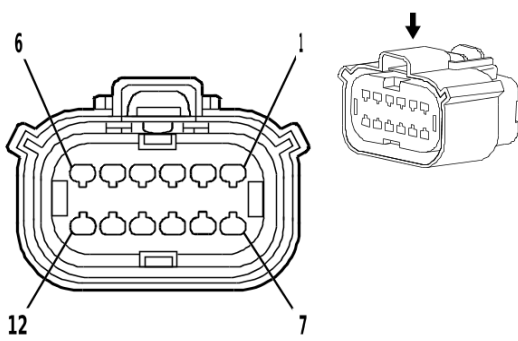

1825165

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13595088
 Service Connector: 19352907
 Description: 12-Way F 1.5 MX Series, Sealed(BK)

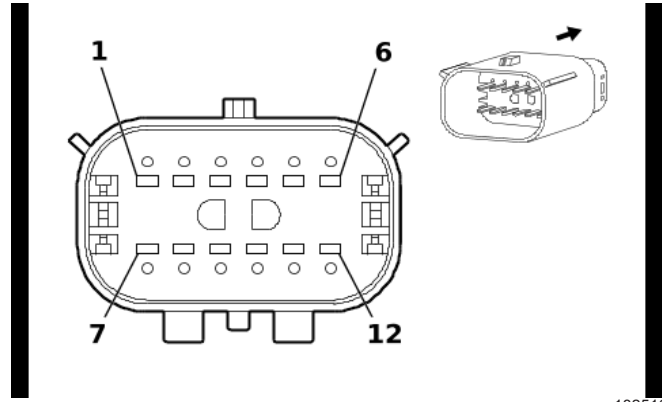

1825167

Connector Part Information

Harness Type: Fuel Injector Wiring Harness - Left
 OEM Connector: 334826206
 Service Connector: Service by Harness - See Part Catalog
 Description: 12-Way M 1.5 MX Series, Sealed(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19368973	J-35616-2A (GY)	J-38125-217
II	Not required	J-35616-3 (GY)	No Tool Required


X160 Engine Wiring Harness to Fuel Injector Wiring Harness - Left (L8T)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.75	BN / WH	4901	I	—	Direct Fuel Injector High Voltage Supply Cylinder 1	1	0.8	BN / WH	4901	II	—
2	0.75	GN / GY	4903	I	—	Direct Fuel Injector High Voltage Supply Cylinder 3	2	0.8	GN / GY	4903	II	—
3	0.75	GN / WH	4905	I	—	Direct Fuel Injector High Voltage Supply Cylinder 5	3	0.8	GN / WH	4905	II	—
4	0.75	WH / YE	4907	I	—	Direct Fuel Injector High Voltage Supply Cylinder 7	4	0.8	WH / YE	4907	II	—
5	0.75	BN	4801	I	—	Direct Fuel Injector High Voltage Control Cylinder 1	5	0.8	BN	4801	II	—
6	—	—	—	—	—	Not Occupied	6	—	—	—	—	—

X160 Engine Wiring Harness to Fuel Injector Wiring Harness - Left (L8T) (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
7	0.75	GN	4803	I	—	Direct Fuel Injector High Voltage Control Cylinder 3	7	0.8	GN	4803	II	—
8	0.75	WH / GN	4805	I	—	Direct Fuel Injector High Voltage Control Cylinder 5	8	0.8	WH / GN	4805	II	—
9	0.75	YE / GY	4807	I	—	Direct Fuel Injector High Voltage Control Cylinder 7	9	0.8	YE / GY	4807	II	—
10	0.5	WH / RD	480	I	—	Engine Control Vehicle Sensors 5 Volt Reference 1	10	0.5	BN / RD	480	II	—
11	0.5	BU / WH	10786	I	—	Fuel Rail Pressure Sensor SENT 1 Signal	11	0.5	BU / WH	10786	II	—
12	0.5	BK / YE	548	I	—	Engine Control Sensors Low Reference 1	12	0.5	BK / GN	548	II	—


X161 Engine Wiring Harness to Fuel Injector Wiring Harness - Right (L8T)

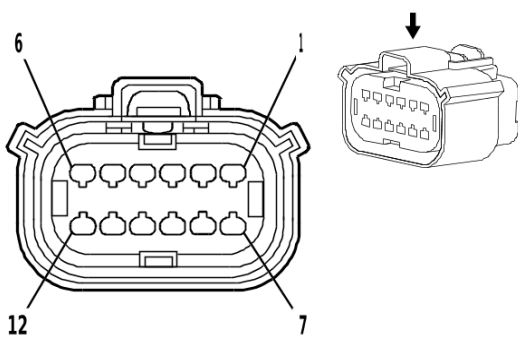

1825165

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13922706
 Service Connector: 19352907
 Description: 12-Way F 1.5 MX Series, Sealed(BK)

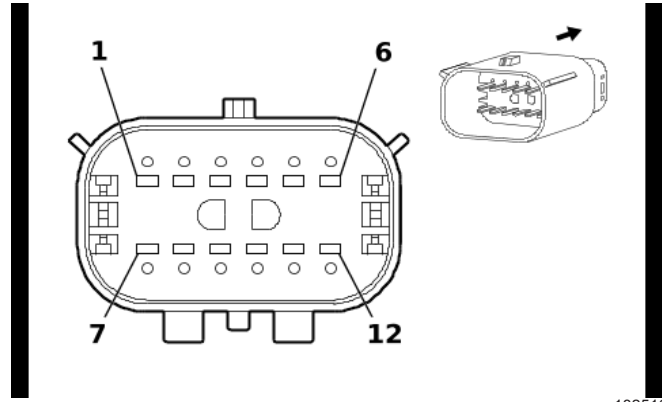

1825167

Connector Part Information

Harness Type: Fuel Injector Wiring Harness - Right
 OEM Connector: 334826211
 Service Connector: Service by Harness - See Part Catalog
 Description: 12-Way M 1.5 MX Series, Sealed(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19368973	J-35616-2A (GY)	J-38125-217
II	Not required	J-35616-3 (GY)	No Tool Required


X161 Engine Wiring Harness to Fuel Injector Wiring Harness - Right (L8T)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.75	BU / GY	4902	I	—	Direct Fuel Injector High Voltage Supply Cylinder 2	1	0.8	BU / GY	4902	II	—
2	0.75	BU / WH	4904	I	—	Direct Fuel Injector High Voltage Supply Cylinder 4	2	0.8	BU / WH	4904	II	—
3	0.75	VT / GY	4906	I	—	Direct Fuel Injector High Voltage Supply Cylinder 6	3	0.8	VT / GY	4906	II	—
4	0.75	GY / WH	4908	I	—	Direct Fuel Injector High Voltage Supply Cylinder 8	4	0.8	GY / WH	4908	II	—
5	0.75	BU	4802	I	—	Direct Fuel Injector High Voltage Control Cylinder 2	5	0.8	BU	4802	II	—
6-7	—	—	—	—	—	Not Occupied	6-7	—	—	—	—	—


X161 Engine Wiring Harness to Fuel Injector Wiring Harness - Right (L8T) (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
8	0.75	GY / BU	4804	I	—	Direct Fuel Injector High Voltage Control Cylinder 4	8	0.8	GY / BU	4804	II	—
9	0.75	VT / GN	4806	I	—	Direct Fuel Injector High Voltage Control Cylinder 6	9	0.8	VT / GN	4806	II	—
10	0.75	GY	4808	I	—	Direct Fuel Injector High Voltage Control Cylinder 8	10	0.8	GY	4808	II	—
11	0.75	VT / BK	7300	I	—	High Pressure Fuel Pump Low Control	11	0.8	VT / BK	7300	II	—
12	0.75	YE	7301	I	—	High Pressure Fuel Pump High Control	12	0.8	YE	7301	II	—

X175P Engine Wiring Harness Chassis to PTO Harness (L5P)

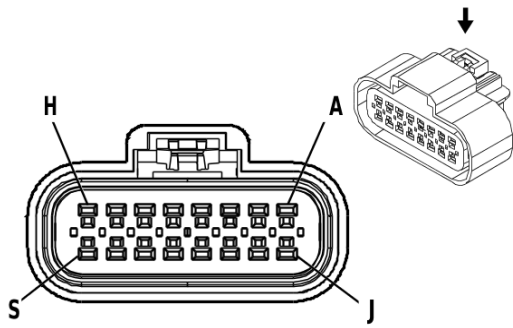

646383

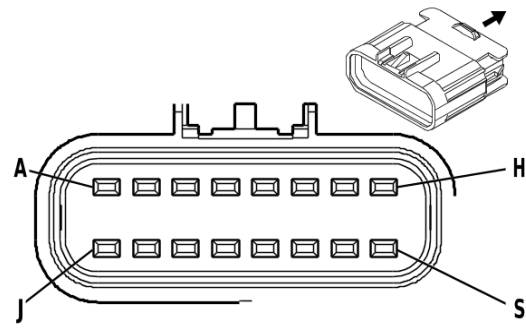

632345

Connector Part Information

Harness Type: Engine Wiring Harness Chassis
 OEM Connector: 15326863
 Service Connector: Service by Harness - See Part Catalog
 Description: 16-Way F 150 GT Series, Sealed(BK)

Connector Part Information

Harness Type: PTO Harness
 OEM Connector: Not Available
 Service Connector: Service by Harness - See Part Catalog
 Description: 16-Way M (BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required
II	Not required	J-35616-2A (GY)	No Tool Required
III	Not required	No Tool Required	No Tool Required


X175P Engine Wiring Harness Chassis to PTO Harness (L5P)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
A	0.5	GY / GN	6239	II	—	Transmission Power Take-Off Engage/Disengage Signal Power	A	0.5	GY / GN	6239	III	—
B - C	—	—	—	—	—	Not Occupied	B - C	—	—	—	—	—
D	1.5	BK	450	I	—	Ground	D	1.5	BK	450	III	—
E - F	—	—	—	—	—	Not Occupied	E - F	—	—	—	—	—
G	0.5	WH / BK	8238	II	—	Power Take Off Upfitter Interlock Switch Signal 2	G	0.5	WH / BK	8238	III	—
H	—	—	—	—	—	Not Occupied	H	—	—	—	—	—
J	0.5	WH / GN	6142	II	—	Power Take-Off Engine Shutdown Signal	J	0.5	WH / GN	6142	III	—
K	0.5	RD / VT	2640	II	—	Battery Positive Voltage	K	0.5	RD / VT	2640	III	—
L - M	—	—	—	—	—	Not Occupied	L - M	—	—	—	—	—

X175P Engine Wiring Harness Chassis to PTO Harness (L5P) (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
N	0.5	VT / GN	4308	II	—	Power Take-Off Remote Throttle Signal	N	0.5	VT / GN	4308	III	—
P	—	—	—	—	—	Not Occupied	P	—	—	—	—	—
R	0.5	VT / WH	239	II	—	Run/Crank Ignition 1 Voltage	R	0.5	VT / WH	239	III	—
S	—	—	—	—	—	Not Occupied	S	—	—	—	—	—


X176 Transmission Case Harness to Transmission Control Harness (MGM / MGU / MKM)

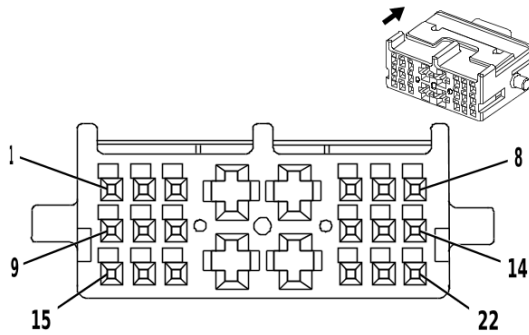

3977748

Connector Part Information

Harness Type: Transmission Case
 OEM Connector: 1897543-1
 Service Connector: Service by Harness - See Part Catalog
 Description: 22-Way F 0.64 Micro-Quadlock, 2.8 Micro-Power Series(NA)

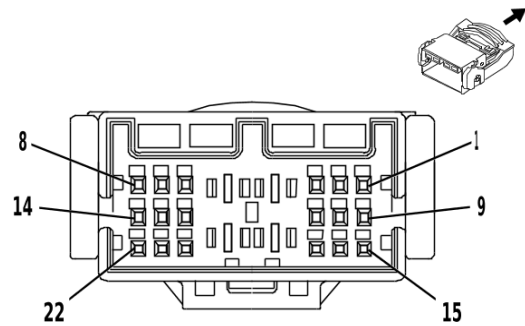

3977770

Connector Part Information

Harness Type: Transmission Control
 OEM Connector: 1897540-1
 Service Connector: Service by Harness - See Part Catalog
 Description: 22-Way M 0.64 Micro-Quadlock, 2.8 Micro-Power Series(NA)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required
II	Not required	J-35616-64B (LT BU)	No Tool Required
III	Not required	J-35616-5 (PU)	No Tool Required
IV	Not required	J-35616-65B (LT BU)	No Tool Required


X176 Transmission Case Harness to Transmission Control Harness (MGM / MGU / MKM)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.5	VT	7819	II	—	Default Disable Solenoid Control	1	0.5	VT	7819	IV	—
2	0.5	GN / OG	1530	II	—	Transmission Line Pressure Control Solenoid Valve Control	2	0.5	GN / OG	1530	IV	—
3	0.5	GY / BN	422	II	—	Torque Converter Clutch Solenoid Valve Control	3	0.5	GY / BN	422	IV	—
4	0.5	BN	6387	I	—	Transmission High Side Driver 1 Control	4	0.5	BN	6387	III	—
5 - 12	—	—	—	—	—	Not Occupied	5 - 12	—	—	—	—	—
13	0.5	BU / BN	1147	II	—	Transmission Shift Inhibit Signal	13	0.5	BU / BN	1147	IV	—

**X176 Transmission Case Harness to Transmission Control Harness (MGM / MGU / MKM)
(cont'd)**


Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
14	0.5	BN / YE	585	II	—	Transmission Fluid Temperature Sensor Signal	14	0.5	BN / YE	585	IV	—
15	0.5	BU / GN	6404	II	—	Clutch Solenoid Valve E Control	15	0.5	BU / GN	6404	IV	—
16	0.5	GN / BN	6403	II	—	Clutch Solenoid Valve D Control	16	0.5	GN / BN	6403	IV	—
17	0.5	GY	6402	II	—	Clutch Solenoid Valve C Control	17	0.5	GY	6402	IV	—
18	0.5	WH	6388	I	—	Transmission High Side Driver 2 Control	18	0.5	WH	6388	III	—
19	—	—	—	—	—	Not Occupied	19	—	—	—	—	—
20	0.5	BN / WH	4509	II	—	Transmission Clutch F Control	20	0.5	BN / WH	4509	IV	—
21	0.5	YE / VT	4507	II	—	Transmission Clutch H Control	21	0.5	YE / VT	4507	IV	—
22	0.5	BU / GY	4508	II	—	Transmission Clutch G Control	22	0.5	BU / GY	4508	IV	—

X210 Instrument Panel Wiring Harness to Body Wiring Harness

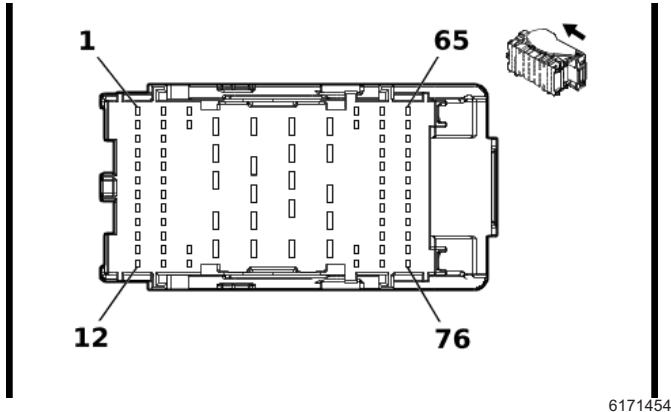

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 13549029
 Service Connector: Service by Harness - See Part Catalog
 Description: 76-Way F 1.2 Sumitomo, 2.8 YESC Series(BK)

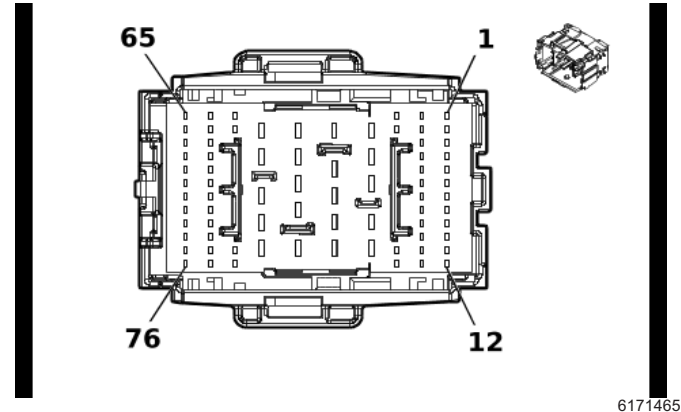

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 13549030
 Service Connector: Service by Harness - See Part Catalog
 Description: 76-Way M 1.2 Sumitomo, 2.8 YESC Series(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required
II	Not required	J-35616-16 (L-GN)	No Tool Required
III	Not required	J-35616-4A (PU)	No Tool Required
IV	Not required	J-35616-13 (BU)	No Tool Required
V	Not required	J-35616-17 (L-GN)	No Tool Required
VI	Not required	J-35616-5 (PU)	No Tool Required

X210 Instrument Panel Wiring Harness to Body Wiring Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.5	RD / GN	1540	II	—	Battery Positive Voltage	1	0.5	RD / GN	1540	V	—
2	0.5	RD / YE	6540	II	—	Battery Positive Voltage	2	0.5	RD / YE	6540	V	—
3	0.35	BN / OG	3020	I	—	Steering Wheel Air Bag Stage 1 Low Control	3	0.35	BN / OG	3020	IV	—
4	0.35	OG / VT	3021	I	—	Steering Wheel Air Bag Stage 1 High Control	4	0.35	OG / VT	3021	IV	—
5	0.35	WH / OG	3022	I	—	Steering Wheel Air Bag Stage 2 Low Control	5	0.35	WH / OG	3022	IV	—
6	0.35	OG / GN	3023	I	—	Steering Wheel Air Bag Stage 2 High Control	6	0.35	OG / GN	3023	IV	—

X210 Instrument Panel Wiring Harness to Body Wiring Harness (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
7	0.35	BN / BU	4892	I	—	Auxiliary Battery Relay Control	7	0.35	BN / BU	4892	IV	—
8	—	—	—	—	—	Cavity Seal	8	0.35	YE / WH	900	IV	—
9	—	—	—	—	—	Cavity Seal	9	0.35	YE / BK	901	IV	—
10	—	—	—	—	—	Cavity Seal	10	0.35	YE / BU	902	IV	—
13	0.35	BN / BK	3552	I	—	Interior Passive Entry Antenna 1 High Signal	13	0.35	BN / BK	3552	IV	—
14	0.35	WH	3553	I	—	Interior Passive Entry Antenna 1 Low Signal	14	0.35	WH	3553	IV	—
15	0.35	WH	4100	I	—	AUTOSAR CAN Bus [-] 4 Serial Data	15	0.5	WH	4100	V	—
16	0.35	BU / VT	4101	I	—	AUTOSAR CAN Bus [+] 4 Serial Data	16	0.5	BU / VT	4101	V	—
17	0.35	WH	4976	I	—	AUTOSAR CAN Bus [-] 3 Serial Data	17	0.5	WH	4976	V	—
18	0.35	BU / BK	4977	I	—	AUTOSAR CAN Bus [+] 3 Serial Data	18	0.5	BU / BK	4977	V	—
19	0.5	RD / GN	7740	II	—	Battery Positive Voltage	19	0.5	RD / GN	7740	V	—
21	0.35	BU / YE	4984	I	—	AUTOSAR CAN Bus [-] 5 Serial Data	21	0.5	BU / YE	4984	V	—
22	0.35	BU / WH	4985	I	—	AUTOSAR CAN Bus [+] 5 Serial Data	22	0.5	BU / WH	4985	V	—
23	0.35	WH	4986	I	—	AUTOSAR CAN Bus [-] 1 Serial Data	23	0.5	WH	4986	V	—
24	0.35	BU	4987	I	—	AUTOSAR CAN Bus [+] 1 Serial Data	24	0.5	BU	4987	V	—
27	0.35	BN / BK	4996	I	—	Immobilizer Antenna Signal [+]	27	0.35	BN / BK	4996	IV	—
28	0.35	WH / GY	4997	I	—	Immobilizer Antenna Low Signal	28	0.35	WH / GY	4997	IV	—
29	2.5	RD / BN	4142	III	—	Primary Fused Battery Positive Voltage	29	2.5	RD / BN	4142	VI	—
30	0.35	GY	1715	III	—	Windshield Wiper Switch High Signal	30	0.35	GY	1715	VI	—

7-644 Electrical Component and Inline Harness Connector End Views
X210 Instrument Panel Wiring Harness to Body Wiring Harness (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
31	0.5	GN / YE	2731	III	—	Brake System Control Module LIN Bus 1	31	0.5	GN / YE	2731	VI	—
32	0.5	BU	4987	III	UD5/ UD7	AUTOSAR CAN Bus [+] 1 Serial Data	32	0.5	BU	4987	VI	—
	0.35	BU	4987	III	- UD5/ - UD7	AUTOSAR CAN Bus [+] 1 Serial Data						
33	0.5	WH	4986	III	UD5/ UD7	AUTOSAR CAN Bus [-] 1 Serial Data	33	0.5	WH	4986	VI	—
	0.35	WH	4986	III	- UD5/ - UD7	AUTOSAR CAN Bus [-] 1 Serial Data						
35	0.75	GN / BK	116	III	—	Left Rear Speaker [-] Control	35	0.75	GN / BK	116	VI	—
36	0.75	GN	199	III	—	Left Rear Speaker [+] Control	36	0.75	GN	199	VI	—
37	0.75	BN / BU	118	III	—	Left Front Speaker [-] Control 1	37	0.75	BN / BU	118	VI	—
38	0.75	BU	201	III	—	Left Front Speaker 1 [+] Control	38	0.75	BU	201	VI	—
40	0.35	BU / WH	3119	III	—	Roof Rail Air Bag Disable Switch Signal	40	0.35	BU / WH	3119	VI	—
41	0.35	BN / WH	3895	III	—	Roof Rail Air Bag Disable Switch Low Reference	41	0.35	BN / WH	3895	VI	—
45	0.35	GN / VT	4786	III	—	Dome/Reading Lamp Enable Signal	45	0.5	GN / VT	4786	VI	—
46	0.35	GN / BN	507	III	—	Wait To Start Indicator Control	46	0.35	GN / BN	507	VI	—
48	0.5	YE / VT	6191	III	—	Power Rear Window Switch Open Signal	48	0.5	YE / VT	6191	VI	—
49	0.5	WH	6192	II	—	Sliding Rear Window Switch Close Signal	49	0.5	WH	6192	V	—
50	0.5	YE	6817	II	—	LED Backlight Dimming Control 1	50	0.5	YE	6817	V	—
51	0.35	WH / GY	7297	I	—	Minor Endgate High Relay Control	51	0.75	WH / GY	7297	V	—
53	0.5	RD / VT	7140	II	—	Battery Positive Voltage	53	0.5	RD / VT	7140	V	—

X210 Instrument Panel Wiring Harness to Body Wiring Harness (cont'd)


Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
54	0.35	WH / GN	7728	I	—	Major Endgate High Relay Control	54	0.75	WH / GN	7728	V	—
55	0.35	BU / VT	7729	I	—	Major Endgate Low Relay Control	55	0.75	BU / VT	7729	V	—
56	0.5	VT	801	II	—	Retained Accessory Power Control	56	0.35	VT	801	IV	—
57	0.5	BN / YE	820	II	—	Center High Mounted Stop Lamp Supply Voltage	57	0.35	BN / YE	820	IV	UET - UET
						Center High Mounted Stop Lamp Supply Voltage		0.5	BN / YE	820	V	
58	0.35	GN / BU	2733	I	—	Brake System Control Module LIN Bus 2	58	0.5	GN / BU	2733	V	—
59	0.5	RD / VT	2640	II	—	Battery Positive Voltage	59	0.5	RD / VT	2640	V	—
60	0.35	BU / YE	4984	I	—	AUTOSAR CAN Bus [-] 5 Serial Data	60	0.5	BU / YE	4984	V	—
61	0.35	BU / WH	4985	I	—	AUTOSAR CAN Bus [+] 5 Serial Data	61	0.5	BU / WH	4985	V	—
62	0.35	YE	10280	I	—	Private Steering Angle CAN Bus [+] Serial Data	62	0.35	YE	10280	IV	—
63	0.35	BU / WH	10279	I	—	Private Steering Angle CAN Bus [-] Serial Data	63	0.35	BU / WH	10279	IV	—
64	0.35	GN / BN	2087	I	—	Multi-axis Acceleration Sensor Supply Voltage	64	0.35	GN / BN	2087	IV	—
65	0.35	GN / GY	817	I	—	Vehicle Speed Signal	65	0.35	GN / GY	817	IV	—
66	0.35	WH / GY	2935	I	—	Task Lamp Switch Signal	66	0.35	WH / GY	2935	IV	—
67	0.5	RD / YE	2340	II	—	Battery Positive Voltage	67	0.5	RD / YE	2340	V	—
68	0.5	WH / VT	1430	II	—	Exterior Courtesy Lamp Control	68	0.5	WH / VT	1430	V	—
69	0.5	GN / WH	2854	II	—	Body Control Module LIN Bus 8	69	0.35	GN / WH	2854	IV	—
70	0.5	BU / BN	6807	II	—	DC/AC Inverter Control	70	0.5	BU / BN	6807	V	—

7-646 Electrical Component and Inline Harness Connector End Views

X210 Instrument Panel Wiring Harness to Body Wiring Harness (cont'd)


Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
71	0.5	VT / RD	4049	II	—	AC Power Outlet Sensor High Reference	71	0.5	VT / RD	4049	V	—
73	0.5	BN / GN	4246	II	—	Identification Lamp Control	73	0.5	BN / GN	4246	V	—
74	0.35	Bare	10116	I	—	AC Outlet Low Reference	74	0.35	Bare	10116	IV	—
75	0.75	BK	10117	II	—	AC Outlet Phase A Control	75	0.75	BK	10117	V	—
76	0.75	RD	10118	II	—	AC Outlet Phase B Control	76	0.75	RD	10118	V	—

X211 Instrument Panel Wiring Harness to Body Wiring Harness

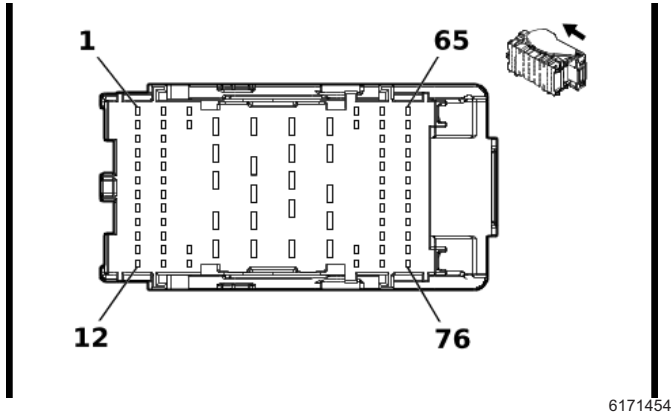

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 13549029
 Service Connector: Service by Harness - See Part Catalog
 Description: 76-Way F 1.2 Sumitomo, 2.8 YESC Series(BK)

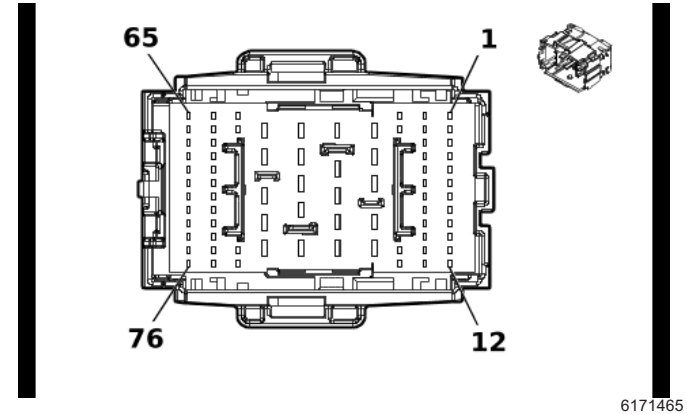

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 13549030
 Service Connector: Service by Harness - See Part Catalog
 Description: 76-Way M 1.2 Sumitomo, 2.8 YESC Series(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required
II	Not required	J-35616-16 (L-GN)	No Tool Required
III	Not required	J-35616-4A (PU)	No Tool Required
IV	Not required	J-35616-13 (BU)	No Tool Required
V	Not required	J-35616-17 (L-GN)	No Tool Required
VI	Not required	J-35616-5 (PU)	No Tool Required

X211 Instrument Panel Wiring Harness to Body Wiring Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.5	VT / BK	339	II	—	Run/Crank Ignition 1 Voltage	1	0.5	VT / BK	339	V	—
2	0.35	BU / VT	807	I	—	Ignition Off/ Accessory Ignition Voltage	2	0.35	BU / VT	807	IV	—
4	0.5 0.35	GN / WH GN / WH	24 24	II I	(IOK/ IOR) + (DD8/ DRZ) IOR- (DD8/ DRZ)	Backup Lamp Control Backup Lamp Control	4	0.5	GN / WH	24	V	—
5	0.35	OG / WH	3024	I	—	Passenger Instrument Panel Air Bag Stage 1 Low Control	5	0.35	OG / WH	3024	IV	—

7-648 Electrical Component and Inline Harness Connector End Views
X211 Instrument Panel Wiring Harness to Body Wiring Harness (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
6	0.35	YE / OG	3025	I	—	Passenger Instrument Panel Air Bag Stage 1 High Control	6	0.35	YE / OG	3025	IV	—
7	0.35	OG / VT	3026	I	—	Passenger Instrument Panel Air Bag Stage 2 Low Control	7	0.35	OG / VT	3026	IV	—
8	0.35	GY / OG	3027	I	—	Passenger Instrument Panel Air Bag Stage 2 High Control	8	0.35	GY / OG	3027	IV	—
10	0.35	YE	7115	I	—	Rear Axle Differential Lock Indicator Control	10	0.35	YE	7115	IV	—
11	0.35	YE / GN	7122	I	—	Axle Differential Lock Switch Signal	11	0.35	YE / GN	7122	IV	—
16	0.35	GN / BN	3005	I	—	Active Noise Cancellation Microphone 1 Signal	16	0.35	GN / BN	3005	IV	—
17	0.35	GN / BK	3008	I	—	Active Noise Cancellation Microphone 1 Feedback Signal	17	0.35	GN / BK	3008	IV	—
25	0.35	BU	4987	I	—	AUTOSAR CAN Bus [+] 1 Serial Data	25	0.5	BU	4987	V	—
26	0.35	WH	4986	I	—	AUTOSAR CAN Bus [-] 1 Serial Data	26	0.5	WH	4986	V	—
29	1	GN / YE	6840	III	—	Auxiliary Device 2 Switched Voltage	29	1	GN / YE	6840	VI	—
32	0.5	BU / BK	1053	III	—	Center High Mounted Stop Lamp Control 3	32	0.5	BU / BK	1053	VI	—
33	0.75	WH	46	III	—	Right Rear Speaker [+] Control	33	0.75	WH	46	VI	—
34	0.75	BU / BK	115	III	—	Right Rear Speaker [-] Control	34	0.75	BU / BK	115	VI	—
35	0.75	YE / BK	117	III	—	Right Front Speaker [-] Control 1	35	0.75	YE / BK	117	VI	—
36	0.75	YE	200	III	—	Right Front Speaker 1 [+] Control	36	0.75	YE	200	VI	—
37	0.75	YE / BK	117	III	—	Right Front Speaker [-] Control 1	37	0.75	YE / BK	117	VI	—


X211 Instrument Panel Wiring Harness to Body Wiring Harness (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
38	0.75	YE	200	III	—	Right Front Speaker 1 [+] Control	38	0.75	YE	200	VI	—
39	0.75	YE / BK	117	III	—	Right Front Speaker [-] Control 1	39	0.75	YE / BK	117	VI	—
40	0.75	YE	200	III	—	Right Front Speaker 1 [+] Control	40	0.75	YE	200	VI	—
41	0.75	WH / YE	1853	III	—	Right Front Midrange Speaker [+] Control	41	0.75	WH / YE	1853	VI	—
42	0.75	BN / BK	1953	III	—	Right Front Midrange Speaker [-] Control	42	0.75	BN / BK	1953	VI	—
43	0.75	YE / WH	1860	III	—	Front Center Speaker [+] Control	43	0.75	YE / WH	1860	VI	—
44	0.75	BU / YE	1960	III	—	Front Center Speaker [-] Control	44	0.75	BU / YE	1960	VI	—
45	0.75	BU / VT	1857	III	—	Left Front Midrange Speaker [+] Control	45	0.75	BU / VT	1857	VI	—
46	0.75	BU / BN	1957	III	—	Left Front Midrange Speaker [-] Control	46	0.75	BU / BN	1957	VI	—
47	2	BU	47	III	—	Trailer Auxiliary Control	47	2	BU	47	VI	—
48	2.5	BK / WH	1051	III	—	Signal Ground Signal Ground	48	0.5 2.5	BK / WH BK / WH	1051 1051	VI VI	D07- IOK/ D07- UQA- UQS - D07+ IOK+ UQA/ - D07+ IOK+ UQS
49	0.35	GN / WH	488	I	—	Power Take-Off Control Switch Signal	49	0.5	GN / WH	488	V	—
50	0.35	BN / GN	4311	I	—	Power Take-Off Enable Cabin Switch Normally Closed Signal	50	0.5	BN / GN	4311	V	—
51	0.35 0.5	BU / YE BU / YE	4979 4979	I II	(GF2/ GF5/ GFF) + UEU - GF2- GF5- GFF + UEU	AUTOSAR CAN Bus [+] 2 Serial Data AUTOSAR CAN Bus [+] 2 Serial Data	51	0.5	BU / YE	4979	V	—

7-650 Electrical Component and Inline Harness Connector End Views
X211 Instrument Panel Wiring Harness to Body Wiring Harness (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
52	0.35	WH	4978	I	(GF2/ GF5/ GFF) + UEU - GF2- GF5- GFF + UEU	AUTOSAR CAN Bus [-] 2 Serial Data AUTOSAR CAN Bus [-] 2 Serial Data	52	0.5	WH	4978	V	—
	0.5	WH	4978	II								
54	0.5	GN / VT	5199	II	—	Run/Crank Relay Coil Control	54	0.5	GN / VT	5199	V	—
60	0.35	YE / WH	1690	I	—	Mirror Dim- ming Signal	60	0.35	YE / WH	1690	V	—
61	0.35	BK / YE	1691	I	—	Automatic Day/Night Mirror Low Reference	61	0.35	BK / YE	1691	V	—

X213 Auxiliary Fuse Block Wiring Harness to Instrument Panel Wiring Harness (9L7)

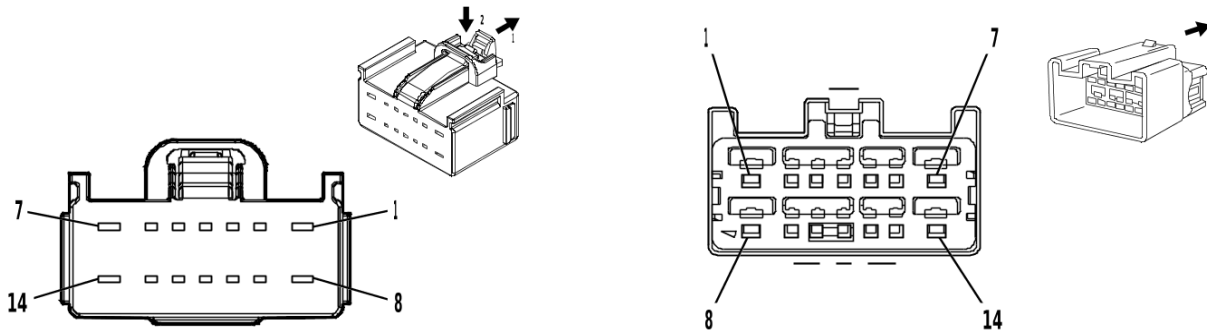

4934172

1283905

Connector Part Information

Harness Type: Auxiliary Fuse Block Wiring Harness
 OEM Connector: 33366376
 Service Connector: Service by Harness - See Part Catalog
 Description: 14-Way F 1.5, 2.8 YESC Series(GY)

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 10846900
 Service Connector: 88956523
 Description: 14-Way M 1.5, 2.8 YESC Series(L-GY)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required
II	Not required	J-35616-4A (PU)	No Tool Required
III	13578907	J-35616-3 (GY)	J-38125-215A
IV	13578908	J-35616-5 (PU)	J-38125-11A

X213 Auxiliary Fuse Block Wiring Harness to Instrument Panel Wiring Harness (9L7)


Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.75	BK / WH	851	II	—	Signal Ground	1	2.5	BK	1050	IV	—
2	—	—	—	—	—	Not Occupied	2	—	—	—	—	—
3	0.35	YE	6817	I	—	LED Backlight Dimming Control 1	3	0.35	YE	6817	III	—
4	—	—	—	—	—	Not Occupied	4	—	—	—	—	—
5	0.5	WH / BU	3691	I	—	Trailer Brake Apply Signal	5	0.35	WH / BU	3691	III	—
6	—	—	—	—	—	Not Occupied	6	—	—	—	—	—
7	2.5	RD / BN	4142	II	—	Primary Fused Battery Positive Voltage	7	2.5	RD / BN	4142	IV	—
8	2.5	VT / BU	10735	II	—	Upfitter Accessory 5 Supply Voltage	8	2.5	VT / BU	10735	IV	—

7-652 Electrical Component and Inline Harness Connector End Views

**X213 Auxiliary Fuse Block Wiring Harness to Instrument Panel Wiring Harness (9L7)
(cont'd)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
9	—	—	—	—	—	Out of Park Signal	9	0.35	YE	6812	III	—
10	—	—	—	—	—	Vehicle Speed Signal	10	0.35	GN / GY	817	III	—
11	0.35	WH	6816	I	—	Indicator Dimming Control	11	0.35	WH	6816	III	—
12	—	—	—	—	—	Not Occupied	12	—	—	—	—	—
13	0.5	VT / BK	339	I	—	Run/Crank Ignition 1 Voltage	13	0.5	VT / BK	339	III	—
14	2	BU	47	II	—	Trailer Auxiliary Control	14	2	BU	47	IV	—

X213 Trailer Wiring Harness to Instrument Panel Wiring Harness (- JL1 & Z82)

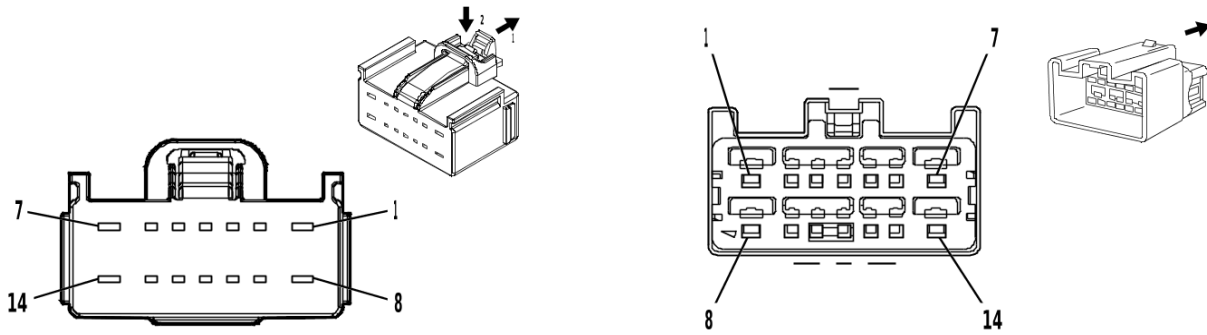

4934172

1283905

Connector Part Information

Harness Type: Trailer Wiring Harness Extension Harness
 OEM Connector: 33366376
 Service Connector: Service by Harness - See Part Catalog
 Description: 14-Way F 1.5, 2.8 YESC Series(GY)

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 10846900
 Service Connector: 88956523
 Description: 14-Way M 1.5, 2.8 YESC Series(L-GY)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required
II	Not required	J-35616-4A (PU)	No Tool Required
III	13578907	J-35616-3 (GY)	J-38125-215A
IV	13578908	J-35616-5 (PU)	J-38125-11A

X213 Trailer Wiring Harness to Instrument Panel Wiring Harness (- JL1 & Z82)


Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	2.5	WH	22	II	—	Trailer Ground	1	2.5	BK	1050	IV	—
2	—	—	—	—	—	Not Occupied	2	—	—	—	—	—
3	—	—	—	—	—	LED Backlight Dimming Control 1	3	0.35	YE	6817	III	—
4	—	—	—	—	—	Not Occupied	4	—	—	—	—	—
5	0.5	WH / BU	3691	I	—	Trailer Brake Apply Signal	5	0.35	WH / BU	3691	III	—
6	—	—	—	—	—	Not Occupied	6	—	—	—	—	—
7	2.5	RD / BN	4142	II	—	Primary Fused Battery Positive Voltage	7	2.5	RD / BN	4142	IV	—
8	—	—	—	—	—	Upfitter Accessory 5 Supply Voltage	8	2.5	VT / BU	10735	IV	—
9	—	—	—	—	—	Out of Park Signal	9	0.35	YE	6812	III	—

7-654 Electrical Component and Inline Harness Connector End Views

X213 Trailer Wiring Harness to Instrument Panel Wiring Harness (- JL1 & Z82) (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
10	—	—	—	—	—	Vehicle Speed Signal	10	0.35	GN / GY	817	III	—
11	—	—	—	—	—	Indicator Dimming Control	11	0.35	WH	6816	III	—
12	—	—	—	—	—	Not Occupied	12	—	—	—	—	—
13	—	—	—	—	—	Run/Crank Ignition 1 Voltage	13	0.5	VT / BK	339	III	—
14	2	BU	47	II	—	Trailer Auxiliary Control	14	2	BU	47	IV	—


X217 Body Wiring Harness to Instrument Panel Wiring Harness (UVB)

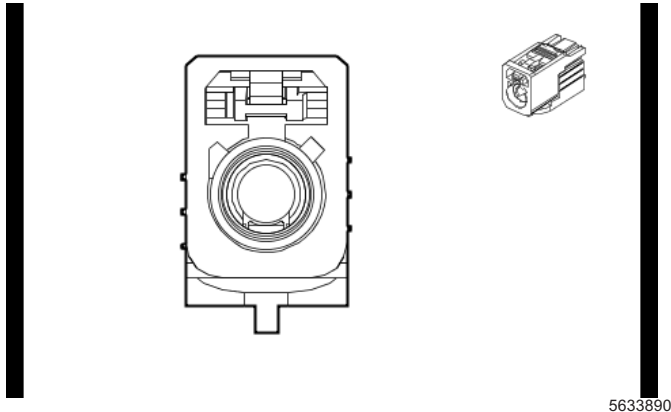

5633890

Connector Part Information

Harness Type: Body Wiring Harness COAX
 OEM Connector: 33351013
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way F Coax Type(BU)

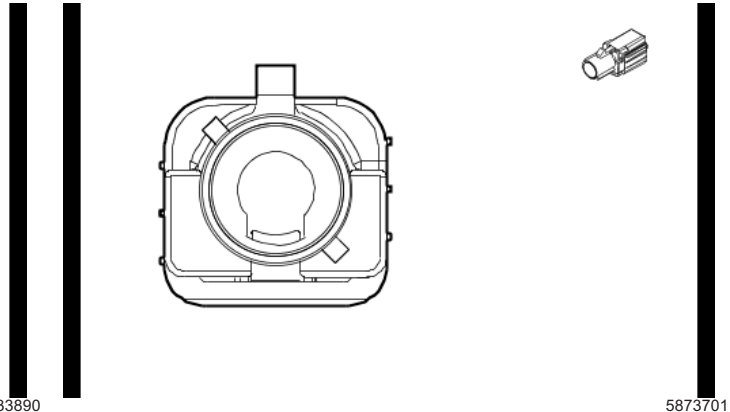

5873701

Connector Part Information

Harness Type: Instrument Panel Wiring Harness COAX
 OEM Connector: 33351038
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way M Coax Type(BU)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

X217 Body Wiring Harness to Instrument Panel Wiring Harness (UVB)


Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
—	—	Coax Cable	—	I	—	Video Processing Module Coaxial Video Signal	—	—	Coax Cable	—	I	—

X218 Instrument Panel Wiring Harness to Body Wiring Harness (IOK)

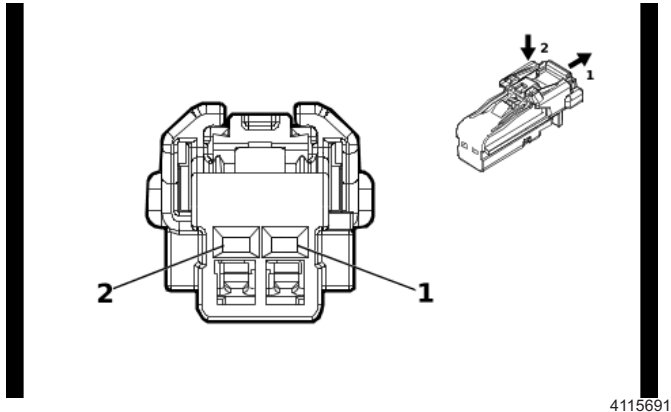

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 35311666
 Service Connector: 87816612
 Description: 2-Way F 1.2 MCON Series(BK)

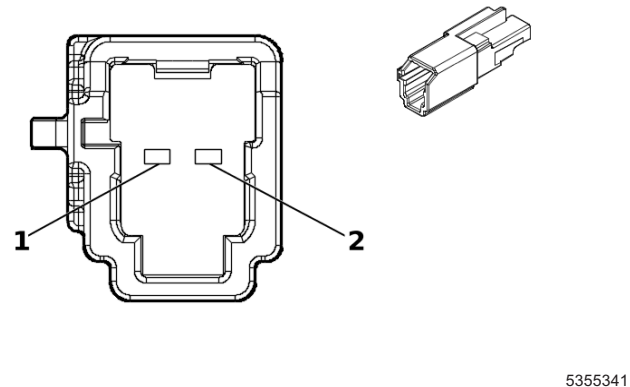

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 35258943
 Service Connector: 84815531
 Description: 2-Way M 1.2 MCON Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required
II	Not required	J-35616-13 (BU)	No Tool Required

X218 Instrument Panel Wiring Harness to Body Wiring Harness (IOK)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.35	GN	7214	I	—	Ethernet Bus 6 [-]	1	0.35	GN	7214	II	—
2	0.35	YE	7215	I	—	Ethernet Bus 6 [+]	2	0.35	YE	7215	II	—

X226 Front Floor Console Wiring Harness to Instrument Panel Wiring Harness

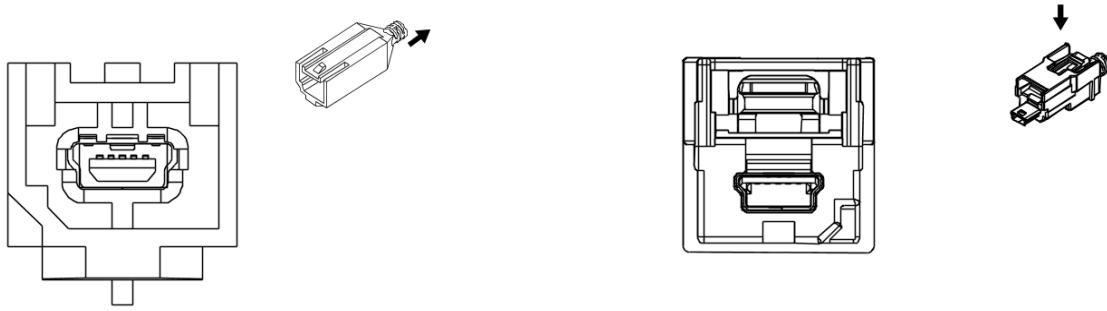

3273655

2807425

Connector Part Information

Harness Type: Front Floor Console Wiring Harness USB
 OEM Connector: 13699757
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 5-Way F 2.0 Mini-B USB Type(BK)

Connector Part Information

Harness Type: Instrument Panel Wiring Harness USB
 OEM Connector: 13576672
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 5-Way M 2.0 Mini-B USB Type(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

X226 Front Floor Console Wiring Harness to Instrument Panel Wiring Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
—	—	USB	—	I	—	USB Serial Data	—	—	USB	—	I	—

X227 Front Floor Console Wiring Harness to Body Wiring Harness (D07)

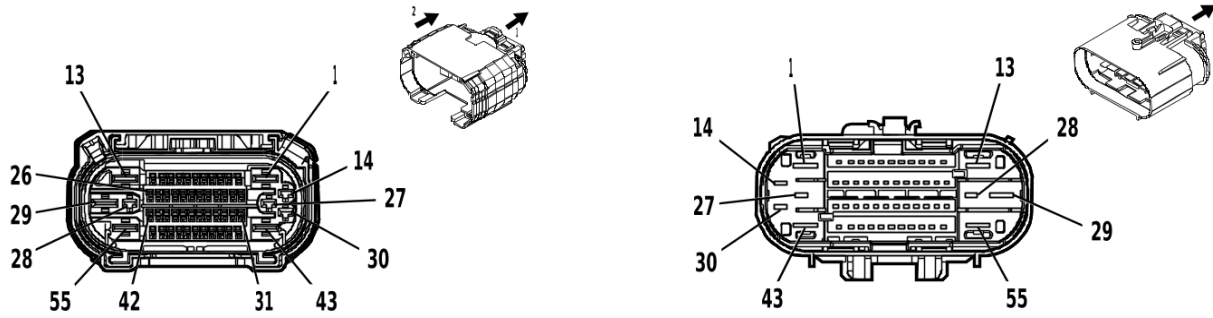

4992168

4993301

Connector Part Information

Harness Type: Front Floor Console Wiring Harness
 OEM Connector: 35016652
 Service Connector: Service by Harness - See Part Catalog
 Description: 55-Way F 1.2 OCS, 2.8, 6.3 CTS Series, Sealed(BK)

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 35205173
 Service Connector: 84727364
 Description: 55-Way M 1.2 OCS, 2.8, 6.3 CTS Series, Sealed(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required
II	Not required	J-35616-16 (L-GN)	No Tool Required
III	Not required	J-35616-35 (VT)	No Tool Required
IV	Not required	J-35616-43 (RD)	No Tool Required
V	84867140	J-35616-13 (BU)	J-38125-215A
VI	84867141	J-35616-13 (BU)	J-38125-215A
VII	84992391	J-35616-5 (PU)	J-38125-215A

X227 Front Floor Console Wiring Harness to Body Wiring Harness (D07)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	—	—	—	—	—	Not Occu- pied	1	—	—	—	—	—
2	1	BK	9003	II	—	Cavity Seal	2	1	BK	9003	VI	—
3- 5	—	—	—	—	—	Not Occu- pied	3- 5	—	—	—	—	—
6	0.5	RD / VT	2640	II	—	Battery Posi- tive Voltage	6	—	—	—	—	—
7	0.35	GN / BU	2733	I	—	Brake Sys- tem Control Module LIN Bus 2	7	0.5	GN / BU	2733	V	—
8	—	—	—	—	—	Not Occu- pied	8	—	—	—	—	—
9	0.5	RD / BU	1240	II	—	Battery Posi- tive Voltage	9	—	—	—	—	—
10	0.35	BN / BK	3552	I	—	Interior Pas- sive Entry Antenna 1 High Signal	10	—	—	—	—	—


X227 Front Floor Console Wiring Harness to Body Wiring Harness (D07) (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
11	0.35	WH	3553	I	—	Interior Pas- sive Entry Antenna 1 Low Signal	11	—	—	—	—	—
12	1	BK	9003	II	—	Cavity Seal	12	1	BK	9003	VI	—
13	—	—	—	—	—	Not Occu- pied	13	—	—	—	—	—
14	0.75	BK	10117	III	—	AC Outlet Phase A Control	14	0.75	BK	10117	VII	—
15 - 21	—	—	—	—	—	Not Occu- pied	15 - 21	—	—	—	—	—
22	0.5	BU / YE	4984	II	—	AUTOSAR CAN Bus [-] 5 Serial Data	22	—	—	—	—	—
23	0.5	BU / WH	4985	II	—	AUTOSAR CAN Bus [+] 5 Serial Data	23	—	—	—	—	—
24	0.5	BU / YE	4984	II	—	AUTOSAR CAN Bus [-] 5 Serial Data	24	—	—	—	—	—
25	0.5	BU / WH	4985	II	—	AUTOSAR CAN Bus [+] 5 Serial Data	25	—	—	—	—	—
26	0.5	BK	1350	II	—	Ground	26	0.75	BK	1350	V	—
27	0.5	WH	10116	III	—	AC Outlet Low Refer- ence	27	0.5	WH	10116	VII	—
28 - 29	—	—	—	—	—	Not Occu- pied	28 - 29	—	—	—	—	—
30	0.75	RD	10118	III	—	AC Outlet Phase B Control	30	0.75	RD	10118	VII	—
31	—	—	—	—	—	Not Occu- pied	31	—	—	—	—	—
32	0.35	BN / BK	4996	I	—	Immobilizer Antenna Sig- nal [+]	32	0.35	BN / BK	4996	V	—
33	0.35	WH / GY	4997	I	—	Immobilizer Antenna Low Signal	33	0.35	WH / GY	4997	V	—
34 - 35	—	—	—	—	—	Not Occu- pied	34 - 35	—	—	—	—	—
36	0.5	RD / YE	2340	II	—	Battery Posi- tive Voltage	36	—	—	—	—	—
37	0.5	GN / VT	2857	II	—	Body Control Module LIN Bus 11	37	—	—	—	—	—
38	0.5	VT / RD	4049	II	—	AC Power Outlet Sen- sor High Reference	38	0.5	VT / RD	4049	V	—
39 - 41	—	—	—	—	—	Not Occu- pied	39 - 41	—	—	—	—	—


7-660 Electrical Component and Inline Harness Connector End Views
X227 Front Floor Console Wiring Harness to Body Wiring Harness (D07) (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
42	0.5	BU / BN	6807	II	—	DC/AC Inverter Control	42	0.5	BU / BN	6807	V	—
43	0.5	GN / VT	4786	IV	—	Dome/Reading Lamp Enable Signal	43	—	—	—	—	—
44	0.75	YE	6817	II	—	LED Backlight Dimming Control 1	44	0.75	YE	6817	V	—
45 - 46	—	—	—	—	—	Not Occupied	45 - 46	—	—	—	—	—
47	0.5	BK	1350	II	—	Ground	47	0.75	BK	1350	V	—
48	0.35	VT	4701	I	—	Retained Accessory Power Control	48	0.35	VT	4701	V	—
49 - 50	—	—	—	—	—	Not Occupied	49 - 50	—	—	—	—	—
51	0.5	BK / WH	1451	II	—	Signal Ground	51	—	—	—	—	—
52	0.5	BK / WH	1051	II	—	Signal Ground	52	—	—	—	—	—
53	—	—	—	—	—	Not Occupied	53	—	—	—	—	—
54	1	BK	9003	II	—	Cavity Seal	54	1	BK	9003	VI	—
55	—	—	—	—	—	Not Occupied	55	—	—	—	—	—

X227 Front Seat Wiring Harness - Center to Body Wiring Harness (- D07)

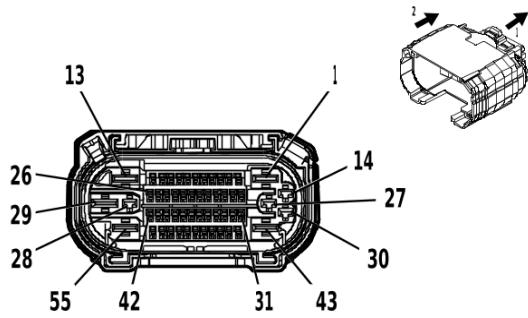

4992168

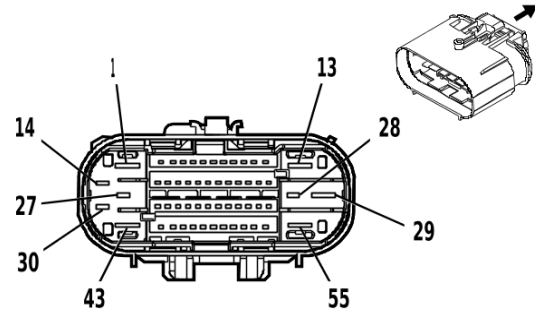

4993301

Connector Part Information

Harness Type: Front Seat Wiring Harness - Center
 OEM Connector: 35016652
 Service Connector: Service by Harness - See Part Catalog
 Description: 55-Way F 1.2 OCS, 2.8, 6.3 CTS Series, Sealed(BK)

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 35205173
 Service Connector: 84727364
 Description: 55-Way M 1.2 OCS, 2.8, 6.3 CTS Series, Sealed(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required
II	Not required	J-35616-35 (VT)	No Tool Required
III	84847992	J-35616-32 (OG)	J-38125-36
IV	84867140	J-35616-13 (BU)	J-38125-215A
V	84867141	J-35616-13 (BU)	J-38125-215A
VI	84992391	J-35616-5 (PU)	J-38125-215A

X227 Front Seat Wiring Harness - Center to Body Wiring Harness (- D07)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	—	—	—	—	—	Not Occu- pied	1	—	—	—	—	—
2	0.75	BK	0	I	—	Cavity Seal	2	1	BK	9003	V	—
3- 5	—	—	—	—	—	Not Occu- pied	3- 5	—	—	—	—	—
6	—	—	—	—	—	Battery Posi- tive Voltage	6	0.5	RD / VT	2640	IV	—
7	—	—	—	—	—	Brake Sys- tem Control Module LIN Bus 2	7	0.5	GN / BU	2733	IV	—
8	—	—	—	—	—	Not Occu- pied	8	—	—	—	—	—
9	—	—	—	—	—	Battery Posi- tive Voltage	9	0.5	RD / BU	1240	IV	—
10	—	—	—	—	—	Interior Pas- sive Entry Antenna 1 High Signal	10	0.35	BN / BK	3552	IV	—

7-662 Electrical Component and Inline Harness Connector End Views

X227 Front Seat Wiring Harness - Center to Body Wiring Harness (- D07) (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
11	—	—	—	—	—	Interior Pas- sive Entry Antenna 1 Low Signal	11	0.35	WH	3553	IV	—
12	0.75	BK	9003	I	—	Cavity Seal	12	1	BK	9003	V	—
13	—	—	—	—	—	Not Occu- pied	13	—	—	—	—	—
14	0.75	BK	10117	II	—	AC Outlet Phase A Control	14	0.75	BK	10117	VI	—
15	—	—	—	—	—	Not Occu- pied	15	—	—	—	—	—
16	0.35	WH	4976	I	—	AUTOSAR CAN Bus [-] 3 Serial Data	16	—	—	—	—	—
17	0.35	BU / BK	4977	I	—	AUTOSAR CAN Bus [+] 3 Serial Data	17	—	—	—	—	—
18	0.35	WH	4976	I	—	AUTOSAR CAN Bus [-] 3 Serial Data	18	—	—	—	—	—
19	0.35	BU / BK	4977	I	—	AUTOSAR CAN Bus [+] 3 Serial Data	19	—	—	—	—	—
20 - 21	—	—	—	—	—	Not Occu- pied	20 - 21	—	—	—	—	—
22	0.5	BU / YE	4984	I	—	AUTOSAR CAN Bus [-] 5 Serial Data	22	0.5	BU / YE	4984	IV	—
23	0.5	BU / WH	4985	I	—	AUTOSAR CAN Bus [+] 5 Serial Data	23	0.5	BU / WH	4985	IV	—
24	0.5	BU / YE	4984	I	—	AUTOSAR CAN Bus [-] 5 Serial Data	24	0.5	BU / YE	4984	IV	—
25	0.5	BU / WH	4985	I	—	AUTOSAR CAN Bus [+] 5 Serial Data	25	0.5	BU / WH	4985	IV	—
26	0.75	BK	1050	I	—	Ground	26	0.75	BK	1350	IV	—
27	0.35	BK	10116	II	—	AC Outlet Low Refer- ence	27	0.5	WH	10116	VI	—
28 - 29	—	—	—	—	—	Not Occu- pied	28 - 29	—	—	—	—	—
30	0.75	RD	10118	II	—	AC Outlet Phase B Control	30	0.75	RD	10118	VI	—
31	—	—	—	—	—	Not Occu- pied	31	—	—	—	—	—
32	0.5	BN / BK	4996	I	—	Immobilizer Antenna Sig- nal [+]	32	0.35	BN / BK	4996	IV	—
33	0.5	WH / GY	4997	I	—	Immobilizer Antenna Low Signal	33	0.35	WH / GY	4997	IV	—

X227 Front Seat Wiring Harness - Center to Body Wiring Harness (- D07) (cont'd)


Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
34 - 35	—	—	—	—	—	Not Occupied	34 - 35	—	—	—	—	—
36	—	—	—	—	—	Battery Positive Voltage	36	0.5	RD / YE	2340	IV	—
37	—	—	—	—	—	Body Control Module LIN Bus 11	37	0.35	GN / VT	2857	IV	—
38	0.75	VT / RD	4049	I	—	AC Power Outlet Sensor High Reference	38	0.5	VT / RD	4049	IV	—
39	—	—	—	—	—	Not Occupied	39	—	—	—	—	—
40	0.35	WH	4055	I	—	Private Serial Data Powertrain CAN Bus [+] Serial Data	40	—	—	—	—	—
41	—	—	—	—	—	Not Occupied	41	—	—	—	—	—
42	0.75	BU / BN	6807	I	—	DC/AC Inverter Control	42	0.5	BU / BN	6807	IV	—
43	—	—	—	—	—	Dome/Reading Lamp Enable Signal	43	0.5	GN / VT	4786	III	—
44	0.75	YE	6817	I	—	LED Backlight Dimming Control 1	44	0.75	YE	6817	IV	—
	0.75	BK	6817	I	—	LED Backlight Dimming Control 1						
45	0.35	BU / GY	4054	I	—	Private Serial Data Powertrain CAN Bus [-] Serial Data	45	—	—	—	—	—
46	0.35	WH	4055	I	—	Private Serial Data Powertrain CAN Bus [+] Serial Data	46	—	—	—	—	—
47	0.35	BK	1350	I	—	Ground	47	0.75	BK	1350	IV	—
48	0.35	VT	4701	I	—	Retained Accessory Power Control	48	0.35	VT	4701	IV	—
49 - 50	—	—	—	—	—	Not Occupied	49 - 50	—	—	—	—	—
51	—	—	—	—	—	Signal Ground	51	0.75	BK / WH	1451	IV	—

7-664 Electrical Component and Inline Harness Connector End Views

X227 Front Seat Wiring Harness - Center to Body Wiring Harness (- D07) (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
52						Signal Ground	52	0.5 0.75	BK / WH BK / WH	1051 1051	IV IV	D07- IOK/ D07+ UQA- UQS D07/ IOK/ UQA/ D07 + IOK+ UQS
53	0.35	BU / GY	4054	I	—	Private Serial Data Power- train CAN Bus [-] Serial Data	53	—	—	—	—	—
54	0.75	BK	9003	I	—	Cavity Seal	54	1	BK	9003	V	—
55	—	—	—	—	—	Not Occu- pied	55	—	—	—	—	—

X237 Instrument Panel Wiring Harness to Instrument Panel Airbag Harness

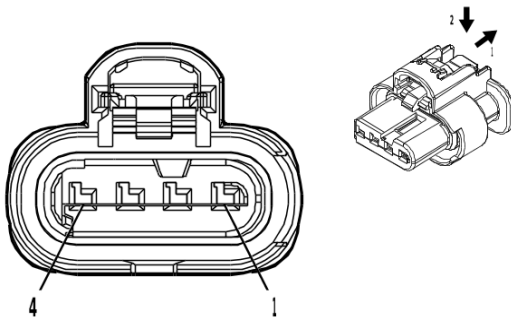

4900699

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 35053710
 Service Connector: 19371193
 Description: 4-Way F 1.2 MCON-CB Series, Sealed(YE)

Connector Part Information

Harness Type: Instrument Panel Airbag Harness
 OEM Connector: 13583527
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way M (YE)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required
II	Not required	No Tool Required	No Tool Required

X237 Instrument Panel Wiring Harness to Instrument Panel Airbag Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.35	YE / OG	3025	I	—	Passenger Instrument Panel Air Bag Stage 1 High Control	1	0.35	YE / OG	3025	II	—
2	0.35	OG / WH	3024	I	—	Passenger Instrument Panel Air Bag Stage 1 Low Control	2	0.35	OG / WH	3024	II	—
3	0.35	GY / OG	3027	I	—	Passenger Instrument Panel Air Bag Stage 2 High Control	3	0.35	GY / OG	3027	II	—
4	0.35	OG / VT	3026	I	—	Passenger Instrument Panel Air Bag Stage 2 Low Control	4	0.35	OG / VT	3026	II	—


X250 Instrument Panel Wiring Harness to Heater Wiring Harness

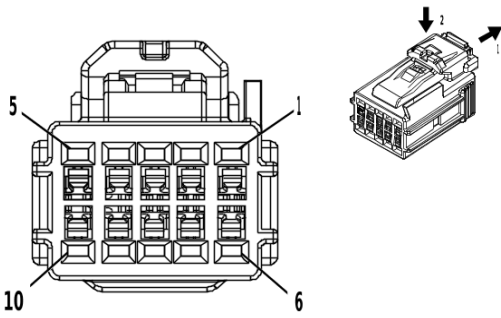

4254030

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 35327186
 Service Connector: 13532428
 Description: 10-Way F 1.2 Series(BK)

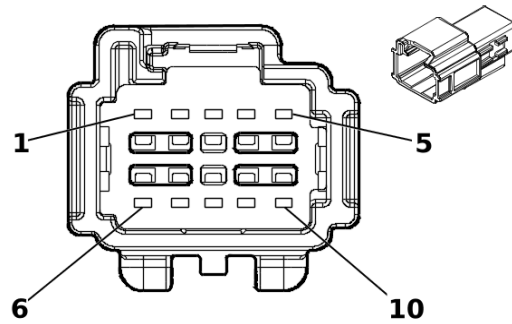

5355759

Connector Part Information

Harness Type: Heater Wiring Harness
 OEM Connector: Not Available
 Service Connector: Service by Harness - See Part Catalog
 Description: 10-Way M (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	84962854	J-35616-12 (BU)	J-38125-215A
II	Not required	No Tool Required	No Tool Required

X250 Instrument Panel Wiring Harness to Heater Wiring Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	—	—	—	—	—	Not Occu- pied	1	—	—	—	—	—
2	0.5	BK	1050	I	—	Ground	2	0.5	BK	1050	II	—
3- 4	—	—	—	—	—	Not Occu- pied	3- 4	—	—	—	—	—
5	0.35	GY	6137	I	—	Air Condi- tioning Evap- orator Tem- perature Sensor Sig- nal	5	0.35	GY	6137	II	—
6	0.35	GN / VT	2852	I	—	Body Control Module LIN Bus 6	6	0.35	GN / VT	2852	II	—
7	0.35	BK / YE	407	I	—	Sensor Low Reference	7	0.35	BK / YE	407	II	—
8	0.5	VT / BK	339	I	—	Run/Crank Ignition 1 Voltage	8	0.5	VT / BK	339	II	—
9	0.35	WH / YE	4634	I	—	HVAC Re- mote Enable Signal	9	0.35	WH / YE	4634	II	—
10	—	—	—	—	—	Not Occu- pied	10	—	—	—	—	—

X251 Auxiliary Heater Wiring Harness to Body Wiring Harness

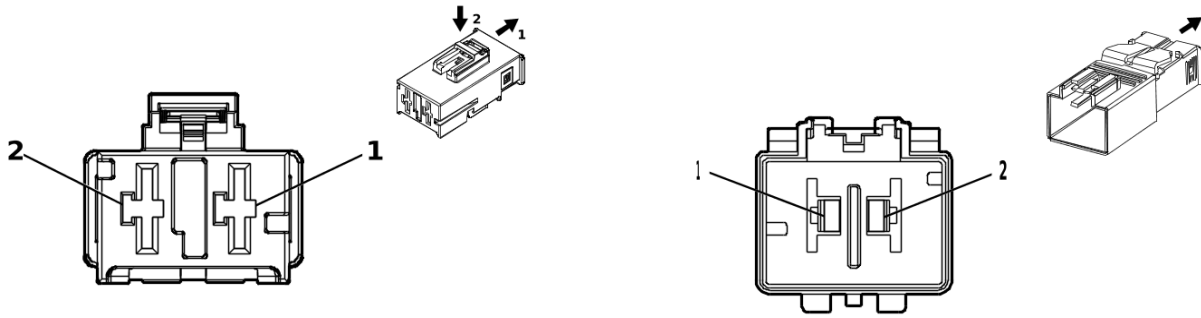

5187955

4891120

Connector Part Information

Harness Type: Auxiliary Heater Wiring Harness
 OEM Connector: Not Available
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 35134697
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way M 9.5 MCON-LL Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required
II	Not required	J-35616-21 (RD)	No Tool Required

X251 Auxiliary Heater Wiring Harness to Body Wiring Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	—	—	—	—	—	Not Occupied	1	—	—	—	—	—
2	10	RD / GY	642	I	—	Battery Positive Voltage	2	10	RD / GY	642	II	—


X309A Body Wiring Harness to Inside Rearview Mirror Wiring Harness (UVN)

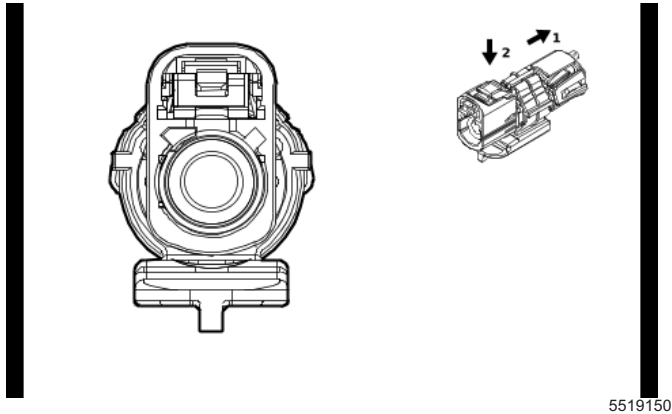

5519150

Connector Part Information

Harness Type: Body Wiring Harness COAX
 OEM Connector: 35187047
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way F Coax Type, Sealed(BK)

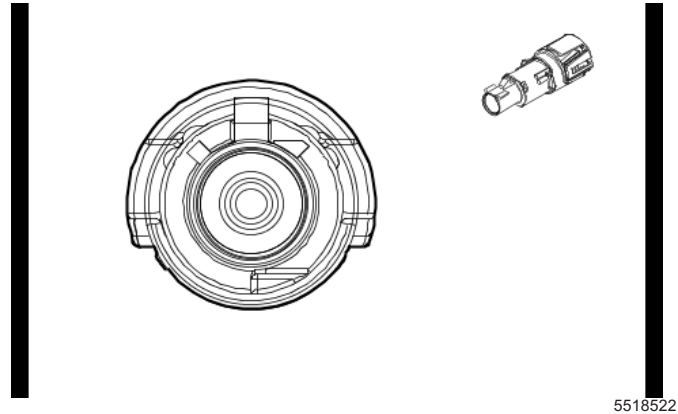

5518522

Connector Part Information

Harness Type: Inside Rearview Mirror Wiring Harness COAX
 OEM Connector: 33355538
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way M Coax Type(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

X309A Body Wiring Harness to Inside Rearview Mirror Wiring Harness (UVN)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
—	—	Coax Cable	—	I	—	Cargo Bed Rear Vision Camera Co-axial Video Signal	—	—	Coax Cable	—	I	—

X324 Body Wiring Harness to Body Rear Wiring Harness Extension Harness

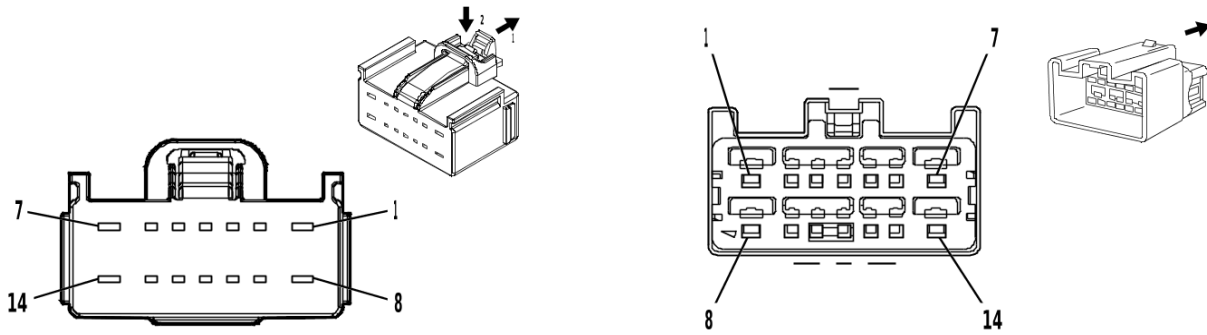

4934172

1283905

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 35105595
 Service Connector: 13513604
 Description: 14-Way F 1.5, 2.8 YESC Series(BK)

Connector Part Information

Harness Type: Body Rear Wiring Harness Extension Harness
 OEM Connector: 10846900
 Service Connector: Service by Harness - See Part Catalog
 Description: 14-Way M 1.5, 2.8 YESC Series(L-GY)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	13575850	J-35616-2A (GY)	J-38125-557
II	84962855	J-35616-4A (PU)	J-38125-11A
III	Not required	J-35616-3 (GY)	No Tool Required
IV	Not required	J-35616-5 (PU)	No Tool Required

X324 Body Wiring Harness to Body Rear Wiring Harness Extension Harness


Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.75	BK	10117	II	—	AC Outlet Phase A Control	1	0.75	BK	10117	IV	—
2	0.5	VT / RD	4049	I	—	AC Power Outlet Sensor High Reference	2	0.5	VT / RD	4049	III	—
3	0.35	VT / WH	239	I	—	Run/Crank Ignition 1 Voltage	3	0.35	VT / WH	239	III	—
4	0.5	WH / GN	4628	I	—	DC/AC Inverter Relay Control	4	0.5	WH / GN	4628	III	—
5	0.5	BU / BN	6807	I	—	DC/AC Inverter Control	5	0.5	BU / BN	6807	III	—
6	—	—	—	—	—	Not Occupied	6	—	—	—	—	—
7	0.75	BK / WH	10120	II	—	AC Outlet 2 Phase A Control	7	0.75	BK / WH	10120	IV	—
8	0.75	RD	10118	II	—	AC Outlet Phase B Control	8	0.75	RD	10118	IV	—

7-670 Electrical Component and Inline Harness Connector End Views


X324 Body Wiring Harness to Body Rear Wiring Harness Extension Harness (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
9	0.35	Bare	10116	I	—	AC Outlet Low Reference	9	0.35	Bare	10116	III	—
10	0.35	GN / BU	6133	I	—	Body Control Module LIN Bus 2	10	0.5	GN / BU	6133	III	—
11	—	—	—	—	—	Not Occupied	11	—	—	—	—	—
12	0.5	GN / BN	2266	I	—	DC/AC Inverter Control 2	12	0.5	GN / BN	2266	III	—
13	0.5	Bare	10119	I	—	AC Outlet 2 Low Reference	13	0.35	Bare	10119	III	—
14	0.75	RD / WH	10121	II	—	AC Outlet 2 Phase B Control	14	0.75	RD / WH	10121	IV	—

X331 Front Seat Wiring Harness - Driver to Body Wiring Harness

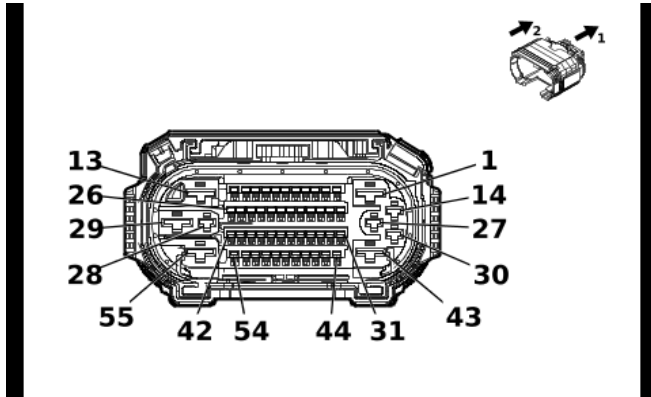

5823852

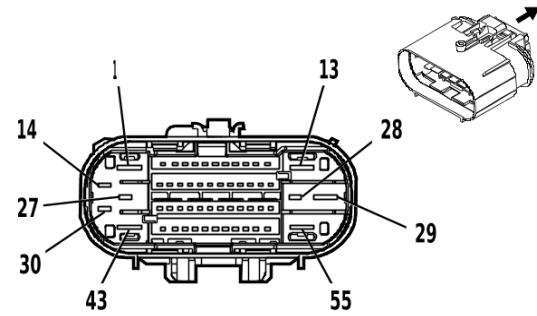

4993301

Connector Part Information

Harness Type: Front Seat Wiring Harness - Driver
 OEM Connector: 35572204
 Service Connector: Service by Harness - See Part Catalog
 Description: 55-Way F 1.2 OCS, 2.8, 6.3 CTS Series, Sealed(BK)

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 35205173
 Service Connector: 84727364
 Description: 55-Way M 1.2 OCS, 2.8, 6.3 CTS Series, Sealed(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required
II	Not required	J-35616-42 (RD)	No Tool Required
III	84847992	J-35616-32 (OG)	J-38125-36
IV	84867140	J-35616-13 (BU)	J-38125-215A
V	84867141	J-35616-13 (BU)	J-38125-215A

X331 Front Seat Wiring Harness - Driver to Body Wiring Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	2.5	BK	1550	II	—	Ground	1	2.5	BK	1550	III	—
2	—	—	—	—	—	Cavity Seal	2	1	BK	9003	V	—
3	—	—	—	—	—	Not Occupied	3	—	—	—	—	—
4	0.5 0.75	RD / BN RD / BN	2240 2240	I I	A45 - A45	Battery Positive Voltage Battery Positive Voltage	4	0.5	RD / BN	2240	IV	—
5	0.35	GN / WH	7530	I	—	Driver Seat Adjuster Memory Module LIN Bus 1	5	—	—	—	—	—
6	—	—	—	—	—	Not Occupied	6	—	—	—	—	—
7	0.35	WH	615	I	—	Seat Memory Switch Signal 1	7	0.35	WH	615	IV	—
8	0.35	BU / GN	614	I	—	Seat Memory Switch Set Signal	8	0.35	BU / GN	614	IV	—

7-672 Electrical Component and Inline Harness Connector End Views


X331 Front Seat Wiring Harness - Driver to Body Wiring Harness (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
9 - 11	—	—	—	—	—	Not Occupied	9 - 11	—	—	—	—	—
12	—	—	—	—	—	Cavity Seal	12	1	BK	9003	V	—
13 - 14	—	—	—	—	—	Not Occupied	13 - 14	—	—	—	—	—
15	0.75	BN / VT	2077	I	—	Driver Seat Heating Element Control	15	0.75	BN / VT	2077	IV	—
16	0.75	BN / BK	2078	I	—	Driver Seat Heating Element Low Reference	16	0.75	BN / BK	2078	IV	—
17	0.5	YE / GY	2079	I	—	Driver Seat Heating Temperature Sensor Signal	17	0.5	YE / GY	2079	IV	—
18	0.5	BK / YE	2080	I	—	Driver Heated Seat Thermistor Low Reference	18	0.5	BK / YE	2080	IV	—
19	0.5	BU	2425	I	—	Driver Seat Back Heating Temperature Sensor Signal	19	0.5	BU	2425	IV	—
20	0.75	BN	2432	I	—	Driver Seat Back Heating Element Control	20	0.75	BN	2432	IV	—
21 - 28	—	—	—	—	—	Not Occupied	21 - 28	—	—	—	—	—
29	2.5	RD / YE	5040	II	—	Battery Positive Voltage	29	2.5	RD / YE	5040	III	—
30	—	—	—	—	—	Not Occupied	30	—	—	—	—	—
31	0.5	OG / GY	2652	I	—	Driver Seat Belt Sensor Signal	31	0.35	OG / BN	238	IV	—
32	0.5	BK / OG	1363	I	—	Driver Seat Belt Switch Low Reference	32	0.5	BK / OG	1363	IV	—
33	—	—	—	—	—	Not Occupied	33	—	—	—	—	—
34	0.5	BK / OG	4963	II	—	Driver Seat Back Air Bag Low Control	34	0.5	BK / OG	4963	IV	—
35	0.5	OG / BU	4962	II	—	Driver Seat Back Air Bag High Control	35	0.5	OG / BU	4962	IV	—
36 - 40	—	—	—	—	—	Not Occupied	36 - 40	—	—	—	—	—
41	0.35	BU / VT	4101	I	—	AUTOSAR CAN Bus [+] 4 Serial Data	41	0.5	BU / VT	4101	IV	—


X331 Front Seat Wiring Harness - Driver to Body Wiring Harness (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
42	0.35	WH	4100	I	—	AUTOSAR CAN Bus [-] 4 Serial Data	42	0.5	WH	4100	IV	—
43	—	—	—	—	—	Not Occupied	43	—	—	—	—	—
44	—	—	—	—	—	Cavity Seal	44	1	BK	9003	V	—
45 - 49	—	—	—	—	—	Not Occupied	45 - 49	—	—	—	—	—
50	0.35	BU / VT	4101	I	—	AUTOSAR CAN Bus [+] 4 Serial Data	50	0.5	BU / VT	4101	IV	—
51	0.35	WH	4100	I	—	AUTOSAR CAN Bus [-] 4 Serial Data	51	0.5	WH	4100	IV	—
52	0.5	GN / VT	5906	I	—	Driver Seat Blower Motor Control 1	52	0.5	GN / VT	5906	IV	—
53	0.75	VT / WH	1139	I	—	Run/Crank Ignition 1 Voltage	53	0.75	VT / WH	1139	IV	—
54	—	—	—	—	—	Cavity Seal	54	1	BK	9003	V	—
55	—	—	—	—	—	Not Occupied	55	—	—	—	—	—

X336 Front Seat Wiring Harness - Passenger to Body Wiring Harness

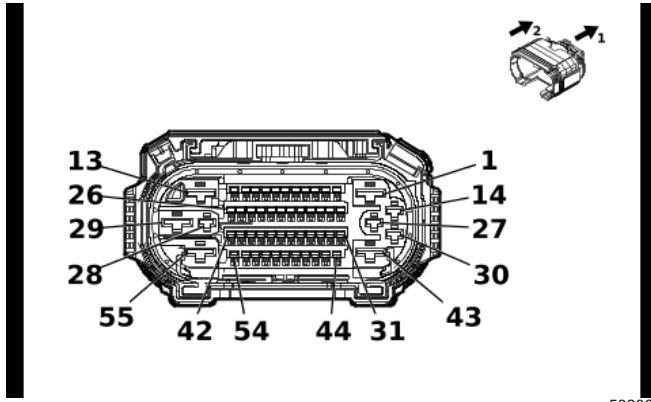

5823852

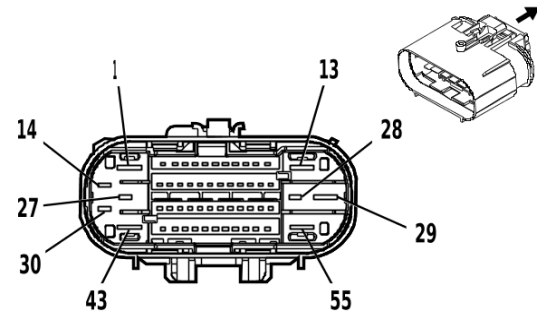

4993301

Connector Part Information

Harness Type: Front Seat Wiring Harness - Passenger
 OEM Connector: 35572205
 Service Connector: Service by Harness - See Part Catalog
 Description: 55-Way F 1.2 OCS, 2.8, 6.3 CTS Series, Sealed(BK)

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 35205173
 Service Connector: 84727364
 Description: 55-Way M 1.2 OCS, 2.8, 6.3 CTS Series, Sealed(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required
II	Not required	J-35616-42 (RD)	No Tool Required
III	Not required	J-35616-43 (RD)	No Tool Required
IV	84847992	J-35616-32 (OG)	J-38125-36
V	84867140	J-35616-13 (BU)	J-38125-215A
VI	84867141	J-35616-13 (BU)	J-38125-215A

X336 Front Seat Wiring Harness - Passenger to Body Wiring Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	2.5 0.75	BK BK	1350 1350	II III	(A7K/ AVU/ KA1) - (A7K/ AVU/ KA1)	Ground Ground	1	2.5	BK	1350	IV	—
2	—	—	—	—	—	Cavity Seal	2	1	BK	9003	VI	—
3	0.75	RD / GN	6140	I	—	Battery Positive Voltage	3	0.75	RD / GN	6140	V	—
4	0.75 0.5	RD / BN RD / BN	2240 2240	I I	A7K- AVU AVU- AHH- AKE	Battery Positive Voltage Battery Positive Voltage	4	0.5	RD / BN	2240	V	—
5	0.75	RD / BN	6640	I	—	Battery Positive Voltage	5	0.75	RD / BN	6640	V	—
6	—	—	—	—	—	Not Occupied	6	—	—	—	—	—
7	0.5	BU	4987	I	—	AUTOSAR CAN Bus [+] 1 Serial Data	7	0.5	BU	4987	V	—

X336 Front Seat Wiring Harness - Passenger to Body Wiring Harness (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
8	0.5	WH	4986	I	—	AUTOSAR CAN Bus [-] 1 Serial Data	8	0.5	WH	4986	V	—
9-11	—	—	—	—	—	Not Occupied	9-11	—	—	—	—	—
12	—	—	—	—	—	Cavity Seal	12	1	BK	9003	VI	—
13-14	—	—	—	—	—	Not Occupied	13-14	—	—	—	—	—
15	0.75	BN / VT	2077	I	—	Driver Seat Heating Element Control	15	0.75	BN / VT	2077	V	—
16	0.75	BN / BK	2078	I	—	Driver Seat Heating Element Low Reference	16	0.75	BN / BK	2078	V	—
17	0.5	YE / GY	2079	I	—	Driver Seat Heating Temperature Sensor Signal	17	0.5	YE / GY	2079	V	—
18	0.5	BK / YE	2080	I	—	Driver Heated Seat Thermistor Low Reference	18	0.5	BK / YE	2080	V	—
19	0.5	BU	2425	I	—	Driver Seat Back Heating Temperature Sensor Signal	19	0.5	BU	2425	V	—
20	0.75	BN	2432	I	—	Driver Seat Back Heating Element Control	20	0.75	BN	2432	V	—
21	0.5	GN / VT	2857	I	—	Body Control Module LIN Bus 11	21	0.35	GN / VT	2857	V	—
22	—	—	—	—	—	Not Occupied	22	—	—	—	—	—
23	0.5	RD / GN	4440	I	—	Battery Positive Voltage	23	0.5	RD / GN	4440	V	—
24	0.5 0.5	GY / OG GY / OG	3946 3746	I I	AL0 - AL0	Passenger Automatic Locking Retractor Switch Low Reference Camshaft Exhaust Lobe Axial Position Signal 1	24	0.35	GY / OG	3946	V	—

7-676 Electrical Component and Inline Harness Connector End Views


X336 Front Seat Wiring Harness - Passenger to Body Wiring Harness (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
25	0.5	OG / BN	3947	I	AL0 - AL0	Passenger Automatic Locking Retractor Switch Signal	25	0.35	OG / BN	3947	V	—
	0.5	OG / BN	3747	I								
26	0.5	BK / WH	1251	I	—	Signal Ground	26	0.5	BK / WH	1251	V	—
27 - 28	—	—	—	—	—	Not Occupied	27 - 28	—	—	—	—	—
29	2.5	RD / YE	7440	II	—	Battery Positive Voltage	29	2.5	RD / YE	7440	IV	—
30	—	—	—	—	—	Not Occupied	30	—	—	—	—	—
31	0.5	OG / VT	1362	I	—	Passenger Seat Belt Switch Signal	31	0.35	OG / VT	1362	V	—
32	0.5	BK / OG	1363	I	—	Driver Seat Belt Switch Low Reference	32	0.5	BK / OG	1363	V	—
33	—	—	—	—	—	Not Occupied	33	—	—	—	—	—
34	0.5	BU / OG	4957	I	—	Passenger Seat Back Air Bag Low Control	34	0.5	BU / OG	4957	V	—
35	0.5	OG / GY	4956	I	—	Passenger Seat Back Air Bag High Control	35	0.5	OG / GY	4956	V	—
36	0.5	GN / VT	5906	I	—	Driver Seat Blower Motor Control 1	36	0.5	GN / VT	5906	V	—
37	0.75	VT / WH	1139	I	—	Run/Crank Ignition 1 Voltage	37	0.75	VT / WH	1139	V	—
38 - 40	—	—	—	—	—	Not Occupied	38 - 40	—	—	—	—	—
41	0.35	BU / VT	4101	I	—	AUTOSAR CAN Bus [+] 4 Serial Data	41	0.5	BU / VT	4101	V	—
42	0.35	WH	4100	I	—	AUTOSAR CAN Bus [-] 4 Serial Data	42	0.5	WH	4100	V	—
43	—	—	—	—	—	Not Occupied	43	—	—	—	—	—
44	—	—	—	—	—	Cavity Seal	44	1	BK	9003	VI	—
45 - 49	—	—	—	—	—	Not Occupied	45 - 49	—	—	—	—	—

X336 Front Seat Wiring Harness - Passenger to Body Wiring Harness (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
50	0.35	BU / VT	4101	I	—	AUTOSAR CAN Bus [+] 4 Serial Data	50	0.5	BU / VT	4101	V	—
51	0.35	WH	4100	I	—	AUTOSAR CAN Bus [-] 4 Serial Data	51	0.5	WH	4100	V	—
52	0.5	BU	4987	I	—	AUTOSAR CAN Bus [+] 1 Serial Data	52	0.5	BU	4987	V	—
53	0.5	WH	4986	I	—	AUTOSAR CAN Bus [-] 1 Serial Data	53	0.5	WH	4986	V	—
54	—	—	—	—	—	Cavity Seal	54	1	BK	9003	VI	—
55	—	—	—	—	—	Not Occupied	55	—	—	—	—	—

X340 Body Wiring Harness to Rear Seat Heater Control Wiring Harness (KA6)

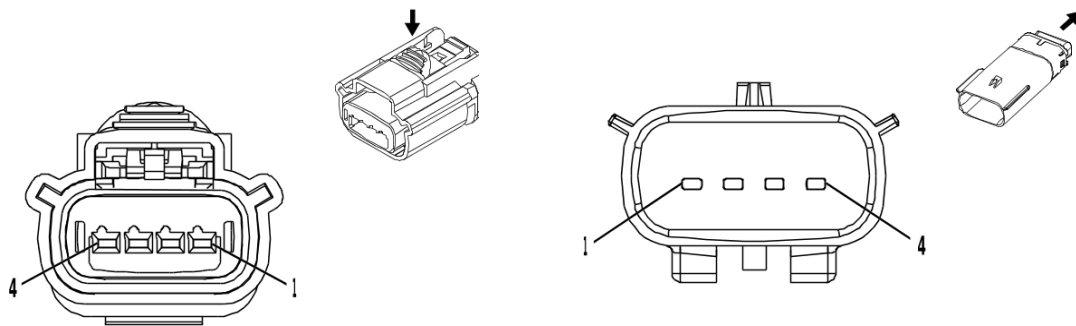

4455251

2917338

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 15514524
 Service Connector: 19355605
 Description: 4-Way F 1.5 OCS Series, Sealed(BK)

Connector Part Information

Harness Type: Rear Seat Heater Control Wiring Harness
 OEM Connector: 33481-4401
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way M 1.5 Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required
II	Not required	J-35616-3 (GY)	No Tool Required


X340 Body Wiring Harness to Rear Seat Heater Control Wiring Harness (KA6)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.75	RD / WH	5740	I	—	Battery Positive Voltage	1	0.75	RD / YE	240	II	—
2	0.75	RD / BU	6740	I	—	Battery Positive Voltage	2	0.75	RD / VT	340	II	—
3	0.35	GN / VT	2857	I	—	Body Control Module LIN Bus 11	3	0.5	GN / BU	6133	II	—
4	0.75	BK	1550	I	—	Ground	4	1	BK	1150	II	—

X360 Chassis Wiring Harness to Fuel Pump Power Control Module Harness

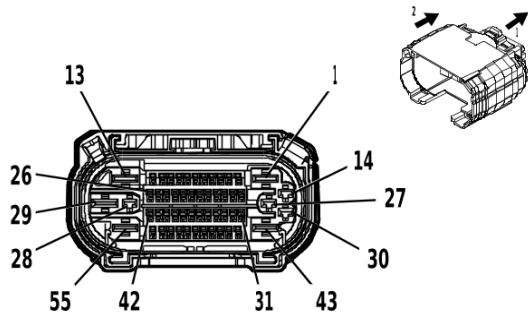

4992168

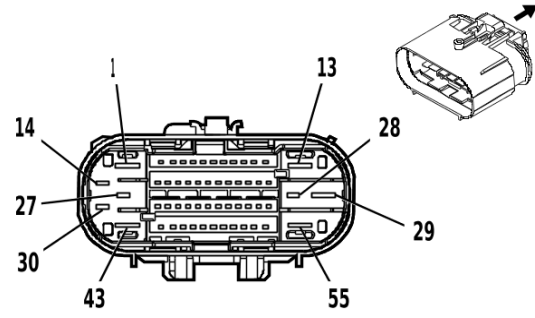

4993301

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 35016652
 Service Connector: 19371185
 Description: 55-Way F 1.2 OCS, 2.8, 6.3 CTS Series, Sealed(BK)

Connector Part Information

Harness Type: Fuel Pump Power Control Module Harness
 OEM Connector: 35205173
 Service Connector: Service by Harness - See Part Catalog
 Description: 55-Way M 1.2 OCS, 2.8, 6.3 CTS Series, Sealed(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19332901	J-35616-35 (VT)	J-38125-212
II	19370818	J-35616-12 (BU)	J-38125-215A
III	84634921	J-35616-42 (RD)	J-38125-212
IV	Not required	J-35616-17 (L-GN)	No Tool Required
V	Not required	J-35616-32 (OR)	No Tool Required
VI	Not required	J-35616-5 (PU)	No Tool Required

X360 Chassis Wiring Harness to Fuel Pump Power Control Module Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	2.5	GY	120	III	—	Fuel Pump Control	1	2.5	GY	120	V	—
2	0.75	BU / GN	11437	II	—	Secondary Fuel Pump Disable Signal	2	0.75	BU / GN	11437	IV	—
3	—	—	—	—	—	Not Occupied	3	—	—	—	—	—
4	0.5	BN / WH	7073	II	—	Fuel Temperature Sensor 1 Low Reference	4	0.5	BN / WH	7073	IV	—
5	—	—	—	—	—	Not Occupied	5	—	—	—	—	—
6	0.5	VT / WH	639	II	—	Run/Crank Ignition 1 Voltage	6	0.5	VT / WH	639	IV	—
7	—	—	—	—	—	Not Occupied	7	—	—	—	—	—

7-680 Electrical Component and Inline Harness Connector End Views


X360 Chassis Wiring Harness to Fuel Pump Power Control Module Harness (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
8	0.5	BN / GY	7072	II	—	Fuel Temperature Sensor 1 Signal	8	0.5	BN / GY	7072	IV	—
9	—	—	—	—	—	Not Occupied	9	—	—	—	—	—
10	0.5	GN / GY	465	II	—	Fuel Pump Primary Relay Control	10	0.5	GN / GY	465	IV	—
11	—	—	—	—	—	Not Occupied	11	—	—	—	—	—
12	0.75	BU / GN	1936	II	—	Primary Fuel Level Sensor Signal	12	0.75	BU / GN	1936	IV	—
13	1	BK / GN	1580	III	—	Fuel Pump Low Reference	13	1	BK / GN	1580	V	—
14	2.5	RD / VT	1940	I	—	Battery Positive Voltage	14	2.5	RD / VT	1940	VI	—
15	—	—	—	—	—	Not Occupied	15	—	—	—	—	—
16	0.5	BU / WH	1937	II	—	Secondary Fuel Level Sensor Signal	16	0.5	BU / WH	1937	IV	—
17	—	—	—	—	—	Not Occupied	17	—	—	—	—	—
18	0.5	BK / GN	6281	II	—	Fuel Level Sensor Low Reference	18	0.5	BK / GN	6281	IV	—
19	—	—	—	—	—	Not Occupied	19	—	—	—	—	—
20	0.5	BK / BU	6282	II	—	Fuel Level Sensor 2 Low Reference	20	0.5	BK / BU	6282	IV	—
21	—	—	—	—	—	Not Occupied	21	—	—	—	—	—
22	0.5	BU / YE	6861	II	—	Water In Fuel Sensor Signal	22	0.5	BU / YE	6861	IV	—
23	—	—	—	—	—	Not Occupied	23	—	—	—	—	—
24	0.5	BK / BU	6863	II	—	Water In Fuel Sensor Low Reference	24	0.5	BK / BU	6863	IV	—
25	—	—	—	—	—	Not Occupied	25	—	—	—	—	—
26	0.5	BN / RD	7445	II	—	Fuel Line Pressure Sensor 5V Reference	26	0.5	BN / RD	7445	IV	—
27	1	BU / GN	2120	I	—	Secondary Fuel Pump Control	27	1	BU / GN	2120	VI	—
28	2.5	YE / GY	4137	I	—	Fuel Pump Supply Voltage Phase 2	28	2.5	YE / GY	4137	VI	—

X360 Chassis Wiring Harness to Fuel Pump Power Control Module Harness (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
29	0.75	VT / GN	4320	III	—	Powertrain Sensor Bus Enable	29	0.75	VT / GN	4320	V	—
30	2.5	WH / BN	4138	I	—	Fuel Pump Supply Voltage Phase 3	30	2.5	WH / BN	4138	VI	—
31 - 42	—	—	—	—	—	Not Occupied	31 - 42	—	—	—	—	—
43	2.5	BK / WH	1951	III	—	Signal Ground	43	2.5	BK / WH	1951	V	—
44	0.75	BU / WH	7446	II	—	Fuel Pressure Sensor Signal	44	0.75	BU / WH	7446	IV	—
45	—	—	—	—	—	Not Occupied	45	—	—	—	—	—
46	0.5	BK / YE	7447	II	—	Fuel Pressure Sensor Low Reference	46	0.5	BK / YE	7447	IV	—
47 - 49	—	—	—	—	—	Not Occupied	47 - 49	—	—	—	—	—
50	0.5	WH	4055	II	—	Private Serial Data Powertrain CAN Bus [+] Serial Data	50	0.5	WH	4055	IV	—
51	—	—	—	—	—	Not Occupied	51	—	—	—	—	—
52	0.5	BU / GY	4054	II	—	Private Serial Data Powertrain CAN Bus [-] Serial Data	52	0.5	BU / GY	4054	IV	—
53	—	—	—	—	—	Not Occupied	53	—	—	—	—	—
54	0.75	WH	7444	II	—	Fuel Pump Assembly Shield Ground	54	0.75	WH	7444	IV	—
55	—	—	—	—	—	Not Occupied	55	—	—	—	—	—


X370A Dome Lamp Wiring Harness to Instrument Panel Wiring Harness

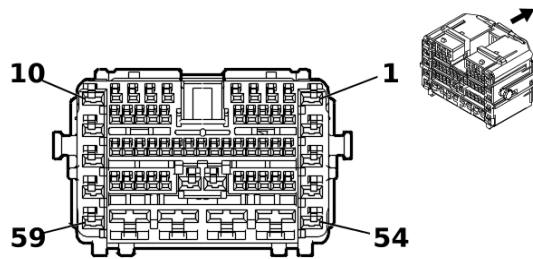

5278767

Connector Part Information

Harness Type: Dome Lamp Wiring Harness
 OEM Connector: 33387960
 Service Connector: 13528126
 Description: 59-Way F 1.2 MCON, 2.8, 6.3 YESC Series(BK)

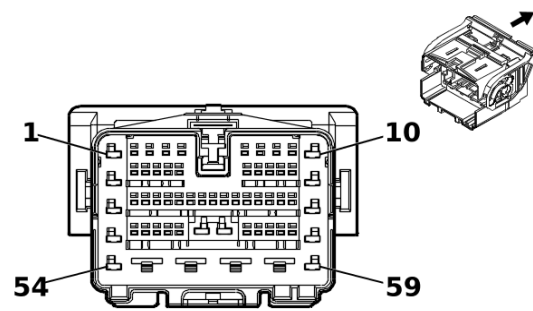

5278741

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 33387961
 Service Connector: 84766292
 Description: 59-Way M 1.2 MCON, 2.8, 6.3 YESC Series(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19331733	J-35616-12 (BU)	J-38125-215A
II	85544080	J-35616-4A (PU)	J-38125-11A
III	13578908	J-35616-5 (PU)	J-38125-11A
IV	19330704	J-35616-13 (BU)	J-38125-215A

X370A Dome Lamp Wiring Harness to Instrument Panel Wiring Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.5	RD / YE	240	II	—	Battery Positive Voltage	1	0.5	RD / YE	240	III	—
2	0.5	VT / BK	339	I	—	Run/Crank Ignition 1 Voltage	2	0.5	VT / BK	339	IV	—
3	—	—	—	—	—	Not Occupied	3	—	—	—	—	—
4	0.35	GN / BN	3005	I	—	Active Noise Cancellation Microphone 1 Signal	4	0.35	GN / BN	3005	IV	—
5	0.35	GN / BK	3008	I	—	Active Noise Cancellation Microphone 1 Feedback Signal	5	0.35	GN / BK	3008	IV	—
6-9	—	—	—	—	—	Not Occupied	6-9	—	—	—	—	—
10	0.35	WH	4978	II	—	AUTOSAR CAN Bus [-] 2 Serial Data	10	0.35	WH	4978	III	—
11	0.35	BU / YE	4979	II	—	AUTOSAR CAN Bus [+] 2 Serial Data	11	0.35	BU / YE	4979	III	—

X370A Dome Lamp Wiring Harness to Instrument Panel Wiring Harness (cont'd)


Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
12	0.35	WH	4978	I	—	AUTOSAR CAN Bus [-] 2 Serial Data	12	0.5	WH	4978	IV	—
13	0.35	BU / YE	4979	I	—	AUTOSAR CAN Bus [+] 2 Serial Data	13	0.5	BU / YE	4979	IV	—
14	0.35	BK / BN	654	I	—	Cellular Telephone Microphone Low Reference	14	0.35	BK / BN	654	IV	—
15	0.35	BU	655	I	—	Cellular Telephone Microphone Signal	15	0.35	BU	655	IV	—
16	0.35	VT / YE	7043	I	—	Microphone [+] Signal	16	0.35	VT / YE	7043	IV	—
17	0.35	BU / BK	7044	I	—	Microphone [-] Signal	17	0.35	BU / BK	7044	IV	—
18	0.5	BU / BK	1053	I	—	Center High Mounted Stop Lamp Control 3	18	0.5	BU / BK	1053	IV	—
19	0.5	WH / VT	1430	I	—	Exterior Courtesy Lamp Control	19	0.5	WH / VT	1430	IV	—
20	0.35	YE / WH	1690	I	—	Mirror Dimming Signal	20	0.35	YE / WH	1690	IV	—
21	0.35	BK / YE	1691	I	—	Automatic Day/Night Mirror Low Reference	21	0.35	BK / YE	1691	IV	—
22	0.35	GN / WH	24	II	—	Backup Lamp Control	22	0.35	GN / WH	24	III	—
23	0.35	GN / WH	2514	II	—	Telematics Switch Signal	23	0.35	GN / WH	2514	III	—
24	0.35	GN / BK	2515	I	—	Telematics Switch Supply Voltage	24	0.35	GN / BK	2515	IV	—
25	0.35	YE / VT	2516	I	—	Telematics Switch Green LED Indicator Control	25	0.35	YE / VT	2516	IV	—
26	0.35	BN / WH	2517	I	—	Telematics Switch Red LED Indicator Control	26	0.35	BN / WH	2517	IV	—
27	0.5	GN / WH	2854	I	—	Body Control Module LIN Bus 8	27	0.5	GN / WH	2854	IV	—
28	0.35	GN / WH	4115	I	—	Body Control Module LIN Bus 5	28	0.35	GN / WH	4115	IV	—
29	0.35	YE / VT	6191	I	—	Power Rear Window Switch Open Signal	29	0.5	YE / VT	6191	IV	—
30	0.35	WH	6192	I	—	Sliding Rear Window Switch Close Signal	30	0.5	WH	6192	IV	—

7-684 Electrical Component and Inline Harness Connector End Views


X370A Dome Lamp Wiring Harness to Instrument Panel Wiring Harness (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
31	0.35	YE	6817	I	—	LED Back-light Dimming Control 1	31	0.35	YE	6817	IV	—
32	0.5	VT	801	I	—	Retained Accessory Power Control	32	0.5	VT	801	IV	—
33	0.5	BN / YE	820	I	—	Center High Mounted Stop Lamp Supply Voltage	33	0.5	BN / YE	820	IV	—
34	0.35	RD / WH	1340	I	—	Battery Positive Voltage	34	0.35	RD / WH	1340	IV	—
35	—	—	—	—	—	Not Occupied	35	—	—	—	—	—
36	0.35	BK / WH	851	I	—	Signal Ground	36	0.5	BK / WH	851	IV	—
37 - 38	—	—	—	—	—	Not Occupied	37 - 38	—	—	—	—	—
39	2.5	VT / BU	10735	II	—	Upfitter Accessory 5 Supply Voltage	39	2.5	VT / BU	10735	III	—
40	2.5	BK	1050	II	—	Ground	40	2.5	BK	1050	III	—
41 - 52	—	—	—	—	—	Not Occupied	41 - 52	—	—	—	—	—
53	2.5	RD / BU	4540	II	—	Battery Positive Voltage	53	2.5	RD / BU	4540	III	—
54 - 59	—	—	—	—	—	Not Occupied	54 - 59	—	—	—	—	—

X370B Dome Lamp Wiring Harness to Instrument Panel Wiring Harness

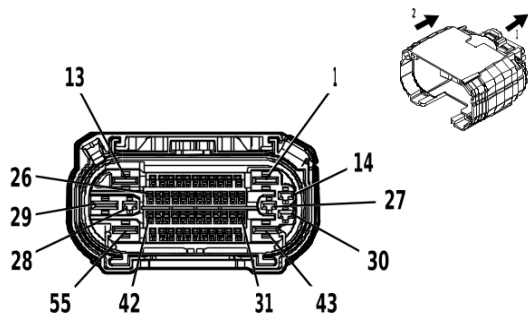

4992168

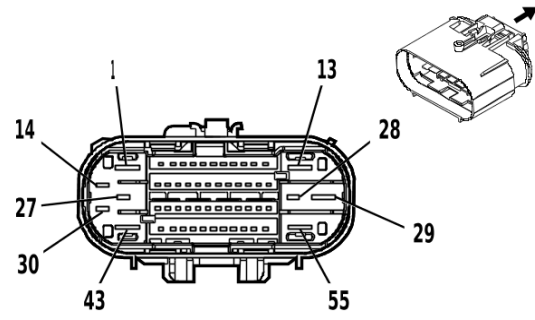

4993301

Connector Part Information

Harness Type: Dome Lamp Wiring Harness
 OEM Connector: 35016652
 Service Connector: 19371185
 Description: 55-Way F 1.2 OCS, 2.8, 6.3 CTS Series, Sealed(BK)

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 35205173
 Service Connector: 84727364
 Description: 55-Way M 1.2 OCS, 2.8, 6.3 CTS Series, Sealed(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19332901	J-35616-35 (VT)	J-38125-212
II	19370818	J-35616-12 (BU)	J-38125-215A
III	19371217	J-35616-12 (BU)	J-38125-215A
IV	84634921	J-35616-42 (RD)	J-38125-212
V	84847992	J-35616-32 (OG)	J-38125-36
VI	84867140	J-35616-13 (BU)	J-38125-215A
VII	84867141	J-35616-13 (BU)	J-38125-215A
VIII	84992391	J-35616-5 (PU)	J-38125-215A

X370B Dome Lamp Wiring Harness to Instrument Panel Wiring Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.5	RD / YE	240	IV	—	Battery Positive Voltage	1	0.5	RD / YE	240	V	—
2	1.5	BK	9003	III	—	Cavity Seal	2	1	BK	9000	VII	—
3	0.5	VT / BK	339	II	—	Run/Crank Ignition 1 Voltage	3	0.5	VT / BK	339	VI	—
4	0.35	WH	4978	II	—	AUTOSAR CAN Bus [-] 2 Serial Data	4	0.35	WH	4978	VI	—
5	0.35	BU / YE	4979	II	—	AUTOSAR CAN Bus [+] 2 Serial Data	5	0.35	BU / YE	4979	VI	—
6	0.35	BK / BN	654	II	—	Cellular Telephone Microphone Low Reference	6	0.35	BK / BN	654	VI	—
7	0.35	BU	655	II	—	Cellular Telephone Microphone Signal	7	0.35	BU	655	VI	—

7-686 Electrical Component and Inline Harness Connector End Views


X370B Dome Lamp Wiring Harness to Instrument Panel Wiring Harness (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
8	0.5	BU / BK	1053	II	—	Center High Mounted Stop Lamp Control 3	8	0.5	BU / BK	1053	VI	—
9	0.5	WH / VT	1430	II	—	Exterior Courtesy Lamp Control	9	0.5	WH / VT	1430	VI	—
10 - 11	—	—	—	—	—	Not Occupied	10 - 11	—	—	—	—	—
12	1.5	BK	9003	III	—	Cavity Seal	12	1	BK	9000	VII	—
13 - 14	—	—	—	—	—	Not Occupied	13 - 14	—	—	—	—	—
15	0.5	GN / WH	2854	II	—	Body Control Module LIN Bus 8	15	0.5	GN / WH	2854	VI	—
16	—	—	—	—	—	Not Occupied	16	—	—	—	—	—
17	0.5	BN / YE	820	II	—	Center High Mounted Stop Lamp Supply Voltage	17	0.5	BN / YE	820	VI	—
18 - 19	—	—	—	—	—	Not Occupied	18 - 19	—	—	—	—	—
20	0.35	YE / WH	1690	II	—	Mirror Dimming Signal	20	0.35	YE / WH	1690	VI	—
21	0.35	BK / YE	1691	II	—	Automatic Day/Night Mirror Low Reference	21	0.35	BK / YE	1691	VI	—
22	0.35	GN / WH	24	II	—	Backup Lamp Control	22	0.35	GN / WH	24	VI	—
23	0.35	GN / WH	2514	II	—	Telematics Switch Signal	23	0.35	GN / WH	2514	VI	—
24	0.35	GN / BK	2515	II	—	Telematics Switch Supply Voltage	24	0.35	GN / BK	2515	VI	—
25	0.35	YE / VT	2516	II	—	Telematics Switch Green LED Indicator Control	25	0.35	YE / VT	2516	VI	—
26	0.35	BN / WH	2517	II	—	Telematics Switch Red LED Indicator Control	26	0.35	BN / WH	2517	VI	—
27	2.5	BK	1050	I	—	Ground	27	2.5	BK	1050	VIII	—
28	2.5	VT / BU	10735	I	—	Upfitter Accessory 5 Supply Voltage	28	2.5	VT / BU	10735	VIII	—
29 - 35	—	—	—	—	—	Not Occupied	29 - 35	—	—	—	—	—
36	0.35	BK / WH	851	II	—	Signal Ground	36	0.5	BK / WH	851	VI	—


X370B Dome Lamp Wiring Harness to Instrument Panel Wiring Harness (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
37 - 43	—	—	—	—	—	Not Occupied	37 - 43	—	—	—	—	—
44	1.5	BK	9003	III	—	Cavity Seal	44	1	BK	9000	VII	—
45	—	—	—	—	—	Not Occupied	45	—	—	—	—	—
46	0.35	WH	4978	II	—	AUTOSAR CAN Bus [-] 2 Serial Data	46	0.35	WH	4978	VI	—
47	0.35	BU / YE	4979	II	—	AUTOSAR CAN Bus [+] 2 Serial Data	47	0.35	BU / YE	4979	VI	—
48 - 53	—	—	—	—	—	Not Occupied	48 - 53	—	—	—	—	—
54	1.5	BK	9003	III	—	Cavity Seal	54	1	BK	9000	VII	—
55	—	—	—	—	—	Not Occupied	55	—	—	—	—	—

X371A Inside Rearview Mirror Wiring Harness to Dome Lamp Wiring Harness

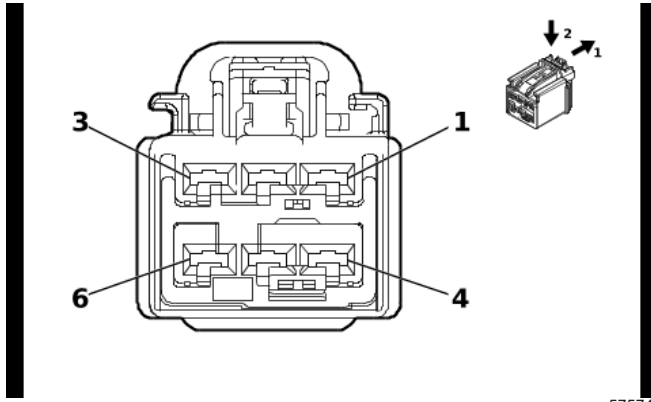

5757440

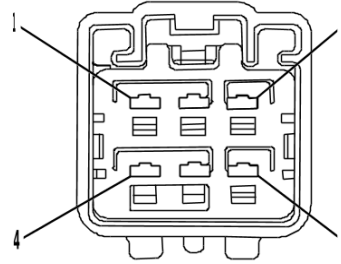

1849802

Connector Part Information

Harness Type: Inside Rearview Mirror Wiring Harness
 OEM Connector: 35360831
 Service Connector: Service by Harness - See Part Catalog
 Description: 6-Way F 2.8 YESC Series(GY)

Connector Part Information

Harness Type: Dome Lamp Wiring Harness
 OEM Connector: 10847012
 Service Connector: 84727361
 Description: 6-Way M Kaizen Series(L-GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-4A (PU)	No Tool Required
II	Not required	J-35616-5 (PU)	No Tool Required

X371A Inside Rearview Mirror Wiring Harness to Dome Lamp Wiring Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.5	WH / VT	1430	I	—	Exterior Courtesy Lamp Control	1	0.5	WH / VT	1430	II	—
2	0.5	BN / YE	820	I	—	Center High Mounted Stop Lamp Supply Voltage	2	0.5	BN / YE	820	II	—
3	0.5	BK	1050	I	—	Ground	3	1	BK	1050	II	—
4	2.5	BK	1050	I	—	Ground	4	2.5	BK	1050	II	—
5	2.5	VT / BU	10735	I	—	Upfitter Accessory 5 Supply Voltage	5	2.5	VT / BU	10735	II	—
6	—	—	—	—	—	Not Occupied	6	—	—	—	—	—

X371A_UVO Inside Rearview Mirror Wiring Harness to Dome Lamp Wiring Harness

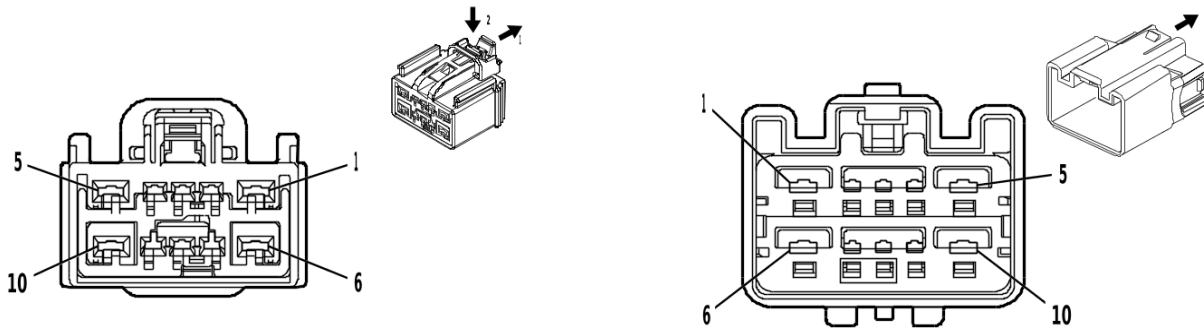

5020939

1851890

Connector Part Information

Harness Type: Inside Rearview Mirror Wiring Harness
 OEM Connector: 35061724
 Service Connector: Service by Harness - See Part Catalog
 Description: 10-Way F 1.5, 2.8 Kaizen Series(L-GY)

Connector Part Information

Harness Type: Dome Lamp Wiring Harness
 OEM Connector: 13506926
 Service Connector: 89047070
 Description: 10-Way M 1.5, 2.8 Kaizen Series(L-GY)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required
II	Not required	J-35616-4A (PU)	No Tool Required
III	13578907	J-35616-3 (GY)	J-38125-215A
IV	13578908	J-35616-5 (PU)	J-38125-11A

X371A_UVO Inside Rearview Mirror Wiring Harness to Dome Lamp Wiring Harness


Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	2.5	GN / BU	5989	II	—	Emergency Vehicle Lamp Relay Control	1	2.5	VT / BU	10735	IV	—
2	0.35	VT / WH	5065	I	—	Stop Lamp Relay Coil Control	2	0.5	BN / YE	820	III	—
3	0.35	BK	1050	I	—	Ground	3	1	BK	1050	III	—
4	0.35	WH / VT	1430	I	—	Exterior Courtesy Lamp Control	4	0.5	WH / VT	1430	III	—
5	2.5	BK	1050	II	—	Ground	5	2.5	BK	1050	IV	—
6	0.35	VT / GN	1739	II	—	Run/Crank Ignition 1 Voltage	6	0.35	VT / BK	339	IV	—
7	0.35	WH / BU	6973	I	—	Rearview Camera Signal [-]	7	0.35	WH / BU	6973	III	—
8	0.35	GY / YE	6972	I	—	Rearview Camera Signal [+]	8	0.35	GY / YE	6972	III	—
9	0.35	Bare	6974	I	—	Rearview Camera Low Reference	9	0.35	Bare	6974	III	—

7-690 Electrical Component and Inline Harness Connector End Views

**X371A_UVO Inside Rearview Mirror Wiring Harness to Dome Lamp Wiring Harness
(cont'd)**


Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
10	0.35	BK / WH	1851	II	—	Signal Ground	10	0.35	BK / WH	851	IV	—

X375 Sunroof Jumper Harness to Dome Lamp Wiring Harness

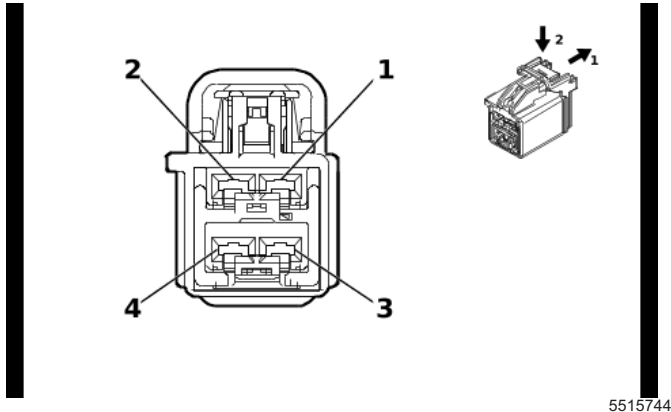

Connector Part Information

Harness Type: Right Side Marker Lamp Harness
 OEM Connector: 13524439
 Service Connector: 89046843
 Description: 4-Way F 2.8 YESC Series(GY)

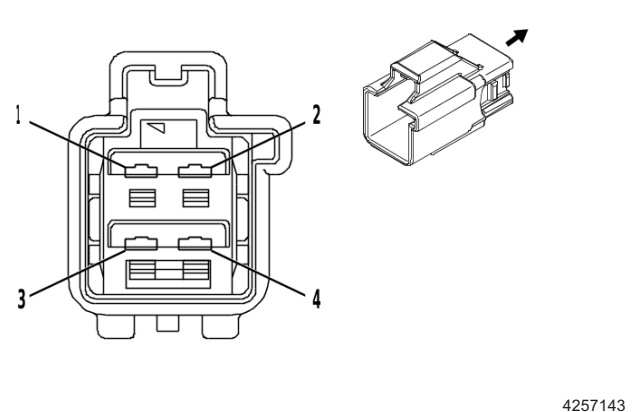

Connector Part Information

Harness Type: Dome Lamp Wiring Harness
 OEM Connector: 10847009
 Service Connector: 89046843
 Description: 4-Way M 2.8 YESC Series(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required
II	Not required	J-35616-5 (PU)	No Tool Required

X375 Sunroof Jumper Harness to Dome Lamp Wiring Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	2.5	BK	1050	I	—	Ground	1	2.5	BK	1050	II	—
2	0.5	GN / WH	2854	I	—	Body Control Module LIN Bus 8	2	0.5	GN / WH	2854	II	—
3	—	—	—	—	—	Not Occupied	3	—	—	—	—	—
4	2.5	RD / BU	4540	I	—	Battery Positive Voltage	4	2.5	RD / BU	4540	II	—

X382 Headlamp Automatic Control Ambient Light Sensor Wiring Harness to Dome Lamp Wiring Harness

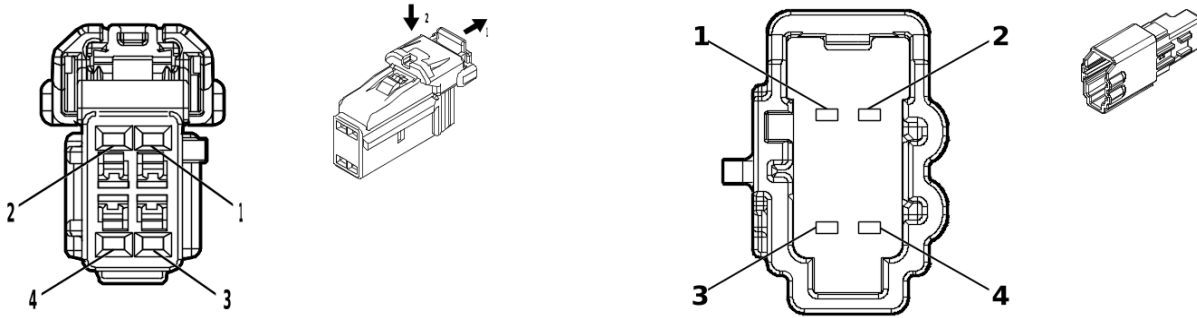

4872683

5360963

Connector Part Information

Harness Type: Headlamp Automatic Control Ambient Light Sensor Wiring Harness
 OEM Connector: Not Available
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way F

Connector Part Information

Harness Type: Dome Lamp Wiring Harness
 OEM Connector: 35264699
 Service Connector: 84847258
 Description: 4-Way M 1.2 MCON Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required
II	Not required	J-35616-13 (BU)	No Tool Required

X382 Headlamp Automatic Control Ambient Light Sensor Wiring Harness to Dome Lamp Wiring Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.35	RD / WH	1340	I	—	Battery Positive Voltage	1	0.35	RD / WH	1340	II	—
2	0.35	GN / WH	4115	I	—	Body Control Module LIN Bus 5	2	0.35	GN / WH	4115	II	—
3	0.35	BK	1050	I	—	Ground	3	0.35	BK	1050	II	—
4	—	—	—	—	—	Not Occupied	4	—	—	—	—	—

X401 Chassis Wiring Harness to Engine Wiring Harness (L8T)

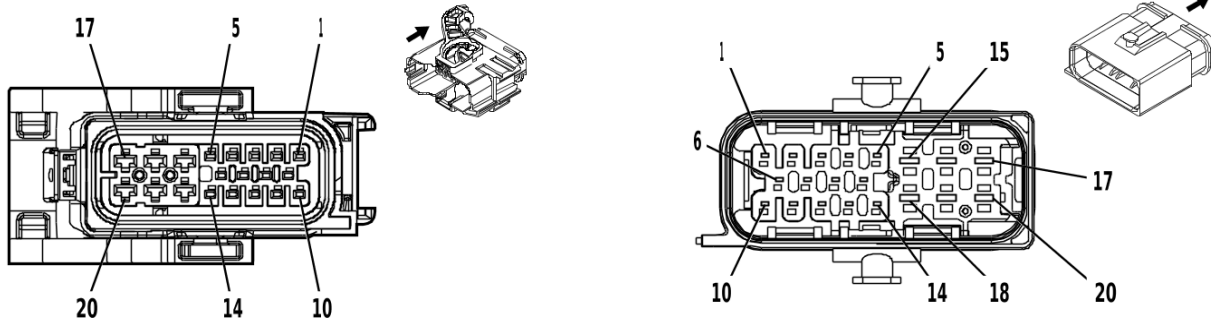

4994285

4500420

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 13974124
 Service Connector: 19371189
 Description: 20-Way F 1.2 MCON, 2.8 MCP Series, Sealed(BK)

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 33156041
 Service Connector: 19333031
 Description: 20-Way M 1.2, 2.8 MCP Series, Sealed(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19300446	J-35616-12 (BU)	J-38125-12A
II	19368624	J-35616-35 (VT)	J-38125-212
III	Not Available	J-35616-12 (BU)	J-38125-12A
IV	Pending	Pending	Pending
V	13575364	J-35616-5 (PU)	J-38125-36
VI	19356519	J-35616-13 (BU)	J-38125-215A

X401 Chassis Wiring Harness to Engine Wiring Harness (L8T)


Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.5	WH	4055	I	—	Private Serial Data Powertrain CAN Bus [+] Serial Data	1	0.5	WH	4055	VI	—
2	0.5	BU / GY	4054	I	—	Private Serial Data Powertrain CAN Bus [-] Serial Data	2	0.5	BU / GY	4054	VI	—
3	0.5	GN / GY	465	I	—	Fuel Pump Primary Relay Control	3	0.5	GN / GY	465	VI	—
4 - 5	—	—	—	—	—	Not Occupied	4 - 5	—	—	—	—	—
6	0.5	BU / GN	11437	I	—	Secondary Fuel Pump Disable Signal	6	0.5	BU / GN	11437	VI	—

7-694 Electrical Component and Inline Harness Connector End Views

X401 Chassis Wiring Harness to Engine Wiring Harness (L8T) (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
7	0.5	BK / GY	626	IV	—	Engine Control Vehicle Sensors Low Reference 1	7	0.5	BK / GY	626	VI	—
8	0.5	YE / GY	11029	IV	—	Canister Vapor Pressure Sensor Signal	8	0.5	YE / GY	11029	VI	—
9	1	WH / RD	480	III	—	Engine Control Vehicle Sensors 5 Volt Reference 1	9	0.5	WH / RD	480	VI	—
10 - 13	—	—	—	—	—	Not Occupied	10 - 13	—	—	—	—	—
14	0.75	VT / BU	5293	I	—	Powertrain Main Relay Fused Supply Voltage 4	14	0.75	VT / BU	5293	VI	—
15	0.5	VT / GN	4320	II	—	Powertrain Sensor Bus Enable	15	0.5	VT / GN	4320	V	—
16	0.5	BU / BK	4977	II	—	AUTOSAR CAN Bus [+] 3 Serial Data	16	0.5	BU / BK	4977	V	—
17	0.5	WH	4976	II	—	AUTOSAR CAN Bus [-] 3 Serial Data	17	0.5	WH	4976	V	—
18	—	—	—	—	—	Not Occupied	18	—	—	—	—	—
19	0.5	BU / YE	4979	II	—	AUTOSAR CAN Bus [+] 2 Serial Data	19	0.5	BU / YE	4979	V	—
20	0.5	WH	4978	II	—	AUTOSAR CAN Bus [-] 2 Serial Data	20	0.5	WH	4978	V	—

X401 Chassis Wiring Harness to Engine Wiring Harness Chassis (L5P)

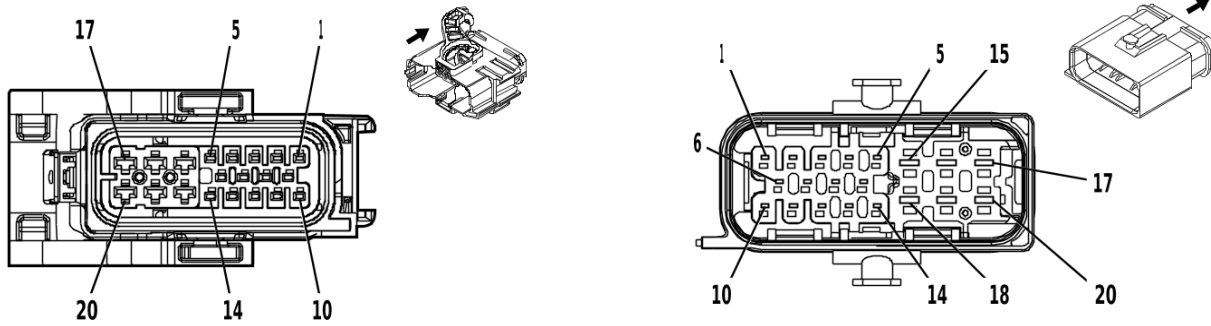

4994285

4500420

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 13974124
 Service Connector: 19371189
 Description: 20-Way F 1.2 MCON, 2.8 MCP Series, Sealed(BK)

Connector Part Information

Harness Type: Engine Wiring Harness Chassis
 OEM Connector: 33156041
 Service Connector: Service by Harness - See Part Catalog
 Description: 20-Way M 1.2, 2.8 MCP Series, Sealed(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19300446	J-35616-12 (BU)	J-38125-12A
II	19368624	J-35616-35 (VT)	J-38125-212
III	Not Available	J-35616-12 (BU)	J-38125-12A
IV	Not required	J-35616-17 (L-GN)	No Tool Required
V	Not required	J-35616-5 (PU)	No Tool Required

X401 Chassis Wiring Harness to Engine Wiring Harness Chassis (L5P)



Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.5	WH	4055	I	—	Private Serial Data Powertrain CAN Bus [+] Serial Data	1	0.5	WH	4055	IV	—
2	0.5	BU / GY	4054	I	—	Private Serial Data Powertrain CAN Bus [-] Serial Data	2	0.5	BU / GY	4054	IV	—
3	0.5	GN / GY	465	I	—	Fuel Pump Primary Relay Control	3	0.5	GN / GY	465	IV	—
4	1	BK / WH	1151	III	—	Signal Ground	4	0.75	BK / WH	1151	IV	—
5	0.5	BU	10290	I	—	Exhaust Gas Temperature Sensor SENT 2 Signal	5	0.5	BU	10290	IV	—
6	0.5	BU / GN	11437	I	—	Secondary Fuel Pump Disable Signal	6	0.5	BU / GN	11437	IV	—

7-696 Electrical Component and Inline Harness Connector End Views

X401 Chassis Wiring Harness to Engine Wiring Harness Chassis (L5P) (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
7	1	WH / RD	480	III	—	Engine Control Vehicle Sensors 5 Volt Reference 1	7	0.5	WH / RD	480	IV	—
8	1	WH / BN	2363	III	—	Exhaust Pressure Sensor SENT 1 Signal	8	0.5	WH / BN	2363	IV	—
9	1	BK / GY	626	III	—	Engine Control Vehicle Sensors Low Reference 1	9	0.5	BK / GY	626	IV	—
10	0.5	YE	10291	I	—	Exhaust Gas Temperature Sensor SENT 3 Signal	10	0.5	YE	10291	IV	—
11	0.5	BN / BU	2926	I	—	Exhaust Aftertreatment Fuel Injector High Control	11	0.5	BN / BU	2926	IV	—
12	0.5	VT / BN	2927	I	—	Exhaust Aftertreatment Fuel Injector Low Control	12	0.5	VT / BN	2927	IV	—
13	0.5	YE / RD	10595	I	—	Engine Control Vehicle Sensors 5 Volt Reference 2	13	0.5	YE / RD	10595	IV	—
14	—	—	—	—	—	Not Occupied	14	—	—	—	—	—
15	1.5	VT / GN	4320	II	—	Powertrain Sensor Bus Enable	15	1.5	VT / GN	4320	V	—
16	0.5	BU / BK	4977	II	—	AUTOSAR CAN Bus [+] 3 Serial Data	16	0.5	BU / BK	4977	V	—
17	0.5	WH	4976	II	—	AUTOSAR CAN Bus [-] 3 Serial Data	17	0.5	WH	4976	V	—
18	—	—	—	—	—	Not Occupied	18	—	—	—	—	—
19	0.5	BU / YE	4979	II	—	AUTOSAR CAN Bus [+] 2 Serial Data	19	0.5	BU / YE	4979	V	—
20	0.5	WH	4978	II	—	AUTOSAR CAN Bus [-] 2 Serial Data	20	0.5	WH	4978	V	—

X402A Body Wiring Harness to Chassis Wiring Harness

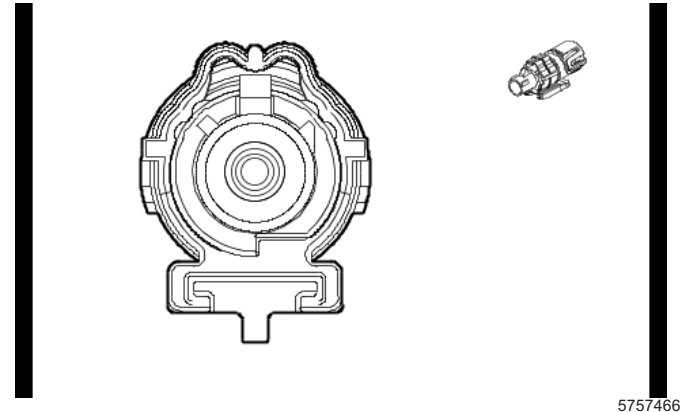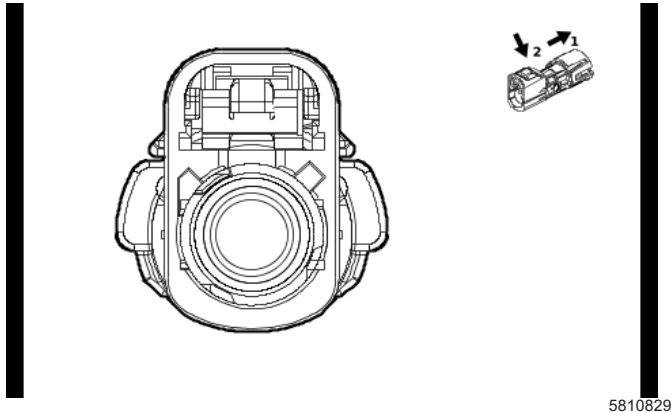

Connector Part Information

Harness Type: Body Wiring Harness COAX
 OEM Connector: 35187033
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way F Coax Type(WH)

Connector Part Information

Harness Type: Chassis Wiring Harness COAX
 OEM Connector: 33338240
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way M Coax Type, Sealed(WH)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required


X402A Body Wiring Harness to Chassis Wiring Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
—	—	Coax Cable	—	I	—	Trailer 2 Rear Vision Camera Co-axial Video Signal	—	—	Coax Cable	—	I	—

X402B Body Wiring Harness to Chassis Wiring Harness

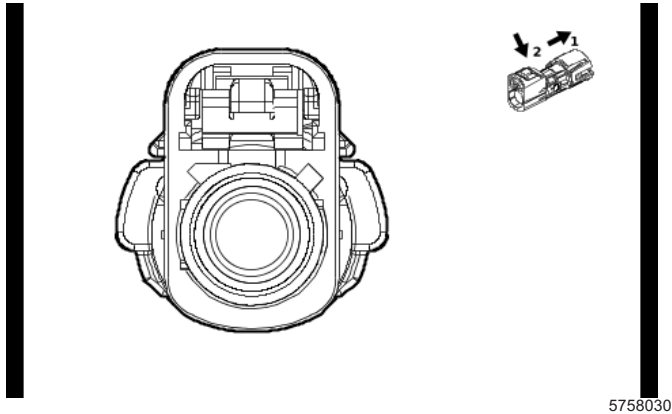

5758030

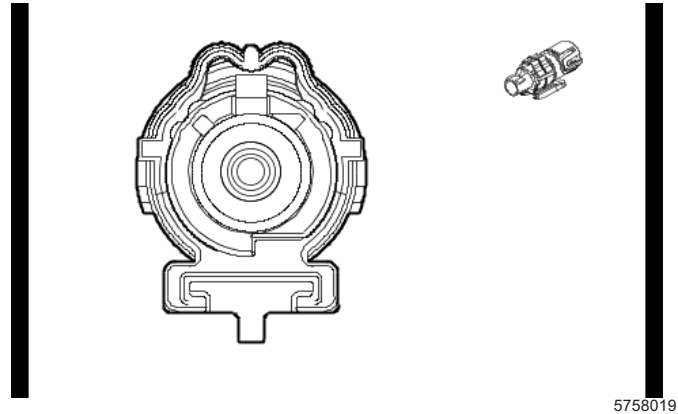

5758019

Connector Part Information

Harness Type: Body Wiring Harness COAX
 OEM Connector: 35187032
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way F Coax Type(BK)

Connector Part Information

Harness Type: Chassis Wiring Harness COAX
 OEM Connector: 33338239
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way M Coax Type, Sealed(BK)



Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

X402B Body Wiring Harness to Chassis Wiring Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
—	—	Coax Cable	—	I	—	Trailer Rear Vision Camera Coaxial Video Signal	—	—	Coax Cable	—	I	—

X402C Body Wiring Harness to Chassis Wiring Harness

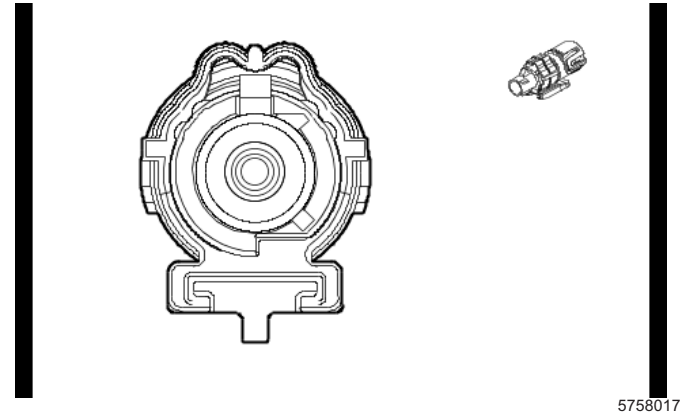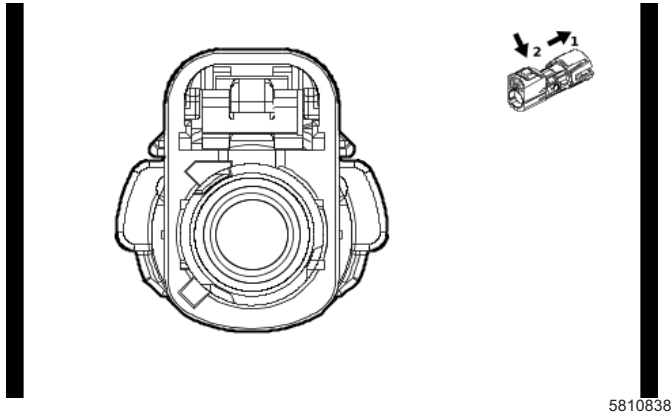

Connector Part Information

Harness Type: Body Wiring Harness COAX
 OEM Connector: 35187037
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way F Coax Type(BN)

Connector Part Information

Harness Type: Chassis Wiring Harness COAX
 OEM Connector: 33338245
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way M Coax Type, Sealed(BN)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required

X402C Body Wiring Harness to Chassis Wiring Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
—	—	Coax Cable	—	I	—	Rear Vision Camera Co-axial Video Signal	—	—	Coax Cable	—	I	—

X404 Emission Reduction Fluid Tank Reservoir Wire Harness to Chassis Wiring Harness

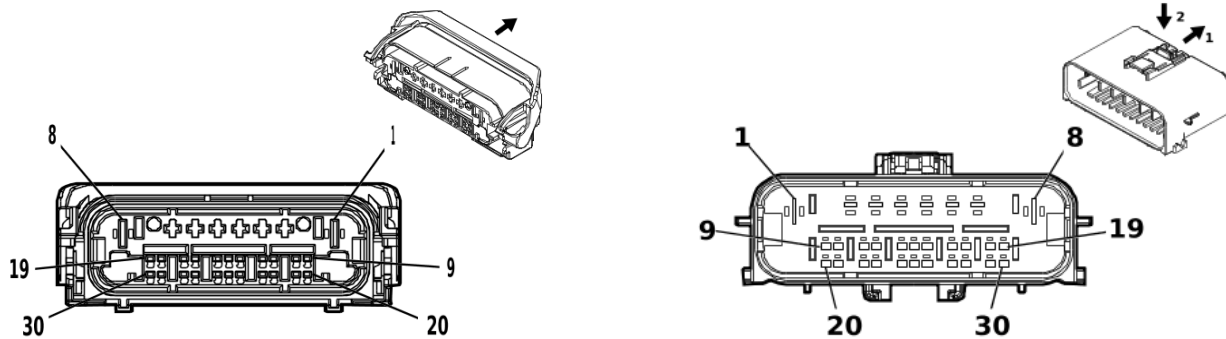

4650150

5377298

Connector Part Information

Harness Type: Emission Reduction Fluid Tank Reservoir Wire Harness
 OEM Connector: Not Available
 Service Connector: Service by Harness - See Part Catalog
 Description: 30-Way F

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 35538391
 Service Connector: 84861014
 Description: 30-Way M 1.2 MCON, 2.8, 6.3 MCP Series, Sealed(GY)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required
II	13575376	J-35616-32 (OG)	J-38125-36
III	13578827	J-35616-5 (PU)	J-38125-36
IV	19330704	J-35616-13 (BU)	J-38125-215A


X404 Emission Reduction Fluid Tank Reservoir Wire Harness to Chassis Wiring Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	2.5	RD / WH	2040	I	—	Battery Positive Voltage	1	2.5	RD / WH	2040	II	—
2	1.5	RD / WH	3440	I	—	Battery Positive Voltage	2	1.5	RD / WH	3440	III	—
3-6	—	—	—	—	—	Not Occupied	3-6	—	—	—	—	—
7	2.5	BK / WH	1151	I	—	Signal Ground	7	2.5	BK / WH	1151	III	—
8	1	BK / WH	1151	I	—	Signal Ground	8	1	BK / WH	1151	II	—
9-10	—	—	—	—	—	Not Occupied	9-10	—	—	—	—	—
11	0.5	BU / BK	4977	I	—	AUTOSAR CAN Bus [+] 3 Serial Data	11	0.5	BU / BK	4977	IV	—
12	0.5	WH	4976	I	—	AUTOSAR CAN Bus [-] 3 Serial Data	12	0.5	WH	4976	IV	—
13-21	—	—	—	—	—	Not Occupied	13-21	—	—	—	—	—


**X404 Emission Reduction Fluid Tank Reservoir Wire Harness to Chassis Wiring Harness
(cont'd)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
22	0.5	BU / BK	4977	I	—	AUTOSAR CAN Bus [+] 3 Serial Data	22	0.5	BU / BK	4977	IV	—
23	0.5	WH	4976	I	—	AUTOSAR CAN Bus [-] 3 Serial Data	23	0.5	WH	4976	IV	—
24	—	—	—	—	—	Not Occupied	24	—	—	—	—	—
25	0.5	VT / WH	639	I	—	Run/Crank Ignition 1 Voltage	25	0.5	VT / WH	639	IV	—
26 - 30	—	—	—	—	—	Not Occupied	26 - 30	—	—	—	—	—

X410 Body Wiring Harness to Chassis Wiring Harness

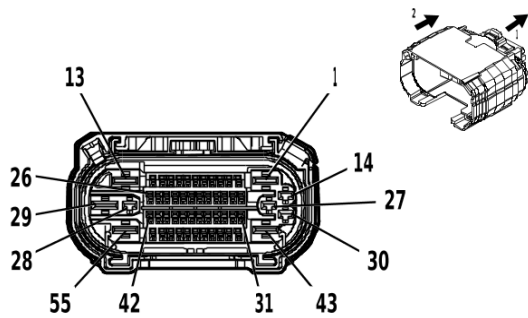

4992168

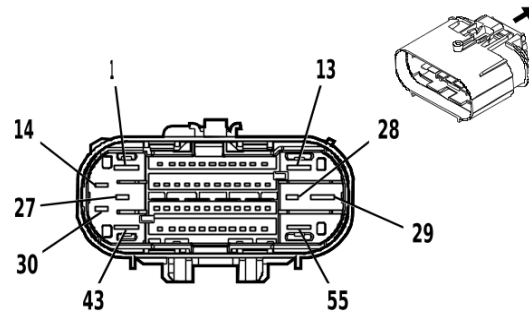

4993301

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 35016652
 Service Connector: 19371185
 Description: 55-Way F 1.2 OCS, 2.8, 6.3 CTS Series, Sealed(BK)

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 35205173
 Service Connector: 84727364
 Description: 55-Way M 1.2 OCS, 2.8, 6.3 CTS Series, Sealed(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19332901	J-35616-35 (VT)	J-38125-212
II	19370818	J-35616-12 (BU)	J-38125-215A
III	19371217	J-35616-12 (BU)	J-38125-215A
IV	84634921	J-35616-42 (RD)	J-38125-212
V	84847992	J-35616-32 (OG)	J-38125-36
VI	84867140	J-35616-13 (BU)	J-38125-215A
VII	84867141	J-35616-13 (BU)	J-38125-215A
VIII	84992391	J-35616-5 (PU)	J-38125-215A

X410 Body Wiring Harness to Chassis Wiring Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	2.5	GY	4368	IV	—	Right Park Brake Motor Low Reference	1	4	GY	4368	V	—
2	0.75	BU / VT	1335	II	—	Right Rear Turn Signal Lamp Control 2	2	0.75	BU / VT	1335	VI	—
3	0.5	BN / YE	820	II	—	Center High Mounted Stop Lamp Supply Voltage	3	0.5	BN / YE	820	VI	—
4	0.5	GN / BU	2733	II	—	Brake System Control Module LIN Bus 2	4	0.5	GN / BU	2733	VI	—

X410 Body Wiring Harness to Chassis Wiring Harness (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
5	0.35	BN / GN	3568	II	—	Rear Closure Passive Entry Antenna High Signal	5	0.5	BN / GN	3568	VI	—
6	0.35	GN / GY	3569	II	—	Rear Closure Passive Entry Antenna Low Signal	6	0.5	GN / GY	3569	VI	—
7	0.75	BU / WH	1334	II	—	Left Rear Turn Signal Lamp Control 2	7	0.75	BU / WH	1334	VI	—
8	0.5	WH / VT	1430	II	—	Exterior Courtesy Lamp Control	8	0.5	WH / VT	1430	VI	—
9	0.5	GN / YE	1616	II	—	Rear Brake Pad Wear Sensor Signal	9	0.5	GN / YE	1616	VI	—
10	0.5	WH / BK	2223	II	—	Trailer Brake Apply Signal	10	0.5	WH / BK	2223	VI	—
11	0.35	GN / YE	2862	II	—	Body Control Module LIN Bus 16	11	0.5	GN / YE	2862	VI	—
12	1	BK	9003	III	—	Cavity Seal	12	1	BK	9001	VII	—
13	2.5	GN / VT	1988	IV	—	Right Park Brake Motor Apply Control	13	4	GN / VT	1988	V	—
14	2.5	RD / VT	4442	I	—	Primary Fused Battery Positive Voltage	14	2.5	RD / VT	4442	VIII	—
15	0.5	BU / YE	4979	II	—	AUTOSAR CAN Bus [+] 2 Serial Data	15	0.5	BU / YE	4979	VI	—
16	0.5	WH	4978	II	—	AUTOSAR CAN Bus [-] 2 Serial Data	16	0.5	WH	4978	VI	—
17	0.5	WH	4976	II	—	AUTOSAR CAN Bus [-] 3 Serial Data	17	0.5	WH	4976	VI	—
18	0.5	BU / BK	4977	II	—	AUTOSAR CAN Bus [+] 3 Serial Data	18	0.5	BU / BK	4977	VI	—
19	0.35	WH / BK	7544	II	—	Right Rear Turn Signal Lamp Feedback Signal	19	0.75	WH / BK	7544	VI	—
20	0.5	BN / BU	1602	II	—	Front Brake Pad Wear Sensor Signal	20	0.5	BN / BU	1602	VI	—
21	0.5	VT	882	II	—	Right Rear Wheel Speed Sensor Signal	21	0.5	VT	882	VI	—
22	0.5	GY / YE	7128	II	—	Right Rear Wheel Speed Sensor Control	22	0.5	GY / YE	7128	VI	—

7-704 Electrical Component and Inline Harness Connector End Views


X410 Body Wiring Harness to Chassis Wiring Harness (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
23	0.5	BU	884	II	—	Left Rear Wheel Speed Sensor Signal	23	0.5	BU	884	VI	—
24	0.5	GY / BK	7127	II	—	Left Rear Wheel Speed Sensor Control	24	0.5	GY / BK	7127	VI	—
25	0.5	GY	830	II	—	Left Front Wheel Speed Sensor Signal	25	0.5	GY	830	VI	—
26	0.5	GY / WH	7064	II	—	Left Front Wheel Speed Sensor Control	26	0.5	GY / WH	7064	VI	—
27	2	BU	47	I	—	Trailer Auxiliary Control	27	2.5	BU	47	VIII	—
28	0.5	BN / GN	4246	I	—	Identification Lamp Control	28	0.5	BN / GN	4246	VIII	—
29	2.5	WH	2001	IV	—	Left Park Brake Motor Apply Control	29	4	WH	2001	V	—
30	0.35	GY	7292	I	—	Major Endgate Release Switch Signal Exterior	30	0.5	GY	7292	VIII	—
31	0.5	BN	10119	II	—	AC Outlet 2 Low Reference	31	0.5	BN	10119	VI	—
32	0.75	RD / WH	10121	II	—	AC Outlet 2 Phase B Control	32	0.75	RD / WH	10121	VI	—
33	0.5	GY / BU	7762	II	—	Cargo Lamp Control	33	0.5	GY / BU	7762	VI	—
34	0.5	YE / BK	2224	II	—	Trailer Brake Enable Signal	34	0.5	YE / BK	2224	VI	—
35	0.5	GN / BN	2266	II	—	DC/AC Inverter Control 2	35	0.5	GN / BN	2266	VI	—
36	0.5	BN / WH	2374	II	—	Object Sensor Voltage Reference	36	0.5	BN / WH	2374	VI	—
37	0.5	YE	2375	II	—	Left Rear Outer Parking Assist Sensor Signal	37	0.5	YE	2375	VI	—
38	0.5	YE / BU	2376	II	—	Left Rear Middle Parking Assist Sensor Signal	38	0.5	YE / BU	2376	VI	—
39	0.5	YE / WH	2377	II	—	Right Rear Middle Parking Assist Sensor Signal	39	0.5	YE / WH	2377	VI	—

X410 Body Wiring Harness to Chassis Wiring Harness (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
40	0.5	YE / VT	2378	II	—	Right Rear Outer Parking Assist Sensor Signal	40	0.5	YE / VT	2378	VI	—
41	0.5	BK / GY	2379	II	—	Object Sensor Low Reference	41	0.5	BK / GY	2379	VI	—
42	0.5	GN / WH	24	II	—	Backup Lamp Control	42	0.5	GN / WH	24	VI	—
43	2.5	GY / BK	4369	IV	—	Left Park Brake Motor Low Reference	43	4	GY / BK	4369	V	—
44	0.75	BK / WH	10120	II	KC9/ KCA	AC Outlet 2 Phase A Control	44	0.75	BK / WH	10120	VI	KC9/ KCA
45	0.35	YE	7294	II	—	Minor Endgate Release Switch Discrete Signal Exterior	45	0.5	YE	7294	VI	—
46	0.5	VT / RD	4049	II	—	AC Power Outlet Sensor High Reference	46	0.5	VT / RD	4049	VI	—
47	0.5	YE / GN	2024	II	—	Animation Lighting Control	47	0.5	YE / GN	2024	VI	—
48	0.35	WH / YE	7541	II	—	Right Rear Stop Lamp Control	48	0.75	WH / YE	7541	VI	—
49	0.75	GY / YE	7542	II	—	Left Rear Stop Lamp Control	49	0.75	GY / YE	7542	VI	—
50	0.5	VT / BK	739	II	—	Run/Crank Ignition 1 Voltage	50	0.5	VT / WH	739	VI	—
51	0.35	WH / VT	6567	II	—	Rear Turn Signal Lamp Feedback Signal	51	0.75	WH / VT	6567	VI	—
52	0.5	GN / YE	6846	II	—	Rear License Plate Lamp Control	52	0.5	GN / YE	6846	VI	—
53	0.75	BN / BU	6993	II	—	Left Rear Park Lamp Control	53	0.75	BN / BU	6993	VI	—
54	0.75	BN / GY	6995	II	—	Right Rear Park Lamp Control	54	0.75	BN / GY	6995	VI	—
55	2.5	RD / BN	4142	IV	—	Battery Positive Voltage Primary Fused Battery Positive Voltage	55	4 2.5	RD / BN RD / BN	3640 3640	V V	- JL1+ Z82 JL1


X412 Assist Step Motor Jumper Wiring Harness - Left to Chassis Wiring Harness (BRS)

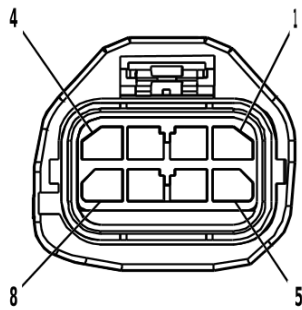

1401778

Connector Part Information

Harness Type: Assist Step Motor Jumper Wiring Harness - Left
 OEM Connector: Not Available
 Service Connector: Service by Harness - See Part Catalog
 Description: 8-Way F

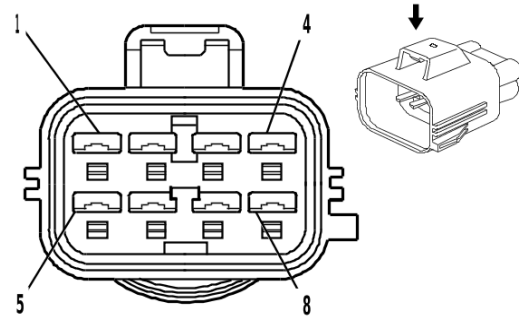

1856785

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 15419459
 Service Connector: 19367561
 Description: 8-Way M 2.8 Series, Sealed(D-GY)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required
II	Not required	J-35616-5 (PU)	No Tool Required


X412 Assist Step Motor Jumper Wiring Harness - Left to Chassis Wiring Harness (BRS)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	2	WH / BN	7471	I	—	Left Running Board Step Motor Control Extend	1	2	WH / BN	7471	II	—
2	0.5	VT / RD	7468	I	—	Left Running Board Step Motor Hall Sensor 5V Reference	2	0.5	VT / RD	7468	II	—
3	0.5	YE	7467	I	—	Left Running Board Step Motor Hall Sensor Signal	3	0.5	YE	7467	II	—
4	0.5	YE / BN	7466	I	—	Left Running Board Step Motor Hall Sensor Low Reference	4	0.5	YE / BN	7466	II	—
5	2	GY	7472	I	—	Left Running Board Step Motor Control Retract	5	2	GY	7472	II	—
6	—	—	—	—	—	Not Occupied	6	—	—	—	—	—

**X412 Assist Step Motor Jumper Wiring Harness - Left to Chassis Wiring Harness (BRS)
(cont'd)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
7	0.5	BN	4748	I	—	Left Running Board Step Courtesy Lamp Control	7	0.5	BN	4748	II	—
8	0.5	BK	1850	I	—	Ground	8	0.5	BK	1850	II	—

X413 Assist Step Motor Jumper Wiring Harness - Right to Chassis Wiring Harness (BRS)

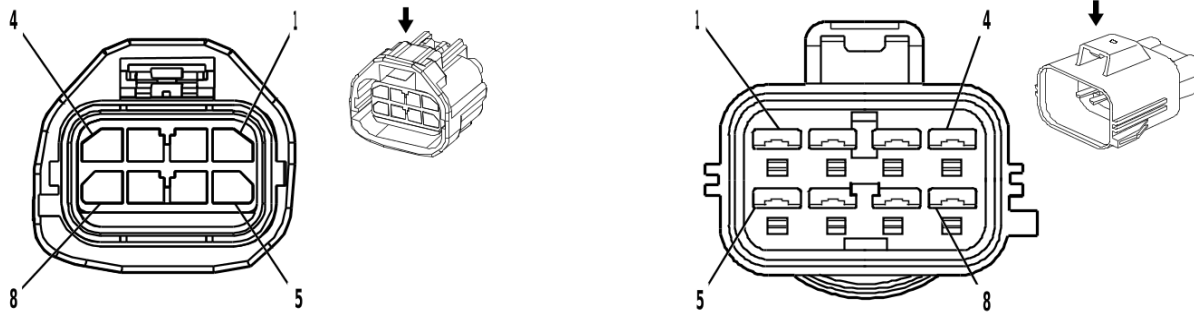

1401778

1856785

Connector Part Information

Harness Type: Assist Step Motor Jumper Wiring Harness - Right
 OEM Connector: Not Available
 Service Connector: Service by Harness - See Part Catalog
 Description: 8-Way F

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 15419459
 Service Connector: 19367561
 Description: 8-Way M 2.8 Series, Sealed(D-GY)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required
II	Not required	J-35616-5 (PU)	No Tool Required


X413 Assist Step Motor Jumper Wiring Harness - Right to Chassis Wiring Harness (BRS)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	2	BU	7470	I	—	Right Running Board Step Motor Control Extend	1	2	BU	7470	II	—
2	0.5	GN / RD	7464	I	—	Right Running Board Step Motor Hall Sensor 5V Reference	2	0.5	GN / RD	7464	II	—
3	0.5	VT	7465	I	—	Right Running Board Step Motor Hall Sensor Signal	3	0.5	VT	7465	II	—
4	0.5	YE / BK	7463	I	—	Right Running Board Step Motor Hall Sensor Low Reference	4	0.5	YE / BK	7463	II	—
5	2	GN	7469	I	—	Right Left Running Board Step Motor Control Retract	5	2	GN	7469	II	—

**X413 Assist Step Motor Jumper Wiring Harness - Right to Chassis Wiring Harness (BRS)
(cont'd)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
6	—	—	—	—	—	Not Occupied	6	—	—	—	—	—
7	0.5	GY / VT	4749	I	—	Right Running Board Step Courtesy Lamp Control	7	0.5	GY / VT	4749	II	—
8	0.5	BK	1850	I	—	Ground	8	0.5	BK	1850	II	—

X414 Chassis Rear Wiring Harness to Chassis Wiring Harness

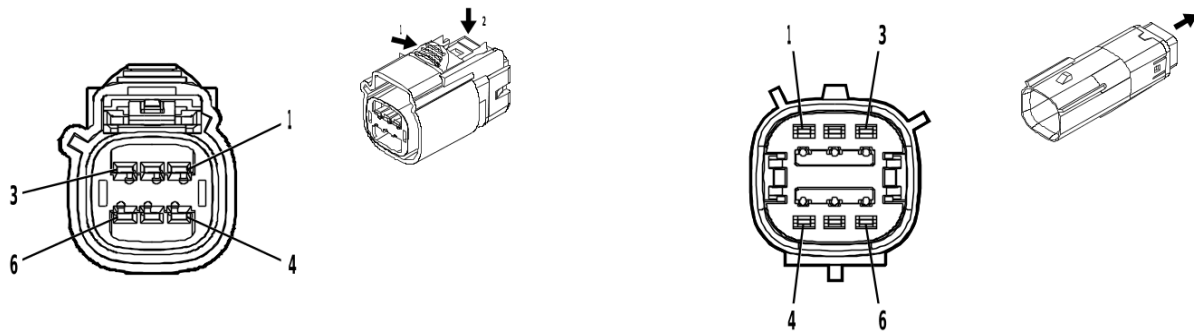

4996962

4992963

Connector Part Information

Harness Type: Chassis Rear Wiring Harness
 OEM Connector: 15513505
 Service Connector: Service by Harness - See Part Catalog
 Description: 6-Way F 1.5 OCS Series, Sealed(GY)

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 15513475
 Service Connector: 19371205
 Description: 6-Way M 1.5 OCS Series, Sealed(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required
II	Not required	J-35616-3 (GY)	No Tool Required

X414 Chassis Rear Wiring Harness to Chassis Wiring Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.75	BK / WH	10120	I	—	AC Outlet 2 Phase A Control	1	0.75	BK / WH	10120	II	—
2	0.5	BN	10119	I	—	AC Outlet 2 Low Reference	2	0.5	BN	10119	II	—
3	0.5	VT / RD	4049	I	—	AC Power Outlet Sensor High Reference	3	0.5	VT / RD	4049	II	—
4	0.75	RD / WH	10121	I	—	AC Outlet 2 Phase B Control	4	0.75	RD / WH	10121	II	—
5	0.5	GN / BN	2266	I	—	DC/AC Inverter Control 2	5	0.5	GN / BN	2266	II	—
6	0.5	BK	1750	I	—	Ground	6	1.5	BK	1750	II	—

X415 Engine Wiring Harness Chassis to Transfer Case Selector Shift Control Switch Wiring Harness Extension Harness (L5P)

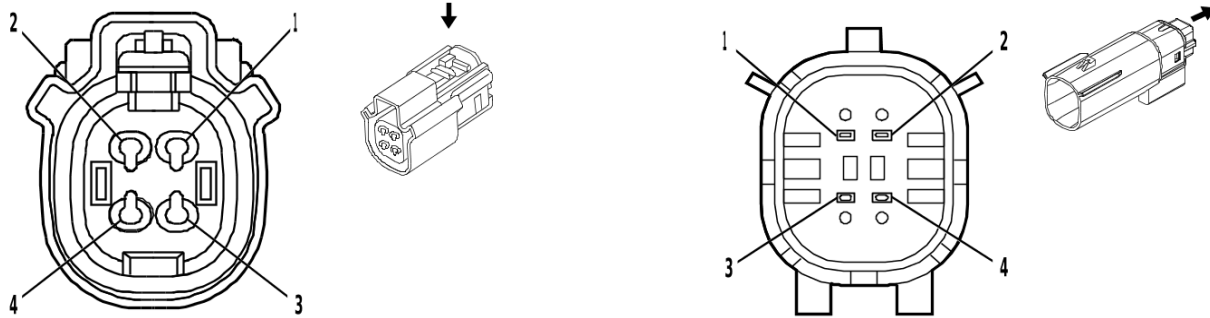

1960031

2368875

Connector Part Information

Harness Type: Engine Wiring Harness Chassis
 OEM Connector: 33346391
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way F 1.5 MX Series, Sealed(BK)

Connector Part Information

Harness Type: Transfer Case Selector Shift Control Switch Wiring Harness Extension Harness
 OEM Connector: 33344515
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way M 1.5 MX Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required
II	Not required	J-35616-2A (GY)	No Tool Required
III	Not required	J-35616-3 (GY)	No Tool Required

X415 Engine Wiring Harness Chassis to Transfer Case Selector Shift Control Switch Wiring Harness Extension Harness (L5P)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.5	GY / BK	1570	II	—	Front Axle Actuator Control	1	0.5	GY / BK	1570	III	—
2	0.5	YE / WH	1695	II	—	4WD Locked Range Indicator Control	2	0.5	YE / WH	1695	III	—
3	0.5	GN	8016	II	—	Secondary Axle Motor Control	3	0.5	GN	8016	III	—
4	1.5	BK	450	I	—	Ground	4	0.5	BK	450	III	—

X415 Engine Wiring Harness to Transfer Case Selector Shift Control Switch Wiring Harness Extension Harness (L8T)

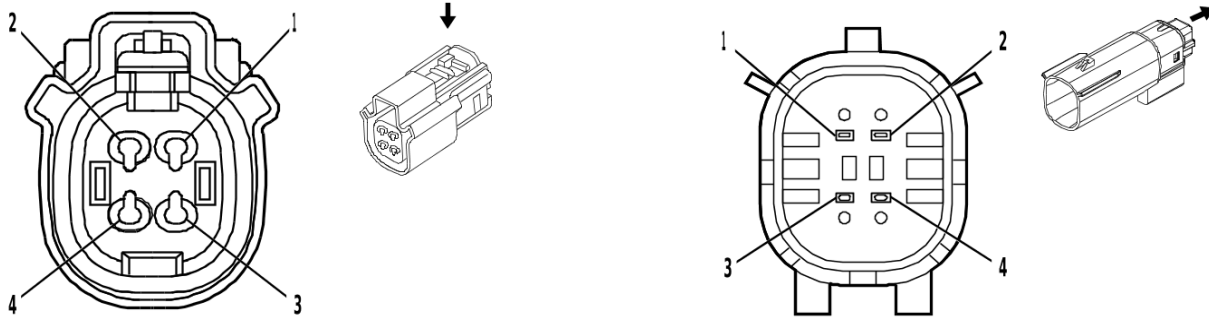

1960031

2368875

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 33346391
 Service Connector: 19368217
 Description: 4-Way F 1.5 MX Series, Sealed(BK)

Connector Part Information

Harness Type: Transfer Case Selector Shift Control Switch Wiring Harness Extension Harness
 OEM Connector: 33344515
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way M 1.5 MX Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required
II	Not required	J-35616-2A (GY)	No Tool Required
III	Not required	J-35616-3 (GY)	No Tool Required

X415 Engine Wiring Harness to Transfer Case Selector Shift Control Switch Wiring Harness Extension Harness (L8T)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.5	GY / BK	1570	II	—	Front Axle Actuator Control	1	0.5	GY / BK	1570	III	—
2	0.5	YE / WH	1695	II	—	4WD Locked Range Indicator Control	2	0.5	YE / WH	1695	III	—
3	0.5	GN	8016	II	—	Secondary Axle Motor Control	3	0.5	GN	8016	III	—
4	1.5	BK	450	I	—	Ground	4	0.5	BK	450	III	—

X420A Chassis Rear Wiring Harness Extension Harness to Chassis Wiring Harness

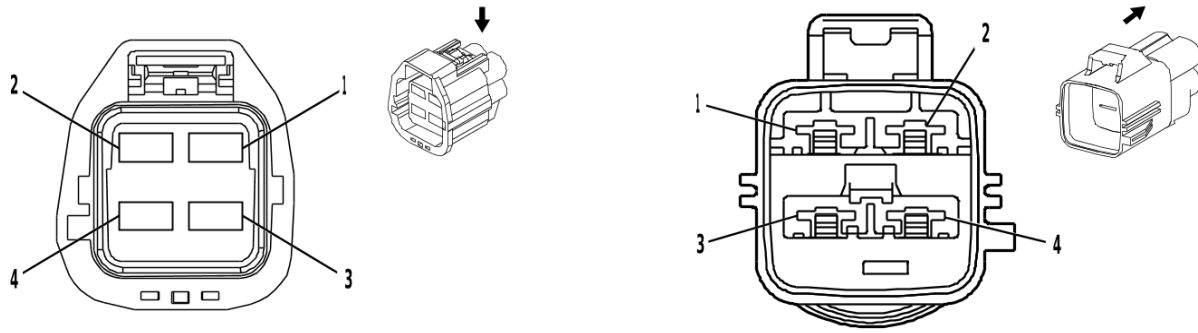

2852121

1853524

Connector Part Information

Harness Type: Chassis Rear Wiring Harness Extension Harness
 OEM Connector: 7283-3601-10
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way F 6.3 Series, Sealed(GY)

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 33360098
 Service Connector: 19371198
 Description: 4-Way M 6.3 Series, Sealed(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-42 (RD)	No Tool Required
II	Not required	J-35616-43 (RD)	No Tool Required

X420A Chassis Rear Wiring Harness Extension Harness to Chassis Wiring Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	2.5	WH	2001	I	—	Left Park Brake Motor Apply Control	1	4	WH	2001	II	—
2	2.5	GN / BK	4369	I	—	Left Park Brake Motor Low Reference	2	4	GY / BK	4369	II	—
3	2.5	GN / VT	1988	I	—	Right Park Brake Motor Apply Control	3	4	GN / VT	1988	II	—
4	2.5	GY	4368	I	—	Right Park Brake Motor Low Reference	4	4	GY	4368	II	—

X420B Chassis Rear Wiring Harness Extension Harness to Chassis Wiring Harness (JBP)

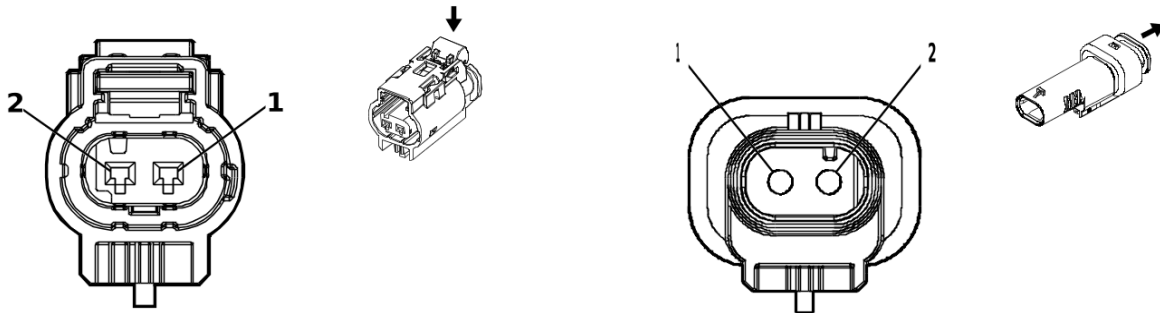

5207726

4992757

Connector Part Information

Harness Type: Chassis Rear Wiring Harness Extension Harness
 OEM Connector: 10094237
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.2 Multilock Series, Sealed(GY)

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 33356666
 Service Connector: 19371200
 Description: 2-Way M 1.2 MLK Series, Sealed(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required
II	Not required	J-35616-13 (BU)	No Tool Required
III	Not required	J-35616-17 (L-GN)	No Tool Required

X420B Chassis Rear Wiring Harness Extension Harness to Chassis Wiring Harness (JBP)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.75	GN / YE	1616	I	—	Rear Brake Pad Wear Sensor Signal	1	0.5	GN / YE	1616	III	—
2	0.75	BK / WH	1751	I	—	Signal Ground Signal Ground	2	1 0.75	BK / WH BK / WH	1151 1151	II II	JBP- G94- (NV8/ BRS/ L5P) JBP+ (NV8/ BRS/ L5P) - G94


X420B Chassis Wiring Harness to Chassis Rear Wiring Harness Extension Harness (JBP&G94)

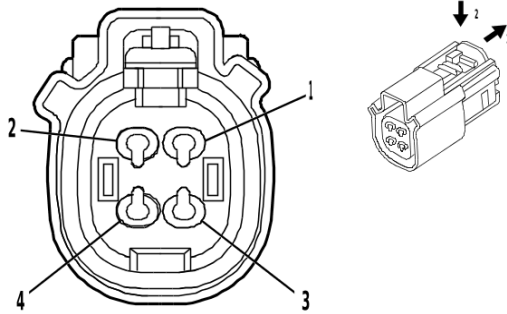

3960090

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 13510889
 Service Connector: 19368970
 Description: 4-Way F 1.5 MX Series, Sealed(GY)

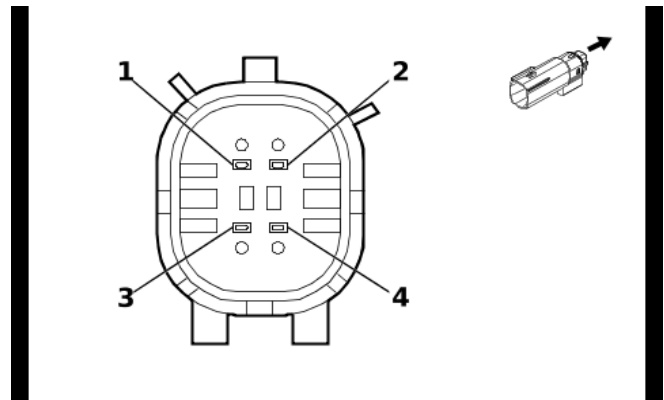

5604894

Connector Part Information

Harness Type: Chassis Rear Wiring Harness Extension Harness
 OEM Connector: 33482-4002
 Service Connector: Service by Harness - See Part Catalog
 Description: 4-Way M 1.5 MX Series, Sealed(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required
II	Not required	J-35616-3 (GY)	No Tool Required

X420B Chassis Wiring Harness to Chassis Rear Wiring Harness Extension Harness (JBP&G94)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.5	GN / YE	1616	I	—	Rear Brake Pad Wear Sensor Signal	1	0.75	GN / YE	1616	II	—
2	0.75	BK / WH	1151	I	—	Signal Ground	2	0.75	BK / WH	1751	II	—
3	0.75	GY / BK	7253	I	—	Rear Differential Lock Actuator Low Control	3	0.75	GY / BK	7253	II	—
4	0.75	VT / BN	7258	I	—	Rear Differential Lock Actuator Control	4	0.75	VT / BN	7258	II	—

X424 Body Wiring Harness to Chassis Wiring Harness - Chassis Cab

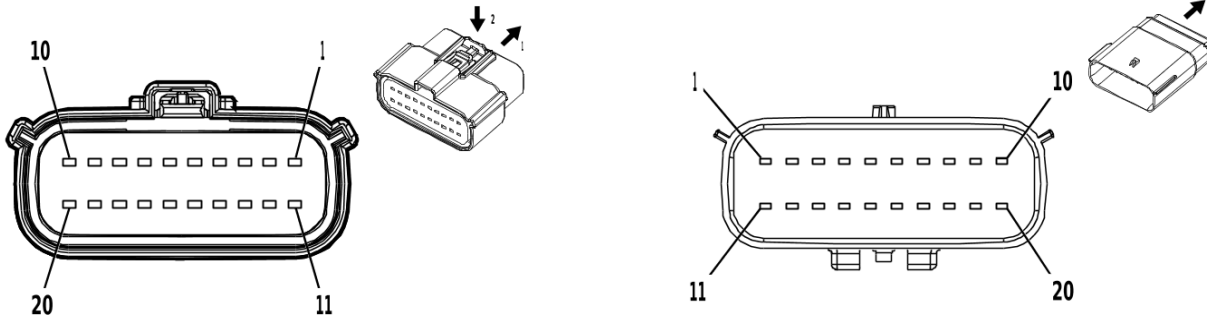

4574194

2871861

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 35600460
 Service Connector: 19300557
 Description: 20-Way F 1.5 MX Series, Sealed(BK)

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 35504158
 Service Connector: 19351705
 Description: 20-Way M 1.5 MX Series, Sealed(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19368973	J-35616-2A (GY)	J-38125-217
II	86800300	J-35616-3 (GY)	J-38125-217


X424 Body Wiring Harness to Chassis Wiring Harness - Chassis Cab

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.35	YE	7115	I	—	Rear Axle Differential Lock Indicator Control	1	—	—	—	—	—
2	0.35	YE / GN	7122	I	—	Axle Differential Lock Switch Signal	2	—	—	—	—	—
3	0.5	WH	4100	I	—	AUTOSAR CAN Bus [-] 4 Serial Data	3	—	—	—	—	—
4	0.5	BU / VT	4101	I	—	AUTOSAR CAN Bus [+] 4 Serial Data	4	—	—	—	—	—
5 - 8	—	—	—	—	—	Not Occupied	5 - 8	—	—	—	—	—
9	0.35	YE	1144	I	—	Endgate Release Switch Discrete Signal Exterior	9	—	—	—	—	—
10	1	GN	1299	I	—	Major Endgate Motor Control	10	—	—	—	—	—
11	0.5	WH	4986	I	—	AUTOSAR CAN Bus [-] 1 Serial Data	11	0.5	WH	4986	II	—

X424 Body Wiring Harness to Chassis Wiring Harness - Chassis Cab (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
12	0.5	BU	4987	I	—	AUTOSAR CAN Bus [+] 1 Serial Data	12	0.5	BU	4987	II	—
13	0.35	YE / BU	7295	I	—	Left Minor Endgate Ajar Signal	13	—	—	—	—	—
14	—	—	—	—	—	Not Occupied	14	—	—	—	—	—
15	1	VT	7725	I	—	Minor Endgate Motor Control	15	—	—	—	—	—
16	1	YE / BK	7730	I	—	Major Endgate Motor Low Reference	16	—	—	—	—	—
17	0.5	WH	4986	I	—	AUTOSAR CAN Bus [-] 1 Serial Data	17	0.5	WH	4986	II	—
18	0.5	BU	4987	I	—	AUTOSAR CAN Bus [+] 1 Serial Data	18	0.5	BU	4987	II	—
19 - 20	—	—	—	—	—	Not Occupied	19 - 20	—	—	—	—	—

X424 Body Wiring Harness to Chassis Wiring Harness - without Chassis Cab

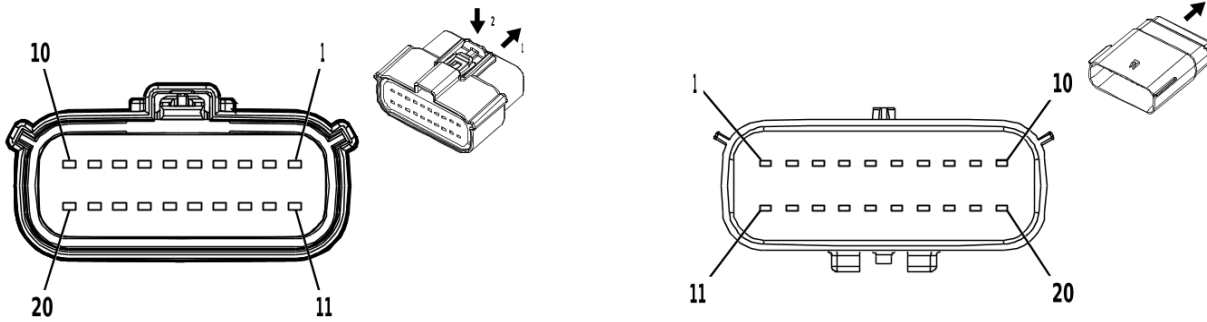

4574194

2871861

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 35600460
 Service Connector: 19300557
 Description: 20-Way F 1.5 MX Series, Sealed(BK)

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 33181044
 Service Connector: 19351705
 Description: 20-Way M 1.5 MX Series, Sealed(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19368973	J-35616-2A (GY)	J-38125-217
II	86800300	J-35616-3 (GY)	J-38125-217


X424 Body Wiring Harness to Chassis Wiring Harness - without Chassis Cab

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	—	—	—	—	—	Rear Axle Differential Lock Indicator Control	1	0.5	YE	7115	II	—
2	—	—	—	—	—	Axle Differential Lock Switch Signal	2	0.5	YE / GN	7122	II	—
3	0.5	WH	4100	I	—	AUTOSAR CAN Bus [-] 4 Serial Data	3	0.5	WH	4100	II	—
4	0.5	BU / VT	4101	I	—	AUTOSAR CAN Bus [+] 4 Serial Data	4	0.5	BU / VT	4101	II	—
5 - 8	—	—	—	—	—	Not Occupied	5 - 8	—	—	—	—	—
9	0.35	YE	1144	I	—	Endgate Release Switch Discrete Signal Exterior	9	0.5	YE	1144	II	—
10	1	GN	1299	I	—	Major Endgate Motor Control	10	1	GN	1299	II	—
11	0.5	WH	4986	I	—	AUTOSAR CAN Bus [-] 1 Serial Data	11	0.5	WH	4986	II	—

X424 Body Wiring Harness to Chassis Wiring Harness - without Chassis Cab (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
12	0.5	BU	4987	I	—	AUTOSAR CAN Bus [+] 1 Serial Data	12	0.5	BU	4987	II	—
13	0.35	YE / BU	7295	I	—	Left Minor Endgate Ajar Signal	13	0.75	YE / BU	7295	II	—
14	—	—	—	—	—	Not Occupied	14	—	—	—	—	—
15	1	VT	7725	I	—	Minor Endgate Motor Control	15	1	VT	7725	II	—
16	1	YE / BK	7730	I	—	Major Endgate Motor Low Reference	16	1	YE / BK	7730	II	—
17	0.5	WH	4986	I	—	AUTOSAR CAN Bus [-] 1 Serial Data	17	0.5	WH	4986	II	—
18	0.5	BU	4987	I	—	AUTOSAR CAN Bus [+] 1 Serial Data	18	0.5	BU	4987	II	—
19 - 20	—	—	—	—	—	Not Occupied	19 - 20	—	—	—	—	—

X426 Chassis Wiring Harness to Chassis Wiring Harness

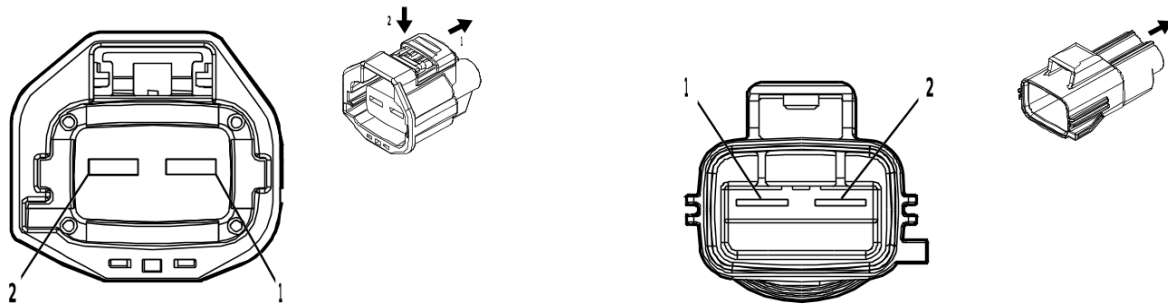

4584202

4789729

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 13888959
 Service Connector: 19368222
 Description: 2-Way F 6.3 Series, Sealed(D-GY)

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 35063672
 Service Connector: 19368221
 Description: 2-Way M 6.3 YESC Series, Sealed(GY)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-42 (RD)	No Tool Required
II	Not required	J-35616-43 (RD)	No Tool Required


X426 Chassis Wiring Harness to Chassis Wiring Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	4	RD / BU	3940	I	—	Battery Positive Voltage	1	4	OG	3640	II	—
2	—	—	—	—	—	Not Occupied	2	—	—	—	—	—

X480 Chassis Wiring Harness to Trailer Rear Wiring Harness (UY2 / ZSA)

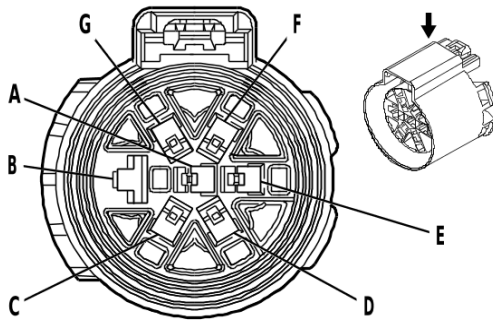

2056936

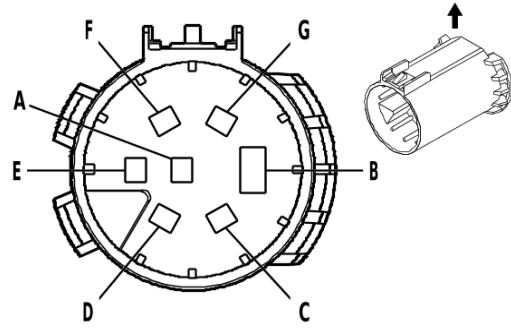

366087

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 13857223
 Service Connector: 86816072
 Description: 7-Way F 280, 630 Metri-Pack Series, Sealed(BK)

Connector Part Information

Harness Type: Trailer Rear Wiring Harness
 OEM Connector: 15317327
 Service Connector: Service by Harness - See Part Catalog
 Description: 7-Way M 280 Metri-Pack Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-42 (RD)	No Tool Required
II	Not required	J-35616-4A (PU)	No Tool Required
III	Not required	J-35616-43 (RD)	No Tool Required
IV	Not required	J-35616-5 (PU)	No Tool Required


X480 Chassis Wiring Harness to Trailer Rear Wiring Harness (UY2 / ZSA)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
A	1	GY	5189	II	UET UY2/ Z6A	Trailer Back-up Lamp Control	A	1	GY	1624	IV	—
		GY	1624	II		Trailer Back-up Lamp Control						
B	5	WH	22	I	—	Trailer Ground	B	5	WH	22	III	—
C	4	BU	47	II	—	Trailer Auxiliary Control	C	4	BU	47	IV	—
D	1	GN	1619	II	—	Right Rear Trailer Stop/ Turn Lamp Control	D	1	GN	1619	IV	—
E	4	OG	3640	II	—	Battery Positive Voltage	E	4	OG	3640	IV	—
F	1 1.5	BN	2109	II	UET - UET	Trailer Park Lamp Control	F	2	BN	2109	IV	—
		BN	2109	II		Trailer Park Lamp Control						
G	1	YE	1618	II	—	Left Rear Trailer Stop/ Turn Lamp Control	G	1	YE	1618	IV	—

X481 Trailer Rear Wiring Harness to Trailer Rear Wiring Harness

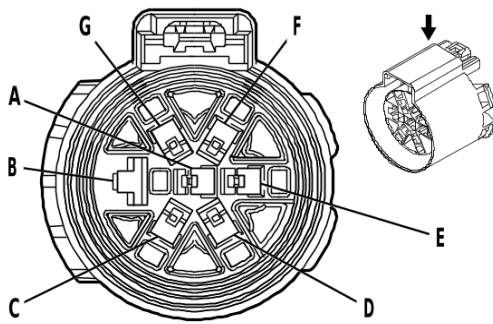

2056936

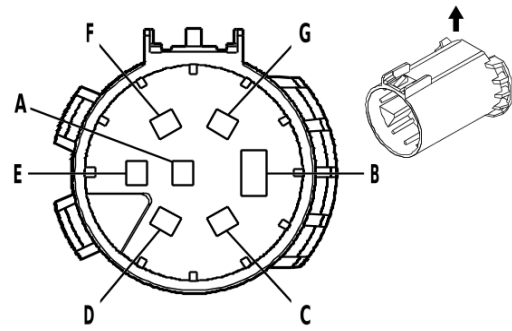

366087

Connector Part Information

Harness Type: Trailer Rear Wiring Harness
 OEM Connector: 13857223
 Service Connector: Service by Harness - See Part Catalog
 Description: 7-Way F 280, 630 Metri-Pack Series, Sealed(BK)

Connector Part Information

Harness Type: Trailer Rear Wiring Harness
 OEM Connector: 15317327
 Service Connector: Service by Harness - See Part Catalog
 Description: 7-Way M 280 Metri-Pack Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-42 (RD)	No Tool Required
II	Not required	J-35616-4A (PU)	No Tool Required
III	Not required	J-35616-43 (RD)	No Tool Required
IV	Not required	J-35616-5 (PU)	No Tool Required

X481 Trailer Rear Wiring Harness to Trailer Rear Wiring Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
A	1	GY	1624	II	—	Trailer Back-up Lamp Control	A	1	GY	1624	IV	—
B	5	WH	22	I	—	Trailer Ground	B	5	WH	22	III	—
C	4	BU	47	II	—	Trailer Auxiliary Control	C	4	BU	47	IV	—
D	1	GN	1619	II	—	Right Rear Trailer Stop/ Turn Lamp Control	D	1	GN	1619	IV	—
E	4	OG	3640	II	—	Battery Positive Voltage	E	4	OG	3640	IV	—
F	1.5	BN	2109	II	—	Trailer Park Lamp Control	F	2	BN	2109	IV	—
G	1	YE	1618	II	—	Left Rear Trailer Stop/ Turn Lamp Control	G	1	YE	1618	IV	—

X500 Front Side Door Door Wiring Harness - Left to Body Wiring Harness

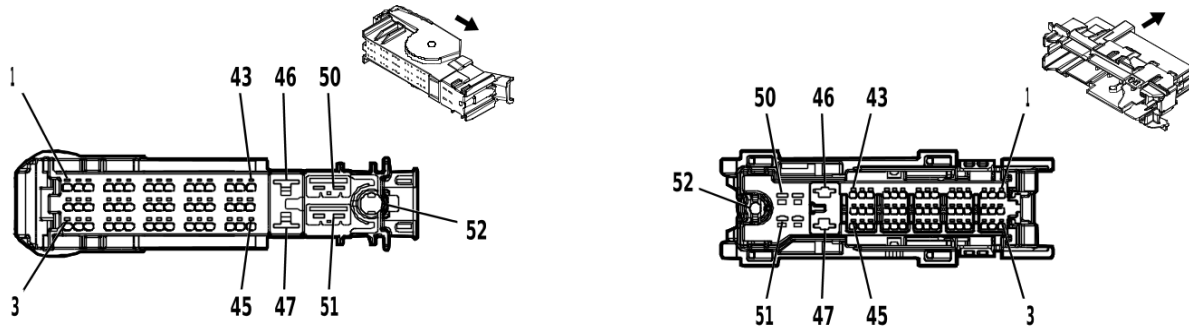

4992530

4993484

Connector Part Information

Harness Type: Front Side Door Door Wiring Harness - Left
 OEM Connector: 35077349
 Service Connector: Service by Harness - See Part Catalog
 Description: 52-Way F 1.2, 2.8, 6.3, Coaxial Series(BK)

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 35190453
 Service Connector: 13527236
 Description: 52-Way M 1.2, 2.8, 6.3, Coaxial Series(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required
II	Not required	J-35616-16 (L-GN)	No Tool Required
III	Not required	J-35616-42 (RD)	No Tool Required
IV	Not required	J-35616-64B (L-BU)	No Tool Required
V	19301536	J-35616-43 (RD)	J-38125-11A
VI	84616651	J-35616-13 (BU)	J-38125-215A
VII	Not required	J-35616-64B (L-BU)	No Tool Required

X500 Front Side Door Door Wiring Harness - Left to Body Wiring Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	—	—	—	—	—	Not Occupied	1	—	—	—	—	—
2	0.5	RD / BU	1240	II	—	Battery Positive Voltage	2	0.5	RD / BU	1240	VI	—
3-6	—	—	—	—	—	Not Occupied	3-6	—	—	—	—	—
7	0.75	BN / BU	118	II	—	Left Front Speaker [-] Control 1	7	0.75	BN / BU	118	VI	—
8	0.75	BU	201	II	—	Left Front Speaker 1 [+] Control	8	0.75	BU	201	VI	—
9	0.5	OG / GN	2132	II	—	Left Front Side Impact Sensor Signal	9	0.5	OG / GN	2132	VI	—
10	0.5	BK / OG	6628	II	—	Left Front Side Impact Sensor Low Reference	10	0.5	BK / OG	6628	VI	—

7-724 Electrical Component and Inline Harness Connector End Views


X500 Front Side Door Door Wiring Harness - Left to Body Wiring Harness (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
11	0.5	VT	4301	II	—	Passive Entry Left Front Antenna Signal High	11	0.35	VT	4301	VI	—
12	0.5	VT / GY	4302	II	—	Passive Entry Left Front Antenna Signal Low	12	0.35	VT / GY	4302	VI	—
13	0.5	VT / GY	126	II	—	Left Front Door Open Switch Signal	13	0.35	VT / GY	126	VI	—
14	0.5	YE / WH	1690	II	—	Mirror Dimming Signal	14	0.35	YE / WH	1690	VI	—
15	0.5	BK / YE	1691	II	—	Automatic Day/Night Mirror Low Reference	15	0.35	BK / YE	1691	VI	—
16	0.5	WH / GY	2114	II	—	Left Turn Signal Lamp Control 2	16	0.35	WH / GY	2114	VI	—
17	0.5	BU	2675	II	—	Left Front Exterior Door Handle Switch Unlock Signal	17	0.35	BU	2675	VI	—
18	0.75	WH	2679	II	—	Lock Actuators Unlock Control 1	18	0.75	WH	2679	VI	—
19	0.75	GY	2681	II	—	Left Front Door Lock Actuator Lock Control	19	0.75	GY	2681	VI	—
20 - 22	—	—	—	—	—	Not Occupied	20 - 22	—	—	—	—	—
23	0.5	WH / GN	5966	II	—	Approach Lamp Control	23	0.5	WH / GN	5966	VI	—
24	—	—	—	—	—	Not Occupied	24	—	—	—	—	—
25	0.5	BU / GN	614	II	—	Seat Memory Switch Set Signal	25	0.35	BU / GN	614	VI	—
26	0.5	BU / YE	7761	II	—	Backup Illumination Lamp Control	26	0.35	BU / YE	7761	VI	—
27	—	—	—	—	—	LED Backlight Dimming Control 1	27	0.5	YE	6817	VI	—
28	—	—	—	—	—	Not Occupied	28	—	—	—	—	—
29	0.5	GN / YE	6134	II	—	Body Control Module LIN Bus 3	29	0.35	GN / YE	6134	VI	—
30	0.5	BN / GN	4246	II	—	Identification Lamp Control	30	0.5	BN / GN	4246	VI	—
31	0.5	BK / WH	1551	II	—	Signal Ground	31	0.5	BK / WH	1551	VI	—

X500 Front Side Door Door Wiring Harness - Left to Body Wiring Harness (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
32	0.35	YE / GY	2933	I	—	Task Lamp Control Left	32	0.35	YE / GY	2933	VI	—
33	0.5	WH	615	II	—	Seat Memory Switch Signal 1	33	0.35	WH	615	VI	—
34 - 45	—	—	—	—	—	Not Occupied	34 - 45	—	—	—	—	—
46	2.5	RD / GY	3540	III	—	Battery Positive Voltage	46	2.5	RD / GY	3540	V	—
47	2.5	BK	1550	III	—	Ground	47	2.5	BK	1550	V	—
48 - 51	—	—	—	—	—	Not Occupied	48 - 51	—	—	—	—	—
52	—	BK	4725	IV	—	Left Sideview Camera LVDS (Low Voltage Differential Signaling) Co-axial Signal	52	—	—	4725	VII	—

X505 Front Side Door Door Wiring Harness - Left to Front Side Door Door Lock Door Wiring Harness - Left

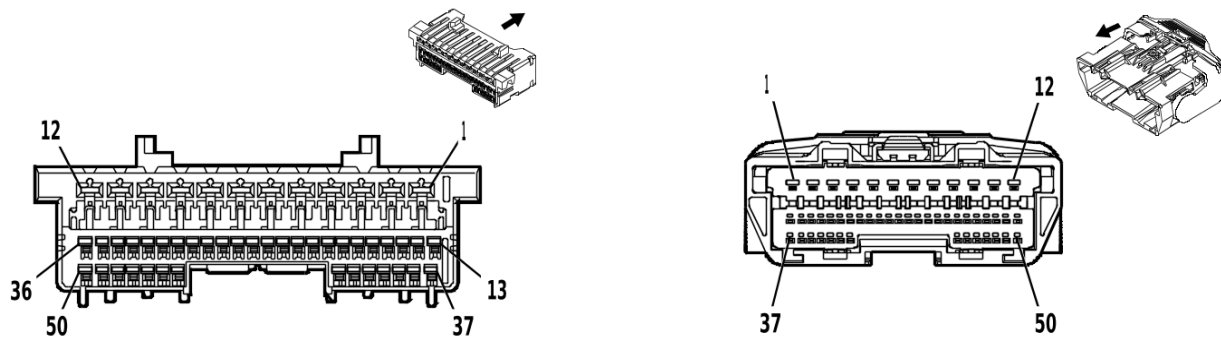

4997556

5022037

Connector Part Information

Harness Type: Front Side Door Door Wiring Harness - Left
 OEM Connector: 35283943
 Service Connector: Service by Harness - See Part Catalog
 Description: 50-Way F 1.2, 2.8 OCS Series(BK)

Connector Part Information

Harness Type: Front Side Door Door Lock Door Wiring Harness - Left
 OEM Connector: 33390111
 Service Connector: Service by Harness - See Part Catalog
 Description: 50-Way M 1.2, 2.8 OCS Series(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required
II	Not required	J-35616-4A (PU)	No Tool Required
III	Not required	J-35616-17 (L-GN)	No Tool Required
IV	Not required	J-35616-5 (PU)	No Tool Required

X505 Front Side Door Door Wiring Harness - Left to Front Side Door Door Lock Door Wiring Harness - Left

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.5	RD / BU	1240	II	—	Battery Positive Voltage	1	0.5	RD / BU	1240	IV	—
2	0.5	GY / YE	1760	II	—	Left Side Object Detection LED Control	2	0.35	GY / YE	1760	IV	—
3	—	—	—	—	—	Not Occupied	3	—	—	—	—	—
4	0.5	GY / GN	2763	II	—	Window Switch Left Front Up Signal	4	0.5	GY / GN	2763	IV	—
5	0.5	BN	10201	II	—	Left Front Mirror Motor Extend Control	5	0.5	BN	10201	IV	—
6	0.5	WH / BN	2764	II	—	Window Switch Left Front Down Signal	6	0.5	WH / BN	2764	IV	—
7	—	—	—	—	—	Not Occupied	7	—	—	—	—	—

X505 Front Side Door Door Wiring Harness - Left to Front Side Door Door Lock Door Wiring Harness - Left (cont'd)


Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
8	0.5	GN	2766	II	—	Power Window Switch Left Front Express Signal	8	0.5	GN	2766	IV	—
9	0.5	WH / BK	10202	II	—	Left Front Mirror Motor Retract Control	9	0.5	WH / BK	10202	IV	—
10 - 11	—	—	—	—	—	Not Occupied	10 - 11	—	—	—	—	—
12	0.5	GY / WH	2785	II	—	Left Front Mirror Motor Fold Out Control	12	0.5	GY / WH	2785	IV	—
13	0.5	WH / GN	2786	I	—	Left Front Mirror Motor Fold In Control	13	0.5	WH / GN	2786	III	—
14	0.5	GY / BN	2787	I	—	Left Front Mirror Position Sensor Up [+] Down [-] Signal	14	0.5	GY / BN	2787	III	—
15	0.5	VT / BU	2788	I	—	Left Front Mirror Motor Up [+] Down [-] Control	15	0.5	VT / BU	2788	III	—
16	0.5	YE / BN	2789	I	—	Left Front Mirror Motor Common Control	16	0.5	YE / BN	2789	III	—
17	0.5	BN / BK	2790	I	—	Left Front Mirror Motor Right [+] Left [-] Control	17	0.5	BN / BK	2790	III	—
18	0.5	VT / RD	2791	I	—	Left Front Mirror Position Sensor High Reference	18	0.5	VT / RD	2791	III	—
19	0.5	WH / YE	2792	I	—	Left Front Mirror Position Sensor Left [-] Right [+] Signal	19	0.5	WH / YE	2792	III	—
20	0.5	WH	606	I	—	Left Outside Rearview Mirror Heater Control	20	0.5	WH	606	III	—
21	0.5	GN / YE	6134	I	—	Body Control Module LIN Bus 3	21	0.5	GN / YE	6134	III	—
22	0.5	BU / GN	614	I	—	Seat Memory Switch Set Signal	22	0.5	BU / GN	614	III	—
23	0.5	WH	615	I	—	Seat Memory Switch Signal 1	23	0.5	WH	615	III	—

7-728 Electrical Component and Inline Harness Connector End Views


X505 Front Side Door Door Wiring Harness - Left to Front Side Door Door Lock Door Wiring Harness - Left (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
24	0.5	BK / BN	673	I	—	Left Outside Rearview Mirror Position Sensor Low Reference	24	0.5	BK / BN	673	III	—
25	—	—	—	—	—	LED Backlight Dimming Control 1	25	0.5	YE	6817	III	—
26	—	—	—	—	—	Not Occupied	26	—	—	—	—	—
27	0.5	BK	1550	I	—	Ground	27	0.5	BK	1550	III	—
28	0.5	BK / WH	1551	I	—	Signal Ground	28	0.5	BK / WH	1551	III	—
29	0.5	WH / VT	4258	I	—	Left Front Door Lock Status Signal	29	0.5	WH / VT	4258	III	—
30 - 50	—	—	—	—	—	Not Occupied	30 - 50	—	—	—	—	—

X600 Front Side Door Door Wiring Harness - Right to Body Wiring Harness

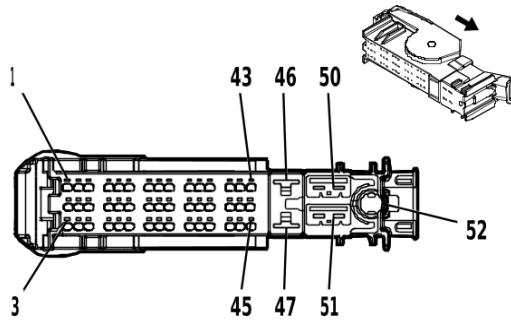

4992530

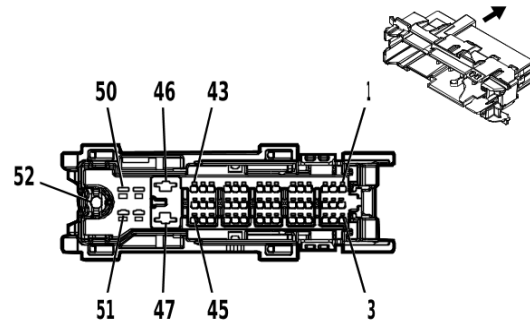

4993484

Connector Part Information

Harness Type: Front Side Door Door Wiring Harness - Right
 OEM Connector: 35077349
 Service Connector: Service by Harness - See Part Catalog
 Description: 52-Way F 1.2, 2.8, 6.3, Coaxial Series(BK)

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 35190453
 Service Connector: 13527236
 Description: 52-Way M 1.2, 2.8, 6.3, Coaxial Series(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-12 (BU)	No Tool Required
II	Not required	J-35616-16 (L-GN)	No Tool Required
III	Not required	J-35616-42 (RD)	No Tool Required
IV	Not required	J-35616-64B (L-BU)	No Tool Required
V	19301536	J-35616-43 (RD)	J-38125-11A
VI	84616651	J-35616-13 (BU)	J-38125-215A
VII	Not required	J-35616-64B (L-BU)	No Tool Required

X600 Front Side Door Door Wiring Harness - Right to Body Wiring Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1 - 4	—	—	—	—	—	Not Occupied	1 - 4	—	—	—	—	—
5	0.75	YE	200	II	—	Right Front Speaker 1 [+] Control	5	0.75	YE	200	VI	—
6	0.75	YE / BK	117	II	—	Right Front Speaker [-] Control 1	6	0.75	YE / BK	117	VI	—
7	—	—	—	—	—	Not Occupied	7	—	—	—	—	—
8	0.5	BN / OG	2134	II	—	Right Front Side Impact Sensor Signal	8	0.5	BN / OG	2134	VI	—
9	0.5	BK / OG	6629	II	—	Right Front Side Impact Sensor Low Reference	9	0.5	BK / OG	6629	VI	—

7-730 Electrical Component and Inline Harness Connector End Views


X600 Front Side Door Door Wiring Harness - Right to Body Wiring Harness (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
10	0.5	GN / YE	4303	II	—	Passive Entry Right Front Door Antenna Signal High	10	0.35	GN / YE	4303	VI	—
11	0.5	GN / BK	4304	II	—	Passive Entry Right Front Door Antenna Signal Low	11	0.35	GN / BK	4304	VI	—
12	—	—	—	—	—	Not Occupied	12	—	—	—	—	—
13	0.5	GN / GY	2115	II	—	Right Turn Signal Lamp Control 2	13	0.35	GN / GY	2115	VI	—
14	0.5	GY / VT	2676	II	—	Right Front Door Exterior Switch Unlock Signal	14	0.35	GY / VT	2676	VI	—
15	0.75	GY / BK	2680	II	—	Lock Actuators Unlock Control 2	15	0.75	GY / BK	2680	VI	—
16	0.75	YE / GN	2682	II	—	Right Front Door Lock Actuator Lock Control	16	0.75	YE / GN	2682	VI	—
17 - 19	—	—	—	—	—	Not Occupied	17 - 19	—	—	—	—	—
20	0.5	WH / GN	5966	II	—	Approach Lamp Control	20	0.5	WH / GN	5966	VI	—
21	—	—	—	—	—	Not Occupied	21	—	—	—	—	—
22	0.5	BK / GY	626	II	—	Engine Control Vehicle Sensors Low Reference 1	22	0.5	BK / GY	626	VI	—
23	0.5	BU / GY	636	II	—	Ambient Air Temperature Sensor Signal	23	0.5	BU / GY	636	VI	—
24	—	—	—	—	—	LED Backlight Dimming Control 1	24	0.5	YE	6817	VI	—
25	—	—	—	—	—	Not Occupied	25	—	—	—	—	—
26	0.5	BU / YE	7761	II	—	Backup Illumination Lamp Control	26	0.35	BU / YE	7761	VI	—
27	—	—	—	—	—	Not Occupied	27	—	—	—	—	—
28	0.5	BK / WH	1451	II	—	Signal Ground	28	0.75	BK / WH	1451	VI	—
29	0.5	GN / YE	6134	II	—	Body Control Module LIN Bus 3	29	0.35	GN / YE	6134	VI	—
30	0.35	YE / WH	2934	I	—	Task Lamp Control Right	30	0.35	YE / WH	2934	VI	—

X600 Front Side Door Door Wiring Harness - Right to Body Wiring Harness (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
31	0.5	BN / GN	4246	II	—	Identification Lamp Control	31	0.5	BN / GN	4246	VI	—
32 - 43	—	—	—	—	—	Not Occupied	32 - 43	—	—	—	—	—
44	0.5	BK / YE	1691	II	—	Automatic Day/Night Mirror Low Reference	44	0.35	BK / YE	1691	VI	—
45	0.5	YE / WH	1690	II	—	Mirror Dimming Signal	45	0.35	YE / WH	1690	VI	—
46	2.5	RD / BN	4240	III	—	Battery Positive Voltage	46	2.5	RD / BN	4240	V	—
47	2.5	BK	1350	III	—	Ground	47	2.5	BK	1350	V	—
48 - 51	—	—	—	—	—	Not Occupied	48 - 51	—	—	—	—	—
52	—	BK	4724	IV	—	Right Side-view Camera LVDS (Low Voltage Differential Signaling) Co-axial Signal	52	—	—	4724	VII	—

X605 Front Side Door Door Wiring Harness - Right to Front Side Door Door Lock Door Wiring Harness - Right

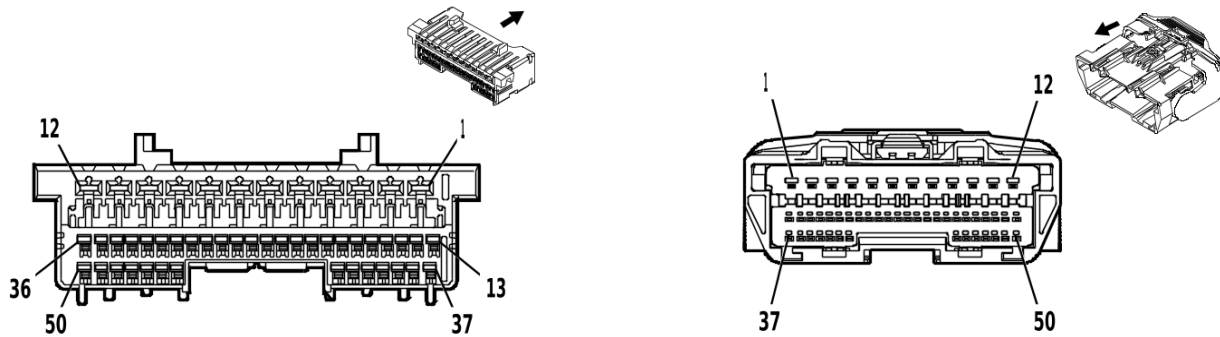

4997556

5022037

Connector Part Information

Harness Type: Front Side Door Door Wiring Harness - Right
 OEM Connector: 35283943
 Service Connector: Service by Harness - See Part Catalog
 Description: 50-Way F 1.2, 2.8 OCS Series(BK)

Connector Part Information

Harness Type: Front Side Door Door Lock Door Wiring Harness - Right
 OEM Connector: 33390111
 Service Connector: Service by Harness - See Part Catalog
 Description: 50-Way M 1.2, 2.8 OCS Series(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required
II	Not required	J-35616-4A (PU)	No Tool Required
III	Not required	J-35616-17 (L-GN)	No Tool Required
IV	Not required	J-35616-5 (PU)	No Tool Required

X605 Front Side Door Door Wiring Harness - Right to Front Side Door Door Lock Door Wiring Harness - Right

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	2.5	RD / BN	4240	II	—	Battery Positive Voltage	1	2.5	RD / BN	4240	IV	—
2	0.5	GN	1184	II	—	Window Switch Right Front Up Signal	2	0.5	GN	1184	IV	—
3	0.5	GY	1761	II	—	Right Side Object Detection LED Control	3	0.35	GY	1761	IV	—
4	—	—	—	—	—	Not Occupied	4	—	—	—	—	—
5	0.5	VT / GY	2765	II	—	Window Switch Right Front Express Signal	5	0.5	VT / GY	2765	IV	—
6 - 7	—	—	—	—	—	Not Occupied	6 - 7	—	—	—	—	—
8	0.5	YE / WH	2793	II	—	Right Front Mirror Motor Fold Out Control	8	0.5	YE / WH	2793	IV	—

X605 Front Side Door Door Wiring Harness - Right to Front Side Door Door Lock Door Wiring Harness - Right (cont'd)


Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
9	0.5	BU / GY	2794	II	—	Right Front Mirror Motor Fold In Control	9	0.5	BU / GY	2794	IV	—
10	2.5	BK	1350	II	—	Ground	10	2.5	BK	1350	IV	—
11	2	GN / GY	666	II	—	Right Front Window Motor Up Control	11	2.5	GN / GY	666	IV	—
12	2	YE / BU	667	II	—	Right Front Window Motor Down Control	12	2.5	YE / BU	667	IV	—
13	0.5	GN / BK	2798	I	—	Right Front Mirror Motor Right [+] Left [-] Control	13	0.5	GN / BK	2798	III	—
14	0.5	YE / RD	2799	I	—	Right Front Mirror Position Sensor High Reference	14	0.5	YE / RD	2799	III	—
15	0.5	VT / WH	2800	I	—	Right Front Mirror Position Sensor Left [-] Right [+] Signal	15	0.5	VT / WH	2800	III	—
16	0.5	BN	5295	I	—	Window Switch Right Front Down Signal	16	0.5	BN	5295	III	—
17	0.5	BN / VT	607	I	—	Right Outside Rear-view Mirror Heater Control	17	0.5	BN / VT	607	III	—
18	0.5	GN / YE	6134	I	—	Body Control Module LIN Bus 3	18	0.5	GN / YE	6134	III	—
19	0.5	BN / GN	10203	I	—	Right Front Mirror Motor Extend Control	19	0.5	BN / GN	10203	III	—
20	0.5	VT	10204	I	—	Right Front Mirror Motor Retract Control	20	0.5	VT	10204	III	—
21	0.5	BK / GN	675	I	—	Right Outside Rear-view Mirror Position Sensor Low Reference	21	0.5	BK / GN	675	III	—
22	—	—	—	—	—	LED Backlight Dimming Control 1	22	0.5	YE	6817	III	—
23 - 46	—	—	—	—	—	Not Occupied	23 - 46	—	—	—	—	—

7-734 Electrical Component and Inline Harness Connector End Views

X605 Front Side Door Door Wiring Harness - Right to Front Side Door Door Lock Door Wiring Harness - Right (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
47	0.5	GY	746	I	—	Right Front Door Ajar Switch Signal	47	0.5	GY	746	III	—
48	0.5	BU / YE	2795	I	—	Right Front Mirror Position Sensor Up [+] Down [-] Signal	48	0.5	BU / YE	2795	III	—
49	0.5	YE / VT	2796	I	—	Right Front Mirror Motor Up [+] Down [-] Control	49	0.5	YE / VT	2796	III	—
50	0.5	WH	2797	I	—	Right Front Mirror Motor Common Control	50	0.5	WH	2797	III	—

X630 Auxiliary Fuse Block Wiring Harness to Auxiliary Fuse Block Wiring Harness

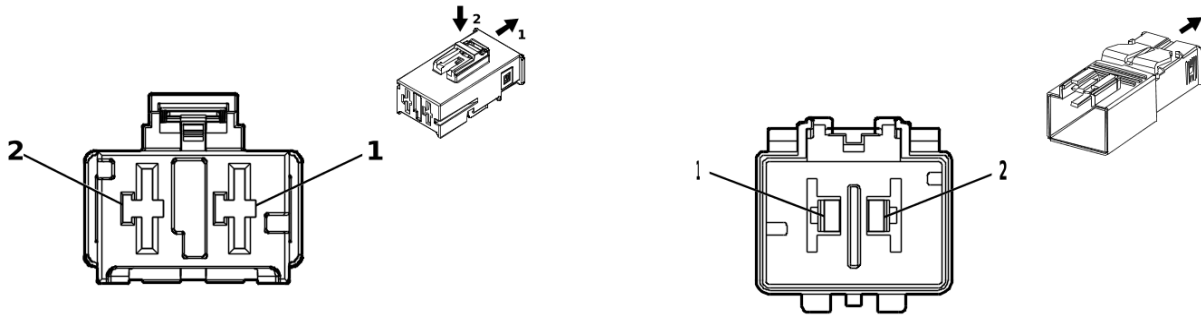

5187955

4891120

Connector Part Information

Harness Type: Auxiliary Fuse Block Wiring Harness
 OEM Connector: 35134698
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 9.5 MCON-LL Series(BK)

Connector Part Information

Harness Type: Auxiliary Fuse Block Wiring Harness
 OEM Connector: 35134697
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way M 9.5 MCON-LL Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-22 (RD)	No Tool Required
II	Not required	J-35616-21 (RD)	No Tool Required


X630 Auxiliary Fuse Block Wiring Harness to Auxiliary Fuse Block Wiring Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	10	RD / VT	542	I	—	Battery Positive Voltage	1	10	RD / VT	542	II	—
2	—	—	—	—	—	Not Occupied	2	—	—	—	—	—

X700 Rear Side Door Door Wiring Harness - Left to Body Wiring Harness

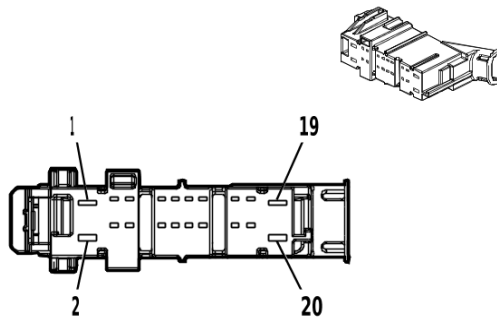

4650257

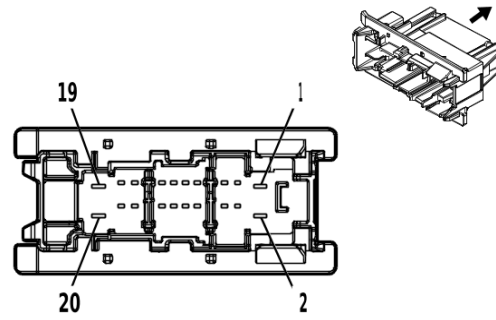

4663657

Connector Part Information

Harness Type: Rear Side Door Door Wiring Harness - Left
 OEM Connector: 33303652
 Service Connector: Service by Harness - See Part Catalog
 Description: 20-Way F 1.2 MCON, 2.8 MCP Series(BK)

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 35215020
 Service Connector: 13527239
 Description: 20-Way M 1.2 MCON, 2.8 MCP Series(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required
II	Not required	J-35616-35 (VT)	No Tool Required
III	13586064	J-35616-5 (PU)	J-38125-36
IV	84616651	J-35616-13 (BU)	J-38125-215A
V	84726946	J-35616-13 (BU)	J-38125-215A


X700 Rear Side Door Door Wiring Harness - Left to Body Wiring Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	2.5	RD / BU	3240	II	—	Battery Positive Voltage	1	2.5	RD / BU	3240	III	—
2-5	—	—	—	—	—	Not Occupied	2-5	—	—	—	—	—
6	0.75	WH	2679	I	—	Lock Actuators Unlock Control 1	6	0.75	WH	2679	IV	—
7	0.75	BU / YE	1091	I	—	Left Rear Door Lock Actuator Lock Control	7	0.75	BU / YE	1091	IV	—
8	—	—	—	—	—	Not Occupied	8	—	—	—	—	—
9	0.5	BK / OG	6623	I	—	Left Rear Side Impact Sensor Low Reference	9	0.5	BK / OG	6623	IV	—
10	—	—	—	—	—	Not Occupied	10	—	—	—	—	—
11	0.5	OG / BU	6622	I	—	Left Rear Side Impact Sensor Signal	11	0.5	OG / BU	6622	IV	—


X700 Rear Side Door Door Wiring Harness - Left to Body Wiring Harness (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
12	0.5	GN / GY	6135	I	—	Body Control Module LIN Bus 4	12	0.35	GN / GY	6135	IV	—
13 - 16	—	—	—	—	—	Not Occupied	13 - 16	—	—	—	—	—
17	0.75	GN	199	I	—	Left Rear Speaker [+] Control	17	1.5 0.75	GN GN	199 199	V IV	UQA UQF
18	0.75	GN / BK	116	I	—	Left Rear Speaker [-] Control	18	1.5 0.75	GN / BK GN / BK	116 116	V IV	UQA UQF
19	—	—	—	—	—	Not Occupied	19	—	—	—	—	—
20	2.5	BK	1550	II	—	Ground	20	2.5	BK	1550	III	—

X800 Rear Side Door Door Wiring Harness - Right to Body Wiring Harness

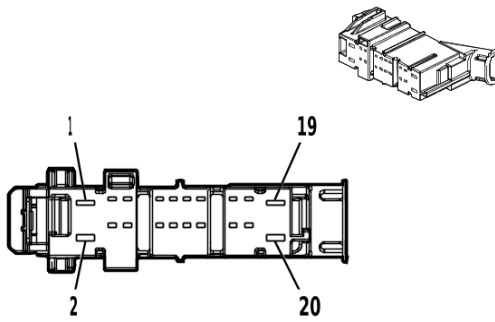

4650257

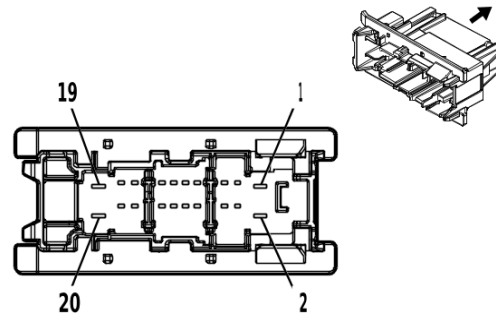

4663657

Connector Part Information

Harness Type: Rear Side Door Door Wiring Harness - Right
 OEM Connector: 33303652
 Service Connector: Service by Harness - See Part Catalog
 Description: 20-Way F 1.2 MCON, 2.8 MCP Series(BK)

Connector Part Information

Harness Type: Body Wiring Harness
 OEM Connector: 35215020
 Service Connector: 13527239
 Description: 20-Way M 1.2 MCON, 2.8 MCP Series(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required
II	Not required	J-35616-35 (VT)	No Tool Required
III	13586064	J-35616-5 (PU)	J-38125-36
IV	84616651	J-35616-13 (BU)	J-38125-215A
V	84726946	J-35616-13 (BU)	J-38125-215A


X800 Rear Side Door Door Wiring Harness - Right to Body Wiring Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	2.5	YE / BK	4840	II	—	Battery Positive Voltage	1	2.5	RD / GY	4840	III	—
2-5	—	—	—	—	—	Not Occupied	2-5	—	—	—	—	—
6	0.75	GY / BK	2680	I	—	Lock Actuators Unlock Control 2	6	0.75	GY / BK	2680	IV	—
7	0.75	VT / WH	1094	I	—	Right Rear Door Lock Actuator Lock Control	7	0.75	VT / WH	1094	IV	—
8	—	—	—	—	—	Not Occupied	8	—	—	—	—	—
9	0.5	BK / OG	6627	I	—	Right Rear Side Impact Sensor Low Reference	9	0.5	BK / OG	6627	IV	—
10	—	—	—	—	—	Not Occupied	10	—	—	—	—	—
11	0.5	OG / WH	6626	I	—	Right Rear Side Impact Sensor Signal	11	0.5	OG / WH	6626	IV	—

X800 Rear Side Door Door Wiring Harness - Right to Body Wiring Harness (cont'd)


Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
12	0.5	GN / GY	6135	I	—	Body Control Module LIN Bus 4	12	0.35	GN / GY	6135	IV	—
13 - 16	—	—	—	—	—	Not Occupied	13 - 16	—	—	—	—	—
17	0.75	WH	46	I	—	Right Rear Speaker [+] Control	17	1.5 0.75	WH WH	46 46	V IV	UQA UQF
18	0.75	BU / BK	115	I	—	Right Rear Speaker [-] Control	18	1.5 0.75	BU / BK BU / BK	115 115	V IV	UQA UQF
19	—	—	—	—	—	Not Occupied	19	—	—	—	—	—
20	2.5	BK	1350	II	—	Ground	20	2.5	BK	1350	III	—

X850 Roof Wiring Harness to Instrument Panel Wiring Harness

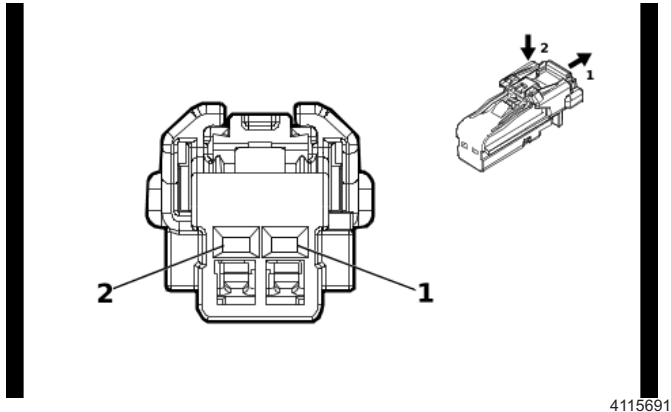

Connector Part Information

Harness Type: Roof Wiring Harness
 OEM Connector: 35311666
 Service Connector: 87816612
 Description: 2-Way F 1.2 MCON Series(BK)

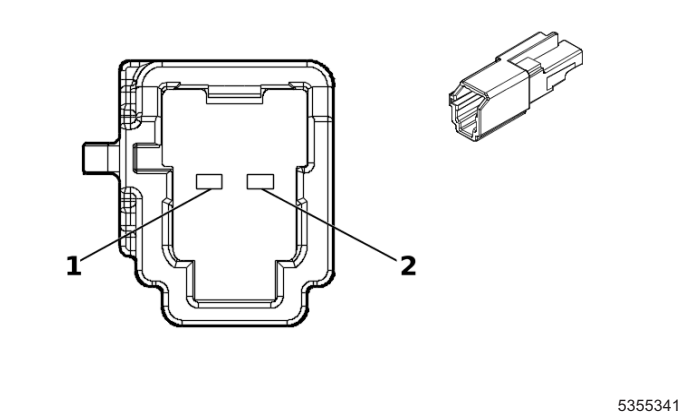

Connector Part Information

Harness Type: Instrument Panel Wiring Harness
 OEM Connector: 35258943
 Service Connector: 84815531
 Description: 2-Way M 1.2 MCON Series(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required
II	Not required	J-35616-17 (L-GN)	No Tool Required


X850 Roof Wiring Harness to Instrument Panel Wiring Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.5	BK	1050	I	—	Ground	1	0.5	BK	1050	II	—
2	0.5	BN / GN	4246	I	—	Identification Lamp Control	2	0.5	BN / GN	4246	II	—

X910A Tail Lamp Wiring Harness - Left to Chassis Wiring Harness - Chassis Cab

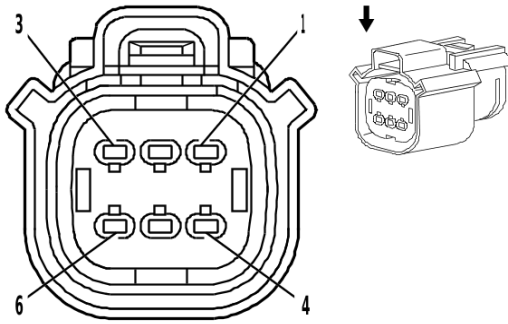

1664625

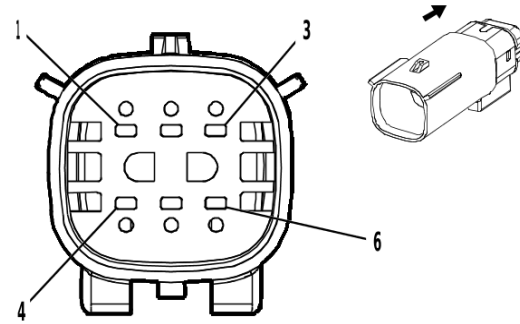

1986159

Connector Part Information

Harness Type: Tail Lamp Wiring Harness - Left
 OEM Connector: Not Available
 Service Connector: Service by Harness - See Part Catalog
 Description: 6-Way F

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 35073434
 Service Connector: 19367742
 Description: 6-Way M 1.5 MX Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required
II	Not required	J-35616-3 (GY)	No Tool Required

X910A Tail Lamp Wiring Harness - Left to Chassis Wiring Harness - Chassis Cab

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.75	BN / BU	6993	I	—	Left Rear Park Lamp Control	1	0.75	BN / BU	6993	II	—
2 - 3	—	—	—	—	—	Not Occupied	2 - 3	—	—	—	—	—
4	0.5	GN / WH	24	I	—	Backup Lamp Control	4	0.5	GN / WH	24	II	—
5	0.75	BU / WH	1334	I	—	Left Rear Turn Signal Lamp Control 2	5	0.75	BU / WH	1334	II	—
6	1	BK / WH	1951	I	—	Signal Ground	6	1	BK / WH	1951	II	—


X910A Tail Lamp Wiring Harness - Left to Chassis Wiring Harness - without Chassis Cab

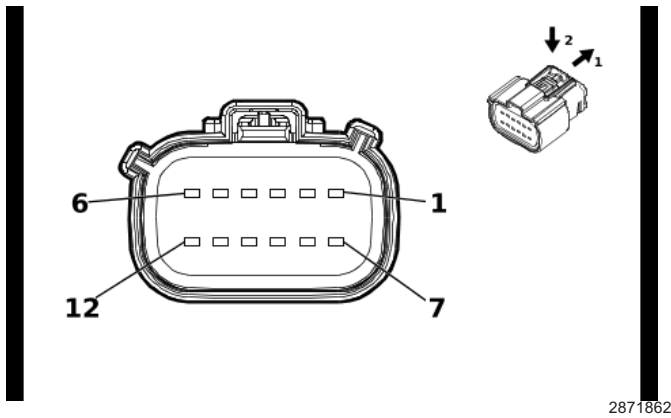

2871862

Connector Part Information

Harness Type: Tail Lamp Wiring Harness - Left
 OEM Connector: Not Available
 Service Connector: Service by Harness - See Part Catalog
 Description: 12-Way F

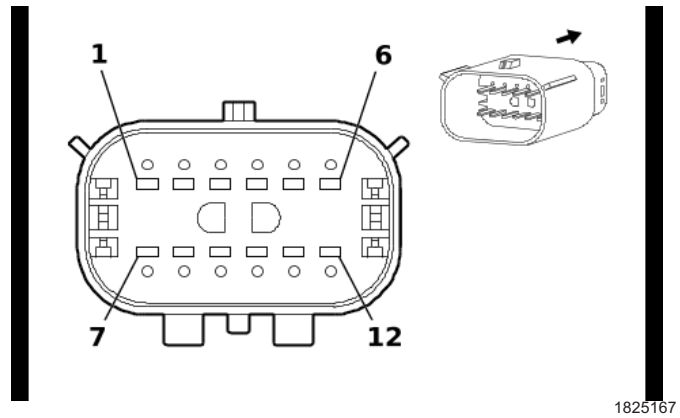

1825167

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 33369138
 Service Connector: 19369242
 Description: 12-Way M 1.5 MX Series, Sealed(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required
II	19119842	J-35616-3 (GY)	J-38125-217


X910A Tail Lamp Wiring Harness - Left to Chassis Wiring Harness - without Chassis Cab

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	1	BK / WH	1951	I	—	Signal Ground	1	1	BK / WH	1951	II	—
2	0.5	RD / WH	640	I	—	Battery Positive Voltage	2	0.5	RD / WH	640	II	—
3	0.75	GY / YE	7542	I	—	Left Rear Stop Lamp Control	3	0.75	GY / YE	7542	II	—
4	0.75	BN / BU	6993	I	—	Left Rear Park Lamp Control	4	0.75	BN / BU	6993	II	—
5	0.75	BU / WH	1334	I	—	Left Rear Turn Signal Lamp Control 2	5	0.75	BU / WH	1334	II	—
6	0.75	WH / VT	6567	I	—	Rear Turn Signal Lamp Feedback Signal	6	0.75	WH / VT	6567	II	—
7	0.5	GN / WH	24	I	—	Backup Lamp Control	7	0.5	GN / WH	24	II	—
8	0.5	YE / GN	2024	I	—	Animation Lighting Control	8	0.5	YE / GN	2024	II	—
9	0.5	GY / BU	7762	I	—	Cargo Lamp Control	9	0.5	GY / BU	7762	II	—

**X910A Tail Lamp Wiring Harness - Left to Chassis Wiring Harness - without Chassis Cab
(cont'd)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
10	0.75	BU / VT	1335	I	—	Right Rear Turn Signal Lamp Control 2	10	0.75	BU / VT	1335	II	—
11	0.5	BN / GN	4246	I	—	Identification Lamp Control	11	0.5	BN / GN	4246	II	—
12	—	—	—	—	—	Not Occupied	12	—	—	—	—	—

X910C Tail Lamp Wiring Harness - Left to Left Side Marker Lamp Harness (DZW)

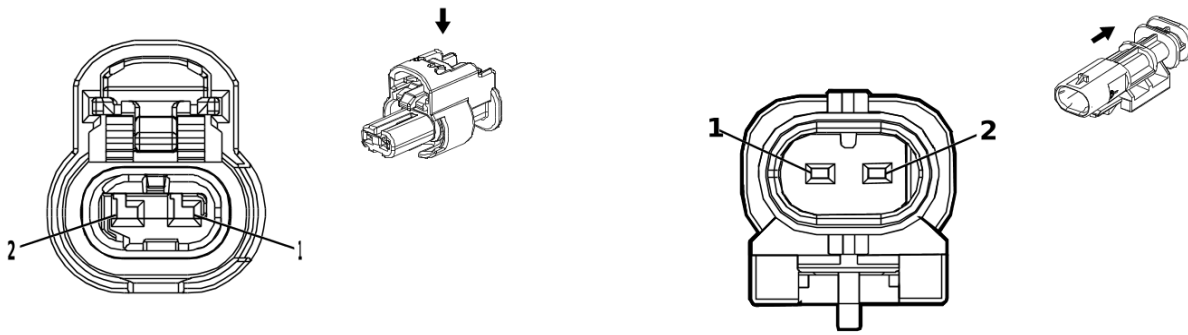

4335931

5200722

Connector Part Information

Harness Type: Right Side Marker Lamp Harness
 OEM Connector: 13512366
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.2 MCON-CB Series, Sealed(BK)

Connector Part Information

Harness Type: Right Side Marker Lamp Harness
 OEM Connector: 13591338
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way M 1.2 MCON Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required
II	Not required	No Tool Required	No Tool Required


X910C Tail Lamp Wiring Harness - Left to Left Side Marker Lamp Harness (DZW)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	—	BK	1951	I	—	Signal Ground	1	—	BK	1951	II	—
2	—	BN / GN	4246	I	—	Identification Lamp Control	2	—	BN / GN	4246	II	—

X918 Endgate Wiring Harness to Chassis Wiring Harness

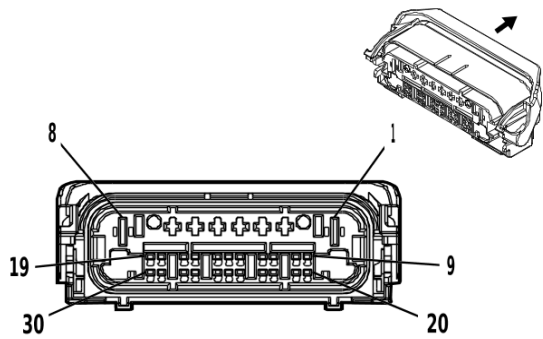

4650150

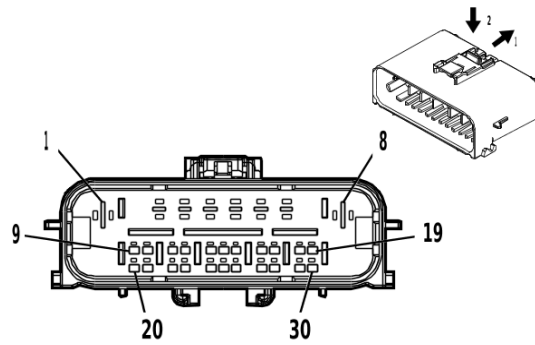

4817393

Connector Part Information

Harness Type: Endgate Wiring Harness
 OEM Connector: 35573111
 Service Connector: Service by Harness - See Part Catalog
 Description: 30-Way F 1.2 MCON, 2.8, 6.3 MCP Series, Sealed(BK)

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 35547577
 Service Connector: 19371177
 Description: 30-Way M 1.2 MCON, 2.8, 6.3 MCP Series, Sealed(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required
II	Not required	J-35616-4A (PU)	No Tool Required
III	13578827	J-35616-5 (PU)	J-38125-36
IV	19330704	J-35616-13 (BU)	J-38125-215A

X918 Endgate Wiring Harness to Chassis Wiring Harness



Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	—	—	—	—	—	Not Occu- pied	1	—	—	—	—	—
2	2.5	RD / VT	4442	II	—	Primary Fused Bat- tery Positive Voltage	2	2.5	RD / VT	4442	III	—
3	2.5	BK	1850	II	—	Ground	3	2.5	BK	1850	III	—
4	1	VT	7725	II	—	Minor Endg- ate Motor Control	4	1	VT	7725	III	—
5	1	YE / BK	7730	II	—	Major Endg- ate Motor Low Refer- ence	5	1	YE / BK	7730	III	—
6	1	GN	1299	II	—	Major Endg- ate Motor Control	6	1	GN	1299	III	—
7 - 8	—	—	—	—	—	Not Occu- pied	7 - 8	—	—	—	—	—
9	0.5	WH / VT	1430	I	—	Exterior Courtesy Lamp Control	9	0.5	WH / VT	1430	IV	—

7-746 Electrical Component and Inline Harness Connector End Views

X918 Endgate Wiring Harness to Chassis Wiring Harness (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
10	0.5	YE	7294	I	—	Minor Endgate Release Switch Discrete Signal Exterior	10	0.5	YE	7294	IV	—
11	0.75	YE / BU	7295	I	—	Left Minor Endgate Ajar Signal	11	0.75	YE / BU	7295	IV	—
12 - 17	—	—	—	—	—	Not Occupied	12 - 17	—	—	—	—	—
18	0.5	BU / VT	4101	I	—	AUTOSAR CAN Bus [+] 4 Serial Data	18	0.5	BU / VT	4101	IV	—
19	0.5	WH	4100	I	—	AUTOSAR CAN Bus [-] 4 Serial Data	19	0.5	WH	4100	IV	—
20	0.5	YE	1144	I	—	Endgate Release Switch Discrete Signal Exterior	20	0.5	YE	1144	IV	—
21	0.5	GY	7292	I	—	Major Endgate Release Switch Signal Exterior	21	0.5	GY	7292	IV	—
22	0.5	WH	4100	I	—	AUTOSAR CAN Bus [-] 4 Serial Data	22	—	—	—	—	—
23	0.5	BU / VT	4101	I	—	AUTOSAR CAN Bus [+] 4 Serial Data	23	—	—	—	—	—
24 - 28	—	—	—	—	—	Not Occupied	24 - 28	—	—	—	—	—
29	0.5	WH	4100	I	—	AUTOSAR CAN Bus [-] 4 Serial Data	29	0.5	WH	4100	IV	—
30	0.5	BU / VT	4101	I	—	AUTOSAR CAN Bus [+] 4 Serial Data	30	0.5	BU / VT	4101	IV	—

X919 Endgate Wiring Harness to Chassis Wiring Harness

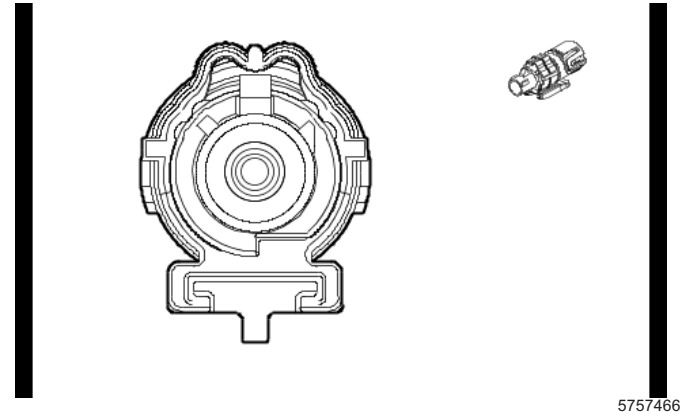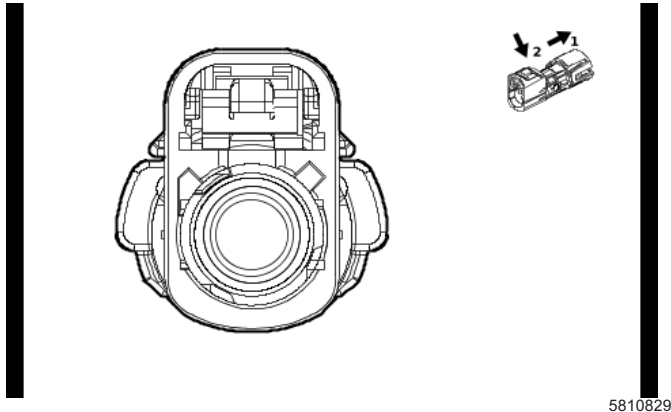

Connector Part Information

Harness Type: Endgate Wiring Harness COAX
 OEM Connector: 35187033
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way F Coax Type(WH)

Connector Part Information

Harness Type: Chassis Wiring Harness COAX
 OEM Connector: 33338240
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way M Coax Type, Sealed(WH)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required


X919 Endgate Wiring Harness to Chassis Wiring Harness

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
—	—	Coax Cable	—	I	—	Rear Vision Camera Co-axial Video Signal	—	—	Coax Cable	—	I	—

X920A Tail Lamp Wiring Harness - Right to Chassis Wiring Harness - Chassis Cab

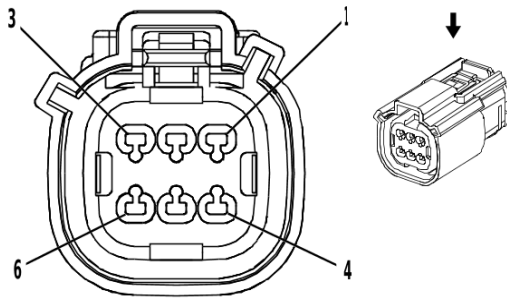

3225042

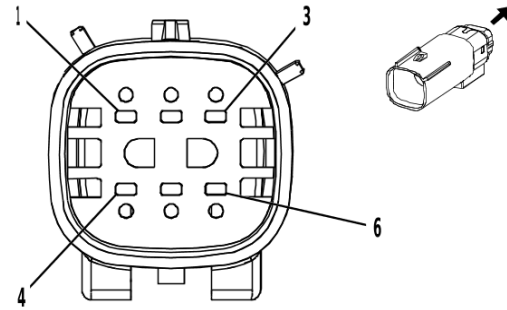

3225221

Connector Part Information

Harness Type: Tail Lamp Wiring Harness - Right
 OEM Connector: Not Available
 Service Connector: Service by Harness - See Part Catalog
 Description: 6-Way F

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 35073435
 Service Connector: 19370461
 Description: 6-Way M 1.5 MX Series, Sealed(GY)



Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required
II	Not required	J-35616-3 (GY)	No Tool Required

X920A Tail Lamp Wiring Harness - Right to Chassis Wiring Harness - Chassis Cab

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.75	BN / GY	6995	I	—	Right Rear Park Lamp Control	1	0.75	BN / GY	6995	II	—
2 - 3	—	—	—	—	—	Not Occupied	2 - 3	—	—	—	—	—
4	0.5	GN / WH	24	I	—	Backup Lamp Control	4	0.5	GN / WH	24	II	—
5	0.75	BU / VT	1335	I	—	Right Rear Turn Signal Lamp Control 2	5	0.75	BU / VT	1335	II	—
6	1	BK	1850	I	—	Ground	6	1	BK	1850	II	—

X920A Tail Lamp Wiring Harness - Right to Chassis Wiring Harness - without Chassis Cab

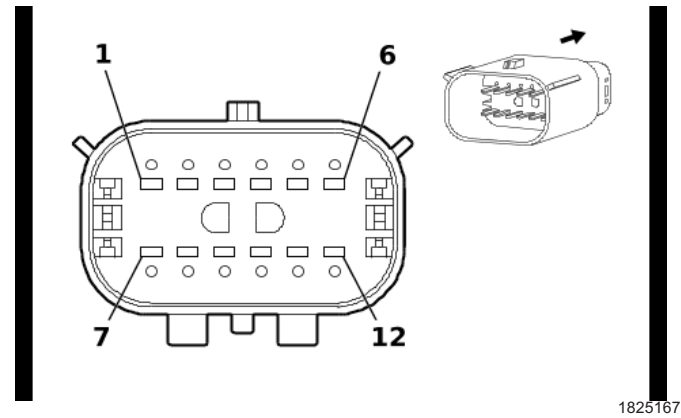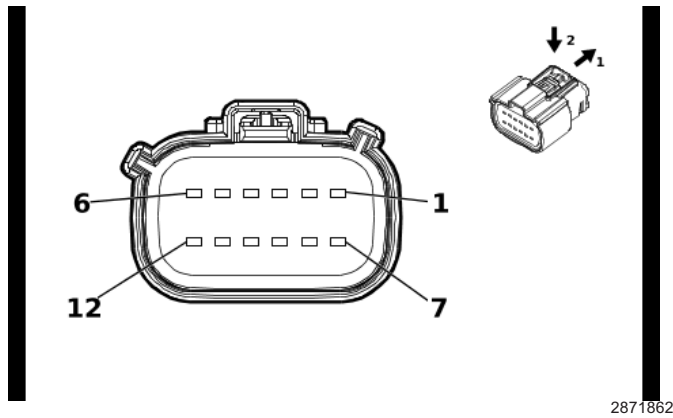

Connector Part Information

Harness Type: Tail Lamp Wiring Harness - Right
 OEM Connector: Not Available
 Service Connector: Service by Harness - See Part Catalog
 Description: 12-Way F

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 33369138
 Service Connector: 19369242
 Description: 12-Way M 1.5 MX Series, Sealed(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required
II	19119842	J-35616-3 (GY)	J-38125-217


X920A Tail Lamp Wiring Harness - Right to Chassis Wiring Harness - without Chassis Cab

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	1	BK	1850	I	—	Ground	1	1	BK	1850	II	—
2	0.5	RD / WH	6440	I	—	Battery Positive Voltage	2	0.5	RD / WH	6440	II	—
3	0.75	WH / YE	7541	I	—	Right Rear Stop Lamp Control	3	0.75	WH / YE	7541	II	—
4	0.75	BN / GY	6995	I	—	Right Rear Park Lamp Control	4	0.75	BN / GY	6995	II	—
5	0.75	BU / VT	1335	I	—	Right Rear Turn Signal Lamp Control 2	5	0.75	BU / VT	1335	II	—
6	0.75	WH / BK	7544	I	—	Right Rear Turn Signal Lamp Feedback Signal	6	0.75	WH / BK	7544	II	—
7	0.5	GN / WH	24	I	—	Backup Lamp Control	7	0.5	GN / WH	24	II	—
8	0.5	YE / GN	2024	I	—	Animation Lighting Control	8	0.5	YE / GN	2024	II	—
9	0.5	GY / BU	7762	I	—	Cargo Lamp Control	9	0.5	GY / BU	7762	II	—

7-750 Electrical Component and Inline Harness Connector End Views**X920A Tail Lamp Wiring Harness - Right to Chassis Wiring Harness - without Chassis Cab
(cont'd)**

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
10	0.75	BU / WH	1334	I	—	Left Rear Turn Signal Lamp Control 2	10	0.75	BU / WH	1334	II	—
11	0.5	BN / GN	4246	I	—	Identification Lamp Control	11	0.5	BN / GN	4246	II	—
12	—	—	—	—	—	Not Occupied	12	—	—	—	—	—

X920C Tail Lamp Wiring Harness - Right to Right Side Marker Lamp Harness (DZW)

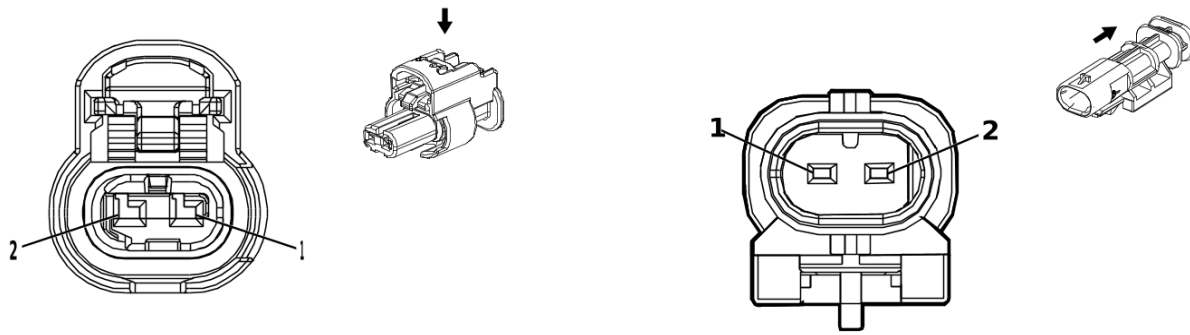

4335931

5200722

Connector Part Information

Harness Type: Right Side Marker Lamp Harness
 OEM Connector: 13512366
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 1.2 MCON-CB Series, Sealed(BK)

Connector Part Information

Harness Type: Right Side Marker Lamp Harness
 OEM Connector: 13591338
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way M 1.2 MCON Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required
II	Not required	No Tool Required	No Tool Required


X920C Tail Lamp Wiring Harness - Right to Right Side Marker Lamp Harness (DZW)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	—	BK	1850	I	—	Ground	1	—	BK	1850	II	—
2	—	BN / GN	4246	I	—	Identification Lamp Control	2	—	BN / GN	4246	II	—

X950 Rear Object Alarm Sensor Wiring Harness to Chassis Wiring Harness - Chassis Cab

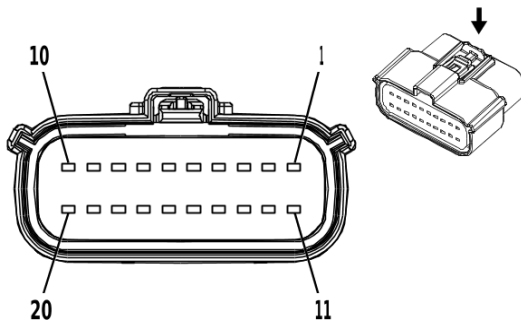

2871898

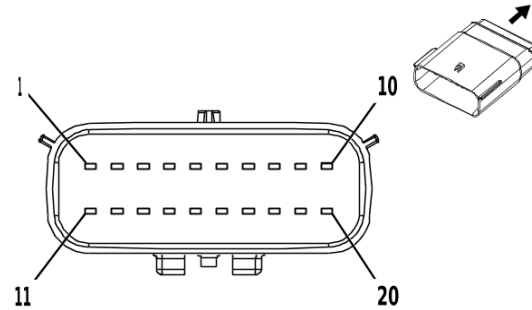

2871861

Connector Part Information

Harness Type: Rear Object Alarm Sensor Wiring Harness
 OEM Connector: 13504367
 Service Connector: Service by Harness - See Part Catalog
 Description: 20-Way F 1.5 MX Series, Sealed(BK)

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 35212395
 Service Connector: 19351705
 Description: 20-Way M 1.5 MX Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required
II	86800300	J-35616-3 (GY)	J-38125-217

X950 Rear Object Alarm Sensor Wiring Harness to Chassis Wiring Harness - Chassis Cab

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1 - 14	—	—	—	—	—	Not Occupied	1 - 14	—	—	—	—	—
15	0.5	GN / YE	6846	I	—	Rear License Plate Lamp Control	15	0.5	GN / YE	6846	II	—
16	0.75	BK	1850	I	—	Ground	16	1	BK	1850	II	—
17 - 20	—	—	—	—	—	Not Occupied	17 - 20	—	—	—	—	—

X950 Rear Object Alarm Sensor Wiring Harness to Chassis Wiring Harness - without Chassis Cab

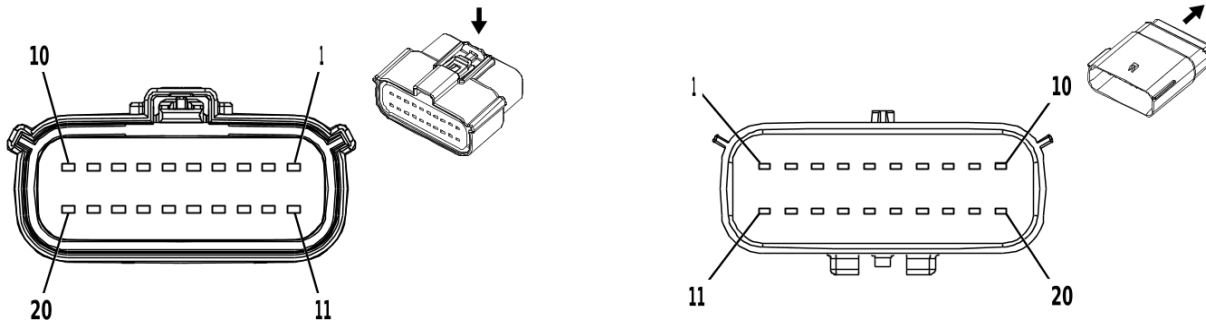

2871898

2871861

Connector Part Information

Harness Type: Rear Object Alarm Sensor Wiring Harness
 OEM Connector: 13504367
 Service Connector: Service by Harness - See Part Catalog
 Description: 20-Way F 1.5 MX Series, Sealed(BK)

Connector Part Information

Harness Type: Chassis Wiring Harness
 OEM Connector: 33181044
 Service Connector: 19351705
 Description: 20-Way M 1.5 MX Series, Sealed(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-2A (GY)	No Tool Required
II	86800300	J-35616-3 (GY)	J-38125-217

X950 Rear Object Alarm Sensor Wiring Harness to Chassis Wiring Harness - without Chassis Cab


Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.5	RD / GN	6940	I	—	Battery Positive Voltage	1	0.5	RD / GN	6940	II	—
2	—	—	—	—	—	Not Occupied	2	—	—	—	—	—
3	0.5	WH	4100	I	—	AUTOSAR CAN Bus [-] 4 Serial Data	3	0.5	WH	4100	II	—
4	0.5	BU / VT	4101	I	—	AUTOSAR CAN Bus [+] 4 Serial Data	4	0.5	BU / VT	4101	II	—
5-8	—	—	—	—	—	Not Occupied	5-8	—	—	—	—	—
9	0.5	BN / WH	2374	I	—	Object Sensor Voltage Reference	9	0.5	BN / WH	2374	II	—
10	0.5	YE	2375	I	—	Left Rear Outer Parking Assist Sensor Signal	10	0.5	YE	2375	II	—
11	0.5	YE / BU	2376	I	—	Left Rear Middle Parking Assist Sensor Signal	11	0.5	YE / BU	2376	II	—

7-754 Electrical Component and Inline Harness Connector End Views


X950 Rear Object Alarm Sensor Wiring Harness to Chassis Wiring Harness - without Chassis Cab (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
12	0.5	YE / WH	2377	I	—	Right Rear Middle Parking Assist Sensor Signal	12	0.5	YE / WH	2377	II	—
13	0.5	YE / VT	2378	I	—	Right Rear Outer Parking Assist Sensor Signal	13	0.5	YE / VT	2378	II	—
14	0.5	BK / GY	2379	I	—	Object Sensor Low Reference	14	0.5	BK / GY	2379	II	—
15	0.5	GN / YE	6846	I	—	Rear License Plate Lamp Control	15	0.5	GN / YE	6846	II	—
16	0.75	BK	1850	I	—	Ground	16	1	BK	1850	II	—
17	0.5	BK / WH	1951	I	—	Signal Ground	17	1	BK	1850	II	—
18 - 20	—	—	—	—	—	Not Occupied	18 - 20	—	—	—	—	—

X950D Engine Wiring Harness Chassis to Engine Wiring Harness (L5P)

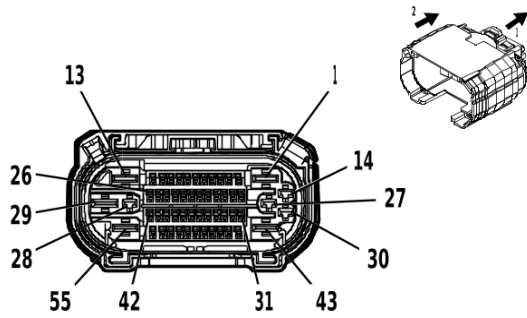

4992168

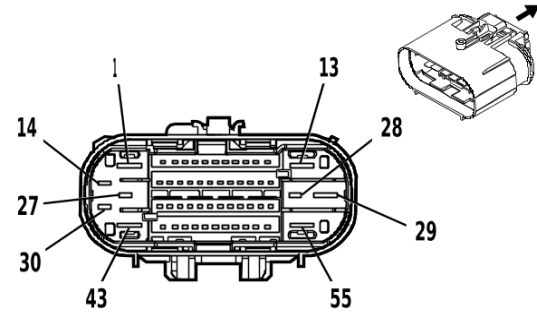

4993301

Connector Part Information

Harness Type: Engine Wiring Harness Chassis
 OEM Connector: 35253720
 Service Connector: Service by Harness - See Part Catalog
 Description: 55-Way F 1.2 OCS, 2.8, 6.3 CTS Series, Sealed(BK)

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 35205187
 Service Connector: 84727364
 Description: 55-Way M 1.2 OCS, 2.8, 6.3 CTS Series, Sealed(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-16 (L-GN)	No Tool Required
II	Not required	J-35616-35 (VT)	No Tool Required
III	Not required	J-35616-40 (BU)	No Tool Required
IV	Not required	J-35616-64B (L-BU)	No Tool Required
V	84847992	J-35616-32 (OG)	J-38125-36
VI	84867140	J-35616-13 (BU)	J-38125-215A
VII	84992391	J-35616-5 (PU)	J-38125-215A

X950D Engine Wiring Harness Chassis to Engine Wiring Harness (L5P)


Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	2.5	GY / BU	1581	III	—	Glow Plug 1 Control	1	2.5	GY / BU	1581	V	—
2-12	—	—	—	—	—	Not Occupied	2-12	—	—	—	—	—
13	2.5	GY / WH	1586	III	—	Glow Plug 6 Control	13	2.5	GY / VT	1586	V	—
14	2.5	GY / BN	1582	II	—	Glow Plug 2 Control	14	2.5	GY / BN	1582	VII	—
15	0.5	WH	4055	IV	—	Private Serial Data Powertrain CAN Bus [+] Serial Data	15	0.5	WH	4055	VI	—
16	0.5	BU / GY	4054	IV	—	Private Serial Data Powertrain CAN Bus [-] Serial Data	16	0.5	BU / GY	4054	VI	—

7-756 Electrical Component and Inline Harness Connector End Views

X950D Engine Wiring Harness Chassis to Engine Wiring Harness (L5P) (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
17	0.5	BK / WH	6151	IV	—	Engine Control Module Ground	17	0.5	BK / WH	6151	VI	—
18	0.5	BK / BU	10597	IV	—	Engine Control Sensors Low Reference 3	18	0.5	BK / BU	10597	VI	—
19	0.5	BN	3681	IV	—	Charge Air Cooler Outlet Temperature Sensor Signal	19	0.5	BN	3681	VI	—
20	0.75	VT / GN	4320	I	—	Powertrain Sensor Bus Enable	20	0.5	VT / GN	4320	VI	—
21	0.5	WH	4055	IV	—	Private Serial Data Powertrain CAN Bus [+] Serial Data	21	0.5	WH	4055	VI	—
22	0.5	BU / GY	4054	IV	—	Private Serial Data Powertrain CAN Bus [-] Serial Data	22	0.5	BU / GY	4054	VI	—
23 - 26	—	—	—	—	—	Not Occupied	23 - 26	—	—	—	—	—
27	2.5	GY / GN	1583	II	—	Glow Plug 3 Control	27	2.5	GY / GN	1583	VII	—
28	2.5	WH / BK	1587	II	—	Glow Plug 7 Control	28	2.5	WH / BK	1587	VII	—
29	—	—	—	—	—	Not Occupied	29	—	—	—	—	—
30	2.5	GY / YE	1584	II	—	Glow Plug 4 Control	30	2.5	GY / YE	1584	VII	—
31 - 42	—	—	—	—	—	Not Occupied	31 - 42	—	—	—	—	—
43	2.5	GY / WH	1585	III	—	Glow Plug 5 Control	43	2.5	GY / WH	1585	V	—
44 - 54	—	—	—	—	—	Not Occupied	44 - 54	—	—	—	—	—
55	2.5	WH / BU	1588	III	—	Glow Plug 8 Control	55	2.5	WH / BU	1588	V	—

X960A Engine Wiring Harness to Engine Wiring Harness Extension (L5P)

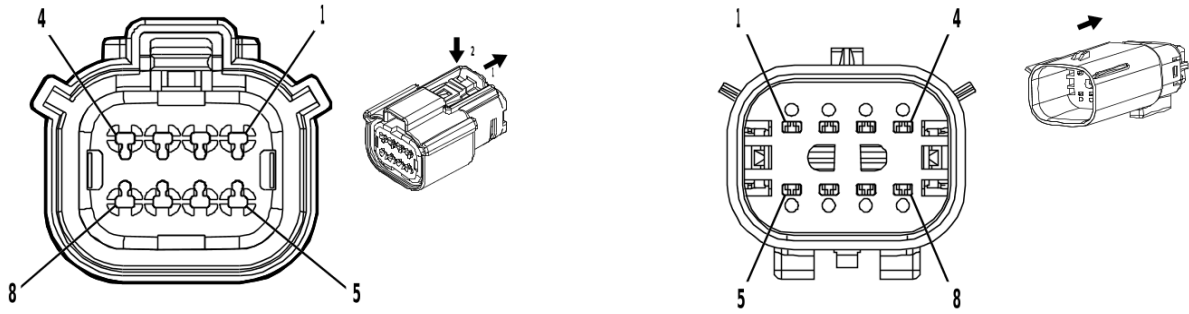

4846407

2667653

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13520069
 Service Connector: 84928314
 Description: 8-Way F 1.5 MX Series, Sealed(BK)

Connector Part Information

Harness Type: Engine Wiring Harness Extension
 OEM Connector: 13520577
 Service Connector: 19370460
 Description: 8-Way M 1.5 MX Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required
II	Not required	J-35616-3 (GY)	No Tool Required


X960A Engine Wiring Harness to Engine Wiring Harness Extension (L5P)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.5	VT / BU	6270	I	—	Crankshaft Position Sensor Voltage	1	0.5	VT / BU	6270	II	—
2	0.5	BK / VT	6272	I	—	Crankshaft Position Sensor Low Reference	2	0.5	BK / VT	6272	II	—
3	0.5	GN	6271	I	—	Crankshaft Position Sensor Signal	3	0.5	GN	6271	II	—
4	0.5	BN / RD	2917	I	—	Fuel Rail Pressure Sensor 5V Reference	4	0.5	BN / RD	2917	II	—
5	0.5	BK / GN	2919	I	—	Fuel Rail Pressure Sensor Low Reference	5	0.5	BK / GN	2919	II	—
6	0.5	BU / WH	2918	I	—	Fuel Rail Pressure Sensor Signal	6	0.5	BU / WH	2918	II	—
7	0.5	BN / YE	2161	I	—	Fuel Rail Pressure Sensor 2 Signal	7	0.5	BN / YE	2161	II	—
8	—	—	—	—	—	Not Occupied	8	—	—	—	—	—

X960B Engine Wiring Harness to Engine Wiring Harness Extension (L5P)

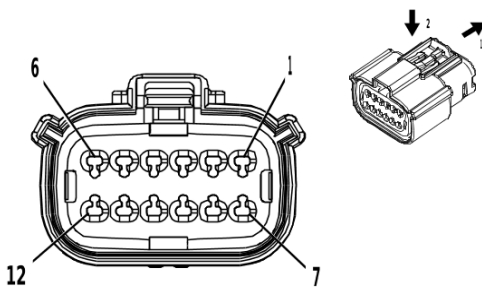

2871860

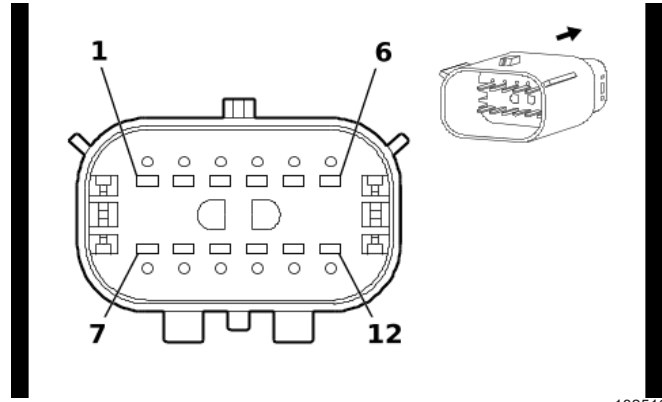

1825167

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13503526
 Service Connector: 19352907
 Description: 12-Way F 1.5 MX Series, Sealed(BK)

Connector Part Information

Harness Type: Engine Wiring Harness Extension
 OEM Connector: 13520579
 Service Connector: 19369242
 Description: 12-Way M 1.5 MX Series, Sealed(BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	19368973	J-35616-2A (GY)	J-38125-217
II	19119842	J-35616-3 (GY)	J-38125-217


X960B Engine Wiring Harness to Engine Wiring Harness Extension (L5P)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.5	BU / RD	460	I	—	Engine Control Sensors 5 Volt Reference 1	1	0.5	BU / RD	460	II	—
2	0.5	BK / YE	548	I	—	Engine Control Sensors Low Reference 1	2	0.5	BK / YE	548	II	—
3	0.5	YE / BN	331	I	—	Oil Pressure Sensor Signal	3	0.5	YE / BN	331	II	—
4	0.5	BU	410	I	—	Engine Coolant Temperature Sensor Signal	4	0.5	BU	410	II	—
5	0.5	BK / YE	548	I	—	Engine Control Sensors Low Reference 1	5	0.5	BK / YE	548	II	—
6	0.5	BK / WH	6151	I	—	Engine Control Module Ground	6	0.5	BK / WH	6151	II	—
7	0.5	BN / GN	1174	I	—	Oil Level Switch Signal	7	0.5	BN / GN	1174	II	—
8-9	—	—	—	—	—	Not Occupied	8-9	—	—	—	—	—

X960B Engine Wiring Harness to Engine Wiring Harness Extension (L5P) (cont'd)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
10	0.5	YE	2928	I	—	Fuel Metering Solenoid Valve High Control	10	0.5	YE	2928	II	—
11	0.5	BN / BK	2929	I	—	Fuel Metering Solenoid Valve Low Control	11	0.5	BN / BK	2929	II	—
12	—	—	—	—	—	Not Occupied	12	—	—	—	—	—

X962 Engine Wiring Harness to Engine Coolant Temperature Sensor Harness (L8T)

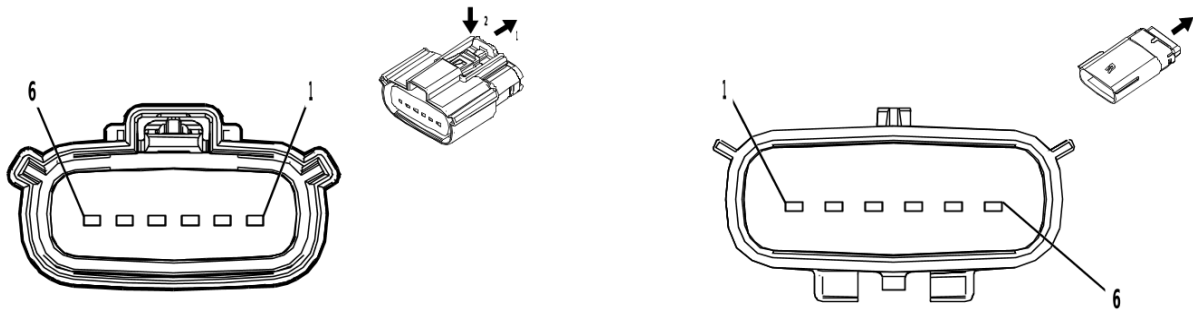

5126816

3277908

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 13544241
 Service Connector: 86801953
 Description: 6-Way F 1.5 Series, Sealed(BK)

Connector Part Information

Harness Type: Engine Coolant Temperature Sensor Harness
 OEM Connector: Not Available
 Service Connector: Service by Harness - See Part Catalog
 Description: 6-Way M (BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-14 (GN)	No Tool Required
II	Not required	No Tool Required	No Tool Required

X962 Engine Wiring Harness to Engine Coolant Temperature Sensor Harness (L8T)


Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.5	BU	410	I	—	Engine Coolant Temperature Sensor Signal	1	0.5	BU	410	II	—
2	0.5	BK / YE	548	I	—	Engine Control Sensors Low Reference 1	2	0.5	BK / YE	548	II	—
3	0.5	YE / BN	331	I	—	Oil Pressure Sensor Signal	3	0.5	YE / BN	331	II	—
4	0.5	BK / YE	548	I	—	Engine Control Sensors Low Reference 1	4	0.5	BK / YE	548	II	—
5	0.5	WH / RD	480	I	—	Engine Control Vehicle Sensors 5 Volt Reference 1	5	0.5	WH / RD	480	II	—
6	—	—	—	—	—	Not Occupied	6	—	—	—	—	—

X977 Engine Wiring Harness Chassis to Accessory Wiring Harness (L5P&VYU)

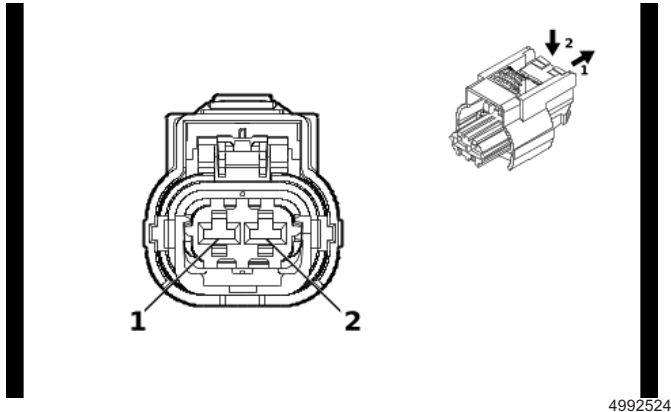

Connector Part Information

Harness Type: Engine Wiring Harness Chassis
 OEM Connector: 35182447
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way F 2.8 MCP Series, Sealed(BK)

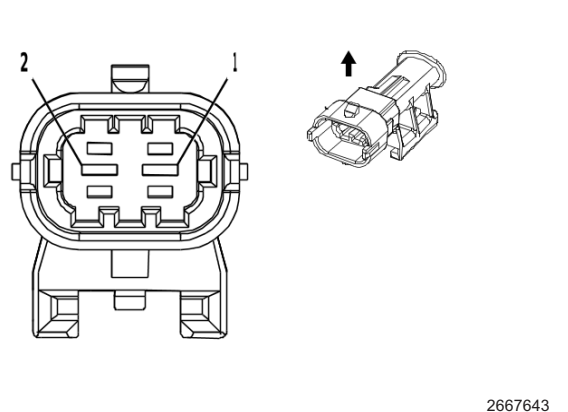

Connector Part Information

Harness Type: Accessory Wiring Harness
 OEM Connector: 10864494
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way M 2.8 Timer Series, Sealed(BK)


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-4A (PU)	No Tool Required
II	Not required	J-35616-5 (PU)	No Tool Required

X977 Engine Wiring Harness Chassis to Accessory Wiring Harness (L5P&VYU)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.5	BN	25	I	—	Charge Indicator Control	1	0.5	BN	25	II	—
2	0.5	GY	23	I	—	Generator Field Duty Cycle Signal	2	0.5	GY	23	II	—


X977 Engine Wiring Harness Chassis to Accessory Wiring Harness (L8T & VYU)

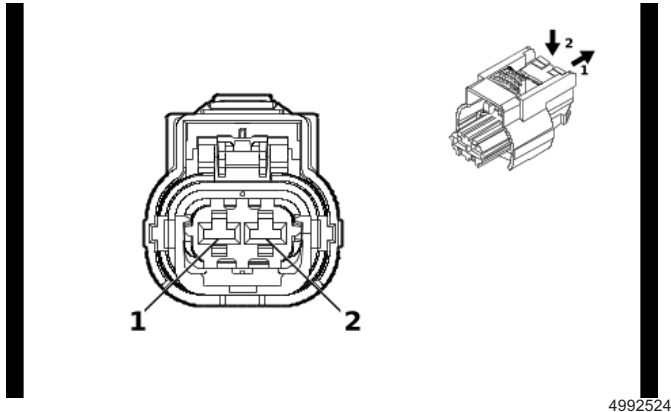

Connector Part Information

Harness Type: Engine Wiring Harness
 OEM Connector: 35182447
 Service Connector: 84941154
 Description: 2-Way F 2.8 MCP Series, Sealed(BK)

4992524

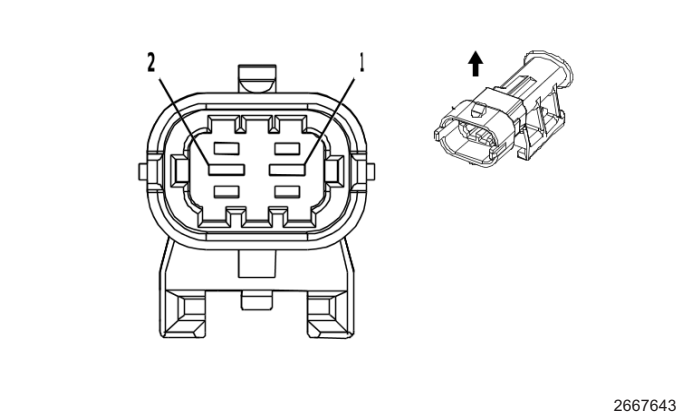

Connector Part Information

Harness Type: Accessory Wiring Harness
 OEM Connector: 10864494
 Service Connector: Service by Harness - See Part Catalog
 Description: 2-Way M 2.8 Timer Series, Sealed(BK)

2667643


Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	J-35616-35 (VT)	No Tool Required
II	Not required	J-35616-5 (PU)	No Tool Required

X977 Engine Wiring Harness Chassis to Accessory Wiring Harness (L8T & VYU)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
1	0.5	BN	25	I	—	Charge Indicator Control	1	0.5	BN	25	II	—
2	0.5	GY	23	I	—	Generator Field Duty Cycle Signal	2	0.5	GY	23	II	—

X985 Rearview Driver Information Camera Rear Closure Coaxial Cable to Inside Rearview Mirror Wiring Harness (DRZ)

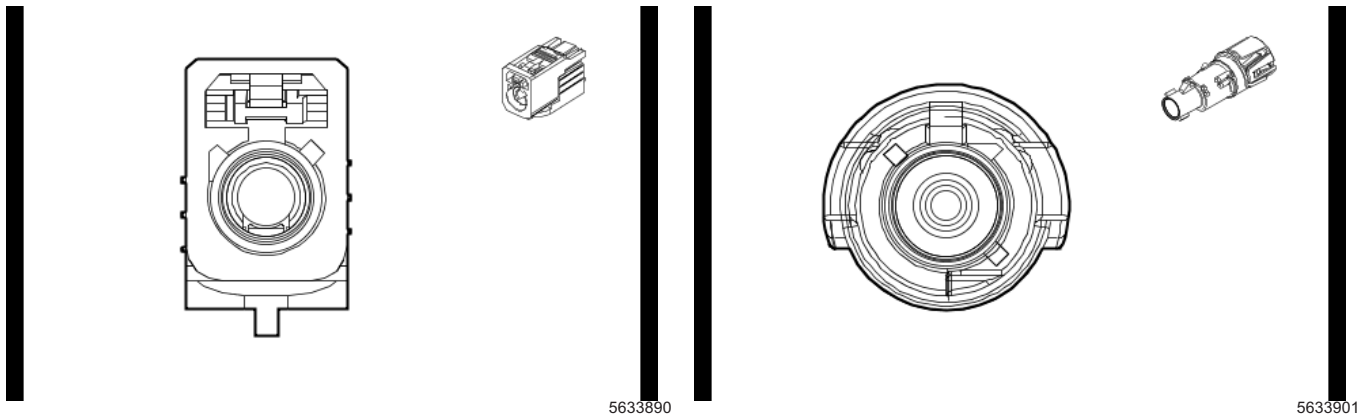

Connector Part Information

Harness Type: Rearview Driver Information Camera Rear Closure Coaxial Cable COAX
 OEM Connector: Not Available
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way F

Connector Part Information

Harness Type: Inside Rearview Mirror Wiring Harness COAX
 OEM Connector: 33355540
 Service Connector: Service by Cable Assembly — See Part Catalog
 Description: 1-Way M Coax Type, Sealed(BU)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal Tool
I	Not required	No Tool Required	No Tool Required



X985 Rearview Driver Information Camera Rear Closure Coaxial Cable to Inside Rearview Mirror Wiring Harness (DRZ)

Pin	Size	Color	Circuit	Terminal Type ID	Option	Function	Pin	Size	Color	Circuit	Terminal Type ID	Option
—	—	Coax Cable	—	I	—	Full Display Mirror Rear Camera Co-axial Video Signal	—	—	Coax Cable	—	I	—


Power Outlets

Schematic and Routing Diagrams


Cigar Lighter/Power Outlet Schematics (Power and Charge Receptacles)

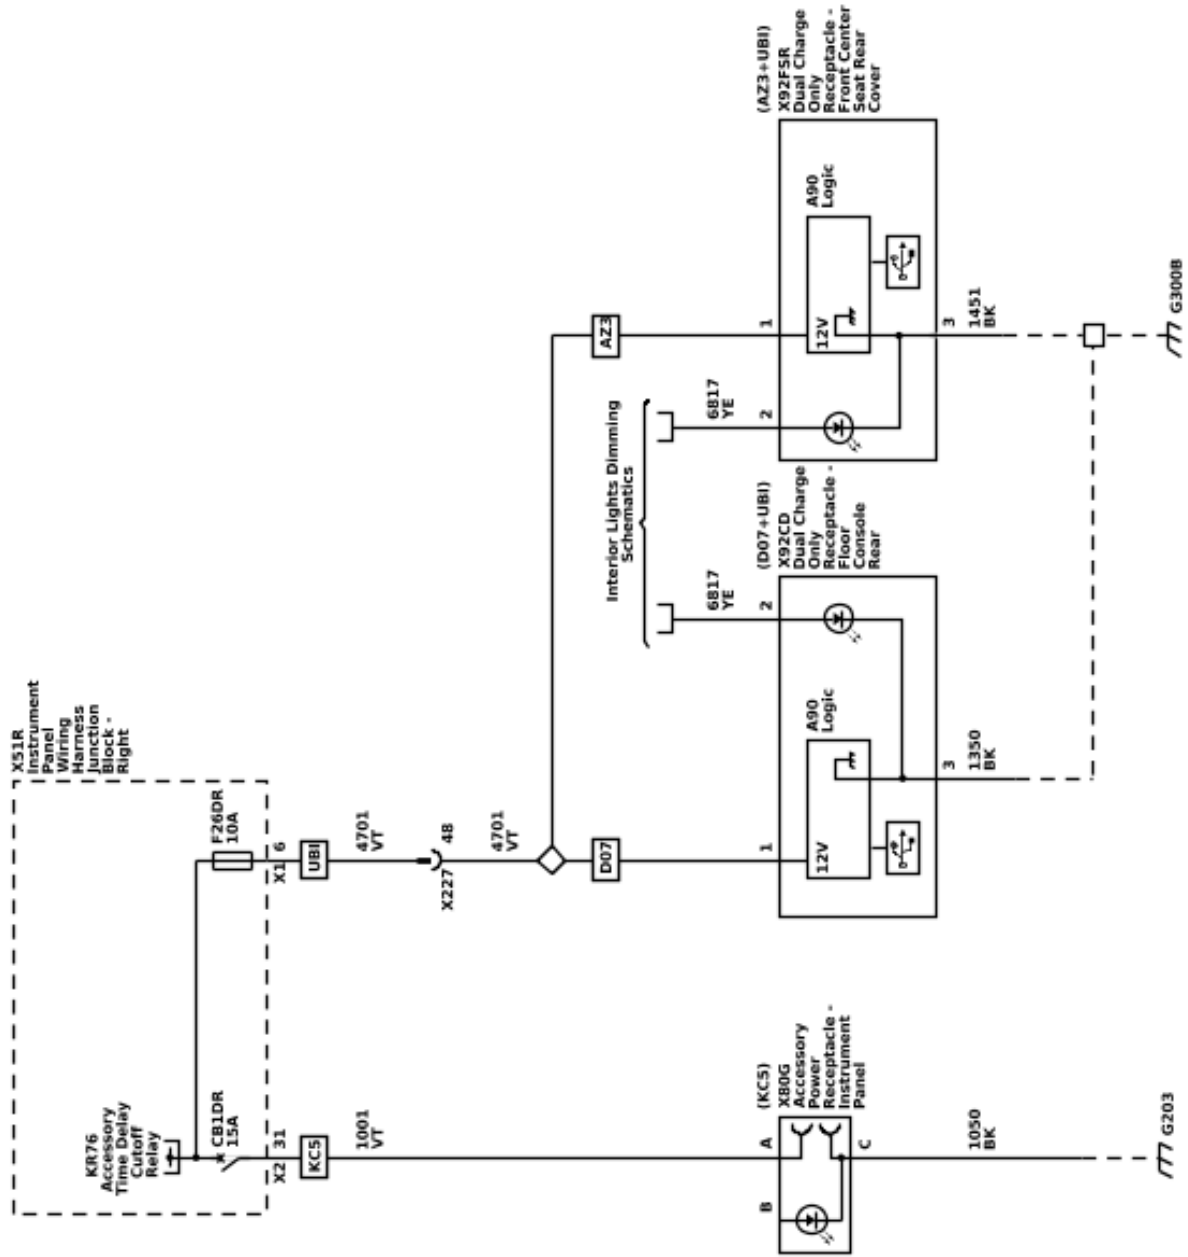


Cigar Lighter/Power Outlet Schematics (Inverter Module Power, Ground, and Serial Data)

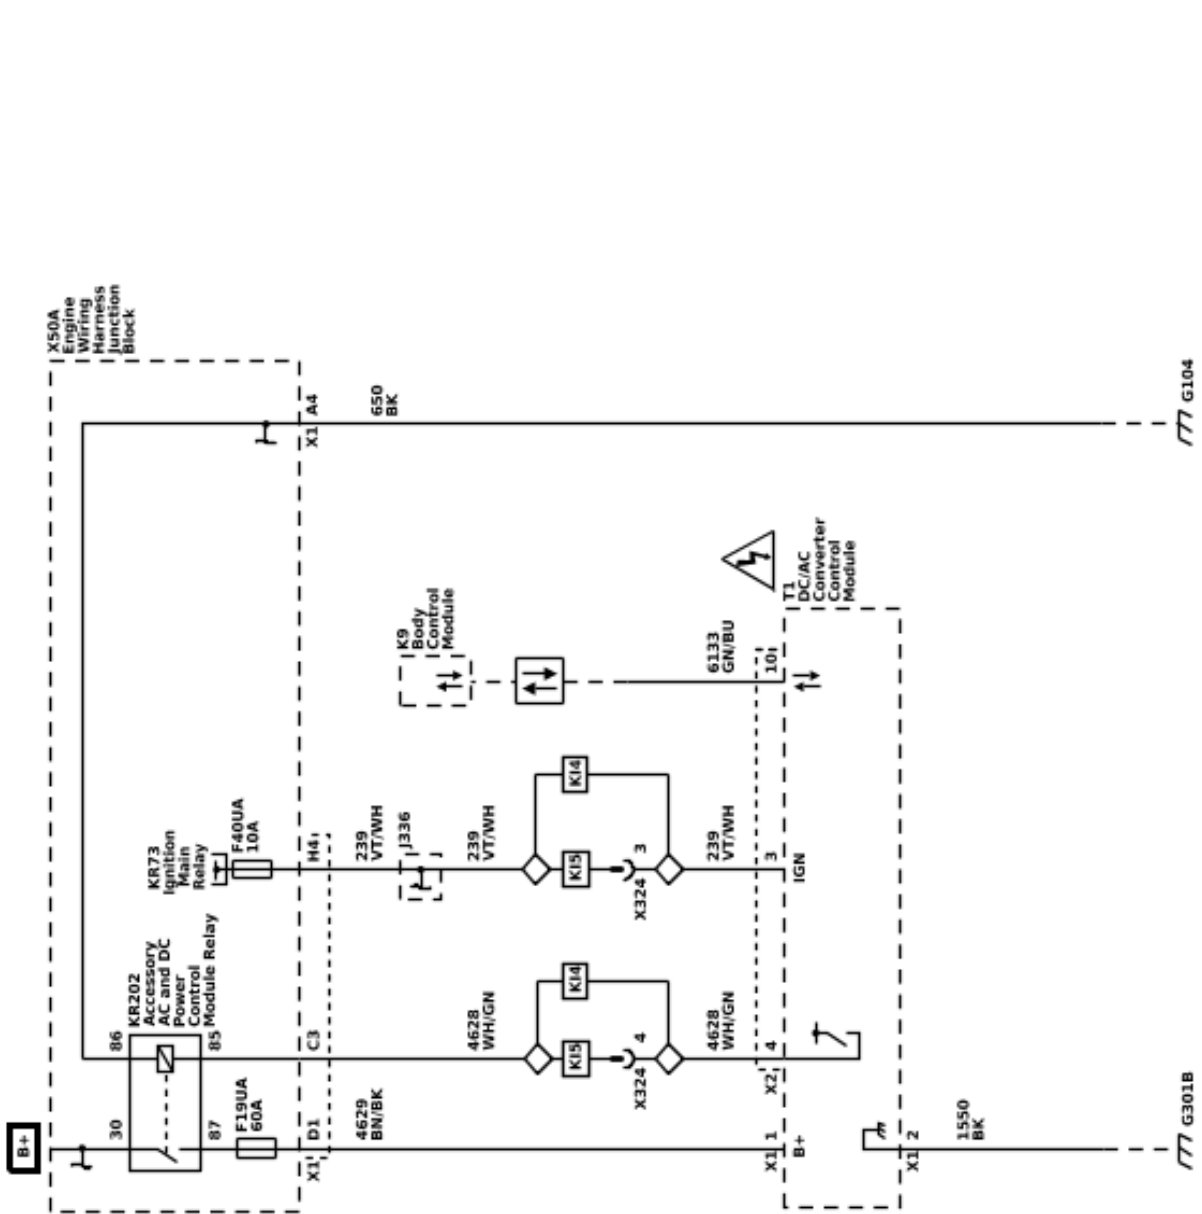


Cigar Lighter/Power Outlet Schematics (110V AC Accessory Power Rear Receptacle - Front Floor Console (K14))

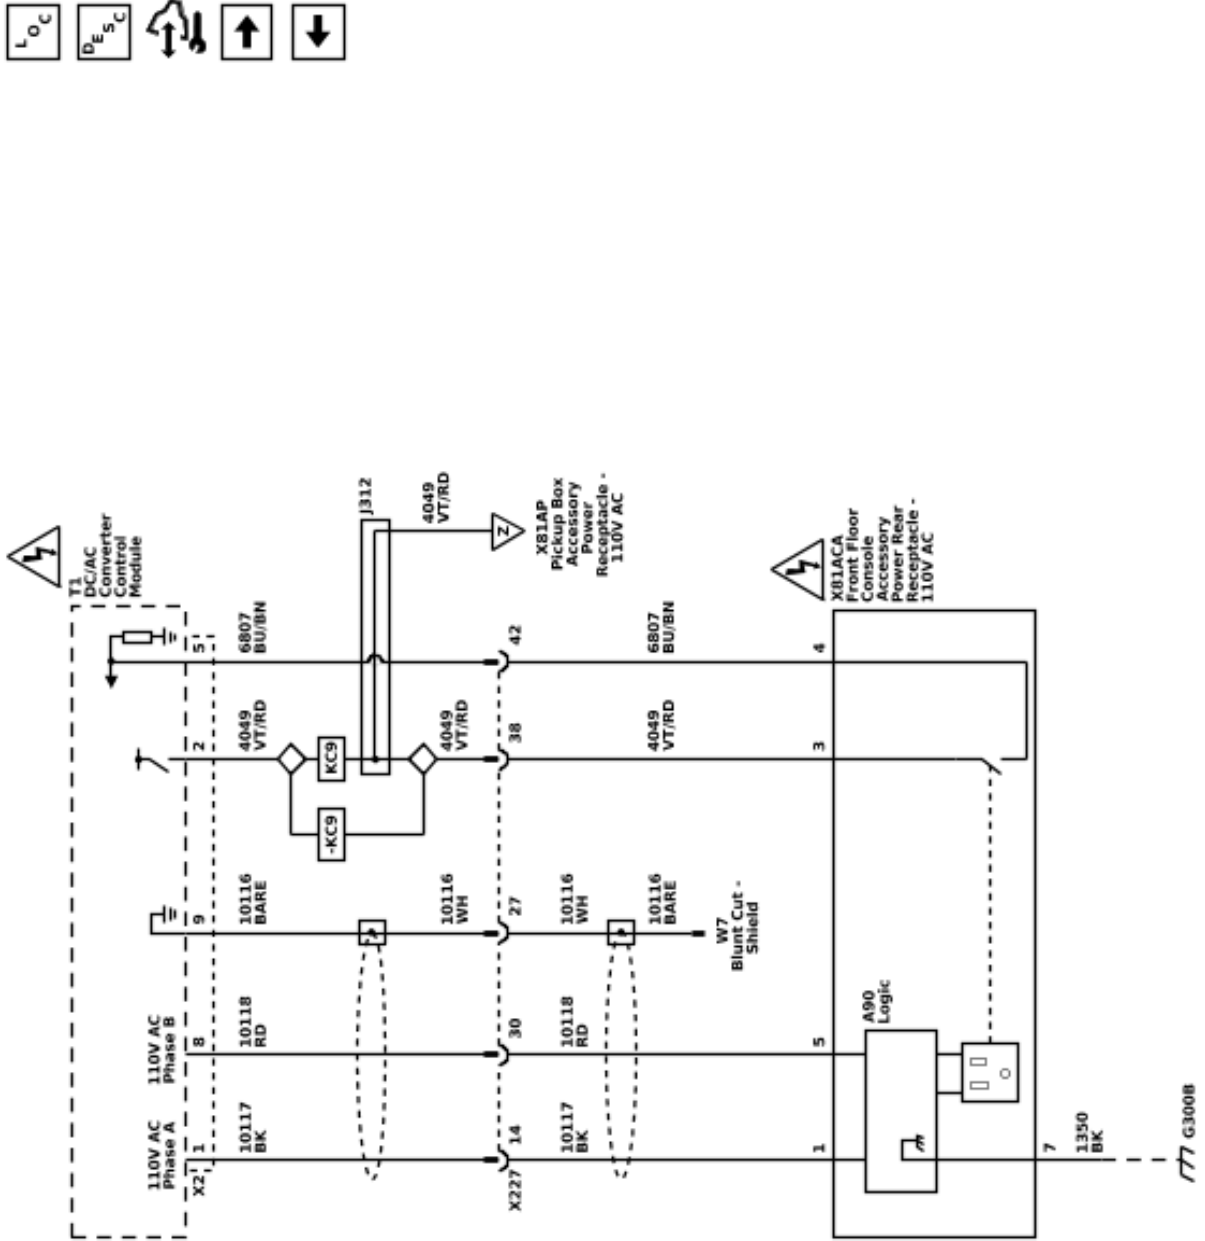

Cigar Lighter/Power Outlet Schematics (220V AC Accessory Power Rear Receptacle - Front Floor Console (K15))

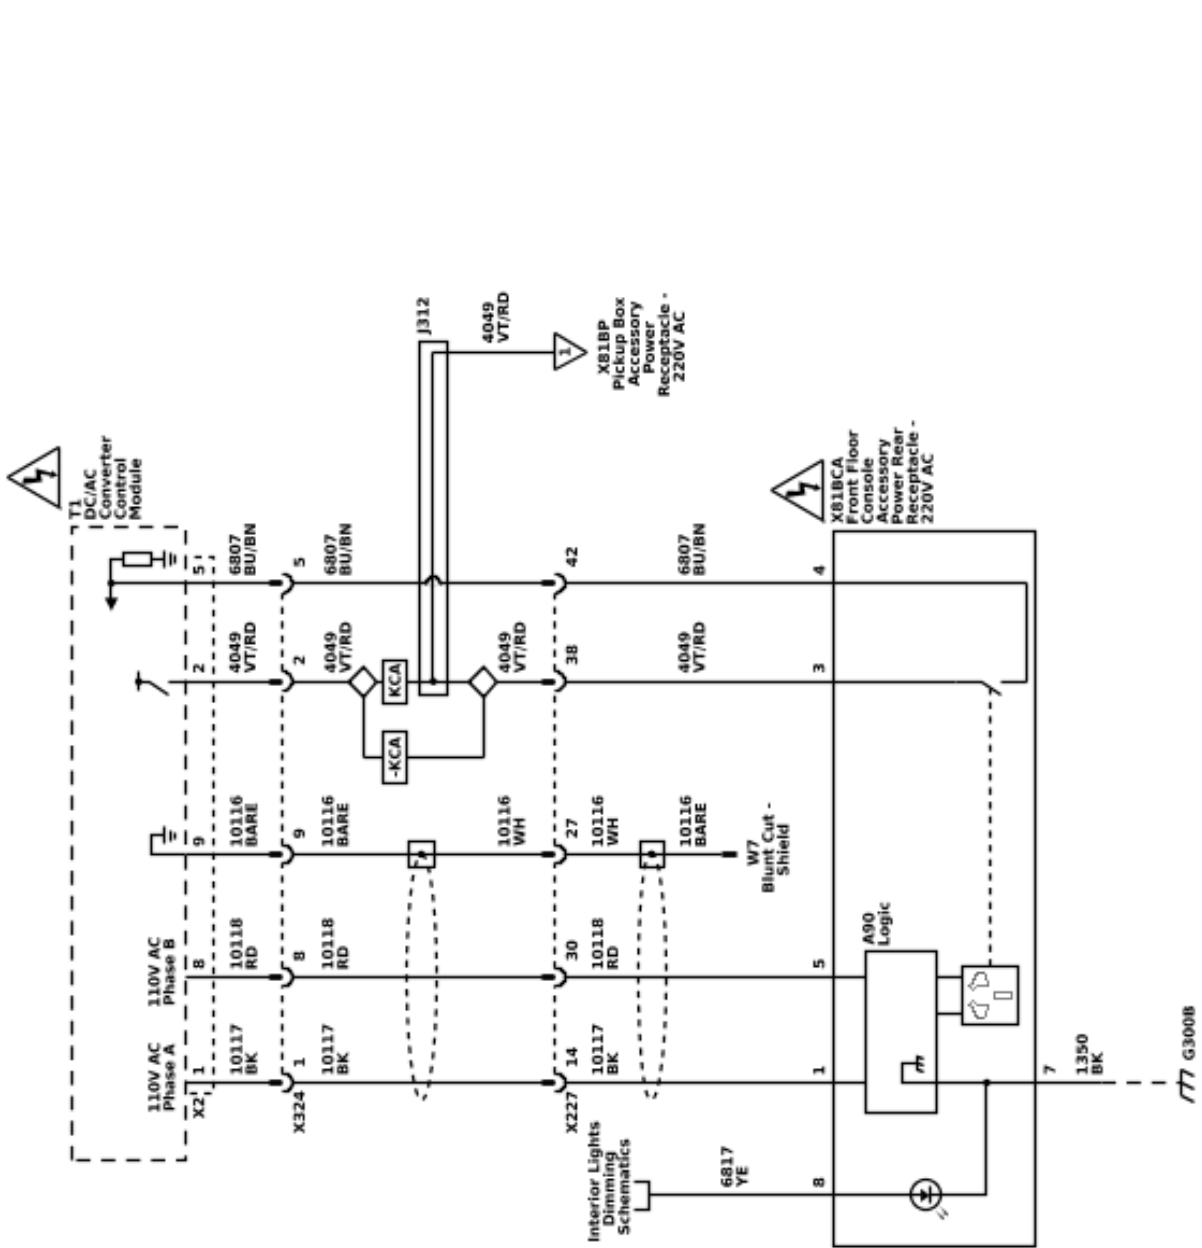


Cigar Lighter/Power Outlet Schematics (110V AC Accessory Power Receptacle - Front Center Seat Rear (KI4&AZ3))

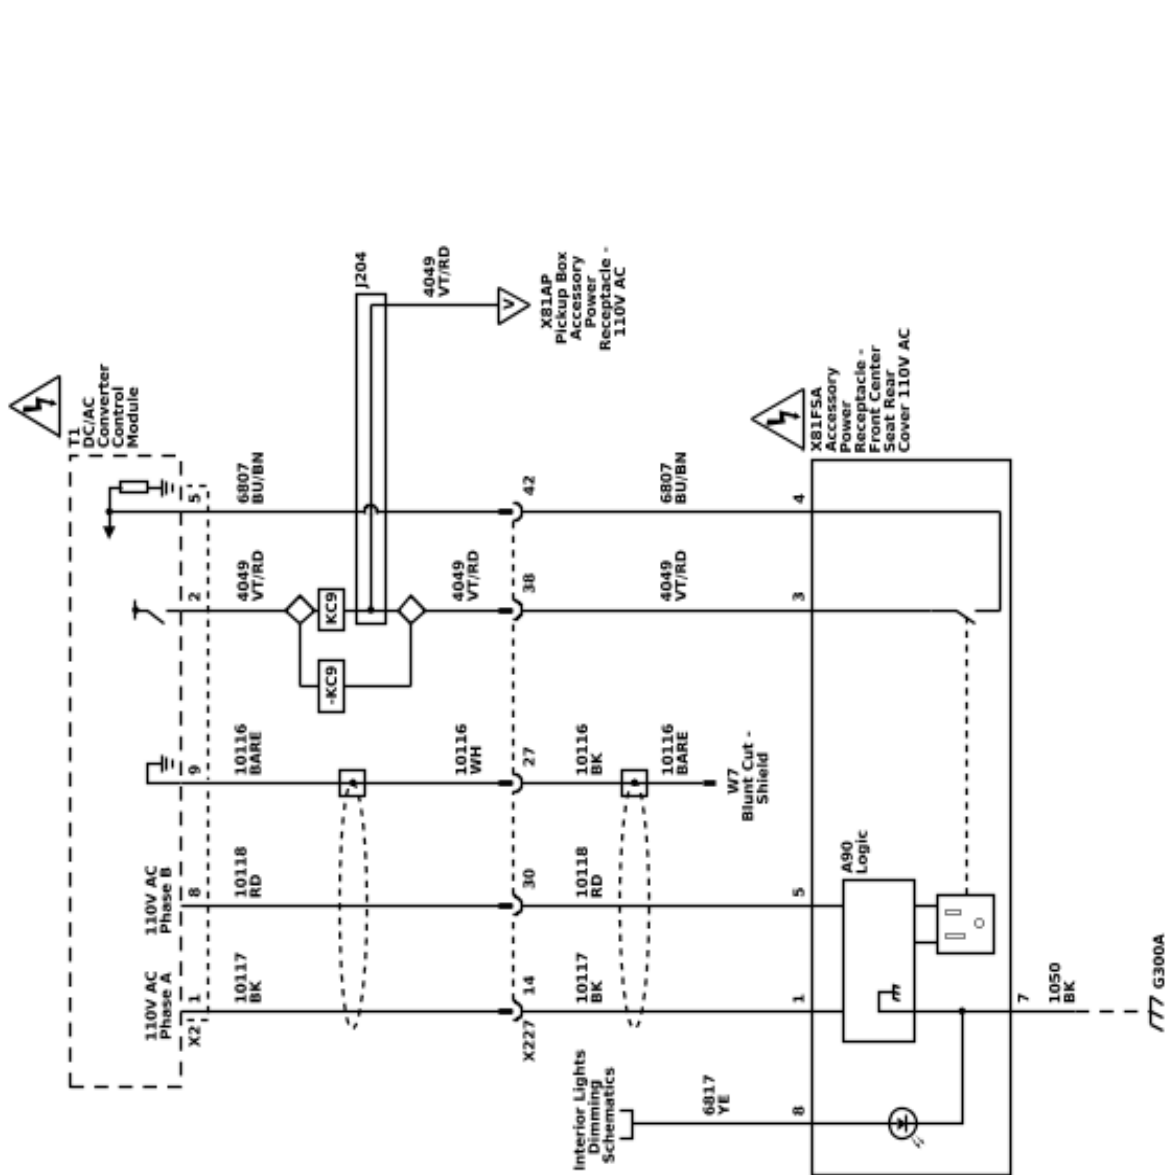


6192585


Cigar Lighter/Power Outlet Schematics (220V AC Accessory Power Receptacle - Front Center Seat Rear (KI5&AZ3))

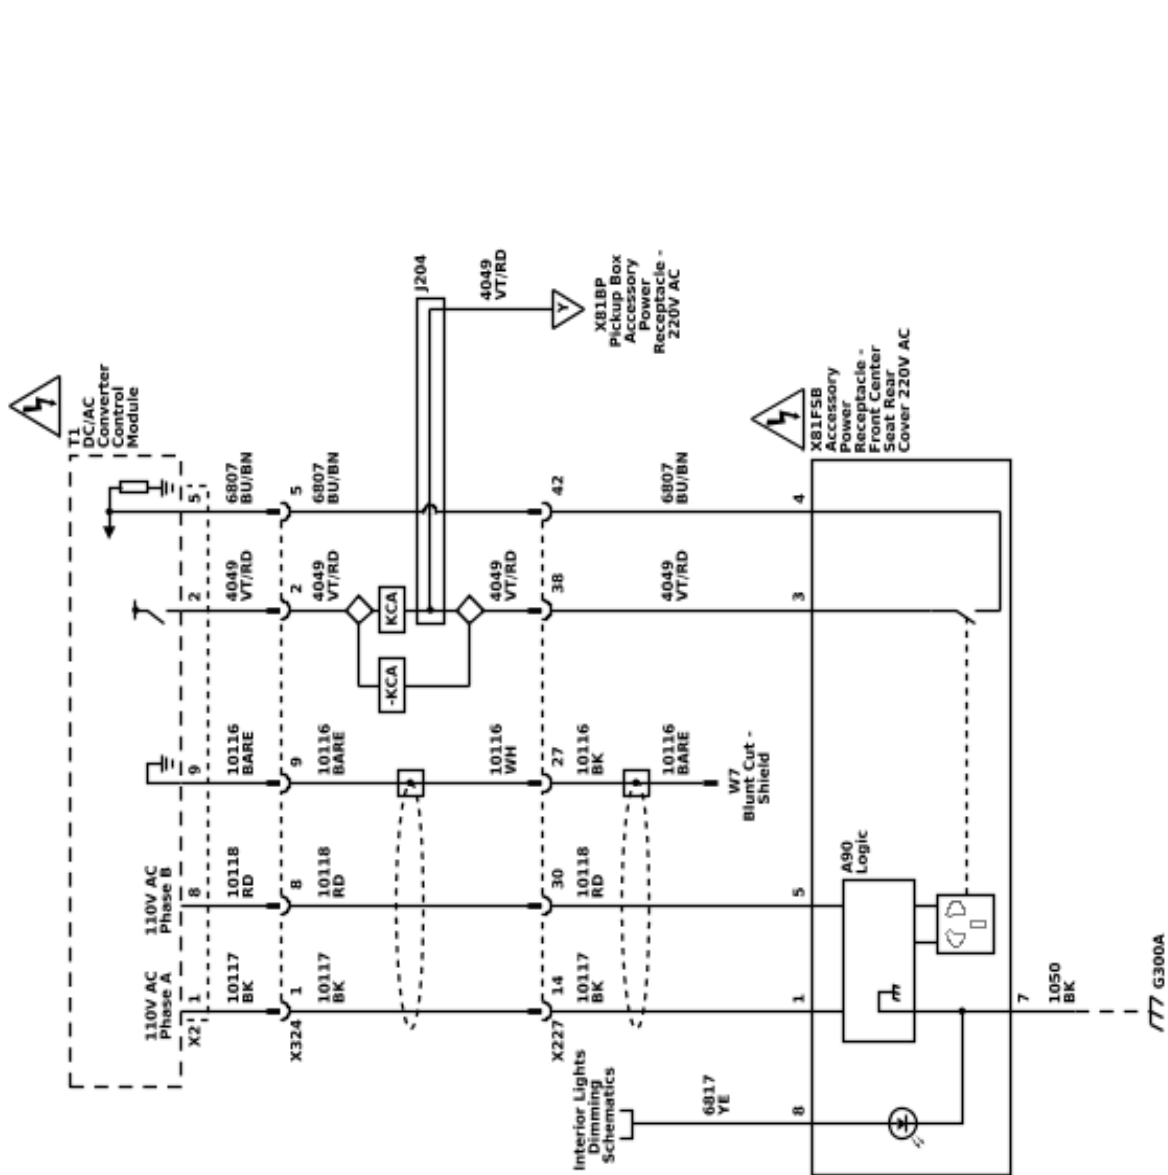


Cigar Lighter/Power Outlet Schematics (110V AC Accessory Power Receptacle - Instrument Panel (KI4 - (AZ3/D07)))

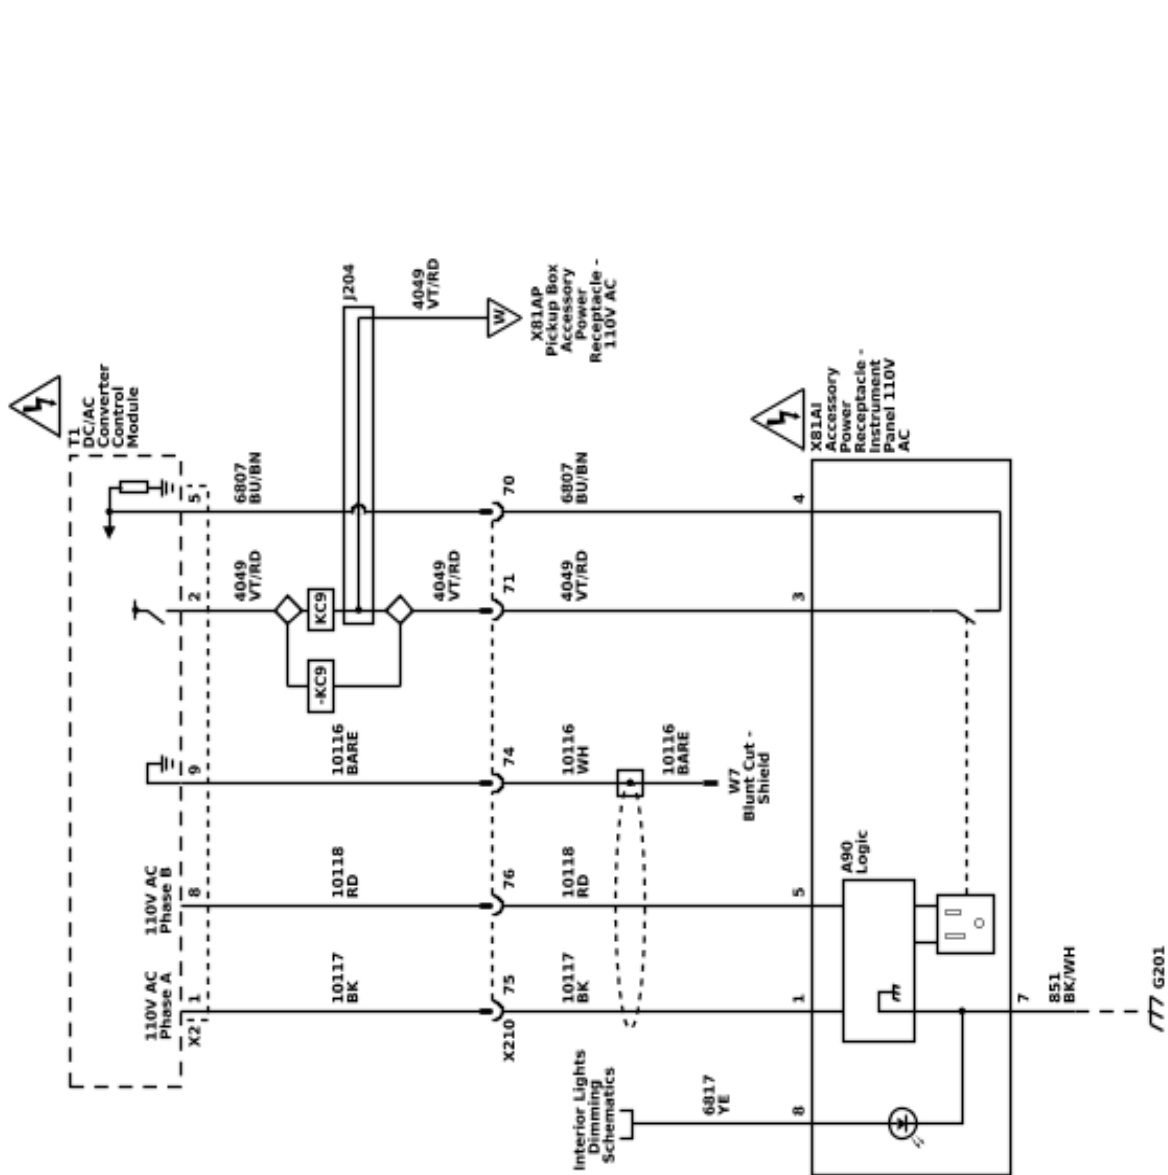


Cigar Lighter/Power Outlet Schematics (220V AC Accessory Power Receptacle - Instrument Panel (KI5 - (AZ3/D07)))

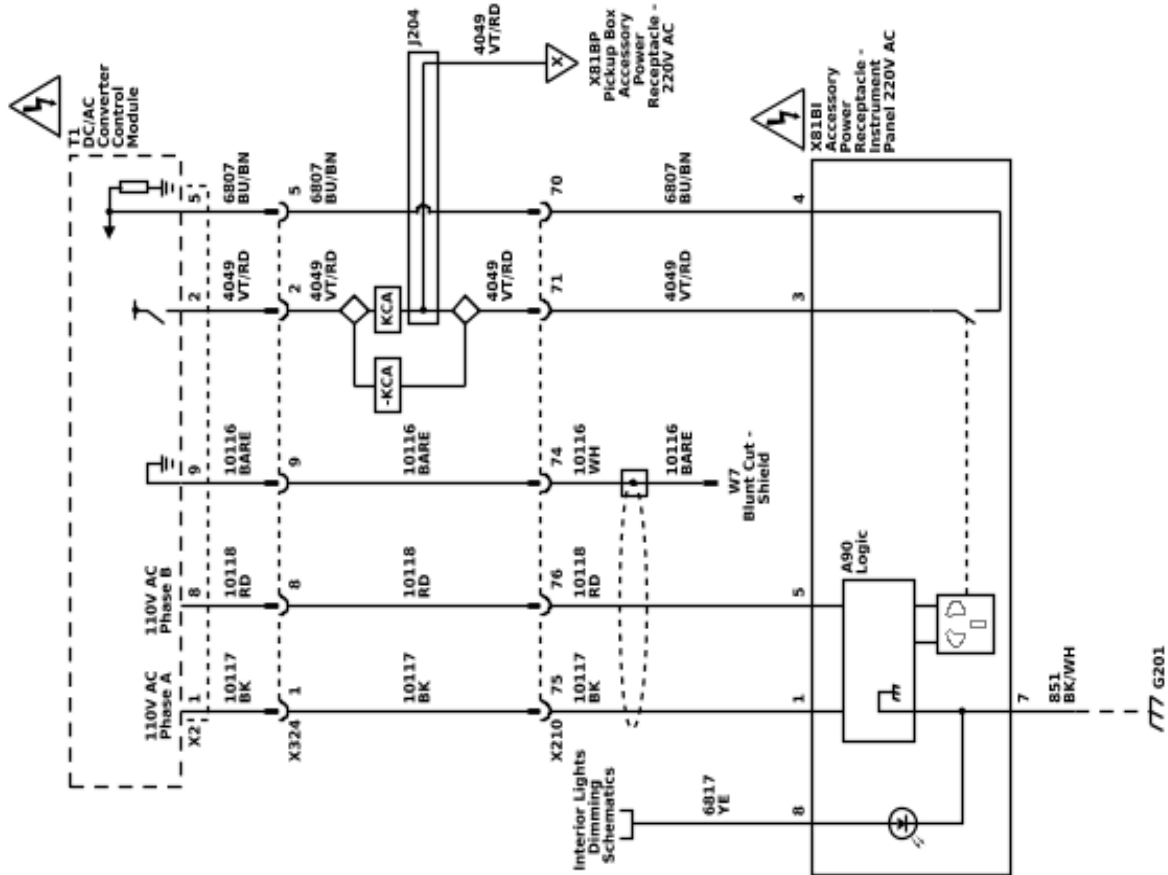


Cigar Lighter/Power Outlet Schematics (110V AC Pickup Box Accessory Power Receptacle (KC9))

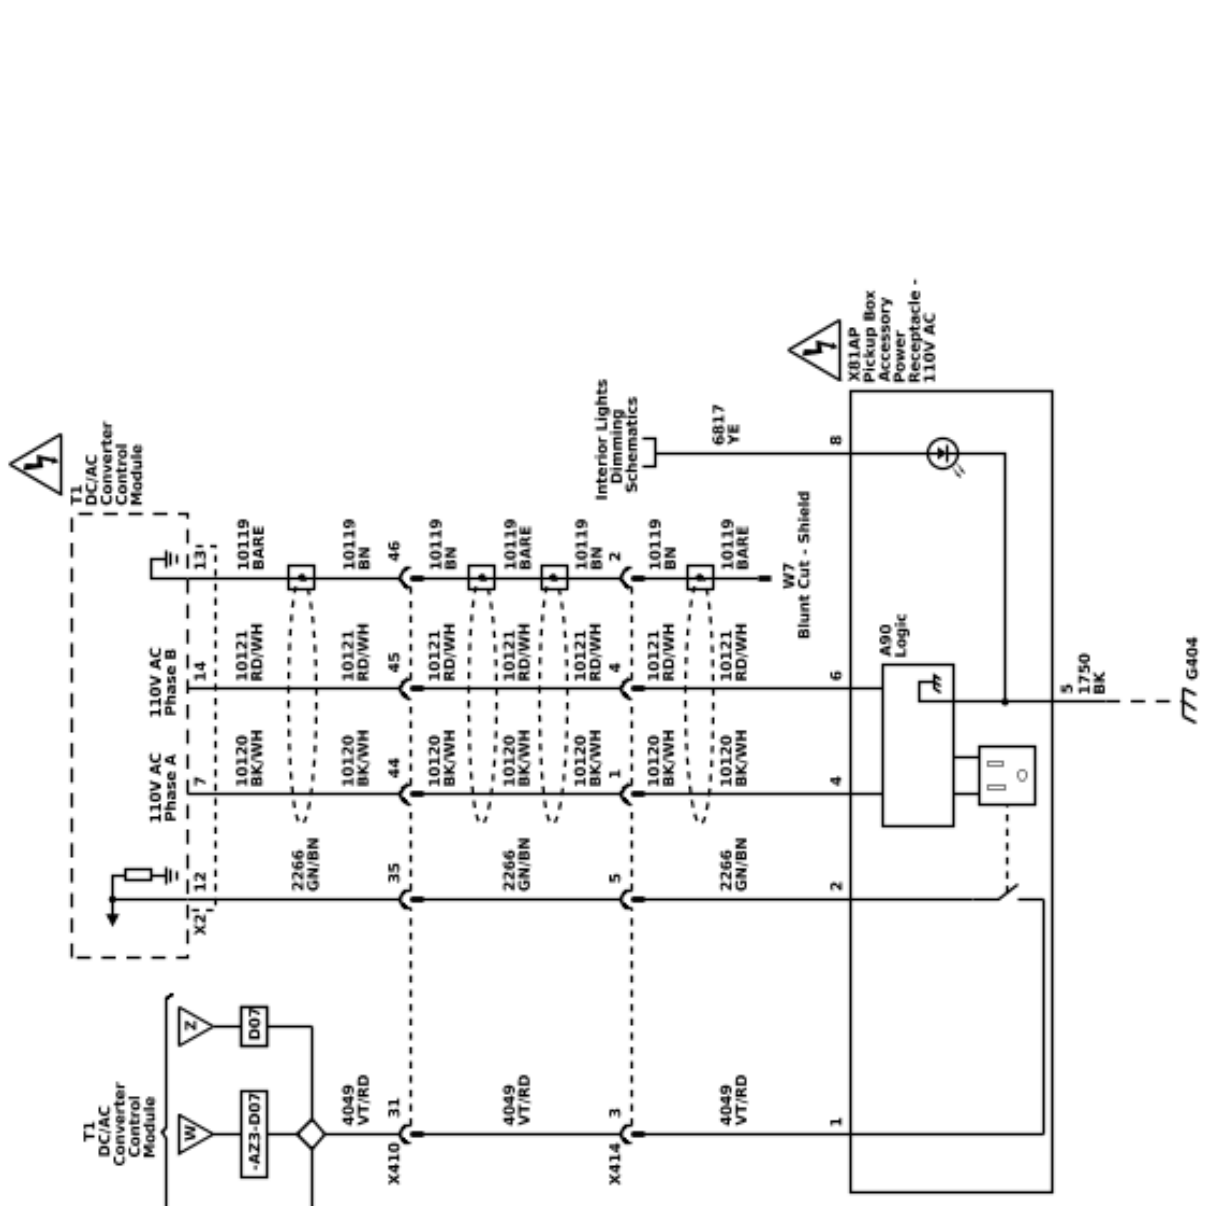

Cigar Lighter/Power Outlet Schematics (220V AC Pickup Box Accessory Power Receptacle (KCA))

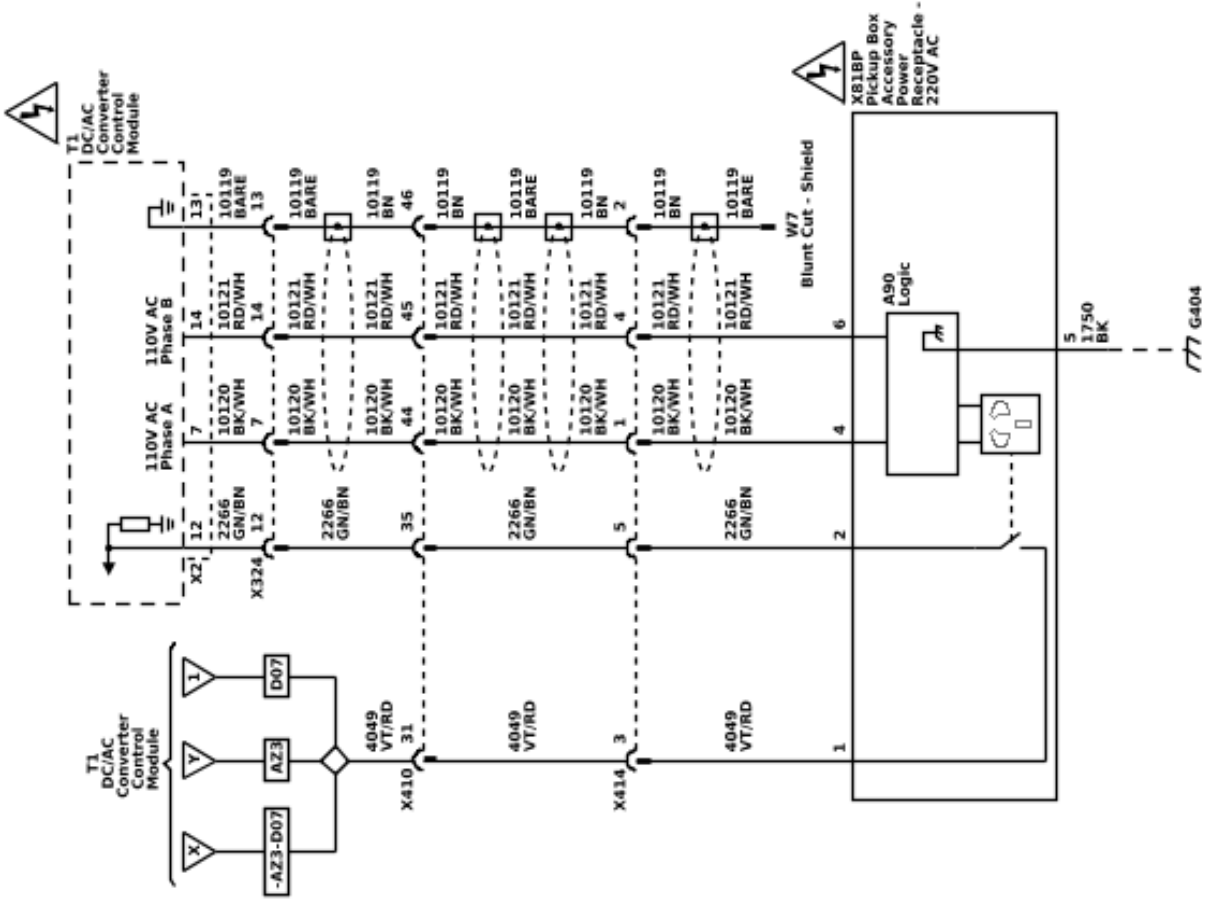

Cigar Lighter/Power Outlet Schematics (Wireless Charging (K4C))

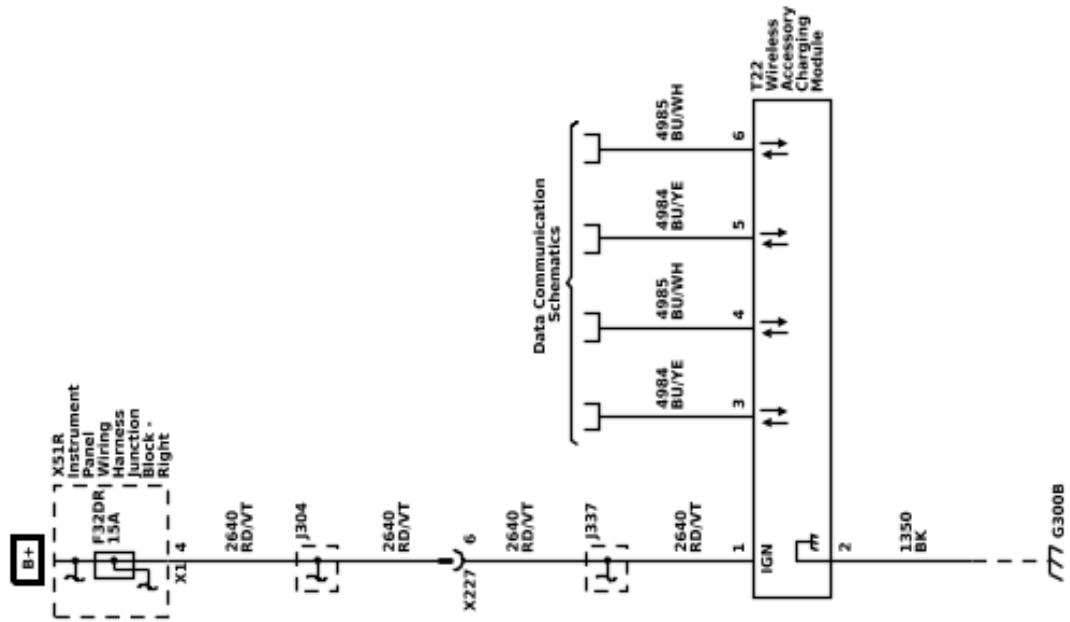

Description and Operation

Power Outlets Description and Operation


12 Volt Power Outlet Receptacle Description and Operation

The 12 V accessory power receptacles are supplied with power by the accessory relay.

The vehicle is fitted with a cigarette lighter and/or with a 12 V accessory power receptacle. The cigarette lighter and accessory power outlets are controlled by an ignition operated relay. The accessory power receptacle and cigarette lighter are operational when the ignition is turned to either the On or the Accessories positions. To operate the cigarette lighter, press in the lighter knob. When the element is hot, the lighter automatically pops out and is ready for use.

110 Volt Power Outlet Receptacle System Description

Power Outlets Block Diagram

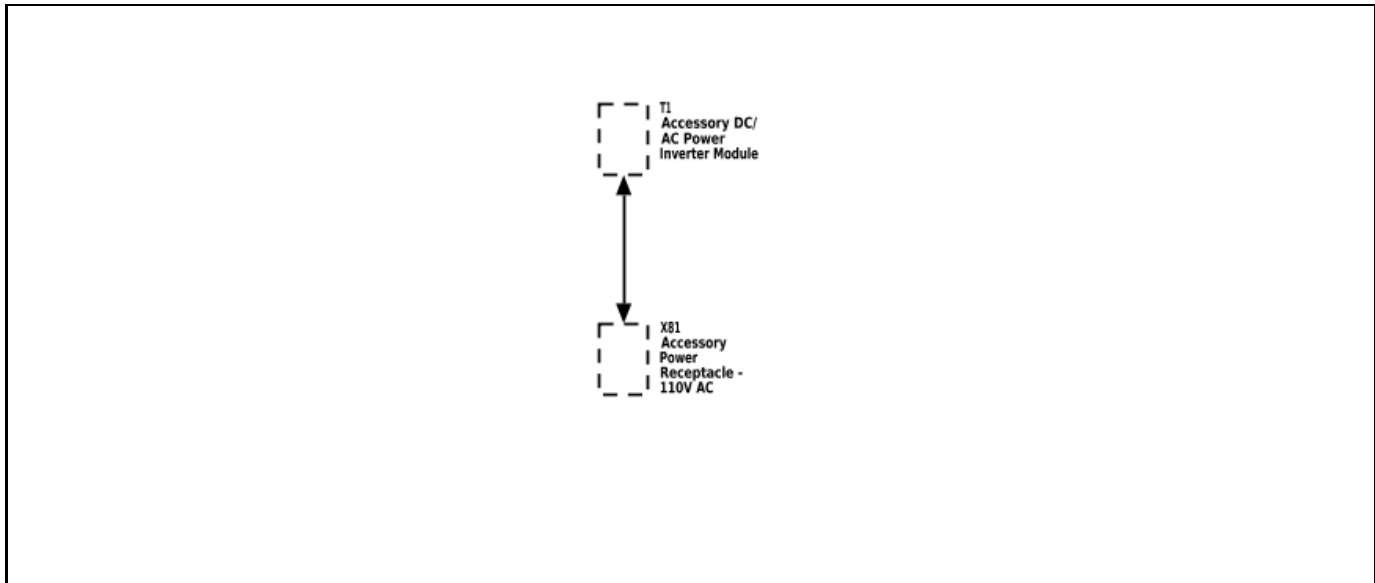

3403851

The alternating current (AC) accessory power outlet system consists of the accessory DC/AC power inverter module and the accessory power receptacle – 110 V AC. The accessory DC/AC power inverter module converts 12 V direct current (DC) battery power to 110 V at 60 Hertz (Hz) AC power to operate AC powered devices. The accessory DC/AC power inverter module provides up to 150 watts of power. The accessory power receptacle – 110 V AC provides the usual connection for AC powered devices.

110 Volt Power Outlet Receptacle System Operation

The accessory DC/AC power inverter module receives fuse protected battery voltage and is connected to the 12 V electrical system ground. The accessory power receptacle – 110 V AC has an internal switch, that detects when an AC powered device is plugged into the outlet. When the ignition is ON, and an AC powered

device is plugged into the accessory power receptacle – 110 V AC, the normally open switch in the accessory power receptacle – 110 V AC, closes. When the accessory DC/AC power inverter module detects the voltage from the accessory power receptacle – 110 V AC switch, the inverter module begins to supply 110 V AC to the accessory power receptacle – 110 V AC after a 1.5 s delay. The accessory AC power system is protected against circuit overload and circuit shorts to ground.

110 Volt Power Outlet Receptacle Isolation Fault Protection

The accessory DC/AC power inverter module contains a ground fault circuit interrupter (GFCI). GFCI monitors the 110 V circuit for a short to vehicle chassis ground. If a 110 V AC short to ground is detected, the accessory DC/AC power inverter module will turn OFF. The

module remains OFF, until the AC powered device is unplugged from the outlet, and then plugged into the outlet after a 3 s delay.

110 Volt Power Outlet Receptacle Overload Shutdown


The accessory DC/AC power inverter module will turn OFF if the current in the 110 V circuit is greater than 3.8 A for 1 s , or 2.5 A for 10 s . The module will turn ON again, when the AC powered device is unplugged from the outlet, and then plugged into the outlet after a 3 s delay.

110 Volt Power Outlet Receptacle Internal Shutdown

The accessory DC/AC power inverter module will turn OFF if the B+ supply voltage is greater than 16.5 V or less than 11 V. The module will also turn OFF if the device temperature is greater than 85°C (185°F). The module will turn ON again, after the shutdown condition is corrected, and the AC powered device is unplugged from the outlet, and then plugged into the outlet.

230 Volt Power Outlet Receptacle System Description

Power Outlets Block Diagram

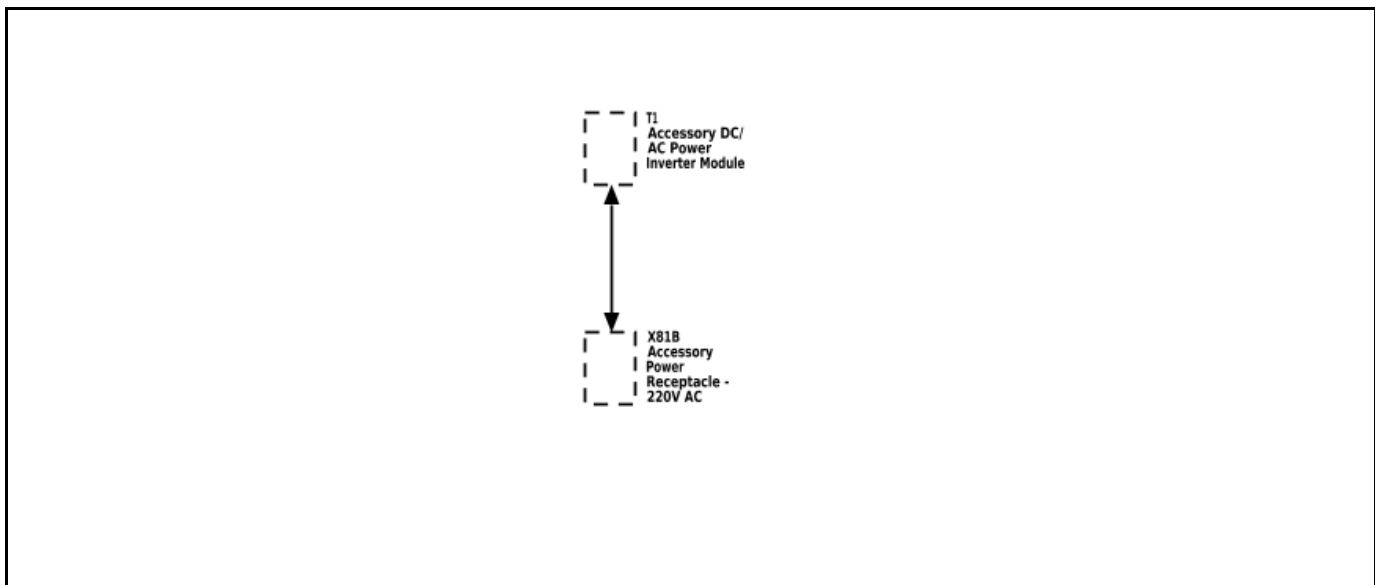

3403853

The alternating current (AC) accessory power outlet system consists of the accessory DC/AC power inverter module and the accessory power receptacle – 220V AC. The accessory DC/AC power inverter module converts 12 V direct current (DC) battery power to 220–230 V at 50 Hertz (Hz) AC power to operate AC powered devices. The accessory DC/AC power inverter module provides up to 150 watts of power. The accessory power receptacle – 220V AC provides the usual connection for AC powered devices.

230 Volt Power Outlet Receptacle System Operation

The accessory DC/AC power inverter module receives fuse protected battery voltage and is connected to the 12 V electrical system ground. The accessory power receptacle – 220V AC has an internal switch, that detects when an AC powered device is plugged into the outlet. When the ignition is ON, and an AC powered device is plugged into the accessory power receptacle – 220V AC, the normally open switch in the accessory power receptacle – 220V AC, closes. When the accessory DC/AC power inverter module detects the voltage from the accessory power receptacle – 220V AC switch, the inverter module begins to supply 220–230 V AC to the accessory power receptacle – 220V AC

7-778 Power Outlets

after a 1.5 second delay. The accessory AC power system is protected against circuit overload and circuit shorts to ground.

230 Volt Power Outlet Receptacle Isolation Fault Protection

The accessory DC/AC power inverter module contains a ground fault circuit interrupter (GFCI). GFCI monitors the 230 V circuit for a short to vehicle chassis ground. If a 230 V AC short to ground is detected, the accessory DC/AC power inverter module will turn OFF. The module remains OFF, until the AC powered device is unplugged from the outlet, and then plugged into the outlet after a 3 s delay.

230 Volt Power Outlet Receptacle Overload Shutdown

The accessory AC/DC power control module will turn OFF if the current in the 230 V circuit is greater than 3.8 A for 1 second, or 2.5 A for 10 seconds. The module will turn ON again, when the AC powered device is unplugged from the outlet, and then plugged into the outlet after a 3 second delay.

230 Volt Power Outlet Receptacle Internal Shutdown

The accessory DC/AC power inverter module will turn OFF if the B+ supply voltage is greater than 16.5 V or less than 11 V. The module will also turn OFF if the device temperature is greater than 85°C (185°F). The module will turn ON again, after the shutdown condition is corrected, and the AC powered device is unplugged from the accessory power receptacle – 220V AC, and then plugged into the accessory power receptacle – 220V AC.


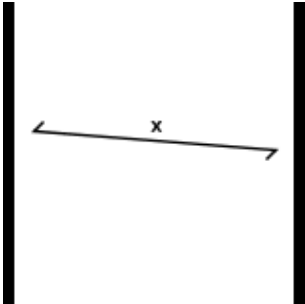
USB Receptacle Description and Operation (USS)

The vehicle is fitted with USB charge port receptacles at the rear of the floor console. These USB receptacles are for charging devices only. The USB receptacles are controlled by an ignition operated relay and are operational when the ignition is turned to either the On or the Accessories positions.


Wiring Systems and Power Management

Schematic and Routing Diagrams


Master Electrical Schematic Icons

Icon	Icon Definition
 <p style="text-align: right; margin-right: 5px;">19386</p>	<p>Warning: When performing service on or near the SIR components or the SIR wiring, the SIR system must be disabled. Refer to SIR Disabling and Enabling . Failure to observe the correct procedure could cause deployment of the SIR components, personal injury, or unnecessary SIR system repairs.</p>
 <p style="text-align: right; margin-right: 5px;">902886</p>	<p>Note: Twisted-pair wires provide an effective shield that helps protect sensitive electronic components from electrical interference. If the wires were covered with shielding, install new shielding.</p> <p>In order to prevent electrical interference from degrading the performance of the connected components, you must maintain the proper specification when making any repairs to the twisted-pair wires shown :</p> <ul style="list-style-type: none"> • The wires must be twisted a minimum of 9 turns per 31 cm (12 in) as measured anywhere along the length of the wires. • The outside diameter of the twisted wires must not exceed 6.0 mm (0.25 in).


Power Distribution Schematics (Battery Distribution Engine Compartment Fuse Block)

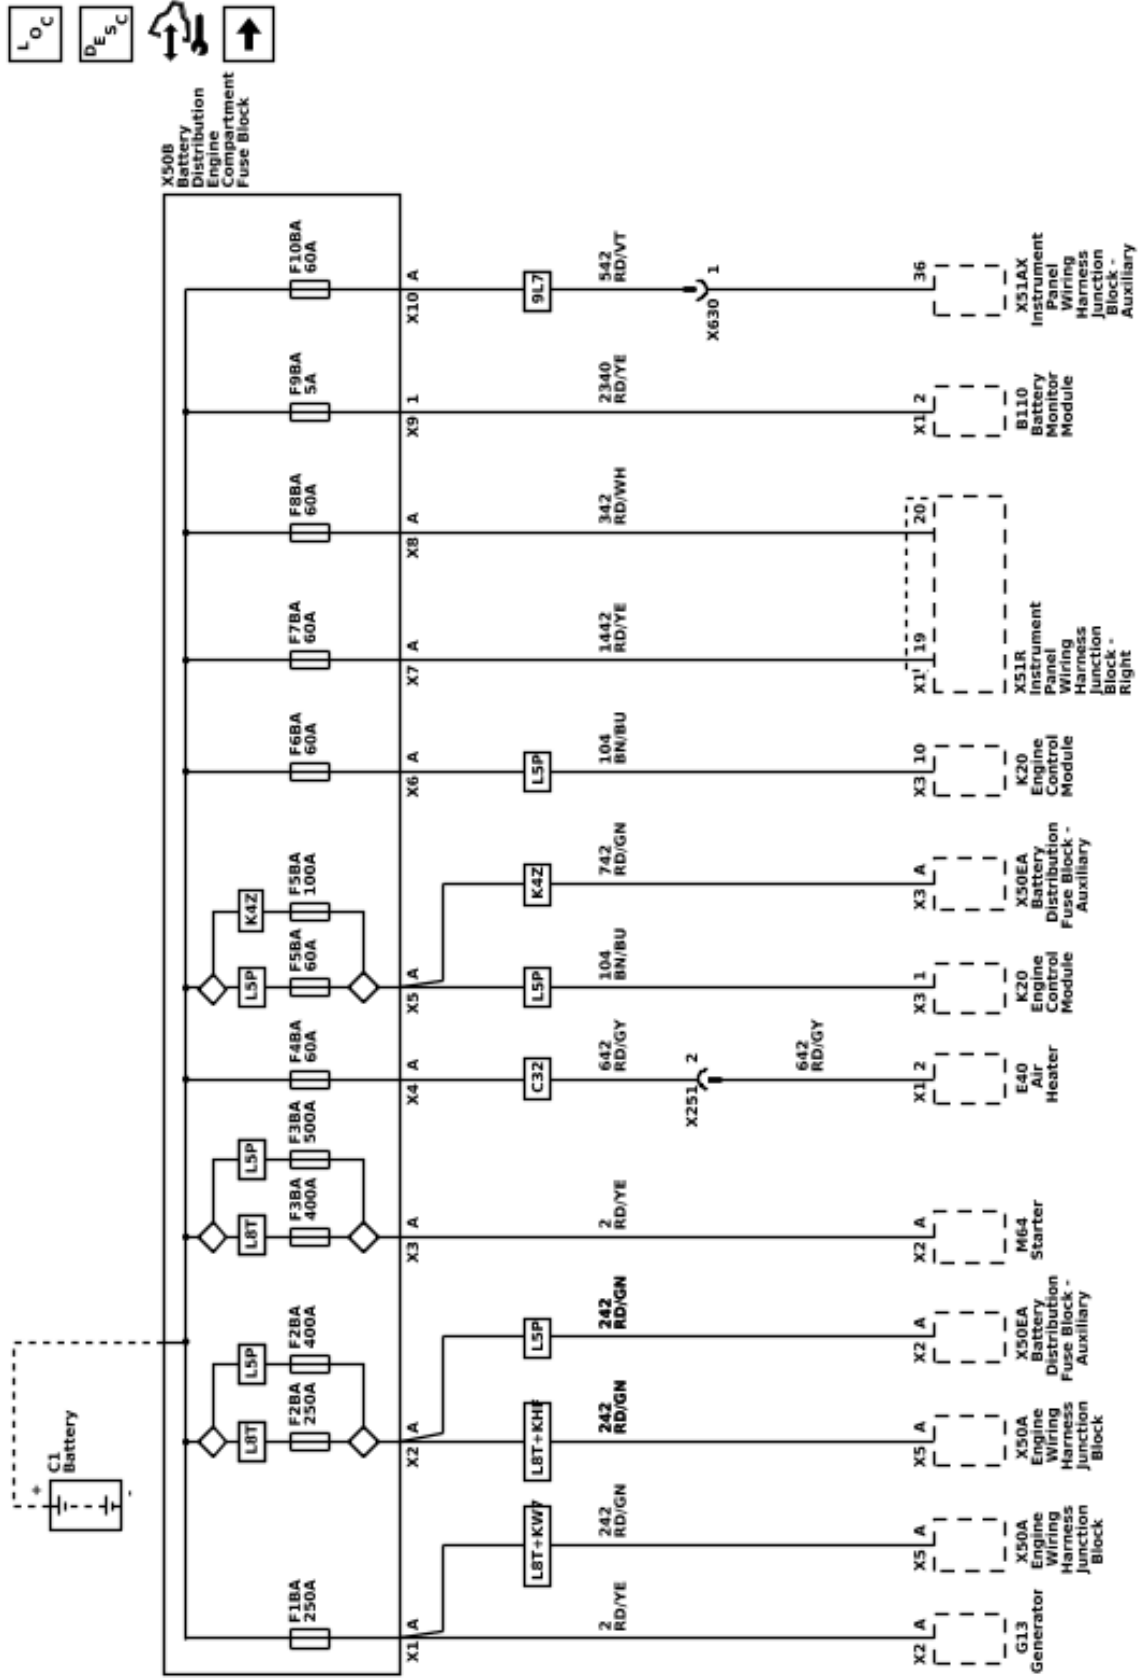

Power Distribution Schematics (Engine Wiring Harness Junction Block - B+ Bus - 1 of 2 (K4B))

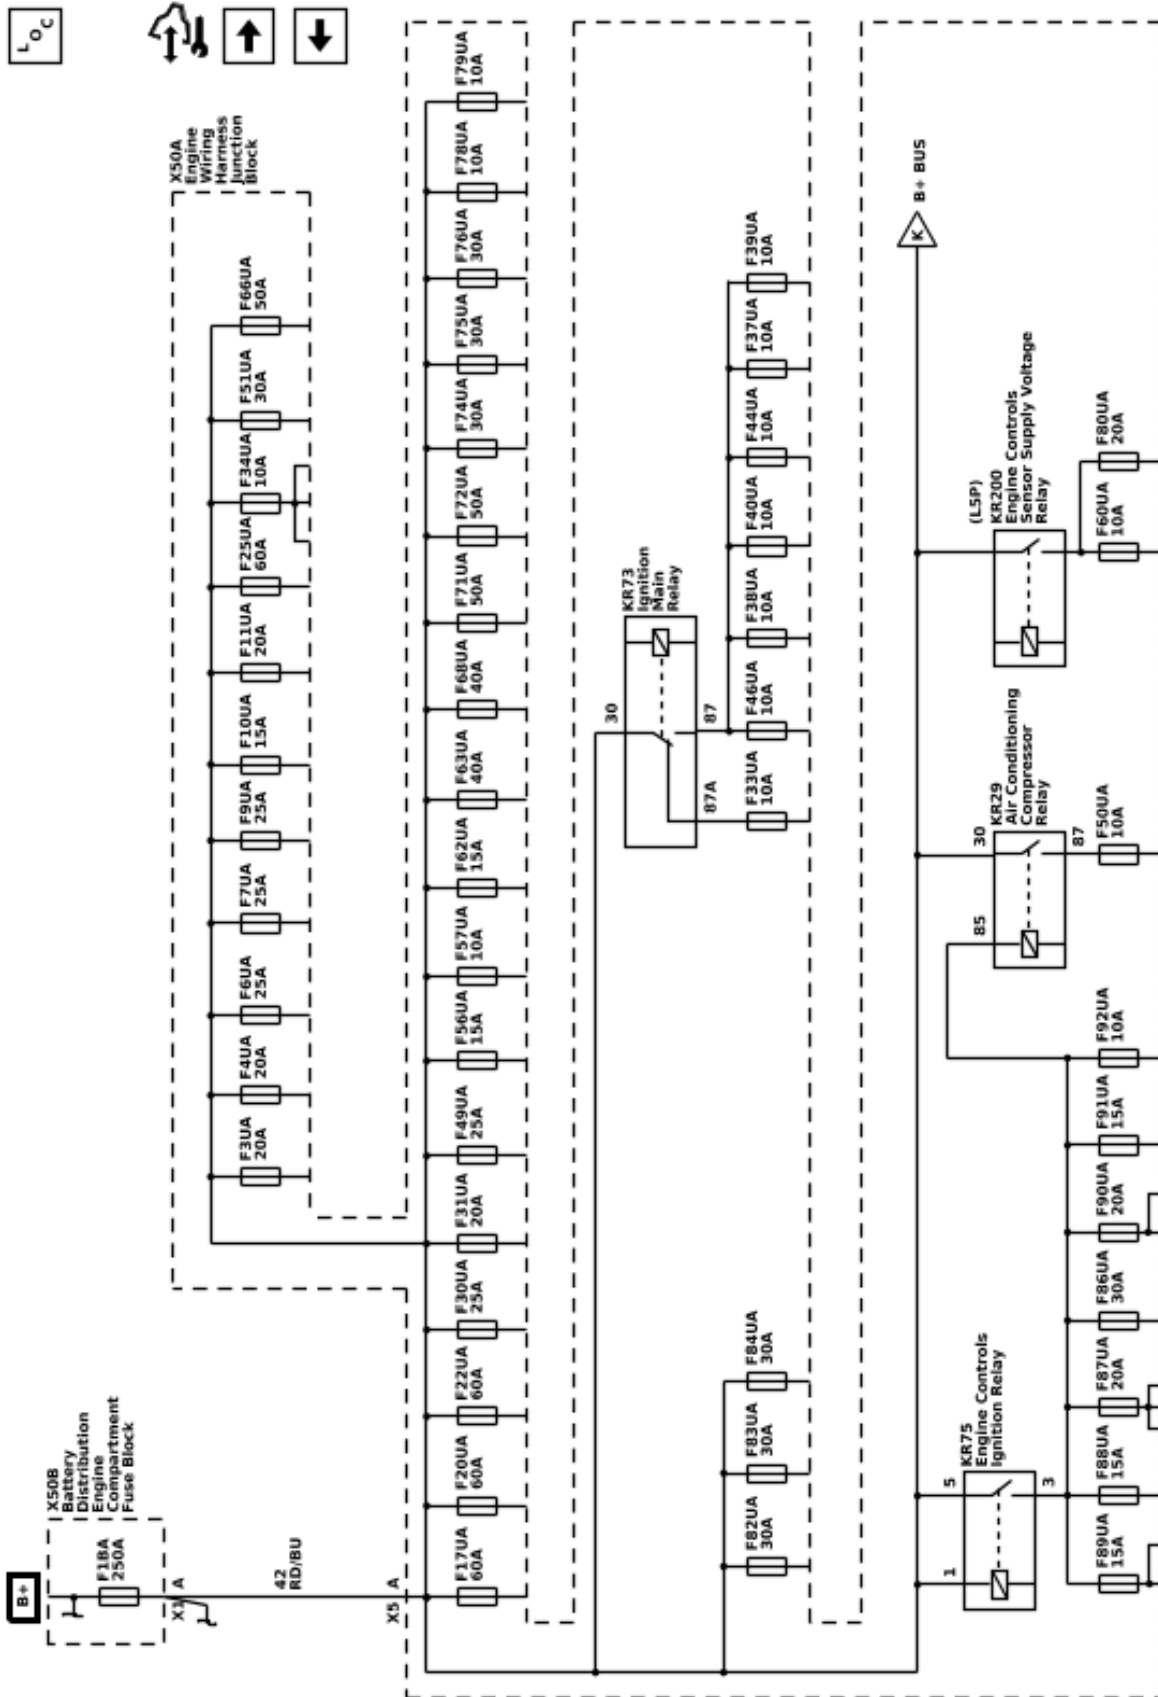


Power Distribution Schematics (Engine Wiring Harness Junction Block - B+ Bus - 2 of 2 (L5P))

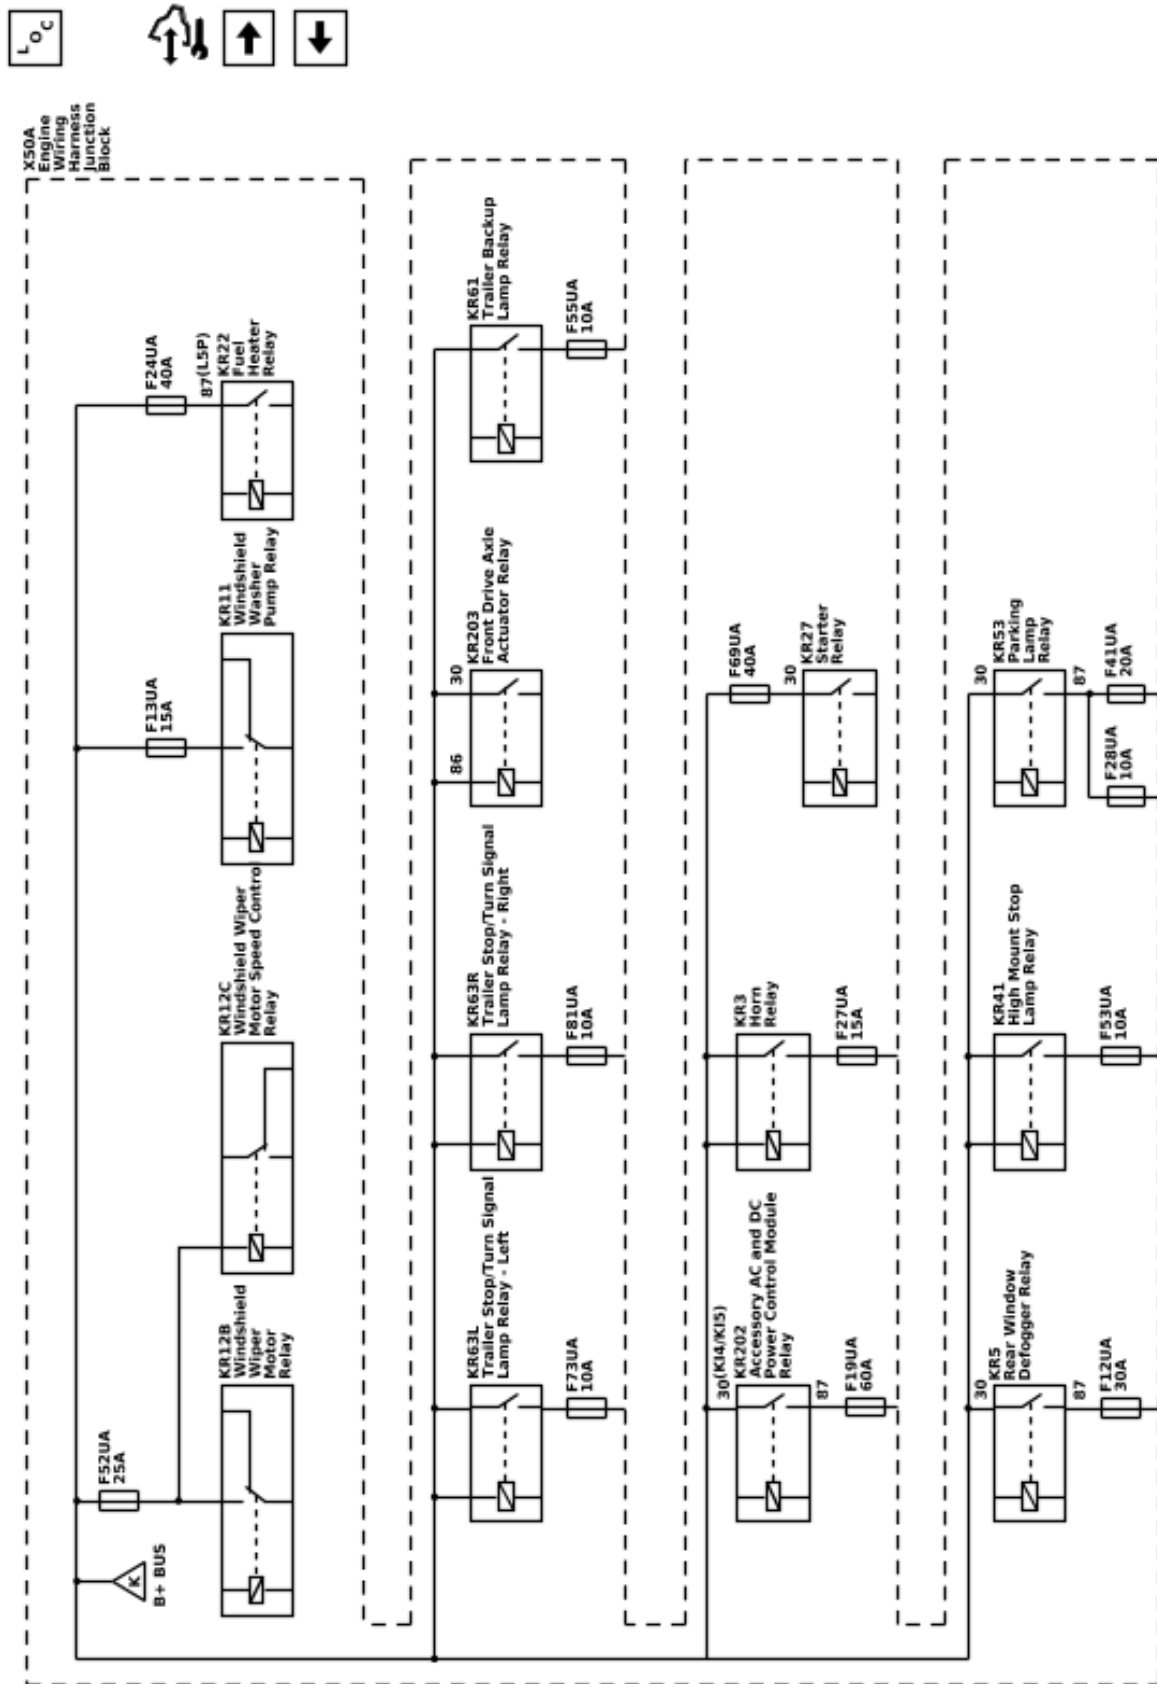


Power Distribution Schematics (F3UA, F4UA, F7UA, F10UA, F17UA, F20UA, F22UA, F25UA, F30UA, F31UA, F30UA, F25UA, F22UA, F20UA, F17UA, F10UA, F7UA, F4UA, F3UA, Fuses)

L_{OC}

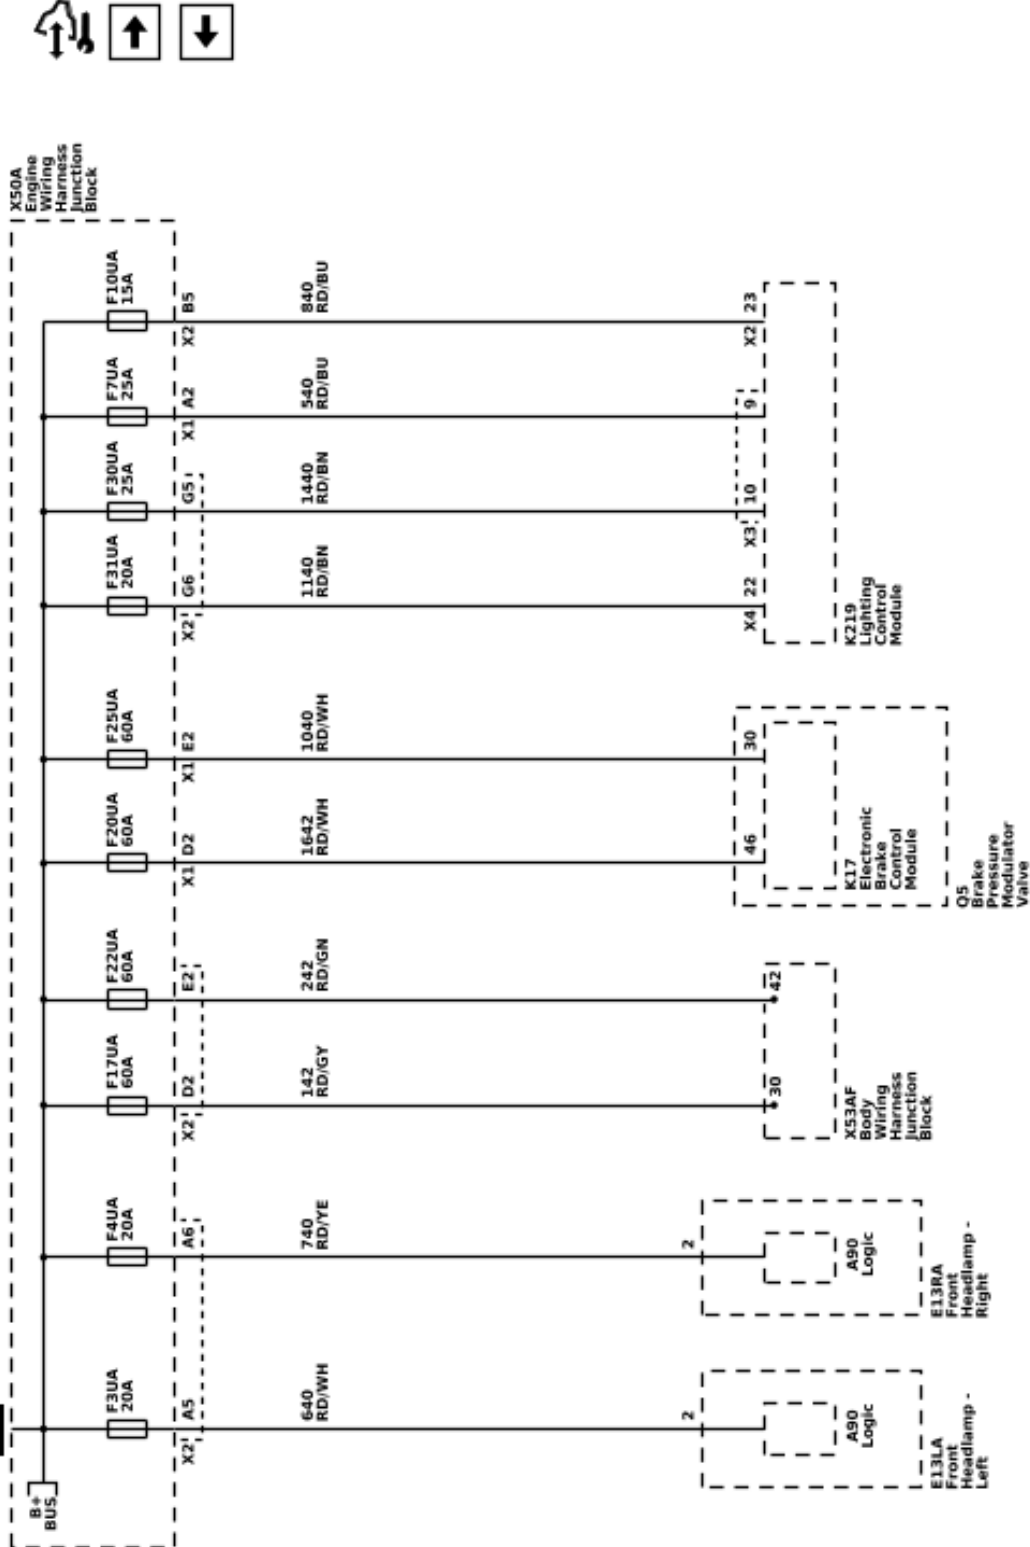


Power Distribution Schematics (F50UA, F55UA, F60UA, F80UA, and F80UA Fuses)

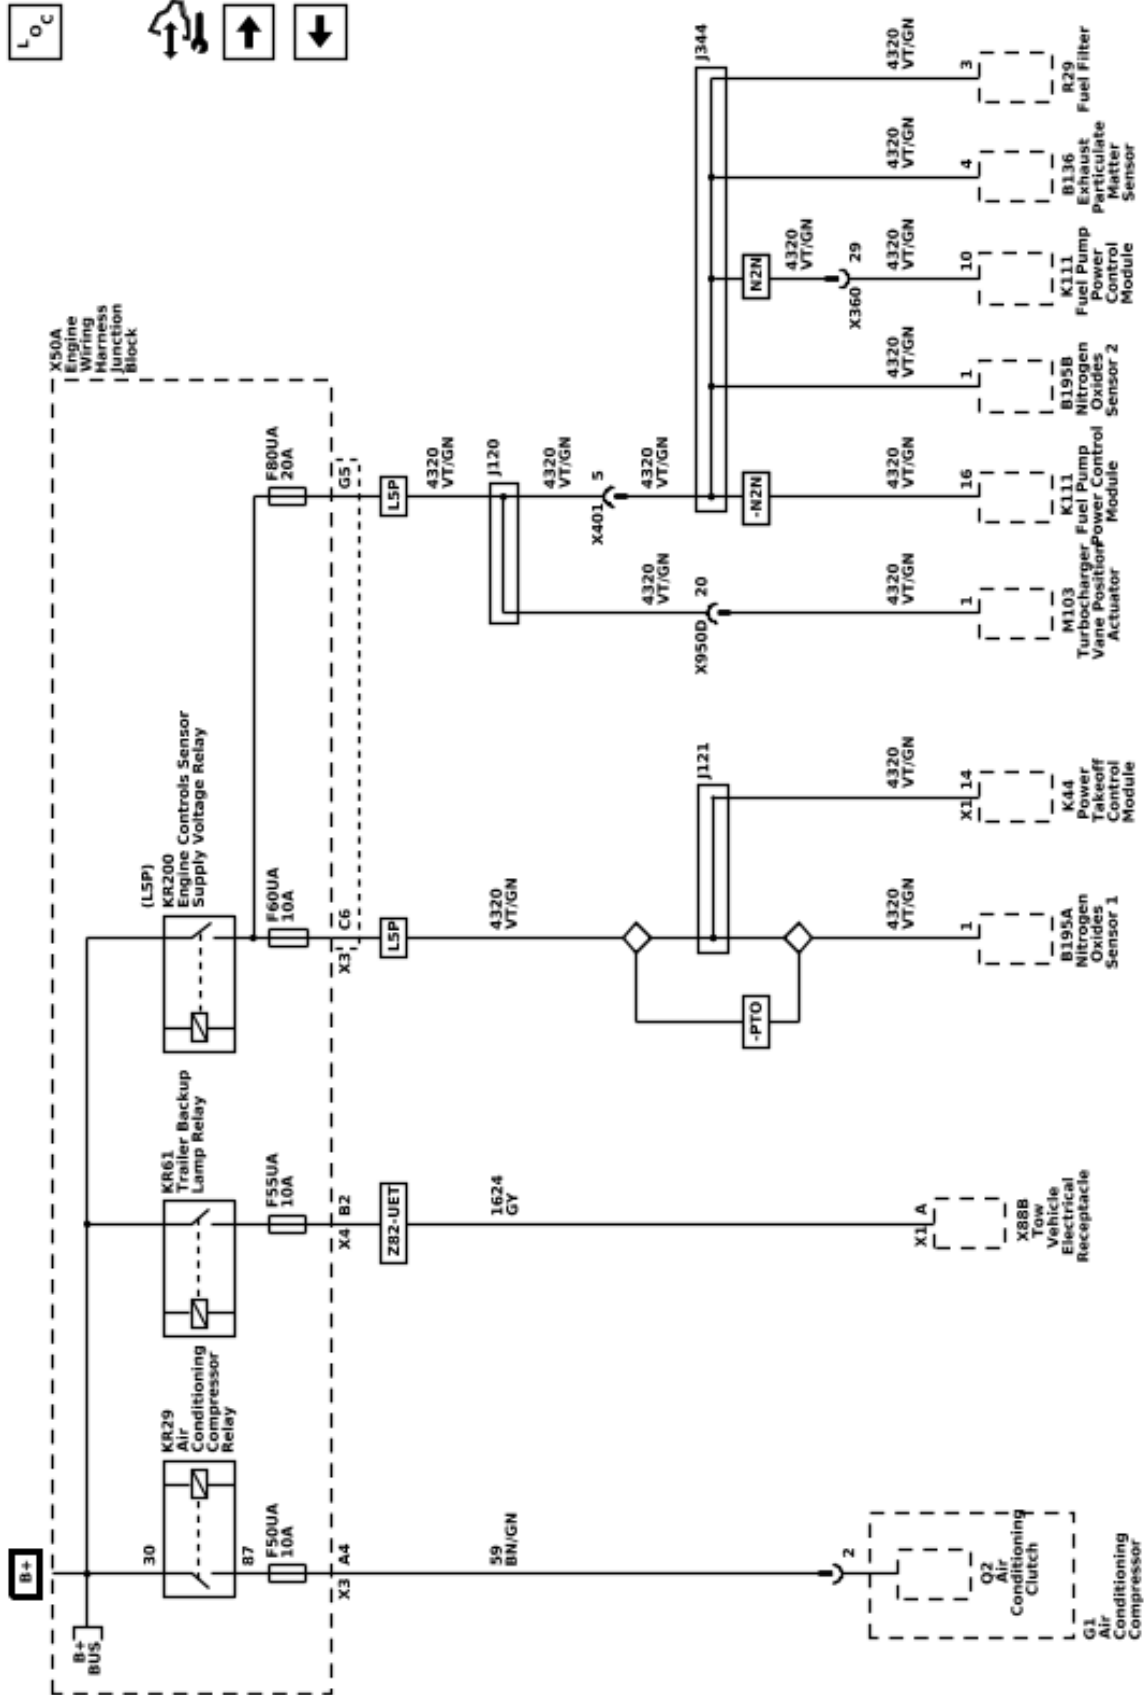


6150300


Power Distribution Schematics (F12UA, F27UA, F53UA, F73UA, F73UA, F73UA, and F81UA Fuses)

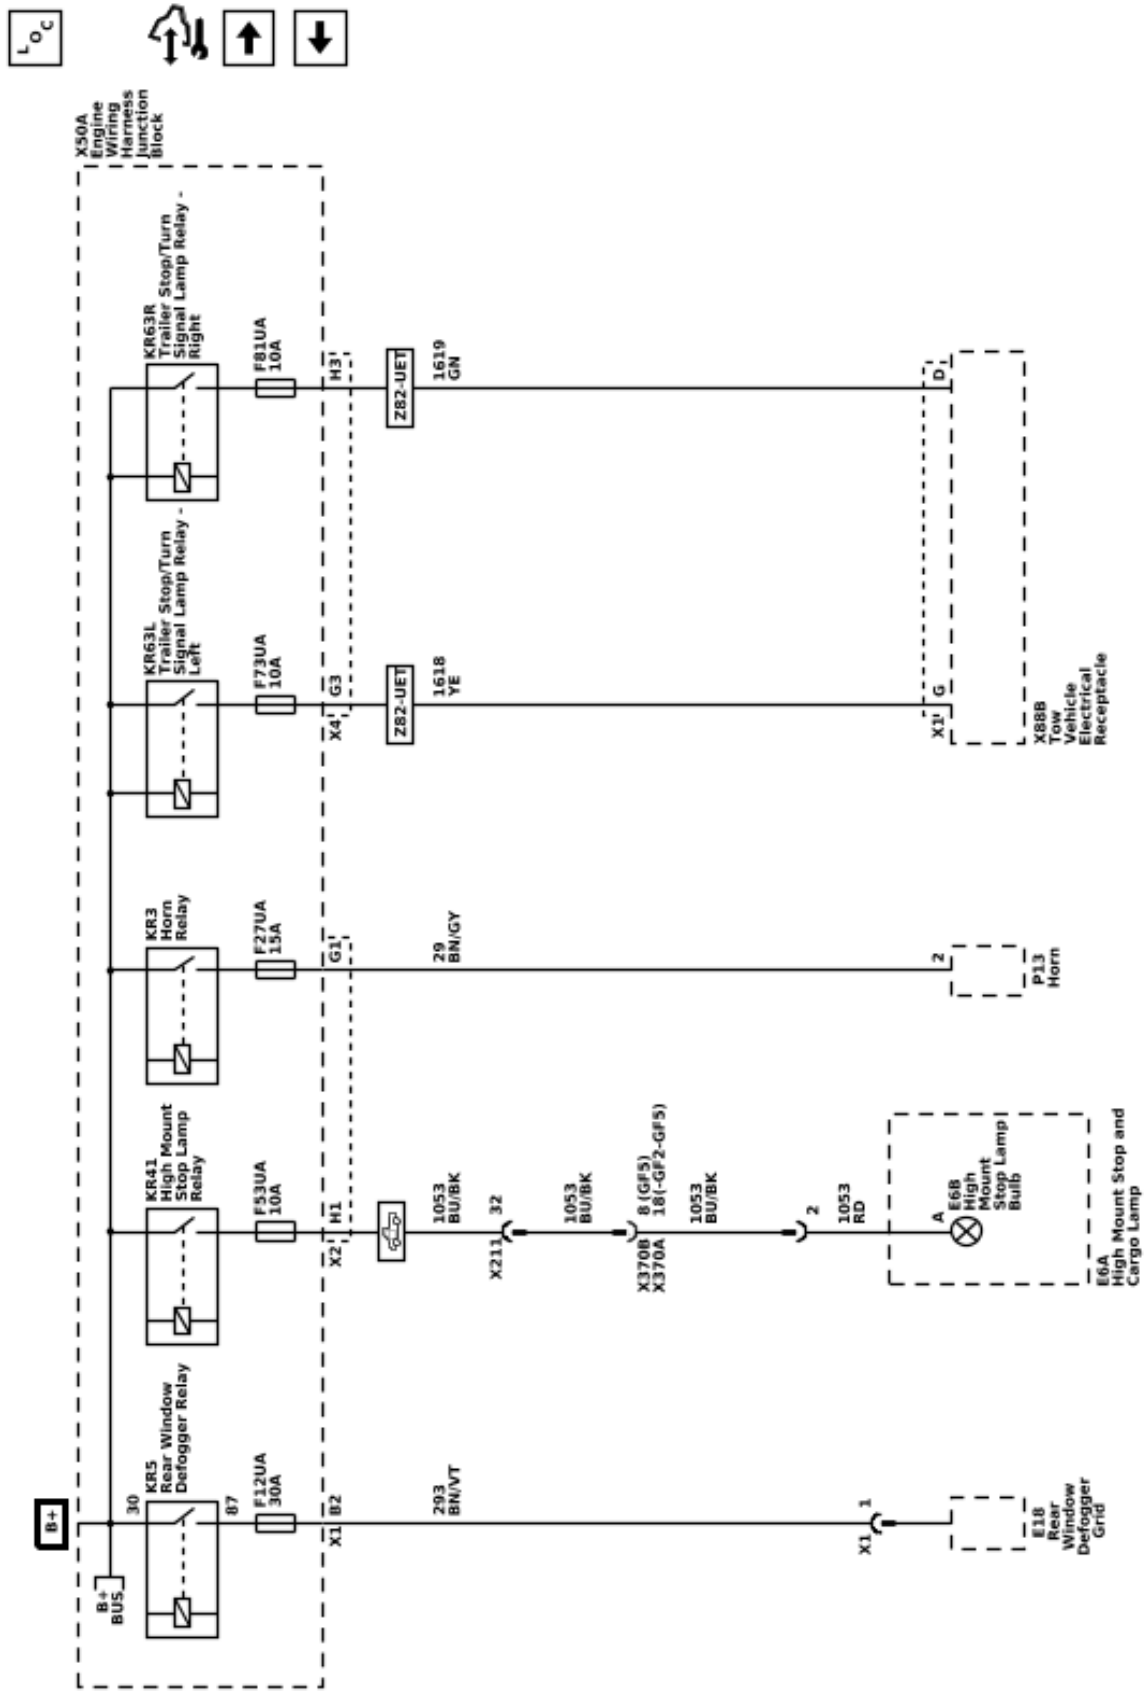


Power Distribution Schematics (F111UA, F19UA, F62UA, F63UA, F76UA, F82UA, F83UA, F84UA, F88UA, and F84UA Fuses)

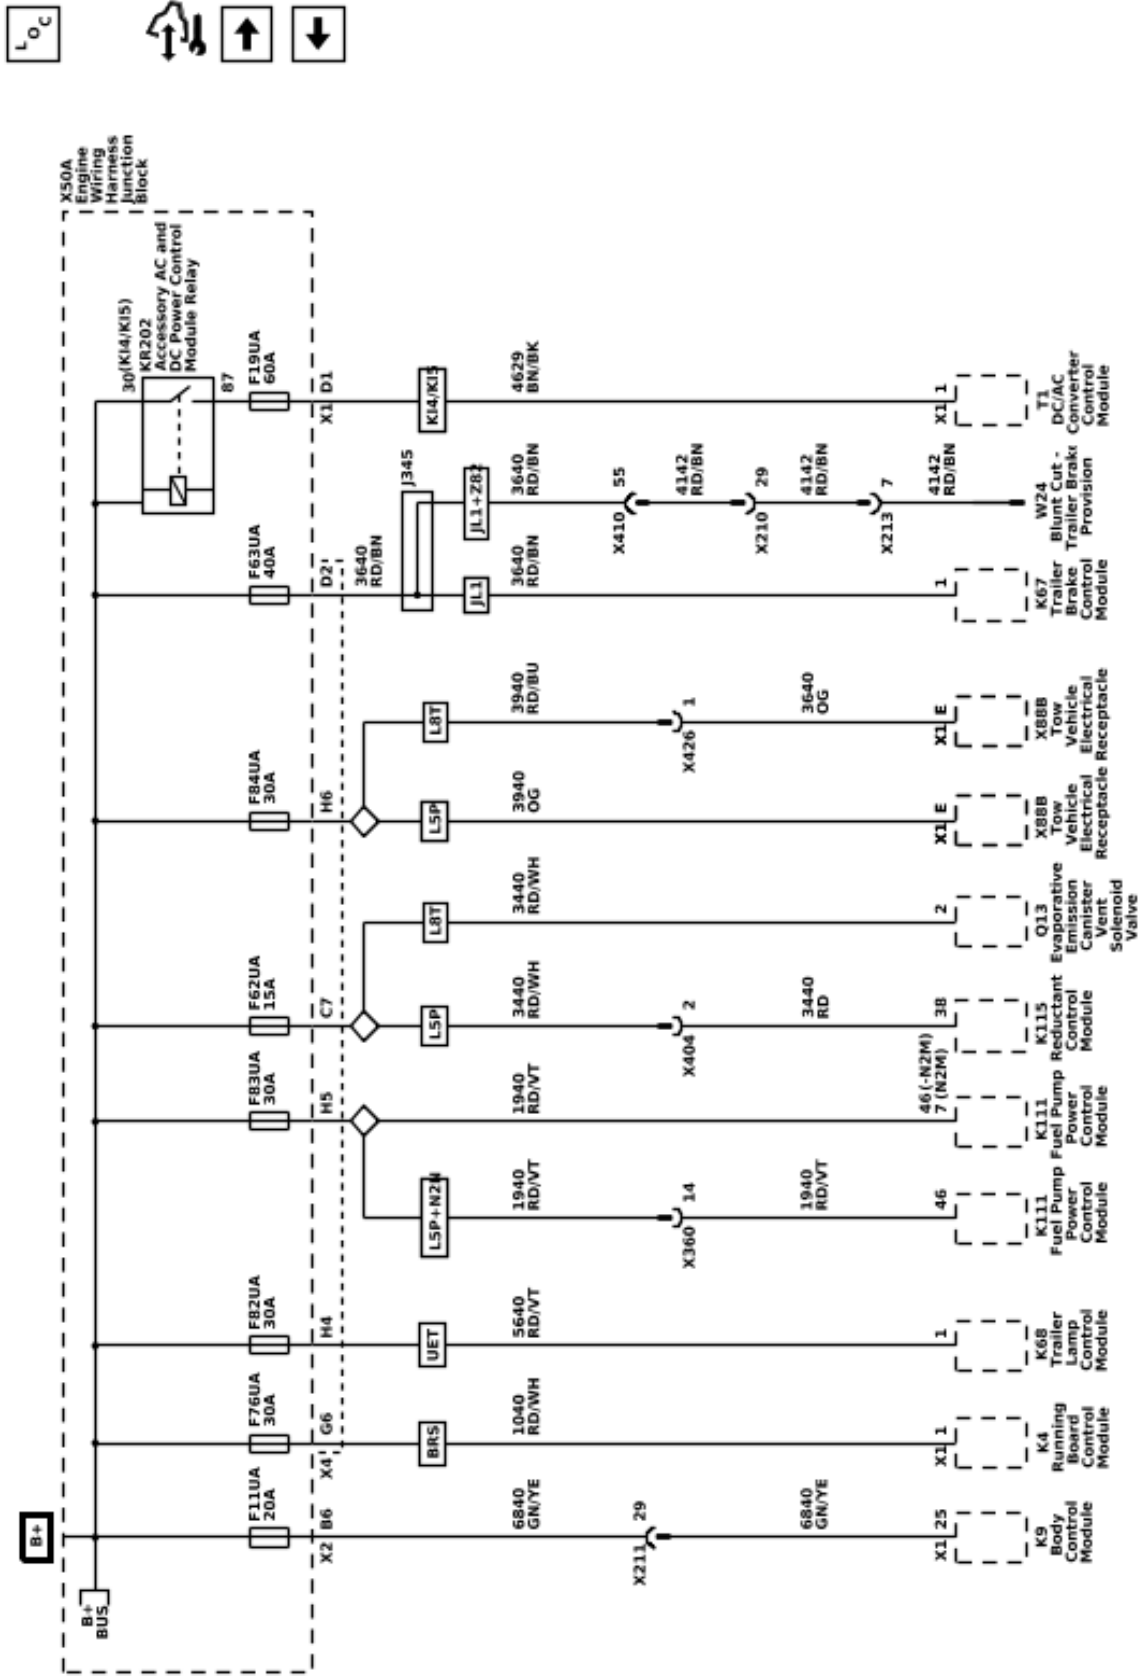

Power Distribution Schematics (F51UA, F57UA, F68UA, F75UA, F78UA, F74UA, F68UA, F75UA, F78UA, F74UA, and F79UA Fuses)

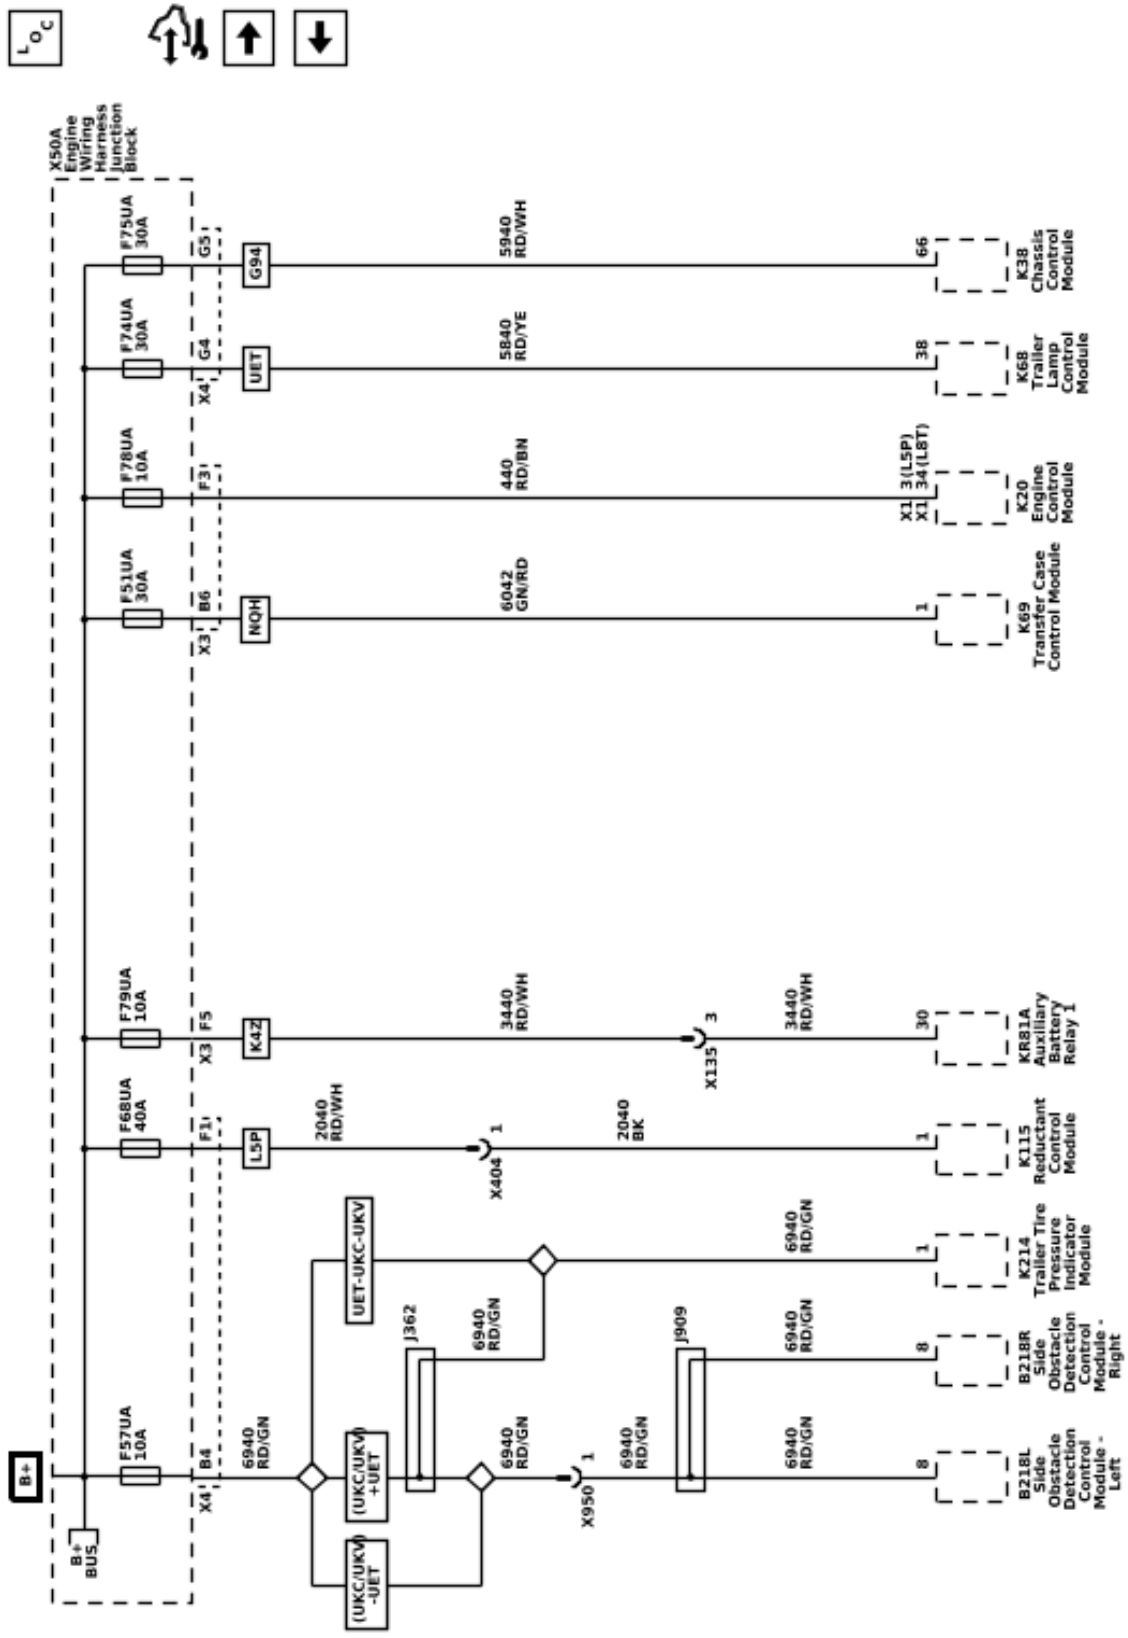


Power Distribution Schematics (F33UA, F38UA, F40UA, F46UA, and F46UA Fuses)

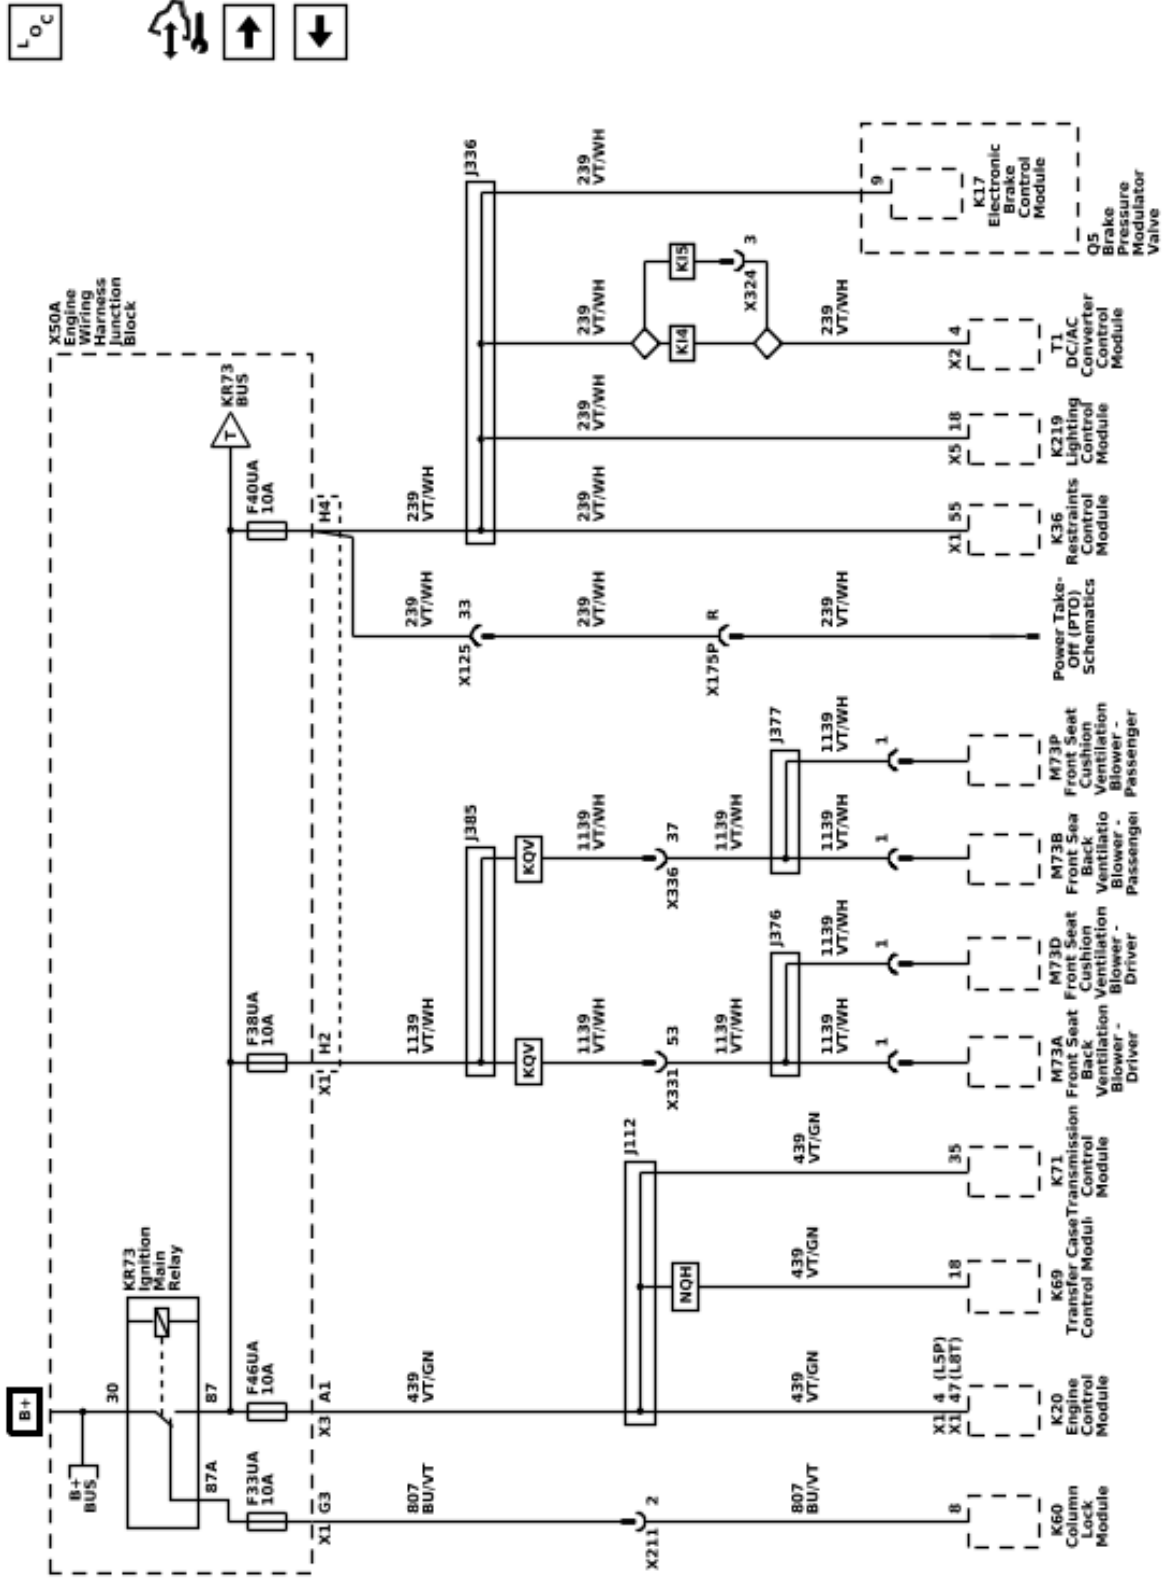

L₀C




Power Distribution Schematics (F28UA, F41UA, and F45UA Fuses)

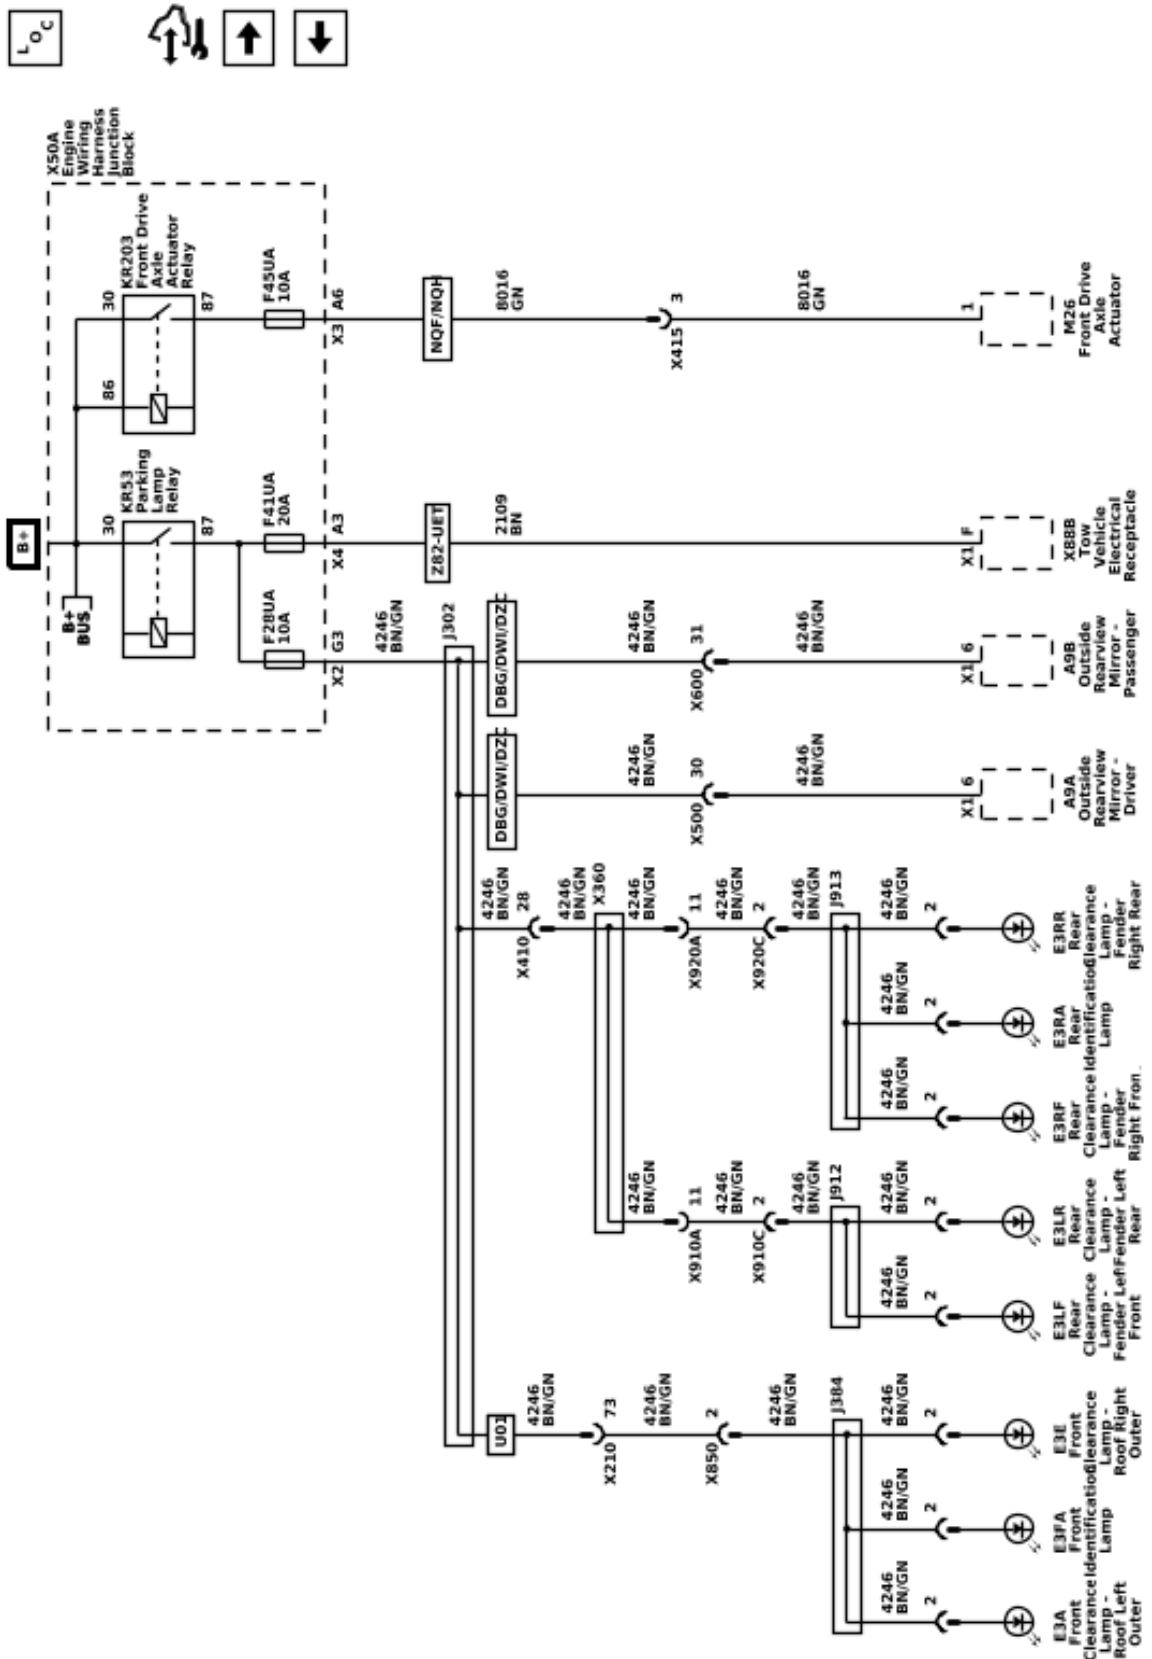


Power Distribution Schematics (F89UA Fuse)


LOC

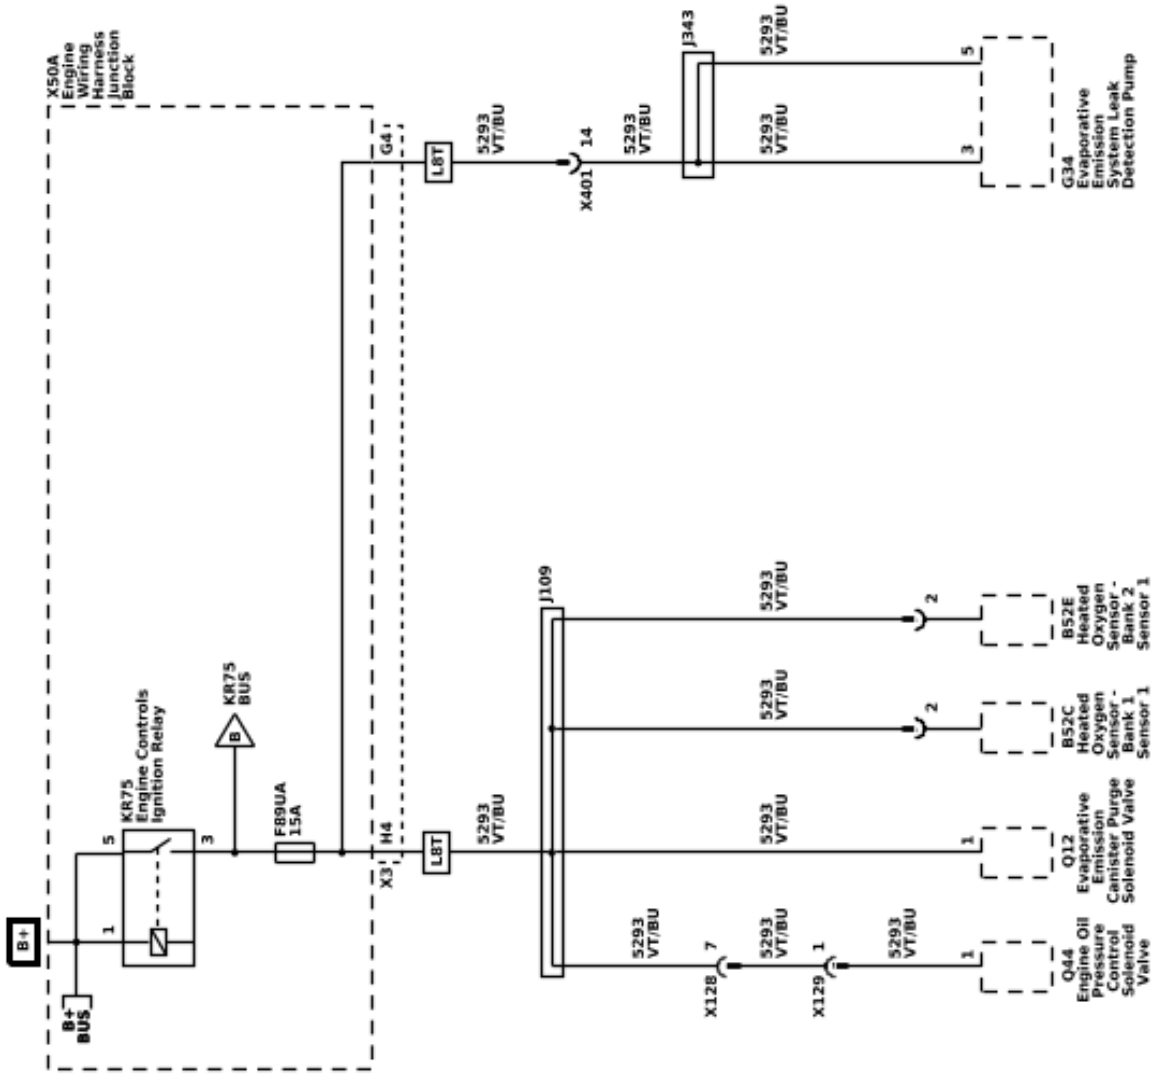

Power Distribution Schematics (F86UA and F88UA Fuses)

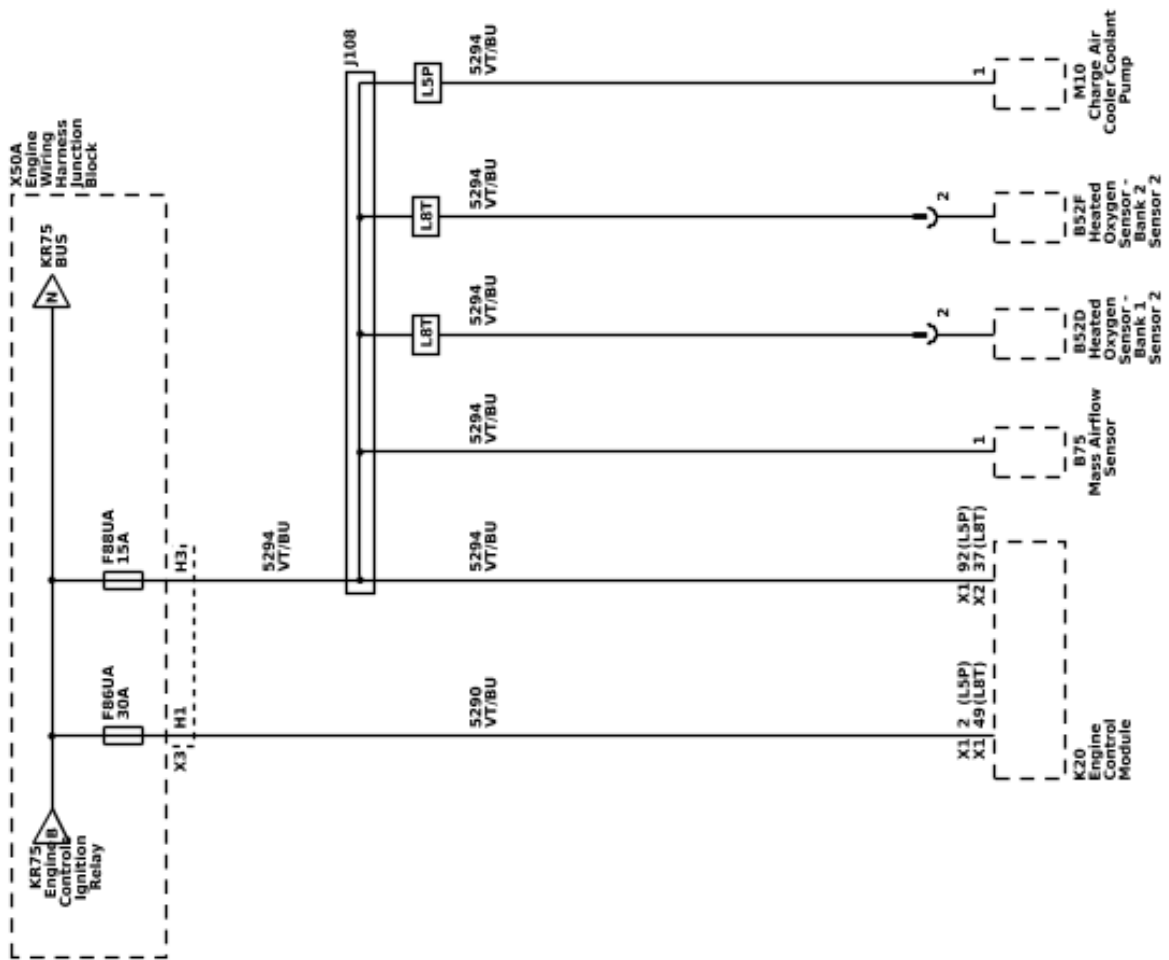

Power Distribution Schematics (F87UA, F90UA, and F92UA Fuses)

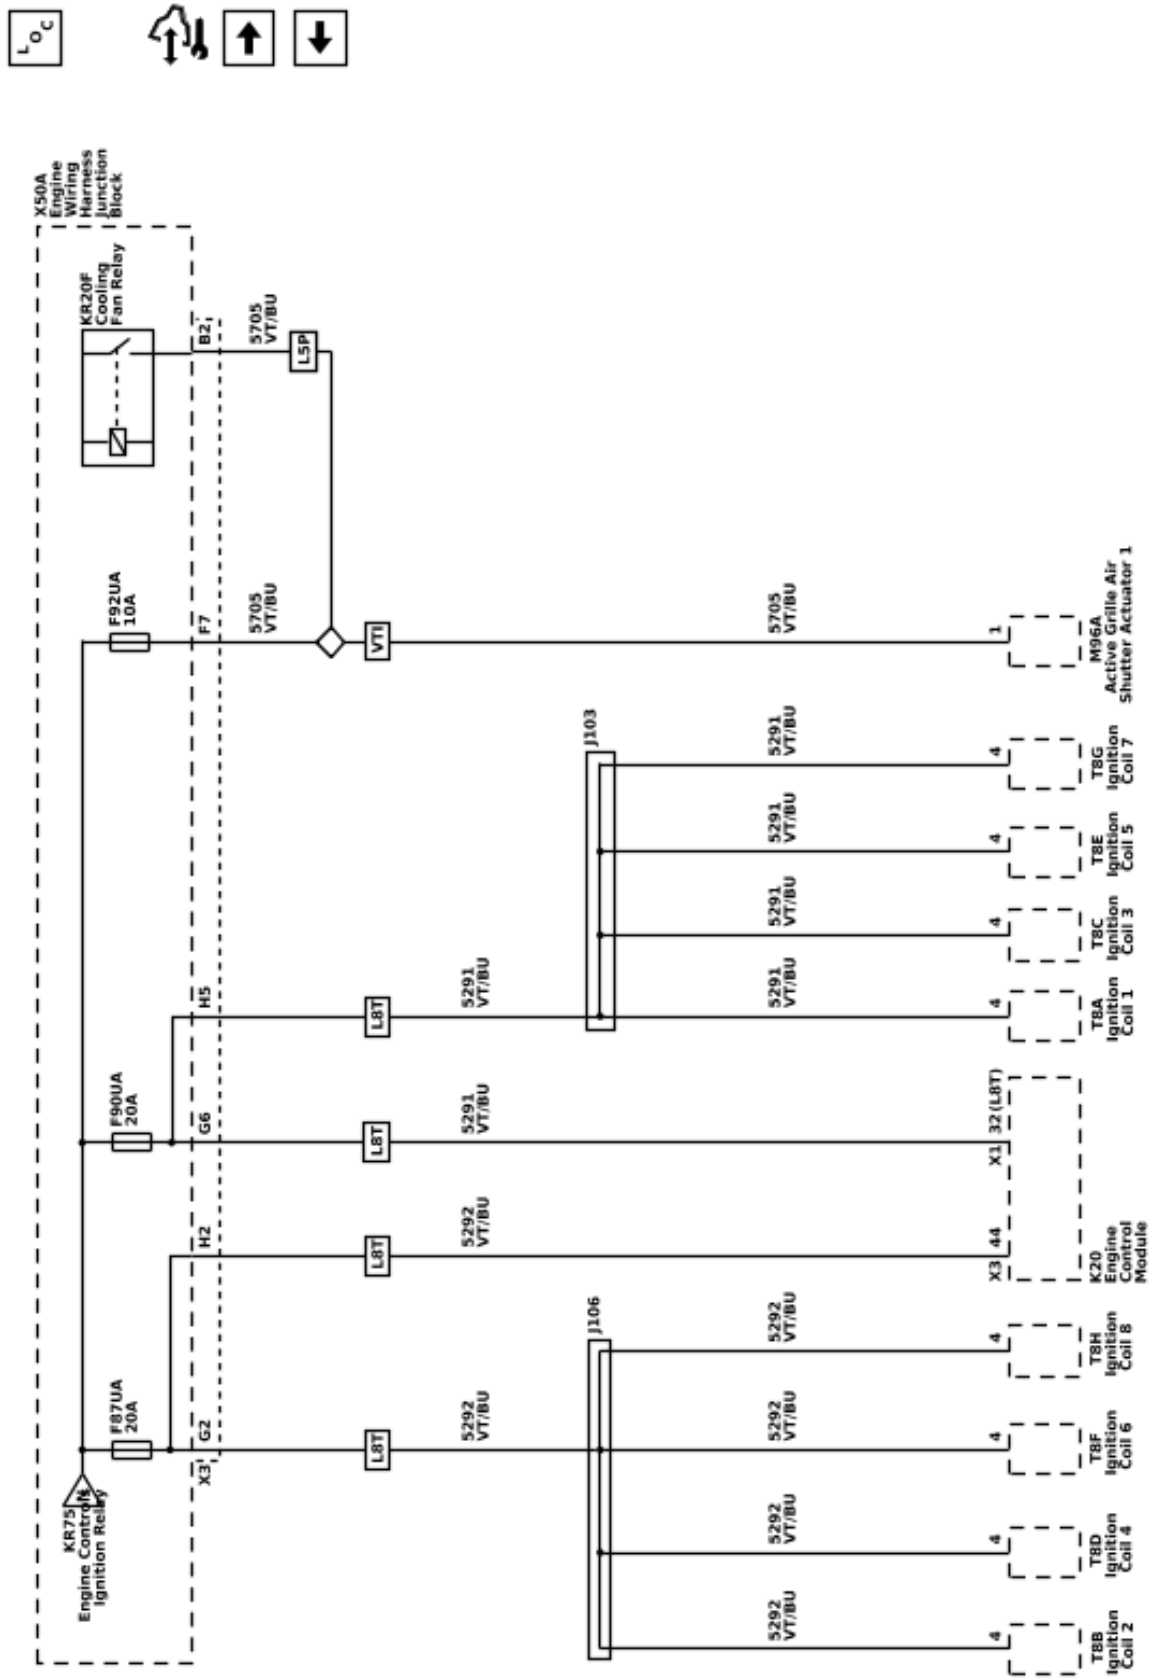


L_{OC}




Power Distribution Schematics (F1DL, F6DL, F14DL, F17DL, and F23DL Fuses)


L_{OC}

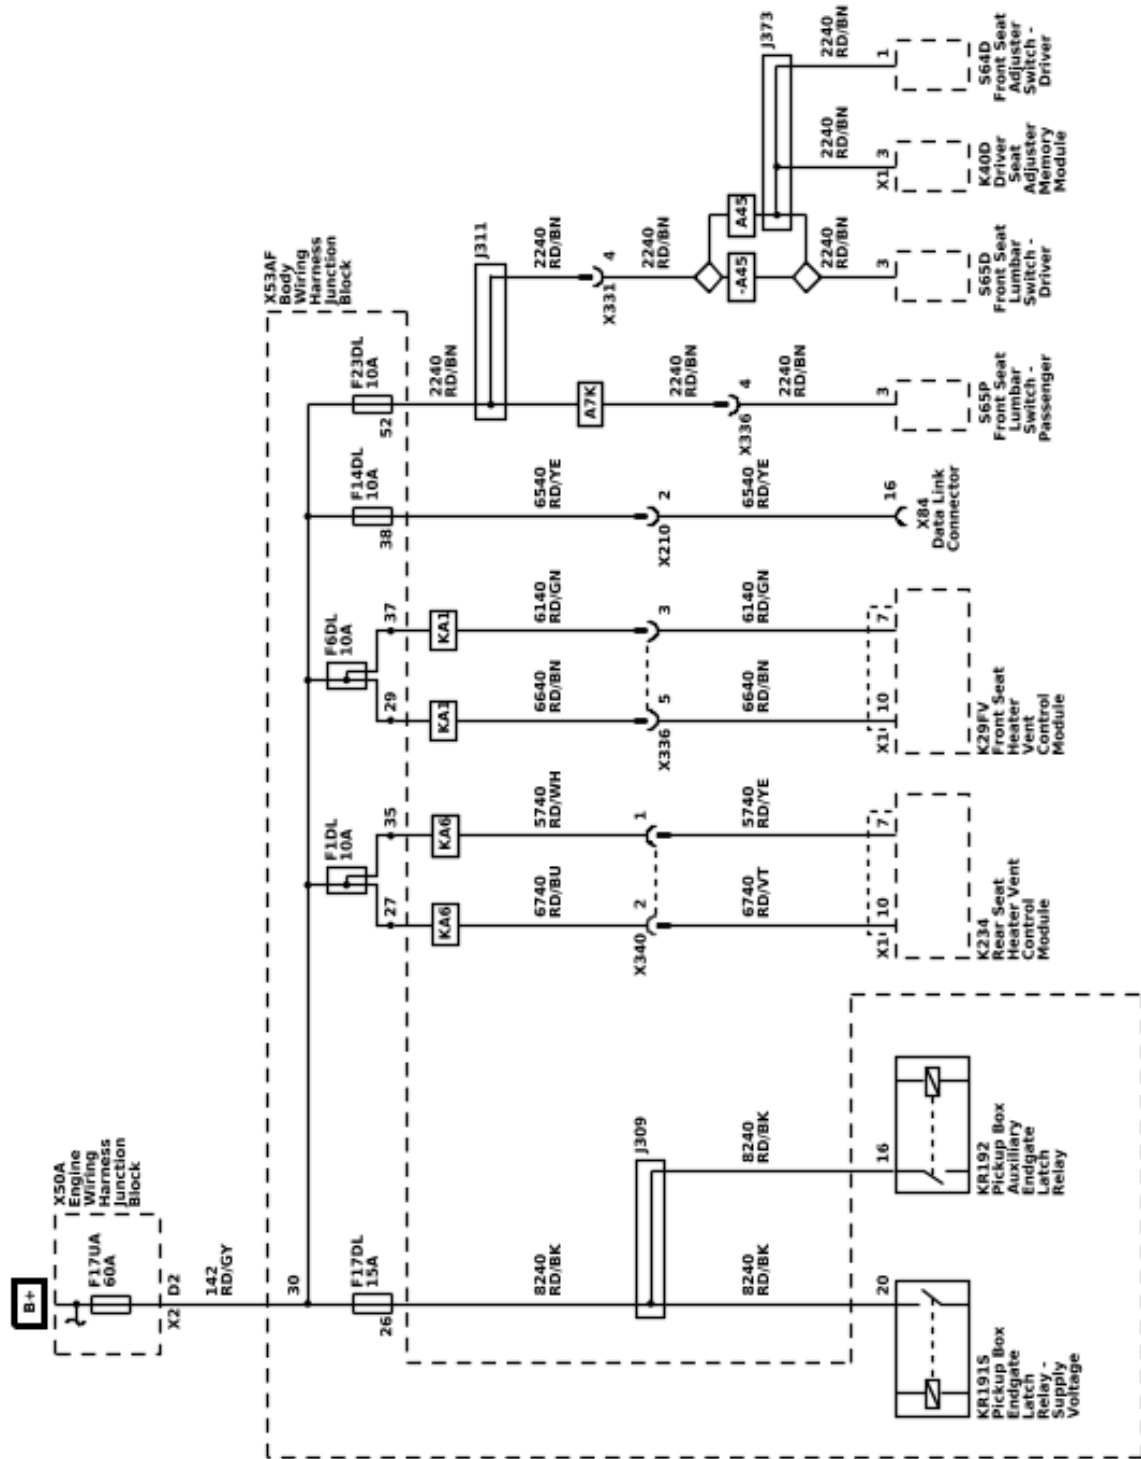

Power Distribution Schematics (F9DL, F12DL, F16DL, F20DL, and F22DL Fuses (L5P))

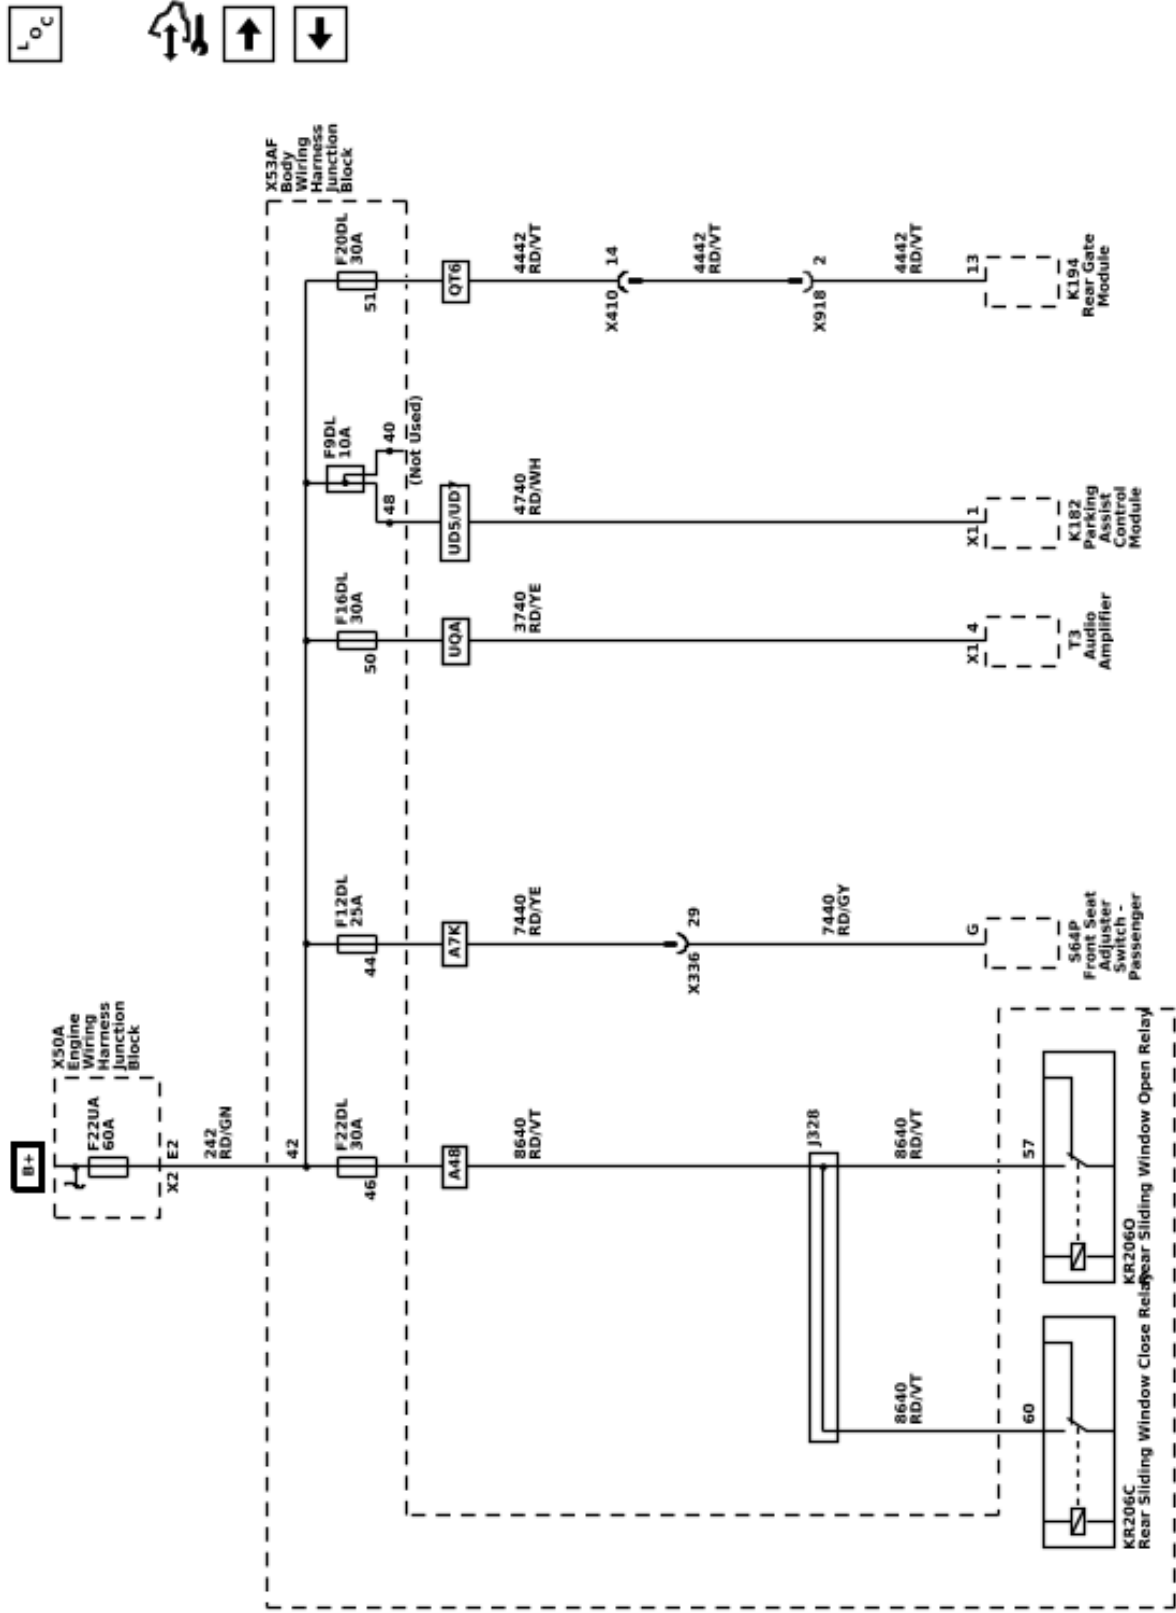


Power Distribution Schematics (Instrument Panel Wiring Harness Junction Block - Auxiliary (L5P))

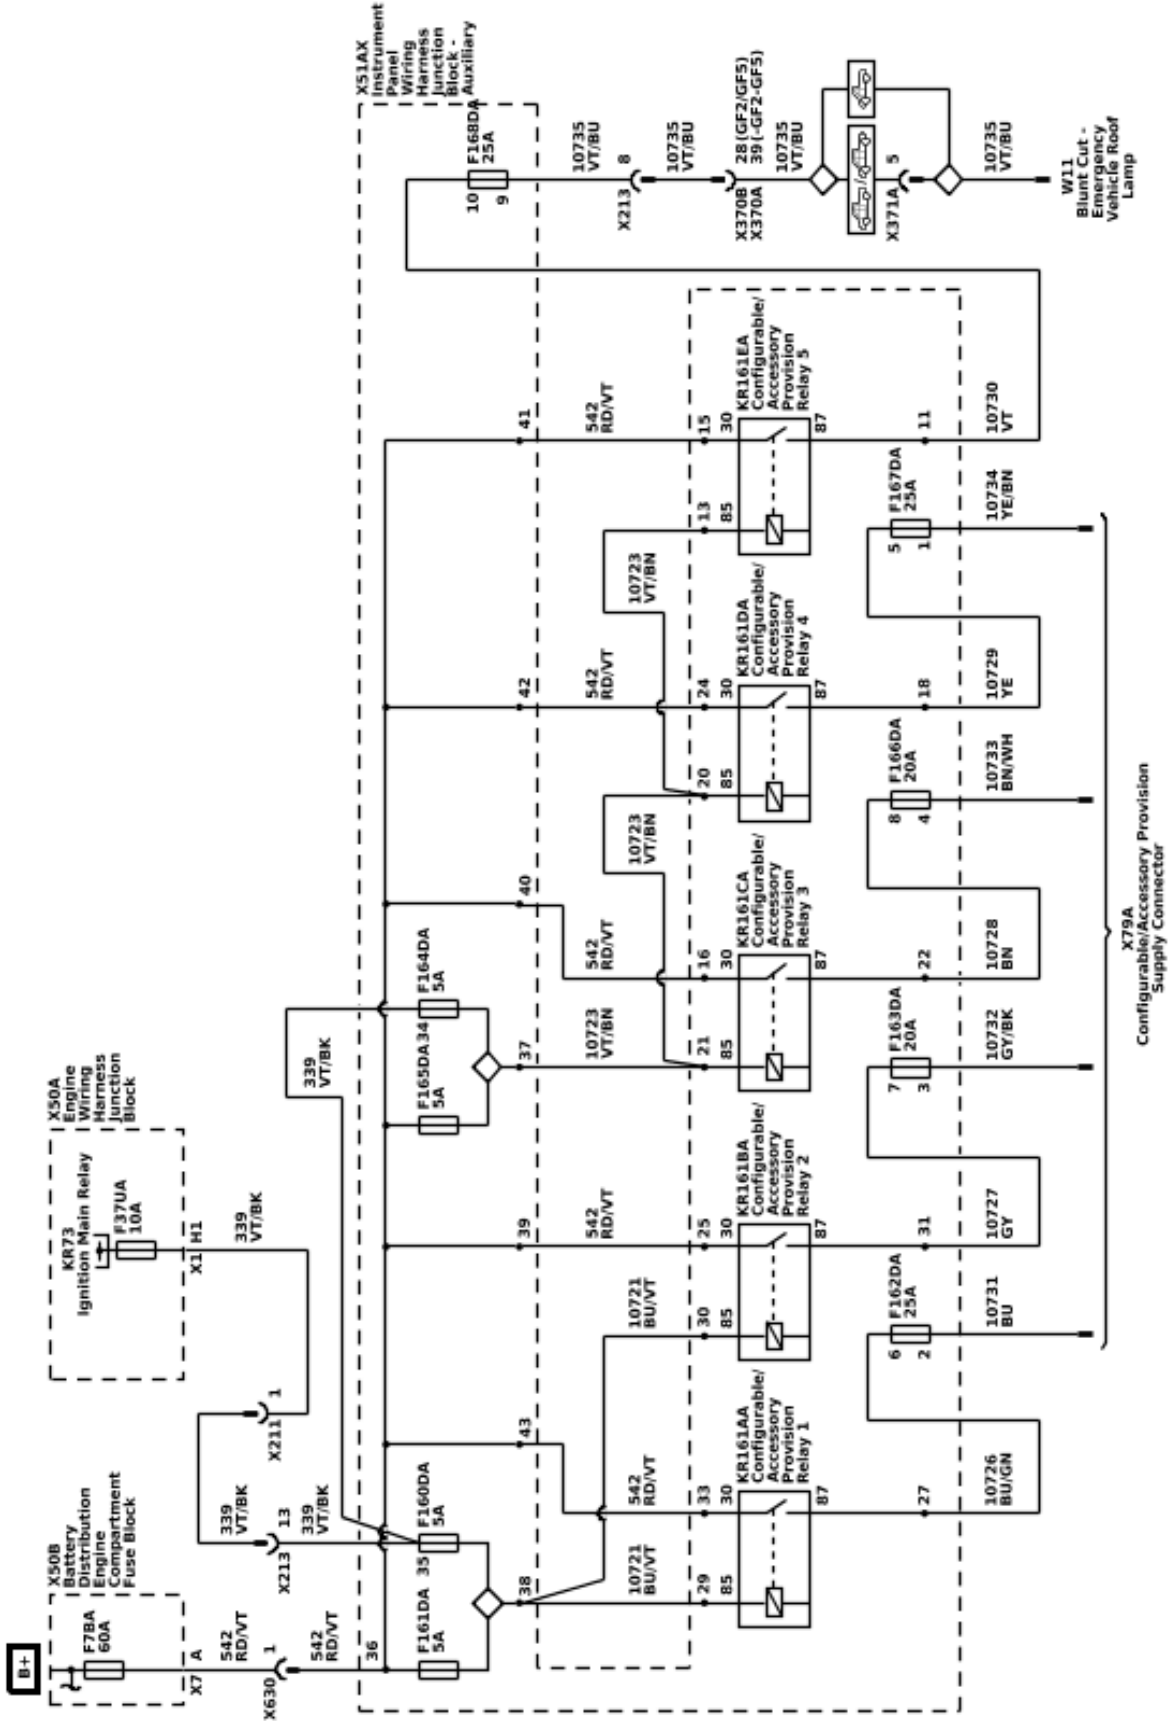


6150312

Power Distribution Schematics (Instrument Panel Wiring Harness Junction Block - Right - B+ Bus)

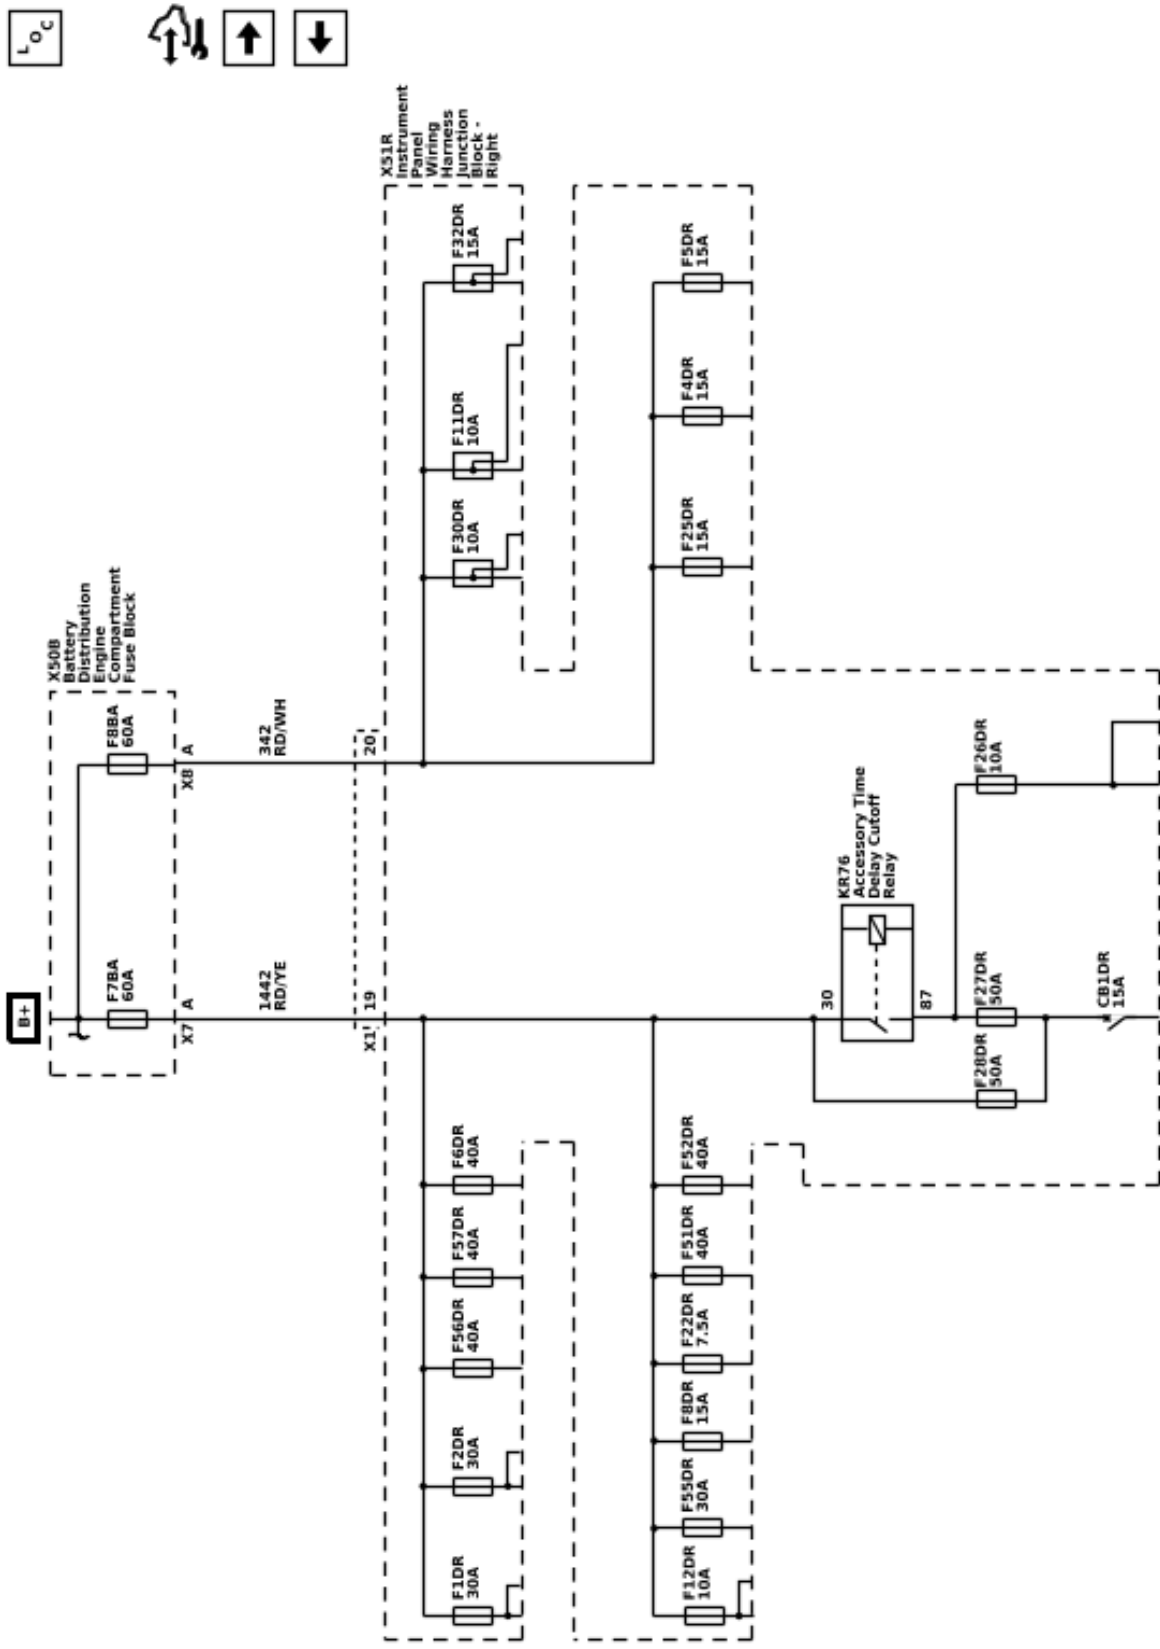


Power Distribution Schematics (F1DR, F2DR, F6DR, F8DR, F31DR, F25DR, F33DR, F35DR, and F33DR Fuses)

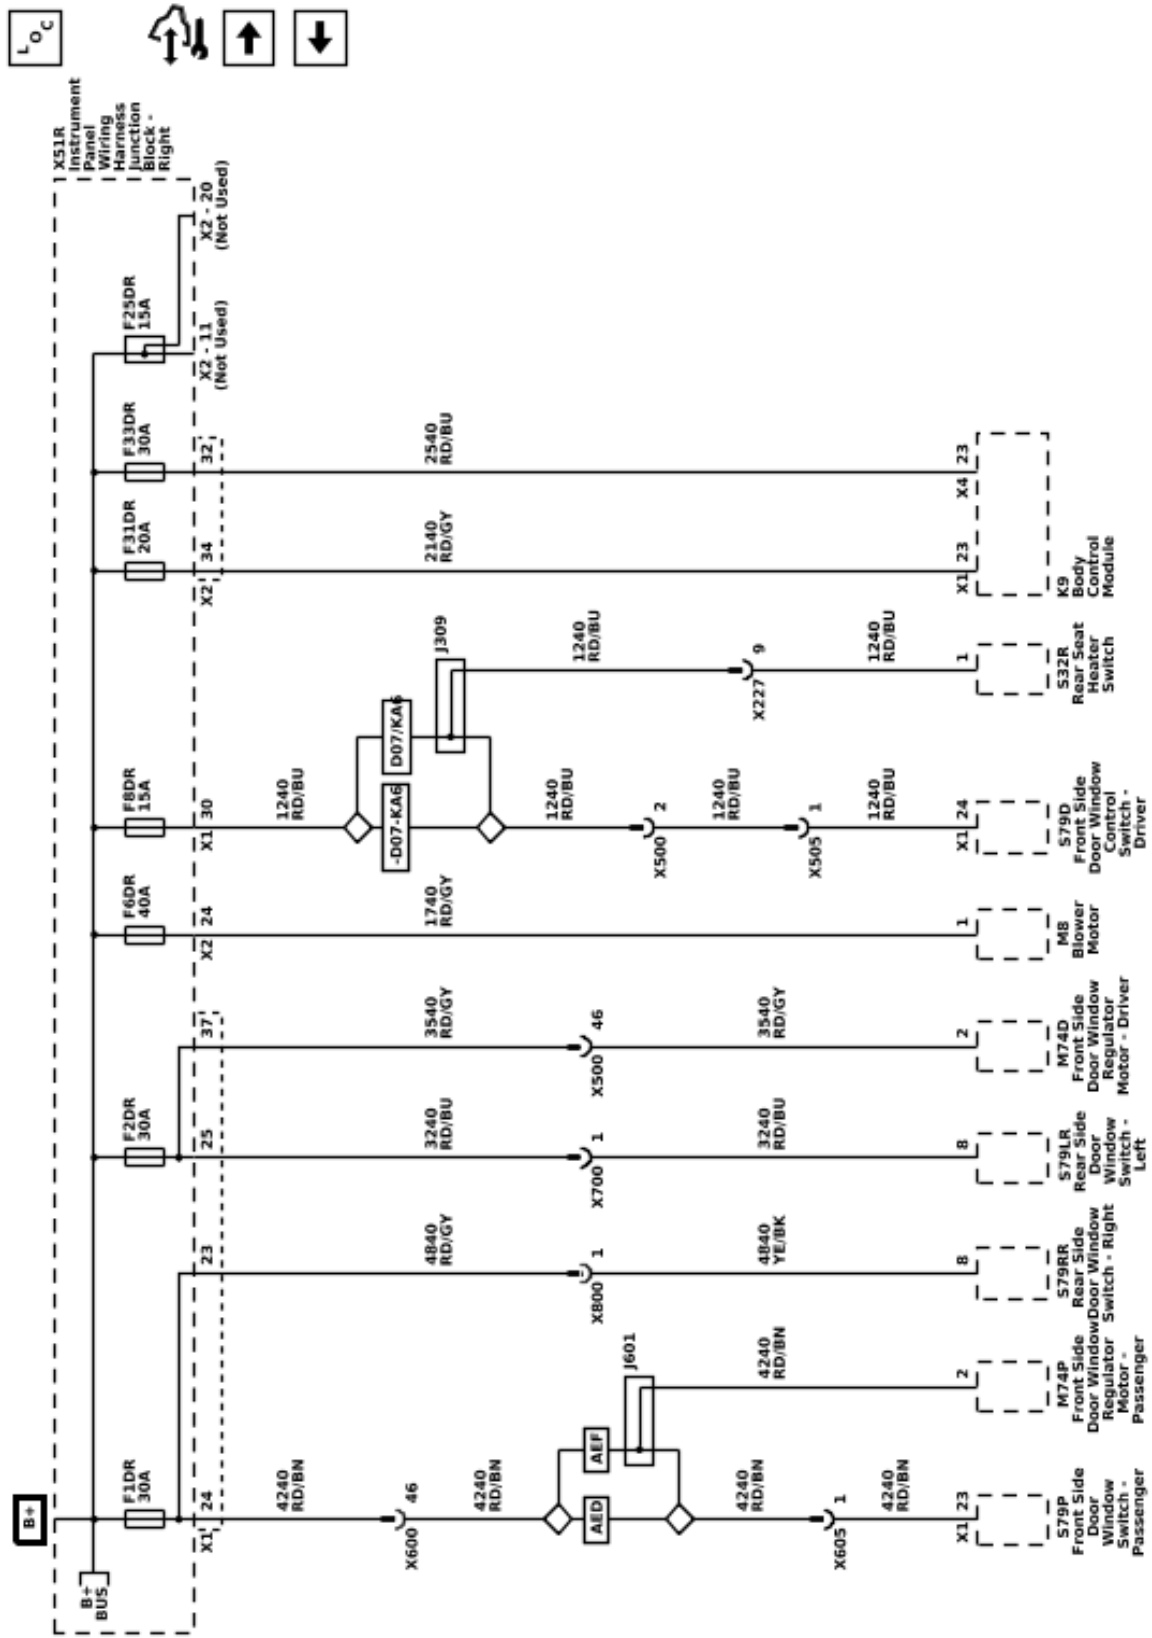


Power Distribution Schematics (F4DR, F5DR, F10DR, F11DR, F12DR, F11DR, F12DR, and F54DR Fuses)

LOC

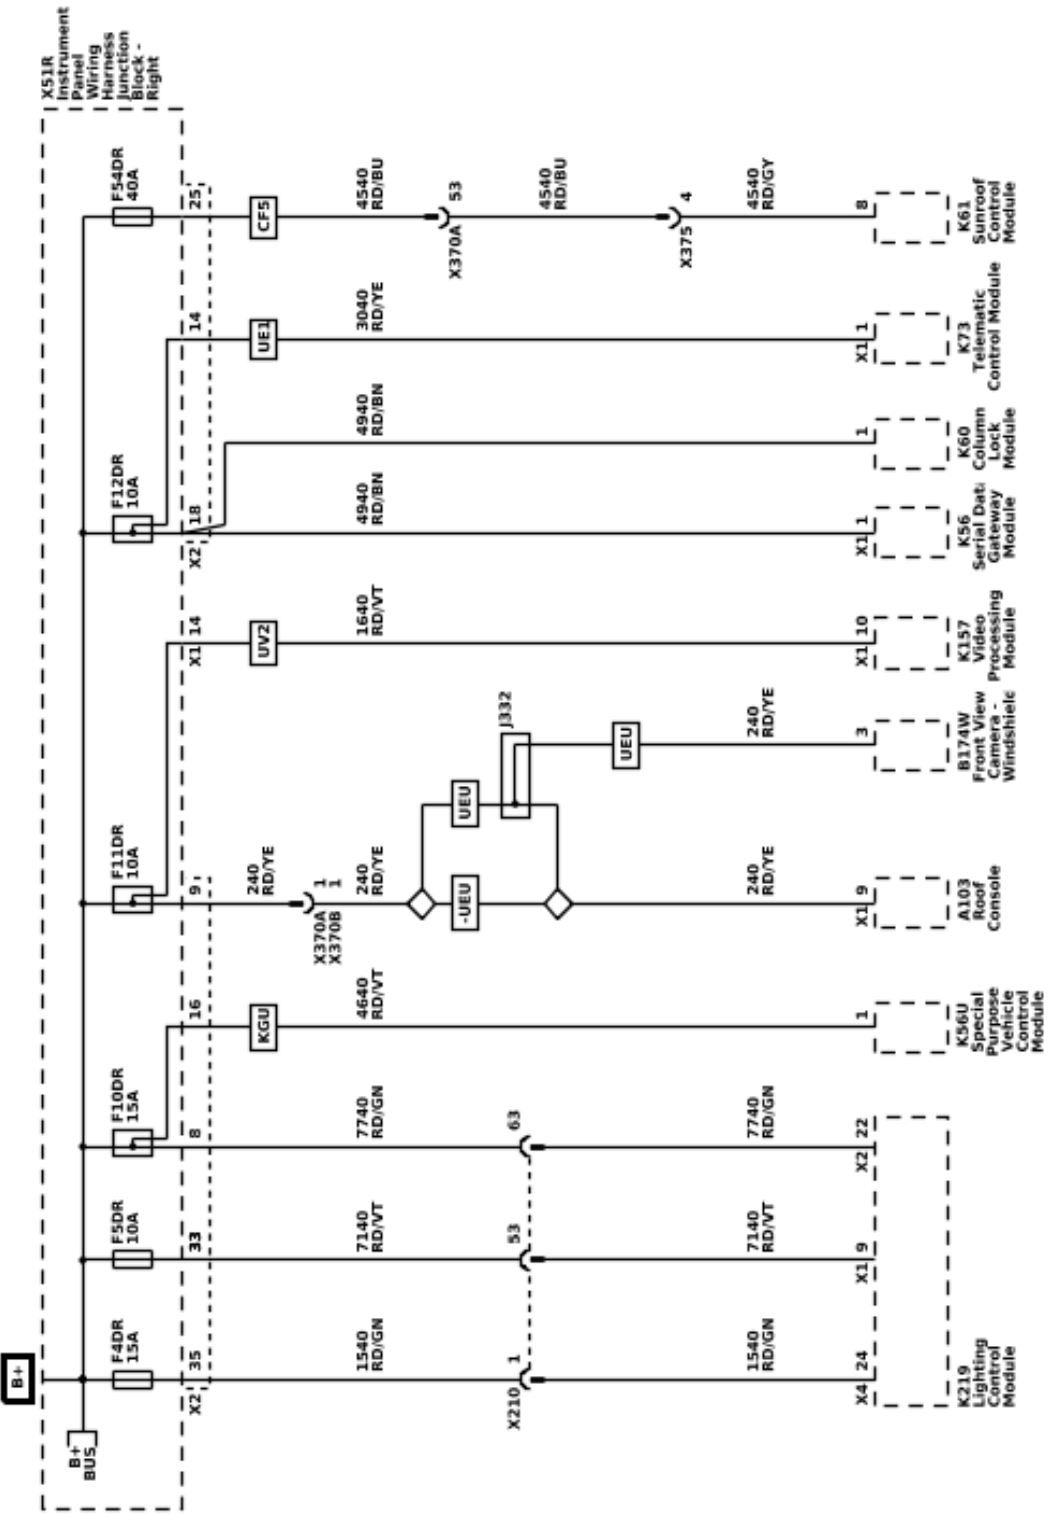


Power Distribution Schematics (F17DR, F22DR, F42DR, F44DR, F45DR, F45DR, and F56DR Fuses)

L_{OC}

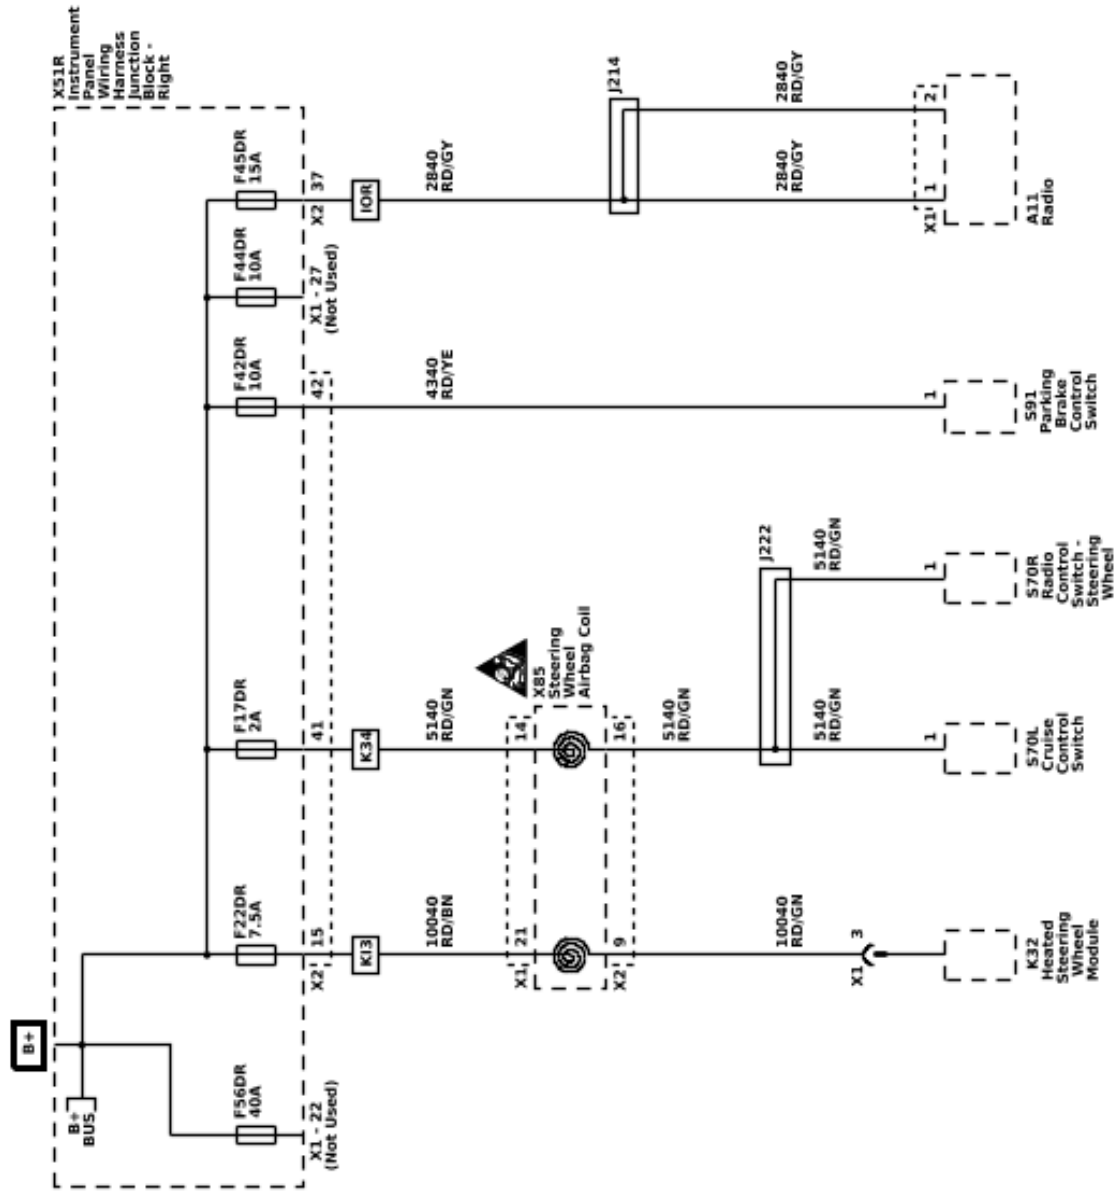


Power Distribution Schematics (F48DR, F49DR, F55DR, and F57DR Fuses)


LOC

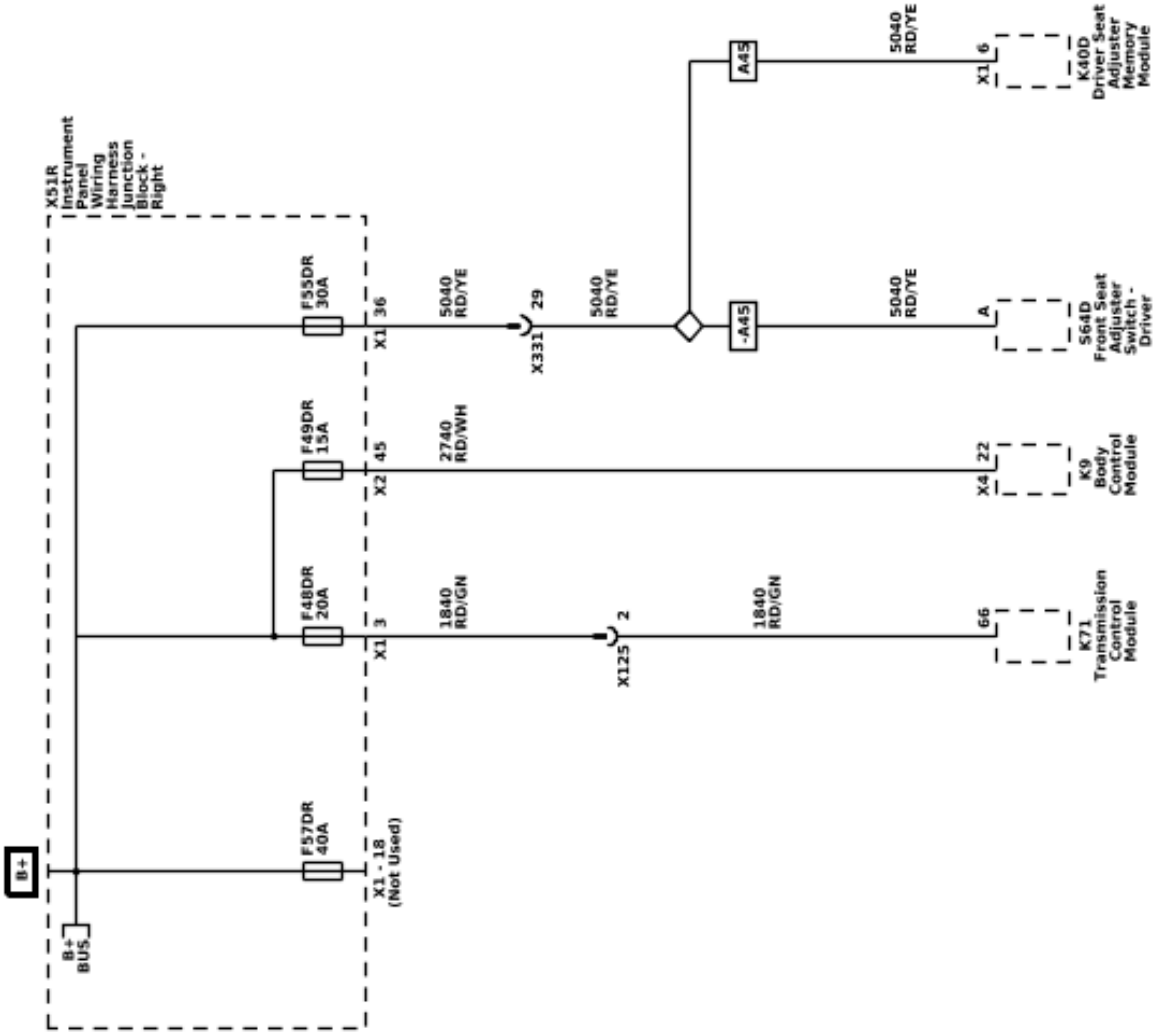

Power Distribution Schematics (Body Control Module High Side Drives - F11UA Fuse)

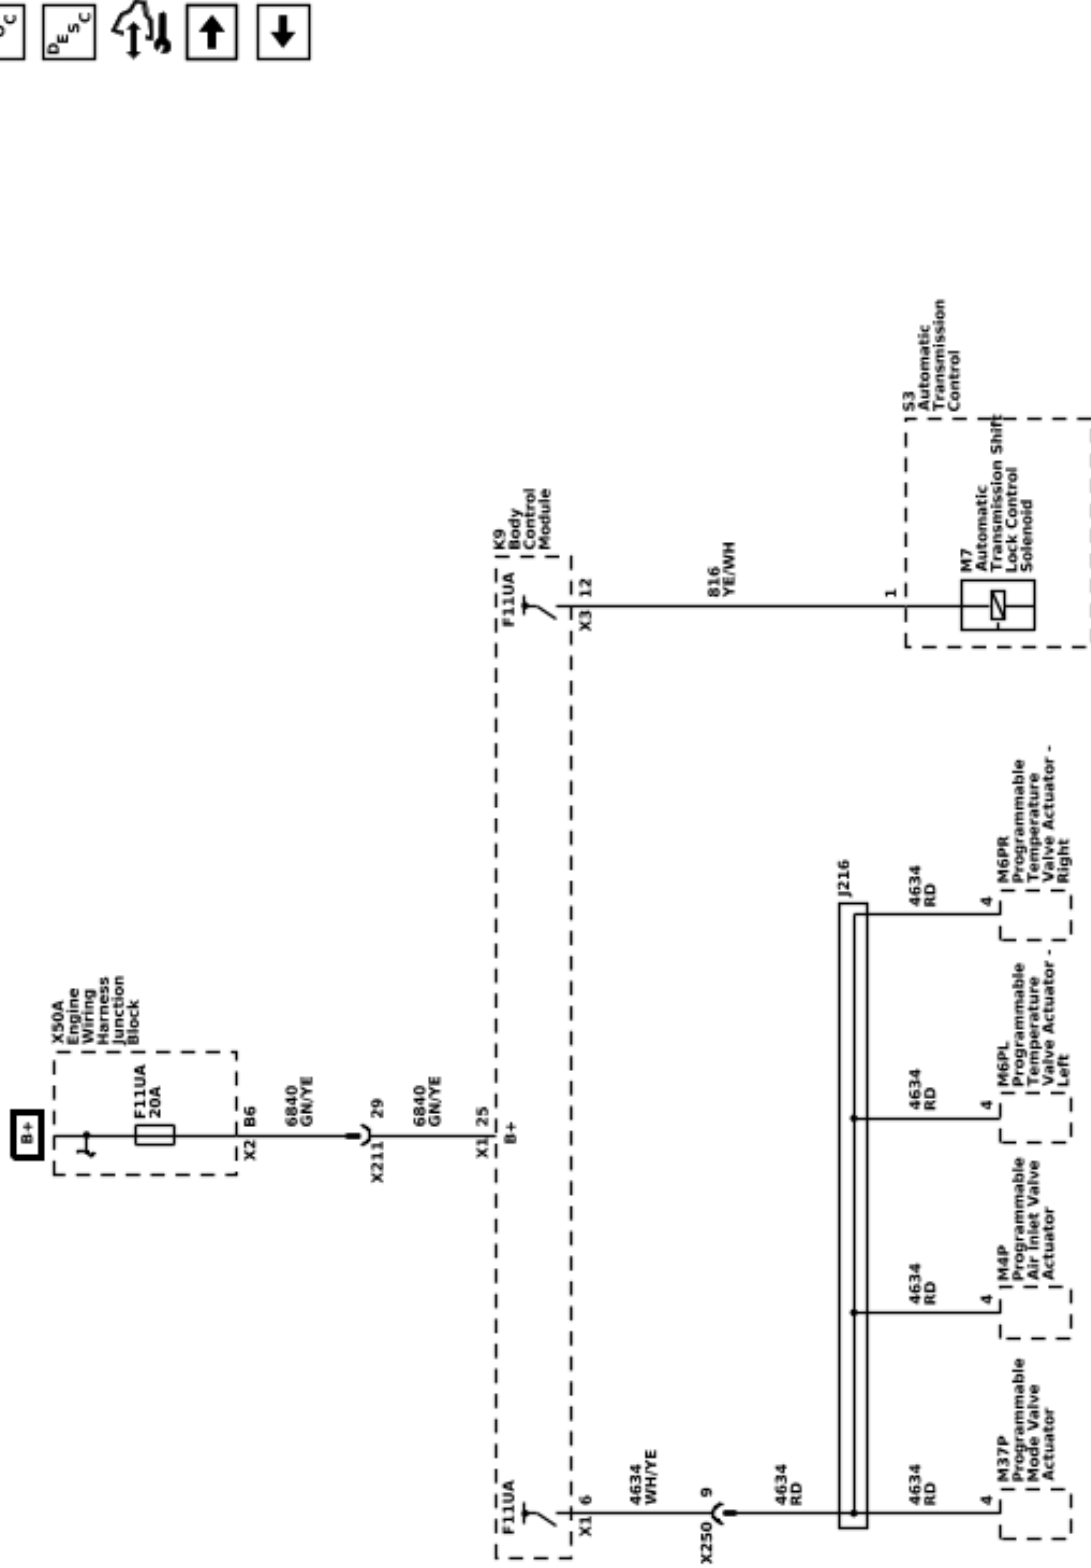


Power Distribution Schematics (Body Control Module High Side Drives - F31DR Fuse - 1 of 2)

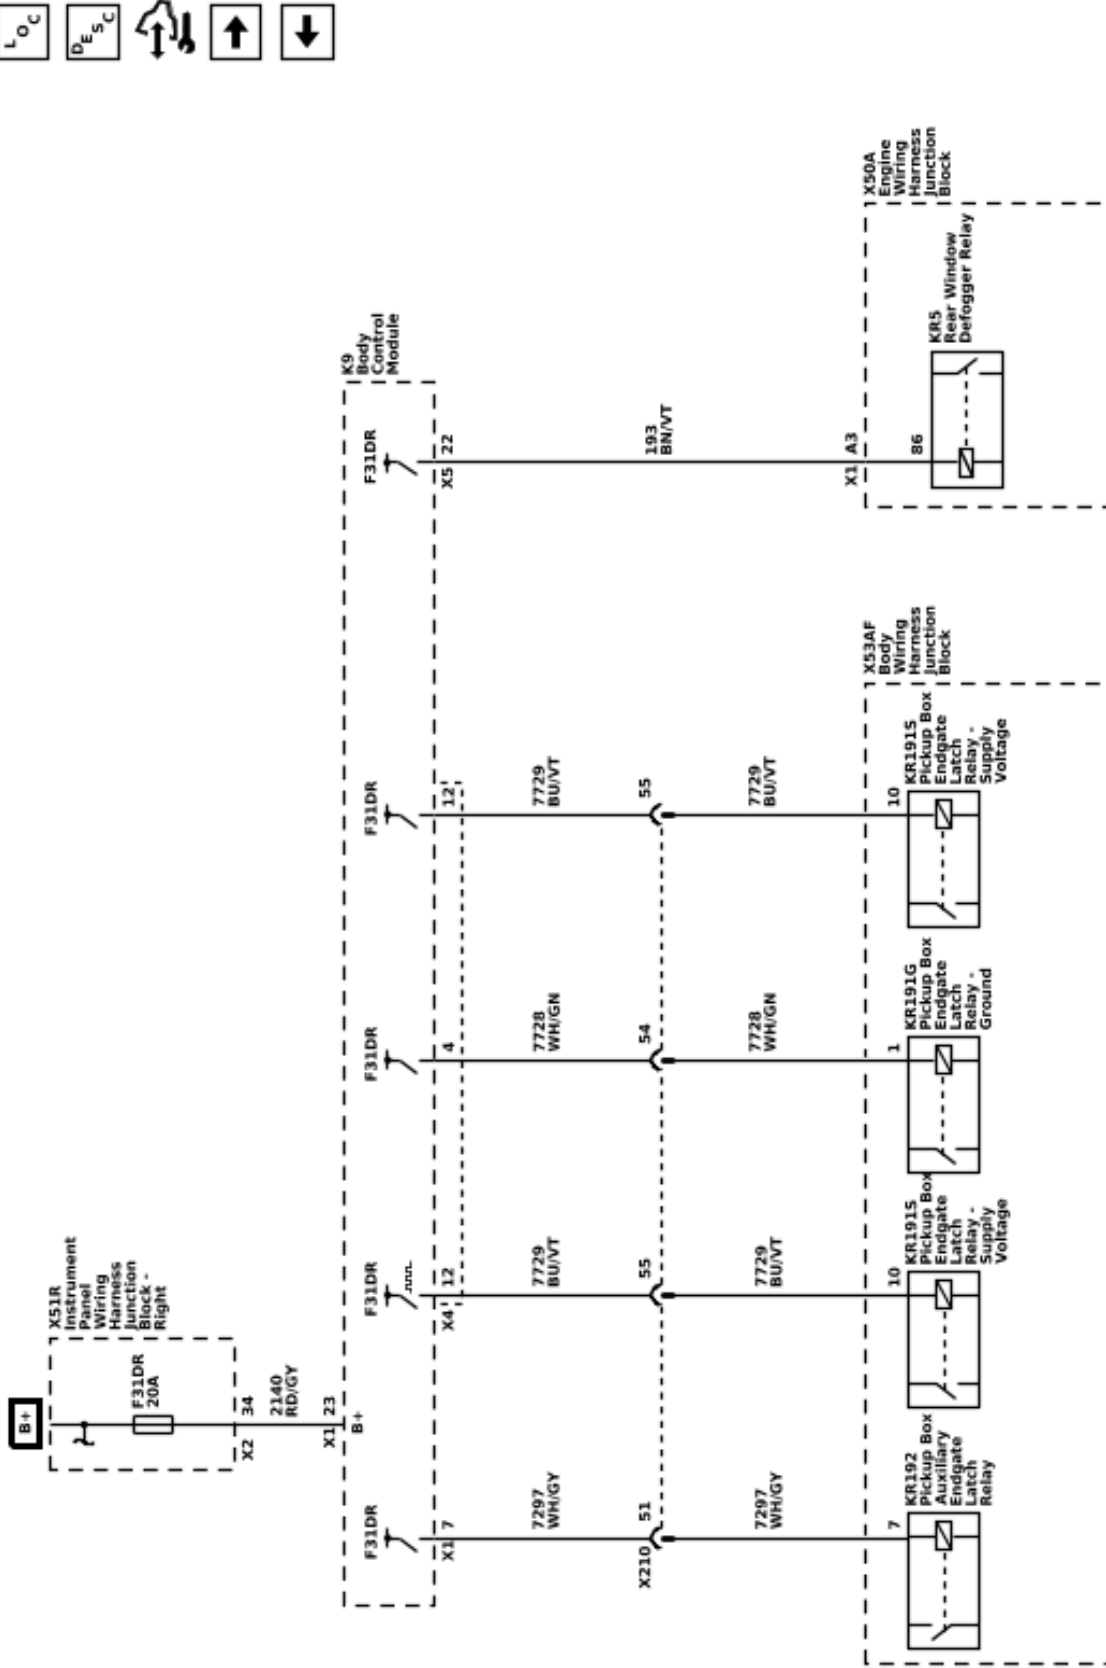


6150164


Power Distribution Schematics (Body Control Module High Side Drives - 2 of 2)

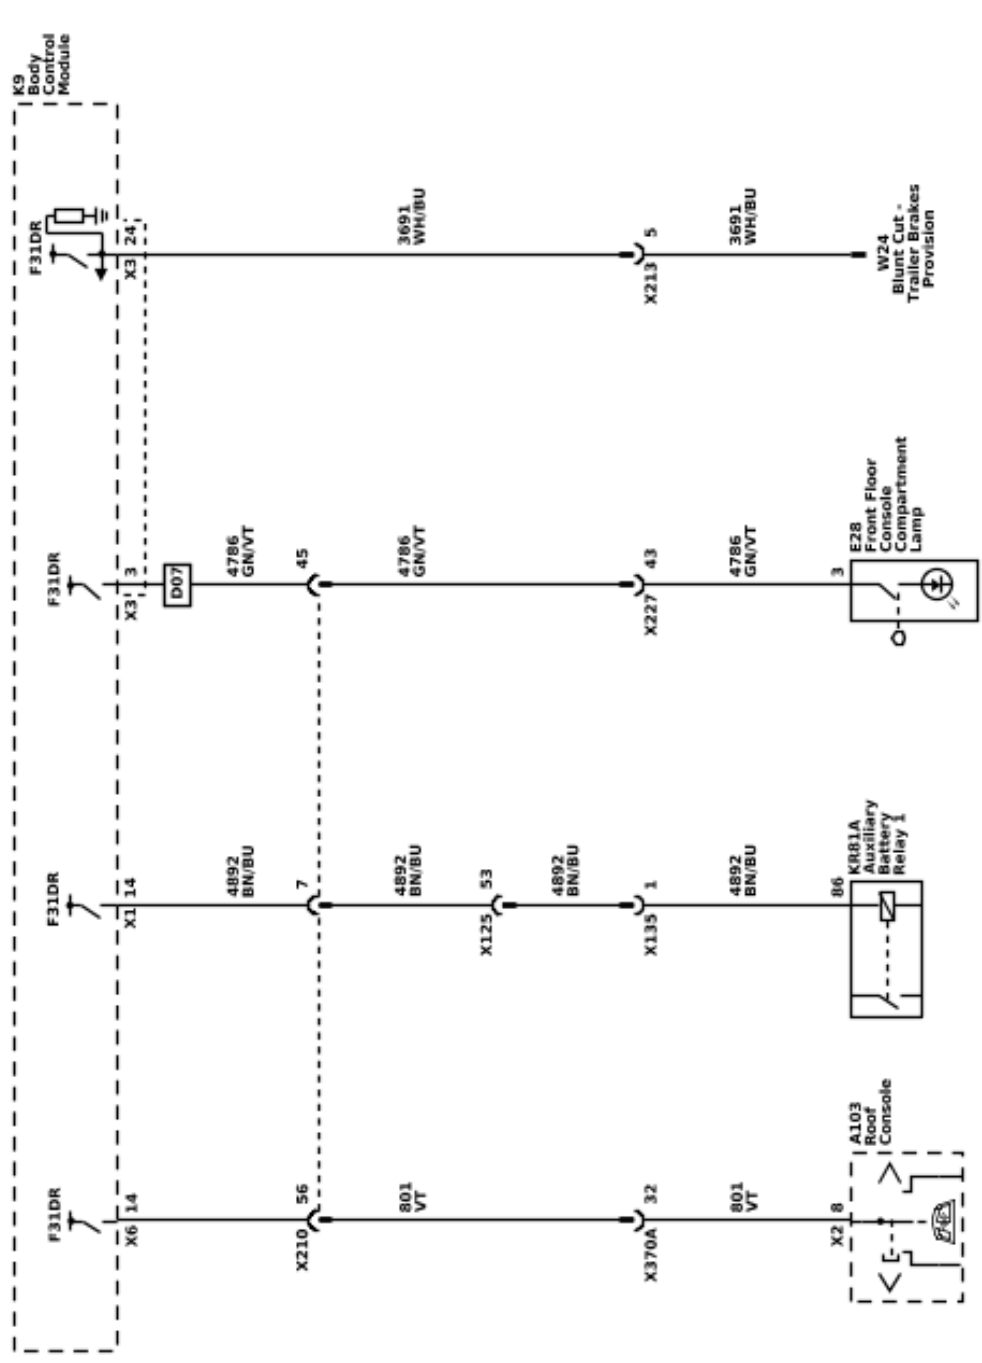


Power Distribution Schematics (Body Control Module High Side Drives - F33DR Fuse)

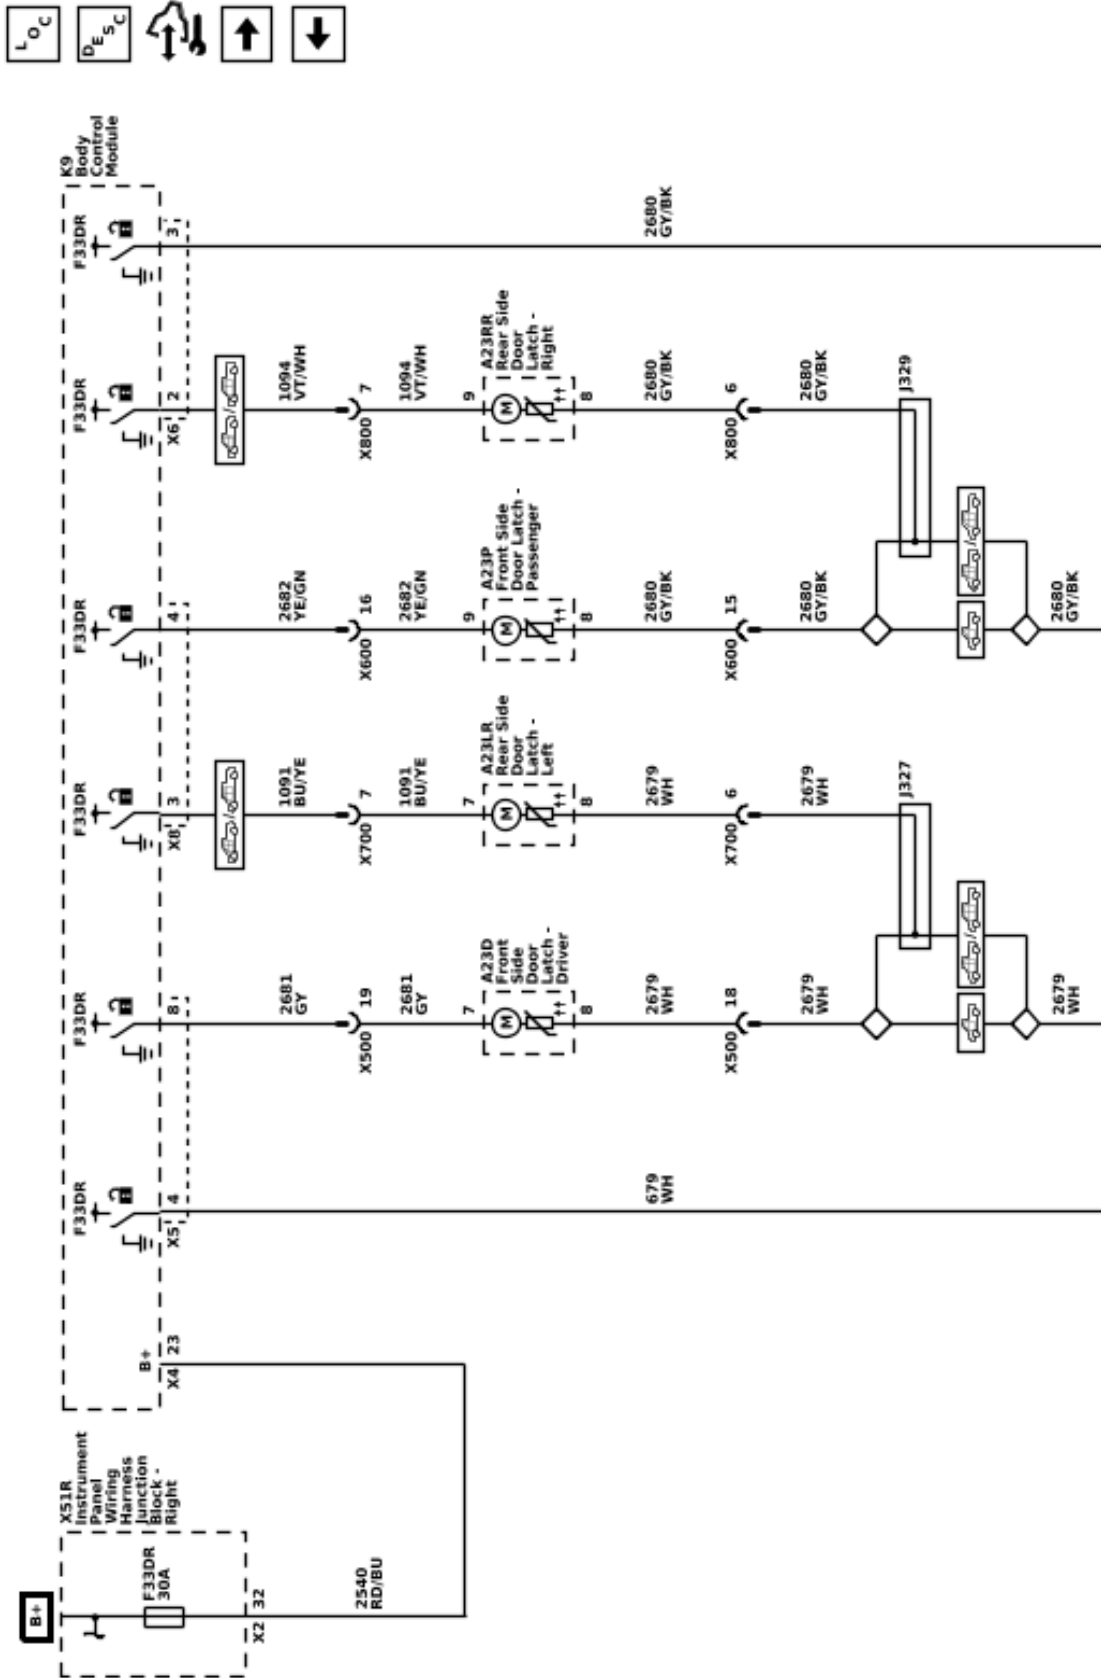


Power Distribution Schematics (Body Control Module High Side Drives - F49DR Fuse)

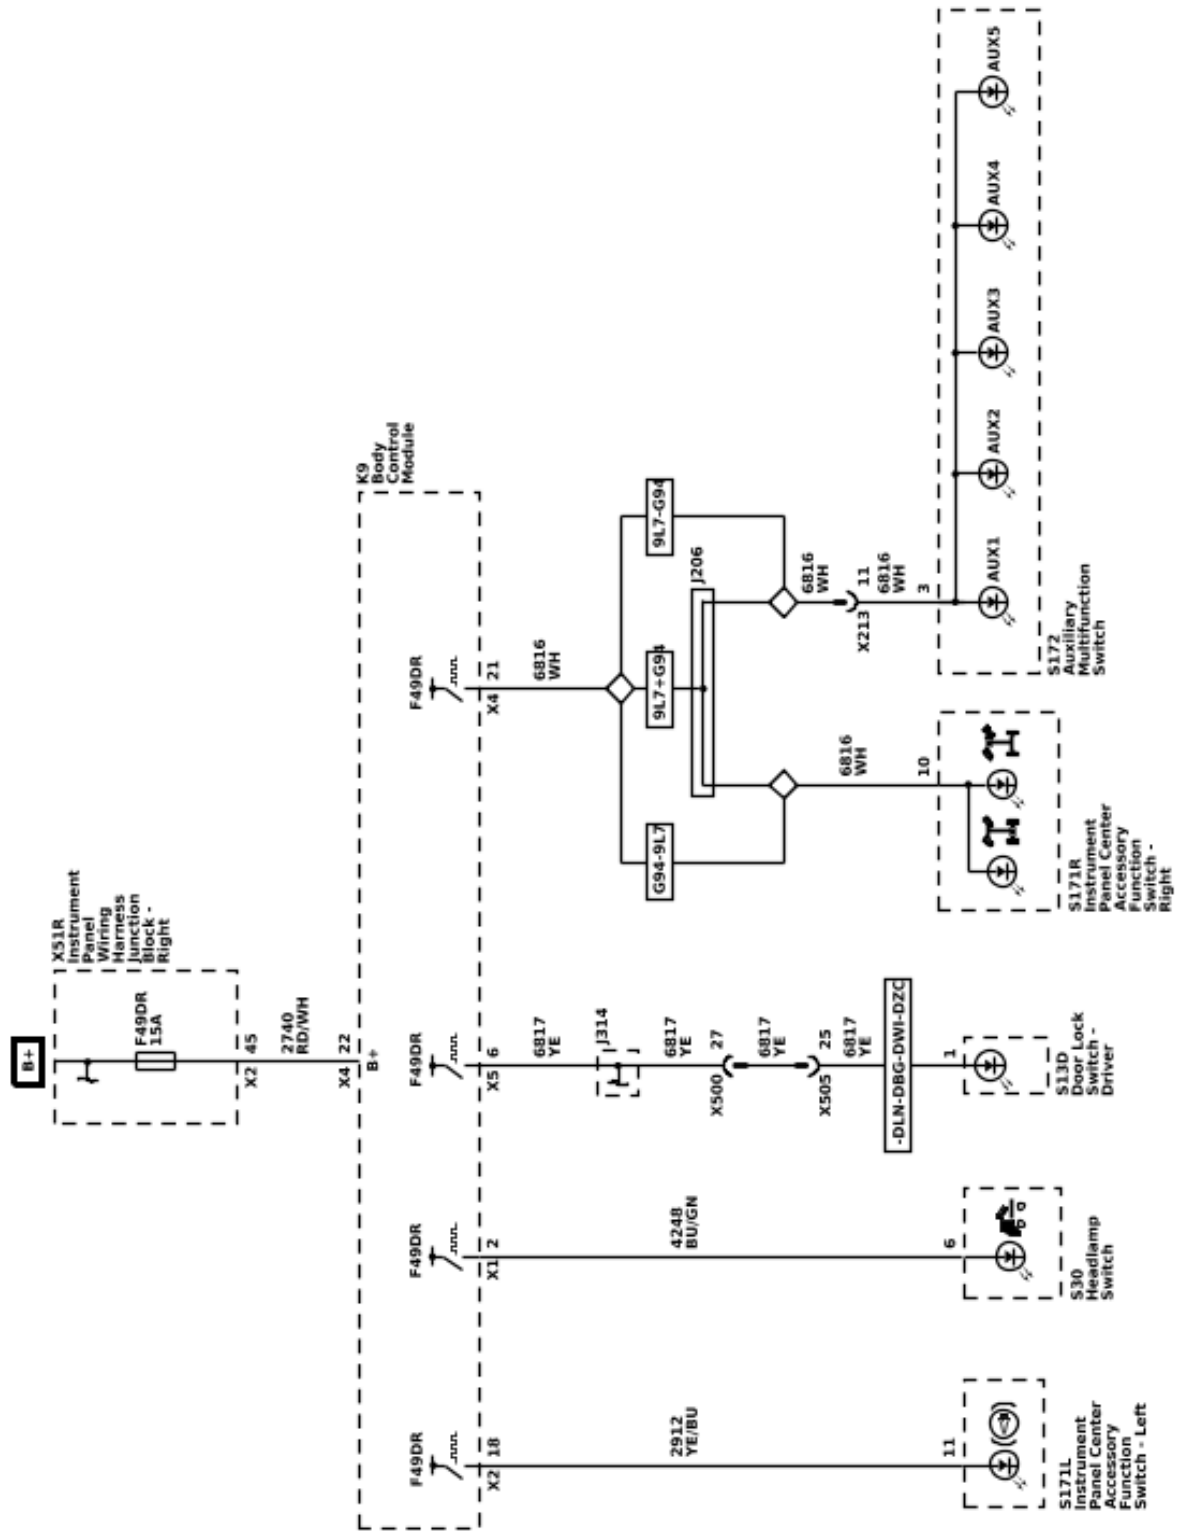


Power Distribution Schematics (Lighting Control Module High Side Drives - F7UA Fuse)

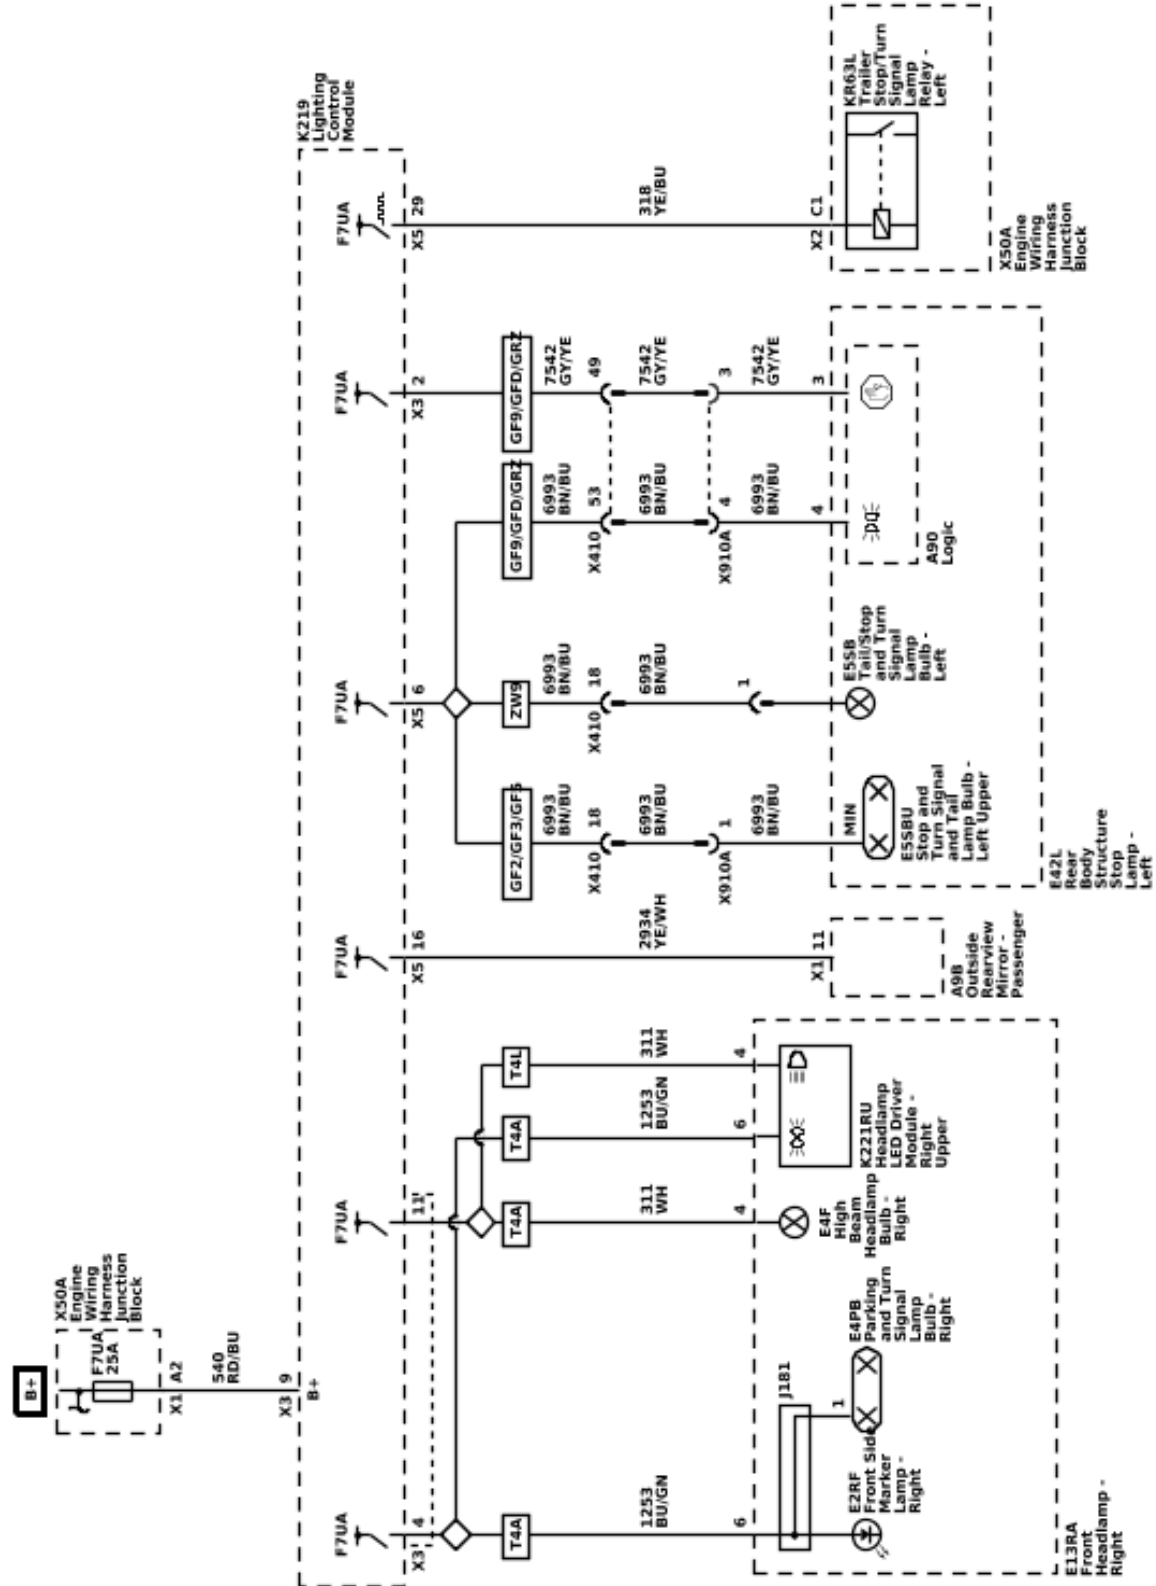


Power Distribution Schematics (Lighting Control Module High Side Drives - F10UA Fuse)

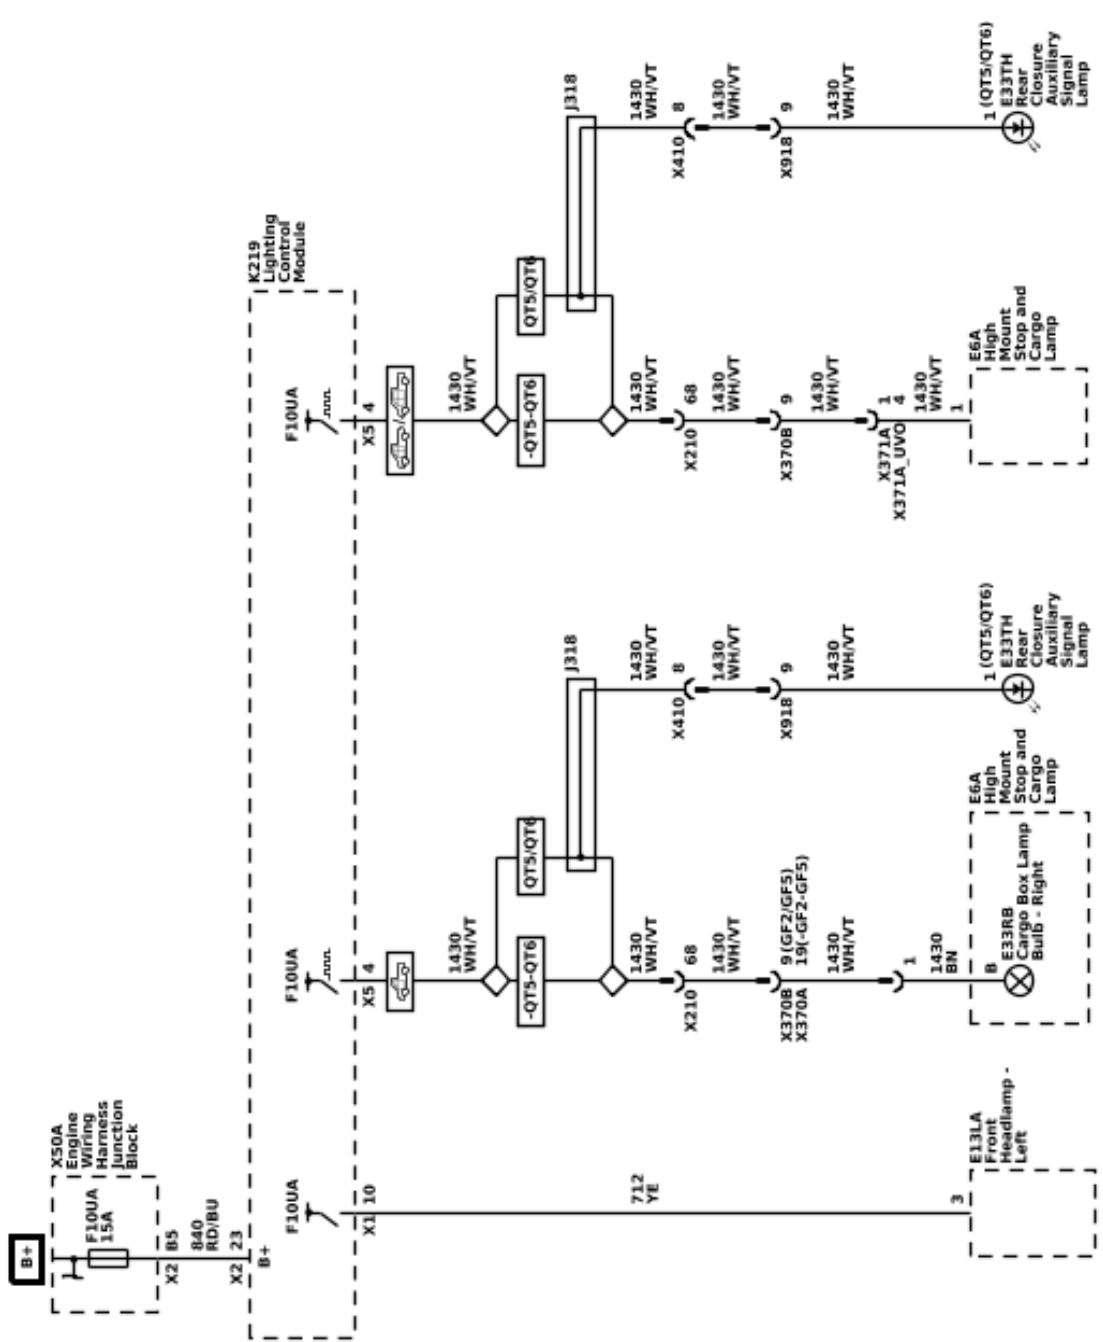


Power Distribution Schematics (Lighting Control Module High Side Drives - F30UA Fuse)

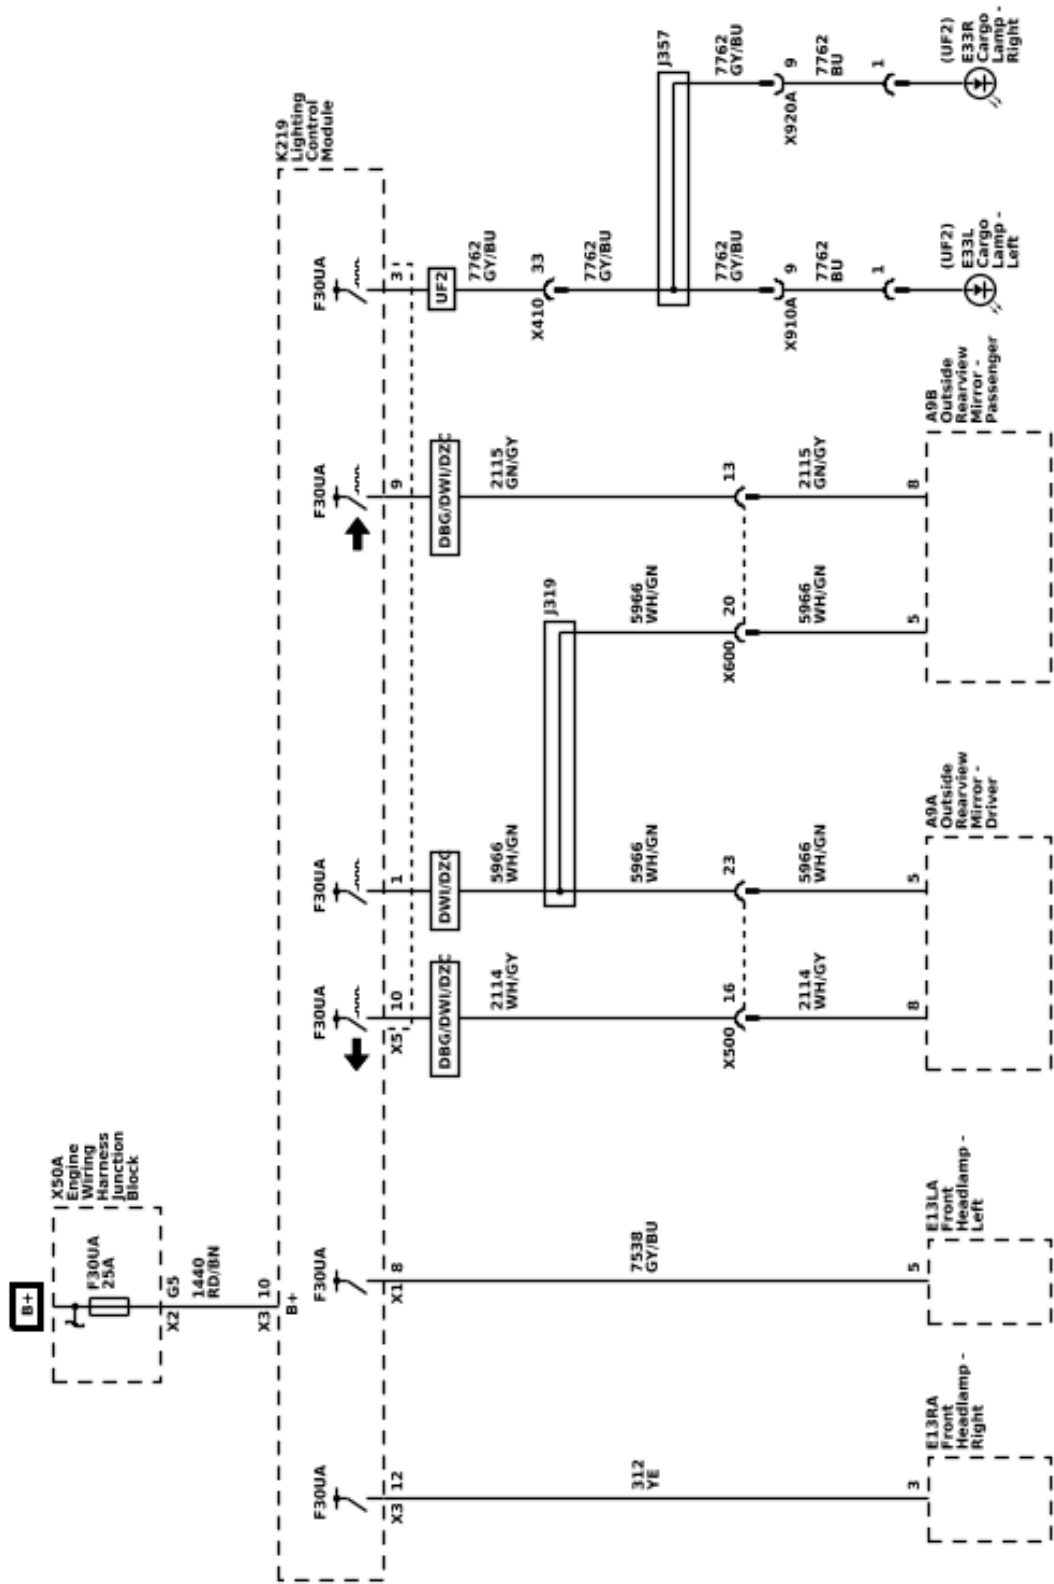


Power Distribution Schematics (Lighting Control Module High Side Drives - F31UA Fuse - 1 of 2)

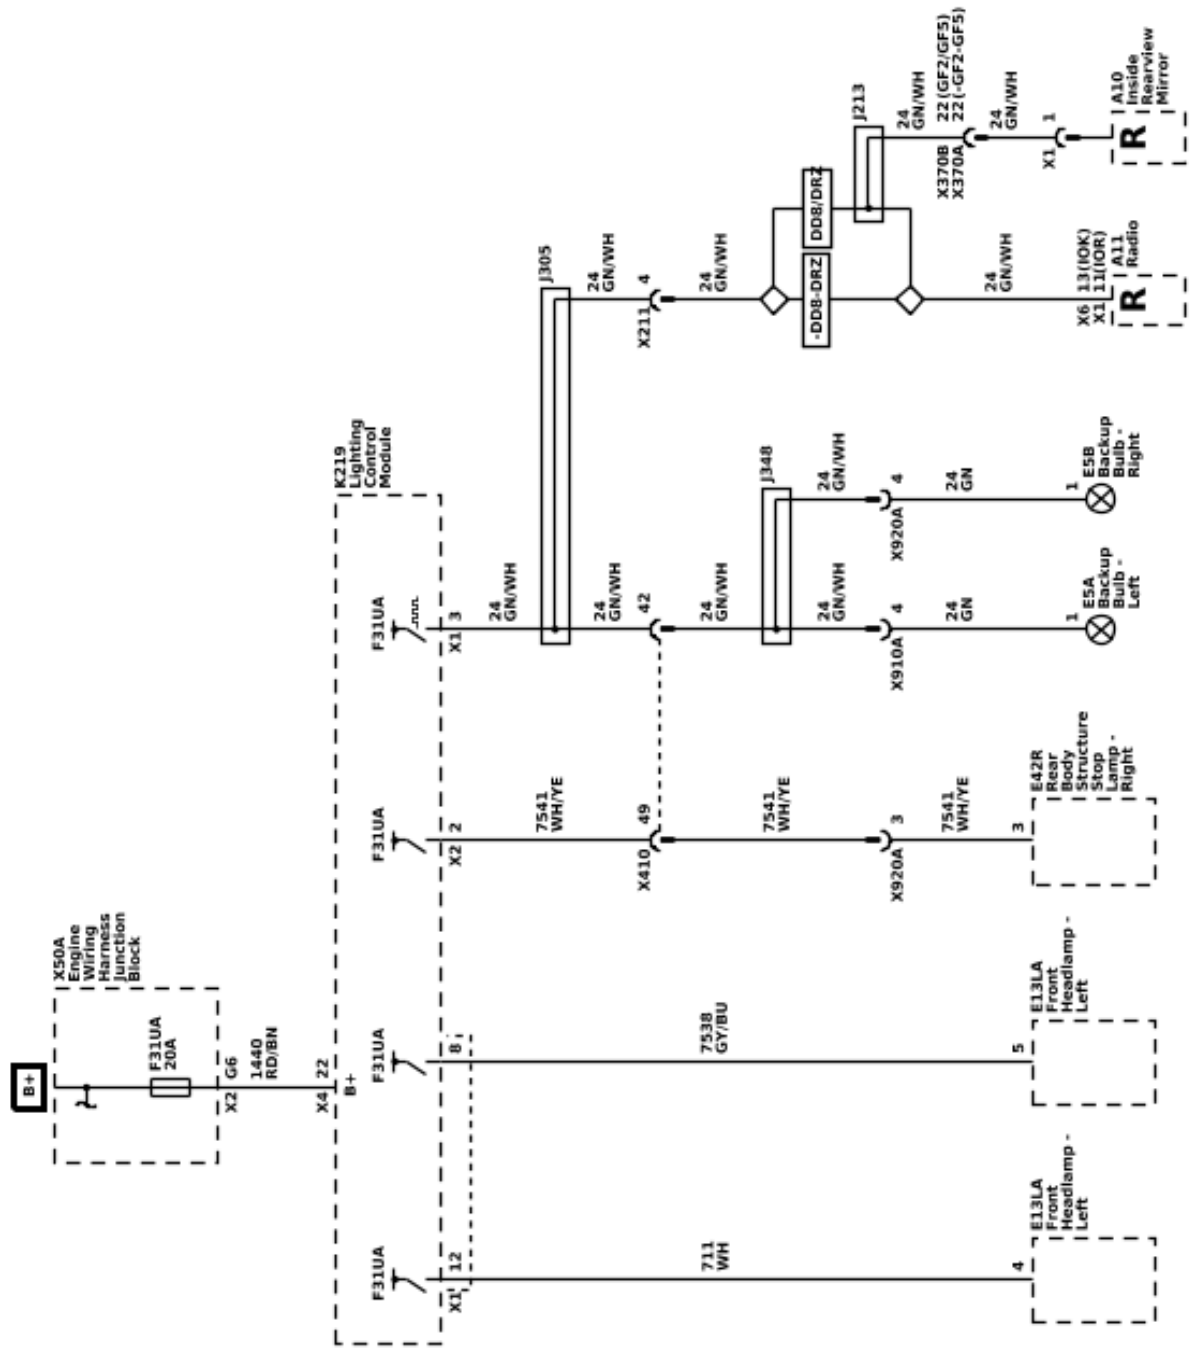


Power Distribution Schematics (Lighting Control Module High Side Drives - F31UA Fuse - 2 of 2)

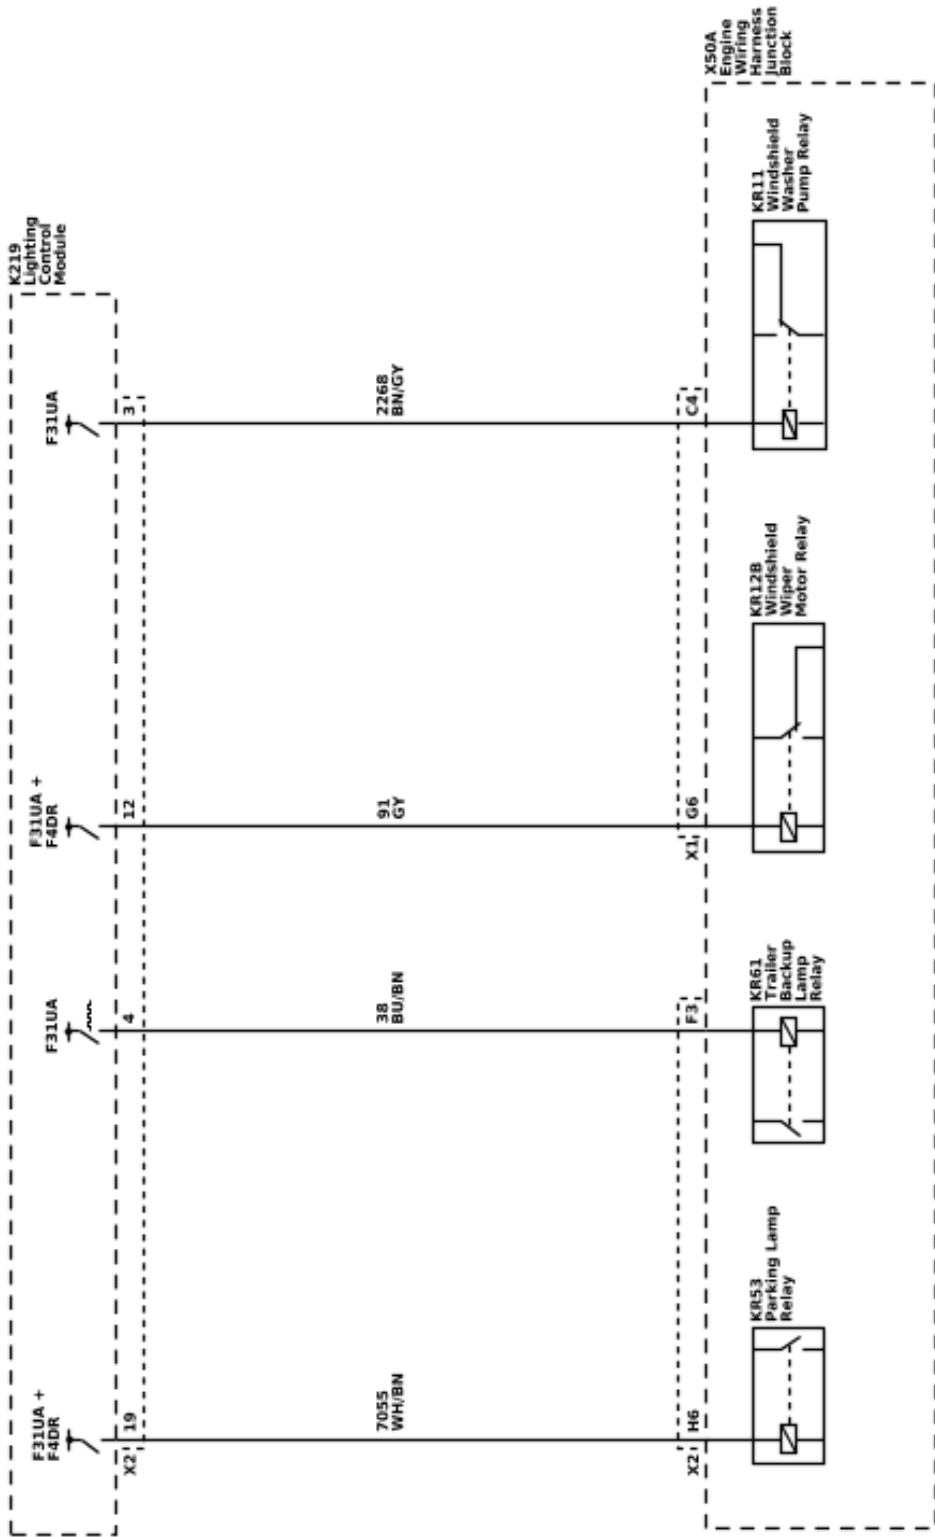


Power Distribution Schematics (Lighting Control Module High Side Drives - F4DR Fuse)

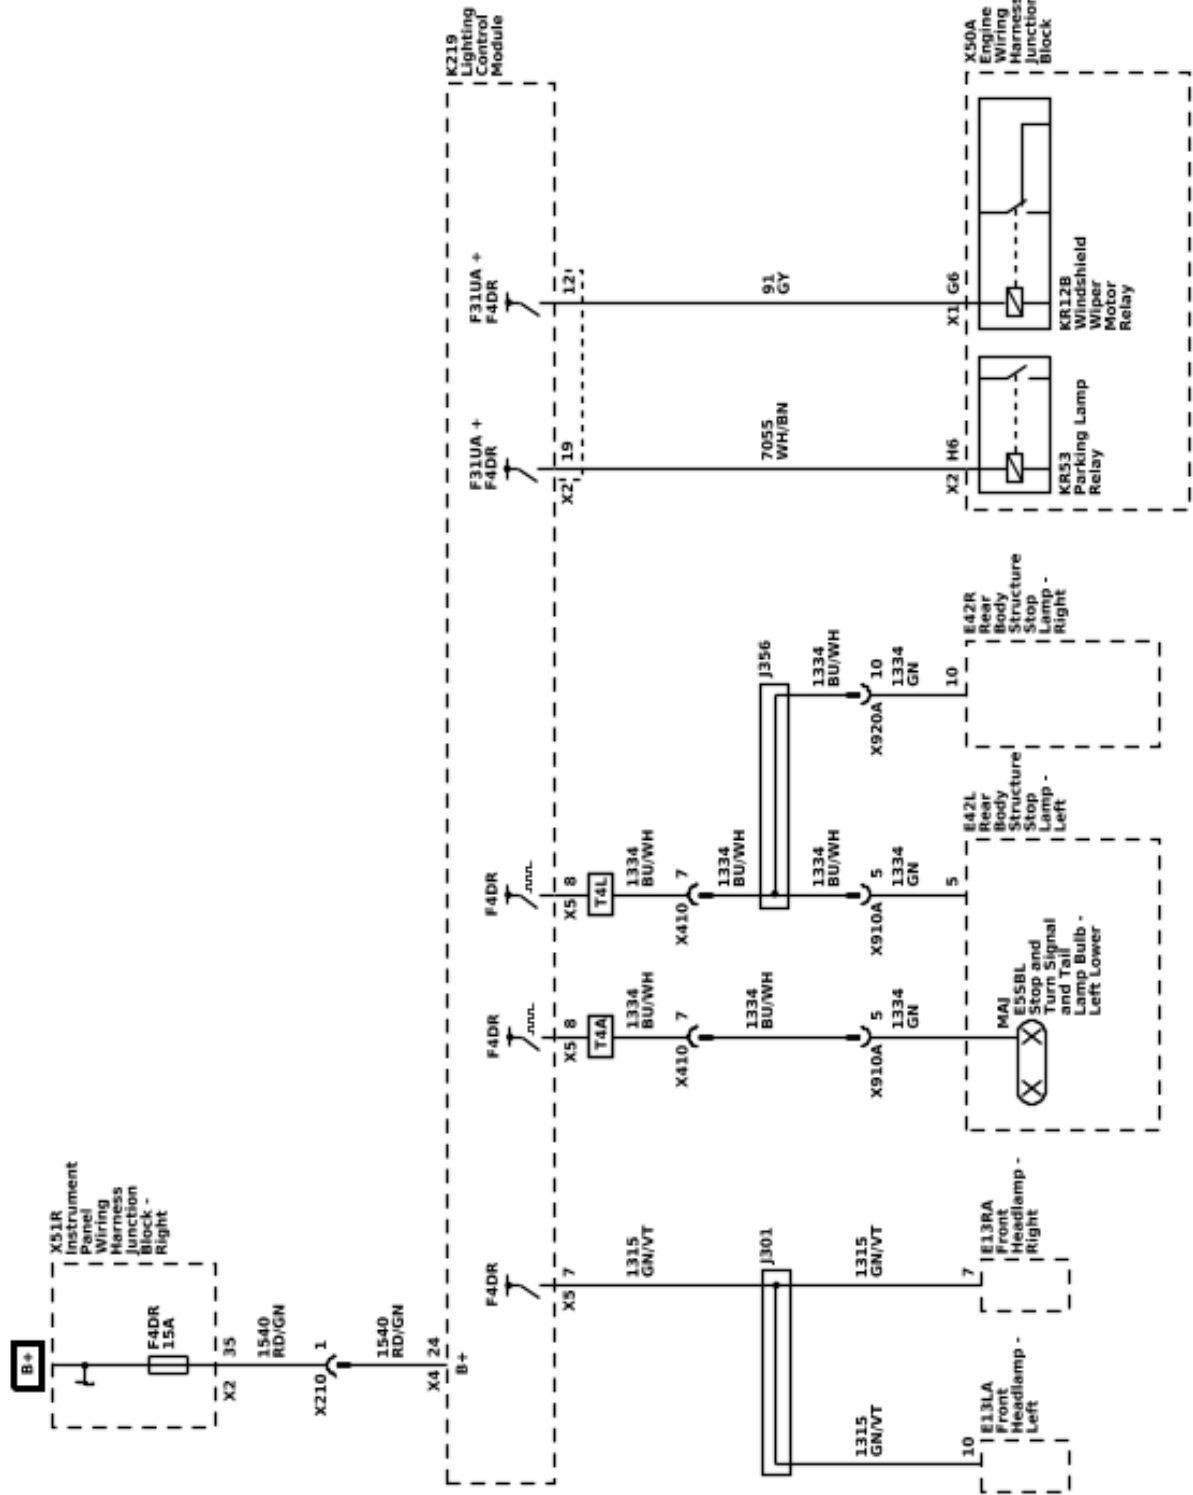


Power Distribution Schematics (Lighting Control Module High Side Drives - F5DR Fuse - 1 of 2)

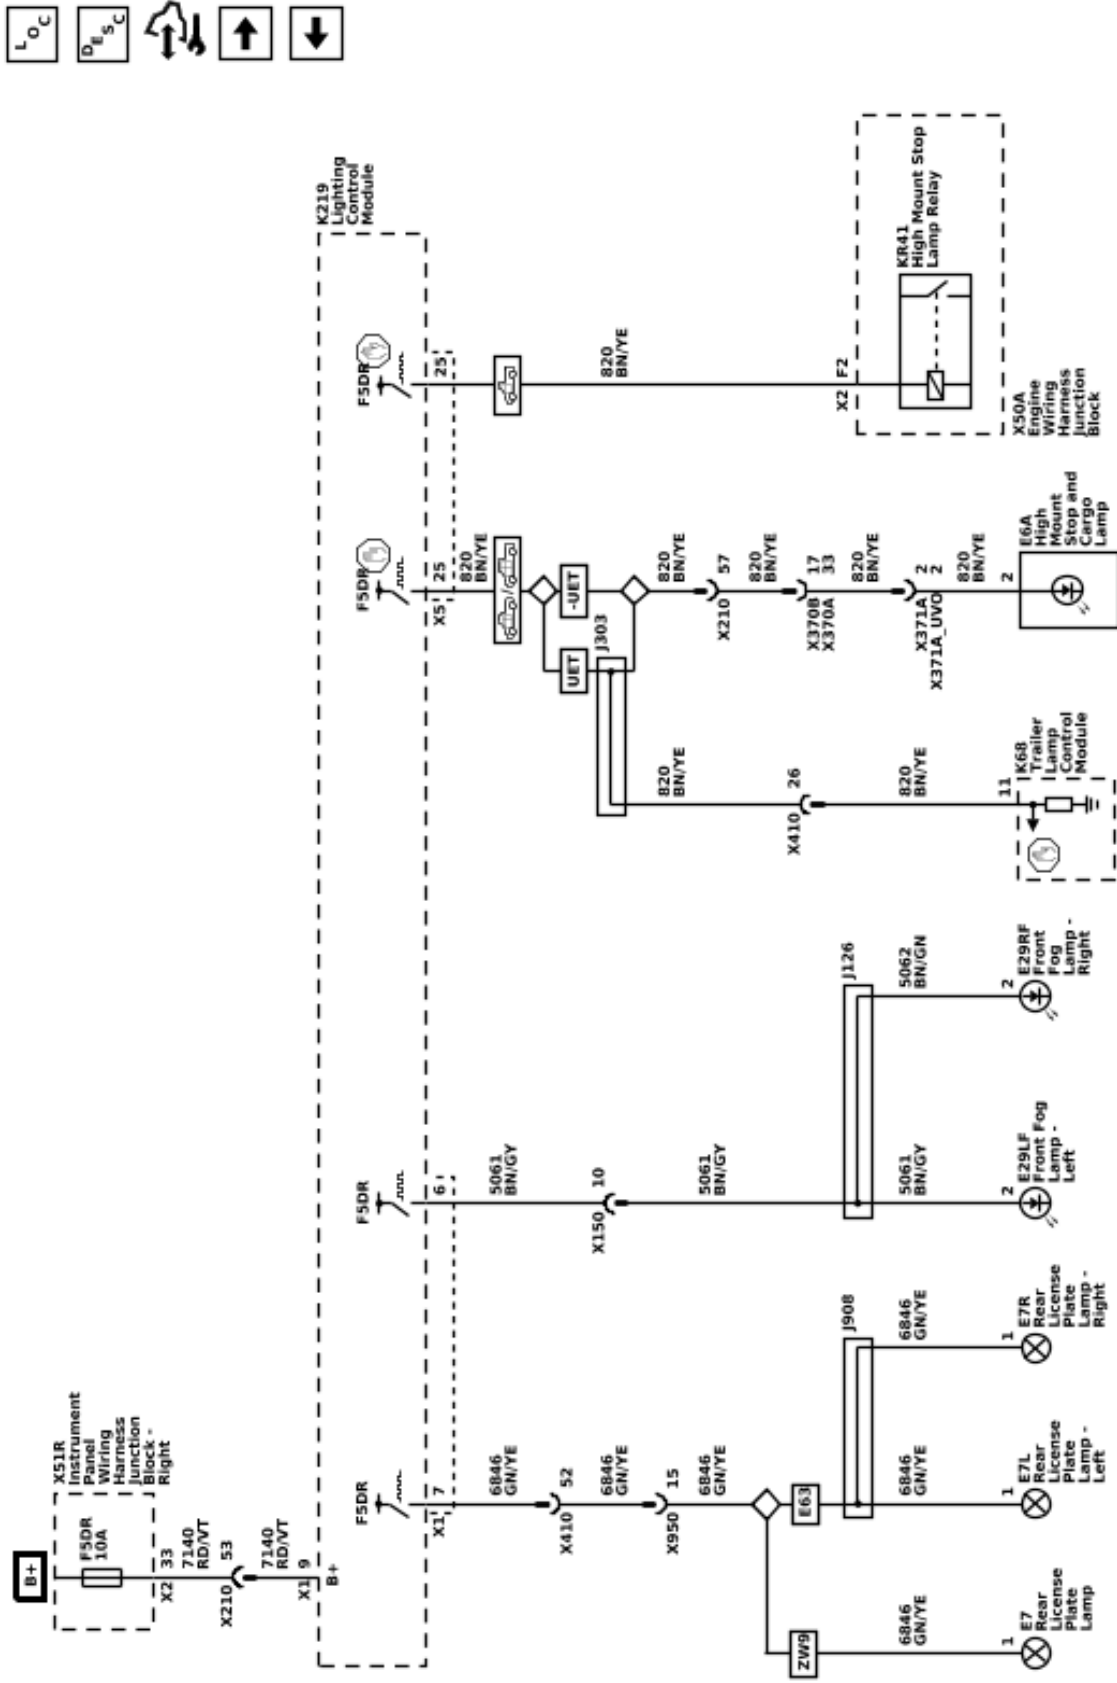



Power Distribution Schematics (Lighting Control Module High Side Drives - F5DR Fuse - 2 of 2)

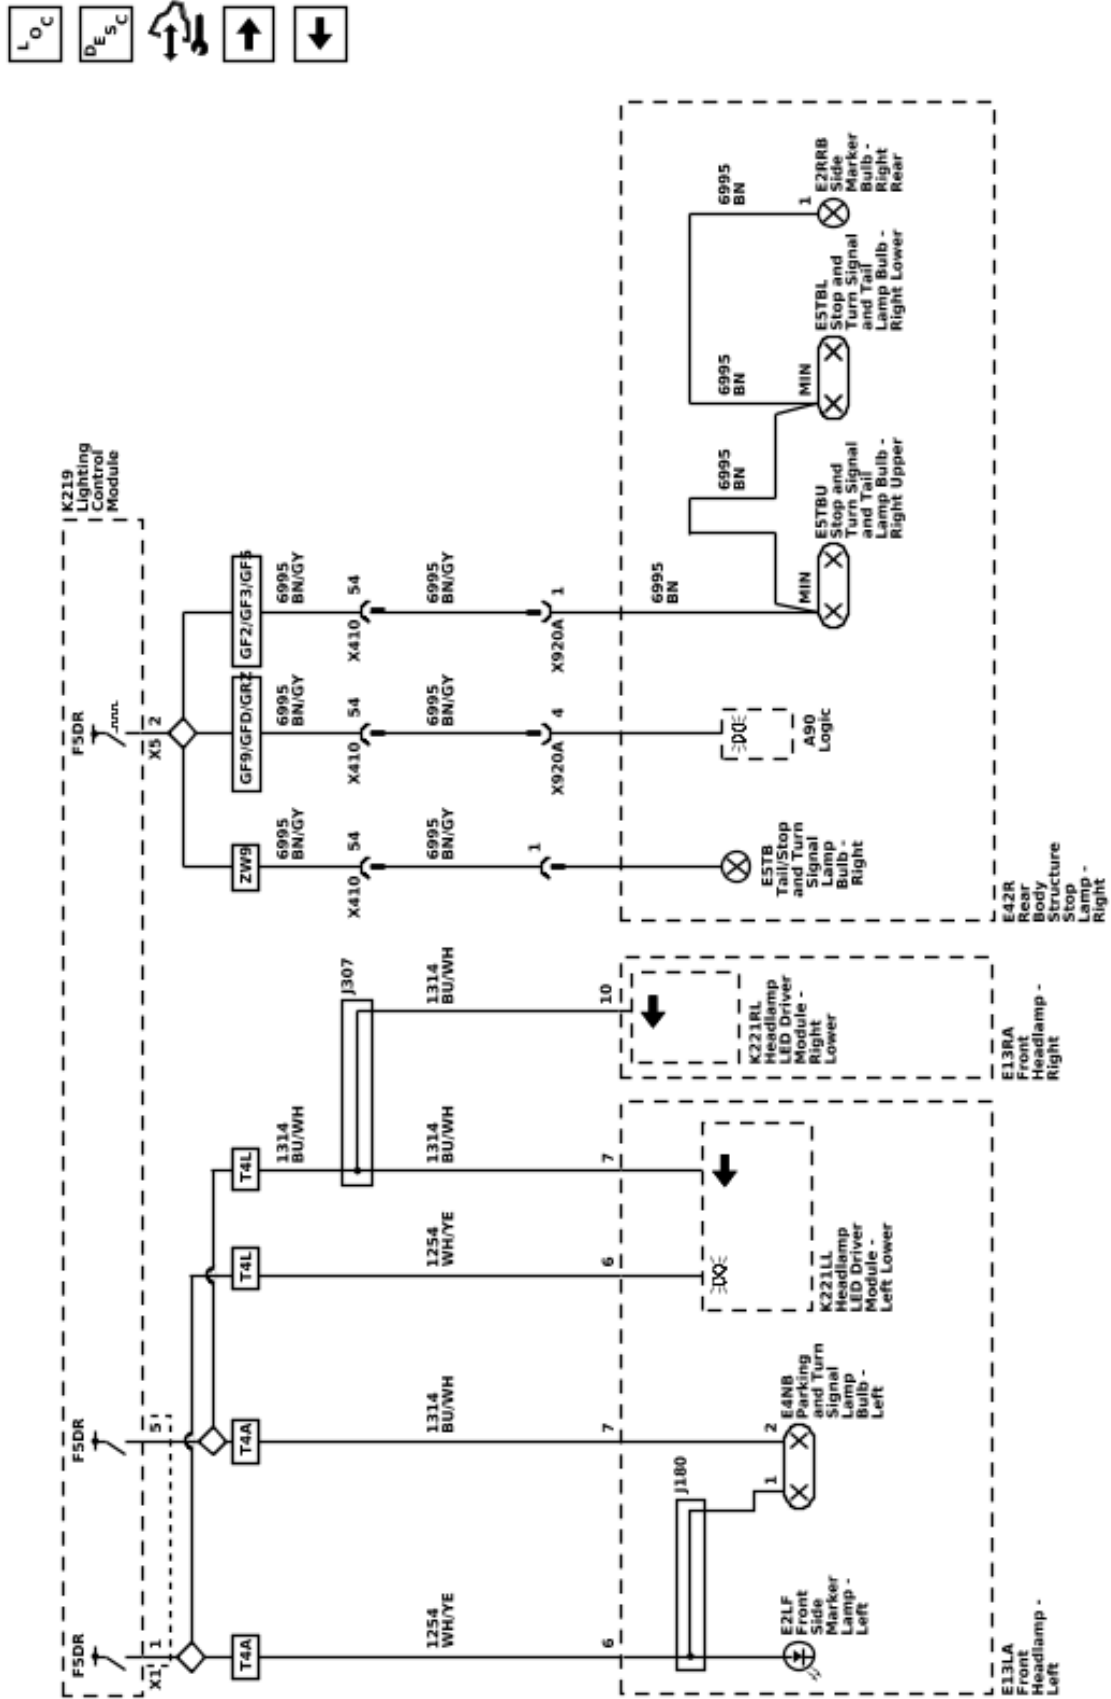


Power Distribution Schematics (Lighting Control Module High Side Drives - 2 of 2)

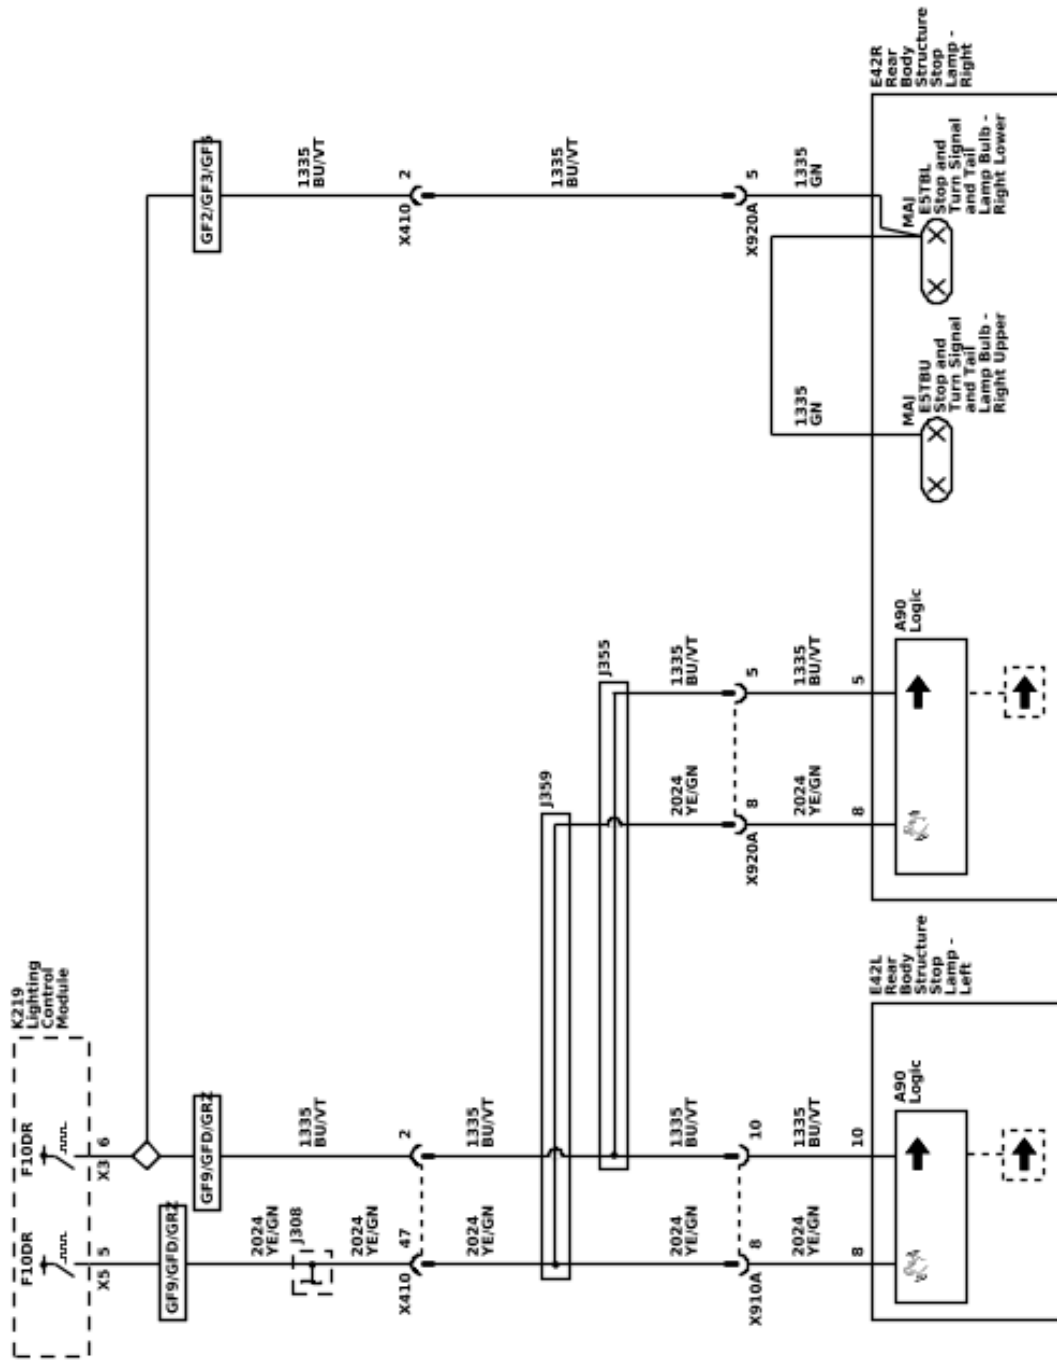

Power Moding Schematics (On/Off Vehicle Switch and Retained Accessory Power)

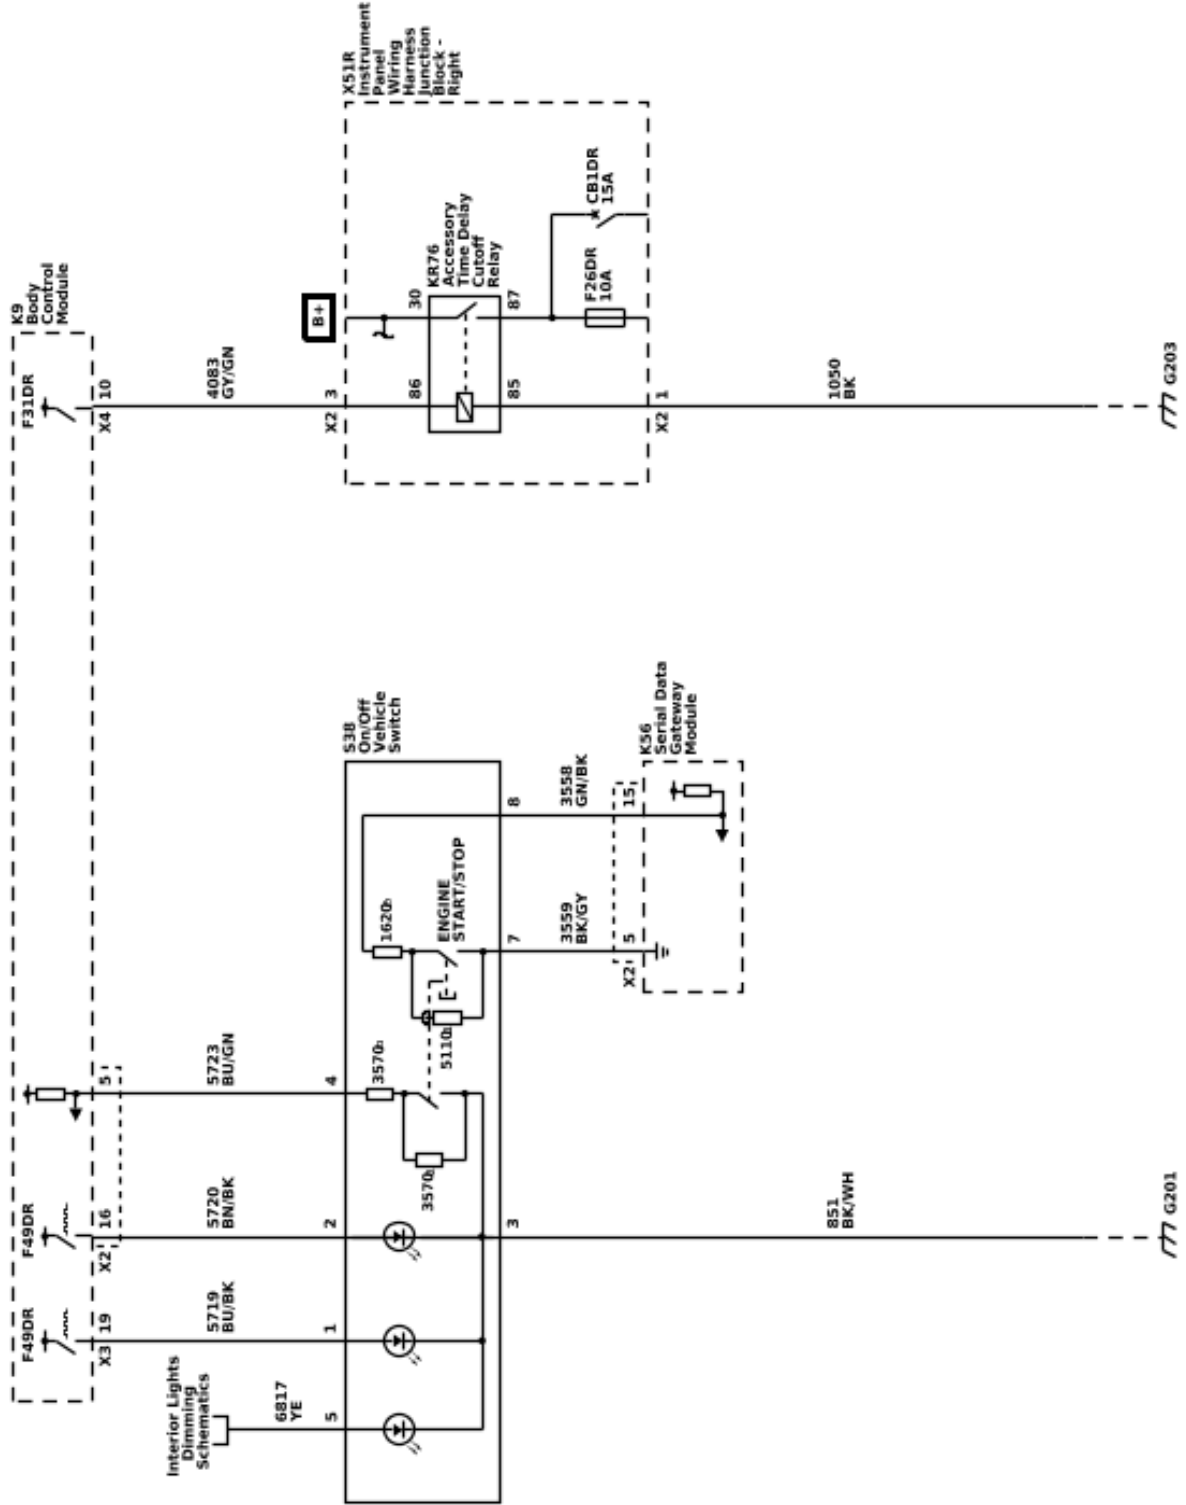



Power Moding Schematics (Ignition Main Relay)

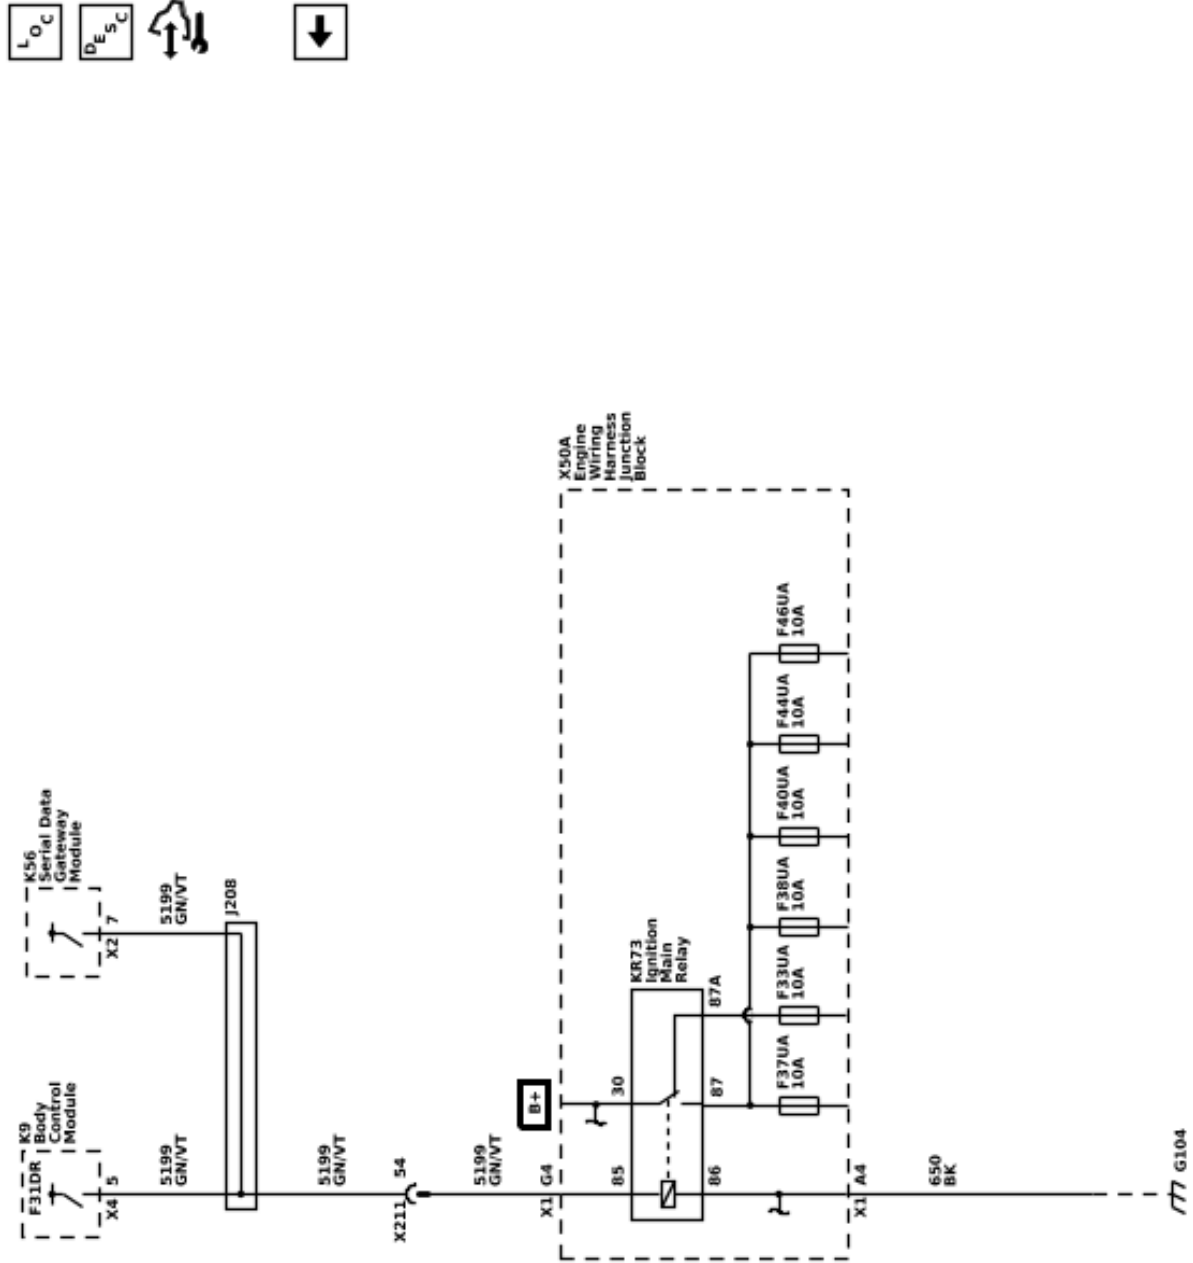


Ground Distribution Schematics (G103B, G131, G132, G133, and G134)


LOC

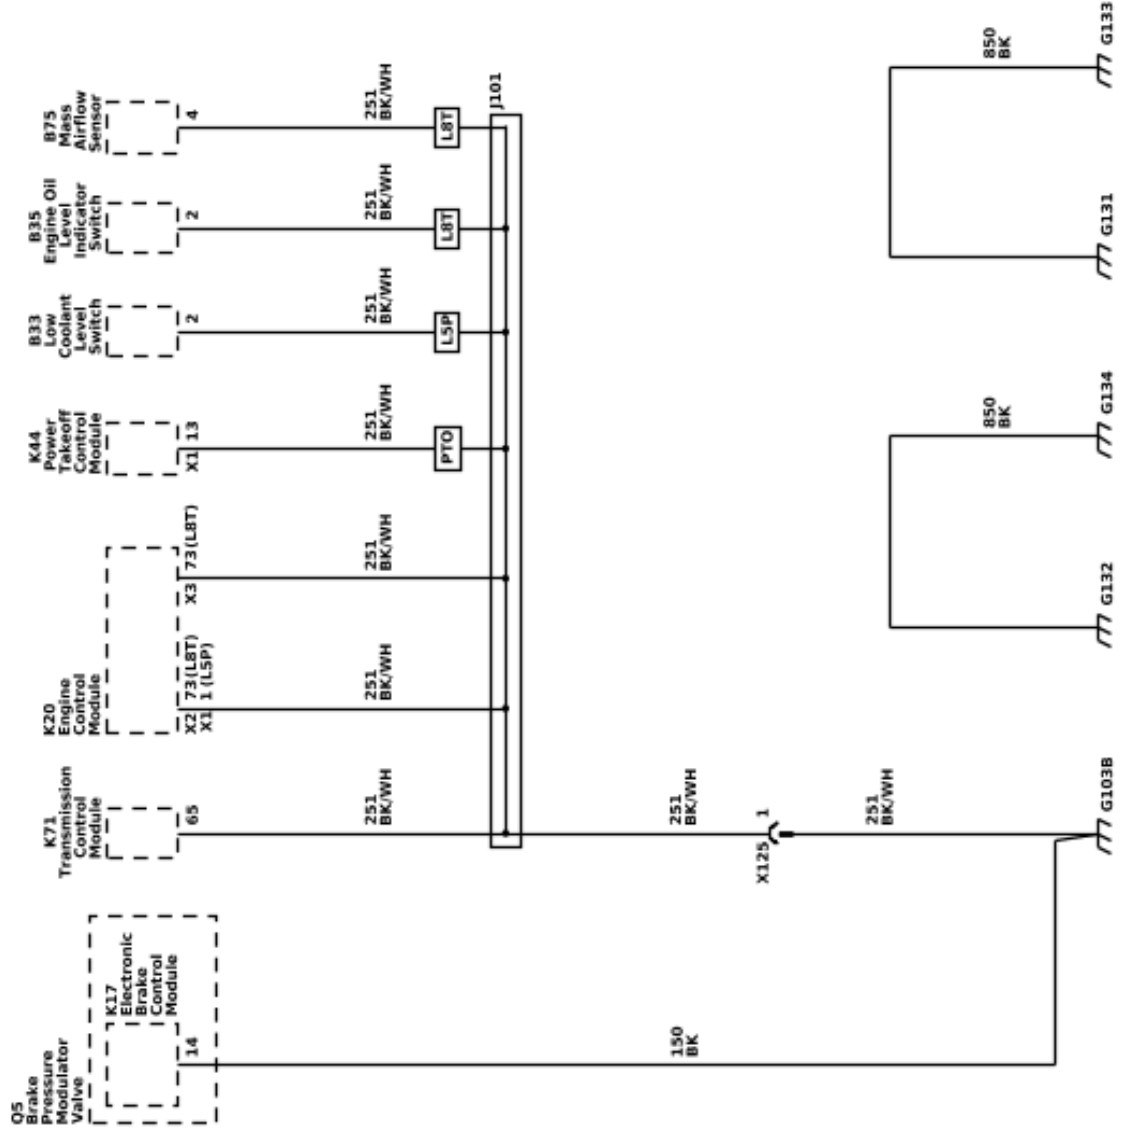

Ground Distribution Schematics (G103A and G105)

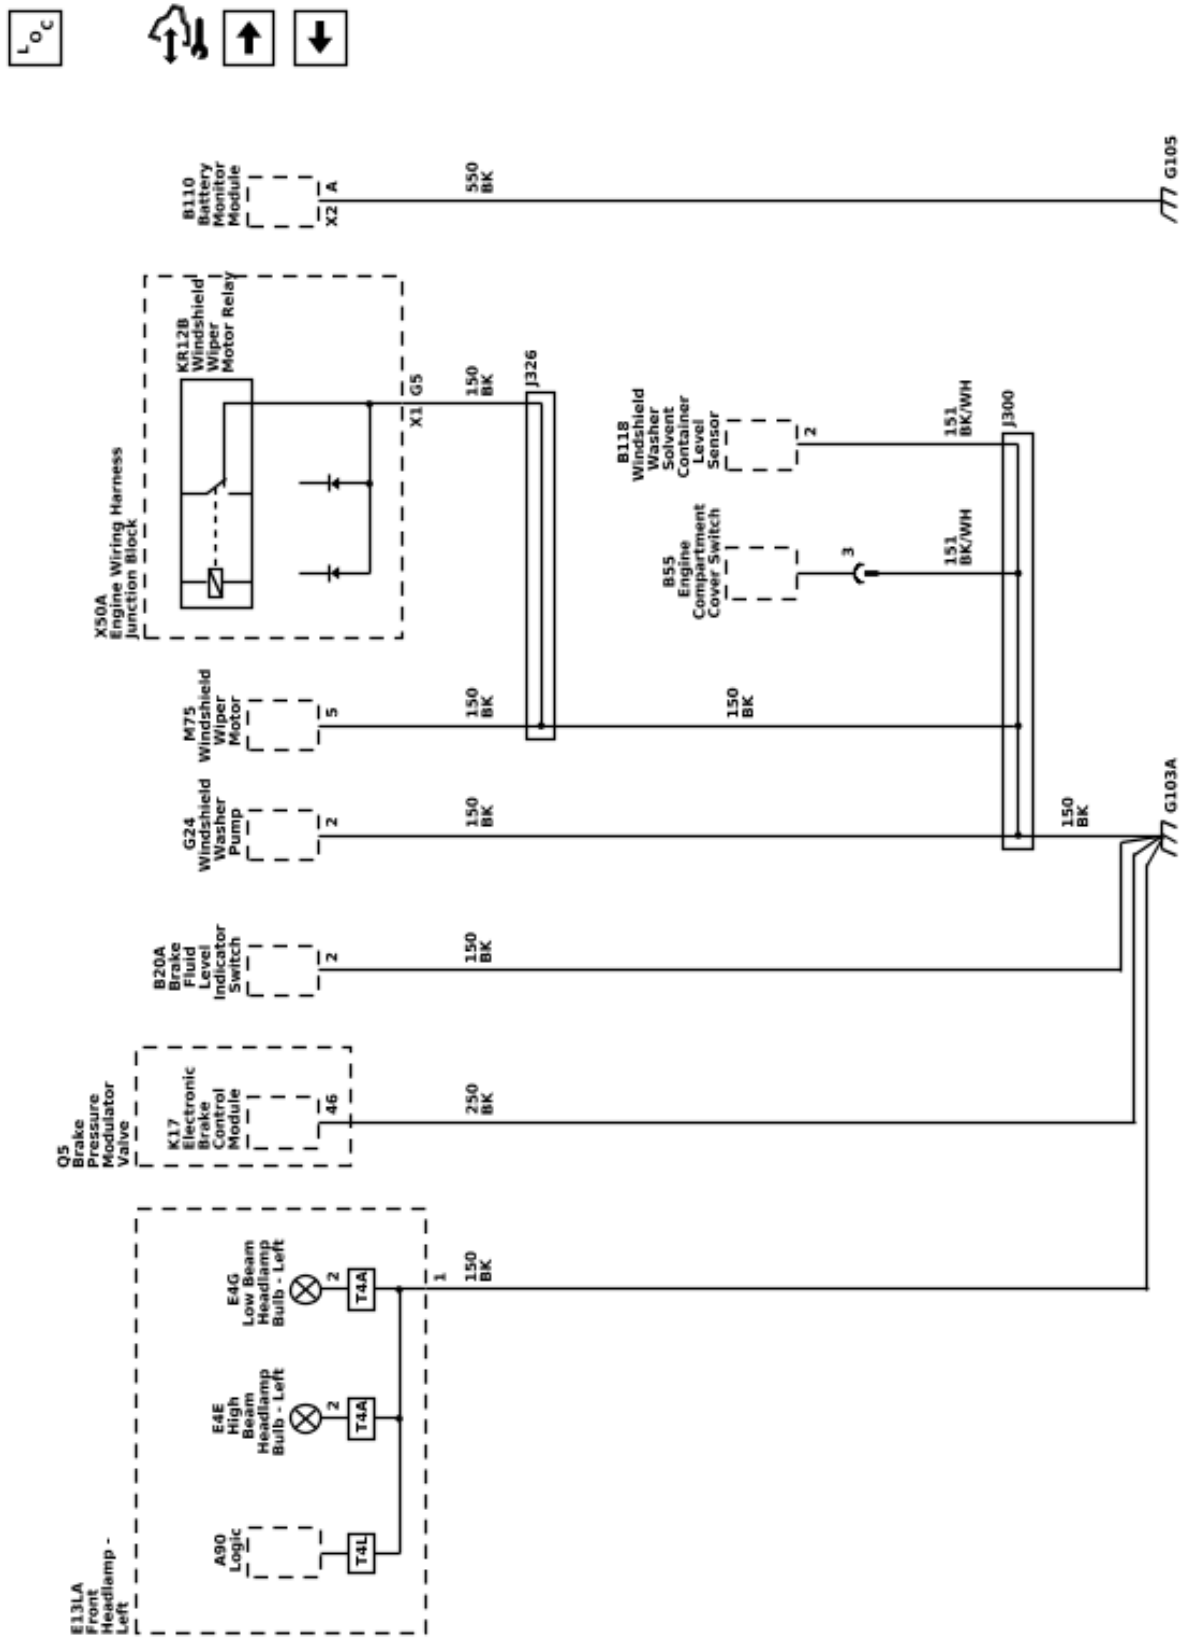


Ground Distribution Schematics (G104)

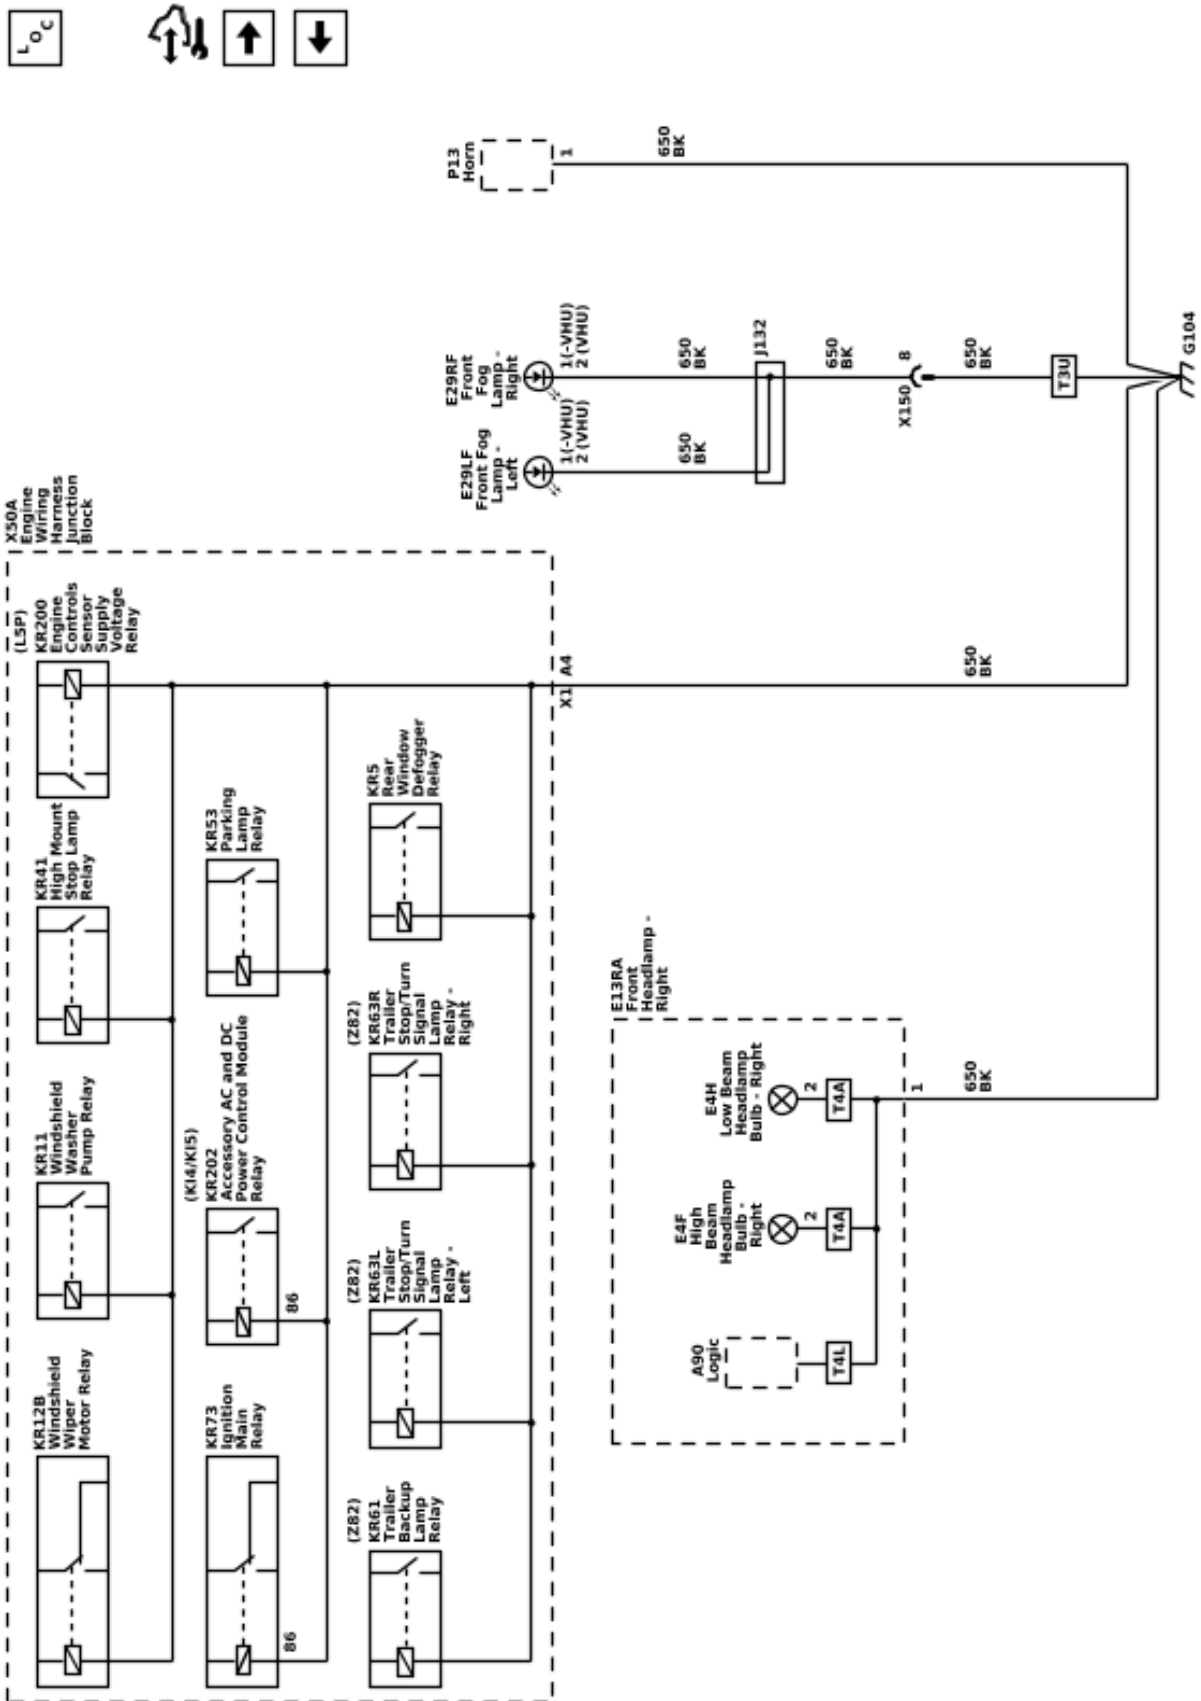


Ground Distribution Schematics (G175L and G175R (L8T))

L_{OC}

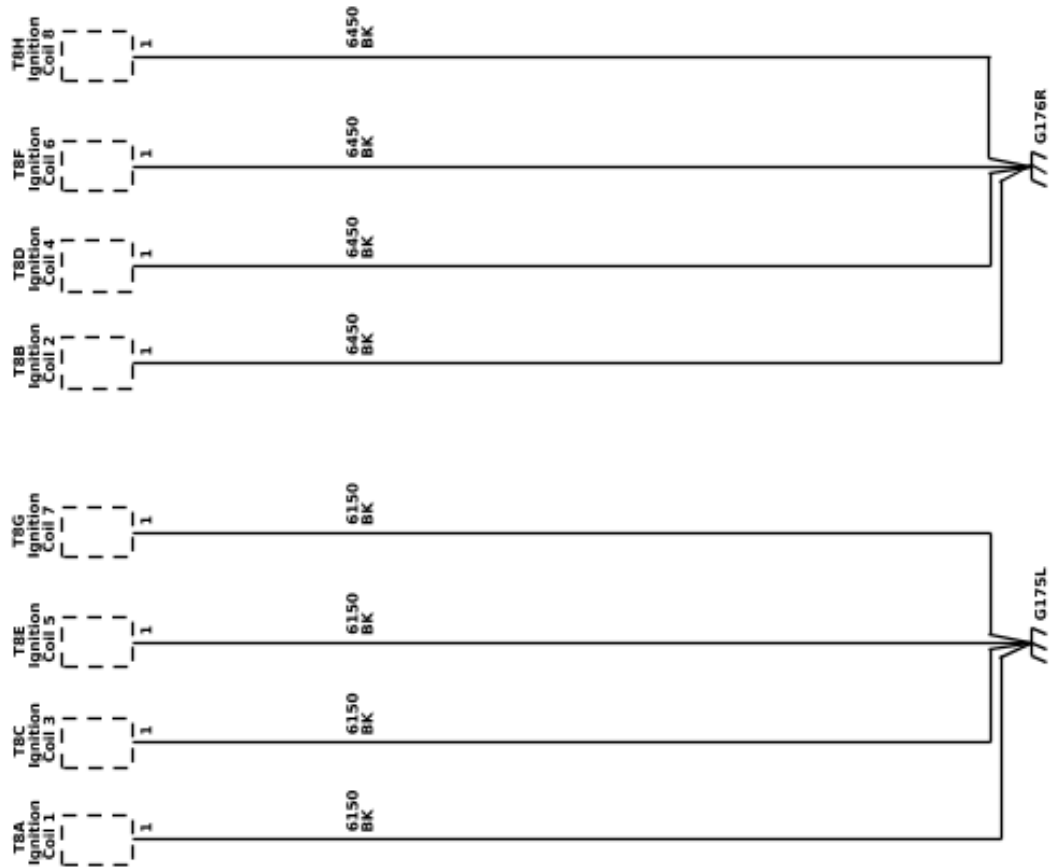


Ground Distribution Schematics (G177B)

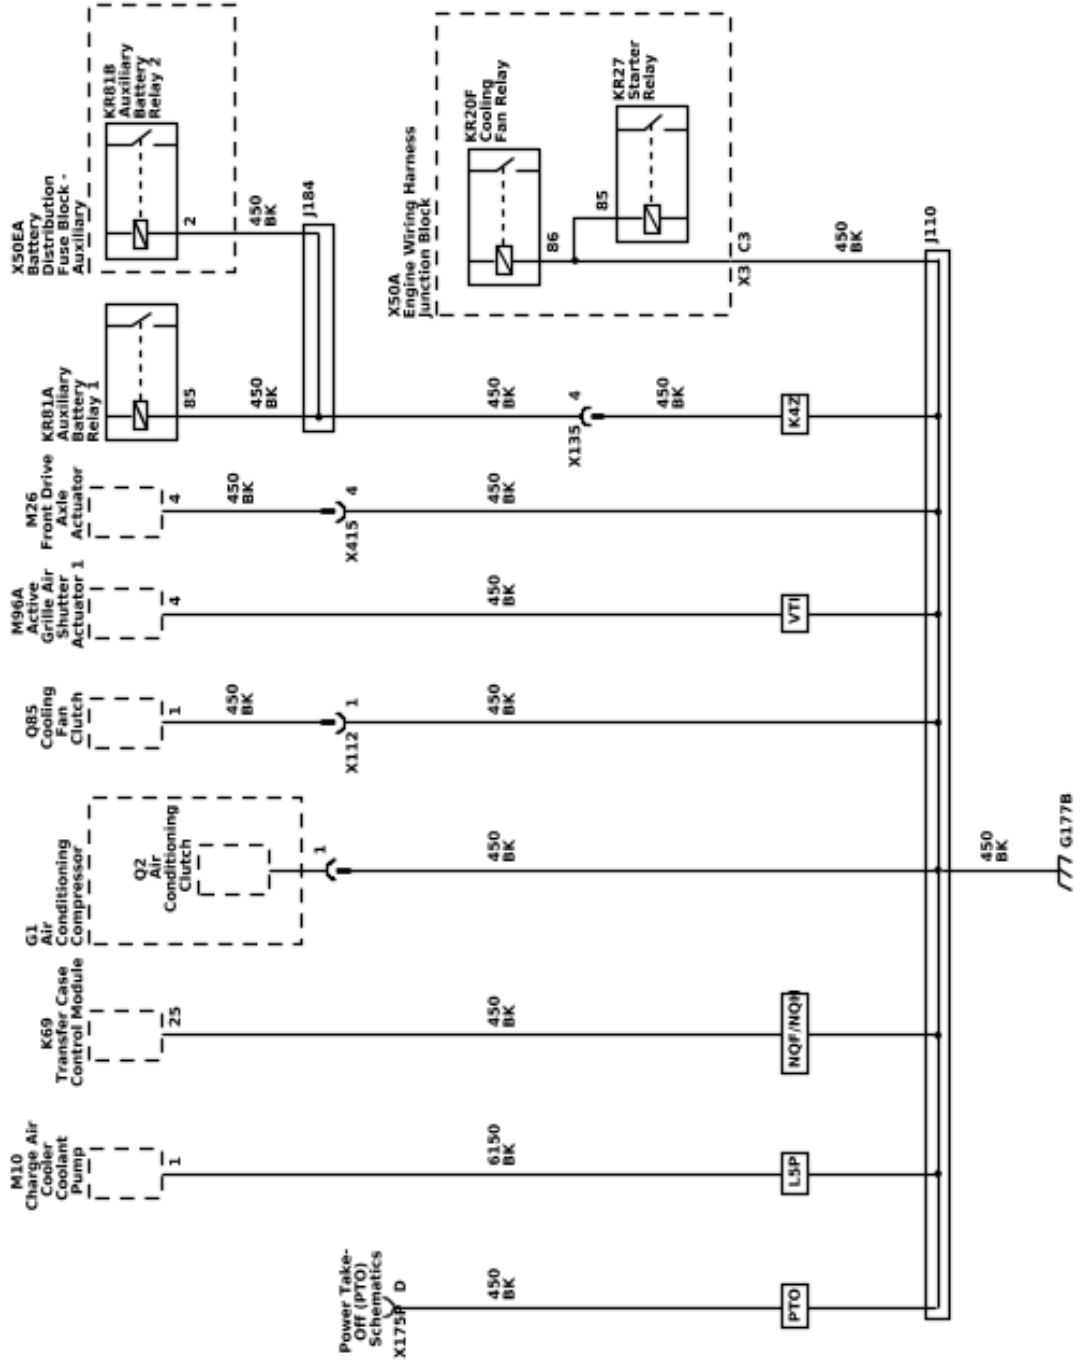


Ground Distribution Schematics (G200)

L_{OC}

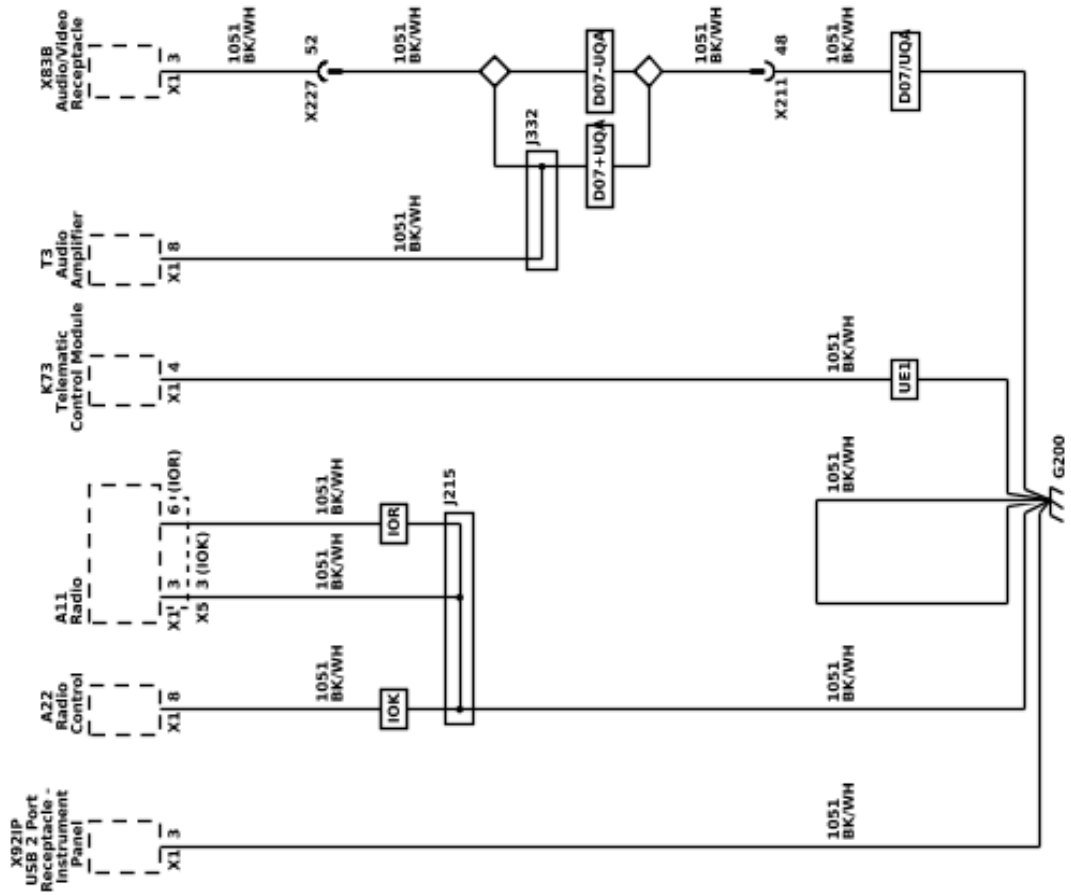


Ground Distribution Schematics (G201 - 1 of 2)

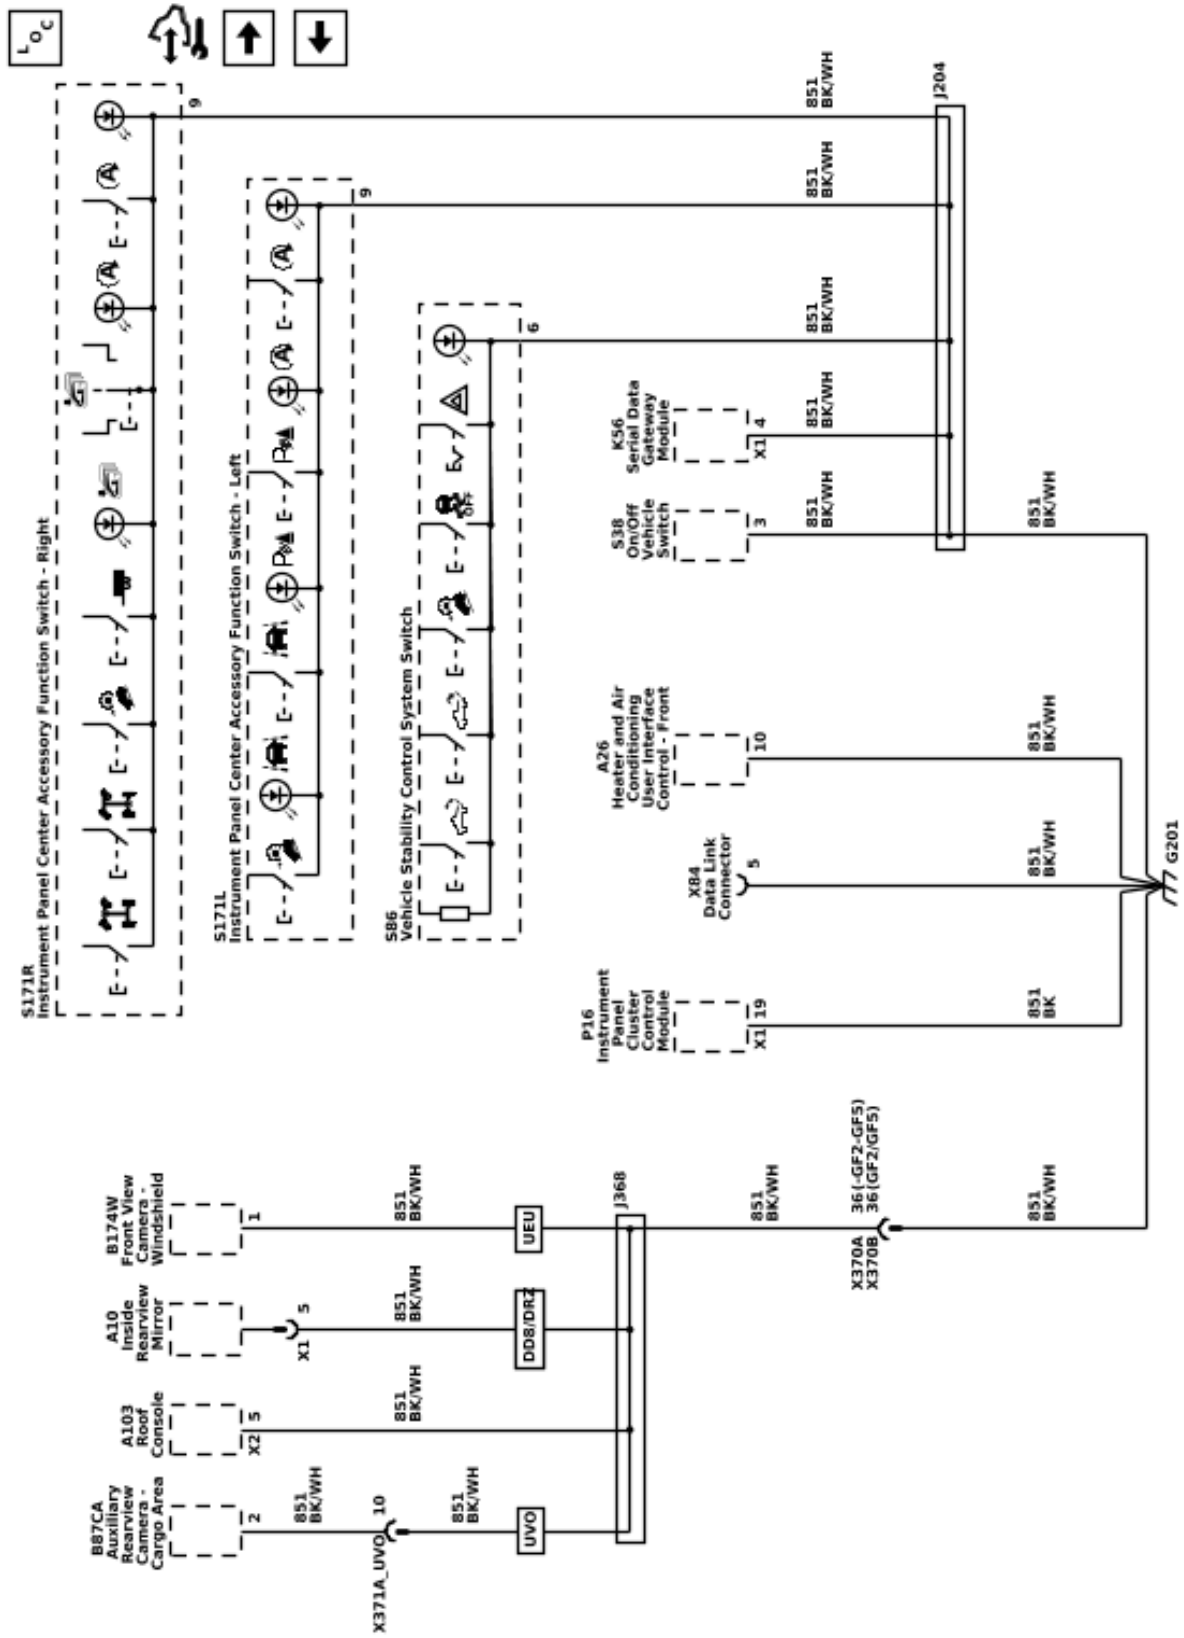

6150341


Ground Distribution Schematics (G201 - 2 of 2)

L_{OC}

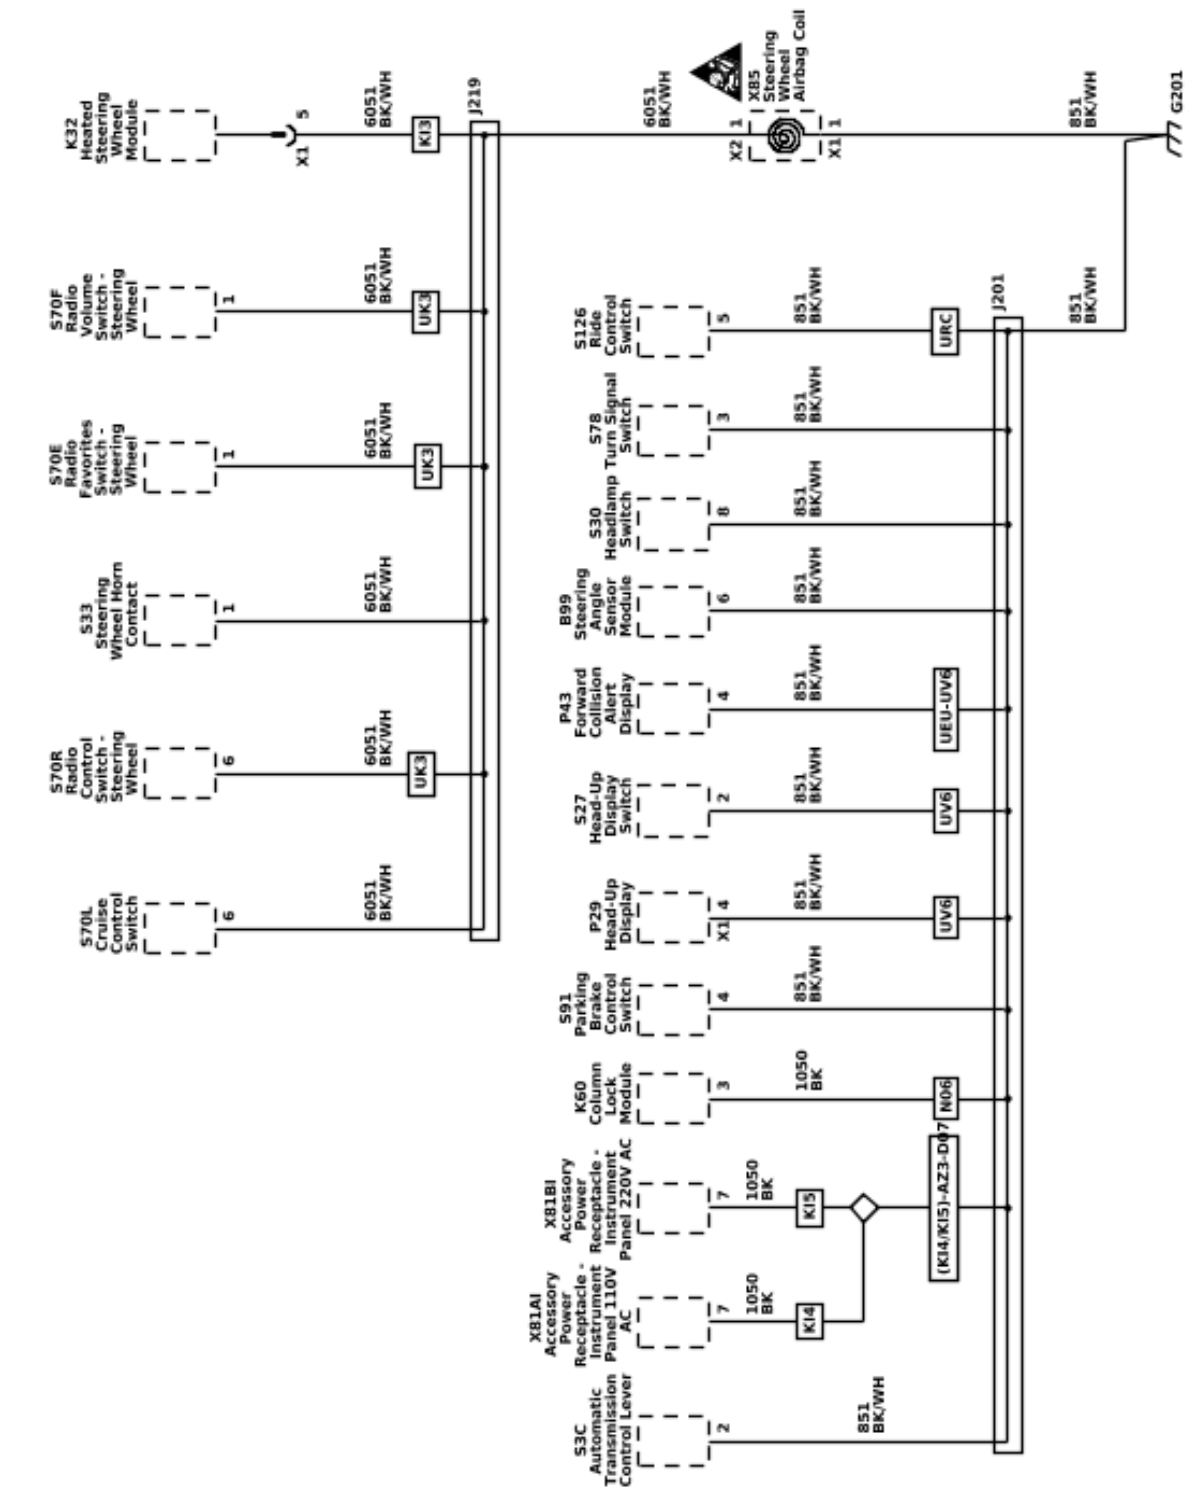


Ground Distribution Schematics (G202, G303, and G114)

LOC

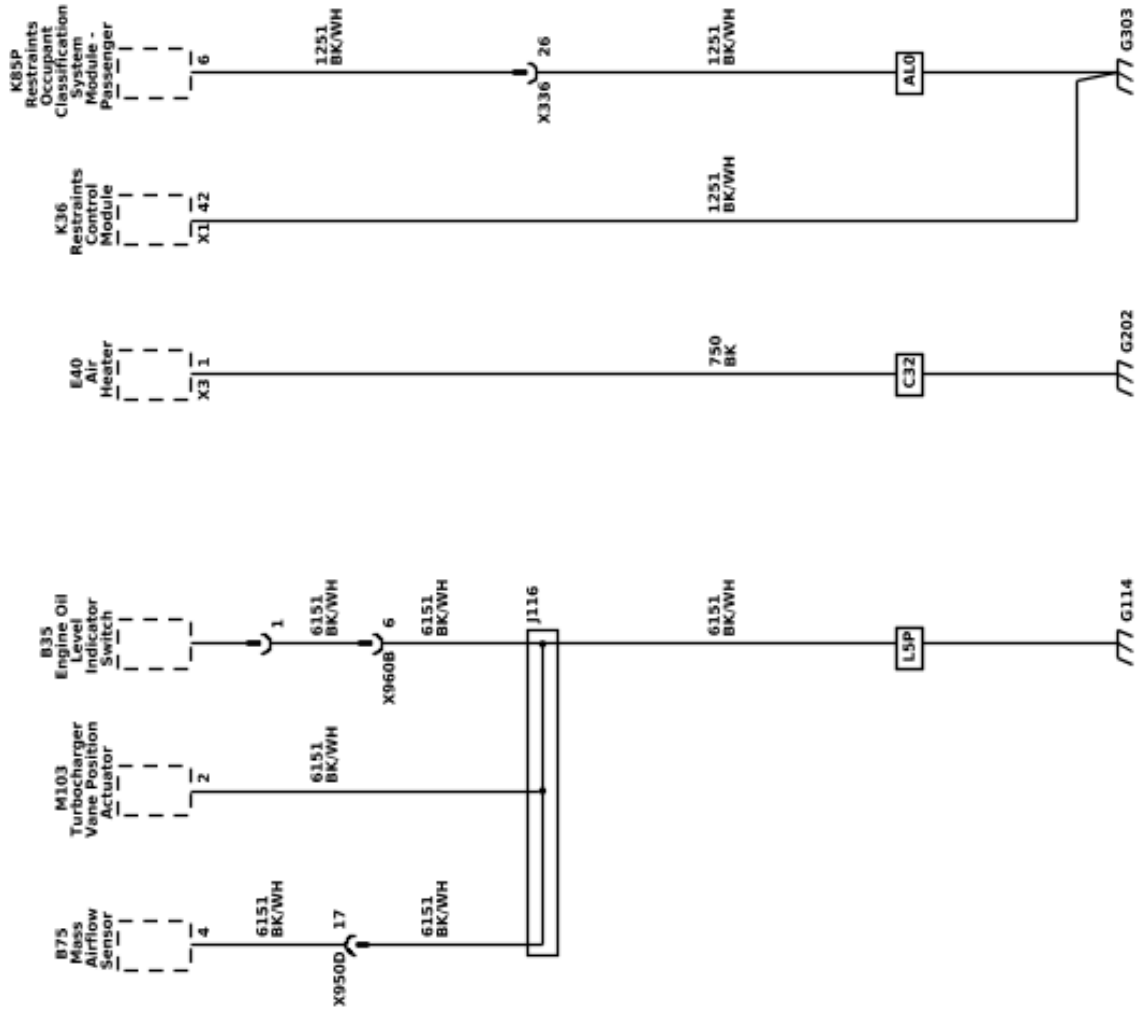


Ground Distribution Schematics (G203 - 1 of 2)

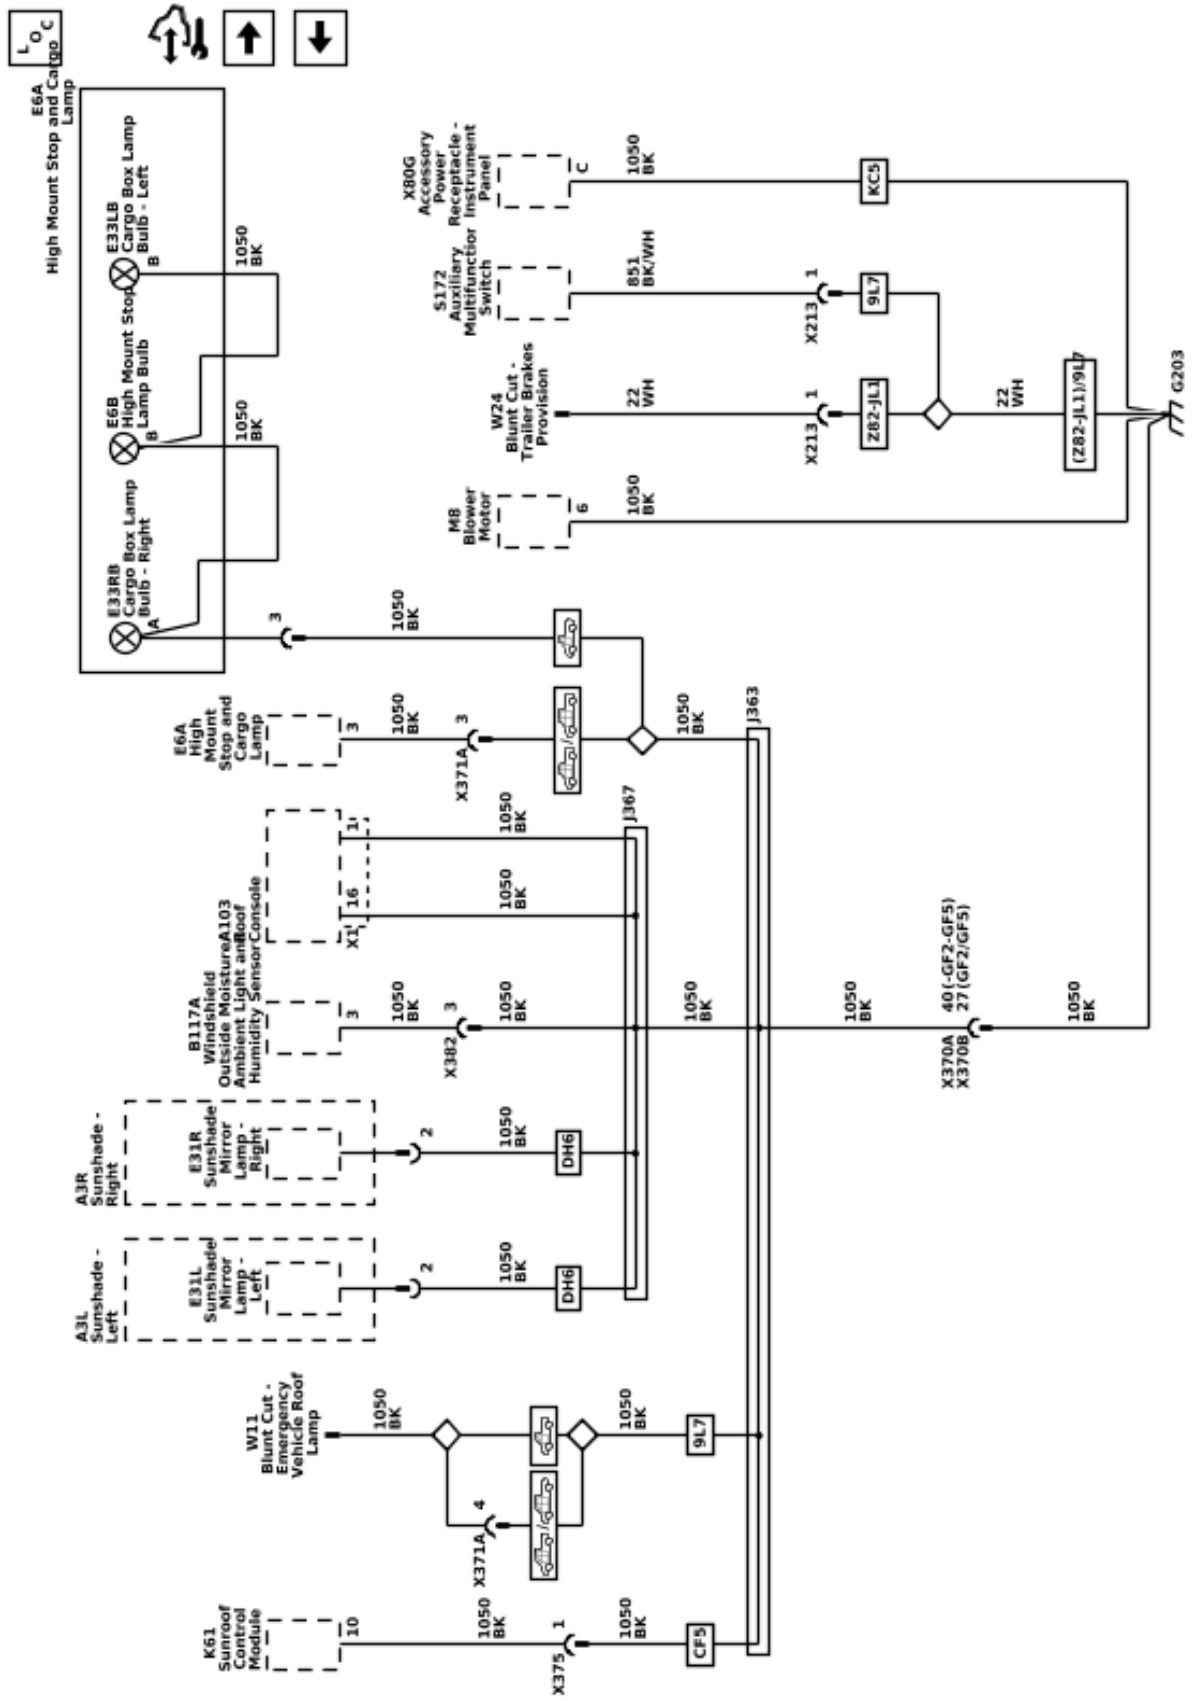


Ground Distribution Schematics (G203 - 2 of 2)

L_{OC}

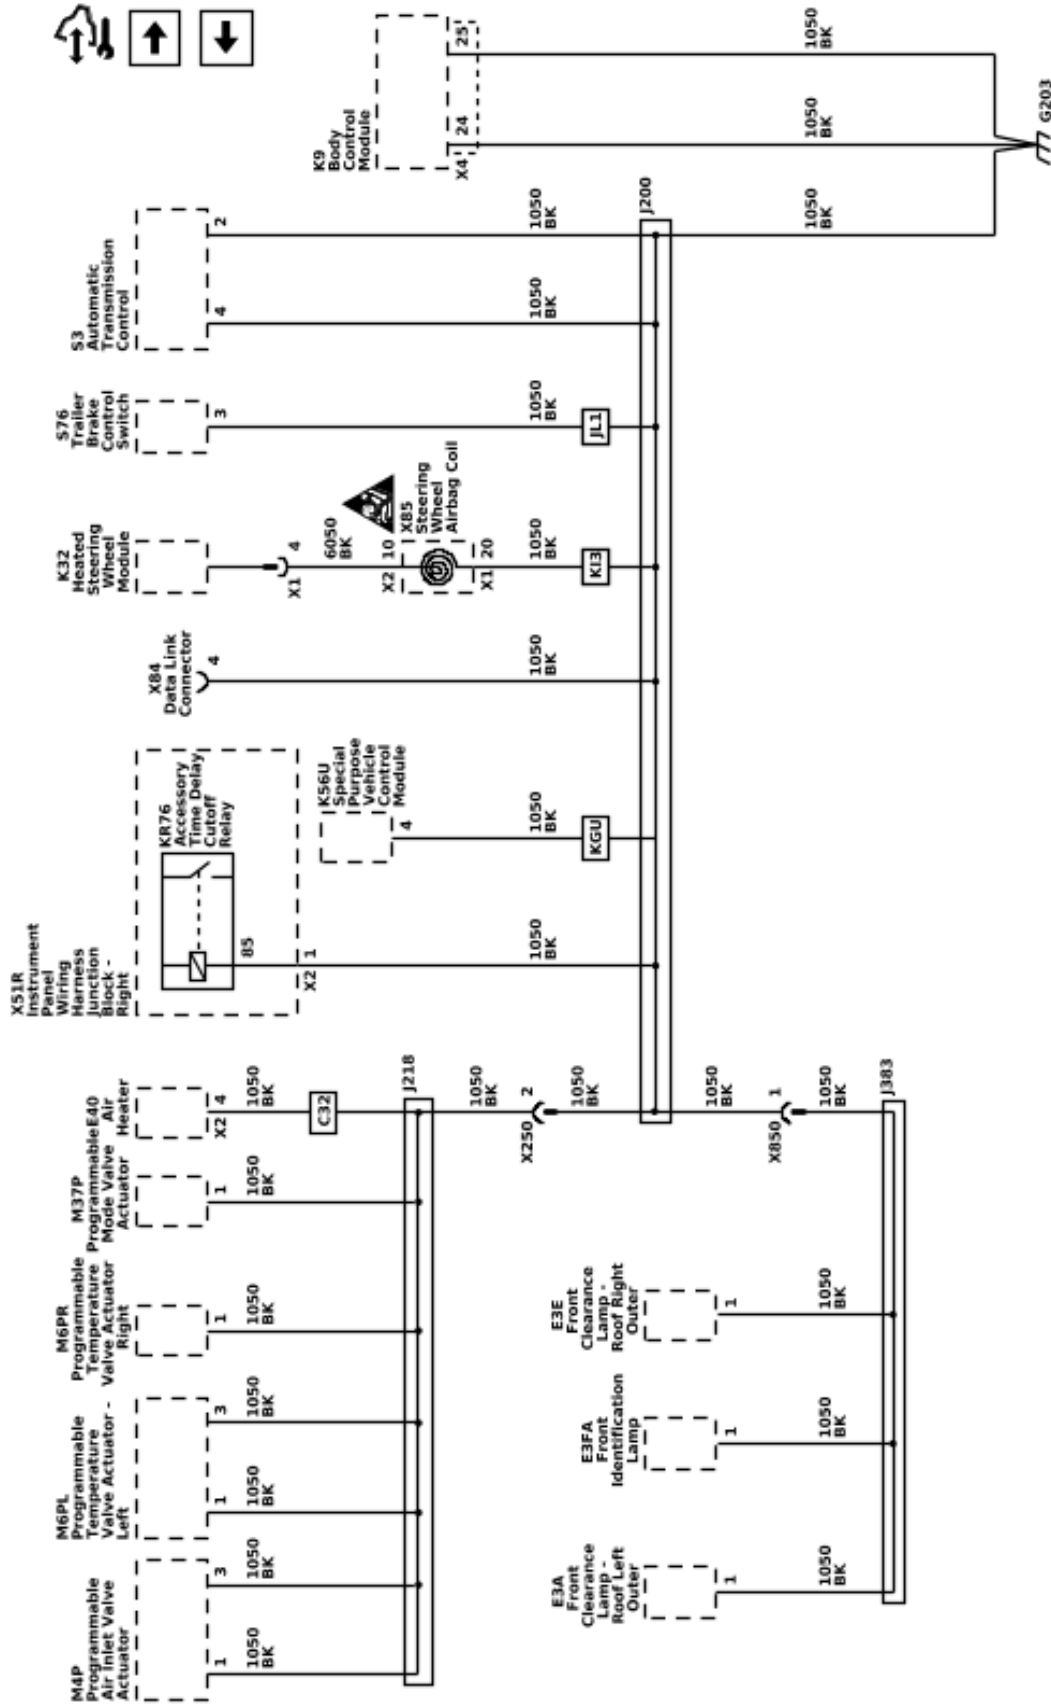


Ground Distribution Schematics (G300A)

LOC

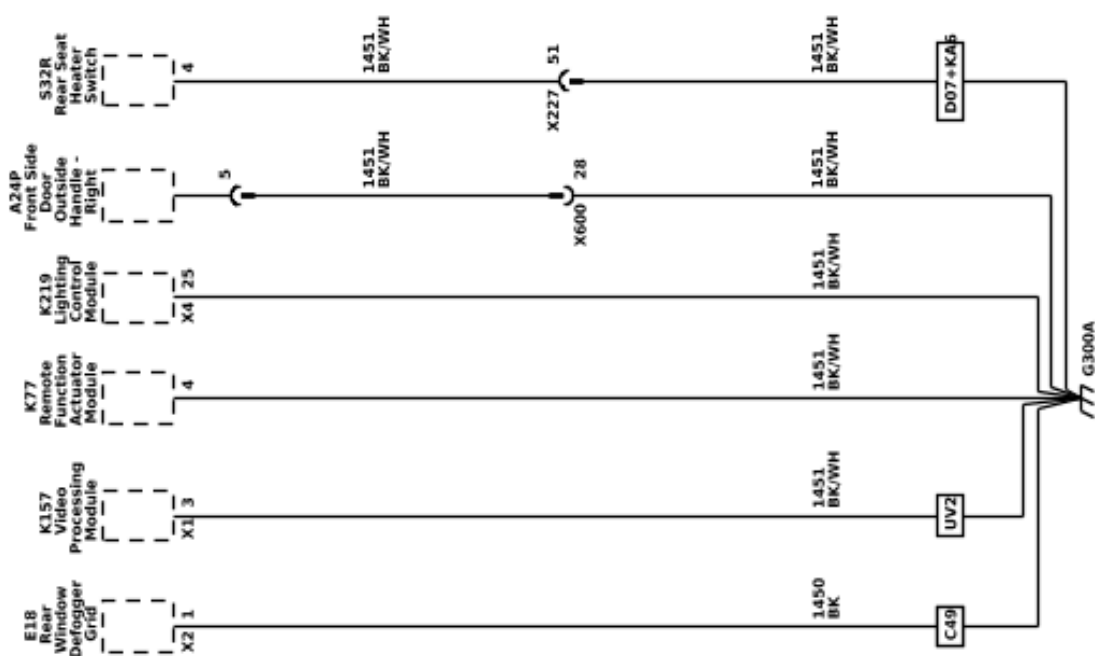


Ground Distribution Schematics (G300B - 1 of 2)

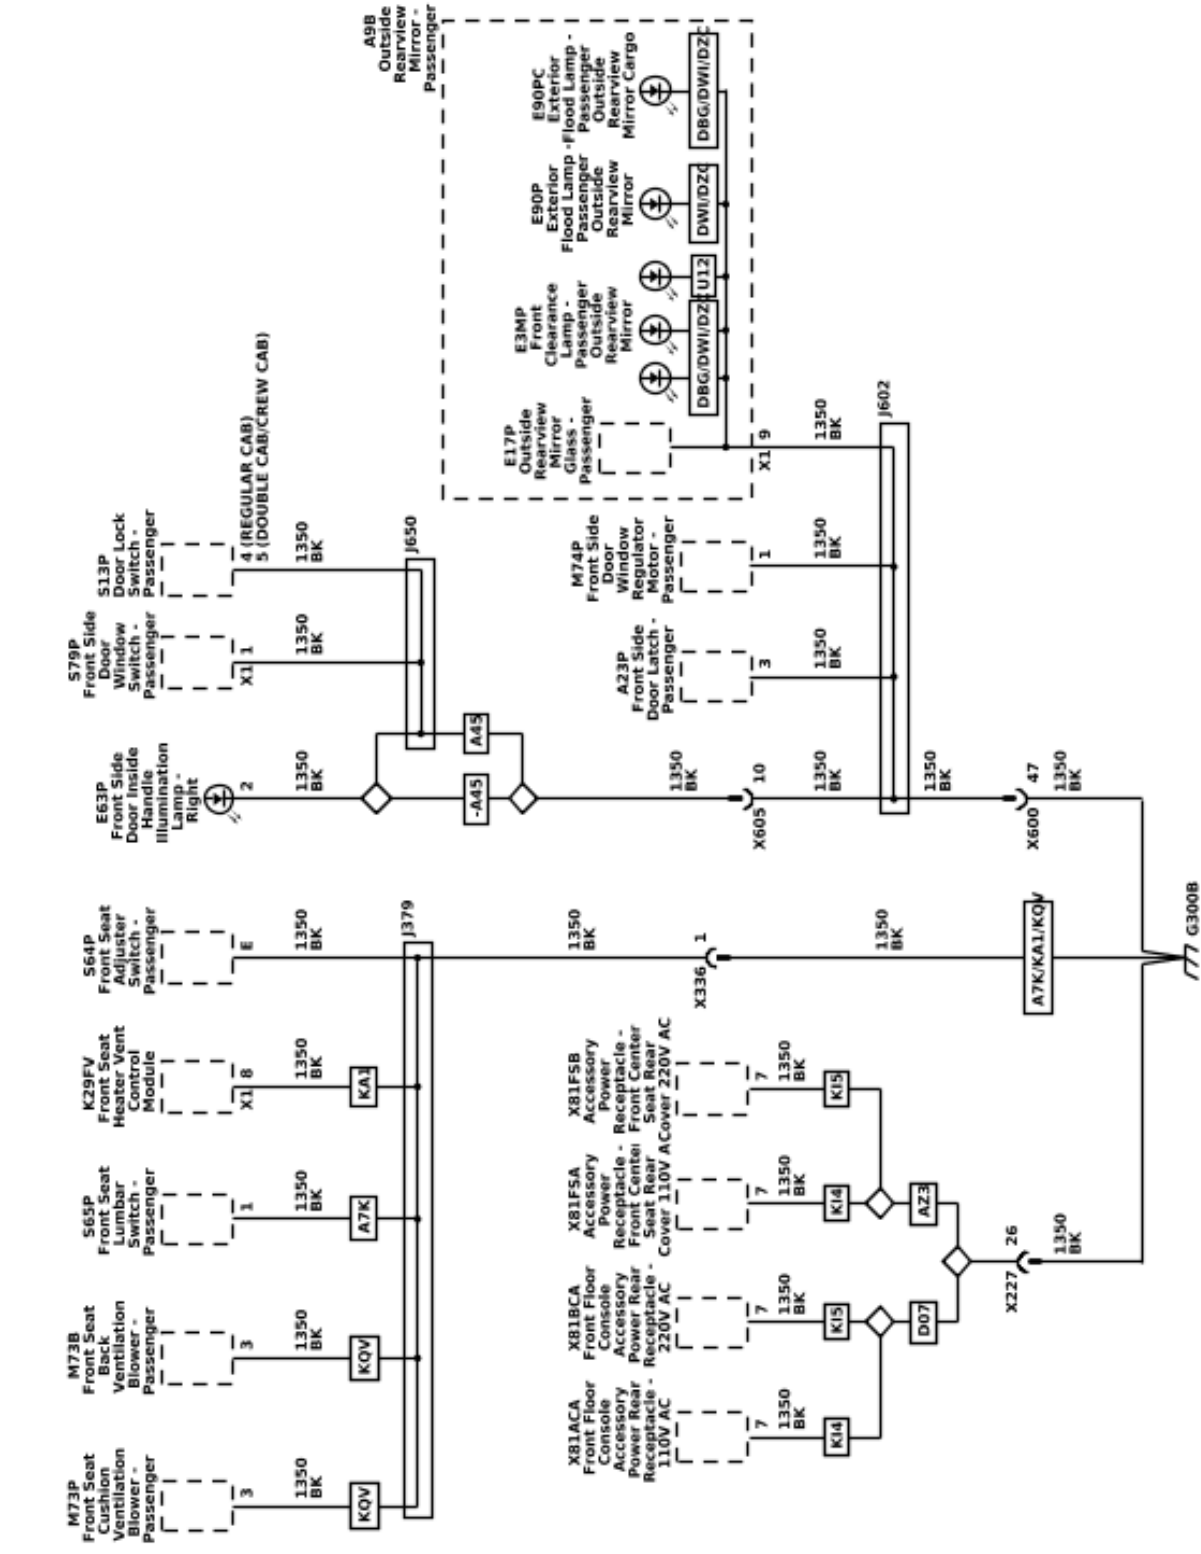


Ground Distribution Schematics (G300B - 2 of 2)

LOC

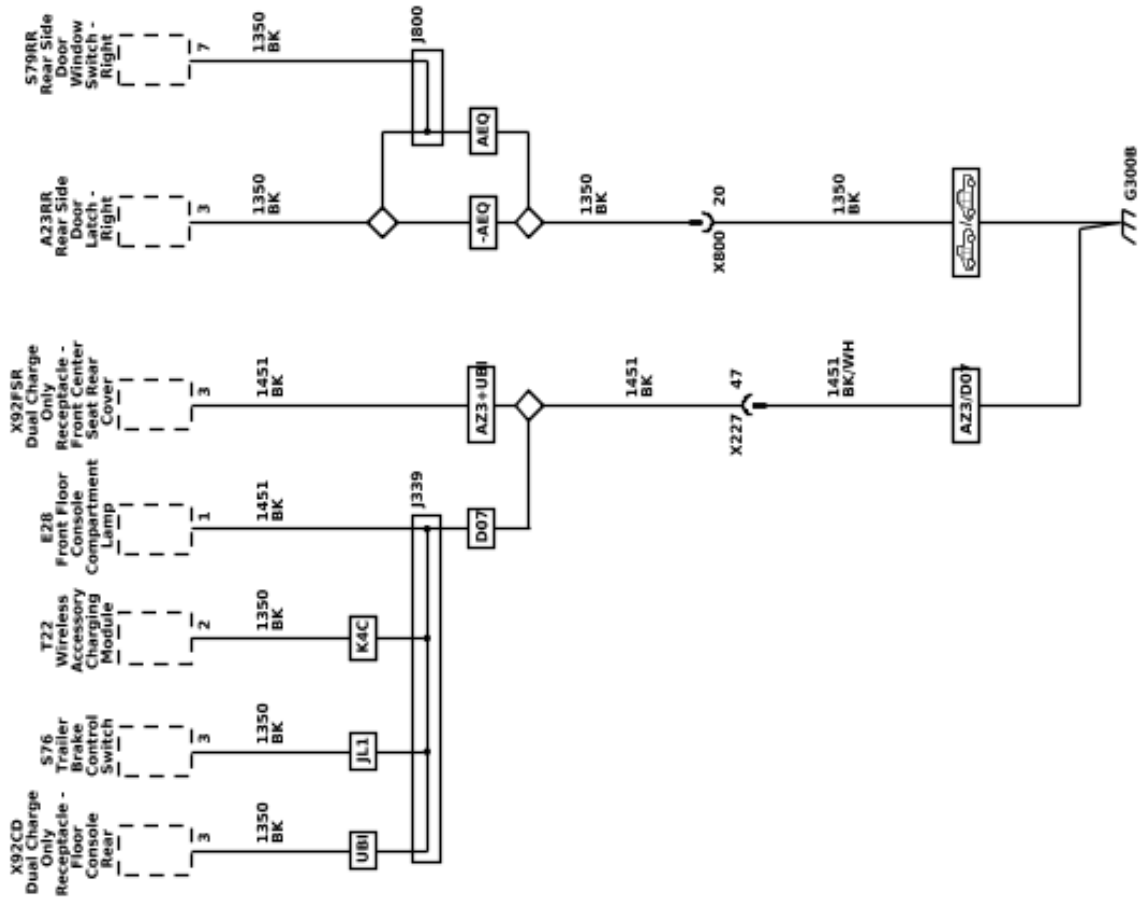


Ground Distribution Schematics (G301A - Regular Cab - 1 of 2)

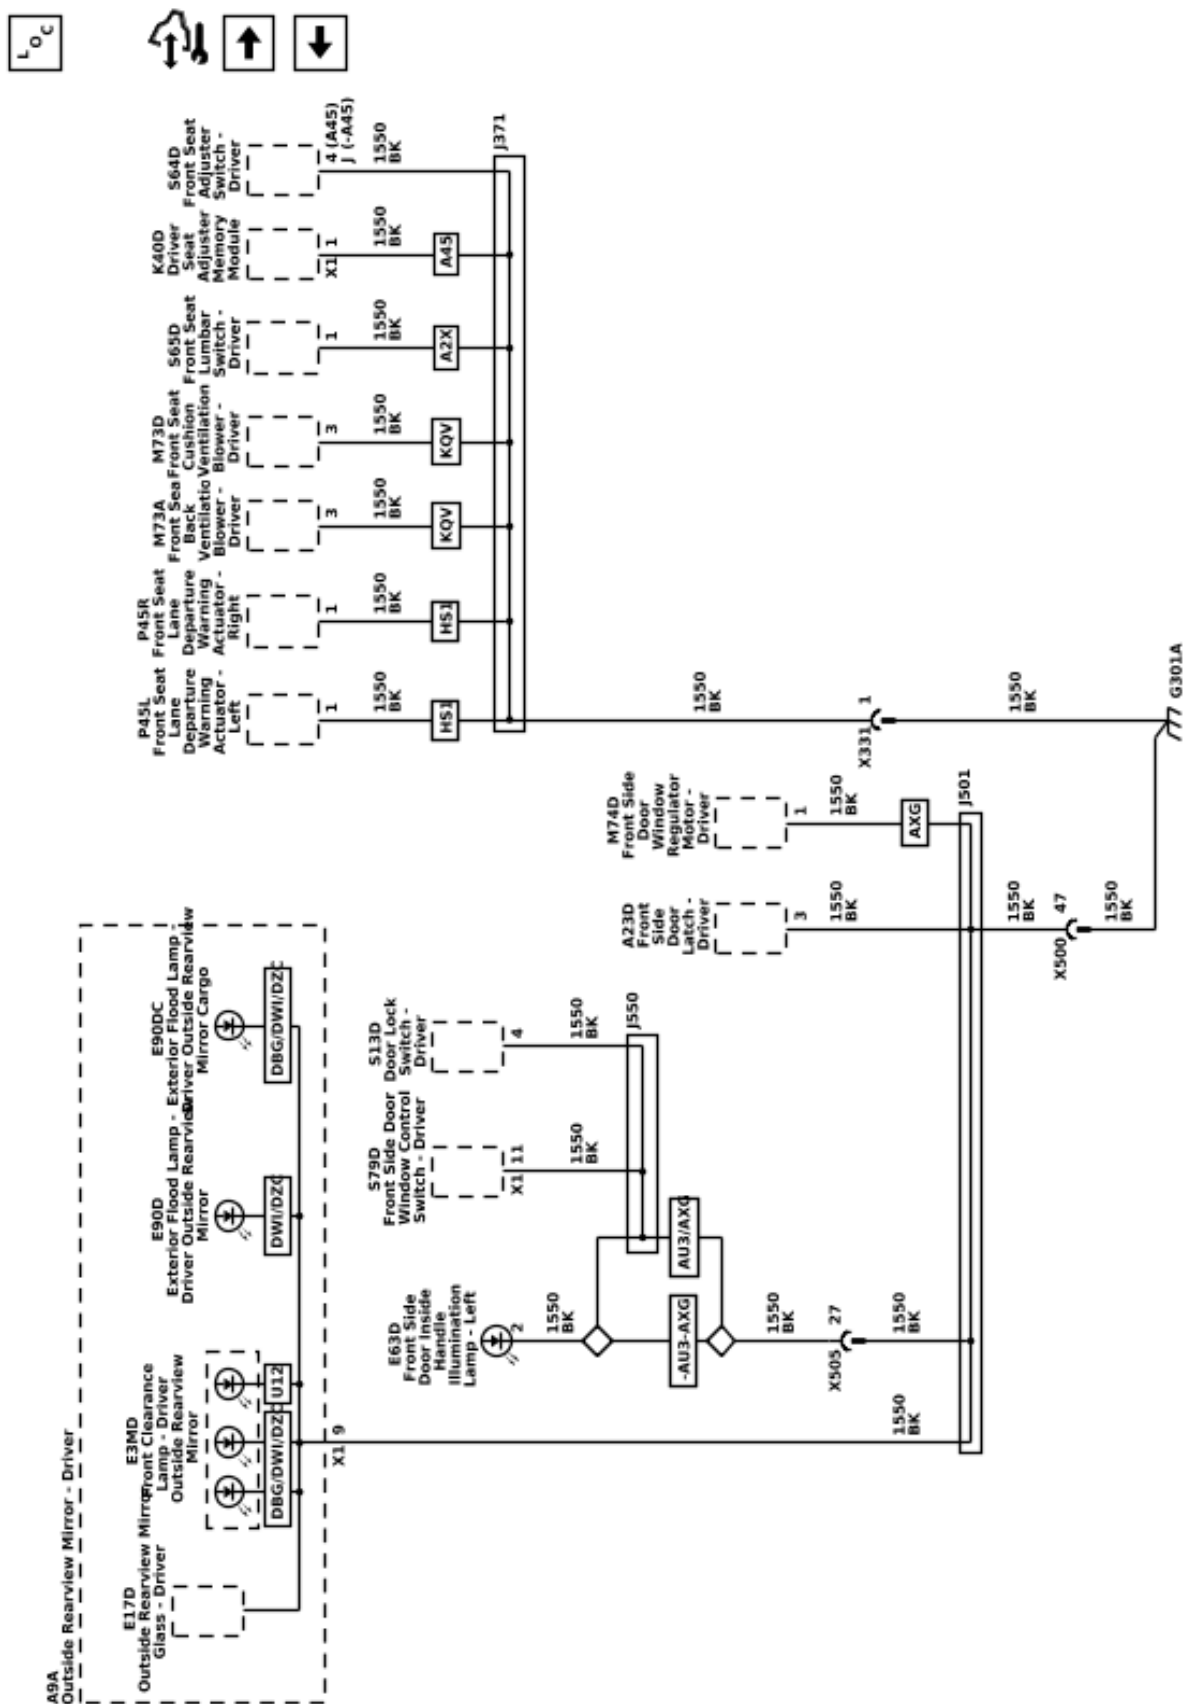


Ground Distribution Schematics (G301A - Regular Cab - 2 of 2)

LOC

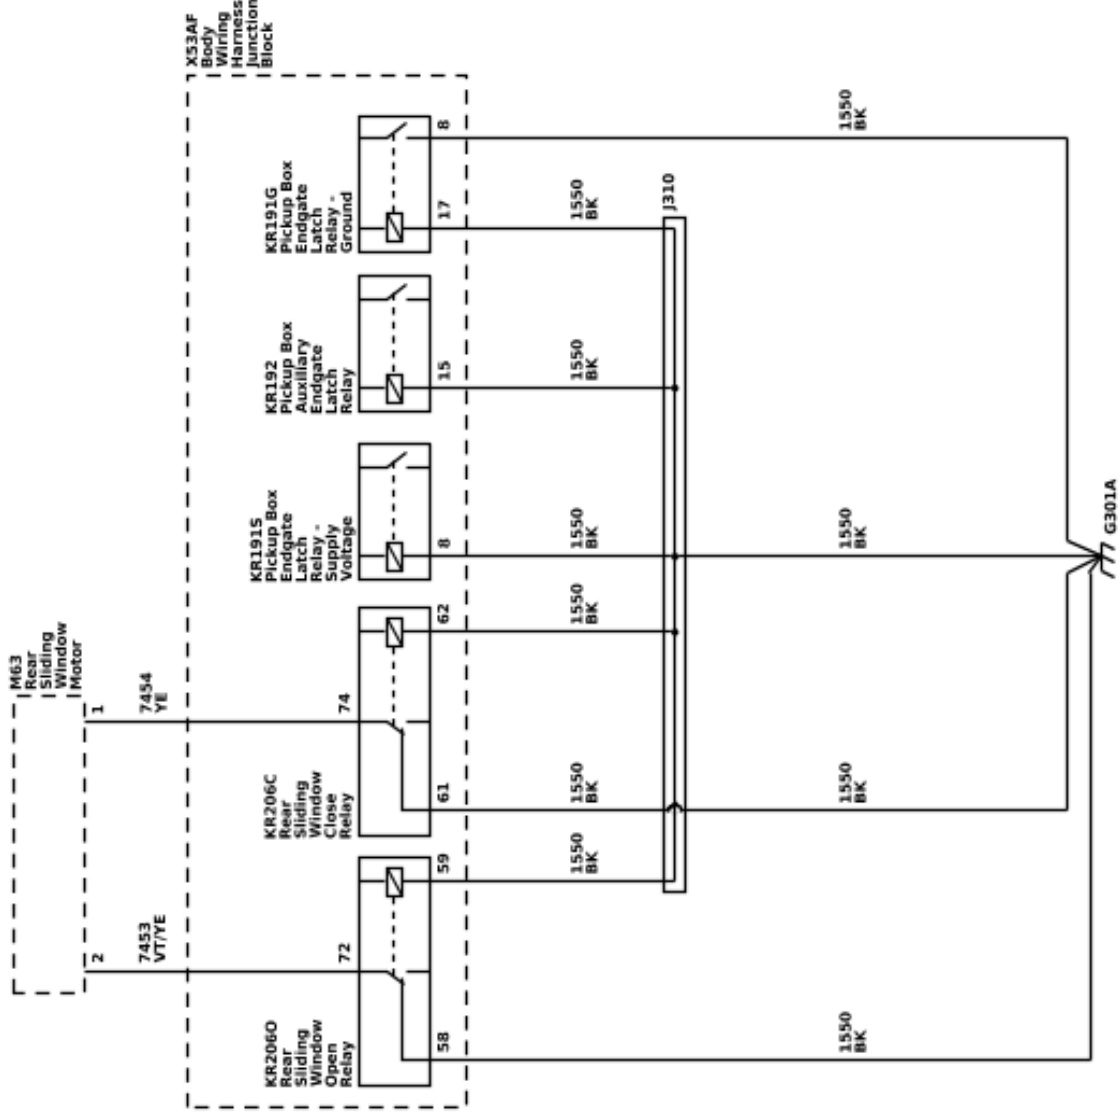


Ground Distribution Schematics (G301A - Double Cab/Crew Cab - 1 of 2)

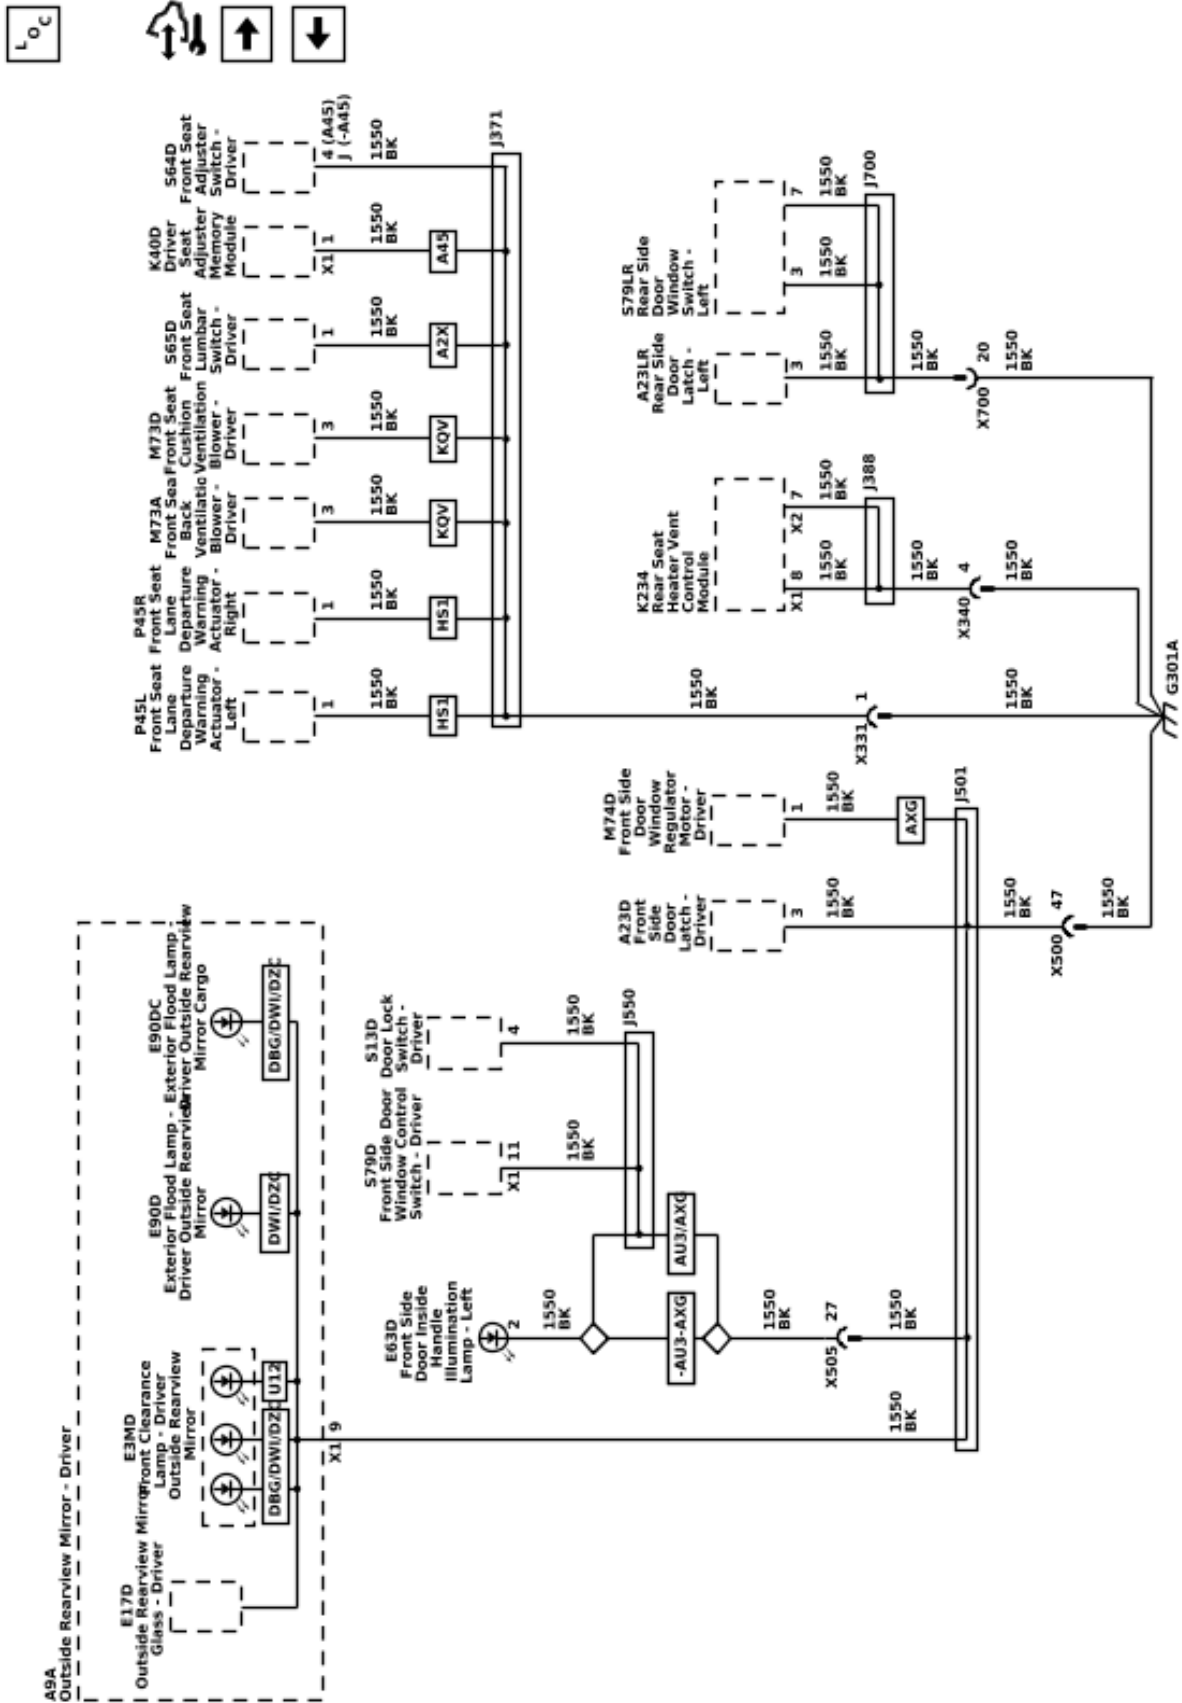


Ground Distribution Schematics (G301A - Double Cab/Crew Cab - 2 of 2)

LOC

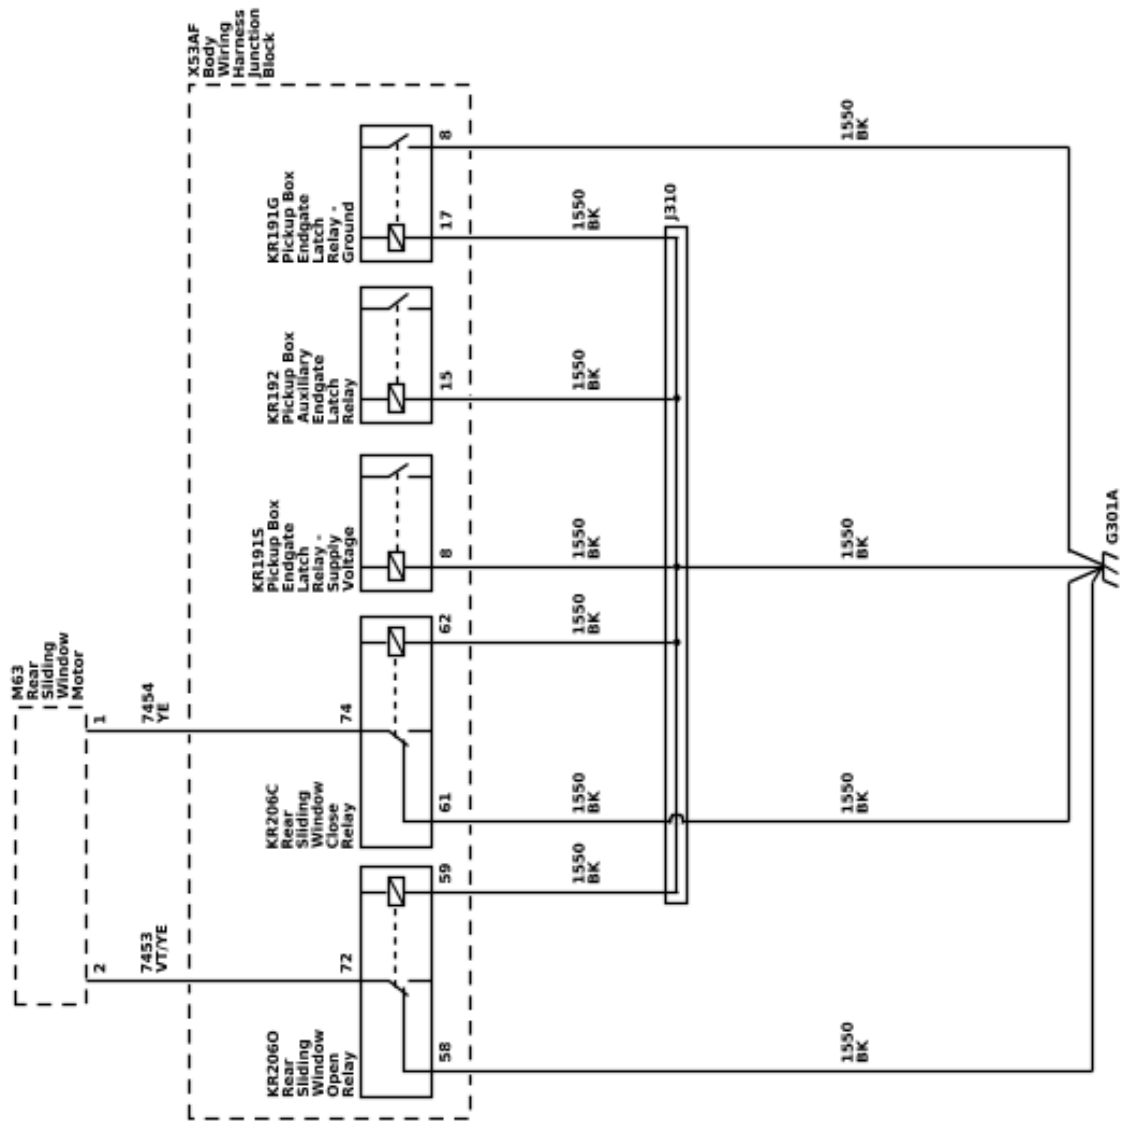


Ground Distribution Schematics (G301B)

L_{OC}

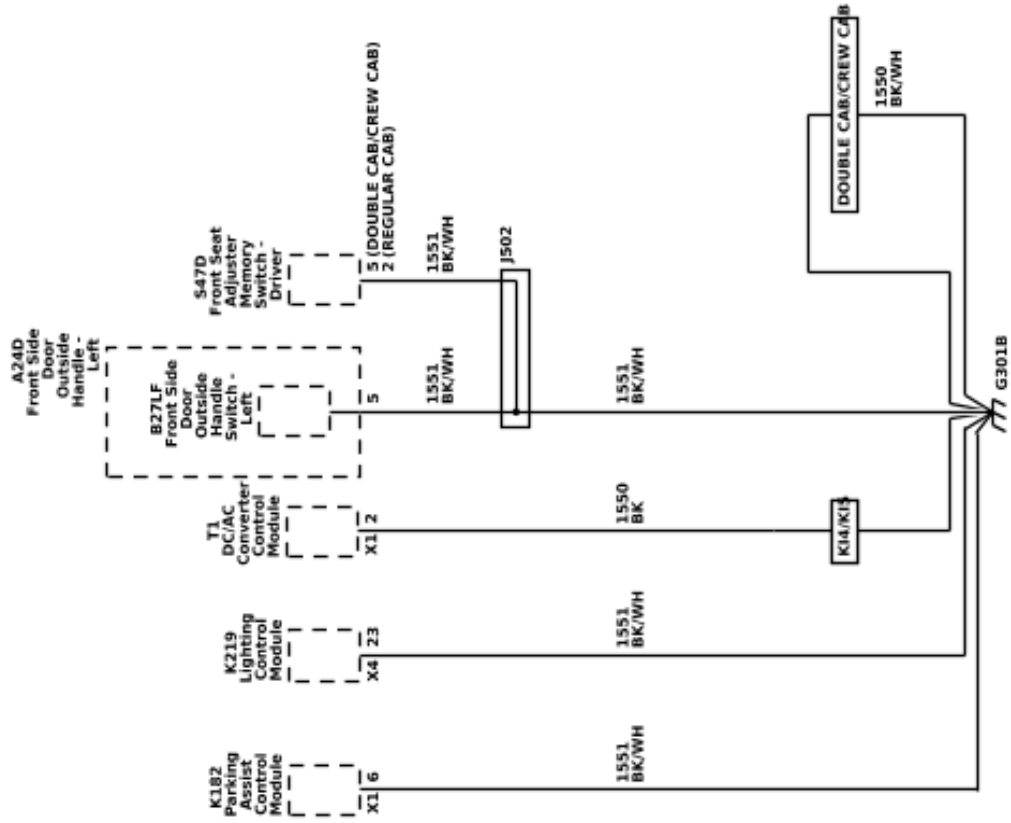


Ground Distribution Schematics (G402)

LOC

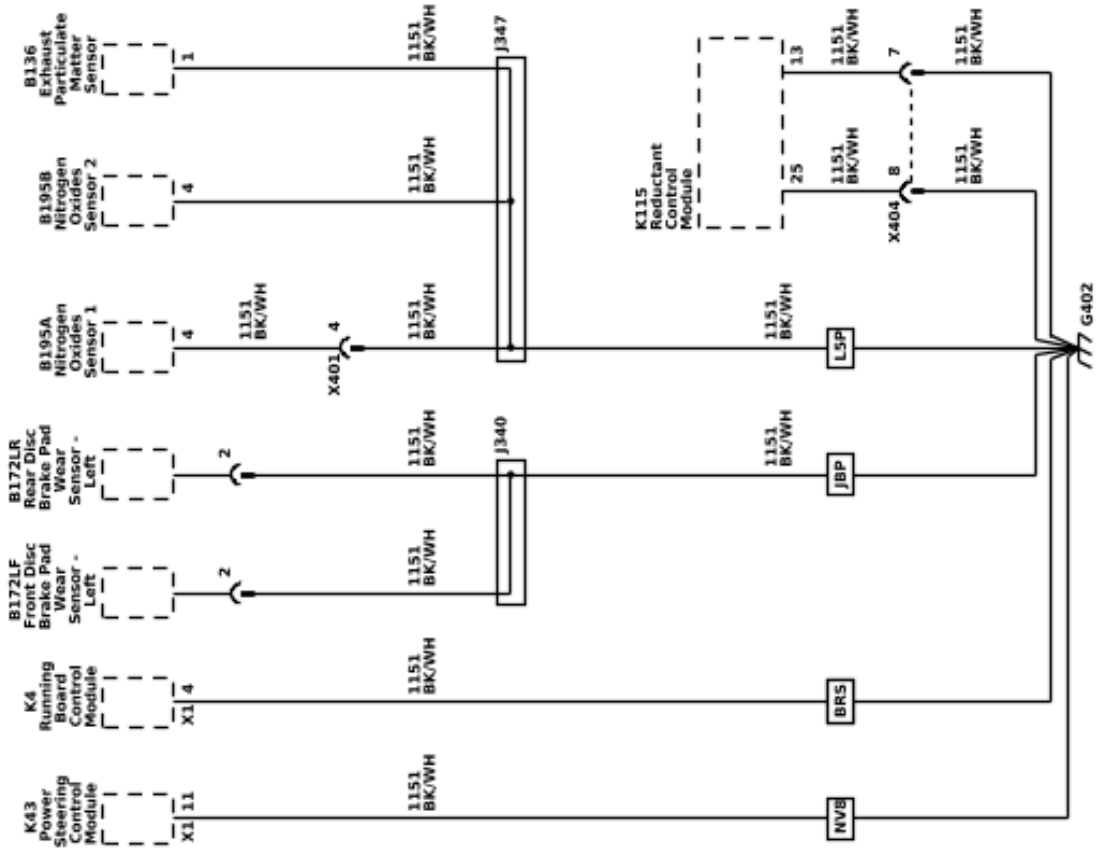


Ground Distribution Schematics (G404)

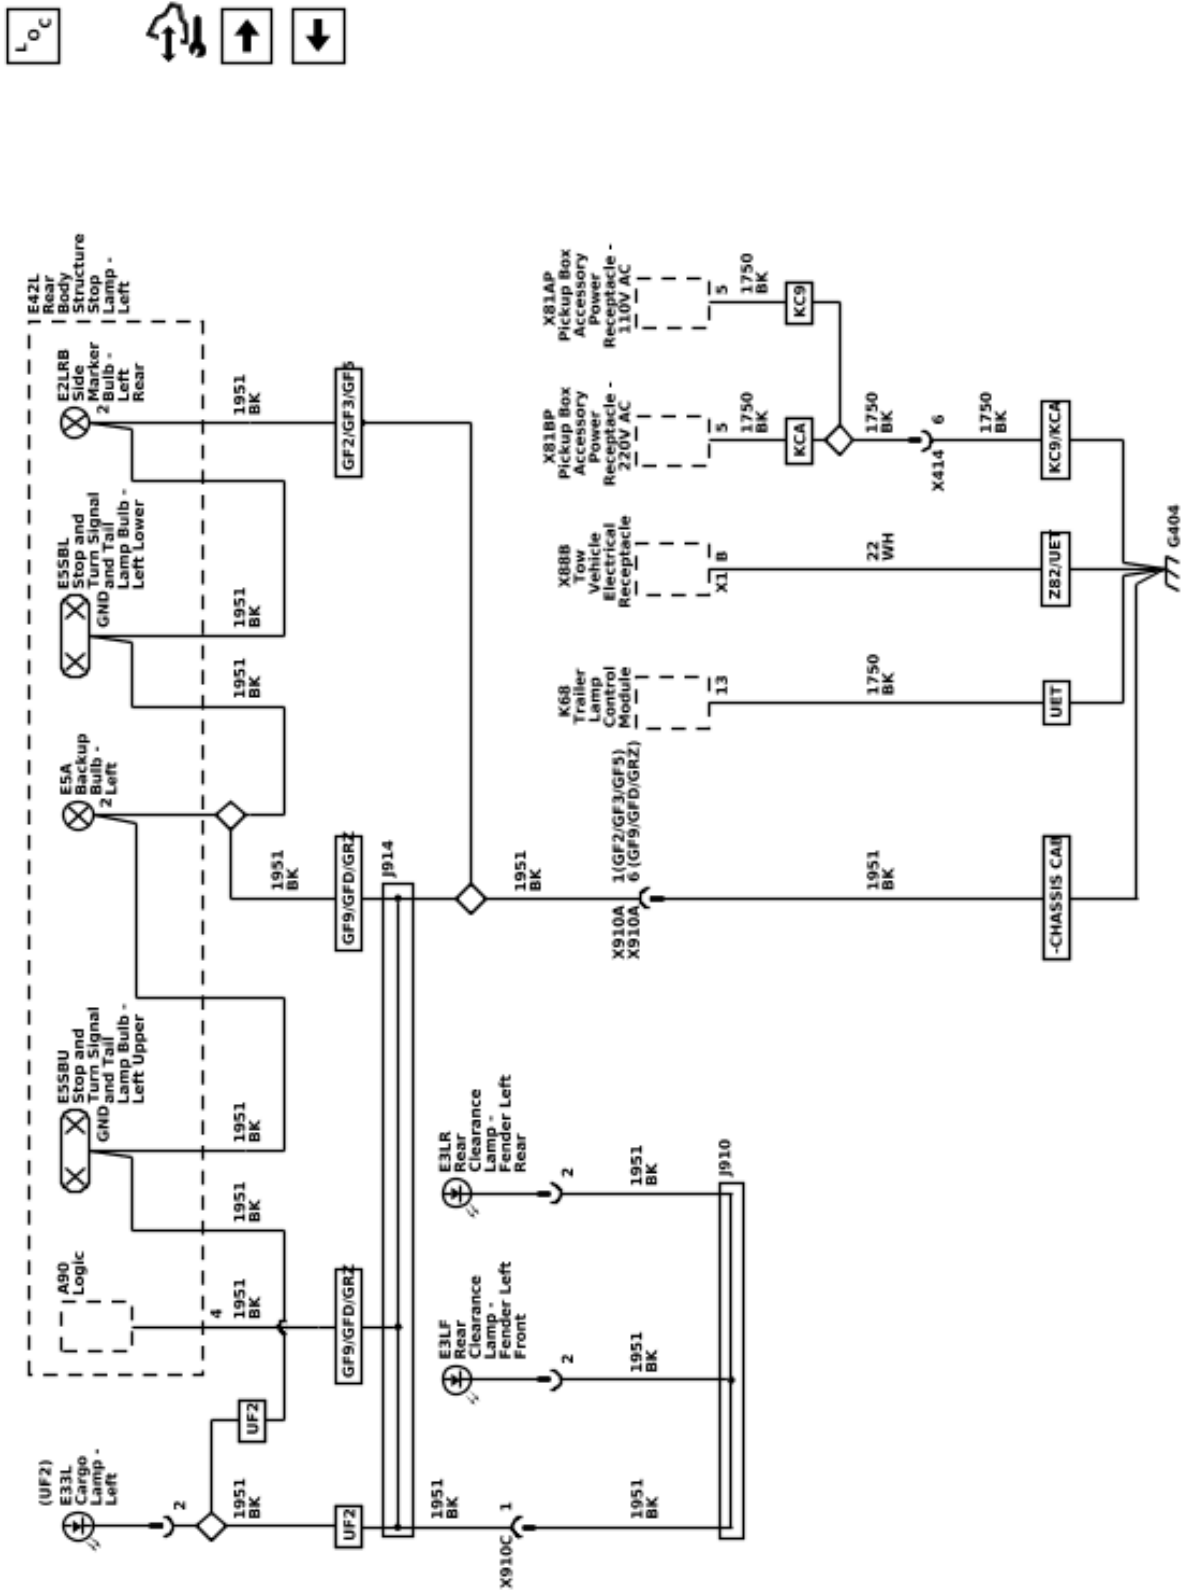

L_{OC}




Ground Distribution Schematics (G406A)


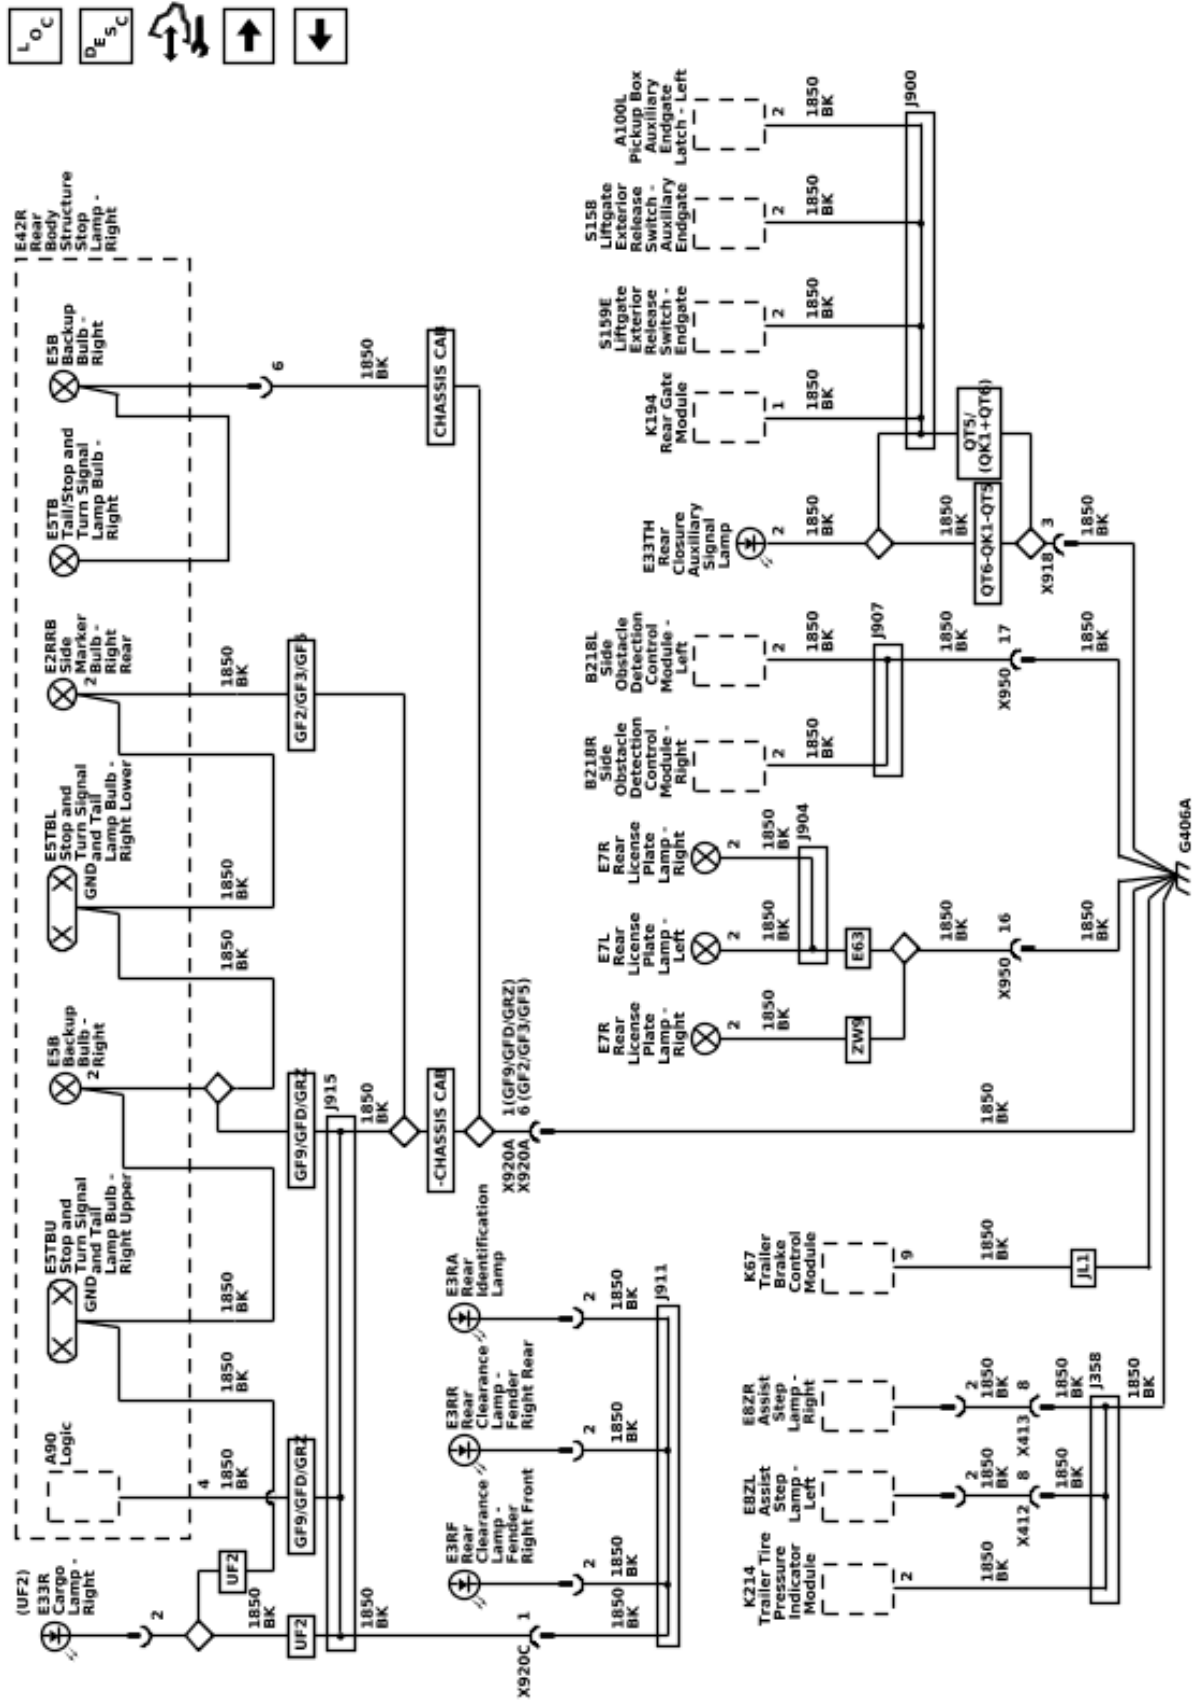


Ground Distribution Schematics (G406B and G407)


LOC

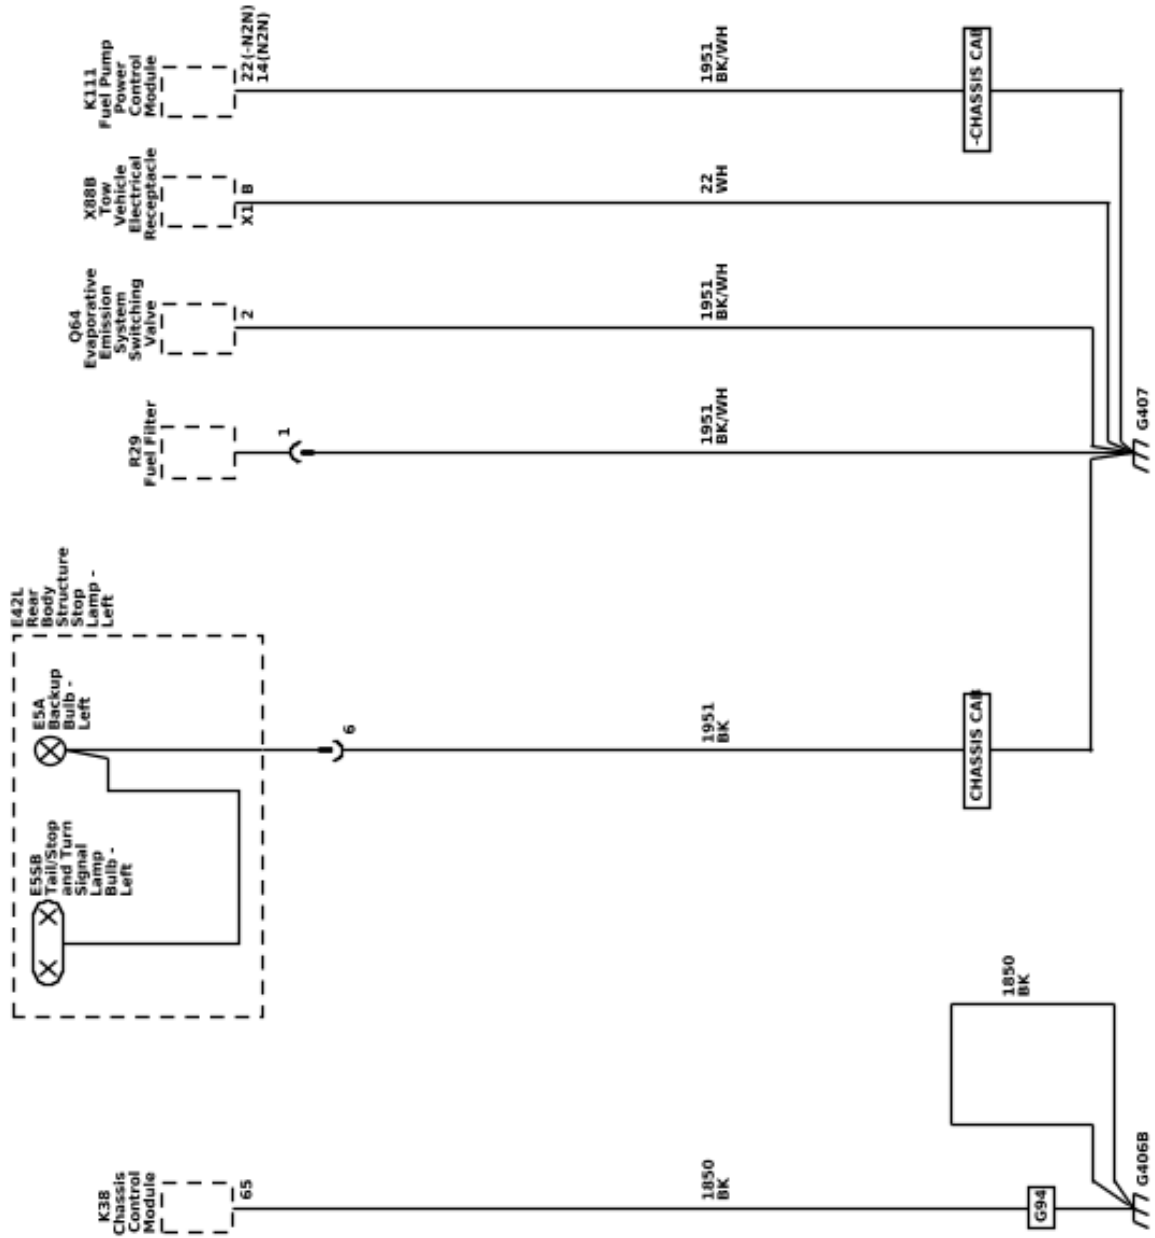


Upfitter Provision Schematics (Upfitter Provisions - Signals)

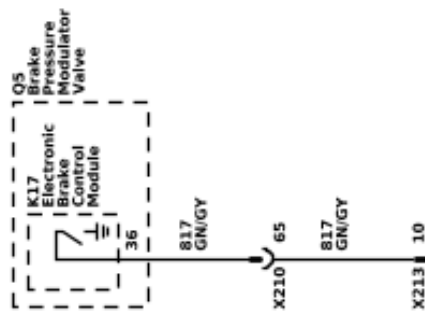

Upfitter Provision Schematics (Upfitter Provisions - 1 of 2 (9L7))

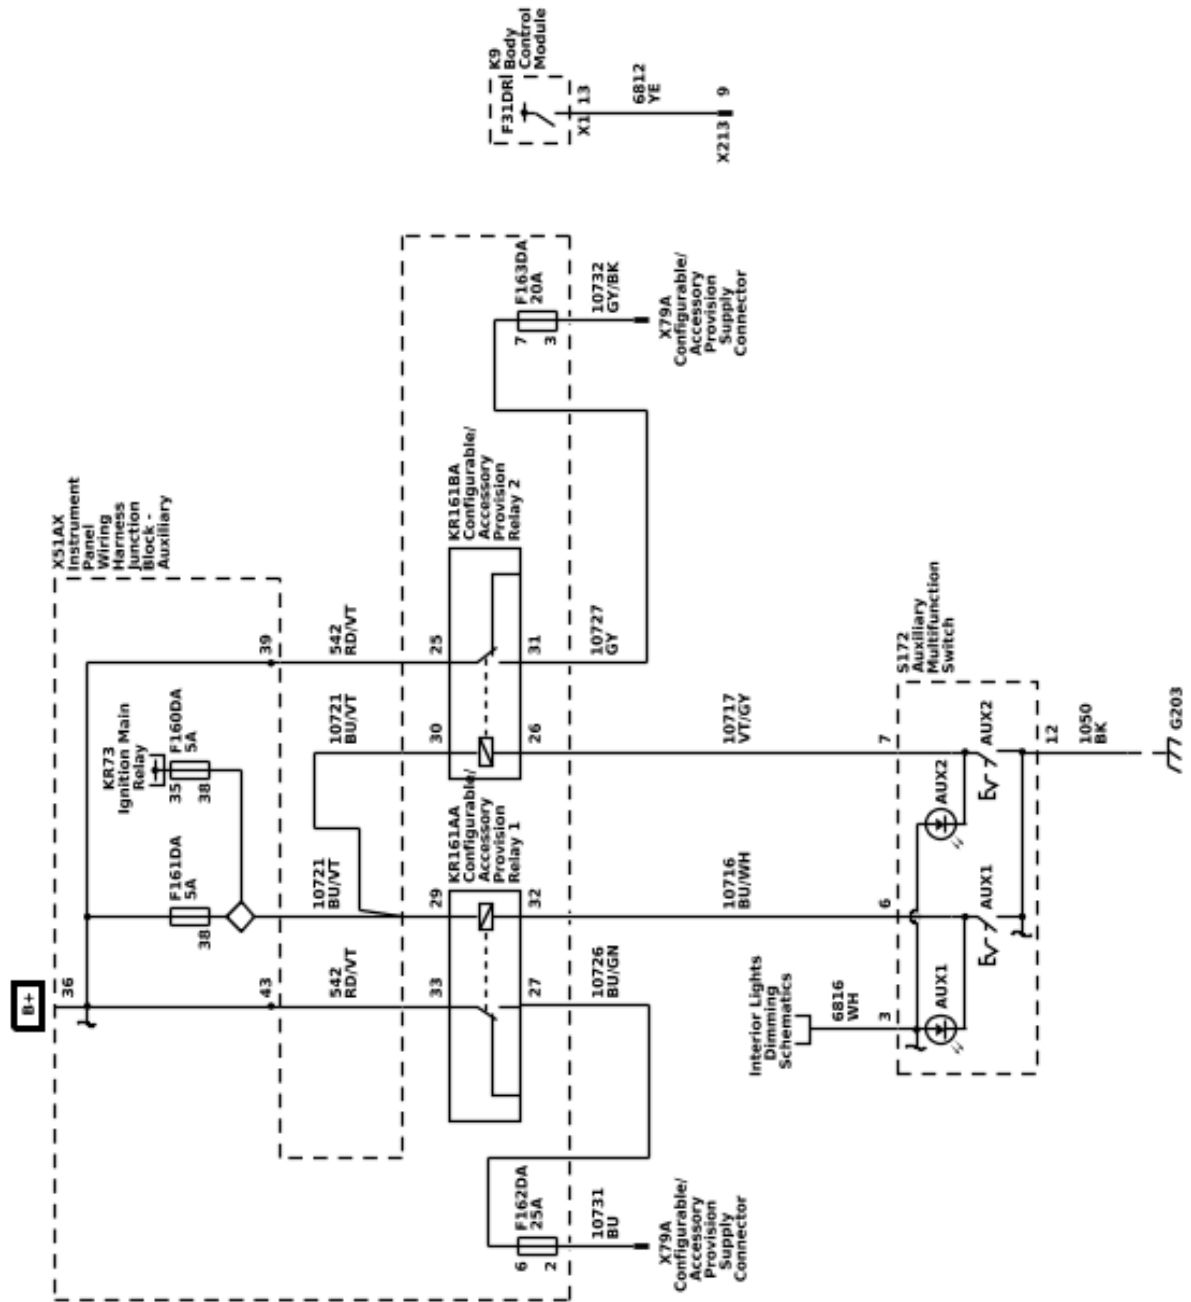

Upfitter Provision Schematics (Upfitter Provisions - 2 of 2 (9L7))

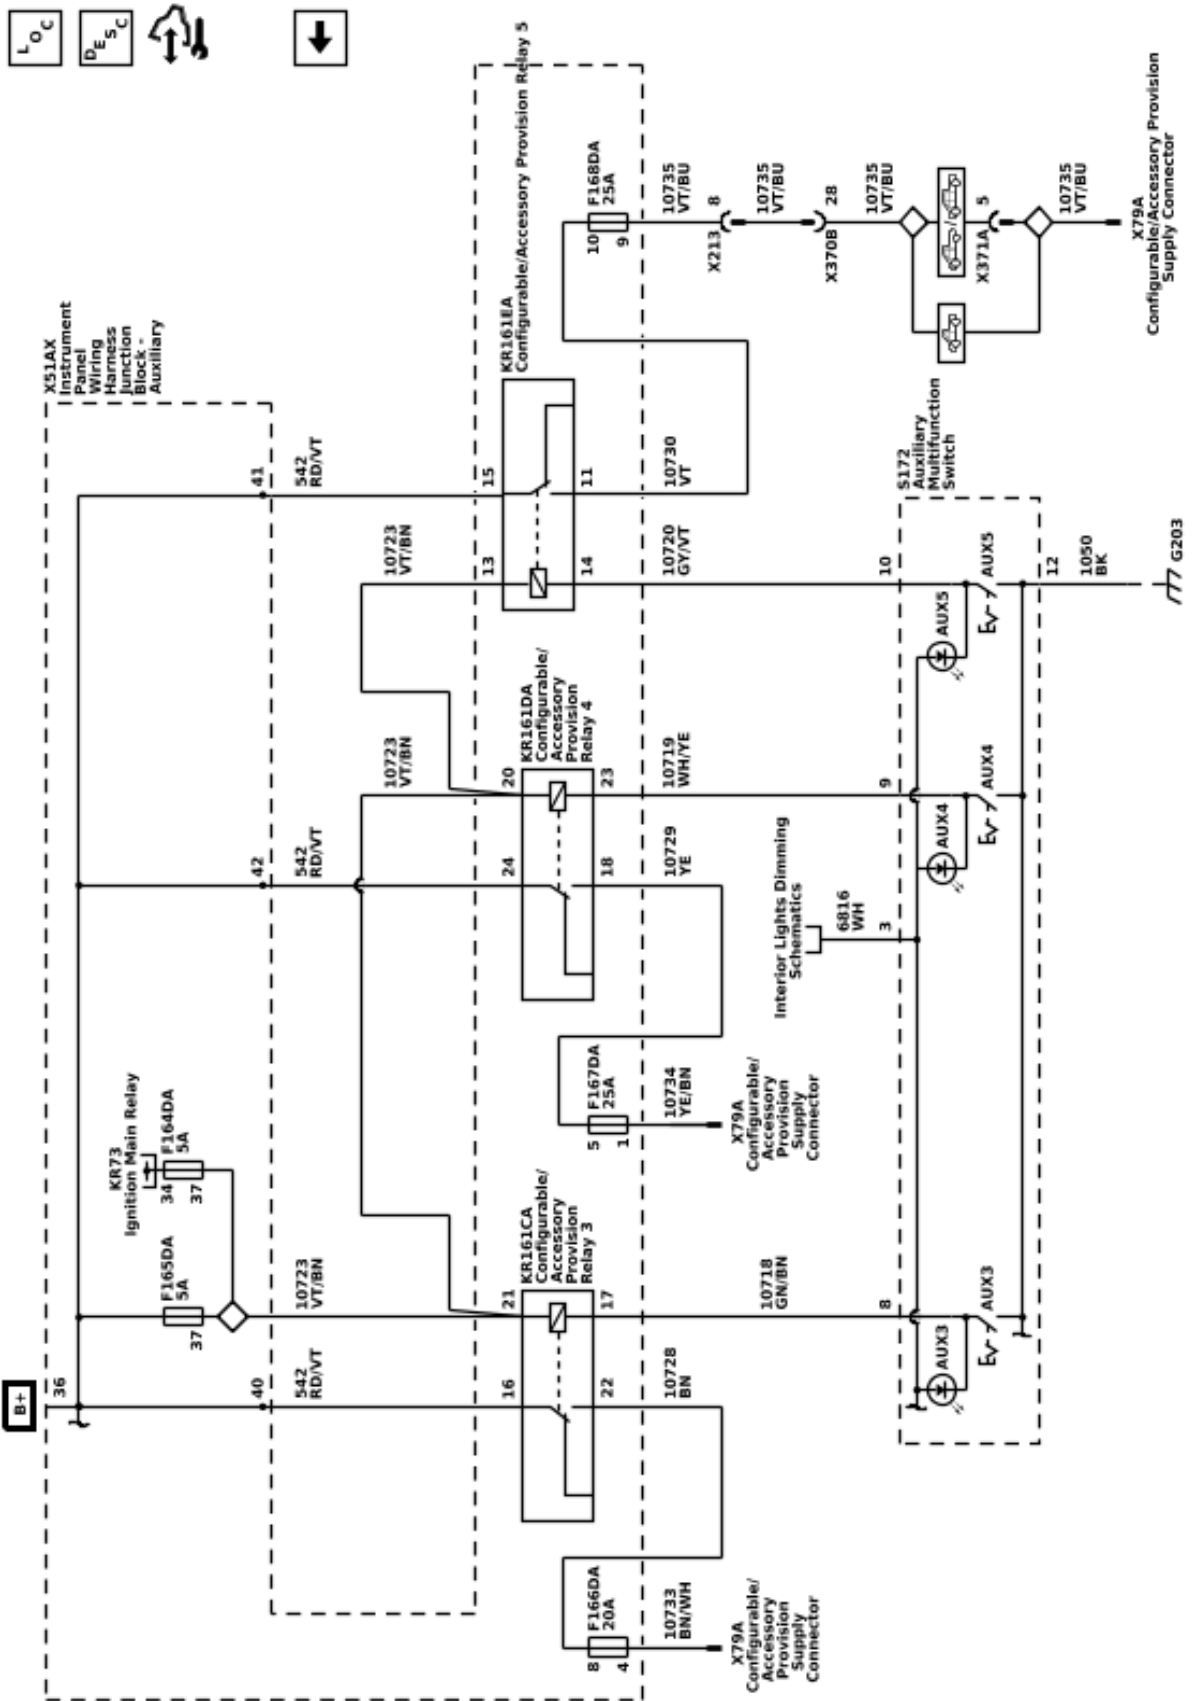

Description and Operation

Power Mode Description and Operation

Serial Data Power Mode Master

The K9 Body Control Module (BCM) is the Power Mode Master and the K56 Serial Data Gateway Module is the Back-Up Power Mode Master.

The Power Mode Master uses various vehicle status conditions and inputs to determine the desired vehicle power mode state. The Power Mode (Off, Accessory, Run, Propulsion, Start) is communicated to other modules via Serial Data and other electrical signals in order to provide the proper feature operation for the appropriate power mode.

If the Power Mode Master cannot control or determine the correct Power Mode, the Backup Power Mode Master will take over and become the vehicle Power Mode Master and place the vehicle into the proper

Power Mode by communicating with other modules via Serial Data to provide the proper electrical signals to provide the proper feature operation for the appropriate power mode.

S38 On/Off Vehicle Switch

There are 5 power modes to convey driver intent:

- OFF – A low power mode that allows maximum stand time until next start
- ACCY – Allows use of certain features that require operator authorization (Power windows for example). Propulsion is specifically disallowed.
- RUN – All features enabled except propulsion (motive force)
- PROPULSION – All features enabled
- START - This will transition to PROPULSION, including turning off non-essential loads to provide additional power for starting.

Power Mode States

Customer Action	Expected Vehicle Power Mode	S38 Vehicle On/Off Switch BCM Scan Tool Parameter	S38 Vehicle On/Off Switch Voltages
Vehicle OFF, S38 On/Off Vehicle Switch not pressed, Transmitter in Range	Vehicle Off Mode	Inactive	1.4 – 3.0 V (Switch Pressed) 3.35 – 4.26 V (Switch Released) 4.5 — 5.0 V (Switch Disconnected)
Vehicle OFF, S38 On/Off Vehicle Switch not pressed, Transmitter out of Range/ Away from vehicle	Vehicle Off Mode	Inactive	
Vehicle in any Power Mode EXCEPT OFF, then Press the S38 On/Off Vehicle Switch Foot On or Off the Brake Pedal, Transmitter in Vehicle	Vehicle Off Mode	Active (pushed) / Inactive (not pushed)	
Vehicle in Propulsion Mode, momentarily Press and Release the S38 On/Off Vehicle Switch Foot On or Off the Brake Pedal, Transmitter out of Range/Away from vehicle	Run Mode, With DIC Message No Remote Detected Press Brake to Restart	Active (pushed) Inactive (not pushed)	
Vehicle Off Power Mode, then Press the S38 On/Off Vehicle Switch for less than 5 s with foot Off the Brake Pedal; Transmitter in Vehicle	Vehicle Accessory Mode	Active (pushed) / Inactive (not pushed)	
Vehicle Off Power Mode, then S38 On/Off Vehicle Switch with foot On the Brake Pedal; Transmitter in Vehicle	Vehicle Start/Propulsion Mode (vehicle cranks then engine running (for Internal Combustion Engine) or Propulsion System Active for EV) power mode timeout is enabled	Active (pushed) / Inactive (not pushed)	
Vehicle Off Power Mode, then S38 On/Off Vehicle Switch with foot On the Brake Pedal for 5 to 10 s; Transmitter in Vehicle	Vehicle Start/Propulsion Mode (vehicle cranks then Propulsion Mode Active) power mode timeout will be disabled.	Active (pushed) / Inactive (not pushed)	
Vehicle OFF Power Mode, then Press and Hold the S38 On/Off Vehicle Switch for 5 s with foot Off the Brake Pedal; Transmitter in Vehicle	Vehicle Run Mode (Ignition ON without the Propulsion system Active)	Active (pushed) / Inactive (not pushed)	
Vehicle OFF Power Mode, then Press and Hold the S38 On/Off Vehicle Switch for 5 s with foot Off the Brake Pedal; Transmitter in Vehicle	Vehicle Start/Propulsion Mode (vehicle cranks then Propulsion Active) power mode timeout is disabled	Active (pushed) / Inactive (not pushed)	
Vehicle Propulsion Mode with vehicle speed detected above 4 km/h (2.5 MPH) press and hold S38 On/Off Vehicle Switch for 2 s or press and release it 2 times within 5 S.	Vehicle will transition from Propulsion Mode to Run Mode (Ignition On Propulsion system Inactive).	Active (pushed) / Inactive (not pushed)	
NOTE: If the transmitter is not moved for more than 1 hour it will become inactive.			

Service Mode

Service Mode is the Run Power Mode with power mode timeout disabled. This can only be done with the Service Tool.

Automatic Power Mode Timeouts

Note: If the Transmitter/Fob remains stationary and is not moved for one hour, it will go to sleep and may create a fob not in range condition.

This system is designed to prevent batteries from going dead in the event the ignition is left on while unattended, it is also designed to shut the vehicle off if left running unattended. After a Power Mode timeout,

the Power Mode Master is responsible for shutting down the or transitioning the vehicle into the low parasitic sleep state "OFF" Power Mode. This Power Mode timeout strategy uses Vehicle Speed, Vehicle Power Mode, Parked Status and other Vehicle Conditions to make the timeout determination.

Accessory Power Mode

The Accessory Power Mode will timeout after approximately 5 minutes. The timer will Start once the system has determined it is in the Accessory Power Mode status. After the timer expires the Power Mode will change to the OFF Power Mode.

Run Power Mode

if the conditions listed below are met the Run Power Mode will timeout after approximately 40 minutes if the transmitter is in range, or 20 minutes if the transmitter is out of range. The timer will Start once the system has determined it is in the Run Power Mode status and all of the following conditions are met. After the timer expires the Power mode will change to OFF Power Mode.

If any of the following conditions are not met and/or if there is a change in the Brake Pedal or Clutch Pedal status, the Run Mode timeout timer will be disabled, and the timer will restart after all of the conditions are met again.

- Vehicle in Run Mode (Vehicle powered up S38 On/Off Vehicle Switch Green indicator on Propulsion Mode Inactive)
- Propulsion is Inactive
- Vehicle in Park.
- Vehicle Speed is 0 KM/MPH.
- Fast Idle is inactive (If Equipped).
- PTO Remote Start Status is inactive (If Equipped).
- Particulate Filter Cleaning Status is Inactive (if Equipped)
- S38 Vehicle On/Off switch was held for more than 5 to 10 seconds while starting the vehicle the actual time may vary based on model and/or year.

Propulsion Power Mode

If the following conditions listed below are met the Propulsion Power Mode will timeout after approximately 30 minutes if the transmitter is in range, or 15 minutes if the transmitter is out of range. The timer will Start once the system has determined it is in the Propulsion Power Mode status and all of the following conditions are met. After the timer expires the Power mode will change to the OFF Power Mode.

The Propulsion Power Mode timeout can be disabled with then vehicle in Off Power Mode, apply and continue to hold the brake pedal, then press and hold the S38 Vehicle On/Off switch for 5 to 10 seconds (the actual time may vary based on model and/or year). A DIC message will be displayed when Power Mode timeout is disabled.

If any of the following conditions are not met and/or if there is a change in the Brake Pedal or Clutch Pedal status, the Propulsion Mode timeout timer will be disabled, and the timer will restart after all of the conditions are met again.

- Vehicle in Propulsion Mode (Propulsion Active).
- Vehicle in Park.
- Vehicle Speed is 0 KM/MPH.
- Fast Idle is Inactive (If Equipped).
- PTO Remote Start Status is inactive (If Equipped).
- Particulate Filter Cleaning Status is Inactive (if Equipped)
- S38 Vehicle On/Off switch was held for more than 5 to 10 seconds while starting the vehicle the actual time may vary based on model and/or year.

Relay Controlled Power Mode

The BCM uses discrete push button switch inputs, transmitter in range status, current power mode state, and brake pedal position state to distinguish the correct power mode (Off, Accessory Mode, Run Mode, Start/Propulsion Mode). The BCM, after determining the desired power mode, will activate the appropriate relays for that power mode.

The retained accessory power relay remains on for a timed period after the Ignition Mode is OFF. Refer to [Retained Accessory Power Description and Operation on page 7-850](#) for more information on the retained accessory power function.

Push Button Start

The ignition mode switch has 2 LEDs that indicate the vehicle power mode Amber for Accessory Mode and Green for Run or Start/Propulsion Modes. When the vehicle is in the OFF mode, both LED's will be OFF. Momentarily pressing the S38 On/Off Vehicle Switch button once, brake pedal not applied, the vehicle will enter into the Accessory Mode and the Amber LED will illuminate. The Accessory Mode will timeout after approximately 5 min to help reduce battery drain. With the ignition OFF, brake pedal not pressed, then pressing and holding the S38 On/Off Vehicle Switch for 5 s will place the vehicle in Run Mode (Ignition ON without the Propulsion Mode Active). The vehicle will stay powered up for approximately 40 minutes if the transmitter is in range, or 20 minutes if the transmitter is out of range, and the Green LED will illuminate.

With the ignition OFF brake pedal pressed, then press and release the iS38 On/Off Vehicle Switch, the vehicle will enter Start/Propulsion Mode and the Green LED will illuminate, the engine will crank and the engine will be running for Internal combustion engines (ICE), or Propulsion mode will go Active on Electric Vehicles (EV). The Propulsion Mode will timeout after approximately 30 minutes if the transmitter is in range, or 15 minutes if the transmitter is out of range. The timer will stop when the vehicle is shifted out of PARK or the brake pedal is pressed and released, the timer will reset after the vehicle is placed back in PARK with the Propulsion Mode Active.

Both LED's have the voltage supplied from the body control module (BCM). The ignition mode switch sends the ignition mode switch status to the passive entry

passive start module (PEPS) and to the BCM. The PEPS module sends a redundant signal to the BCM with the ignition mode switch status.

Transport Mode

Transport Mode is designed to reduce the parasitic load of some modules during shipping and/or during vehicle storage. Some features may be disabled or have reduced functionality while Transport Mode is ON. Transport Mode is enabled and disabled by either of the following methods:

- With the Scan Tool Diagnostics > Body Control Module > Control Functions > Power Mode.
- Turning the hazard flashers ON, apply and hold the brake pedal, then press and hold the ignition mode switch for greater than 15 s. For vehicles equipped with a DIC a message Transport Mode On when it is enabled and Transport Mode Off when it is disabled will be displayed for a predetermined amount of time. For vehicles equipped without a DIC, the battery indicator light will constantly flash on the Instrument Cluster when Transport Mode is enabled.

Battery Saver Mode

There are 7 different Battery Saver Modes. Battery Saver Modes 1 to 3 occur in Accessory and Run Power Modes (vehicle on propulsion system Inactive) if the battery voltage drops below approximately 11.5 V. Battery Saver Modes 4 to 7 occur in the Off Power Mode only. Battery Saver Modes 4 to 7 may set DTC's.

- Battery Saver Mode 1: DIC message "Battery Low, Start Vehicle", 4 chimes
- Battery Saver Mode 2: DIC message "Battery Low, Start Vehicle", Load Shed Level 3 is activated
- Battery Saver Mode 3: DIC message "Battery Low, Start Vehicle", Radio/Infotainment shut off, Load Shed Level 3 active
- Battery Saver Mode 4: Battery Saver Mode Ignition Off – Parasitic Current draw of 100 mA or greater
- Battery Saver Mode 5: Battery Saver Mode Ignition Off – Parasitic Current draw of 1 A or greater
- Battery Saver Mode 6: Battery Saver Mode Ignition Off – Battery Voltage less than 12.0 V
- Battery Saver Mode 7: Battery Saver Mode Ignition Off – Battery Voltage less than 11.6 V

Load Shedding

Prior to Load shedding Idle Boost will occur, the idle speeds will be increased by 25 to 300 RPM to help maintain a normal battery voltage. Idle Boost may be noticeable to the driver. If the battery voltage continues to drop below a normal state then load shedding will go active and it will start to reduce electric loads for components that will not impact the safe operation of vehicle. At load shed levels 2 and 3 a DIC message will be displayed "Reducing Features To Save Battery". When load shedding is active the customer may begin to notice features starting to have reduced functions or may become inoperative. Examples of affected loads are radio, HVAC blower(s) front and rear (if equipped), heated/ventilated seats, heated mirrors, rear defogger

and other devices with heavy electrical draws. Idle Boost and load shed levels can be observed with the scan tool.

Idle Boost 1

Idle is increased by 25-100 RPM and generally is not noticeable to most drivers.

Idle Boost 2

Idle is increased by 50–200 RPM and generally is not noticeable to most drivers.

Idle Boost 3

Idle is increased by 100–300 RPM and may be noticeable to most drivers.

Load Shed Level 1

Reduces load current by 25%.

Load Shed Level 2

Reduces load current by 50%.

Load Shed Level 3

Electric loads for components that will not impact the safe operation of vehicle will be turned Off.

BCM Awake/Sleep States

The BCM is able to control or perform all of the BCM functions in the awake state. The BCM enters the sleep state when active control or normal monitoring of system functions has stopped and a time limit has passed. The BCM must detect certain wake-up inputs before entering the awake state. The BCM monitors for these inputs during the sleep state.

The BCM will enter the awake state if any of the following wake-up inputs are detected:

- Activity on the serial data line
- Detection of a battery reconnect
- Any door open signal
- Headlamps ON
- Ignition ON
- Park lamps ON
- Keyless entry or remote start message

The BCM will enter a sleep state when all of the following conditions exist:

- Ignition OFF, transmitter is out of range
- No activity exists on the serial data line.
- No outputs are commanded.
- No delay timers are actively counting.
- No wake-up inputs are present.

If all these conditions are met, the BCM will enter a low power or sleep condition.

Retained Accessory Power Description and Operation

Retained Accessory Power

The Retained Accessory Power (RAP) & Interruptible RAP (IRAP) Circuits are controlled by the K9 Body Control Module (BCM). The BCM is the Power Mode Master, it utilizes various Vehicle inputs to determine the Vehicle Power Mode and sends this information via Serial Data and providing associated electrical signals to the entire vehicle for proper feature operation.

The BCM monitors the vehicles power modes, and door ajar/open switch status to determine whether the retained accessory power should be initiated and remain active or be terminated. The RAP output is optional based on the vehicles option contents. When utilized, the RAP Output control can be used to control a RAP Relay, it may provide direct power, or a serial data message to vehicle devices/modules from the BCM.

Retained Accessory Power Relay Coil Control Circuit (If Equipped)

The BCM keeps the device or relay (if equipped) energized during all power modes, except Off-Awake and Crank. The device(s) remain active for approximately 10 min after the Vehicle is placed into the OFF Power Mode, provided none of the doors are opened.

Retained accessory power will end when one of the following conditions are met:

- The BCM receives an input from any door ajar switch indicating the opening of the door after the OFF Power Mode is achieved.

Note: If the BCM receives a door open/ajar active signal when the vehicle is placed into the OFF Power Mode, the retained accessory power will not initiate.

- The BCM internal timer for the retained accessory power expires after approximately 10 min.

Systems powered by the retained accessory power control circuit during the retained accessory power mode are as follows:

Note: The vehicle may not be equipped with all components as listed below.

- 12 V Accessory Power Receptacle
- Cigarette Lighter Receptacle
- Window Switches
- Sunroof Control Module (If Equipped)
- Sunroof Switch (If Equipped)
- Mobile Device Wireless Charger Module
- Mobile Telephone Control Module (If Equipped)
- Traffic Data Receiver (If Equipped)
- Transmission Shift Lever Position Indicator (w/ floor mounted console gear shift)

Serial Data Controlled Retained Accessory Power

Retained accessory power systems controlled by serial data are as follows:

Radio

Radio retained accessory power activation/termination is the same as relay operation with one exception; the only door that will turn the radio off during retained accessory power is the driver door open/ajar switch. The USB Ports will function the same as the radio.

Vehicle Communication Interface Module (VCIM) (Onstar®) (If Equipped)

VCIM RAP activation/termination is the same as radio operation with 1 exception; if there is an active call and the vehicle is placed in the OFF Power Mode, the VCIM will remain in RAP mode, and keep the radio in RAP mode until the call is terminated.

Interruptible Retained Accessory Power

The Power Mode Master (PMM) Controls components as needed. If equipped with a RAP relay, the BCM controls the Retained Accessory Power with an exception, Interruptible Retained Accessory Power (IRAP) is deactivated during transmitter authentication. During Transmitter Authentication the PMM will deactivate components including IRAP to prevent Radio Frequency (RF) Interference (RFI) that may cause a "NO REMOTE DETECTED" message to be displayed on the drivers information center.

Note: If transmitter Authentication occurs while in Run or Propulsion Modes, it is normal for IRAP to be interrupted momentarily (i.e. items connected to auxiliary power ports or chargers may momentarily go off then come back on).

If a remote transmitter was not been previously detected, Transmitter Authentication can occur under any of the following conditions:

- The drivers side front door is opened.
- The drivers side rear door is opened.
- The S38 Vehicle On/Off Switch is pressed.

Section 8

Transmission



Power Take-Off	<u>8-3</u>
Schematic and Routing Diagrams	<u>8-3</u>
Power Take-Off (PTO) Schematics	<u>8-4</u>
Description and Operation	<u>8-6</u>
Power Take-Off (PTO) Description and Operation	<u>8-6</u>
Shift Lock Control	<u>8-7</u>
Schematic and Routing Diagrams	<u>8-7</u>
Shift Lock Control Schematics	<u>8-8</u>
Description and Operation	<u>8-9</u>
Automatic Transmission Shift Lock Control Description and Operation	<u>8-9</u>

BLANK


Power Take-Off

Schematic and Routing Diagrams

Power Take-Off (PTO) Schematics (Power, Ground, Serial Data and Enable (PTO))

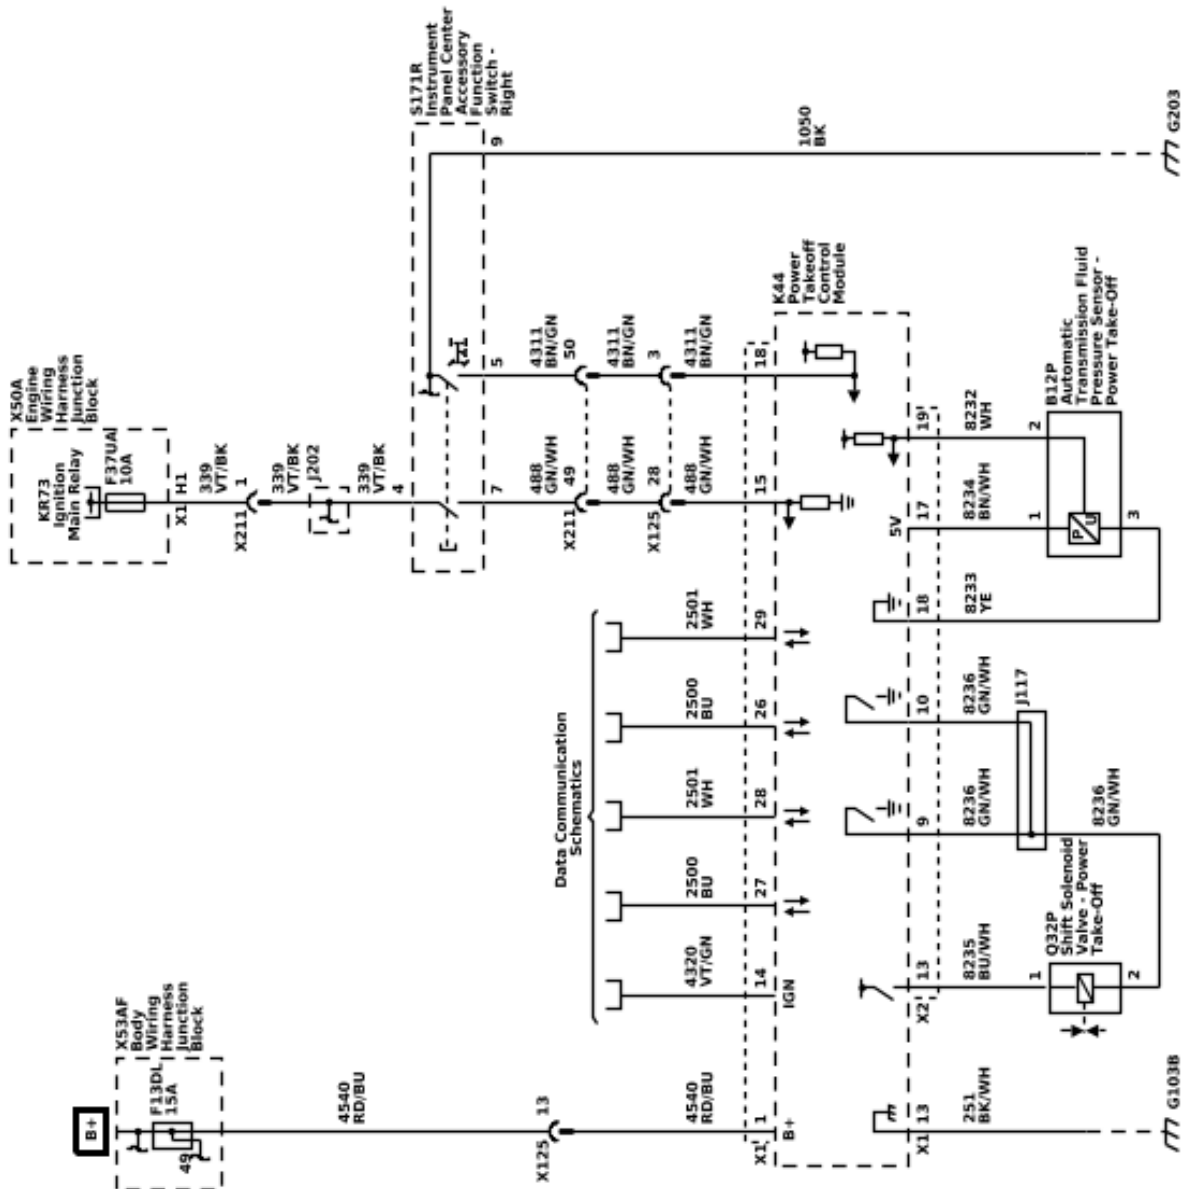

Power Take-Off (PTO) Schematics (Provisional Connector (PTO))

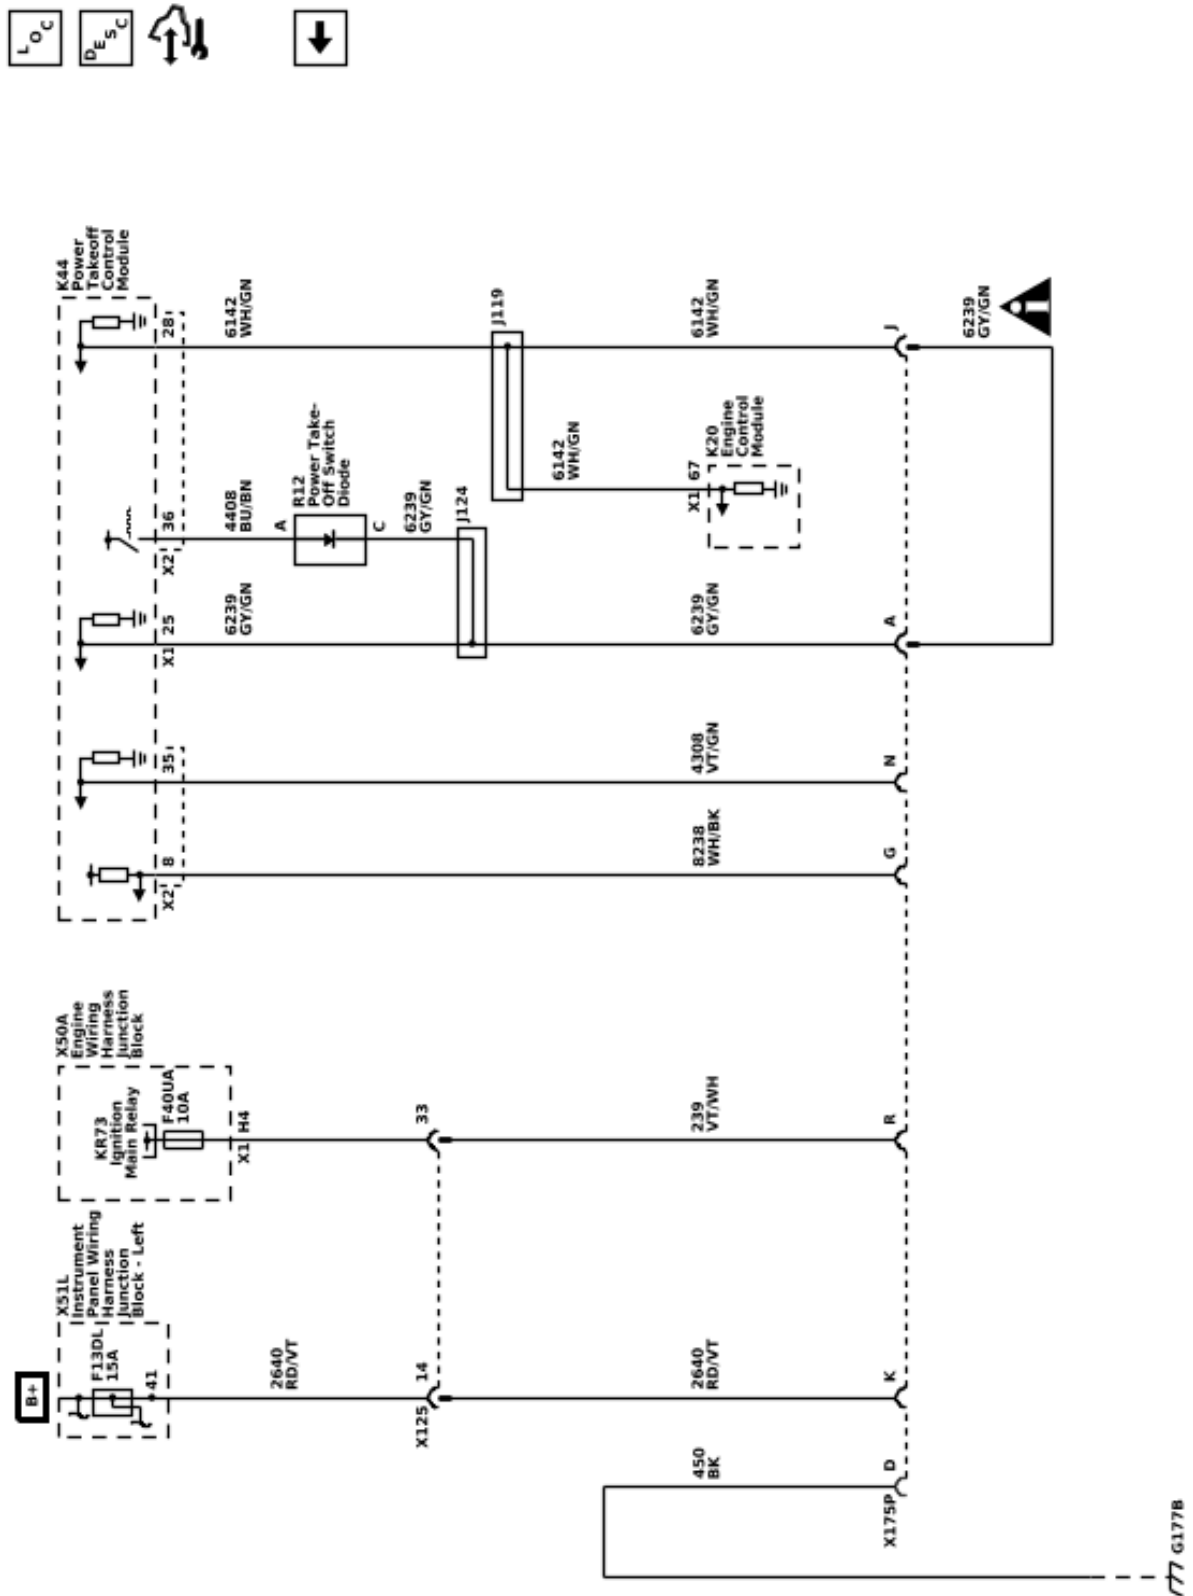

Description and Operation

Power Take-Off (PTO) Description and Operation

Power Take-Off System

The Power Take-Of (PTO) is a General Motors (GM) Upfitter integrated system that creates an auxiliary power source for running add-on equipment, such as salt spreaders, snow plows, winches, and lift buckets. It controls engine speed to values higher than normal base idle, PTO integral clutch engagement, and remote starting and shutdown of the engine.

For specific information on how to set up and operate the Power Take Off system refer to the vehicle's owners manual and the GM Upfitter website.

PTO Components

The Original Equipment Manufacturer (OEM) PTO components consist of:


- The transmission (internal) PTO gear which rotates with the torque converter
- The In-cab PTO switch and cruise control SET and RES switches
- The PTO telltale indicator
- The Driver Information Center (DIC)
- The Radio and Navigation Screen (HMI)
- The Power Take-Off Module
- The PTO Unit
- The On/Off Solenoid
- The Pressure Sensor
- The Remote PTO Upfitter connector X176

Note: The interface connector X176 is located underneath the cab, near the left frame rail and comes with a cap which is the mating half to the truck harness connector. This is the connector the Upfitter will use to wire in necessary external electrical components such as external switches to control the PTO from outside the cab.

Shift Lock Control

Schematic and Routing Diagrams

Shift Lock Control Schematics (Shift Lock Control)

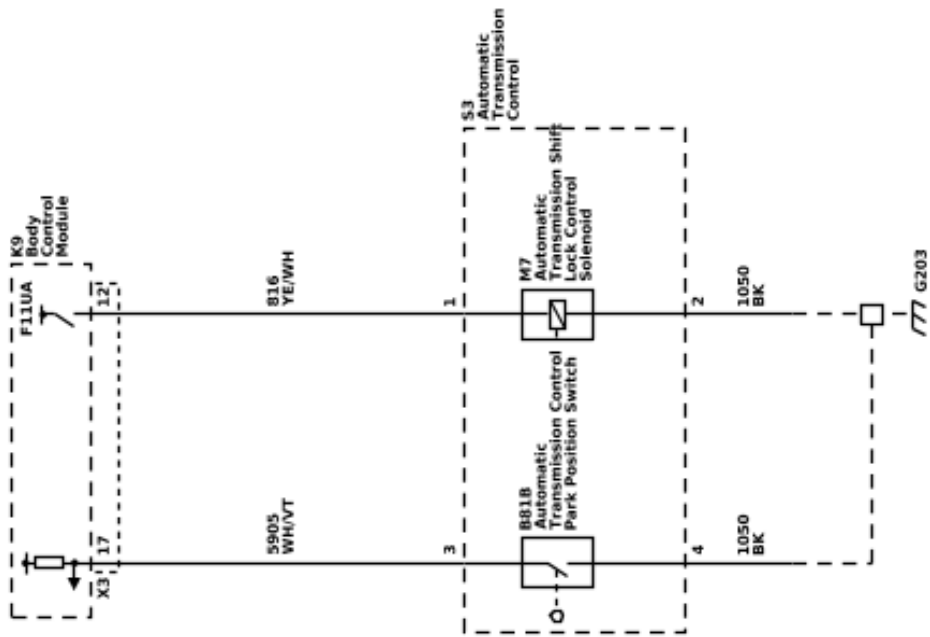

Description and Operation

Automatic Transmission Shift Lock Control Description and Operation

The Automatic Transmission Shift Lock Control System is a safety device that prevents an inadvertent shift out of PARK when the engine is running. The driver must press the brake pedal before moving the shift lever out of the PARK position. The system consists of the following components:

- The Automatic Transmission Shift Lock Solenoid (serviced as the Automatic Transmission Shift Lock Actuator)
- The Body Control Module (BCM)
- The Engine Control Module (ECM)

The BCM controls the voltage to the shift lock control solenoid through the shift lock control solenoid controlled voltage circuit. The following conditions must be met before the BCM will supply voltage to the shift lock control solenoid:

- The ignition is in the ON position.
- The ECM sends an input via GMLAN serial data to the BCM when the Transmission Control Module (TCM) indicates the transmission is in the PARK position.
- The BCM receives a brake applied input from the stop lamp switch.

Since the shift lock control solenoid is permanently grounded, the BCM supplies voltage to the automatic transmission shift lock control solenoid, releasing the mechanical lock on the shift lever as the solenoid energizes. The energized solenoid allows the driver to move the shift lever out of the PARK position. When the brake pedal is not applied, the BCM turns the control voltage output of the shift lock control solenoid OFF, de-energizing the shift lock control solenoid. When the transmission is in the PARK position, the de-energized shift lock control solenoid will prevent shifting as the lever is mechanically locked in the PARK position.

During remote start operation the BCM will de-energize the automatic transmission shift lock control circuit, locking the shift lever in the PARK position

BLANK

A		Power Take-Off (PTO)	
Automatic Day-Night Mirror		Description and Operation	8-6
Description and Operation	2-52	Power Windows	
Automatic HVAC Description and		Description and Operation	2-11
Operation	6-10	R	
B		Rear Vision Camera	
Battery		Description and Operation	4-8
Description and Operation	5-11	Rear Window Defogger	
C		Description and Operation	2-11
Charging System		Rearview Camera	
Description and Operation	5-11	Camera Full Display Mirror Description and	
Component Connector End Views	7-57	Operation	4-8
D		Retained Accessory Power	
Data Link Communications		Description and Operation	7-849
Description and Operation	7-3	RPO Code List	1-7
Door Ajar Indicator		S	
Description and Operation	2-82	Schematics	
E		Auxiliary Battery	5-10
Electrical Center Identification Views	7-6	Cigar Lighter/Power Outlet	7-765
Electrical Power Management Description and		Defogger	2-10
Operation	5-14	Door Lock/Indicator	2-70
Electronic Parking Brake		Endgate	2-77
Control Module Description	3-3	Exterior Lamps	2-21
Endgate		Fog Lamps	2-20
Description and Operation	2-82–2-84	Ground Distribution	7-820
Exterior Lighting Systems		Headlamps/Daytime Running Lamps	2-16
Description and Operation	2-43	Hood Latch	2-81
H		Horns	2-13
Hood Ajar Indicator		HVAC Systems - Automatic	6-4
Description and Operation	2-84	HVAC Systems - Manual	6-15
Horn		Image Display Cameras	4-4
System Description and Operation	2-14	Inside Rearview Mirror	2-48
I		Interior Lamps	2-37
Inline Harness Connector End Views	7-620	Interior Lamps Dimming	2-39
Interior Lighting System		Moveable Window	2-4
Description and Operation	2-46	Outside Rearview Mirror	2-49
M		Power Distribution	7-780
Manual HVAC Description and Operation	6-21	Power Moding	7-818
Master Electrical Schematic Icons	7-779	Power Take-Off (PTO)	8-4
O		Release Systems	2-76
Outside Mirror		Shift Lock Control	8-8
Description and Operation	2-53	Starting and Charging	5-4
P		Trailer Systems	2-56
Power Door Locks		Upfitter Provision	7-843
Description and Operation	2-84	Wiper and Washer Systems	2-87
Power Mode Description and Operation	7-846	Shift Lock Control	
Power Outlets		Description and Operation	8-9
Description and Operation	7-776	Starting System	
R		Description and Operation	5-16
Power Take-Off (PTO)		Surround Vision Camera	
Description and Operation	8-6	Description and Operation	4-8
Power Windows		T	
Description and Operation	2-11	Trailer Description and Operation	2-63
R		Trailer Systems Schematics	2-56
Rear Vision Camera			
Description and Operation	4-8		
Rear Window Defogger			
Description and Operation	2-11		
Rearview Camera			
Camera Full Display Mirror Description and			
Operation	4-8		
Retained Accessory Power			
Description and Operation	7-849		
RPO Code List	1-7		
S			
Schematics			
Auxiliary Battery	5-10		
Cigar Lighter/Power Outlet	7-765		
Defogger	2-10		
Door Lock/Indicator	2-70		
Endgate	2-77		
Exterior Lamps	2-21		
Fog Lamps	2-20		
Ground Distribution	7-820		
Headlamps/Daytime Running Lamps	2-16		
Hood Latch	2-81		
Horns	2-13		
HVAC Systems - Automatic	6-4		
HVAC Systems - Manual	6-15		
Image Display Cameras	4-4		
Inside Rearview Mirror	2-48		
Interior Lamps	2-37		
Interior Lamps Dimming	2-39		
Moveable Window	2-4		
Outside Rearview Mirror	2-49		
Power Distribution	7-780		
Power Moding	7-818		
Power Take-Off (PTO)	8-4		
Release Systems	2-76		
Shift Lock Control	8-8		
Starting and Charging	5-4		
Trailer Systems	2-56		
Upfitter Provision	7-843		
Wiper and Washer Systems	2-87		
Shift Lock Control			
Description and Operation	8-9		
Starting System			
Description and Operation	5-16		
Surround Vision Camera			
Description and Operation	4-8		
T			
Trailer Description and Operation	2-63		
Trailer Systems Schematics	2-56		

V

Vehicle Certification, Tire Placard, and Anti-Theft
Label [1-4](#)
Vehicle, Engine and Transmission ID and VIN
Location, Derivative and Usage [1-3](#)

W

Wiper/Washer
System Description and Operation [2-89](#)